


9. EXPLODED VIEWS AND PARTS LIST

- NOTES :
- Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.
 - The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screw adjacent to ▽ mark on the product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
- (In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING

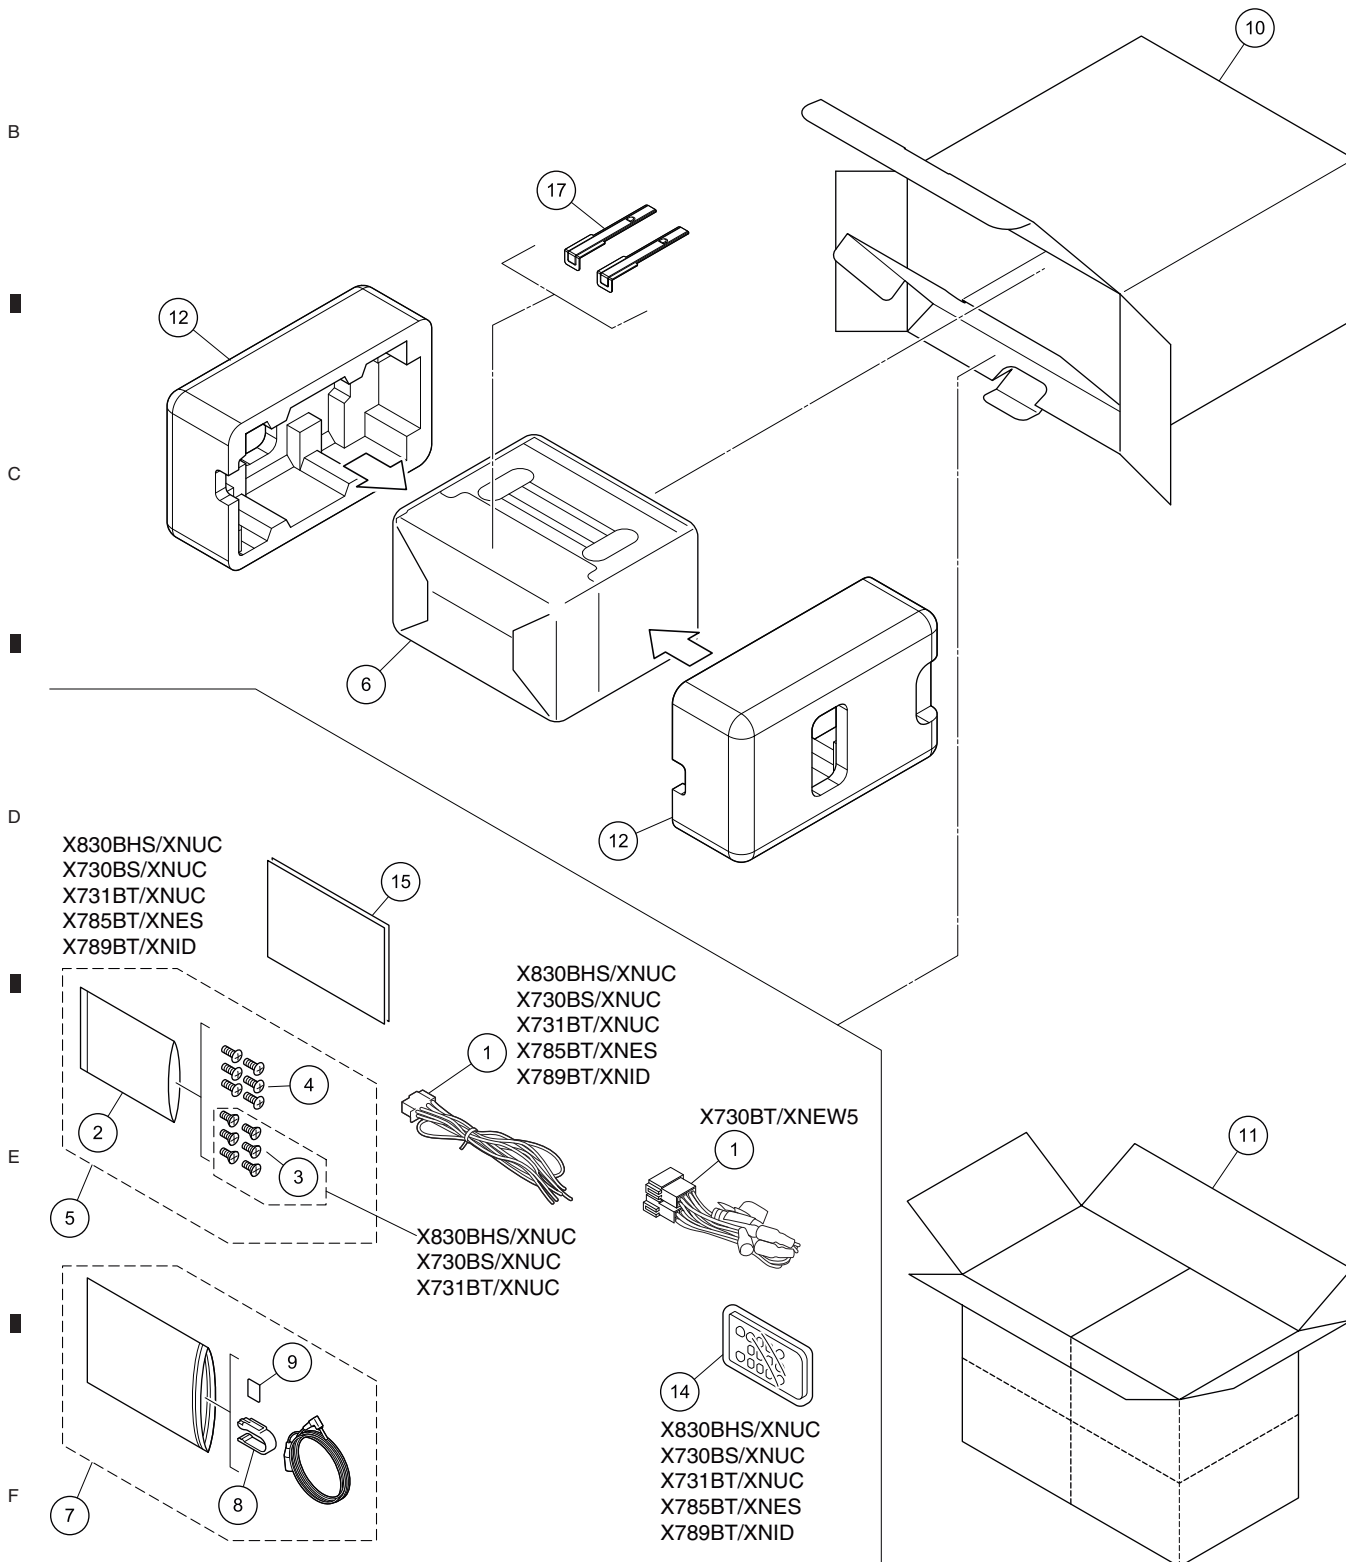


	5		6		7		8	
PACKING SECTION PARTS LIST								
Mark	No.	Description	FH-X830BHS/ XNUC	FH-X730BS/ XNUC	FH-X731BT/ XNUC	FH-X730BT/ XNEW5	FH-X785BT/ XNES	FH-X789BT/ XNID
*	1	Cord Assy	CDP1484	CDP1484	CDP1484	QDP3072	CDP1484	CDP1484
	2	Polyethylene Bag	CEG1160	CEG1160	CEG1160	Not used	CEG1160	CEG1160
	3	Screw	CBA2383	CBA2383	CBA2383	Not used	Not used	Not used
	4	Screw	CBA2384	CBA2384	CBA2384	Not used	CBA2384	CBA2384
	5	Accessory Assy	QEA3335	QEA3335	QEA3335	Not used	QEA3336	QEA3336
	6	Cover	CEG1359	CEG1359	CEG1359	CEG1356	CEG1356	CEG1356
	7	Microphone Assy	CPM1109	CPM1109	CPM1109	CPM1109	CPM1109	CPM1109
	8	Holder	CZN7192	CZN7192	CZN7192	CZN7192	CZN7192	CZN7192
	9	Cushion	CZN7193	CZN7193	CZN7193	CZN7193	CZN7193	CZN7193
	10	Unit Box	QHG3868	QHG4022	QHG3873	QHG3869	QHG3871	QHG3872
	11	Contain Box	QHL3868	QHL4022	QHL3873	QHL3869	QHL3871	QHL3872
	12	Protector	QHP3044	QHP3044	QHP3044	QHP3045	QHP3045	QHP3044
	13							
	14	Card Remote Control Unit	QXE1044	QXE1044	QXE1044	Not used	QXE1044	QXE1044
	15-1	Owner's Manual	QRD3341	QRD3341	QRD3341	QRD3340	QRD3342	QRB3538
*	15-2	Warranty Card	QRY3001	QRY3001	QRY3001	CRY1376	Not used	CRY1304
*	15-3	Caution Card	Not used	Not used	CRP1386	Not used	Not used	Not used
	16							
	17	Handle	Not used	Not used	Not used	CND6289	CND6289	Not used

Owner's Manual, Installation Manual

Part No.	Language
QRD3340	English, French, Italian, Spanish(Espanol), German, Dutch, Russian
QRD3341	English, French, Spanish(Espanol)
QRD3342	English, Spanish(Espanol), Portuguese(B), Traditional Chinese, Arabic, Persian
QRB3538	English

9.2 EXTERIOR (1)

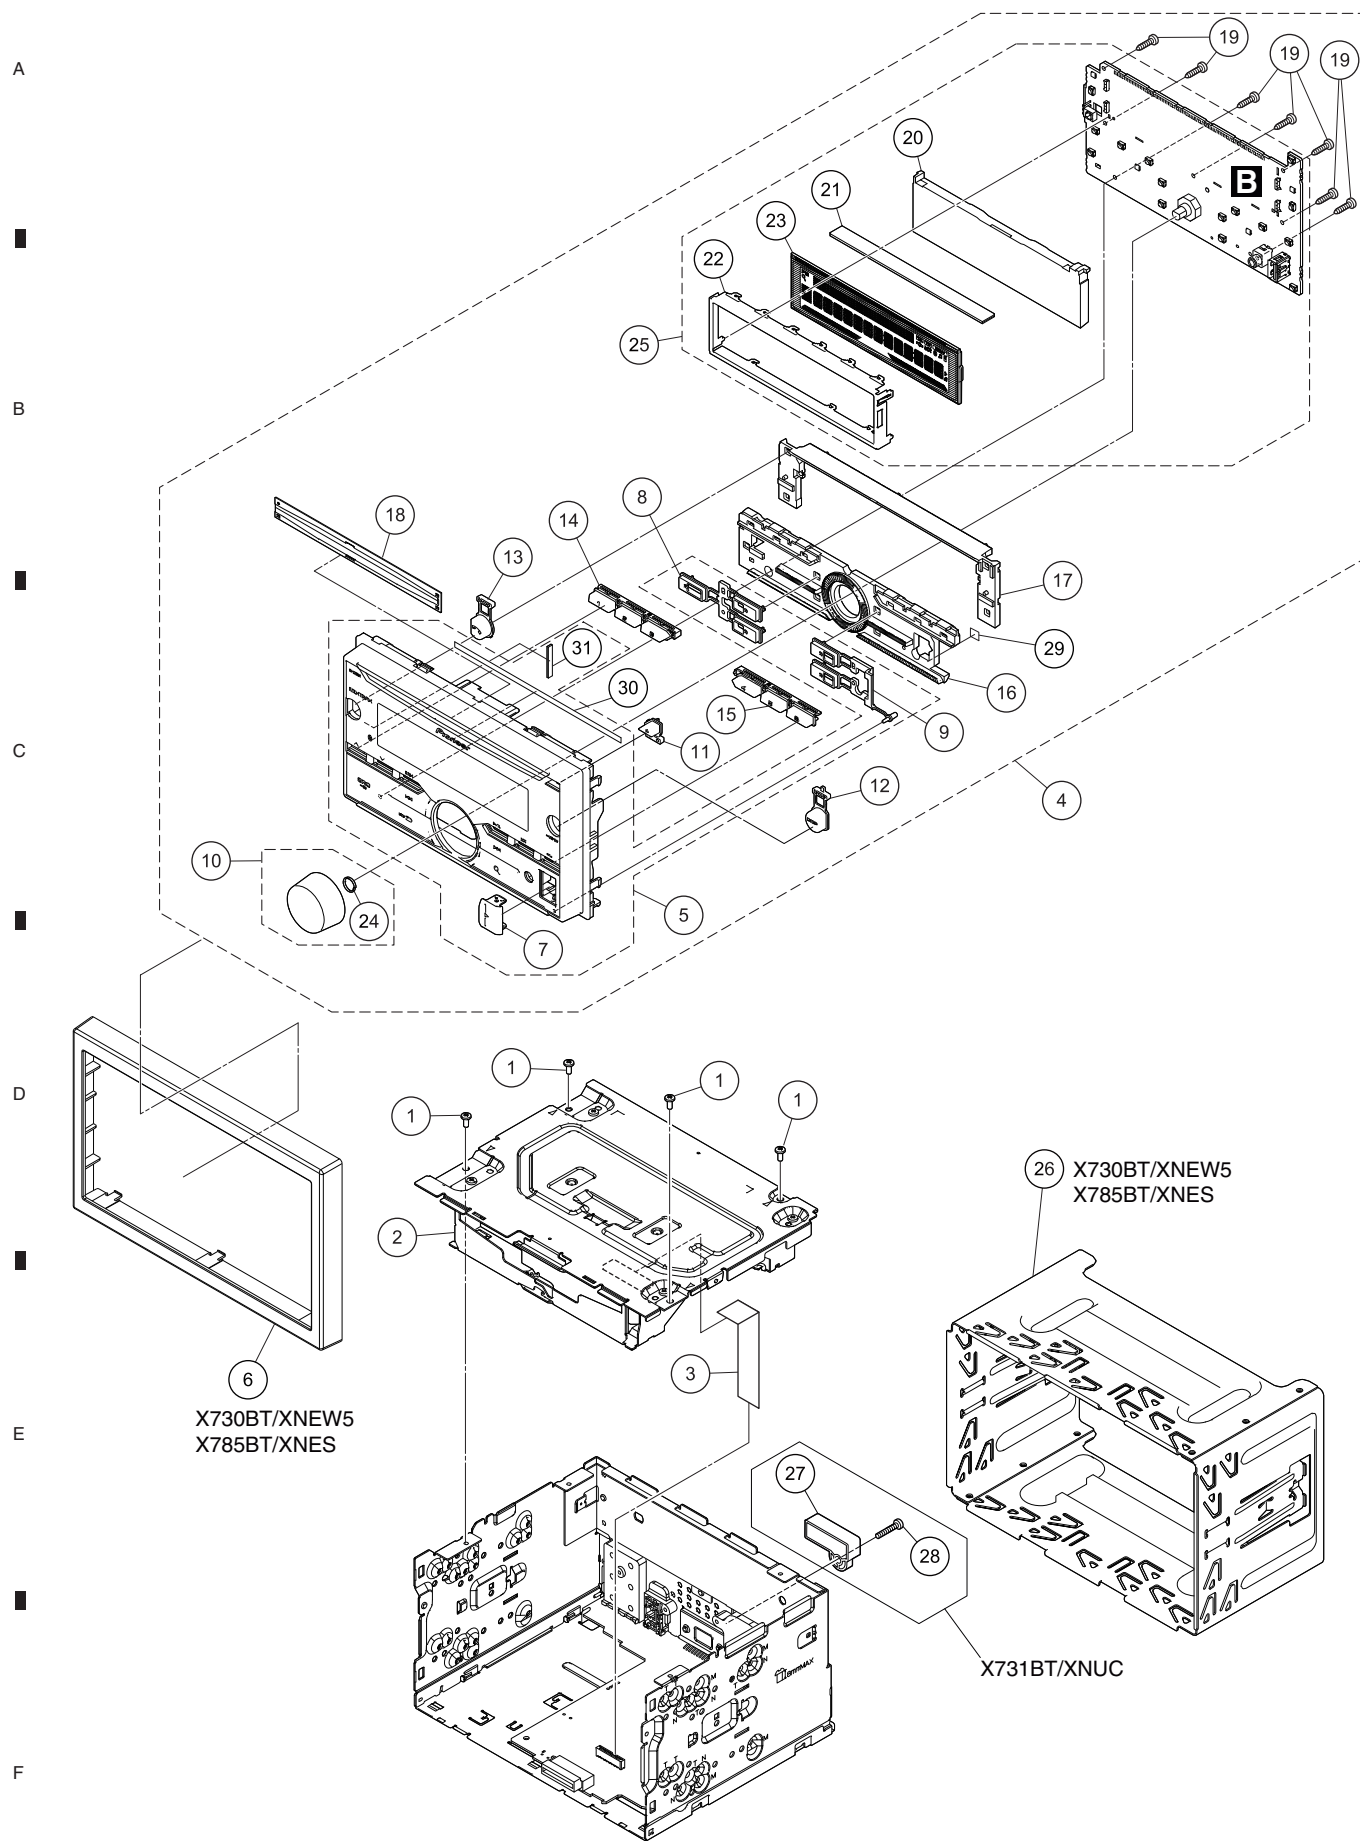

5

6

7

8

(1) EXTERIOR (1) SECTION PARTS LIST


Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Screw	BSZ26P060FTC	17	Lighting Conductor	QNV3124
2	CD Mechanism Module(S11.6STD-FH)	CXK5806	18	Cover	QNM3151
3	Cable	QDE3029	19	Screw	BPZ20P100FTC
4	Grille Assy	See Contrast table (2)	20	Lighting Conductor	QNV3123
5	Grille Unit	See Contrast table (2)			
6	Panel	See Contrast table (2)	21	Rubber Connector	QNV3125
7	Door	QAT3022	22	Holder	QNC3121
8	Button	QAC3235	23	Segment LCD(V1801)	CAW2058
9	Button	QAC3236	24	Spring	YBL5010
10	Knob Unit	QXA4278	25	Keyboard Unit	QWM4168
11	Button(EJECT)	QAC3230	26	Holder	See Contrast table (2)
12	Button(DISP)	QAC3231	27	Holder	See Contrast table (2)
13	Button(PHONE)	QAC3232	28	Screw	See Contrast table (2)
14	Button(1-3)	QAC3233	29	Sheet	QNM3145
15	Button(4-6)	QAC3234	30	Sheet	QNM3149
16	Lighting Conductor	QNV3122	31	Cushion	QNM3152

(2) CONTRAST TABLE

FH-X830BHS/XNUC, FH-X730BS/XNUC, FH-X731BT/XNUC, FH-X730BT/XNEW5, FH-X785BT/XNES and FH-X789BT/XNID are constructed the same except for the following:

Mark	No.	Description	FH-X830BHS/ XNUC	FH-X730BS/ XNUC	FH-X731BT/ XNUC	FH-X730BT/ XNEW5	FH-X785BT/ XNES	FH-X789BT/ XNID	C
	4	Grille Assy	QXA4603	QXA4611	QXA4606	QXA4604	QXA4607	QXA4608	
	5	Grille Unit	QXA4616	QXA4625	QXA4619	QXA4617	QXA4620	QXA4621	
	6	Panel	Not used	Not used	Not used	QNS4003	QNS4003	Not used	
	26	Holder	Not used	Not used	Not used	CND7102	CND7102	Not used	
	27	Holder	Not used	Not used	CNV7619	Not used	Not used	Not used	
	28	Screw	Not used	Not used	BSZ30P160FTC	Not used	Not used	Not used	

9.3 EXTERIOR (2)

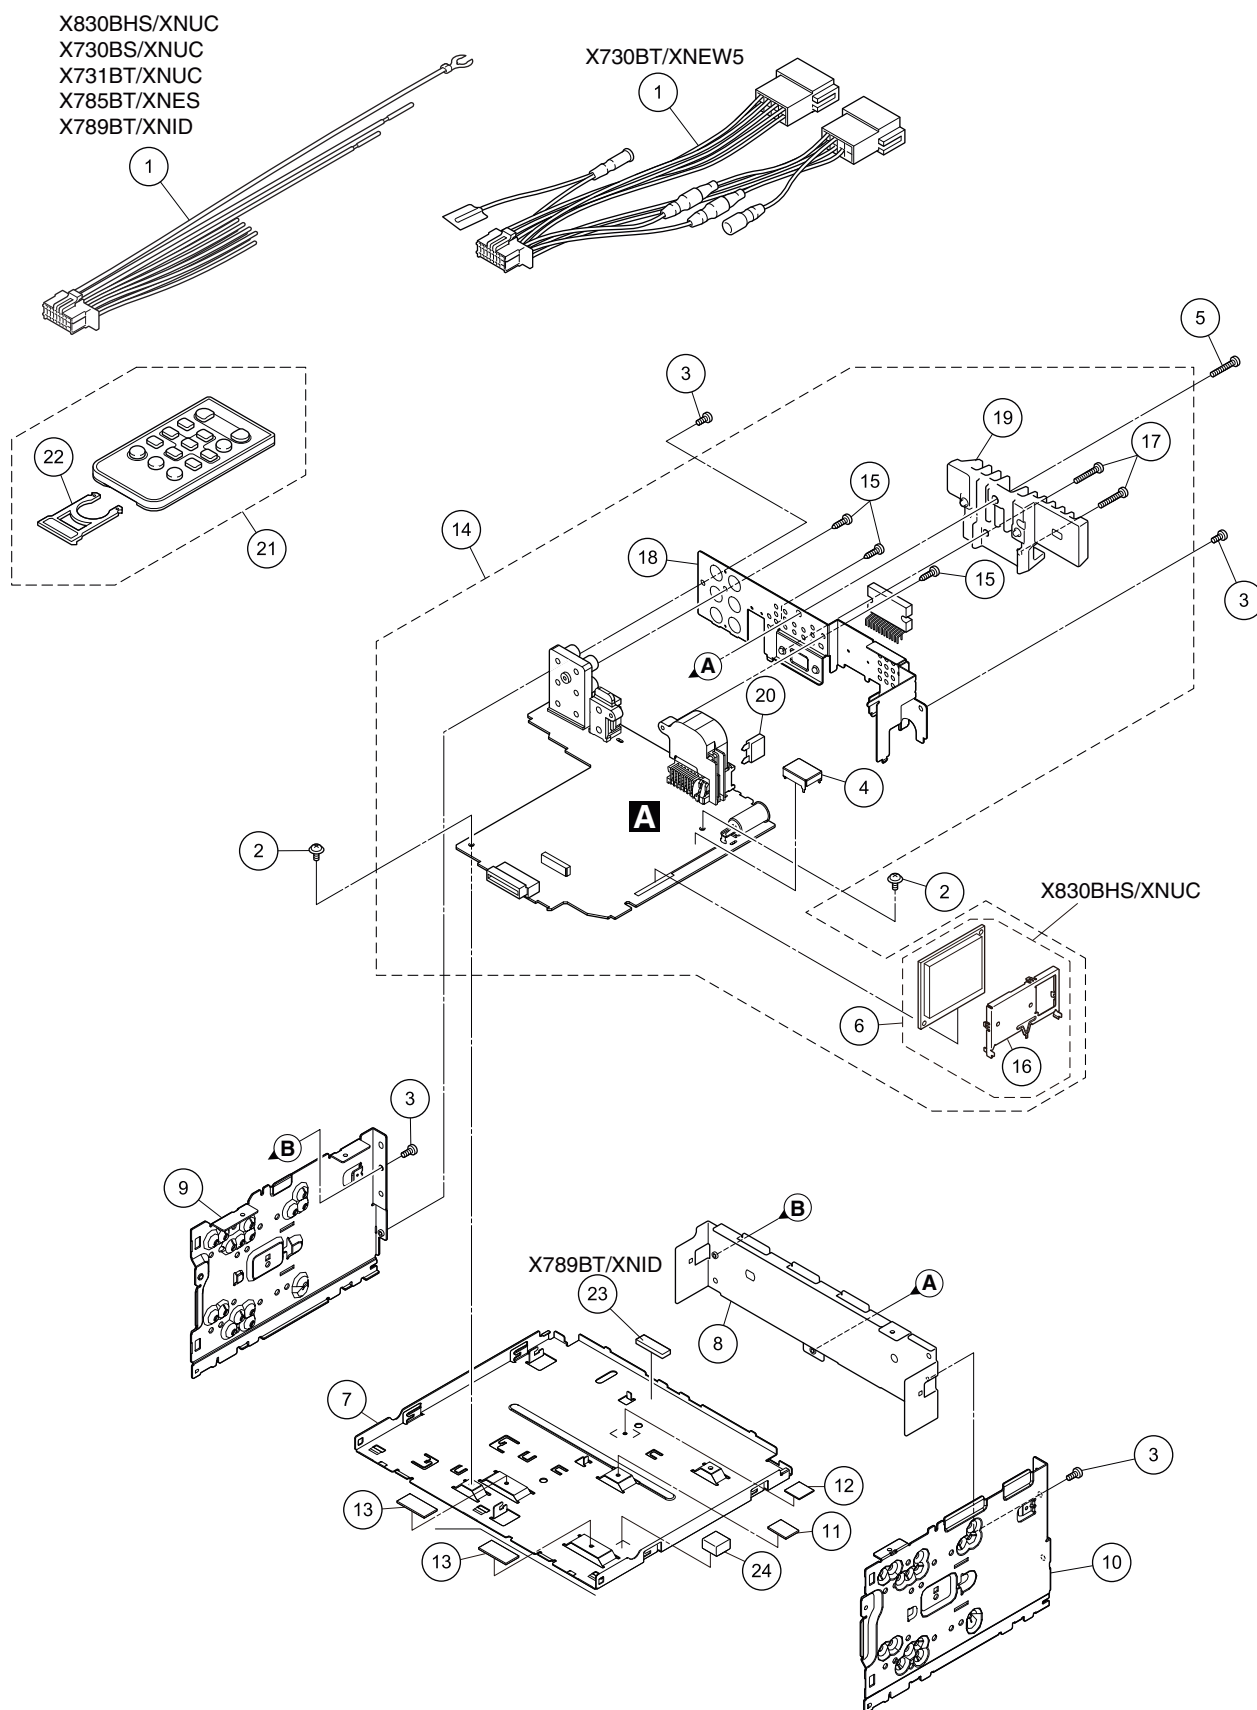

(1) EXTERIOR (2) SECTION PARTS LIST

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	Cord Assy	See Contrast table (2)	14	Tuner Amp Unit	See Contrast table (2)	
	2	Screw	ASZ26P050FTC	15	Screw	BPZ26P080FTC	A
	3	Screw	BSZ26P060FTC				
	4	Shield Case	QNC3107	16	Holder	See Contrast table (2)	
	5	Screw	BSZ26P120FTC	17	Screw	BSZ26P120FTC	
				18	Holder	See Contrast table (2)	
	6	BE Core Unit(U951)	See Contrast table (2)	19	Heat Sink	See Contrast table (2)	
	7	Case	QNB3034	⚠ 20	Fuse (10 A)	YEK5001	
	8	Holder	QNC3057				
	9	Bracket	QNC3093	21	Card Remote Control Unit	See Contrast table (2)	
	10	Bracket	QNC3094	22	Cover	See Contrast table (2)	
				23	Heat Conductor Sheet	See Contrast table (2)	
	11	Heat Conductor Sheet	QNM3164	24	Gasket	QNM3174	B
	12	Heat Conductor Sheet	QNM3165				
	13	Heat Conductor Sheet	QNM3135				

(2) CONTRAST TABLE

FH-X830BHS/XNUC, FH-X730BS/XNUC, FH-X731BT/XNUC, FH-X730BT/XNEW5, FH-X785BT/XNES and FH-X789BT/XNID are constructed the same except for the following:

Mark	No.	Description	FH-X830BHS/ XNUC	FH-X730BS/ XNUC	FH-X731BT/ XNUC	FH-X730BT/ XNEW5	FH-X785BT/ XNES	FH-X789BT/ XNID
	1	Cord Assy	CDP1484	CDP1484	CDP1484	QDP3072	CDP1484	CDP1484
	6	BE Core Unit(U951)	CWE2518	Not used	Not used	Not used	Not used	Not used
	14	Tuner Amp Unit	QWM4161	QWM4163	QWM4173	QWM4162	QWM4164	QWM4165
	16	Holder	CND7288	Not used	Not used	Not used	Not used	Not used
	18	Holder	QNC3112	QNC3112	QNC3113	QNC3113	QNC3113	QNC3113
	19	Heat Sink	QNR3010	QNR3010	QNR3010	QNR3010	QNR3002	QNR3002
	21	Card Remote Control Unit	QXE1044	QXE1044	QXE1044	Not used	QXE1044	QXE1044
	22	Cover	CNS7068	CNS7068	CNS7068	Not used	CNS7068	CNS7068
	23	Heat Conductor Sheet	Not used	Not used	Not used	Not used	Not used	QNM3130

9.4 CD MECHANISM MODULE

A


B

C

D

E

F

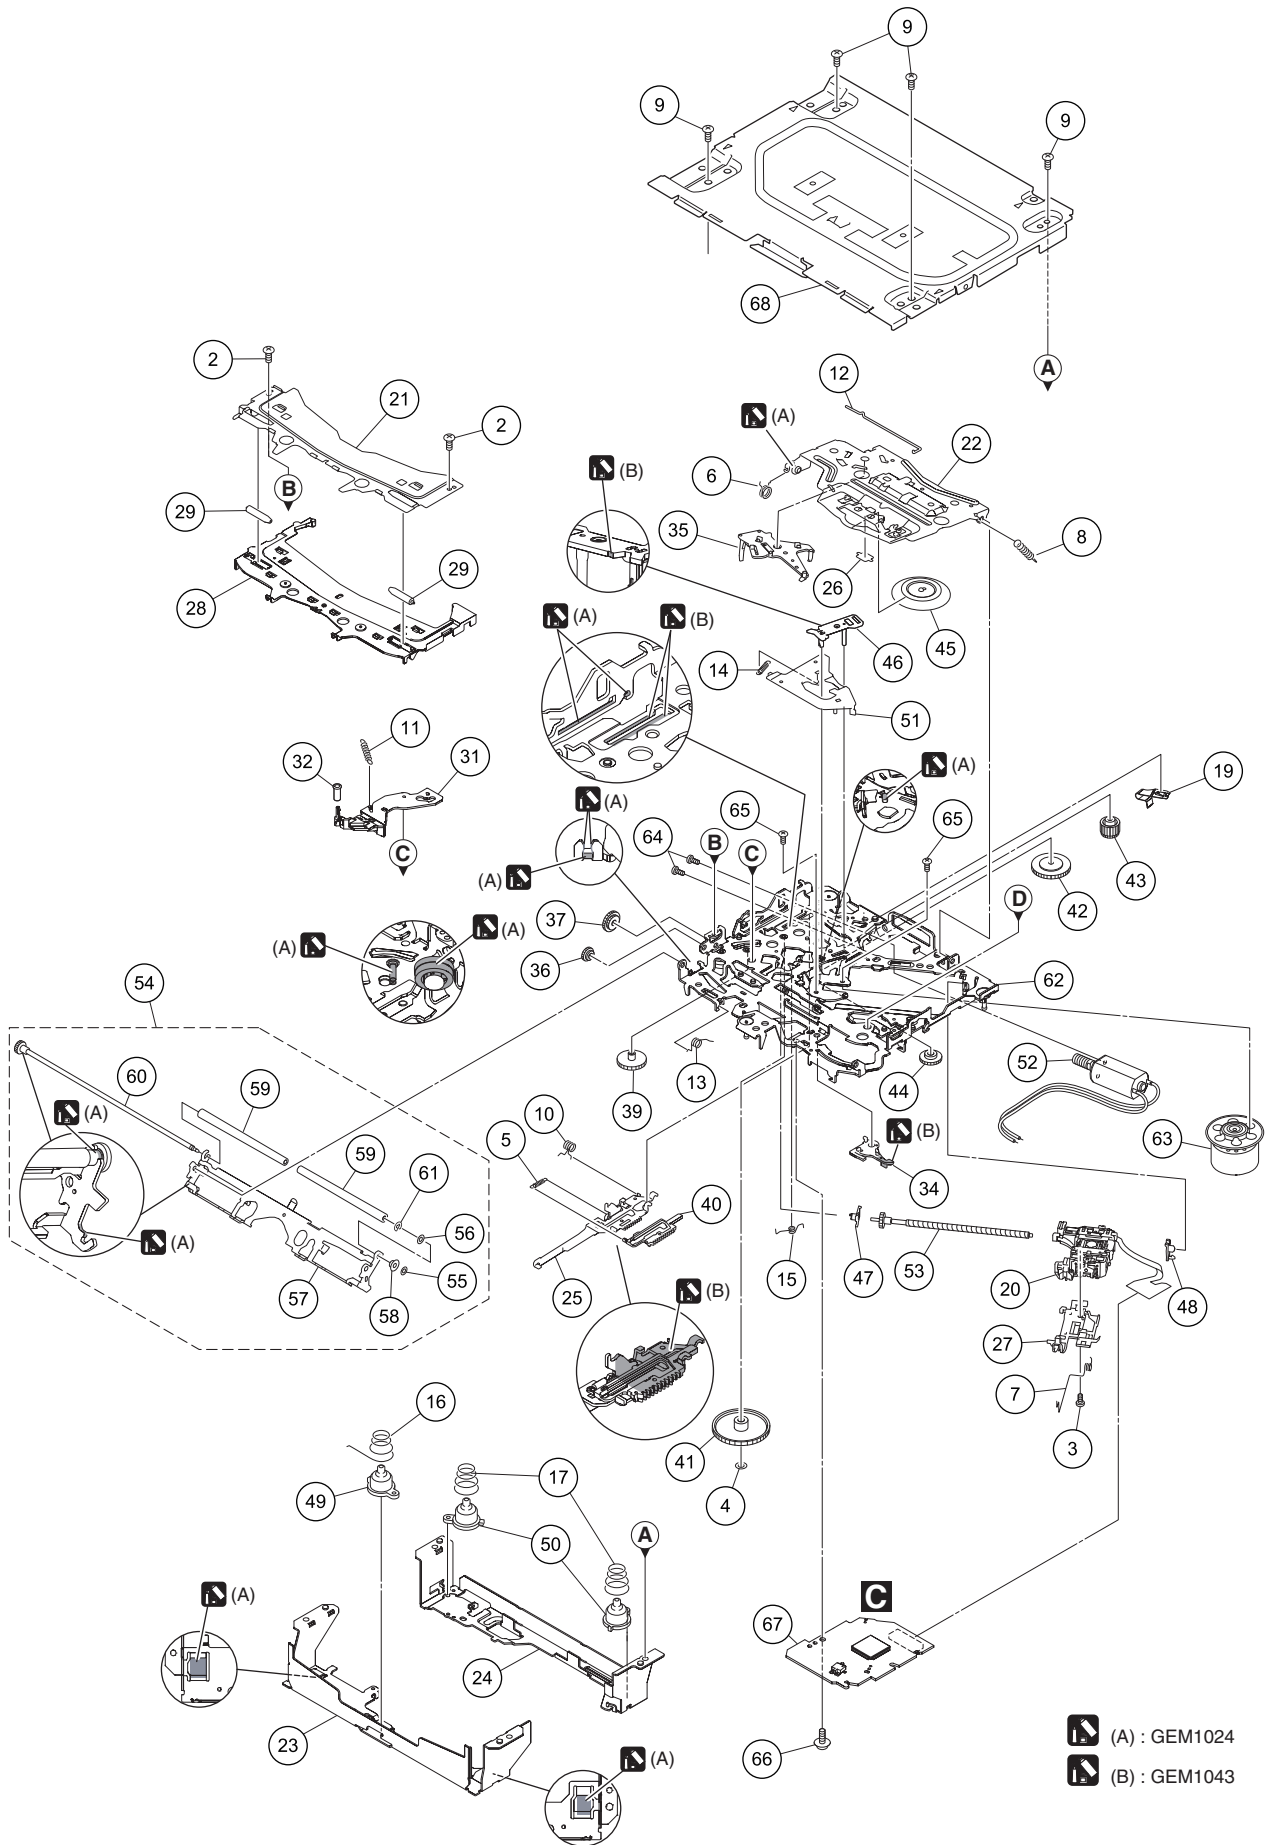

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1			50	Damper	CNW1198	
2	Screw	BSZ20P040FTC	51	Arm	CNW1726	A
3	Screw(M2 x 4)	CBA1835	52	Motor Unit(M2)(LOAD/CRG)	CXC4026	
4	Washer	CBF1038	53	Screw Unit	CXC8894	
5	Spring	CBH3010	54	Arm Assy	CXE6232	
6	Spring	CBH2855	55	Washer	CBF1037	
7	Spring	CBH2856				
8	Spring	CBH2860	56	Washer	CBF1038	
9	Screw	BSZ26P060FTC	57	Arm	CND6242	
10	Spring	CBH3011	58	Collar	CNW2444	
11	Coil Spring	CBH3095	59	Roller	CNW2500	
12	Spring	CBH3014	60	Gear Unit	CXE6225	B
13	Spring	CBH3015	61	Washer	YE15FTC	
14	Spring	CBH3016	62	Chassis Unit	CXE4528	
15	Spring	CBH3017	63	Motor Unit(M1)(SPDL)	CXE2273	
16	Spring	CBH3086	64	Screw	JFZ20P025FTC	
17	Spring	CBH3019	65	Screw	JGZ17P022FTC	
18			66	Screw	EBA1028	
19	Leaf Spring	CBL1824	67	CD Core Unit (S11.6STD)	CWX4023	
20	Pickup Unit(P10.6)(Service)	CXX3556	68	Case	CNB3762	C
21	Bracket	CND4553				
22	Arm	CND6406				
23	Bracket	CND6127				
24	Bracket	CND5710				
25	Lever	CND6834				
26	Sheet	CNN3678				
27	Rack	CNV8342				
28	Guide	CNW3489				
29	Roller	CNW1172				D
30						
31	Arm	CNW2241				
32	Roller	CNW1175				
33						
34	Arm	CNW1177				
35	Arm	CNW1178				
36	Gear	CNW1180				
37	Gear	CNW1181				
38						E
39	Gear	CNW1183				
40	Rack	CNW1184				
41	Gear	CNW1185				
42	Gear	CNW1186				
43	Gear	CNW1187				
44	Gear	CNW2287				
45	Clamper	CNW1190				
46	Arm	CNW1192				
47	Holder	CNW1193				F
48	Holder	CNW1194				
49	Damper	CNW1197				

59

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

D 141 Diode
D 201 Schottky Diode
D 202 Diode

DZ2J075M0
RB162M-40
RR264MM-400TF

X 501 Resonator 24 MHz
X 502 Resonator 32.768 kHz
X 751 Crystal Resonator 18.432MHz

CSS1773
CSS1807
CSS1826

A

D 203 Diode
D 206 Schottky Diode
D 207 Schottky Diode
D 208 Diode
D 210 Diode

RB056L-40
CMS30I30A
RB751SM-40
DZ2S068C
DZ2S068C

X 851 Crystal Resonator
P 401 Poly Switch(A,B)
P 852 Surge Absorber
P 1243 Poly Switch
P 1276 Poly Switch

CSS1868
FSMD110-24R
IMSA-6803-01Y900
FSMD075-24R
FSMD075-24R

D 301 Diode(A)
D 302 Diode(A)
D 422 Diode(A)
D 423 Diode(A)
D 424 Diode(A)

RB056L-40
RB060M-30
RR264MM-400TF
RR264MM-400TF
RR264MM-400TF

VA321 SMD Varistor
VA1101 SMD Varistor
VA1201 SMD Varistor
VA1202 SMD Varistor
U 951 BE Core Unit(A)

MLV0402ES012V0010N
MLV0402ES012V0010N
MLV0402ES012V0010N
MLV0402ES012V0010N
CWE2518

B

D 425 Diode(A)
D 501 Schottky Diode(A,B,C,D)
D 502 Schottky Diode(A,B,C,D)
D 504 Diode
D 505 Diode

RR264MM-400TF
RB751SM-40
RB751SM-40
EZAEG2A50AX
EZAEG2A50AX

U 1001 BT Module
CN1101 Connector
CN1201 Connector
JA 101 Plug
JA 851 Antenna Jack

CWX4751
VKN1192
CKS6452
CKM1624
CKX1104

D 1102 Diode
D 1201 Diode
D 1206 Diode
D 1207 Diode
D 1208 Diode

DZ2S068C
DZ2S068C
DZ2S068C
DZ2S068C
DZ2S068C

JA 1231 Connector(A,B)
JA 1241 Jack
JA 1276 Jack

CKS3806
CKB1113
CKN1103

RESISTORS

C

D 1209 Diode
D 1210 Diode
D 1293 Rectifier Diode
D 1301 Diode(Except E)
D 1302 Diode

DZ2S068C
DZ2S068C
DAN202UM
CRG03
CRG03

R 111
R 112
R 113 (Except D)
R 113 (D)
R 114 (Except D)

RS1/16SS223J
RS1/16SS473J
RS1/16SS682J
RS1/16SS333J
RS1/4SA102J

L 101 Choke Coil
L 201 SMD SPL Inductor
L 202 SMD SPL Inductor
L 301 SMD SPL Inductor(A)
L 401 Inductor

CTH1620
CTH1521
CTH1524
CTH1584
CTF1793

R 114 (D)
R 121
R 123
R 141
R 142

RS1/4SA122J
RS1/16SS103J
RS1/4SA102J
RS1/16SS104J
RS1/16SS473J

D

L 502 Inductor
L 503 Chip Beads
L 504 Chip Beads
L 505 Chip Beads
L 854 Inductor

CTF1645
VTL1133
VTL1133
VTL1133
LCMAR27J1608

R 143
R 144
R 145
R 202
R 207

RS1/16SS103J
RS1/16SS472J
RS1/16SS0R0J
RS1/16SS3303D
RS1/16SS222J

L 855 Inductor
L 856 Inductor(A,B,C,D)
L 857 Inductor(E,F)
L 858 Chip Coil(E,F)
L 859 Chip Coil(E,F)

CTF1786
CTF1389
ATL7033
LCTAWR27J2520
LCTAW3R3J2520

R 208
R 209
R 210
R 214
R 215

RS1/16SS472J
RS1/4SA472J
RS1/16SS103J
RS1/16SS102J
RS1/16SS2403D

E

L 860 Inductor(A,B,C,D)
L 1001 Inductor
L 1101 Inductor
L 1102 Chip Beads
L 1103 Chip Beads

LCYC150K1608
CTF1786
CTF1389
VTL1133
VTL1133

R 216
R 217
R 218
R 219
R 220

RS1/16SS7502D
RS1/16SS4303D
RS1/16SS4303D
RS1/16SS104J
RS1/16SS3903D

L 1104 Chip Beads
L 1276 Chip Beads
L 1277 Chip Beads
L 1278 Chip Beads
L 1279 Chip Beads

VTL1133
VTL1126
VTL1126
VTL1126
VTL1126

R 221
R 222
R 223 0.02 ohm
R 224
R 225

RS1/16SS6202D
RS1/16SS6802D
CCN1401
RS1/16SS6802D
RS1/16SS102J

F

L 1292 Chip Beads
L 1293 Chip Beads
L 1294 Chip Beads
L 1295 Chip Beads
L 1296 Chip Beads

VTL1126
VTL1126
VTL1126
VTL1126
VTL1126

R 226
R 227
R 229
R 230
R 231

RS1/16SS1203D
RS1/16SS1802D
RS1/16SS3902D
RS1/16SS682J
RS1/16SS4703D

L 1297 Chip Beads
T 851 Variable Coil

VTL1126
CTC1215

R 232
R 233

RS1/16SS1503D
RS1/16SS1003D

1

2

3

4

5	6	7	8	
<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>	
R 234	RS1/16SS7503D	R 534	RS1/10SR103J	
R 235	RS1/16SS1603D	R 537	RS1/16SS473J	
R 236	RS1/16SS102J	R 538 (A,B,D)	RS1/16SS472J	
R 237	RS1/16SS102J	R 538 (C)	RS1/16SS473J	A
R 238	RS1/16SS102J	R 538 (E)	RS1/16SS103J	
R 239	RS1/16SS101J	R 538 (F)	RS1/16SS223J	
R 240	RS1/16SS221J	R 539 (C)	RS1/16SS223J	
R 241	RS1/16SS121J	R 539 (E,F)	RS1/16SS473J	
R 242	RS1/16SS6801F	R 540	RS1/16SS103J	
R 243	RS1/16SS393J	R 541	RS1/16SS103J	
R 244	RS1/16SS103J	R 546	RS1/16SS103J	
R 245	RS1/8SQ0R0J	R 547	RS1/16SS473J	
R 248	RS1/16SS332J	R 548	RS1/16SS102J	
R 250	RS1/10SR471J	R 550	RS1/16SS103J	
R 256	RS1/16SS0R0J	R 551	RS1/16SS103J	B
R 260	RS1/16SS473J	R 554	RS1/16SS222J	
R 263	RS1/10SR471J	R 555	RS1/16SS0R0J	
R 264	RS1/10SR0R0J	R 557	RS1/16SS221J	
R 268	RS1/10SR0R0J	R 558	RS1/16SS221J	
R 269	RS1/16SS101J	R 559	RS1/16SS221J	
R 301 (A)	RS1/10SR471J	R 560	RS1/16SS473J	
R 303 (A)	RS1/16SS1803D	R 561	RS1/16SS103J	
R 304 (A)	RS1/16SS4302D	R 563	RS1/16SS0R0J	
R 305 (A)	RS1/16SS682J	R 564	RS1/16SS472J	
R 306 (A)	RS1/16SS0R0J	R 565	RS1/16SS0R0J	C
R 322	RS1/16SS0R0J	R 566	RAB4CQ473J	
R 323 (A)	RS1/16SS102J	R 570	RS1/16SS221J	
R 404 (A,B)	RS1/10SR0R0J	R 571	RS1/16SS221J	
R 406	RS1/16SS183J	R 573	RS1/16SS473J	
R 422 (A)	RS1/16SS102J	R 574	RS1/16SS473J	
R 441	RS1/16SS103J	R 575	RS1/16SS473J	
R 442	RS1/10SR221J	R 576	RS1/16SS473J	
R 481	RS1/16SS471J	R 577	RS1/16SS473J	
R 482	RS1/16SS103J	R 578	RS1/16SS473J	
R 503	RS1/16SS222J	R 579	RS1/16SS473J	
R 504	RS1/16SS222J	R 580	RS1/16SS473J	D
R 506	RS1/16SS473J	R 581	RS1/16SS472J	
R 507	RS1/16SS473J	R 584	RS1/16SS102J	
R 508	RS1/16SS473J	R 586	RS1/16SS103J	
R 509	RS1/16SS473J	R 587	RS1/16SS0R0J	
R 510	RS1/16SS473J	R 591	RS1/16SS361J	
R 511	RS1/16SS473J	R 595	RS1/16SS0R0J	
R 512	RS1/16SS101J	R 596	RS1/16SS0R0J	
R 513	RS1/16SS222J	R 597	RS1/16SS102J	
R 514	RS1/16SS221J	R 599	RS1/16SS102J	
R 515	RS1/16SS221J	R 610 (Except A)	RS1/16SS473J	
R 516	RS1/16SS221J	R 611	RS1/16SS472J	E
R 517	RS1/16SS221J	R 612	RS1/16SS473J	
R 518	RS1/16SS472J	R 614	RS1/16SS473J	
R 519	RS1/16SS271J	R 615	RS1/16SS103J	
R 520 (A)	RS1/16SS472J	R 617	RS1/16SS473J	
R 522	RS1/16SS0R0J	R 619	RS1/16SS473J	
R 524	RS1/16SS3001D	R 620	RS1/16SS0R0J	
R 525	RS1/16SS103J	R 622	RS1/16SS0R0J	
R 526	RS1/16SS1213F	R 627	RS1/16SS153J	
R 529	RS1/16SS0R0J	R 628	RS1/16SS153J	
R 530	RS1/16SS0R0J	R 629	RS1/16SS472J	
R 531	RS1/16SS222J	R 630	RS1/16SS101J	F
R 532	RS1/16SS102J	R 631	RS1/16SS221J	
R 533	RS1/10SR103J	R 632	RS1/16SS101J	

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**R 633
R 634
R 635RS1/16SS101J
RS1/16SS101J
RS1/16SS101JR 744
R 745
R 746RS1/16SS330J
RS1/16SS330J
RS1/16SS103J

A

R 636
R 637
R 638
R 639
R 640RS1/16SS101J
RS1/16SS221J
RS1/16SS221J
RS1/16SS101J
RS1/16SS101JR 747
R 748
R 749
R 750
R 753RS1/16SS330J
RS1/16SS330J
RS1/16SS330J
RS1/16SS103J
RS1/16SS0R0JR 642
R 643
R 644
R 645
R 646RS1/16SS0R0J
RS1/16SS101J
RS1/16SS102J
RS1/16SS101J
RS1/16SS102JR 754
R 755
R 758
R 798 (A,B,C,D)
R 799 (E,F)RS1/16SS105J
RS1/16SS471J
RS1/10SR221J
RS1/10SR0R0J
RS1/16SS0R0J

B

R 647
R 648
R 649
R 650
R 651RS1/16SS102J
RS1/16SS102J
RS1/16SS102J
RS1/16SS121J
RS1/16SS102JR 800
R 810
R 851
R 852
R 853 (A,B,C,D)RS1/16SS0R0J
RS1/10SR0R0J
RS1/16SS105J
RS1/16SS105J
RS1/16SS391JR 652
R 653
R 654
R 655
R 657RS1/16SS101J
RS1/16SS102J
RS1/16SS102J
RS1/16SS102J
RS1/4SA0R0JR 853 (E,F)
R 860 (A)
R 861 (A)
R 862 (A)
R 864RS1/16SS101J
RS1/16SS0R0J
RS1/16SS0R0J
RS1/16SS0R0J
RS1/16SS103J

C

R 658
R 659
R 672
R 701
R 702RS1/4SA0R0J
RS1/10SR0R0J
RS1/16SS101J
RS1/16SS103J
RS1/16SS472JR 865 (A)
R 866 (A)
R 868
R 869 (A)
R 870RS1/16SS332J
RS1/16SS182J
RS1/16SS103J
RS1/16SS0R0J
RS1/16SS101JR 703
R 704
R 705
R 706
R 707RS1/16SS101J
RS1/16SS101J
RS1/16SS222J
RS1/16SS222J
RS1/16SS472JR 871 (A)
R 872 (A)
R 873
R 874
R 875RS1/16SS102J
RS1/16SS121J
RS1/16SS472J
RS1/16SS101J
RS1/16SS472J

D

R 708
R 709
R 710
R 711
R 714RS1/16SS272J
RS1/16SS473J
RS1/16SS0R0J
RS1/16SS0R0J
RAB4CQ121JR 876 (A)
R 877 (A)
R 878 (A)
R 879 (A)
R 881 (A)RS1/16SS121J
RS1/16SS121J
RS1/16SS121J
RS1/16SS121J
RS1/16SS332JR 715
R 716
R 717
R 718
R 719RAB4CQ121J
RAB4CQ121J
RAB4CQ121J
RAB4CQ121J
RAB4CQ121JR 882 (A)
R 883 (A)
R 884 (A)
R 890
R 891RS1/16SS182J
RS1/16SS102J
RS1/16SS121J
RS1/16SS0R0J
RS1/10SR0R0J

E

R 720
R 721
R 722
R 724
R 728RAB4CQ121J
RAB4CQ121J
RAB4CQ121J
RS1/16SS121J
RS1/10SR0R0JR 952 (A)
R 953 (A)
R 954 (A)
R 955 (A)
R 957 (A)RS1/16SS101J
RS1/16SS101J
RS1/16SS101J
RS1/16SS101J
RS1/16SS101JR 729
R 730
R 731
R 732
R 733RS1/10SR0R0J
RS1/10SR0R0J
RS1/16SS330J
RS1/16SS330J
RS1/16SS103JR 958 (A)
R 959 (A)
R 960 (A)
R 961 (A)
R 962 (A)RS1/16SS101J
RS1/16SS101J
RS1/16SS101J
RS1/10SR102J
RS1/10SR221J

F

R 734
R 735
R 736
R 737
R 741RS1/16SS103J
RS1/16SS103J
RS1/16SS330J
RS1/16SS330J
RS1/16SS330JR 963 (A)
R 966
R 968
R 970
R 971RS1/10SR121J
RS1/10SR0R0J
RS1/10SR0R0J
RS1/4SA0R0J
RS1/4SA0R0JR 742
R 743RS1/16SS103J
RS1/16SS103JR 1001
R 1002RS1/16SS0R0J
RS1/16SS221J

1

2

3

4

5	6	7	8	
<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>	
R 1004	RS1/16SS473J	R 1246	RS1/16SS821J	
R 1005	RS1/16SS221J	R 1247	RS1/16SS223J	
R 1006	RS1/16SS0R0J	R 1248	RS1/16SS223J	
R 1007	RS1/16SS0R0J	R 1249	RS1/16SS223J	A
R 1008	RS1/10SR0R0J	R 1250	RS1/16SS223J	
R 1011	RS1/16SS0R0J	R 1251	RS1/16SS223J	
R 1012	RS1/16SS221J	R 1252	RS1/16SS223J	
R 1013	RS1/16SS0R0J	R 1253	RS1/16SS0R0J	
R 1014	RS1/10SR0R0J	R 1255	RS1/16SS0R0J	
R 1015	RS1/10SR0R0J	R 1257	RS1/16SS0R0J	
R 1016	RS1/4SA0R0J	R 1258	RS1/16SS0R0J	
R 1017	RS1/16SS473J	R 1259	RS1/16SS0R0J	
R 1018	RS1/16SS473J	R 1260	RS1/16SS0R0J	
R 1101	RS1/16SS104J	R 1261	RS1/16SS0R0J	
R 1104	RS1/16SS104J	R 1262	RS1/16SS0R0J	B
R 1105	RS1/16SS221J	R 1263	RS1/10SR0R0J	
R 1106	RS1/16SS221J	R 1277 (E,F)	RS1/16SS471J	
R 1107	RS1/16SS101J	R 1278	RS1/16SS102J	
R 1108	RS1/16SS221J	R 1279 (E,F)	RS1/16SS471J	
R 1109	RS1/16SS101J	R 1280	RS1/16SS102J	
R 1110	RS1/16SS102J	R 1281	RS1/16SS101J	
R 1112	RS1/16SS221J	R 1282	RS1/16SS101J	
R 1113	RS1/16SS104J	R 1284	RS1/10SR0R0J	
R 1114	RS1/16SS473J	R 1286	RS1/16SS0R0J	
R 1115	RS1/16SS472J	R 1287	RS1/16SS0R0J	C
R 1116	RS1/16SS472J	R 1301	RS1/16SS103J	
R 1117	RS1/16SS472J	R 1302	RS1/16SS223J	
R 1120	RS1/16SS151J	R 1303	RS1/16SS221J	
R 1121	RS1/16SS151J	R 1306	RS1/16SS103J	
R 1122	RS1/16SS151J	R 1307	RS1/16SS0R0J	
R 1123	RS1/16SS0R0J	R 1309	RS1/10SR0R0J	
R 1126	RS1/16SS0R0J	R 1313	RS1/10SR0R0J	
R 1201	RS1/10SR0R0J	R 1314	RS1/10SR0R0J	
R 1203	RS1/16SS223J	<u>CAPACITORS</u>		
R 1204	RS1/16SS223J	C 101 2 200 uF/16 V	CCH1405	D
R 1205	RS1/10SR222J	C 102	CKSRYB103K50	
R 1206	RS1/10SR221J	C 103	CKSSYB102K50	
R 1207	RS1/10SR221J	C 104	CKSSYB102K50	
R 1208	RS1/10SR0R0J	C 105	CKSSYB102K50	
R 1209	RS1/10SR222J	C 106	CKSSYB102K50	
R 1210	RS1/10SR222J	C 107	CKSSYB102K50	
R 1211	RS1/10SR222J	C 108	CKSSYB102K50	
R 1212	RS1/10SR222J	C 109	CKSSYB102K50	
R 1213	RS1/16SS123J	C 110	CKSSYB102K50	
R 1214	RS1/10SR222J	C 111	CKSRYB104K50	
R 1215	RS1/10SR101J	C 122 1 uF	CCG1396	E
R 1217	RS1/16SS0R0J	C 201	CCSSCH681J50	
R 1218	RS1/10SR0R0J	C 202	CEVW101M16	
R 1231 (A,B)	RS1/16SS181J	C 203 10 uF	CCG1192	
R 1232 (A,B)	RS1/16SS181J	C 204	CEVQW221M6R3	
R 1233 (A,B)	RS1/16SS223J	C 205 1 uF	CCG1396	
R 1234 (A,B)	RS1/16SS223J	C 206 10 uF	CCG1236	
R 1235 (A,B)	RS1/16SS181J	C 208	CCSSCH471J50	
R 1236 (A,B)	RS1/16SS181J	C 209	CCSSCH681J50	
R 1237 (A,B)	RAB4CQ102J	C 210 2 200 uF/16 V	CCH1405	
R 1241	RS1/16SS821J	C 211 10 uF	CCG1192	F
R 1242	RS1/16SS821J	C 213 1 uF	CCG1396	
R 1243	RS1/16SS821J	C 214 10 uF	CCG1192	
R 1244	RS1/16SS821J	C 216 10 uF	CCG1236	
R 1245	RS1/16SS821J			

	1	2	3	4
	<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
A	C 217	CKSRYB105K10	C 482	1 uF
	C 218	CCG1236	C 502	
	C 220	CCG1236	C 503	4.7 uF
	C 221	CCG1236	C 505	
	C 222	XCEVW221M10	C 506	4.7 uF
B	C 223	CCSSCH221J50	C 507	4.7 uF
	C 224	CKSRYB105K10	C 508	
	C 225	CKSRYB105K10	C 509	4.7 uF
	C 227	CCSSCH391J50	C 510	
	C 228	CCSSCH681J50	C 511	4.7 uF
C	C 230	CCG1192	C 512	
	C 231	CKSRYB104K16	C 513	4.7 uF
	C 232	CEVQW221M6R3	C 514	
	C 234	CCG1212	C 517	
	C 236	CCG1236	C 518	
D	C 238	CCG1254	C 519	
	C 239	CCSSCH100D50	C 520	4.7 uF
	C 240	CCSSCH100D50	C 521	
	C 241	CCG1192	C 522	4.7 uF
	C 242	CEVW101M16	C 523	4.7 uF
E	C 243	CCG1236	C 524	4.7 uF
	C 245	CKSRYB104K16	C 525	10 uF
	C 247	CKSRYB105K10	C 526	
	C 248	CCG1393	C 527	10 uF
	C 249	CKSRYB105K10	C 528	
F	C 250	CKSRYB105K10	C 529	
	C 251	CKSRYB105K10	C 530	4.7 uF
	C 252	CCG1212	C 531	1 uF
	C 253	CCG1393	C 532	1 uF
	C 255	DCH1246	C 533	4.7 uF
G	C 257	CCG1236	C 534	
	C 259	CCG1192	C 535	
	C 260	CCG1192	C 536	
	C 261	CKSSYB104K10	C 537	
	C 265	CCG1236	C 538	10 uF
H	C 266	CCG1236	C 539	
	C 270	CCG1212	C 540	10 uF
	C 302	CEVQW221M6R3	C 541	
	C 303	DCH1246	C 542	
	C 304	CKSRYB105K10	C 543	1 uF
I	C 305	CCG1212	C 544	
	C 306	CKSSYB682K25	C 545	
	C 308	CKSRYB103K50	C 546	
	C 309	CCG1236	C 551	
	C 311	CCG1396	C 552	4.7 uF
J	C 312	CEAT102M16	C 553	10 uF
	C 313	CKSRYB102K50	C 555	
	C 315	CKSRYB104K16	C 556	
	C 317	CKSRYB105K10	C 557	(A,B)
	C 321	CKSRYB105K10	C 558	(A,B)
K	C 425	CCG1212	C 559	
	C 426	CCG1192	C 560	
	C 427	CCG1212	C 565	
	C 428	CCG1192	C 566	
	C 430	CCG1192	C 569	
L	C 432	CCG1192	C 573	
	C 433	DCH1246	C 574	
	C 442	CCG1192	C 575	
	C 444	CCG1192	C 577	
	C 481	CEVQW470M6R3	C 578	
M				
N				
O				
P				
Q				
R				
S				
T				
U				
V				
W				
X				
Y				
Z				

5		6		7		8	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
C 579		CKSSYB104K10		C 867		CKSSYB102K50	
C 580		CKSRYB104K16		C 870		CCSSCH102J50	
C 586		CCSSCH102J50		C 871		CKSSYB104K10	A
C 701		CKSSYB104K10		C 872		CKSSYB104K10	
C 702		CKSSYB104K10		C 874		CCSSCH390J50	
C 711	4.7 uF	CCG1212		C 878		CKSSYB152K50	
C 712	1 uF	DCH1246		C 882	1 uF(Except A)	DCH1246	
C 713		CKSSYB104K10		C 885	(A,E,F)	CKSSYB104K10	
C 714	1 uF	DCH1246		C 886		CKSRYB102K50	
C 715	1 uF	DCH1246		C 887		CKSRYB104K50	
C 716	1 uF	DCH1246		C 888	(Except A)	CKSRYB104K16	
C 718		CKSSYB104K10		C 889		CKSSYB104K10	
C 719		CKSSYB104K10		C 890	2.2 uF	CCG1205	
C 720	1 uF	DCH1246		C 891	2.2 uF	CCG1205	B
C 722		CKSSYB104K10		C 892		CKSRYB105K10	
C 724		CKSRYB102K50		C 954	(A)	CCSSCH150J50	
C 730	10 uF	CCG1192		C 955	(A)	CCSSCH150J50	
C 731		CKSSYB104K10		C 958	10 uF(A)	CCG1192	
C 741	2.2 uF	CCG1205		C 959	(A)	CKSSYB104K10	
C 742		CKSSYB104K10		C 960	10 uF(A)	CCG1192	
C 743		CKSSYB104K10		C 961	(A)	CKSSYB104K10	
C 751	(A,B)	CKSRYB105K10		C 1003		CKSRYB104K16	
C 752	(A,B)	CKSRYB105K10		C 1004		CKSRYB104K16	
C 753		CKSRYB105K10		C 1101		CKSSYB103K16	
C 754		CKSRYB105K10		C 1105	1 uF	DCH1246	C
C 755		CKSRYB105K10		C 1106	1 uF	DCH1246	
C 757		CKSRYB105K10		C 1107		CKSRYB104K16	
C 758		CKSRYB105K10		C 1108		CKSRYB104K16	
C 759	(A,B)	CKSRYB105K10		C 1111		CKSSYB102K50	
C 760	(A,B)	CKSRYB105K10		C 1201		CCSRCH102J50	
C 762		CEVQW470M6R3		C 1202		CKSRYB104K50	
C 763	(D,E,F)	CKSSYB104K10		C 1203		CKSRYB104K16	
C 764		CKSSYB104K10		C 1204		CKSRYB105K10	
C 765		CCSSCH151J50		C 1205		CCSRCH221J50	
C 766		CCSSCH151J50		C 1206		CCSRCH221J50	
C 767		CEVQW470M6R3		C 1207		CKSRYB474K10	D
C 768		CEVQW470M6R3		C 1210		CKSRYB105K10	
C 771	10 uF	CCG1192		C 1213		CKSRYB104K16	
C 772		CKSSYB104K10		C 1214		CKSRYB102K50	
C 773		CKSSYB104K10		C 1215		CKSRYB105K10	
C 774		CCSSCH100D50		C 1217		CCSSCH121J50	
C 775		CCSSCH100D50		C 1218		CKSRYB104K16	
C 776		CKSRYB105K10		C 1231	(A,B)	CKSRYB104K16	
C 777		CKSRYB105K10		C 1232	(A,B)	CKSRYB105K16	
C 778		CKSRYB105K10		C 1241	10 uF	CCG1192	
C 783	1 uF	DCH1246		C 1242	10 uF	CCG1192	E
C 790		CKSSYB102K50		C 1243	10 uF	CCG1192	
C 791	10 uF	CCG1192		C 1244	10 uF	CCG1192	
C 792		CKSSYB472K50		C 1245	10 uF	CCG1192	
C 793		CKSSYB103K16		C 1246	10 uF	CCG1192	
C 799		CKSSYB222K50		C 1247		CCSSCH101J50	
C 800		CKSSYB222K50		C 1248		CCSSCH101J50	
C 853		CCSSCH100D50		C 1249		CCSSCH101J50	
C 854		CCSSCH471J50		C 1250		CCSSCH101J50	
C 858		CCSSCH220J50		C 1251		CCSSCH101J50	
C 859		CCSSCH331J50		C 1252		CCSSCH101J50	
C 860	(E,F)	CCSSCK2R0C50		C 1253		CKSSYB103K16	F
C 861	(E,F)	CCSSCK1R0C50		C 1254		CKSSYB104K10	
C 862	(E,F)	CCSSCK1R0C50		C 1255		CKSSYB104K10	
C 863	(E,F)	CCSSCH120J50		C 1257		CKSSYB102K50	
C 866		CKSSYB224K6R3					

	1	2	3	4
	<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
A	C 1276	CKSRYB104K16	S 1806	Push Switch
	C 1277	CKSRYB104K16	S 1807	Push Switch
	C 1278	CKSRYB104K16	S 1808	Push Switch
	C 1279	CKSRYB104K16	S 1809	Push Switch
	C 1280	CKSSYB102K50	S 1810	Push Switch
B	C 1281	CKSSYB102K50	S 1811	Push Switch
	C 1301	CKSRYB474K10	S 1812	Push Switch
	C 1302	CKSRYB474K10	S 1813	Push Switch
	C 1303	CKSRYB474K10	S 1814	Push Switch
	C 1304	CKSRYB474K10	S 1815	Encoder(MULTI-CONTROL)
B	C 1306	CKSRYB105K10	S 1816	Push Switch
	C 1310 10 uF/16 V	DCH1263	CN1801	Connector
	C 1311 2.2 uF	CCG1205	JA 1801	Connector
	C 1312	CKSRYB104K50	JA 1802	Jack
	C 1316	CKSRYB104K50	V 1801	LCD
C	C 1317	CKSRYB105K10	RESISTORS	
	C 1319	CKSSYB103K16	R 1801	RS1/10SR182J
	C 1328	CKSRYB105K10	R 1802	RS1/10SR680J
C	B		R 1804	RS1/10SR332J
	Unit Number: QWM4168		R 1805	RS1/10SR182J
	Unit Name : Keyboard Unit		R 1806	RS1/10SR680J
	MISCELLANEOUS		R 1808	RS1/10SR332J
	IC 1801 Driver IC	BU97540KV-M	R 1809	RS1/10SR182J
D	IC 1802 Driver IC	BU97540KV-M	R 1810	RS1/10SR680J
	IC 1803 IC	PNJ4833M	R 1812	RS1/10SR332J
	Q 1801 Bipolar Transistor	LSCR523UB	R 1813	RS1/10SR182J
	Q 1802 Bipolar Transistor	LSCR523UB	R 1814	RS1/10SR680J
	Q 1803 Bipolar Transistor	LSCR523UB	R 1816	RS1/10SR332J
E	Q 1804 Bipolar Transistor	LSCR523UB	R 1817	RS1/10SR182J
	Q 1805 Bipolar Transistor	LSCR523UB	R 1818	RS1/10SR680J
	Q 1806 Bipolar Transistor	LSCR523UB	R 1820	RS1/10SR332J
	Q 1807 Bipolar Transistor	LSCR523UB	R 1821	RS1/10SR182J
	Q 1808 Bipolar Transistor	LSCR523UB	R 1822	RS1/10SR680J
F	Q 1809 Bipolar Transistor	LSCR523UB	R 1824	RS1/10SR332J
	Q 1810 Bipolar Transistor	LSCR523UB	R 1827	RS1/10SR182J
	Q 1811 Bipolar Transistor	LSCR523UB	R 1828	RS1/10SR390J
	Q 1812 Bipolar Transistor	LSCR523UB	R 1831	RS1/10SR332J
	D 1801 LED	NSSM124-6717	R 1832	RS1/10SR182J
F	D 1802 LED	NSSM124-6717	R 1833	RS1/10SR390J
	D 1803 LED	NSSM124-6717	R 1835	RS1/10SR101J
	D 1804 LED	NSSM124-6717	R 1836	RS1/10SR332J
	D 1806 LED	MSL0101RGBU	R 1840	RS1/10SR182J
	D 1807 LED	MSL0101RGBU	R 1841	RS1/10SR390J
F	D 1809 SMD Varistor	MLV0603ES012V0010N	R 1843	RS1/10SR332J
	D 1810 SMD Varistor	MLV0603ES012V0010N	R 1844	RS1/10SR273J
	D 1811 LED	MSL0101RGBU	R 1846	RS1/10SR182J
	D 1812 LED	MSL0101RGBU	R 1847	RS1/10SR390J
	D 1815 LED	NSSM124-6717	R 1849	RS1/10SR332J
F	L 1801 Inductor	CTF1713	R 1850	RS1/10SR182J
	L 1803 Inductor	CTF1379	R 1851	RS1/10SR390J
	L 1804 Inductor	CTF1379	R 1853	RS1/10SR332J
	L 1805 Inductor	CTF1379	R 1857	RS1/10SR182J
	S 1801 Push Switch	CSG1155	R 1858	RS1/10SR390J
F	S 1802 Push Switch	CSG1155	R 1860	RS1/10SR332J
	S 1803 Push Switch	CSG1155	R 1863	RS1/10SR222J
	S 1804 Push Switch	CSG1155	R 1864	RS1/10SR222J
	S 1805 Push Switch	CSG1155	R 1865	RS1/10SR222J
			R 1866	RS1/10SR222J
			R 1869	RS1/10SR0R0J

