
# 9. EXPLODED VIEWS AND PARTS LIST

*NOTES:* ● *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
● *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
● *Screws adjacent to ▼ mark on product are used for disassembly.*
● *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)*

## 9.1 PACKING SECTION

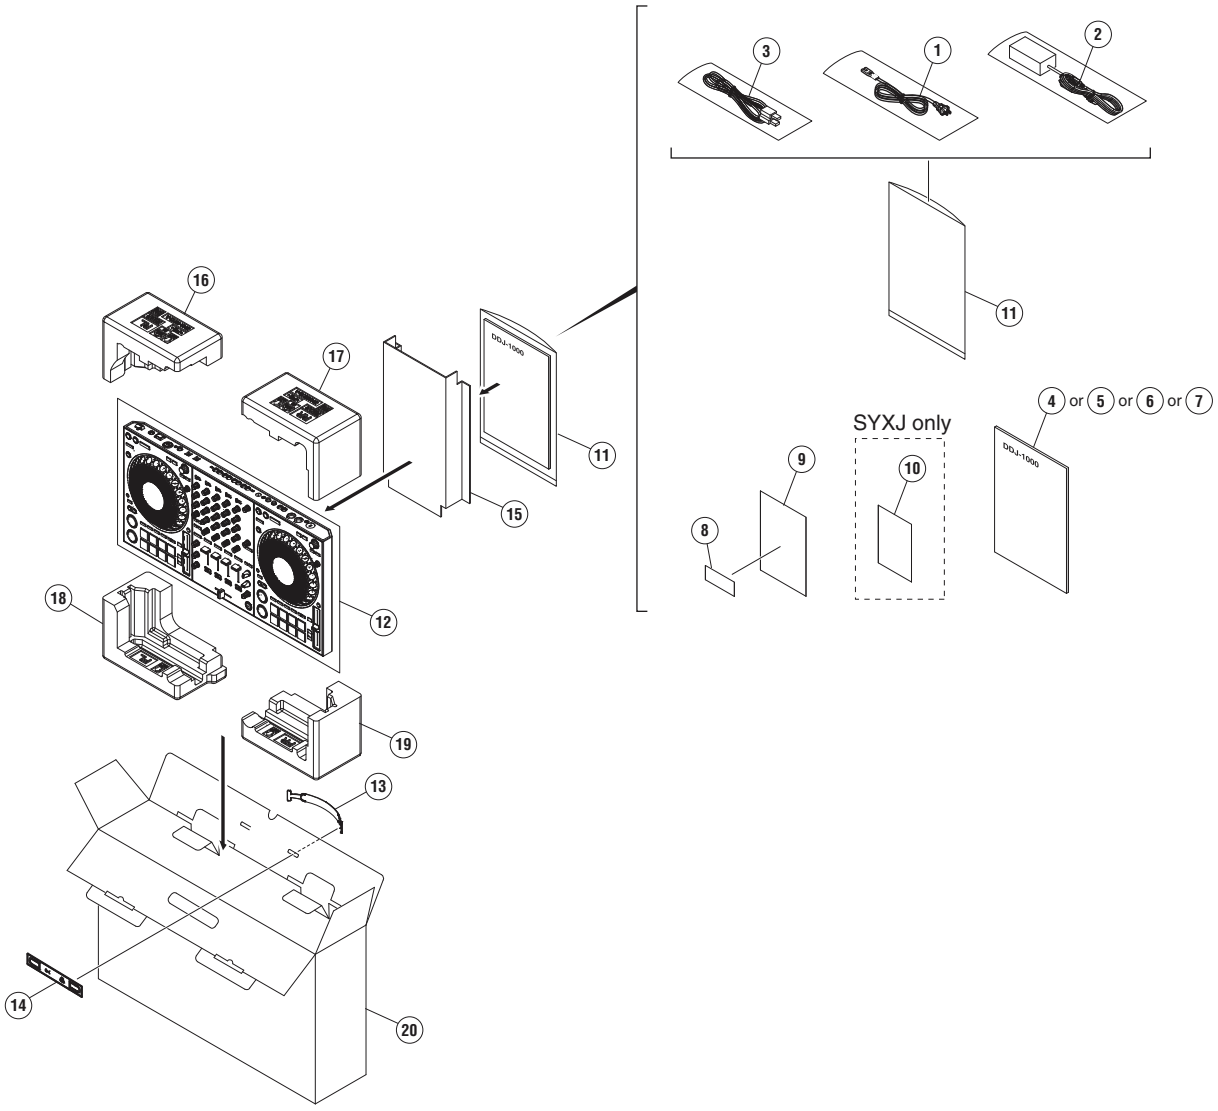

## (1) PACKING SECTION PARTS LIST


| Mark | No. | Description | Part No. |
|---|---|---|---|
| ⚠ | 1 | Power Cord | See Contrast table (2) |
| ⚠ | 2 | AC Adapter | DWR1574 |
| | 3 | USB Cable | DDE1128 |
| | 4 | Operating Instructions (Quick Start Guide) | See Contrast table (2) |
| | 5 | Operating Instructions (Quick Start Guide) | See Contrast table (2) |
| | 6 | Operating Instructions (Quick Start Guide) | See Contrast table (2) |
| | 7 | Operating Instructions (Quick Start Guide) | See Contrast table (2) |
| NSP | 8 | rekordbox dj license key label | DXA2304 |
| NSP | 9 | Leaflet | DRM1410 |
| NSP | 10 | Warranty | See Contrast table (2) |
| NSP | 11 | Polyethylene Bag | AHG7117 |
| | 12 | Mirror Mat (1200*1000) | DHL1169 |
| | 13 | Handle | DEC3783 |
| | 14 | Spacer | DEC3784 |
| | 15 | Partition | DHC1101 |
| | 16 | Packing Pad | DHA1972 |
| | 17 | Packing Pad | DHA1973 |
| | 18 | Packing Pad | DHA1974 |
| | 19 | Packing Pad | DHA1975 |
| | 20 | Packing Case | See Contrast table (2) |

## (2) CONTRAST TABLE

DDJ-1000/FWLPWXJ, SYXJ, UXJCB and XJCN are constructed the same except for the following:

| Mark | No. | Symbol and Description | DDJ-1000 /FWLPWXJ | DDJ-1000 /SYXJ | DDJ-1000 /UXJCB | DDJ-1000 /XJCN |
|---|---|---|---|---|---|---|
| ⚠ | 1 | Power Cord | ADG1154 | ADG1154 | XDG3052 | ADG7079 |
| | 4 | Operating Instructions (Quick Start Guide)(En, Es) | DRH1471 | Not used | Not used | Not used |
| | 5 | Operating Instructions (Quick Start Guide) (En, Fr, De, It, Nl, Es, Pt, Ru) | Not used | DRH1469 | Not used | Not used |
| | 6 | Operating Instructions (Quick Start Guide)(En, Fr) | Not used | Not used | DRH1468 | Not used |
| | 7 | Operating Instructions (Quick Start Guide)(Zhcn) | Not used | Not used | Not used | DRH1470 |
| NSP | 10 | Warranty | Not used | DRY1270 | Not used | Not used |
| | 20 | Packing Case | DHG3619 | DHG3584 | DHG3618 | DHG3621 |


# 9.2 BOTTOM SECTION

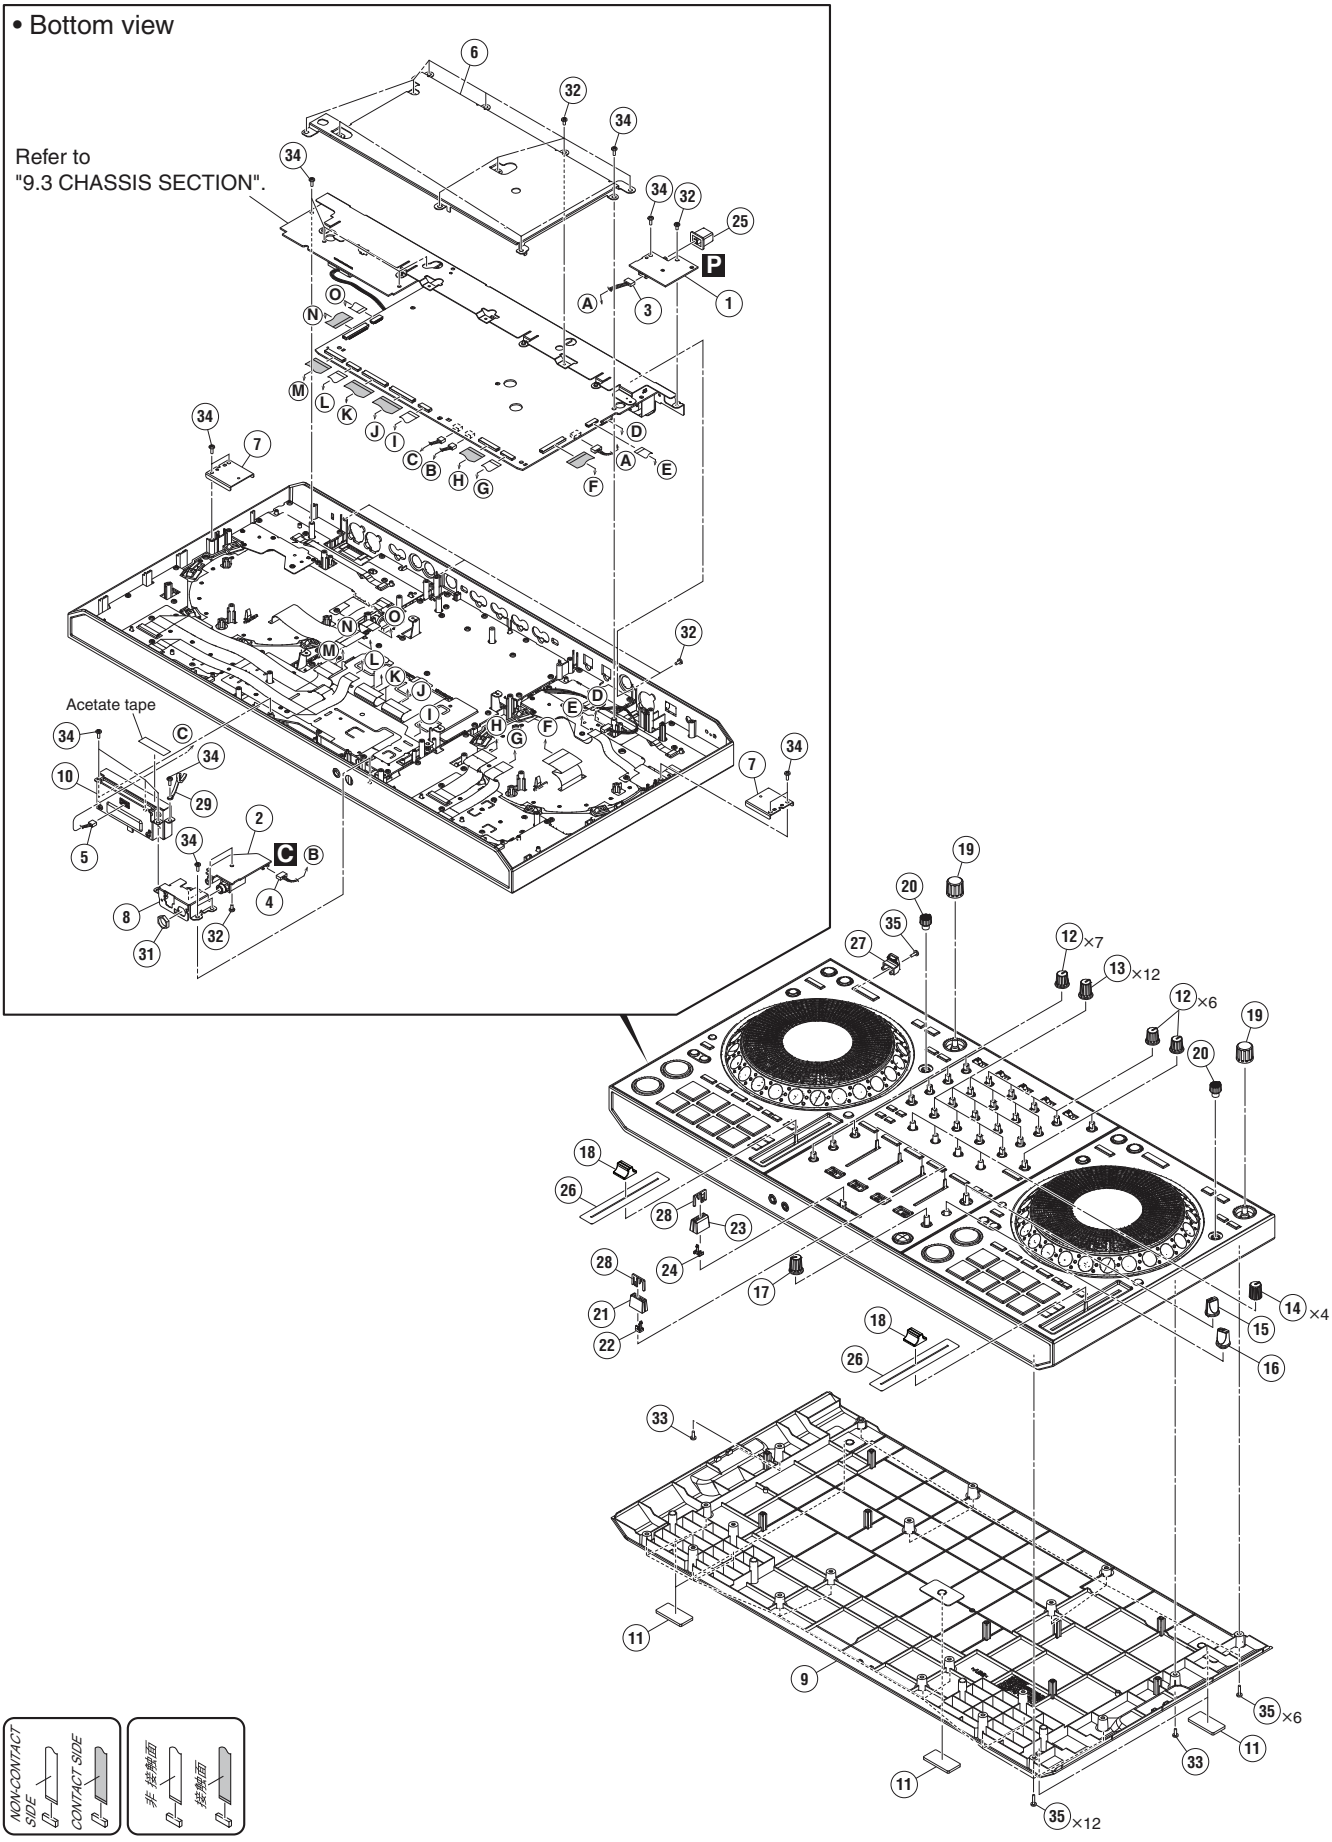

## (1) BOTTOM SECTION PARTS LIST

| Mark | No. | Description | Part No. |
|---|---|---|---|
| | 1 | PSWB Assy | DWX4114 |
| | 2 | HPJK Assy | DWX4116 |
| | 3 | Connector Assy (05P) | PF05PP-D12 |
| | 4 | Connector Assy | PF04PP-D10 |
| | 5 | Connector Assy | PF03PP-B22 |
| | 6 | Shield Plate | DNH3342 |
| | 7 | Stay | DNH3351 |
| | 8 | Stay | DNH3348 |
| ⚠ | 9 | Chassis | DNK6747 |
| | 10 | Cross Fader Service Assy | DEA1088 |
| | 11 | Sheet/LEG | DEC3534 |
| | 12 | Knob | DAA1360 |
| | 13 | Knob | DAA1361 |
| | 14 | Knob | DAA1386 |
| | 15 | Select Knob | DAA1205 |
| | 16 | FX SEL Knob | DAA1213 |
| | 17 | Knob | DAA1368 |
| | 18 | Knob/SLD | DNK5981 |
| | 19 | Dial Knob | DAA1246 |
| | 20 | Adjust Knob Black | DAC2528 |
| | 21 | Slider Knob 1 | DAC2684 |
| | 22 | Stopper/SLD | DNK6009 |
| | 23 | Knob | DAC3238 |
| | 24 | Stopper | DNK6440 |
| | 25 | Power Knob | DAC2306 |
| | 26 | Slide Sheet 1C | DAH2404 |
| | 27 | Cord Hook | DNK6755 |
| | 28 | Slider Knob 2 | DAC2685 |
| | 29 | Cord Clamper (Steel) | RNH-184 |
| | 30 | ••••• | |
| | 31 | Nut M12 | DBN1018 |
| | 32 | Screw | BBZ30P060FTB |
| | 33 | Screw | BBZ30P080FTB |
| | 34 | Screw | BPZ30P080FNI |
| | 35 | Screw | BPZ30P120FTB |

# 9.3 CHASSIS SECTION

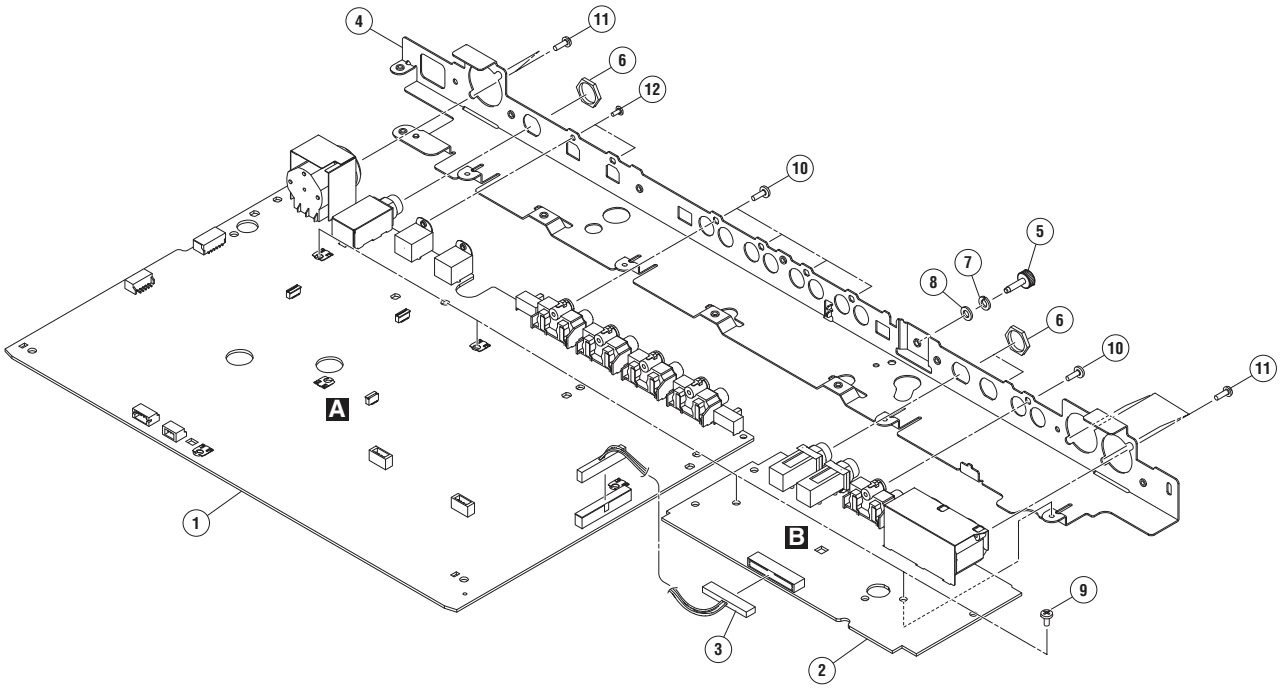



## CHASSIS and CROSSFADER SECTION PARTS LIST

| Mark No. | Description | Part No. |
|---|---|---|
| 1 | MAIN Assy | DWX4104 |
| 2 | MOUT Assy | DWX4115 |
| 3 | Crimp Connector | PF16PP-D15 |
| 4 | Stay | DNH3341 |
| 5 | Earth Terminal | DKE1015 |
| 6 | Nut | NKX2FTC |
| 7 | Spring Lock Washer | WS40FNI |
| 8 | Washer | WA32F100Q050 |
| 9 | Screw | BBZ30P060FTB |
| 10 | Screw | BPZ30P080FTB |
| 11 | Screw | PPZ30P080FTB |
| 12 | Screw (M3*5) | DBA1340 |

# 9.4 CONTROL PANEL SECTION (1/2)

• Bottom view

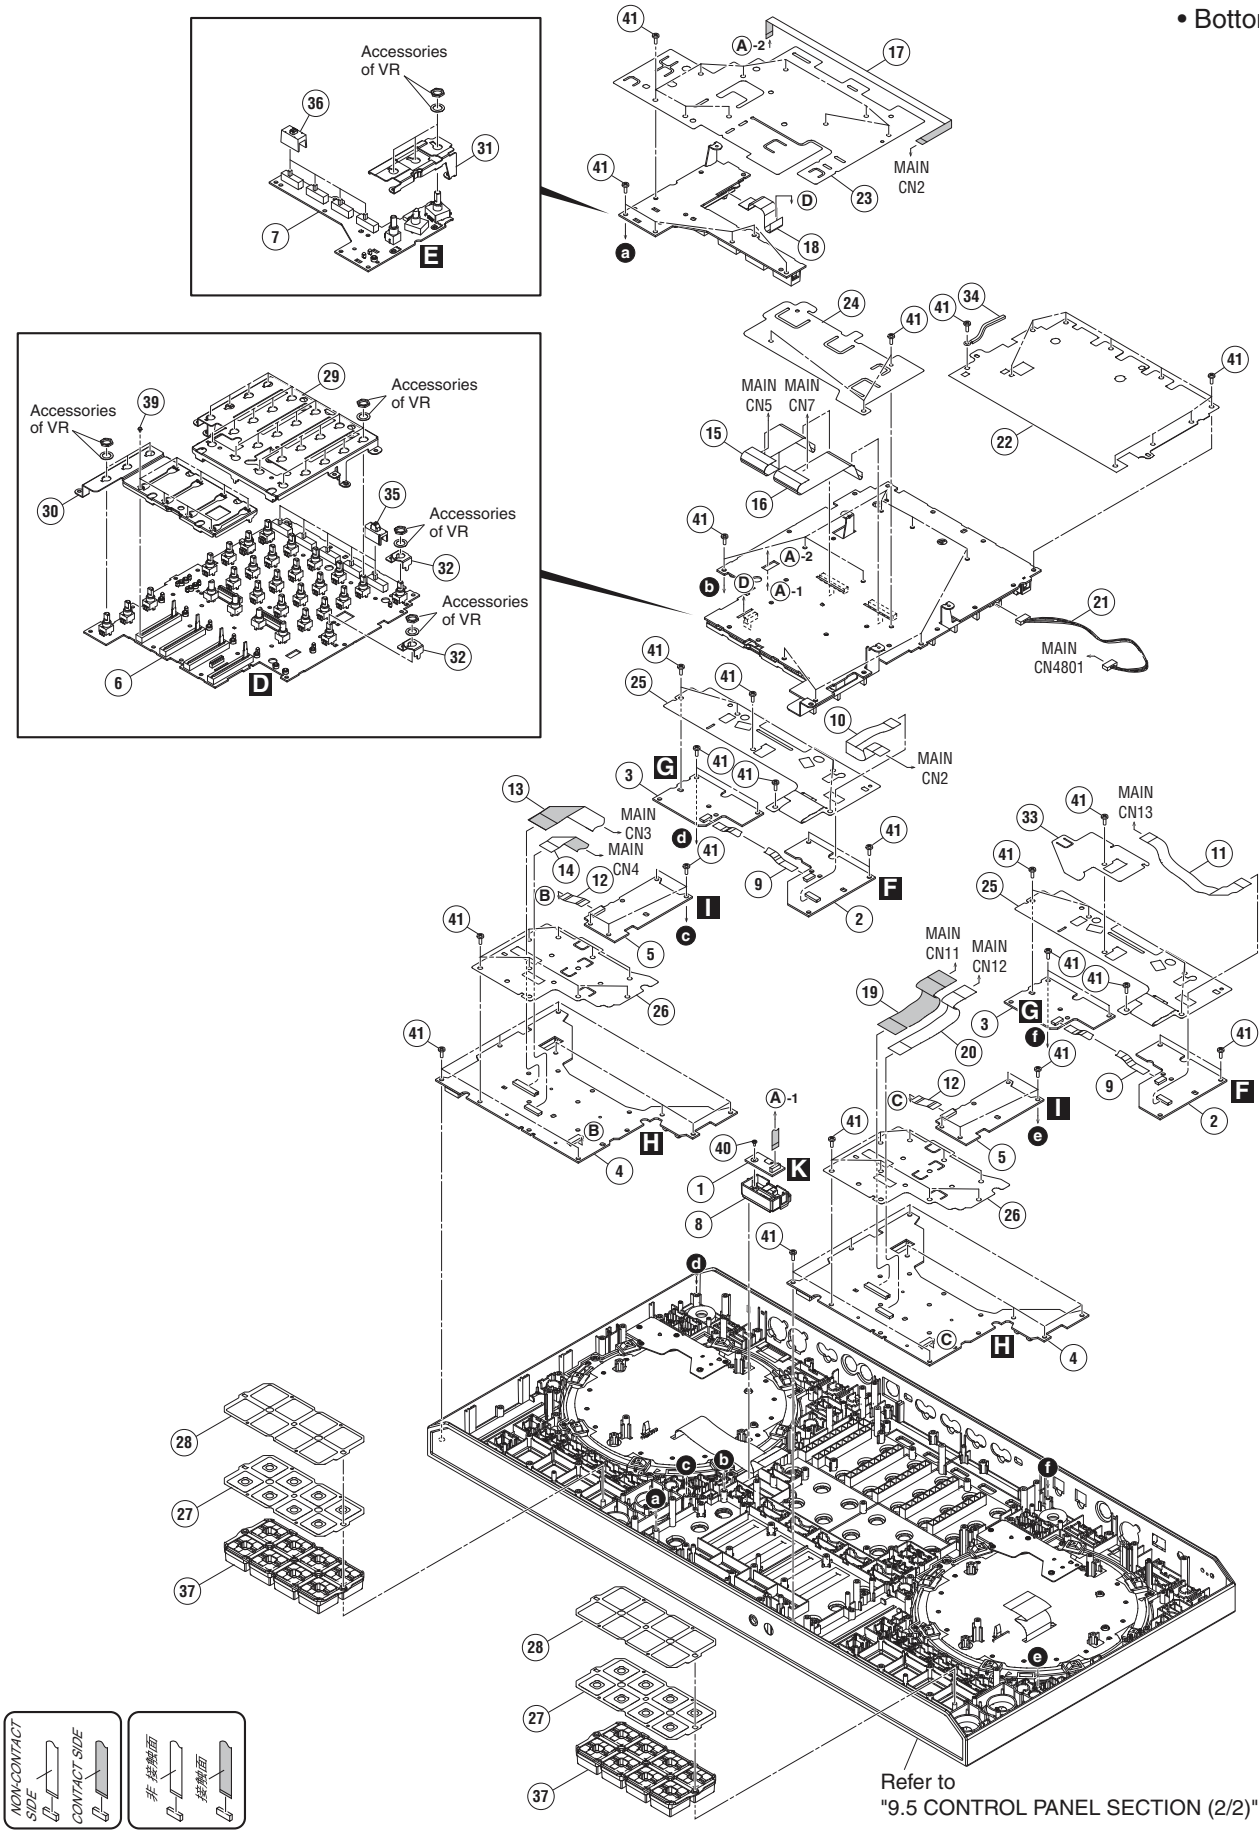



Refer to "9.5 CONTROL PANEL SECTION (2/2)".

## CONTROL PANEL SECTION (1/2) SECTION PARTS LIST

| Mark | No. | Description | Part No. |
|---|---|---|---|
| | 1 | OLED Assy | DWX4106 |
| | 2 | LOOP Assy | DWX4108 |
| | 3 | BRWS Assy | DWX4109 |
| | 4 | PADB Assy | DWX4110 |
| | 5 | PLAY Assy | DWX4111 |
| | 6 | MIXER Assy | DWX4112 |
| | 7 | BFXB Assy | DWX4117 |
| | 8 | OLED Assy (Service) | DEA1084 |
| | 9 | FFC | DDD1831 |
| | 10 | FFC | DDD1832 |
| | 11 | FFC | DDD1833 |
| | 12 | FFC | DDD1834 |
| | 13 | FFC | DDD1835 |
| | 14 | FFC | DDD1836 |
| | 15 | FFC | DDD1839 |
| | 16 | FFC | DDD1840 |
| | 17 | FFC | DDD1841 |
| | 18 | FFC | DDD1842 |
| | 19 | FFC | DDD1844 |
| | 20 | FFC | DDD1845 |
| | 21 | Shielded Conn-Cable | DDA1082 |
| | 22 | I-Shield Sheet | DEC3765 |
| | 23 | Sheet | DEC3770 |
| | 24 | Sheet | DEC3771 |
| | 25 | Sheet | DEC3772 |
| | 26 | Sheet | DEC3773 |
| | 27 | Sheet | DEC3774 |
| | 28 | Spacer | DEC3775 |
| | 29 | Stay | DNH3343 |
| | 30 | Stay | DNH3346 |
| | 31 | Stay | DNH3347 |
| | 32 | Stay | DNF2039 |
| ⚠ | 33 | Sheet | DEC3780 |
| | 34 | Cord Clamper (Steel) | RNH-184 |
| | 35 | SW Cap | DAC2753 |
| | 36 | Slide SW Cap (W) | DAC2401 |
| | 37 | Button | DEB2059 |
| | 38 | ••••• | |
| | 39 | Screw | PMH20P040FTC |
| | 40 | Screw | BPZ20P040FTB |
| | 41 | Screw | BPZ30P080FNI |

# 9.5 CONTROL PANEL SECTION (2/2)

• Bottom view

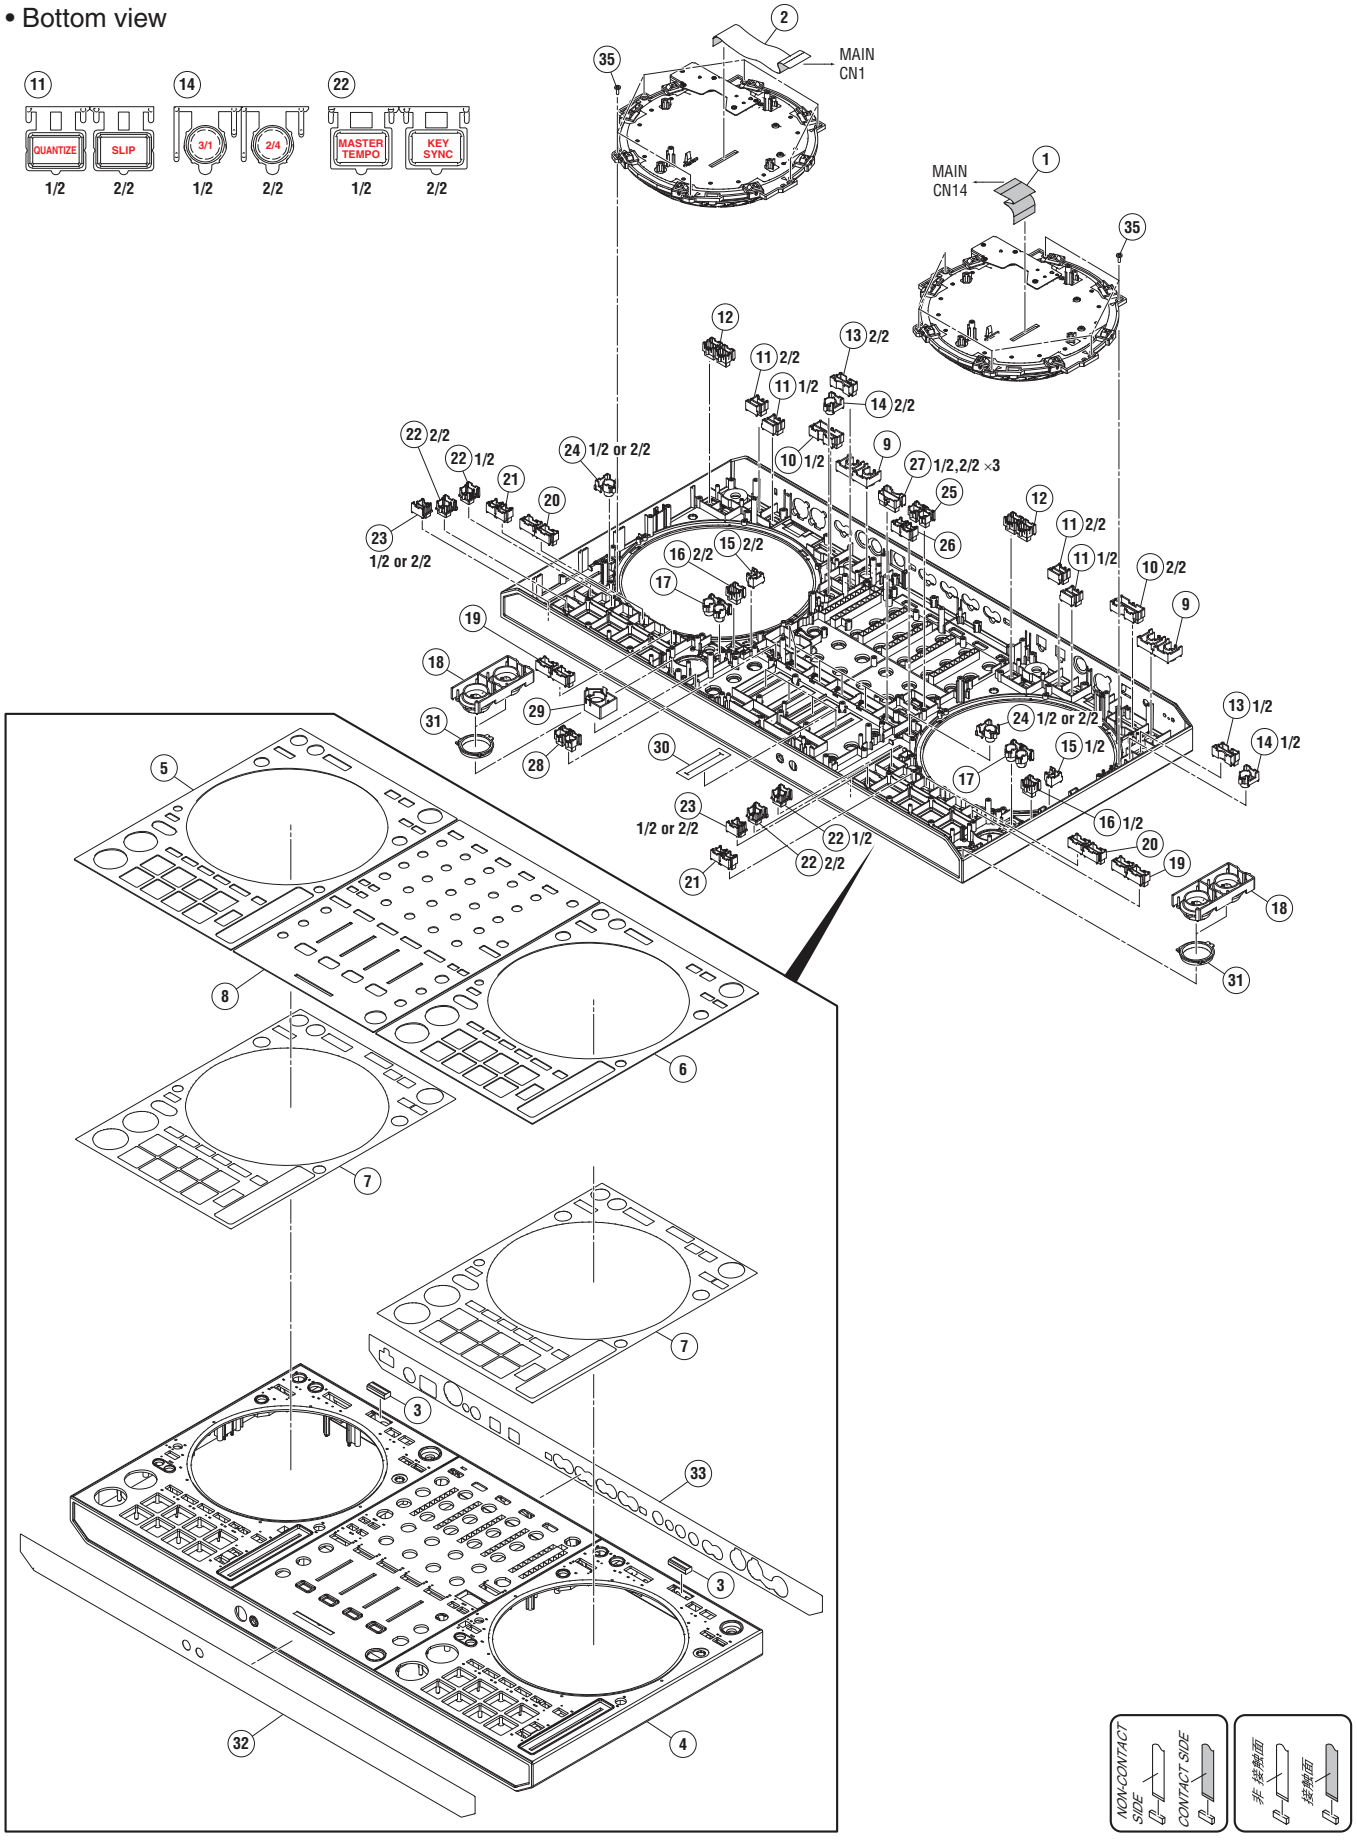

## (1) CONTROL PANEL SECTION (2/2) SECTION PARTS LIST


| Mark | No. | Description | Part No. |
|---|---|---|---|
| | 1 | FFC | DDD1837 |
| | 2 | FFC | DDD1838 |
| | 3 | EMC Gasket | DEC3766 |
| ⚠ | 4 | Control Panel | DNK6746 |
| | 5 | Plate | DAH3190 |
| | 6 | Plate | DAH3191 |
| | 7 | DS Tape | DEH1095 |
| | 8 | Plate | DAH3186 |
| | 9 | Button/LOP | DAC3074 |
| | 10 | Button | DAC3356 |
| | 11 | Button | DAC3357 |
| | 12 | Button | DAC3358 |
| | 13 | Button | DAC3359 |
| | 14 | Button | DAC3360 |
| | 15 | Button | DAC3361 |
| | 16 | Button | DAC3362 |
| | 17 | Button | DAC3363 |
| | 18 | Button | DXB2189 |
| | 19 | Button | DAC3364 |
| | 20 | Button | DAC3365 |
| | 21 | Button | DAC3366 |
| | 22 | Button | DAC3367 |
| | 23 | Button | DAC3368 |
| | 24 | Button | DAC3369 |
| | 25 | Button | DAC3370 |
| | 26 | Button | DAC3371 |
| | 27 | Button | DAC3219 |
| | 28 | Button | DAC3372 |
| | 29 | Button | DAC3141 |
| | 30 | Fader Packing | DEC3355 |
| | 31 | Ring Lens (PLAY) | DNK5315 |
| | 32 | Sheet | DEC3763 |
| | 33 | Sheet | See Contrast table (2) |
| | 34 | ••••• | |
| | 35 | Screw | BPZ30P080FNI |

## (2) CONTRAST TABLE

DDJ-1000/FWLPWXJ, SYXJ, UXJCB and XJCN are constructed the same except for the following:

| Mark | No. | Symbol and Description | DDJ-1000 /FWLPWXJ | DDJ-1000 /SYXJ | DDJ-1000 /UXJCB | DDJ-1000 /XJCN |
|---|---|---|---|---|---|---|
| | 33 | Sheet | DEC3800 | DEC3800 | DEC3800 | DEC3801 |

# 9.6 JOG DIAL SECTION

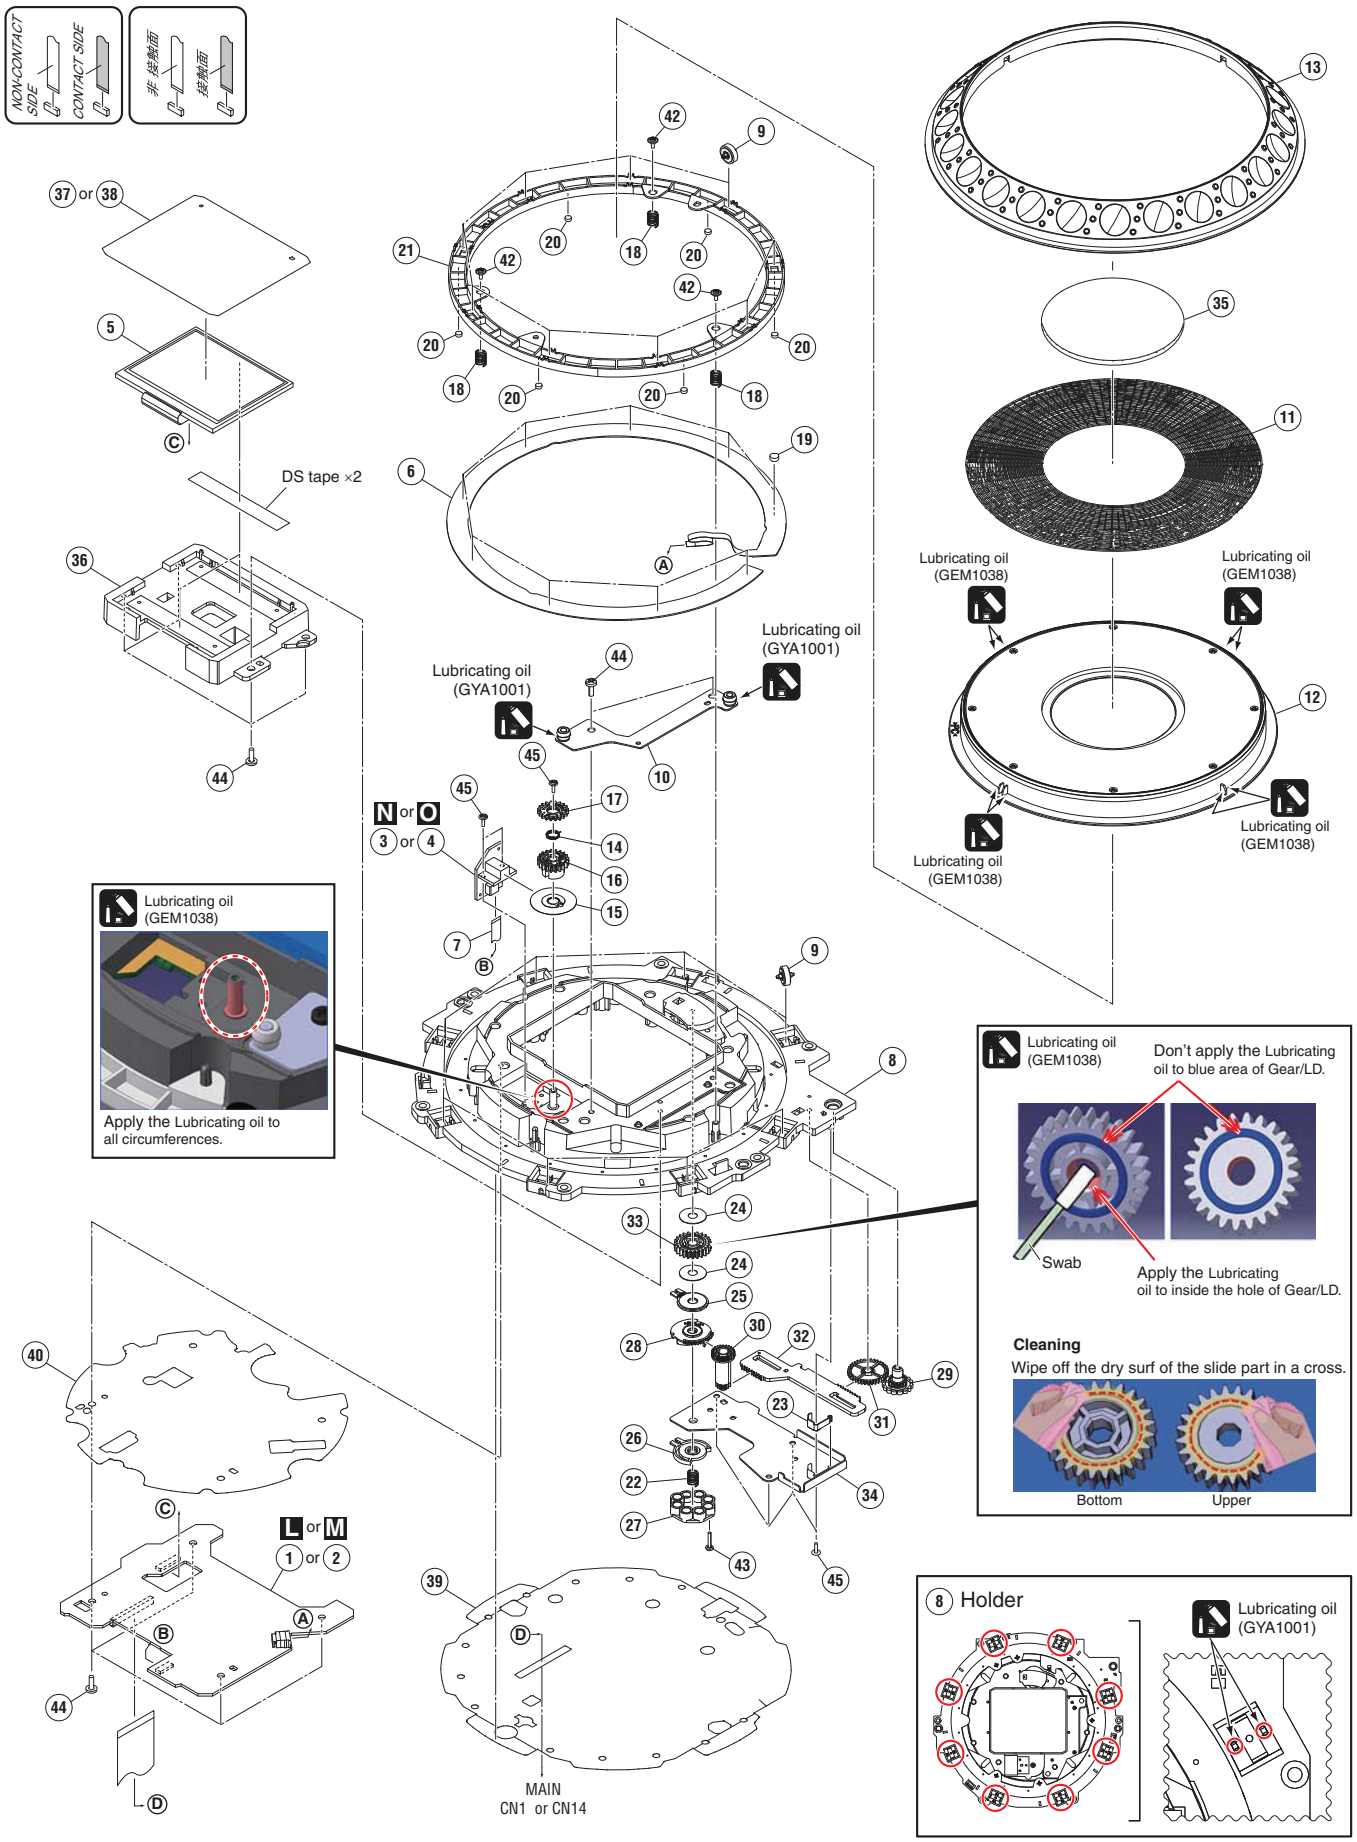

## JOG DIAL SECTION PARTS LIST

| Mark No. | Description | Part No. |
|---|---|---|
| 1 | LCDL Assy | DWX4105 |
| 2 | LCDR Assy | DWX4118 |
| 3 | JOGL Assy | DWX4113 |
| 4 | JOGR Assy | DWX4119 |
| 5 | TFT LCD | DWX4141 |
| 6 | Sheet SW | DSX1078 |
| 7 | FFC | DDD1843 |
| 8 | Holder | DNK6745 |
| 9 | Roller | DXB2178 |
| 10 | Stay Assy/JOG | DXB2133 |
| 11 | JOG Plate | DAH2679 |
| 12 | JOG Dial A Assy | DXA2159 |
| 13 | JOG B | DNK4068 |
| 14 | Encoder Spring | DBH1710 |
| 15 | Plate | DEC3700 |
| 16 | Gear/A | DNK6143 |
| 17 | Gear/B | DNK6144 |
| 18 | SW Spring | DBH1681 |
| 19 | SW Cushion HH48/2 | DEC2538 |
| 20 | Cushion/RNG | DEC3466 |
| 21 | SW Ring | DNK5233 |
| 22 | Coil Spring/LD | DBH1798 |
| 23 | Leaf Spring/ADJ | DBK1376 |
| 24 | Washer | DEC3137 |
| 25 | Smoother | DNK5237 |
| 26 | Comp Plate | DNK5243 |
| 27 | Adjust Plate | DNK5300 |
| 28 | Cam Plate | DNK5301 |
| 29 | Dial Gear | DNK5302 |
| 30 | Link Gear A | DNK5303 |
| 31 | Link Gear B | DNK5304 |
| 32 | Plate | DNK6748 |
| 33 | Gear/LD | DNK6145 |
| 34 | Plate | DNH3345 |
| 35 | Window | DAH3189 |
| 36 | Holder | DNK6749 |
| 37 | Sheet | DEC3768 |
| 38 | Sheet | DEC3779 |
| 39 | Barrier | DEC3798 |
| 40 | Barrier | DEC3799 |
| 41 | ••••• | |
| 42 | Screw (FE) | DBA1265 |
| 43 | Screw | BPZ20P100FTC |
| 44 | Screw | BPZ30P080FNI |
| 45 | Screw | IPZ20P060FTC |

# 12. PCB PARTS LIST

*NOTES:* ● *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
● *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
● *When ordering resistors, first convert resistance values into code form as shown in the following examples.*

*Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47 k ohm (tolerance is shown by J = 5%, and K = 10%).*

*560 Ω → 56 × $10^1$ → 561 ····· RD1/4PU 5 6 1 J*
*47 kΩ → 47 × $10^3$ → 473 ····· RD1/4PU 4 7 3 J*
*0.5 Ω → R50 ····· RN2H R 5 0 K*
*1 Ω → 1R0 ····· RS1P 1 R 0 K*

*Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).*

*5.62 kΩ → 562 × $10^1$ → 5621 ····· RN1/4PC 5 6 2 1 F*

| Mark | No. | Description | Part No. |
|---|---|---|---|
| | | **LIST OF ASSEMBLIES** | |
| | 1 | ..MAIN ASSY | DWX4104 |
| NSP | 1 | ..DISP ASSY | DWM2671 |
| | 2 | ..LCDL ASSY | DWX4105 |
| | 2 | ..LCDR ASSY | DWX4118 |
| | 2 | ..OLED ASSY | DWX4106 |
| NSP | 2 | ..CRFB ASSY | DWX4107 |
| NSP | 1 | ..DECPAD ASSY | DWM2672 |
| | 2 | ..LOOP ASSY | DWX4108 |
| | 2 | ..BRWS ASSY | DWX4109 |
| | 2 | ..PADB ASSY | DWX4110 |
| | 2 | ..PLAY ASSY | DWX4111 |
| | 1 | ..MIXER ASSY | DWX4112 |
| NSP | 1 | ..SUB ASSY | DWM2674 |
| | 2 | ..JOGL ASSY | DWX4113 |
| | 2 | ..PSWB ASSY | DWX4114 |
| | 2 | ..MOUT ASSY | DWX4115 |
| | 2 | ..HPJK ASSY | DWX4116 |
| | 2 | ..BFXB ASSY | DWX4117 |
| | 2 | ..JOGR ASSY | DWX4119 |

| Mark | No. | Description | Part No. |
|---|---|---|---|
| | | **A MAIN ASSY** | |
| | | **SEMICONDUCTORS** | |
| ⚠ | IC | 501,510,513 | NJM78M05DL1A |
| ⚠ | IC | 502,504 | MM3542BF |
| ⚠ | IC | 503 | BD9328EFJ |
| ⚠ | IC | 505 | MM3543BH |
| ⚠ | IC | 506 | NJM2872BF33 |
| ⚠ | IC | 507 | BD2226G |
| | IC | 509,1002 | S-80930CNMC-G80 |
| ⚠ | IC | 511,512 | BD9851EFV |
| ⚠ | IC | 514 | NJM2886DL3-33 |
| ⚠ | IC | 515,516 | NJM78M15DL1A |
| ⚠ | IC | 517 | NJM79M15DL1A |
| ⚠ | IC | 518 | NJM2831F05 |
| | IC | 1001 | DYW2081 |
| | | *Part number of the initial firmware equipped | |
| | IC | 1501 | DYW2082 |
| | | *Part number of the initial firmware equipped | |

| Mark | No. | Description | Part No. |
|---|---|---|---|
| | IC | 2001 | DYW2083 |
| | | *Part number of the initial firmware equipped | |
| NSP | IC | 2003,2502 | R5S72690W266FP |
| | IC | 2005 | TC7SHU04FUS2 |
| | IC | 2006 | TC7SZU04FUS2 |
| | IC | 2007,2009,2503,2504 | TC7SH08FUS2 |
| | IC | 2008,3507,3508 | TC7SZ08FUS2 |
| | IC | 2501 | TC7SH04FUS2 |
| | IC | 3001 | D810K013DZKB400 |
| | IC | 3002 | M12L128168A-5TG2N |
| ⚠ | IC | 3502 | NJM2831F33 |
| | IC | 3503-3505 | 74LCX08FT |
| | IC | 3510 | SN74AUC1G08DCK |
| | IC | 4001-4004,4401-4404 | NJM4580MD |
| | IC | 4005,4006,4405,4406 | AK5358AET |
| | IC | 4801,5601-5608 | NJM4580MD |
| | IC | 4802 | NJM4565MD |
| | IC | 4803 | AK5358AET |
| | IC | 5201 | AK4458VN |
| ⚠ | Q | 501,504,506 | RSQ035P03 |
| | Q | 502,505,508,529 | LTC024EEB |
| | Q | 503,507,521-523 | LSCR523UB |
| | Q | 509-511,514-516 | LSAR523UB |
| ⚠ | Q | 512,519 | RSQ030P03 |
| ⚠ | Q | 513 | RSR020P05 |
| ⚠ | Q | 517 | RTQ045N03 |
| | Q | 518 | LTC014YEB |
| | Q | 520,528,1002,1006 | LSAR523UB |
| ⚠ | Q | 524 | RTQ040P02 |
| | Q | 525,1009,5617,5619 | LSCR523UB |
| | Q | 1001,1004,1005,1008 | LTC124EUB |
| | Q | 1007,5618,5620 | LSAR523UB |
| | Q | 1012 | LTA124EUB |
| | Q | 1501 | RT1N431M |
| | Q | 2001,2503,3001,5601 | LTC024EEB |
| | Q | 4401-4404,5605-5612 | INC2002AC1 |
| | Q | 4405,4406,5603,5604 | LTA024EEB |
| | Q | 4801-4804,5613,5614 | 2SK209 |
| | Q | 5602 | LTC024EEB |
| | Q | 5615,5616,5625,5626 | INC2002AC1 |
| | Q | 5621,5623 | 2SCR573D3 |
| | Q | 5622,5624 | 2SAR573D3 |
| ⚠ | D | 502 | RB060M-30 |
| | D | 504 | DZ2J150M0 |
| | D | 505,507,509,510 | 1SS355VM |

| Mark | No. | Description | Part No. |
|---|---|---|---|
| | D | 511,512,518-520 | DB2J41100 |
| | D | 513,514,516,517 | 1SS355VM |
| | D | 515 | DAN202UM |
| | D | 521,522 | RB501VM-40 |
| | D | 523,525,5601-5606 | 1SS355VM |
| | D | 2001,2501,3001 | SML-D12U8W |
| | D | 4001-4004,4401-4404 | DAN217UM |
| | D | 4801,4802 | DAN217UM |
| | D | 4803-4810 | DZ2J130M0 |

**MISCELLANEOUS**

| | | | |
|---|---|---|---|
| | L | 501 COIL (47 uH) | CTH1475 |
| | L | 502,503 SMD SPL INDUCTOR (10 uH) | CTH1584 |
| | L | 504 CHOKE COIL (22 uH) | CTH1561 |
| | L | 505-508 POWER INDUCTOR (22 uH) | ATH7011 |
| | L | 509-512 CHOKE COIL (22 uH) | CTH1426 |
| | L | 1001,1501,2001-2003 INDUCTOR | CTF1793 |
| | L | 2004,2006-2008 INDUCTOR | CTF1545 |
| | L | 2005,2506 COIL | ATH7015 |
| | L | 2009,2502-2504,4801 INDUCTOR | CTF1793 |
| | L | 2010-2013,2501,2505 INDUCTOR | CTF1545 |
| | L | 2507-2512 INDUCTOR | CTF1545 |
| | L | 3001 SMD FERRITE BEADS | CTF1823 |
| | L | 4802 INDUCTOR | CTF1793 |
| | F | 3001 EMI FILTER | DTL1106 |
| | JA | 2001,2501 USB CONNECTOR | DKN1237 |
| | JA | 4001,4002,4401,4402 RCA JACK | DKB1125 |
| | JA | 4801 XLR SOCKET | DKB1124 |
| | JA | 4802 6.5 DIA JACK | DKN1669 |
| | KN | 501-504 WRAPPING TERMINAL | CKF1089 |
| | KN | 506 WRAPPING TERMINAL | CKF1089 |
| | S | 4401,4402 SLIDE SWITCH | DSH1025 |
| | X | 1001,1501 CRYSTAL RESONATOR (16 MHz) | BSS1146 |
| | X | 2001 CRYSTAL RESONATOR (13.3333 MHz) | CSS1840 |
| | X | 2002 RESONATOR (48.000 MHz) | CSS1760 |
| | X | 3501 OSCILLATOR (16.9344 MHz) | CWX3849 |
| | CN | 1,5,7,14 CONNECTOR | CKS6025 |
| | CN | 2,13 FFC/FPC CONNECTOR | CKS6649 |
| | CN | 3,11 FFC/FPC CONNECTOR | CKS6643 |
| | CN | 4,12 FFC/FPC CONNECTOR | CKS6387 |
| | CN | 10 CONNECTOR | AKM1289 |
| | CN | 15 CONNECTOR | CKS6095 |
| | CN | 501 CONNECTOR | AKM1291 |
| | CN | 4801 CONNECTOR | AKM1292 |
| | CN | 5601 CONNECTOR | AKM1290 |
| | CN | 5602 CONNECTOR | AKM1287 |
| | | 1001 MIC SHIELD | DNF1849 |
| | | 1002 SHIELD CASE | DNF2043 |
| ⚠ | P | 502,503 PROTECTOR (0.750 A) | DEK1096 |
| | VA | 2001,2501,4001-4006 VARISTORS | EZJZ1V270RM |
| | VA | 4401-4408,4801-4803 VARISTORS | EZJZ1V270RM |

**RESISTORS**

| | | | |
|---|---|---|---|
| | R | 72,75,570,572 | RS1/10SR0R0J |
| | R | 514 | RS1/16SS1602D |
| | R | 515,2130,2616 | RS1/16SS5601D |
| | R | 516,517 | RS1/16SS3302D |
| | R | 518 | RS1/10SR6801D |
| | R | 519 | RS1/10SR75R0D |
| | R | 520,526,529 | RS1/16SS2201D |
| | R | 521 | RS1/16SS6800D |
| | R | 522 | RS1/16SS3301D |
| | R | 523,540 | RS1/16SS1002D |
| | R | 524 | RS1/16SS1202D |
| | R | 525,4005-4008 | RS1/10SR1000D |
| | R | 527 | RS1/16SS2202D |
| | R | 528 | RS1/10SR5600D |
| | R | 538 | RS1/16SS2002D |
| | R | 556,558,576 | RS1/10SR1502D |
| | R | 557,559,569,577 | RS1/10SR1002D |
| | R | 560,562,595,598 | RS1/10SR3002D |
| | R | 561,563,602,610 | RS1/10SR6802D |
| | R | 565 | RS1/10SR1803D |
| | R | 566 | RS1/10SR5102D |
| | R | 571 | RS1/10SR5601D |
| | R | 575,4009-4012 | RS1/10SR2200D |
| | R | 581,589 | RS1/10SR330J |
| | R | 582,599 | RS1/10SR100J |
| | R | 583,584 | RS1/10SR472J |
| | R | 597,600,1051,1543 | RS1/10SR105J |
| | R | 601,5625-5628 | RS1/10SR6201D |
| | R | 606 | RS1/10SR512J |
| | R | 608,616,4041-4044 | RS1/10SR1002D |
| | R | 611,612,615,635 | RS1/10SR0R0J |
| | R | 613 | RS1/10SR1503D |
| | R | 614 | RS1/10SR5101D |
| | R | 618,5637-5640 | RS1/10SR2002D |
| | R | 620 | RS1/10SR6202D |
| | R | 621,5716-5719 | RS1/10SR1001D |
| | R | 625,5653-5656 | RS1/10SR3001D |
| | R | 630 | RS1/4SA0R0J |
| | R | 637 | RS1/10SR222J |
| | R | 1012,1022,1097,1100 | RS1/10SR0R0J |
| | R | 1013,1098,1101 | RS1/10SR104J |
| | R | 1014,5734,5735 | RS1/10SR102J |
| | R | 1099,1102,1105-1108 | RS1/10SR332J |
| | R | 1103,1104 | RS1/10SR473J |
| | R | 1504,2013,2027 | RS1/10SR0R0J |
| | R | 2127,2612 | RS1/16SS2402F |
| | R | 2144-2146,2502,2632 | RS1/10SR0R0J |
| | R | 2147,2148,5705,5706 | RS1/10SR105J |
| | R | 2151,2633,5711,5737 | RS1/8SQ0R0J |
| | R | 3504,3513,3522-3524 | RS1/10SR0R0J |
| | R | 3509-3512,3515,3516 | RS1/10SR680J |
| | R | 3517,4049-4052 | RS1/10SR101J |
| | R | 3561-3564 | RS1/10SR220J |
| | R | 3570-3572,3578-3581 | RS1/10SR680J |
| | R | 4001-4004,4401-4404 | RS1/10SR0R0J |
| | R | 4013-4016,4413-4416 | RS1/10SR1003D |
| | R | 4017-4020,4417-4420 | RS1/10SR9102D |
| | R | 4029-4032,4439-4442 | RS1/10SR103J |
| | R | 4033-4036,4443-4446 | RS1/10SR3301D |
| | R | 4037-4040,4045-4048 | RS1/10SR2701D |
| | R | 4405-4408,4801-4804 | RS1/10SR1000D |
| | R | 4409-4412,4805-4808 | RS1/10SR2200D |
| | R | 4421-4424,4491-4494 | RS1/10SR1801D |
| | R | 4425-4428 | RN1/16SE2703D |
| | R | 4429,4431,4433,4435 | RS1/10SR2202D |
| | R | 4447-4450,4455-4458 | RS1/10SR2701D |
| | R | 4451-4454,5673-5676 | RS1/10SR1002D |
| | R | 4459-4462 | RS1/10SR101J |

| Mark | No. | Description | Part No. |
|---|---|---|---|
| R | 4809-4814,4827,4828 | | RS1/10SR3301D |
| R | 4815,4817,4821,4822 | | RN1/16SE1501D |
| R | 4816,4818,4824,4826 | | RN1/16SE4701D |
| R | 4819,4820 | | RS1/10SR8200D |
| R | 4829,4830,5720-5723 | | RS1/10SR1801D |
| R | 4831,4832 | | RS1/10SR1602D |
| R | 4847,4849,5669-5672 | | RS1/10SR103J |
| R | 4848,4850 | | RS1/10SR2200D |
| R | 5603-5606 | | RS1/10SR513J |
| R | 5607-5614 | | RS1/10SR3301D |
| R | 5617-5624 | | RS1/10SR2401D |
| R | 5629-5636 | | RS1/10SR1501D |
| R | 5641-5644,5697-5700 | | RS1/10SR4701D |
| R | 5645-5648,5736 | | RS1/10SR0R0J |
| R | 5649-5652,5657-5660 | | RS1/10SR223J |
| R | 5661-5664 | | RS1/10SR9101D |
| R | 5665-5668 | | RS1/10SR1003D |
| R | 5677-5680,5687-5690 | | RS1/10SR6201D |
| R | 5681-5684 | | RS1/10SR1302D |
| R | 5685,5686,5691,5692 | | RS1/10SR4301D |
| R | 5693-5696 | | RS1/10SR2002D |
| R | 5701-5704 | | RS1/10SR1002D |
| R | 5707,5708,5732,5733 | | RS1/10SR183J |
| R | 5709,5710 | | RS1/8SQ680J |
| R | 5712-5715 | | RS1/10SR332J |
| R | 5724-5731 | | RS1/4SA220J |
| | Other Resistors | | RS1/16SS###J |

**CAPACITORS**

| | | | |
|---|---|---|---|
| C | 1,3,8-10 | | CKSSYB104K10 |
| C | 2,4-7,11 | | CKSRYB104K25 |
| C | 12,13,15,16 | | CKSSYB104K10 |
| C | 14,22,501 | | CKSRYB104K25 |
| C | 17,549,555 (10 uF/10 V) | | CCG1192 |
| C | 18,19,21 | | CKSSYB104K10 |
| C | 20,26 | | CEVW100M16 |
| C | 23-25,520-523 | | CKSSYB104K10 |
| C | 502,550,556,617 (10 uF/16 V) | | DCH1263 |
| C | 503,504,677,678 (10 uF/35 V) | | CCG1236 |
| C | 505,506 (22 uF/16 V) | | CCG1254 |
| C | 507-510,518,537 | | CKSRYB104K25 |
| C | 511-514,552,553 | | CKSRYB102K50 |
| C | 524,554,618,643 | | CKSRYB105K10 |
| C | 525-528 | | CKSRYB153K50 |
| C | 529-532,534,642 | | CKSSYB104K10 |
| C | 533 | | CKSSYB222K50 |
| C | 535,536 | | CCSSCH821J50 |
| C | 542,566,571,667 | | CKSRYB103K50 |
| C | 543,687,688 | | CEVW221M25 |
| C | 545 | | CKSSYB472K25 |
| C | 548,558,559,572 | | CKSRYB104K25 |
| C | 557,567,631,651 | | CCSRCH102J50 |
| C | 560,561,5208 | | CEVW101M16 |
| C | 562-565,638,653 (10 uF/10 V) | | CCG1192 |
| C | 568,569,581,582 | | CEVW470M6R3 |
| C | 573,575,580,584 | | CKSRYB104K25 |
| C | 577,578,587,588 | | CKSSYB102K50 |
| C | 579,609,2102,2109 | | CCSSCH120J50 |
| C | 583,608,2107,2116 | | CCSSCH470J50 |
| C | 585,594,595,607 | | CKSRYB104K25 |

| Mark | No. | Description | Part No. |
|---|---|---|---|
| C | 589 | | CCSRCH222J50 |
| C | 590,591,1001,1501 | | CEVW470M6R3 |
| C | 593 | | CFHXSP104J16 |
| C | 596,3501,5670,5675 (100 uF/16 V) | | CCH1565 |
| C | 597,598,1005-1013 | | CKSSYB102K50 |
| C | 601,603,626,679 | | CKSSYB103K16 |
| C | 610 | | CCSRCH220J50 |
| C | 611,2024,2025 | | CCSSCH101J50 |
| C | 612,629,641,660 | | CCSSCH102J50 |
| C | 613,634,652,672 | | CKSRYB104K25 |
| C | 614,5603,5607 | | CEVW101M25 |
| C | 615,616,1532,4829 | | CKSSYB103K25 |
| C | 619 | | CKSRYB474K10 |
| C | 621 | | CKSRYB334K10 |
| C | 622 | | CCSSCH680J50 |
| C | 623 | | CCSSCH221J50 |
| C | 625 | | CKSSYB223K16 |
| C | 628,639,693-695 | | CKSQYB334K50 |
| C | 630,633,644,649 (10 uF/16 V) | | DCH1263 |
| C | 635,637 | | CCSSCH561J50 |
| C | 646,650 | | CKSYB105K16 |
| C | 647,654,657,659 | | CKSRYB105K10 |
| C | 648,668,669,1014 | | CKSSYB104K10 |
| C | 655,3508 (2.2 uF/10 V) | | CCG1218 |
| C | 661,663 | | CKSSYB682K25 |
| C | 664 (4.7 uF/10 V) | | CCG1201 |
| C | 666,4001,4003 | | CCSRCH102J50 |
| C | 670 (0.47 uF/16 V) | | CCG1328 |
| C | 671 | | CCSSCH271J50 |
| C | 673,700,703,704 | | CKSRYB104K25 |
| C | 674-676,691,692 (10 uF/10 V) | | CCG1192 |
| C | 680,2119,2596 | | CCSSCH471J50 |
| C | 681,682,685,686 | | CCSSCH102J50 |
| C | 683,684,710,720 | | CKSQYB105K25 |
| C | 689,690,716,2120 | | CKSRYB105K10 |
| C | 696-698,717,2067 | | CCSSCH102J50 |
| C | 699,701,702 (1000 pF/63 V) | | ACE7099 |
| C | 705,707,4801,4803 | | CKSRYB102K50 |
| C | 706,708,709,715 | | CKSRYB104K25 |
| C | 718,1002,1504,2022 | | CKSRYB104K25 |
| C | 719 | | CKSQYB225K10 |
| C | 721 | | CKSQYB105K25 |
| C | 1003,1505,1508-1515 | | CKSSYB471K50 |
| C | 1004,1503,2010,3005 | | CEVW101M4 |
| C | 1015,1045-1047,1524 | | CKSSYB103K16 |
| C | 1016,1017,1525,1528 | | CCSSCH100D50 |
| C | 1018-1020,1518,1530 | | CKSSYB104K10 |
| C | 1021 | | CKSSYB473K16 |
| C | 1506,1507,1516,1517 | | CKSSYB102K50 |
| C | 1519-1523,1526,1527 | | CKSSYB471K50 |
| C | 1529,2011,2060,2511 | | CKSSYB471K50 |
| C | 1531,2001,2008,2070 | | CKSSYB104K10 |
| C | 2004,2505 (47 uF/16 V) | | CCH1961 |
| C | 2014-2021,2026 | | CKSSYB103K16 |
| C | 2027-2029,2034,2062 | | CCSSCH101J50 |
| C | 2030-2033,2036,2037 | | CKSSYB103K16 |
| C | 2039,2040,2042-2051 | | CKSSYB103K16 |
| C | 2053-2059,2061 | | CKSSYB103K16 |
| C | 2063-2065,2069,2074 | | CKSSYB103K16 |

| Mark | No. | Description | Part No. |
|---|---|---|---|
| | C | 2066,2099,2100,2108 | CCSSCH101J50 |
| | C | 2068,2071,2072 | CKSSYB102K50 |
| | C | 2073,2079,2080 (10 uF/10 V) | CCG1192 |
| | C | 2075,2084-2086,2092 | CKSSYB103K16 |
| | C | 2076-2078,2087-2091 | CKSSYB104K10 |
| | C | 2081-2083,2097,2098 | CKSSYB102K50 |
| | C | 2093,2514-2526,2528 | CKSSYB103K16 |
| | C | 2094-2096,2564,2570 (10 uF/10 V) | CCG1192 |
| | C | 2101,2105,2106,2111 | CKSSYB104K10 |
| | C | 2103 | CCSSCH150J50 |
| | C | 2104,2112-2114,2559 | CKSSYB102K50 |
| | C | 2110 | CCSSCH100D50 |
| | C | 2115,2122,2123,2126 | CCSSCH101J50 |
| | C | 2117,2118,2509,2513 | CKSSYB104K10 |
| | C | 2121,2127,2607,2608 | CCSSCH470J50 |
| | C | 2124,2501 | CEVW221M4 |
| | C | 2125,2502 | CEVW220M6R3 |
| | C | 2128,2530,2531,2534 | CCSSCH101J50 |
| | C | 2529,2532,2533 | CKSSYB103K16 |
| | C | 2535-2557,2560,2565 | CKSSYB103K16 |
| | C | 2558,2588,2589 | CCSSCH101J50 |
| | C | 2561,2567-2569 | CKSSYB104K10 |
| | C | 2562,2563,2572-2574 | CKSSYB102K50 |
| | C | 2566,2575-2577,3008 | CKSSYB103K16 |
| | C | 2571,2581-2583,3044 (10 uF/10 V) | CCG1192 |
| | C | 2578-2580,2584,2586 | CKSSYB104K10 |
| | C | 2585,2591,3014,3016 | CKSSYB102K50 |
| | C | 2587,2590,2598,3002 | CKSSYB104K10 |
| | C | 2593-2595,2599-2602 | CCSSCH101J50 |
| | C | 2597,3042,5206 | CKSRYB105K10 |
| | C | 2609,3040,3507 | CCSSCH101J50 |
| | C | 2610,2611 | CCSSCH470J50 |
| | C | 3007,3502,3503,3510 | CKSSYB104K10 |
| | C | 3009 | CKSSYB471K50 |
| | C | 3010-3013,3015,3017 | CKSSYB103K16 |
| | C | 3018,3020,3022,3024 | CKSSYB102K50 |
| | C | 3019,3021,3023,3025 | CKSSYB103K16 |
| | C | 3026,3028,3030,3032 | CKSSYB102K50 |
| | C | 3027,3029,3031,3033 | CKSSYB103K16 |
| | C | 3034,3036,3038,3505 | CKSSYB102K50 |
| | C | 3035,3037,3039,3041 | CKSSYB103K16 |
| | C | 3045-3051,3504,3509 | CKSSYB103K16 |
| | C | 3511-3513,5698 | CCSSCH101J50 |
| | C | 3515-3517 | CKSSYB102K50 |
| | C | 3518-3520,3522-3525 | CKSSYB104K10 |
| | C | 3521,4465,4466 | CKSSYB103K16 |
| | C | 4002,4004,4013,4015 | CKSRYB104K25 |
| | C | 4005-4008,4014,4016 | CCSRCH102J50 |
| | C | 4009-4012 | CCSRCH101J50 |
| | C | 4021,4058,4065-4072 | CKSRYB104K25 |
| | C | 4022,4023,4455,4456 | CEVW470M25 |
| | C | 4037-4040,4437-4440 | CEVW220M16 |
| | C | 4041,4042,4045,4046 | CEVW470M6R3 |
| | C | 4043,4044,4047,4048 | CKSSYB104K10 |
| | C | 4049,4050,4075,4077 | CCSSCH102J50 |
| | C | 4057,4061,4401,4403 | CCSRCH102J50 |
| | C | 4063,4064,4073,4074 | CKSSYB104K10 |
| | C | 4076,4078,4477,4481 | CCG1192 |
| | C | 4079,4080,4449,4476 | CCSSCH102J50 |
| | C | 4402,4404,4430,4432 | CKSRYB104K25 |

| Mark | No. | Description | Part No. |
|---|---|---|---|
| | C | 4405-4412,4429,4431 | CCSRCH102J50 |
| | C | 4413-4416 (220 uF/16 V) | CCH2090 |
| | C | 4421-4424 (0.012 uF) | ACE7125 |
| | C | 4425-4428 (3300 pF) | DCG1049 |
| | C | 4441,4442,4445,4446 | CEVW470M6R3 |
| | C | 4443,4444,4447,4448 | CKSSYB104K10 |
| | C | 4450,4463,4464,4475 | CKSSYB104K10 |
| | C | 4451,4453,4814-4817 | CCSRCH102J50 |
| | C | 4452,4454,4459-4462 | CKSRYB104K25 |
| | C | 4467-4474,4802,4804 | CKSRYB104K25 |
| | C | 4478-4480,4482,4857 | CCSSCH102J50 |
| | C | 4805-4808 (0.01 uF/50 V) | ACE7113 |
| | C | 4813,4822,5601,5602 | CEVW470M25 |
| | C | 4823,4824 | CKSRYB471K50 |
| | C | 4825,4826,4833,4834 | CCSRCH821J50 |
| | C | 4827,4828,4861,4862 | CCSRCH471J50 |
| | C | 4830 | CKSSYB103K25 |
| | C | 4835,4836,4839,4840 | CKSRYB104K25 |
| | C | 4837,4838 | CEVWNP220M16 |
| | C | 4841,4842 | CEVW220M16 |
| | C | 4843,4845 | CEVW470M6R3 |
| | C | 4844,4846,4847,4854 | CKSSYB104K10 |
| | C | 4848,4852,5202,5207 | CCSRCH102J50 |
| | C | 4849,4853,4856,5201 | CKSRYB104K25 |
| | C | 4855 | CKSRYB102K50 |
| | C | 4858,4860,5211 | CCSSCH102J50 |
| | C | 4859 (10 uF/10 V) | CCG1192 |
| | C | 5203,5228,5230 | CKSRYB104K25 |
| | C | 5204,5209,5212,5216 | CKSSYB104K10 |
| | C | 5210,5226 (100 uF/16 V) | ACG7114 |
| | C | 5213-5215,5218,5219 | CCSSCH102J50 |
| | C | 5217,5220,5221,5225 | CKSSYB104K10 |
| | C | 5223 | CEHVAW221M6R3 |
| | C | 5224 | CCSSCH102J50 |
| | C | 5227 (100 uF/25 V) | CCH2000 |
| | C | 5229,5231 | CCSRCH102J50 |
| | C | 5611-5614 | CCSRCH821J50 |
| | C | 5615-5622 | CCSRCH681J50 |
| | C | 5623,5624,5650,5651 | CCSRCH221J50 |
| | C | 5625-5628,5633,5634 | CKSRYB104K25 |
| | C | 5629-5632,5655-5658 | CCSRCH820J50 |
| | C | 5639-5642,5653,5654 | CKSRYB104K25 |
| | C | 5643,5644 | CCSRCH271J50 |
| | C | 5646-5649 | CCSRCH121J50 |
| | C | 5660,5661,5665 | CKSRYB104K25 |
| | C | 5664,5666 | CCSRCH330J50 |
| | C | 5667-5669,5671-5674 | CKSRYB104K25 |
| | C | 5676,5677 | CEVW471M10 |
| | C | 5678-5685,5689,5690 | CKSRYB104K25 |
| | C | 5699-5702 | CKSSYB103K16 |

| Mark | No. | Description | Part No. |
|---|---|---|---|
| **SUB ASSY** | | | |
| **Consists of** | | | |
| **JOGL ASSY** | | | |
| **PSWB ASSY** | | | |
| **MOUT ASSY** | | | |
| **HPJK ASSY** | | | |
| **BFXB ASSY** | | | |
| **JOGR ASSY** | | | |

## B C E O P N SUB ASSY

### SEMICONDUCTORS

| | | | |
|---|---|---|---|
| | IC | 9451,9452,9601,9602 | NJM4580DD |
| | IC | 9453 | NJM4580MD |
| | Q | 9451-9456,9601-9604 | INC2002AC1 |
| | Q | 9779 | LSCR523UB |
| | D | 9775-9778,9781-9784 | 1SS355VM |
| | D | 9779,9780 | SLR343BD2T |

### MISCELLANEOUS

| | | | |
|---|---|---|---|
| | JA | 9451,9452 CANON CONNECTOR | DKB1093 |
| | JA | 9453 RCA JACK | DKB1125 |
| | JA | 9601,9602,9701 6.5 DIA JACK | DKN1669 |
| | JA | 9702 STEREO MINI JACK | XKN3017 |
| | JA | 9851 DC POWER JACK | DKN1649 |
| | KN | 9775,9776,9851 EARTH TERMINAL | AKF7002 |
| | VR | 9775 POTENTIONETER | DCS1065 |
| | S | 9775-9778 SLIDE SWITCH | DSH1058 |
| | S | 9779 ROTARY SWITCH | DSG1144 |
| | S | 9780 TACT SWITCH | DSG1079 |
| | S | 9781 ROTARY ENCODER | DSX1137 |
| | S | 9851 PUSH SW | ASG1102 |
| | CN | 9451 L-PLUG(16P) | KM200NA16L |
| | CN | 9701 L-PLUG(4P) | KM200NA4L |
| | CN | 9726,9751 4P CONNECTOR | VKN1264 |
| | CN | 9775 15P CONNECTOR | VKN1275 |
| | CN | 9851 L-PLUG(5P) | KM200NA5L |
| | | 1001 CANON SHIELD | DNF1789 |
| | | 1002 PHONE SHIELD | DNF1875 |
| ⚠ | P | 9851 PROTECTOR (4.000 A) | DEK1104 |
| | PC | 9726,9751 PHOTO INTERRUPTER | KE-2N18-15 |
| | VA | 9451-9459,9601-9605 VARISTORS | EZJZ1V270RM |
| | VA | 9701,9851,9852 VARISTORS | EZJZ1V270RM |

### RESISTORS

| | | | |
|---|---|---|---|
| | R | 9451-9458,9601-9608 | RS1/10SR5601D |
| | R | 9459,9460 | RS1/10SR2202D |
| | R | 9461,9462 | RS1/10SR1002D |
| | R | 9463-9470,9609-9616 | RS1/10SR6801D |
| | R | 9471-9474,9617-9620 | RD1/2VM331J |
| | R | 9475,9477 | RS1/10SR6800D |
| | R | 9479-9482,9621-9624 | RS1/10SR2201D |
| | | Other Resistors | RS1/10SR###J |

### CAPACITORS

| | | | |
|---|---|---|---|
| | C | 9451-9454,9460-9463 | CCSRCH101J50 |
| | C | 9455-9459,9464,9471 | CKSRYB104K25 |
| | C | 9465-9468,9470,9474 (220 uF/25 V) | ACH1482 |
| | C | 9469,9473,9613-9616 | CEAT101M16 |
| | C | 9472,9475,9476 | CKSRYB104K25 |
| | C | 9477-9480,9619-9622 (470 pF/50 V) | ACE7119 |
| | C | 9481,9482 (2200 pF/63 V) | ACE7116 |
| | C | 9483,9485,9487,9623 | CKSRYB102K50 |
| | C | 9484,9486,9488,9624 | CKSQYB104K50 |
| | C | 9489-9492,9601-9604 | CCSRCH101J50 |
| | C | 9605-9608,9705,9853 | CKSRYB104K25 |
| | C | 9609-9612,9625-9628 | CCSRCH101J50 |
| | C | 9617,9618 | CEAT101M25 |
| | C | 9701-9704,9727,9728 | CKSRYB103K50 |
| | C | 9706,9859 | CKSRYB102K50 |
| | C | 9726,9751 | CKSRYB105K10 |
| | C | 9752,9753,9781 | CKSRYB103K50 |
| | C | 9775 | CKSQYB105K16 |
| | C | 9776,9778-9780 | CKSRYB104K16 |
| | C | 9777,9851 (10 uF/16 V) | DCH1263 |
| | C | 9852 | CCSRCH101J50 |
| | C | 9854 | CKSRYB103K25 |
| | C | 9855 (4700 pF/63 V) | ACE7115 |
| | C | 9856 (1 uF/25 V) | ACE7129 |
| | C | 9857 (3.3 uF/16 V) | DCE1029 |
| | C | 9858 | CKSRYB104K25 |

## D MIXER ASSY

### SEMICONDUCTORS

| | | | |
|---|---|---|---|
| | IC | 8801-8804 | TC74HC4051AF |
| | IC | 8805 | NJM2903M |
| | Q | 8601-8604,8607-8616 | LSCR523UB |
| | Q | 8605,8617,8619,8621 | LTC124EUB |
| NSP | Q | 8606 | 2SB1694 |
| | Q | 8618,8620,8622,8624 | 2SB1689 |
| | Q | 8623,8625,8627,8629 | LTC124EUB |
| | Q | 8626,8628,8630 | 2SB1689 |
| | Q | 8801-8805,8810-8813 | LTC124EUB |
| | Q | 8814 | LTA143EUB |
| | D | 8601-8604 | SLR343WBD2PT |
| | D | 8605,8606,8609-8611 | SLI-343YYW |
| | D | 8607,8608,8618,8619 | SLI-343U8R |
| | D | 8612-8615,8623-8626 | SLI-343M8G |
| | D | 8616,8617,8620-8622 | SLI-343YYW |
| | D | 8627,8628,8631-8633 | SLI-343YYW |
| | D | 8629,8630,8640,8641 | SLI-343U8R |
| | D | 8634-8637,8645-8648 | SLI-343M8G |
| | D | 8638,8639,8642-8644 | SLI-343YYW |
| | D | 8649,8650,8653-8655 | SLI-343YYW |
| | D | 8651,8652,8662,8663 | SLI-343U8R |
| | D | 8656-8659,8667-8670 | SLI-343M8G |
| | D | 8660,8661,8664-8666 | SLI-343YYW |
| | D | 8671,8672 | SLI-343U8R |
| | D | 8801-8837 | 1SS355VM |

### MISCELLANEOUS

| | | | |
|---|---|---|---|
| | S | 8801,8802,8805-8809 TACT SWITCH | DSG1079 |
| | S | 8803,8804,8810 SLIDE SWITCH | DSH1058 |
| | S | 8811,8815 SLIDE SWITCH | DSH1058 |
| | S | 8812-8814,8816,8817 TACT SWITCH | DSG1079 |
| | CN | 8601 L-PLUG(6P) | KM200NA6L |
| | CN | 8603 15P CONNECTOR | VKN1246 |
| | CN | 8604,8605 30P CONNECTOR | VKN1261 |

### RESISTORS

| | | | |
|---|---|---|---|
| | VR | 8801-8804 VARIABLE RESISTOR | DCV1020 |
| | VR | 8805,8811,8812,8820 ROTARY VR | DCS1117 |
| | VR | 8806-8810,8813 ROTARY VR | DCS1116 |

| Mark | No. | Description | Part No. |
|---|---|---|---|
| | VR | 8814,8827 POTENTIOMETER | DCS1110 |
| | VR | 8815-8819,8821-8824 ROTARY VR | DCS1116 |
| | VR | 8825,8826,8828,8833 ROTARY VR | DCS1117 |
| | VR | 8829-8832 ROTARY VR | DCS1116 |
| | | Other Resistors | RS1/10SR###J |

**CAPACITORS**

| | | | |
|---|---|---|---|
| | C | 8601-8608,8612,8613 | CKSRYB104K16 |
| | C | 8609,8610 | CEJQ101M16 |
| | C | 8611,8874 | CEJQ470M6R3 |
| | C | 8801-8804,8823-8826 | CKSRYB104K16 |
| | C | 8807-8822,8828-8831 | CCSRCH471J50 |
| | C | 8833-8838,8840,8841 | CCSRCH471J50 |
| | C | 8843-8869,8875-8878 | CKSRYB104K16 |
| | C | 8870-8873 | CCSRCH681J50 |

**DECPAD ASSY**
**Consists of**
**LOOP ASSY**
**BRWS ASSY**
**PADB ASSY**
**PLAY ASSY**

## F G H I DECPAD ASSY

**SEMICONDUCTORS**

| | | | |
|---|---|---|---|
| | Q | 8902-8905,8953 | LTC123JUB |
| | Q | 8951 | LTA114EUB |
| | Q | 9001,9002,9032,9034 | LTC124EUB |
| | Q | 9003-9013 | LTC123JUB |
| | Q | 9033,9035,9037,9039 | 2SB1689 |
| | Q | 9036,9038,9251-9253 | LTC124EUB |
| | D | 8901,8904,8951,8954 | SLI-343U8R |
| | D | 8902,8903,8905-8907 | SLI-343Y8Y |
| | D | 9019,9035,9051 | SLI-343U8R |
| | D | 9020,9022,9024,9026 | 1SS355VM |
| | D | 9021 | SLR343BD2T |
| | D | 9023,9025,9027,9039 | NSSM124F-A21107 |
| | D | 9028-9034,9036,9040 | 1SS355VM |
| | D | 9041,9043,9053,9055 | NSSM124F-A21107 |
| | D | 9042,9044-9050,9052 | 1SS355VM |
| | D | 9054,9056,9058-9064 | 1SS355VM |
| | D | 9057,9067,9069,9072 | NSSM124F-A21107 |
| | D | 9065 | SLR343WBD2PT |
| | D | 9066,9068,9070,9071 | 1SS355VM |
| | D | 9073-9078,9251-9266 | 1SS355VM |
| | D | 9401 | SLR343EC4T |
| | D | 9402 | SLI-343Y8Y |

**MISCELLANEOUS**

| | | | |
|---|---|---|---|
| | S | 8901-8904,8953,8955 TACT SWITCH | DSG1079 |
| | S | 8905,8952,8954 TACTILE SWITCH | DSG1143 |
| | S | 8951 ROTARY ENCODER | DSX1133 |
| | S | 9251-9264 TACT SWITCH | DSG1079 |
| | S | 9401,9402 TACT SWITCH | DSG1117 |
| | CN | 8901,8951 FFC/FPC CONNECTOR | CKS6638 |
| | CN | 8902 FFC/FPC CONNECTOR | CKS6649 |
| | CN | 9001 FFC/FPC CONNECTOR | CKS6643 |
| | CN | 9002,9401 CONNECTOR | CKS6095 |
| | CN | 9251 FFC/FPC CONNECTOR | CKS6387 |

**RESISTORS**

| | | | |
|---|---|---|---|
| | R | 9047,9076,9104,9129 | RS1/4SA391J |
| | R | 9053,9067,9068,9083 | RS1/4SA431J |
| | R | 9057,9060,9086,9088 | RS1/8SQ331J |
| | R | 9058,9061,9087,9091 | RS1/8SQ621J |
| | R | 9059,9089,9114,9137 | RS1/16SS152J |
| | R | 9062,9063,9090,9092 | RS1/8SQ561J |
| | R | 9064,9095,9118,9143 | RS1/16SS103J |
| | R | 9065,9096,9119,9144 | RS1/16SS563J |
| | R | 9066,9069,9094,9098 | RS1/4SA681J |
| | R | 9070,9071,9099,9100 | RS1/4SA471J |
| | R | 9093,9097,9109,9121 | RS1/4SA431J |
| | R | 9111,9115,9136,9139 | RS1/8SQ621J |
| | R | 9112,9113,9138,9140 | RS1/8SQ331J |
| | R | 9116,9117,9141,9142 | RS1/8SQ561J |
| | R | 9120,9123,9145,9147 | RS1/4SA681J |
| | R | 9122,9133,9146,9148 | RS1/4SA431J |
| | R | 9124,9125,9149,9150 | RS1/4SA471J |
| | R | 9254-9261 | RS1/16SS332J |
| | R | 9262,9263 | RS1/10SR2201D |
| | R | 9267 | RS1/4SA0R0J |
| | VR | 9251 SLIDE VR | DCV1033 |
| | | Other Resistors | RS1/10SR###J |

**CAPACITORS**

| | | | |
|---|---|---|---|
| | C | 8901-8905,8951-8956 | CKSRYB103K25 |
| | C | 8908 (10 uF/16 V) | DCH1263 |
| | C | 8909,8957,8958,9002 | CKSRYB104K25 |
| | C | 9001 | CKSQYB105K16 |
| | C | 9251,9252,9401,9402 | CKSRYB103K25 |
| | C | 9253-9258,9263,9264 | CKSSYB103K16 |
| | C | 9259 (10 uF/10 V) | DCH1201 |
| | C | 9267 | CKSSYB104K10 |
| | C | 9268 | CEVW470M6R3 |
| | C | 9269,9270 | CKSRYB392K50 |
| | C | 9403 | CKSRYB104K25 |

**DISP ASSY**
**Consists of**
**LCDL ASSY**
**LCDR ASSY**
**OLED ASSY**
**CRFB ASSY**

## J K L M DISP ASSY

**SEMICONDUCTORS**

| | | | |
|---|---|---|---|
| NSP | IC | 7001,7501 | R5S72690W266FP |
| | IC | 7002,7502 | DYW2084 |
| | | *Part number of the initial firmware equipped | |
| ⚠ | IC | 7003,7503 | BD00IC0WEFJ |
| | IC | 8551,8552 | EQ-730L |
| | IC | 8553 | NJM12904V |
| | Q | 7002,7007,7010,7502 | LSCR523UB |
| | Q | 7008,7009,7508,7509 | LSAR523UB |
| | Q | 7507,7510 | LSCR523UB |
| | D | 7001-7004,7501-7504 | SLR343WBD2PT |

**MISCELLANEOUS**

| | | | |
|---|---|---|---|
| | L | 7001,7016 CHIP INDUCTOR (10 uH) | DTL1105 |
| | L | 7002-7005,7502-7505 INDUCTOR | CTF1545 |
| | L | 7006,7506 INDUCTOR | CTF1793 |
| | L | 7007-7015,7017 CHIP BEADS | VTL1126 |

| Mark | No. | Description | Part No. |
|---|---|---|---|
| | L | 7501,7516 CHIP INDUCTOR (10 uH) | DTL1105 |
| | L | 7507-7515,7517 CHIP BEADS | VTL1126 |
| | X | 7001,7501 CRYSTAL RESONATOR (13.3333 MHz) | CSS1840 |
| | CN | 7002,7502 FPC CONNECTOR | DKN1667 |
| | CN | 7003,7503 CONNECTOR | CKS6115 |
| | CN | 7004,7504 FFC/FPC CONNECTOR | CKS6625 |
| | CN | 7005,7505 CONNECTOR | CKS1072 |
| | CN | 8501 CONNECTOR | CKS3851 |
| | CN | 8502 FFC/FPC CONNECTOR | CKS6476 |
| | CN | 8551 CONNECTOR | AKM1274 |
| | | 8551,8552 HOLDER | DNK6449 |
| | VA | 8551,8552 VARISTORS | EZJZ1V270RM |

**RESISTORS**

| | | | |
|---|---|---|---|
| | R | 7005,7043,7119-7122 | RS1/16SS472J |
| | R | 7006,7031-7038,7044 | RS1/16SS103J |
| | R | 7027,7124,7527,7624 | RS1/16SS102J |
| | R | 7028,7528 | RS1/16SS562J |
| | R | 7029,7047,7049,7083 | RS1/16SS0R0J |
| | R | 7039,7143-7170 | RS1/8SQ0R0J |
| | R | 7041,7541 | RS1/16SS2402F |
| | R | 7042,7542 | RS1/16SS222J |
| | R | 7051,7114-7116,7123 | RS1/16SS103J |
| | R | 7052,7058,7060,7082 | RS1/16SS104J |
| | R | 7064,7564 | RS1/10SR9101D |
| | R | 7065,7565 | RS1/10SR1602D |
| | R | 7084,7105,7106,7134 | RS1/16SS0R0J |
| | R | 7135,7529,7547,7549 | RS1/16SS0R0J |
| | R | 7171,7671 | RS1/16SS105J |
| | R | 7172-7178,7539 | RS1/8SQ0R0J |
| | R | 7505,7543,7619-7622 | RS1/16SS472J |
| | R | 7506,7531-7538,7544 | RS1/16SS103J |
| | R | 7551,7614-7616,7623 | RS1/16SS103J |
| | R | 7552,7558,7560,7582 | RS1/16SS104J |
| | R | 7583,7584,7605,7606 | RS1/16SS0R0J |
| | R | 7634,7635 | RS1/16SS0R0J |
| | R | 7643-7670,7672-7678 | RS1/8SQ0R0J |
| | R | 8501-8505 | RS1/16SS223J |
| | R | 8506 | RS1/16SS101J |
| | R | 8553 | RS1/10SR5102D |
| | R | 8556 | RS1/10SR1502D |
| | R | 8557 | RS1/10SR2001D |
| | | Other Resistors | RS1/10SR###J |

**CAPACITORS**

| | | | |
|---|---|---|---|
| | C | 7009,7043,7059,7077 | CKSSYB103K16 |
| | C | 7064,7065,7564,7565 | CCSSCH120J50 |
| | C | 7066,7071,7084,7085 | CKSSYB104K10 |
| | C | 7067,7567 | CKSRYB105K10 |
| | C | 7068-7070,7137,7166 (10 uF/10 V) | CCG1192 |
| | C | 7080,7081,7580,7581 (47 uF/16 V) | CCH1961 |
| | C | 7086,7087,7586,7587 | CCSSCH471J50 |
| | C | 7088-7109,7111-7130 | CKSSYB103K16 |
| | C | 7131,7132,7631,7632 | CCSSCH470J50 |
| | C | 7133,7139-7142,7148 | CCSSCH101J50 |
| | C | 7134,7154,7157,7168 | CCSSCH102J50 |
| | C | 7135,7509,7543,7559 | CKSSYB103K16 |
| | C | 7136,7138,7156,7167 | CKSSYB104K10 |
| | C | 7149,7153,7162,7163 | CCSSCH101J50 |
| | C | 7155,7655 | CKSQYB225K16 |
| | C | 7158,7159,7658,7659 | CKSRYB104K25 |
| | C | 7165,7633,7639-7642 | CCSSCH101J50 |
| | C | 7566,7571,7584,7585 | CKSSYB104K10 |
| | C | 7568-7570,7637,7666 (10 uF/10 V) | CCG1192 |
| | C | 7577,7588-7609 | CKSSYB103K16 |
| | C | 7611-7630,7635,8501 | CKSSYB103K16 |
| | C | 7634,7654,7657,7668 | CCSSCH102J50 |
| | C | 7636,7638,7656,7667 | CKSSYB104K10 |
| | C | 7648,7649,7653,7662 | CCSSCH101J50 |
| | C | 7663,7665 | CCSSCH101J50 |
| | C | 8502 | CKSSYB104K10 |
| | C | 8503,8507,8551-8553 | CKSRYB104K25 |
| | C | 8504 (47 uF/25 V) | CCG1222 |
| | C | 8505 (10 uF/35 V) | CCG1236 |
| | C | 8506 | CKSQYB105K25 |