

# EXPLODED VIEW (MECHANISM)

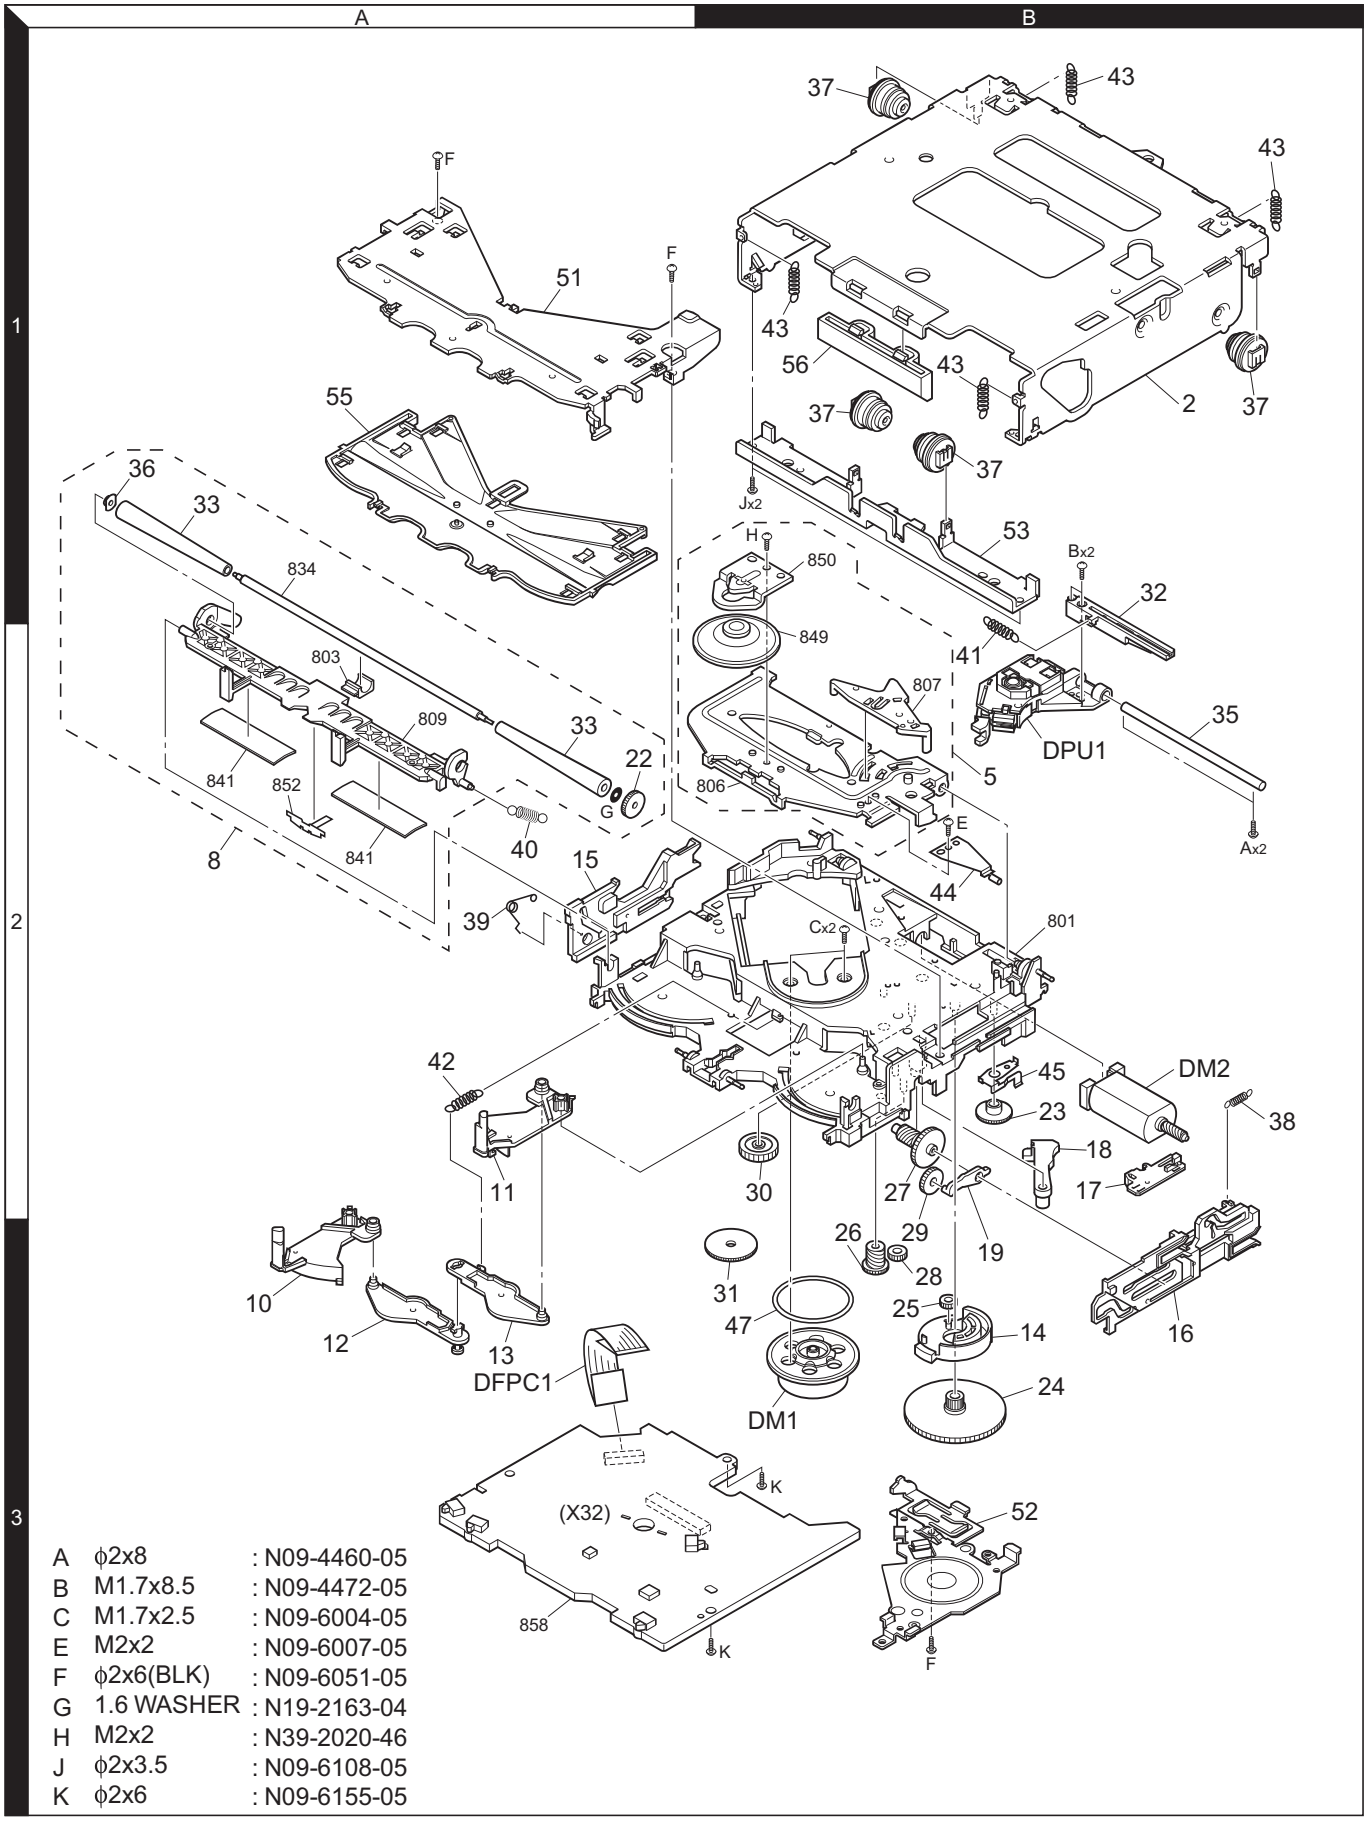


| | | |
|---|---|---|
| A | ϕ2x8 | : N09-4460-05 |
| B | M1.7x8.5 | : N09-4472-05 |
| C | M1.7x2.5 | : N09-6004-05 |
| E | M2x2 | : N09-6007-05 |
| F | ϕ2x6(BLK) | : N09-6051-05 |
| G | 1.6 WASHER | : N19-2163-04 |
| H | M2x2 | : N39-2020-46 |
| J | ϕ2x3.5 | : N09-6108-05 |
| K | ϕ2x6 | : N09-6155-05 |

**Parts with the exploded numbers larger than 700 are not supplied.**

# EXPLODED VIEW (UNIT)

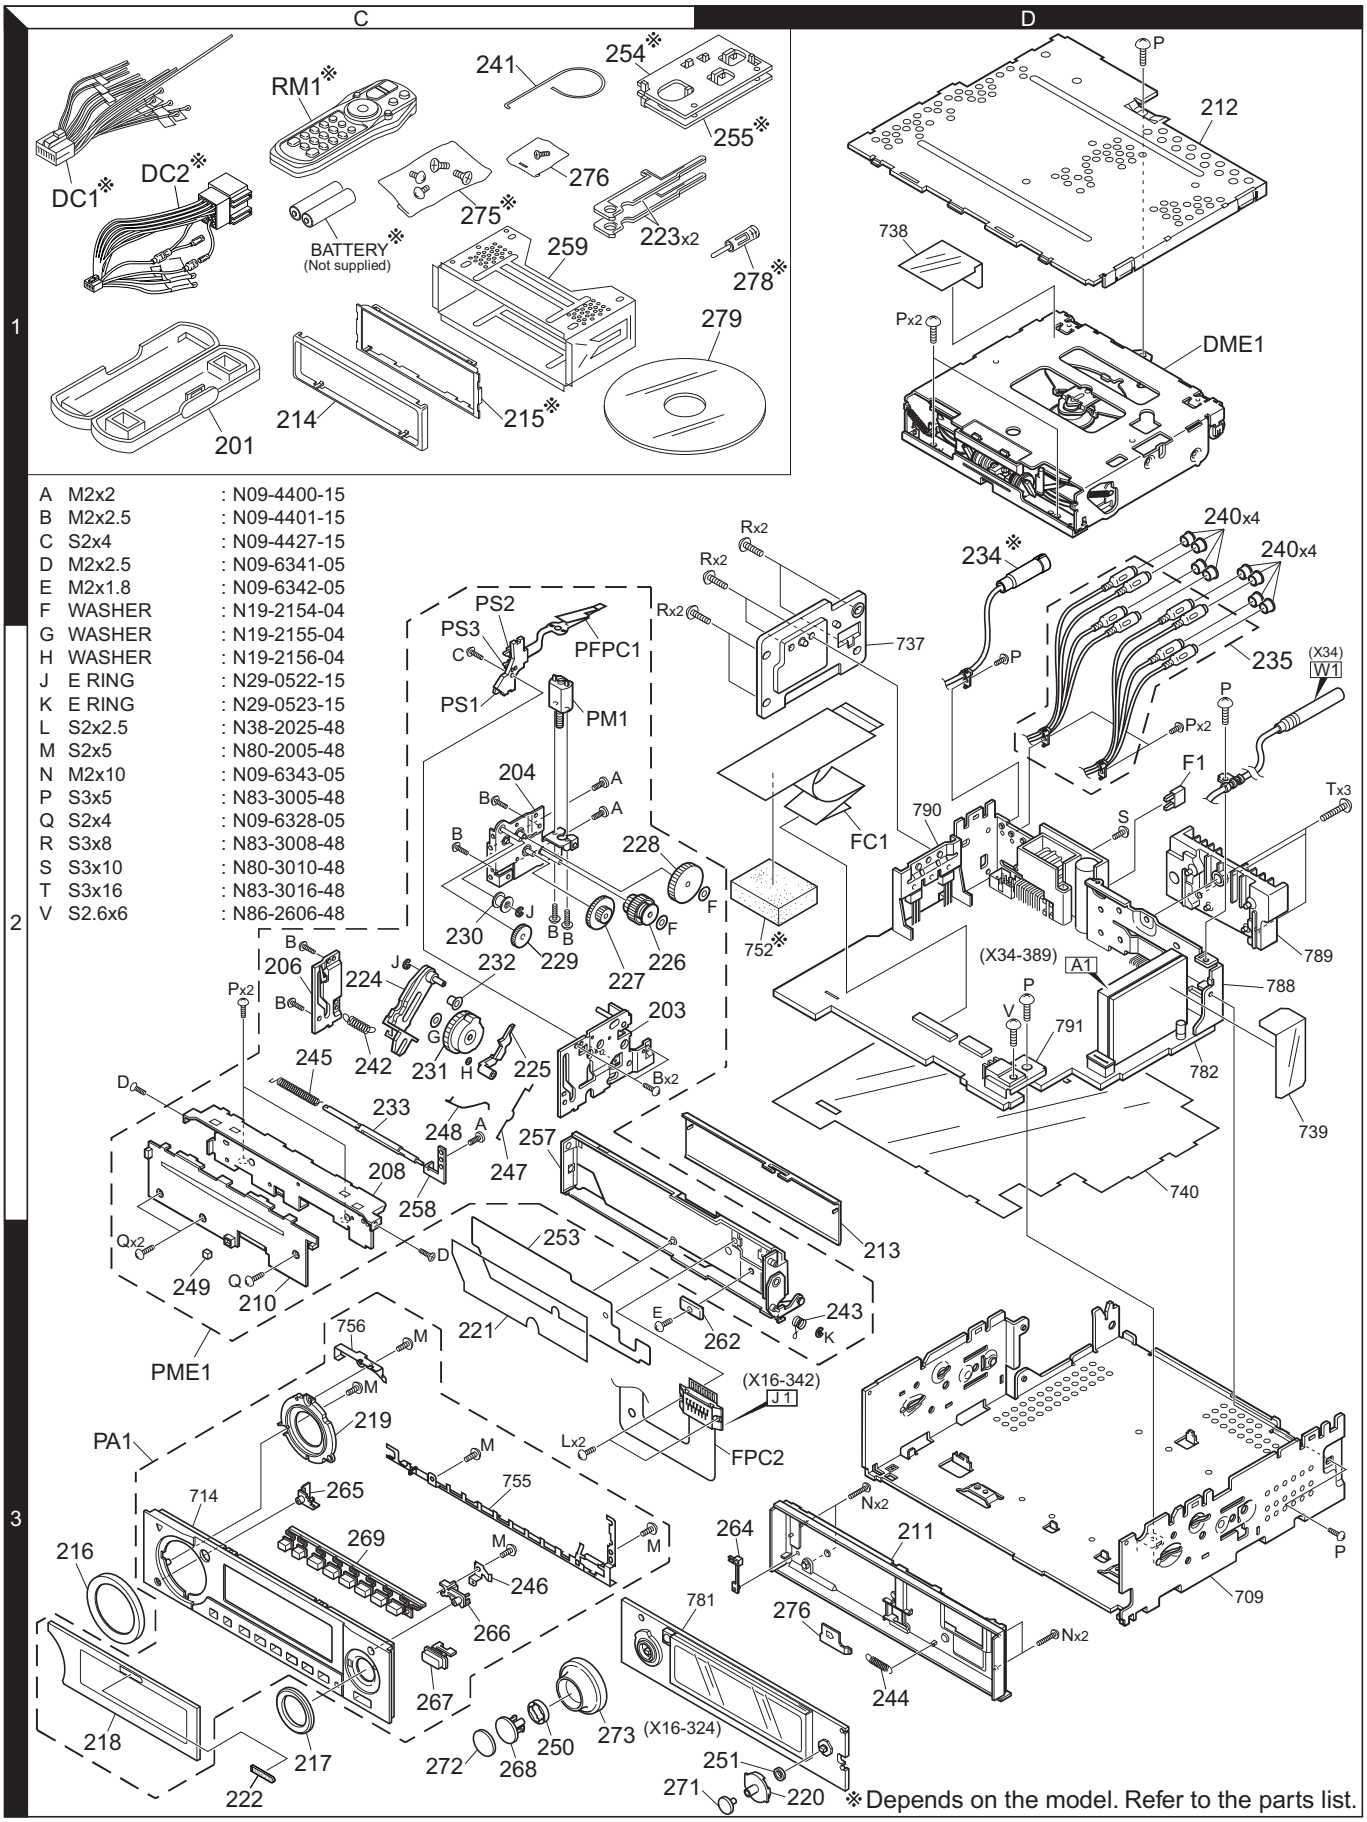


| | | |
|---|---|---|
| A | M2x2 | : N09-4400-15 |
| B | M2x2.5 | : N09-4401-15 |
| C | S2x4 | : N09-4427-15 |
| D | M2x2.5 | : N09-6341-05 |
| E | M2x1.8 | : N09-6342-05 |
| F | WASHER | : N19-2154-04 |
| G | WASHER | : N19-2155-04 |
| H | WASHER | : N19-2156-04 |
| J | E RING | : N29-0522-15 |
| K | E RING | : N29-0523-15 |
| L | S2x2.5 | : N38-2025-48 |
| M | S2x5 | : N80-2005-48 |
| N | M2x10 | : N09-6343-05 |
| P | S3x5 | : N83-3005-48 |
| Q | S2x4 | : N09-6328-05 |
| R | S3x8 | : N83-3008-48 |
| S | S3x10 | : N80-3010-48 |
| T | S3x16 | : N83-3016-48 |
| V | S2.6x6 | : N86-2606-48 |



**Parts with the exploded numbers larger than 700 are not supplied.**

# PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

| Ref. No. | Add | New | Parts No. | Description | Destination |
|---|---|---|---|---|---|
| **KDC-W808/X689** | | | | | |
| 201 | 1C | ✻ | A02-2747-03 | PLASTIC CABINET ASSY | |
| 203 | 2C | | A10-4807-33 | CHASSIS CALKING ASSY | |
| 204 | 2C | ✻ | A10-4810-33 | CHASSIS CALKING ASSY | |
| 206 | 2C | ✻ | A10-4893-14 | CHASSIS CALKING ASSY | |
| 208 | 2C | | A10-4924-12 | CHASSIS | |
| 210 | 2C | | A22-2865-03 | SUB PANEL ASSY | |
| 211 | 3D | | A46-1752-11 | REAR COVER | |
| 212 | 1D | | A52-0805-02 | TOP PLATE | |
| PA1 | 3C | | A64-3693-02 | PANEL ASSY | E |
| PA1 | 3C | ✻ | A64-3694-02 | PANEL ASSY | K1 |
| PME1 | 3C | | A10-4921-32 | CHASSIS ASSY | |
| RM1 | 1C | | A70-2067-05 | REMOTE CONTROLLER ASSY(RC-527) | K1 |
| - | | | B46-0100-50 | WARRANTY CARD | K1 |
| - | | | B46-0606-04 | ID CARD | K1 |
| - | | | B46-0612-14 | ID CARD | E |
| - | | | B46-0648-13 | USER CARD | K1 |
| - | | ✻ | B46-0682-00 | WARRANTY CARD | E |
| - | | | B59-1832-00 | SUB-INSTRUCTION MANUAL | |
| - | | | B64-3142-10 | INSTRUCTION MANUAL (ENGLISH) | E |
| - | | | B64-3143-10 | INSTRUCTION MANUAL (FRE.GER.) | E |
| - | | | B64-3144-10 | INSTRUCTION MANUAL (DUT.ITA.) | E |
| - | | | B64-3145-10 | INSTRUCTION MANUAL (SPA.POR.) | E |
| - | | ✻ | B64-3147-00 | INSTRUCTION MANUAL (ENGLISH) | K1 |
| - | | ✻ | B64-3148-00 | INSTRUCTION MANUAL (FRE.SPA.) | K1 |
| 213 | 2D | | B03-3073-22 | DRESSING PLATE | |
| 214 | 1C | | B07-3007-03 | ESCUTCHEON ASSY | |
| 215 | 1C | | B07-3010-02 | ESCUTCHEON (J CAR) | K1 |
| 216 | 3C | ✻ | B07-3161-03 | ESCUTCHEON RING(VOL) | |
| 217 | 3C | ✻ | B07-3162-03 | ESCUTCHEON RING(4-SW) | |
| 218 | 3C | | B10-4726-02 | FRONT GLASS | E |
| 218 | 3C | ✻ | B10-4727-02 | FRONT GLASS | K1 |
| 219 | 3C | ✻ | B19-2357-02 | LIGHTING BOARD | |
| 220 | 3D | ✻ | B19-2358-03 | LIGHTING BOARD (4-SW) | |
| 221 | 3C | ✻ | B42-8336-04 | STICKER | |
| 222 | 3C | | B43-1518-04 | BADGE | |
| 223 | 1C | | D10-4562-04 | LEVER (RELEASE) | |
| 224 | 2C | ✻ | D10-4563-14 | ARM ASSY | |
| 225 | 2C | | D10-4590-04 | ARM | |
| 226 | 2C | | D13-2135-04 | GEAR ASSY | |
| 227 | 2C | | D13-2138-04 | GEAR | |
| 228 | 2C | | D13-2139-04 | GEAR | |
| 229 | 2C | | D13-2140-04 | GEAR | |
| 230 | 2C | | D13-2141-24 | GEAR ASSY | |
| 231 | 2C | | D13-2165-13 | GEAR ASSY | |
| 232 | 2C | | D14-0754-04 | ROLLER | |
| 233 | 2C | | D14-0760-03 | ROLLER | |
| 234 | 1D | | E30-6203-05 | CORD WITH DIN CONNECTOR | E |
| 235 | 1D | | E30-6435-05 | CORD WITH PINPLUG | K1 |
| 235 | 1D | | E30-6436-05 | CORD WITH PINPLUG | E |
| ⚠ DC1 | 1C | | E30-6408-05 | DC CORD | K1 |
| ⚠ DC2 | 1C | | E30-6412-05 | DC CORD | E |

| Ref. No. | Add | New | Parts No. | Description | Destination |
|---|---|---|---|---|---|
| FC1 | 2D | | E39-0736-05 | FLAT CABLE (24PIN 1MM) | |
| 240 | 1D | | F29-0626-04 | INSULATING COVER (RCA-CAP) | |
| ⚠ F1 | 2D | | F52-0006-05 | FUSE(MINI BLADE TYPE)10A | |
| 241 | 1C | | G01-2924-04 | TORSION COIL SPRING | |
| 242 | 2C | | G01-3065-04 | EXTENSION SPRING | |
| 243 | 2D | | G01-3066-14 | TORSION COIL SPRING | |
| 244 | 3D | | G01-3069-04 | EXTENSION SPRING | |
| 245 | 2C | | G01-3080-04 | TORSION COIL SPRING | |
| 246 | 3C | ✻ | G02-1537-04 | FLAT SPRING | |
| 247 | 2C | | G09-2038-04 | FORMED WIRE | |
| 248 | 2C | | G09-2042-04 | FORMED WIRE | |
| 249 | 2C | | G11-1927-04 | CUSHION | |
| 250 | 3C | ✻ | G11-3655-04 | CUSHION (IN KNOB VOL) | |
| 251 | 3D | ✻ | G11-3671-04 | CUSHION | |
| 253 | 2C | | G16-1177-04 | SHEET | |
| - | | | H10-4706-12 | POLYSTYRENE FOAMED FIXTURE | E |
| - | | | H10-4764-12 | POLYSTYRENE FOAMED FIXTURE | K1 |
| - | | | H25-0329-04 | PROTECTION BAG (280X450X0.03) | K1 |
| - | | | H25-0337-04 | PROTECTION BAG (180X300X0.03) | |
| - | | | H25-1108-04 | PROTECTION BAG (100X300X0.03) | |
| - | | | H25-1111-04 | PROTECTION BAG (280X450X0.03) | E |
| - | | | H54-3540-13 | ITEM CARTON CASE | E |
| - | | ✻ | H54-3541-03 | ITEM CARTON CASE | K1 |
| 254 | 1C | | J19-5051-03 | BRACKET | K1 |
| 255 | 1C | | J19-5052-03 | BRACKET | K1 |
| 257 | 2C | | J21-9651-13 | MOUNTING HARDWARE ASSY | |
| 258 | 2C | ✻ | J21-9699-14 | MOUNTING HARDWARE | |
| 259 | 1C | | J21-9716-03 | MOUNTING HARDWARE ASSY | |
| 262 | 3D | | J90-0999-04 | GUIDE | |
| PFPC1 | 1C | | J84-0122-14 | FLEXIBLE PRINTED WIRING BOARD | |
| 264 | 3D | | K24-3646-04 | PUSH KNOB (OPEN) | |
| 265 | 3C | ✻ | K24-4400-03 | PUSH KNOB (EJECT) | |
| 266 | 3C | ✻ | K24-4401-03 | PUSH KNOB (ATT) | |
| 267 | 3C | ✻ | K24-4402-03 | PUSH KNOB (SRC) | |
| 268 | 3C | ✻ | K24-4403-03 | PUSH KNOB (AUDIO) | |
| 269 | 3C | ✻ | K25-1760-02 | PUSH KNOB (PRE) | |
| 270 | 3D | | K29-7017-03 | KNOB (LOCK) | |
| 271 | 3D | | K29-7144-03 | KEY TOP (4-DIR) | |
| 272 | 3C | ✻ | K29-7177-04 | KEY TOP (AUDIO) | |
| 273 | 3C | ✻ | K29-7178-03 | KNOB (VOL) | |
| 275 | 1C | ✻ | N99-1773-05 | SCREW SET | K1 |
| 276 | 1C | ✻ | N99-1774-05 | SCREW SET | |
| A | 2C | ✻ | N09-4400-15 | MACHINE SCREW (M2X2) | |
| B | 2C | ✻ | N09-4401-15 | MACHINE SCREW (M2X2.5) | |
| C | 1C | ✻ | N09-4427-15 | TAPTITE SCREW (S2X4) | |
| D | 2C | ✻ | N09-6341-05 | MACHINE SCREW (M2X2.5) | |
| E | 3C | ✻ | N09-6342-05 | MACHINE SCREW (M2X1.8) | |
| F | 2C | | N19-2154-04 | FLAT WASHER | |
| G | 2C | | N19-2155-04 | FLAT WASHER | |
| H | 2C | | N19-2156-04 | FLAT WASHER | |
| J | 2C | ✻ | N29-0522-15 | RETAINING RING | |
| K | 3D | ✻ | N29-0523-15 | RETAINING RING | |

**E** : KDC-W808 (Europe) **K1** : KDC-X689 (North America)

⚠ Indicates safety critical components.

# PARTS LIST

**KDC-W808/X689**

| Ref. No. | Add | New | Parts No. | Description | Destination |
|---|---|---|---|---|---|
| L | 3C | ✻ | N38-2025-48 | PAN HEAD MACHINE SCREW | |
| M | 3C | | N80-2005-48 | PAN HEAD TAPTITE SCREW | |
| N | 3D | ✻ | N09-6343-05 | MACHINE SCREW (M2X10) | |
| P | 2D | | N83-3005-48 | PAN HEAD TAPTITE SCREW | |
| Q | 2C | ✻ | N09-6328-05 | MACHINE SCREW (S2X4) | |
| R | 1D | | N83-3008-48 | PAN HEAD TAPTITE SCREW | |
| PS1-3 | 1C | | S68-0856-05 | PUSH SWITCH | |
| 278 | 1C | | T90-0523-05 | ANTENNA ADAPTOR | E |
| PM1 | 1C | ✻ | T42-1034-34 | MOTOR ASSY | |
| 279 | 1C | | W01-1643-25 | COMPACT DISC | K1 |
| 279 | 1C | | W01-1647-15 | COMPACT DISC | E |
| DME1 | 1D | | X92-5100-00 | CD MECHANISM ASSY (DXM-6800W) | K1 |
| DME1 | 1D | ✻ | X92-5100-04 | CD MECHANISM ASSY (DXM-6804W) | E |
| **SWITCH UNIT (X16-3242-70)** | | | | | |
| D1-9 | | | B30-1729-05 | LED (1608,BLUE) | |
| D10 | | | B30-1567-05 | LED (1608,RED) | |
| D11-19 | | | B30-1729-05 | LED (1608,BLUE) | |
| C1-9 | | | CK73GB1H103K | CHIP C 0.010UF K | |
| C11-18 | | | CK73GB1H103K | CHIP C 0.010UF K | |
| C19 | | | CK73GB1A105K | CHIP C 1.0UF K | |
| C21,22 | | | CK73GB1H104K | CHIP C 0.10UF K | |
| C31 | | | CK73GB1A105K | CHIP C 1.0UF K | |
| C33-37 | | | CK73GB1H104K | CHIP C 0.10UF K | |
| C38 | | | CK73GB1A105K | CHIP C 1.0UF K | |
| C39 | | | CC73GCH1H101J | CHIP C 100PF J | |
| C40-45 | | | CK73GB1H103K | CHIP C 0.010UF K | |
| C46 | | | CC73GCH1H221J | CHIP C 220PF J | |
| C47 | | | CK73GB1H104K | CHIP C 0.10UF K | |
| C48 | | | CC73GCH1H101J | CHIP C 100PF J | |
| C50 | | | CK73GB1H103K | CHIP C 0.010UF K | |
| J1 | | ✻ | E59-0847-05 | RECTANGULAR PLUG | |
| L1 | | | L41-1005-33 | SMALL FIXED INDUCTOR (10U) | |
| X1 | | | L78-0872-05 | RESONATOR (12MHZ) | |
| CP1 | | | RK74GA1J471J | CHIP-COM 470 J 1/16W | |
| CP2 | | | RK74HB1J102J | CHIP-COM 1.0K J 1/16W | |
| CP3 | | | RK74HB1J101J | CHIP-COM 100 J 1/16W | |
| CP4 | | | RK74HB1J473J | CHIP-COM 47K J 1/16W | |
| CP5,6 | | | RK74HB1J102J | CHIP-COM 1.0K J 1/16W | |
| CP7-9 | | | RK74HB1J473J | CHIP-COM 47K J 1/16W | |
| R1 | | | RK73GB2A102J | CHIP R 1.0K J 1/10W | |
| R2,3 | | | RK73GB2A101J | CHIP R 100 J 1/10W | |
| R4 | | | RK73GB2A102J | CHIP R 1.0K J 1/10W | |
| R5,6 | | | RK73GB2A101J | CHIP R 100 J 1/10W | |
| R9 | | | RK73GB2A473J | CHIP R 47K J 1/10W | |
| R11-13 | | | RK73GB2A473J | CHIP R 47K J 1/10W | |
| R14 | | | RK73GB2A103J | CHIP R 10K J 1/10W | |
| R15 | | | RK73EB2E100J | CHIP R 10 J 1/4W | |
| R18-20 | | | RK73EB2E301J | CHIP R 300 J 1/4W | |
| R22 | | | RK73EB2E5R6J | CHIP R 5.6 J 1/4W | |
| R23 | | | RK73GB2A220J | CHIP R 22 J 1/10W | |

| Ref. No. | Add | New | Parts No. | Description | Destination |
|---|---|---|---|---|---|
| R24-28 | | | RK73GB2A101J | CHIP R 100 J 1/10W | |
| R29 | | | RK73GB2A222J | CHIP R 2.2K J 1/10W | |
| R30 | | | RK73GB2A101J | CHIP R 100 J 1/10W | |
| R31 | | | RK73GB2A104J | CHIP R 100K J 1/10W | |
| R32 | | | RK73GB2A102J | CHIP R 1.0K J 1/10W | |
| R37 | | | RK73GB2A472J | CHIP R 4.7K J 1/10W | |
| R38 | | | RK73GB2A103J | CHIP R 10K J 1/10W | |
| R39 | | | RK73GB2A104J | CHIP R 100K J 1/10W | |
| R40 | | | RK73GB2A223J | CHIP R 22K J 1/10W | |
| R41-43 | | | RK73GB2A102J | CHIP R 1.0K J 1/10W | |
| R44,45 | | | RK73GB2A471J | CHIP R 470 J 1/10W | |
| R46,47 | | | RK73GB2A103J | CHIP R 10K J 1/10W | |
| R48 | | | RK73GB2A472J | CHIP R 4.7K J 1/10W | |
| R49 | | | RK73GB2A471J | CHIP R 470 J 1/10W | |
| R50 | | | RK73GB2A102J | CHIP R 1.0K J 1/10W | |
| R51 | | | RK73GB2A473J | CHIP R 47K J 1/10W | |
| R52,53 | | | RK73GB2A103J | CHIP R 10K J 1/10W | |
| R55 | | | RK73GB2A103J | CHIP R 10K J 1/10W | |
| R56 | | | RK73GB2A473J | CHIP R 47K J 1/10W | |
| R57,58 | | | RK73GB2A102J | CHIP R 1.0K J 1/10W | |
| R64 | | | RK73EB2E301J | CHIP R 300 J 1/4W | |
| R71 | | | RK73GB2A753J | CHIP R 75K J 1/10W | |
| R72 | | | RK73GB2A122J | CHIP R 1.2K J 1/10W | |
| R73 | | | RK73GB2A182J | CHIP R 1.8K J 1/10W | |
| R74 | | | RK73GB2A103J | CHIP R 10K J 1/10W | |
| R101 | | | RK73EB2E5R6J | CHIP R 5.6 J 1/4W | |
| R201 | | | RK73GB2A224J | CHIP R 220K J 1/10W | |
| W1-3 | | | R92-1252-05 | CHIP R 0 OHM J 1/16W | |
| W4 | | | R92-2053-05 | CHIP R 0 OHM J 1/8W | |
| W6-10 | | | R92-1252-05 | CHIP R 0 OHM J 1/16W | |
| W13 | | | R92-2053-05 | CHIP R 0 OHM J 1/8W | |
| W14 | | | R92-1252-05 | CHIP R 0 OHM J 1/16W | |
| S1 | | | S70-0901-05 | TACT SWITCH | |
| S2 | | | S70-0864-05 | TACT SWITCH | |
| S3-14 | | | S70-0901-05 | TACT SWITCH | |
| S16 | | | S70-0926-25 | TACT SWITCH | |
| S17 | | | T99-0445-05 | ROTARY ENCODER | |
| D21 | | | DA204U | DIODE | |
| D103,104 | | | DA204U | DIODE | |
| ED1 | | ✻ | MN09623A | FLUORESCENT INDICATOR TUBE | |
| IC1 | | ✻ | 30622MHPA50GP | MICROCONTROLLER IC | |
| IC2 | | | BD5237FVE | ANALOGUE IC | |
| IC3 | | | BA3835F | ANALOGUE IC | |
| IC5 | | ✻ | TSOP4838 | ANALOGUE IC | |
| Q1 | | | 2SC4116 (Y) -F | TRANSISTOR | |
| Q2 | | | 2SA1577 | TRANSISTOR | |
| Q3 | | | 2SA1163-F | TRANSISTOR | |
| Q4 | | | 2SC2713-F | TRANSISTOR | |
| Q5 | | | DTA114EE | DIGITAL TRANSISTOR | |
| Q6 | | | 2SC4667-F | TRANSISTOR | |
| Q7 | | | 2SC4116 (Y) -F | TRANSISTOR | |
| **SUB-CIRCUIT UNIT (X16-3422-70)** | | | | | |
| J1 | 3D | | E58-0903-05 | RECTANGULAR RECEPTACLE | |

**E** : KDC-W808 (Europe) **K1** : KDC-X689 (North America)

⚠ Indicates safety critical components.

# PARTS LIST

## SUB-CIRCUIT UNIT (X16-3422-70)

| Ref. No. | Add | New | Parts No. | Description | Destination |
|---|---|---|---|---|---|
| FPC2 | 3D | * | J86-0021-05 | FPC (LEAD FREE) | |
| **CD PLAYER UNIT (X32-5730-00)** | | | | | |
| C3 | | | CK73GB0J105K | CHIP C 1.0UF K | |
| C5 | | | CK73GB1C104K | CHIP C 0.10UF K | |
| C7 | | | CK73GB0J225K | CHIP C 2.2UF K | |
| C8 | | | CK73GB0J105K | CHIP C 1.0UF K | |
| C12-14 | | | CK73GB1C104K | CHIP C 0.10UF K | |
| C17,18 | | | CK73GB1C104K | CHIP C 0.10UF K | |
| C21 | | | CK73GB1H102K | CHIP C 1000PF K | |
| C25,26 | | | CK73GB1C104K | CHIP C 0.10UF K | |
| C28 | | | CK73FB0J106M | CHIP C 10UF M | |
| C29 | | | CK73GB1C104K | CHIP C 0.10UF K | |
| C30 | | | CK73GB1H152K | CHIP C 1500PF K | |
| C31 | | | CC73GCH1H470J | CHIP C 47PF J | |
| C32 | | | CK73GB1C104K | CHIP C 0.10UF K | |
| C33 | | | CK73GB0J225K | CHIP C 2.2UF K | |
| C34 | | | CC73GCH1H560J | CHIP C 56PF J | |
| C35,36 | | | CK73GB1C104K | CHIP C 0.10UF K | |
| C37 | | | CK73GB1H102K | CHIP C 1000PF K | |
| C38 | | | CK73GB1H682K | CHIP C 6800PF K | |
| C39 | | | CK73GB1C104K | CHIP C 0.10UF K | |
| C40 | | | CK73GB0J105K | CHIP C 1.0UF K | |
| C41 | | | CK73GB0J475K | CHIP C 4.7UF K | |
| C44 | | | CK73GB0J105K | CHIP C 1.0UF K | |
| C46 | | | CK73GB1H682K | CHIP C 6800PF K | |
| C47 | | | CK73GB1C104K | CHIP C 0.10UF K | |
| C48 | | | CC73GCH1H040C | CHIP C 4.0PF C | |
| C49 | | | CK73GB1H332K | CHIP C 3300PF K | |
| C50 | | | CK73GB1C104K | CHIP C 0.10UF K | |
| C51 | | | CC73GCH1H330J | CHIP C 33PF J | |
| C52 | | | CK73FB1A225K | CHIP C 2.2UF K | |
| C53 | | | CK73GB0J225K | CHIP C 2.2UF K | |
| C54,55 | | | CK73GB1H103K | CHIP C 0.010UF K | |
| C56,57 | | | CC73GCH1H391J | CHIP C 390PF J | |
| C58 | | | CK73GB1H472K | CHIP C 4700PF K | |
| C59,60 | | | CK73GB1H152K | CHIP C 1500PF K | |
| C61,62 | | | CK73GB1H102K | CHIP C 1000PF K | |
| C63 | | | CK73GB1H152K | CHIP C 1500PF K | |
| C64,65 | | | CK73GB1C104K | CHIP C 0.10UF K | |
| C66,67 | | | CC73GCH1H100D | CHIP C 10PF D | |
| C68 | | | CK73FB0J106M | CHIP C 10UF M | |
| C72 | | | CK73GB0J225K | CHIP C 2.2UF K | |
| C73 | | | CK73GB1C104K | CHIP C 0.10UF K | |
| C74 | | | CK73GB0J475K | CHIP C 4.7UF K | |
| C75 | | | CC73GCH1H221J | CHIP C 220PF J | |
| C76,77 | | | CK73GB1C104K | CHIP C 0.10UF K | |
| C78-80 | | | CC73GCH1H221J | CHIP C 220PF J | |
| C81-84 | | | CK73GB1H102K | CHIP C 1000PF K | |
| C85 | | | CK73GB1C104K | CHIP C 0.10UF K | |
| C86 | | | CK73GB1A105K | CHIP C 1.0UF K | |
| C87 | | | CK73GB0J475K | CHIP C 4.7UF K | |
| C88 | | | CK73GB1H103K | CHIP C 0.010UF K | |
| C89 | | | CK73GB0J105K | CHIP C 1.0UF K | |
| C90,91 | | | CK73GB1H102K | CHIP C 1000PF K | |

| Ref. No. | Add | New | Parts No. | Description | Destination |
|---|---|---|---|---|---|
| C92 | | | CK73GB0J475K | CHIP C 4.7UF K | |
| C93-98 | | | CK73GB1C104K | CHIP C 0.10UF K | |
| C99 | | | CC73GCH1H060D | CHIP C 6.0PF D | |
| C100 | | | CC73GCH1H020C | CHIP C 2.0PF C | |
| C102 | | | CK73GB0J225K | CHIP C 2.2UF K | |
| C103 | | | CK73GB1H103K | CHIP C 0.010UF K | |
| CN1 | | | E41-2083-15 | FLAT CABLE CONNECTOR | |
| CN2 | | | E41-2297-05 | FLAT CABLE CONNECTOR | |
| X1 | | | L77-2863-05 | CRYSTAL RESONATOR (16.899M) | |
| X2 | | | L78-1209-05 | RESONATOR (26.88MHZ) | |
| CP1 | | | RK74GA1J223J | CHIP-COM 22K J 1/16W | |
| CP2,3 | | | RK74GA1J101J | CHIP-COM 100 J 1/16W | |
| CP4 | | | RK74GA1J103J | CHIP-COM 10K J 1/16W | |
| CP5 | | | RK74GA1J102J | CHIP-COM 1.0K J 1/16W | |
| CP7 | | | RK74GB1J102J | CHIP-COM 1.0K J 1/16W | |
| CP10 | | | RK74GB1J103J | CHIP-COM 10K J 1/16W | |
| CP11 | | | RK74GB1J472J | CHIP-COM 4.7K J 1/16W | |
| CP14 | | | RK74GA1J104J | CHIP-COM 100K J 1/16W | |
| CP16 | | | RK74GB1J104J | CHIP-COM 100K J 1/16W | |
| CP17 | | | RK74GA1J102J | CHIP-COM 1.0K J 1/16W | |
| CP18,19 | | | RK74GA1J104J | CHIP-COM 100K J 1/16W | |
| R1 | | | RK73GB2A225J | CHIP R 2.2M J 1/10W | |
| R3 | | | RK73GB2A223J | CHIP R 22K J 1/10W | |
| R4 | | | RK73GB2A102J | CHIP R 1.0K J 1/10W | |
| R5 | | | RK73GB2A101J | CHIP R 100 J 1/10W | |
| R6 | | | RK73GH2A223D | CHIP R 22K D 1/10W | |
| R8 | | | RK73GH2A393D | CHIP R 39K D 1/10W | |
| R9 | | | RK73GB2A223J | CHIP R 22K J 1/10W | |
| R10 | | | RK73GB2A101J | CHIP R 100 J 1/10W | |
| R11,12 | | | RK73GB2A223J | CHIP R 22K J 1/10W | |
| R13 | | | RK73GB2A102J | CHIP R 1.0K J 1/10W | |
| R14,15 | | | RK73GB2A223J | CHIP R 22K J 1/10W | |
| R17 | | | RK73GB2A221J | CHIP R 220 J 1/10W | |
| R18 | | | RK73GB2A102J | CHIP R 1.0K J 1/10W | |
| R19 | | | RK73GB2A472J | CHIP R 4.7K J 1/10W | |
| R20 | | | RK73GB2A102J | CHIP R 1.0K J 1/10W | |
| R21,22 | | | RK73GB2A103J | CHIP R 10K J 1/10W | |
| R23,24 | | | RK73GB2A223J | CHIP R 22K J 1/10W | |
| R25 | | | RK73GB2A102J | CHIP R 1.0K J 1/10W | |
| R29 | | | RK73GB2A102J | CHIP R 1.0K J 1/10W | |
| R34 | | | RK73GB2A472J | CHIP R 4.7K J 1/10W | |
| R35 | | | RK73GB2A104J | CHIP R 100K J 1/10W | |
| R36 | | | RK73FB2B4R7J | CHIP R 4.7 J 1/8W | |
| R37 | | | RK73GB2A103J | CHIP R 10K J 1/10W | |
| R40 | | | RK73GB2A274J | CHIP R 270K J 1/10W | |
| R41 | | | RK73GB2A103J | CHIP R 10K J 1/10W | |
| R42 | | | RK73GB2A101J | CHIP R 100 J 1/10W | |
| R43 | | | RK73GB2A393J | CHIP R 39K J 1/10W | |
| R44,45 | | | RK73GB2A302J | CHIP R 3.0K J 1/10W | |
| R48 | | | RK73GB2A472J | CHIP R 4.7K J 1/10W | |
| R50 | | | RK73GB2A101J | CHIP R 100 J 1/10W | |
| R51 | | | RK73GB2A392J | CHIP R 3.9K J 1/10W | |
| R52 | | | RK73GB2A163J | CHIP R 16K J 1/10W | |

**E** : KDC-W808 (Europe) **K1** : KDC-X689 (North America)

⚠ Indicates safety critical components.

# PARTS LIST

## CD PLAYER UNIT (X32-5730-00)

| Ref. No. | Add | New | Parts No. | Description | Destination |
|---|---|---|---|---|---|
| R53 | | | RK73GB2A123J | CHIP R 12K J 1/10W | |
| R54 | | | RK73GB2A333J | CHIP R 33K J 1/10W | |
| R55 | | | RK73GB2A103J | CHIP R 10K J 1/10W | |
| R56 | | | RK73GB2A123J | CHIP R 12K J 1/10W | |
| R57,58 | | | RK73GB2A133J | CHIP R 13K J 1/10W | |
| R59 | | | RK73GB2A472J | CHIP R 4.7K J 1/10W | |
| R60 | | | RK73GB2A123J | CHIP R 12K J 1/10W | |
| R61 | | | RK73GB2A183J | CHIP R 18K J 1/10W | |
| R62 | | | RK73GB2A432J | CHIP R 4.3K J 1/10W | |
| R63 | | | RK73GB2A133J | CHIP R 13K J 1/10W | |
| R64 | | | RK73GB2A151J | CHIP R 150 J 1/10W | |
| R65 | | | RK73GB2A152J | CHIP R 1.5K J 1/10W | |
| R67,68 | | | RK73GB2A152J | CHIP R 1.5K J 1/10W | |
| R69 | | | RK73GB2A682J | CHIP R 6.8K J 1/10W | |
| R70 | | | RK73GB2A102J | CHIP R 1.0K J 1/10W | |
| R71-73 | | | RK73GB2A101J | CHIP R 100 J 1/10W | |
| R108-110 | | | RK73GH2A392D | CHIP R 3.9K D 1/10W | |
| R111,112 | | | RK73GH2A562D | CHIP R 5.6K D 1/10W | |
| R113 | | | RK73GH2A392D | CHIP R 3.9K D 1/10W | |
| R114 | | | RK73GH2A562D | CHIP R 5.6K D 1/10W | |
| R115 | | | RK73GH2A392D | CHIP R 3.9K D 1/10W | |
| R116 | | | RK73GH2A562D | CHIP R 5.6K D 1/10W | |
| R117 | | | RK73GH2A392D | CHIP R 3.9K D 1/10W | |
| R118,119 | | | RK73GH2A100D | CHIP R 10 D 1/10W | |
| R120,121 | | | RK73GH2A392D | CHIP R 3.9K D 1/10W | |
| R122 | | | RK73GH2A202D | CHIP R 2.0K D 1/10W | |
| R123 | | | RK73GH2A102D | CHIP R 1.0K D 1/10W | |
| R124 | | | RK73GB2A680J | CHIP R 68 J 1/10W | |
| R128,129 | | | RK73GB2A101J | CHIP R 100 J 1/10W | |
| R130 | | | RK73GB2A221J | CHIP R 220 J 1/10W | |
| R132 | | | RK73GB2A102J | CHIP R 1.0K J 1/10W | |
| R133 | | | RK73GB2A561J | CHIP R 560 J 1/10W | |
| R134 | | | RK73GH2A202D | CHIP R 2.0K D 1/10W | |
| R135 | | | RK73GH2A102D | CHIP R 1.0K D 1/10W | |
| R137 | | | RK73GB2A680J | CHIP R 68 J 1/10W | |
| R138 | | | RK73GB2A471J | CHIP R 470 J 1/10W | |
| R139-141 | | | RK73GH2A111D | CHIP R 110 D 1/10W | |
| R142 | | | RK73GB2A6R8J | CHIP R 6.8 J 1/10W | |
| R144 | | | RK73GB2A222J | CHIP R 2.2K J 1/10W | |
| R145 | | | RK73GB2A102J | CHIP R 1.0K J 1/10W | |
| R146 | | | RK73GB2A332J | CHIP R 3.3K J 1/10W | |
| R147,148 | | | RK73GB2A103J | CHIP R 10K J 1/10W | |
| R150 | | | RK73GB2A103J | CHIP R 10K J 1/10W | |
| R151 | | | RK73GB2A102J | CHIP R 1.0K J 1/10W | |
| R152 | | | RK73GB2A221J | CHIP R 220 J 1/10W | |
| R153-155 | | | RK73GB2A330J | CHIP R 33 J 1/10W | |
| S1,2 | | | S68-0863-05 | PUSH SWITCH | |
| S3 | | | S68-0862-05 | PUSH SWITCH | |
| D2 | | | DA204U | DIODE | |
| D3 | | | DAN202U | DIODE | |
| D4,5 | | | MAZS0510L | ZENER DIODE | |
| D6 | | | DAN202U | DIODE | |
| IC1 | | | 91CU27UG5UR8 | MICROCONTROLLER IC | |

| Ref. No. | Add | New | Parts No. | Description | Destination |
|---|---|---|---|---|---|
| IC2 | | | UPD63712GC | MOS-IC | |
| IC4 | | | BA5824FP | ANALOGUE IC | |
| IC5 | | | NJM2886DL2-33 | ANALOGUE IC | |
| IC13 | | | NJM4580V-ZB | ANALOGUE IC | |
| IC14 | | | TAR5S50-F | ANALOGUE IC | |
| IC15 | | | CS7410-IQZ | MOS-IC | |
| IC16 | | | HY57V1616TP7I | DRAM IC | |
| IC17 | | | W400DB55N6E3U9 | ROM IC | |
| IC18 | | | PCM1793DB | MOS-IC | |
| IC19 | | | S-1112B33MCG | ANALOGUE IC | |
| IC20 | | | XC6219B182PR | ANALOGUE IC | |
| IC21 | | | XC6219B332PR | ANALOGUE IC | |
| Q1 | | | 2SK3018 | FET | |
| Q3 | | | UMD9N | TRANSISTOR | |
| Q4 | | | 2SK3018 | FET | |
| Q5 | | | UMD9N | TRANSISTOR | |
| Q6 | | | UMD12N | TRANSISTOR | |
| Q7 | | | DTC124EUA | DIGITAL TRANSISTOR | |
| Q8 | | | 2SB0970 (R) | TRANSISTOR | |
| Q9,10 | | | DTC114YUA | DIGITAL TRANSISTOR | |
| Q11 | | | 2SK210 (GR) | FET | |
| Q12 | | | DTA143XUA | DIGITAL TRANSISTOR | |
| Q13 | | | DTC143XUA | DIGITAL TRANSISTOR | |
| Q14 | | | DTC114YUA | DIGITAL TRANSISTOR | |
| Q15 | | | 2SB0970 (R) | TRANSISTOR | |

## ELECTRIC UNIT (X34-3890-11/2-70)

| | | | | | | |
|---|---|---|---|---|---|---|
| C1 | | | C90-6743-05 | ELECTRO | 3900UF | 16WV |
| C10 | | | CK73FB1C105K | CHIP C | 1.0UF | K |
| C11 | | | CD04AY1A221M | ELECTRO | 220UF | 10WV |
| C20 | | | CD04BA0J101M | ELECTRO | 100UF | 6.3WV |
| C21 | | | C90-5692-05 | ELECTRO | 220UF | 16WV |
| C22 | | | CK73GB1H103K | CHIP C | 0.010UF | K |
| C23 | | | CD04AT1C100M | ELECTRO | 10UF | 16WV |
| C32 | | | CK73GB1A474K | CHIP C | 0.47UF | K |
| C33 | | | CD04BA1C101M | ELECTRO | 100UF | 16WV |
| C40 | | | CK73GB1H103K | CHIP C | 0.010UF | K |
| C41 | | | CD04BA0J470M | ELECTRO | 47UF | 6.3WV |
| C50 | | | CK73GB1H104K | CHIP C | 0.10UF | K |
| C51 | | | CD04AS1C470M | ELECTRO | 47UF | 16WV |
| C60 | | | CK73FB1E474K | CHIP C | 0.47UF | K |
| C61 | | | CK73GB1A105K | CHIP C | 1.0UF | K |
| C63 | | | CK73FB0J106K | CHIP C | 10UF | K |
| C64 | | | CK73GB1H103K | CHIP C | 0.010UF | K |
| C65 | | | CD04BA1C101M | ELECTRO | 100UF | 16WV |
| C67 | | | CK73GB1H103K | CHIP C | 0.010UF | K |
| C68 | | | CK73GB1H104K | CHIP C | 0.10UF | K |
| C69 | | | CK73FB0J106K | CHIP C | 10UF | K |
| C71 | | | CK73GB1H104K | CHIP C | 0.10UF | K |
| C72 | | | CK73GB1H683K | CHIP C | 0.068UF | K |
| C73 | | | CK73EB1C106K | CHIP C | 10UF | K |
| C74,75 | | | C90-6770-05 | ELECTRO | 100UF | 25WV |
| C80 | | | C90-6771-05 | ELECTRO | 33UF | 63WV |
| C81 | | | C93-1382-05 | CHIP C | 1UF | K |
| C82 | | | C93-1381-05 | CHIP C | 1UF | K |
| C83 | | | CC73GCH1H101J | CHIP C | 100PF | J |

**E** : KDC-W808 (Europe) **K1** : KDC-X689 (North America)

⚠ Indicates safety critical components.

# PARTS LIST

## ELECTRIC UNIT (X34-3890-11/2-70)

| Ref. No. | Add | New | Parts No. | Description | | | Destination |
|---|---|---|---|---|---|---|---|
| C84 | | | C93-1381-05 | CHIP C | 1UF | K | |
| C85 | | | C93-1382-05 | CHIP C | 1UF | K | |
| C86 | | | CK73EB1E105K | CHIP C | 1.0UF | K | |
| C87 | | | CK73GB1H103K | CHIP C | 0.010UF | K | |
| C88 | | | CK73GB1C224K | CHIP C | 0.22UF | K | |
| C100 | | | CK73GB1H104K | CHIP C | 0.10UF | K | |
| C102 | | | CC73GCH1H220J | CHIP C | 22PF | J | |
| C103 | | | CC73GCH1H180J | CHIP C | 18PF | J | |
| C104,105 | | | CK73GB1H103K | CHIP C | 0.010UF | K | |
| C107 | | | CK73GB1H102K | CHIP C | 1000PF | K | |
| C109-113 | | | CK73GB1H103K | CHIP C | 0.010UF | K | |
| C114 | | | CD04AS0J470M | ELECTRO | 47UF | 6.3WV | |
| C200,201 | | | CK73GB1H103K | CHIP C | 0.010UF | K | |
| C202 | | | CK73GB1H102K | CHIP C | 1000PF | K | |
| C203 | | | CK73GB1H223K | CHIP C | 0.022UF | K | |
| C204 | | | CK73GB1H103K | CHIP C | 0.010UF | K | |
| C205 | | | CK73FB1C105K | CHIP C | 1.0UF | K | |
| C207 | | | CD04AT1H3R3M | ELECTRO | 3.3UF | 50WV | |
| C208 | | | CK73GB1A105K | CHIP C | 1.0UF | K | |
| C209 | | | CK73GB1H104K | CHIP C | 0.10UF | K | |
| C300 | | | CD04AS1C470M | ELECTRO | 47UF | 16WV | |
| C301 | | | CD04AT1H010M | ELECTRO | 1UF | 50WV | |
| C302 | | | CD04AS1H4R7M | ELECTRO | 4.7UF | 50WV | |
| C303,304 | | | CD04AS1H3R3M | ELECTRO | 3.3UF | 50WV | |
| C305 | | | CK73GB1A105K | CHIP C | 1.0UF | K | |
| C307 | | | CD04AT1C100M | ELECTRO | 10UF | 16WV | |
| C308,309 | | | CD04AS1H2R2M | ELECTRO | 2.2UF | 50WV | |
| C310,311 | | | CK73FB1E474K | CHIP C | 0.47UF | K | |
| C364,365 | | | CD04AS1H010M | ELECTRO | 1UF | 50WV | |
| C369 | | | CK73GB1A105K | CHIP C | 1.0UF | K | |
| C383 | | | CK73GB1H102K | CHIP C | 1000PF | K | |
| C384 | | | CK73GB1A105K | CHIP C | 1.0UF | K | |
| C385,386 | | | CK73GB1H152K | CHIP C | 1500PF | K | |
| C387,388 | | | CC73GCH1H101J | CHIP C | 100PF | J | |
| C389-392 | | | CC73GCH1H470J | CHIP C | 47PF | J | |
| C403 | | | CK73FB1A225K | CHIP C | 2.2UF | K | E |
| C404 | | | CC73GCH1H331J | CHIP C | 330PF | J | E |
| C405 | | | CD04AT1C100M | ELECTRO | 10UF | 16WV | E |
| C406 | | | CD04AS1C470M | ELECTRO | 47UF | 16WV | |
| C407 | | | CK73GB1H103K | CHIP C | 0.010UF | K | |
| C408 | | | CD04AS1C470M | ELECTRO | 47UF | 16WV | |
| C409,410 | | | CK73GB1H103K | CHIP C | 0.010UF | K | |
| C412 | | | CK73GB1H103K | CHIP C | 0.010UF | K | |
| C414,415 | | | CC73GCH1H120J | CHIP C | 12PF | J | E |
| C416 | | | CC73GCH1H101J | CHIP C | 100PF | J | |
| C451,452 | | | CK73GB1H104K | CHIP C | 0.10UF | K | |
| C500-504 | | | CK73EB1A475K | CHIP C | 4.7UF | K | |
| C505 | | | CK73GB1H103K | CHIP C | 0.010UF | K | |
| C506 | | | CK73EB1C106K | CHIP C | 10UF | K | |
| C507 | | | CC73GCH1H101J | CHIP C | 100PF | J | |
| C550,551 | | | CK73GB1H103K | CHIP C | 0.010UF | K | |
| C600,601 | | | CK73EB1E225K | CHIP C | 2.2UF | K | |
| C602 | | | CK73GB1H103K | CHIP C | 0.010UF | K | |
| C603 | | | CK73GB1H223K | CHIP C | 0.022UF | K | |
| C604 | | | CD04AS1C220M | ELECTRO | 22UF | 16WV | |

| Ref. No. | Add | New | Parts No. | Description | | | Destination |
|---|---|---|---|---|---|---|---|
| C605-608 | | | CK73EB1E225K | CHIP C | 2.2UF | K | |
| C609 | | | CD04BA1C101M | ELECTRO | 100UF | 16WV | |
| C610 | | | CD04AS1C220M | ELECTRO | 22UF | 16WV | |
| C611 | | | CE32CL1C100M | CHIP EL | 10UF | 16WV | |
| C612,613 | | | CD04AT1C100M | ELECTRO | 10UF | 16WV | |
| C614-622 | | | CE32CL1C100M | CHIP EL | 10UF | 16WV | |
| C623-628 | | | CK73GB1H102K | CHIP C | 1000PF | K | |
| C629 | | | CK73FB1E474K | CHIP C | 0.47UF | K | |
| C630 | | | CD04AS0J470M | ELECTRO | 47UF | 6.3WV | |
| C631 | | | CK73FB1E474K | CHIP C | 0.47UF | K | |
| C632 | | | CK73GB1H103K | CHIP C | 0.010UF | K | |
| C633-636 | | | CE32CL1C100M | CHIP EL | 10UF | 16WV | |
| C637,638 | | | CK73EB1C106K | CHIP C | 10UF | K | |
| C701 | | | CK73FB1E474K | CHIP C | 0.47UF | K | |
| C702 | | | CD04AS0J470M | ELECTRO | 47UF | 6.3WV | |
| C703 | | | CK73FB1E474K | CHIP C | 0.47UF | K | |
| C704 | | | CK73GB1H103K | CHIP C | 0.010UF | K | |
| C750 | | | CK73FB1C105K | CHIP C | 1.0UF | K | |
| C752-755 | | | C90-6768-05 | ELECTRO | 0.22UF | 16WV | |
| C756 | | | CD04AS1V100M | ELECTRO | 10UF | 35WV | |
| C757 | | | C90-6765-05 | ELECTRO | 1UF | 16WV | |
| C759 | | | CK73FB1C105K | CHIP C | 1.0UF | K | |
| C764,765 | | | CK73EB1H474K | CHIP C | 0.47UF | K | |
| CN5 | | | E41-0929-05 | PIN ASSY | | | |
| CN500 | | | E41-2170-05 | FLAT CABLE CONNECTOR | | | |
| CN550 | | | E41-2352-05 | FLAT CABLE CONNECTOR | | | |
| CN600 | | | E41-2555-05 | PIN ASSY | | | |
| CN601 | | | E41-2556-05 | FLAT CABLE CONNECTOR | | | |
| ⚠ J1 | | | E58-0991-05 | RECTANGULAR RECEPTACLE | | | |
| J2 | | | E56-0855-05 | CYLINDRICAL RECEPTACLE | | | |
| W1 | 2D | | E30-6494-05 | CORD WITH PLUG | | | |
| L1 | | | L33-1988-05 | CHOKE COIL ASSY | | | |
| L60,61 | | | L33-2230-05 | SMALL FIXED INDUCTOR | | | |
| L81 | | | L33-2288-05 | SMALL FIXED INDUCTOR | | | |
| L100 | | | L92-0075-05 | CHIP FERRITE | | | |
| L101 | | | L41-4795-33 | SMALL FIXED INDUCTOR (4.7U) | | | |
| L400 | | | L33-2260-05 | CHOKE COIL | | | |
| L401-403 | | | L41-4795-33 | SMALL FIXED INDUCTOR (4.7U) | | | |
| L405 | | | L41-4795-33 | SMALL FIXED INDUCTOR (4.7U) | | | E |
| L600 | | | L41-2205-33 | SMALL FIXED INDUCTOR (22U) | | | |
| X100 | | | L78-0872-05 | RESONATOR (12MHZ) | | | |
| X101 | | | L77-2880-05 | CRYSTAL RESONATOR | | | |
| X401 | | | L77-2002-05 | CRYSTAL RESONATOR | | | E |
| P | 2D | | N83-3005-48 | PAN HEAD TAPTITE SCREW | | | |
| S | 2D | | N80-3010-48 | PAN HEAD TAPTITE SCREW | | | |
| T | 2D | | N83-3016-48 | PAN HEAD TAPTITE SCREW | | | |
| V | 2D | | N86-2606-48 | BINDING HEAD TAPTITE SCREW | | | |
| CP101,102 | | | RK74GA1J101J | CHIP-COM | 100 | J 1/16W | |
| CP104 | | | RK74GA1J102J | CHIP-COM | 1.0K | J 1/16W | |
| CP107 | | | RK74GB1J102J | CHIP-COM | 1.0K | J 1/16W | |
| CP108 | | | RK74GA1J222J | CHIP-COM | 2.2K | J 1/16W | |
| CP109-111 | | | RK74GA1J101J | CHIP-COM | 100 | J 1/16W | |
| R1 | | | RK73EB2E102J | CHIP R | 1.0K | J 1/4W | |

**E** : KDC-W808 (Europe) **K1** : KDC-X689 (North America)

⚠ Indicates safety critical components.

# PARTS LIST

## ELECTRIC UNIT (X34-3890-11/2-70)

| Ref. No. | Add | New | Parts No. | Description | | | | Destination |
|---|---|---|---|---|---|---|---|---|
| R2,3 | | | RK73EB2E103J | CHIP R | 10K | J | 1/4W | |
| R10 | | | RK73GH2A243D | CHIP R | 24K | D | 1/10W | |
| R11 | | | RK73FB2B221J | CHIP R | 220 | J | 1/8W | |
| R12 | | | RK73GB2A153J | CHIP R | 15K | J | 1/10W | |
| R13 | | | RK73GH2A432D | CHIP R | 4.3K | D | 1/10W | |
| R20 | | | RK73FB2B203J | CHIP R | 20K | J | 1/8W | |
| R21 | | | RK73GB2A223J | CHIP R | 22K | J | 1/10W | |
| R22 | | | RK73GB2A101J | CHIP R | 100 | J | 1/10W | |
| R23 | | | RK73FB2B272J | CHIP R | 2.7K | J | 1/8W | |
| R24 | | | RK73GB2A2R2J | CHIP R | 2.2 | J | 1/10W | |
| R31 | | | RK73FB2B152J | CHIP R | 1.5K | J | 1/8W | |
| R42 | | | RK73GB2A223J | CHIP R | 22K | J | 1/10W | |
| R44 | | | RK73FB2B822J | CHIP R | 8.2K | J | 1/8W | |
| R50 | | | RK73FB2B152J | CHIP R | 1.5K | J | 1/8W | |
| R52 | | | RK73FB2B102J | CHIP R | 1.0K | J | 1/8W | |
| R60 | | | RK73GH2A103D | CHIP R | 10K | D | 1/10W | |
| R61 | | | RK73GB2A153J | CHIP R | 15K | J | 1/10W | |
| R62 | | | RK73GB2A103J | CHIP R | 10K | J | 1/10W | |
| R63,64 | | | RK73GH2A103D | CHIP R | 10K | D | 1/10W | |
| R65 | | | RK73GB2A101J | CHIP R | 100 | J | 1/10W | |
| R66 | | | RK73GB2A104J | CHIP R | 100K | J | 1/10W | |
| R67 | | | RK73GH2A273D | CHIP R | 27K | D | 1/10W | |
| R68 | | | RK73GB2A243J | CHIP R | 24K | J | 1/10W | |
| R69 | | | RK73GB2A104J | CHIP R | 100K | J | 1/10W | |
| R70 | | | RK73GH2A303D | CHIP R | 30K | D | 1/10W | |
| R71 | | | RK73GB2A203J | CHIP R | 20K | J | 1/10W | |
| R72 | | | RK73GB2A101J | CHIP R | 100 | J | 1/10W | |
| R73 | | | RK73GB2A103J | CHIP R | 10K | J | 1/10W | |
| R74 | | | RK73GH2A822D | CHIP R | 8.2K | D | 1/10W | |
| R75 | | | RK73GB2A105J | CHIP R | 1.0M | J | 1/10W | |
| R76,77 | | | RK73GB2A104J | CHIP R | 100K | J | 1/10W | |
| R80 | | | RK73GH2A434D | CHIP R | 430K | D | 1/10W | |
| R81 | | | RK73GB2A473J | CHIP R | 47K | J | 1/10W | |
| R82 | | | RK73GB2A822J | CHIP R | 8.2K | J | 1/10W | |
| R83 | | | RK73GB2A104J | CHIP R | 100K | J | 1/10W | |
| R84 | | | RK73GB2A182J | CHIP R | 1.8K | J | 1/10W | |
| R85 | | | RK73PB2H102J | CHIP R | 1.0K | J | 1/2W | |
| R86 | | | RK73GB2A473J | CHIP R | 47K | J | 1/10W | |
| R87 | | | RK73GB2A224J | CHIP R | 220K | J | 1/10W | |
| R88 | | | RK73SB3A1R0J | CHIP R | 1.0 | J | 1W | |
| R91 | | | RK73GB2A103J | CHIP R | 10K | J | 1/10W | |
| R92 | | | RK73GB2A104J | CHIP R | 100K | J | 1/10W | |
| R93 | | | RK73FB2B431J | CHIP R | 430 | J | 1/8W | |
| R100-104 | | | RK73GB2A104J | CHIP R | 100K | J | 1/10W | |
| R105 | | | RK73GB2A101J | CHIP R | 100 | J | 1/10W | |
| R109 | | | RK73GB2A223J | CHIP R | 22K | J | 1/10W | |
| R110 | | | RK73GB2A103J | CHIP R | 10K | J | 1/10W | |
| R111 | | | RK73GB2A104J | CHIP R | 100K | J | 1/10W | |
| R112 | | | RK73GB2A473J | CHIP R | 47K | J | 1/10W | |
| R113 | | | RK73GB2A103J | CHIP R | 10K | J | 1/10W | |
| R114 | | | RK73GB2A473J | CHIP R | 47K | J | 1/10W | |
| R115 | | | RK73GB2A101J | CHIP R | 100 | J | 1/10W | |
| R117 | | | RK73GB2A101J | CHIP R | 100 | J | 1/10W | |
| R118 | | | RK73GB2A102J | CHIP R | 1.0K | J | 1/10W | |
| R119 | | | RK73GB2A223J | CHIP R | 22K | J | 1/10W | |
| R120,121 | | | RK73GB2A104J | CHIP R | 100K | J | 1/10W | |
| R122,123 | | | RK73GB2A101J | CHIP R | 100 | J | 1/10W | |
| R125 | | | RK73GB2A222J | CHIP R | 2.2K | J | 1/10W | |
| R126 | | | RK73GB2A101J | CHIP R | 100 | J | 1/10W | |
| R127 | | | RK73GB2A103J | CHIP R | 10K | J | 1/10W | |
| R128 | | | RK73GB2A222J | CHIP R | 2.2K | J | 1/10W | |
| R129 | | | RK73GB2A102J | CHIP R | 1.0K | J | 1/10W | |
| R130 | | | RK73GB2A222J | CHIP R | 2.2K | J | 1/10W | |
| R131 | | | RK73GB2A473J | CHIP R | 47K | J | 1/10W | |
| R132,133 | | | RK73GB2A472J | CHIP R | 4.7K | J | 1/10W | |
| R134-138 | | | RK73GB2A101J | CHIP R | 100 | J | 1/10W | |
| R139 | | | RK73GB2A473J | CHIP R | 47K | J | 1/10W | |
| R140 | | | RK73GB2A101J | CHIP R | 100 | J | 1/10W | |
| R143 | | | RK73GB2A473J | CHIP R | 47K | J | 1/10W | |
| R144 | | | RK73GB2A101J | CHIP R | 100 | J | 1/10W | |
| R146 | | | RK73GB2A154J | CHIP R | 150K | J | 1/10W | |
| R148 | | | RK73GB2A473J | CHIP R | 47K | J | 1/10W | |
| R149,150 | | | RK73GB2A223J | CHIP R | 22K | J | 1/10W | |
| R154 | | | RK73GB2A223J | CHIP R | 22K | J | 1/10W | K1 |
| R154-156 | | | RK73GB2A223J | CHIP R | 22K | J | 1/10W | E |
| R156 | | | RK73GB2A223J | CHIP R | 22K | J | 1/10W | K1 |
| R159 | | | RK73GB2A473J | CHIP R | 47K | J | 1/10W | K1 |
| R161-163 | | | RK73GB2A104J | CHIP R | 100K | J | 1/10W | |
| R164 | | | RK73GB2A223J | CHIP R | 22K | J | 1/10W | |
| R165,166 | | | RK73GB2A222J | CHIP R | 2.2K | J | 1/10W | |
| R168 | | | RK73GB2A222J | CHIP R | 2.2K | J | 1/10W | |
| R170-173 | | | RK73GB2A223J | CHIP R | 22K | J | 1/10W | |
| R176 | | | RK73GB2A104J | CHIP R | 100K | J | 1/10W | |
| R177 | | | RK73GB2A223J | CHIP R | 22K | J | 1/10W | |
| R178 | | | RK73GB2A473J | CHIP R | 47K | J | 1/10W | |
| R179 | | | RK73GB2A102J | CHIP R | 1.0K | J | 1/10W | |
| R181 | | | RK73GB2A473J | CHIP R | 47K | J | 1/10W | |
| R183 | | | RK73GB2A473J | CHIP R | 47K | J | 1/10W | |
| R184 | | | RK73GB2A103J | CHIP R | 10K | J | 1/10W | |
| R187 | | | RK73GB2A473J | CHIP R | 47K | J | 1/10W | |
| R188 | | | RK73GB2A222J | CHIP R | 2.2K | J | 1/10W | |
| R189 | | | RK73GB2A102J | CHIP R | 1.0K | J | 1/10W | |
| R190 | | | RK73GB2A222J | CHIP R | 2.2K | J | 1/10W | |
| R191 | | | RK73GB2A102J | CHIP R | 1.0K | J | 1/10W | |
| R192 | | | RK73GB2A222J | CHIP R | 2.2K | J | 1/10W | |
| R193 | | | RK73GB2A102J | CHIP R | 1.0K | J | 1/10W | |
| R200 | | | RK73EB2E473J | CHIP R | 47K | J | 1/4W | |
| R201 | | | RK73EB2E332J | CHIP R | 3.3K | J | 1/4W | |
| R202 | | | RK73GB2A183J | CHIP R | 18K | J | 1/10W | |
| R203 | | | RK73GB2A104J | CHIP R | 100K | J | 1/10W | |
| R204 | | | RK73GB2A393J | CHIP R | 39K | J | 1/10W | |
| R205 | | | RK73GB2A103J | CHIP R | 10K | J | 1/10W | |
| R206 | | | RK73GB2A474J | CHIP R | 470K | J | 1/10W | |
| R207 | | | RK73GB2A103J | CHIP R | 10K | J | 1/10W | |
| R208 | | | RK73EB2E101J | CHIP R | 100 | J | 1/4W | |
| R209 | | | RK73FB2B683J | CHIP R | 68K | J | 1/8W | |
| R210 | | | RK73FB2B203J | CHIP R | 20K | J | 1/8W | |
| R211 | | | RK73GB2A103J | CHIP R | 10K | J | 1/10W | |
| R212 | | | RK73GB2A223J | CHIP R | 22K | J | 1/10W | |
| R213 | | | RK73GB2A473J | CHIP R | 47K | J | 1/10W | |

**E** : KDC-W808 (Europe) **K1** : KDC-X689 (North America)

⚠ Indicates safety critical components.

# PARTS LIST

## ELECTRIC UNIT (X34-3890-11/2-70)

| Ref. No. | Add | New | Parts No. | Description | Destination |
|---|---|---|---|---|---|
| R214 | | | RK73GB2A104J | CHIP R 100K J 1/10W | |
| R215 | | | RK73FB2B561J | CHIP R 560 J 1/8W | |
| R216 | | | RK73GB2A223J | CHIP R 22K J 1/10W | K1 |
| R217 | | | RK73SB3A471J | CHIP R 470 J 1W | K1 |
| R218,219 | | | RK73FB2B472J | CHIP R 4.7K J 1/8W | |
| R220 | | | R92-5024-05 | CHIP R 1K J 1/2W | |
| R221 | | | RK73GB2A223J | CHIP R 22K J 1/10W | |
| R222 | | | R92-5024-05 | CHIP R 1K J 1/2W | |
| R300 | | | RK73EB2E2R2J | CHIP R 2.2 J 1/4W | |
| R301 | | | RK73GB2A103J | CHIP R 10K J 1/10W | |
| R320 | | | RK73GB2A102J | CHIP R 1.0K J 1/10W | |
| R323 | | | RK73GB2A101J | CHIP R 100 J 1/10W | |
| R335,336 | | | RK73GB2A101J | CHIP R 100 J 1/10W | |
| R382,383 | | | RK73GB2A102J | CHIP R 1.0K J 1/10W | |
| R384 | | | RK73GB2A9R1J | CHIP R 9.1 J 1/10W | |
| R385 | | | RK73GB2A1R0J | CHIP R 1.0 J 1/10W | |
| R404 | | | RK73GB2A223J | CHIP R 22K J 1/10W | |
| R405,406 | | | RK73GB2A471J | CHIP R 470 J 1/10W | |
| R407,408 | | | RK73GB2A472J | CHIP R 4.7K J 1/10W | |
| R409 | | | RK73FB2B102J | CHIP R 1.0K J 1/8W | |
| R410-412 | | | RK73GB2A222J | CHIP R 2.2K J 1/10W | E |
| R500 | | | RK73GB2A473J | CHIP R 47K J 1/10W | |
| R501 | | | RK73EB2E101J | CHIP R 100 J 1/4W | |
| R502 | | | RK73GB2A102J | CHIP R 1.0K J 1/10W | |
| R503 | | | RK73GB2A333J | CHIP R 33K J 1/10W | |
| R504,505 | | | RK73GB2A473J | CHIP R 47K J 1/10W | |
| R506 | | | RK73GB2A821J | CHIP R 820 J 1/10W | |
| R507 | | | RK73GB2A104J | CHIP R 100K J 1/10W | |
| R508 | | | RK73GB2A101J | CHIP R 100 J 1/10W | |
| R509 | | | RK73EB2E103J | CHIP R 10K J 1/4W | |
| R510,511 | | | RK73EB2E101J | CHIP R 100 J 1/4W | |
| R512,513 | | | RK73GB2A334J | CHIP R 330K J 1/10W | |
| R514 | | | RK73EB2E101J | CHIP R 100 J 1/4W | |
| R516 | | | RK73EB2E472J | CHIP R 4.7K J 1/4W | |
| R517 | | | RK73EB2E102J | CHIP R 1.0K J 1/4W | |
| R518,519 | | | RK73GB2A103J | CHIP R 10K J 1/10W | |
| R520 | | | RK73GB2A1R0J | CHIP R 1.0 J 1/10W | |
| R550 | | | RK73GB2A222J | CHIP R 2.2K J 1/10W | |
| R551 | | | RK73GB2A471J | CHIP R 470 J 1/10W | |
| R552,553 | | | RK73GB2A104J | CHIP R 100K J 1/10W | |
| R554 | | | RK73GB2A471J | CHIP R 470 J 1/10W | |
| R600,601 | | | RK73GB2A913J | CHIP R 91K J 1/10W | |
| R602 | | | RK73GB2A103J | CHIP R 10K J 1/10W | |
| R603 | | | RK73GB2A470J | CHIP R 47 J 1/10W | |
| R604 | | | RK73GB2A274J | CHIP R 270K J 1/10W | |
| R605 | | | RK73GB2A563J | CHIP R 56K J 1/10W | |
| R606 | | | RK73GB2A752J | CHIP R 7.5K J 1/10W | |
| R607 | | | RK73GB2A470J | CHIP R 47 J 1/10W | |
| R608 | | | RK73GB2A272J | CHIP R 2.7K J 1/10W | |
| R609 | | | RK73GB2A750J | CHIP R 75 J 1/10W | |
| R610 | | | RK73GB2A182J | CHIP R 1.8K J 1/10W | |
| R611 | | | RK73GB2A361J | CHIP R 360 J 1/10W | |
| R612 | | | RK73GB2A820J | CHIP R 82 J 1/10W | |
| R613 | | | RK73GB2A123J | CHIP R 12K J 1/10W | |
| R614 | | | RK73GB2A103J | CHIP R 10K J 1/10W | |
| R615 | | | RK73GB2A223J | CHIP R 22K J 1/10W | |
| R616 | | | RK73GB2A103J | CHIP R 10K J 1/10W | |
| R617 | | | RK73GB2A223J | CHIP R 22K J 1/10W | |
| R618 | | | RK73GB2A820J | CHIP R 82 J 1/10W | |
| R619 | | | RK73GB2A123J | CHIP R 12K J 1/10W | |
| R620,621 | | | RK73GB2A361J | CHIP R 360 J 1/10W | |
| R622 | | | RK73GB2A820J | CHIP R 82 J 1/10W | |
| R623 | | | RK73GB2A123J | CHIP R 12K J 1/10W | |
| R624 | | | RK73GB2A103J | CHIP R 10K J 1/10W | |
| R625 | | | RK73GB2A223J | CHIP R 22K J 1/10W | |
| R626 | | | RK73GB2A103J | CHIP R 10K J 1/10W | |
| R627 | | | RK73GB2A223J | CHIP R 22K J 1/10W | |
| R628 | | | RK73GB2A820J | CHIP R 82 J 1/10W | |
| R629 | | | RK73GB2A123J | CHIP R 12K J 1/10W | |
| R630,631 | | | RK73GB2A361J | CHIP R 360 J 1/10W | |
| R632 | | | RK73GB2A820J | CHIP R 82 J 1/10W | |
| R633 | | | RK73GB2A123J | CHIP R 12K J 1/10W | |
| R634 | | | RK73GB2A103J | CHIP R 10K J 1/10W | |
| R635 | | | RK73GB2A223J | CHIP R 22K J 1/10W | |
| R636 | | | RK73GB2A103J | CHIP R 10K J 1/10W | |
| R637 | | | RK73GB2A223J | CHIP R 22K J 1/10W | |
| R638 | | | RK73GB2A820J | CHIP R 82 J 1/10W | |
| R639 | | | RK73GB2A123J | CHIP R 12K J 1/10W | |
| R640 | | | RK73GB2A361J | CHIP R 360 J 1/10W | |
| R641 | | | RK73EB2E100J | CHIP R 10 J 1/4W | |
| R642 | | | RK73EB2E4R7J | CHIP R 4.7 J 1/4W | |
| R643 | | | RK73EB2E100J | CHIP R 10 J 1/4W | |
| R644 | | | RK73GB2A102J | CHIP R 1.0K J 1/10W | |
| R651,652 | | | RK73GB2A393J | CHIP R 39K J 1/10W | |
| R655-660 | | | RK73GB2A104J | CHIP R 100K J 1/10W | |
| R700 | | | RK73EB2E472J | CHIP R 4.7K J 1/4W | |
| R701 | | | RK73EB2E101J | CHIP R 100 J 1/4W | |
| R702 | | | RK73EB2E472J | CHIP R 4.7K J 1/4W | |
| R703-707 | | | RK73EB2E101J | CHIP R 100 J 1/4W | |
| R708 | | | RK73EB2E681J | CHIP R 680 J 1/4W | |
| R709 | | | RK73EB2E4R7J | CHIP R 4.7 J 1/4W | |
| R710 | | | RK73EB2E681J | CHIP R 680 J 1/4W | |
| R711 | | | RK73GB2A102J | CHIP R 1.0K J 1/10W | |
| R712 | | | RK73EB2E102J | CHIP R 1.0K J 1/4W | |
| R713-715 | | | RK73EB2E471J | CHIP R 470 J 1/4W | |
| R752 | | | RK73GB2A103J | CHIP R 10K J 1/10W | |
| R753 | | | RK73GB2A473J | CHIP R 47K J 1/10W | |
| R766 | | | RK73GB2A431J | CHIP R 430 J 1/10W | |
| R768 | | | RK73GB2A432J | CHIP R 4.3K J 1/10W | |
| R770 | | | RK73GB2A363J | CHIP R 36K J 1/10W | |
| R772 | | | RK73GB2A221J | CHIP R 220 J 1/10W | |
| R773 | | | RK73GB2A100J | CHIP R 10 J 1/10W | |
| R774 | | | RK73GB2A154J | CHIP R 150K J 1/10W | |
| W101 | | | R92-1252-05 | CHIP R 0 OHM J 1/16W | |
| W201-203 | | | R92-1252-05 | CHIP R 0 OHM J 1/16W | E |
| W202,203 | | | R92-1252-05 | CHIP R 0 OHM J 1/16W | K1 |
| W750 | | | R92-1252-05 | CHIP R 0 OHM J 1/16W | |
| W752-757 | | | R92-1252-05 | CHIP R 0 OHM J 1/16W | |
| D1 | | | S2V60✻A | DIODE | |

**E** : KDC-W808 (Europe) **K1** : KDC-X689 (North America)

⚠ Indicates safety critical components.

# PARTS LIST

## ELECTRIC UNIT (X34-3890-11/2-70)

| Ref. No. | Add | New | Parts No. | Description | Destination |
|---|---|---|---|---|---|
| D20 | | | RB160L-40 | DIODE | |
| D21 | | | UDZS5.6B | ZENER DIODE | |
| D31 | | | UDZS8.2B | ZENER DIODE | |
| D50 | | | HZU16 (B1)-E | ZENER DIODE | |
| D60,61 | | | SFPB-54VNF | DIODE | |
| D80-82 | | | RB060L-40 | DIODE | |
| D101 | | | DA227 | DIODE | |
| D102-104 | | | DAP222 | DIODE | |
| D200,201 | | | DAP202U | DIODE | |
| D202 | | | UDZS6.2B | ZENER DIODE | |
| D203 | | | UDZS6.8B | ZENER DIODE | |
| D204 | | | DAP202U | DIODE | |
| D205 | | | UDZS6.8B | ZENER DIODE | |
| D206 | | | UDZS4.7B | ZENER DIODE | |
| D207 | | | UDZS5.6B | ZENER DIODE | |
| D208-210 | | | 1SR154-400 | DIODE | |
| D212,213 | | | 1SR154-400 | DIODE | |
| D300 | | | UDZS3.3B | ZENER DIODE | |
| D301 | | | 1SS355 | DIODE | |
| D401 | | | IMSA-6801-E | SURGE ABSORBER | |
| D500 | | | DA204K | DIODE | |
| D501 | | | STZ6.2N | ZENER DIODE | |
| D502 | | | DA204K | DIODE | |
| D503 | | | STZ6.2N | ZENER DIODE | |
| D504 | | | DA204U | DIODE | |
| D505 | | | DAP202U | DIODE | |
| D506 | | | STZ6.2N | ZENER DIODE | |
| D600 | | | UDZS5.6B | ZENER DIODE | |
| D601 | | | UDZS11B | ZENER DIODE | |
| D608,609 | | | STZ6.8N | ZENER DIODE | |
| D700-702 | | | STZ6.2N | ZENER DIODE | |
| D703,704 | | | STZ6.8N | ZENER DIODE | |
| D705,706 | | | STZ6.2N | ZENER DIODE | |
| D754,755 | | | DAP222 | DIODE | |
| IC10 | | | M5237ML-CF0J | ANALOGUE IC | |
| IC60 | | | FA3687V | ANALOGUE IC | |
| IC80 | | | LT3467A | ANALOGUE IC | |
| IC100 | | | S-80836CNNB-J | MOS-IC | |
| IC101 | | | 30624MGPA51GP | MICROCONTROLLER IC | |
| IC103 | | | TC7W02FU-F | MOS-IC | |
| IC104 | | | BR24L04FV-W | ROM IC | |
| IC300 | | | E-TDA7415 | ANALOGUE IC | |
| IC400 | | | E-TDA7479AD | ANALOGUE IC | E |
| IC450 | | | LB1930M-E | ANALOGUE IC | |
| IC500 | | | RC4580IDR | ANALOGUE IC | |
| IC600 | | | ICL7660SIBAZ | ANALOGUE IC | |
| IC601-603 | | | NJM4565V-ZB | ANALOGUE IC | |
| IC750 | | | TB2903HQ | ANALOGUE IC | |
| Q10 | | | 2SB1565 | TRANSISTOR | |
| Q11,12 | | | UMC2N | TRANSISTOR | |
| Q20 | | | 2SB1565 | TRANSISTOR | |
| Q21 | | | 2SD2351 (W) | TRANSISTOR | |
| Q22 | | | 2SA1577 | TRANSISTOR | |
| Q23 | | | DTC124EUA | DIGITAL TRANSISTOR | |
| Q31 | | | 2SB1565 | TRANSISTOR | |

| Ref. No. | Add | New | Parts No. | Description | Destination |
|---|---|---|---|---|---|
| Q33 | | | 2SC4081 | TRANSISTOR | |
| Q34 | | | DTC124EUA | DIGITAL TRANSISTOR | |
| Q40 | | | 2SB1427 | TRANSISTOR | |
| Q50 | | | 2SB1449 (R) -E | TRANSISTOR | |
| Q51 | | | UMC2N | TRANSISTOR | |
| Q52 | | | 2SC4081 | TRANSISTOR | |
| Q60 | | | DTC143TUA | DIGITAL TRANSISTOR | |
| Q61 | | | UMG2N | TRANSISTOR | |
| Q62 | | | DTA143TUA | DIGITAL TRANSISTOR | |
| Q63,64 | | | 2SJ484-E | FET | |
| Q80 | | | 2SB1188 (R) | TRANSISTOR | |
| Q81 | | | 2SC4081 | TRANSISTOR | |
| Q91 | | | 2SC4081 | TRANSISTOR | |
| Q100 | | | 2SA1576A | TRANSISTOR | |
| Q101 | | | DTC144EUA | DIGITAL TRANSISTOR | |
| Q200,201 | | | DTA124EUA | DIGITAL TRANSISTOR | |
| Q202 | | | 2SC4081 | TRANSISTOR | |
| Q203 | | | 2SA1576A | TRANSISTOR | |
| Q204,205 | | | 2SC4081 | TRANSISTOR | |
| Q206 | | | DTA123JK | DIGITAL TRANSISTOR | |
| Q207 | | | DTC144EUA | DIGITAL TRANSISTOR | |
| Q208 | | | 2SB1188 (R) | TRANSISTOR | K1 |
| Q209 | | | DTC114YUA | DIGITAL TRANSISTOR | K1 |
| Q210 | | | 2SB1188 (R) | TRANSISTOR | |
| Q211 | | | 2SA1576A | TRANSISTOR | |
| Q212 | | | DTA124EUA | DIGITAL TRANSISTOR | |
| Q213 | | | DTC114YUA | DIGITAL TRANSISTOR | |
| Q402 | | | 2SB1689 | TRANSISTOR | |
| Q403 | | | DTC124EUA | DIGITAL TRANSISTOR | |
| Q500 | | | 2SC4081 | TRANSISTOR | |
| Q600 | | | 2SC4617 | TRANSISTOR | |
| Q601 | | | 2SA1774 | TRANSISTOR | |
| Q602 | | | 2SC4617 | TRANSISTOR | |
| Q603 | | | 2SA1576A | TRANSISTOR | |
| Q604 | | | 2SC4081 | TRANSISTOR | |
| Q605 | | | 2SA1576A | TRANSISTOR | |
| Q606 | | | 2SC4081 | TRANSISTOR | |
| Q607 | | | 2SB1443 | TRANSISTOR | |
| Q608-613 | | | DTC143TUA | DIGITAL TRANSISTOR | |
| TH750 | | | PRF21BE471QB2 | POSITIVE RESISTOR | |
| A1 | 2D | | X86-3840-11 | FRONT-END UNIT | K1 |
| A1 | 2D | | X86-3842-70 | FRONT-END UNIT | E |

## CD MECHANISM ASSY (X92-5100-00/04)

| | | | | | |
|---|---|---|---|---|---|
| 2 | 1B | | A10-4827-32 | CHASSIS | |
| 5 | 1B | | D10-4576-83 | ARM ASSY | |
| 8 | 2A | | D10-4579-23 | LEVER ASSY | K1 |
| 8 | 2A | | D10-4787-63 | LEVER ASSY | E |
| 10 | 3A | | D10-4581-13 | ARM | |
| 11 | 2A | | D10-4582-13 | ARM | |
| 12 | 3A | | D10-4583-03 | ARM | |
| 13 | 3A | | D10-4584-03 | ARM | |
| 14 | 3B | | D10-4585-03 | ARM | |
| 15 | 2A | | D10-4586-13 | SLIDER | |

**E** : KDC-W808 (Europe) **K1** : KDC-X689 (North America)

⚠ Indicates safety critical components.

# PARTS LIST

## CD MECHANISM ASSY (X92-5100-00/04)

| Ref. No. | Add | New | Parts No. | Description | Destination |
|---|---|---|---|---|---|
| 16 | 3B | | D10-4587-52 | SLIDER | |
| 17 | 3B | | D10-4588-13 | SLIDER | |
| 18 | 3B | | D10-4595-04 | ARM | |
| 19 | 3B | | D10-4596-24 | ARM | |
| 22 | 2A | | D13-2151-04 | GEAR | |
| 23 | 2B | | D13-2152-04 | GEAR | |
| 24 | 3B | | D13-2153-04 | GEAR | |
| 25 | 3B | | D13-2154-04 | GEAR | |
| 26 | 3B | | D13-2155-04 | WORM | |
| 27 | 3B | | D13-2156-14 | GEAR | |
| 28 | 3B | | D13-2157-04 | GEAR | |
| 29 | 3B | | D13-2158-04 | GEAR | |
| 30 | 3B | | D13-2168-04 | GEAR | |
| 31 | 3B | | D13-2171-04 | GEAR | |
| 32 | 2B | | D13-2172-13 | RACK (GEAR) | |
| 33 | 2A | | D14-0759-04 | ROLLER | |
| 35 | 2B | | D21-2382-04 | SHAFT | |
| 36 | 1A | | D23-0954-04 | RETAINER | |
| 37 | 1B | | D39-0246-05 | DAMPER | K1 |
| 37 | 1B | | D39-0260-05 | DAMPER | E |
| 38 | 2B | | G01-3072-04 | EXTENSION SPRING | |
| 39 | 2A | | G01-3073-04 | TORSION COIL SPRING | |
| 40 | 2A | | G01-3074-04 | EXTENSION SPRING | |
| 41 | 1B | | G01-3075-24 | EXTENSION SPRING | |
| 42 | 2A | | G01-3076-04 | EXTENSION SPRING | |
| 43 | 1B | | G01-3077-14 | EXTENSION SPRING | |
| 44 | 2B | | G02-1399-04 | FLAT SPRING | |
| 45 | 2B | | G02-1408-04 | FLAT SPRING | |
| 47 | 3D | | F09-1804-04 | SHEET | E |
| 51 | 1A | | J21-9676-32 | MOUNTING HARDWARE | |
| 52 | 3B | | J21-9677-22 | MOUNTING HARDWARE | |
| 53 | 1B | | J21-9678-13 | MOUNTING HARDWARE | |
| 55 | 1A | | J90-1001-11 | GUIDE | |
| 56 | 1B | | J90-1023-03 | GUIDE | |
| DFPC1 | 3A | | J84-0141-05 | FLEXIBLE PRINTED WIRING BOARD | |
| A | 2B | | N09-4460-05 | TAPTITE SCREW (OVAL P 2X8) | |
| B | 1B | | N09-4472-15 | MACHINE SCREW (M1.7X8.0) | |
| C | 2B | | N09-6004-05 | MACHINE SCREW (M1.7X2.5 IB-L) | |
| E | 2B | | N09-6007-05 | MACHINE SCREW (PAN M2X2) | |
| F | 1A | | N09-6051-05 | TAPTITE SCREW (BIND P 2X5) | |
| G | 2A | | N19-2163-04 | FLAT WASHER | |
| H | 1B | | N39-2020-46 | PAN HEAD MACHINE SCREW | |
| J | 1B | | N09-6108-05 | MACHINE SCREW (M2X3.5) | |
| K | 3B | | N09-6155-05 | SEMS (TAPTITE SCREW) (PT2X6) | |
| DM1 | 3B | | T42-1066-04 | DC MOTOR ASSY (SP) | |
| DM2 | 2B | | T42-1067-04 | DC MOTOR ASSY (LO) | |
| DPU1 | 2B | | X93-2010-00 | OPTICAL PICKUP ASSY | |

| Ref. No. | Add | New | Parts No. | Description | Destination |
|---|---|---|---|---|---|

**E** : KDC-W808 (Europe) **K1** : KDC-X689 (North America)

⚠ Indicates safety critical components.