

4

A

- C

D



<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Polyethylene Bag	CEG1173	15	Unit Box	See Contrast table (2)
2	Remote Control Unit	CXC9115	16	Contain Box	See Contrast table (2)
3	Cord Assy	See Contrast table (2)	17	Protector	YHP5058
4	Cord Assy	YDP5035	18	Protector	YHP5059
* 5	Accessory Assy	YEA5073	19	Case Assy	QXA3129
6	Screw	BPZ20P060FTC	20-1	Caution Card	CRP1387
7	Cord Clamper Assy	CEA4636	20-2	Caution Card	See Contrast table (2)
8	Polyethylene Bag	CEG1160	* 20-3	Warranty Card	See Contrast table (2)
9	Handle	CND3707	20-4	Owner's Manual	See Contrast table (2)
10	Screw Assy	YEA5072	20-5	Installation Manual	See Contrast table (2)
* 11	Polyethylene Bag	CEG-127	21	Microphone Assy	CPM1083
12	Screw	CRZ50P090FTC	* 22	Clip Holder	CZN7912
13	Screw	TRZ50P080FTC	* 23	Cushion	CZN7913
14	Cover	YEG5008			

(2) CONTRAST TABLE


DEH-P610BT/XS/UC and DEH-P6100BT/XS/UC are constructed the same except for the following:

Mark	No.	Description	DEH-P610BT/XS/UC	DEH-P6100BT/XS/UC
*	3	Cord Assy	YDP5026	Not used
	15	Unit Box	YHG5495	YHG5494
	16	Contain Box	YHL5495	YHL5494
	20-2	Caution Card	Not used	CRP1386
	20-3	Warranty Card	CRY1280	CRY1276
	20-4	Owner's Manual	YRD5282	YRD5281
	20-5	Installation Manual	YRD5286	YRD5285

Owner's Manual,Installation Manual

Part No.	Language
YRD5281	English, French, Spanish(Espanol)
YRD5285	English, French, Spanish(Espanol)
YRD5282	English, French, Spanish(Espanol)
YRD5286	English, French, Spanish(Espanol)


9.2 EXTERIOR(1)

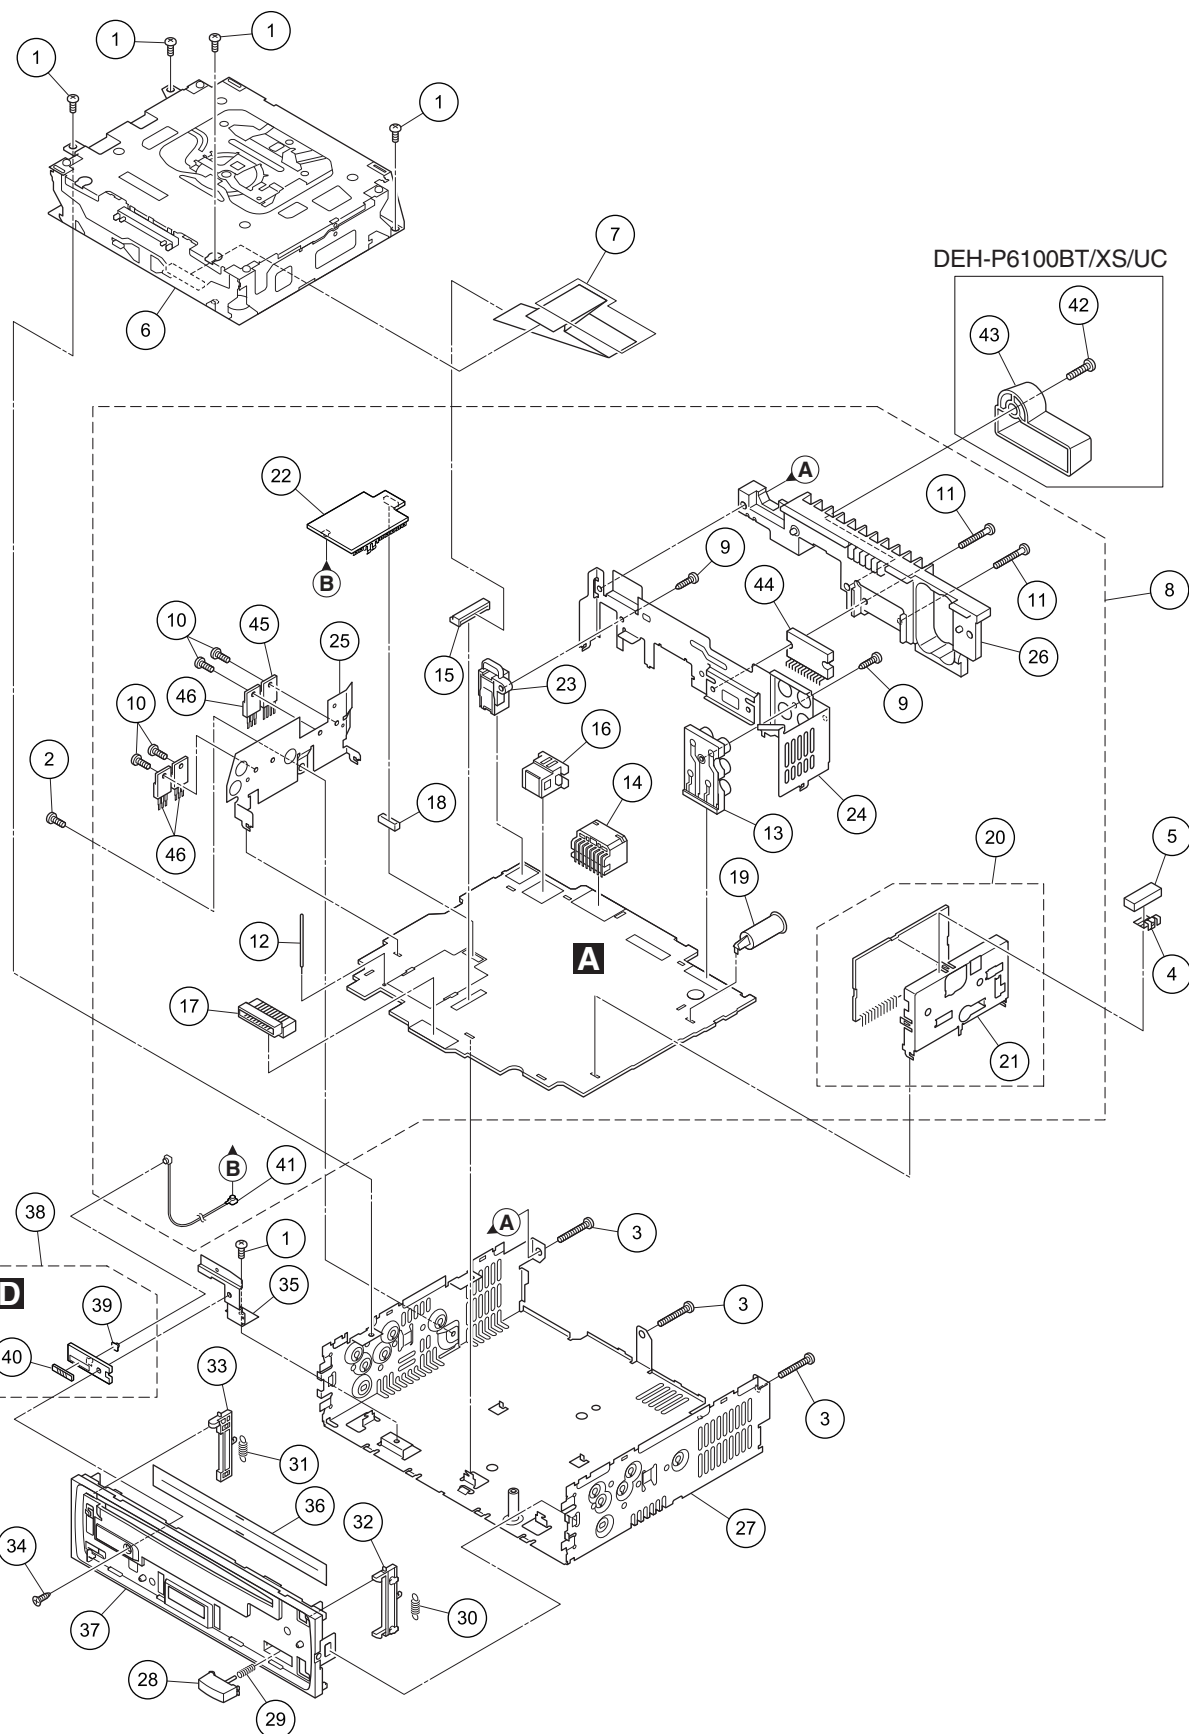

EXTERIOR(1) SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	Screw	BSZ26P060FTC	
2	Screw	BSZ30P060FTC	A
3	Screw	BSZ30P200FTC	
4	Earth Plate	CNC8915	
5	Cushion	CNM8890	
6	CD Mechanism Module(S10.5)	CXK5777	
7	Cable	YDE5046	
8	Tuner Amp Assy(P610BT)	YWM5339	
	Tuner Amp Assy(P6100BT)	YWM5338	
9	Screw	BPZ26P080FTC	
10	Screw	BSZ26P060FTC	B
11	Screw	BSZ26P200FTC	
12	Clamper	CEF1048	
13	Pin Jack(JA301)	XKB7001	
14	Plug(CN981)	CKM1278	
15	Connector(CN701)	CKS3833	
16	Connector(JA101)	CKS5271	
17	Connector(CN801)	CKS6050	
18	Connector(CN551)	CKS6117	
19	Antenna Jack(JA401)	CKX1070	C
20	FM/AM Tuner Unit	CWE2098	
21	Holder	CND4324	
22	Bluetooth Module	CWX3716	
23	Jack(JA151)	YKS5035	
24	Holder	YNC5076	
25	Holder	YNC5077	
26	Heat Sink	YNR5129	
27	Chassis Unit	YXA5601	
28	Button	CAC4836	D
29	Spring	CBH2367	
30	Spring(Silver)	CBH2961	
31	Spring(Black)	CBH2962	
32	Arm	CNV9311	
33	Arm	CNV9312	
34	Screw	CSZ26P060FTB	
35	Holder	YNC5078	
36	Cover	YNN5016	
37	Panel	YNS5501	E
38	Antenna Unit	YWM5398	
39	Connector(CN1501)	CKS5749	
40	Antenna(JA1501)	CTX1108	
41	Cord Assy	YDE5053	
42	Screw(P6100BT)	BMZ40P140FTC	
43	Holder(P6100BT)	CNV7619	
44	IC(IC351)	PA2030A	
45	IC(IC911)	NJM2388F84	F
46	Transistor(Q452, Q751, Q901)	2SD2396	


9.3 EXTERIOR(2)

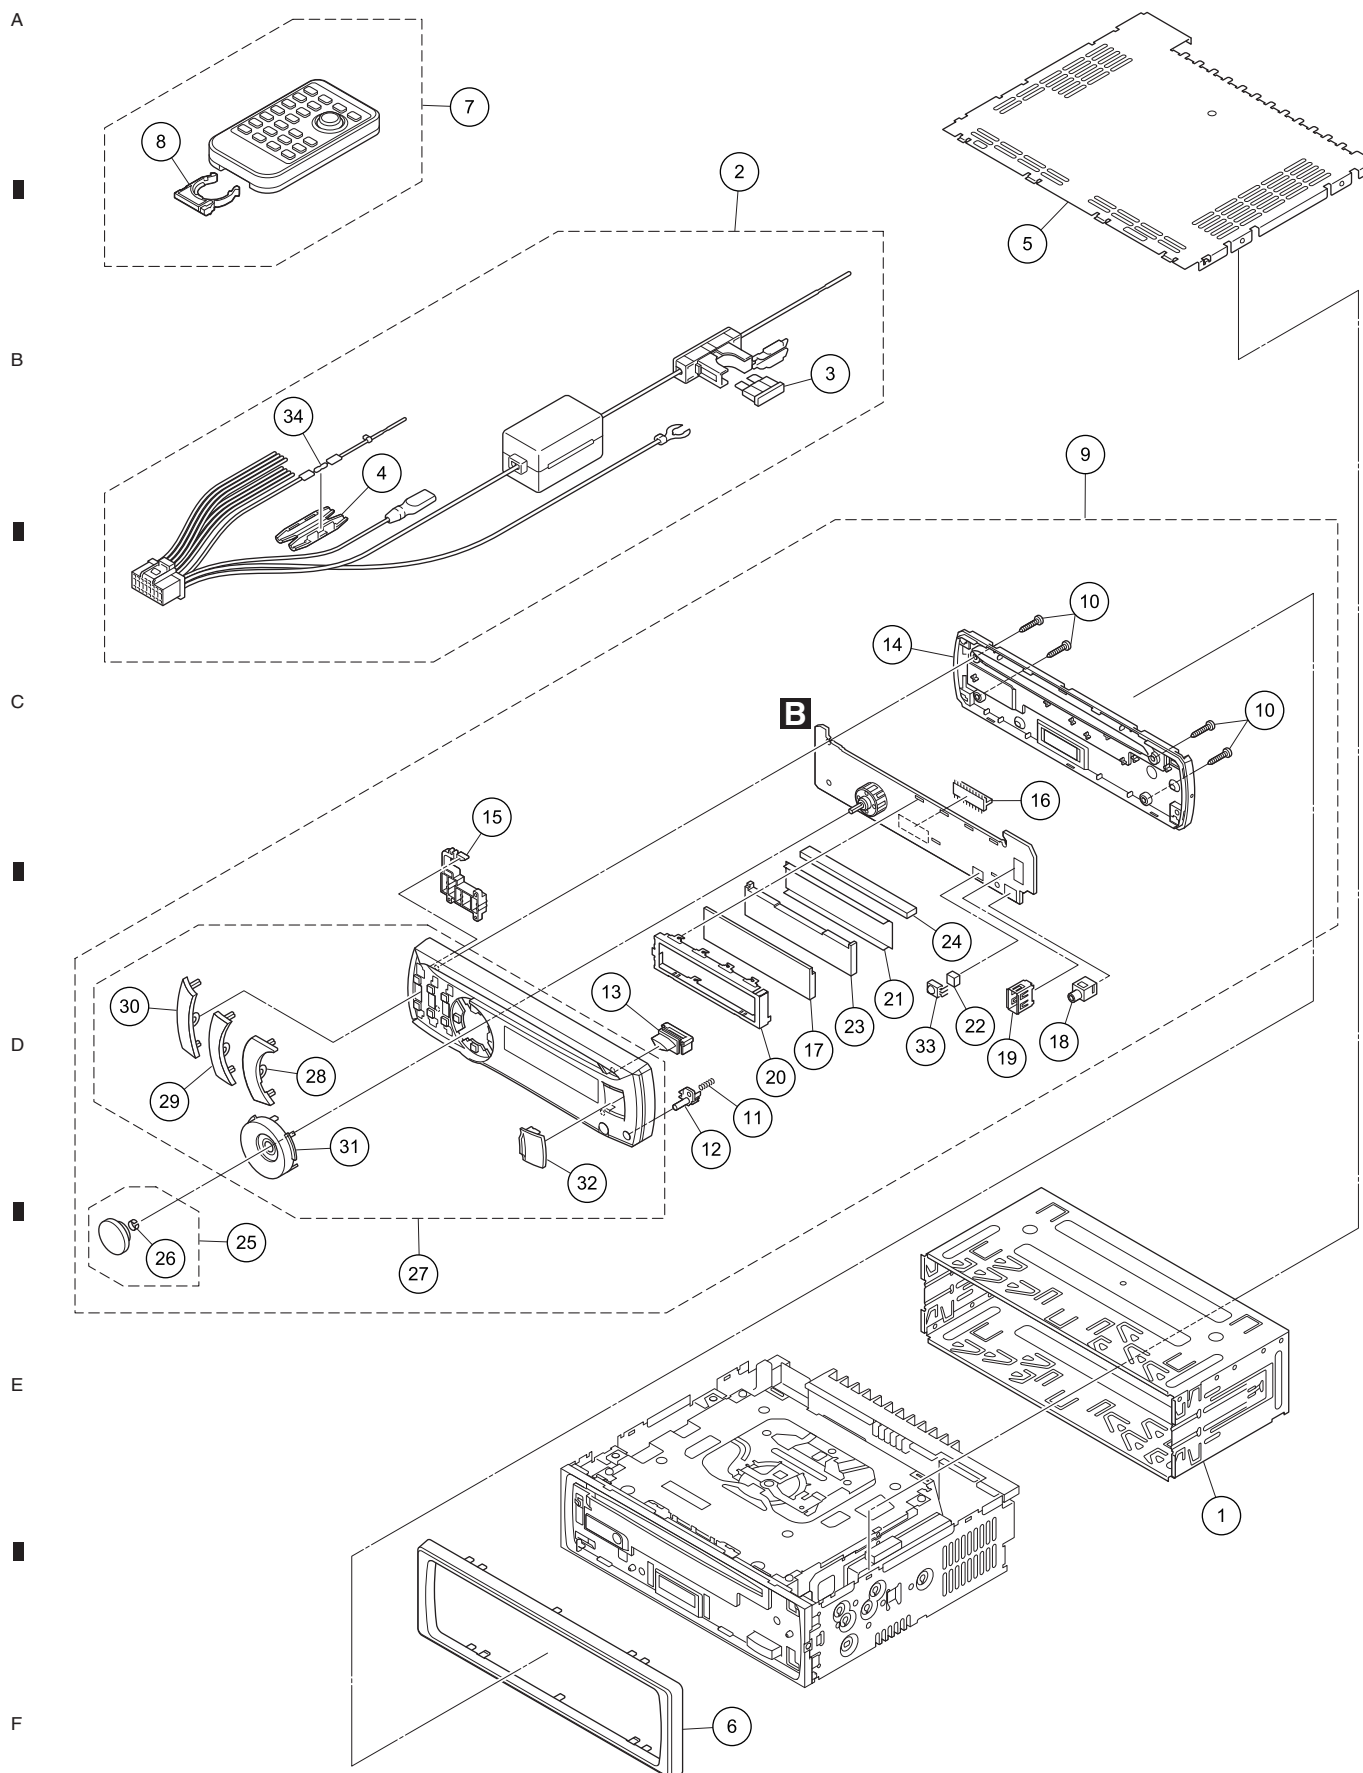

EXTERIOR(2) SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Holder	CND3598
2	Cord Assy	YDP5035
 3	Fuse(10 A)	CEK1136
4	Cap	CNS1472
5	Case	YNB5014
6	Panel	YNS5488
7	Remote Control Unit	CXC9115
8	Cover	CZN5357
9	Detach Grille Assy(P610BT)	YXA5613
	Detach Grille Assy(P6100BT)	YXA5612
10	Screw	BPZ20P100FTB
11	Spring	CBH2210
12	Button(DETACH)	YAC5366
13	Button(EJECT)	YAC5367
14	Cover	YNS5489
15	Holder	YNS5502
16	Connector(CN1101)	CKS6049
17	LCD	YAW5104
18	Jack(JA1102)	YKN5006
19	Connector(CN1103)	YKS5032
20	Holder	YNC5068
21	Sheet	YNM5140
22	Cushion	YNM5148
23	Lighting Conductor	YNV5185
24	Connector	YNV5186
25	Knob Unit(P610BT)	YXA5522
	Knob Unit(P6100BT)	YXA5523
26	Spring	YBL5013
27	Grille Unit(P610BT)	YXA5620
	Grille Unit(P6100BT)	YXA5619
28	Button(BASS/SW, S.Rtrv/SAT MODE)	YAC5373
29	Button(iPod/RDM, CLOCK/DISP OFF)	YAC5372
30	Button(OFF/SRC, ESC/BAND)	YAC5371
31	Button Unit(LIST, PHONE, DISP, MUTE)	YXA5624
32	Door(USB)	YAT5014
33	Remoto IC(IC1102)	GP1UXC14RK
34	Resistor	RS1/2PMF102J

9.4 CD MECHANISM MODULE

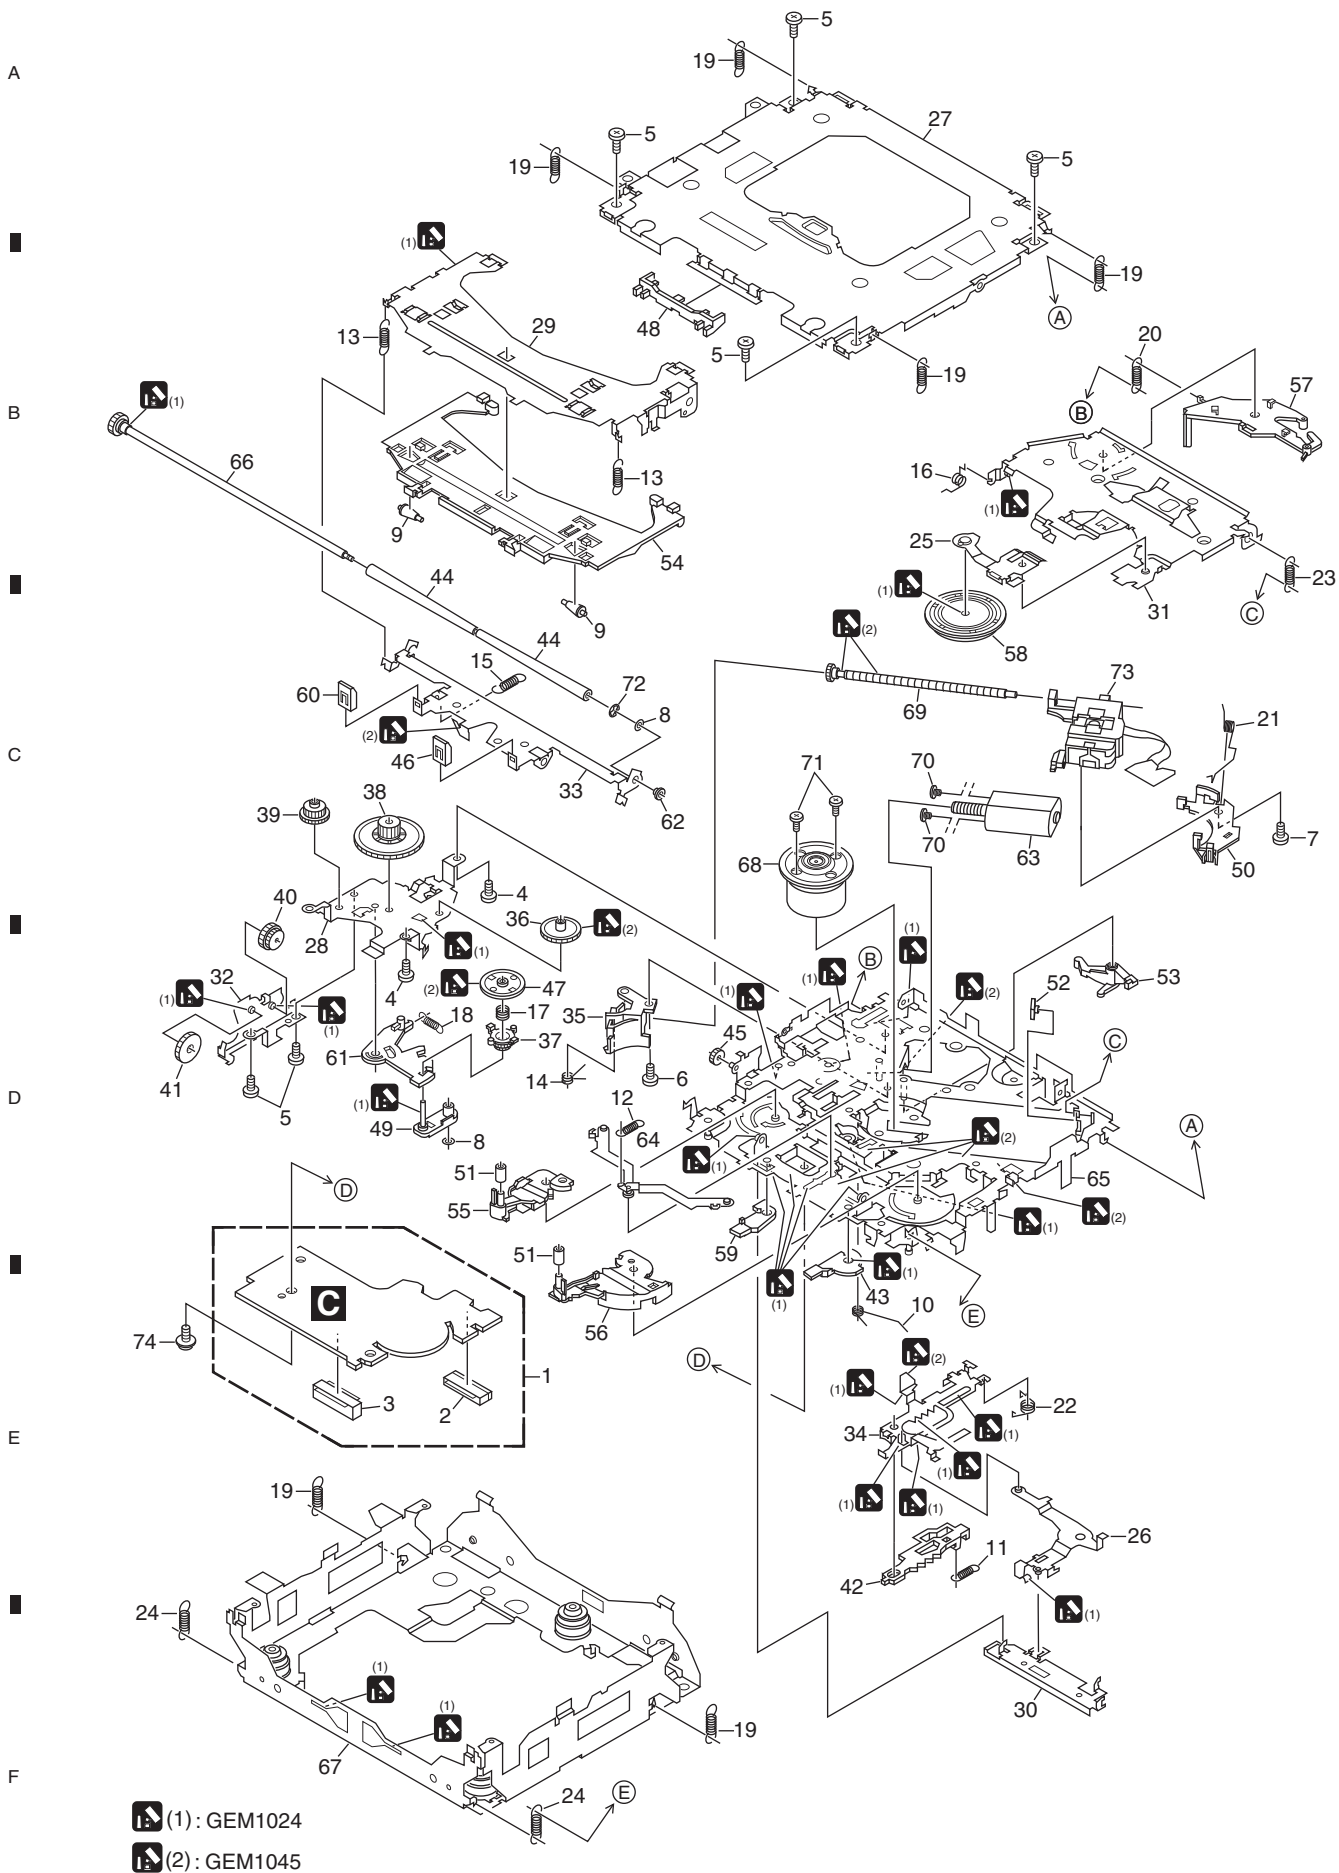

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	CD Core Unit(S10.5COMP2-iPod-C3)	CWX3678	50	Rack	CNV8342	
2	Connector(CN101)	CKS4808	51	Roller	CNV8343	A
3	Connector(CN701)	CKS5854	52	Holder	CNV8344	
4	Screw	BMZ20P025FTC	53	Arm	CNV8345	
5	Screw	BSZ20P040FTC	54	Guide	CNV9498	
6	Screw(M2 x 3)	CBA1511	55	Arm	CNV8348	
7	Screw(M2 x 4)	CBA1835				
8	Washer	CBF1038	56	Arm	CNV8349	
9	Roller	CNV9499	57	Arm	CNV8350	
10	Spring	CBH2609	58	Clamper	CNV8365	
11	Spring	CBH2612	59	Arm	CNV8386	
12	Spring	CBH2614	60	Guide	CNV8396	B
13	Spring	CBH2616	61	Arm	CNV9521	
14	Spring	CBH2617	62	Collar	CNV8447	
15	Spring	CBH2620	63	Motor Unit(M2)	CXC4026	
16	Spring	CBH2855	64	Arm Unit	CXC4027	
17	Spring	CBH2937	65	Chassis Unit	CXC4028	
18	Spring	CBH2735	66	Gear Unit	CXC4029	
19	Spring	CBH2854	67	Frame Unit	CXC4031	
20	Spring	CBH2642	68	Motor Unit(M1)	CXC7134	
21	Spring	CBH2856	69	Screw Unit	CXC6359	C
22	Spring	CBH2857	70	Screw	JFZ20P020FTC	
23	Spring	CBH2860	71	Screw	JGZ17P022FTC	
24	Spring	CBH2861	72	Washer	YE20FTC	
25	Spring	CBL1686	73	Pickup Unit(P10.5)(Service)	CXX1942	
26	Arm	CND1909	74	Screw	IMS26P030FTC	
27	Frame	CND2582				
28	Bracket	CND2583				
29	Arm	CND3831				
30	Lever	CND2585				D
31	Arm	CND2586				
32	Bracket	CND2587				
33	Arm	CND2588				
34	Lever	CND2589				
35	Holder	CNV9522				
36	Gear	CNV7207				
37	Gear	CNV9513				
38	Gear	CNV7209				E
39	Gear	CNV9514				
40	Gear	CNV9515				
41	Gear	CNV9516				
42	Rack	CNV9517				
43	Arm	CNV7216				
44	Roller	CNV8189				
45	Gear	CNV9518				
46	Guide	CNV9519				
47	Gear	CNV7595				F
48	Guide	CNV9520				
49	Arm	CNV7805				

12. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J,RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

Circuit Symbol and No. Part No.
Unit Number : YWM5339(P610BT)
Unit Number : YWM5338(P6100BT)
Unit Name : Tuner Amp Assy
Unit Number : (P610BT)
Unit Number : (P6100BT)
Unit Name : Keyboard Unit
Unit Number : CWX3678
Unit Name : CD Core Unit(S10.5COMP2-iPod-C3)
Unit Number : YWM5398
Unit Name : Antenna Unit

A

Unit Number : YWM5339(P610BT)
Unit Number : YWM5338(P6100BT)
Unit Name : Tuner Amp Assy

MISCELLANEOUS

IC 101	(A,37,123) IC	HA12241FP
IC 201	(A,126,98) IC	PML018A
IC 261	(A,27,38) IC	NJM2360M
IC 351	(A,104,143) IC	PA2030A
IC 431	(A,163,32) IC	NJM2885DL1-33
IC 461	(A,53,88) IC	NJM2885DL1-33
IC 501	(A,84,75) L-MOS And Gate	TC7SET08FUS1
IC 531	(A,59,69) D/A Converter	PCM1753DBQ
IC 541	(A,69,64) IC	NJM4558MD
IC 551	(A,67,84) IC	TC4066BFT
IC 601	(A,130,55) IC	PEG544B8
IC 651	(A,99,39) IC	S-80835CNMC-B8U
IC 701	(A,100,76) IC	NJM2885DL1-33
IC 741	(A,100,31) IC	BD6538G
IC 761	(A,112,15) IC	BD9007F
IC 911	(A,6,124) IC	NJM2388F84
Q 101	(A,44,126) Transistor	UMF23N
Q 201	(A,92,104) Transistor	2SC4081

	Circuit Symbol and No.	Part No.
Q 261	(A,18,54) Transistor	2SD1767
Q 262	(A,13,52) Transistor	RT3T22M
Q 301	(A,140,127) Transistor	IMH23
Q 302	(A,145,133) Transistor	IMH23
Q 303	(A,133,127) Transistor	IMH23
Q 304	(A,120,114) Transistor	RT3T22M
Q 381	(A,129,126) Transistor	2SC4081
Q 382	(A,121,118) Transistor	LTC124EUB
Q 383	(A,130,118) Transistor	LTC114EUB
Q 451	(A,26,78) Transistor	RT3T22M
Q 452	(A,6,74) Transistor	2SD2396
Q 551	(A,71,82) Transistor	RT3T22M
Q 751	(A,6,62) Transistor	2SD2396
Q 752	(A,22,69) Transistor	RT3T22M
Q 821	(A,33,22) Transistor	LTC114EUB
Q 822	(A,27,15) Transistor	LSA1576UB
Q 841	(A,54,19) Transistor	LSA1576UB
Q 842	(A,57,21) Transistor	LTC114EUB
Q 901	(A,6,108) Transistor	2SD2396
Q 902	(A,24,106) Transistor	RT3T22M
Q 921	(A,58,108) Transistor	RT3CLLM
D 201	(A,90,98) Diode	HZU13(B1)
D 261	(A,24,33) Diode	RB551V-30
D 262	(A,17,50) Diode	HZU10(B1)
D 301	(A,124,131) Diode	1SS355
D 381	(A,127,131) Diode	HZU8R2(B3)
D 382	(A,131,122) Diode	MC2848-11
D 383	(A,134,119) Diode(P610BT)	MC2848-11
D 451	(A,35,85) Diode	MPG06G-6415G50
D 452	(A,23,86) Diode	UDZS5R6(B)
D 651	(A,101,34) Diode	1SS355
D 751	(A,13,68) Diode	HZU7R5(B3)
D 761	(A,132,24) Diode	1SR154-400
D 762	(A,104,19) Diode	RB160L-40
D 801	(A,69,17) Diode	RSB6R8F2
D 802	(A,75,17) Diode	MALS068X
D 803	(A,97,11) Diode	RSB6R8F2
D 804	(A,86,17) Diode	RSB6R8F2
D 805	(A,78,17) Diode	RSB6R8F2
D 806	(A,72,17) Diode	MALS068X
D 807	(A,73,17) Diode	MALS068X

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

D 809 (A,74,17) Diode MALS068X

D 811 (A,81,17) Diode MALS068X

D 812 (A,80,17) Diode MALS068X

D 901 (A,20,102) Diode UDZS5R6(B)

D 902 (A,16,106) Diode MPG06G-6415G50

D 921 (A,62,119) Diode UDZS7R5(B)

R 151 (A,79,94)

R 152 (A,79,97)

R 153 (A,71,78)

R 154 (A,69,79)

R 155 (A,16,130)

RS1/16S0R0J

RS1/16S0R0J

RS1/16SS220J

RS1/16SS102J

RS1/16S102J

D 922 (A,57,115) Diode HZU6R8(B2)

D 941 (A,116,130) Diode MPG06G-6415G50

D 942 (A,120,130) Diode MPG06G-6415G50

D 981 (A,70,134) Diode MPG06G-6415G50

D 982 (A,43,133) Diode MPG06G-6415G50

R 156 (A,19,131)

R 157 (A,80,94)

R 158 (A,80,97)

R 159 (A,41,76)

R 201 (A,138,91)

RS1/16S102J

RS1/16S0R0J

RS1/16S0R0J

RS1/16SS102J

RS1/16S102J

L 101 (A,30,123) Inductor LCTC1R0K1608

L 201 (A,96,104) Inductor LCTAW2R2J2520

L 261 (A,17,38) Inductor CTF1660

L 401 (A,155,106) Inductor LCTAW220J2520

L 402 (A,153,96) Chip Coil LCTAW1R0J2520

R 202 (A,122,89)

R 203 (A,118,90)

R 204 (A,115,90)

R 222 (A,90,102)

R 261 (A,20,32)

RS1/16S102J

RS1/16S102J

RS1/16S101J

RS1/16S472J

L 403 (A,155,43) Inductor LCTAW2R2J3225

L 531 (A,63,67) Inductor CTF1379

L 541 (A,76,69) Inductor CTF1379

L 601 (A,118,78) Chip Coil LCTAW100J2520

L 702 (A,83,34) Inductor CTF1713

R 262 (A,12,30)

R 263 (A,14,30)

R 264 (A,25,44)

R 265 (A,28,44)

R 266 (A,14,54)

RS1/16S102J

RS1/16S821J

RS1/10SR821J

RS1/16S1R0J

RS1/16S102J

L 761 (A,112,25) Choke Coil 47 uH CTH1420

L 841 (A,61,21) Chip Coil LCTAW100J2520

X 601 (A,112,56) Crystal 20 MHz VSS1167

S 651 (A,55,11) Switch(RESET) CSG1020

P 301 (A,158,129) Poly Switch RXEF075P

R 301 (A,136,131)

R 303 (A,134,130)

R 304 (A,134,124)

R 305 (A,138,124)

R 306 (A,132,130)

RS1/16SS0R0J

RS1/16SS0R0J

RS1/16S390J

RS1/16SS390J

RS1/16SS223J

P 401 (A,160,115) Surge Protector IMSA-6801-01Y901

BZ601 (A,91,113) Buzzer CPV1062

VA153 (A,11,133) Varistor EZJZ1V270RM

VA154 (A,21,134) Varistor EZJZ1V270RM

VA155 (A,14,133) Varistor EZJZ1V270RM

R 307 (A,130,130)

R 308 (A,144,130)

R 309 (A,145,130)

R 310 (A,149,135)

R 311 (A,141,134)

RS1/16SS223J

RS1/16SS390J

RS1/16SS390J

RS1/16SS223J

RS1/16SS223J

VA156 (A,12,133) Varistor EZJZ1V270RM

VA157 (A,17,133) Varistor EZJZ1V270RM

CN551 (A,45,68) Connector CKS6117

CN701 (A,74,43) Connector CKS3833

D CN801 (A,81,7) Connector CKS6050

R 312 (A,139,124)

R 313 (A,143,126)

R 314 (A,140,131)

R 315 (A,138,131)

R 316 (A,119,117)

RS1/16SS390J

RS1/16SS390J

RS1/16SS223J

RS1/16SS223J

RS1/16SS102J

CN981 (A,59,140) Plug CKM1278

JA101 (A,31,137) Connector CKS5271

JA151 (A,14,142) Jack YKS5035

JA301 (A,144,140) Pin Jack XKB7001

JA401 (A,168,130) Antenna Jack CKX1070

R 317 (A,124,135)

R 351 (A,98,124)

R 352 (A,106,123)

R 353 (A,108,122)

R 354 (A,114,124)

RS1/16S820J

RS1/16S153J

RS1/16SS182J

RS1/16SS182J

RS1/16SS182J

FM/AM Tuner Unit

CWE2098

R 355 (A,110,123)

R 356 (A,105,126)

R 357 (A,108,126)

R 358 (A,113,126)

R 359 (A,111,126)

RS1/16SS182J

RS1/16SS272J

RS1/16SS272J

RS1/16SS272J

RS1/16SS272J

RESISTORS

R 101 (A,26,127) RS1/16SS181J

R 102 (A,32,127) RS1/16SS181J

R 103 (A,28,127) RS1/16SS102J

R 104 (A,29,127) RS1/16SS102J

R 105 (A,30,127) RS1/16SS223J

R 381 (A,128,129)

R 382 (A,132,124)

R 383 (A,127,128)

R 384 (A,131,118)

R 385 (A,127,117)

RS1/16SS473J

RS1/16SS473J

RS1/16SS104J

RS1/16SS472J

RS1/16SS103J

R 106 (A,41,127) RS1/16SS222J

R 107 (A,38,127) RS1/16SS150J

R 108 (A,39,127) RS1/16SS470J

R 109 (A,44,122) RS1/16SS101J

R 110 (A,34,127) RS1/16SS101J

R 386 (A,124,118)

R 387 (A,127,118)

R 388 (A,127,120)

R 389 (A,133,117) (P6100BT)

R 413 (A,155,81)

R 415 (A,155,85)

RS1/16SS103J

RS1/16SS331J

RS1/16SS101J

RS1/16SS0R0J

RS1/16S681J

RS1/16S681J

R 111 (A,37,127) RS1/16SS101J

R 112 (A,34,119) RS1/16SS102J

R 113 (A,42,127) RS1/16SS562J

R 114 (A,46,126) RS1/16S332J

R 115 (A,27,127) RS1/16SS223J

R 416 (A,155,86)

R 417 (A,155,88)

R 418 (A,155,89)

R 419 (A,155,91)

RS1/16S681J

RS1/16S681J

RS1/16S681J

RS1/16S681J

1

2

3

4

5		6		7		8	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
R 451	(A,26,74)	RS1/16S392J		R 704	(A,90,48)	RS1/16S221J	
R 452	(A,23,77)	RS1/4SA0R0J		R 705	(A,94,48)	RS1/16S221J	
R 453	(A,28,78)	RS1/16S103J		R 706	(A,98,48)	RS1/16S221J	A
R 454	(A,27,74)	RS1/16S223J		R 707	(A,96,46)	RS1/16S221J	
R 501	(A,80,75)	RS1/16SS681J		R 708	(A,90,49)	RS1/16S221J	
R 502	(A,86,74)	RS1/16SS681J		R 709	(A,104,56)	RS1/16S102J	
				R 712	(A,87,33)	RS1/16S120J	
R 504	(A,84,77)	RS1/16S0R0J					
R 522	(A,80,69)	RS1/16S182J		R 713	(A,88,34)	RS1/16S120J	
R 524	(A,84,71)	RS1/16SS182J		R 714	(A,67,49)	RS1/16SS682J	
R 525	(A,84,72)	RS1/16SS332J		R 715	(A,67,50)	RS1/16SS682J	
R 527	(A,81,71)	RS1/16S332J		R 716	(A,67,51)	RS1/16SS682J	
				R 717	(A,67,52)	RS1/16SS682J	
R 532	(A,54,70)	RS1/16S101J					
R 533	(A,54,67)	RS1/16SS101J		R 741	(A,96,33)	RS1/16S104J	
R 534	(A,54,68)	RS1/16SS101J		R 742	(A,105,31)	RS1/10SR471J	B
R 535	(A,54,69)	RS1/16SS101J		R 743	(A,116,42)	RS1/16S102J	
R 541	(A,68,59)	RS1/16S103J		R 751	(A,26,68)	RS1/4SA102J	
				R 762	(A,102,16)	RS1/16S4702D	
R 542	(A,64,60)	RS1/16SS103J					
R 543	(A,66,63)	RS1/16SS473J		R 763	(A,102,13)	RS1/16S6801F	
R 544	(A,66,64)	RS1/16SS473J		R 764	(A,100,17)	RS1/16S1002D	
R 545	(A,74,66)	RS1/16S103J		R 765	(A,105,15)	RS1/16S393J	
R 546	(A,73,65)	RS1/16S103J		R 766	(A,118,13)	RS1/16S473J	
				R 767	(A,118,14)	RS1/16S392J	
R 547	(A,65,67)	RS1/16SS103J					
R 548	(A,71,68)	RS1/16SS103J		R 768	(A,112,35)	RS1/16S0R0J	
R 553	(A,71,84)	RS1/16SS104J		R 801	(A,128,73)	RS1/16SS102J	
R 556	(A,71,80)	RS1/16SS104J		R 802	(A,124,38)	RS1/16S222J	C
R 557	(A,62,80)	RS1/16SS151J		R 803	(A,128,39)	RS1/16SS222J	
				R 804	(A,129,39)	RS1/16SS222J	
R 558	(A,42,74)	RS1/16S0R0J					
R 560	(A,71,85)	RS1/16SS105J		R 805	(A,122,38)	RS1/16S222J	
R 601	(A,138,40) (P610BT)	RS1/16S104J		R 806	(A,112,44)	RS1/16S222J	
R 603	(A,100,113)	RS1/16S102J		R 807	(A,137,45)	RS1/16S222J	
R 605	(A,126,43)	RS1/16S104J		R 811	(A,130,73)	RS1/16S183J	
				R 812	(A,110,38)	RS1/16S473J	
R 606	(A,120,41)	RS1/16S101J					
R 607	(A,122,43)	RS1/16S472J		R 813	(A,120,36)	RS1/16S104J	
R 609	(A,121,45)	RS1/16S472J		R 814	(A,120,35)	RS1/16S104J	
R 610	(A,139,38) (P6100BT)	RS1/16S104J		R 815	(A,136,81)	RS1/16S104J	
R 612	(A,118,55)	RS1/16SS473J		R 816	(A,143,64)	RS1/16SS102J	D
R 613	(A,141,56)	RS1/16SS681J		R 819	(A,128,34)	RS1/16S104J	
R 614	(A,117,60)	RS1/16S681J		R 821	(A,26,19)	RS1/4SA472J	
R 619	(A,116,67)	RS1/16S104J		R 822	(A,25,15)	RS1/16S103J	
R 620	(A,142,66)	RS1/16S104J		R 823	(A,53,16)	RS1/16S1R0J	
R 621	(A,142,67)	RS1/16S104J		R 841	(A,54,22)	RS1/16S102J	
R 622	(A,122,67)	RS1/16SS0R0J		R 842	(A,51,22)	RS1/16S473J	
R 623	(A,128,70)	RS1/16S103J		R 901	(A,22,104)	RS1/16S333J	
R 624	(A,131,67)	RS1/16S473J		R 902	(A,23,101)	RS1/16S821J	
R 626	(A,140,53)	RS1/16SS103J		R 903	(A,25,103)	RS1/16S821J	
R 627	(A,114,44)	RS1/16S222J		R 912	(A,11,116)	RS1/16S473J	
R 628	(A,116,65)	RS1/16S472J		R 921	(A,59,111)	RS1/16S104J	E
R 631	(A,130,43)	RS1/16S103J		R 922	(A,60,114)	RS1/16S103J	
R 633	(A,134,44)	RS1/16SS681J		R 923	(A,62,116)	RS1/16S473J	
R 634	(A,135,44)	RS1/16SS681J		R 924	(A,59,116)	RS1/16S223J	
R 635	(A,136,44)	RS1/16SS681J		R 925	(A,59,119)	RS1/16S472J	
R 636	(A,142,49)	RS1/16SS681J					
R 637	(A,142,50)	RS1/16SS681J		CAPACITORS			
R 638	(A,143,51)	RS1/16SS681J		C 103	(A,24,127)	CKSRYB104K16	
R 639	(A,127,43)	RS1/16S473J		C 106	(A,32,122)	CKSSYB104K16	
R 641	(A,138,81)	RS1/16S104J		C 151	(A,77,82)	CEJQ330M16	
R 651	(A,98,36)	RS1/16S183J		C 202	(A,126,88)	CKSRYB105K10	F
				C 203	(A,128,89)	CKSRYB105K10	
R 652	(A,94,39)	RS1/16S102J					
R 702	(A,104,53)	RS1/16S104J		C 206	(A,131,107)	CKSRYB224K10	
R 703	(A,94,50)	RS1/16S473J					

	1	2	3	4
	<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
A	C 207 (A,133,107)	CKSRYB224K10	C 465 (A,45,92)	CKSRYB103K50
	C 210 (A,131,88)	CKSRYB105K10	C 466 (A,52,93)	CKSYB475K16
	C 211 (A,134,88)	CKSRYB105K10	C 501 (A,86,77)	CKSSYB104K10
	C 212 (A,102,103)	CEJQ470M16	C 531 (A,57,75)	CEJQ100M25
	C 213 (A,98,103)	CKSRYB105K10	C 533 (A,63,69)	CKSSYB102K50
	C 214 (A,102,90)	CKSRYB104K16	C 534 (A,66,73)	CEJQ100M25
	C 215 (A,126,109)	CEJQ100M25	C 535 (A,64,62)	CKSRYB105K10
	C 216 (A,113,105)	CEJQ4R7M25	C 536 (A,65,66)	CKSRYB105K10
	C 217 (A,137,94)	CKSRYB105K10	C 541 (A,66,60)	CCSRCH391J50
	C 218 (A,139,94)	CKSRYB105K10	C 542 (A,73,61)	CCSRCH221J50
B	C 219 (A,138,94)	CKSRYB105K10	C 543 (A,71,73)	CEJQ100M25
	C 220 (A,107,93)	CEJQ470M16	C 544 (A,74,69)	CKSRYB105K10
	C 222 (A,92,100)	CKSRYB104K16	C 545 (A,73,68)	CCSRCH221J50
	C 223 (A,118,104)	CCSRCH100D50	C 546 (A,68,69)	CCSRCH391J50
	C 224 (A,125,104)	CCSRCH100D50	C 551 (A,64,81)	CKSSYB104K10
	C 227 (A,118,106)	CKSRYB105K16	C 553 (A,63,87)	CKSSYB104K10
	C 228 (A,126,106)	CKSRYB105K10	C 555 (A,41,72)	CKSSYB104K10
	C 262 (A,18,30)	CCSRCH101J50	C 557 (A,67,79)	CKSSYB104K10
	C 263 (A,25,28)	CEJQ470M16	C 601 (A,132,34)	CCSRCH470J50
	C 264 (A,25,23) 4.7 uF	CCG1111	C 602 (A,142,53)	CKSQYB475K10
	C 265 (A,28,33)	CCSRCH331J50	C 603 (A,116,54)	CCSRCH100D50
	C 266 (A,25,52)	CEJQ101M16	C 605 (A,116,60)	CCSRCH100D50
	C 267 (A,28,46)	CKSRYB104K16	C 606 (A,126,77)	CEJQ4R7M25
	C 269 (A,17,49)	CKSRYB104K16	C 607 (A,122,76)	CKSRYB103K50
	C 301 (A,145,109)	CEJQ100M25	C 609 (A,126,71)	CKSRYB474K10
C	C 302 (A,139,120)	CEJQ100M25	C 610 (A,126,69)	CKSRYB474K10
	C 305 (A,137,115)	CEJQ100M25	C 611 (A,130,70)	CKSRYB102K50
	C 306 (A,159,120)	CEJQ100M25	C 615 (A,136,38)	CCSRCH470J50
	C 309 (A,146,120)	CEJQ100M25	C 651 (A,95,36)	CKSRYB105K10
	C 310 (A,144,115)	CEJQ100M25	C 702 (A,86,56)	CKSRYB104K16
	C 313 (A,114,111)	CEJQ220M16	C 704 (A,93,64)	CEJQ220M16
	C 351 (A,108,128)	CKSRYB474K10	C 705 (A,95,81)	CKSRYB103K50
	C 352 (A,106,128)	CKSRYB474K10	C 706 (A,104,81)	CKSRYB474K10
	C 353 (A,113,128)	CKSRYB474K10	C 741 (A,96,31)	CKSRYB105K10
	C 354 (A,111,128)	CKSRYB474K10	C 742 (A,104,31)	CKSRYB105K10
D	C 355 (A,108,131)	CKSQYB474K25	C 745 (A,66,37)	CKSRYB103K50
	C 356 (A,111,131)	CKSQYB474K25	C 751 (A,19,63)	CEJQ101M10
	C 357 (A,113,131)	CKSQYB474K25	C 753 (A,12,58)	CKSRYB102K50
	C 358 (A,106,131)	CKSQYB474K25	C 754 (A,12,68)	CKSRYB473K16
	C 359 (A,121,135)	CKSQYB225K10	C 762 (A,102,25) 150 uF/6.3 V	CCH1804
	C 360 (A,121,137)	CKSQYB225K10	C 763 (A,72,25)	CEJQ221M16
	C 363 (A,98,147)	CKSRYB104K16	C 764 (A,118,17)	CKSQYB225K16
	C 364 (A,81,127) 3 300 uF/16 V	CCH1486	C 765 (A,105,13)	CKSRYB153K50
	C 368 (A,97,120)	CKSYB106K10	C 766 (A,107,14)	CCSRCH330J50
	C 382 (A,114,117)	CEJQ330M16	C 768 (A,122,22)	CEJQ221M16
E	C 412 (A,146,41)	CKSRYB103K50	C 769 (A,114,38)	CCSRCH470J50
	C 413 (A,154,69)	CKSRYB102K50	C 770 (A,87,25)	CKSYB475K16
	C 414 (A,150,44)	CEJQ470M10	C 805 (A,130,72)	CKSRYB102K50
	C 416 (A,149,97)	CKSRYB103K50	C 807 (A,84,17)	CKSRYB104K16
	C 417 (A,149,101)	CEJQ101M10	C 810 (A,82,17)	CKSRYB104K16
	C 419 (A,155,76)	CCSRCH101J50	C 821 (A,52,19)	CKSRYB104K16
	C 431 (A,152,27)	CEJQ470M10	C 842 (A,61,19)	CKSRYB102K50
	C 432 (A,148,28)	CKSRYB103K50	C 901 (A,30,104)	CEJQ101M16
	C 433 (A,158,37)	CKSRYB103K50	C 902 (A,26,101)	CKSRYB104K16
	C 434 (A,152,36)	CEJQ4R7M25	C 903 (A,18,102)	CKSRYB103K50
F	C 451 (A,17,73)	CEHAS101M10	C 904 (A,19,95) 2 200 uF/16 V	CCH1405
	C 452 (A,26,80)	CKSRYB103K50	C 911 (A,17,112)	CEHAS101M10
	C 454 (A,17,84) 470 uF/16 V	CCH1331	C 912 (A,11,118)	CKSRYB103K50
	C 463 (A,47,80)	CEJQ220M16	C 913 (A,17,120) 100 uF/25 V	CCH1316
	C 464 (A,49,84)	CKSRYB103K50	C 921 (A,59,120)	CKSRYB104K16

5	6
<u>Circuit Symbol and No.</u>	<u>Part No.</u>
C 942 (A,118,136)	CKSRYB473K25

B

Unit Number :

Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1101 (B,106,18) IC	PD6538A
IC 1102 (A,122,8) Remote IC	GP1UXC14RK
Q 1101 (B,78,22) Transistor	LTC114EUB
Q 1102 (B,72,26) Transistor	LTC114EUB
Q 1103 (B,22,8) Transistor	LTC114EUB
Q 1106 (B,18,33) Chip Transistor	2SD2114K
D 1103 (A,76,8) LED	CL-197HB1-D(CDE)
D 1104 (A,86,8) LED	CL-197HB1-D(CDE)
D 1105 (B,138,18) Diode	MALS068X
D 1106 (B,141,16) Diode	MALS068X
D 1107 (B,143,18) Diode	MALS068X
D 1108 (B,142,25) Diode	MALS068X
D 1109 (B,141,28) Diode	MALS068X
D 1110 (A,66,23) White LED	NESW505C-5273
D 1131 (A,33,11) LED	CL-197HB1-D(CDE)
D 1132 (A,7,10) LED	CL-197HB1-D(CDE)
D 1133 (A,8,33) LED	CL-197HB1-D(CDE)
D 1134 (A,18,30) LED	CL-197HB1-D(CDE)
D 1135 (A,43,11) LED	CL-197HB1-D(CDE)
D 1136 (A,33,31) LED	CL-197HB1-D(CDE)
D 1137 (A,57,28) LED	CL-197HB1-D(CDE)
D 1138 (A,43,28) LED	CL-197HB1-D(CDE)
D 1139 (A,57,11) LED	CL-197HB1-D(CDE)
D 1140 (A,148,41) LED	CL-197HB1-D(CDE)
D 1141 (A,21,10) LED	CL-197HB1-D(CDE)
X 1101 (B,120,10) Ceramic Resonator 5.00 MHz	CSS1731
S 1101 (A,39,30) Push Switch	CSG1155
S 1102 (A,20,34) Push Switch	CSG1155
S 1103 (A,32,33) Push Switch	CSG1155
S 1104 (A,32,8) Push Switch	CSG1155
S 1105 (A,8,6) Push Switch	CSG1155
S 1106 (A,20,7) Push Switch	CSG1155
S 1107 (A,61,9) Push Switch	CSG1155
S 1108 (A,147,38) Push Switch	CSG1155
S 1109 (A,39,9) Push Switch	CSG1155
S 1110 (A,8,38) Push Switch	CSG1155
S 1111 (A,61,30) Push Switch	CSG1155
S 1112 (A,50,19) Switch(MULTI-CONTROL)	CSX1120
VA1101 (B,88,19) Varistor	EZJZ1V270RM
VA1102 (B,87,19) Varistor	EZJZ1V270RM
CN1101 (B,74,10) Connector	CKS6049
CN1103 (A,151,25) Connector	YKS5032
JA1102 (A,146,7) Jack	YKN5006
LCD	YAW5104

RESISTORS

R 1101 (B,124,17)	RS1/16S2R2J
R 1103 (B,123,20)	RS1/16S101J
R 1104 (B,67,23)	RS1/16S681J
R 1105 (B,69,23)	RS1/16S681J
R 1113 (B,39,30)	RS1/4SA152J
R 1114 (B,5,35)	RS1/4SA152J

7	8
<u>Circuit Symbol and No.</u>	<u>Part No.</u>
R 1115 (B,36,13)	RS1/4SA152J
R 1116 (B,63,27)	RS1/4SA152J
R 1117 (B,33,7)	RS1/4SA152J
R 1118 (B,29,8)	RS1/16S391J
R 1120 (B,67,27)	RS1/4SA821J
R 1124 (B,21,32)	RS1/16S103J
R 1125 (B,22,11)	RS1/16S103J
R 1126 (B,84,18)	RS1/16S102J
R 1127 (B,92,19)	RS1/16S102J
R 1128 (B,81,19)	RS1/16S102J
R 1129 (B,65,20)	RS1/16S102J
R 1130 (B,41,9)	RS1/16S682J
R 1131 (B,39,8)	RS1/16S272J
R 1133 (B,64,22)	RS1/16S103J
R 1134 (B,42,30)	RS1/16S473J
R 1135 (B,39,11)	RS1/16S153J
R 1136 (B,134,19)	RS1/16S101J
R 1137 (B,143,21)	RS1/16S101J
R 1138 (B,110,8)	RS1/16S222J
R 1142 (B,141,21)	RS1/16S223J
R 1143 (B,141,19)	RS1/16S223J

CAPACITORS

C 1101 (B,140,21)	CKSRYB472K50
C 1102 (B,141,17)	CKSRYB472K50
C 1105 (B,120,15)	CKSRYB104K16
C 1106 (B,121,18)	CKSRYB103K50
C 1107 (B,121,17)	CKSRYB103K50
C 1108 (B,126,19)	CKSQYB106K6R3

C

Unit Number : CWX3678

Unit Name : CD Core Unit(\$10.5COMP2-iPod-C3)

MISCELLANEOUS

IC 201 (A,35,46) IC	PE5661A
IC 205 (B,24,49) IC	341S2162
IC 301 (A,28,15) IC	BA5839FP
Q 101 (B,58,69) Transistor	2SA1577
Q 102 (B,48,58) Chip Transistor	2SB1689
Q 201 (B,27,54) Transistor	2SA1577
X 201 (A,22,37) Ceramic Resonator 16.934 MHz	CSS1603
X 205 (B,33,63) Oscillator 48.000 MHz	CSS1753
S 901 (A,55,37) Switch(HOME)	CSN1067
S 903 (B,19,58) Switch(DSCSNS)	CSN1067
S 904 (B,40,68) Switch(12EJ)	CSN1068
S 905 (B,25,69) Switch(8EJ)	CSN1068

RESISTORS

R 101 (B,61,74)	RS1/10SR2R4J
R 102 (B,61,72)	RS1/10SR2R4J
R 103 (B,61,71)	RS1/10SR2R7J
R 104 (B,53,66)	RS1/16SS222J
R 105 (B,44,57)	RS1/16SS102J
R 107 (B,52,60)	RS1/16SS105J
R 202 (A,27,32)	RS1/16SS473J
R 203 (A,51,44)	RS1/16S473J
R 204 (A,23,58)	RS1/16SS221J

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

R 206	(B,10,26)	RS1/16SS104J
R 209	(B,18,52)	RS1/16SS103J
R 210	(B,10,23)	RS1/16SS102J
R 214	(B,49,50)	RS1/16SS472J
R 216	(B,48,49)	RS1/16SS472J
R 221	(A,51,48)	RS1/16SS103J
R 222	(A,51,46)	RS1/16SS103J
R 223	(B,13,43)	RS1/16SS473J
R 225	(A,50,50)	RS1/16SS103J
R 226	(A,50,51)	RS1/16SS393J
R 227	(B,47,51)	RS1/16SS562J
R 228	(B,44,51)	RS1/16SS122J
R 229	(B,46,53)	RS1/16SS472J
R 230	(B,21,25)	RS1/16SS0R0J
R 232	(B,45,51)	RS1/16SS122J
R 233	(B,26,59)	RS1/16SS103J
R 234	(B,22,26)	RS1/16SS473J
R 235	(A,26,59)	RS1/16SS473J
R 237	(A,24,35)	RS1/16SS151J
R 240	(B,14,26)	RS1/16S473J
R 241	(B,13,25)	RS1/16SS103J
R 244	(B,22,55)	RS1/16SS473J
R 249	(B,14,50)	RS1/16SS103J
R 250	(B,19,50)	RS1/16SS101J
R 252	(B,18,47)	RS1/16SS101J
R 254	(A,25,64)	RS1/16SS104J
R 255	(A,26,63)	RS1/16SS104J
R 256	(A,25,62)	RS1/16SS104J
R 259	(A,27,66)	RS1/16SS0R0J
R 261	(A,26,65)	RS1/16SS104J
R 262	(A,29,59)	RS1/16SS0R0J
R 263	(A,27,63)	RS1/16SS0R0J
R 273	(B,18,48)	RS1/16SS103J
R 277	(B,18,50)	RS1/16SS103J
R 282	(A,30,61)	RS1/16SS120J
R 283	(A,29,61)	RS1/16SS120J
R 284	(B,29,63)	RS1/16SS153J
R 285	(B,28,63)	RS1/16SS153J
R 291	(B,42,62)	RS1/16SS272J
R 292	(B,24,43)	RS1/16SS272J
R 293	(B,27,52)	RS1/16SS472J
R 294	(A,31,62)	RS1/16SS471J
R 307	(A,35,19)	RS1/16SS183J
R 308	(A,37,19)	RS1/16SS183J
R 309	(A,35,21)	RS1/16SS183J
R 310	(A,37,22)	RS1/16SS183J
R 601	(B,30,31)	RS1/16SS0R0J
R 602	(B,27,31)	RS1/16SS0R0J
R 606	(B,28,23)	RS1/16S0R0J
R 701	(B,11,37)	RS1/16SS221J
R 702	(A,23,56)	RS1/16SS221J
R 708	(B,15,37)	RS1/16S0R0J
R 712	(B,14,54)	RS1/16SS0R0J
R 713	(B,14,53)	RS1/16SS0R0J

CAPACITORS

C 106	(B,56,67)	CKSQYB475K10
C 202	(A,28,57)	CKSSYB104K10
C 204	(A,23,59)	CKSSYB103K16

C 205	(B,27,41)	CKSQYB475K10
C 206	(A,23,40)	CKSSYB104K10
C 207	(A,24,37)	CKSRYB104K16
C 209	(B,35,34)	CEVW220M6R3
C 210	(B,29,37)	CKSSYB104K10
C 211	(A,28,35)	CKSSYB104K10
C 212	(A,28,30)	CKSRYB104K16
C 213	(A,46,39)	CKSSYB104K10
C 214	(A,29,33)	CKSSYB104K10
C 216	(A,51,52)	CKSSYB332K50
C 217	(A,48,51)	CKSSYB104K10
C 218	(A,50,52)	CKSSYB473K10
C 219	(A,47,53)	CKSSYB104K10
C 220	(A,48,53)	CKSSYB182K50
C 221	(A,46,54)	CKSSYB104K10
C 222	(B,45,53)	CCSSCH560J50
C 223	(B,47,53)	CCSSCH4R0C50
C 224	(A,44,55)	CKSSYB104K10
C 226	(A,42,59)	CCSSCH680J50
C 227	(A,42,61)	CCSSCH470J50
C 228	(B,41,61)	CKSSYB103K16
C 229	(B,48,60)	CKSSYB104K10
C 236	(A,49,58)	CKSSYB104K10
C 239	(B,46,51)	CCSSCH220J50
C 240	(A,38,61)	CKSSYB104K10
C 243	(B,22,41)	CKSQYB475K10
C 250	(A,52,48)	CKSSYB102K50
C 251	(A,52,46)	CKSSYB102K50
C 260	(A,28,61)	CKSSYB104K10
C 261	(B,33,66)	CCSSCH8R0D50
C 262	(B,31,66)	CCSSCH8R0D50
C 290	(B,26,45)	CKSSYB104K10
C 293	(B,43,61)	CKSSYB102K50
C 294	(B,24,41)	CKSSYB104K10
C 303	(A,36,19)	CKSSYB472K25
C 304	(A,36,21)	CKSSYB223K16
C 307	(A,22,11)	CKSRYB104K16
C 308	(B,11,18)	CKSRYB105K10
C 703	(B,14,35)	CCSSCH101J50
C 704	(B,11,36)	CKSSYB102K50
C 711	(A,31,25)	CKSSYB104K10

**Unit Number : YWM5398****Unit Name : Antenna Unit****MISCELLANEOUS**

CN1501	(A,16,4) Connector	CKS5749
JA1501	(B,9,9) Antenna	CTX1108

Miscellaneous Parts List

M 1	Pickup Unit(P10.5)(Service)	CXX1942
M 2	Motor Unit(SPINDLE)	CXC7134
	Motor Unit(LOADING/CARRIAGE)	CXC4026