



EXPLODED VIEW

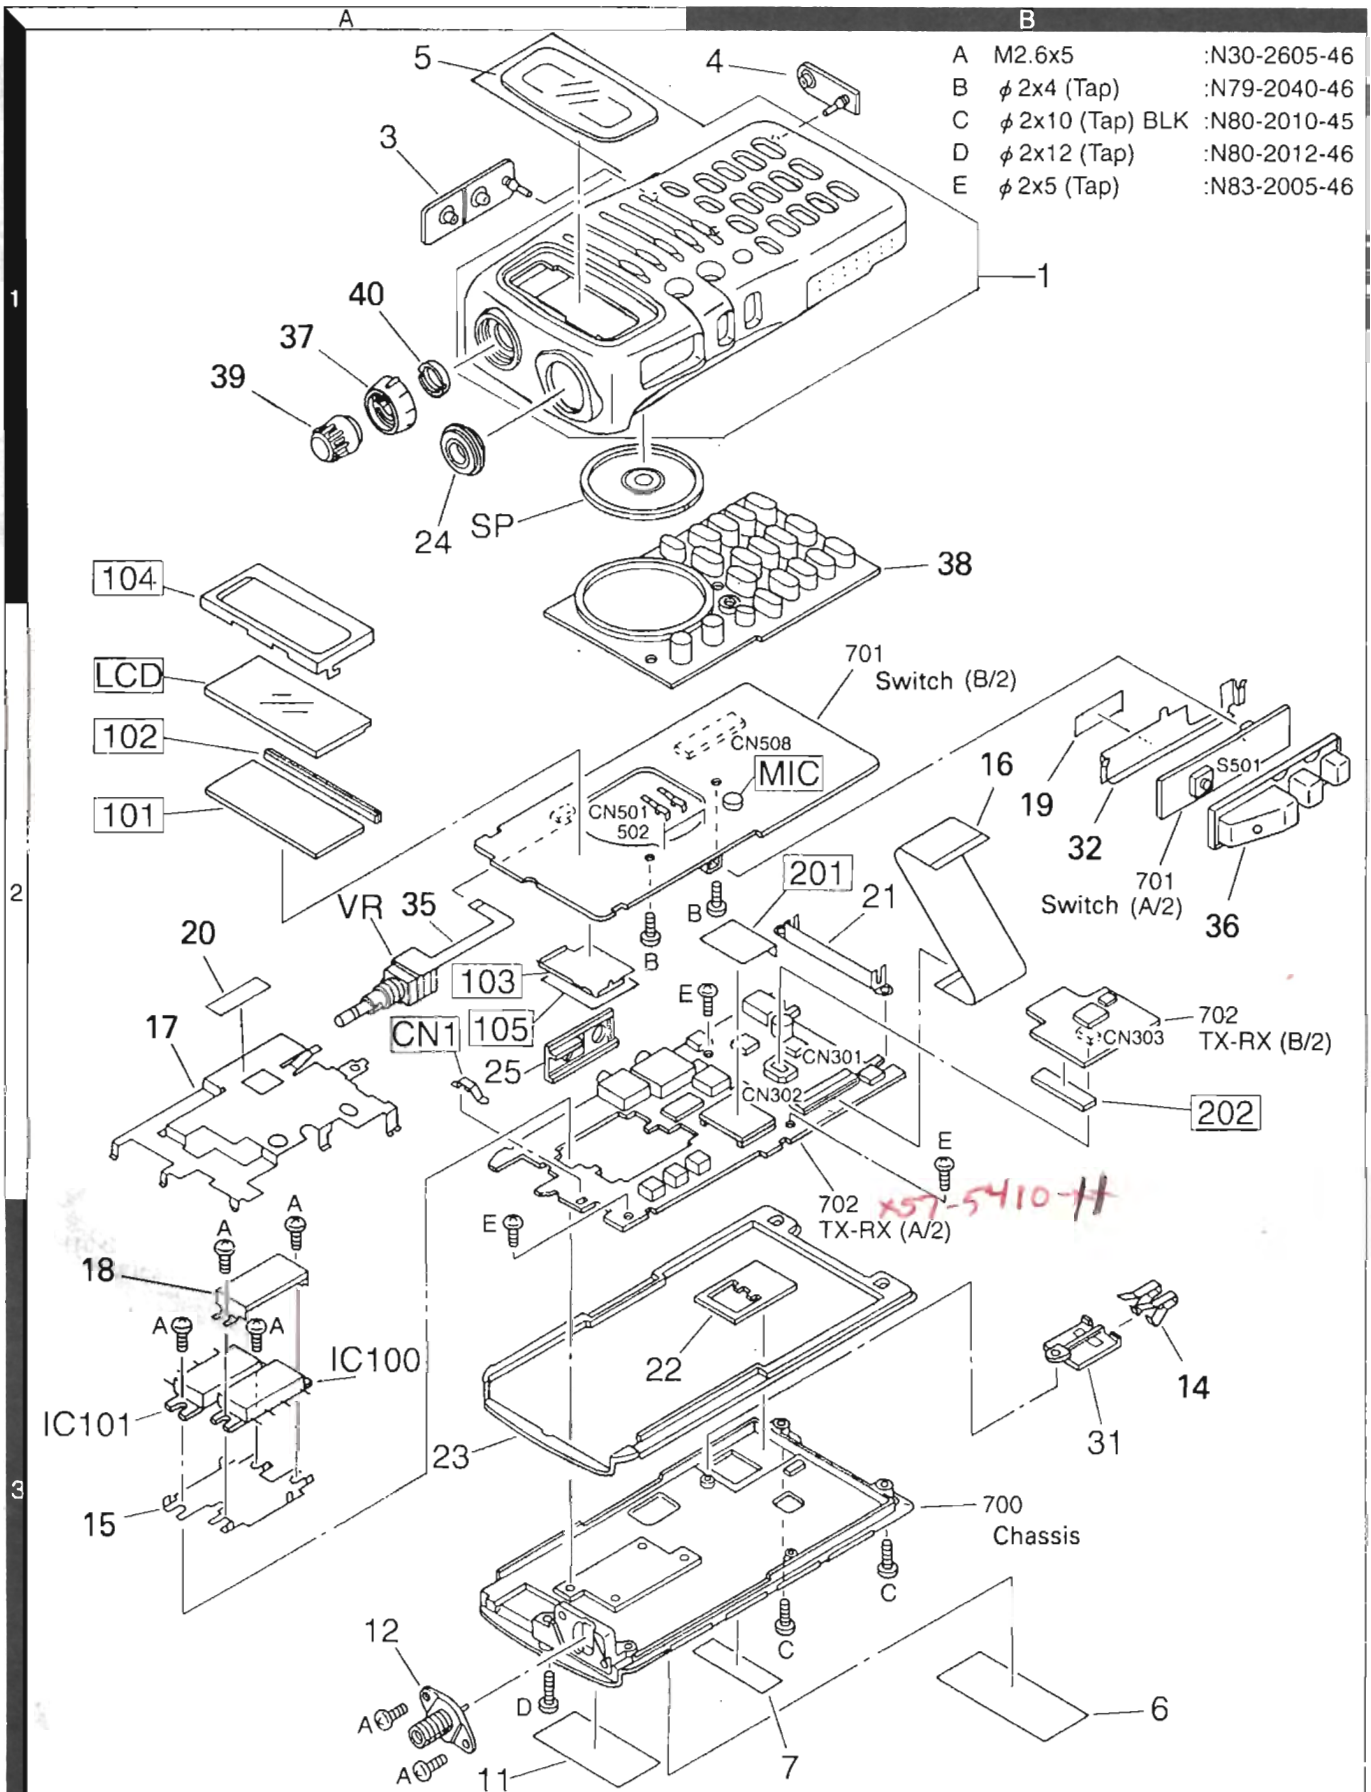

PACKING

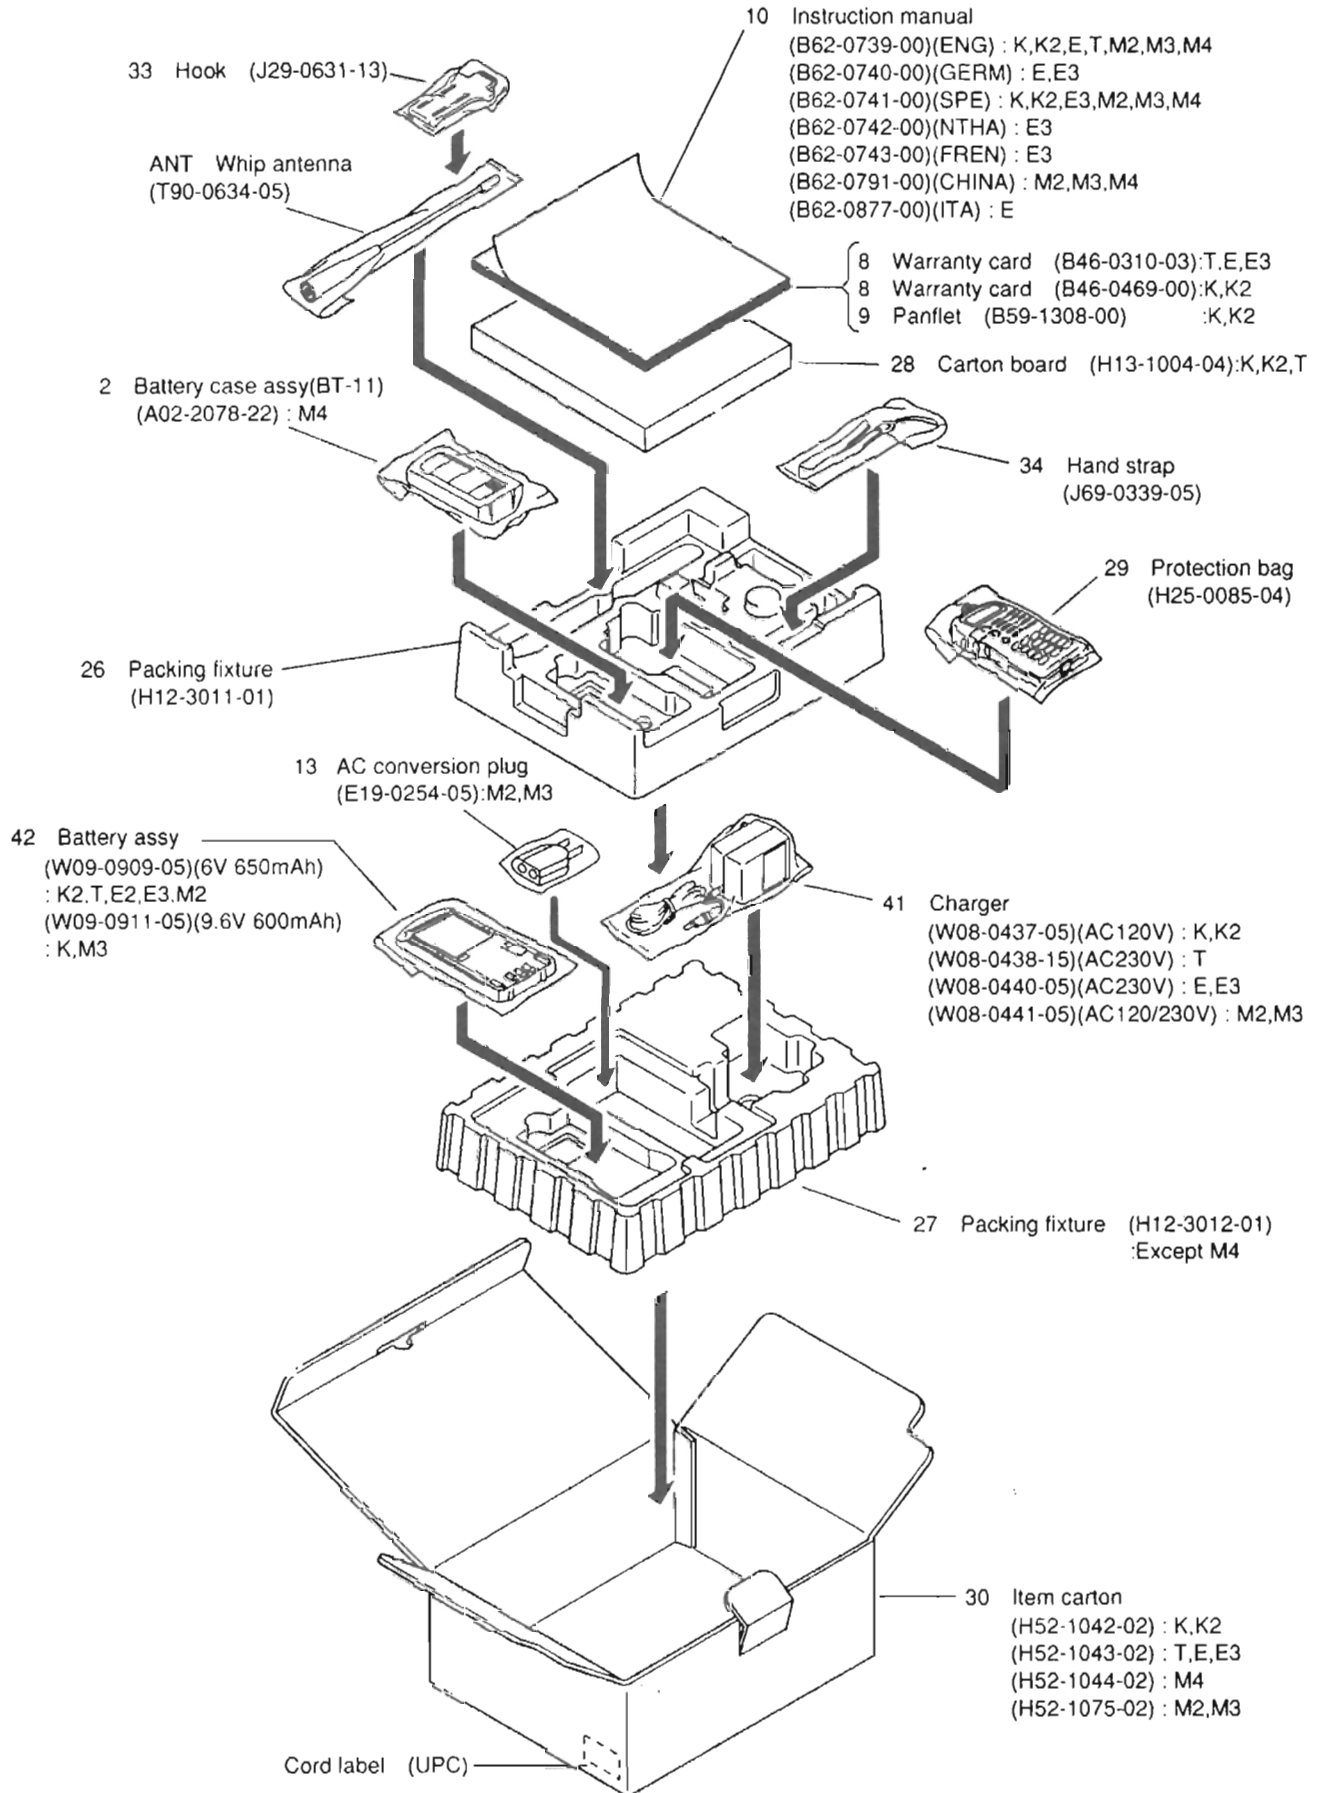

PARTS LIST

* New Parts. Δ indicates safety critical components.

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

L: Scandinavia

Y: PX (Far East, Hawaii)

Y: AAFES (Europe)

K: USA

T: England

X: Australia

P: Canada

E: Europe

M: Other Areas

TH-G71A/E

SWITCH UNIT (X41-342X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
TH-G71A/E					
1	1B	*	A02-2047-03	CABINET ASSY	
2	.	*	A02-2078-22	BATTERY CASE ASSY (BT-11) ACSY	M4
3	1A	*	B09-0361-03	CAP (MIC/SP)	
4	1B	*	B09-0362-03	CAP (DC-IN)	
5	1A	*	B10-1283-03	FRONT GLASS (LCD)	
6	3B	*	B42-3394-14	STANDARD LABEL (FCC)	K, K2
7	3B	*	B42-5650-04	S/NO LABEL	
8	.	*	B46-0310-03	WARRANTY CARD ACSY	T, E, E3
8	.	*	B46-0469-00	WARRANTY CARD ACSY	K, K2
9	.	*	B59-1308-00	PANFLET ACSY	K, K2
10	.	*	B62-0739-00	INSTRUCTION MANUAL (ENG) ACSY	K, K2, E, T
10	.	*	B62-0739-00	INSTRUCTION MANUAL (ENG) ACSY	M2, M3, M4
10	.	*	B62-0740-00	INSTRUCTION MANUAL (GERM) ACSY	E, E3
10	.	*	B62-0741-00	INSTRUCTION MANUAL (SFE) ACSY	K, K2, E3
10	.	*	B62-0741-00	INSTRUCTION MANUAL (SFE) ACSY	M2, M3, M4
10	.	*	B62-0742-00	INSTRUCTION MANUAL (NTHA) ACSY	E3
10	.	*	B62-0743-00	INSTRUCTION MANUAL (FREN) ACSY	E3
10	.	*	B62-0791-00	INSTRUCTION MANUAL (CHINA) ACSY	M2, M3, M4
10	.	*	B62-0877-00	INSTRUCTION MANUAL (ITA) ACSY	E
11	3A	*	B72-1185-04	MODEL NAME PLATE (FCC)	K, K2
11	3A	*	B72-1186-04	MODEL NAME PLATE	M2, M3, M4
11	3A	*	B72-1187-04	MODEL NAME PLATE	T, E, E3
12	3A	*	E04-0407-05	RF COAXIAL RECEPTACLE (SMA)	
13	.	*	E19-0254-05	AC CONVERSION PLUG ACSY	M2, M3
14	3B	*	E23-1042-14	TERMINAL (BATTERY)	
15	3A	*	E23-1061-04	GROUND TERMINAL (P-MODULE)	
16	2B	*	E37-0681-05	FLAT CABLE	
17	2A	*	F10-2237-13	SHIELDING COVER (RF)	
18	3A	*	F10-2251-04	SHIELDING COVER (VHF)	
19	2B	*	F20-1185-04	INSULATING SHEET (PTT)	
20	2A	*	F20-1186-04	INSULATING SHEET (SHIELD PLATE)	
21	2B	*	G02-0813-14	EARTH SPRING	
22	3A	*	G13-1614-04	CUSHION (BATTERY)	
23	3A	*	G53-0815-02	PACKING (CASE)	
24	1A	*	G53-0818-04	PACKING (SMA)	
25	2A	*	G53-0819-03	PACKING (SP/MIC)	
26	.	*	H12-3011-01	PACKING FIXTURE	
27	.	*	H12-3012-01	PACKING FIXTURE	K, K2, T, E
27	.	*	H12-3012-01	PACKING FIXTURE	E3, M2, M3
28	.	*	H13-1004-04	CARTON BOARD	K, K2, T
29	.	*	H25-0085-04	PROTECTION BAG (100x200x0.07)	
30	.	*	H52-1042-02	ITEM CARTON CASE	K, K2
30	.	*	H52-1043-02	ITEM CARTON CASE	T, E, E3
30	.	*	H52-1044-02	ITEM CARTON CASE	M4
30	.	*	H52-1075-02	ITEM CARTON CASE	M2, M3
31	3B	*	J19-1599-03	HOLDER	
32	2B	*	J21-8325-04	HARDWARE FIXTURE (PTT)	
33	.	*	J29-0631-13	HOOK ACSY	
34	.	*	J69-0339-05	HANDSTRAP ACSY	
35	2A	*	J82-0043-05	FPC (VOL/ENC)	
36	2B	*	K29-5149-02	KNOB (PTT)	
37	1A	*	K29-5150-03	KNOB (VOL)	
38	1B	*	K29-5151-02	KEY TOP	

Ref. No.	Address	New parts	Parts No.	Description	Destination
39	1A	*	K29-5159-03	KNOB (ENC)	
40	1A	*	N14-0569-04	CIRCULAR NUT (VOL/ENC)	
A	3A	*	N30-2605-46	PAN HEAD MACHINE SCREW	
B	2A, 2B	*	N79-2040-46	PAN HEAD TAPTITE SCREW	
C	3B	*	N80-2010-45	PAN HEAD TAPTITE SCREW	
D	3A	*	N80-2012-46	PAN HEAD TAPTITE SCREW	
E	2B, 3A	*	N83-2005-46	PAN HEAD TAPTITE SCREW	
VR	2A	*	R39-0E02-05	VARIABLE RESISTOR (VOL/ENC)	
SP	1A	*	T07-0341-05	SPEAKER	
ANT	.	*	T90-0634-05	WHIP ANTENNA	
D100	.	*	ER883-004	DIODE (BATT CASE BT-11)	M3
IC100	3A	*	N67798LRA	IC (POWER MODULE VHF)	
IC101	3A	*	N67799MA	IC (POWER MODULE UHF)	
41	.	*	W08-0437-05	CHARGER (AC 120V) ACSY	K, K2
41	.	*	W08-0438-15	CHARGER (AC 230V) ACSY	T
41	.	*	W08-0440-05	CHARGER (AC 230V) ACSY	E, E3
41	.	*	W08-0441-05	CHARGER (AC 120/230V) ACSY	M2, M3
42	.	*	W09-0909-05	BATTERY ASSY (6V 650mAh) ACSY	K2, T, E2
42	.	*	W09-3909-05	BATTERY ASSY (6V 650mAh) ACSY	E3, M2
42	.	*	W09-0911-05	BATTERY ASSY (9.6V 600mAh) ACSY	K, M3

SWITCH UNIT (X41-342X-XX) 0-11: K, K2 0-21: M2, M3, M4 2-71: T, E, E3

101	2A	*	B11-1173-04	REFLECTOR (LCD)	
LCD	2A	*	B38-0780-05	LCD	
0501-502	.	*	B30-2143-05	LED (YG)	
0503	.	*	B30-2131-05	LED	
0504-508	.	*	B30-2157-05	LED (YELLOW)	
C500	.	*	CK73GB1H471K	CHIP C 470PF K	
C501	.	*	CK73GB1H102K	CHIP C 1000PF K	
C502, 503	.	*	CK73GB1H103K	CHIP C 0.010UF K	
102	2A	*	E29-1164-04	INTER CONNECTOR (LCD)	
CN501-502	.	*	E23-1060-04	TERMINAL (SP)	
CN506	.	*	E40-5630-05	PIN ASSY SOCKET	
CN507	.	*	E40-5629-05	PIN ASSY	
CN508	.	*	E40-5902-05	FLAT CABLE CONNECTOR (36P)	
CN509	.	*	E40-5915-05	FLAT CABLE CONNECTOR (6P)	
W500	.	*	E37-0697-05	PROCESSED LEAD WIRE	
103	2A	*	F10-2239-04	SHIELDING PLATE	
104	2A	*	F20-1191-04	SHIELDING SHEET	
.	.	*	G13-1648-04	CUSHION (LCD)	
105	2A	*	J21-8317-04	HARDWARE FIXTURE (LCD)	
L502, 503	.	*	L92-0140-05	FERRITE CHIP	
CP501	.	*	R90-0724-05	MULTI-COMP 1K X4	
CP502, 503	.	*	R90-1016-05	MULTIPLE RESISTOR 470Kx4	
CP505	.	*	R90-0737-05	MULTIPLE RESISTOR 100Kx2	
CP506	.	*	R90-0724-05	MULTI-COMP 1K X4	
R500	.	*	RK73FB2A151J	CHIP R 150 J 1/10W	
R501	.	*	RK73FB2A471J	CHIP R 470 J 1/10W	
R502	.	*	RK73GB1J471J	CHIP R 470 J 1/16W	
R503	.	*	RK73GB1J102J	CHIP R 10K J 1/16W	

PARTS LIST

SWITCH UNIT (X41-342X-XX)

TX-RX UNIT (X57-5410-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R504			RK73GB1J471J	CHIP R 470 J 1/16W		C43			CK73HB1H471K	CHIP C 470PF K	
R507			RK73GB1J471J	CHIP R 470 J 1/16W		C44			CC73HC1H010C	CHIP C 10PF C	
R508			RK73FB2A181J	CHIP R 180 J 1/10W		C45			CC73HC1H070D	CHIP C 7PF D	
R509,510			RK73GB1J471J	CHIP R 470 J 1/16W		C46			CC73HC1H060D	CHIP C 60PF D	
R512			RK73GB1J101J	CHIP R 100 J 1/16W		C50			CK73GB1H102K	CHIP C 1000PF K	
R513			R92-1252-05	CHIP R 0 OHM		C51			CC73GC1H270J	CHIP C 27PF J	
R514			RK73GB1J154J	CHIP R 150K J 1/16W		C52			CK73HB1H471K	CHIP C 470PF K	
R516,517			RK73GB1J474J	CHIP R 470K J 1/16W		C53			CK73GB1C104K	CHIP C 0.10UF K	
R518			RK73FB2A151J	CHIP R 150 J 1/10W		C55			CC73HC1H030C	CHIP C 30PF C	
R519			RK73GB1J103J	CHIP R 10K J 1/16W		C56			CC73HC1H020C	CHIP C 20PF C	
R520			R92-1252-05	CHIP R 0 OHM		C57			CC73HC1H030C	CHIP C 30PF C	
S501			S70-0460-05	TACT SWITCH		C70			CC73HC1H070D	CHIP C 70PF D	
MIC	2B		T91-0580-05	WBC ELEMENT		C71, 72			CK73HB1H471K	CHIP C 470PF K	
D510			MA2S111	DIODE		C73			CC73HC1H150J	CHIP C 15PF J	
D511			MA2S111	DIODE	K, K2	C73			CK73HB1H471K	CHIP C 470P K	
D511			MA2S111	DIODE	M2 M3 M4				CC73HC1H180J	CHIP C 18PF J	
D512			MA2S111	DIODE		C74			CK73HB1H471K	CHIP C 470PF K	
D513			MA2S111	DIODE	K, K2	C75			C92-0565-C5	CHIP-TAN 6.8UF 10WV	
D513			MA2S111	DIODE		C76			CK73HB1H471K	CHIP C 470PF K	
D513			MA2S111	DIODE		C77			CK73HB1C103K	CHIP C 0.010UF K	
D513			MA2S111	DIODE		C78			CK73HB1A105K	CHIP C 10UF K	
D515-521			MA2S111	DIODE	T, E, E3	C80			CK73HB1C103K	CHIP C 0.010UF K	
IC500			NJU6433F	IC(200BIT LCD DRIVER)		C81			CK73HB1H471K	CHIP C 470PF K	
TX-RX UNIT (X57-5410-XX)-11:K, K2 -21:T, E, E3, M2, M3, M4						C82			CK73GB1H471K	CHIP C 470PF K	
C1,2			CK73HB1H471K	CHIP C 470PF K		C83			CC73GC1H020C	CHIP C 20PF C	
C3			C92-0544-05	CHIP-TAN 10UF 4WV		C85			CK73HB1C103K	CHIP C 0.010UF K	
C4			CK73HB1H102K	CHIP C 1000PF K		C86			CK73HB1H471K	CHIP C 470PF K	
C5			C92-0647-05	CHIP-TAN 3.3UF 4WV		C87			CC73HC1H030C	CHIP C 30PF C	
C6			CK73HB1H102K	CHIP C 1000PF K		C88			CK73HB1H471K	CHIP C 470PF K	
C7			CK73HB1C103K	CHIP C 0.010UF K		C90			CC73HC1H070D	CHIP C 70PF D	
C8,9			CK73HB1H471K	CHIP C 470PF K		C91			CK73HB1H471K	CHIP C 470PF K	
C10			CC73HC1H180J	CHIP C 18PF J		C92-94			CK73HB1H471K	CHIP C 470PF K	
C11, 12			CK73HB1H471K	CHIP C 470PF K		C96			CK73HB1H471K	CHIP C 470PF K	
C13			CK73HB1H102K	CHIP C 1000PF K		C97			CC73HC1H390J	CHIP C 39PF J	
C14, 15			CK73HB1H471K	CHIP C 470PF K		C98			CC73HC1H220J	CHIP C 22PF J	
C16			CK73HB1H102K	CHIP C 1000PF K		C99			CC73GC1H030C	CHIP C 30PF C	
C17			CK73HB1H471K	CHIP C 470PF K		C100			CC73GC1H050C	CHIP C 50PF C	
C18			CC73HC1H150J	CHIP C 15PF J		C101			CC73GC1H010C	CHIP C 10PF C	
C19			CC73HC1H220J	CHIP C 22PF J		C102			CK73GB1C104K	CHIP C 0.10UF K	
C20, 21			CK73HB1H102K	CHIP C 1000PF K		C103			CK73HB1H471K	CHIP C 470PF K	
C22			CC73HC1H030C	CHIP C 30PF C		C104			CC73HC1H010C	CHIP C 10PF C	
C23			CK73HB1H102K	CHIP C 1000PF K		C105			CC73HC1H070D	CHIP C 70PF D	
C24			CC73HC1H060D	CHIP C 60PF D		C106			CK73HB1H471K	CHIP C 470PF K	
C25			CC73GC1H010C	CHIP C 10PF C		C107, 108			CC73HC1H270J	CHIP C 27PF J	
C26			CC73HC1H060D	CHIP C 60PF D		C109			CK73HB1H471K	CHIP C 470PF K	
C27, 28			CK73HB1H102K	CHIP C 1000PF K		C110			CC73HC1H070D	CHIP C 70PF D	
C29			CC73HC1H050C	CHIP C 50PF C		C111			CK73HB1H471K	CHIP C 470PF K	
C31			CC73HC1H050C	CHIP C 50PF C		C112			CC73HC1H070D	CHIP C 70PF D	
C32			CC73HC1H120J	CHIP C 12PF J		C113			CC73HC1H390J	CHIP C 39PF J	
C33			CK73HB1H471K	CHIP C 470PF K		C114			CK73HB1H471K	CHIP C 470PF K	
C34			CK73HB1C103K	CHIP C 0.010UF K		C116			CC73HC1H330J	CHIP C 33PF J	
C35			CK73HB1H471K	CHIP C 470PF K		C117			CC73HC1H060D	CHIP C 60PF D	
C36			CK73GB1C104K	CHIP C 0.10UF K		C118			CC73HC1H470J	CHIP C 47PF J	
C37			CK73HB1H471K	CHIP C 470PF K		C119			CC73HC1H120J	CHIP C 12PF J	
C38			CK73GB1C104K	CHIP C 0.10UF K		C120			CC73HC1H180J	CHIP C 18PF J	
C39			C92-0655-05	CHIP-TAN 4.7UF 6.3WV		C121			CC73HC1H330J	CHIP C 33PF J	
C40			C92-0542-05	CHIP-TAN 0.10UF 20WV		C122			CK73HB1H102K	CHIP C 1000PF K	
C41, 42			CK73HB1C103K	CHIP C 0.010UF K		C123			CC73HC1H080D	CHIP C 80PF D	
						C124, 125			CK73HB1H102K	CHIP C 1000PF K	
						C126			CC73HC1H330J	CHIP C 33PF J	
						C127			CK73HB1H102K	CHIP C 1000PF K	

PARTS LIST

TX-RX UNIT (X57-5410-XX)

Ref.No.	Address	New parts	PartsNo.	Description	Destination	Ref.No.	Address	New parts	PartsNo.	Description	Destination
C128			C92-0507-05	CHIP-TAN 4 7UF 6.3WV		C208			CK73FB1A105K	CHIP C 1 0UF K	
C129			CK73HB1C103K	CHIP C 0.010UF K		C209			CK73HB1C103K	CHIP C 0.010UF K	
C130			CK73HB1H102K	CHIP C 1000PF K		C210			CK73HB1H471K	CHIP C 470PF K	
C131			CK73FB1A105K	CHIP C 1 0UF K		C211			CC73HCH1H101J	CHIP C 100PF J	
C132			CK73HB1C103K	CHIP C 0.010UF K		C214			CC73HCH1H040C	CHIP C 4 0PF C	
C133			CK73HB1H102K	CHIP C 1000PF K		C215			CK73HB1C103K	CHIP C 0.010UF K	
C134			CC73GCH1H020C	CHIP C 2 0PF C		C216			CC73HCH1H185C	CHIP C 1 5PF C	
C135			CC73GCH1H0900	CHIP C 9 0PF D		C217			CC73HCH1H020C	CHIP C 2 0PF C	
C136			CK73GB1H102K	CHIP C 1000PF K		C218			CC73HCH1H470J	CHIP C 47PF J	
C137			CC73GCH1H270J	CHIP C 27PF J		C219			CC73HCH1H101J	CHIP C 100PF J	
C138			CC73GCH1H060D	CHIP C 6 0PF D		C220			CC73HCH1H470J	CHIP C 47PF J	
C139			CC73GCH1H180J	CHIP C 18PF J		C221			CC73HCH1H030C	CHIP C 3 0PF C	
C140-142			CK73HB1C103K	CHIP C 0.010UF K		C222			CK73HB1H471K	CHIP C 470PF K	
C144			CC73HCH1H060D	CHIP C 6.0PF D		C223			CK73HB1C103K	CHIP C 0.010UF K	
C145			CK73HB1C103K	CHIP C 0.010UF K		C224			CC73HCH1H030C	CHIP C 3 0PF C	
C147,148			CK73HB1C103K	CHIP C 0.010UF K		C226			CC73HCH1H085C	CHIP C 0.5PF C	
C149			CC73HCH1H220J	CHIP C 22PF J		C227			CC73HCH1H220J	CHIP C 22PF J	
C150			CK73GB1C104K	CHIP C 0.10UF K		C228			CK73GB1C104K	CHIP C 0.10UF K	
C151			CC73HCH1H050C	CHIP C 5.0PF C		C229,230			CK73HB1H471K	CHIP C 470PF K	
C152			CK73HB1H102K	CHIP C 1000PF K		C231			CK73HB1H102K	CHIP C 1000PF K	
C153-155			CK73GB1C104K	CHIP C 0.10UF K		C232-234			CC73HCH1H101J	CHIP C 100PF J	MEMORATEE3
C156			CK73HB1H102K	CHIP C 1000PF K		C235			CC73GCH1H060D	CHIP C 6P D	MEMORATEE3
C157			CK73GB1C104K	CHIP C 0.10UF K		C236			CC73GCH1H070D	CHIP C 7P D	MEMORATEE3
C159			CK73FB1E104K	CHIP C 0.10UF K		C300			CK73EF1A106Z	CHIP C 10UF 10WV	
C160			CK73HB1H102K	CHIP C 1000PF K		C301-303			CK73HB1H102K	CHIP C 1000PF K	
C161			CK73GB1C104K	CHIP C 0.10UF K		C304			CK73GB1H392K	CHIP C 3900PF K	
C162,163			CK73HB1C103K	CHIP C 0.010UF K		C305			CK73HB1C103K	CHIP C 0.010UF K	
C165,166			CK73HB1H471K	CHIP C 470PF K		C306			CK73GB1H471K	CHIP C 470PF K	
C167			CC73HCH1H180J	CHIP C 18PF J		C307,308			CK73HB1H471K	CHIP C 470PF K	
C168			CK73HB1H102K	CHIP C 1000PF K		C309			CK73GB1E223K	CHIP C 0.022UF K	
C169			CK73GB1C104K	CHIP C 0.10UF K		C310			CK73HB1H102K	CHIP C 1000PF K	
C170			CK73GB1C333K	CHIP C 0.033UF K		C311			CK73FB1H102K	CHIP C 1000PF K	
C171			CK73FB1E473K	CHIP C 0.047UF K		C312			C92-0587-05	CHIP-TAN 2 2UF 4WV	
C172			CK73GB1C104K	CHIP C 0.10UF K		C313,314			CK73GB1C104K	CHIP C 0.10UF K	
C173			CK73HB1H471K	CHIP C 470PF K		C315,316			CK73GB1C223K	CHIP C 0.022UF K	
C174			CC73HCH1H820J	CHIP C 82PF J		C317			CK73GB1C104K	CHIP C 0.10UF K	
C175			CK73GB1C104K	CHIP C 0.10UF K		C318			C92-0633-05	CHIP-TAN 22UF 10WV	
C176			C92-0623-05	CHIP-TAN 22UF 4WV		C319			CK73GB1C104K	CHIP C 0.10UF K	
C177			CK73GB1C104K	CHIP C 0.10UF K		C320-322			CK73GB1C473K	CHIP C 0.047UF K	
C178			CC73HCH1H085C	CHIP C 0.5PF C		C323			C92-0628-05	CHIP-TAN 10UF 10WV	
C179			CC73HCH1H220J	CHIP C 22PF J		C324			CK73EF1A106Z	CHIP C 10UF Z	
C180			CK73HB1C103K	CHIP C 0.010UF K		C325			CK73HB1H471K	CHIP C 470PF K	
C181			CC73HCH1H050C	CHIP C 5.0PF C		C326			CK73FB1A105K	CHIP C 1 0UF K	
C182			CK73HB1H102K	CHIP C 1000PF K		C327			CK73HB1H471K	CHIP C 470PF K	
C184			CC73HCH1H270J	CHIP C 27PF J		C328			C92-0647-05	CHIP-TAN 3 3UF 4WV	
C185			CK73GB1C104K	CHIP C 0.10UF K		C329			CK73HB1H102K	CHIP C 1000PF K	
C186,187			CK73HB1H102K	CHIP C 1000PF K		C330			CK73HB1H471K	CHIP C 470PF K	
C188			CK73GB1C104K	CHIP C 0.10UF K		C331			CK73GB1H471K	CHIP C 470PF K	
C189-191			CK73HB1H102K	CHIP C 1000PF K		C332,333			C92-0605-05	CHIP-TAN 150UF 6.3WV	
C192			CK73GB1C104K	CHIP C 0.10UF K		C334			CK73GB1C473K	CHIP C 0.047UF K	
C193			CC73HCH1H270J	CHIP C 27PF J		C335			CC73HCH1H101J	CHIP C 100PF J	
C194-196			CK73HB1H102K	CHIP C 1000PF K		C336,337			CK73GB1C104K	CHIP C 0.10UF K	
C197			CC73HCH1H270J	CHIP C 27PF J		C338			C92-0594-05	CHIP-TAN 4 7UF 4WV	
C199			CC73HCH1H390J	CHIP C 39PF J		C339			CK73HB1H102K	CHIP C 1000PF K	
C200			CC73HCH1H330J	CHIP C 33PF J		C340,341			CK73HB1H471K	CHIP C 470PF K	
C201			CC73HCH1H390J	CHIP C 39PF J		C342			CK73HB1C103K	CHIP C 0.010UF K	
C202,203			CC73HCH1H060D	CHIP C 6PF D		C343			CK73GB1C104K	CHIP C 0.10UF K	
C205			CC73HCH1H101J	CHIP C 100PF J		C344			CK73HB1H102K	CHIP C 1000PF K	
C206			CK73GB1C104K	CHIP C 0.10UF K		C345			CK73GB1H471K	CHIP C 470PF K	
C207			CC73HCH1H101J	CHIP C 100PF J		C346-352			CK73HB1H471K	CHIP C 470PF K	

PARTS LIST

TX-RX UNIT (X57-5410-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C353			C90-4017-05	ELECTRO 470UF 4WV		CN1	2A	*	E23-1059-04	TERMINAL	
C354-356			CK73HB1H471K	CHIP C 470PF K		CN301		*	E40-5902-05	FLAT CABLE CONNECTOR(LCD)	
C357			CK73GB1C104K	CHIP C 0.10UF K		CN302		*	E40-5907-05	PIN ASSY SOCKET(20P)	
C358,359			CK73HB1H471K	CHIP C 470PF K		CN303		*	E40-5906-05	PIN ASSY (20P)	
C360-362			C92-0651-05	CHIP-TAN 6.8UF 10WV		J301		*	E11-0467-05	3.50 PHONE JACK(5P) <i>mic</i>	
C363,364			CK73HB1H471K	CHIP C 470PF K		J302		*	E11-0439-05	2.50 PHONE JACK(5P) <i>spkr</i>	
C365			CC73HC1H101J	CHIP C 100PF J		J303		*	E03-0170-05	DC JACK	
C366			CK73HB1C103K	CHIP C 0.010UF K		201	2B	*	F20-1181-04	INSULATING SHEET(WCO)	
C367,368			CK73HB1H471K	CHIP C 470PF K		F1		*	F53-0128-05	FUSE(0.5A 50V)	
C369			CK73HB1H102K	CHIP C 1000PF K		202	2B	*	G13-1630-14	CUSHION (10/10/1.5 CONT)	
C370			CK73GB1C104K	CHIP C 0.10UF K		CD1		*	L79-1474-05	TUNING COIL (450KHZ)	
C371-373			CK73HB1H471K	CHIP C 470PF K		CF1		*	L72-0945-05	CERAMIC FILTER(450KHZ)	
C374-377			CK73HB1H102K	CHIP C 1000PF K		L1		*	L92-0140-05	FERRITE CHIP	
C378,379			CK73HB1H471K	CHIP C 470PF K		L2		*	L40-2275-36	SMALL FIXED INDUCTOR(22NH)	
C380			CK73GB1H103K	CHIP C 0.010UF K		L3		*	L40-6875-36	SMALL FIXED INDUCTOR(68NH)	
C381			CK73GB1H102K	CHIP C 1000P K		L4		*	L40-2275-36	SMALL FIXED INDUCTOR(22NH)	
C382			CK73GB1C103K	CHIP C 0.010UF K		L6		*	L92-0140-05	FERRITE CHIP	
C383,384			CK73HB1H102K	CHIP C 1000PF K		L7		*	L34-1264-05	AIR-CORE COIL(2.5T)	
C385,386			CK73HB1C103K	CHIP C 0.010UF K		L8		*	L79-1101-15	FILTER MODULE	
C388			CK73GB1C104K	CHIP C 0.10UF K		L9		*	L92-0140-05	FERRITE CHIP	
C389			CK73HB1H471K	CHIP C 470PF K		L11,12		*	L40-5668-53	SMALL FIXED INDUCTOR(5.6NH)	
C390			CC73HC1H150J	CHIP C 15PF J		L14		*	L40-6875-36	SMALL FIXED INDUCTOR(68NH)	
C391			CK73HB1H471K	CHIP C 470PF K		L16		*	L92-0140-05	FERRITE CHIP	
C392			CK73HB1H182K	CHIP C 1800PF K		L17		*	L40-2275-54	SMALL FIXED INDUCTOR(22NH)	
C393			CK73FB1A105K	CHIP C 1.0UF K		L18		*	L40-2275-36	SMALL FIXED INDUCTOR(22NH)	
C394			CK73GB1C104K	CHIP C 0.10UF K		L19,20		*	L34-4515-05	AIR-CORE COIL	
C395			CK73HB1H471K	CHIP C 470PF K		L21		*	L40-1275-54	SMALL FIXED INDUCTOR(12NH)	
C396			CK73FB1A105K	CHIP C 1.0UF K		L22		*	L40-2275-54	SMALL FIXED INDUCTOR(22NH)	
C398			C92-0647-05	CHIP-TAN 3.3UF 4WV		L23		*	L79-1492-05	FILTER MODULE (435MHz)	T.E,E3
C399			C92-0587-05	CHIP-TAN 2.2UF 4WV		L23		*	L79-1492-05	FILTER MODULE (435MHz)	M2,M3,M4
C400,401			CK73FB1A105K	CHIP C 1.0UF K		L23		*	L79-1493-05	FILTER MODULE(445MHz)	
C402			CK73HB1H471K	CHIP C 470PF K		L24		*	L40-1575-36	SMALL FIXED INDUCTOR(15NH)	K,K2
C403-405			CK73HB1H102K	CHIP C 1000PF K		L25,26		*	L40-5675-54	SMALL FIXED INDUCTOR(56NH)	
C406,407			CC73HC1H101J	CHIP C 100PF J		L28,29		*	L40-2275-54	SMALL FIXED INDUCTOR(22NH)	
C408			CK73HB1H102K	CHIP C 1000PF J		L30,31		*	L40-2275-36	SMALL FIXED INDUCTOR(22NH)	
C410,411			CK73HB1H471K	CHIP C 470PF K		L32		*	L40-6875-54	SMALL FIXED INDUCTOR(68NH)	
C412			CK73GB1C104K	CHIP C 0.10UF K		L33		*	L40-6875-36	SMALL FIXED INDUCTOR(68NH)	
C413			CK73FB1A105K	CHIP C 1.0UF K		L35		*	L92-0140-05	FERRITE CHIP	
C414			C92-0594-05	CHIP-TAN 4.7UF 4WV		L36		*	L33-1290-05	SMALL FIXED INDUCTOR	
C415,416			CK73HB1H471K	CHIP C 470PF K		L37,38		*	L34-1333-05	AIR-CORE COIL(8.5T)	
C417			CK73GB1C104K	CHIP C 0.10UF K		L39,40		*	L34-4506-05	COIL	
C419			CK73HB1H471K	CHIP C 470PF K		L41		*	L34-4507-05	COIL	
C433-437			CK73HB1H471K	CHIP C 470PF K		L42		*	L40-1085-54	SMALL FIXED INDUCTOR(100NH)	
C438			CK73GB1C104K	CHIP C 0.10UF K		L44		*	L40-1075-36	SMALL FIXED INDUCTOR(10NH)	
C439			CK73FB1A105K	CHIP C 1.0UF K		L45		*	L40-8265-69	SMALL FIXED INDUCTOR(8.2NH)	
C440			CK73GB1C104K	CHIP C 0.10UF K		L46		*	L33-1301-05	SMALL FIXED INDUCTOR(4.7NH)	
C441,442			CK73HB1H471K	CHIP C 470PF K		L47		*	L40-5668-52	SMALL FIXED INDUCTOR(5.6NH)	
C443			C92-0647-05	CHIP-TAN 3.3UF 4WV		L48		*	L40-5681-37	SMALL FIXED INDUCTOR(0.560UH)	
C444-448			CK73HB1H471K	CHIP C 470PF K		L50		*	L40-5681-37	SMALL FIXED INDUCTOR(0.560UH)	
C449			CC73HC1H050C	CHIP C 5.0PF C	K,X2	L51		*	L92-0140-05	FERRITE CHIP	
C450			CC73HC1H060D	CHIP C 6.0PF D		L52		*	L33-1290-05	SMALL FIXED INDUCTOR	
C451			CK73HB1H471K	CHIP C 470PF K		L53		*	L40-2275-54	SMALL FIXED INDUCTOR(22NH)	
C452			C92-0651-05	CHIP-TAN 6.8UF 10WV		L54		*	L40-1575-36	SMALL FIXED INDUCTOR(15NH)	
C453			CK73HB1H102K	CHIP C 1000PF K		L55		*	L40-1395-68	SMALL FIXED INDUCTOR(1UH)	
C454			CC73HC1H270J	CHIP C 27PF J		L56		*	L40-1378-53	SMALL FIXED INDUCTOR(10NH)	
C456			CC73HC1H100D	CHIP C 10PF D		L57		*	L40-2275-36	SMALL FIXED INDUCTOR(27NH)	
C457,458			CK73GB1H103K	CHIP C 0.010UF K		L58		*	L40-2275-36	SMALL FIXED INDUCTOR(22NH)	
TC1			C05-0384-05	CERAMIC TRIMMER CAP(10P)		L60,61		*	L40-6875-54	SMALL FIXED INDUCTOR(68NH)	

PARTS LIST

TX-RX UNIT (X57-5410-XX)

Ref.No.	Address	New parts	PartsNo.	Description	Destination	Ref.No.	Address	New parts	PartsNo.	Description	Destination
L62		*	L40-1281-36	SMALL FIXED INDUCTOR(0.12UH)		R53			RK73HB1J561J	CHIP R 560 J 1/16W	
L63			L40-5681-37	SMALL FIXED INDUCTOR(0.560UH)		R54			RK73HB1J180J	CHIP R 18 J 1/16W	
L64			L33-1290-05	SMALL FIXED INDUCTOR		R55			RK73HB1J101J	CHIP R 100 J 1/16W	
L65			L40-3975-54	SMALL FIXED INDUCTOR(39NH)		R56			R92-1368-05	CHIP R 0 OHM	
L66		*	L40-3375-54	SMALL FIXED INDUCTOR(33NH)		R57			RK73HB1J680J	CHIP R 68 J 1/16W	
L301			L92-0140-05	FERRITE CHIP		R58, 59			RK73HB1J332J	CHIP R 3.3K J 1/16W	
L303			L92-0140-05	FERRITE CHIP		R60			RK73HB1J470J	CHIP R 47 J 1/16W	
L304			L33-0737-05	SMALL FIXED INDUCTOR		R61			RK73HB1J222J	CHIP R 2.2K J 1/16W	
L305			L92-0137-05	FERRITE CHIP		R62			RK73HB1J221J	CHIP R 220 J 1/16W	
L306			L40-1875-36	SMALL FIXED INDUCTOR(18NH)		R63			RK73HB1J224J	CHIP R 220K J 1/16W	
L307			L40-2275-36	SMALL FIXED INDUCTOR(22NH)		R64			RK73HB1J104J	CHIP R 100K J 1/16W	
L308,309			L40-1875-36	SMALL FIXED INDUCTOR(18NH)		R65			RK73HB1J222J	CHIP R 2.2K J 1/16W	
L310			L40-5681-37	SMALL FIXED INDUCTOR(0.56UH)		R66			RK73HB1J153J	CHIP R 15K J 1/16W	
L311			L40-1875-36	SMALL FIXED INDUCTOR(18NH)		R67			RK73HB1J332J	CHIP R 3.3K J 1/16W	
L312			L92-0140-05	FERRITE CHIP		R68, 69			RK73HB1J104J	CHIP R 100K J 1/16W	
X1			L77-1663-05	CRYSTAL RESONATOR(12.8MHZ)		R70			RK73HB1J470J	CHIP R 47 J 1/16W	
X301			L78-0367-05	RESONATOR (4.19MHZ)		R71			RK73HB1J224J	CHIP R 220K J 1/16W	
XF1			L71-0481-05	MCF (38SC158)		R72			RK73HB1J222J	CHIP R 2.2K J 1/16W	
CP1		*	R90-0745-05	MULTIPLE RESISTOR 470Kx2		R73			RK73HB1J472J	CHIP R 4.7K J 1/16W	
CP2, 9			R90-0741-05	MULTIPLE RESISTOR 1K x2		R74			RK73HB1J104J	CHIP R 100K J 1/16W	
R3, 4			RK73HB1J332J	CHIP R 3.3K J 1/16W		R75			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R5			RK73HB1J563J	CHIP R 56K J 1/16W		R80			RK73HB1J151J	CHIP R 150 J 1/16W	
R6			RK73HB1J221J	CHIP R 220 J 1/16W		R81			RK73HB1J182J	CHIP R 1.8K J 1/16W	
R7			RK73HB1J220J	CHIP R 22 J 1/16W		R82			RK73HB1J270J	CHIP R 27 J 1/16W	
R9			RK73HB1J470J	CHIP R 47 J 1/16W		R83			RK73HB1J561J	CHIP R 560 J 1/16W	
R10, 11			RK73HB1J332J	CHIP R 3.3K J 1/16W		R84			RK73HB1J180J	CHIP R 18 J 1/16W	
R12			RK73HB1J472J	CHIP R 4.7K J 1/16W		R85			RK73HB1J182J	CHIP R 1.8K J 1/16W	
R13			RK73HB1J184J	CHIP R 180K J 1/16W		R86			R92-1368-05	CHIP R 0 OHM	
R14			RK73HB1J220J	CHIP R 22 J 1/16W		R87			RK73HB1J680J	CHIP R 68 J 1/16W	
R15			RK73HB1J224J	CHIP R 220K J 1/16W		R89			R92-1368-05	CHIP R 0 OHM	
R16			RK73HB1J222J	CHIP R 2.2K J 1/16W		R90			RK73HB1J152J	CHIP R 1.5K J 1/16W	
R17			RK73HB1J220J	CHIP R 22 J 1/16W		R91			RK73HB1J334J	CHIP R 330K J 1/16W	
R18-20			RK73HB1J103J	CHIP R 10K J 1/16W		R92			RK73HB1J104J	CHIP R 100K J 1/16W	
R21			RK73HB1J154J	CHIP R 150K J 1/16W		R93			RK73HB1J561J	CHIP R 560 J 1/16W	
R22			RK73HB1J562J	CHIP R 5.6K J 1/16W		R94			RK73HB1J221J	CHIP R 220 J 1/16W	
R23			RK73HB1J470J	CHIP R 47 J 1/16W		R95			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R24			RK73HB1J154J	CHIP R 150K J 1/16W		R96			RK73HB1J391J	CHIP R 390 J 1/16W	
R25			RK73HB1J562J	CHIP R 5.6K J 1/16W		R97			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R26			RK73HB1J470J	CHIP R 47 J 1/16W		R98			RK73HB1J470J	CHIP R 47 J 1/16W	
R27, 28			RK73HB1J104J	CHIP R 100K J 1/16W		R99			RK73HB1J103J	CHIP R 10K J 1/16W	
R29			RK73HB1J222J	CHIP R 2.2K J 1/16W		R100			RK73HB1J334J	CHIP R 330K J 1/16W	
R30			RK73HB1J105J	CHIP R 1.0M J 1/16W		R101			RK73HB1J470J	CHIP R 47 J 1/16W	
R31			RK73HB1J332J	CHIP R 3.3K J 1/16W		R102			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R32			RK73HB1J223J	CHIP R 22K J 1/16W		R103			RK73HB1J152J	CHIP R 1.5K J 1/16W	
R33			RK73HB1J103J	CHIP R 10K J 1/16W		R104			RK73HB1J473J	CHIP R 47K J 1/16W	
R34			RK73HB1J273J	CHIP R 27K J 1/16W		R105			RK73HB1J272J	CHIP R 2.7K J 1/16W	
R35			RK73HB1J103J	CHIP R 10K J 1/16W		R106			RK73HB1J103J	CHIP R 10K J 1/16W	
R36			RK73HB1J101J	CHIP R 100 J 1/16W		R107			RK73HB1J223J	CHIP R 22K J 1/16W	
R37, 38			RK73HB1J272J	CHIP R 2.7K J 1/16W		R108			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R39			RK73HB1J182J	CHIP R 1.8K J 1/16W		R110			RK73HB1J223J	CHIP R 22K J 1/16W	
R40			RK73HB1J332J	CHIP R 3.3K J 1/16W		R113			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R41			RK73HB1J272J	CHIP R 2.7K J 1/16W		R114-116			RK73HB1J103J	CHIP R 10K J 1/16W	
R42			RK73HB1J152J	CHIP R 1.5K J 1/16W		R117			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R43-45			RK73HB1J392J	CHIP R 3.9K J 1/16W		R118			RK73HB1J274J	CHIP R 270K J 1/16W	
R46			RK73HB1J562J	CHIP R 5.6K J 1/16W		R119			RK73HB1J154J	CHIP R 150K J 1/16W	
R49			RK73HB1J561J	CHIP R 560 J 1/16W		R120			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R50			RK73HB1J151J	CHIP R 150 J 1/16W		R121			RK73HB1J562J	CHIP R 5.6K J 1/16W	
R51			RK73HB1J182J	CHIP R 1.8K J 1/16W		R122			RK73HB1J122J	CHIP R 1.2K J 1/16W	
R52			RK73HB1J220J	CHIP R 22 J 1/16W		R123			RK73HB1J561J	CHIP R 560 J 1/16W	

PARTS LIST

TX-RX UNIT (X57-5410-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R124			RK73HB1J224J	CHIP R 220K J 1/16W		R347-349			RK73HB1J103J	CHIP R 10K J 1/16W	
R125			RK73HB1J683J	CHIP R 68K J 1/16W		R350			RK73HB1J101J	CHIP R 100 J 1/16W	
R126,127			RK73HB1J102J	CHIP R 1.0K J 1/16W		R351			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R128			RK73HB1J104J	CHIP R 100K J 1/16W		R352			RK73HB1J273J	CHIP R 27K J 1/16W	
R129			RK73HB1J220J	CHIP R 22 J 1/16W		R353			RK73HB1J224J	CHIP R 220K J 1/16W	
R130			RK73HB1J222J	CHIP R 2.2K J 1/16W		R354			R92-1368-05	CHIP R 0 OHM	
R131			RK73HB1J104J	CHIP R 100K J 1/16W		R355			RK73HB1J474J	CHIP R 470K J 1/16W	
R132			RK73HB1J221J	CHIP R 220 J 1/16W		R356			RK73HB1J471J	CHIP R 470 J 1/16W	
R133			RK73HB1J224J	CHIP R 220K J 1/16W		R357			RK73HB1J104J	CHIP R 100K J 1/16W	
R134-136			RK73HB1J104J	CHIP R 100K J 1/16W		R358			RK73HB1J474J	CHIP R 470K J 1/16W	
R137			RK73HB1J472J	CHIP R 4.7K J 1/16W		R360			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R138			RK73HB1J103J	CHIP R 10K J 1/16W		R361			RK73HB1J224J	CHIP R 220K J 1/16W	
R139			RK73HB1J104J	CHIP R 100K J 1/16W		R362			RK73HB1J101J	CHIP R 100 J 1/16W	
R140			RK73HB1J823J	CHIP R 82K J 1/16W		R363,364			RK73HB1J103J	CHIP R 10K J 1/16W	
R141			RK73HB1J103J	CHIP R 10K J 1/16W		R365,366			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R142			RK73HB1J563J	CHIP R 56K J 1/16W		R367			RN73HH1J104D	CHIP R 100K D 1/16W	
R143			RK73HB1J180J	CHIP R 18 J 1/16W		R368			RK73HB1J274J	CHIP R 270K J 1/16W	
R144			RK73HB1J471J	CHIP R 470 J 1/16W		R369			RK73HB1J101J	CHIP R 100 J 1/16W	
R145			RK73HB1J562J	CHIP R 5.6K J 1/16W		R370			RK73HB1J474J	CHIP R 470K J 1/16W	
R146			RK73HB1J472J	CHIP R 4.7K J 1/16W		R371			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R147			RK73HB1J470J	CHIP R 47 J 1/16W		R374			RK73HB1J100J	CHIP R 10 J 1/16W	
R148			RK73HB1J152J	CHIP R 1.5K J 1/16W		R375			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R149			RK73HB1J104J	CHIP R 100K J 1/16W		R377			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R150			R92-1252-05	CHIP R 0 OHM		R378			RK73HB1J100J	CHIP R 10 J 1/16W	
R151			RK73HB1J563J	CHIP R 56K J 1/16W		R379			RK73HB1J221J	CHIP R 220 J 1/16W	
R152-154			RK73EB2ER39K	CHIP R 0.39 K 1/4W		R380			RK73HB1J103J	CHIP R 10K J 1/16W	
R155			RK73HB1J472J	CHIP R 4.7K J 1/16W		R381			RK73HB1J473J	CHIP R 47K J 1/16W	
R156			R92-1368-05	CHIP R 0 OHM		R382			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R157			RK73HB1J222J	CHIP R 2.2K J 1/16W		R383			RK73HB1J333J	CHIP R 33K J 1/16W	
R158			RK73HB1J221J	CHIP R 220 J 1/16W		R384			RK73HB1J562J	CHIP R 5.6K J 1/16W	
R159			RK73HB1J224J	CHIP R 220K J 1/16W		R385			RK73HB1J152J	CHIP R 1.5K J 1/16W	
R160			RK73HB1J102J	CHIP R 1.0K J 1/16W		R387,386			RK73HB1J824J	CHIP R 820K J 1/16W	
R161,162			RK73HB1J224J	CHIP R 220K J 1/16W		R388			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R300			RK73HB1J102J	CHIP R 1.0K J 1/16W		R389			RK73HB1J124J	CHIP R 120K J 1/16W	
R302			RK73HB1J102J	CHIP R 1.0K J 1/16W		R390			RK73HB1J473J	CHIP R 47K J 1/16W	
R304			RK73HB1J103J	CHIP R 10K J 1/16W		R391			RK73HB1J152J	CHIP R 1.5K J 1/16W	
R313			RK73HB1J223J	CHIP R 22K J 1/16W		R392-394			RK73HB1J182J	CHIP R 1.8K J 1/16W	
R314			RK73HB1J472J	CHIP R 4.7K J 1/16W		R395			RK73HB1J224J	CHIP R 220K J 1/16W	
R316			RK73HB1J101J	CHIP R 100 J 1/16W		R396			RK73HB1J334J	CHIP R 330K J 1/16W	
R318			RK73HB1J182J	CHIP R 1.8K J 1/16W		R397			RK73HB1J474J	CHIP R 470K J 1/16W	
R319			RK73HB1J101J	CHIP R 100 J 1/16W		R398			R92-1368-05	CHIP R 0 OHM	
R320			RK73HB1J472J	CHIP R 4.7K J 1/16W		R399			RK73HB1J393J	CHIP R 39K J 1/16W	
R321			RK73GB1J123J	CHIP R 12K J 1/16W		R400			RK73HB1J224J	CHIP R 220K J 1/16W	
R322,323			RK73HB1J103J	CHIP R 10K J 1/16W		R401			RK73HB1J563J	CHIP R 56K J 1/16W	
R324			RK73HB1J472J	CHIP R 4.7K J 1/16W		R402			RK73HB1J123J	CHIP R 12K J 1/16W	
R325			RK73HB1J564J	CHIP R 560K J 1/16W		R403			RK73HB1J682J	CHIP R 6.8K J 1/16W	
R326,327			RK73HB1J102J	CHIP R 1.0K J 1/16W		R404			RK73HB1J473J	CHIP R 47K J 1/16W	
R328,329			RK73HB1J393J	CHIP R 39K J 1/16W		R405			RK73HB1J682J	CHIP R 6.8K J 1/16W	
R330			RK73HB1J471J	CHIP R 470 J 1/16W		R406			RK73HB1J393J	CHIP R 39K J 1/16W	
R331			RK73HB1J274J	CHIP R 270K J 1/16W		R407,408			RK73HB1J103J	CHIP R 10K J 1/16W	
R332,333			RK73HB1J472J	CHIP R 4.7K J 1/16W		R409			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R334			RK73HB1J182J	CHIP R 1.8K J 1/16W		R410			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R337			RK73HB1J564J	CHIP R 560K J 1/16W		R411			RK73HB1J821J	CHIP R 820 J 1/16W	
R339			RK73HB1J100J	CHIP R 10 J 1/16W		R412			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R340			RK73HB1J470J	CHIP R 47 J 1/16W		R413			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R341			RK73HB1J471J	CHIP R 470 J 1/16W		R414			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R343			RK73HB1J393J	CHIP R 39K J 1/16W		R415,416			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R344			RK73GB1J103J	CHIP R 10K J 1/16W		R417			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R345			RK73GB1J120J	CHIP R 12 J 1/16W		R418			RK73HB1J821J	CHIP R 820 J 1/16W	
R346			RK73HB1J474J	CHIP R 470K J 1/16W		R419			RK73HB1J472J	CHIP R 4.7K J 1/16W	

PARTS LIST

TX-RX UNIT (X57-5410-XX)

Ref.No.	Address	New parts	PartsNo.	Description	Destination	Ref.No.	Address	New parts	PartsNo.	Description	Destination
R420			RK73HB1J152J	CHIP R 1.5K J 1/16W		Q10			2SC4617(R)	TRANSISTOR	
R421			RK73HB1J102J	CHIP R 1.0K J 1/16W		Q11			2SC4649(N,P)	TRANSISTOR	
R422			RK73HB1J220J	CHIP R 22 J 1/16W		Q12 -14			2SC4617(R)	TRANSISTOR	
R423			RK73HB1J563J	CHIP R 56K J 1/16W		Q15			2SC3356	TRANSISTOR	
R424			RK73HB1J470J	CHIP R 47 J 1/16W		Q16			2SC5108(Y)	TRANSISTOR	
R425,426			R92-1368-05	CHIP R 0 OHM		Q17			3SK239A	FET	
R427			RK73HB1J474J	CHIP R 470K J 1/16W		Q19			2SC3356	TRANSISTOR	
VR330,33			R12-7490-05	TRIMMING POT.(47K)		Q20 ,21			3SK239A	FET	
Q1,2			MA2S111	DIODE		Q22			2SC4617(R)	TRANSISTOR	
Q3-6			MA2S077	DIODE		Q23 -26			2SC5108(Y)	TRANSISTOR	
Q7			DA221	DIODE		Q27			2SC4617(R)	TRANSISTOR	
Q8			MA2S077	DIODE		Q28			DTC144EE	DIGITAL TRANSISTOR	
Q9			RB706F-40	DIODE		Q29			3SK239A	FET	
Q10			DA221	DIODE		Q30			UMC4	TRANSISTOR	
Q11			HVU131	DIODE		Q31			UMX2N	TRANSISTOR	
Q12 -14			DAN235E	DIODE		Q300			2SC4617(R)	TRANSISTOR	
Q15 -17			MA2S077	DIODE		Q301			2SC4738(GR)	TRANSISTOR	
Q18 ,19			HVC350B	VARIABLE CAPACITANCE DIODE		Q302			2SK1824	FET	
Q20			DA221	DIODE		Q303			UMG1	TRANSISTOR	
Q21			HVU131	DIODE		Q304			UMA11N	TRANSISTOR	
Q22			MA2S077	DIODE		Q305			UPA672T	FET	
Q23 -25			HVC350B	VARIABLE CAPACITANCE DIODE		Q306			UMC5	TRANSISTOR	
Q26			HVU131	DIODE		Q307			2SJ243	FET	
Q220			RB706F-40	DIODE		Q308			2SK1824	FET	
Q300			1SS357	DIODE		Q309			2SC4617(R)	TRANSISTOR	
Q301			MA2S111	DIODE		Q310			2SK1588	FET	
Q302			DT23.9(B)	DIODE	T.E.E3	Q312			2SB1184(Q,R)	TRANSISTOR	
Q302			DT23.9(B)	DIODE	M2,M3,M4	Q313			2SC4617(R)	TRANSISTOR	
Q319			MA2S111	DIODE		Q314			2SB1184(Q,R)	TRANSISTOR	
Q320			MAZS05600	ZENER DIODE		Q315			UMW1	TRANSISTOR	
Q321			SFPB-72VL	DIODE		Q316-319			UMA11N	TRANSISTOR	
Q322			DA221	DIODE		Q320			UMA10N	TRANSISTOR	
Q323-325			RB751V-40	DIODE		Q321			2SD1483	TRANSISTOR	
Q326			MAZS05600	ZENER DIODE		Q322			2SB1188(Q)	TRANSISTOR	
Q327			DT23.9(B)	ZENER DIODE		Q323			2SK1588	FET	
IC1			KCH36	HIC		Q324			UMC5	TRANSISTOR	
IC2			M815A01	IC(PLL IC)		Q325			UPA572T	TRANSISTOR	
IC3			TC4W66FU	IC		Q326			2SB1188(O)	TRANSISTOR	
IC4			MC3372SV	IC(LO POWER FMIC)		Q327			UMW1	TRANSISTOR	
IC5			TC4W53FU	IC(2 INPUT NAND GATE)		Q328			2SK1824	FET	
IC8			TA75S01F	IC(OP AMP)		Q329			2SC5108(Y)	TRANSISTOR	
IC301			UPD78054GK-538	IC(CPU)	K,X2	TH330			TN103S472JT	THERMISTOR 4.7K	
IC301			UPD78054GK-541	IC(CPU)	T.E.E3	TH7C0			157-104-65001	THERMISTOR 100K	
IC301			UPD78054GK-541	IC(CPU)	M2,M3,M4						
IC302,303			LMC7101BIM5	IC(OP AMP)							
IC305			S-81335HG-K1	IC							
IC306			RN5VT25A	IC							
IC307			RN5VL30C	IC							
IC308			TC7660SE0A	IC							
IC309			AT24C64N10SI18	IC(EEP ROM)							
IC311			AK2343	IC(CTCSS ENCODER/DECODER)							
IC312			K1A6278F	IC							
IC313			TC4W53FU	IC(2 INPUT NAND GATE)							
Q1,2			2SC4617(R)	TRANSISTOR							
Q3-6			2SC5108(Y)	TRANSISTOR							
Q7			2SA1832(GR)	TRANSISTOR							
Q8			2SC4738(GR)	TRANSISTOR							
Q9			2SC4649(N,P)	TRANSISTOR							