


# KDC-MPV6022/622/7023


## EXPLODED VIEW (MECHANISM)

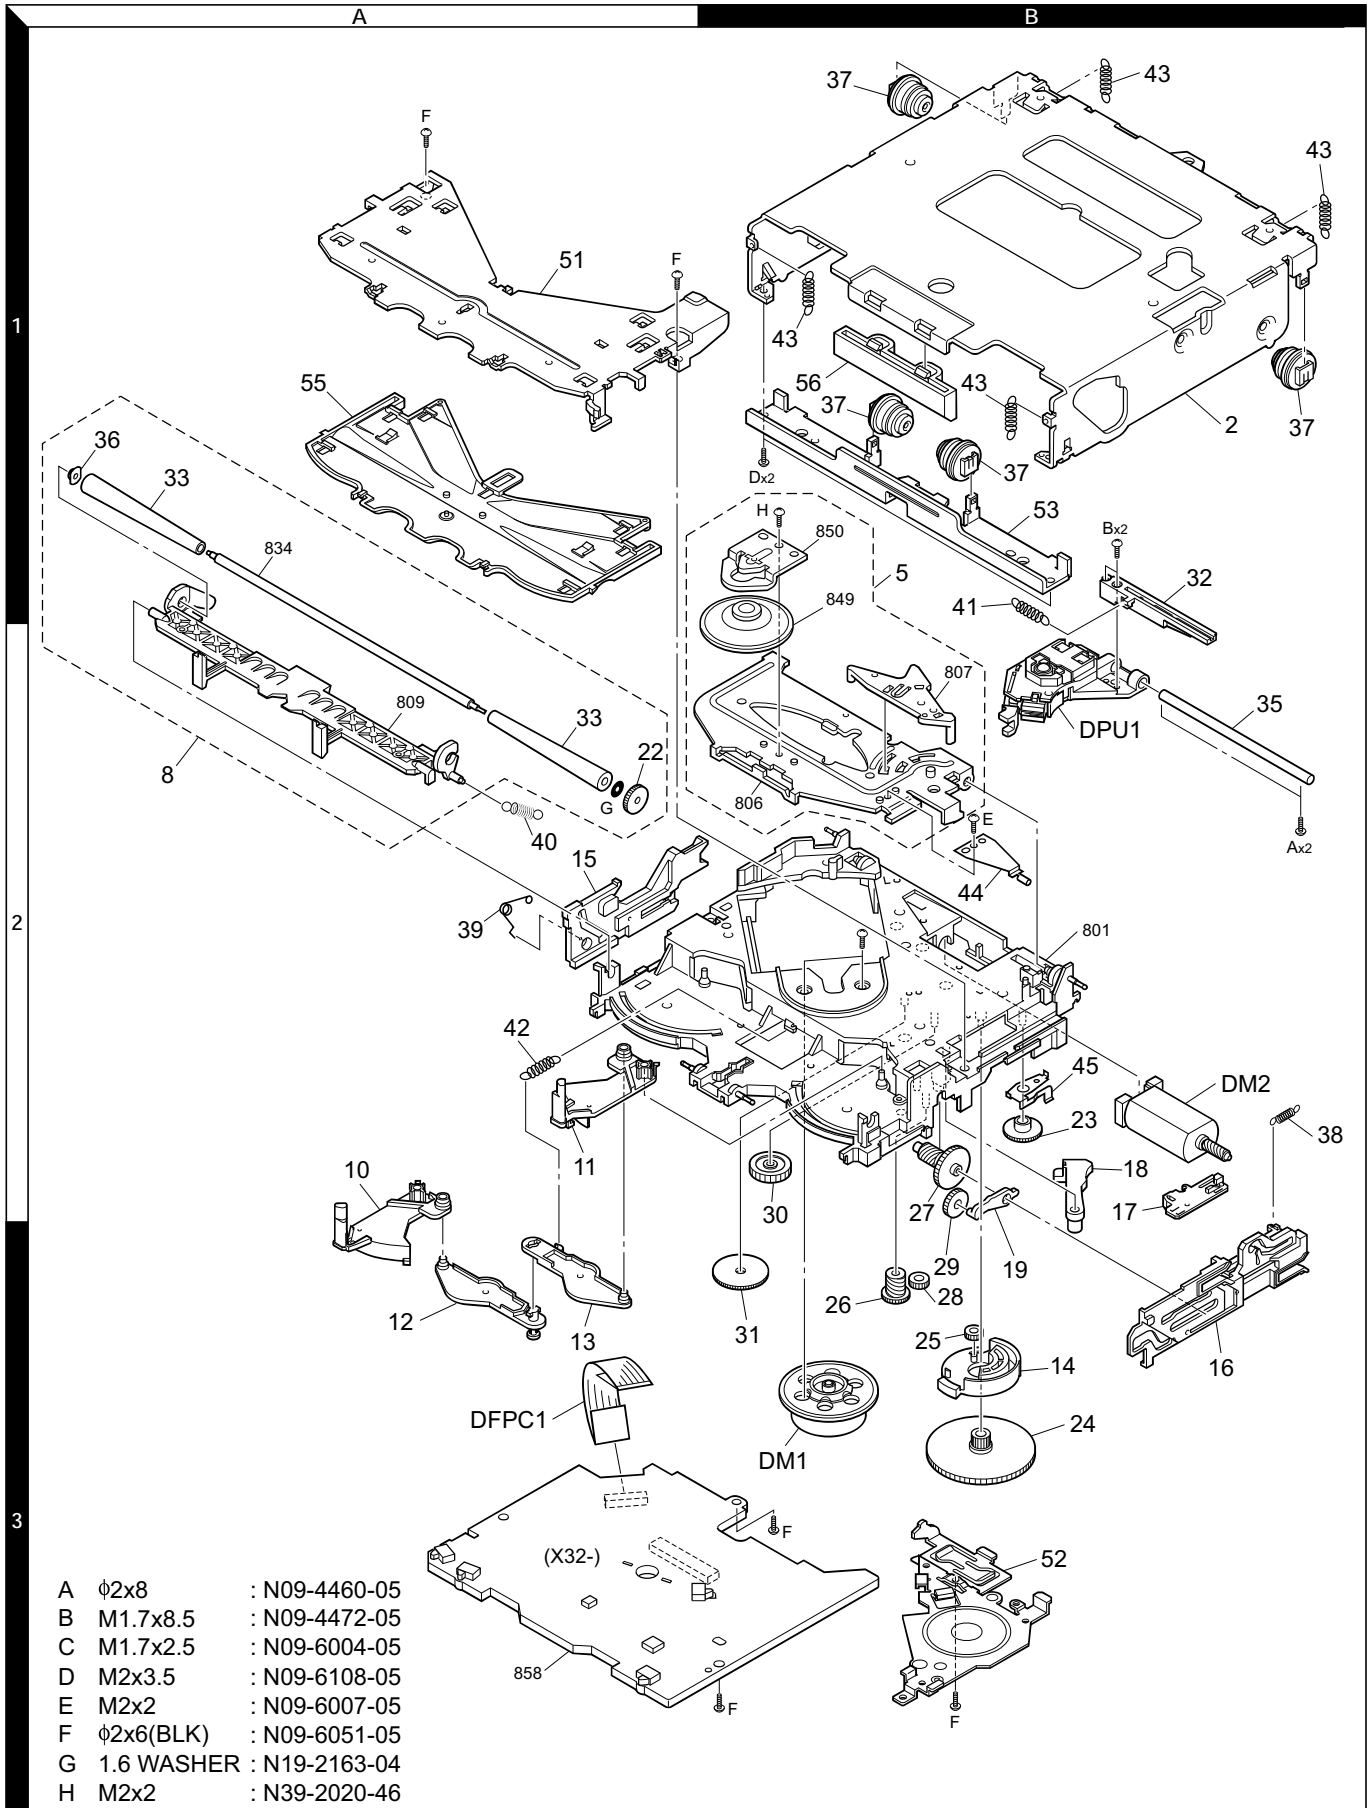

Parts with the exploded numbers larger than 700 are not supplied.

# KDC-MPV6022/622/7023

## EXPLODED VIEW (UNIT)

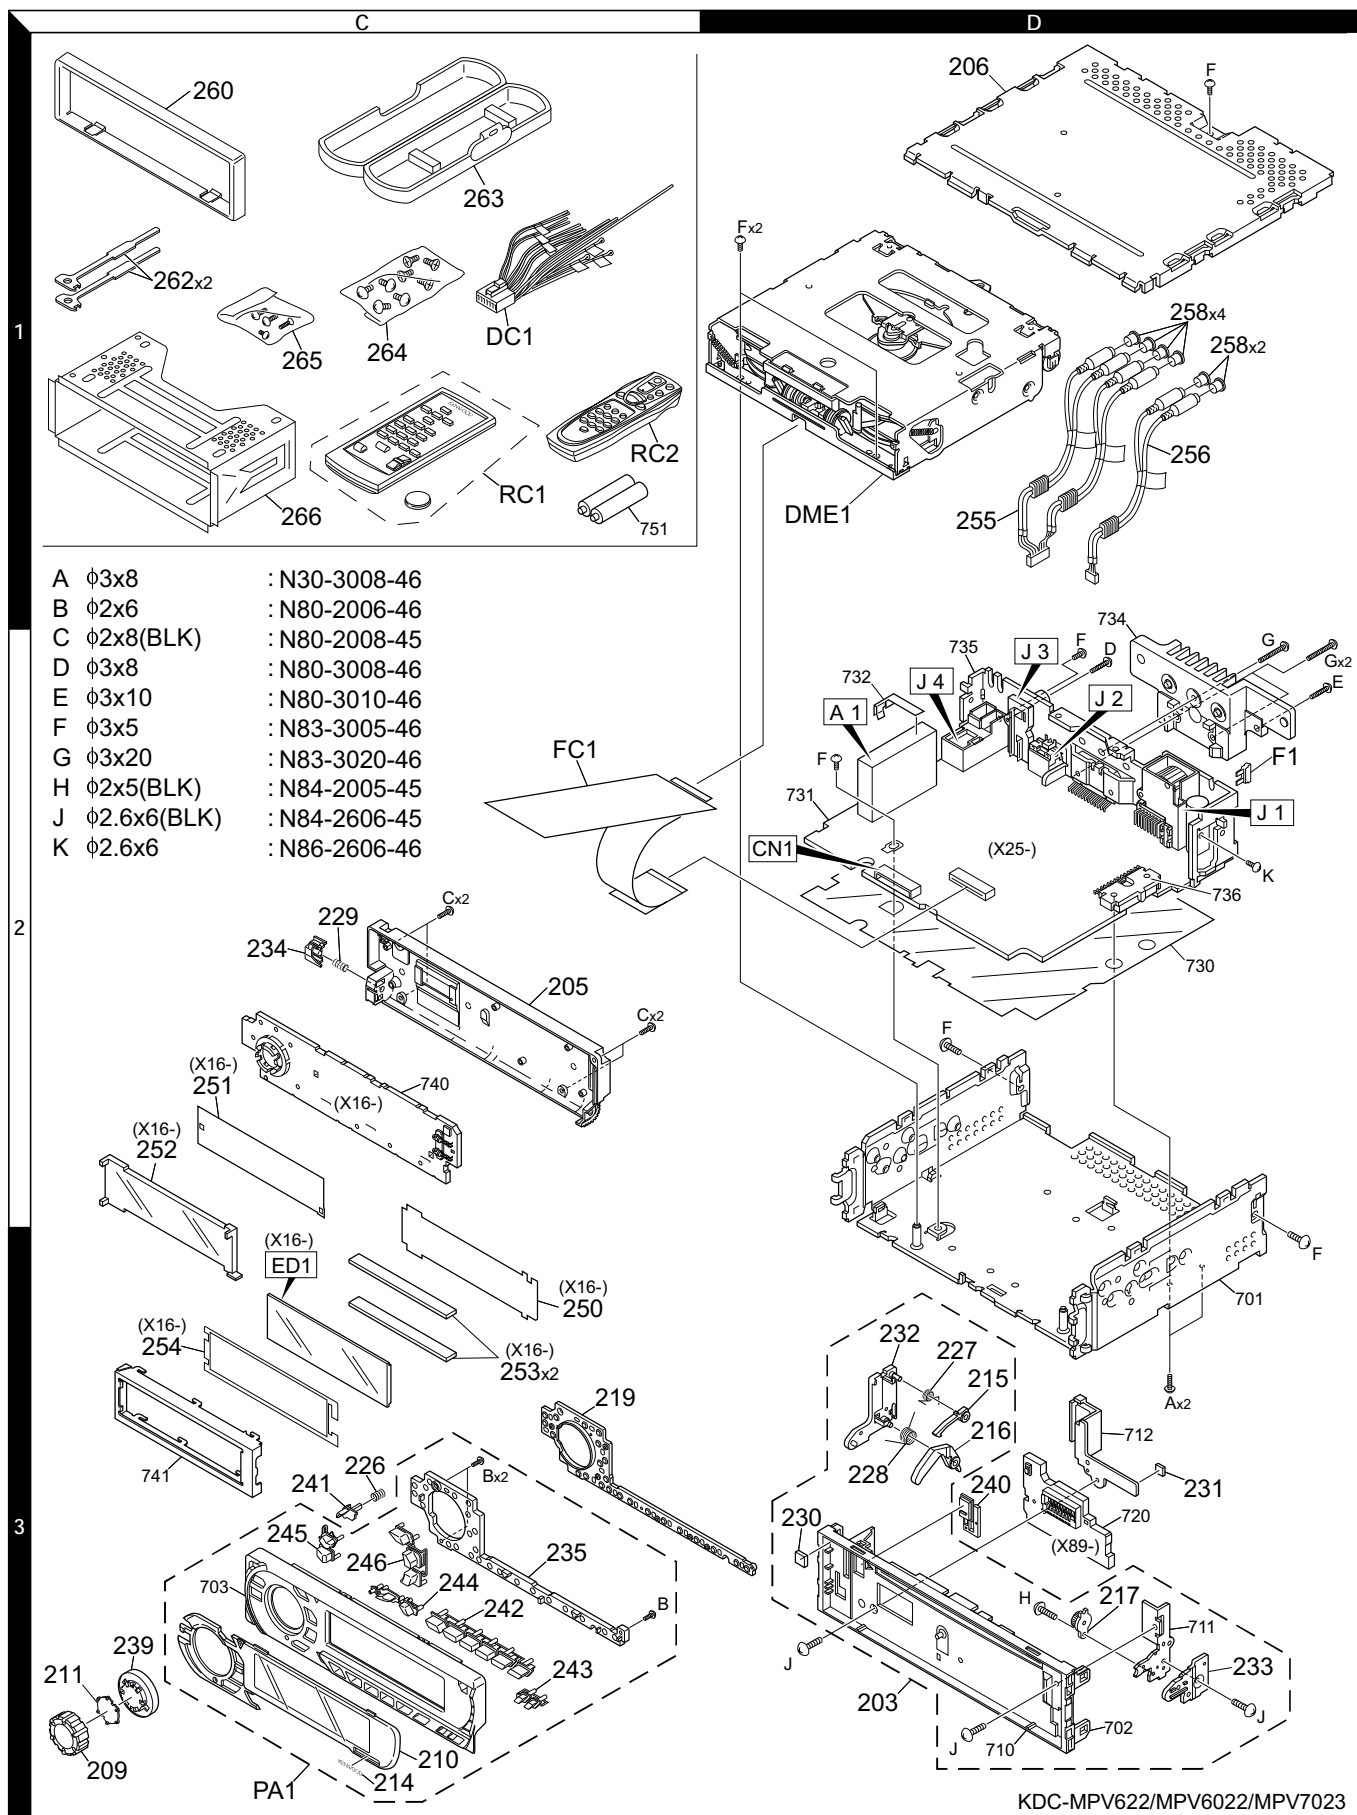

KDC-MPV622/MPV6022/MPV7023

Parts with the exploded numbers larger than 700 are not supplied.

# KDC-MPV6022/622/7023

## PARTS LIST

\* New Parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

| Ref. No.                          | A<br>d<br>d | N<br>e<br>w | Parts No.   | Description                    | Dest<br>inati<br>on |
|-----------------------------------|-------------|-------------|-------------|--------------------------------|---------------------|
| <b>KDC-MPV6022/MPV622/MPV7023</b> |             |             |             |                                |                     |
| 203                               | 3D          | *           | A22-2982-02 | SUB PANEL ASSY                 | K7                  |
| 205                               | 2C          | *           | A46-1778-01 | REAR COVER                     |                     |
| 206                               | 1D          | *           | A52-0829-02 | TOP PLATE                      |                     |
| 263                               | 1C          | *           | A02-1486-13 | PLASTIC CABINET ASSY           |                     |
| PA1                               | 3C          | *           | A64-2826-02 | PANEL ASSY                     |                     |
| PA1                               | 3C          | *           | A64-2831-02 | PANEL ASSY                     | M                   |
| PA1                               | 3C          | *           | A64-2854-02 | PANEL ASSY                     | K8                  |
| RC1                               | 1C          | *           | A70-2026-05 | REMOTE CONTROLLER ASSY(RC-410) | M                   |
| RC2                               | 1C          | *           | A70-2040-05 | REMOTE CONTROLLER ASSY(RC-505) | K7K8                |
| -                                 |             |             | B46-0100-50 | WARRANTY CARD                  | K7K8                |
| -                                 |             |             | B46-0606-04 | ID CARD                        |                     |
| -                                 |             |             | B46-0612-14 | ID CARD                        |                     |
| -                                 |             |             | B46-0653-03 | USER CARD                      |                     |
| -                                 |             | *           | B64-2516-00 | INST. MANUAL (ENG,FRE,SPA)     |                     |
| -                                 |             | *           | B64-2517-00 | INST. MANUAL (ENG,T-CHI)       | M                   |
| -                                 |             | *           | B64-2518-00 | INST. MANUAL (ARABIC)          | M                   |
| 209                               | 3C          | *           | B09-0529-03 | CAP                            | K8                  |
| 210                               | 3C          | *           | B10-4306-01 | FRONT GLASS                    |                     |
| 210                               | 3C          | *           | B10-4308-01 | FRONT GLASS                    |                     |
| 210                               | 3C          | *           | B10-4327-01 | FRONT GLASS                    | K7                  |
| 211                               | 3C          | *           | B19-2200-04 | LIGHTING BOARD                 | K8M                 |
| 214                               | 3C          | *           | B43-1284-04 | BADGE                          |                     |
| 260                               | 1C          | *           | B07-3022-02 | ESCUTCHEON                     |                     |
| 215                               | 3D          | *           | D10-4730-03 | LEVER                          |                     |
| 216                               | 3D          | *           | D10-4731-03 | LEVER                          |                     |
| 217                               | 3D          | *           | D39-0255-05 | DAMPER                         | K7                  |
| 262                               | 1C          | *           | D10-4589-04 | LEVER                          |                     |
| 219                               | 3C          | *           | E29-1927-02 | CONDUCTIVE RUBBER              |                     |
| 255                               | 1D          | *           | E30-6228-05 | CORD WITH PINPLUG              |                     |
| 256                               | 1D          | *           | E30-6229-05 | CORD WITH PINPLUG              |                     |
| DC1                               | 1C          | *           | E30-4940-05 | DC CORD                        | K8M                 |
| FC1                               | 2C          | *           | E39-0438-05 | FLAT CABLE (24PIN)             |                     |
| 258                               | 1D          | *           | F29-0626-04 | INSULATING COVER               |                     |
| F1                                | 2D          | *           | F52-0006-05 | FUSE(MINI BLADE TYPE : 10A)    |                     |
| 226                               | 3C          | *           | G01-3129-04 | COMPRESSION SPRING             |                     |
| 227                               | 3D          | *           | G01-3171-04 | TORSION COIL SPRING            | K7                  |
| 228                               | 3D          | *           | G01-3172-04 | TORSION COIL SPRING            |                     |
| 229                               | 2C          | *           | G01-3173-04 | COMPRESSION SPRING             |                     |
| 230                               | 3D          | *           | G13-1267-04 | CUSHION                        |                     |
| 231                               | 3D          | *           | G13-1268-04 | CUSHION                        |                     |
| -                                 |             |             | H10-4856-12 | POLYSTYRENE FOAMED FIXTURE     | K7                  |
| -                                 |             |             | H25-0329-04 | PROTECTION BAG (280X450X0.03)  |                     |
| -                                 |             |             | H25-0337-04 | PROTECTION BAG (180X300X0.03)  |                     |
| -                                 |             | *           | H54-2781-03 | ITEM CARTON CASE               |                     |
| -                                 |             | *           | H54-2782-03 | ITEM CARTON CASE               |                     |
| -                                 |             | *           | H54-2784-03 | ITEM CARTON CASE               | M                   |
| 232                               | 3D          | *           | J19-5203-03 | HOLDER                         | K8                  |
| 233                               | 3D          | *           | J19-5204-03 | HOLDER                         |                     |
| 234                               | 2C          | *           | J19-5205-03 | HOLDER                         |                     |
| 235                               | 3C          | *           | J19-5206-02 | HOLDER                         |                     |
| 266                               | 1C          | *           | J21-9716-03 | MOUNTING HARDWARE ASSY         |                     |

K7: KDC-MPV622 K8: KDC-MPV6022 M: KDC-MPV7023

| Ref. No.                         | A<br>d<br>d | N<br>e<br>w | Parts No.    | Description                | Dest<br>inati<br>on |
|----------------------------------|-------------|-------------|--------------|----------------------------|---------------------|
| 239                              | 3C          | *           | K23-1072-13  | KNOB (VOL)                 |                     |
| 240                              | 3D          | *           | K24-4000-03  | KNOB (EJECT)               |                     |
| 241                              | 3C          | *           | K24-4002-04  | KNOB (DOOR)                |                     |
| 242                              | 3C          | *           | K25-1521-03  | KNOB (1-6)                 |                     |
| 243                              | 3C          | *           | K25-1522-04  | KNOB (DISP)                |                     |
| 244                              | 3C          | *           | K25-1523-03  | KNOB (PLAY,STOP)           |                     |
| 245                              | 3C          | *           | K25-1524-03  | KNOB (FM,AM)               |                     |
| 246                              | 3C          | *           | K25-1525-03  | KNOB (SRC,SKIP)            |                     |
| 264                              | 1C          | *           | N99-1719-05  | SCREW SET                  |                     |
| 265                              | 1C          | *           | N99-1730-15  | SCREW SET                  |                     |
| A                                | 3D          | *           | N30-3008-46  | PAN HEAD MACHINE SCREW     |                     |
| B                                | 3C          | *           | N80-2006-46  | PAN HEAD TAPTITE SCREW     |                     |
| C                                | 2C          | *           | N80-2008-45  | PAN HEAD TAPTITE SCREW     |                     |
| F                                | 2D          | *           | N83-3005-46  | PAN HEAD TAPTITE SCREW     |                     |
| H                                | 3D          | *           | N84-2005-45  | PAN HEAD TAPTITE SCREW     |                     |
| J                                | 3D          | *           | N84-2606-45  | PAN HEAD TAPTITE SCREW     |                     |
| -                                |             | *           | X16-2040-10  | SWITCH UNIT                |                     |
| -                                |             | *           | X25-9570-12  | ELECTRIC UNIT              |                     |
| -                                |             | *           | X25-9570-13  | ELECTRIC UNIT              | K7<br>K8<br>M       |
| -                                |             | *           | X25-9570-21  | ELECTRIC UNIT              |                     |
| -                                |             | *           | X89-2570-10  | DAUGHTER UNIT              |                     |
| DME1                             | 1D          | *           | X92-4670-00  | MECHANISM ASSY (DXM-6410W) |                     |
| <b>SWITCH UNIT (X16-2040-10)</b> |             |             |              |                            |                     |
| 250                              | 3C          | *           | B11-1396-04  | OPTICAL DIFFUSER           |                     |
| 251                              | 2C          | *           | B11-1397-04  | REFLECTION SHEET           |                     |
| 252                              | 2C          | *           | B19-2198-03  | LIGHTING BOARD             |                     |
| D1 -14                           |             | *           | B30-1605-05  | LED(2COLOR PG/RED)         |                     |
| D15 ,16                          |             | *           | B30-1564-05  | LED(1608,BLUE)             |                     |
| D50 ,51                          |             | *           | B30-1599-05  | LED(NICHIA FULL)           |                     |
| ED1                              |             | *           | B38-1105-05  | LIQUID CRYSTAL             |                     |
| C1                               |             | *           | CK73GB1H102K | CHIP C 1000PF              | K                   |
| C2 -5                            |             | *           | CK73GB1C104K | CHIP C 0.10UF              | K                   |
| C6                               |             | *           | CK73GB1H103K | CHIP C 0.010UF             | K                   |
| C7                               |             | *           | CK73FB1A225K | CHIP C 2.2UF               | K                   |
| C8 -11                           |             | *           | CK73GB1H103K | CHIP C 0.010UF             | K                   |
| C50                              |             | *           | CK73GB0J105K | CHIP C 1.0UF               | K                   |
| C51 -53                          |             | *           | CK73GB1H103K | CHIP C 0.010UF             | K                   |
| C54 -56                          |             | *           | CK73FB0J475K | CHIP C 4.7UF               | K                   |
| C57 -62                          |             | *           | CK73GB1H103K | CHIP C 0.010UF             | K                   |
| 253                              | 3C          | *           | E29-1925-04  | CONDUCTIVE RUBBER          |                     |
| J1                               |             | *           | E59-0829-05  | RECTANGULAR PLUG           |                     |
| 254                              | 3C          | *           | F09-1823-04  | SHEET                      |                     |
| CP1                              |             | *           | R90-0714-05  | MULTI-COMP 10K X4          |                     |
| CP3                              |             | *           | R90-1016-05  | MULTI-COMP 470 X4          |                     |
| CP50,51                          |             | *           | R90-0720-05  | MULTI-COMP 100K X4         |                     |
| CP52                             |             | *           | R90-1022-05  | MULTI-COMP 470 X2          |                     |
| R1                               |             | *           | RK73GB2A303J | CHIP R 30K                 | J 1/10W             |
| R2 -5                            |             | *           | RK73GB2A222J | CHIP R 2.2K                | J 1/10W             |
| R6                               |             | *           | RK73GB2A473J | CHIP R 47K                 | J 1/10W             |
| R9                               |             | *           | RK73GB2A392J | CHIP R 3.9K                | J 1/10W             |
| R10                              |             | *           | RK73GB2A751J | CHIP R 750                 | J 1/10W             |
| R11                              |             | *           | RK73GB2A4R7J | CHIP R 4.7                 | J 1/10W             |

△ indicates safety critical components.

# KDC-MPV6022/622/7023

## PARTS LIST

\* New Parts  
Parts without **Parts No.** are not supplied.  
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.  
Teile ohne **Parts No.** werden nicht geliefert.

| Ref. No.                                        | A<br>d<br>d | N<br>e<br>w | Parts No.                                                                     | Description                                                                                                | Dest<br>inati<br>on |
|-------------------------------------------------|-------------|-------------|-------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|---------------------|
| R13<br>R15<br>R16 -19<br>R20 -23<br>R24 ,25     |             |             | RK73GB2A101J<br>RK73GB2A102J<br>RK73GB2A222J<br>RK73FB2B331J<br>RK73FB2B361J  | CHIP R 100 J 1/10W<br>CHIP R 1.0K J 1/10W<br>CHIP R 2.2K J 1/10W<br>CHIP R 330 J 1/8W<br>CHIP R 360 J 1/8W |                     |
| R50<br>R51 ,52<br>R53 ,54<br>R55 ,56<br>R57 ,58 |             |             | RK73GB2A4R7J<br>RK73GB2A103J<br>RK73GB2A151J<br>RK73GB2A221J<br>RK73GB2A151J  | CHIP R 4.7 J 1/10W<br>CHIP R 10K J 1/10W<br>CHIP R 150 J 1/10W<br>CHIP R 220 J 1/10W<br>CHIP R 150 J 1/10W |                     |
| R59 ,60<br>R61 -64                              |             |             | RK73GB2A221J<br>RK73GB2A391J                                                  | CHIP R 220 J 1/10W<br>CHIP R 390 J 1/10W                                                                   |                     |
| S24                                             |             |             | T99-0446-05                                                                   | ROTARY ENCODER                                                                                             |                     |
| D17<br>IC1<br>IC2<br>IC3<br>Q1                  |             |             | MA3082-L<br>LC75808W<br>PNA4S22M<br>M62333FP<br>2SC4081                       | ZENER DIODE<br>MOS-IC<br>ANALOGUE IC<br>MOS-IC<br>TRANSISTOR                                               |                     |
| Q2<br>Q3 ,4<br>Q50 -58                          |             |             | DTA114EUA<br>2SC4081<br>2SC4081                                               | DIGITAL TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR                                                             |                     |
| ELECTRIC UNIT (X25-9570-12/13/21)               |             |             |                                                                               |                                                                                                            |                     |
| C1<br>C2<br>C3<br>C4 -6<br>C21                  |             |             | C90-5235-05<br>CK73GB1H103K<br>CK73GB1H102K<br>CK73GB1H103K<br>CE04NW1A101M   | ELECTRO 220UF 16WV<br>CHIP C 0.010UF K<br>CHIP C 1000PF K<br>CHIP C 0.010UF K<br>ELECTRO 100UF 10WV        |                     |
| C22 ,23<br>C24 ,25<br>C26<br>C27<br>C28         |             |             | CE04NW1E100M<br>CE04NW1C100M<br>CE04NW1E100M<br>CE04CW1H100M<br>C90-2926-05   | ELECTRO 10UF 25WV<br>ELECTRO 10UF 16WV<br>ELECTRO 10UF 25WV<br>ELECTRO 10UF 50WV<br>ELECTRO 220UF 16WV     | △                   |
| C29<br>C32<br>C33<br>C34<br>C41 ,42             |             |             | CE04NW1C100M<br>CK73GB1E223K<br>CE04NW1H010M<br>CK73GB1H103K<br>C90-2963-05   | ELECTRO 10UF 16WV<br>CHIP C 0.022UF K<br>ELECTRO 1.0UF 50WV<br>CHIP C 0.010UF K<br>ELECTRO 100UF 25WV      |                     |
| C43 ,44<br>C45<br>C51 ,52<br>C111<br>C119       |             |             | C90-5418-05<br>CK73GB1A224K<br>CK73GB1H103K<br>CK73GB1H102K<br>CK73GB1H103K   | ELECTRO 220UF 16WV<br>CHIP C 0.22UF K<br>CHIP C 0.010UF K<br>CHIP C 1000PF K<br>CHIP C 0.010UF K           |                     |
| C163<br>C201,202<br>C203<br>C204<br>C205        |             |             | CK73GB1A224K<br>CE04NW1HR47M<br>CK73GB1H223K<br>CK73GB1H103K<br>CK73GB1A474K  | CHIP C 0.22UF K<br>ELECTRO 0.47UF 50WV<br>CHIP C 0.022UF K<br>CHIP C 0.010UF K<br>CHIP C 0.47UF K          |                     |
| C206<br>C207,208<br>C209<br>C210<br>C211        |             |             | CC73GCH1H151J<br>CE04NW1H010M<br>CE04NW1H2R2M<br>CK73GB1H103K<br>CE04NW1A470M | CHIP C 150PF J<br>ELECTRO 1.0UF 50WV<br>ELECTRO 2.2UF 50WV<br>CHIP C 0.010UF K<br>ELECTRO 47UF 10WV        | K8M                 |
| C212,213                                        |             |             | CK73GB1C104K                                                                  | CHIP C 0.10UF K                                                                                            |                     |

### SWITCH UNIT (X16-2040-10)

| Ref. No.                                             | A<br>d<br>d                | N<br>e<br>w | Parts No.                                                                     | Description                                                                                                                        | Dest<br>inati<br>on |
|------------------------------------------------------|----------------------------|-------------|-------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|---------------------|
| C214,215<br>C216,217<br>C218-221<br>C251-254<br>C255 |                            |             | CK73GB1H103K<br>CE04NW1H010M<br>CE04NW1H0R1M<br>C90-5296-05<br>CE04NW1HR47M   | CHIP C 0.010UF K<br>ELECTRO 1.0UF 50WV<br>ELECTRO 0.1UF 50WV<br>NP-ELECT 0.22UF 50WV<br>ELECTRO 0.47UF 50WV                        |                     |
| C256<br>C257<br>C258<br>C301,302<br>C303             |                            |             | CE04NW1C220M<br>CK73GB1C104K<br>CE04NW1H010M<br>CE04NW1HR47M<br>CE04NW1A470M  | ELECTRO 22UF 16WV<br>CHIP C 0.10UF K<br>ELECTRO 1.0UF 50WV<br>ELECTRO 0.47UF 50WV<br>ELECTRO 47UF 10WV                             |                     |
| C304<br>C351-354<br>C355<br>C356,357<br>C358,359     |                            |             | CK73GB1H103K<br>CE04NW1C100M<br>CE04NW1A470M<br>CK73GB1H103K<br>CE04NW1HR47M  | CHIP C 0.010UF K<br>ELECTRO 10UF 16WV<br>ELECTRO 47UF 10WV<br>CHIP C 0.010UF K<br>ELECTRO 0.47UF 50WV                              | K8M<br>K8M          |
| C360<br>C401-404<br>C405<br>C406<br>C407             |                            |             | CK73GB1H103K<br>CK73GB1C104K<br>CK73GB0J105K<br>CK73GB1C104K<br>CC73GCH1H220J | CHIP C 0.010UF K<br>CHIP C 0.10UF K<br>CHIP C 1.0UF K<br>CHIP C 0.10UF K<br>CHIP C 22PF J                                          | K8M                 |
| C408<br>C409<br>C500<br>C501,502<br>C503             |                            |             | CC73GCH1H270J<br>CE04CW0J470M<br>CK73FB1A225K<br>CK73GB1H103K<br>CK73GB1H472K | CHIP C 27PF J<br>ELECTRO 47UF 6.3WV<br>CHIP C 2.2UF K<br>CHIP C 0.010UF K<br>CHIP C 4700PF K                                       |                     |
| CN1<br>CN2<br>CN3<br>CN4<br>J1                       |                            |             | E41-0167-05<br>E41-0168-05<br>E40-3238-05<br>E40-3241-05<br>E58-0863-15       | PIN ASSY (18PIN)<br>FLAT CABLE CONNECTOR (24PIN)<br>PIN ASSY (3PIN)<br>PIN ASSY (6PIN)<br>RECTANGULAR RECEPTACLE                   | K7<br>K8M           |
| J2<br>J3<br>J4<br>P1<br>W1 -9                        |                            |             | E56-0834-05<br>E63-0887-05<br>E04-0312-05<br>E23-0745-05<br>E31-0001-00       | CYLINDRICAL RECEPTACLE<br>PIN JACK<br>RF COAXIAL CABLE RECEPTACLE<br>TERMINAL<br>JUMPER WIRE                                       |                     |
| W11 -35                                              |                            |             | E31-0001-00                                                                   | JUMPER WIRE                                                                                                                        |                     |
| L1<br>L3<br>L6 -8<br>L10 ,11<br>L12                  |                            |             | L33-1170-05<br>L33-1123-05<br>L40-4795-91<br>L40-4795-91<br>L33-1925-05       | CHOKE COIL ASSY<br>LINE FILTER COIL<br>SMALL FIXED INDUCTOR (4.7UH,J)<br>SMALL FIXED INDUCTOR (4.7UH,J)<br>CHOKE COIL              |                     |
| X1<br>X2                                             |                            |             | L78-0821-05<br>L77-2738-05                                                    | RESONATOR (20MHz)<br>CRYSTAL RESONATOR (32.768KHz)                                                                                 |                     |
| D<br>E<br>F<br>G<br>K                                | 2D<br>2D<br>2D<br>2D<br>2D |             | N80-3008-46<br>N80-3010-46<br>N83-3005-46<br>N83-3020-46<br>N86-2606-46       | PAN HEAD TAPTITE SCREW<br>PAN HEAD TAPTITE SCREW<br>PAN HEAD TAPTITE SCREW<br>PAN HEAD TAPTITE SCREW<br>BINDING HEAD TAPTITE SCREW |                     |
| R1<br>R2<br>R3<br>R4<br>R5 ,6                        |                            |             | RK73GB2A823J<br>RK73GB2A363J<br>RK73GB2A104J<br>RK73FB2B203J<br>RK73GB2A103J  | CHIP R 82K J 1/10W<br>CHIP R 36K J 1/10W<br>CHIP R 100K J 1/10W<br>CHIP R 20K J 1/8W<br>CHIP R 10K J 1/10W                         |                     |

K7: KDC-MPV622 K8: KDC-MPV6022 M: KDC-MPV7023

△ indicates safety critical components.

# KDC-MPV6022/622/7023

## PARTS LIST

\* New Parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

### ELECTRIC UNIT (X25-9570-12/13/21)

| Ref. No. | A<br>d<br>d | N<br>e<br>w | Parts No.    | Description          | Dest<br>inati<br>on | Ref. No. | A<br>d<br>d | N<br>e<br>w | Parts No.    | Description          | Dest<br>inati<br>on |
|----------|-------------|-------------|--------------|----------------------|---------------------|----------|-------------|-------------|--------------|----------------------|---------------------|
| R7       |             |             | RK73GB2A223J | CHIP R 22K J 1/10W   |                     | R254     |             |             | RK73GB2A152J | CHIP R 1.5K J 1/10W  |                     |
| R8       |             |             | RD14DB2H332J | SMALL-RD 3.3K J 1/2W |                     | R255     |             |             | RK73GB2A101J | CHIP R 100 J 1/10W   |                     |
| R9       |             |             | RD14BB2C333J | RD 33K J 1/6W        |                     | R256     |             |             | RK73GB2A103J | CHIP R 10K J 1/10W   |                     |
| R10      |             |             | RK73GB2A223J | CHIP R 22K J 1/10W   |                     | R257     |             |             | RK73GB2A153J | CHIP R 15K J 1/10W   |                     |
| R11      |             |             | RK73GB2A104J | CHIP R 100K J 1/10W  |                     | R259-262 |             |             | RK73GB2A223J | CHIP R 22K J 1/10W   |                     |
| R12      |             |             | RK73GB2A473J | CHIP R 47K J 1/10W   |                     | R301,302 |             |             | RK73EB2E100J | CHIP R 10 J 1/4W     |                     |
| R13      |             |             | RK73GB2A562J | CHIP R 5.6K J 1/10W  |                     | R303     |             |             | RK73EB2E101J | CHIP R 100 J 1/4W    |                     |
| R21      |             |             | RK73FB2B152J | CHIP R 1.5K J 1/8W   |                     | R304,305 |             |             | RK73EB2E472J | CHIP R 4.7K J 1/4W   |                     |
| R22 ,23  |             |             | RD14BB2C472J | RD 4.7K J 1/6W       |                     | R306     |             |             | RK73EB2E4R7J | CHIP R 4.7 J 1/4W    |                     |
| R24 -28  |             |             | RK73GB2A103J | CHIP R 10K J 1/10W   |                     | R307-309 |             |             | RK73EB2E472J | CHIP R 4.7K J 1/4W   |                     |
| R32      |             |             | RK73GB2A104J | CHIP R 100K J 1/10W  |                     | R310,311 |             |             | RK73EB2E101J | CHIP R 100 J 1/4W    |                     |
| R34      |             |             | RK73EB2E103J | CHIP R 10K J 1/4W    |                     | R312-315 |             |             | RK73GB2A104J | CHIP R 100K J 1/10W  |                     |
| R35      |             |             | RK73GB2A104J | CHIP R 100K J 1/10W  |                     | R351,352 |             |             | RK73GB2A361J | CHIP R 360 J 1/10W   |                     |
| R36      |             |             | RK73GB2A222J | CHIP R 2.2K J 1/10W  |                     | R355,356 |             |             | RK73GB2A223J | CHIP R 22K J 1/10W   |                     |
| R41 -44  |             |             | RK73GB2A473J | CHIP R 47K J 1/10W   |                     | R357,358 |             |             | RK73EB2E181J | CHIP R 180 J 1/4W    |                     |
| R51 ,52  |             |             | RK73GB2A222J | CHIP R 2.2K J 1/10W  |                     | R359,360 |             |             | RK73GB2A361J | CHIP R 360 J 1/10W   |                     |
| R53 -56  |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W  |                     | R361,362 |             |             | RK73GB2A223J | CHIP R 22K J 1/10W   |                     |
| R57 ,58  |             |             | RK73GB2A222J | CHIP R 2.2K J 1/10W  |                     | R363,364 |             |             | RK73EB2E181J | CHIP R 180 J 1/4W    |                     |
| R59      |             |             | RK73GB2A101J | CHIP R 100 J 1/10W   |                     | R365     |             |             | RK73FB2B4R7J | CHIP R 4.7 J 1/8W    | K8M                 |
| R60      |             |             | RK73GB2A222J | CHIP R 2.2K J 1/10W  |                     | R373     |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W  | K8M                 |
| R61 ,62  |             |             | RK73GB2A104J | CHIP R 100K J 1/10W  |                     | R376,377 |             |             | RK73GB2A912J | CHIP R 9.1K J 1/10W  | K8M                 |
| R63      |             |             | RK73GB2A222J | CHIP R 2.2K J 1/10W  |                     | R378,379 |             |             | RK73FB2B102J | CHIP R 1.0K J 1/8W   | K8M                 |
| R64 ,65  |             |             | RK73GB2A104J | CHIP R 100K J 1/10W  |                     | R401-408 |             |             | RK73GB2A104J | CHIP R 100K J 1/10W  |                     |
| R67 ,68  |             |             | RK73GB2A471J | CHIP R 470 J 1/10W   |                     | R409     |             |             | RK73GB2A153J | CHIP R 15K J 1/10W   |                     |
| R101     |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W  |                     | R410     |             |             | RK73GB2A104J | CHIP R 100K J 1/10W  | K7K8                |
| R102     |             |             | RK73GB2A471J | CHIP R 470 J 1/10W   |                     | R410,411 |             |             | RK73GB2A104J | CHIP R 100K J 1/10W  | M                   |
| R103     |             |             | RK73GB2A472J | CHIP R 4.7K J 1/10W  |                     | R412     |             |             | RK73GB2A104J | CHIP R 100K J 1/10W  | K7K8                |
| R104     |             |             | RK73GB2A471J | CHIP R 470 J 1/10W   |                     | R415,416 |             |             | RK73GB2A104J | CHIP R 100K J 1/10W  |                     |
| R105     |             |             | RK73GB2A472J | CHIP R 4.7K J 1/10W  |                     | R419     |             |             | RK73GB2A104J | CHIP R 100K J 1/10W  | K7M                 |
| R106     |             |             | RK73GB2A222J | CHIP R 2.2K J 1/10W  |                     | R419,420 |             |             | RK73GB2A104J | CHIP R 100K J 1/10W  | K8                  |
| R151     |             |             | RK73GB2A471J | CHIP R 470 J 1/10W   |                     | R421     |             |             | RK73GB2A104J | CHIP R 100K J 1/10W  | K7M                 |
| R152     |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W  |                     | R422     |             |             | RK73GB2A103J | CHIP R 10K J 1/10W   |                     |
| R153     |             |             | RK73GB2A471J | CHIP R 470 J 1/10W   |                     | W105-108 |             |             | R92-1252-05  | CHIP R 0 OHM J 1/16W | K8M                 |
| R154     |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W  |                     | S1       |             |             | S74-0821-05  | MICRO SWITCH         |                     |
| R155     |             |             | RK73GB2A222J | CHIP R 2.2K J 1/10W  |                     | D1       |             |             | 1N5393G-M6   | DIODE                |                     |
| R156-158 |             |             | RK73GB2A471J | CHIP R 470 J 1/10W   |                     | D2 -4    |             |             | MA4068(N)-M  | ZENER DIODE          |                     |
| R159     |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W  |                     | D21      |             |             | MA4082(N)-L  | ZENER DIODE          |                     |
| R160     |             |             | RK73GB2A222J | CHIP R 2.2K J 1/10W  |                     | D22 -25  |             |             | AM01Z        | DIODE                |                     |
| R161     |             |             | RK73GB2A225J | CHIP R 2.2M J 1/10W  |                     | D26      |             |             | DAN202U      | DIODE                |                     |
| R162,163 |             |             | RK73GB2A104J | CHIP R 100K J 1/10W  |                     | D26      |             |             | MA142WK      | DIODE                |                     |
| R164,165 |             |             | RK73GB2A473J | CHIP R 47K J 1/10W   |                     | D41      |             |             | SFPB-54V     | DIODE                |                     |
| R166     |             |             | RK73GB2A472J | CHIP R 4.7K J 1/10W  |                     | D151-162 |             |             | DA204K       | DIODE                |                     |
| R167     |             |             | RK73GB2A474J | CHIP R 470K J 1/10W  |                     | D151-162 |             |             | KDS226       | DIODE                |                     |
| R168     |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W  |                     | D163     |             |             | MA4062-L     | ZENER DIODE          |                     |
| R185,186 |             |             | RK73GB2A474J | CHIP R 470K J 1/10W  |                     | D164     |             |             | MA4120-L     | ZENER DIODE          |                     |
| R187     |             |             | RK73GB2A222J | CHIP R 2.2K J 1/10W  |                     | D165     |             |             | MA4062-L     | ZENER DIODE          |                     |
| R188     |             |             | RK73GB2A473J | CHIP R 47K J 1/10W   |                     | D166     |             |             | DA204U       | DIODE                |                     |
| R201     |             |             | RK73GB2A103J | CHIP R 10K J 1/10W   |                     | D201,202 |             |             | RD6.8M(B2)   | ZENER DIODE          |                     |
| R202-204 |             |             | RK73GB2A472J | CHIP R 4.7K J 1/10W  |                     | D203-205 |             |             | DAP202U      | DIODE                |                     |
| R205     |             |             | RK73GB2A222J | CHIP R 2.2K J 1/10W  |                     | D203-205 |             |             | MA142WA      | DIODE                |                     |
| R206-208 |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W  |                     | D251-258 |             |             | AM01Z        | DIODE                |                     |
| R209,210 |             |             | RK73GB2A103J | CHIP R 10K J 1/10W   |                     | D269-271 |             |             | 1SS133       | DIODE                |                     |
| R211,212 |             |             | RK73GB2A333J | CHIP R 33K J 1/10W   |                     | D301     |             |             | MA4062-L     | ZENER DIODE          |                     |
| R251     |             |             | RK73GB2A103J | CHIP R 10K J 1/10W   |                     | D303,304 |             |             | MA4062-L     | ZENER DIODE          |                     |
| R252,253 |             |             | RK73GB2A473J | CHIP R 47K J 1/10W   |                     |          |             |             |              |                      |                     |

K7: KDC-MPV622 K8: KDC-MPV6022 M: KDC-MPV7023

△ indicates safety critical components.

# KDC-MPV6022/622/7023

## PARTS LIST

\* New Parts  
Parts without **Parts No.** are not supplied.  
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.  
Teile ohne **Parts No.** werden nicht geliefert.

### ELECTRIC UNIT (X25-9570-12/13/21)

| Ref. No.                                         | A<br>d<br>d | N<br>e<br>w | Parts No.                                                                      | Description                                                                                                                  | Dest<br>inati<br>on |
|--------------------------------------------------|-------------|-------------|--------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------|---------------------|
| D307,308<br>D309-311<br>D356<br>D357,358<br>D359 |             |             | MA4062-L<br>MA4068(N)-M<br>MA4062-L<br>MA4068(N)-M<br>DA204U                   | ZENER DIODE<br>ZENER DIODE<br>ZENER DIODE<br>ZENER DIODE<br>DIODE                                                            | K8M<br>K8M<br>K8M   |
| D401<br>IC1<br>IC2<br>IC3<br>IC4                 |             | *           | 1SS133<br>UPD703030GC012<br>TDA7411<br>BA4911-V4<br>TA8273H                    | DIODE<br>MI-COM IC<br>ANALOGUE IC<br>ANALOGUE IC<br>ANALOGUE IC                                                              |                     |
| IC6<br>IC8<br>IC9<br>Q1 -3<br>Q4                 |             | *           | HD74HC27FP<br>PST3436UL<br>SI-8050JD<br>2SC4081<br>2SA1036K                    | MOS-IC<br>MOS-IC<br>ANALOGUE IC<br>TRANSISTOR<br>TRANSISTOR                                                                  |                     |
| Q21<br>Q22 ,23<br>Q31<br>Q31<br>Q31              |             |             | 2SD2375<br>UMC2N<br>DTC144EUA<br>KRC404<br>UN5213                              | TRANSISTOR<br>TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR                                   |                     |
| Q41<br>Q151<br>Q151<br>Q151<br>Q152              |             |             | 2SC4081<br>DTA114YUA<br>KRA307<br>UN5114<br>2SA1576A                           | TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>TRANSISTOR                                   |                     |
| Q153<br>Q153<br>Q153<br>Q154<br>Q201             |             |             | DTC144EUA<br>KRC404<br>UN5213<br>2SA1577<br>DTC143TUA                          | DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>TRANSISTOR<br>DIGITAL TRANSISTOR                           |                     |
| Q201<br>Q201<br>Q350<br>Q350<br>Q350             |             |             | KRC410<br>UN5216<br>DTA124EUA<br>KRA303<br>UN5112                              | DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR                   |                     |
| Q351,352<br>Q351,352<br>Q351,352<br>Q354<br>Q354 |             |             | DTC143TUA<br>KRC410<br>UN5216<br>DTA124EUA<br>KRA303                           | DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR                   |                     |
| Q354<br>Q355,356<br>Q355,356<br>Q355,356<br>TH1  |             |             | UN5112<br>DTC143TUA<br>KRC410<br>UN5216<br>PTH9C42BE471Q                       | DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>POSITIVE RESISTOR                    |                     |
| A1                                               |             | *           | X86-3720-11                                                                    | FRONT-END UNIT                                                                                                               |                     |
| CD PLAYER UNIT (X32-5410-00)                     |             |             |                                                                                |                                                                                                                              |                     |
| C1<br>C2<br>C3<br>C4<br>C5                       |             |             | C92-0628-05<br>CK73FB1A105K<br>CK73FB1A225K<br>CK73GB1H103K<br>CC73GCH1H680J   | CHIP-TAN 10UF 10WV<br>CHIP C 1.0UF K<br>CHIP C 2.2UF K<br>CHIP C 0.010UF K<br>CHIP C 68PF J                                  |                     |
| C6<br>C7                                         |             |             | CC73GCH1H681J<br>CK73GB1H104K                                                  | CHIP C 680PF J<br>CHIP C 0.10UF K                                                                                            |                     |
| C8<br>C9 ,10<br>C11<br>C12<br>C13                |             |             | CK73GB1H222K<br>CK73GB1H104K<br>CC73GCH1H681J<br>CK73GB1H222K<br>CC73GCH1H680J | CHIP C 2200PF K<br>CHIP C 0.10UF K<br>CHIP C 680PF J<br>CHIP C 2200PF K<br>CHIP C 68PF J                                     |                     |
| C15<br>C16<br>C17<br>C18<br>C19 ,20              |             |             | CK73EB1A475K<br>CK73GB1H104K<br>CK73GB1H331K<br>CK73GB1H472K<br>CK73GB1H104K   | CHIP C 4.7UF K<br>CHIP C 0.10UF K<br>CHIP C 330PF K<br>CHIP C 4700PF K<br>CHIP C 0.10UF K                                    |                     |
| C21<br>C22<br>C23<br>C26<br>C27                  |             |             | CK73EB1A475K<br>CK73GB0J105K<br>CK73FB1A225K<br>CK73GB1H104K<br>C92-0712-05    | CHIP C 4.7UF K<br>CHIP C 1.0UF K<br>CHIP C 2.2UF K<br>CHIP C 0.10UF K<br>CHIP-TAN 22UF 6.3WV                                 |                     |
| C28<br>C29<br>C30<br>C31 -35<br>C36              |             |             | CK73GB1H102K<br>CK73GB1H331K<br>CK73GB1H152K<br>CK73GB1H104K<br>C92-0712-05    | CHIP C 1000PF K<br>CHIP C 330PF K<br>CHIP C 1500PF K<br>CHIP C 0.10UF K<br>CHIP-TAN 22UF 6.3WV                               |                     |
| C41<br>C42<br>C45<br>C47<br>C48                  |             |             | CK73GB1H104K<br>CK73EB1A475K<br>CK73GB1H102K<br>C92-0628-05<br>CK73GB1H104K    | CHIP C 0.10UF K<br>CHIP C 4.7UF K<br>CHIP C 1000PF K<br>CHIP-TAN 10UF 10WV<br>CHIP C 0.10UF K                                |                     |
| C50<br>C52<br>C53<br>C55<br>C56                  |             |             | CK73GB1H104K<br>CK73GB1H152K<br>CK73GB1H104K<br>CC73GCH1H470J<br>CC73GCH1H680J | CHIP C 0.10UF K<br>CHIP C 1500PF K<br>CHIP C 0.10UF K<br>CHIP C 47PF J<br>CHIP C 68PF J                                      |                     |
| C57<br>C59<br>C61<br>C63<br>C65                  |             |             | CK73GB1H104K<br>CK73GB1H104K<br>CK73GB1H104K<br>CC73GCH1H020C<br>CK73GB1H104K  | CHIP C 0.10UF K<br>CHIP C 0.10UF K<br>CHIP C 0.10UF K<br>CHIP C 2.0PF C<br>CHIP C 0.10UF K                                   |                     |
| C67<br>C68<br>C70<br>C74<br>C75                  |             |             | CK73GB1H222K<br>CC73GCH1H060D<br>CK73GB1H104K<br>CK73GB1H682K<br>CK73GB1H332K  | CHIP C 2200PF K<br>CHIP C 6.0PF D<br>CHIP C 0.10UF K<br>CHIP C 6800PF K<br>CHIP C 3300PF K                                   |                     |
| C76<br>C77<br>C78<br>C79 -82<br>C83              |             |             | CK73GB1H103K<br>CK73GB1H104K<br>CK73EB1A475K<br>CK73GB1H152K<br>CK73GB1H104K   | CHIP C 0.010UF K<br>CHIP C 0.10UF K<br>CHIP C 4.7UF K<br>CHIP C 1500PF K<br>CHIP C 0.10UF K                                  |                     |
| C84<br>C85<br>C87<br>C88                         |             |             | C92-0628-05<br>CK73GB1H104K<br>CK73EB1A475K<br>CK73GB1H104K                    | CHIP-TAN 10UF 10WV<br>CHIP C 0.10UF K<br>CHIP C 4.7UF K<br>CHIP C 0.10UF K                                                   |                     |
| CN1<br>CN1<br>CN2<br>CN2                         |             |             | E40-9527-05<br>E41-0213-05<br>E40-9536-05<br>E41-0193-05                       | FLAT CABLE CONNECTOR (16PIN)<br>FLAT CABLE CONNECTOR (16PIN)<br>FLAT CABLE CONNECTOR (24PIN)<br>FLAT CABLE CONNECTOR (24PIN) |                     |
| L1                                               |             |             | L92-0329-05                                                                    | CHIP FERRITE                                                                                                                 |                     |

K7: KDC-MPV622 K8: KDC-MPV6022 M: KDC-MPV7023

⚠ indicates safety critical components.

# KDC-MPV6022/622/7023

## PARTS LIST

\* New Parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

### CD PLAYER UNIT (X32-5410-00)

| Ref. No. | A<br>d<br>d | N<br>e<br>w | Parts No.    | Description           | Dest<br>inati<br>on |
|----------|-------------|-------------|--------------|-----------------------|---------------------|
| L5       |             |             | L92-0329-05  | CHIP FERRITE          |                     |
| X1       |             |             | L78-0851-05  | RESONATOR (16.934MHZ) |                     |
| X2       |             |             | L78-0862-05  | RESONATOR (16.00MHZ)  |                     |
| CP1 ,2   |             |             | R90-1019-05  | MULTI-COMP 100 X2     |                     |
| CP4      |             |             | R90-0719-05  | MULTI-COMP 4.7K X2    |                     |
| CP5      |             |             | R90-0737-05  | MULTI-COMP 100K X2    |                     |
| CP6      |             |             | R90-1019-05  | MULTI-COMP 100 X2     |                     |
| CP7      |             |             | R90-0737-05  | MULTI-COMP 100K X2    |                     |
| CP13     |             |             | R90-0720-05  | MULTI-COMP 100K X4    |                     |
| CP15     |             |             | R90-0718-05  | MULTI-COMP 4.7K X4    |                     |
| CP16-22  |             |             | R90-1014-05  | MULTI-COMP 100 X4     |                     |
| CP23     |             |             | R90-0714-05  | MULTI-COMP 10K X4     |                     |
| CP24     |             |             | R90-0720-05  | MULTI-COMP 100K X4    |                     |
| R1       |             |             | R92-3044-05  | CHIP R 18K D 1/10W    |                     |
| R2       |             |             | R92-3041-05  | CHIP R 11K D 1/10W    |                     |
| R3       |             |             | RK73FB2B303J | CHIP R 30K J 1/8W     |                     |
| R4       |             |             | RK73GB2A222J | CHIP R 2.2K J 1/10W   |                     |
| R5       |             |             | RK73FB2B272J | CHIP R 2.7K J 1/8W    |                     |
| R6       |             |             | RK73FB2B331J | CHIP R 330 J 1/8W     |                     |
| R7 ,8    |             |             | RK73FB2B752J | CHIP R 7.5K J 1/8W    |                     |
| R9       |             |             | RK73FB2B272J | CHIP R 2.7K J 1/8W    |                     |
| R10      |             |             | RK73FB2B331J | CHIP R 330 J 1/8W     |                     |
| R11      |             |             | R92-3041-05  | CHIP R 11K D 1/10W    |                     |
| R12      |             |             | RK73FB2B303J | CHIP R 30K J 1/8W     |                     |
| R13      |             |             | R92-3044-05  | CHIP R 18K D 1/10W    |                     |
| R14      |             |             | RK73GB2A472J | CHIP R 4.7K J 1/10W   |                     |
| R16      |             |             | RK73GB2A123J | CHIP R 12K J 1/10W    |                     |
| R17      |             |             | RK73GB2A133J | CHIP R 13K J 1/10W    |                     |
| R18      |             |             | RK73GB2A472J | CHIP R 4.7K J 1/10W   |                     |
| R19 ,20  |             |             | RK73GB2A123J | CHIP R 12K J 1/10W    |                     |
| R21      |             |             | RK73GB2A432J | CHIP R 4.3K J 1/10W   |                     |
| R22      |             |             | RK73GB2A133J | CHIP R 13K J 1/10W    |                     |
| R23 ,24  |             |             | RK73GB2A104J | CHIP R 100K J 1/10W   |                     |
| R25      |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W   |                     |
| R26      |             |             | RK73GB2A104J | CHIP R 100K J 1/10W   |                     |
| R27      |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W   |                     |
| R28      |             |             | RK73GB2A103J | CHIP R 10K J 1/10W    |                     |
| R29      |             |             | RK73GB2A133J | CHIP R 13K J 1/10W    |                     |
| R30      |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W   |                     |
| R31      |             |             | RK73GB2A472J | CHIP R 4.7K J 1/10W   |                     |
| R32      |             |             | RK73GB2A103J | CHIP R 10K J 1/10W    |                     |
| R33      |             |             | RK73GB2A104J | CHIP R 100K J 1/10W   |                     |
| R34      |             |             | RK73GB2A183J | CHIP R 18K J 1/10W    |                     |
| R35      |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W   |                     |
| R36      |             |             | RK73GB2A163J | CHIP R 16K J 1/10W    |                     |
| R38      |             |             | RK73GB2A104J | CHIP R 100K J 1/10W   |                     |
| R39 -41  |             |             | RK73GB2A103J | CHIP R 10K J 1/10W    |                     |
| R42 ,43  |             |             | RK73GB2A104J | CHIP R 100K J 1/10W   |                     |
| R46      |             |             | RK73GB2A4R7J | CHIP R 4.7 J 1/10W    |                     |
| R47      |             |             | RK73GB2A104J | CHIP R 100K J 1/10W   |                     |
| R49      |             |             | RK73GB2A104J | CHIP R 100K J 1/10W   |                     |
| R50      |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W   |                     |
| R51      |             |             | RK73GB2A103J | CHIP R 10K J 1/10W    |                     |
| R52      |             |             | RK73GB2A104J | CHIP R 100K J 1/10W   |                     |

| Ref. No.                            | A<br>d<br>d | N<br>e<br>w | Parts No.      | Description                    | Dest<br>inati<br>on |
|-------------------------------------|-------------|-------------|----------------|--------------------------------|---------------------|
| R53                                 |             |             | RK73GB2A473J   | CHIP R 47K J 1/10W             |                     |
| R55                                 |             |             | RK73GB2A103J   | CHIP R 10K J 1/10W             |                     |
| R57                                 |             |             | RK73GB2A472J   | CHIP R 4.7K J 1/10W            |                     |
| R59                                 |             |             | RK73GB2A274J   | CHIP R 270K J 1/10W            |                     |
| R62 ,63                             |             |             | RK73GB2A302J   | CHIP R 3.0K J 1/10W            |                     |
| R67                                 |             |             | RK73GB2A682J   | CHIP R 6.8K J 1/10W            |                     |
| R69                                 |             |             | RK73GB2A333J   | CHIP R 33K J 1/10W             |                     |
| R70                                 |             |             | RK73GB2A103J   | CHIP R 10K J 1/10W             |                     |
| R71 ,72                             |             |             | RK73GB2A101J   | CHIP R 100 J 1/10W             |                     |
| R73                                 |             |             | RK73GB2A241J   | CHIP R 240 J 1/10W             |                     |
| R75                                 |             |             | RK73GB2A103J   | CHIP R 10K J 1/10W             |                     |
| R76                                 |             |             | RK73GB2A101J   | CHIP R 100 J 1/10W             |                     |
| R77                                 |             |             | RK73GB2A102J   | CHIP R 1.0K J 1/10W            |                     |
| R78                                 |             |             | RK73GB2A104J   | CHIP R 100K J 1/10W            |                     |
| W1                                  |             |             | R92-1252-05    | CHIP R 0 OHM J 1/16W           |                     |
| S1 ,2                               |             |             | S68-0863-05    | PUSH SWITCH                    |                     |
| S3                                  |             |             | S68-0862-05    | PUSH SWITCH                    |                     |
| D1                                  |             |             | DAP202U        | DIODE                          |                     |
| IC1                                 |             |             | TAR5S33        | ANALOGUE IC                    |                     |
| IC2                                 |             |             | NJM4580V       | ANALOGUE IC                    |                     |
| IC4                                 |             |             | BA5824FP       | ANALOGUE IC                    |                     |
| IC6                                 |             |             | L88MS33T       | ANALOGUE IC                    |                     |
| IC7                                 |             |             | 703033BYGC-J02 | MI-COM IC                      |                     |
| IC8                                 |             |             | TC74HCT7007AF  | MOS-IC                         |                     |
| IC11                                |             |             | UPD63760GJ     | MOS-IC                         |                     |
| IC13                                |             |             | IS41LV16257    | MEMORY IC                      |                     |
| IC13                                |             |             | MSM51V4265EP70 | MOS-IC                         |                     |
| Q1                                  |             |             | DTA143XUA      | DIGITAL TRANSISTOR             |                     |
| Q2 ,3                               |             |             | DTC124EUA      | DIGITAL TRANSISTOR             |                     |
| Q4                                  |             |             | MCH6101        | TRANSISTOR                     |                     |
| Q5                                  |             |             | DTA143EUA      | DIGITAL TRANSISTOR             |                     |
| <b>DAUGHTER UNIT (X89-2570-10)</b>  |             |             |                |                                |                     |
| D1                                  |             |             | B30-1566-05    | LED (1608,RED)                 |                     |
| C1                                  |             |             | CK73GB1H103K   | CHIP C 0.010UF K               |                     |
| CN1                                 |             |             | E41-0169-05    | SOCKET FOR PIN ASSY (18PIN)    |                     |
| J1                                  |             |             | E58-0865-05    | RECTANGULAR RECEPTACLE (16PIN) |                     |
| R1                                  |             |             | RK73EB2E102J   | CHIP R 1.0K J 1/4W             |                     |
| R2 -5                               |             |             | RK73EB2E471J   | CHIP R 470 J 1/4W              |                     |
| R6 ,7                               |             |             | RK73EB2E102J   | CHIP R 1.0K J 1/4W             |                     |
| R8                                  |             |             | RK73EB2E241J   | CHIP R 240 J 1/4W              |                     |
| R9 ,10                              |             |             | RK73EB2E471J   | CHIP R 470 J 1/4W              |                     |
| R11 -13                             |             |             | RK73EB2E102J   | CHIP R 1.0K J 1/4W             |                     |
| S1                                  |             |             | S70-0871-05    | TACT SWITCH                    |                     |
| <b>MECHANISM ASSY (X92-4670-00)</b> |             |             |                |                                |                     |
| 2                                   | 1B          |             | A10-4827-12    | CHASSIS                        |                     |
| 5                                   | 1B          |             | D10-4576-33    | ARM ASSY                       |                     |
| 8                                   | 1A          |             | D10-4579-03    | LEVER ASSY                     |                     |
| 10                                  | 3A          |             | D10-4581-13    | ARM                            |                     |
| 11                                  | 2A          |             | D10-4582-13    | ARM                            |                     |
| 12                                  | 3A          |             | D10-4583-03    | ARM                            |                     |

K7: KDC-MPV622 K8: KDC-MPV6022 M: KDC-MPV7023

△ indicates safety critical components.

# PARTS LIST

Teile ohne **Parts No.** werden nicht geliefert.

## MECHANISM ASSY (X92-4670-00)

| Ref. No. | A<br>d<br>d | N<br>e<br>w | Parts No. | Description | Dest<br>inati<br>on |
|----------|-------------|-------------|-----------|-------------|---------------------|
|          |             |             |           |             |                     |

⚠ indicates safety critical components.