


2. EXPLODED VIEWS AND PARTS LIST

2.1 PACKING (DEH-P740MP/XN/UC, DEH-P7400MP/XN/UC)

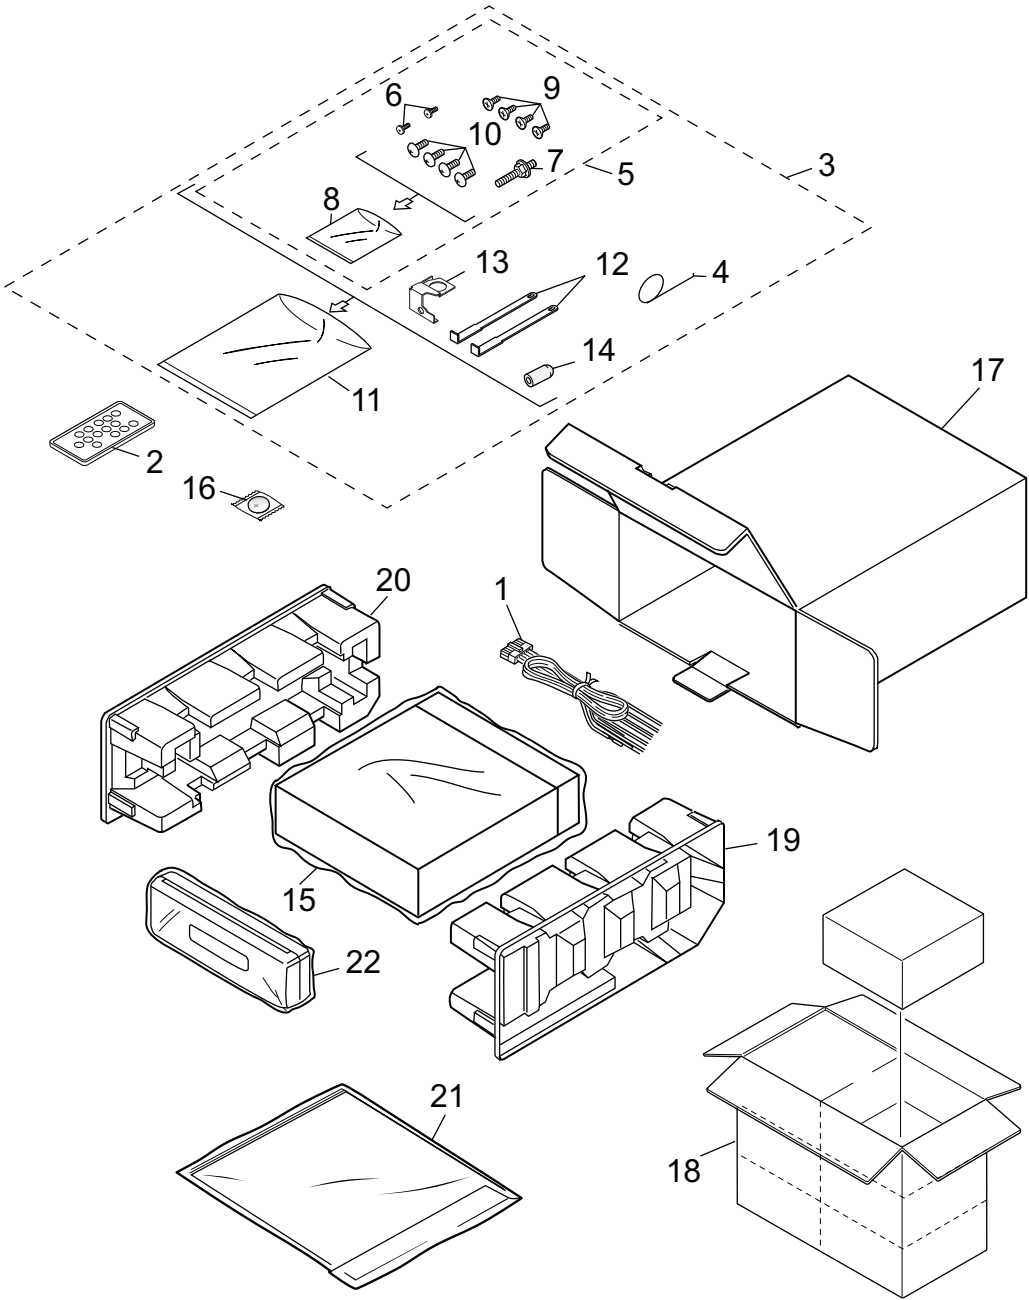

NOTE:

- Parts marked by “*” are generally unavailable because they are not in our Master Spare Parts List.
- Screws adjacent to ∇ mark on the product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

(1) PACKING SECTION PARTS LIST (DEH-P740MP/XN/UC, DEH-P7400MP/XN/UC)

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	Cord Assy	CDE6438	*	16	Battery	CEX1065
	2	Remote Control Unit	CXB8743		17	Carton	See Contrast table(2)
	3	Accessory Assy	CEA2773		18	Contain Box	See Contrast table(2)
	4	Spring	CBH1650		19	Protector	CHP2251
	5	Screw Assy	CEA2796		20	Protector	CHP2252
	6	Screw	BPZ20P060FZK		21-1	Owner's Manual	See Contrast table(2)
	7	Screw	CBA1002		21-2	Installation Manual	See Contrast table(2)
*	8	Polyethylene Bag	CEG-127	*	21-3	Caution Card	CRP1207
	9	Screw	CRZ50P090FMC	*	21-4	Warranty Card	See Contrast table(2)
	10	Screw	TRZ50P080FMC	*	21-5	Card	See Contrast table(2)
*	11	Polyethylene Bag	CEG-158		21-6	Polyethylene Bag	CEG1116
	12	Handle	CNC5395		22	Case Assy	CXB3520
	13	Earth Plate	CNC9450				
	14	Bush	CNV3930				
	15	Polyethylene Bag	CEG1173				

(2) CONTRAST TABLE


DEH-P740MP/XN/UC and DEH-P7400MP/XN/UC are constructed the same except for the following:

Mark No.	Symbol and Description	Part No.	
		DEH-P740MP/XN/UC	DEH-P7400MP/XN/UC
	17 Carton	CHG4612	CHG4611
	18 Contain Box	CHL4612	CHL4611
	21-1 Owner's Manual	CRD3509	CRD3510
	21-2 Installation Manual	CRD3526	CRD3527
*	21-4 Warranty Card	CRY1070	Not used
*	21-5 Card	Not used	ARY1048

● Owner's Manual, Installation Manual

Model	Part No.	Language
DEH-P740MP/XN/UC	CRD3509	English, French
	CRD3526	English, French
DEH-P7400MP/XN/UC	CRD3510	English, French
	CRD3527	English, French

2.2 PACKING (DEH-P7450MP/XN/ES)

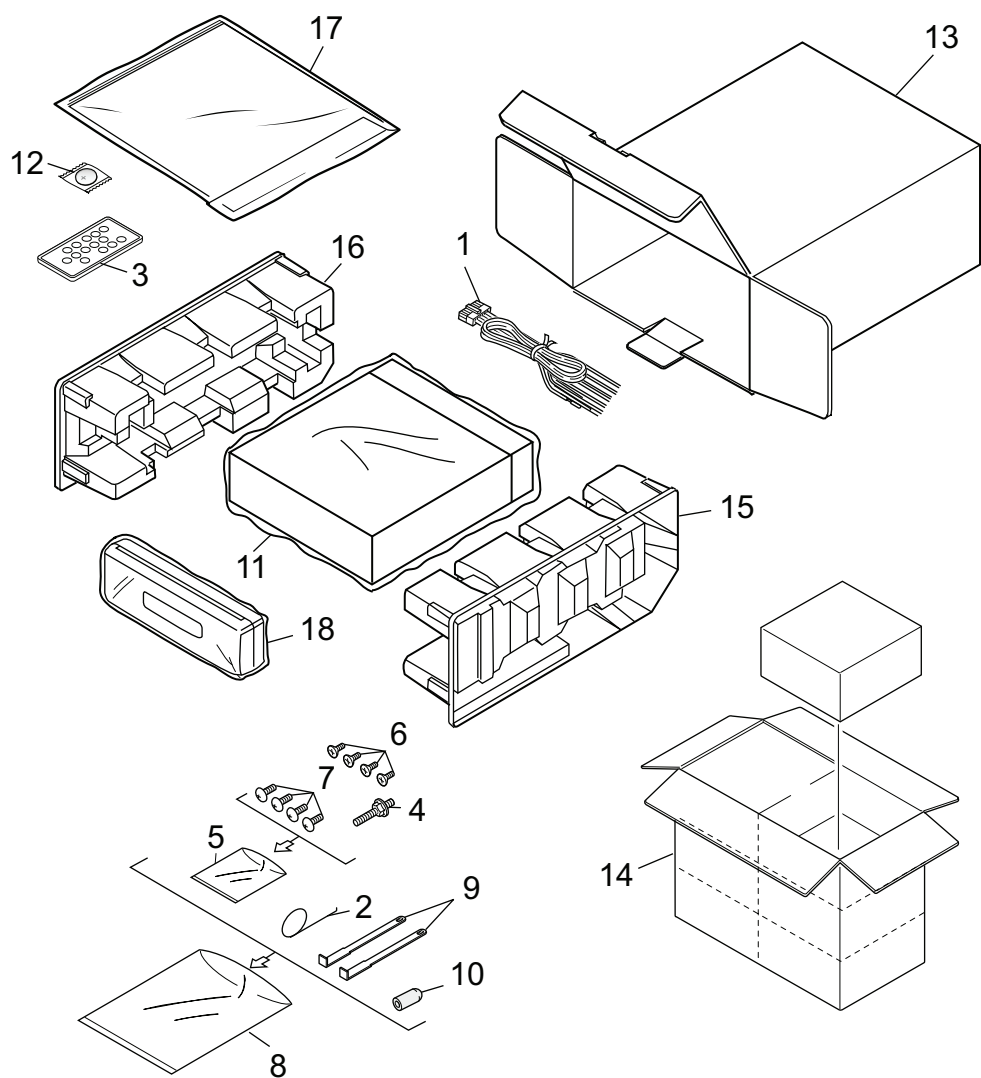


● **PACKING SECTION PARTS LIST (DEH-P7450MP/XN/ES)**

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	Cord Assy	CDE6438		16	Protector	CHP2252
	2	Spring	CBH1650		17-1	Owner's Manual	CRD3511
	3	Remote Control Unit	CXB8743		17-2	Owner's Manual	CRD3512
	4	Screw	CBA1002		17-3	Installation Manual	CRD3528
*	5	Polyethylene Bag	CEG-127	*	17-4	Caution Card	CRP1207
	6	Screw	CRZ50P090FMC		17-5	Polyethylene Bag	CEG1116
	7	Screw	TRZ50P080FMC		18	Case Assy	CXB3520
*	8	Polyethylene Bag	CEG-158				
	9	Handle	CNC5395				
	10	Bush	CNV3930				
	11	Polyethylene Bag	CEG-162				
*	12	Battery	CEX1065				
	13	Carton	CHG4610				
	14	Contain Box	CHL4610				
	15	Protector	CHP2251				

● **Owner's Manual, Installation Manual**

Part No.	Language
CRD3511	English, Spanish
CRD3512	Portuguese(B), Arabic
CRD3528	English, Spanish, Portuguese(B), Arabic


2.3 EXTERIOR (DEH-P740MP/XN/UC)

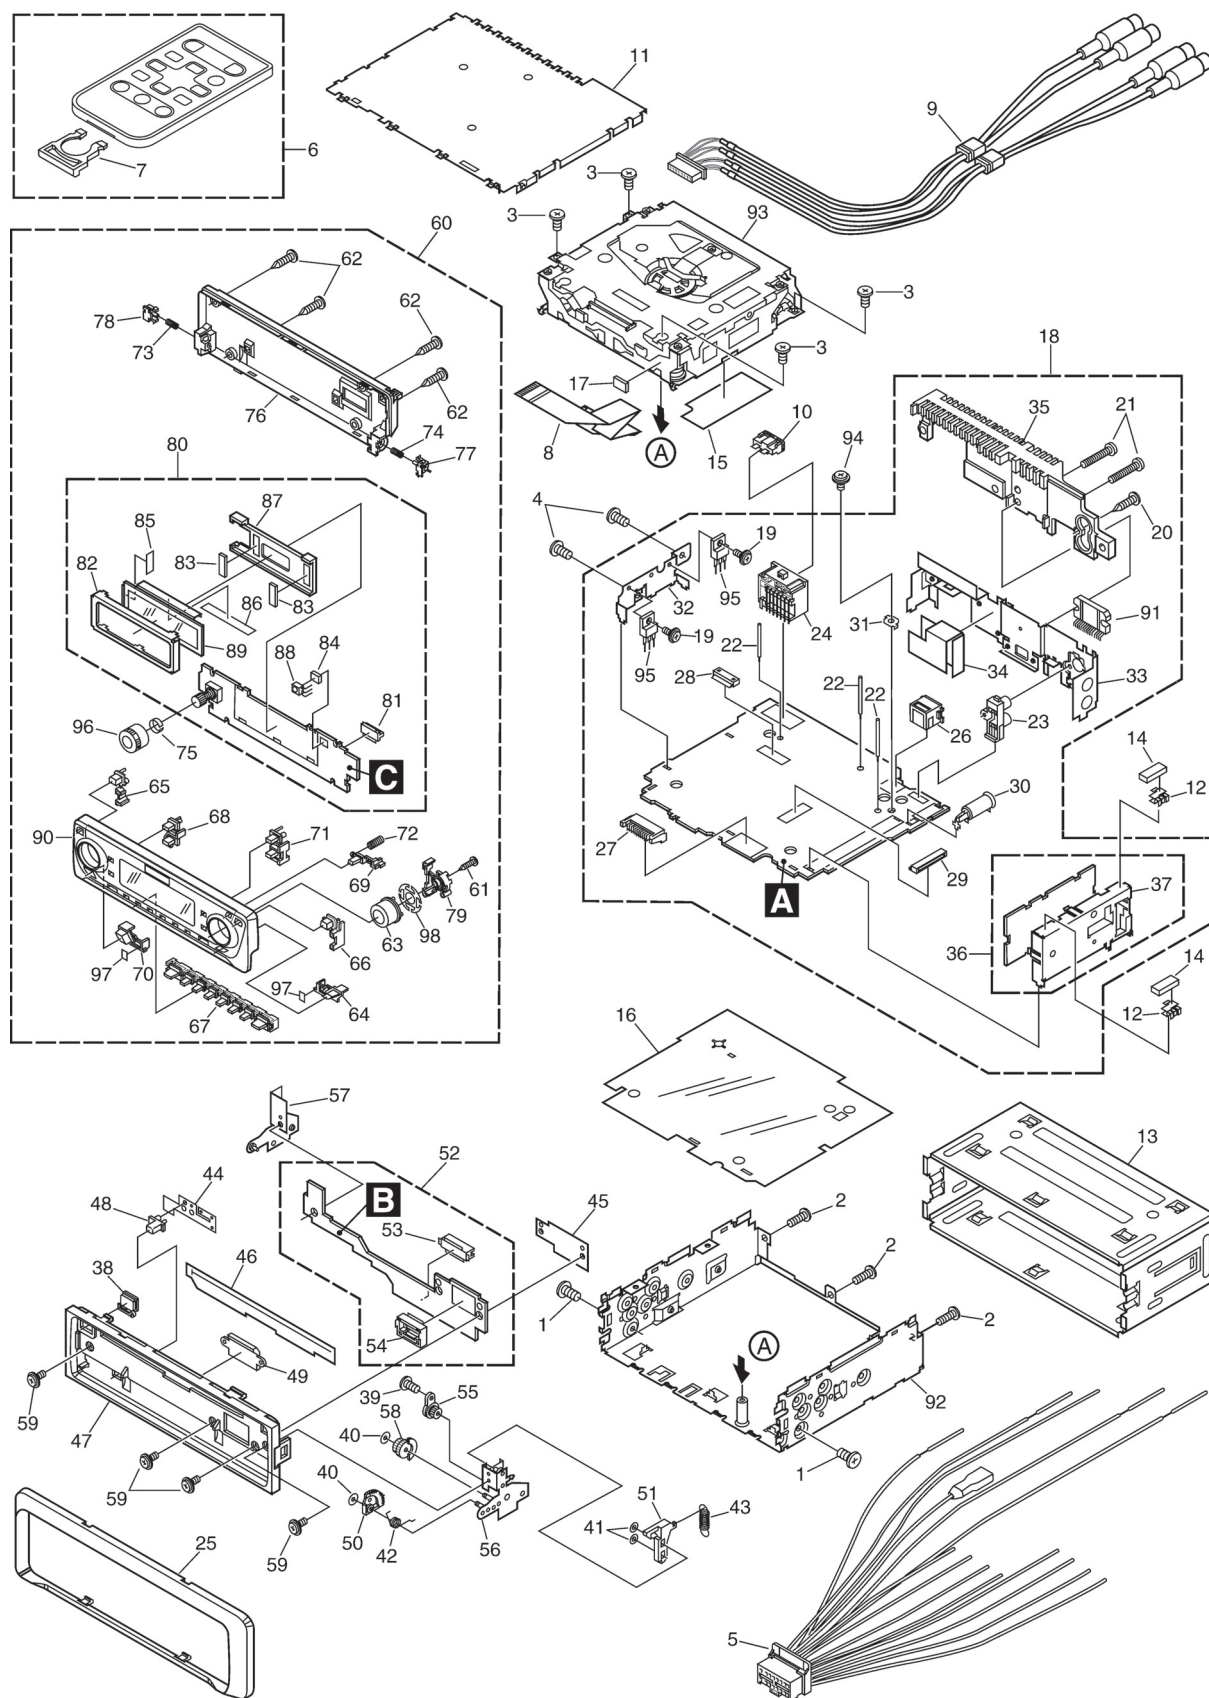

● EXTERIOR SECTION PARTS LIST (DEH-P740MP/XN/UC)

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	Screw	BMZ30P040FZK		51	Arm	CNV6508
	2	Screw	BMZ30P100FMC		52	Panel Unit	CWM7986
	3	Screw	BSZ26P060FMC		53	Socket(CN1850)	CKS3550
	4	Screw	BSZ30P040FMC		54	Connector(CN1851)	CKS4462
	5	Cord Assy	CDE6438		55	Damper Unit	CXB5070
	6	Remote Control Unit	CXB8743		56	Holder Unit	CXB6356
	7	Cover	CNS7068		57	Holder Unit	CXB6357
	8	Cable	CDE6718		58	Clutch Unit	CXB6358
	9	Cord Assy	CDE6747		59	Screw	IMS20P045FZK
	10	Fuse(10A)	CEK1136		60	Detach Grille Assy	CXB7913
	11	Case	CNB2686		61	Screw	BPZ20P080FMC
	12	Holder	CNC5704		62	Screw	BPZ20P100FZK
	13	Holder	CNC8659		63	Button(SELECT)	CAC7220
	14	Cushion	CNM4870		64	Button(SFEQ)	CAC7221
	15	Insulator	CNM7214		65	Button(ENT)	CAC7253
	16	Insulator	CNM7629		66	Button(AUDIO)	CAC7254
	17	Insulator	CNM7682		67	Button(1-6)	CAC7225
	18	Tuner Amp Unit	CWM7983		68	Button(DISPLAY)	CAC7226
	19	Screw	ASZ26P060FMC		69	Button(OPEN)	CAC7227
	20	Screw	BPZ26P120FMC		70	Button(EQ)	CAC7231
	21	Screw	BSZ26P160FMC		71	Button(FUNC)	CAC7489
	22	Clamper	CEF1007		72	Spring	CBH2630
	23	Pin Jack(CN351)	CKB1035		73	Spring	CBH2431
	24	Plug(CN901)	CKM1330		74	Spring	CBH2430
	25	Panel	CNS6935		75	Spring	CBL1470
	26	Connector(CN101)	CKS3408		76	Cover	CNS6740
	27	Plug(CN801)	CKS3537		77	Holder	CNV6505
	28	Connector(CN352)	CKS3602		78	Holder	CNV6506
	29	Connector(CN653)	CKS3833		79	Holder	CNV6909
	30	Antenna Jack(CN401)	CKX1056		80	Keyboard Unit	CWM7989
	31	Holder	CNC5399		81	Connector(CN1901)	CKS4524
	32	Holder	CNC8615		82	Holder	CNC9642
	33	Holder	CNC9469		83	Cushion	CNM6633
	34	Insulator	CNM6949		84	Cushion	CNM7469
	35	Heat Sink	CNR1583		85	Spacer	CNM7697
	36	FM/AM Tuner Unit	CWE1563		86	Spacer	CNM7698
	37	Holder	CNC8815		87	Holder	CNV6910
	38	Button(EJECT)	CAC6839		88	IC(IC1903)	TSOP1840SB3V
	39	Screw(M2x2)	CBA1176		89	OEL Unit	MXS8017
	40	Washer	CBF1038		90	Sub Grille Assy	CXB8942
	41	Washer	CBF1039		91	IC(IC301)	PAL007A
	42	Spring	CBH2428		92	Chassis Unit	CXB6100
	43	Spring	CBH2429		93	CD Mechanism Module(S9MP3)	CXK5555
	44	Spring	CBL1512		94	Screw	ISS26P055FUC
	45	Holder	CNC9096		95	Transistor(Q921,999)	2SD2396
	46	Cover	CNM6854	*	96	Knob	CAA2697
	47	Panel	CNS6278		97	Spacer	CNM7807
	48	Pin	CNV6486		98	Cushion	CNM7808
	49	Lighting Conductor	CNV6487				
	50	Gear	CNV6507				

2.4 EXTERIOR (DEH-P7400MP/XN/UC, DEH-P7450MP/XN/ES)

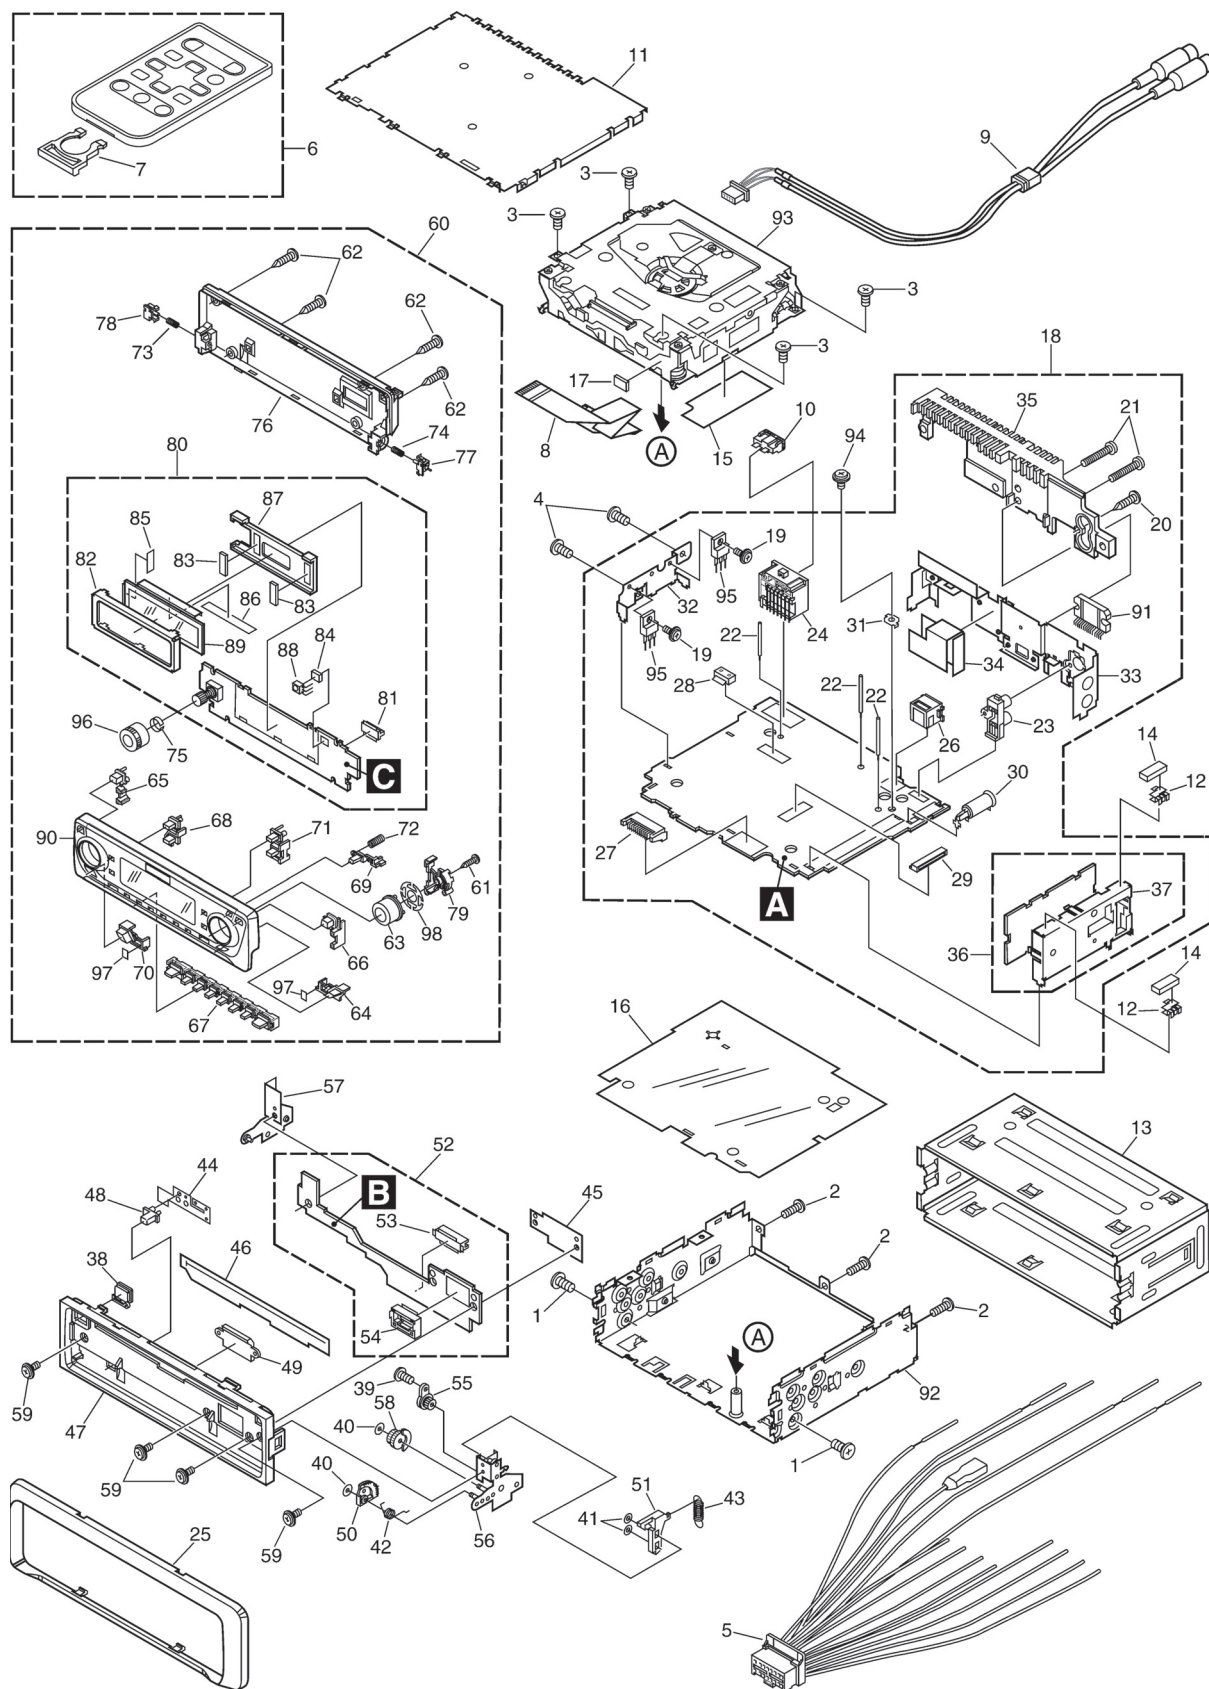

(1) EXTERIOR SECTION PARTS LIST (DEH-P7400MP/XN/UC, DEH-P7450MP/XN/ES)


Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	Screw	BMZ30P040FZK		51	Arm	CNV6508
	2	Screw	BMZ30P100FMC		52	Panel Unit	CWM7986
	3	Screw	BSZ26P060FMC		53	Socket(CN1850)	CKS3550
	4	Screw	BSZ30P040FMC		54	Connector(CN1851)	CKS4462
	5	Cord Assy	CDE6438		55	Damper Unit	CXB5070
	6	Remote Control Unit	CXB8743		56	Holder Unit	CXB6356
	7	Cover	CNS7068		57	Holder Unit	CXB6357
	8	Cable	CDE6718		58	Clutch Unit	CXB6358
	9	Cord Assy	CDE6454		59	Screw	IMS20P045FZK
	10	Fuse(10A)	CEK1136		60	Detach Grille Assy	See Contrast table(2)
	11	Case	CNB2686		61	Screw	BPZ20P080FMC
	12	Holder	CNC5704		62	Screw	BPZ20P100FZK
	13	Holder	CNC8659		63	Button(SELECT)	CAC7220
	14	Cushion	CNM4870		64	Button(SFEQ)	CAC7221
	15	Insulator	CNM7214		65	Button(ENT)	See Contrast table(2)
	16	Insulator	CNM7629		66	Button(AUDIO)	See Contrast table(2)
	17	Insulator	CNM7682		67	Button(1-6)	CAC7225
	18	Tuner Amp Unit	See Contrast table(2)		68	Button(DISPLAY)	CAC7226
	19	Screw	ASZ26P060FMC		69	Button(OPEN)	CAC7227
	20	Screw	BPZ26P120FMC		70	Button(EQ)	CAC7231
	21	Screw	BSZ26P160FMC		71	Button(FUNC)	CAC7489
	22	Clamper	CEF1007		72	Spring	CBH2630
	23	Pin Jack(CN351)	CKB1035		73	Spring	CBH2431
	24	Plug(CN901)	CKM1330		74	Spring	CBH2430
	25	Panel	See Contrast table(2)		75	Spring	CBL1470
	26	Connector(CN101)	CKS3408		76	Cover	CNS6740
	27	Plug(CN801)	CKS3537		77	Holder	CNV6505
	28	Connector(CN352)	CKS3598		78	Holder	CNV6506
	29	Connector(CN653)	CKS3833		79	Holder	CNV6909
	30	Antenna Jack(CN401)	CKX1056		80	Keyboard Unit	CWM8237
	31	Holder	CNC5399		81	Connector(CN1901)	CKS4524
	32	Holder	CNC8615		82	Holder	CNC9642
	33	Holder	CNC9470		83	Cushion	CNM6633
	34	Insulator	CNM6949		84	Cushion	CNM7469
	35	Heat Sink	CNR1583		85	Spacer	CNM7697
	36	FM/AM Tuner Unit	CWE1563		86	Spacer	CNM7698
	37	Holder	CNC8815		87	Holder	CNV6910
	38	Button(EJECT)	CAC6839		88	IC(IC1903)	TSOP1840SB3V
	39	Screw(M2x2)	CBA1176		89	OEL Unit	MXS8017
	40	Washer	CBF1038		90	Sub Grille Assy	See Contrast table(2)
	41	Washer	CBF1039		91	IC(IC301)	PAL007A
	42	Spring	CBH2428		92	Chassis Unit	CXB6100
	43	Spring	CBH2429		93	CD Mechanism Module(S9MP3)	CXK5555
	44	Spring	CBL1512		94	Screw	ISS26P055FUC
	45	Holder	CNC9096		95	Transistor(Q921,999)	2SD2396
	46	Cover	CNM6854	*	96	Knob	CAA2697
	47	Panel	CNS6278		97	Spacer	CNM7807
	48	Pin	CNV6486		98	Cushion	CNM7808
	49	Lighting Conductor	CNV6487				
	50	Gear	CNV6507				

(2) CONTRAST TABLE

DEH-P7400MP/XN/UC and DEH-P7450MP/XN/ES are constructed the same except for the following:

Mark No.	Symbol and Description	Part No.	
		DEH-P7400MP/XN/UC	DEH-P7450MP/XN/ES
18	Tuner Amp Unit	CWM8315	CWM8148
25	Panel	CNS6934	CNS6935
60	Detach Grille Assy	CXB8493	CXB8426
65	Button(ENT)	CAC7303	CAC7253
66	Button(AUDIO)	CAC7224	CAC7254
90	Sub Grille Assy	CXB8943	CXB8944

2.5 CD MECHANISM MODULE

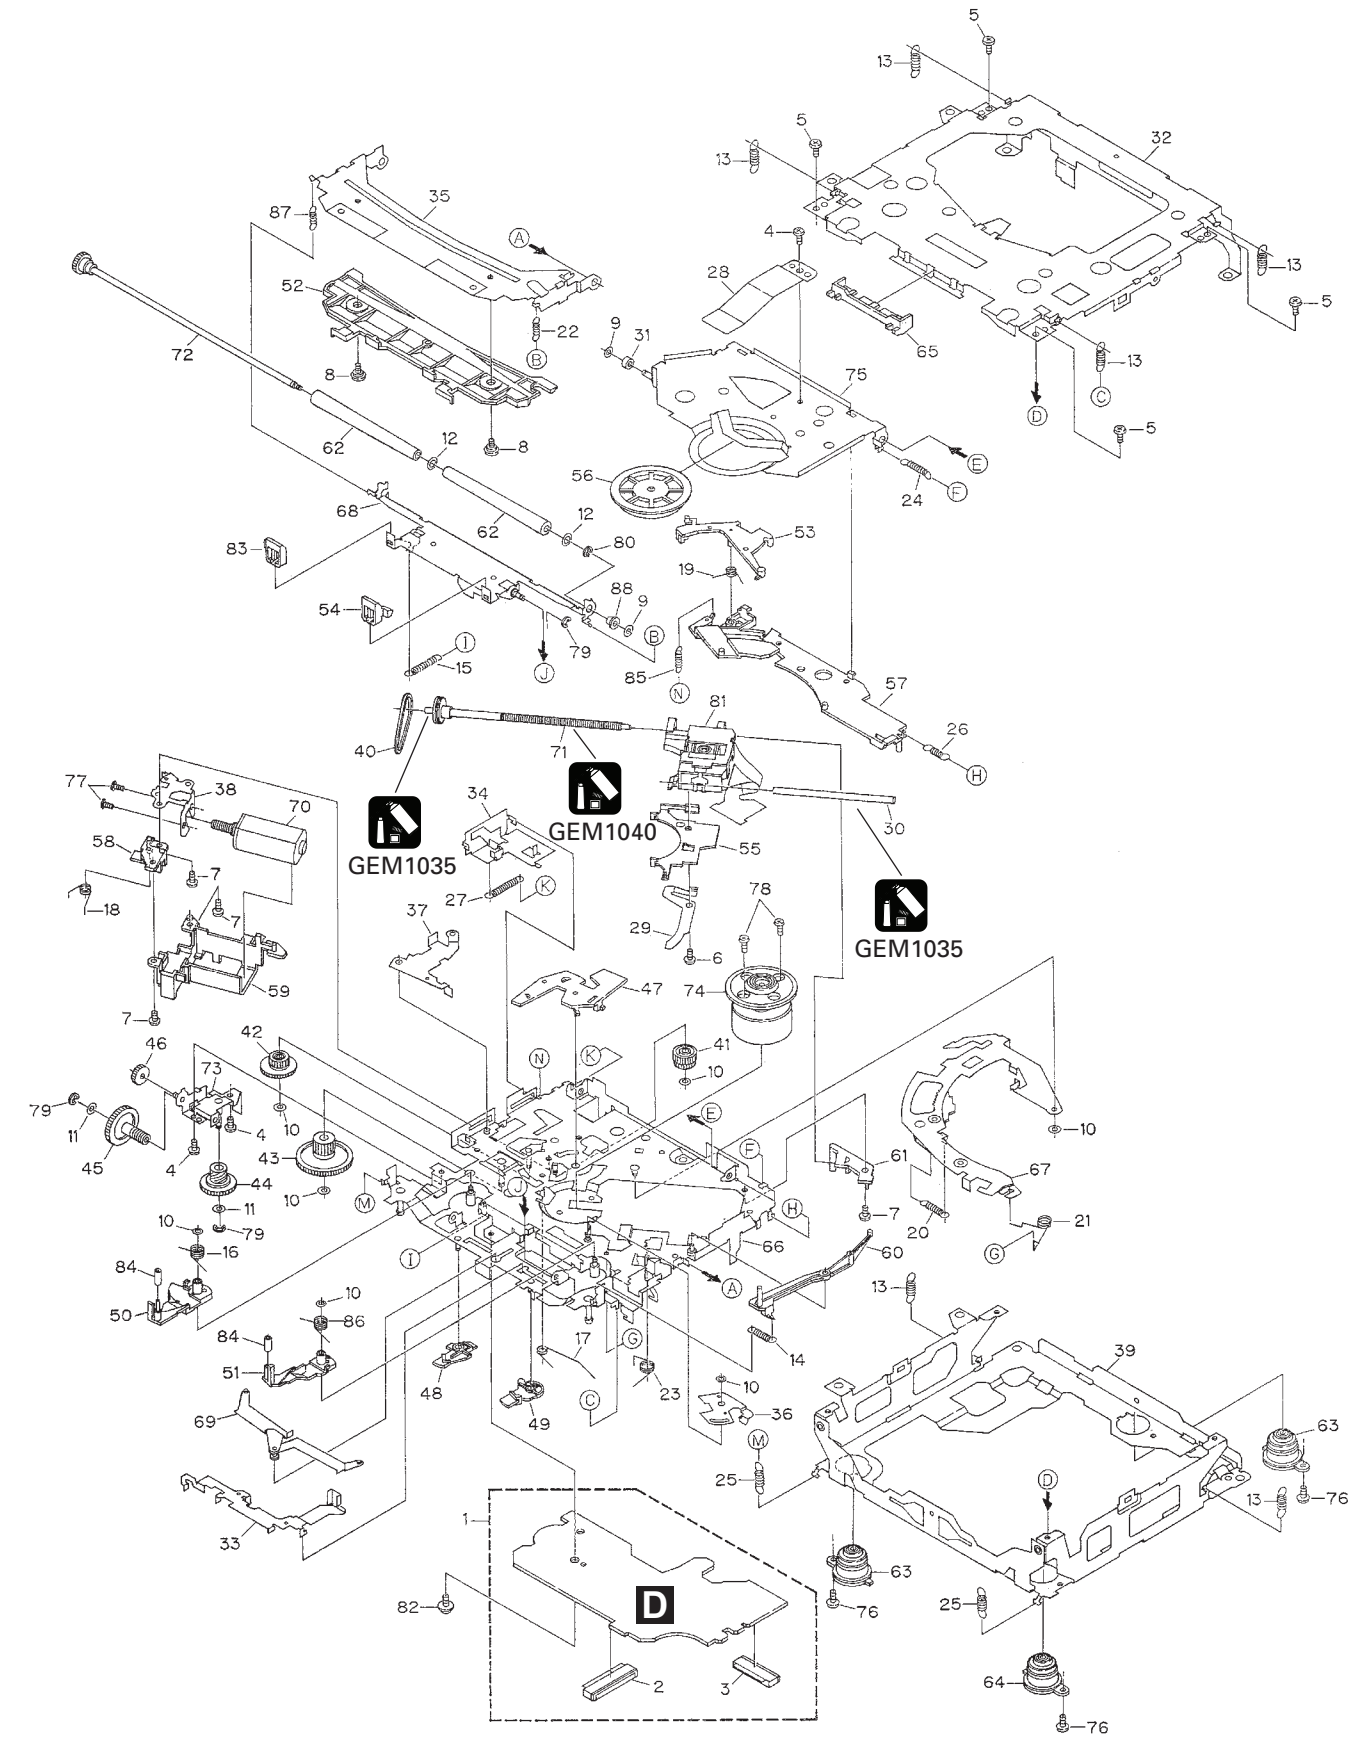

● CD MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	CD Core Unit(S9MP3)	CWX2617	46	Gear	CNV6320
2	Connector(CN901)	CKS4186	47	Arm	CNV6322
3	Connector(CN101)	CKS3486	48	Arm	CNV6323
4	Screw	BMZ20P025FMC	49	Arm	CNV6324
5	Screw	BSZ20P040FMC	50	Arm	CNV6888
6	Screw(M2x4)	CBA1362	51	Arm	CNV6889
7	Screw(M2x3)	CBA1527	52	Guide	CNV6327
8	Screw	CBA1545	53	Arm	CNV6924
9	Washer	CBF1037	54	Guide	CNV6921
10	Washer	CBF1038	55	Rack	CNV6923
11	Washer	CBF1039	56	Clamper	CNV6331
12	Washer	CBF1060	57	Arm	CNV6332
13	Spring	CBH2378	58	Guide	CNV6333
14	Spring	CBH2379	59	Cover	CNV6334
15	Spring	CBH2514	60	Arm	CNV6335
16	Spring	CBH2533	61	Guide	CNV6336
17	Spring	CBH2382	62	Roller	CNV6338
18	Spring	CBH2383	63	Damper	CNV6175
19	Spring	CBH2384	64	Damper	CNV6662
20	Spring	CBH2527	65	Guide	CNV6925
21	Spring	CBH2386	66	Chassis Unit	CXB7980
22	Spring	CBH2537	* 67	Arm Unit	CXB7983
23	Spring	CBH2390	68	Arm Unit	CXB7984
24	Spring	CBH2391	69	Arm Unit	CXB7985
25	Spring	CBH2523	70	Motor Unit(M2)	CXB5903
26	Spring	CBH2426	71	Screw Unit	CXB5904
27	Spring	CBH2444	72	Gear Unit	CXB8076
28	Spring	CBL1561	73	Bracket Unit	CXB7982
29	Spring	CBL1553	74	Motor Unit(M1)	CXB6007
30	Shaft	CLA3845	75	Arm Unit	CXB8504
31	Roller	CLA3910	76	Screw(M2x5)	EBA1028
32	Frame	CNC9654	77	Screw	JFZ20P020FMC
33	Lever	CNC9664	78	Screw	JGZ17P020FZK
34	Lever	CNC8949	79	Washer	YE15FUC
35	Arm	CNC9661	80	Washer	YE20FUC
36	Arm	CNC9016	81	Pickup Unit(Service)(P9MP3)	CXX1550
37	Arm	CNC9017	82	Screw	IMS26P030FMC
38	Bracket	CNC9123	83	Guide	CNV6922
39	Frame	CNC9656	84	Roller	CNV6887
40	Belt	CNT1086	85	Spring	CBH2509
41	Gear	CNV6886	86	Spring	CBH2512
42	Gear	CNV6316	87	Spring	CBH2536
43	Gear	CNV6317	88	Collar	CNV6906
44	Gear	CNV6318			
45	Gear	CNV6319			

5. ELECTRICAL PARTS LIST

NOTES:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J,RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
A Unit Number : CWM7983(DEH-P740MP/XN/UC)		D 903 Diode	1SR139-400
Unit Name : Tuner Amp Unit		D 904 Diode	1SR139-400
MISCELLANEOUS		D 911 Diode	1SR139-400
IC 101 IC	HA12187FP	D 912 Diode	HZS6L(B1)
IC 132 IC	NJM4558MD	D 921 Diode	HZS9L(C1)
IC 203 IC	PML009A	D 931 Diode	HZS7L(A1)
IC 271 IC	PA2028A	D 932 Diode	HZS7L(C3)
IC 301 IC	PAL007A	D 951 Diode	DAN202U
		D 981 Diode	DAN202U
		D 982 Diode	HZS9L(A2)
IC 601 IC	PD5701A	D 991 Diode	HZS9L(B1)
IC 801 IC	TC7SET08FU	ZNR 451 Surge Protector	DSP-201M-A21F
IC 851 IC	NJM2360M	L 171 Inductor	CTF1530
IC 961 IC	S-80735ANDZI	L 271 Ferri-Inductor	LAU101K
Q 101 Transistor	2SA1037K	L 401 Ferri-Inductor	LAU2R2K
Q 102 Transistor	DTC124EK	L 402 Ferri-Inductor	LAU4R7K
Q 301 Transistor	DTC124EK	L 403 Inductor	LAU1R0K
Q 351 Transistor	IMH3A	L 601 Ferri-Inductor	LAU2R2K
Q 352 Transistor	IMH3A	L 602 Inductor	LCTA2R2J2520
Q 353 Transistor	IMH3A	L 801 Inductor	LAU100K
Q 401 Transistor	2SC2412K	L 802 Ferri-Inductor	LAU2R2K
Q 801 Transistor	IMD2A	L 852 Inductor	CTF1510
Q 802 Transistor	2SD1760F5	L 853 Inductor	CTF1489
Q 803 Transistor	2SD1767	L 901 Choke Coil 600μH	CTH1221
Q 804 Transistor	IMD2A	L 951 Ferri-Inductor	LAU2R2K
Q 805 Transistor	DTC143EK	X 601 Radiator 10.00MHz	CSS1475
Q 851 Transistor	2SD1760F5	S 801 Switch(DSENS)	CSN1039
Q 852 Transistor	IMD2A	BZ 641 FM/AM Tuner Unit Buzzer	CWE1563
Q 911 Transistor	2SD1760F5		CPV1050
Q 913 Transistor	IMD2A		
Q 921 Transistor	2SD2396	RESISTORS	
Q 922 Transistor	DTC114EK	R 101	RS1/16S101J
Q 923 Transistor	2SB1238	R 102	RS1/16S470J
Q 931 Transistor	IMX1	R 103	RS1/16S101J
Q 932 Transistor	2SC2412K	R 104	RS1/16S222J
		R 105	RS1/16S103J
Q 951 Transistor	2SA1037K		
Q 981 Transistor	2SC2412K	R 106	RS1/16S562J
Q 982 Transistor	IMD2A	R 107	RS1/16S332J
Q 991 Transistor	IMD2A	R 108	RS1/16S150J
Q 999 Transistor	2SD2396	R 109	RS1/16S181J
		R 110	RS1/16S181J
D 131 Diode Network	DA204U		
D 132 Diode Network	DA204U	R 111	RS1/16S223J
D 133 Diode	DAN202U	R 112	RS1/16S223J
D 134 Diode	DAP202U	R 113	RS1/16S102J
D 801 Diode	HZS6L(B1)	R 114	RS1/16S102J
		R 143	RS1/16S104J
D 803 Diode Network	DA204U		
D 804 Diode	DAN202U	R 144	RS1/16S104J
D 805 Diode	DAP202U	R 145	RS1/16S563J
D 806 Diode	DAN202U	R 146	RS1/16S563J
D 807 Diode	DAP202U	R 147	RS1/16S474J
		R 148	RS1/16S474J
D 808 Diode	HZS11L(A1)		
D 851 Diode	HZS9L(C3)		
D 852 Diode	RB411D		
D 901 Diode	1SR139-400		
D 902 Diode	1SR139-400		

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
R 151	RS1/16S0R0J	R 614	RS1/16S222J
R 152	RS1/16S0R0J	R 615	RS1/16S104J
R 161	RS1/16S272J	R 616	RS1/16S473J
R 162	RS1/16S272J	R 617	RS1/16S0R0J
R 163	RS1/16S162J	R 619	RS1/16S473J
R 164	RS1/16S162J	R 620	RS1/16S472J
R 171	RS1/16S102J	R 621	RS1/16S473J
R 172	RS1/16S102J	R 623	RS1/16S473J
R 241	RS1/16S102J	R 624	RS1/16S0R0J
R 242	RS1/16S102J	R 625	RS1/16S682J
R 245	RS1/16S101J	R 626	RS1/16S682J
R 246	RS1/16S101J	R 627	RS1/16S104J
R 247	RS1/16S101J	R 628	RS1/16S104J
R 248	RS1/16S101J	R 629	RS1/16S104J
R 249	RS1/16S101J	R 630	RS1/16S104J
R 250	RS1/16S101J	R 636	RS1/16S221J
R 283	RS1/16S223J	R 637	RS1/16S221J
R 301	RS1/16S103J	R 639	RS1/16S0R0J
R 302	RS1/16S103J	R 641	RS1/16S102J
R 304	RS1/16S331J	R 644	RS1/16S0R0J
R 351	RS1/16S820J	R 645	RS1/16S0R0J
R 352	RS1/16S820J	R 654	RS1/16S104J
R 353	RS1/16S820J	R 801	RS1/16S332J
R 354	RS1/16S820J	R 804	RS1/16S1R0J
R 355	RS1/16S820J	R 805	RS1/16S221J
R 356	RS1/16S820J	R 806	RS1/16S221J
R 357	RS1/16S223J	R 807	RS1/16S473J
R 358	RS1/16S223J	R 808	RS1/16S473J
R 359	RS1/16S223J	R 809	RS1/16S102J
R 360	RS1/16S223J	R 810	RS1/16S222J
R 361	RS1/16S223J	R 811	RS1/16S222J
R 362	RS1/16S223J	R 812	RS1/16S222J
R 363	RS1/16S0R0J	R 813	RS1/16S222J
R 366	RS1/16S0R0J	R 814	RS1/16S222J
R 368	RS1/16S0R0J	R 815	RS1/16S473J
R 369	RS1/16S471J	R 816	RS1/16S104J
R 370	RS1/16S471J	R 817	RD1/4PU391J
R 371	RS1/16S471J	R 819	RS1/16S222J
R 372	RS1/16S471J	R 820	RS1/16S222J
R 373	RS1/16S471J	R 851	RS1/16S331J
R 374	RS1/16S471J	R 852	RD1/4PU302J
R 401	RS1/16S473J	R 853	RD1/4PU302J
R 402	RS1/16S473J	R 854	RS1/16S121J
R 403	RS1/16S681J	R 855	RS1/16S391J
R 404	RS1/16S681J	R 856	RS1/16S1R0J
R 409	RS1/16S681J	R 857	RS1/16S331J
R 410	RS1/16S103J	R 912	RS1/16S102J
R 411	RS1/16S681J	R 913	RS1/16S223J
R 412	RS1/16S681J	R 914	RS1/16S102J
R 413	RS1/16S681J	R 921	RS1/10S1R0J
R 414	RS1/16S473J	R 922	RD1/4PU221J
R 415	RS1/16S472J	R 923	RS1/16S103J
R 416	RS1/16S473J	R 924	RD1/4PU222J
R 417	RS1/16S473J	R 925	RS1/16S122J
R 418	RS1/16S473J	R 931	RS1/16S472J
R 419	RS1/16S222J	R 932	RS1/16S473J
R 420	RS1/16S222J	R 933	RS1/16S103J
R 424	RS1/16S393J	R 934	RS1/16S473J
R 601	RS1/16S473J	R 935	RS1/16S104J
R 604	RS1/16S473J	R 936	RS1/16S103J
R 605	RS1/16S0R0J	R 937	RS1/16S473J
R 608	RS1/16S104J	R 938	RD1/4PU102J
R 610	RS1/16S102J	R 939	RD1/4PU102J
R 611	RS1/16S102J	R 951	RD1/4PU153J
R 612	RS1/16S102J	R 952	RS1/16S472J

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
R 953	RS1/16S472J	C 281	CKSBYB105K10
R 954	RS1/16S102J	C 282	CKSBYB684K25
R 962	RS1/16S102J	C 283	CASQ4R7M16
R 964	RS1/16S822J	C 284	CEJQ330M25
R 982	RS1/16S223J	C 285	CEJQ330M25
R 983	RS1/16S223J	C 306	CEHAR330M10
R 984	RS1/16S473J	C 307	CCH1367
R 985	RD1/4PU102J	C 309	CKSBYB104K16
R 991	RD1/4PU221J	C 310	CEHAR100M16
R 992	RD1/4PU221J	C 311	CKSQYB225K10
R 997	RAB4C102J	C 313	CKSBYB474K10
R 999	RS1/16S0R0J	C 314	CKSBYB474K10
		C 315	CKSBYB474K10
		C 316	CKSBYB474K10
		C 321	CKSBYB474K10
CAPACITORS			
C 101	CKSBYB104K16		
C 102	CKSBYB104K16	C 322	CKSBYB474K10
C 139	CKSBYB104K16	C 323	CKSBYB474K10
C 140	CKSBYB104K16	C 324	CKSBYB474K10
C 141	CKSBYB104K16	C 325	CKSQYB225K10
		C 351	CEJQ100M16
C 142	CKSBYB104K16		
C 143	CKSBYB474K10	C 352	CEJQ100M16
C 144	CKSBYB474K10	C 353	CEJQ100M16
C 145	CCSRCH101J50	C 354	CEJQ100M16
C 146	CCSRCH101J50	C 355	CEJQ100M16
		C 356	CEJQ100M16
C 147	CKSBYB103K50		
C 161	CKSBYB183K25	C 357	CKSBYB222K50
C 162	CKSBYB183K25	C 358	CKSBYB222K50
C 171	CEJQ470M10	C 359	CKSBYB222K50
C 172	CKSBYB104K16	C 360	CKSBYB222K50
		C 361	CKSBYB222K50
C 173	CEJQ100M16		
C 177	CCSRCH100D50	C 362	CKSBYB222K50
C 178	CCSRCH100D50	C 403	CKSBYB473K25
C 179	CCSRCH100D50	C 404	CEJQ101M6R3
C 180	CCSRCH100D50	C 405	CKSBYB103K50
		C 406	CEJQ220M10
C 181	CKLSRB152K50		
C 182	CKLSRB152K50	C 408	CKSBYB223K50
C 191	CEJQ1R0M50	C 409	CKSBYB223K50
C 192	CEJQ1R0M50	C 411	CKSBYB472K50
C 205	CEJQR22M50	C 440	CKSBYB103K50
		C 601	CEJQ4R7M35
C 206	CEJQR22M50		
C 207	CEJQ1R0M50	C 602	CKSBYB102K50
C 208	CEJQ1R0M50	C 604	CCSRCH180J50
C 209	CEJQ1R0M50	C 605	CCSRCH220J50
C 210	CEJQ1R0M50	C 606	CKSBYB102K50
		C 654	CCH1438
C 211	CEJQNP4R7M16		
C 212	CEJQNP4R7M16	C 755	CKSBYB104K16
C 213	CEJQNP4R7M16	C 801	CKSBYB103K50
C 214	CEJQNP4R7M16	C 802	CEJQ470M10
C 215	CEJQNP4R7M16	C 803	CKSBYB104K16
		C 805	CKSBYB103K25
C 216	CEJQNP4R7M16		
C 217	CEJQNP4R7M16	C 806	CKSBYB473K25
C 218	CEJQNP4R7M16	C 812	CKSYB105K25
C 241	CCSQCH152J50	C 851	CEJQ470M16
C 242	CCSQCH152J50	C 853	CCG1111
		C 855	CEJQ100M25
C 271	CEJQNP1R0M50		
C 272	CEJQNP1R0M50	C 856	CCSRCH331J50
C 273	CEJQNP1R0M50	C 857	CEJQ330M25
C 274	CEJQNP1R0M50	C 858	CKSBYB104K16
C 275	CEJQNP1R0M50	C 859	CEJQ101M10
		C 860	CKSBYB104K16
C 276	CEJQNP1R0M50		
C 277	CEJQ4R7M35	C 861	CKSBYB103K50
C 278	CEJQ101M16	C 912	CKSBYB472K50
C 279	CEJQ100M16	C 913	CKSBYB103K50
C 280	CEJQ100M16	C 914	CEJQ470M10
		C 921	CCH1181
			330μF/10V

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
C 922	CKSRYPB103K50	D 951	Diode
C 923	CEJQ101M16	D 981	Diode
C 931	CEJQ100M16	D 982	Diode
C 932	CKSRYPB104K16	D 991	Diode
C 963	CEJQ2R2M50	ZNR 451	Surge Protector
C 991	CKSRYPB473K25	L 171	Inductor
C 992	CKSRYPB102K50	L 401	Ferri-Inductor
C 993	CEJQ101M10	L 402	Ferri-Inductor
C 999 470μF/16V	CCH1183	L 403	Inductor
		L 601	Ferri-Inductor
A Unit Number : CWM8315(DEH-P7400MP/XN/UC)		L 602	Inductor
Unit Name : Tuner Amp Unit		L 801	Inductor
MISCELLANEOUS		L 802	Ferri-Inductor
IC 101 IC	HA12187FP	L 852	Inductor
IC 132 IC	NJM4558MD	L 853	Inductor
IC 203 IC	PML009A	L 901	Choke Coil 600μH
IC 301 IC	PAL007A	L 951	Ferri-Inductor
IC 601 IC	PD5701A	X 601	Radiator 10.00MHz
IC 801 IC	TC7SET08FU	S 801	Switch(DSENS)
IC 851 IC	NJM2360M		FM/AM Tuner Unit
IC 961 IC	S-80735ANDZI	BZ 641	Buzzer
Q 101 Transistor	2SA1037K		
Q 102 Transistor	DTC124EK	RESISTORS	
Q 301 Transistor	DTC124EK	R 101	RS1/16S101J
Q 351 Transistor	IMH3A	R 102	RS1/16S470J
Q 353 Transistor	IMH3A	R 103	RS1/16S101J
Q 401 Transistor	2SC2412K	R 104	RS1/16S222J
Q 801 Transistor	IMD2A	R 105	RS1/16S103J
Q 802 Transistor	2SD1760F5	R 106	RS1/16S562J
Q 803 Transistor	2SD1767	R 107	RS1/16S332J
Q 804 Transistor	IMD2A	R 108	RS1/16S150J
Q 805 Transistor	DTC143EK	R 109	RS1/16S181J
Q 851 Transistor	2SD1760F5	R 110	RS1/16S181J
Q 852 Transistor	IMD2A	R 111	RS1/16S223J
Q 911 Transistor	2SD1760F5	R 112	RS1/16S223J
Q 913 Transistor	IMD2A	R 113	RS1/16S102J
Q 921 Transistor	2SD2396	R 114	RS1/16S102J
Q 922 Transistor	DTC114EK	R 143	RS1/16S104J
Q 923 Transistor	2SB1238	R 144	RS1/16S104J
Q 931 Transistor	IMX1	R 145	RS1/16S563J
Q 932 Transistor	2SC2412K	R 146	RS1/16S563J
Q 951 Transistor	2SA1037K	R 147	RS1/16S474J
Q 981 Transistor	2SC2412K	R 148	RS1/16S474J
Q 982 Transistor	IMD2A	R 151	RS1/16S0R0J
Q 991 Transistor	IMD2A	R 152	RS1/16S0R0J
Q 999 Transistor	2SD2396	R 161	RS1/16S272J
D 131 Diode Network	DA204U	R 162	RS1/16S272J
D 132 Diode Network	DA204U	R 163	RS1/16S162J
D 133 Diode	DAN202U	R 164	RS1/16S162J
D 134 Diode	DAP202U	R 171	RS1/16S102J
D 801 Diode	HZS6L(B1)	R 172	RS1/16S102J
D 803 Diode Network	DA204U	R 241	RS1/16S102J
D 804 Diode	DAN202U	R 242	RS1/16S102J
D 805 Diode	DAP202U	R 245	RS1/16S101J
D 806 Diode	DAN202U	R 246	RS1/16S101J
D 807 Diode	DAP202U	R 247	RS1/16S101J
D 808 Diode	HZS11L(A1)	R 248	RS1/16S101J
D 851 Diode	HZS9L(C3)	R 249	RS1/16S101J
D 852 Diode	RB411D	R 250	RS1/16S101J
D 901 Diode	1SR139-400	R 287	RS1/16S0R0J
D 902 Diode	1SR139-400	R 288	RS1/16S0R0J
D 903 Diode	1SR139-400	R 291	RS1/16S0R0J
D 904 Diode	1SR139-400	R 292	RS1/16S0R0J
D 911 Diode	1SR139-400	R 301	RS1/16S103J
D 912 Diode	HZS6L(B1)	R 302	RS1/16S103J
D 921 Diode	HZS9L(C1)	R 304	RS1/16S331J
D 931 Diode	HZS7L(A1)	R 351	RS1/16S821J
D 932 Diode	HZS7L(C3)	R 352	RS1/16S821J

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
R 355	RS1/16S821J	R 814	RS1/16S222J
R 356	RS1/16S821J	R 815	RS1/16S473J
R 357	RS1/16S223J	R 816	RS1/16S104J
R 358	RS1/16S223J	R 817	RD1/4PU391J
R 361	RS1/16S223J	R 819	RS1/16S222J
R 362	RS1/16S223J	R 820	RS1/16S222J
R 363	RS1/16S0R0J	R 851	RS1/16S331J
R 368	RS1/16S0R0J	R 852	RD1/4PU302J
R 401	RS1/16S473J	R 853	RD1/4PU302J
R 402	RS1/16S473J	R 854	RS1/16S121J
R 403	RS1/16S681J	R 855	RS1/16S391J
R 404	RS1/16S681J	R 856	RS1/16S1R0J
R 409	RS1/16S681J	R 857	RS1/16S331J
R 410	RS1/16S103J	R 912	RS1/16S102J
R 411	RS1/16S681J	R 913	RS1/16S223J
R 412	RS1/16S681J	R 914	RS1/16S102J
R 413	RS1/16S681J	R 921	RS1/10S1R0J
R 414	RS1/16S473J	R 922	RD1/4PU221J
R 415	RS1/16S472J	R 923	RS1/16S103J
R 416	RS1/16S473J	R 924	RD1/4PU222J
R 417	RS1/16S473J	R 925	RS1/16S122J
R 418	RS1/16S473J	R 931	RS1/16S472J
R 419	RS1/16S222J	R 932	RS1/16S473J
R 420	RS1/16S222J	R 933	RS1/16S103J
R 424	RS1/16S393J	R 934	RS1/16S473J
R 601	RS1/16S473J	R 935	RS1/16S104J
R 603	RS1/16S473J	R 936	RS1/16S103J
R 605	RS1/16S0R0J	R 937	RS1/16S473J
R 608	RS1/16S104J	R 938	RD1/4PU102J
R 610	RS1/16S102J	R 939	RD1/4PU102J
R 611	RS1/16S102J	R 951	RD1/4PU153J
R 612	RS1/16S102J	R 952	RS1/16S472J
R 614	RS1/16S222J	R 953	RS1/16S472J
R 615	RS1/16S104J	R 954	RS1/16S102J
R 616	RS1/16S473J	R 962	RS1/16S102J
R 617	RS1/16S0R0J	R 964	RS1/16S822J
R 619	RS1/16S473J	R 982	RS1/16S223J
R 620	RS1/16S472J	R 983	RS1/16S223J
R 621	RS1/16S473J	R 984	RS1/16S473J
R 623	RS1/16S473J	R 985	RD1/4PU102J
R 624	RS1/16S0R0J	R 991	RD1/4PU221J
R 625	RS1/16S682J	R 992	RD1/4PU221J
R 626	RS1/16S682J	R 997	RAB4C102J
R 627	RS1/16S104J	R 999	RS1/16S0R0J
R 628	RS1/16S104J		
R 629	RS1/16S104J		
R 630	RS1/16S104J	C 101	CKSRYB104K16
R 636	RS1/16S221J	C 102	CKSRYB104K16
R 637	RS1/16S221J	C 139	CKSRYB104K16
R 639	RS1/16S0R0J	C 140	CKSRYB104K16
		C 141	CKSRYB104K16
R 641	RS1/16S102J		
R 644	RS1/16S0R0J	C 142	CKSRYB104K16
R 645	RS1/16S0R0J	C 143	CKSRYB474K10
R 654	RS1/16S104J	C 144	CKSRYB474K10
R 801	RS1/16S332J	C 145	CCSRCH101J50
		C 146	CCSRCH101J50
R 804	RS1/16S1R0J		
R 805	RS1/16S221J	C 147	CKSRYB103K50
R 806	RS1/16S221J	C 161	CKSRYB183K25
R 807	RS1/16S473J	C 162	CKSRYB183K25
R 808	RS1/16S473J	C 171	CEJQ470M10
		C 172	CKSRYB104K16
R 809	RS1/16S102J		
R 810	RS1/16S222J	C 173	CEJQ100M16
R 811	RS1/16S222J	C 177	CCSRCH100D50
R 812	RS1/16S222J	C 178	CCSRCH100D50
R 813	RS1/16S222J	C 179	CCSRCH100D50
		C 180	CCSRCH100D50

55

DEH-P740MP,P7400MP,P7450MP

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
D 852 Diode	RB411D	R 250	RS1/16S101J
D 901 Diode	1SR139-400	R 287	RS1/16S0R0J
D 902 Diode	1SR139-400	R 288	RS1/16S0R0J
D 903 Diode	1SR139-400	R 291	RS1/16S0R0J
D 904 Diode	1SR139-400	R 292	RS1/16S0R0J
D 911 Diode	1SR139-400	R 301	RS1/16S103J
D 912 Diode	HZS6L(B1)	R 302	RS1/16S103J
D 921 Diode	HZS9L(C1)	R 304	RS1/16S331J
D 931 Diode	HZS7L(A1)	R 351	RS1/16S821J
D 932 Diode	HZS7L(C3)	R 352	RS1/16S821J
D 951 Diode	DAN202U	R 355	RS1/16S821J
D 981 Diode	DAN202U	R 356	RS1/16S821J
D 982 Diode	HZS9L(A2)	R 357	RS1/16S223J
D 991 Diode	HZS9L(B1)	R 358	RS1/16S223J
ZNR 451	DSP-201M-A21F	R 361	RS1/16S223J
L 171 Inductor	CTF1530	R 362	RS1/16S223J
L 401 Ferri-Inductor	LAU2R2K	R 363	RS1/16S0R0J
L 402 Ferri-Inductor	LAU4R7K	R 368	RS1/16S0R0J
L 403 Inductor	LAU1R0K	R 401	RS1/16S473J
L 601 Ferri-Inductor	LAU2R2K	R 402	RS1/16S473J
L 602 Inductor	LCTA2R2J2520	R 403	RS1/16S681J
L 801 Inductor	LAU100K	R 404	RS1/16S681J
L 802 Ferri-Inductor	LAU2R2K	R 409	RS1/16S681J
L 852 Inductor	CTF1510	R 410	RS1/16S103J
L 853 Inductor	CTF1489	R 411	RS1/16S681J
L 901 Choke Coil 600μH	CTH1221	R 412	RS1/16S681J
L 951 Ferri-Inductor	LAU2R2K	R 413	RS1/16S681J
X 601 Radiator 10.00MHz	CSS1475	R 414	RS1/16S473J
S 801 Switch(DSENS) FM/AM Tuner Unit	CSN1039	R 415	RS1/16S472J
	CWE1563	R 416	RS1/16S473J
BZ 641 Buzzer	CPV1050	R 417	RS1/16S473J
		R 418	RS1/16S473J
		R 419	RS1/16S222J
		R 420	RS1/16S222J
		R 424	RS1/16S393J
R 101	RS1/16S101J		
R 102	RS1/16S470J		
R 103	RS1/16S101J	R 602	RS1/16S473J
R 104	RS1/16S222J	R 603	RS1/16S473J
R 105	RS1/16S103J	R 605	RS1/16S0R0J
		R 608	RS1/16S104J
R 106	RS1/16S562J	R 610	RS1/16S102J
R 107	RS1/16S332J		
R 108	RS1/16S150J	R 611	RS1/16S102J
R 109	RS1/16S181J	R 612	RS1/16S102J
R 110	RS1/16S181J	R 614	RS1/16S222J
		R 615	RS1/16S104J
R 111	RS1/16S223J	R 616	RS1/16S473J
R 112	RS1/16S223J		
R 113	RS1/16S102J	R 617	RS1/16S0R0J
R 114	RS1/16S102J	R 619	RS1/16S473J
R 143	RS1/16S104J	R 620	RS1/16S472J
		R 621	RS1/16S473J
R 144	RS1/16S104J	R 623	RS1/16S473J
R 145	RS1/16S563J		
R 146	RS1/16S563J	R 624	RS1/16S0R0J
R 147	RS1/16S474J	R 625	RS1/16S682J
R 148	RS1/16S474J	R 626	RS1/16S682J
		R 627	RS1/16S104J
R 151	RS1/16S0R0J	R 628	RS1/16S104J
R 152	RS1/16S0R0J		
R 161	RS1/16S272J	R 629	RS1/16S104J
R 162	RS1/16S272J	R 630	RS1/16S104J
R 163	RS1/16S162J	R 636	RS1/16S221J
		R 637	RS1/16S221J
R 164	RS1/16S162J	R 639	RS1/16S0R0J
R 171	RS1/16S102J		
R 172	RS1/16S102J	R 641	RS1/16S102J
R 241	RS1/16S102J	R 644	RS1/16S0R0J
R 242	RS1/16S102J	R 645	RS1/16S0R0J
		R 654	RS1/16S104J
R 245	RS1/16S101J	R 801	RS1/16S332J
R 246	RS1/16S101J		
R 247	RS1/16S101J		
R 248	RS1/16S101J		
R 249	RS1/16S101J		

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
R 804	RS1/16S1R0J	C 147	CKSRYB103K50
R 805	RS1/16S221J	C 161	CKSRYB183K25
R 806	RS1/16S221J	C 162	CKSRYB183K25
R 807	RS1/16S473J	C 171	CEJQ470M10
R 808	RS1/16S473J	C 172	CKSRYB104K16
R 809	RS1/16S102J	C 173	CEJQ100M16
R 810	RS1/16S222J	C 177	CCSRCH100D50
R 811	RS1/16S222J	C 178	CCSRCH100D50
R 812	RS1/16S222J	C 179	CCSRCH100D50
R 813	RS1/16S222J	C 180	CCSRCH100D50
R 814	RS1/16S222J	C 181	CKLSRB152K50
R 815	RS1/16S473J	C 182	CKLSRB152K50
R 816	RS1/16S104J	C 191	CEJQ1R0M50
R 817	RD1/4PU391J	C 192	CEJQ1R0M50
R 819	RS1/16S222J	C 205	CEJQR22M50
R 820	RS1/16S222J	C 206	CEJQR22M50
R 851	RS1/16S331J	C 207	CEJQ1R0M50
R 852	RD1/4PU302J	C 208	CEJQ1R0M50
R 853	RD1/4PU302J	C 209	CEJQ1R0M50
R 854	RS1/16S121J	C 210	CEJQ1R0M50
R 855	RS1/16S391J	C 211	CEJQNP4R7M16
R 856	RS1/16S1R0J	C 212	CEJQNP4R7M16
R 857	RS1/16S331J	C 213	CEJQNP4R7M16
R 912	RS1/16S102J	C 214	CEJQNP4R7M16
R 913	RS1/16S223J	C 215	CEJQNP4R7M16
R 914	RS1/16S102J	C 216	CEJQNP4R7M16
R 921	RS1/10S1R0J	C 217	CEJQNP4R7M16
R 922	RD1/4PU221J	C 218	CEJQNP4R7M16
R 923	RS1/16S103J	C 241	CCSQCH152J50
R 924	RD1/4PU222J	C 242	CCSQCH152J50
R 925	RS1/16S122J	C 306	CEHAR330M10
R 931	RS1/16S472J	C 307	CCH1367
R 932	RS1/16S473J	C 309	CKSRYB104K16
R 933	RS1/16S103J	C 310	CEHAR100M16
R 934	RS1/16S473J	C 311	CKSQYB225K10
R 935	RS1/16S104J	C 313	CKSRYB474K10
R 936	RS1/16S103J	C 314	CKSRYB474K10
R 937	RS1/16S473J	C 315	CKSRYB474K10
R 938	RD1/4PU102J	C 316	CKSRYB474K10
R 939	RD1/4PU102J	C 321	CKSRYB474K10
R 951	RD1/4PU153J	C 322	CKSRYB474K10
R 952	RS1/16S472J	C 323	CKSRYB474K10
R 953	RS1/16S472J	C 324	CKSRYB474K10
R 954	RS1/16S102J	C 325	CKSQYB225K10
R 962	RS1/16S102J	C 351	CEJQ100M16
R 964	RS1/16S822J	C 352	CEJQ100M16
R 982	RS1/16S223J	C 355	CEJQ100M16
R 983	RS1/16S223J	C 356	CEJQ100M16
R 984	RS1/16S473J	C 403	CKSRYB473K25
R 985	RD1/4PU102J	C 404	CEJQ101M6R3
R 991	RD1/4PU221J	C 405	CKSRYB103K50
R 992	RD1/4PU221J	C 406	CEJQ220M10
R 997	RAB4C102J	C 408	CKSRYB223K50
R 999	RS1/16S0R0J	C 409	CKSRYB223K50
		C 411	CKSRYB472K50
CAPACITORS		C 440	CKSRYB103K50
C 101	CKSRYB104K16	C 601	CEJQ4R7M35
C 102	CKSRYB104K16	C 602	CKSRYB102K50
C 139	CKSRYB104K16	C 604	CCSRCH180J50
C 140	CKSRYB104K16	C 605	CCSRCH220J50
C 141	CKSRYB104K16		
C 142	CKSRYB104K16	C 606	CKSRYB102K50
C 143	CKSRYB474K10	C 654	CCH1438
C 144	CKSRYB474K10	C 755	CKSRYB104K16
C 145	CCSRCH101J50	C 801	CKSRYB103K50
C 146	CCSRCH101J50	C 802	CEJQ470M10

58

====Circuit Symbol and No.==Part Name

Part No.

CAPACITORS

C	1901	CKSYB105K25
C	1902	CKSRYB104K16
C	1903	CKSRYB474K10
C	1905	CKSRYB103K25
C	1909	CKSRYB473K16
C	1910	CSZSR4R7M10
C	1911	CKSRYB103K25
C	1912	CSZSR4R7M10
C	1913	CKSRYB103K50
C	1914	CSZSR4R7M10
C	1941	CKSRYB104K25
C	1942	CKSRYB104K16
C	1943	CKSRYB104K25
C	1944	CKSRYB104K25
C	1945	CKSRYB104K25
C	1946	CKSRYB104K16
C	1947	CKSRYB104K25
C	1961	CKSRYB104K25
C	1962	CKSRYB104K25
C	1972	CKSRYB103K25

Unit Number : CWM8237(DEH-P7400MP/XN/UC,
DEH-P7450MP/XN/ES)

Unit Name : Keyboard Unit

MISCELLANEOUS

IC	1901	IC	PD5706A
IC	1902	IC	PD8088A
IC	1903	IC	TSOP1840SB3V
IC	1904	IC	S-818A33AUC-BGN
Q	1941	Transistor	2SD1664
Q	1942	Transistor	2SC4617
D	1901	Diode	DAP202U
D	1902	Diode	DAN202U
D	1906	Diode	1SS355
D	1979	LED	CL170PGCD
D	1980	LED	CL170PGCD
D	1981	LED	CL170PGCD
D	1983	LED	CL170UBX
D	1984	LED	CL170UBX
D	1993	LED	CL170PGCD
D	1996	LED	CL170PGCD
L	1901	Inductor	CTF1530
L	1902	Inductor	CTF1530
L	1922	Inductor-Array	CTF1421
L	1923	Inductor-Array	CTF1421
L	1924	Inductor-Array	CTF1421
L	1990	Inductor-Array	CTF1421
TH	1941	Thermistor	CCX1037
X	1901	Radiator 10.0MHz	CSS1577
S	1901	Switch	CSG1107
S	1903	Push Switch	CSG1111
S	1906	Switch	CSG1107
S	1907	Switch	CSG1107
S	1908	Push Switch	CSG1111
S	1909	Switch	CSG1107
S	1910	Switch	CSG1107
S	1911	Switch	CSG1107
S	1912	Switch	CSG1107
S	1913	Switch	CSG1107
S	1914	Switch	CSG1107
S	1915	Switch	CSG1107
S	1916	Switch	CSG1107
S	1917	Switch	CSG1107
S	1918	Switch	CSG1107
S	1919	Switch	CSG1107

====Circuit Symbol and No.==Part Name

Part No.

S	1920	Switch	CSG1107
S	1922	Switch	CSG1107
S	1923	Switch	CSG1107
S	1924	Switch	CSG1107
S	1930	Encoder(VOLUME)	CSD1059
VR	1941	Semi-fixed 20kΩ(B) OEL Unit	CCP1231 MXS8017

RESISTORS

R	1901	RS1/16S222J
R	1902	RS1/16S222J
R	1903	RS1/16S473J
R	1904	RS1/16S103J
R	1905	RS1/16S682J
R	1906	RS1/16S121J
R	1907	RS1/16S2R2J
R	1908	RS1/16S222J
R	1909	RS1/16S154J
R	1910	RS1/16S473J
R	1911	RAB4C101J
R	1912	RS1/16S473J
R	1913	RS1/16S473J
R	1914	RS1/16S103J
R	1915	RAB4C101J
R	1916	RS1/16S101J
R	1917	RAB4C101J
R	1918	RAB4C101J
R	1919	RAB4C101J
R	1920	RAB4C101J
R	1925	RAB4C101J
R	1926	RS1/16S101J
R	1931	RS1/16S0R0J
R	1941	RS1/16S333J
R	1942	RS1/16S683J
R	1943	RS1/16S392J
R	1944	RS1/16S393J
R	1945	RAB4C102J
R	1946	RS1/16S222J
R	1947	RS1/16S103J
R	1949	RS1/16S102J
R	1950	RS1/16S102J
R	1966	RS1/16S101J
R	1967	RS1/16S101J
R	1968	RS1/16S101J
R	1969	RS1/16S101J
R	1970	RS1/16S270J
R	1971	RS1/16S270J
R	1972	RS1/16S270J
R	1973	RS1/16S270J
R	1974	RS1/16S270J
R	1975	RS1/16S270J
R	1976	RS1/16S101J
R	1977	RS1/16S101J
R	1978	RS1/16S121J
R	1979	RS1/16S121J
R	1980	RS1/16S0R0J
R	1985	RS1/16S0R0J
R	1986	RS1/16S181J
R	1987	RS1/16S181J

CAPACITORS

C	1901	CKSYB105K25
C	1902	CKSRYB104K16
C	1903	CKSRYB474K10
C	1905	CKSRYB103K25
C	1909	CKSRYB473K16

DEH-P740MP,P740OMP,P7450MP

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
C 1910	CSZSR4R7M10	R 201	RS1/16SS102J
C 1911	CKSRYP103K25	R 202	RS1/16SS333J
C 1912	CSZSR4R7M10	R 203	RS1/16SS333J
C 1913	CKSRYP103K50	R 204	RS1/16SS333J
C 1914	CSZSR4R7M10	R 205	RS1/16SS0R0J
C 1941	CKSRYP104K25	R 207	RS1/16SS0R0J
C 1942	CKSRYP104K16	R 209	RS1/16SS0R0J
C 1943	CKSRYP104K25	R 212	RS1/16SS221J
C 1944	CKSRYP104K25	R 213	RS1/16SS1002D
C 1945	CKSRYP104K25	R 214	RS1/16SS1002D
C 1946	CKSRYP104K16	R 215	RS1/16SS1002D
C 1947	CKSRYP104K25	R 216	RS1/16SS1002D
C 1961	CKSRYP104K25	R 217	RS1/16SS1002D
C 1962	CKSRYP104K25	R 218	RS1/16SS1002D
C 1972	CKSRYP103K25	R 219	RS1/16SS1002D
B Unit Number : CWM7986		R 220	RS1/16SS1002D
Unit Name : Panel Unit		R 221	RS1/16SS103J
D 1850 LED	CL220PGC	R 222	RS1/16SS103J
S 1850 Push Switch(EJECT)	CSG1112	R 223	RS1/16SS103J
R 1852	RS1/16S101J	R 224	RS1/16SS103J
R 1853	RS1/16S101J	R 225	RS1/16SS103J
C 1863	CKSRYP223K50	R 226	RS1/16SS393J
		R 227	RS1/16SS103J
		R 228	RS1/16SS182J
		R 229	RS1/16SS103J
D Unit Number : CWX2617		R 233	RS1/16SS183J
Unit Name : CD Core Unit(S9MP3)		R 237	RS1/16SS104J
		R 238	RS1/16SS473J
MISCELLANEOUS		R 301	RS1/16SS183J
IC 201 IC	UPD63760GJ	R 302	RS1/16SS822J
IC 202 IC	MSM51V4265EP-70TS		
IC 203 IC	BA033SFP	R 303	RS1/16SS0R0J
IC 301 IC	BA5996FM	R 304	RS1/16SS183J
IC 701 IC	PE5268A	R 305	RS1/16SS822J
IC 702 IC	TC74VHCT08AFT	R 306	RS1/16SS0R0J
IC 703 IC	S-818A33AUC-BGN	R 307	RS1/16SS183J
IC 704 IC	PDH043A		
Q 101 Transistor	2SB1132	R 308	RS1/16SS822J
Q 601 Transistor	DTC323TK	R 309	RS1/16SS183J
		R 310	RS1/16SS822J
Q 602 Transistor	DTC323TK	R 311	RS1/16SS0R0J
Q 603 Transistor	2SB709A	R 601	RS1/16S101J
Q 701 Transistor	UN2111		
D 101 Diode	1SS355	R 602	RS1/16S101J
D 201 Diode	1SR154-400	R 603	RS1/16S223J
		R 604	RS1/16S223J
D 202 Diode	1SR154-400	R 605	RS1/16SS103J
D 203 Diode	1SR154-400	R 701	RS1/16SS0R0J
D 601 Chip Diode	MA151VA		
L 201 Inductor	CTF1546	R 707	RS1/16SS0R0J
L 202 Inductor	CTF1546	R 708	RS1/16SS102J
		R 709	RS1/16SS102J
L 204 Inductor	CTF1546	R 710	RS1/16SS102J
L 701 Inductor	CTF1546	R 711	RS1/16SS102J
L 702 Inductor	LCYBR22J1608		
TH 701 Thermistor	CCX1037	R 712	RS1/16SS102J
X 201 Ceramic Resonator 16.93MHz	CSS1569	R 713	RS1/16SS102J
		R 714	RS1/16SS473J
X 202 Ceramic Resonator 24.57MHz	CSS1570	R 715	RAB4CQ221J
X 701 Ceramic Resonator 16.00MHz	CSS1576	R 716	RAB4CQ221J
S 901 Spring Switch(HOME)	CSN1051		
S 902 Spring Switch(CLAMP)	CSN1052	R 717	RAB4CQ221J
S 903 Spring Switch(DSCSNS)	CSN1051	R 718	RAB4CQ221J
		R 719	RAB4CQ221J
S 904 Spring Switch(12EJ)	CSN1052	R 720	RS1/16SS471J
S 905 Spring Switch(8EJ)	CSN1051	R 721	RS1/16SS471J
RESISTORS		R 722	RAB4CQ221J
		R 723	RS1/16SS102J
R 101	RS1/10S1R5J	R 724	RN1/16SE1302D
R 102	RS1/10S1R5J	R 725	RS1/16SS222J
R 103	RS1/10S1R5J	R 726	RS1/16SS103J
R 104	RS1/10S1R5J		
R 105	RS1/10S1R5J		

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
R 727	RS1/16SS473J	C 234	CEV221M4
R 728	RS1/16SS473J	C 235	CKSRYB224K16
R 729	RS1/16SS223J	C 237	CKSSYB104K10
R 730	RS1/16SS473J	C 238	CKSSYB104K10
R 731	RS1/16SS104J	C 301	CKSSYB331K50
R 732	RS1/16SS104J	C 302	CKSSYB331K50
R 733	RS1/16SS104J	C 303	CKSSYB472K25
R 734	RS1/16SS472J	C 304	CKSSYB472K25
R 735	RS1/16SS473J	C 305	CEV101M16
R 737	RAB4CQ473J	C 306	CKSRYB224K16
R 739	RAB4CQ473J	C 601	CCSRCH102J50
R 740	RS1/16SS473J	C 602	CCSRCH102J50
R 742	RS1/16SS104J	C 603	CSZS4R7M10
R 744	RS1/16SS104J	C 604	CSZS4R7M10
R 745	RS1/16SS473J	C 701	CKSSYB104K10
R 746	RS1/16SS104J	C 702	CKSSYB471K50
R 747	RS1/16SS104J	C 703	CKSSYB103K16
R 748	RS1/16SS104J	C 704	CEV1R0M50
R 790	RD1/4PU473J	C 705	CKSSYB104K10
R 801	RS1/16SS104J	C 706	CKSSYB471K50
R 802	RS1/16SS473J	C 707	CKSSYB104K10
R 803	RS1/16SS273J	C 708	CKSSYB104K10
R 901	RS1/16SS221J	C 709	CKSSYB103K16
R 902	RS1/16SS221J	C 710	CKSSYB104K10
R 903	RS1/16SS221J	C 711	10μF/10V CCH1349
R 904	RS1/16SS221J	C 712	CKSRYB224K16
R 905	RS1/16SS221J	C 713	CKSSYB104K10
R 906	RS1/16SS221J	C 714	CKSSYB104K10
		C 715	CKSSYB103K16
		C 716	CKSSYB103K16
CAPACITORS		C 901	CKSSYB104K10
C 101	CKSSYB104K10	C 903	CCSRCH101J50
C 102	CKSSYB104K10		
C 103	CEV101M16		
C 104	CEV101M4		
C 105	CKSSYB104K10		
C 106	CKSRYB102K50		
C 108	CKSSYB104K10		
C 109	CEV100M16		
C 201	CKSSYB471K50		
C 202	CKSSYB104K10		
C 203	CKSSYB104K10		
C 204	CEV220M6R3		
C 205	CKSSYB103K16		
C 206	CKSSYB103K16		
C 207	CEV221M4		
C 208	CKSSYB104K10		
C 209	CKSSYB104K10		
C 210	CKSSYB104K10		
C 211	CKSSYB104K10		
C 216	CKSSYB103K16		
C 217	CKSSYB104K10		
C 218	CKSSYB104K10		
C 219	CKSSYB104K10		
C 220	CKSSYB103K16		
C 221	CKSSYB104K10		
C 222	CCSSCH270J50		
C 223	CCSSCJ3R0C50		
C 224	CKSSYB104K10		
C 225	CKSSYB103K16		
C 226	CCSSCH680J50		
C 227	CCSSCH470J50		
C 228	CKSSYB682K25		
C 230	CKSSYB104K10		
C 232	CKSSYB104K10		
C 233	47μF/6.3V CCH1436		

Miscellaneous Parts List

M	1	Pickup Unit(Service)(P9MP3)	CXX1550
M	2	Motor Unit(SPINDLE)	CXB6007
		Motor Unit(LOADING/CARRIAGE)	CXB5903