
9. EXPLODED VIEWS AND PARTS LIST

NOTES : • *Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
• *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
• *Screw adjacent to▽mark on the product are used for disassembly.*
• *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions,apply as you think it appropriate.)*

9.1 PACKING SECTION

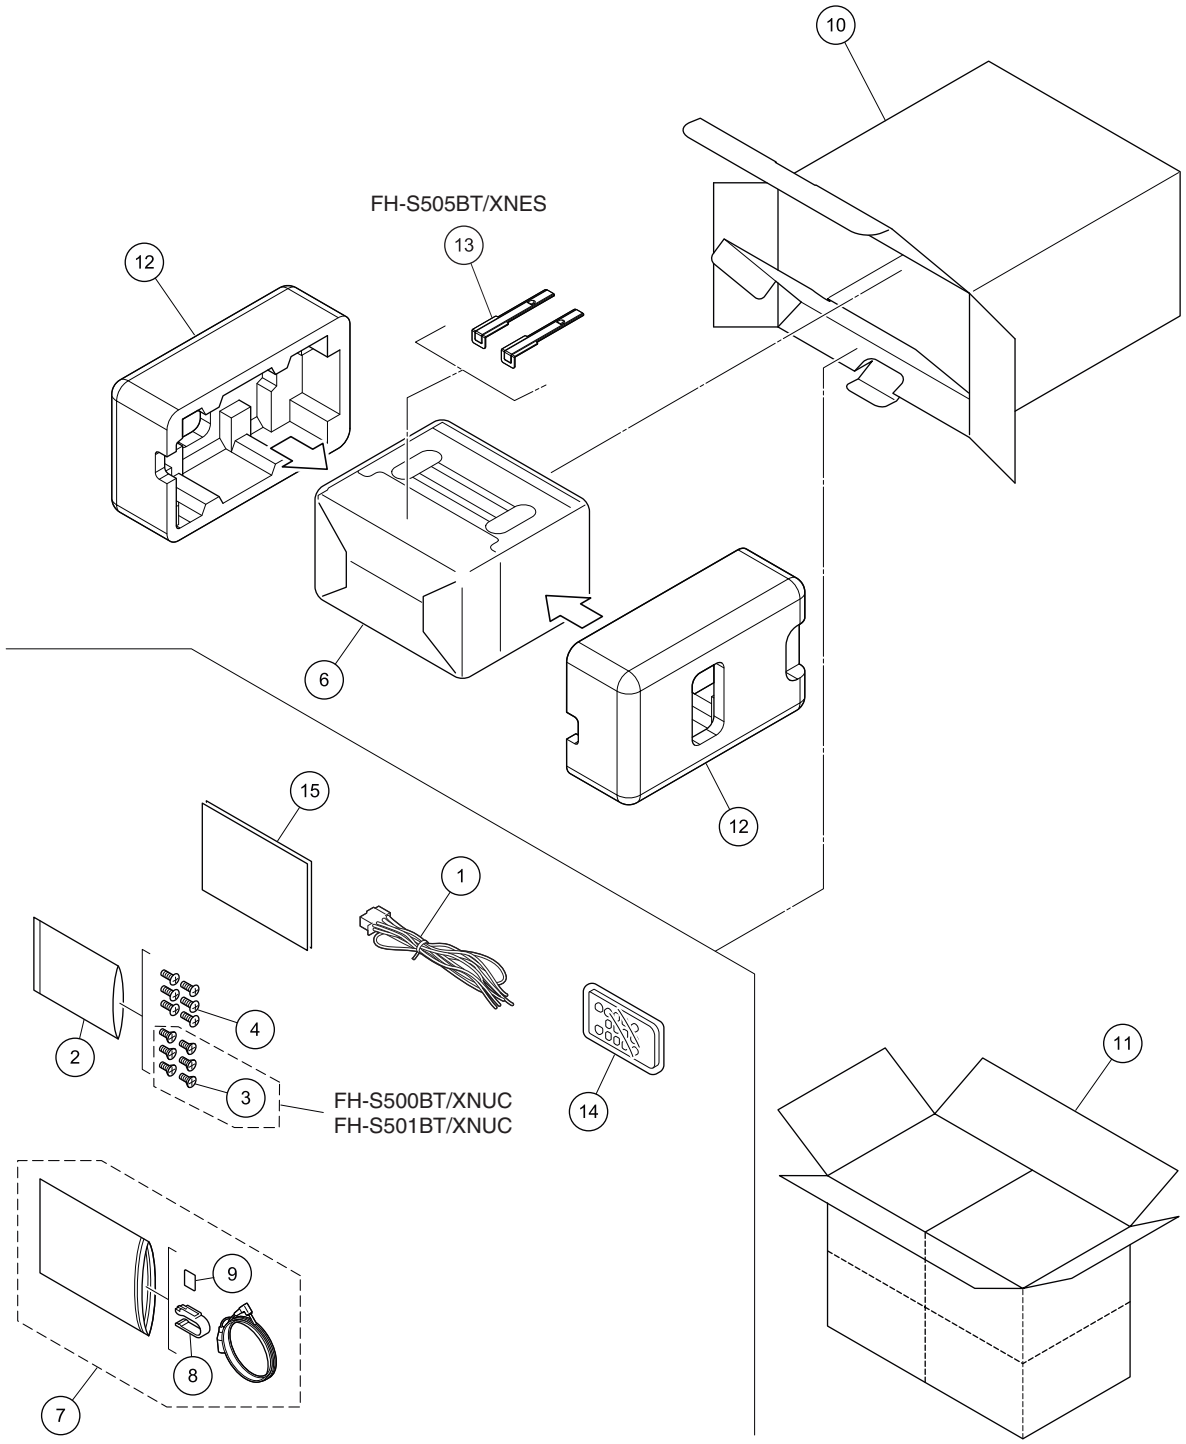

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Cord Assy	CDP1480
*	2	Polyethylene Bag	CEG1160
	3	Screw	See Contrast table (2)
	4	Screw	CBA2384
	5	•••••	
	6	Cover	See Contrast table (2)
	7	Microphone Assy	CPM1109
	8	Holder	CZN7192
	9	Cushion	CZN7193
	10	Unit Box	See Contrast table (2)
	11	Contain Box	See Contrast table (2)
	12	Protector	See Contrast table (2)
	13	Handle	See Contrast table (2)
	14	Card Remote Control Unit	CXE9605
	15-1	Owner's Manual	See Contrast table (2)
	15-2	Quick Start Guide	See Contrast table (2)
	15-3	Web IM	See Contrast table (2)
*	15-4	Warranty Card	See Contrast table (2)
*	15-5	Caution Card	See Contrast table (2)
*	15-6	Service Network	See Contrast table (2)

(2) CONTRAST TABLE

FH-S500BT/XNUC, FH-S501BT/XNUC, FH-S505BT/XNME, FH-S505BT/XNES, FH-S506BT/XNES and FH-S509BT/XNID are constructed the same except for the following:

Mark	No.	Symbol and Description	FH-S500BT /XNUC	FH-S501BT /XNUC	FH-S505BT /XNME	FH-S505BT /XNES	FH-S506BT /XNES	FH-S509BT /XNID
	3	Screw	CBA2383	CBA2383	Not used	Not used	Not used	Not used
	6	Cover	CEG1359	CEG1359	CEG1356	CEG1356	CEG1356	CEG1356
	10	Unit Box	QHG4134	QHG4135	QHG4136	QHG4137	QHG4138	QHG4139
	11	Contain Box	QHL4134	QHL4135	QHL4136	QHL4137	QHL4138	QHL4139
	12	Protector	QHP3044	QHP3044	QHP3044	QHP3045	QHP3044	QHP3044
	13	Handle	Not used	Not used	Not used	CND6289	Not used	Not used
	15-1	Owner's Manual	QRD3535	Not used	QRD3517	QRD3515	QRD3515	QRB3724
	15-2	Quick Start Guide	Not used	QRD3534	Not used	Not used	Not used	Not used
*	15-3	Web IM	See Contents of Web IM (3)	See Contents of Web IM (3)	Not used	Not used	Not used	Not used
*	15-4	Warranty Card	QRY3001	QRY3001	QRY3005	Not used	Not used	CRY1304
*	15-5	Caution Card	Not used	CRP1386	Not used	Not used	Not used	Not used
*	15-6	Service Network	Not used	Not used	QRY3006	Not used	Not used	Not used

Owner's Manual, Installation Manual


Part No.	Language
QRD3517	English, Spanish(Espanol)
QRD3515	English, Traditional Chinese, Arabic, Persian, Portuguese(B), Spanish(Espanol)
QRB3724	English
QRD3534	English, French, Spanish(Espanol)
QRD3535	English, French, Spanish(Espanol)

(3) CONTENTS OF WEB IM

Part No.	Language
*QRI3028	English, French, Spanish(Espanol)

All operation manuals are supplied in PDF files by the WEB. No printed papers are available.

9.2 EXTERIOR (1) SECTION

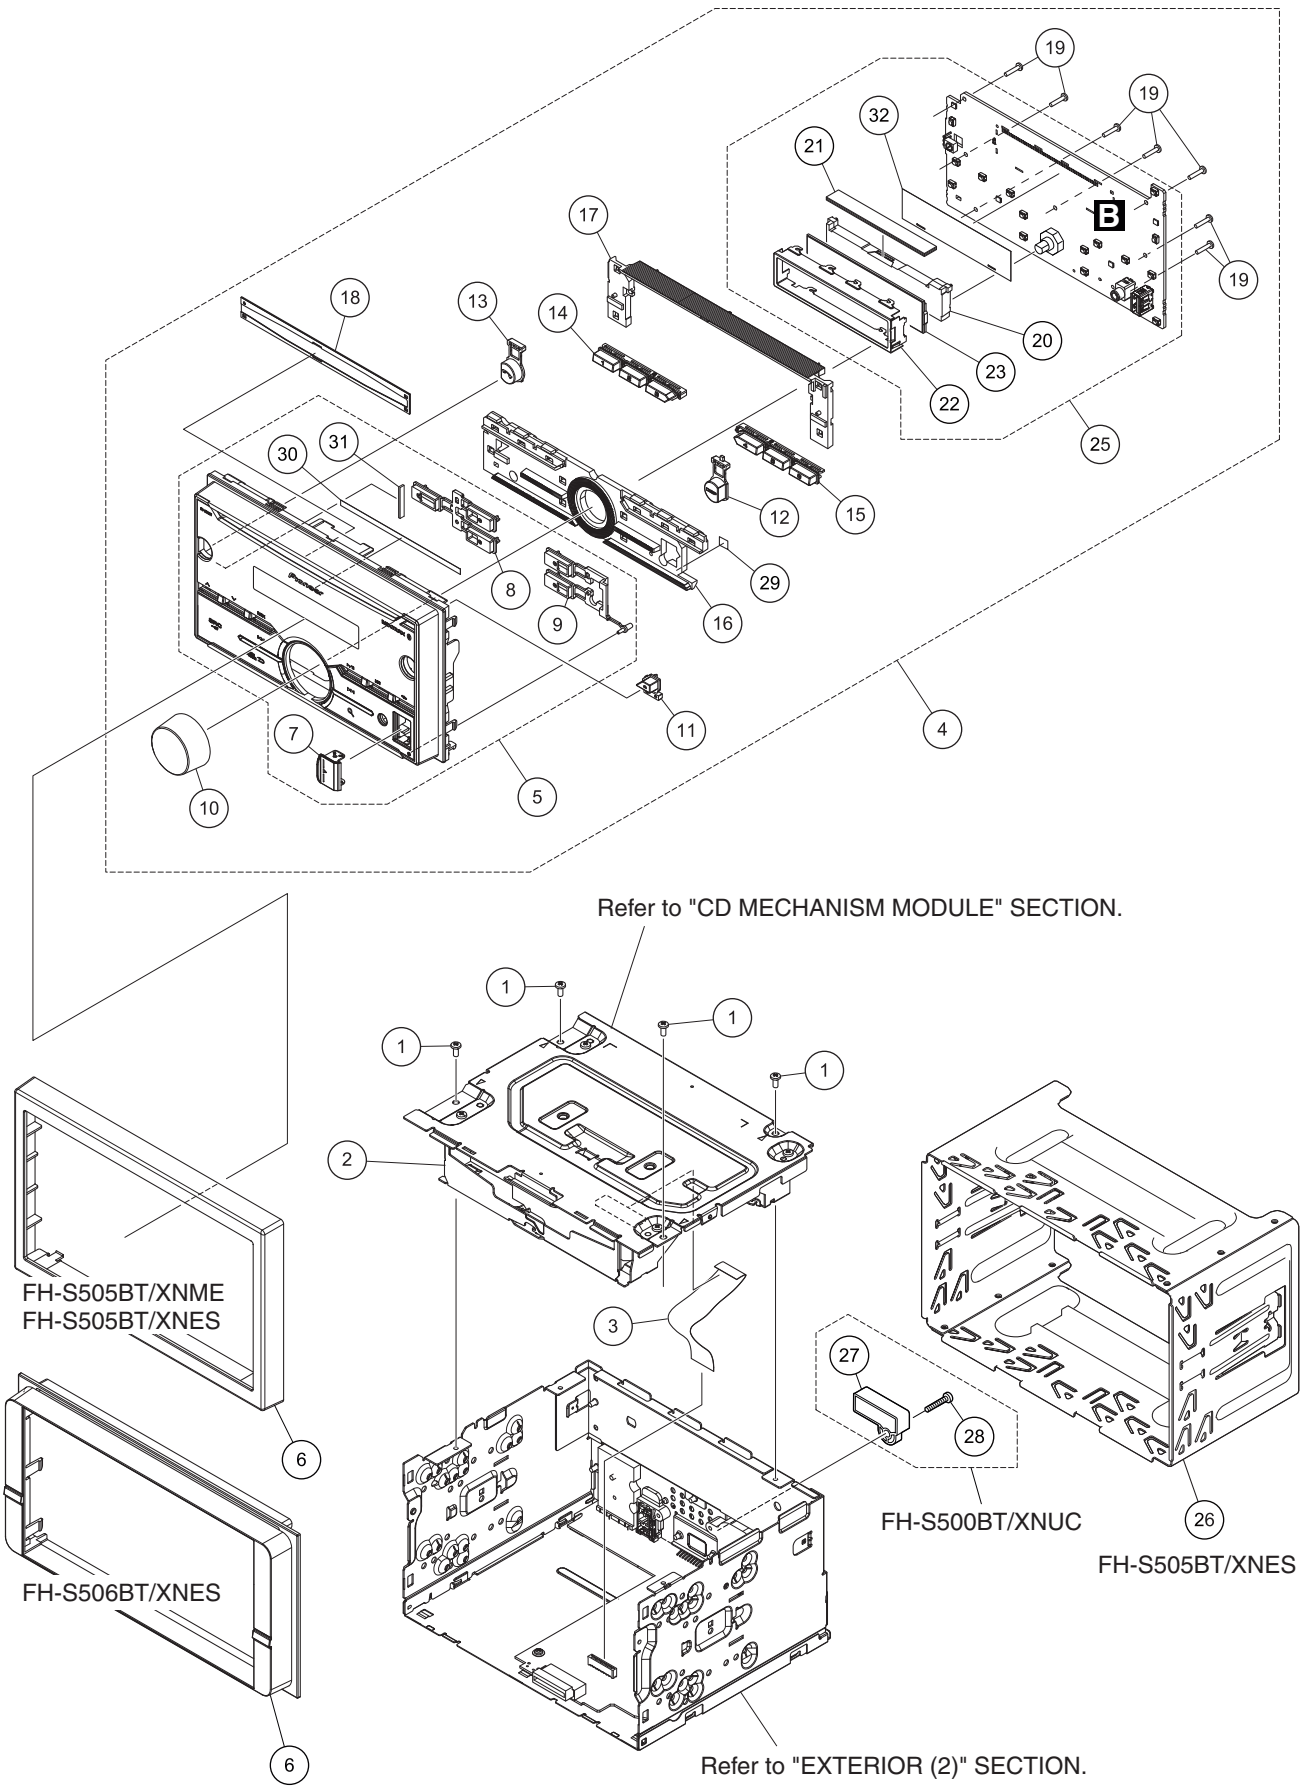

(1) EXTERIOR (1) SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	Screw	BSZ26P060FTC
	2	CD Mechanism Module(S11.6STD-FH)	CXK5806
	3	Cable	QDE3029
	4	Grille Assy	See Contrast table (2)
	5	Grille Unit	See Contrast table (2)
	6	Panel	See Contrast table (2)
*	7	Door	QAT3032
*	8	Button	QAC3235
*	9	Button	QAC3236
	10	Knob Unit	QXA4278
	11	Button(EJECT)	QAC3230
	12	Button(DISP)	QAC3231
	13	Button(PHONE)	QAC3232
	14	Button(1-3)	QAC3233
	15	Button(4-6)	QAC3234
	16	Lighting Conductor	QNV3122
	17	Lighting Conductor	QNV3124
	18	Cover	QNM3151
	19	Screw	BPZ20P100FTC
	20	Lighting Conductor	QNV3147
	21	Rubber Connector	QNV3148
	22	Holder	QNC3161
	23	Segment LCD (V1802)	CAW2063
	24	•••••	
	25	Keyboard Unit	QWM4652
	26	Holder	See Contrast table (2)
	27	Holder	See Contrast table (2)
	28	Screw	See Contrast table (2)
	29	Sheet	QNM3145
*	30	Sheet	QNM3213
*	31	Cushion	QNM3152
	32	Sheet	QNM3159

(2) CONTRAST TABLE

FH-S500BT/XNUC, FH-S501BT/XNUC, FH-S505BT/XNME, FH-S505BT/XNES, FH-S506BT/XNES and FH-S509BT/XNID are constructed the same except for the following:

Mark	No.	Symbol and Description	FH-S500BT /XNUC	FH-S501BT /XNUC	FH-S505BT /XNME	FH-S505BT /XNES	FH-S506BT /XNES	FH-S509BT /XNID
	4	Grille Assy	QXA5222	QXA5223	QXA5224	QXA5224	QXA5236	QXA5237
	5	Grille Unit	QXA5212	QXA5213	QXA5214	QXA5214	QXA5231	QXA5232
	6	Panel	Not used	Not used	QNS4003	QNS4003	QNS4004	Not used
	26	Holder	Not used	Not used	Not used	CND7102	Not used	Not used
	27	Holder	CNV7619	Not used	Not used	Not used	Not used	Not used
	28	Screw	BSZ30P160FTC	Not used	Not used	Not used	Not used	Not used

9.3 EXTERIOR (2) SECTION

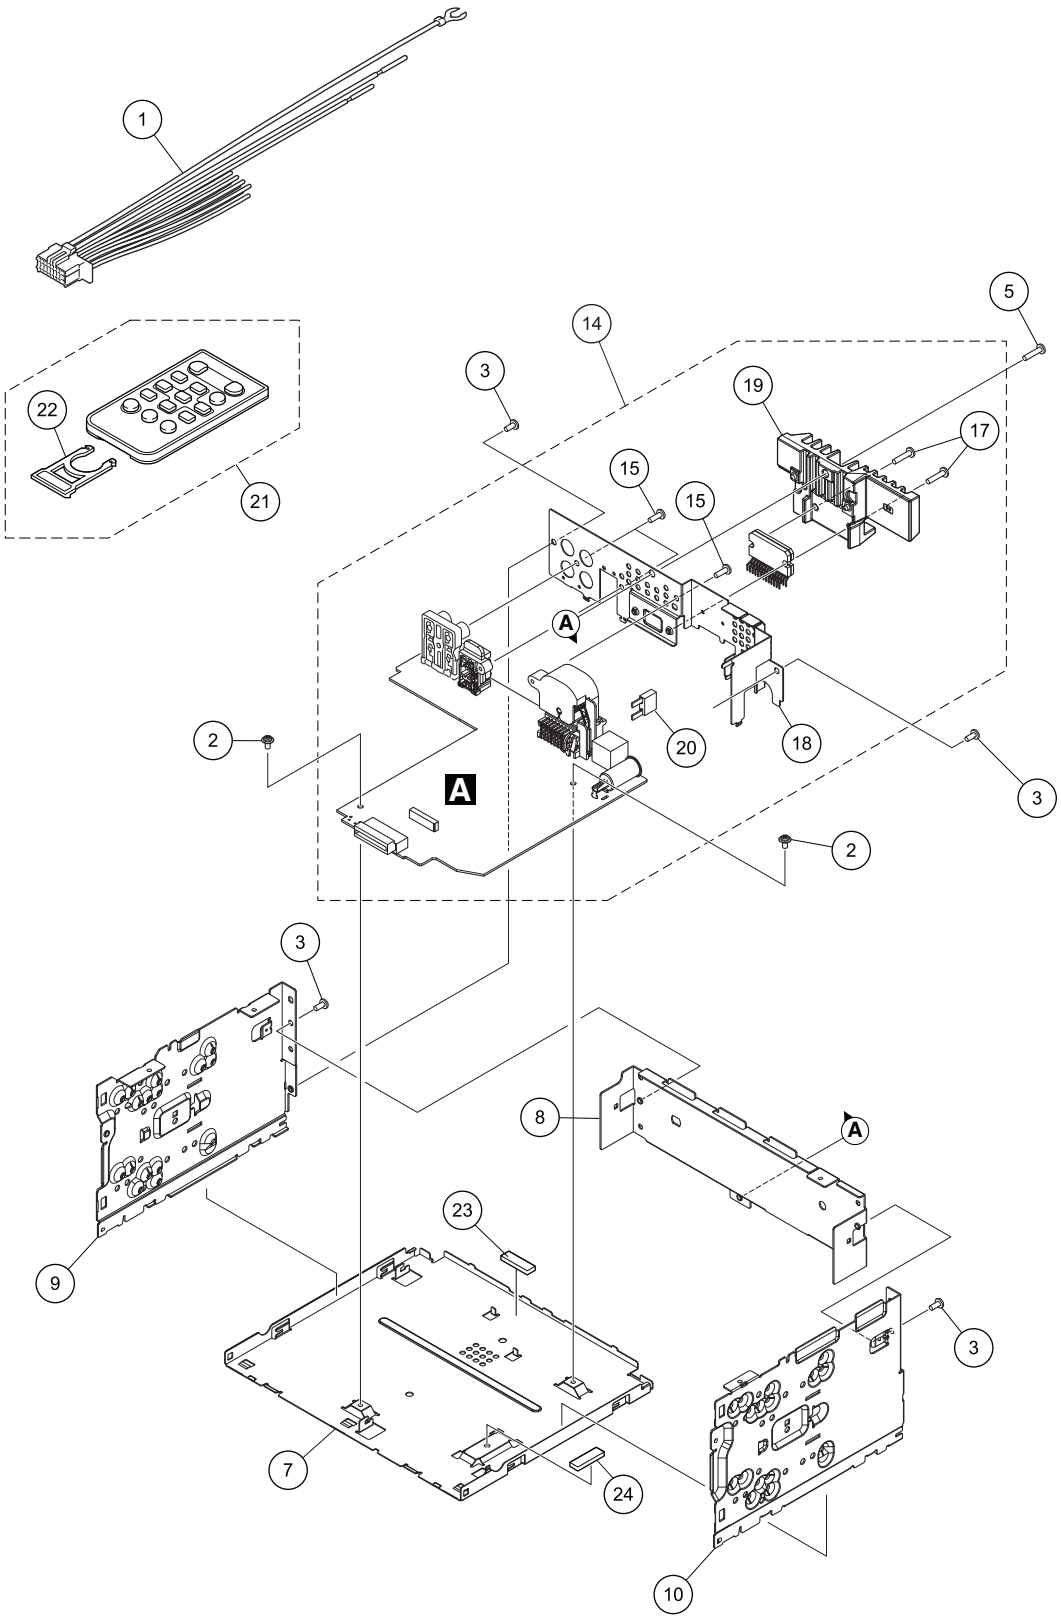

(1) EXTERIOR (2) SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	Cord Assy	CDP1480
	2	Screw	ASZ26P050FTC
	3	Screw	BSZ26P060FTC
	4	•••••	
	5	Screw	BSZ26P120FTC
	6	•••••	
	7	Case	QNB3055
	8	Holder	QNC3057
	9	Bracket	QNC3093
	10	Bracket	QNC3094
	11	•••••	
	12	•••••	
	13	•••••	
	14	Tuner Amp Unit	See Contrast table (2)
	15	Screw	BPZ26P080FTC
	16	•••••	
	17	Screw	BSZ26P120FTC
	18	Holder	QNC3165
	19	Heat Sink	See Contrast table (2)
⚠	20	Fuse(10 A)	YEK5001
	21	Card Remote Control Unit	CXE9605
	22	Cover	CNU3681
	23	Heat Cond Sheet	QNM3130
	24	Heat Cond Sheet	QNM3223

(2) CONTRAST TABLE

FH-S500BT/XNUC, FH-S501BT/XNUC, FH-S505BT/XNME, FH-S505BT/XNES, FH-S506BT/XNES and FH-S509BT/XNID are constructed the same except for the following:

Mark	No.	Symbol and Description	FH-S500BT /XNUC	FH-S501BT /XNUC	FH-S505BT /XNME	FH-S505BT /XNES	FH-S506BT /XNES	FH-S509BT /XNID
	14	Tuner Amp Unit	QWM4614	QWM4613	QWM4696	QWM4615	QWM4697	QWM4616
	19	Heat Sink	QNR3010	QNR3010	QNR3002	QNR3002	QNR3002	QNR3002

9.4 CD MECHANISM MODULE

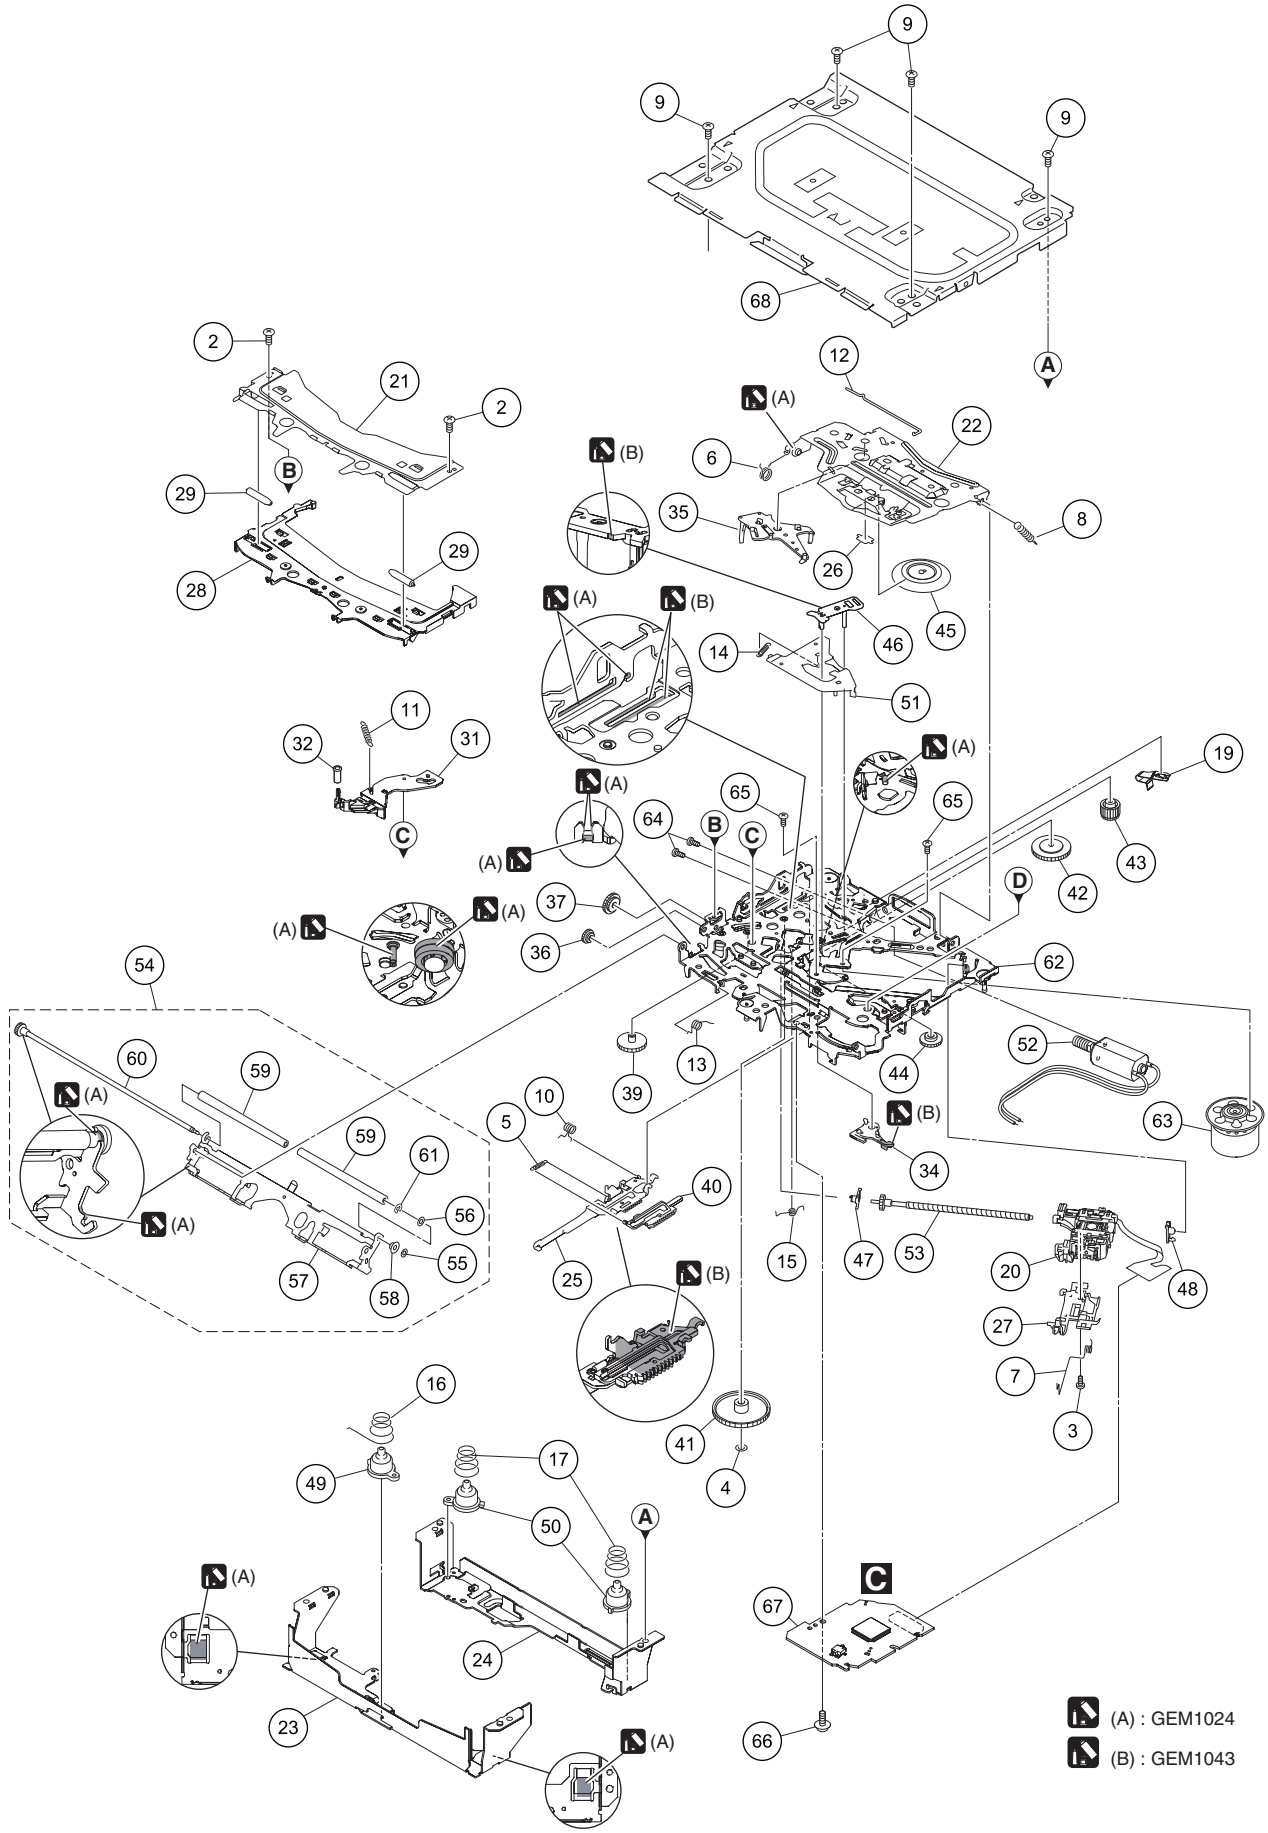

CD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	•••••	
	2	Screw	BSZ20P040FTC
	3	Screw(M2 x 4)	CBA1835
	4	Washer	CBF1038
	5	Spring	CBH3010
	6	Spring	CBH2855
	7	Spring	CBH2856
	8	Spring	CBH2860
	9	Screw	BSZ26P060FTC
	10	Spring	CBH3011
	11	Coil Spring	CBH3095
	12	Spring	CBH3014
	13	Spring	CBH3015
	14	Spring	CBH3016
	15	Spring	CBH3017
	16	Spring	CBH3086
	17	Spring	CBH3019
	18	•••••	
	19	Leaf Spring	CBL1824
	20	Pickup Unit(P10.6)(Service)	CXX3556
	21	Bracket	CND4553
	22	Arm	CND6406
	23	Bracket	CND6127
	24	Bracket	CND5710
	25	Lever	CND6834
	26	Sheet	CNN3678
	27	Rack	CNV8342
	28	Guide	CNW3489
	29	Roller	CNW1172
	30	•••••	
	31	Arm	CNW2241
	32	Roller	CNW1175
	33	•••••	
	34	Arm	CNW1177
	35	Arm	CNW1178
	36	Gear	CNW1180
	37	Gear	CNW1181
	38	•••••	
	39	Gear	CNW1183
	40	Rack	CNW1184
	41	Gear	CNW1185
	42	Gear	CNW1186
	43	Gear	CNW1187
	44	Gear	CNW2287
	45	Clamper	CNW1190
	46	Arm	CNW1192
	47	Holder	CNW1193
	48	Holder	CNW1194
	49	Damper	CNW1197
	50	Damper	CNW1198
	51	Arm	CNW1726
	52	Motor Unit(M2)(LOAD/CRG)	CXC4026
	53	Screw Unit	CXC8894
	54	Arm Assy	CXE6232
	55	Washer	CBF1037
	56	Washer	CBF1038
	57	Arm	CND6242
	58	Collar	CNW2444
	59	Roller	CNW2500
	60	Gear Unit	CXE6225
	61	Washer	YE15FTC
	62	Chassis Unit	CXE4528
	63	Motor Unit(M1)(SPDL)	CXE2273
	64	Screw	JFZ20P025FTC
	65	Screw	JGZ17P022FTC
	66	Screw	EBA1028
	67	CD Core Unit (S11.6STD)	CWX4023
	68	Case	CNB3762

12. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

  Chip Resistor

  RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J

  Chip Capacitor (except for CQS.....)

  CKS....., CCS....., CSZS.....
- *Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *The expression of the unit in this manual is shown by u instead of μ. Please do not make a mistake.*

A:FH-S500BT/XNUC
B:FH-S501BT/XNUC
C:FH-S505BT/XNME
D:FH-S505BT/XNES
E:FH-S506BT/XNES
F:FH-S509BT/XNID

Unit Number: QWM4614(A)
Unit Number: QWM4613(B)
Unit Number: QWM4696(C)
Unit Number: QWM4615(D)
Unit Number: QWM4697(E)
Unit Number: QWM4616(F)
Unit Name : Tuner Amp Unit
Unit Number: QWM4652
Unit Name : Keyboard Unit
Unit Number: CWX4023
Unit Name : CD Core Unit(S11.6STD)

A

Unit Number: QWM4614(A)
Unit Number: QWM4613(B)
Unit Number: QWM4696(C)
Unit Number: QWM4615(D)
Unit Number: QWM4697(E)
Unit Number: QWM4616(F)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

Circuit Symbol and No.		Part No.
IC 201	Power supply IC	BD49101ARFS
IC 501	Microprocessor IC	STA1080
IC 502	IC	S-80827CNMC-B8M
IC 701	IC(A,B,C)	337S3959
IC 711	RAM IC	M12L128168A-5TG2N
IC 731	ROM IC	M95512-RMN6P
IC 741	Flash ROM Unit(A,B)	QVQ1018
IC 741	Flash ROM Unit(C,D,E,F)	QVQ1023
IC 742	IC	MX25L1636EM2I-08G
IC 761	E-VOL System LSI	BD37067FV
IC 851	Tuner IC	TEF6686HN-V102
IC 1301	Power Amp IC(A,B,C,F)	TCB501HQ
IC 1301	Power Amp IC(D,E)	PAL014A
IC 1302	Logic IC	TC7SH32FUS2
Q 111	Bipolar Transistor	LSCR523UB
Q 141	Bipolar Transistor	LSCR523UB
Q 142	Bipolar Transistor	LSCR523UB
Q 201	Bipolar Transistor	LSCR523UB
Q 202	FET	SSM3J332R
Q 203	Power MOS FET	RRR040P03
Q 204	Bipolar Transistor	LSCR523UB
Q 205	FET	SSM3J332R
Q 441	Transistor	2SAR502UB
Q 442	Resistor Built-in Transistor	LTC023YEB
Q 701	Bipolar Transistor(A,B,C)	LSAR523UB
Q 1101	Resistor Built-in Transistor	LTC014EEB
Q 1242	Transistor	IMH23
Q 1243	Transistor	IMH23
Q 1276	Transistor(C,D,E,F)	EMD53
Q 1277	Transistor(C,D,E,F)	EMD53
Q 1278	Transistor(C,D,E,F)	EMD53
Q 1279	Transistor(C,D,E,F)	EMD53
Q 1301	Transistor	EMD52
Q 1302	Transistor	ISA1602AM1
D 101	Diode	D1F60-5053
D 102	Diode	D1F60-5053
D 111	Diode	DZ2J068M0
D 141	Diode	DZ2J075M0
D 201	Schottky Diode	RB162M-40
D 202	Diode	RR264MM-400TF
D 203	Diode	RB056L-40
D 204	Diode	RR264MM-400TF
D 206	Schottky Diode	CMS30I30A
D 207	Schottky Diode	RB751SM-40
D 208	Schottky Diode	RB751SM-40
D 210	Schottky Diode	DB2J41100
D 501	Schottky Diode(A,B)	RB751SM-40
D 502	Schottky Diode(A,B)	RB751SM-40
D 506	Diode	DZ2J036M0
D 507	Diode	DZ2J036M0
D 1101	Diode	DZ2J180M0
D 1201	Diode	DZ2S068C
D 1204	Diode	DZ2J180M0
D 1205	Diode	DZ2J180M0

Circuit Symbol and No.		Part No.
D 1206	Diode	DZ2S068C
D 1207	Diode	DZ2S068C
D 1208	Diode	DZ2S068C
D 1209	Diode	DZ2S068C
D 1210	Diode	DZ2S068C
D 1301	Diode(D,E)	RR264MM-400TF
D 1302	Diode	RR264MM-400TF
D 1303	Schottky Diode	RB751SM-40
L 101	Choke Coil	CTH1620
L 201	SMD Inductor	CTH1521
L 202	SMD Inductor	CTH1524
L 203	Chip Beads	VTL1133
L 441	Inductor	CTF1736
L 501	Chip Beads	VTL1133
L 502	Inductor	CTF1645
L 511	Chip Beads	VTL1133
L 513	Chip Beads	VTL1133
L 514	Chip Beads	VTL1126
L 515	Chip Beads	VTL1133
L 516	Chip Beads	VTL1133
L 517	Chip Beads	VTL1133
L 518	Chip Beads	VTL1133
L 519	Chip Beads	VTL1133
L 520	Chip Beads	VTL1133
L 711	Chip Beads	VTL1133
L 731	Chip Beads	VTL1126
L 741	Chip Beads	VTL1133
L 742	Chip Beads	VTL1126
L 854	Inductor	LCMAR27J1608
L 855	Inductor	CTF1786
L 856	Inductor(A,B,C)	CTF1389
L 857	Inductor(D,E,F)	LCYAR82J2016
L 858	Chip Coil(D,E,F)	LCTAWR27J2520
L 859	Chip Coil(D,E,F)	LCTAW3R3J2520
L 860	Inductor(A,B,C)	LCYC150K1608
L 1001	Inductor	CTF1786
L 1101	Inductor	CTF1389
L 1102	Chip Beads	VTL1133
L 1103	Chip Beads	VTL1133
L 1104	Chip Beads	VTL1133
L 1201	Inductor	CTF1713
L 1231	Chip Beads	VTL1133
L 1232	Chip Beads	VTL1133
L 1276	Chip Beads	VTL1126
L 1277	Chip Beads	VTL1126
L 1294	Chip Beads	VTL1126
L 1295	Chip Beads	VTL1126
L 1296	Chip Beads	VTL1126
L 1297	Chip Beads	VTL1126
T 851	Variable Coil	CTC1215
X 501	Resonator 24 MHz	CSS1773
X 502	Resonator 32.768 kHz	CSS1807
X 851	Crystal Resonator	CSS1868
P 852	Surge Absorber	IMSA-6803-01Y900
P 1243	Poly Switch	FSMD075-24R
P 1276	Poly Switch	FSMD075-24R
VA1101	SMD Varistor	MLV0402ES012V0010N
VA1201	SMD Varistor	MLV0402ES012V0010N
VA1202	SMD Varistor	MLV0402ES012V0010N

Circuit Symbol and No.		Part No.
U 1001	BT Module	CWX4751
CN1101	Connector	VKN1192
CN1201	Connector	CKS6452
JA101	Plug	CKM1624
JA851	Antenna Jack	CKX1104
JA1241	Jack	CKB1109
JA1276	Jack	CKN1103

RESISTORS

R 111		RS1/16SS223J
R 112		RS1/16SS473J
R 113		RS1/16SS682J
R 114		RS1/4SA102J
R 141		RS1/16SS104J
R 142		RS1/16SS473J
R 143		RS1/16SS103J
R 144		RS1/16SS472J
R 145		RS1/16SS0R0J
R 201		RS1/16SS102J
R 202		RS1/16SS3303D
R 203		RS1/10SR0R0J
R 204		RS1/10SR0R0J
R 206		RS1/16SS472J
R 207		RS1/16SS103J
R 208		RS1/16SS473J
R 209		RS1/10SR472J
R 210		RS1/16SS103J
R 211		RS1/10SR472J
R 212		RS1/16SS103J
R 213		RS1/16SS132J
R 214		RS1/16SS102J
R 215		RS1/16SS2403D
R 216		RS1/16SS7502D
R 217		RS1/16SS4303D
R 218		RS1/16SS4303D
R 219		RS1/16SS273J
R 220		RS1/16SS474J
R 221		RS1/16SS473J
R 222		RS1/16SS6802D
R 223	30 mohm	CCN1401
R 224		RS1/16SS6802D
R 225		RS1/16SS102J
R 226		RS1/16SS1203D
R 227		RS1/16SS1802D
R 229		RS1/16SS3902D
R 230		RS1/16SS682J
R 231		RS1/16SS4703D
R 232		RS1/16SS1503D
R 233		RS1/16SS1003D
R 234		RS1/16SS7503D
R 235		RS1/16SS1603D
R 236		RS1/16SS103J
R 238		RS1/16SS103J
R 239		RS1/16SS101J
R 240		RS1/16SS101J
R 241		RS1/16SS680J
R 242		RS1/16SS4701D
R 243		RS1/16SS393J
R 244		RS1/16SS103J
R 248		RS1/16SS473J

Circuit Symbol and No.		Part No.
R 250		RS1/10SR471J
R 263		RS1/10SR103J
R 269		RS1/16SS101J
R 301		RS1/10SR0R0J
R 441		RS1/16SS103J
R 442		RS1/10SR221J
R 503		RS1/16SS100J
R 504		RS1/16SS100J
R 505		RS1/16SS221J
R 506		RS1/16SS473J
R 507		RS1/16SS473J
R 508		RS1/16SS473J
R 509		RS1/16SS473J
R 510		RS1/16SS473J
R 511		RS1/16SS473J
R 512		RS1/16SS0R0J
R 513		RS1/16SS222J
R 514		RS1/16SS101J
R 515		RS1/16SS103J
R 516		RS1/16SS101J
R 517		RS1/16SS103J
R 518	(A,B,C)	RS1/16SS472J
R 519		RS1/16SS271J
R 521		RS1/16SS473J
R 522		RS1/16SS0R0J
R 524		RS1/16SS3001D
R 525		RS1/16SS103J
R 526		RS1/16SS1213F
R 527	(D,E,F)	RS1/16SS472J
R 530		RS1/16SS472J
R 531		RS1/16SS222J
R 532		RS1/16SS222J
R 533		RS1/10SR103J
R 534		RS1/10SR103J
R 535		RS1/10SR0R0J
R 536		RS1/16SS472J
R 538	(A,C)	RS1/16SS473J
R 538	(D)	RS1/16SS103J
R 538	(E)	RS1/16SS223J
R 539	(A,C)	RS1/16SS103J
R 539	(B,D,E,F)	RS1/16SS473J
R 540		RS1/16SS103J
R 541		RS1/16SS103J
R 542		RS1/10SR0R0J
R 543		RS1/10SR0R0J
R 544		RS1/16SS102J
R 546		RS1/16SS273J
R 547		RS1/16SS473J
R 548		RS1/16SS102J
R 550		RS1/16SS103J
R 551		RS1/16SS103J
R 552		RS1/16SS102J
R 554		RS1/16SS222J
R 555		RS1/16SS135J
R 556		RS1/16SS101J
R 557		RS1/16SS101J
R 558		RS1/16SS222J
R 559		RS1/16SS222J
R 560		RS1/16SS473J

Circuit Symbol and No.		Part No.
R 561		RS1/16SS103J
R 562		RS1/16SS472J
R 563		RS1/16SS472J
R 564		RS1/16SS472J
R 566		RAB4CQ103J
R 567		RS1/16SS472J
R 568		RS1/16SS0R0J
R 570		RS1/16SS221J
R 571		RS1/16SS221J
R 572		RS1/16SS472J
R 573		RS1/16SS473J
R 574		RS1/16SS473J
R 575		RS1/16SS473J
R 578		RS1/16SS473J
R 579		RS1/16SS473J
R 580		RS1/16SS473J
R 581		RS1/16SS0R0J
R 583		RS1/16SS0R0J
R 584		RS1/16SS102J
R 585		RS1/16SS0R0J
R 586		RS1/16SS103J
R 587		RS1/16SS0R0J
R 588		RS1/16SS221J
R 589		RS1/16SS0R0J
R 590		RS1/16SS221J
R 591		RS1/16SS361J
R 597		RS1/16SS102J
R 599		RS1/16SS102J
R 603		RS1/16SS101J
R 604		RS1/16SS101J
R 605		RS1/16SS101J
R 611		RS1/16SS472J
R 612		RS1/16SS473J
R 614		RS1/16SS473J
R 615		RS1/16SS103J
R 617		RS1/16SS473J
R 627		RS1/16SS153J
R 628		RS1/16SS153J
R 629		RS1/16SS472J
R 630		RS1/16SS101J
R 631		RS1/16SS0R0J
R 632		RS1/16SS101J
R 633		RS1/16SS101J
R 634		RS1/16SS101J
R 635		RS1/16SS101J
R 636		RS1/16SS101J
R 637		RS1/16SS221J
R 638		RS1/16SS221J
R 639	(A,B,C)	RS1/16SS101J
R 640		RS1/16SS101J
R 642		RS1/16SS221J
R 643		RS1/16SS101J
R 644		RS1/16SS473J
R 645		RS1/16SS101J
R 646		RS1/16SS101J
R 647		RS1/16SS102J
R 648		RS1/16SS102J
R 650		RS1/16SS101J
R 651		RS1/16SS102J
R 652		RS1/16SS101J

Circuit Symbol and No.		Part No.
R 653		RS1/16SS0R0J
R 657		RS1/16SS101J
R 658		RS1/16SS101J
R 659		RS1/16SS101J
R 660		RS1/16SS101J
R 661		RS1/16SS101J
R 663		RS1/16SS101J
R 664		RS1/16SS101J
R 665	(D,E,F)	RS1/16SS222J
R 672		RS1/16SS101J
R 690		RS1/16SS472J
R 701	(A,B,C)	RS1/16SS103J
R 702	(A,B,C)	RS1/16SS472J
R 703	(A,B,C)	RS1/16SS101J
R 704	(A,B,C)	RS1/16SS101J
R 705	(A,B,C)	RS1/16SS222J
R 706	(A,B,C)	RS1/16SS222J
R 707	(A,B,C)	RS1/16SS472J
R 708	(A,B,C)	RS1/16SS272J
R 709	(A,B,C)	RS1/16SS473J
R 710	(A,B,C)	RS1/16SS0R0J
R 714		RAB4CQ121J
R 715		RAB4CQ121J
R 716		RAB4CQ121J
R 717		RAB4CQ121J
R 718		RAB4CQ121J
R 719		RAB4CQ121J
R 720		RAB4CQ121J
R 721		RAB4CQ121J
R 722		RAB4CQ121J
R 723		RS1/10SR0R0J
R 724		RS1/16SS121J
R 731		RS1/16SS330J
R 732		RS1/16SS330J
R 733		RS1/16SS103J
R 734		RS1/16SS103J
R 735		RS1/16SS103J
R 736		RS1/16SS330J
R 737		RS1/16SS330J
R 741		RS1/16SS330J
R 742		RS1/16SS103J
R 743		RS1/16SS103J
R 744		RS1/16SS330J
R 745		RS1/16SS330J
R 746		RS1/16SS103J
R 747		RS1/16SS330J
R 748		RS1/16SS330J
R 749		RS1/16SS330J
R 750		RS1/16SS103J
R 751		RS1/16SS103J
R 753		RS1/16SS103J
R 754		RS1/16SS330J
R 761		RS1/10SR221J
R 763		RS1/16SS101J
R 764		RS1/16SS101J
R 766		RS1/16SS0R0J
R 767		RS1/16SS104J
R 768		RS1/16SS181J
R 769		RS1/8SQ0R0J

Circuit Symbol and No.		Part No.
R 770		RS1/10SR0R0J
R 851		RS1/16SS105J
R 852		RS1/16SS105J
R 853	(A,B,C)	RS1/16SS391J
R 853	(D,E,F)	RS1/16SS101J
R 864		RS1/16SS103J
R 868		RS1/16SS103J
R 870		RS1/16SS101J
R 871		RS1/16SS0R0J
R 872		RS1/16SS0R0J
R 873		RS1/16SS182J
R 874		RS1/16SS101J
R 875		RS1/16SS472J
R 890		RS1/16SS0R0J
R 1001		RS1/16SS0R0J
R 1002		RS1/16SS221J
R 1004		RS1/16SS473J
R 1005		RS1/16SS221J
R 1006		RS1/16SS0R0J
R 1007		RS1/16SS0R0J
R 1011		RS1/16SS221J
R 1012		RS1/16SS221J
R 1013		RS1/16SS0R0J
R 1017		RS1/16SS473J
R 1018		RS1/16SS473J
R 1101		RS1/16SS104J
R 1104		RS1/16SS472J
R 1105		RS1/16SS221J
R 1106		RS1/16SS221J
R 1107		RS1/16SS101J
R 1108		RS1/16SS221J
R 1109		RS1/16SS101J
R 1110		RS1/16SS102J
R 1112		RS1/16SS221J
R 1114		RS1/16SS473J
R 1115		RS1/16SS472J
R 1116		RS1/16SS472J
R 1117		RS1/16SS472J
R 1119		RS1/16SS473J
R 1120		RS1/16SS151J
R 1121		RS1/16SS151J
R 1122		RS1/16SS151J
R 1203		RS1/16SS223J
R 1204		RS1/16SS223J
R 1205		RS1/10SR222J
R 1206		RS1/10SR221J
R 1207		RS1/10SR221J
R 1208		RS1/10SR0R0J
R 1209		RS1/10SR222J
R 1210		RS1/10SR222J
R 1211		RS1/10SR222J
R 1212		RS1/10SR222J
R 1213		RS1/16SS123J
R 1214		RS1/10SR222J
R 1215		RS1/10SR101J
R 1217		RS1/16SS101J
R 1243		RS1/16SS821J
R 1244		RS1/16SS821J
R 1245		RS1/16SS821J

Circuit Symbol and No.		Part No.
R 1246		RS1/16SS821J
R 1247		RS1/16SS223J
R 1248		RS1/16SS223J
R 1249		RS1/16SS223J
R 1250		RS1/16SS223J
R 1254		RS1/16SS0R0J
R 1256		RS1/16SS0R0J
R 1276	(C,D,E,F)	RS1/16SS8201D
R 1277	(C,D,E,F)	RS1/16SS6800D
R 1279	(C,D,E,F)	RS1/16SS6800D
R 1278		RS1/16SS102J
R 1280		RS1/16SS102J
R 1281		RS1/16SS101J
R 1282		RS1/16SS101J
R 1283	(C,D,E,F)	RS1/16SS8201D
R 1284		RS1/16SS0R0J
R 1285		RS1/16SS0R0J
R 1301		RS1/16SS123J
R 1302		RS1/16SS103J
R 1303		RS1/16SS221J
R 1304		RS1/16SS0R0J
R 1306		RS1/16SS103J
R 1307		RS1/16SS0R0J
R 1308	(A,B,C,F)	RS1/8SQ0R0J
R 1309	(A,B,C,F)	RS1/8SQ0R0J
R 1310	(D,E)	RS1/8SQ0R0J
R 1311	(D,E)	RS1/8SQ0R0J
R 1312		RS1/16SS103J
R 1313		RS1/16SS102J
R 1314	(D,E)	RS1/8SQ0R0J
R 1321		RS1/16SS0R0J
R 1322		RS1/16SS0R0J
R 1323		RS1/16SS0R0J
R 1324		RS1/16SS0R0J
R 1421		RS1/16SS0R0J
R 1422		RS1/16SS0R0J
R 1427		RS1/16SS0R0J

CAPACITORS

C 101	2 200 uF/16 V	CCH1405
C 102		CKSRYB103K50
C 103		CKSSYB102K50
C 104		CKSSYB102K50
C 105		CKSSYB102K50
C 106		CKSSYB102K50
C 107		CKSSYB102K50
C 108		CKSSYB102K50
C 109		CKSSYB102K50
C 110		CKSSYB102K50
C 111		CKSRYX104K50
C 201		CCSSCH681J50
C 202		CEVW221M16
C 203		CKSRYX106M6R3
C 204		CEVQW221M6R3
C 205		CKSRYX105K50
C 206		CKSYX106K35
C 207		CKSSYB104K10
C 208		CCSSCH471J50
C 209		CCSSCH681J50
C 210	2 200 uF/16 V	CCH1405
C 211		CKSQYX106K10
C 212		CEAT102M16
C 213		CKSSYB222K50
C 214		CKSRYX106M6R3
C 215		CKSRYB104K16
C 216		CKSRYX104K50
C 217		CCSRCH102J50
C 218		CKSYX106K35
C 220		CKSYX106K35
C 221		CKSYX106K35
C 222		CEVW221M16
C 223		CCSSCH221J50
C 224		CKSRYB105K10
C 225		CKSRYB105K10
C 227		CCSSCH221J50
C 228		CCSSCH102J50
C 230		CKSQYX106K10
C 231		CKSRYB104K16
C 232		CEHVW101M6R3
C 234		CKSRYX475K6R3
C 236		CKSYX106K35
C 237		CKSRYB104K16
C 238		CKSYX226M16
C 239		CCSSCH100D50
C 240		CCSSCH100D50
C 241		CKSQYX106K10
C 242		CKSRYB104K16
C 243		CKSYX106K35
C 247		CKSRYB105K10
C 248		CKSRYX105K50
C 249		CCSSCH820J50
C 250		CKSRYX225K10
C 251		CKSRYB105K10
C 252		CKSRYX475K6R3
C 253		CKSRYX105K50
C 255		CKSSYX105K10
C 257		CKSYX106K35
C 259		CKSQYX106K10
C 260		CKSQYX106K10
C 261		CKSSYB104K10
C 270		CKSRYX475K6R3
C 441		CCSRCH101J50
C 442		CKSQYX106K10
C 443		CCSRCH101J50
C 444		CKSQYX106K10
C 502		CKSSYB104K10
C 503		CKSRYX475K6R3
C 505		CKSSYB104K10
C 506		CKSRYX475K6R3
C 507		CKSRYX475K6R3
C 508		CKSSYB104K10
C 509		CKSRYX475K6R3
C 510		CKSSYB104K10
C 511		CKSRYX475K6R3
C 512		CKSSYB104K10
C 513		CKSRYX475K6R3
C 514		CKSSYB104K10
C 515		CKSSYX105K10
C 516		CKSRYX225K16

Circuit Symbol and No.		Part No.
C 517		CKSSYB104K10
C 518		CCSSCH100D50
C 519		CCSSCH100D50
C 520		CKSRYX475K6R3
C 521		CKSSYB104K10
C 522		CKSRYX475K6R3
C 523		CKSRYX475K6R3
C 524		CKSRYX475K6R3
C 525		CKSRYX106M6R3
C 526		CKSSYB103K16
C 527		CKSRYX106M6R3
C 528		CKSSYB103K16
C 529		CKSSYB104K10
C 530		CKSRYX475K6R3
C 531		CKSSYX105K10
C 532		CKSSYX105K10
C 533		CKSRYX475K6R3
C 534		CKSSYB104K10
C 535		CEVW221M10
C 536		CCSSCH101J50
C 537		CKSSYB103K16
C 538		CKSRYX106M6R3
C 539		CKSSYB103K16
C 540		CKSRYX106M6R3
C 541		CKSSYB222K50
C 542		CKSSYB104K10
C 543		CKSSYX105K10
C 544		CKSSYB473K16
C 545		CCSSCH100D50
C 546		CCSSCH120J50
C 551		CKSSYB104K10
C 552		CKSRYX475K6R3
C 553		CKSQYX106K10
C 555		CKSSYB103K16
C 556		CKSSYB104K10
C 559		CKSQYB224K50
C 560		CKSSYB103K16
C 565		CCSRCH270J50
C 566		CCSRCH330J50
C 569		CCSSCH101J50
C 573		CCSRCH101J50
C 574		CCSSCH101J50
C 575		CKSSYB104K10
C 576		CKSSYB102K50
C 577		CCSSCH101J50
C 580		CKSRYB104K16
C 588		CKSSYB104K10
C 590		CKSSYB472K25
C 591		CKSSYB472K25
C 592		CKSSYB472K25
C 593		CKSSYB472K25
C 595		CKSSYB472K25
C 701	(A,B,C)	CKSSYB104K10
C 702	(A,B,C)	CKSSYB104K10
C 712		CKSSYX105K10
C 713		CKSSYB104K10
C 714		CKSSYX105K10
C 715		CKSSYX105K10
C 716		CKSSYX105K10
C 717		CKSRYX475K6R3

Circuit Symbol and No.		Part No.
C 718		CKSSYX105K10
C 719		CKSSYB104K10
C 721		CKSRYX105K16
C 722		CKSSYB104K10
C 723		CCSSCH102J50
C 729		CKSQYX106K10
C 731		CKSSYB104K10
C 741		CKSRYX225K10
C 742		CKSSYB104K10
C 743		CKSSYB104K10
C 761		CKSRYB105K10
C 762		CKSRYB105K10
C 763		CKSRYB105K10
C 769		CKSRYB105K10
C 770		CKSRYB105K10
C 771		CKSRYB105K10
C 772		CKSRYB105K10
C 773		CKSRYB105K10
C 774		CCSSCH151J50
C 775		CCSSCH151J50
C 776		CKSRYX104K50
C 777		CKSYX106K35
C 778		CKSRYB105K10
C 779		CKSQYX106K10
C 780		CKSSYB104K16
C 781		CKSRYB105K10
C 782		CKSRYB105K10
C 783		CKSRYB105K10
C 784		CKSRYB105K10
C 785		CKSRYB105K10
C 787		CKSQYX106K16
C 788		CKSQYX106K16
C 790		CKSQYX106K10
C 791		CKSRYB103K50
C 794		CCSRCH101J50
C 853		CCSSCH100D50
C 854		CCSSCH471J50
C 856		CKSRYX104K50
C 857		CKSRYX104K50
C 858		CCSSCH220J50
C 859		CCSSCH331J50
C 860	(D,E,F)	CCSSCK2R0C50
C 861	(D,E,F)	CCSSCK1R0C50
C 862	(D,E,F)	CCSSCK1R0C50
C 863	(D,E,F)	CCSSCH120J50
C 865		CKSRYX225K10
C 866		CKSSYB224K6R3
C 867		CKSSYB102K50
C 870		CCSSCH102J50
C 872		CKSSYB104K10
C 874		CCSSCH390J50
C 875		CKSSYB104K10
C 878		CKSSYB152K50
C 882		CKSSYX105K10
C 884	(A,B,C)	CKSSYB104K16
C 885	(A,B,C)	CCG1318
C 890		CKSRYX106M6R3
C 891		CKSRYX225K10
C 1003		CKSRYB104K16

Circuit Symbol and No.	Part No.
C 1004	CKSRYB104K16
C 1101	CKSSYB103K16
C 1105	CKSSYX105K10
C 1106	CKSSYX105K10
C 1109	CCSSCH102J50
C 1201	CCSRCH102J50
C 1202	CKSRYX104K50
C 1203	CKSRYB104K16
C 1204	CKSRYB105K10
C 1205	CCSRCH221J50
C 1206	CCSRCH221J50
C 1207	CKSRYB474K10
C 1210	CKSRYB105K10
C 1212	CCSSCH470J50
C 1217	CCSSCH121J50
C 1221	CKSYX106K35
C 1243	CKSQYX106K10
C 1244	CKSQYX106K10
C 1245	CKSQYX106K10
C 1246	CKSQYX106K10
C 1247	CCSSCH102J50
C 1248	CCSSCH102J50
C 1249	CCSSCH102J50
C 1250	CCSSCH102J50
C 1253	CKSSYB103K16
C 1254	CKSSYB104K10
C 1255	CCSRCH331J50
C 1256	CKSSYX105K10
C 1276	CKSRYB104K16
C 1277	CKSRYB104K16
C 1278	CKSRYB104K16
C 1279	CKSRYB104K16
C 1280	CKSSYB102K50
C 1281	CKSSYB102K50
C 1301	CKSQYB474K25
C 1302	CKSQYB474K25
C 1303	CKSQYB474K25
C 1304	CKSQYB474K25
C 1305	CKSSYB104K10
C 1306	CKSRYB474K10
C 1308	CKSRYX104K50
C 1310	CKSQYX106K16
C 1311	CKSRYX225K10
C 1312	CKSRYX104K50
C 1316	CKSRYX104K50
C 1317	CKSRYX104K50
C 1318	CKSRYX104K50
C 1321	CKSRYX106M6R3

B

Unit Number: QWM4652
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1801	Driver IC	BU97540KV-M
IC 1851	IR RC REC Module	SIR8440B5
Q 1951	Bipolar Transistor	LSCR523UB
Q 1952	Bipolar Transistor	LSCR523UB
Q 1953	Bipolar Transistor	LSCR523UB
Q 1954	Bipolar Transistor	LSCR523UB
D 1901	Diode	SZESD7351HG
D 1902	Diode	SZESD7351HG
D 1921	Diode	DZ2S068C
D 1922	Diode	DZ2S068C
D 1923	Diode	DZ2S068C
D 1951	LED	FC-3215BK-470H10
D 1952	LED	FC-3215BK-470H10
D 1953	LED	FC-3215BK-470H10
D 1954	LED	FC-3215BK-470H10
D 1955	LED	FC-3215BK-470H10
D 1956	White LED	SWBA05(FI231719)
S 1821	Push Switch	CSG1155
S 1822	Push Switch	CSG1155
S 1823	Push Switch	CSG1155
S 1824	Push Switch	CSG1155
S 1825	Push Switch	CSG1155
S 1826	Push Switch	CSG1155
S 1827	Push Switch	CSG1155
S 1828	Push Switch	CSG1155
S 1829	Push Switch	CSG1155
S 1830	Push Switch	CSG1155
S 1831	Push Switch	CSG1155
S 1832	Push Switch	CSG1155
S 1833	Push Switch	CSG1155
S 1834	Push Switch	CSG1155
S 1835	Encoder(MULTI-CONTROL)	CSD1168
S 1941	Push Switch	CSG1155
CN1941	Connector	CKS6451
JA1901	Connector	CKS6443
JA1921	Jack	CKN1090
V 1802	Segment LCD	CAW2063

RESISTORS

R 1802	RS1/10SR472J
R 1821	RS1/10SR273J
R 1854	RS1/10SR101J
R 1941	RS1/10SR222J
R 1942	RS1/10SR222J
R 1943	RS1/10SR222J
R 1944	RS1/10SR222J
R 1951	RS1/10SR2201D
R 1952	RS1/10SR560J
R 1953	RS1/10SR2000D
R 1954	RS1/10SR2701D
R 1955	RS1/10SR2201D
R 1956	RS1/10SR560J
R 1957	RS1/10SR2000D
R 1958	RS1/10SR2701D
R 1959	RS1/10SR2201D
R 1960	RS1/10SR221J
R 1961	RS1/10SR2000D
R 1962	RS1/10SR2701D
R 1963	RS1/10SR222J
R 1964	RS1/4SA181J
R 1965	RS1/10SR910J
R 1966	RS1/10SR152J

CAPACITORS

Circuit Symbol and No.		Part No.
C 1801		CKSRYB105K10
C 1851		CKSQYX106K10
C 1902		CKSRYB104K16
C 1904		CKSRYX475K6R3
C 1905		CCSRCH330J50
C 1906		CCSRCH330J50

C

Unit Number: CWX4023
Unit Name : CD Core Unit(S11.6STD)

MISCELLANEOUS

IC 201	IC	PE5791A
IC 301	Driver IC	BD8223EFV
Q 101	Transistor	2SAR502UB
Q 102	Chip Digital Transistor	LTA123JUB
X 201	Ceramic Resonator 16.934 MHz	CSS1603
S 901	Switch(HOME)	CSN1090
S 903	Spring Switch(DSCSNS)	CSN1081
CN101	Connector	CKS4808
CN701	Connector	CKS6146

RESISTORS

R 101	RS1/10SR2R4J
R 102	RS1/10SR2R4J
R 103	RS1/10SR2R7J
R 108	RS1/16SS105J
R 109	RS1/16SS222J
R 214	RS1/16SS103J
R 215	RS1/16SS393J
R 216	RS1/16SS122J
R 217	RS1/16SS562J
R 218	RS1/16SS472J
R 229	RS1/16SS471J
R 232	RS1/16SS0R0J
R 237	RS1/16SS221J
R 240	RS1/16SS473J
R 245	RS1/16SS104J
R 254	RS1/16SS104J
R 260	RS1/16SS103J
R 264	RS1/16SS102J
R 281	RS1/16SS560J
R 282	RS1/16SS560J
R 291	RS1/16SS560J
R 294	RS1/16SS471J
R 303	RS1/16SS123J
R 304	RS1/16SS123J
R 305	RS1/16SS102J
R 306	RS1/16SS472J
R 307	RS1/16SS102J
R 308	RS1/16SS472J
R 309	RS1/16SS473J
R 310	RS1/16SS472J
R 311	RS1/16SS472J
R 312	RS1/16SS472J
R 313	RS1/16SS472J
R 701	RS1/16SS101J
R 702	RS1/16SS101J
R 706	RS1/16SS221J

Circuit Symbol and No.	Part No.
CAPACITORS	
C 104	CKSQYB475K6R3
C 203	CKSSYB104K10
C 209	CKSRYB104K16
C 210	CKSSYB104K10
C 211	CKSSYB104K10
C 212	CKSSYB104K10
C 213	CKSSYB332K50
C 214	CKSSYB473K16
C 215	CKSSYB104K10
C 216	CKSSYB182K50
C 217	CCSSCH560J50
C 218	CCSSCH4R0C50
C 219	CKSSYB104K10
C 220	CKSSYB104K10
C 221	CKSSYB104K10
C 222	CKSSYB104K10
C 223	CCSSCH680J50
C 224	CCSSCH470J50
C 225	CKSSYB103K16
C 228	CCSSCH270J50
C 229	CKSSYB104K10
C 233	CKSSYB103K16
C 236	CKSSYB104K10
C 238	CKSRYB104K16
C 299	CKSSYB104K10
C 302	CKSSYB102K50
C 303	CKSSYB102K50
C 304	CKSSYB223K16
C 305	CKSSYB104K10
C 306	CKSSYB104K10
C 307	CKSRYB105K10
C 308	CKSRYB105K10
C 710	CKSSYB102K50