



EXPLODED VIEW (MAIN BODY UPPER SIDE)

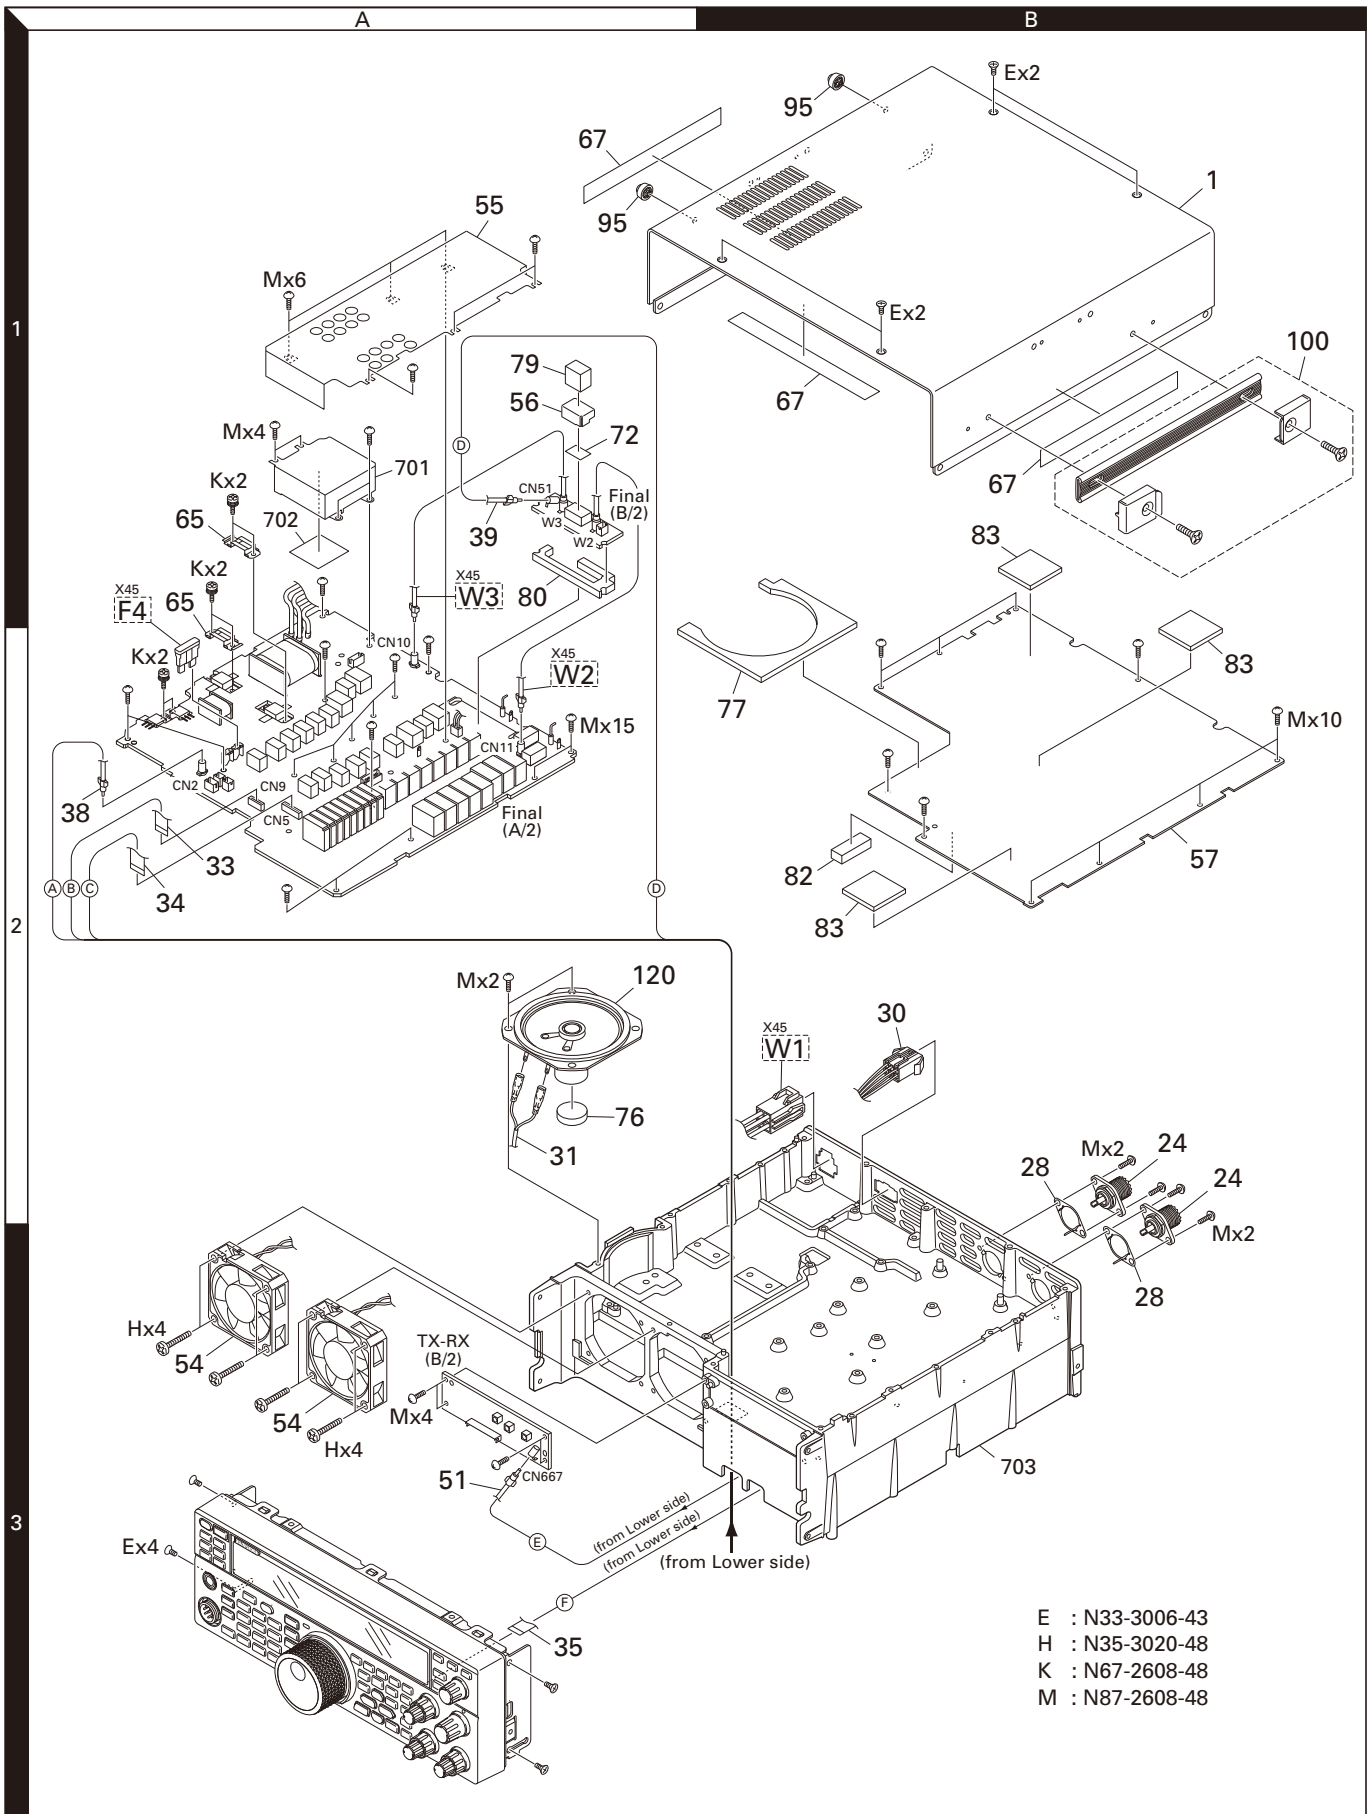


Parts with the exploded numbers larger than 700 are not supplied.

TS-590S

EXPLODED VIEW (MAIN BODY LOWER SIDE)

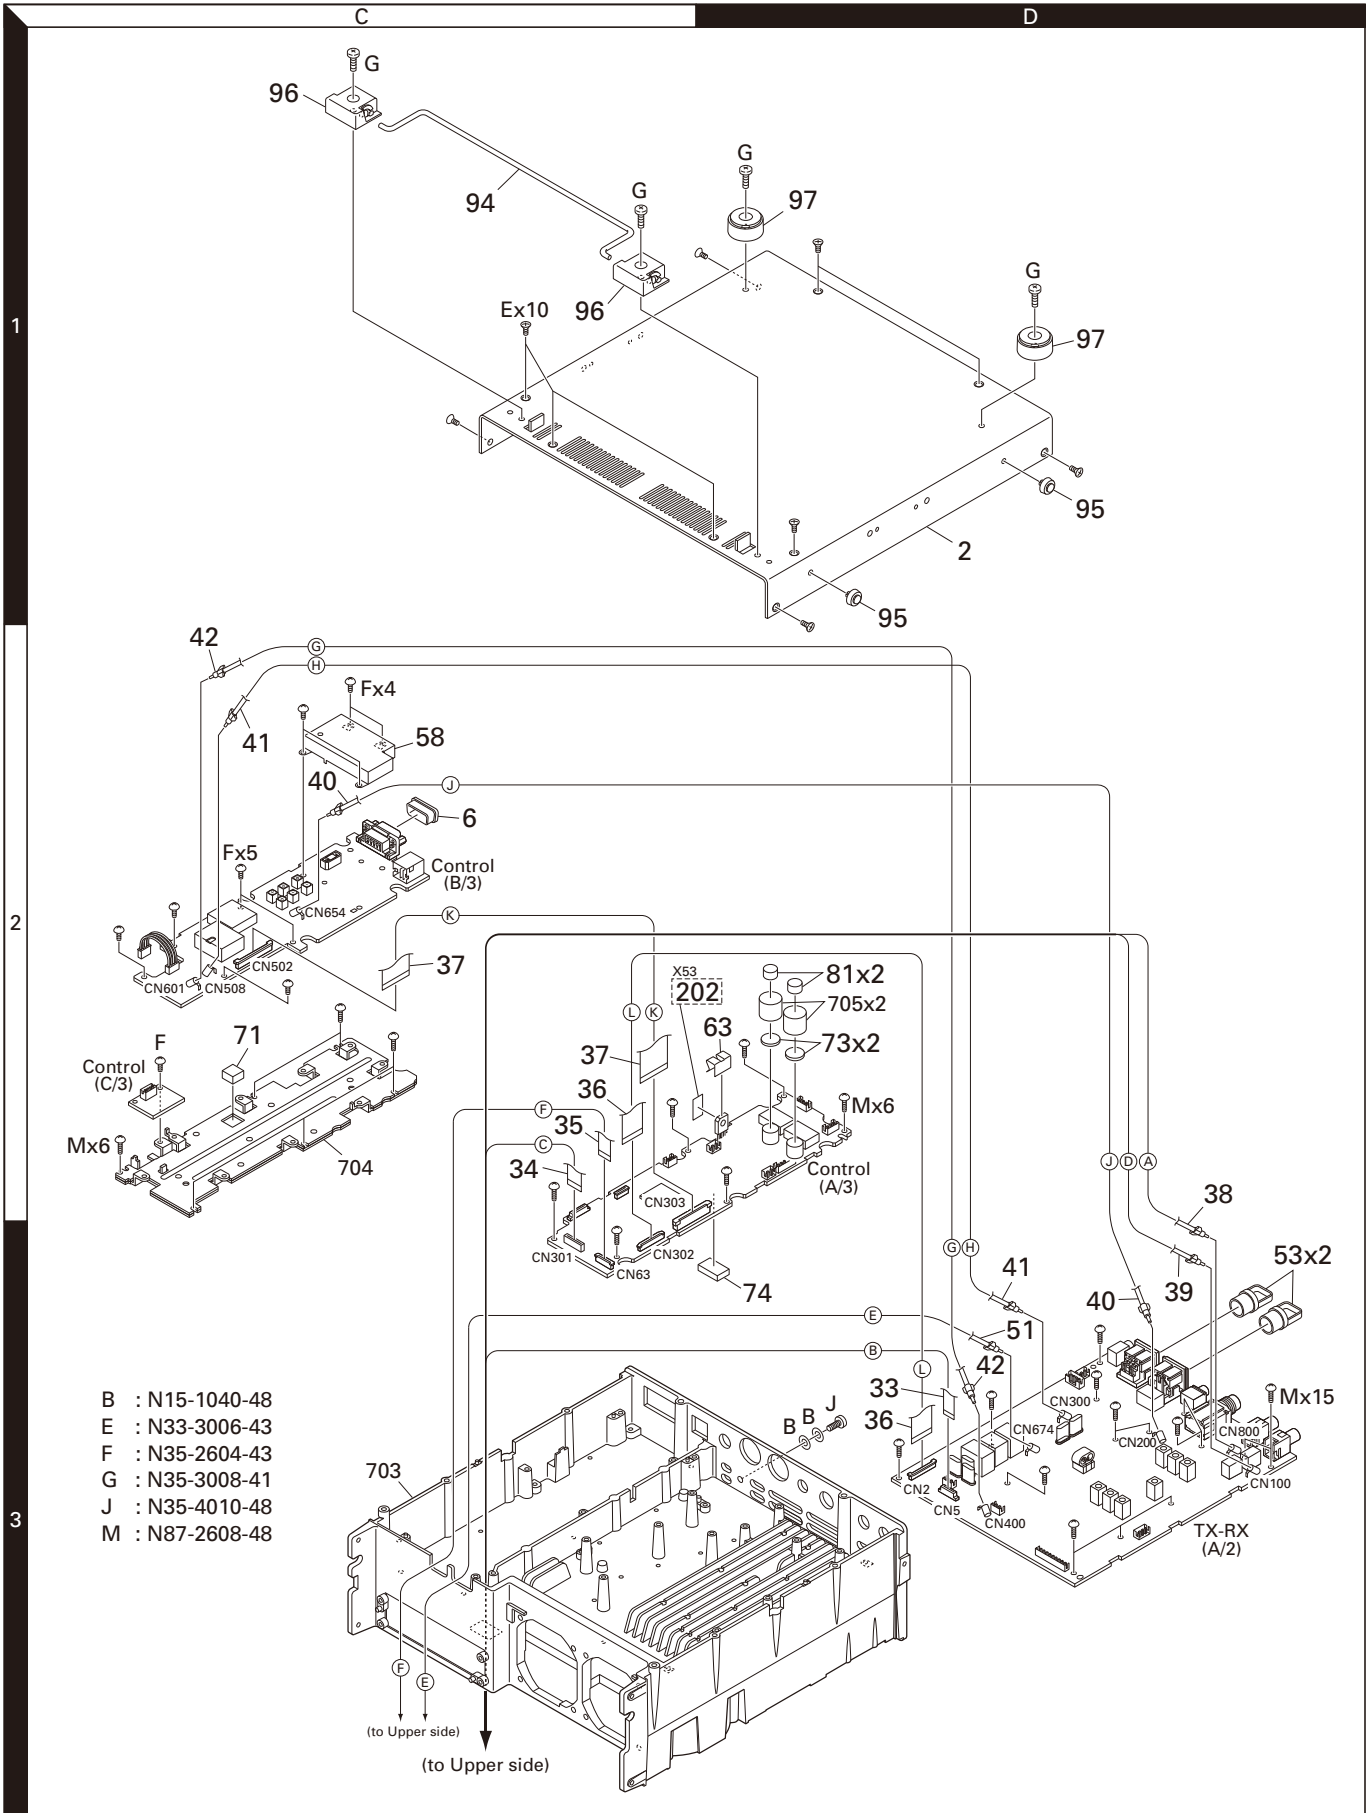


EXPLODED VIEW (PANEL)

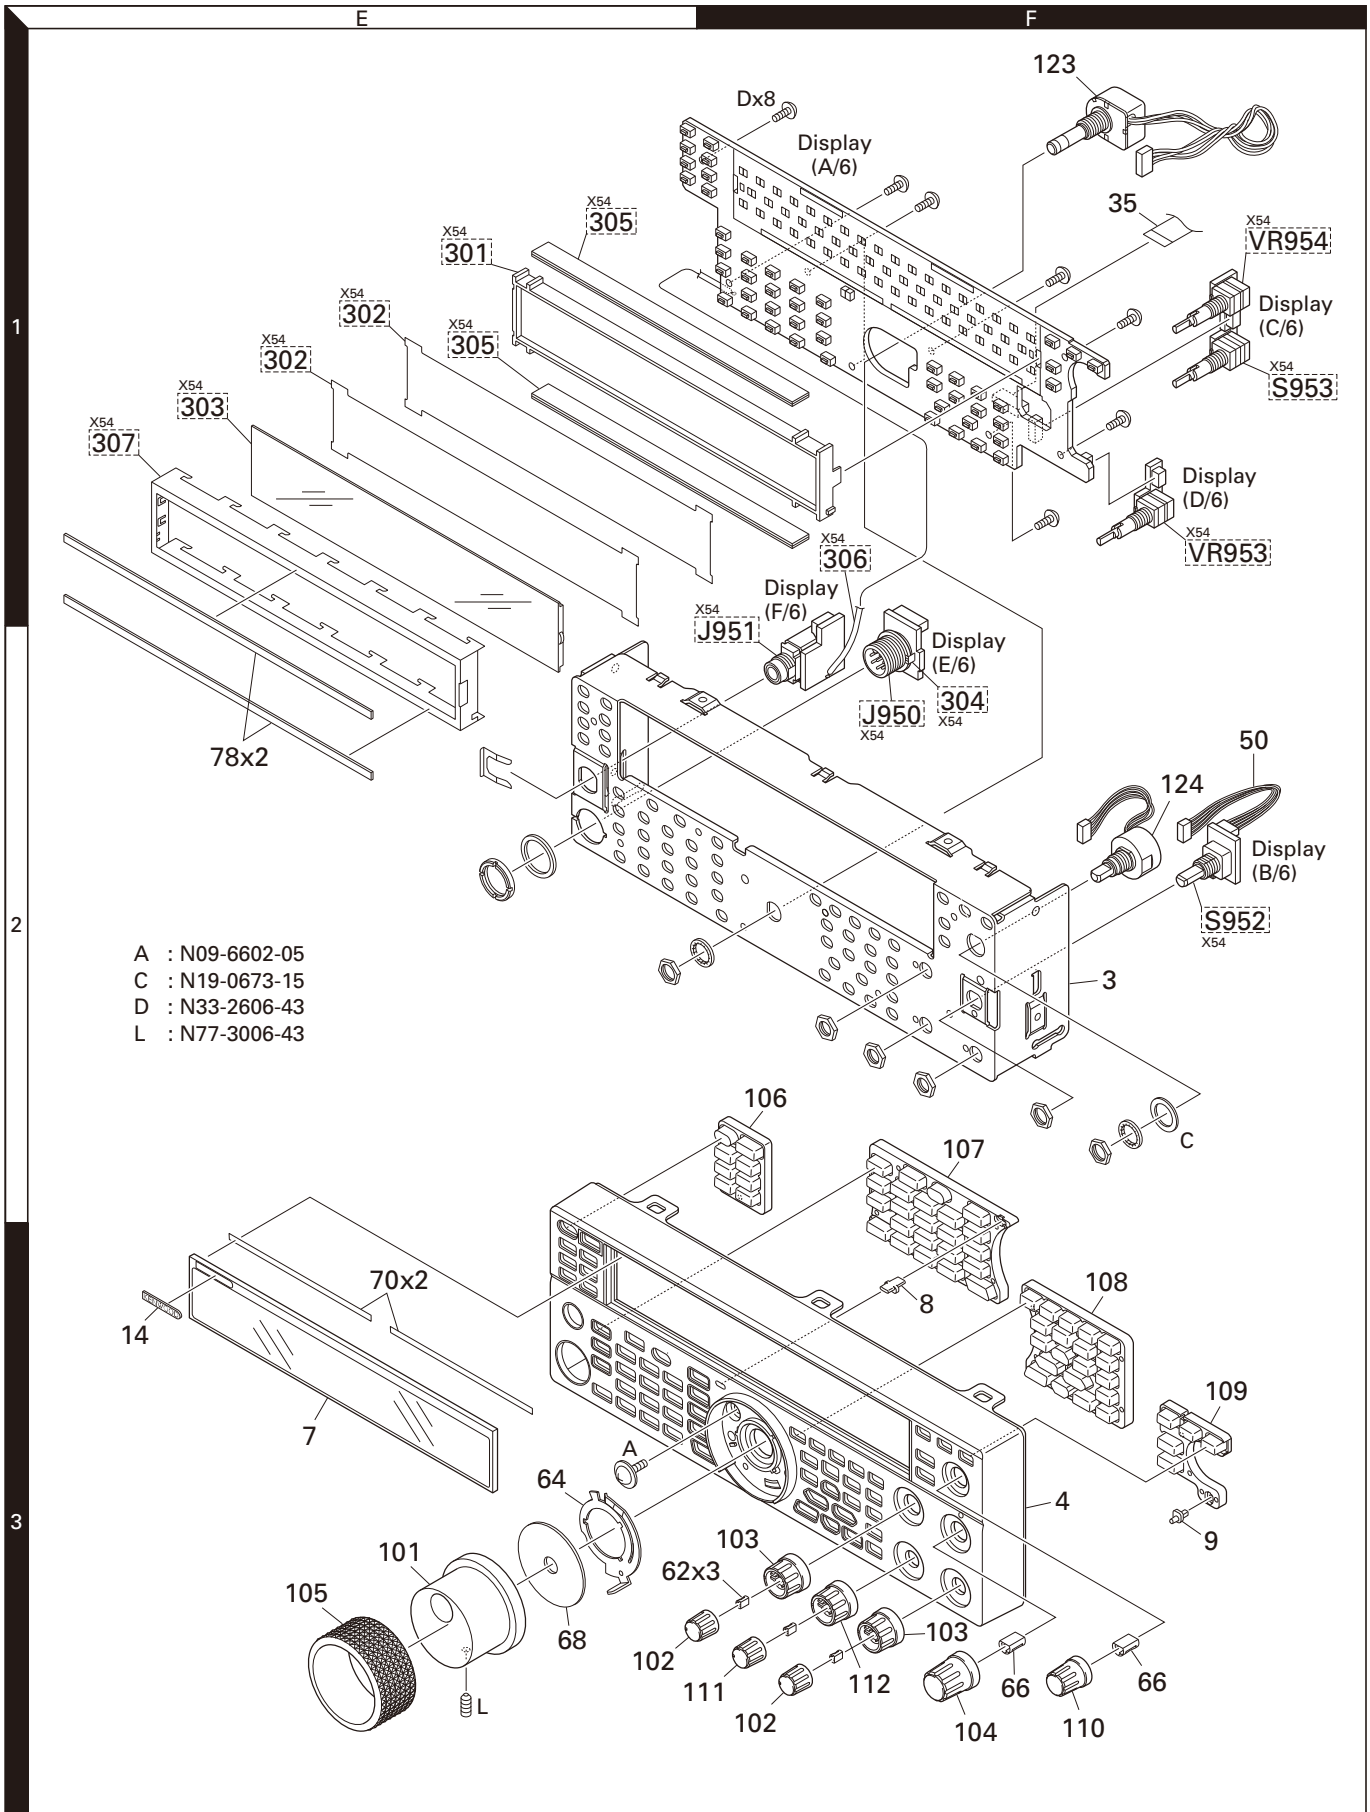

A : N09-6602-05
C : N19-0673-15
D : N33-2606-43
L : N77-3006-43

Parts with the exploded numbers larger than 700 are not supplied.

PACKING

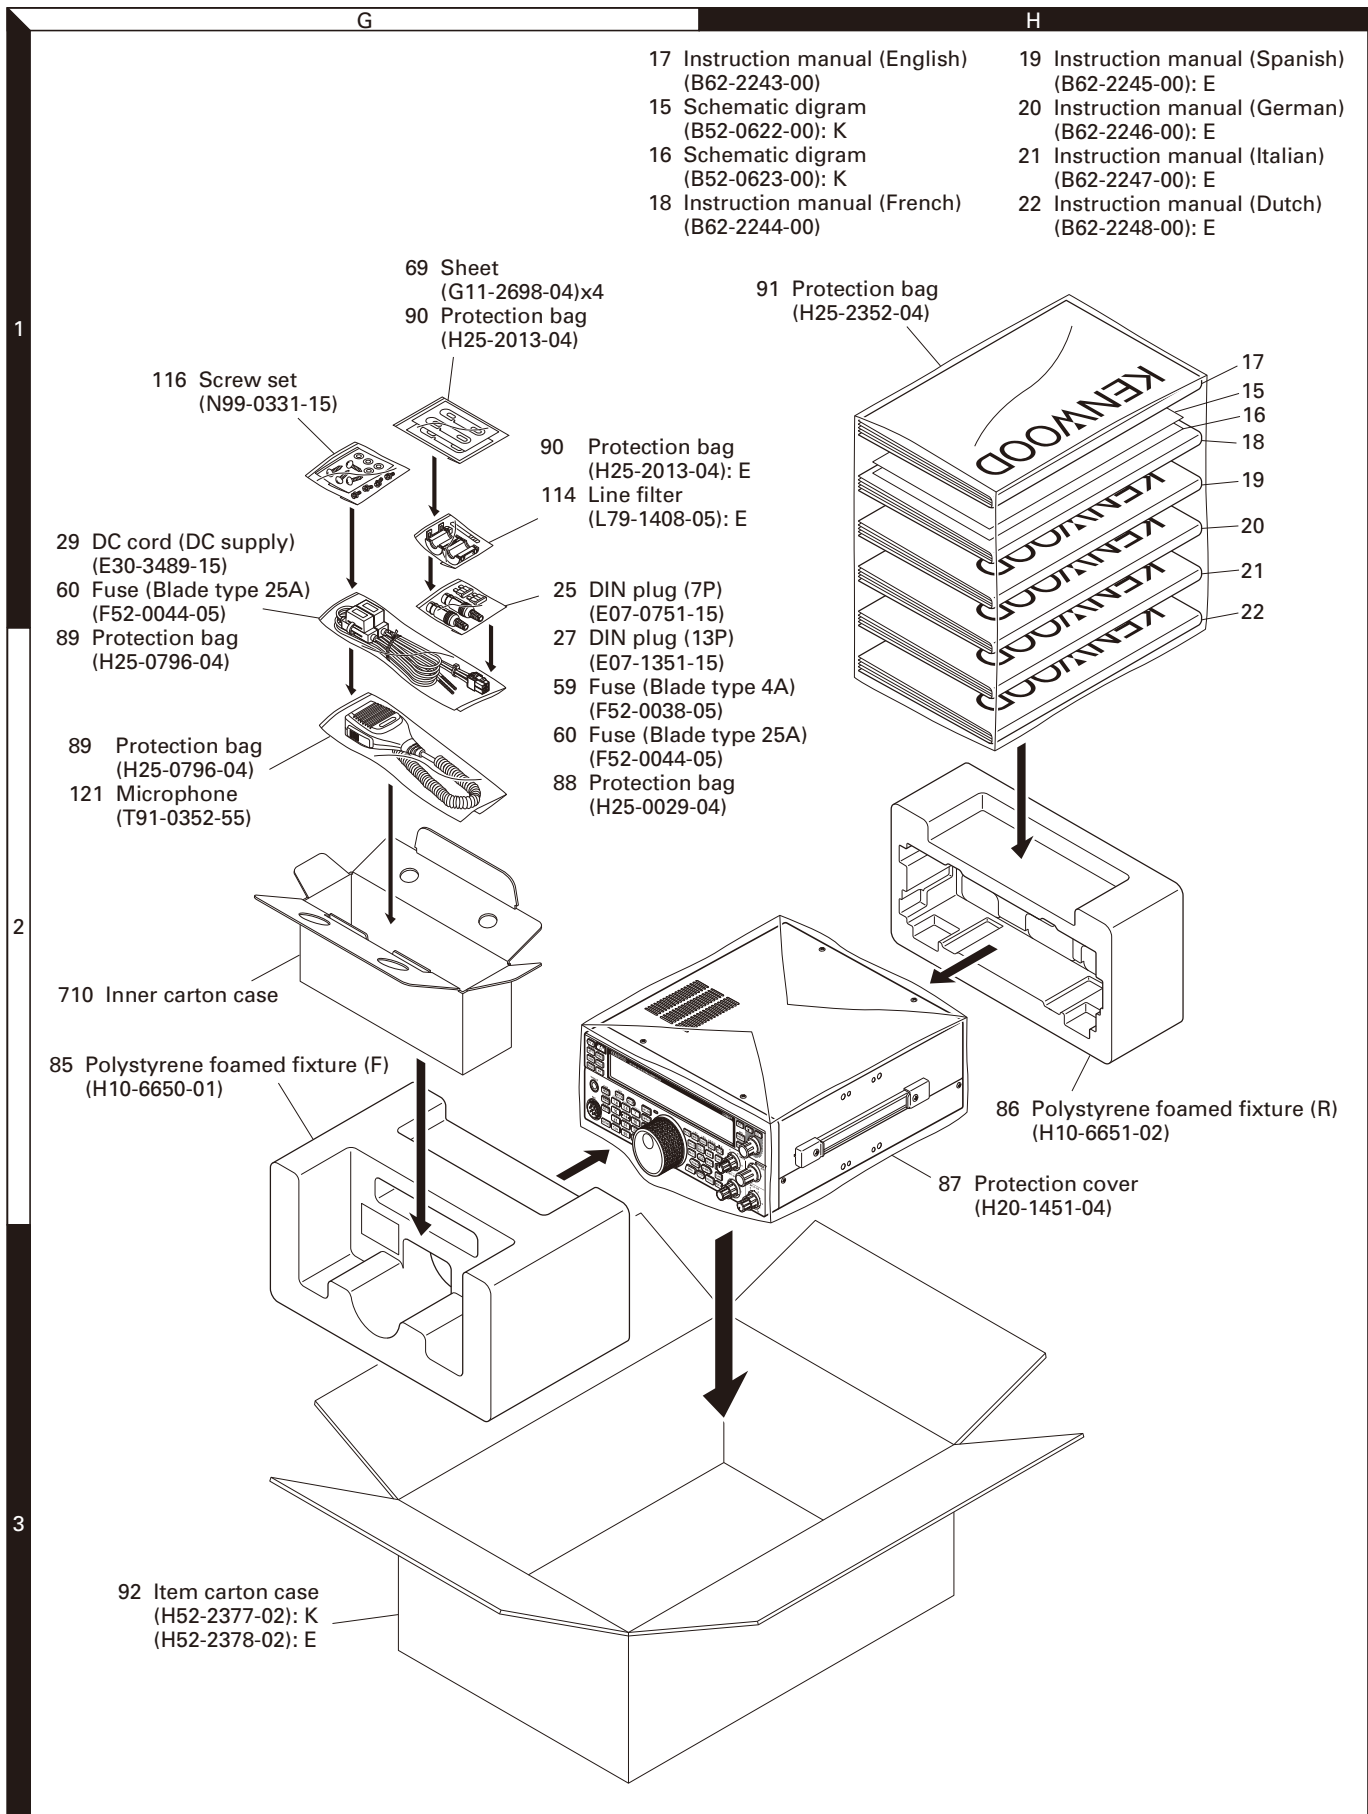

PARTS LIST

* New Parts. Δ indicates safety critical components.

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

L : Scandinavia

Y : PX (Far East, Hawaii)

C : China

K : USA

T : England

X : Australia

P : Canada

E : Europe

M : Other Areas

TS-590S

Ref. No.	Address	New parts	Parts No.	Description	Destination
TS-590S					
1	1B	*	A01-2222-01	METALLIC CABINET (UPPER)	
2	1D	*	A01-2223-01	METALLIC CABINET (LOWER)	
3	2F	*	A22-2525-01	SUB PANEL	
4	3F	*	A62-1176-02	PANEL	
6	2C		B09-0355-05	CAP (DSUB-COM)	
7	3E	*	B10-2799-02	FRONT GLASS	
8	3F	*	B11-1879-03	ILLUMINATION GUIDE (TX/RX)	
9	3F	*	B11-1880-03	ILLUMINATION GUIDE (MULTI)	
-			B42-5650-04	SERIAL NUMBER STICKER	
-			B42-7003-04	RATING LABEL (DC CORD)	E
-			B42-7019-04	STANDARD LABEL (FCC)	K
-			B42-7070-04	STANDARD LABEL (FCC)	K
14	3E	*	B43-1644-04	BADGE	
15	1H	*	B52-0622-00	SCHEMATIC DIAGRAM ACCESSORY	K
16	1H	*	B52-0623-00	SCHEMATIC DIAGRAM ACCESSORY	K
17	1H	*	B62-2243-00	INSTRUCTION MANUAL (ENGLISH)	
18	1H	*	B62-2244-00	INSTRUCTION MANUAL (FRENCH)	
19	1H	*	B62-2245-00	INSTRUCTION MANUAL (SPANISH)	E
20	1H	*	B62-2246-00	INSTRUCTION MANUAL (GERMAN)	E
21	1H	*	B62-2247-00	INSTRUCTION MANUAL (ITALIAN)	E
22	1H	*	B62-2248-00	INSTRUCTION MANUAL (DUTCH)	E
24	2B		E04-0167-15	RF COAXIAL RECEPTACLE (M)	
25	1G		E07-0751-15	DIN PLUG (7P) ACCESSORY	
27	1G		E07-1351-15	DIN PLUG (13P) ACCESSORY	
28	3B		E23-1164-04	EARTH LUG (ANT)	
29	2G		E30-3489-15	DC CORD (DC SUPPLY) ACCESSORY	
30	2B	*	E37-0891-25	LEAD WIRE WITH CONNECTOR (EXT.AT)	
31	2A		E37-0959-15	LEAD WIRE WITH CONNECTOR (SP)	
-		*	E37-1487-05	LEAD WIRE WITH CONNECTOR (X53A-X45A)	
33	2A,3D	*	E37-1488-05	FLAT CABLE (X57A-X45A)	
34	2A,2C	*	E37-1489-05	FLAT CABLE (X53A-X45A)	
35	3A,2C,1F	*	E37-1490-05	FLAT CABLE (X54A-X53A)	
36	2C,3D	*	E37-1491-05	FLAT CABLE (X57A-X53A)	
37	2C	*	E37-1492-05	FLAT CABLE (X53A-X53B)	
38	2A,3D	*	E37-1493-05	LEAD WIRE WITH MINIPIN PLUG (TXRF)	
39	1A,3D	*	E37-1494-05	LEAD WIRE WITH MINIPIN PLUG (RAT)	
40	2C,3D	*	E37-1495-05	LEAD WIRE WITH MINIPIN PLUG (LO1)	
41	2C,3D	*	E37-1496-05	LEAD WIRE WITH MINIPIN PLUG (LO2)	
42	2C,3D	*	E37-1497-05	LEAD WIRE WITH MINIPIN PLUG (LO3)	
-		*	E37-1499-05	LEAD WIRE WITH CONNECTOR (X57A-X53A)	
-		*	E37-1500-05	LEAD WIRE WITH CONNECTOR (RIF)	
-		*	E37-1501-05	LEAD WIRE WITH CONNECTOR (TIF)	
-		*	E37-1502-05	LEAD WIRE WITH CONNECTOR (AF)	
-		*	E37-1503-05	LEAD WIRE WITH CONNECTOR (PHONE)	
-		*	E37-1505-05	LEAD WIRE WITH CONNECTOR (X57A-X57B)	
-		*	E37-1506-05	LEAD WIRE WITH CONNECTOR (MIC)	
50	2F	*	E37-1507-05	LEAD WIRE WITH CONNECTOR (MULTI)	
51	3A,3D	*	E37-1530-05	LEAD WIRE WITH CONNECTOR (NBIF)	
53	3D		F09-0453-05	CAP (DIN-ACC2,REMOTE)	
54	3A		F09-0478-05	FANMOTOR	
55	1A		F10-2330-13	SHIELDING COVER (AT)	
56	1A		F10-3116-04	SHIELDING COVER (FINAL-RELAY)	
57	2B	*	F10-3134-02	SHIELDING PLATE (FINAL)	
58	2C	*	F10-3136-03	SHIELDING COVER (VGS-1)	
59	1G		F52-0038-05	FUSE (BLADE TYPE) (4A) ACCESSORY	
60	1G,2G		F52-0044-05	FUSE (BLADE TYPE) (25A) ACCESSORY	
62	3F		G02-0505-05	KNOB SPRING (INSIDE-KONB)	
63	2D		G02-0791-14	FLAT SPRING (X53A-AUDIO IC)	
64	3E	*	G02-1858-03	FLAT SPRING (TORQUE)	
65	1A	*	G02-1860-04	EARTH SPRING (HF-FINAL)	
66	3F		G09-0405-05	KNOB SPRING (ENC-KNOB)	
67	1A,1B		G10-1277-04	FIBROUS SHEET (CABINET)	
68	3E	*	G10-1812-04	FIBROUS SHEET (TORQUE)	
69	1G		G11-2698-04	SHEET ACCESSORY	
70	3E	*	G11-4509-04	SHEET (FRONT GLASS)	
71	2C	*	G11-4510-04	RUBBER SHEET (X53B:DDS)	
72	1A	*	G11-4520-04	SHEET (FINAL-RELAY)	
73	2D	*	G11-4535-04	SHEET (X53A:DCDC-COIL)	
74	3D	*	G11-4536-04	RUBBER SHEET (X53A PCB)	
76	2A		G13-1793-04	CUSHION (UNDER SP)	
77	2B		G13-1855-04	CUSHION (SP)	
78	2E	*	G13-2300-04	CUSHION (LCD)	
79	1A	*	G13-2301-04	CUSHION (TOP RELAY)	
80	1A	*	G13-2304-04	CUSHION (RELAY)	
81	2D	*	G13-2312-04	CUSHION (X53A:DCDC-COIL)	
82	2B	*	G13-2341-04	CUSHION (TOP FFC)	
83	1B,2B	*	G13-2343-04	CUSHION (TOP SHIELD)	
85	2G	*	H10-6650-01	POLYSTYRENE FOAMED FIXTURE (F)	
86	2H	*	H10-6651-02	POLYSTYRENE FOAMED FIXTURE (R)	
87	2H	*	H20-1451-04	PROTECTION COVER	
88	1G		H25-0029-04	PROTECTION BAG (60/110/0.07)	
89	2G		H25-0796-04	PROTECTION BAG	
90	1G		H25-2013-04	PROTECTION BAG (80*180 T=0.08)	
91	1H		H25-2352-04	PROTECTION BAG (250/350/0.07)	
92	3G	*	H52-2377-02	ITEM CARTON CASE	K
92	3G	*	H52-2378-02	ITEM CARTON CASE	E
94	1C		J02-0440-04	FOOT (FRONT)	
95	1A,1B,1D		J02-0441-15	FOOT (SIDE)	
96	1C		J02-0442-04	FOOT (FRONT)	
97	1D		J02-0475-05	FOOT (BACK)	
-			J61-0307-05	BAND	
100	1B		K01-0427-05	HANDLE	
101	3E	*	K21-1107-13	KNOB (MAIN KNOB)	
102	3F		K29-9390-03	KNOB (INSIDE/NOTCH,AF)	
103	3F	*	K29-9391-13	KNOB (OUTSIDE/SQ,RF)	
104	3F	*	K29-9456-23	KNOB (MULTI)	
105	3E	*	K29-9465-03	KNOB RING (MAIN KNOB)	
106	2F	*	K29-9466-02	KEY TOP (8KEY)	
107	2F	*	K29-9467-02	KEY TOP (25KEY)	
108	3F	*	K29-9468-02	KEY TOP (20KEY)	
109	3F	*	K29-9469-02	KEY TOP (5KEY)	
110	3F	*	K29-9471-03	KNOB (RIT)	
111	3F	*	K29-9477-03	KNOB (INSIDE/HI)	
112	3F	*	K29-9478-03	KNOB (OUTSIDE/LO)	
114	1G		L79-1408-05	LINE FILTER ACCESSORY	E
A	3E	*	N09-6602-05	SPECIAL SCREW (PANEL)	

PARTS LIST

TS-590S FINAL UNIT (X45-391X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
B	3D		N15-1040-48	FLAT WASHER (GND)		C46		*	C93-1807-05	CHIP C	0.01UF J
C	2F		N19-0673-15	SPECIAL WASHER (RIT-ENC)		C47			CK73FB1E104K	CHIP C	0.10UF K
D	1F		N33-2606-43	OVAL HEAD MACHINE SCREW (X54A)		C48,49		*	C93-1807-05	CHIP C	0.01UF J
E	3A,1B,1C,1D		N33-3006-43	OVAL HEAD MACHINE SCREW (CABINET)		C50			CK73GB1H102K	CHIP C	1000PF K
F	2C		N35-2604-43	BINDING HEAD MACHINE SCREW (X53B)		C51			CK73GB1H103K	CHIP C	0.010UF K
G	1C,1D		N35-3008-41	BINDING HEAD MACHINE SCREW (FOOT)		C52			CD04BC1E221M	ELECTRO	220UF 25WV
H	3A		N35-3020-48	BINDING HEAD MACHINE SCREW (FAN)		C53			CK73FB1C105K	CHIP C	1.0UF K
J	3D		N35-4010-48	BINDING HEAD MACHINE SCREW (GND)		C54,55			CK73EB1H104K	CHIP C	0.10UF K
K	1A,2A		N67-2608-48	PAN HEAD SEMS SCREW (FINAL-TR)		C56			CK73GB1H102K	CHIP C	1000PF K
L	3E	*	N77-3006-43	HEXAGON SOCKET HEAD SET SCREW		C57			CK73GB1H103K	CHIP C	0.010UF K
M	2A,2B,2C,3D		N87-2608-48	BRAZIER HEAD TAPTITE SCREW (PCB)		C58			CK73FB1C105K	CHIP C	1.0UF K
116	1G		N99-0331-15	SCREW SET ACCESSORY		C59,60			CM73F2H331J	CHIP C	330PF J
120	2A	*	T07-0765-25	SPEAKER		C62,63			CM73F2H471J	CHIP C	470PF J
121	2G		T91-0352-55	MICROPHONE ACCESSORY		C64,65			CK73FB1E104K	CHIP C	0.10UF K
123	1F		W02-1836-15	ENCODER (MAIN)		C66			CK73EF1V225Z	CHIP C	2.2UF Z
124	2F		W02-3727-05	ENCODER (RIT)		C67			CK73FB1E104K	CHIP C	0.10UF K
D101-115		*	W05-1638-00	X54A SERVICE LED (GREEN) Z		C68	*		C93-1807-05	CHIP C	0.01UF J
D101-115		*	W05-1639-00	X54A SERVICE LED (GREEN)		C69,70			CK73FB1H102K	CHIP C	1000PF K
D123-160		*	W05-1638-00	X54A SERVICE LED (GREEN) Z		C71			C93-0553-05	CHIP C	3.0PF C
D123-160		*	W05-1639-00	X54A SERVICE LED (GREEN)		C72			CK73FB1H103K	CHIP C	0.010UF K
D161-213		*	W05-1639-00	X54A SERVICE LED (GREEN)		C73			CK73FB1H102K	CHIP C	1000PF K
D161-213		*	W05-1636-00	X54A SERVICE LED (AMBER) A		C74			CK73FB1E104K	CHIP C	0.10UF K
D216		*	W05-1637-00	X54A SERVICE LED (AMBER)		C75-77			CK73FB1H102K	CHIP C	1000PF K
D216		*	W05-1638-00	X54A SERVICE LED (GREEN) Z		C101	*		C93-1819-05	CHIP C	470PF J
D216		*	W05-1639-00	X54A SERVICE LED (GREEN)		C102-110			CK73FB1H103K	CHIP C	0.010UF K
D217		*	W05-1636-00	X54A SERVICE LED (AMBER) A		C111			CK73GB1H103K	CHIP C	0.010UF K
D217		*	W05-1637-00	X54A SERVICE LED (AMBER)		C112-122			CK73FB1H103K	CHIP C	0.010UF K
FINAL UNIT (X45-391X-XX) 0-11: K 2-71: E						C124			CK73FB1E104K	CHIP C	0.10UF K
C1		*	CD04BQ1H220M	ELECTRO 22UF 50WV		C126-131			CK73FB1H103K	CHIP C	0.010UF K
C2			CD04AY1E470M	ELECTRO 47UF 25WV		C132			CK73GB1H103K	CHIP C	0.010UF K
C3		*	CD04BQ1H220M	ELECTRO 22UF 50WV		C133-135			CK73FB1H103K	CHIP C	0.010UF K
C4			CD04AZ1E471M	ELECTRO 470UF 25WV		C151			C93-0555-05	CHIP C	5.0PF C
C5			CD04AY1E470M	ELECTRO 47UF 25WV		C156			C93-0568-05	CHIP C	47PF J
C6			CD04AZ1E471M	ELECTRO 470UF 25WV		C157			C93-0558-05	CHIP C	8.0PF D
C7			CD04AY1E470M	ELECTRO 47UF 25WV		C158,159	*		C93-1811-05	CHIP C	100PF J
C15			CC73GCH1H101J	CHIP C 100PF J		C160		*	C93-1816-05	CHIP C	270PF J
C21			CC73GCH1H470J	CHIP C 47PF J		C161			C93-0565-05	CHIP C	27PF J
C22			CK73GB1H104K	CHIP C 0.10UF K		C162	*		C93-1816-05	CHIP C	270PF J
C23			CK73GB1H103K	CHIP C 0.010UF K		C163			C93-0558-05	CHIP C	8.0PF D
C24			CK73FB1E475K	CHIP C 4.7UF K		C164			C93-0567-05	CHIP C	39PF J
C25			CK73GB1H104K	CHIP C 0.10UF K		C165			C93-0569-05	CHIP C	56PF J
C27			CK73GB1H104K	CHIP C 0.10UF K		C166			C93-0562-05	CHIP C	15PF J
C29			CK73GB1H103K	CHIP C 0.010UF K		C167	*		C93-1820-05	CHIP C	560PF J
C30,31			CK73GB1H104K	CHIP C 0.10UF K		C168	*		C93-1816-05	CHIP C	270PF J
C32			CK73GB1E105K	CHIP C 1.0UF K		C169			C93-0568-05	CHIP C	47PF J
C33			CK73FB1E475K	CHIP C 4.7UF K		C170	*		C93-1816-05	CHIP C	270PF J
C34			CC73GCH1H101J	CHIP C 100PF J		C171			C93-0569-05	CHIP C	56PF J
C35			CK73GB1H103K	CHIP C 0.010UF K		C172	*		C93-1811-05	CHIP C	100PF J
C36			CC73GCH1H221J	CHIP C 220PF J		C173			CK73GB1H103K	CHIP C	0.010UF K
C37			CK73FB1E104K	CHIP C 0.10UF K		C174	*		C93-1811-05	CHIP C	100PF J
C38			CK73GB1E105K	CHIP C 1.0UF K		C175			C93-0565-05	CHIP C	27PF J
C39			CK73EB1H104K	CHIP C 0.10UF K		C176			C93-0567-05	CHIP C	39PF J
C40			CK73GB1H102K	CHIP C 1000PF K		C177			C93-0559-05	CHIP C	9.0PF D
C41			CK73FB1E104K	CHIP C 0.10UF K		C178			C93-0570-05	CHIP C	68PF J
C42		*	C93-1816-05	CHIP C 270PF J		C179	*		C93-1811-05	CHIP C	100PF J
C43			CK73FB1H103K	CHIP C 0.010UF K		C180-182	*		C93-1813-05	CHIP C	150PF J
C44		*	C93-1815-05	CHIP C 220PF J		C183	*		C93-1820-05	CHIP C	560PF J
						C184			C93-0570-05	CHIP C	68PF J
						C185			C93-0566-05	CHIP C	33PF J
						C186,187			C93-0562-05	CHIP C	15PF J

PARTS LIST

FINAL UNIT (X45-391X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C188			C93-0571-05	CHIP C 82PF J		C269			CK73FB1H103K	CHIP C 0.010UF K	
C189			C93-0565-05	CHIP C 27PF J		C270			CK73GB1H103K	CHIP C 0.010UF K	
C190			C93-0563-05	CHIP C 18PF J		C271			C93-0554-05	CHIP C 4.0PF C	
C191			C93-0560-05	CHIP C 10PF D		C272			CC73FCH1H680J	CHIP C 68PF J	
C192			C93-0570-05	CHIP C 68PF J		C273			CK73GB1H103K	CHIP C 0.010UF K	
C193		*	C93-1823-05	CHIP C 1000PF J		C275			CK73FB1H102K	CHIP C 1000PF K	
C194		*	C93-1820-05	CHIP C 560PF J		C277-280			CK73GB1H103K	CHIP C 0.010UF K	
C195		*	C93-1823-05	CHIP C 1000PF J		C281,282			CK73FB1H103K	CHIP C 0.010UF K	
C196		*	C93-1817-05	CHIP C 330PF J		C283			CK73GB1H103K	CHIP C 0.010UF K	
C197		*	C93-1815-05	CHIP C 220PF J		C301			CK73FB1H102K	CHIP C 1000PF K	
C198			CK73GB1H103K	CHIP C 0.010UF K		C302			CK73FB1E104K	CHIP C 0.10UF K	
C199			CK73GB1H104K	CHIP C 0.10UF K		C303,304			CK73FB1H103K	CHIP C 0.010UF K	
C200			C93-0558-05	CHIP C 8.0PF D		C305-316			C91-3115-05	HV C 10PF 2KV	
C201		*	C93-1811-05	CHIP C 100PF J		C317-322			CK73FB1H103K	CHIP C 0.010UF K	
C202		*	C93-1823-05	CHIP C 1000PF J		C323-326			C91-3115-05	HV C 10PF 2KV	
C203			C93-0568-05	CHIP C 47PF J		C327-332			CK73FB1H103K	CHIP C 0.010UF K	
C204		*	C93-1816-05	CHIP C 270PF J		C333,334			C91-3126-05	HV C 10PF 3KV	
C205		*	C93-1815-05	CHIP C 220PF J		C335-340			CK73FB1H103K	CHIP C 0.010UF K	
C206		*	C93-1820-05	CHIP C 560PF J		C341,342			C91-3127-05	HV C 18PF 3KV	
C207		*	C93-1813-05	CHIP C 150PF J		C343-348			CK73FB1H103K	CHIP C 0.010UF K	
C208			CK73GB1H103K	CHIP C 0.010UF K		C349-352			C91-3127-05	HV C 18PF 3KV	
C209		*	C93-1811-05	CHIP C 100PF J		C353-358			CK73FB1H103K	CHIP C 0.010UF K	
C210			C93-0564-05	CHIP C 22PF J		C359-362			C91-3123-05	HV C 150PF 3KV	
C211			C93-0570-05	CHIP C 68PF J		C363-368			CK73FB1H103K	CHIP C 0.010UF K	
C212			C93-0565-05	CHIP C 27PF J		C369,370			C91-3123-05	HV C 150PF 3KV	
C213		*	C93-1812-05	CHIP C 120PF J		C371-376			CK73FB1H103K	CHIP C 0.010UF K	
C214,215			C93-0569-05	CHIP C 56PF J		C377-380			C91-3123-05	HV C 150PF 3KV	
C217			C93-0565-05	CHIP C 27PF J		C381-386			CK73FB1H103K	CHIP C 0.010UF K	
C218			C93-0570-05	CHIP C 68PF J		C501			CK73FB1H103K	CHIP C 0.010UF K	
C219			C93-0571-05	CHIP C 82PF J		C502,503			CK73FB1H102K	CHIP C 1000PF K	
C220,221		*	C93-1811-05	CHIP C 100PF J		C504-506			CC73FCH1H101J	CHIP C 100PF J	
C222			C93-0554-05	CHIP C 4.0PF C		C507			CK73FB1H102K	CHIP C 1000PF K	
C223			C93-0565-05	CHIP C 27PF J		C508			CK73FB1H103K	CHIP C 0.010UF K	
C224			C93-0568-05	CHIP C 47PF J		C510			CK73FB1H103K	CHIP C 0.010UF K	
C225			C93-0565-05	CHIP C 27PF J		C511-514			CK73FB1H102K	CHIP C 1000PF K	
C226			C93-0564-05	CHIP C 22PF J		C515			CC73FCH1H221J	CHIP C 220PF J	
C228		*	C93-1819-05	CHIP C 470PF J		C516			CK73FB1H102K	CHIP C 1000PF K	
C229		*	C93-1812-05	CHIP C 120PF J		C517			CC73FCH1H221J	CHIP C 220PF J	
C230,231		*	C93-1816-05	CHIP C 270PF J		C518,519			CK73GB1H102K	CHIP C 1000PF K	
C232			C93-0565-05	CHIP C 27PF J		C520			CK73FB1H103K	CHIP C 0.010UF K	
C233		*	C93-1823-05	CHIP C 1000PF J		C521			CC73FCH1H221J	CHIP C 220PF J	
C234		*	C93-1816-05	CHIP C 270PF J		C523,524			CC73FCH1H221J	CHIP C 220PF J	
C236		*	C93-1816-05	CHIP C 270PF J		C525-527			CK73FB1H102K	CHIP C 1000PF K	
C237			C93-0568-05	CHIP C 47PF J		C528			CK73GB1H102K	CHIP C 1000PF K	
C238			C93-0564-05	CHIP C 22PF J		C529			CK73FB1H102K	CHIP C 1000PF K	
C239			C93-0568-05	CHIP C 47PF J		C530			CK73GB1H102K	CHIP C 1000PF K	
C240		*	C93-1813-05	CHIP C 150PF J		C531			CK73FB1E104K	CHIP C 0.10UF K	
C241			C93-0565-05	CHIP C 27PF J		C532,533			CK73FB1H102K	CHIP C 1000PF K	
C242			C93-0571-05	CHIP C 82PF J		C534			CK73GB1H103K	CHIP C 0.010UF K	
C243			C93-0563-05	CHIP C 18PF J		C535-537			CC73FCH1H101J	CHIP C 100PF J	
C252			CK73FB1H102K	CHIP C 1000PF K		C538,539			CK73FB1H103K	CHIP C 0.010UF K	
C253,254			CK73GB1H103K	CHIP C 0.010UF K		C540-542			CC73FCH1H101J	CHIP C 100PF J	
C255			C93-0554-05	CHIP C 4.0PF C		C543,544			CK73FB1H103K	CHIP C 0.010UF K	
C256			CC73FCH1H470J	CHIP C 47PF J		C545,546			CC73GCH1H221J	CHIP C 220PF J	
C258,259			CK73GB1H103K	CHIP C 0.010UF K		C547			C93-0564-05	CHIP C 22PF J	
C260			CC73GCH1H470J	CHIP C 47PF J		TC1			C05-0370-05	CERAMIC TRIMMER CAPACITOR (20P)	
C263,264			CK73GB1H103K	CHIP C 0.010UF K		CN2			E04-0154-05	PIN SOCKET	
C265			CC73GCH1H080D	CHIP C 8.0PF D		CN3			E40-6528-05	PIN ASSY	
C266			CC73GCH1H470J	CHIP C 47PF J		CN4			E40-6526-05	PIN ASSY	
C267			CK73GB1H102K	CHIP C 1000PF K							

PARTS LIST

FINAL UNIT (X45-391X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
CN5 CN6,7 CN8 CN9 CN10,11		*	E40-6873-05 E41-1682-05 E40-6525-05 E40-6881-05 E04-0154-05	FLAT CABLE CONNECTOR PIN ASSY PIN ASSY FLAT CABLE CONNECTOR PIN SOCKET		L50 L51,52 L53 L101-109 L251		*	L34-4628-05 L34-4490-05 L39-1568-05 L41-4705-33 L33-0695-05	AIR-CORE COIL AIR-CORE COIL TOROIDAL COIL SMALL FIXED INDUCTOR (47UH) SMALL FIXED INDUCTOR (1000UH)	
CN51 CN52 CN259,260 CN529 W1	2B	*	E04-0190-05 E41-1682-05 E23-1310-05 E23-1310-05 E37-1480-05	PIN SOCKET PIN ASSY TEST TERMINAL TEST TERMINAL LEAD WIRE WITH TERMINAL		L252 L254 L255 L257 L259,260		*	L41-1585-32 L41-4705-33 L33-0695-05 L41-4705-33 L41-4705-33	SMALL FIXED INDUCTOR (0.15UH) SMALL FIXED INDUCTOR (47UH) SMALL FIXED INDUCTOR (1000UH) SMALL FIXED INDUCTOR (47UH) SMALL FIXED INDUCTOR (47UH)	
W2 W3 W6	2A 1A	*	E37-1508-15 E37-1479-15 E37-1486-05	LEAD WIRE WITH MINIPIN PLUG LEAD WIRE WITH MINIPIN PLUG LEAD WIRE WITH CONNECTOR		L304 L306-308 L310-312 L314-316 L318-320			L41-4705-33 L41-4705-33 L41-4705-33 L41-4705-33 L41-4705-33	SMALL FIXED INDUCTOR (47UH) SMALL FIXED INDUCTOR (47UH) SMALL FIXED INDUCTOR (47UH) SMALL FIXED INDUCTOR (47UH) SMALL FIXED INDUCTOR (47UH)	
F1 F2 F3 F4	2A	*	F53-0391-05 F53-0401-05 F53-0306-05 F52-0038-05	FUSE (UL,CSA) (10A) FUSE (5A) FUSE (UL,CSA) (5A) FUSE (BLADE TYPE) (4A/32V)		L322-324 L326-328 L330-332 L334-336 L501,502			L41-4705-33 L41-4705-33 L41-4705-33 L41-4705-33 L41-1005-33	SMALL FIXED INDUCTOR (47UH) SMALL FIXED INDUCTOR (47UH) SMALL FIXED INDUCTOR (47UH) SMALL FIXED INDUCTOR (47UH) SMALL FIXED INDUCTOR (10UH)	
CN21,22			J13-0410-05	FUSE HOLDER		L503,504 L505-507 L508 L509			L92-0641-05 L41-4705-33 L41-4785-33 L34-4811-05	FERRITE CORE SMALL FIXED INDUCTOR (47UH) SMALL FIXED INDUCTOR (0.47UH) AIR-CORE COIL	
L2,3 L4 L5 L6,7 L8		*	L92-0447-05 L33-1552-05 L41-2775-33 L92-0641-05 L39-1434-25	BEADS CORE SMALL FIXED INDUCTOR (22UH) SMALL FIXED INDUCTOR (0.027UH) FERRITE CORE TOROIDAL COIL		R1 R2 R3 R4 R5			RK73EB2E101J RK73GB2A680J RK73GB2A121J RK73GB2A470J RK73GB2A471J	CHIP R 100 J 1/4W CHIP R 68 J 1/10W CHIP R 120 J 1/10W CHIP R 47 J 1/10W CHIP R 470 J 1/10W	
L9 L10 L11 L15 L16		*	L39-1451-05 L39-1569-05 L34-4928-05 L39-1550-05 L39-0421-04	TOROIDAL COIL TOROIDAL COIL COIL TOROIDAL COIL COIL		R6 R7 R8 R9 R10			RK73GB2A472J RK73GB2A100J R92-3625-05 RK73FB2B221J RK73FB2B000J	CHIP R 4.7K J 1/10W CHIP R 10 J 1/10W RESISTOR 0.1 J 0.33W CHIP R 220 J 1/8W CHIP R 0.0 J 1/8W	
L17 L18 L19 L20 L21		*	L34-4925-05 L39-1456-15 L34-1282-05 L34-4926-05 L39-1259-15	AIR-CORE COIL TOROIDAL COIL AIR-CORE COIL AIR-CORE COIL TOROIDAL COIL		R11 R12 R13 R14 R15,16			RK73FB2B121J RK73EB2E330J RK73GB2A472J RK73EB2E5R6J R92-3625-05	CHIP R 120 J 1/8W CHIP R 33 J 1/4W CHIP R 4.7K J 1/10W CHIP R 5.6 J 1/4W RESISTOR 0.1 J 0.33W	
L22 L23 L24,25 L26 L27		*	L39-1547-05 L34-1282-05 L39-1457-15 L39-1221-15 L39-1519-15	TOROIDAL COIL AIR-CORE COIL TOROIDAL COIL TOROIDAL COIL TOROIDAL COIL		R17 R18,19 R20,21 R22,23 R24			RS14DB3A151J RK73FB2B102J RS14DB3A470J RK73FB2B152J RK73FB2B471J	FL-PROOF RS 150 J 1W CHIP R 1.0K J 1/8W FL-PROOF RS 47 J 1W CHIP R 1.5K J 1/8W CHIP R 470 J 1/8W	
L28 L29 L30 L31 L32		*	L39-1570-05 L39-1549-05 L39-1260-15 L39-1546-05 L39-1405-15	TOROIDAL COIL TOROIDAL COIL TOROIDAL COIL TOROIDAL COIL TOROIDAL COIL		R25,26 R27-32 R33,34 R35 R36			RK73FB2B472J RK73EB2E1R0J RS14DB3D180J RK73FB2B471J RS14DB3A4R7J	CHIP R 4.7K J 1/8W CHIP R 1.0 J 1/4W FL-PROOF RS 18 J 2W CHIP R 470 J 1/8W FL-PROOF RS 4.7 J 1W	
L33 L34 L35 L36 L37		*	L39-1457-15 L39-1221-15 L34-4925-05 L34-1281-05 L39-1456-15	TOROIDAL COIL TOROIDAL COIL AIR-CORE COIL AIR-CORE COIL TOROIDAL COIL		R37 R50,51 R55 R56 R101		*	R92-3632-05 R92-0150-05 RS14DB3D8R2J RS14DB3D470J RK73GB2A222J	RESISTOR 0.001 J 1W JUMPER REST 0 OHM FL-PROOF RS 8.2 J 2W FL-PROOF RS 47 J 2W CHIP R 2.2K J 1/10W	
L38 L39 L40 L41 L42		*	L34-4927-05 L34-1231-15 L39-0480-15 L39-1442-05 L39-1443-05	AIR-CORE COIL AIR-CORE COIL TOROIDAL COIL TOROIDAL COIL TOROIDAL COIL		R102 R104,105 R251 R252,253 R254,255		*	RK73GH2A152D RK73GB2A103J RK73FB2B103J RK73GB2A102J RK73FB2B101J	CHIP R 1.5K D 1/10W CHIP R 10K J 1/10W CHIP R 10K J 1/8W CHIP R 1.0K J 1/10W CHIP R 100 J 1/8W	

PARTS LIST

FINAL UNIT (X45-391X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation	Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
R256			RK73FB2B100J	CHIP R 10 J 1/8W		K44,45			S76-0424-05	RELAY	
R257,258			RK73GB2A104J	CHIP R 100K J 1/10W		K46			S76-0402-05	RELAY	
R259,260			RK73GB2A103J	CHIP R 10K J 1/10W		D1,2			DAN202U	DIODE	
R261,262			RK73GB2A471J	CHIP R 470 J 1/10W		D51,52			DSA301LA	DIODE	
R263,264			RK73GB2A102J	CHIP R 1.0K J 1/10W		D101			Z5W27V	SURGE ABSORBER	
						D102			DAN202U	DIODE	
R265,266			RK73RB2H330J	CHIP R 33 J 1/2W		D103-108	*		MC2858-T111	DIODE	
R267,268			RK73GB2A105J	CHIP R 1.0M J 1/10W							
R269			RK73FB2B000J	CHIP R 0.0 J 1/8W		D109			DAN202U	DIODE	
R270			RK73FB2B103J	CHIP R 10K J 1/8W		D110	*		MC2858-T111	DIODE	
R271			RK73FB2B000J	CHIP R 0.0 J 1/8W		D111	*		DZ2S160M	ZENER DIODE	
						D251,252			HSM88ASR-E	DIODE	
R272			RK73GB2A223J	CHIP R 22K J 1/10W		D253			1SS348-F	DIODE	
R273			R92-1316-05	CHIP R 39 J 1W							
R274,275			RK73GB2A103J	CHIP R 10K J 1/10W		D254	*		MC2858-T111	DIODE	
R276			RK73FB2B101J	CHIP R 100 J 1/8W		D255			1SS348-F	DIODE	
R277			RK73GB2A223J	CHIP R 22K J 1/10W		D256			DAN202U	DIODE	
						D257	*		MC2858-T111	DIODE	
R278,279			RK73FB2B101J	CHIP R 100 J 1/8W		D258			EDZ5.1B	ZENER DIODE	
R280-283			RK73FB2B104J	CHIP R 100K J 1/8W							
R284			RK73GB2A103J	CHIP R 10K J 1/10W		D301,302	*		MC2858-T111	DIODE	
R285			RK73GB2A222J	CHIP R 2.2K J 1/10W		D303-306			DAN202U	DIODE	
R501-503			RK73FB2B101J	CHIP R 100 J 1/8W		D307,308	*		MC2858-T111	DIODE	
						D309,310			DAN202U	DIODE	
R513-515			RK73GB2A101J	CHIP R 100 J 1/10W		D311	*		MC2858-T111	DIODE	
R518,519			RK73GB2A101J	CHIP R 100 J 1/10W							
R520			RK73PB2H2R2J	CHIP R 2.2 J 1/2W		D312-315			DAN202U	DIODE	
R521			RK73GB2A223J	CHIP R 22K J 1/10W		D316,317	*		MC2858-T111	DIODE	
R522			RK73GB2A103J	CHIP R 10K J 1/10W		D318,319			DAN202U	DIODE	
						D320	*		MC2858-T111	DIODE	
R523,524			RK73GB2A102J	CHIP R 1.0K J 1/10W		D321,322			DAN202U	DIODE	
R525-527			RK73FB2B101J	CHIP R 100 J 1/8W							
R528			RK73GB2A104G	CHIP R 100K G 1/10W		D323	*		MC2858-T111	DIODE	
R529			RK73GB2A103J	CHIP R 10K J 1/10W		D324,325			DAN202U	DIODE	
R530-532			RK73FB2B101J	CHIP R 100 J 1/8W		D501			DAN202U	DIODE	
						D502,503			DA221	DIODE	
R533-536			RK73EB2E000J	CHIP R 0.0 J 1/4W		IC1			TC74HC4094AFF	MOS-IC	
R540,541			RK73GB2A221J	CHIP R 220 J 1/10W							
R542			RK73FB2B101J	CHIP R 100 J 1/8W		IC2,3			TC7SHU04F-F	MOS-IC	
R543,544			RK73GB2A100J	CHIP R 10 J 1/10W		IC4	*		INA193AIDBVT	ANALOGUE IC	
VR1,2		*	R12-6736-05	TRIMMING POT. (2.2K)		IC5			TA75S393F-F	MOS-IC	
						IC6			TC7WH74FU-F	MOS-IC	
VR3,4			R12-6740-05	TRIMMING POT. (10K)		IC7-10			TC74HC4094AFF	MOS-IC	
VR5			R12-6742-05	TRIMMING POT. (22K)							
K1,2			S51-1420-05	RELAY		Q1			RD06HHF1-102	FET	
K3-9			S76-0423-05	RELAY		Q2			RD16HHF1-102	FET	
K10			S51-1420-05	RELAY		Q3,4			RD100HHF1-102	FET	
K11-16			S76-0423-05	RELAY		Q5	*		TPCA8104	FET	
K17			S51-1420-05	RELAY		Q101			2SC5383-T111	TRANSISTOR	
K18			S76-0423-05	RELAY		Q251,252	*		2SK1740-4	FET	
K19,20			S76-0415-05	RELAY		Q253	*		RT5P431C-T112	TRANSISTOR	
K21,22			S76-0460-05	RELAY		Q254			2SC5383-T111	TRANSISTOR	
K23			S76-0415-05	RELAY		Q501-508	*		RT1N234U-T111	TRANSISTOR	
K24,25			S76-0460-05	RELAY		Q509,510	*		RT5P431C-T112	TRANSISTOR	
K26			S76-0415-05	RELAY		Q511	*		RT1N234U-T111	TRANSISTOR	
K27,28			S76-0460-05	RELAY		Q513	*		RT1N234U-T111	TRANSISTOR	
K29			S76-0415-05	RELAY		Q514	*		RT5P431C-T112	TRANSISTOR	
K30,31			S76-0460-05	RELAY		Q515-524	*		RT1N234U-T111	TRANSISTOR	
K32			S76-0415-05	RELAY		Q525,526	*		INK0010AU1-T1	FET	
K33,34			S76-0460-05	RELAY		Q527-544	*		RT1N234U-T111	TRANSISTOR	
K35			S76-0415-05	RELAY		TH1			NCP18XH103F0S	THERMISTOR	
K36,37			S76-0460-05	RELAY							
K38			S76-0415-05	RELAY							
K39,40			S76-0460-05	RELAY							
K41			S76-0415-05	RELAY							
K42,43			S76-0460-05	RELAY							

PARTS LIST

CONTROL UNIT (X53-446X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
CONTROL UNIT (X53-446X-XX) 0-11: K 2-71: E					
C1			CK73GB1H104K	CHIP C 0.10UF K	
C2			CK73EB1E225K	CHIP C 2.2UF K	
C3,4		*	CD04BQ1V101M	ELECTRO 100UF 35WV	
C5-7			CK73EB1E225K	CHIP C 2.2UF K	
C8			CK73GB1H102K	CHIP C 1000PF K	
C9			CK73GB1A474K	CHIP C 0.47UF K	
C10			CK73GB1C225K	CHIP C 2.2UF K	
C11			CC73GCH1H101J	CHIP C 100PF J	
C12			CK73EB1E225K	CHIP C 2.2UF K	
C13			CC73GCH1H471J	CHIP C 470PF J	
C14-16			CK73EB1E106K	CHIP C 10UF K	
C17			CK73GB1H104K	CHIP C 0.10UF K	
C18-21		*	CD04BQ1V101M	ELECTRO 100UF 35WV	
C22-24			CK73EB1E225K	CHIP C 2.2UF K	
C25			CK73GB1H102K	CHIP C 1000PF K	
C26			CK73GB1A474K	CHIP C 0.47UF K	
C27			CK73GB1C225K	CHIP C 2.2UF K	
C28			CC73GCH1H101J	CHIP C 100PF J	
C30			CC73GCH1H471J	CHIP C 470PF J	
C31-33			CK73EB1E106K	CHIP C 10UF K	
C34			CK73GB1H104K	CHIP C 0.10UF K	
C35,36		*	CD04BQ1V101M	ELECTRO 100UF 35WV	
C37			CK73GB1H103K	CHIP C 0.010UF K	
C38			CK73GB1E105K	CHIP C 1.0UF K	
C39			CK73EB1A106K	CHIP C 10UF K	
C41			CK73GB1H104K	CHIP C 0.10UF K	
C42			CK73GB1E105K	CHIP C 1.0UF K	
C43			CK73GB1H104K	CHIP C 0.10UF K	
C44			C92-0889-05	ELECTRO 330UF 6.3WV	
C45			CK73GB1H104K	CHIP C 0.10UF K	
C46			CK73GB1E105K	CHIP C 1.0UF K	
C47			CK73GB1H104K	CHIP C 0.10UF K	
C48			CE32CL1C470M	CHIP EL 47UF 16WV	
C49			CK73GB1H104K	CHIP C 0.10UF K	
C50			CK73GB1H102K	CHIP C 1000PF K	
C51			CK73GB1H104K	CHIP C 0.10UF K	
C52-54			CK73EB1E106K	CHIP C 10UF K	
C55-62			CK73GB1E105K	CHIP C 1.0UF K	
C63,64			CK73GB1H104K	CHIP C 0.10UF K	
C65			CK73GB1E105K	CHIP C 1.0UF K	
C66-69			CK73GB1H102K	CHIP C 1000PF K	
C70			CK73GB1A105K	CHIP C 1.0UF K	
C71-77			CK73GB1H102K	CHIP C 1000PF K	
C78			CK73GB1E105K	CHIP C 1.0UF K	
C79			CK73GB1H102K	CHIP C 1000PF K	
C80			CK73FB0J106K	CHIP C 10UF K	
C81			CK73GB1H102K	CHIP C 1000PF K	
C82			CK73FB0J106K	CHIP C 10UF K	
C83			CK73GB1E105K	CHIP C 1.0UF K	
C84-86			CK73GB1H102K	CHIP C 1000PF K	
C87			CK73GB1E105K	CHIP C 1.0UF K	
C88			CK73GB1H102K	CHIP C 1000PF K	
C90-93			CK73GB1H102K	CHIP C 1000PF K	
C96,97			CD04AZ1E471M	ELECTRO 470UF 25WV	
C98,99			CK73FB1E104K	CHIP C 0.10UF K	
C100			CK73GB1H223K	CHIP C 0.022UF K	
C102			CK73GB1H104K	CHIP C 0.10UF K	
C104			CK73GB1H103K	CHIP C 0.010UF K	
C106			CK73GB1H223K	CHIP C 0.022UF K	
C107			CK73GB1H104K	CHIP C 0.10UF K	
C109			CK73GB1E105K	CHIP C 1.0UF K	
C110			CK73GB1H332K	CHIP C 3300PF K	
C111,112			CK73GB1H104K	CHIP C 0.10UF K	
C113			CK73GB1H152K	CHIP C 1500PF K	
C114,115			CK73GB1E105K	CHIP C 1.0UF K	
C116			CK73GB1H103K	CHIP C 0.010UF K	
C117,118			CK73GB1H222K	CHIP C 2200PF K	
C119,120			CK73GB1H104K	CHIP C 0.10UF K	
C121,122			CC73GCH1H471J	CHIP C 470PF J	
C123			CK73GB1H103K	CHIP C 0.010UF K	
C126			CK73FB0J106K	CHIP C 10UF K	
C127			CK73GB1H104K	CHIP C 0.10UF K	
C128			CK73GB1H122K	CHIP C 1200PF K	
C129			CK73GB1H104K	CHIP C 0.10UF K	
C130			CC73GCH1H560J	CHIP C 56PF J	
C131,132			CK73FB0J106K	CHIP C 10UF K	
C133			CK73GB1H103K	CHIP C 0.010UF K	
C134,135			CC73GCH1H821J	CHIP C 820PF J	
C136,137			CK73GB1H104K	CHIP C 0.10UF K	
C138,139			CC73GCH1H121J	CHIP C 120PF J	
C140			CK73GB1H103K	CHIP C 0.010UF K	
C145			CK73GB1H104K	CHIP C 0.10UF K	
C146			CK73FB0J106K	CHIP C 10UF K	
C147			CK73GB1H104K	CHIP C 0.10UF K	
C148			CK73FB0J106K	CHIP C 10UF K	
C149			CC73GCH1H470J	CHIP C 47PF J	
C150			CK73GB1H222K	CHIP C 2200PF K	
C151			CK73GB1C224K	CHIP C 0.22UF K	
C152,153			CK73GB1H104K	CHIP C 0.10UF K	
C154,155			CK73FB0J106K	CHIP C 10UF K	
C156			CD04AZ1E221M	ELECTRO 220UF 25WV	
C157			CD04AZ1E471M	ELECTRO 470UF 25WV	
C158		*	C90-4155-05	ELECTRO 1000UF 16WV	
C159			CK73GB1H104K	CHIP C 0.10UF K	
C160			CE32CL1H4R7M	CHIP EL 4.7UF 50WV	
C161			CK73GB1H473K	CHIP C 0.047UF K	
C162			CK73GB1E105K	CHIP C 1.0UF K	
C163			CK73GB1H182K	CHIP C 1800PF K	
C164			CK73GB1H103K	CHIP C 0.010UF K	
C166			CK73GB1C225K	CHIP C 2.2UF K	
C167			CK73GB1H222K	CHIP C 2200PF K	
C168			CK73GB1H122K	CHIP C 1200PF K	
C169,170			CK73GB1H104K	CHIP C 0.10UF K	
C171			CC73GCH1H331J	CHIP C 330PF J	
C172			CC73GCH1H470J	CHIP C 47PF J	
C173			CK73GB1C225K	CHIP C 2.2UF K	
C174			CK73GB1E105K	CHIP C 1.0UF K	
C175			CC73GCH1H331J	CHIP C 330PF J	
C176			CC73GCH1H101J	CHIP C 100PF J	
C177,178			CK73GB1H103K	CHIP C 0.010UF K	
C179,180			CK73GB1H104K	CHIP C 0.10UF K	
C181			CK73GB1H222K	CHIP C 2200PF K	
C182			CC73GCH1H681J	CHIP C 680PF J	
C183			CK73GB1C225K	CHIP C 2.2UF K	
C184			CK73GB1E105K	CHIP C 1.0UF K	
C185			CK73GB1H103K	CHIP C 0.010UF K	
C186			CC73GCH1H221J	CHIP C 220PF J	
C187			CC73GCH1H681J	CHIP C 680PF J	

PARTS LIST

CONTROL UNIT (X53-446X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C188			CC73GCH1H680J	CHIP C 68PF J		C259			CK73GB1E105K	CHIP C 1.0UF K	
C189			CC73GCH1H101J	CHIP C 100PF J		C260			CC73GCH1H471J	CHIP C 470PF J	
C190			CK73GB1H152K	CHIP C 1500PF K		C261			CK73GB1H104K	CHIP C 0.10UF K	
C191			CC73GCH1H331J	CHIP C 330PF J		C262			CK73GB1H222K	CHIP C 2200PF K	
C192			CK73GB1H104K	CHIP C 0.10UF K		C263,264			CK73GB1E105K	CHIP C 1.0UF K	
C193			CK73FB0J106K	CHIP C 10UF K		C265			CK73GB1H222K	CHIP C 2200PF K	
C196			CK73GB1H102K	CHIP C 1000PF K		C266			CK73GB1H103K	CHIP C 0.010UF K	
C197			CK73GB1C225K	CHIP C 2.2UF K		C267			CK73GB1H104K	CHIP C 0.10UF K	
C198			CK73GB1A105K	CHIP C 1.0UF K		C268			CC73GCH1H471J	CHIP C 470PF J	
C199,200			CK73GB1C225K	CHIP C 2.2UF K		C269			CK73GB1E105K	CHIP C 1.0UF K	
C201			CK73GB1H332K	CHIP C 3300PF K		C270			CC73GCH1H471J	CHIP C 470PF J	
C202			CK73GB1H104K	CHIP C 0.10UF K		C271			CK73GB1H104K	CHIP C 0.10UF K	
C203			CC73GCH1H331J	CHIP C 330PF J		C272			CK73GB1H222K	CHIP C 2200PF K	
C204			CK73GB1C225K	CHIP C 2.2UF K		C273			CK73GB1E105K	CHIP C 1.0UF K	
C205			CC73GCH1H331J	CHIP C 330PF J		C274			CK73GB1H104K	CHIP C 0.10UF K	
C206			CK73GB1H104K	CHIP C 0.10UF K		C275			CK73FB0J106K	CHIP C 10UF K	
C207			CK73GB1H103K	CHIP C 0.010UF K		C276			CK73GB1H104K	CHIP C 0.10UF K	
C208			CK73GB1H332K	CHIP C 3300PF K		C277			CK73FB0J106K	CHIP C 10UF K	
C209			CK73GB1C225K	CHIP C 2.2UF K		C278			CK73GB1H104K	CHIP C 0.10UF K	
C210			CK73GB1E105K	CHIP C 1.0UF K		C279			CK73FB0J106K	CHIP C 10UF K	
C211			CK73GB1H222K	CHIP C 2200PF K		C280			CK73GB1H104K	CHIP C 0.10UF K	
C212			CK73GB1H104K	CHIP C 0.10UF K		C281			CK73FB0J106K	CHIP C 10UF K	
C213			CC73GCH1H471J	CHIP C 470PF J		C283			CK73GB1H104K	CHIP C 0.10UF K	
C214			CK73GB1E105K	CHIP C 1.0UF K		C285			CK73GB1H104K	CHIP C 0.10UF K	
C215			CC73GCH1H471J	CHIP C 470PF J		C286,287			CK73EB1A106K	CHIP C 10UF K	
C216			CK73GB1H104K	CHIP C 0.10UF K		C289			CK73FB0J106K	CHIP C 10UF K	
C217			CK73GB1H103K	CHIP C 0.010UF K		C290,291			CK73GB1E105K	CHIP C 1.0UF K	
C218			CK73GB1H222K	CHIP C 2200PF K		C292			CK73FB0J106K	CHIP C 10UF K	
C219			CK73GB1E105K	CHIP C 1.0UF K		C293			CK73GB1H103K	CHIP C 0.010UF K	
C220			CK73FB0J106K	CHIP C 10UF K		C295			CE32BM1C101M	CHIP EL 100UF 16WV	
C221			CK73GB1H104K	CHIP C 0.10UF K		C297		*	CD04BQ1C471M	ELECTRO 470UF 16WV	
C222			CK73FB0J106K	CHIP C 10UF K		C299,300			CK73GB1H102K	CHIP C 1000PF K	
C225			CK73GB1E105K	CHIP C 1.0UF K		C301		*	CD04BQ1C471M	ELECTRO 470UF 16WV	
C226			CC73GCH1H821J	CHIP C 820PF J		C302-304			CC73GCH1H101J	CHIP C 100PF J	
C227			CK73GB1H104K	CHIP C 0.10UF K		C305			C93-0912-05	CHIP C 100UF M	
C228			CC73GCH1H151J	CHIP C 150PF J		C306-308			CK73GB1H104K	CHIP C 0.10UF K	
C229			CK73GB1E105K	CHIP C 1.0UF K		C310-313			CK73GB1H104K	CHIP C 0.10UF K	
C230			CC73GCH1H151J	CHIP C 150PF J		C314,315			CC73GCH1H101J	CHIP C 100PF J	
C231			CK73GB1H104K	CHIP C 0.10UF K		C316-319			CK73GB1H104K	CHIP C 0.10UF K	
C232			CK73GB1H103K	CHIP C 0.010UF K		C320			CK73GB1H102K	CHIP C 1000PF K	
C233			CC73GCH1H821J	CHIP C 820PF J		C321-324			CK73GB1H104K	CHIP C 0.10UF K	
C234			CK73GB1E105K	CHIP C 1.0UF K		C325			CC73GCH1H471J	CHIP C 470PF J	
C235			CK73GB1H103K	CHIP C 0.010UF K		C326			CC73GCH1H050B	CHIP C 5.0PF B	
C236			CK73GB1H104K	CHIP C 0.10UF K		C327			CK73GB1H104K	CHIP C 0.10UF K	
C237			CK73FB0J106K	CHIP C 10UF K		C328			CC73GCH1H050B	CHIP C 5.0PF B	
C239			CK73GB1H102K	CHIP C 1000PF K		C329			CC73GCH1H471J	CHIP C 470PF J	
C240			CK73GB1H104K	CHIP C 0.10UF K		C330-344			CK73GB1H104K	CHIP C 0.10UF K	
C241-243			CK73FB0J106K	CHIP C 10UF K		C345,346			CK73GB1H102K	CHIP C 1000PF K	
C244			CK73GB1H104K	CHIP C 0.10UF K		C347			CK73GB1H104K	CHIP C 0.10UF K	
C247			CK73GB1H104K	CHIP C 0.10UF K		C348,349			CC73GCH1H030B	CHIP C 3.0PF B	
C248			CK73FB0J106K	CHIP C 10UF K		C350			CK73GB1E105K	CHIP C 1.0UF K	
C249			CK73GB1H222K	CHIP C 2200PF K		C351			CK73GB1H102K	CHIP C 1000PF K	
C250			CK73GB1E105K	CHIP C 1.0UF K		C352-362			CK73GB1H104K	CHIP C 0.10UF K	
C251			CC73GCH1H331J	CHIP C 330PF J		C363			CK73GB1E105K	CHIP C 1.0UF K	
C252,253			CK73GB1H103K	CHIP C 0.010UF K		C364			CK73GB1H104K	CHIP C 0.10UF K	
C254			CK73GB1E105K	CHIP C 1.0UF K		C365,366			CK73GB1E105K	CHIP C 1.0UF K	
C255			CK73GB1H222K	CHIP C 2200PF K		C367,368			CK73GB1H102K	CHIP C 1000PF K	
C256			CK73GB1H103K	CHIP C 0.010UF K		C371			CK73GB1H102K	CHIP C 1000PF K	
C257			CK73GB1H104K	CHIP C 0.10UF K		C373			CK73GB1H102K	CHIP C 1000PF K	
C258			CC73GCH1H471J	CHIP C 470PF J		C375			CK73GB1H102K	CHIP C 1000PF K	

PARTS LIST

CONTROL UNIT (X53-446X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C377			CK73GB1H102K	CHIP C 1000PF K		C534,535			CC73GCH1H101J	CHIP C 100PF J	
C379,380			CC73GCH1H331J	CHIP C 330PF J		C536,537			CK73GB1H103K	CHIP C 0.010UF K	
C381,382			CC73GCH1H101J	CHIP C 100PF J		C538			CS77BA1A100M	CHIP TNTL 10UF 10WV	
C385			CK73GB1H102K	CHIP C 1000PF K		C539			CK73GB1H103K	CHIP C 0.010UF K	
C386-388			CK73GB1H222K	CHIP C 2200PF K		C540			CC73GCH1H080B	CHIP C 8.0PF B	
C389-391			CK73GB1H102K	CHIP C 1000PF K		C542			CC73GCH1H151J	CHIP C 150PF J	
C392			CK73GB1H222K	CHIP C 2200PF K		C543			CC73GCH1H390J	CHIP C 39PF J	
C393-395			CK73GB1H102K	CHIP C 1000PF K		C544,545			CK73GB1H103K	CHIP C 0.010UF K	
C396			CK73GB1H222K	CHIP C 2200PF K		C546			CC73GCH1H050B	CHIP C 5.0PF B	
C397			CK73GB1H102K	CHIP C 1000PF K		C547			CK73GB1H103K	CHIP C 0.010UF K	
C399			CK73GB1H102K	CHIP C 1000PF K		C548			CK73GB1H473K	CHIP C 0.047UF K	
C400			CK73GB1H222K	CHIP C 2200PF K		C549			CC73GCH1H470J	CHIP C 47PF J	
C402			CK73GB1H102K	CHIP C 1000PF K		C550			CK73GB1H103K	CHIP C 0.010UF K	
C403			CK73GB1H222K	CHIP C 2200PF K		C551			CC73GCH1H470J	CHIP C 47PF J	
C404-406			CK73GB1H102K	CHIP C 1000PF K		C552			CK73GB1H103K	CHIP C 0.010UF K	
C407			CK73GB1H222K	CHIP C 2200PF K		C553			CC73GCH1H390J	CHIP C 39PF J	
C408			CK73GB1H102K	CHIP C 1000PF K		C554			CC73GCH1H040B	CHIP C 4.0PF B	
C409			CK73GB1H222K	CHIP C 2200PF K		C555			CK73GB1H391K	CHIP C 390PF K	
C416,417			CK73GB1H102K	CHIP C 1000PF K		C556			CC73GCH1H150J	CHIP C 15PF J	
C418			CK73GB1H222K	CHIP C 2200PF K		C557			CC73GCH1H821J	CHIP C 820PF J	
C419-422			CK73GB1H102K	CHIP C 1000PF K		C558			CC73GCH1H150J	CHIP C 15PF J	
C423,424			CK73GB1H222K	CHIP C 2200PF K		C559			CK73GB1H391K	CHIP C 390PF K	
C425			CK73GB1H102K	CHIP C 1000PF K		C560			CK73GB1H103K	CHIP C 0.010UF K	
C426			CK73GB1H222K	CHIP C 2200PF K		C561			CC73GCH1H101J	CHIP C 100PF J	
C427			CK73GB1E105K	CHIP C 1.0UF K		C562			CK73GB1H472K	CHIP C 4700PF K	
C428			CK73GB1H102K	CHIP C 1000PF K		C563			CK73GB1H473K	CHIP C 0.047UF K	
C429			CK73GB1E105K	CHIP C 1.0UF K		C564			CK73GB1H102K	CHIP C 1000PF K	
C430			CK73GB1H102K	CHIP C 1000PF K		C565			CK73GB1H472K	CHIP C 4700PF K	
C437			CK73GB1H102K	CHIP C 1000PF K		C566			CK73GB1H473K	CHIP C 0.047UF K	
C439			CK73GB1H102K	CHIP C 1000PF K		C567			CK73GB1H102K	CHIP C 1000PF K	
C441			CK73GB1H102K	CHIP C 1000PF K		C568			CC73GCH1H680J	CHIP C 68PF J	
C445			CK73GB1H102K	CHIP C 1000PF K		C569			CC73GCH1H120J	CHIP C 12PF J	
C450			CK73GB1H102K	CHIP C 1000PF K		C570			CC73GCH1H271J	CHIP C 270PF J	
C453			CK73GB1H102K	CHIP C 1000PF K		C571			CC73GCH1H080B	CHIP C 8.0PF B	
C455			CK73GB1H102K	CHIP C 1000PF K		C572			CC73GCH1H271J	CHIP C 270PF J	
C457			CK73GB1H102K	CHIP C 1000PF K		C573			CC73GCH1H120J	CHIP C 12PF J	
C460			CK73GB1H102K	CHIP C 1000PF K		C574			CC73GCH1H680J	CHIP C 68PF J	
C465			CK73GB1E105K	CHIP C 1.0UF K		C575			CK73GB1H102K	CHIP C 1000PF K	
C466			CK73GB1H102K	CHIP C 1000PF K		C576			CK73GB1H103K	CHIP C 0.010UF K	
C467			CK73GB1E105K	CHIP C 1.0UF K		C577			CK73GB1H102K	CHIP C 1000PF K	
C468			CK73GB1H102K	CHIP C 1000PF K		C578			CK73GB1H472K	CHIP C 4700PF K	
C469			CK73GB1E105K	CHIP C 1.0UF K		C579			CK73GB1H473K	CHIP C 0.047UF K	
C470			CK73GB1H102K	CHIP C 1000PF K		C580			CK73GB1H102K	CHIP C 1000PF K	
C471			CK73GB1H104K	CHIP C 0.10UF K		C581			CC73GCH1H390J	CHIP C 39PF J	
C473			CK73GB1E105K	CHIP C 1.0UF K		C582			CC73GCH1H680J	CHIP C 68PF J	
C474,475			CK73GB1H102K	CHIP C 1000PF K		C583			CC73GCH1H390J	CHIP C 39PF J	
C483			CK73GB1H104K	CHIP C 0.10UF K		C584,585			CK73GB1H102K	CHIP C 1000PF K	
C486-488			CK73GB1H104K	CHIP C 0.10UF K		C586			CC73GCH1H560J	CHIP C 56PF J	
C489			CK73GB1E105K	CHIP C 1.0UF K		C588			CK73GB1A105K	CHIP C 1.0UF K	
C490			C93-0912-05	CHIP C 100UF M		C589			CK73GB1H103K	CHIP C 0.010UF K	
C491-493			CK73GB1H104K	CHIP C 0.10UF K		C590			CE32CL1H4R7M	CHIP EL 4.7UF 50WV	
C494			CK73GB1H102K	CHIP C 1000PF K		C591,592			CK73GB1H102K	CHIP C 1000PF K	
C495			CK73EB1A106K	CHIP C 10UF K		C593			CE32CL1H4R7M	CHIP EL 4.7UF 50WV	
C496			CK73GB1H102K	CHIP C 1000PF K		C594,595			CK73GB1H102K	CHIP C 1000PF K	
C501			CK73GB1H102K	CHIP C 1000PF K		C596			CE32CL1H4R7M	CHIP EL 4.7UF 50WV	
C505			CC73GCH1H470J	CHIP C 47PF J		C598			CK73GB1H102K	CHIP C 1000PF K	
C506,507			CC73GCH1H101J	CHIP C 100PF J		C601			CK73GB1H472K	CHIP C 4700PF K	
C508-521			CK73GB1H102K	CHIP C 1000PF K		C602			CK73GB1H102K	CHIP C 1000PF K	
C523-529			CK73GB1H102K	CHIP C 1000PF K		C604			CK73GB1H102K	CHIP C 1000PF K	
C530,531			CC73GCH1H101J	CHIP C 100PF J		C605			CC73GCH1H390J	CHIP C 39PF J	

PARTS LIST

CONTROL UNIT (X53-446X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C606			CC73GCH1H680J	CHIP C 68PF J		C699			CK73GB1H103K	CHIP C 0.010UF K	
C607			CS77BA1A100M	CHIP TNTL 10UF 10WV		C700			CC73GCH1H180J	CHIP C 18PF J	
C608			CK73GB1H472K	CHIP C 4700PF K		C701			CC73GCH1H1R5B	CHIP C 1.5PF B	
C610,611			CK73GB1H103K	CHIP C 0.010UF K		C702			CC73GCH1H270J	CHIP C 27PF J	
C612			CS77BA1A100M	CHIP TNTL 10UF 10WV		C703			CC73GCH1H330J	CHIP C 33PF J	
C613			CK73GB1C473K	CHIP C 0.047UF K		C704			CK73GB1H102K	CHIP C 1000PF K	
C615			CC73GCH1H101J	CHIP C 100PF J		C705			CC73GCH1H090B	CHIP C 9.0PF B	
C616			CK73GB1H103K	CHIP C 0.010UF K		C706			CK73GB1H102K	CHIP C 1000PF K	
C617-619			CK73GB1H473K	CHIP C 0.047UF K		C707			CC73GCH1H090B	CHIP C 9.0PF B	
C620			CK73GB1H391K	CHIP C 390PF K		C708			CC73GCH1H270J	CHIP C 27PF J	
C621			CC73GCH1H330J	CHIP C 33PF J		C709			CC73GCH1H560J	CHIP C 56PF J	
C622			CC73GCH1H561J	CHIP C 560PF J		C710			CC73GCH1H470J	CHIP C 47PF J	
C623			CC73GCH1H820J	CHIP C 82PF J		C711			CC73GCH1H560J	CHIP C 56PF J	
C624			CC73GCH1H331J	CHIP C 330PF J		C712			CC73GCH1H040B	CHIP C 4.0PF B	
C648			CK73GB1H102K	CHIP C 1000PF K		C713			CC73GCH1H150J	CHIP C 15PF J	
C649			CC73GCH1H560J	CHIP C 56PF J		C714			CC73GCH1H680J	CHIP C 68PF J	
C650			CC73GCH1H181J	CHIP C 180PF J		C715,716			CC73GCH1H470J	CHIP C 47PF J	
C651			CK73GB1H102K	CHIP C 1000PF K		C717			CC73GCH1H220J	CHIP C 22PF J	
C652,653			CK73GB1H103K	CHIP C 0.010UF K		C718			CC73GCH1H080B	CHIP C 8.0PF B	
C654			CK73GB1H102K	CHIP C 1000PF K		C719			CC73GCH1H121J	CHIP C 120PF J	
C655,656			CK73GB1H103K	CHIP C 0.010UF K		C720			CC73GCH1H470J	CHIP C 47PF J	
C657			CC73GCH1H560J	CHIP C 56PF J		C721			CC73GCH1H040B	CHIP C 4.0PF B	
C658			CC73GCH1H181J	CHIP C 180PF J		C722			CC73GCH1H560J	CHIP C 56PF J	
C659			CC73GCH1H270J	CHIP C 27PF J		C723			CC73GCH1H150J	CHIP C 15PF J	
C660			CK73GB1H103K	CHIP C 0.010UF K		C724			CC73GCH1H680J	CHIP C 68PF J	
C661			CC73GCH1H221J	CHIP C 220PF J		C725			CC73GCH1H330J	CHIP C 33PF J	
C662,663			CK73GB1H103K	CHIP C 0.010UF K		C726			CC73GCH1H030B	CHIP C 3.0PF B	
C664			CC73GCH1H270J	CHIP C 27PF J		C727			CC73GCH1H270J	CHIP C 27PF J	
C665			CC73GCH1H181J	CHIP C 180PF J		C728			CC73GCH1H151J	CHIP C 150PF J	
C666			CK73GB1H103K	CHIP C 0.010UF K		C729			CK73GB1H102K	CHIP C 1000PF K	
C667			CC73GCH1H820J	CHIP C 82PF J		C730			CC73GCH1H680J	CHIP C 68PF J	
C668			CC73GCH1H560J	CHIP C 56PF J		C732			CC73GCH1H060B	CHIP C 6.0PF B	
C669			CK73GB1H103K	CHIP C 0.010UF K		C733			CC73GCH1H560J	CHIP C 56PF J	
C670			CC73GCH1H560J	CHIP C 56PF J		C734			CC73GCH1H330J	CHIP C 33PF J	
C671			CK73GB1H103K	CHIP C 0.010UF K		C735			CC73GCH1H030B	CHIP C 3.0PF B	
C672			CC73GCH1H270J	CHIP C 27PF J		C736			CC73GCH1H270J	CHIP C 27PF J	
C673			CC73GCH1H330J	CHIP C 33PF J		C738			CC73GCH1H121J	CHIP C 120PF J	
C674			CC73GCH1H100C	CHIP C 10PF C		C739			CC73GCH1H220J	CHIP C 22PF J	
C675			CC73GCH1H680J	CHIP C 68PF J		C740			CC73GCH1H680J	CHIP C 68PF J	
C676			CC73GCH1H560J	CHIP C 56PF J		C741,742			CK73GB1H102K	CHIP C 1000PF K	
C677,678			CK73GB1H103K	CHIP C 0.010UF K		C743			CC73GCH1H121J	CHIP C 120PF J	
C679			CC73GCH1H270J	CHIP C 27PF J		C744			CC73GCH1H470J	CHIP C 47PF J	
C680			CC73GCH1H080B	CHIP C 8.0PF B		C745			CC73GCH1H030B	CHIP C 3.0PF B	
C681			CK73GB1H103K	CHIP C 0.010UF K		C746			CC73GCH1H560J	CHIP C 56PF J	
C682			CC73GCH1H680J	CHIP C 68PF J		C748-751			CK73GB1H102K	CHIP C 1000PF K	
C683			CC73GCH1H560J	CHIP C 56PF J		C752			CC73GCH1H101J	CHIP C 100PF J	
C684			CC73GCH1H270J	CHIP C 27PF J		C753-755			CK73GB1H102K	CHIP C 1000PF K	
C685			CC73GCH1H100C	CHIP C 10PF C		C756			CK73GB1H472K	CHIP C 4700PF K	
C686			CK73GB1H103K	CHIP C 0.010UF K		C757-760			CK73GB1H102K	CHIP C 1000PF K	
C687			CC73GCH1H270J	CHIP C 27PF J		C761			CC73GCH1H390J	CHIP C 39PF J	
C688			CK73GB1H103K	CHIP C 0.010UF K		C762			CK73GB1H102K	CHIP C 1000PF K	
C689			CC73GCH1H561J	CHIP C 560PF J		C763			CK73GB1H472K	CHIP C 4700PF K	
C690			CK73GB1H103K	CHIP C 0.010UF K		C764			CK73GB1H102K	CHIP C 1000PF K	
C691,692			CC73GCH1H820J	CHIP C 82PF J		C765			CC73GCH1H220J	CHIP C 22PF J	
C693			CC73GCH1H681J	CHIP C 680PF J		C766			CC73GCH1H240J	CHIP C 24PF J	
C694			CC73GCH1H680J	CHIP C 68PF J		C767			CK73GB1H472K	CHIP C 4700PF K	
C695			CC73GCH1H820J	CHIP C 82PF J		C768			CC73GCH1H120J	CHIP C 12PF J	
C696			CK73GB1H103K	CHIP C 0.010UF K		C769			CC73GCH1H180J	CHIP C 18PF J	
C697			CC73GCH1H181J	CHIP C 180PF J		C770			CC73GCH1H330J	CHIP C 33PF J	
C698			CC73GCH1H561J	CHIP C 560PF J		C771			CC73GCH1H470J	CHIP C 47PF J	

PARTS LIST

CONTROL UNIT (X53-446X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C772			CC73GCH1H220J	CHIP C 22PF J		C856			CK73EB1E106K	CHIP C 10UF K	
C773			CC73GCH1H330J	CHIP C 33PF J		C857			CC73GCH1H220J	CHIP C 22PF J	
C774			CC73GCH1H100C	CHIP C 10PF C		C858			CC73GCH1H030B	CHIP C 3.0PF B	
C775			CC73GCH1H120J	CHIP C 12PF J		C859			CC73GCH1H560J	CHIP C 56PF J	
C776			CC73GCH1H180J	CHIP C 18PF J		C860			CC73GCH1H101J	CHIP C 100PF J	
C777			CC73GCH1H150J	CHIP C 15PF J		C861			CS77BA1A100M	CHIP TNTL 10UF 10WV	
C778			CC73GCH1H220J	CHIP C 22PF J		C862			CK73GB1C104K	CHIP C 0.10UF K	
C779,780			CK73GB1H102K	CHIP C 1000PF K		C863			CC73GCH1H150J	CHIP C 15PF J	
C781-783			CC73GCH1H470J	CHIP C 47PF J		C864			CC73GCH1H030B	CHIP C 3.0PF B	
C784,785			CK73GB1H102K	CHIP C 1000PF K		C865-872			CK73GB1C104K	CHIP C 0.10UF K	
C786			CK73GB1H103K	CHIP C 0.010UF K		C873			CK73GB1A105K	CHIP C 1.0UF K	
C801			CK73FB1H153K	CHIP C 0.015UF K		C874,875			CC73GCH1H180J	CHIP C 18PF J	
C802			CK73GB1H472K	CHIP C 4700PF K		C876			CC73GCH1H330J	CHIP C 33PF J	
C803			CK73GB1H102K	CHIP C 1000PF K		C877			CK73GB1H102K	CHIP C 1000PF K	
C804			CS77CA1ER47M	CHIP TNTL 0.47UF 25WV		C878			CC73GCH1H120J	CHIP C 12PF J	
C805			CK73GB1A105K	CHIP C 1.0UF K		C879			CK73GB1C104K	CHIP C 0.10UF K	
C806			CK73GB1H102K	CHIP C 1000PF K		C880			CC73GCH1H470J	CHIP C 47PF J	
C807			CK73GB1H473K	CHIP C 0.047UF K		C881,882			CK73GB1C104K	CHIP C 0.10UF K	
C808			CK73GB1H102K	CHIP C 1000PF K		C883			CC73GCH1H390J	CHIP C 39PF J	
C809			CK73FB1H153K	CHIP C 0.015UF K		C884			CC73GCH1H470J	CHIP C 47PF J	
C810			CC73GCH1H390J	CHIP C 39PF J		C885,886			CK73GB1H102K	CHIP C 1000PF K	
C811			CK73FB1H153K	CHIP C 0.015UF K		C887			CK73GB1C104K	CHIP C 0.10UF K	
C812			CK73GB1A105K	CHIP C 1.0UF K		C888			CK73GB1H102K	CHIP C 1000PF K	
C813			CS77BA1A100M	CHIP TNTL 10UF 10WV		C889,890			CC73GCH1H060B	CHIP C 6.0PF B	
C814			CK73GB1C104K	CHIP C 0.10UF K		C891			CC73GCH1H080B	CHIP C 8.0PF B	
C815			CS77BA1A100M	CHIP TNTL 10UF 10WV		C892			CK73GB1H102K	CHIP C 1000PF K	
C816			CC73GCH1H680J	CHIP C 68PF J		C895			CC73GCH1H330J	CHIP C 33PF J	
C817			CK73GB1C104K	CHIP C 0.10UF K		C901-903			CC73GCH1H101J	CHIP C 100PF J	
C818			CC73GCH1H101J	CHIP C 100PF J		C904,905			CK73GB1H102K	CHIP C 1000PF K	
C819			CK73GB1C104K	CHIP C 0.10UF K		C908-915			CK73GB1H102K	CHIP C 1000PF K	
C820,821			CC73GCH1H101J	CHIP C 100PF J		C916			CK73GB1H472K	CHIP C 4700PF K	
C822			CK73GB1C104K	CHIP C 0.10UF K		C917,918			CK73GB1A105K	CHIP C 1.0UF K	
C823			CK73GB1H102K	CHIP C 1000PF K		C919,920			CK73GB1H102K	CHIP C 1000PF K	
C824			CC73GCH1H120J	CHIP C 12PF J		C921-925			CK73GB1A105K	CHIP C 1.0UF K	
C825			CS77BA1A100M	CHIP TNTL 10UF 10WV		C926			CK73GB1H102K	CHIP C 1000PF K	
C826			CK73GB1C104K	CHIP C 0.10UF K		C927			CK73GB1H104K	CHIP C 0.10UF K	
C827			CC73GCH1H471J	CHIP C 470PF J		C928			CK73GB1A105K	CHIP C 1.0UF K	
C828			CS77BA1A100M	CHIP TNTL 10UF 10WV		C929			CK73GB1H102K	CHIP C 1000PF K	
C829			CK73GB1H472K	CHIP C 4700PF K		C930,931			CK73GB1A105K	CHIP C 1.0UF K	
C830			CS77BA1A100M	CHIP TNTL 10UF 10WV		C932			CC73GCH1H222J	CHIP C 2200PF J	
C831			CC73GCH1H150J	CHIP C 15PF J		C933			CK73GB1H102K	CHIP C 1000PF K	
C832			CC73GCH1H120J	CHIP C 12PF J		C934			CK73FB0J106K	CHIP C 10UF K	
C833			CC73GCH1H390J	CHIP C 39PF J		C935			CK73GB1H102K	CHIP C 1000PF K	
C835			CC73GCH1HR75B	CHIP C 0.75PF B		C936,937			CK73FB0J106K	CHIP C 10UF K	
C836			CC73GCH1H090B	CHIP C 9.0PF B		C938,939			CK73GB1H102K	CHIP C 1000PF K	
C837			CK73GB1H103K	CHIP C 0.010UF K		C940,941			CK73FB0J106K	CHIP C 10UF K	
C838			CC73GCH1H150J	CHIP C 15PF J		C942,943			CC73GCH1H150J	CHIP C 15PF J	
C839			CK73GB1H102K	CHIP C 1000PF K		C944			CK73GB1H102K	CHIP C 1000PF K	
C840			CK73GB1H473K	CHIP C 0.047UF K		C945			CK73FB0J106K	CHIP C 10UF K	
C841,842			CC73GCH1H120J	CHIP C 12PF J		C946			CK73GB1H102K	CHIP C 1000PF K	
C843			CC73GCH1H030B	CHIP C 3.0PF B		C947			CK73FB0J106K	CHIP C 10UF K	
C844			CK73GB1H103K	CHIP C 0.010UF K		C948-951			CK73GB1H104K	CHIP C 0.10UF K	
C845			CC73GCH1H471J	CHIP C 470PF J		C952			CK73GB1A105K	CHIP C 1.0UF K	
C846			CC73GCH1H120J	CHIP C 12PF J		C953			CC73GCH1H050B	CHIP C 5.0PF B	
C847,848			CK73GB1H102K	CHIP C 1000PF K		C954			CK73GB1A105K	CHIP C 1.0UF K	
C849,850			CK73EB1E106K	CHIP C 10UF K		C955			CC73GCH1H050B	CHIP C 5.0PF B	
C851			CK73GB1H102K	CHIP C 1000PF K		C956,957			CK73GB1H104K	CHIP C 0.10UF K	
C852			CC73GCH1H101J	CHIP C 100PF J		C958			CK73GB1H102K	CHIP C 1000PF K	
C853,854			CC73GCH1H150J	CHIP C 15PF J		C959			CK73GB1A105K	CHIP C 1.0UF K	
C855			CC73GCH1H101J	CHIP C 100PF J		C960-962			CK73GB1H104K	CHIP C 0.10UF K	

PARTS LIST

CONTROL UNIT (X53-446X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C964			CK73GB1A105K	CHIP C 1.0UF K		L508			L41-3375-33	SMALL FIXED INDUCTOR (0.033UH)	
C965			CK73GB1H104K	CHIP C 0.10UF K		L509			L41-1595-33	SMALL FIXED INDUCTOR (1.5UH)	
C966			CK73GB1E105K	CHIP C 1.0UF K		L510			L41-6875-33	SMALL FIXED INDUCTOR (0.068UH)	
C968-970			CK73GB1E105K	CHIP C 1.0UF K		L511			L41-1005-33	SMALL FIXED INDUCTOR (10UH)	
C971			CC73GCH1H330J	CHIP C 33PF J		L512			L41-1095-33	SMALL FIXED INDUCTOR (1.0UH)	
TC501			C05-0384-05	CERAMIC TRIMMER CAPACITOR (10P)		L513			L41-1085-33	SMALL FIXED INDUCTOR (0.1UH)	
TC801			C05-0384-05	CERAMIC TRIMMER CAPACITOR (10P)		L514			L41-4785-33	SMALL FIXED INDUCTOR (0.47UH)	
-			E18-0254-05	SOCKET		L515			L41-2275-33	SMALL FIXED INDUCTOR (0.022UH)	
CN1,2			E40-6526-05	PIN ASSY		L516			L41-8285-33	SMALL FIXED INDUCTOR (0.82UH)	
CN61,62			E40-6525-05	PIN ASSY		L517			L41-2275-33	SMALL FIXED INDUCTOR (0.022UH)	
CN63		*	E40-6879-05	FLAT CABLE CONNECTOR		L518			L41-4785-33	SMALL FIXED INDUCTOR (0.47UH)	
CN64			E41-1687-05	PIN ASSY		L519			L41-1085-33	SMALL FIXED INDUCTOR (0.1UH)	
CN65			E40-6525-05	PIN ASSY		L520			L41-1095-33	SMALL FIXED INDUCTOR (1.0UH)	
CN301		*	E41-1948-05	FLAT CABLE CONNECTOR		L521,522			L41-1585-33	SMALL FIXED INDUCTOR (0.15UH)	
CN302			E40-6656-05	PIN ASSY		L523			L41-2295-33	SMALL FIXED INDUCTOR (2.2UH)	
CN303			E40-6745-05	FLAT CABLE CONNECTOR		L524,525			L40-2285-92	SMALL FIXED INDUCTOR (220NH)	
CN305			E40-6727-05	FLAT CABLE CONNECTOR		L601			L41-1095-33	SMALL FIXED INDUCTOR (1.0UH)	
CN502			E40-6745-05	FLAT CABLE CONNECTOR		L602			L41-1585-33	SMALL FIXED INDUCTOR (0.15UH)	
CN503			E41-1684-05	PIN ASSY		L603,604			L41-1005-33	SMALL FIXED INDUCTOR (10UH)	
CN508			E04-0191-05	PIN SOCKET		L605			L41-8285-33	SMALL FIXED INDUCTOR (0.82UH)	
CN601			E04-0191-05	PIN SOCKET		L606			L41-5685-33	SMALL FIXED INDUCTOR (0.56UH)	
CN654			E04-0191-05	PIN SOCKET		L651		*	L39-1480-15	TOROIDAL COIL	
CN901			E40-6357-05	PIN ASSY		L652			L41-1085-33	SMALL FIXED INDUCTOR (0.1UH)	
CN903,904			E40-5487-05	PIN ASSY		L653			L41-8275-33	SMALL FIXED INDUCTOR (0.082UH)	
J901			E58-0529-05	SUB SOCKET (D)		L654			L41-1085-33	SMALL FIXED INDUCTOR (0.1UH)	
J902		*	E58-0537-05	RECTANGULAR RECEPTACLE		L655			L40-1288-67	SMALL FIXED INDUCTOR (120NH)	
W504		*	E37-1498-05	LEAD WIRE WITH CONNECTOR		L656,657			L41-1085-14	SMALL FIXED INDUCTOR (100NH)	
202	2D	*	F20-3401-04	INSULATING SHEET		L658			L40-3391-86	SMALL FIXED INDUCTOR (3.3UH)	
F901		*	F53-0317-15	FUSE (500MA)		L659			L40-1288-67	SMALL FIXED INDUCTOR (120NH)	
L2,3		*	L33-1548-05	CHOKE COIL		L660,661			L41-1085-14	SMALL FIXED INDUCTOR (100NH)	
L4		*	L33-1553-05	CHOKE COIL		L662			L41-3385-33	SMALL FIXED INDUCTOR (0.33UH)	
L5,6		*	L33-1548-05	CHOKE COIL		L663			L41-4785-33	SMALL FIXED INDUCTOR (0.47UH)	
L7		*	L33-1553-05	CHOKE COIL		L664			L41-2785-33	SMALL FIXED INDUCTOR (0.27UH)	
L8			L92-0639-05	CHIP FERRITE		L665			L41-6878-14	SMALL FIXED INDUCTOR (68NH)	
L11			L33-2600-05	CHOKE COIL		L666			L41-1085-14	SMALL FIXED INDUCTOR (100NH)	
L13			L33-2600-05	CHOKE COIL		L667			L41-6878-14	SMALL FIXED INDUCTOR (68NH)	
L15-18			L92-0641-05	FERRITE CORE		L668		*	L34-4936-05	COIL	
L19			L41-1005-39	SMALL FIXED INDUCTOR (10UH)		L669			L41-5678-14	SMALL FIXED INDUCTOR (56NH)	
L20,21		*	L33-1554-05	CHOKE COIL		L670			L41-2285-14	SMALL FIXED INDUCTOR (220NH)	
L61-63			L92-0467-05	CHIP FERRITE		L671		*	L34-4936-05	COIL	
L64		*	L33-1553-05	CHOKE COIL		L672			L40-1288-67	SMALL FIXED INDUCTOR (120NH)	
L65,66			L92-0639-05	CHIP FERRITE		L673		*	L34-4936-05	COIL	
L68			L92-0467-05	CHIP FERRITE		L674			L41-5678-14	SMALL FIXED INDUCTOR (56NH)	
L69			L92-0639-05	CHIP FERRITE		L675			L41-2785-14	SMALL FIXED INDUCTOR (270NH)	
L301,302		*	L33-1554-05	CHOKE COIL		L676,677		*	L34-4936-05	COIL	
L303		*	L79-1940-05	FILTER		L678			L41-1085-14	SMALL FIXED INDUCTOR (100NH)	
L305			L92-0639-05	CHIP FERRITE		L679			L41-5678-14	SMALL FIXED INDUCTOR (56NH)	
L307			L92-0639-05	CHIP FERRITE		L680			L41-2785-14	SMALL FIXED INDUCTOR (270NH)	
L402-405			L92-0639-05	CHIP FERRITE		L681		*	L34-4936-05	COIL	
L407			L92-0639-05	CHIP FERRITE		L682			L41-1085-14	SMALL FIXED INDUCTOR (100NH)	
L408		*	L33-1554-05	CHOKE COIL		L683			L41-2285-14	SMALL FIXED INDUCTOR (220NH)	
L409-420			L92-0180-05	CHIP FERRITE		L684			L41-8275-14	SMALL FIXED INDUCTOR (82NH)	
L501			L92-0639-05	CHIP FERRITE		L685			L41-6878-14	SMALL FIXED INDUCTOR (68NH)	
L502			L41-1015-33	SMALL FIXED INDUCTOR (100UH)		L686			L41-1895-33	SMALL FIXED INDUCTOR (1.8UH)	
L503			L41-1595-33	SMALL FIXED INDUCTOR (1.5UH)		L687			L40-3391-86	SMALL FIXED INDUCTOR (3.3UH)	
L504			L41-2295-33	SMALL FIXED INDUCTOR (2.2UH)		L688			L41-1095-33	SMALL FIXED INDUCTOR (1.0UH)	
L505			L34-4816-05	COIL		L689			L41-3385-33	SMALL FIXED INDUCTOR (0.33UH)	
L506			L41-6875-33	SMALL FIXED INDUCTOR (0.068UH)		L690			L41-3975-33	SMALL FIXED INDUCTOR (0.039UH)	
L507			L41-1895-33	SMALL FIXED INDUCTOR (1.8UH)		L691			L41-3375-33	SMALL FIXED INDUCTOR (0.033UH)	
						L692			L41-6878-14	SMALL FIXED INDUCTOR (68NH)	

PARTS LIST

CONTROL UNIT (X53-446X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
L693			L41-4785-33	SMALL FIXED INDUCTOR (0.47UH)		R11,12			RK73EB2E000J	CHIP R 0.0 J 1/4W	
L696			L41-1895-33	SMALL FIXED INDUCTOR (1.8UH)		R13			RK73GB2A000J	CHIP R 0.0 J 1/10W	
L697			L41-1085-14	SMALL FIXED INDUCTOR (100NH)		R14			RK73GB2A473J	CHIP R 47K J 1/10W	
L698			L40-1288-67	SMALL FIXED INDUCTOR (120NH)		R15			RK73GB2A103J	CHIP R 10K J 1/10W	
L801			L41-1095-33	SMALL FIXED INDUCTOR (1.0UH)		R16			RK73GB2A184J	CHIP R 180K J 1/10W	
L802,803			L41-1005-33	SMALL FIXED INDUCTOR (10UH)		R17			RK73GB2A103J	CHIP R 10K J 1/10W	
L804			L41-1585-33	SMALL FIXED INDUCTOR (0.15UH)		R18			RK73GB2A101J	CHIP R 100 J 1/10W	
L805			L41-2285-33	SMALL FIXED INDUCTOR (0.22UH)		R19			RK73GH2A124D	CHIP R 120K D 1/10W	
L806			L41-1005-33	SMALL FIXED INDUCTOR (10UH)		R20			RK73GH2A133D	CHIP R 13K D 1/10W	
L807			L41-2295-09	SMALL FIXED INDUCTOR (2200NH)		R22			RK73EB2E000J	CHIP R 0.0 J 1/4W	
L808			L41-1005-33	SMALL FIXED INDUCTOR (10UH)		R25			RK73FB2B000J	CHIP R 0.0 J 1/8W	
L809			L41-2798-08	SMALL FIXED INDUCTOR (2.7UH)		R26			RK73EB2E000J	CHIP R 0.0 J 1/4W	
L810			L34-4612-05	AIR-CORE COIL		R27			RK73GB2A473J	CHIP R 47K J 1/10W	
L811,812			L41-5698-08	SMALL FIXED INDUCTOR (5.6UH)		R28			RK73GB2A103J	CHIP R 10K J 1/10W	
L813			L40-3375-92	SMALL FIXED INDUCTOR (33NH)		R29			RK73EB2E000J	CHIP R 0.0 J 1/4W	
L814			L41-3375-33	SMALL FIXED INDUCTOR (0.033UH)		R30			RK73GB2A103J	CHIP R 10K J 1/10W	
L815			L41-1275-33	SMALL FIXED INDUCTOR (0.012UH)		R31			RK73EB2E000J	CHIP R 0.0 J 1/4W	
L816			L41-5675-33	SMALL FIXED INDUCTOR (0.056UH)		R33-36			RK73PB2H1R0J	CHIP R 1.0 J 1/2W	
L817			L92-0639-05	CHIP FERRITE		R37			RK73PB2H101J	CHIP R 100 J 1/2W	
L818			L41-3369-16	SMALL FIXED INDUCTOR (3.3NH)		R43,44		*	RK73PB2H6R8J	CHIP R 6.8 J 1/2W	
L819			L41-1005-33	SMALL FIXED INDUCTOR (10UH)		R45			RK73PB2H101J	CHIP R 100 J 1/2W	
L820		*	L41-6869-43	SMALL FIXED INDUCTOR (6.8NH)		R46			RK73GH2A333D	CHIP R 33K D 1/10W	
L821			L41-5675-33	SMALL FIXED INDUCTOR (0.056UH)		R47			RK73GH2A622D	CHIP R 6.2K D 1/10W	
L822			L41-1005-33	SMALL FIXED INDUCTOR (10UH)		R48			RK73GB2A000J	CHIP R 0.0 J 1/10W	
L823			L41-1275-33	SMALL FIXED INDUCTOR (0.012UH)		R49			RK73PB2H2R2J	CHIP R 2.2 J 1/2W	
L824		*	L39-1480-15	TOROIDAL COIL		R61,62			RK73GB2A000J	CHIP R 0.0 J 1/10W	
L825			L40-1588-67	SMALL FIXED INDUCTOR (150NH)		R63,64			RK73GB2A470J	CHIP R 47 J 1/10W	
L826			L40-1088-67	SMALL FIXED INDUCTOR (100NH)		R65-71			RK73GB2A101J	CHIP R 100 J 1/10W	
L827			L41-3391-08	SMALL FIXED INDUCTOR (3.3NH)		R72-74			RK73GB2A470J	CHIP R 47 J 1/10W	
L828			L40-8278-67	SMALL FIXED INDUCTOR (82NH)		R75			RK73GB2A223J	CHIP R 22K J 1/10W	
L829			L41-1895-33	SMALL FIXED INDUCTOR (1.8UH)		R77			RK73GB2A223J	CHIP R 22K J 1/10W	
L830-833			L41-1575-06	SMALL FIXED INDUCTOR (15NH)		R79,80			RK73GB2A334J	CHIP R 330K J 1/10W	
L840			L41-1895-33	SMALL FIXED INDUCTOR (1.8UH)		R81			RK73GB2A472J	CHIP R 4.7K J 1/10W	
L903-905			L92-0639-05	CHIP FERRITE		R82,83			RK73GB2A222J	CHIP R 2.2K J 1/10W	
L906			L41-2295-33	SMALL FIXED INDUCTOR (2.2UH)		R85			RK73GB2A184J	CHIP R 180K J 1/10W	
L907-913			L92-0639-05	CHIP FERRITE		R86,87			RK73GB2A223J	CHIP R 22K J 1/10W	
L916			L33-2375-05	CHOKE COIL		R88,89			RK73GB2A183J	CHIP R 18K J 1/10W	
L917		*	L33-1554-05	CHOKE COIL		R91,92			RK73GB2A103J	CHIP R 10K J 1/10W	
L919,920			L41-2295-33	SMALL FIXED INDUCTOR (2.2UH)		R94,95			RK73GB2A183J	CHIP R 18K J 1/10W	
X301		*	L77-3054-05	CRYSTAL RESONATOR (24.576MHZ)		R96,97			RK73GB2A223J	CHIP R 22K J 1/10W	
X302		*	L77-3069-05	CRYSTAL RESONATOR (11.0592MHZ)		R98-101			RK73GB2A183J	CHIP R 18K J 1/10W	
X502			L77-1906-05	CRYSTAL RESONATOR (15.6MHZ)		R104,105			RK73GB2A100J	CHIP R 10 J 1/10W	
X901		*	L77-3053-05	CRYSTAL RESONATOR (12MHZ)		R106			RK73GB2A682J	CHIP R 6.8K J 1/10W	
X902		*	L77-3052-05	CRYSTAL RESONATOR (24MHZ)		R108,109			RK73GB2A223J	CHIP R 22K J 1/10W	
CP301,302			RK74GB1J473J	CHIP-COM 47K J 1/16W		R110			RK73GB2A682J	CHIP R 6.8K J 1/10W	
CP304,305			RK74GB1J473J	CHIP-COM 47K J 1/16W		R111			RK73GB2A333J	CHIP R 33K J 1/10W	
CP310			RK74GB1J473J	CHIP-COM 47K J 1/16W		R112,113			RK73GB2A103J	CHIP R 10K J 1/10W	
CP314-316			RK74GB1J473J	CHIP-COM 47K J 1/16W		R115,116			RK73GB2A333J	CHIP R 33K J 1/10W	
CP317-320			RK74GB1J470J	CHIP-COM 47 J 1/16W		R117,118			RK73GB2A223J	CHIP R 22K J 1/10W	
CP321			RK75GB1JR00	CHIP-COM 0.00 1/16W		R119			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R1			RK73GB2A473J	CHIP R 47K J 1/10W		R120,121			RK73GB2A333J	CHIP R 33K J 1/10W	
R2			RK73GB2A000J	CHIP R 0.0 J 1/10W		R122			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R3			RK73EB2E000J	CHIP R 0.0 J 1/4W		R125,126			RK73GB2A220J	CHIP R 22 J 1/10W	
R4			RK73GB2A103J	CHIP R 10K J 1/10W		R127			RK73GB2A151J	CHIP R 150 J 1/10W	
R5			RK73GB2A184J	CHIP R 180K J 1/10W		R128			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R6			RK73GB2A103J	CHIP R 10K J 1/10W		R129			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R7			RK73GB2A101J	CHIP R 100 J 1/10W		R130			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R8			RK73GH2A393D	CHIP R 39K D 1/10W		R131			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R9			RK73GH2A123D	CHIP R 12K D 1/10W		R132			RK73GB2A000J	CHIP R 0.0 J 1/10W	
						R133			RK73GB2A104J	CHIP R 100K J 1/10W	

PARTS LIST

CONTROL UNIT (X53-446X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R134			RK73GB2A103J	CHIP R 10K J 1/10W		R249,250			RK73GB2A183J	CHIP R 18K J 1/10W	
R135			RK73GB2A102J	CHIP R 1.0K J 1/10W		R252,253			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R136			RK73GB2A103J	CHIP R 10K J 1/10W		R254			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R137			RK73GB2A000J	CHIP R 0.0 J 1/10W		R255,256			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R140			RK73GB2A472J	CHIP R 4.7K J 1/10W		R257			RK73GB2A103J	CHIP R 10K J 1/10W	
R141			RK73GB2A123J	CHIP R 12K J 1/10W		R258			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R142			RK73GB2A183J	CHIP R 18K J 1/10W		R259,260			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R143			RK73GB2A123J	CHIP R 12K J 1/10W		R261-266			RK73GB2A103J	CHIP R 10K J 1/10W	
R144			RK73GB2A223J	CHIP R 22K J 1/10W		R267,268			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R145			RK73GB2A822J	CHIP R 8.2K J 1/10W		R269			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R146-149			RK73GB2A223J	CHIP R 22K J 1/10W		R270-273			RK73GB2A473J	CHIP R 47K J 1/10W	
R152			RK73GB2A123J	CHIP R 12K J 1/10W		R300			RK73GB2A473J	CHIP R 47K J 1/10W	
R153			RK73GB2A183J	CHIP R 18K J 1/10W		R303			RK73GB2A101J	CHIP R 100 J 1/10W	
R154			RK73GB2A153J	CHIP R 15K J 1/10W		R306			RK73GB2A473J	CHIP R 47K J 1/10W	
R155			RK73GB2A223J	CHIP R 22K J 1/10W		R309			RK73GB2A470J	CHIP R 47 J 1/10W	
R158			RK73GB2A472J	CHIP R 4.7K J 1/10W		R312-314			RK73GB2A470J	CHIP R 47 J 1/10W	
R159			RK73GB2A822J	CHIP R 8.2K J 1/10W		R315			RK73GB2A473J	CHIP R 47K J 1/10W	
R160			RK73GB2A123J	CHIP R 12K J 1/10W		R316			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R161,162			RK73GB2A682J	CHIP R 6.8K J 1/10W		R317			RK73GB2A470J	CHIP R 47 J 1/10W	
R163			RK73GB2A183J	CHIP R 18K J 1/10W		R320			RK73GB2A470J	CHIP R 47 J 1/10W	
R164			RK73GB2A682J	CHIP R 6.8K J 1/10W		R321			RK73GB2A473J	CHIP R 47K J 1/10W	
R165			RK73GB2A123J	CHIP R 12K J 1/10W		R322			RK73GB2A470J	CHIP R 47 J 1/10W	
R166,167			RK73GB2A103J	CHIP R 10K J 1/10W		R323			RK73GB2A473J	CHIP R 47K J 1/10W	
R169,170			RK73GB2A393J	CHIP R 39K J 1/10W		R324			RK73GB2A470J	CHIP R 47 J 1/10W	
R171,172			RK73GB2A103J	CHIP R 10K J 1/10W		R325			RK73GB2A473J	CHIP R 47K J 1/10W	
R174-176			RK73GB2A103J	CHIP R 10K J 1/10W		R326			RK73GB2A470J	CHIP R 47 J 1/10W	
R177			RK73GB2A101J	CHIP R 100 J 1/10W		R327			RK73GB2A473J	CHIP R 47K J 1/10W	
R178			RK73GB2A471J	CHIP R 470 J 1/10W		R328			RK73GB2A470J	CHIP R 47 J 1/10W	
R179			RK73GB2A104J	CHIP R 100K J 1/10W		R329			RK73GB2A473J	CHIP R 47K J 1/10W	
R181			RK73GB2A104J	CHIP R 100K J 1/10W		R330			RK73GB2A470J	CHIP R 47 J 1/10W	
R182			RK73GB2A822J	CHIP R 8.2K J 1/10W		R331			RK73GB2A473J	CHIP R 47K J 1/10W	
R183,184			RK73GB2A183J	CHIP R 18K J 1/10W		R332,333			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R185,186			RK73GB2A223J	CHIP R 22K J 1/10W		R334-336			RK73GB2A470J	CHIP R 47 J 1/10W	
R188,189			RK73GB2A183J	CHIP R 18K J 1/10W		R339			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R190			RK73GB2A822J	CHIP R 8.2K J 1/10W		R341			RK73GB2A473J	CHIP R 47K J 1/10W	
R192-194			RK73GB2A183J	CHIP R 18K J 1/10W		R343			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R195,196			RK73GB2A223J	CHIP R 22K J 1/10W		R344			RK73GB2A470J	CHIP R 47 J 1/10W	
R198			RK73GB2A822J	CHIP R 8.2K J 1/10W		R345-348			RK73GB2A473J	CHIP R 47K J 1/10W	
R199,200			RK73GB2A683J	CHIP R 68K J 1/10W		R355			RK73GB2A473J	CHIP R 47K J 1/10W	
R205-207			RK73GB2A183J	CHIP R 18K J 1/10W		R357			RK73GB2A473J	CHIP R 47K J 1/10W	
R208,209			RK73GB2A223J	CHIP R 22K J 1/10W		R365			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R211-213			RK73GB2A183J	CHIP R 18K J 1/10W		R366			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R214			RK73GB2A000J	CHIP R 0.0 J 1/10W		R367			RK73GB2A473J	CHIP R 47K J 1/10W	
R216			RK73GB2A103J	CHIP R 10K J 1/10W		R370			RK73GB2A330J	CHIP R 33 J 1/10W	
R217,218			RK73GB2A223J	CHIP R 22K J 1/10W		R372			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R222			RK73GB2A104J	CHIP R 100K J 1/10W		R375			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R223			RK73GB2A103J	CHIP R 10K J 1/10W		R378			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R224			RK73GB2A102J	CHIP R 1.0K J 1/10W		R380,381			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R226,227			RK73GB2A223J	CHIP R 22K J 1/10W		R382			RK73GB2A473J	CHIP R 47K J 1/10W	
R229-234			RK73GB2A183J	CHIP R 18K J 1/10W		R383			RK73GB2A101J	CHIP R 100 J 1/10W	
R236			RK73GB2A223J	CHIP R 22K J 1/10W		R384-386			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R237			RK73GB2A183J	CHIP R 18K J 1/10W		R387			RK73GB2A101J	CHIP R 100 J 1/10W	
R238			RK73GB2A223J	CHIP R 22K J 1/10W		R388			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R239,240			RK73GB2A183J	CHIP R 18K J 1/10W		R389			RK73GB2A154J	CHIP R 150K J 1/10W	
R242			RK73GB2A473J	CHIP R 47K J 1/10W		R390			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R243			RK73GB2A103J	CHIP R 10K J 1/10W		R391			RK73GB2A473J	CHIP R 47K J 1/10W	
R244			RK73GB2A473J	CHIP R 47K J 1/10W		R393			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R246			RK73GB2A223J	CHIP R 22K J 1/10W		R394,395			RK73GB2A473J	CHIP R 47K J 1/10W	
R247			RK73GB2A183J	CHIP R 18K J 1/10W		R397-399			RK73GB2A102J	CHIP R 1.0K J 1/10W	E
R248			RK73GB2A223J	CHIP R 22K J 1/10W		R397,398			RK73GB2A102J	CHIP R 1.0K J 1/10W	K

PARTS LIST

CONTROL UNIT (X53-446X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R403			RK73GB2A473J	CHIP R 47K J 1/10W		R612			RK73GB2A104J	CHIP R 100K J 1/10W	
R405			RK73GB2A102J	CHIP R 1.0K J 1/10W		R614			RK73GB2A391J	CHIP R 390 J 1/10W	
R406			RK73GB2A473J	CHIP R 47K J 1/10W		R615			RK73GB2A470J	CHIP R 47 J 1/10W	
R407			RK73GB2A101J	CHIP R 100 J 1/10W		R616,617			RK73GB2A153J	CHIP R 15K J 1/10W	
R408-411			RK73GB2A473J	CHIP R 47K J 1/10W		R618			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R412,413			RK73GB2A105J	CHIP R 1.0M J 1/10W		R619			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R414			RK73GB2A473J	CHIP R 47K J 1/10W		R621			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R415,416			RK73GB2A103J	CHIP R 10K J 1/10W		R624			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R417,418			RK73GB2A101J	CHIP R 100 J 1/10W		R625			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R419-423			RK73GB2A473J	CHIP R 47K J 1/10W		R626			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R424			RK73GB2A000J	CHIP R 0.0 J 1/10W		R627			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R425			RK73GB2A103J	CHIP R 10K J 1/10W		R630			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R426			RK73GB2A183J	CHIP R 18K J 1/10W		R632			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R439-494			RK73GB2A101J	CHIP R 100 J 1/10W		R633,634			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R495			RK73GB2A473J	CHIP R 47K J 1/10W		R636-640			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R497			RK73GB2A473J	CHIP R 47K J 1/10W		R648			RK73GB2A821J	CHIP R 820 J 1/10W	
R498			RK73GB2A472J	CHIP R 4.7K J 1/10W		R649,650			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R499			RK73GB2A473J	CHIP R 47K J 1/10W		R651-654			RK73GB2A101J	CHIP R 100 J 1/10W	
R501-527			RK73GB2A101J	CHIP R 100 J 1/10W		R655			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R528			RK73GB2A103J	CHIP R 10K J 1/10W		R657			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R530			RK73GB2A223J	CHIP R 22K J 1/10W		R658,659			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R531			RK73GB2A101J	CHIP R 100 J 1/10W		R660			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R532			RK73GB2A222J	CHIP R 2.2K J 1/10W		R661,662			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R537			RK73GB2A100J	CHIP R 10 J 1/10W		R663			RK73GB2A821J	CHIP R 820 J 1/10W	
R538			RK73GB2A101J	CHIP R 100 J 1/10W		R667			RK73GB2A104J	CHIP R 100K J 1/10W	
R539			RK73GB2A822J	CHIP R 8.2K J 1/10W		R668			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R540			RK73GB2A153J	CHIP R 15K J 1/10W		R669			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R541			RK73GB2A391J	CHIP R 390 J 1/10W		R671			RK73GB2A821J	CHIP R 820 J 1/10W	
R542			RK73GB2A181J	CHIP R 180 J 1/10W		R672-676			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R543			RK73GB2A224J	CHIP R 220K J 1/10W		R679			RK73GB2A471J	CHIP R 470 J 1/10W	
R544			RK73GB2A470J	CHIP R 47 J 1/10W		R680			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R545-547			RK73GB2A180J	CHIP R 18 J 1/10W		R681			RK73GB2A120J	CHIP R 12 J 1/10W	
R548			RK73GB2A153J	CHIP R 15K J 1/10W		R682			RK73GB2A821J	CHIP R 820 J 1/10W	
R549			RK73GB2A682J	CHIP R 6.8K J 1/10W		R684			RK73GB2A471J	CHIP R 470 J 1/10W	
R550			RK73GB2A470J	CHIP R 47 J 1/10W		R685			RK73GB2A271J	CHIP R 270 J 1/10W	
R551			RK73GB2A271J	CHIP R 270 J 1/10W		R686			RK73GB2A121J	CHIP R 120 J 1/10W	
R552			RK73GB2A470J	CHIP R 47 J 1/10W		R687			RK73GB2A151J	CHIP R 150 J 1/10W	
R553			RK73GB2A153J	CHIP R 15K J 1/10W		R688			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R554			RK73GB2A682J	CHIP R 6.8K J 1/10W		R689			RK73GB2A121J	CHIP R 120 J 1/10W	
R555			RK73GB2A271J	CHIP R 270 J 1/10W		R690			RK73GB2A180J	CHIP R 18 J 1/10W	
R556,557			RK73GB2A180J	CHIP R 18 J 1/10W		R691			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R558			RK73GB2A470J	CHIP R 47 J 1/10W		R692			RK73GB2A470J	CHIP R 47 J 1/10W	
R559,560			RK73GB2A682J	CHIP R 6.8K J 1/10W		R693			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R561			RK73GB2A101J	CHIP R 100 J 1/10W		R694			RK73GB2A390J	CHIP R 39 J 1/10W	
R562			RK73GB2A102J	CHIP R 1.0K J 1/10W		R695			RK73GB2A470J	CHIP R 47 J 1/10W	
R563			RK73GB2A820J	CHIP R 82 J 1/10W		R696			RK73GB2A271J	CHIP R 270 J 1/10W	
R564			RK73GB2A121J	CHIP R 120 J 1/10W		R697			RK73GB2A121J	CHIP R 120 J 1/10W	
R565			RK73GB2A820J	CHIP R 82 J 1/10W		R698,699			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R567			RK73GB2A101J	CHIP R 100 J 1/10W		R700			RK73GB2A121J	CHIP R 120 J 1/10W	
R568			RK73GB2A102J	CHIP R 1.0K J 1/10W		R701			RK73GB2A151J	CHIP R 150 J 1/10W	
R569			RK73GB2A272J	CHIP R 2.7K J 1/10W		R702			RK73GB2A153J	CHIP R 15K J 1/10W	
R601			RK73GB2A561J	CHIP R 560 J 1/10W		R704			RK73GB2A821J	CHIP R 820 J 1/10W	
R602			RK73GB2A683J	CHIP R 68K J 1/10W		R705,706			RK73GB2A470J	CHIP R 47 J 1/10W	
R604			RK73GB2A000J	CHIP R 0.0 J 1/10W		R707			RK73GB2A101J	CHIP R 100 J 1/10W	
R605			RK73GB2A102J	CHIP R 1.0K J 1/10W		R708			RK73GB2A104J	CHIP R 100K J 1/10W	
R606			RK73GB2A392J	CHIP R 3.9K J 1/10W		R711			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R607,608			RK73GB2A102J	CHIP R 1.0K J 1/10W		R713			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R609			RK73GB2A560J	CHIP R 56 J 1/10W		R714,715			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R610			RK73GB2A331J	CHIP R 330 J 1/10W		R716			RK73GB2A271J	CHIP R 270 J 1/10W	
R611			RK73GB2A101J	CHIP R 100 J 1/10W		R718			RK73GB2A180J	CHIP R 18 J 1/10W	

PARTS LIST

CONTROL UNIT (X53-446X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R720			RK73GB2A271J	CHIP R 270 J 1/10W		R876			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R722			RK73GB2A152J	CHIP R 1.5K J 1/10W		R878			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R724			RK73GB2A821J	CHIP R 820 J 1/10W		R879			RK73GB2A101J	CHIP R 100 J 1/10W	
R725			RK73GB2A102J	CHIP R 1.0K J 1/10W		R880			RK73GB2A680J	CHIP R 68 J 1/10W	
R727			RK73GB2A104J	CHIP R 100K J 1/10W		R881			RK73GB2A101J	CHIP R 100 J 1/10W	
R728			RK73GB2A152J	CHIP R 1.5K J 1/10W		R882			RK73GB2A100J	CHIP R 10 J 1/10W	
R729			RK73GB2A821J	CHIP R 820 J 1/10W		R883			RK73GB2A101J	CHIP R 100 J 1/10W	
R801			RK73GB2A000J	CHIP R 0.0 J 1/10W		R884			RK73GB2A123J	CHIP R 12K J 1/10W	
R802			RK73GB2A180J	CHIP R 18 J 1/10W		R885			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R803			RK73GB2A000J	CHIP R 0.0 J 1/10W		R886			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R804			RK73GB2A470J	CHIP R 47 J 1/10W		R900-904			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R805			RK73GB2A153J	CHIP R 15K J 1/10W		R905,906			RK73GB2A101J	CHIP R 100 J 1/10W	
R806			RK73GB2A682J	CHIP R 6.8K J 1/10W		R907			RK73GB2A104J	CHIP R 100K J 1/10W	
R807			RK73GB2A272J	CHIP R 2.7K J 1/10W		R908,909			RK73GB2A101J	CHIP R 100 J 1/10W	
R808			RK73GB2A101J	CHIP R 100 J 1/10W		R910-913			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R809			RK73GB2A221J	CHIP R 220 J 1/10W		R914			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R810			RK73GB2A104J	CHIP R 100K J 1/10W		R915			RK73GB2A223J	CHIP R 22K J 1/10W	
R811			RK73GB2A000J	CHIP R 0.0 J 1/10W		R916,917			RK73GB2A103J	CHIP R 10K J 1/10W	
R812			RK73GB2A472J	CHIP R 4.7K J 1/10W		R918,919			RK73GB2A153J	CHIP R 15K J 1/10W	
R813			RK73GB2A221J	CHIP R 220 J 1/10W		R920			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R815			RK73GB2A103J	CHIP R 10K J 1/10W		R921,922			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R816			RK73GB2A000J	CHIP R 0.0 J 1/10W		R923,924			RK73GB2A220J	CHIP R 22 J 1/10W	
R818,819			RK73GB2A122J	CHIP R 1.2K J 1/10W		R925			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R820,821			RK73GB2A101J	CHIP R 100 J 1/10W		R926			RK73GB2A103J	CHIP R 10K J 1/10W	
R822,823			RK73GB2A153J	CHIP R 15K J 1/10W		R927			RK73GB2A151J	CHIP R 150 J 1/10W	
R824			RK73GB2A472J	CHIP R 4.7K J 1/10W		R928			RK73GB2A101J	CHIP R 100 J 1/10W	
R825-829			RK73GB2A101J	CHIP R 100 J 1/10W		R929			RK73GB2A103J	CHIP R 10K J 1/10W	
R832			RK73GB2A473J	CHIP R 47K J 1/10W		R930			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R833			RK73GB2A470J	CHIP R 47 J 1/10W		R931			RK73GH2A123D	CHIP R 12K D 1/10W	
R835			RK73GB2A180J	CHIP R 18 J 1/10W		R932			RK73GB2A103J	CHIP R 10K J 1/10W	
R836			RK73GB2A104J	CHIP R 100K J 1/10W		R933,934			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R837			RN73GH1J221D	CHIP R 220 D 1/16W		R935			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R838,839			RK73GB2A180J	CHIP R 18 J 1/10W		R937			RK73GB2A103J	CHIP R 10K J 1/10W	
R840			RN73GH1J151D	CHIP R 150 D 1/16W		R939			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R841			RK73GB2A470J	CHIP R 47 J 1/10W		R941			RK73GB2A473J	CHIP R 47K J 1/10W	
R843			RK73GB2A102J	CHIP R 1.0K J 1/10W		R943			RK73GB2A473J	CHIP R 47K J 1/10W	
R844			RK73GB2A101J	CHIP R 100 J 1/10W		R946			RK73GB2A473J	CHIP R 47K J 1/10W	
R846			RK73GB2A273J	CHIP R 27K J 1/10W		R947			RK73GB2A104J	CHIP R 100K J 1/10W	
R847			RK73GB2A393J	CHIP R 39K J 1/10W		R948			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R849			RK73GB2A102J	CHIP R 1.0K J 1/10W		R949			RK73GB2A103J	CHIP R 10K J 1/10W	
R850,851			RK73GB2A153J	CHIP R 15K J 1/10W		R950,951			RK73GB2A104J	CHIP R 100K J 1/10W	
R852			RK73GB2A101J	CHIP R 100 J 1/10W		R952			RK73GB2A473J	CHIP R 47K J 1/10W	
R853			RK73GB2A331J	CHIP R 330 J 1/10W		R953			RK73GB2A103J	CHIP R 10K J 1/10W	
R854			RK73GB2A101J	CHIP R 100 J 1/10W		R957			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R856			RK73GB2A000J	CHIP R 0.0 J 1/10W		R958,959			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R858,859			RK73GB2A000J	CHIP R 0.0 J 1/10W		R960-963			RK73GB2A101J	CHIP R 100 J 1/10W	
R860			RK73GB2A102J	CHIP R 1.0K J 1/10W		R968			R92-1061-05	JUMPER REST 0 OHM	E
R861			RK73GB2A101J	CHIP R 100 J 1/10W		R970,971			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R863			RK73GB2A000J	CHIP R 0.0 J 1/10W							
R864,865			RK73GB2A151J	CHIP R 150 J 1/10W		D1,2			RB060L-40	DIODE	
R866			RK73GB2A000J	CHIP R 0.0 J 1/10W		D3-6			1SR154-400	DIODE	
R867			RK73GB2A101J	CHIP R 100 J 1/10W		D7-9			1SS348-F	DIODE	
R868			RK73GB2A000J	CHIP R 0.0 J 1/10W		D61			MINISMDC05002F	VARISTOR	
R869			RK73GB2A101J	CHIP R 100 J 1/10W		D62			1SS355	DIODE	
R870			RK73GB2A000J	CHIP R 0.0 J 1/10W		D101			1SS388F	DIODE	
R871			RK73GB2A101J	CHIP R 100 J 1/10W		D301			02DZ6.2F-Y	ZENER DIODE	
R872			RK73GB2A000J	CHIP R 0.0 J 1/10W		D302			1SS348-F	DIODE	
R873			RK73GB2A470J	CHIP R 47 J 1/10W		D304			1SR139-400	DIODE	
R874			RK73GB2A392J	CHIP R 3.9K J 1/10W		D501			HVC131	DIODE	
R875			RK73GB2A180J	CHIP R 18 J 1/10W		D651			HVC131	DIODE	

PARTS LIST

CONTROL UNIT (X53-446X-XX)
DISPLAY UNIT (X54-3700-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
D652			RB715F	DIODE		IC803		*	AD9951YSVZ	MOS-IC	
D653-655			HVC131	DIODE		IC804			UPC2710TB-A	ANALOGUE IC	
D656		*	MC2858-T111	DIODE		IC901			ADM3202ARUZ	MOS-IC	
D657			HVC131	DIODE		IC902			TC75S51FE(F)	MOS-IC	
D659-663			HVC131	DIODE		IC903		*	PCM2903B	MOS-IC	
D664-666			HSC277	DIODE		IC904			TC7SH08FU-F	MOS-IC	
D667			1SV312-F	DIODE		IC905		*	USB2512BI	MOS-IC	
D668-671			HVC131	DIODE		IC906		*	CP2102SX0567	MOS-IC	
D672		*	MC2858-T111	DIODE		Q1			RT1N141U-T111	TRANSISTOR	
D673			HSC277	DIODE		Q2,3		*	TPC6111-F	FET	
D675			HSC277	DIODE		Q4			RT1N430M-T111	TRANSISTOR	
D677,678			HSC277	DIODE		Q61			2SC5566-E	TRANSISTOR	
D679-681			HVC131	DIODE		Q62			2SK1824-A	FET	
D682,683			HSC277	DIODE		Q63		*	RT1N234U-T111	TRANSISTOR	
D801-803			1SV283F	VARIABLE CAPACITANCE DIODE		Q64		*	RT5P431C-T112	TRANSISTOR	
D901		*	RSB12JS2	ZENER DIODE		Q65			2SC5383-T111	TRANSISTOR	
D902			HZU3BLL	ZENER DIODE		Q66		*	RT1N234U-T111	TRANSISTOR	
D903			1SS388F	DIODE		Q67		*	RT5P431C-T112	TRANSISTOR	
IC1,2			LT3685EMSE	ANALOGUE IC		Q501,502			2SC5383-T111	TRANSISTOR	
IC3			BA00DD0WHFP	ANALOGUE IC		Q503			2SC5108(Y)F	TRANSISTOR	
IC4			TA48M033F-F	ANALOGUE IC		Q504,505			2SC4617(R)	TRANSISTOR	
IC5			TA4805BF	MOS-IC		Q506			2SC4649(N,P)	TRANSISTOR	
IC6		*	XC6220B12BPR-G	MOS-IC		Q601,602			2SC5383-T111	TRANSISTOR	
IC61-65			NJM2732V	BI-POLAR IC		Q651			RT1P141U-T111	TRANSISTOR	
IC66		*	AK5385BVF	MOS-IC		Q652			RT1N441U-T111	TRANSISTOR	
IC67			LA4425A	MOS-IC		Q653			RT1P141U-T111	TRANSISTOR	
IC68			TC7W66FK-F	MOS-IC		Q654			RT1N441U-T111	TRANSISTOR	
IC69-71			NJM2732V	BI-POLAR IC		Q655			RT1P141U-T111	TRANSISTOR	
IC72			AK4382AVT	MOS-IC		Q656			RT1N441U-T111	TRANSISTOR	
IC73,74			NJM2100V-ZB	MOS-IC		Q657			RT1P141U-T111	TRANSISTOR	
IC75			AK4387ET	MOS-IC		Q658			RT1N441U-T111	TRANSISTOR	
IC76,77			NJM2100V-ZB	MOS-IC		Q659			RT1P141U-T111	TRANSISTOR	
IC78			AK4387ET	MOS-IC		Q660			RT1N441U-T111	TRANSISTOR	
IC79			NJM2732V	BI-POLAR IC		Q661			RT1P141U-T111	TRANSISTOR	
IC80			TC7W66FK-F	MOS-IC		Q662			RT1N441U-T111	TRANSISTOR	
IC81			NJM2732V	BI-POLAR IC		Q663			2SC5108(Y)F	TRANSISTOR	
IC82			NJM2100V-ZB	MOS-IC		Q664			RN47A5-F	TRANSISTOR	
IC83		*	WM8782SEDSRV	MOS-IC		Q801			2SC4649(N,P)	TRANSISTOR	
IC301		*	DC6726BRFPA225	MICROPROCESSOR IC		Q802			2SJ243-A	FET	
IC302		*	29LV800CBKDNA	ROM IC		Q803			UMX2N	TRANSISTOR	
IC304			TC7SH32FU-F	MOS-IC		Q804			2SC5108(Y)F	TRANSISTOR	
IC305			TC7SH00FU-F	MOS-IC		Q805			2SC5383-T111	TRANSISTOR	
IC306		*	F3651RDFCKDTA	MICROCONTROLLER IC		Q806			MCH3914(7)-H	FET	
IC307			BU4829FVE	MOS-IC		Q807,808			2SC5108(Y)F	TRANSISTOR	
IC308			TC7SH32FU-F	MOS-IC		Q901			RN47A5-F	TRANSISTOR	
IC309		*	HN58X25128FPIE	ROM IC		Q902-904			HN7G01FU-F	TRANSISTOR	
IC310			TC74HC4052AFT	MOS-IC		DISPLAY UNIT (X54-3700-00)					
IC311			HD74LV541AT	MOS-IC		301	1E	*	B11-1878-02	ILLUMINATION GUIDE	
IC312			HD74LV2G34AUS	MOS-IC		302	1E	*	B11-1882-03	FILTER	
IC313			TC7WT125FUF	MOS-IC		303	1E	*	B38-0934-05	LCD	
IC314			HD74LV2G34AUS	MOS-IC		D101-115		*	B30-2323-05	LED (GREEN)	
IC315			BU4829FVE	MOS-IC		D123-160		*	B30-2323-05	LED (GREEN)	
IC316,317			TC7SH32FU-F	MOS-IC		D161-213		*	B30-2322-05	LED (AMBER)	
IC501,502			TC7WT125FUF	MOS-IC		D214			B30-2167-05	LED (GR)	
IC504			TA4805BF	MOS-IC		D215			B30-2168-05	LED (R)	
IC505			TA48M033F-F	ANALOGUE IC		D216		*	B30-2323-05	LED (GREEN)	
IC601			AD9835BRUZ	MOS-IC		D217		*	B30-2322-05	LED (AMBER)	
IC651			TC74HC4094AFF	MOS-IC							
IC801		*	ADF4111BRUZ	MOS-IC							
IC802		*	XC6219B182PR-G	MOS-IC							

PARTS LIST

DISPLAY UNIT (X54-3700-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
D961			B30-2146-05	LED (OR)		X101		*	L77-3069-05	CRYSTAL RESONATOR (11.0592MHZ)	
C101			CK73GB1H102K	CHIP C 1000PF K		CP101,102			RK74GB1J102J	CHIP-COM 1.0K J 1/16W	
C102			CK73FB0J106K	CHIP C 10UF K		CP103,104			RK74GB1J103J	CHIP-COM 10K J 1/16W	
C103			CK73GB1H102K	CHIP C 1000PF K		CP105			RK74GB1J473J	CHIP-COM 47K J 1/16W	
C104			CK73FB0J106K	CHIP C 10UF K		CP106			RK74GB1J101J	CHIP-COM 100 J 1/16W	
C105,106			CK73GB1H104K	CHIP C 0.10UF K		CP107			RK74GB1J473J	CHIP-COM 47K J 1/16W	
C107			CK73GB1H103K	CHIP C 0.010UF K		R101,102			RK73GB2A472J	CHIP R 4.7K J 1/10W	
C108			CK73GB1H471K	CHIP C 470PF K		R103			RK73GB2A473J	CHIP R 47K J 1/10W	
C109			CK73GB1H102K	CHIP C 1000PF K		R104			RK73GB2A472J	CHIP R 4.7K J 1/10W	
C110-112			CK73GB1H104K	CHIP C 0.10UF K		R105			RK73GB2A103J	CHIP R 10K J 1/10W	
C113			CK73GB1H102K	CHIP C 1000PF K		R106-108			RK73GB2A680J	CHIP R 68 J 1/10W	
C114			CK73GB1H104K	CHIP C 0.10UF K		R109			RK73GB2A103J	CHIP R 10K J 1/10W	
C115			C93-0912-05	CHIP C 100UF M		R110,111			RK73GB2A680J	CHIP R 68 J 1/10W	
C116			CK73GB1H102K	CHIP C 1000PF K		R112			RK73GB2A000J	CHIP R 0.0 J 1/10W	
C117,118			CC73GB1H030B	CHIP C 3.0PF B		R113-119			RK73GB2A680J	CHIP R 68 J 1/10W	
C119-121			CK73GB1H104K	CHIP C 0.10UF K		R120			RK73GB2A473J	CHIP R 47K J 1/10W	
C122-124			CK73GB1H102K	CHIP C 1000PF K		R121			RK73GB2A103J	CHIP R 10K J 1/10W	
C125			CK73GB1A105K	CHIP C 1.0UF K		R122,123			RK73GB2A680J	CHIP R 68 J 1/10W	
C126,127			CK73GB1H102K	CHIP C 1000PF K		R124			RK73GB2A000J	CHIP R 0.0 J 1/10W	
C128			CK73GB1A105K	CHIP C 1.0UF K		R125			RK73GB2A680J	CHIP R 68 J 1/10W	
C129-136			CK73GB1H102K	CHIP C 1000PF K		R126,127			RK73GB2A473J	CHIP R 47K J 1/10W	
C137			CK73GB1A105K	CHIP C 1.0UF K		R128			RK73GB2A680J	CHIP R 68 J 1/10W	
C138-150			CK73GB1H102K	CHIP C 1000PF K		R130			RK73GB2A473J	CHIP R 47K J 1/10W	
C151-153			CE32BM1C101M	CHIP EL 100UF 16VV		R131,132			RK73GB2A680J	CHIP R 68 J 1/10W	
C154,155			C93-0912-05	CHIP C 100UF M		R133-135			RK73GB2A473J	CHIP R 47K J 1/10W	
C157			CK73GB1H222K	CHIP C 2200PF K		R136			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C159			CK73GB1H222K	CHIP C 2200PF K		R137			RK73GB2A473J	CHIP R 47K J 1/10W	
C161			CK73GB1H222K	CHIP C 2200PF K		R138			RK73GB2A000J	CHIP R 0.0 J 1/10W	
C163			CK73GB1H222K	CHIP C 2200PF K		R139-141			RK73GB2A473J	CHIP R 47K J 1/10W	
C164			CK73GB1H103K	CHIP C 0.010UF K		R142			RK73GB2A121J	CHIP R 120 J 1/10W	
C169			CK73GB1H103K	CHIP C 0.010UF K		R143			RK73GB2A000J	CHIP R 0.0 J 1/10W	
C171			CK73GB1H103K	CHIP C 0.010UF K		R144,145			RK73GB2A121J	CHIP R 120 J 1/10W	
C950,951			CK73GB1H103K	CHIP C 0.010UF K		R146			RK73GB2A103J	CHIP R 10K J 1/10W	
C952-955			CK73FB1C105K	CHIP C 1.0UF K		R147,148			RK73GB2A121J	CHIP R 120 J 1/10W	
C956-959			CK73GB1H103K	CHIP C 0.010UF K		R149			RK73GB2A000J	CHIP R 0.0 J 1/10W	
C973			CK73GB1A474K	CHIP C 0.47UF K		R150-153			RK73GB2A121J	CHIP R 120 J 1/10W	
304	2F		E23-1176-04	EARTH LUG		R154-159			RK73GB2A473J	CHIP R 47K J 1/10W	
305	1E	*	E29-1230-04	INTER CONNECTOR		R160			RK73GB2A105J	CHIP R 1.0M J 1/10W	
306	2F		E37-1511-05	PROCESSED LEAD WIRE		R161			RK73GB2A154J	CHIP R 150K J 1/10W	
CN101			E40-6727-05	FLAT CABLE CONNECTOR		R162,163			RK73GB2A102J	CHIP R 1.0K J 1/10W	
CN102			E40-6527-05	PIN ASSY		R164-166			RK73GB2A121J	CHIP R 120 J 1/10W	
CN103			E41-1684-05	PIN ASSY		R167			RK73GB2A103J	CHIP R 10K J 1/10W	
CN104		*	E41-1775-05	PIN ASSY		R168,169			RK73GB2A121J	CHIP R 120 J 1/10W	
CN105			E40-6765-05	PIN ASSY		R170			RK73GB2A000J	CHIP R 0.0 J 1/10W	
CN106			E40-6708-05	PIN ASSY		R171			RK73GB2A105J	CHIP R 1.0M J 1/10W	
CN107		*	E40-6879-05	FLAT CABLE CONNECTOR		R172			RK73GB2A121J	CHIP R 120 J 1/10W	
CN951			E41-1687-05	PIN ASSY		R173			RK73GB2A473J	CHIP R 47K J 1/10W	
CN953			E40-6766-05	PIN ASSY		R174			RK73GB2A000J	CHIP R 0.0 J 1/10W	
CN964			E41-1701-05	PIN ASSY		R175-177			RK73GB2A121J	CHIP R 120 J 1/10W	
CN965		*	E41-1775-05	PIN ASSY		R178			RK73GB2A102J	CHIP R 1.0K J 1/10W	
CN966			E40-6710-05	PIN ASSY		R179,180			RK73GB2A561J	CHIP R 560 J 1/10W	
J950	2F		E06-0858-25	RF COAXIAL RECEPTACLE (ROUND)		R181-190			RK73GB2A101J	CHIP R 100 J 1/10W	
J951	2F	*	E11-0705-15	PHONE JACK (9P)		R191,192			RK73GB2A473J	CHIP R 47K J 1/10W	
307	1E	*	J21-8620-13	MOUNTING HARDWARE		R193-209			RK73GB2A101J	CHIP R 100 J 1/10W	
L101-105			L92-0639-05	CHIP FERRITE		R210,211			RK73GB2A470J	CHIP R 47 J 1/10W	
L106		*	L33-1556-05	CHOKE COIL		R212-215			RK73GB2A101J	CHIP R 100 J 1/10W	
L107,108		*	L33-1554-05	CHOKE COIL		R216			RK73GB2A121J	CHIP R 120 J 1/10W	
L109		*	L92-0639-05	CHIP FERRITE		R217			RK73GB2A000J	CHIP R 0.0 J 1/10W	
						R218-221			RK73GB2A102J	CHIP R 1.0K J 1/10W	

PARTS LIST

DISPLAY UNIT (X54-3700-00)
TX-RX UNIT (X57-785X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation	Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
R952-955 R975 R977 VR953,954	1F	*	RK73FB2B470J R92-1205-05 R92-1205-05 R31-0677-05	CHIP R 47 J 1/8W CHIP R 120 J 1/4W CHIP R 120 J 1/4W VARIABLE RESISTOR		C107 C108 C109 C110 C111			CC73GCH1H560J CK73GB1H102K CC73GCH1H090D CC73GCH1H560J CK73GB1H104K	CHIP C 56PF J CHIP C 1000PF K CHIP C 9.0PF D CHIP C 56PF J CHIP C 0.10UF K	
S101-156			S70-0475-15	TACT SWITCH		C112 C113 C114 C115-118 C119			CK73EB1H104K CK73GB1H102K CK73EB1H104K CK73GB1H103K CK73GB1E105K	CHIP C 0.10UF K CHIP C 1000PF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 1.0UF K	
S952	2F		T99-0653-05	ROTARY ENCODER		C120 C121 C122 C123 C127			CK73GB1H104K CC73GCH1H152J CC73FCH1H472J CC73GCH1H152J CC73GCH1H180J	CHIP C 0.10UF K CHIP C 1500PF J CHIP C 4700PF J CHIP C 1500PF J CHIP C 18PF J	
D116-122 D218 IC101 IC102 IC103		*	MA2S111-F 1SS388F LC75897PW TC7W125FU-F F364AEDFBKDUA	DIODE DIODE MOS-IC MOS-IC MICROCONTROLLER IC		C128,129 C130 C131 C132 C133			CC73GCH1H271J CC73GCH1H330J CC73GCH1H222J CC73FCH1H472J CC73GCH1H221J	CHIP C 270PF J CHIP C 33PF J CHIP C 2200PF J CHIP C 4700PF J CHIP C 220PF J	
IC104 IC105,106 Q101 Q102 Q103-105		*	TC7W125FU-F HD74LV2G34AUS 2SD2114K(W) RN47A5-F 2SD2114K(W)	MOS-IC MOS-IC TRANSISTOR TRANSISTOR TRANSISTOR		C134,135 C136 C137 C138 C139			CK73GB1H104K CC73GCH1H120J CC73GCH1H222J CK73GB1H103K CC73FCH1H392J	CHIP C 0.10UF K CHIP C 12PF J CHIP C 2200PF J CHIP C 0.010UF K CHIP C 3900PF J	
Q106 Q107			UMG1N RT1N141U-T111	TRANSISTOR TRANSISTOR		C140 C141 C142 C143 C144			CK73GB1H104K CC73GCH1H222J CK73GB1H104K CC73GCH1H102J CK73GB1H104K	CHIP C 0.10UF K CHIP C 2200PF J CHIP C 0.10UF J CHIP C 1000PF J CHIP C 0.10UF K	
S953	1F	*	W02-3737-05	ENCODER		C145 C146 C147 C148 C149			CC73GCH1H102J CK73GB1H104K CC73GCH1H102J CC73GCH1H102J CC73GCH1H271J	CHIP C 1000PF J CHIP C 0.10UF K CHIP C 1000PF J CHIP C 0.10UF K CHIP C 270PF J	
TX-RX UNIT (X57-785X-XX) 0-11: K 2-71: E						C150 C151 C152 C153 C154			CK73GB1H104K CC73GCH1H151J CK73GB1H104K CC73GCH1H220J CK73GB1H104K	CHIP C 0.10UF K CHIP C 150PF J CHIP C 0.10UF K CHIP C 22PF J CHIP C 0.10UF K	
D521 D810			B30-2001-05 B30-2001-05	LED (RE) LED (RE)		C155,156 C157 C158 C159 C160-166			CC73GCH1H102J CC73GCH1H100D CC73GCH1H040C CK73GB1E105K CC73GCH1H102J	CHIP C 1000PF J CHIP C 10PF D CHIP C 4.0PF C CHIP C 1.0UF K CHIP C 1000PF J	
C10,11 C12 C15 C17 C19			CK73GB1E105K CK73GB1H102K CK73GB1H103K CK73GB1H103K CK73GB1H103K	CHIP C 1.0UF K CHIP C 1000PF K CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 0.010UF K		C167,168 C169 C170 C171 C172			CK73GB1H104K CK73GB1H103K CK73GB1H223K CK73GB1E105K CC73GCH1H040C	CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.022UF K CHIP C 1.0UF K CHIP C 4.0PF C	
C21 C23 C25 C27 C39,40			CK73GB1H103K CK73GB1H103K CK73GB1H103K CK73GB1H103K CK73GB1H103K	CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 0.010UF K		C173 C174 C175 C176 C177			CC73GCH1H102J CC73GCH1H561J CC73GCH1H271J CC73GCH1H121J CC73GCH1H820J	CHIP C 1000PF J CHIP C 560PF J CHIP C 270PF J CHIP C 120PF J CHIP C 82PF J	
C42,43 C49,50 C52 C54 C56			CK73GB1H104K CK73GB1H104K CD04AZ1V101M CS77CA1A4R7M CK73GB1E105K	CHIP C 0.10UF K CHIP C 0.10UF K ELECTRO 100UF 35WV CHIP TNTL 4.7UF 10WV CHIP C 1.0UF K		C178 C179 C180 C181 C182			CC73GCH1H680J CC73GCH1H390J CC73GCH1H470J CC73GCH1H102J CC73GCH1H100D	CHIP C 68PF J CHIP C 39PF J CHIP C 47PF J CHIP C 1000PF J CHIP C 10PF D	
C57 C58 C59 C60 C61,62			CS77CA1A4R7M CK73FB1H102K CK73GB1H103K CK73GB1H102K CK73FB1H102K	CHIP TNTL 4.7UF 10WV CHIP C 1000PF K CHIP C 0.010UF K CHIP C 1000PF K CHIP C 1000PF K							
C63 C64,65 C66-78 C79 C80		*	CK73GB1H102K CK73GB1H103K CK73GB1H104K CK45FE3A222Z CK73FB1H103K	CHIP C 1000PF K CHIP C 0.010UF K CHIP C 0.10UF K CERAMIC 2200PF Z CHIP C 0.010UF K							
C81-83 C84 C85-88 C97 C98			CK73FB1H102K CK73GB1H103K CK73GB1H102K CK73GB1E105K CK73GB1H102K	CHIP C 1000PF K CHIP C 0.010UF K CHIP C 1000PF K CHIP C 1.0UF K CHIP C 1000PF K							
C101-104 C106			CK73GB1H103K CD04AZ1E471M	CHIP C 0.010UF K ELECTRO 470UF 25WV							

PARTS LIST

TX-RX UNIT (X57-785X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C183,184			CC73GCH1H102J	CHIP C 1000PF J		C281			CK73GB1H103K	CHIP C 0.010UF K	
C185			CK73GB1E105K	CHIP C 1.0UF K		C282,283			CK73GB1H104K	CHIP C 0.10UF K	
C186-190			CC73GCH1H102J	CHIP C 1000PF J		C284			CK73GB1H103K	CHIP C 0.010UF K	
C191			CK73GB1H102K	CHIP C 1000PF K		C286			CK73GB1H472K	CHIP C 4700PF K	
C192,193			CC73GCH1H102J	CHIP C 1000PF J		C287			CK73GB1H103K	CHIP C 0.010UF K	
C194,195			CK73GB1H103K	CHIP C 0.010UF K		C288			CK73GB1H104K	CHIP C 0.10UF K	
C196,197			CK73GB1H104K	CHIP C 0.10UF K		C289			CK73GB1H472K	CHIP C 4700PF K	
C198			CC73GCH1H060D	CHIP C 6.0PF D		C290			CK73GB1H104K	CHIP C 0.10UF K	
C199		*	CC73FCH1H332J	CHIP C 3300PF J		C301			CC73GCH1H150J	CHIP C 15PF J	
C200			CK73GB1H104K	CHIP C 0.10UF K		C302			CC73GCH1H390J	CHIP C 39PF J	
C201			CC73GCH1H222J	CHIP C 2200PF J		C303			CC73GCH1H470J	CHIP C 47PF J	
C202			CK73GB1H104K	CHIP C 0.10UF K		C305			CC73GCH1H220J	CHIP C 22PF J	
C203			CC73GCH1H102J	CHIP C 1000PF J		C307			CK73GB1H103K	CHIP C 0.010UF K	
C204			CK73GB1H104K	CHIP C 0.10UF K		C321			CC73GCH1H560J	CHIP C 56PF J	
C205			CC73GCH1H102J	CHIP C 1000PF J		C322			CC73GCH1H330J	CHIP C 33PF J	
C206			CK73GB1H104K	CHIP C 0.10UF K		C323			CC73GCH1H820J	CHIP C 82PF J	
C207			CC73GCH1H102J	CHIP C 1000PF J		C324			CC73GCH1H390J	CHIP C 39PF J	
C208			CK73GB1H104K	CHIP C 0.10UF K		C325			CC73GCH1H270J	CHIP C 27PF J	
C209			CC73GCH1H331J	CHIP C 330PF J		C326-328			CK73GB1H104K	CHIP C 0.10UF K	
C210			CK73GB1H104K	CHIP C 0.10UF K		C330			CK73GB1H103K	CHIP C 0.010UF K	
C211			CC73GCH1H181J	CHIP C 180PF J		C335			CC73GCH1H020C	CHIP C 2.0PF C	
C212			CK73GB1H104K	CHIP C 0.10UF K		C336			CK73GB1H104K	CHIP C 0.10UF K	
C214			CK73GB1H104K	CHIP C 0.10UF K		C337			CC73GCH1H471J	CHIP C 470PF J	
C215			CK73GB1E105K	CHIP C 1.0UF K		C338			CK73GB1H102K	CHIP C 1000PF K	
C216			CK73GB1H104K	CHIP C 0.10UF K		C339			CK73GB1H103K	CHIP C 0.010UF K	
C231			CK73GB1H103K	CHIP C 0.010UF K		C341			CK73GB1H102K	CHIP C 1000PF K	
C232			CK73GB1E105K	CHIP C 1.0UF K		C342			CC73GCH1H020C	CHIP C 2.0PF C	
C233			CC73GCH1H102J	CHIP C 1000PF J		C343,344			CC73GCH1H102J	CHIP C 1000PF J	
C234			CK73GB1E105K	CHIP C 1.0UF K		C350			CC73GCH1H180J	CHIP C 18PF J	
C235			CK73GB1H103K	CHIP C 0.010UF K		C351			CK73GB1H103K	CHIP C 0.010UF K	
C236			CC73GCH1H101J	CHIP C 100PF J		C352,353			CK73GB1H104K	CHIP C 0.10UF K	
C237			CK73GB1H104K	CHIP C 0.10UF K		C354			CC73GCH1H060D	CHIP C 6.0PF D	
C238			CK73GB1H102K	CHIP C 1000PF K		C355			CK73GB1H103K	CHIP C 0.010UF K	
C239			CK73GB1H472K	CHIP C 4700PF K		C356			CK73GB1H472K	CHIP C 4700PF K	
C240			CK73GB1E105K	CHIP C 1.0UF K		C357			CK73GB1H103K	CHIP C 0.010UF K	
C241,242			CK73GB1H103K	CHIP C 0.010UF K		C358,359			CK73GB1H104K	CHIP C 0.10UF K	
C243,244			CK73GB1E105K	CHIP C 1.0UF K		C360			CK73GB1H472K	CHIP C 4700PF K	
C245			CC73GCH1H102J	CHIP C 1000PF J		C361,362			CC73GCH1H270J	CHIP C 27PF J	
C246			CK73GB1H103K	CHIP C 0.010UF K		C363			CK73GB1H104K	CHIP C 0.10UF K	
C247			CK73GB1E105K	CHIP C 1.0UF K		C373			CK73GB1H102K	CHIP C 1000PF K	
C248			CC73GCH1H102J	CHIP C 1000PF J		C374,375			CC73GCH1H010C	CHIP C 1.0PF C	
C249			CK73GB1H103K	CHIP C 0.010UF K		C377			CK73GB1H102K	CHIP C 1000PF K	
C250			CC73GCH1H470J	CHIP C 47PF J		C391,392			CK73GB1H103K	CHIP C 0.010UF K	
C251,252			CC73GCH1H560J	CHIP C 56PF J		C395			CK73GB1E105K	CHIP C 1.0UF K	
C253			CC73GCH1H820J	CHIP C 82PF J		C396			CC73GCH1H090D	CHIP C 9.0PF D	
C254			CC73GCH1H680J	CHIP C 68PF J		C397			CK73GB1H103K	CHIP C 0.010UF K	
C255,256			CC73GCH1H330J	CHIP C 33PF J		C398			CK73GB1E105K	CHIP C 1.0UF K	
C257			CC73GCH1H151J	CHIP C 150PF J		C399			CK73GB1H103K	CHIP C 0.010UF K	
C258			CC73GCH1H470J	CHIP C 47PF J		C401			CK73GB1H103K	CHIP C 0.010UF K	
C259			CC73GCH1H221J	CHIP C 220PF J		C402			CC73GCH1H020C	CHIP C 2.0PF C	
C260			CC73GCH1H681J	CHIP C 680PF J		C412,413			CK73GB1H103K	CHIP C 0.010UF K	
C261-263			CK73GB1H104K	CHIP C 0.10UF K		C421			CK73GB1H103K	CHIP C 0.010UF K	
C265			CK73GB1H103K	CHIP C 0.010UF K		C423			CC73GCH1H220J	CHIP C 22PF J	
C266			CK73GB1H102K	CHIP C 1000PF K		C424-426			CK73GB1H103K	CHIP C 0.010UF K	
C268			CK73GB1H104K	CHIP C 0.10UF K		C428,429			CC73GCH1H330J	CHIP C 33PF J	
C269			CE32CL1C100M	CHIP EL 10UF 16WV		C431			CK73GB1H103K	CHIP C 0.010UF K	
C270			CK73GB1H104K	CHIP C 0.10UF K		C432			CK73GB1H102K	CHIP C 1000PF K	
C272			CC73GCH1H471J	CHIP C 470PF J		C433			CK73GB1H103K	CHIP C 0.010UF K	
C273			CK73GB1H102K	CHIP C 1000PF K		C434			CC73GCH1H090D	CHIP C 9.0PF D	
C274			CK73GB1H103K	CHIP C 0.010UF K		C435			CK73GB1H103K	CHIP C 0.010UF K	

PARTS LIST

TX-RX UNIT (X57-785X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C436			CK73GB1E105K	CHIP C 1.0UF K		C555			CC73GCH1H101J	CHIP C 100PF J	
C440,441			CC73GCH1H151J	CHIP C 150PF J		C556			CK73GB1E105K	CHIP C 1.0UF K	
C442-449			CK73GB1H103K	CHIP C 0.010UF K		C557			CK73GB1H103K	CHIP C 0.010UF K	
C450			CC73GCH1H150J	CHIP C 15PF J		C558-560			CK73GB1E105K	CHIP C 1.0UF K	
C451-453			CK73GB1H103K	CHIP C 0.010UF K		C569			CK73GB1H103K	CHIP C 0.010UF K	
C454			CK73GB1H104K	CHIP C 0.10UF K		C570			CK73GB1E105K	CHIP C 1.0UF K	
C455			CK73GB1E105K	CHIP C 1.0UF K		C571-575			CK73GB1H103K	CHIP C 0.010UF K	
C456,457			CK73GB1H103K	CHIP C 0.010UF K		C576			CK73GB1H102K	CHIP C 1000PF K	
C458			CC73GCH1H121J	CHIP C 120PF J		C577			CK73GB1H103K	CHIP C 0.010UF K	
C459			CK73GB1E105K	CHIP C 1.0UF K		C578			CC73GCH1H121J	CHIP C 120PF J	
C460			CC73GCH1H101J	CHIP C 100PF J		C579			CC73GCH1H181J	CHIP C 180PF J	
C461			CC73GCH1H820J	CHIP C 82PF J		C580			CC73GCH1H331J	CHIP C 330PF J	
C462,463			CK73GB1H103K	CHIP C 0.010UF K		C581			CK73GB1H102K	CHIP C 1000PF K	
C464			CC73GCH1H820J	CHIP C 82PF J		C591			CK73GB1H104K	CHIP C 0.10UF K	
C465			CC73GCH1H101J	CHIP C 100PF J		C592			CE32CL1C220M	CHIP EL 22UF 16WV	
C466			CK73GB1H104K	CHIP C 0.10UF K		C593			CK73GB1H103K	CHIP C 0.010UF K	
C467			CK73GB1H102K	CHIP C 1000PF K		C594			CE32CL1C220M	CHIP EL 22UF 16WV	
C468,469			CC73GCH1H100D	CHIP C 10PF D		C595			CK73GB1H104K	CHIP C 0.10UF K	
C470			CC73GCH1H151J	CHIP C 150PF J		C597-599			CK73GB1H104K	CHIP C 0.10UF K	
C471-475			CK73GB1H103K	CHIP C 0.010UF K		C600			CK73GB1H103K	CHIP C 0.010UF K	
C476			CC73GCH1H820J	CHIP C 82PF J		C601			CC73GCH1H820J	CHIP C 82PF J	
C477			CC73GCH1H680J	CHIP C 68PF J		C602-606			CK73GB1H104K	CHIP C 0.10UF K	
C478			CC73GCH1H820J	CHIP C 82PF J		C608,609			CK73GB1H104K	CHIP C 0.10UF K	
C479			CC73GCH1H101J	CHIP C 100PF J		C610			CC73GCH1H270J	CHIP C 27PF J	
C480			CK73GB1H103K	CHIP C 0.010UF K		C611,612			CC73GCH1H271J	CHIP C 270PF J	
C481,482			CC73GCH1H390J	CHIP C 39PF J		C613			CC73GCH1H391J	CHIP C 390PF J	
C483			CC73GCH1H470J	CHIP C 47PF J		C614			CK73FB1A106K	CHIP C 10UF K	
C484			CC73GCH1H220J	CHIP C 22PF J		C615,616			CK73GB1E105K	CHIP C 1.0UF K	
C485			CC73GCH1H030C	CHIP C 3.0PF C		C618			CC73GCH1H331J	CHIP C 330PF J	
C486			CC73GCH1H060D	CHIP C 6.0PF D		C619			CK73GB1H104K	CHIP C 0.10UF K	
C490			CC73GCH1H180J	CHIP C 18PF J		C620			CK73GB1H223K	CHIP C 0.022UF K	
C494,495			CC73GCH1H060D	CHIP C 6.0PF D		C621			CK73GB1H222K	CHIP C 2200PF K	
C496			CC73GCH1H220J	CHIP C 22PF J		C625-628			CK73GB1H103K	CHIP C 0.010UF K	
C497			CC73GCH1H390J	CHIP C 39PF J		C630			CK73FB1A106K	CHIP C 10UF K	
C498			CC73GCH1H470J	CHIP C 47PF J		C631			CK73GB1E105K	CHIP C 1.0UF K	
C499			CC73GCH1H270J	CHIP C 27PF J		C632			CK73FB1A106K	CHIP C 10UF K	
C500			CK73GB1H103K	CHIP C 0.010UF K		C633			CK73GB1H103K	CHIP C 0.010UF K	
C501			CC73GCH1H820J	CHIP C 82PF J		C634			CK73GB1E105K	CHIP C 1.0UF K	
C502			CC73GCH1H680J	CHIP C 68PF J		C635,636			CK73GB1H103K	CHIP C 0.010UF K	
C503			CC73GCH1H121J	CHIP C 120PF J		C638			CK73GB1H102K	CHIP C 1000PF K	
C504			CC73GCH1H101J	CHIP C 100PF J		C639,640			CK73GB1H103K	CHIP C 0.010UF K	
C505-509			CK73GB1H103K	CHIP C 0.010UF K		C648			CC73GCH1H100D	CHIP C 10PF D	
C521			CC73GCH1H271J	CHIP C 270PF J		C649			CC73GCH1H020C	CHIP C 2.0PF C	
C522			CC73GCH1H681J	CHIP C 680PF J		C650			CK73GB1H103K	CHIP C 0.010UF K	
C523-530			CK73GB1H103K	CHIP C 0.010UF K		C651			CK73GB1H102K	CHIP C 1000PF K	
C531			CK73GB1E105K	CHIP C 1.0UF K		C652,653			CK73GB1H103K	CHIP C 0.010UF K	
C532			CK73GB1H104K	CHIP C 0.10UF K		C654			CC73GCH1H470J	CHIP C 47PF J	
C533-536			CK73GB1H103K	CHIP C 0.010UF K		C656			CK73GB1H103K	CHIP C 0.010UF K	
C537			CK73GB1H104K	CHIP C 0.10UF K		C657			CK73GB1E105K	CHIP C 1.0UF K	
C538			CK73GB1E105K	CHIP C 1.0UF K		C658			CC73GCH1H430J	CHIP C 43PF J	
C539			CK73GB1H103K	CHIP C 0.010UF K		C659			CC73GCH1H080D	CHIP C 8.0PF D	
C540			CK73GB1H104K	CHIP C 0.10UF K		C660			CK73GB1H222K	CHIP C 2200PF K	
C541-543			CK73GB1H103K	CHIP C 0.010UF K		C661			CK73GB1H332K	CHIP C 3300PF K	
C544			CC73GCH1H151J	CHIP C 150PF J		C662			CD04AZ1H470M	ELECTRO 47UF 50WV	
C545			CK73GB1H103K	CHIP C 0.010UF K		C663			CK73GB1H103K	CHIP C 0.010UF K	
C546			CK73GB1H104K	CHIP C 0.10UF K		C664,665			CD04AZ1H470M	ELECTRO 47UF 50WV	
C547,548			CK73GB1H103K	CHIP C 0.010UF K		C666			CK73GB1H103K	CHIP C 0.010UF K	
C551			CK73GB1H103K	CHIP C 0.010UF K		C668			CK73GB1H103K	CHIP C 0.010UF K	
C552			CC73GCH1H470J	CHIP C 47PF J		C670,671			CK73GB1H103K	CHIP C 0.010UF K	
C553,554			CK73GB1H103K	CHIP C 0.010UF K		C673			CK73GB1H103K	CHIP C 0.010UF K	

PARTS LIST

TX-RX UNIT (X57-785X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C674			CS77CA1VR47M	CHIP TNTL 0.47UF 35WV		C787			CC73GCH1H180J	CHIP C 18PF J	
C675			CK73GB1H103K	CHIP C 0.010UF K		C788			CK73GB1H103K	CHIP C 0.010UF K	
C679,680			CK73GB1H103K	CHIP C 0.010UF K		C789			CC73GCH1H390J	CHIP C 39PF J	
C681			CC73GCH1H100D	CHIP C 10PF D		C790			CK73GB1H104K	CHIP C 0.10UF K	
C682			CK73GB1H103K	CHIP C 0.010UF K		C791			CK73GB1E105K	CHIP C 1.0UF K	
C683			CK73GB1H102K	CHIP C 1000PF K		C792		*	CE32CL1V4R7M	CHIP EL 4.7UF 35WV	
C684			CK73GB1H103K	CHIP C 0.010UF K		C793			CC73GCH1H820J	CHIP C 82PF J	
C686			CK73GB1E105K	CHIP C 1.0UF K		C794			CK73GB1H104K	CHIP C 0.10UF K	
C687			CK73GB1H103K	CHIP C 0.010UF K		C795			CK73GB1H103K	CHIP C 0.010UF K	
C688			CE32CL1C470M	CHIP EL 47UF 16WV		C796			CK73GB1H104K	CHIP C 0.10UF K	
C689			CK73GB1E105K	CHIP C 1.0UF K		C797			CK73GB1E105K	CHIP C 1.0UF K	
C691			CC73GCH1H360J	CHIP C 36PF J		C798			CK73GB1H103K	CHIP C 0.010UF K	
C692			CC73GCH1H390J	CHIP C 39PF J		C799		*	CE32CL1V4R7M	CHIP EL 4.7UF 35WV	
C693			CC73GCH1H100D	CHIP C 10PF D		C800			CC73GCH1H150J	CHIP C 15PF J	
C694			CC73GCH1H090D	CHIP C 9.0PF D		C802,803			CK73GB1H104K	CHIP C 0.10UF K	
C701			CC73GCH1H100D	CHIP C 10PF D		C804			CK73GB1H102K	CHIP C 1000PF K	
C702			CK73GB1E105K	CHIP C 1.0UF K		C805			CC73GCH1H101J	CHIP C 100PF J	
C703			CK73GB1H473K	CHIP C 0.047UF K		C806,807			CK73GB1H103K	CHIP C 0.010UF K	
C704			CK73GB1E105K	CHIP C 1.0UF K		C808			CC73GCH1H101J	CHIP C 100PF J	
C705			CC73GCH1H180J	CHIP C 18PF J		C809			CK73GB1H103K	CHIP C 0.010UF K	
C706-713			CK73GB1H103K	CHIP C 0.010UF K		C810			CE32CL1C100M	CHIP EL 10UF 16WV	
C714			CE32CL1C100M	CHIP EL 10UF 16WV		C812			CK73GB1C474K	CHIP C 0.47UF K	
C715,716			CK73GB1H103K	CHIP C 0.010UF K		C813			CC73GCH1H101J	CHIP C 100PF J	
C717			CC73GCH1H102J	CHIP C 1000PF J		C814			CK73GB1H223K	CHIP C 0.022UF K	
C720			CK73GB1E105K	CHIP C 1.0UF K		C815			CK73GB1H473K	CHIP C 0.047UF K	
C721-723			CK73GB1H103K	CHIP C 0.010UF K		C816			CK73GB1E105K	CHIP C 1.0UF K	
C724			CC73GCH1H050C	CHIP C 5.0PF C		C817			CK73GB1H103K	CHIP C 0.010UF K	
C725			CC73GCH1H560J	CHIP C 56PF J		C818		*	CE32CL1V4R7M	CHIP EL 4.7UF 35WV	
C726			CK73GB1E105K	CHIP C 1.0UF K		C819			CK73GB1H103K	CHIP C 0.010UF K	
C728,729			CK73GB1H103K	CHIP C 0.010UF K		C820			CC73GCH1H101J	CHIP C 100PF J	
C731,732			CK73GB1H103K	CHIP C 0.010UF K		C821		*	CE32CL1V4R7M	CHIP EL 4.7UF 35WV	
C733			CC73GCH1H220J	CHIP C 22PF J		C822			CK73GB1H103K	CHIP C 0.010UF K	
C734			CK73GB1H103K	CHIP C 0.010UF K		C823			CC73GCH1H101J	CHIP C 100PF J	
C735			CC73GCH1H330J	CHIP C 33PF J		C824-826			CK73GB1H103K	CHIP C 0.010UF K	
C741-743			CK73GB1H102K	CHIP C 1000PF K		C827			CC73GCH1H101J	CHIP C 100PF J	
C744			CK73GB1H103K	CHIP C 0.010UF K		C841			CK73GB1H333K	CHIP C 0.033UF K	
C745			CC73GCH1H470J	CHIP C 47PF J		C842			CK73GB1H103K	CHIP C 0.010UF K	
C746			CK73GB1H102K	CHIP C 1000PF K		C843			CK73GB1H333K	CHIP C 0.033UF K	
C747			CK73GB1H104K	CHIP C 0.10UF K		C844			CK73GB1H103K	CHIP C 0.010UF K	
C748			CK73GB1H102K	CHIP C 1000PF K		C845			CC73GCH1H471J	CHIP C 470PF J	
C749			CK73GB1H103K	CHIP C 0.010UF K		C846,847			CK73GB1H104K	CHIP C 0.10UF K	
C751			CK73GB1E105K	CHIP C 1.0UF K		C861			CK73GB1H103K	CHIP C 0.010UF K	
C762			CK73GB1H103K	CHIP C 0.010UF K		C862-864			CK73GB1H104K	CHIP C 0.10UF K	
C763			CK73GB1H104K	CHIP C 0.10UF K		C865			CK73GB1H103K	CHIP C 0.010UF K	
C764			CK73GB1H103K	CHIP C 0.010UF K		C866			CK73GB1H102K	CHIP C 1000PF K	
C765			CK73GB1H104K	CHIP C 0.10UF K		C867			CK73GB1H103K	CHIP C 0.010UF K	
C766,767			CK73GB1H103K	CHIP C 0.010UF K		C901			CK73GB1H102K	CHIP C 1000PF K	
C768			CC73GCH1H040C	CHIP C 4.0PF C		C902			CK73GB1H104K	CHIP C 0.10UF K	
C769			CC73GCH1H471J	CHIP C 470PF J		C903			CE32CL1C220M	CHIP EL 22UF 16WV	
C770-772			CK73GB1H103K	CHIP C 0.010UF K		C904		*	CD04BQ1C471M	ELECTRO 470UF 16WV	
C773			CK73GB1H104K	CHIP C 0.10UF K		C905			CK73GB1H104K	CHIP C 0.10UF K	
C774			CC73GCH1H010C	CHIP C 1.0PF C		C906			CK73GB1H102K	CHIP C 1000PF K	
C775			CK73GB1H104K	CHIP C 0.10UF K		C908			CE32CL1C220M	CHIP EL 22UF 16WV	
C776			CK73GB1H103K	CHIP C 0.010UF K		C909,910			CK73GB1H104K	CHIP C 0.10UF K	
C780			CK73GB1H102K	CHIP C 1000PF K		C911			CE32CL1C220M	CHIP EL 22UF 16WV	
C781,782			CK73GB1E105K	CHIP C 1.0UF K		C912			CK73GB1H102K	CHIP C 1000PF K	
C783			CK73GB1H103K	CHIP C 0.010UF K		C920			CK73GB1H102K	CHIP C 1000PF K	
C784			CK73GB1H102K	CHIP C 1000PF K		C921			CE32CL1C220M	CHIP EL 22UF 16WV	
C785			CK73GB1H103K	CHIP C 0.010UF K		C922			CK73GB1H104K	CHIP C 0.10UF K	
C786			CK73GB1H102K	CHIP C 1000PF K		C923,924			CK73GB1H102K	CHIP C 1000PF K	

PARTS LIST

TX-RX UNIT (X57-785X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation	Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
C926			CE32CL1C220M	CHIP EL 22UF 16WV		L136			L33-0695-05	SMALL FIXED INDUCTOR (1000UH)	
C927			CK73GB1H104K	CHIP C 0.10UF K		L137			L40-1892-14	SMALL FIXED INDUCTOR (1.8UH)	
C928			CK73GB1C224K	CHIP C 0.22UF K		L138			L40-1292-14	SMALL FIXED INDUCTOR (1.2UH)	
C929			CE32CL1C220M	CHIP EL 22UF 16WV		L139			L40-1092-14	SMALL FIXED INDUCTOR (1.0UH)	
C930			CK73GB1H104K	CHIP C 0.10UF K		L140			L40-3382-14	SMALL FIXED INDUCTOR (330NH)	
C931			CK73GB1H103K	CHIP C 0.010UF K		L141-144			L40-2282-14	SMALL FIXED INDUCTOR (220NH)	
TC101,102			C05-0379-05	CERAMIC TRIMMER CAPACITOR (30P)	E	L145			L40-1501-14	SMALL FIXED INDUCTOR (15UH)	
TC105			C05-0378-05	CERAMIC TRIMMER CAPACITOR (20P)		L146			L33-0695-05	SMALL FIXED INDUCTOR (1000UH)	
CN1			E40-6526-05	PIN ASSY		L147			L40-6891-14	SMALL FIXED INDUCTOR (6.8UH)	
CN2			E40-6656-05	PIN ASSY		L148			L40-5691-14	SMALL FIXED INDUCTOR (5.6UH)	
CN3			E40-6525-05	PIN ASSY		L149			L40-3391-14	SMALL FIXED INDUCTOR (3.3UH)	
CN4			E41-1684-05	PIN ASSY		L150			L34-4831-05	COIL	
CN5		*	E40-6726-05	FLAT CABLE CONNECTOR		L151			L40-2792-14	SMALL FIXED INDUCTOR (2.7UH)	
CN100			E04-0191-05	PIN SOCKET		L152			L40-2292-14	SMALL FIXED INDUCTOR (2.2UH)	
CN101-103			E40-5487-05	PIN ASSY		L153			L34-4832-05	COIL	
CN200			E04-0191-05	PIN SOCKET		L154		*	L41-1098-60	SMALL FIXED INDUCTOR (1UH)	
CN201			E40-6852-05	PIN ASSY		L155			L40-1292-14	SMALL FIXED INDUCTOR (1.2UH)	
CN300			E04-0191-05	PIN SOCKET		L156			L40-2282-14	SMALL FIXED INDUCTOR (220NH)	
CN301-304			E40-6852-05	PIN ASSY		L157			L40-1592-14	SMALL FIXED INDUCTOR (1.5UH)	
CN400			E04-0191-05	PIN SOCKET		L158			L40-1501-14	SMALL FIXED INDUCTOR (15UH)	
CN500,501			E18-0254-05	SOCKET		L159			L40-1892-14	SMALL FIXED INDUCTOR (1.8UH)	
CN600			E40-6525-05	PIN ASSY		L160			L40-1292-14	SMALL FIXED INDUCTOR (1.2UH)	
CN650			E40-6533-05	PIN ASSY		L161			L40-1092-14	SMALL FIXED INDUCTOR (1.0UH)	
CN663			E40-6533-05	PIN ASSY		L162			L40-3382-14	SMALL FIXED INDUCTOR (330NH)	
CN667			E04-0191-05	PIN SOCKET		L163-166			L40-2282-14	SMALL FIXED INDUCTOR (220NH)	
CN674			E04-0191-05	PIN SOCKET		L167			L34-4831-05	COIL	
CN700			E40-6525-05	PIN ASSY		L168			L34-4832-05	COIL	
CN800			E04-0191-05	PIN SOCKET		L170			L33-0695-05	SMALL FIXED INDUCTOR (1000UH)	
J1			E11-0414-15	3.5D PHONE JACK (3P)		L171,172			L34-4608-15	AIR-CORE COIL	
J2			E56-0408-15	DIN SOCKET		L231			L33-0695-05	SMALL FIXED INDUCTOR (1000UH)	
J3			E06-0752-15	DIN SOCKET		L232			L40-2282-14	SMALL FIXED INDUCTOR (220NH)	
J4			E11-0455-05	3.5D PHONE JACK (3P)		L233			L33-0695-05	SMALL FIXED INDUCTOR (1000UH)	
J5		*	E11-0705-15	PHONE JACK (9P)		L234		*	L39-1556-05	TOROIDAL COIL	
J100		*	E13-0166-25	PIN JACK		L235			L41-1005-33	SMALL FIXED INDUCTOR (10UH)	
J800		*	E13-0166-25	PIN JACK		L236			L41-1585-33	SMALL FIXED INDUCTOR (0.15UH)	
F1		*	F53-0388-05	FUSE (1.25A)		L237			L33-0695-05	SMALL FIXED INDUCTOR (1000UH)	
F901		*	F53-0316-15	FUSE (375MA)		L251,252		*	L41-2288-60	SMALL FIXED INDUCTOR (220NH)	
F911		*	F53-0316-15	FUSE (375MA)		L253		*	L34-4935-05	COIL	
F921		*	F53-0316-15	FUSE (375MA)		L254		*	L41-2288-60	SMALL FIXED INDUCTOR (220NH)	
CF591			L72-0998-05	CERAMIC FILTER		L255		*	L34-4935-05	COIL	
L11,12			L41-1005-33	SMALL FIXED INDUCTOR (10UH)		L261		*	L39-1554-05	TOROIDAL COIL	
L13			L41-1095-33	SMALL FIXED INDUCTOR (1.0UH)		L262		*	L39-1480-15	TOROIDAL COIL	
L14-17			L40-1085-92	SMALL FIXED INDUCTOR (100NH)		L263			L41-1015-33	SMALL FIXED INDUCTOR (100UH)	
L18		*	L33-1557-05	CHOKE COIL		L264		*	L39-1555-05	TOROIDAL COIL	
L19		*	L33-1554-05	CHOKE COIL		L281			L41-1015-33	SMALL FIXED INDUCTOR (100UH)	
L21-26			L92-0639-05	CHIP FERRITE		L283			L41-1015-33	SMALL FIXED INDUCTOR (100UH)	
L101,102			L41-2215-32	SMALL FIXED INDUCTOR (220UH)		L284			L41-4705-33	SMALL FIXED INDUCTOR (47UH)	
L103		*	L41-1585-32	SMALL FIXED INDUCTOR (0.15UH)		L301,302		*	L34-4937-05	COIL	
L104			L41-1005-33	SMALL FIXED INDUCTOR (10UH)		L321		*	L41-1288-60	SMALL FIXED INDUCTOR (120NH)	
L105			L33-0695-05	SMALL FIXED INDUCTOR (1000UH)		L322		*	L41-1088-60	SMALL FIXED INDUCTOR (100NH)	
L106			L40-6891-14	SMALL FIXED INDUCTOR (6.8UH)		L323		*	L39-1493-15	TOROIDAL COIL	
L107		*	L33-1547-05	SMALL FIXED INDUCTOR (1000UH)	E	L324		*	L39-1480-15	TOROIDAL COIL	
L108			L40-6891-14	SMALL FIXED INDUCTOR (6.8UH)	E	L325			L41-1015-33	SMALL FIXED INDUCTOR (100UH)	
L109			L40-5691-14	SMALL FIXED INDUCTOR (5.6UH)		L326			L34-4709-05	COIL	
L110		*	L33-1547-05	SMALL FIXED INDUCTOR (1000UH)		L327			L41-1005-33	SMALL FIXED INDUCTOR (10UH)	
L131,132			L40-6891-14	SMALL FIXED INDUCTOR (6.8UH)		L351			L41-1005-33	SMALL FIXED INDUCTOR (10UH)	
L133			L34-4831-05	COIL		L353			L41-1015-33	SMALL FIXED INDUCTOR (100UH)	
L134			L34-4832-05	COIL		L354			L41-4785-33	SMALL FIXED INDUCTOR (0.47UH)	
L135			L34-4833-05	COIL		L355			L41-1095-33	SMALL FIXED INDUCTOR (1.0UH)	
						L356			L40-1088-67	SMALL FIXED INDUCTOR (100NH)	

PARTS LIST

TX-RX UNIT (X57-785X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
L374-376			L34-4818-05	COIL		L741			L41-1085-33	SMALL FIXED INDUCTOR (0.1UH)	
L391			L41-1015-33	SMALL FIXED INDUCTOR (100UH)		L742			L41-4705-33	SMALL FIXED INDUCTOR (47UH)	
L393			L41-1005-33	SMALL FIXED INDUCTOR (10UH)		L743			L41-1005-33	SMALL FIXED INDUCTOR (10UH)	
L394		*	L39-1553-05	TOROIDAL COIL		L761			L41-1015-33	SMALL FIXED INDUCTOR (100UH)	
L397			L41-1005-33	SMALL FIXED INDUCTOR (10UH)		L762			L39-1476-05	TOROIDAL COIL	
L421,422			L39-1255-15	TOROIDAL COIL		L763		*	L39-1480-15	TOROIDAL COIL	
L431			L41-4785-33	SMALL FIXED INDUCTOR (0.47UH)		L764			L41-4785-33	SMALL FIXED INDUCTOR (0.47UH)	
L432			L40-1288-67	SMALL FIXED INDUCTOR (120NH)		L765			L41-1005-33	SMALL FIXED INDUCTOR (10UH)	
L451-453			L41-1015-33	SMALL FIXED INDUCTOR (100UH)		L781			L41-2785-33	SMALL FIXED INDUCTOR (0.27UH)	
L454		*	L41-1098-60	SMALL FIXED INDUCTOR (1UH)		L782			L41-1085-33	SMALL FIXED INDUCTOR (0.1UH)	
L455			L41-1015-33	SMALL FIXED INDUCTOR (100UH)		L783,784			L41-4705-33	SMALL FIXED INDUCTOR (47UH)	
L456		*	L41-1098-60	SMALL FIXED INDUCTOR (1UH)		L785			L33-0695-05	SMALL FIXED INDUCTOR (1000UH)	
L461		*	L39-1480-15	TOROIDAL COIL		L786			L41-1085-33	SMALL FIXED INDUCTOR (0.1UH)	
L462		*	L39-1571-05	TOROIDAL COIL		L841			L41-1015-33	SMALL FIXED INDUCTOR (100UH)	
L471-473			L41-1015-33	SMALL FIXED INDUCTOR (100UH)		L903			L41-1005-33	SMALL FIXED INDUCTOR (10UH)	
L474,475			L41-6895-33	SMALL FIXED INDUCTOR (6.8UH)		XF301		*	L71-0656-15	MCF (11.374MHZ)	
L476			L41-5695-33	SMALL FIXED INDUCTOR (5.6UH)		XF371			L71-0605-05	MCF (73.095MHZ)	
L477,478			L41-1005-33	SMALL FIXED INDUCTOR (10UH)		XF471		*	L71-0664-05	MCF (10.695MHZ)	
L479			L41-6895-33	SMALL FIXED INDUCTOR (6.8UH)		XF472		*	L71-0230-15	MCF (10.695MHZ)	
L480			L41-5695-33	SMALL FIXED INDUCTOR (5.6UH)		XF473			L71-0569-15	CRYSTAL FILTER (10.695MHZ)	
L481			L41-6895-33	SMALL FIXED INDUCTOR (6.8UH)		XF474		*	L71-0657-05	CRYSTAL FILTER (11.374MHZ)	
L482-484			L41-1015-33	SMALL FIXED INDUCTOR (100UH)		XF475		*	L71-0658-05	CRYSTAL FILTER (11.374MHZ)	
L485		*	L41-2298-60	SMALL FIXED INDUCTOR (2.2UH)		R11			RK73GB2A103J	CHIP R 10K J 1/10W	
L486			L41-2295-33	SMALL FIXED INDUCTOR (2.2UH)		R12-17			RK73GB2A101J	CHIP R 100 J 1/10W	
L521			L41-8285-33	SMALL FIXED INDUCTOR (0.82UH)		R21			RK73GB2A104J	CHIP R 100K J 1/10W	
L522,523			L41-1015-33	SMALL FIXED INDUCTOR (100UH)		R22			RK73GB2A123J	CHIP R 12K J 1/10W	
L524		*	L39-1558-05	TOROIDAL COIL		R23			RK73GB2A101J	CHIP R 100 J 1/10W	
L525			L41-1015-33	SMALL FIXED INDUCTOR (100UH)		R24			RK73GB2A471J	CHIP R 470 J 1/10W	
L526,527			L41-1005-33	SMALL FIXED INDUCTOR (10UH)		R25			RK73GB2A392J	CHIP R 3.9K J 1/10W	
L528			L41-1015-33	SMALL FIXED INDUCTOR (100UH)		R26			RK73GB2A562J	CHIP R 5.6K J 1/10W	
L541			L41-6885-33	SMALL FIXED INDUCTOR (0.68UH)		R27			RK73GB2A474J	CHIP R 470K J 1/10W	
L542			L41-1015-33	SMALL FIXED INDUCTOR (100UH)		R28			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
L551			L41-1005-33	SMALL FIXED INDUCTOR (10UH)		R29-32			RK73GB2A103J	CHIP R 10K J 1/10W	
L552			L39-1255-15	TOROIDAL COIL		R33			RK73GB2A223J	CHIP R 22K J 1/10W	
L571,572			L41-1005-33	SMALL FIXED INDUCTOR (10UH)		R34			RK73GB2A221J	CHIP R 220 J 1/10W	
L573			L41-3385-33	SMALL FIXED INDUCTOR (0.33UH)		R35			RK73GB2A153J	CHIP R 15K J 1/10W	
L591			L41-1005-33	SMALL FIXED INDUCTOR (10UH)		R36			RK73GB2A000J	CHIP R 0.0 J 1/10W	
L592			L41-1085-33	SMALL FIXED INDUCTOR (0.1UH)		R37			RK73GB2A472J	CHIP R 4.7K J 1/10W	
L593			L41-1005-33	SMALL FIXED INDUCTOR (10UH)		R38			RK73GB2A103J	CHIP R 10K J 1/10W	
L594			L41-4705-33	SMALL FIXED INDUCTOR (47UH)		R39,40			RK73GB2A101J	CHIP R 100 J 1/10W	
L595			L34-4787-05	COIL		R41			RK73GB2A223J	CHIP R 22K J 1/10W	
L641			L41-1085-33	SMALL FIXED INDUCTOR (0.1UH)		R42			RK73GB2A102J	CHIP R 1.0K J 1/10W	
L651			L41-4795-33	SMALL FIXED INDUCTOR (4.7UH)		R51			RK73GB2A101J	CHIP R 100 J 1/10W	
L652			L41-4705-33	SMALL FIXED INDUCTOR (47UH)		R52			RK73GB2A472J	CHIP R 4.7K J 1/10W	
L653		*	L34-4935-05	COIL		R101			RK73FB2B473J	CHIP R 47K J 1/8W	
L654			L41-2285-33	SMALL FIXED INDUCTOR (0.22UH)		R102			RK73EB2E560J	CHIP R 56 J 1/4W	
L660		*	L33-1549-05	CHOKE COIL		R103			RK73EB2E471J	CHIP R 470 J 1/4W	
L661,662			L33-0695-05	SMALL FIXED INDUCTOR (1000UH)		R104			RK73EB2E181J	CHIP R 180 J 1/4W	
L663			L41-4705-33	SMALL FIXED INDUCTOR (47UH)		R105			RK73GB2A472J	CHIP R 4.7K J 1/10W	
L664,665		*	L34-4935-05	COIL		R106			RK73GB2A101J	CHIP R 100 J 1/10W	
L701			L41-1015-33	SMALL FIXED INDUCTOR (100UH)		R107,108			RK73GB2A222J	CHIP R 2.2K J 1/10W	
L702			L41-1005-33	SMALL FIXED INDUCTOR (10UH)		R109			RK73FB2B680J	CHIP R 68 J 1/8W	
L703			L40-1001-86	SMALL FIXED INDUCTOR (10UH)		R110			RK73GB2A560J	CHIP R 56 J 1/10W	
L705			L41-1005-33	SMALL FIXED INDUCTOR (10UH)		R131-143			RK73GB2A103J	CHIP R 10K J 1/10W	
L721,722			L41-1015-33	SMALL FIXED INDUCTOR (100UH)		R144			RK73EB2E680J	CHIP R 68 J 1/4W	
L723			L41-3395-33	SMALL FIXED INDUCTOR (3.3UH)		R145			RK73GB2A471J	CHIP R 470 J 1/10W	
L724			L41-1015-33	SMALL FIXED INDUCTOR (100UH)		R146			RK73FB2B330J	CHIP R 33 J 1/8W	
L725,726			L41-4705-33	SMALL FIXED INDUCTOR (47UH)		R147-155			RK73GB2A330J	CHIP R 33 J 1/10W	
L727			L41-1005-33	SMALL FIXED INDUCTOR (10UH)		R156,157			RK73EB2E680J	CHIP R 68 J 1/4W	
L728			L41-1015-33	SMALL FIXED INDUCTOR (100UH)							

PARTS LIST

TX-RX UNIT (X57-785X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R158			RK73EB2E560J	CHIP R 56 J 1/4W		R408			RK73GB2A471J	CHIP R 470 J 1/10W	
R159-167			RK73EB2E680J	CHIP R 68 J 1/4W		R421			RK73GB2A331J	CHIP R 330 J 1/10W	
R168			RK73GB2A330J	CHIP R 33 J 1/10W		R422			RK73GB2A271J	CHIP R 270 J 1/10W	
R169			RK73EB2E680J	CHIP R 68 J 1/4W		R423			RK73GB2A330J	CHIP R 33 J 1/10W	
R170-182			RK73FB2B330J	CHIP R 33 J 1/8W		R424			RK73GB2A221J	CHIP R 220 J 1/10W	
R212-215			RK73GB2A472J	CHIP R 4.7K J 1/10W		R431			RK73GB2A330J	CHIP R 33 J 1/10W	
R217-220			RK73GB2A472J	CHIP R 4.7K J 1/10W		R432			RK73GB2A124J	CHIP R 120K J 1/10W	
R231			RK73FB2B221J	CHIP R 220 J 1/8W		R433			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R232			RK73GB2A682J	CHIP R 6.8K J 1/10W		R434			RK73GB2A100J	CHIP R 10 J 1/10W	
R235			RK73GB2A122J	CHIP R 1.2K J 1/10W		R436,437			RK73GB2A220J	CHIP R 22 J 1/10W	
R236			RK73GB2A471J	CHIP R 470 J 1/10W		R438			RK73GB2A331J	CHIP R 330 J 1/10W	
R237			RK73GB2A821J	CHIP R 820 J 1/10W		R439			RK73GB2A180J	CHIP R 18 J 1/10W	
R238			RK73GB2A120J	CHIP R 12 J 1/10W		R440			RK73GB2A331J	CHIP R 330 J 1/10W	
R239			RK73FB2B390J	CHIP R 39 J 1/8W		R451			RK73EB2E471J	CHIP R 470 J 1/4W	
R240			RK73GB2A151J	CHIP R 150 J 1/10W		R452			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R241,242			RK73EB2E121J	CHIP R 120 J 1/4W		R453			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R243			RK73GB2A682J	CHIP R 6.8K J 1/10W		R454			RK73GB2A821J	CHIP R 820 J 1/10W	
R244			RK73GB2A562J	CHIP R 5.6K J 1/10W		R455			RK73GB2A220J	CHIP R 22 J 1/10W	
R245			RK73GB2A181J	CHIP R 180 J 1/10W		R457			RK73GB2A8R2J	CHIP R 8.2 J 1/10W	
R246			RK73GB2A470J	CHIP R 47 J 1/10W		R458			RK73GB2A103J	CHIP R 10K J 1/10W	
R247			RK73GB2A271J	CHIP R 270 J 1/10W		R460			RK73GB2A101J	CHIP R 100 J 1/10W	
R248			RK73FB2B221J	CHIP R 220 J 1/8W		R461,462			RK73GB2A120J	CHIP R 12 J 1/10W	
R249			RK73GB2A271J	CHIP R 270 J 1/10W		R463			RK73GB2A331J	CHIP R 330 J 1/10W	
R261			RK73FB2B471J	CHIP R 470 J 1/8W		R464,465			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R263,264			RK73EB2E331J	CHIP R 330 J 1/4W		R466			RK73GB2A221J	CHIP R 220 J 1/10W	
R265,266			RK73GB2A100J	CHIP R 10 J 1/10W		R467			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R267			RK73GB2A271J	CHIP R 270 J 1/10W		R468			RK73GB2A221J	CHIP R 220 J 1/10W	
R268			RK73GB2A000J	CHIP R 0.0 J 1/10W		R471			RK73GB2A391J	CHIP R 390 J 1/10W	
R269-271			RK73GB2A100J	CHIP R 10 J 1/10W		R472,473			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R272			RK73GB2A821J	CHIP R 820 J 1/10W		R474			RK73GB2A561J	CHIP R 560 J 1/10W	
R273			RK73GB2A332J	CHIP R 3.3K J 1/10W		R477,478			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R274			RK73GB2A182J	CHIP R 1.8K J 1/10W		R479			RK73GB2A220J	CHIP R 22 J 1/10W	
R281			RK73GB2A471J	CHIP R 470 J 1/10W		R480			RK73GB2A681J	CHIP R 680 J 1/10W	
R282			RK73GB2A561J	CHIP R 560 J 1/10W		R481-485			RK73GB2A101J	CHIP R 100 J 1/10W	
R283			RK73GB2A151J	CHIP R 150 J 1/10W		R486			RK73GB2A681J	CHIP R 680 J 1/10W	
R284			RK73GB2A681J	CHIP R 680 J 1/10W		R487			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R285,286			RK73GB2A8R2J	CHIP R 8.2 J 1/10W		R488			RK73GB2A220J	CHIP R 22 J 1/10W	
R287			RK73FB2B100J	CHIP R 10 J 1/8W		R489			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R289			RK73GB2A000J	CHIP R 0.0 J 1/10W		R491			RK73GB2A391J	CHIP R 390 J 1/10W	
R321			RK73FB2B471J	CHIP R 470 J 1/8W		R492,493			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R323,324			RK73GB2A681J	CHIP R 680 J 1/10W		R494			RK73GB2A561J	CHIP R 560 J 1/10W	
R325,326			RK73GB2A100J	CHIP R 10 J 1/10W		R496-500			RK73GB2A101J	CHIP R 100 J 1/10W	
R327			RK73GB2A271J	CHIP R 270 J 1/10W		R501,502			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R329-331			RK73GB2A100J	CHIP R 10 J 1/10W		R503,504			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R336			RK73GB2A331J	CHIP R 330 J 1/10W		R505-509			RK73GB2A103J	CHIP R 10K J 1/10W	
R337			RK73GB2A102J	CHIP R 1.0K J 1/10W		R520			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R352			RK73EB2E471J	CHIP R 470 J 1/4W		R521			RK73FB2B331J	CHIP R 330 J 1/8W	
R355			RK73GB2A471J	CHIP R 470 J 1/10W		R522			RK73GB2A182J	CHIP R 1.8K J 1/10W	
R356,357			RK73GB2A151J	CHIP R 150 J 1/10W		R523			RK73FB2B471J	CHIP R 470 J 1/8W	
R358,359			RK73GB2A8R2J	CHIP R 8.2 J 1/10W		R524			RK73GB2A820J	CHIP R 82 J 1/10W	
R360			RK73EB2E100J	CHIP R 10 J 1/4W		R525			RK73GB2A101J	CHIP R 100 J 1/10W	
R361			RK73GB2A560J	CHIP R 56 J 1/10W		R526			RK73GB2A333J	CHIP R 33K J 1/10W	
R362,363			RK73GB2A121J	CHIP R 120 J 1/10W		R527,528			RK73GB2A103J	CHIP R 10K J 1/10W	
R371,372			RK73GB2A331J	CHIP R 330 J 1/10W		R529			RK73GB2A220J	CHIP R 22 J 1/10W	
R392			RK73GB2A471J	CHIP R 470 J 1/10W		R530			RK73GB2A561J	CHIP R 560 J 1/10W	
R393			RK73FB2B220J	CHIP R 22 J 1/8W		R531			RK73GB2A151J	CHIP R 150 J 1/10W	
R394			RK73GB2A101J	CHIP R 100 J 1/10W		R532			RK73GB2A122J	CHIP R 1.2K J 1/10W	
R395			RK73GB2A222J	CHIP R 2.2K J 1/10W		R533,534			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R396			RK73GB2A681J	CHIP R 680 J 1/10W		R535			RK73GB2A100J	CHIP R 10 J 1/10W	
R398			RK73GB2A000J	CHIP R 0.0 J 1/10W		R536			RK73GB2A220J	CHIP R 22 J 1/10W	

PARTS LIST

TX-RX UNIT (X57-785X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation	Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
R537			RK73GB2A101J	CHIP R 100 J 1/10W		R646			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R538			RK73GB2A331J	CHIP R 330 J 1/10W		R648			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R539			RK73GB2A151J	CHIP R 150 J 1/10W		R650			RK73GB2A221J	CHIP R 220 J 1/10W	
R540			RK73GB2A471J	CHIP R 470 J 1/10W		R651			RK73GB2A104J	CHIP R 100K J 1/10W	
R542			RK73GB2A222J	CHIP R 2.2K J 1/10W		R652			RK73GB2A221J	CHIP R 220 J 1/10W	
R543			RK73GB2A471J	CHIP R 470 J 1/10W		R653,654			RK73GB2A101J	CHIP R 100 J 1/10W	
R544			RK73GB2A103J	CHIP R 10K J 1/10W		R655			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R545			RK73GB2A100J	CHIP R 10 J 1/10W		R656			RK73GB2A473J	CHIP R 47K J 1/10W	
R546,547			RK73GB2A120J	CHIP R 12 J 1/10W		R657			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R548			RK73GB2A271J	CHIP R 270 J 1/10W		R658			RK73GB2A101J	CHIP R 100 J 1/10W	
R549			RK73GB2A180J	CHIP R 18 J 1/10W		R659			RK73GB2A182J	CHIP R 1.8K J 1/10W	
R550			RK73GB2A271J	CHIP R 270 J 1/10W		R660			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R551			RK73GB2A471J	CHIP R 470 J 1/10W		R661			RK73GB2A473J	CHIP R 47K J 1/10W	
R552,553			RK73GB2A221J	CHIP R 220 J 1/10W		R662,663			RK73GB2A223J	CHIP R 22K J 1/10W	
R554			RK73GB2A472J	CHIP R 4.7K J 1/10W		R664			RK73GB2A471J	CHIP R 470 J 1/10W	
R555			RK73GB2A224J	CHIP R 220K J 1/10W		R665			RK73GB2A221J	CHIP R 220 J 1/10W	
R556			RK73GB2A102J	CHIP R 1.0K J 1/10W		R666			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R557			RK73GB2A332J	CHIP R 3.3K J 1/10W		R667			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R560			RK73GB2A330J	CHIP R 33 J 1/10W		R668			RK73GB2A101J	CHIP R 100 J 1/10W	
R571			RK73GB2A471J	CHIP R 470 J 1/10W		R669			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R572			RK73GB2A271J	CHIP R 270 J 1/10W		R670			RK73GB2A473J	CHIP R 47K J 1/10W	
R573			RK73GB2A180J	CHIP R 18 J 1/10W		R671			RK73GB2A223J	CHIP R 22K J 1/10W	
R574			RK73GB2A271J	CHIP R 270 J 1/10W		R672			RK73GB2A473J	CHIP R 47K J 1/10W	
R575			RK73GB2A392J	CHIP R 3.9K J 1/10W		R673			RK73GB2A683J	CHIP R 68K J 1/10W	
R576			RK73GB2A222J	CHIP R 2.2K J 1/10W		R674			RK73GB2A103J	CHIP R 10K J 1/10W	
R577			RK73GB2A391J	CHIP R 390 J 1/10W		R675			RK73GB2A223J	CHIP R 22K J 1/10W	
R578			RK73EB2E221J	CHIP R 220 J 1/4W		R676			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R579			RK73GB2A101J	CHIP R 100 J 1/10W		R677			RK73GB2A473J	CHIP R 47K J 1/10W	
R581			RK73GB2A000J	CHIP R 0.0 J 1/10W		R678			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R586			RK73GB2A153J	CHIP R 15K J 1/10W		R679			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R592			RK73GB2A473J	CHIP R 47K J 1/10W		R680			RK73GB2A153J	CHIP R 15K J 1/10W	
R593			RK73GB2A471J	CHIP R 470 J 1/10W		R681			RK73GB2A103J	CHIP R 10K J 1/10W	
R595			RK73GB2A000J	CHIP R 0.0 J 1/10W		R682			RK73GB2A221J	CHIP R 220 J 1/10W	
R601			RK73GB2A681J	CHIP R 680 J 1/10W		R683			RK73GB2A333J	CHIP R 33K J 1/10W	
R603,604			RK73GB2A000J	CHIP R 0.0 J 1/10W		R684			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R609			RK73GB2A334J	CHIP R 330K J 1/10W		R685			RK73GB2A563J	CHIP R 56K J 1/10W	
R610			RK73GB2A000J	CHIP R 0.0 J 1/10W		R686			RK73GB2A101J	CHIP R 100 J 1/10W	
R611			RK73GB2A223J	CHIP R 22K J 1/10W		R687			RK73GB2A681J	CHIP R 680 J 1/10W	
R612			RK73GB2A122J	CHIP R 1.2K J 1/10W		R689,690			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R614			RK73GB2A333J	CHIP R 33K J 1/10W		R691			RK73GB2A473J	CHIP R 47K J 1/10W	
R615			RK73GB2A102J	CHIP R 1.0K J 1/10W		R692			RK73GB2A220J	CHIP R 22 J 1/10W	
R616			RK73GB2A104J	CHIP R 100K J 1/10W		R693-695			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R617			RK73GB2A684J	CHIP R 680K J 1/10W		R701			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R618			RK73GB2A682J	CHIP R 6.8K J 1/10W		R702			RK73GB2A331J	CHIP R 330 J 1/10W	
R620			RK73GB2A223J	CHIP R 22K J 1/10W		R703			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R621			RK73GB2A473J	CHIP R 47K J 1/10W		R705,706			RK73GB2A471J	CHIP R 470 J 1/10W	
R622			RK73GB2A223J	CHIP R 22K J 1/10W		R707			RK73GB2A681J	CHIP R 680 J 1/10W	
R623			RK73GB2A183J	CHIP R 18K J 1/10W		R708			RK73GB2A101J	CHIP R 100 J 1/10W	
R624			RK73GB2A273J	CHIP R 27K J 1/10W		R709			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R625			RK73GB2A223J	CHIP R 22K J 1/10W		R710			RK73GB2A224J	CHIP R 220K J 1/10W	
R626			RK73GB2A103J	CHIP R 10K J 1/10W		R711			RK73GB2A331J	CHIP R 330 J 1/10W	
R628			RK73GB2A683J	CHIP R 68K J 1/10W		R712			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R629			RK73GB2A684J	CHIP R 680K J 1/10W		R713			RK73GB2A820J	CHIP R 82 J 1/10W	
R632			RK73GB2A103J	CHIP R 10K J 1/10W		R714			RK73GB2A471J	CHIP R 470 J 1/10W	
R633-636			RK73GB2A473J	CHIP R 47K J 1/10W		R715			RK73GB2A182J	CHIP R 1.8K J 1/10W	
R640			RK73GB2A154J	CHIP R 150K J 1/10W		R716			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R641			RK73GB2A000J	CHIP R 0.0 J 1/10W		R721			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R642			RK73GB2A101J	CHIP R 100 J 1/10W		R722			RK73GB2A103J	CHIP R 10K J 1/10W	
R643			RK73GB2A471J	CHIP R 470 J 1/10W		R723			RK73GB2A822J	CHIP R 8.2K J 1/10W	
R644			RK73GB2A101J	CHIP R 100 J 1/10W		R724			RK73GB2A562J	CHIP R 5.6K J 1/10W	

PARTS LIST

TX-RX UNIT (X57-785X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R725,726			RK73GB2A471J	CHIP R 470 J 1/10W		R807			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R727			RK73GB2A102J	CHIP R 1.0K J 1/10W		R808			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R728			RK73GB2A331J	CHIP R 330 J 1/10W		R809			RK73GB2A182J	CHIP R 1.8K J 1/10W	
R729			RK73GB2A470J	CHIP R 47 J 1/10W		R810			RK73GB2A273J	CHIP R 27K J 1/10W	
R730			RK73GB2A101J	CHIP R 100 J 1/10W		R811,812			RK73GB2A104J	CHIP R 100K J 1/10W	
R731			RK73GB2A330J	CHIP R 33 J 1/10W		R813			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R732			RK73GB2A104J	CHIP R 100K J 1/10W		R814,815			RK73GB2A104J	CHIP R 100K J 1/10W	
R733			RK73GB2A393J	CHIP R 39K J 1/10W		R816			RK73GB2A471J	CHIP R 470 J 1/10W	
R734			RK73GB2A223J	CHIP R 22K J 1/10W		R817			RK73GB2A101J	CHIP R 100 J 1/10W	
R735			RK73GB2A471J	CHIP R 470 J 1/10W		R818			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R736			RK73GB2A224J	CHIP R 220K J 1/10W		R819			RK73GB2A822J	CHIP R 8.2K J 1/10W	
R737			RK73GB2A332J	CHIP R 3.3K J 1/10W		R820			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R738			RK73GB2A102J	CHIP R 1.0K J 1/10W		R821			RK73GB2A103J	CHIP R 10K J 1/10W	
R741			RK73GB2A000J	CHIP R 0.0 J 1/10W		R822			RK73GB2A471J	CHIP R 470 J 1/10W	
R742			RK73GB2A331J	CHIP R 330 J 1/10W		R823			RK73GB2A153J	CHIP R 15K J 1/10W	
R744			RK73GB2A470J	CHIP R 47 J 1/10W		R824			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R745			RK73GB2A100J	CHIP R 10 J 1/10W		R825			RK73GB2A104J	CHIP R 100K J 1/10W	
R746			RK73GB2A332J	CHIP R 3.3K J 1/10W		R826			RK73GB2A103J	CHIP R 10K J 1/10W	
R747			RK73GB2A182J	CHIP R 1.8K J 1/10W		R827			RK73GB2A100J	CHIP R 10 J 1/10W	
R748			RK73GB2A471J	CHIP R 470 J 1/10W		R828			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R749			RK73GB2A103J	CHIP R 10K J 1/10W		R829			RK73GB2A334J	CHIP R 330K J 1/10W	
R750			RK73GB2A470J	CHIP R 47 J 1/10W		R830			RK73GB2A333J	CHIP R 33K J 1/10W	
R751			RK73GB2A331J	CHIP R 330 J 1/10W		R831			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R752			RK73GB2A000J	CHIP R 0.0 J 1/10W		R832			RK73GB2A331J	CHIP R 330 J 1/10W	
R753			RK73GB2A472J	CHIP R 4.7K J 1/10W		R833			RK73GB2A104J	CHIP R 100K J 1/10W	
R762			RK73GB2A101J	CHIP R 100 J 1/10W		R834			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R763			RK73GB2A470J	CHIP R 47 J 1/10W		R835			RK73GB2A104J	CHIP R 100K J 1/10W	
R764			RK73EB2E820J	CHIP R 82 J 1/4W		R836			RK73GB2A153J	CHIP R 15K J 1/10W	
R765			RK73GB2A681J	CHIP R 680 J 1/10W		R837			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R766			RK73GB2A102J	CHIP R 1.0K J 1/10W		R838			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R767			RK73GB2A471J	CHIP R 470 J 1/10W		R839			RK73GB2A101J	CHIP R 100 J 1/10W	
R768			RK73GB2A102J	CHIP R 1.0K J 1/10W		R840			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R769			RK73GB2A000J	CHIP R 0.0 J 1/10W		R841			RK73GB2A100J	CHIP R 10 J 1/10W	
R770			RK73GB2A331J	CHIP R 330 J 1/10W		R842			RK73GB2A822J	CHIP R 8.2K J 1/10W	
R771			RK73GB2A680J	CHIP R 68 J 1/10W		R843			RK73GB2A100J	CHIP R 10 J 1/10W	
R772			RK73GB2A471J	CHIP R 470 J 1/10W		R844			RK73GB2A334J	CHIP R 330K J 1/10W	
R780			RK73GB2A472J	CHIP R 4.7K J 1/10W		R845			RK73GB2A103J	CHIP R 10K J 1/10W	
R781			RK73GB2A103J	CHIP R 10K J 1/10W		R846			RK73GB2A223J	CHIP R 22K J 1/10W	
R782			RK73FB2B821J	CHIP R 820 J 1/8W		R847			RK73GB2A104J	CHIP R 100K J 1/10W	
R783,784			RK73GB2A103J	CHIP R 10K J 1/10W		R848			RK73GB2A123J	CHIP R 12K J 1/10W	
R785			RK73FB2B821J	CHIP R 820 J 1/8W		R849			RK73GB2A474J	CHIP R 470K J 1/10W	
R786			RK73GB2A6R8J	CHIP R 6.8 J 1/10W		R850			RK73GB2A333J	CHIP R 33K J 1/10W	
R787			RK73GB2A821J	CHIP R 820 J 1/10W		R851,852			RK73GB2A334J	CHIP R 330K J 1/10W	
R788,789			RK73GB2A100J	CHIP R 10 J 1/10W		R853			RK73GB2A223J	CHIP R 22K J 1/10W	
R790			RK73GB2A471J	CHIP R 470 J 1/10W		R854-856			RK73GB2A473J	CHIP R 47K J 1/10W	
R791			RK73GB2A102J	CHIP R 1.0K J 1/10W		R857			RK73GB2A330J	CHIP R 33 J 1/10W	
R792			RK73GB2A471J	CHIP R 470 J 1/10W		R858			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R793			RK73GB2A151J	CHIP R 150 J 1/10W		R859			RK73GB2A103J	CHIP R 10K J 1/10W	
R794			RK73GB2A471J	CHIP R 470 J 1/10W		R860			RK73GB2A154J	CHIP R 150K J 1/10W	
R795			RK73GB2A124J	CHIP R 120K J 1/10W		R862			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R796			RK73GB2A184J	CHIP R 180K J 1/10W		R863			RK73GB2A474J	CHIP R 470K J 1/10W	
R797			RK73GB2A563J	CHIP R 56K J 1/10W		R864			RK73GB2A183J	CHIP R 18K J 1/10W	
R798			RK73GB2A154J	CHIP R 150K J 1/10W		R865			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R800			RK73FB2B473J	CHIP R 47K J 1/8W		R866			RK73GB2A223J	CHIP R 22K J 1/10W	
R801			RK73GB2A102J	CHIP R 1.0K J 1/10W		R867			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R802			RK73GB2A473J	CHIP R 47K J 1/10W		R868			RK73GB2A473J	CHIP R 47K J 1/10W	
R803			RK73GB2A683J	CHIP R 68K J 1/10W		R869			RK73GB2A103J	CHIP R 10K J 1/10W	
R804			RK73GB2A334J	CHIP R 330K J 1/10W		R870			RK73GB2A104J	CHIP R 100K J 1/10W	
R805			RK73GB2A000J	CHIP R 0.0 J 1/10W		R871			RK73GB2A224J	CHIP R 220K J 1/10W	
R806			RK73GB2A273J	CHIP R 27K J 1/10W		R872			RK73GB2A104J	CHIP R 100K J 1/10W	

PARTS LIST

TX-RX UNIT (X57-785X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R873			RK73GB2A273J	CHIP R 27K J 1/10W		D431			MC2848-T111	DIODE	
R874			RK73GB2A222J	CHIP R 2.2K J 1/10W		D441			HVC131	DIODE	
R875			RK73GB2A182J	CHIP R 1.8K J 1/10W		D443			HVC131	DIODE	
R876			RK73GB2A394J	CHIP R 390K J 1/10W		D461-464			HVC131	DIODE	
R877			RK73GB2A333J	CHIP R 33K J 1/10W		D471,472			1SV312-F	DIODE	
R878			RK73GB2A184J	CHIP R 180K J 1/10W		D473			HVC131	DIODE	
R879			RK73GB2A224J	CHIP R 220K J 1/10W		D474-477			1SV312-F	DIODE	
R880			RK73GB2A101J	CHIP R 100 J 1/10W		D478			HVC131	DIODE	
R881			RK73GB2A104J	CHIP R 100K J 1/10W		D522-525			L204BBB	DIODE	
R882			RK73GB2A274J	CHIP R 270K J 1/10W		D526		*	MC2858-T111	DIODE	
R883			RK73GB2A000J	CHIP R 0.0 J 1/10W		D551,552			HSM88ASR-E	DIODE	
R884			RK73GB2A221J	CHIP R 220 J 1/10W		D571		*	MC2858-T111	DIODE	
R901,902			RK73GB2A102J	CHIP R 1.0K J 1/10W		D586,587			1SS226-F	DIODE	
R903			RK73GB2A103J	CHIP R 10K J 1/10W		D660			UDZW6.2(B)	ZENER DIODE	
R905,906			RK73GB2A102J	CHIP R 1.0K J 1/10W		D661			1SS226-F	DIODE	
R907-909			RK73GB2A473J	CHIP R 47K J 1/10W		D662			RB706F-40	DIODE	
R910,911			RK73GB2A103J	CHIP R 10K J 1/10W		D663			1SV312-F	DIODE	
R916			RK73GB2A103J	CHIP R 10K J 1/10W		D701		*	MC2858-T111	DIODE	
R917			RK73GB2A102J	CHIP R 1.0K J 1/10W		D702			MA2S111-F	DIODE	
R918,919			RK73GB2A473J	CHIP R 47K J 1/10W		D721,722			RN731V	DIODE	
R920			RK73GB2A103J	CHIP R 10K J 1/10W		D723			HVC131	DIODE	
R921			RK73GB2A102J	CHIP R 1.0K J 1/10W		D741			RN731V	DIODE	
R922			RK73GB2A471J	CHIP R 470 J 1/10W		D761,762			HVC131	DIODE	
R923			RK73GB2A103J	CHIP R 10K J 1/10W		D781			1SV312-F	DIODE	
R924			RK73GB2A102J	CHIP R 1.0K J 1/10W		D782,783			HVC131	DIODE	
R925			RK73GB2A473J	CHIP R 47K J 1/10W		D799,800			EDZ18B	ZENER DIODE	
R927			RK73GB2A473J	CHIP R 47K J 1/10W		D801			EDZ5.1B	ZENER DIODE	
R936			RK73GB2A103J	CHIP R 10K J 1/10W		D802			MA2S111-F	DIODE	
R937,938			RK73GB2A222J	CHIP R 2.2K J 1/10W		D803			1SS388F	DIODE	
R939			RK73GB2A473J	CHIP R 47K J 1/10W		D806			UDZW10(B)	ZENER DIODE	
VR261			R32-0346-05	SEMI FIXED VARIABLE RESISTOR		D807-809			MA2S111-F	DIODE	
VR321			R32-0346-05	SEMI FIXED VARIABLE RESISTOR		D811		*	DZ2J033M	ZENER DIODE	
K11			S51-1420-05	RELAY		D812,813			MA2S111-F	DIODE	
K101,102			S76-0459-05	RELAY		D841-843			MA2S111-F	DIODE	
D11,12			1SS226-F	DIODE		D861,862			1SS388F	DIODE	
D13			MA2S111-F	DIODE		IC11,12			TC74HC4094AFF	MOS-IC	
D14			EDZ18B	ZENER DIODE		IC13			M62353AGPDF5J	MOS-IC	
D15		*	EDZ4.3B	ZENER DIODE		IC14,15			TC74HC4094AFF	MOS-IC	
D17			MA2S111-F	DIODE		IC521			NJM12904V	MOS-IC	
D18						IC591			NJM2591V	BI-POLAR IC	
D20-23		*	MC2858-T111	DIODE		IC592			NJM2732V	BI-POLAR IC	
D24			MA2S111-F	DIODE		IC631			TC4W53FU-F	MOS-IC	
D101			DA221	DIODE		IC701			TA4107F-F	MOS-IC	
D102,103		*	DSP-301N	SURGE ABSORBER		IC761			TA4107F-F	MOS-IC	
			MC2858-T111	DIODE		IC801			NJM12904V	MOS-IC	
D104			V08(G)	DIODE		IC802			TC4W53FU-F	MOS-IC	
D105,106			RLS245	DIODE		IC803			NJM12904V	MOS-IC	
D107			V08(G)	DIODE		IC861			NJM12904V	MOS-IC	
D108-110			HVC131	DIODE		Q12			2SC5383-T111	TRANSISTOR	
D131-156			HVC131	DIODE		Q13			RT1N436U-T111	TRANSISTOR	
D231-234			HVC131	DIODE		Q14			2SK1824-A	FET	
D235		*	MC2858-T111	DIODE		Q15			RT1N141U-T111	TRANSISTOR	
D261			HVC131	DIODE		Q16			RT1N436U-T111	TRANSISTOR	
D281			HVC131	DIODE		Q17			2SB1188(Q,R)	TRANSISTOR	
D321			HVC131	DIODE		Q101,102		*	RT5N234C-T112	TRANSISTOR	
D323			1SV312-F	DIODE		Q103		*	2SC6046-T112	TRANSISTOR	
D351			HVC131	DIODE		Q131-143			RT1N436U-T111	TRANSISTOR	
D371			1SV312-F	DIODE		Q236		*	2SC5551AF	TRANSISTOR	
D421			1SV312-F	DIODE		Q239		*	RT1N436U-T111	TRANSISTOR	
D422,423			HSM88ASR-E	DIODE		Q263-266		*	2SK1740-4	FET	

PARTS LIST

TX-RX UNIT (X57-785X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation	Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
Q267			2SB1694	TRANSISTOR		Q925			RT1N436U-T111	TRANSISTOR	
Q268		*	INK0010AU1-T1	FET		TH421			157-101-65001	THERMISTOR	
Q269			RT1N436U-T111	TRANSISTOR		TH460			157-101-65001	THERMISTOR	
Q270,271			2SB1694	TRANSISTOR		TH531			157-101-65001	THERMISTOR	
Q272		*	INK0010AU1-T1	FET		TH591,592			NCP18WB473J0S	THERMISTOR	
Q273			RT1N436U-T111	TRANSISTOR		TH701			157-302-65801	THERMISTOR	
Q274			2SB1694	TRANSISTOR		TH702,703			157-102-65001	THERMISTOR	
Q281,282		*	2SC5551AF	TRANSISTOR		TH721			157-302-65801	THERMISTOR	
Q301			RT1N141U-T111	TRANSISTOR		TH722			157-101-65001	THERMISTOR	
Q321-324		*	2SK1740-4	FET							
Q351,352		*	2SC5551AF	TRANSISTOR							
Q391		*	2SC5551AF	TRANSISTOR							
Q421			RT1N141U-T111	TRANSISTOR							
Q431			2SC3356-A	TRANSISTOR							
Q451		*	2SC5551AF	TRANSISTOR							
Q453-456			RT1N436U-T111	TRANSISTOR							
Q471-474			RT1N436U-T111	TRANSISTOR							
Q475-477			2SC5383-T111	TRANSISTOR							
Q521,522		*	2SC5551AF	TRANSISTOR							
Q541			2SC3356-A	TRANSISTOR							
Q551			2SC3356-A	TRANSISTOR							
Q571			2SC5383-T111	TRANSISTOR							
Q591			RT1N141U-T111	TRANSISTOR							
Q631			RT1N436U-T111	TRANSISTOR							
Q641			2SC3356-A	TRANSISTOR							
Q651-653			2SC3356-A	TRANSISTOR							
Q654			2SC5383-T111	TRANSISTOR							
Q660,661		*	2SC3134	TRANSISTOR							
Q662			2SA1037AK	TRANSISTOR							
Q663,664			2SC3356-A	TRANSISTOR							
Q665,666			2SC5383-T111	TRANSISTOR							
Q667			2SK1824-A	FET							
Q668-670			2SC5383-T111	TRANSISTOR							
Q671			RT1P141U-T111	TRANSISTOR							
Q702			2SC5383-T111	TRANSISTOR							
Q721			3SK293-F	FET							
Q741			2SK1830F	FET							
Q742			2SC3356-A	TRANSISTOR							
Q781,782		*	INK0010AU1-T1	FET							
Q783			NESG260234	TRANSISTOR							
Q784		*	RT5P431C-T112	TRANSISTOR							
Q801,802			RT1N436U-T111	TRANSISTOR							
Q803,804			2SC5383-T111	TRANSISTOR							
Q805			2SC4617(R)	TRANSISTOR							
Q806			2SK208-F(Y)	FET							
Q807			2SC5383-T111	TRANSISTOR							
Q841			RN47A5-F	TRANSISTOR							
Q842			2SC5383-T111	TRANSISTOR							
Q861,862			RT1N436U-T111	TRANSISTOR							
Q903			RT1N436U-T111	TRANSISTOR							
Q904			2SB1188(Q,R)	TRANSISTOR							
Q905			RT1N141U-T111	TRANSISTOR							
Q906		*	INK0010AU1-T1	FET							
Q907			2SB1188(Q,R)	TRANSISTOR							
Q908,909		*	RT5P431C-T112	TRANSISTOR							
Q910		*	INK0010AU1-T1	FET							
Q911			RT1N436U-T111	TRANSISTOR							
Q915-917			HN7G01FU-F	TRANSISTOR							
Q918			RT1N436U-T111	TRANSISTOR							
Q920			HN7G01FU-F	TRANSISTOR							