


## EXPLODED VIEW (UNIT)

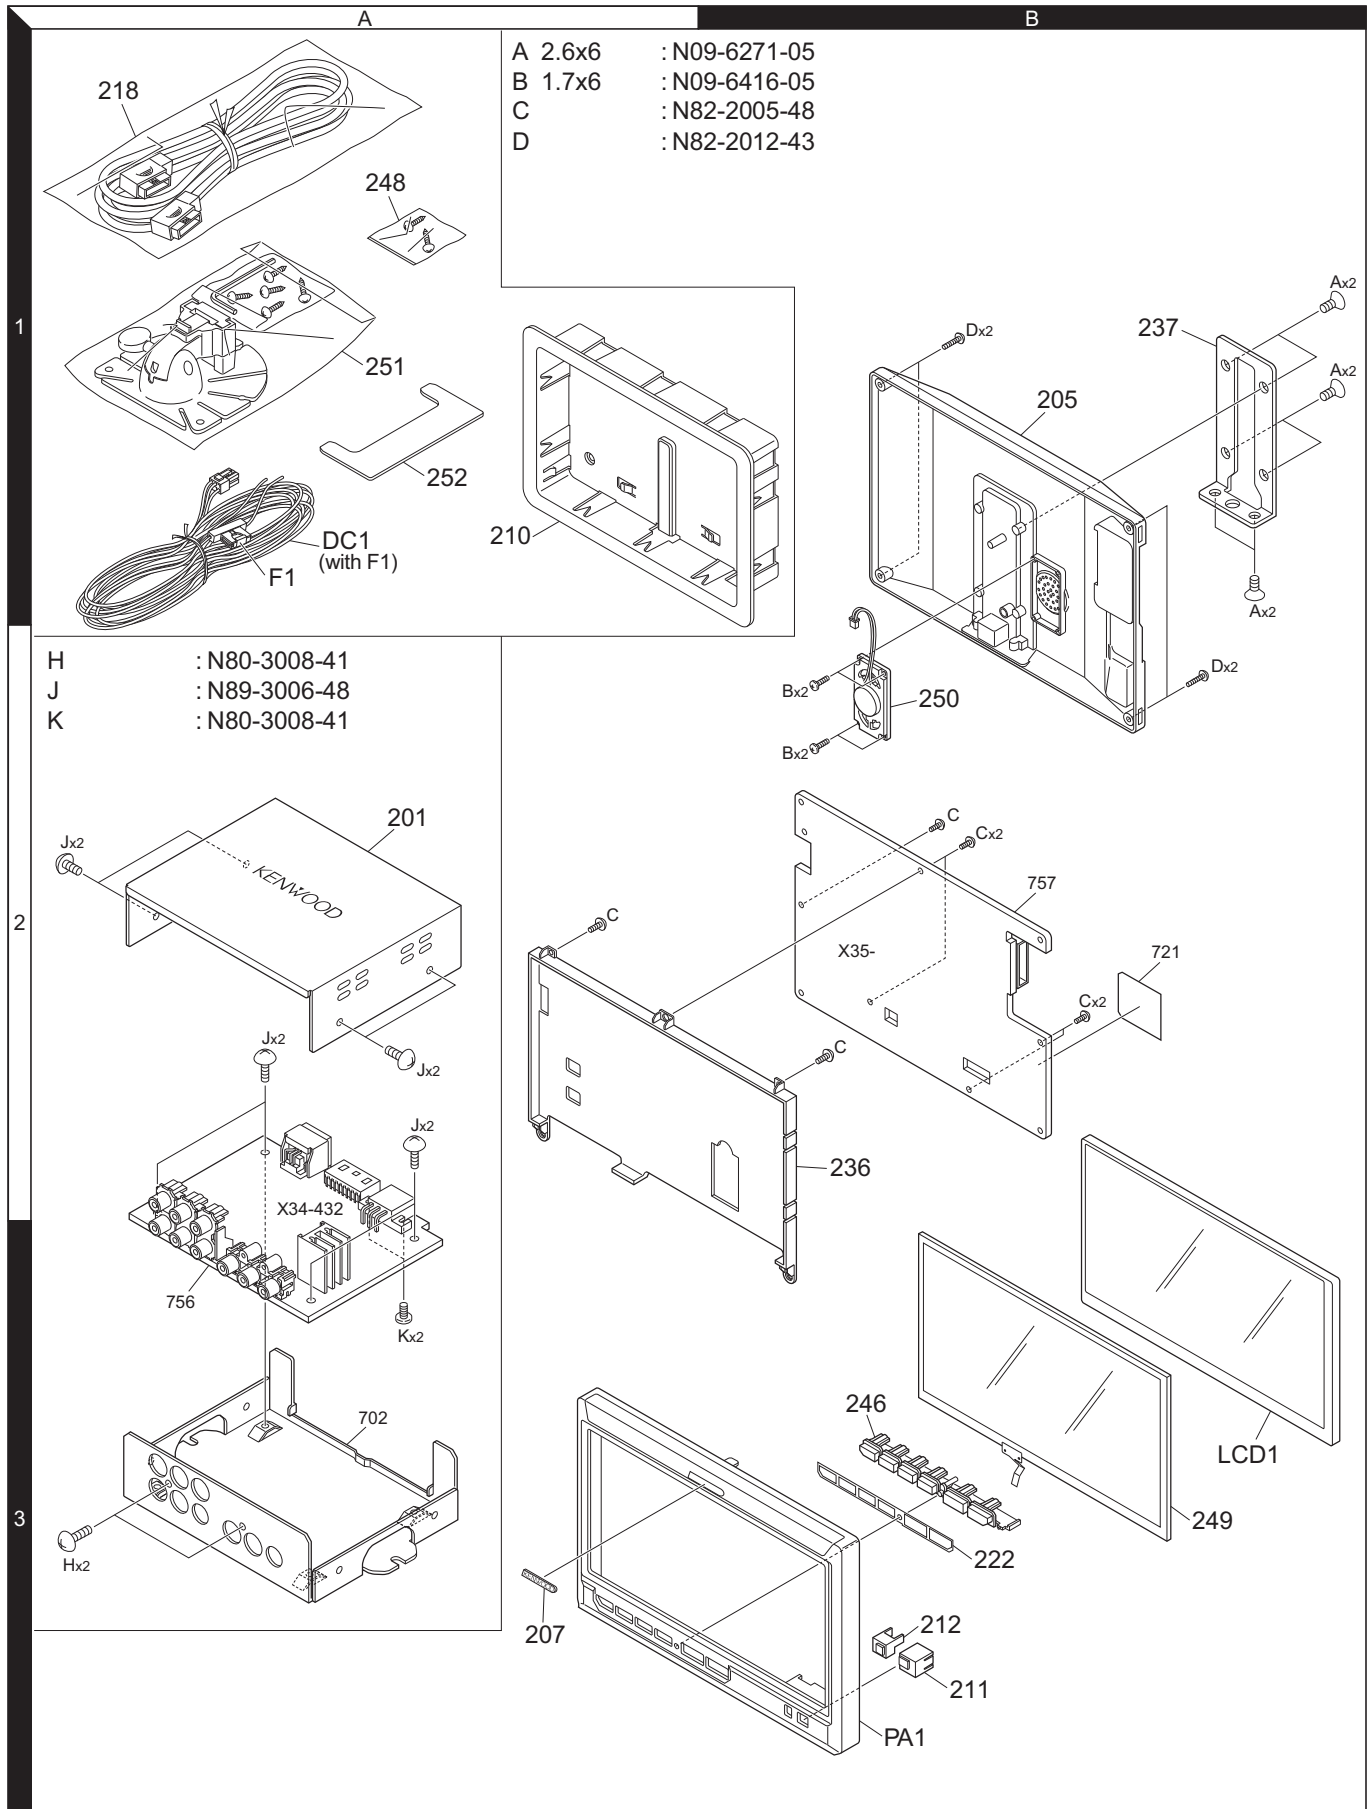

## PARTS LIST

\* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

| Ref. No.                           | A<br>d<br>d | N<br>e<br>w | Parts No.    | Description                   | Desti-<br>nation |
|------------------------------------|-------------|-------------|--------------|-------------------------------|------------------|
| <b>LZ-702W</b>                     |             |             |              |                               |                  |
| 201                                | 2A          | *           | A01-4406-02  | METALLIC CABINET              |                  |
| 205                                | 1B          | *           | A46-1837-01  | REAR COVER                    |                  |
| PA1                                | 3B          | *           | A64-3921-02  | PANEL ASSY                    |                  |
| -                                  |             |             | B46-0682-00  | WARRANTY CARD                 |                  |
| -                                  |             | *           | B64-3411-00  | INST. MANUAL (ENG.S-CHI)      |                  |
| -                                  |             | *           | B64-3411-00  | INST. MANUAL (FRE.GER.DUT)    |                  |
| -                                  |             | *           | B64-3411-00  | INST. MANUAL (ITA.SPA.POR)    |                  |
| 207                                | 3A          |             | B43-1527-04  | BADGE                         |                  |
| 210                                | 1A          | *           | B07-3174-01  | ESCUTCHEON                    |                  |
| 211                                | 3B          |             | B10-4721-03  | FRONT GLASS                   |                  |
| 212                                | 3B          |             | B10-4722-03  | FRONT GLASS                   |                  |
| LCD1                               | 3B          |             | B38-1175-05  | LCD                           |                  |
| 218                                | 1A          | *           | E30-6538-05  | CORD WITH PLUG (3.5m)         |                  |
| DC1                                | 1A          | *           | E30-6587-05  | DC CORD                       |                  |
| 222                                | 3B          | *           | F19-1465-03  | SHIELDING SHEET               |                  |
| F1                                 | 1A          |             | F52-0004-05  | FUSE (MINI BLADE TYPE) (5A)   |                  |
| -                                  |             | *           | H02-0845-03  | INNER CARTON CASE             |                  |
| -                                  |             | *           | H10-4984-02  | POLYSTYRENE FOAMED FIXTURE    |                  |
| -                                  |             | *           | H12-2813-03  | PACKING FIXTURE               |                  |
| -                                  |             |             | H25-0337-04  | PROTECTION BAG (180X300X0.03) |                  |
| -                                  |             |             | H25-1180-04  | PROTECTION BAG (250X250X0.03) |                  |
| -                                  |             |             | H25-1223-04  | PROTECTION BAG (280X280X0.03) |                  |
| -                                  |             | *           | H54-3786-03  | ITEM CARTON CASE              |                  |
| 236                                | 2B          | *           | J19-7131-02  | HOLDER (LCD)                  |                  |
| 237                                | 1B          | *           | J19-7132-04  | HOLDER (MOUNT)                |                  |
| 246                                | 3B          | *           | K25-1834-01  | PUSH KNOB                     |                  |
| 248                                | 1A          | *           | N99-1782-05  | SCREW SET                     |                  |
| A                                  | 1B          |             | N09-6271-05  | TAPTITE SCREW (2.6X6)         |                  |
| B                                  | 2B          | *           | N09-6416-05  | TAPTITE SCREW (1.7X6)         |                  |
| C                                  | 2B          |             | N82-2005-48  | BINDING HEAD TAPTITE SCREW    |                  |
| D                                  | 1B          | *           | N82-2012-43  | BINDING HEAD TAPTITE SCREW    |                  |
| H                                  | 3A          |             | N80-3008-41  | PAN HEAD TAPTITE SCREW        |                  |
| J                                  | 2A          |             | N89-3006-48  | BINDING HEAD TAPTITE SCREW    |                  |
| 249                                | 3B          |             | S79-0854-05  | SWITCH ASSY                   |                  |
| 250                                | 2B          |             | T19-0258-15  | SPEAKER SYSTEM (16-OHM)       |                  |
| 251                                | 1A          |             | W01-1621-05  | MOUNTING HARDWARE             |                  |
| 252                                | 1A          | *           | W01-1672-04  | ACCESSORY                     |                  |
| <b>ELECTRIC UNIT (X34-4320-60)</b> |             |             |              |                               |                  |
| C101                               |             |             | C90-5612-05  | ELECTRO 3900UF 16WV           |                  |
| C102,103                           |             |             | CK73GB1H104K | CHIP C 0.10UF K               |                  |
| C109                               |             |             | CD04BJ1E470M | ELECTRO 47UF 25WV             |                  |
| C110                               |             |             | CD04AS1C101M | ELECTRO 100UF 16WV            |                  |
| C111                               |             |             | CK73GB1H104K | CHIP C 0.10UF K               |                  |
| C112                               |             |             | CD04BJ1E470M | ELECTRO 47UF 25WV             |                  |
| C113                               |             |             | CK73GB1H103K | CHIP C 0.010UF K              |                  |
| C114                               |             |             | CD04AS1C101M | ELECTRO 100UF 16WV            |                  |
| C115                               |             |             | CK73GB1H104K | CHIP C 0.10UF K               |                  |
| C116                               |             |             | CK73FB1C105K | CHIP C 1.0UF K                |                  |

| Ref. No. | A<br>d<br>d | N<br>e<br>w | Parts No.    | Description            | Desti-<br>nation |
|----------|-------------|-------------|--------------|------------------------|------------------|
| C119     |             |             | CD04BA1C100M | ELECTRO 10UF 16WV      |                  |
| C201,202 |             |             | CK73GB1H102K | CHIP C 1000PF K        |                  |
| C203     |             |             | CD04BA1H2R2M | ELECTRO 2.2UF 50WV     |                  |
| C204     |             |             | CD04AY1H220M | ELECTRO 22UF 50WV      |                  |
| C205     |             |             | CD04BA1H2R2M | ELECTRO 2.2UF 50WV     |                  |
| C206     |             |             | CD04BA1C100M | ELECTRO 10UF 16WV      |                  |
| C207     |             |             | CK73GB1H104K | CHIP C 0.10UF K        |                  |
| C208     |             |             | CD04AY1H220M | ELECTRO 22UF 50WV      |                  |
| C209     |             |             | CD04BA1H2R2M | ELECTRO 2.2UF 50WV     |                  |
| C210     |             |             | CD04AY1H220M | ELECTRO 22UF 50WV      |                  |
| C211     |             |             | CD04BA1H2R2M | ELECTRO 2.2UF 50WV     |                  |
| C212     |             |             | CK73GB1H104K | CHIP C 0.10UF K        |                  |
| C213     |             |             | CD04BA1C100M | ELECTRO 10UF 16WV      |                  |
| C214     |             |             | CD04AY1H220M | ELECTRO 22UF 50WV      |                  |
| C221     |             |             | CK73GB1H222K | CHIP C 2200PF K        |                  |
| C224,225 |             |             | CK73GB1H102K | CHIP C 1000PF K        |                  |
| C401     |             |             | CK73FB1C105K | CHIP C 1.0UF K         |                  |
| C402     |             |             | CD04BJ0J331M | ELECTRO 330UF 6.3WV    |                  |
| C403     |             |             | CK73GB1H104K | CHIP C 0.10UF K        |                  |
| C404     |             |             | CD04BA1C100M | ELECTRO 10UF 16WV      |                  |
| C405     |             |             | CD04BJ1A221M | ELECTRO 220UF 10WV     |                  |
| C406     |             |             | CD04BJ0J331M | ELECTRO 330UF 6.3WV    |                  |
| C407,408 |             |             | CD04BA1C100M | ELECTRO 10UF 16WV      |                  |
| C409,410 |             |             | CK73GB1H222K | CHIP C 2200PF K        |                  |
| C411     |             |             | CD04BA1C100M | ELECTRO 10UF 16WV      |                  |
| C412     |             |             | CK73GB1H222K | CHIP C 2200PF K        |                  |
| C501-504 |             |             | CD04BA1C100M | ELECTRO 10UF 16WV      |                  |
| C505     |             |             | CK73FB1A225K | CHIP C 2.2UF K         |                  |
| C506     |             |             | CD04AX1C100M | NP-ELEC 10UF 16WV      |                  |
| C509     |             |             | CD04AX1C100M | NP-ELEC 10UF 16WV      |                  |
| C510     |             |             | CK73FB1A225K | CHIP C 2.2UF K         |                  |
| C511     |             |             | CD04AX1C100M | NP-ELEC 10UF 16WV      |                  |
| C514     |             |             | CD04AX1C100M | NP-ELEC 10UF 16WV      |                  |
| C515     |             |             | CK73GB1H104K | CHIP C 0.10UF K        |                  |
| C601-603 |             |             | CK73GB1H102K | CHIP C 1000PF K        |                  |
| C604-606 |             |             | CK73FB1A225K | CHIP C 2.2UF K         |                  |
| C607     |             |             | CD04BA1H2R2M | ELECTRO 2.2UF 50WV     |                  |
| C608     |             |             | CD04AY1H220M | ELECTRO 22UF 50WV      |                  |
| C609     |             |             | CD04BA1H2R2M | ELECTRO 2.2UF 50WV     |                  |
| C610-612 |             |             | CK73FB1C105K | CHIP C 1.0UF K         |                  |
| C613     |             |             | CK73FB1A225K | CHIP C 2.2UF K         |                  |
| C614     |             |             | CD04BA1C100M | ELECTRO 10UF 16WV      |                  |
| C615     |             |             | CK73GB1H104K | CHIP C 0.10UF K        |                  |
| C616     |             |             | CD04AY1H220M | ELECTRO 22UF 50WV      |                  |
| C617     |             |             | CK73GB1H104K | CHIP C 0.10UF K        |                  |
| C618,619 |             |             | CD04BJ0J331M | ELECTRO 330UF 6.3WV    |                  |
| C620     |             |             | CK73GB1H104K | CHIP C 0.10UF K        |                  |
| C621     |             |             | CD04BA1C100M | ELECTRO 10UF 16WV      |                  |
| C622     |             |             | CD04BJ0J331M | ELECTRO 330UF 6.3WV    |                  |
| C623,624 |             |             | CK73FB1C105K | CHIP C 1.0UF K         |                  |
| C625     |             |             | CK73GB1H104K | CHIP C 0.10UF K        |                  |
| C801     |             |             | CK73GB1H104K | CHIP C 0.10UF K        |                  |
| J101     |             |             | E58-0816-05  | RECTANGULAR RECEPTACLE |                  |
| J102     |             |             | E63-0917-05  | PIN JACK               |                  |

**E** : Europe **K** : North America **M** : Other Areas **W** : Without Europe

△ Indicates safety critical components.

## PARTS LIST

## ELECTRIC UNIT (X34-4320-60)

| Ref. No. | Add | New | Parts No.    | Description                  | Destination | Ref. No.  | Add | New | Parts No.      | Description         | Destination |
|----------|-----|-----|--------------|------------------------------|-------------|-----------|-----|-----|----------------|---------------------|-------------|
| J103     |     |     | E63-0919-05  | PIN JACK                     |             | R611-613  |     |     | RK73FB2B101J   | CHIP R 100 J 1/8W   |             |
| J601     |     |     | E56-0868-05  | CYLINDRICAL RECEPTACLE       |             | R614      |     |     | RK73GB2A102J   | CHIP R 1.0K J 1/10W |             |
| J801     |     |     | E58-1035-05  | RECTANGULAR RECEPTACLE       |             | R615      |     |     | RK73GB2A103J   | CHIP R 10K J 1/10W  |             |
| L101     |     |     | L33-2283-05  | CHOKE COIL                   |             | R616      |     |     | RK73EB2E750J   | CHIP R 75 J 1/4W    |             |
| L102     |     | *   | L33-2324-05  | CHOKE COIL                   |             | R617      |     |     | RK73GB2A103J   | CHIP R 10K J 1/10W  |             |
| L103     |     |     | L41-1005-33  | SMALL FIXED INDUCTOR (10UH)  |             | R618      |     |     | RK73EB2E750J   | CHIP R 75 J 1/4W    |             |
| K        | 3A  |     | N80-3008-41  | PAN HEAD TAPTITE SCREW (3X8) |             | R619      |     |     | RK73GB2A103J   | CHIP R 10K J 1/10W  |             |
| R102     |     |     | RK73EB2E000J | CHIP R 0.0 J 1/4W            |             | R620      |     |     | RK73EB2E750J   | CHIP R 75 J 1/4W    |             |
| R103     |     |     | RK73EB2E123J | CHIP R 12K J 1/4W            |             | R621,622  |     |     | RK73GB2A562J   | CHIP R 5.6K J 1/10W |             |
| R104     |     |     | RK73GB2A473J | CHIP R 47K J 1/10W           |             | R623      |     |     | RK73FB2B101J   | CHIP R 100 J 1/8W   |             |
| R105     |     |     | RK73GB2A302J | CHIP R 3.0K J 1/10W          |             | R801-808  |     |     | RK73FB2B101J   | CHIP R 100 J 1/8W   |             |
| R106     |     |     | RK73GB2A183J | CHIP R 18K J 1/10W           |             | R810      |     |     | RK73GB2A000J   | CHIP R 0.0 J 1/10W  |             |
| R107     |     |     | RK73GB2A000J | CHIP R 0.0 J 1/10W           |             | D101      |     |     | RM10ZLFNF      | DIODE               |             |
| R108     |     |     | RK73EB2E104J | CHIP R 100K J 1/4W           |             | D103      |     |     | 1SR154-400     | DIODE               |             |
| R110     |     |     | RK73EB2E472J | CHIP R 4.7K J 1/4W           |             | D104      |     |     | DAP202U        | DIODE               |             |
| R111     |     |     | RK73GB2A473J | CHIP R 47K J 1/10W           |             | D105      |     |     | UDZS6.8B       | ZENER DIODE         |             |
| R113     |     |     | RK73GB2A000J | CHIP R 0.0 J 1/10W           |             | D201-206  |     |     | DA204U         | DIODE               |             |
| R114,115 |     |     | RK73GB2A103J | CHIP R 10K J 1/10W           |             | D207      |     |     | DAP202U        | DIODE               |             |
| R116,117 |     |     | RK73GB2A000J | CHIP R 0.0 J 1/10W           |             | D401      |     |     | DAP202U        | DIODE               |             |
| R201-203 |     |     | RK73GB2A000J | CHIP R 0.0 J 1/10W           |             | D404      |     |     | AVRM1608270MAA | VARISTOR            |             |
| R204     |     |     | RK73FB2B102J | CHIP R 1.0K J 1/8W           |             | D405,406  |     |     | DAP202U        | DIODE               |             |
| R205     |     |     | RK73FB2B101J | CHIP R 100 J 1/8W            |             | D501,502  |     |     | STZ6.8N        | ZENER DIODE         |             |
| R206,207 |     |     | RK73FB2B102J | CHIP R 1.0K J 1/8W           |             | D601      |     |     | STZ6.2N        | ZENER DIODE         |             |
| R208     |     |     | RK73FB2B101J | CHIP R 100 J 1/8W            |             | D602      |     |     | UDZS6.8B       | ZENER DIODE         |             |
| R209     |     |     | RK73FB2B102J | CHIP R 1.0K J 1/8W           |             | D603-608  |     |     | DA204U         | DIODE               |             |
| R210,211 |     |     | RK73GB2A750J | CHIP R 75 J 1/10W            |             | D609      |     |     | UDZS6.8B       | ZENER DIODE         |             |
| R216,217 |     |     | RK73GB2A000J | CHIP R 0.0 J 1/10W           |             | D610      |     |     | DAP202U        | DIODE               |             |
| R218     |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W          |             | D801      |     |     | STZ6.8N        | ZENER DIODE         |             |
| R401     |     |     | RK73GB2A103J | CHIP R 10K J 1/10W           |             | D802      |     |     | STZ6.2N        | ZENER DIODE         |             |
| R402     |     |     | RK73EB2E750J | CHIP R 75 J 1/4W             |             | D803      |     |     | STZ6.8N        | ZENER DIODE         |             |
| R403     |     |     | RK73GB2A101J | CHIP R 100 J 1/10W           |             | D804      |     |     | STZ6.2N        | ZENER DIODE         |             |
| R404,405 |     |     | RK73GB2A301J | CHIP R 300 J 1/10W           |             | D805      |     |     | STZ6.8N        | ZENER DIODE         |             |
| R406     |     |     | RK73EB2E750J | CHIP R 75 J 1/4W             |             | D806      |     |     | STZ6.2N        | ZENER DIODE         |             |
| R407,408 |     |     | RK73FB2B471J | CHIP R 470 J 1/8W            |             | D807      |     |     | STZ6.8N        | ZENER DIODE         |             |
| R409,410 |     |     | RK73GB2A473J | CHIP R 47K J 1/10W           |             | D808      |     |     | STZ6.2N        | ZENER DIODE         |             |
| R411     |     |     | RK73FB2B100J | CHIP R 10 J 1/8W             |             | D809,810  |     |     | AVRM1608270MAA | VARISTOR            |             |
| R412     |     |     | RK73GB2A473J | CHIP R 47K J 1/10W           |             | IC101     |     |     | BA00CCWT       | ANALOGUE IC         |             |
| R413     |     |     | RK73GB2A000J | CHIP R 0.0 J 1/10W           |             | IC102     |     |     | NJM78M05DL1AZB | ANALOGUE IC         |             |
| R414,415 |     |     | RK73FB2B101J | CHIP R 100 J 1/8W            |             | IC201,202 |     |     | BA3121F        | ANALOGUE IC         |             |
| R501     |     |     | RK73FB2B101J | CHIP R 100 J 1/8W            |             | IC401     |     |     | NJM2267V-ZB    | ANALOGUE IC         |             |
| R502,503 |     |     | RK73GB2A562J | CHIP R 5.6K J 1/10W          |             | IC501     |     |     | CXA2089Q       | ANALOGUE IC         |             |
| R504     |     |     | RK73FB2B101J | CHIP R 100 J 1/8W            |             | IC601     |     |     | BA3121F        | ANALOGUE IC         |             |
| R505,506 |     |     | RK73GB2A562J | CHIP R 5.6K J 1/10W          |             | IC602     |     |     | TC7WH34FU-F    | MOS-IC              |             |
| R507,508 |     |     | RK73GB2A473J | CHIP R 47K J 1/10W           |             | IC603     |     |     | NJM2267V-ZB    | ANALOGUE IC         |             |
| R509,510 |     |     | RK73FB2B471J | CHIP R 470 J 1/8W            |             | IC604     |     |     | MM1234XFB-E    | ANALOGUE IC         |             |
| R513,514 |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W          |             | IC801     |     |     | TC7WH34FU-F    | MOS-IC              |             |
| R601     |     |     | RK73GB2A750J | CHIP R 75 J 1/10W            |             | Q103      |     |     | DTA124EUA      | DIGITAL TRANSISTOR  |             |
| R602-604 |     |     | RK73FB2B101J | CHIP R 100 J 1/8W            |             | Q104      |     |     | DTC124EUA      | DIGITAL TRANSISTOR  |             |
| R605     |     |     | RK73GB2A750J | CHIP R 75 J 1/10W            |             | Q401      |     |     | 2SA1576A       | TRANSISTOR          |             |
| R606     |     |     | RK73FB2B102J | CHIP R 1.0K J 1/8W           |             | Q402,403  |     |     | DTC323TU       | DIGITAL TRANSISTOR  |             |
| R607     |     |     | RK73FB2B101J | CHIP R 100 J 1/8W            |             | Q404      |     |     | DTA124EUA      | DIGITAL TRANSISTOR  |             |
| R608     |     |     | RK73FB2B102J | CHIP R 1.0K J 1/8W           |             | Q405      |     |     | DTC124EUA      | DIGITAL TRANSISTOR  |             |
| R609,610 |     |     | RK73GB2A750J | CHIP R 75 J 1/10W            |             | Q406      |     |     | DTA124EUA      | DIGITAL TRANSISTOR  |             |

E : Europe K : North America M : Other Areas W : Without Europe

△ Indicates safety critical components.

## PARTS LIST

| Ref. No.                        | Add | New | Parts No.     | Description        | Destination |
|---------------------------------|-----|-----|---------------|--------------------|-------------|
| <b>VIDEO UNIT (X35-4640-60)</b> |     |     |               |                    |             |
| C1                              |     |     | CK73HB1E103K  | CHIP C 0.010UF K   |             |
| C2                              |     |     | CE32CL1C100M  | CHIP EL 10UF 16WV  |             |
| C3                              |     |     | CC73HCH1H100D | CHIP C 10PF D      |             |
| C4                              |     |     | CK73EB1E225K  | CHIP C 2.2UF K     |             |
| C5                              |     |     | CK73HB1H102K  | CHIP C 1000PF K    |             |
| C6                              |     |     | CK73HB1H561K  | CHIP C 560PF K     |             |
| C7                              |     |     | CC73GCH1H102J | CHIP C 1000PF J    |             |
| C8                              |     |     | CK73EB1E105K  | CHIP C 1.0UF K     |             |
| C9                              |     |     | CK73GB1H104K  | CHIP C 0.10UF K    |             |
| C10                             |     |     | CK73HB1H102K  | CHIP C 1000PF K    |             |
| C11                             |     |     | CC73GCH1H102J | CHIP C 1000PF J    |             |
| C13                             |     |     | CC73HCH1H390J | CHIP C 39PF J      |             |
| C14                             |     |     | CK73EB1A106K  | CHIP C 10UF K      |             |
| C15                             |     |     | CK73GB1H104K  | CHIP C 0.10UF K    |             |
| C16                             |     |     | CK73HB1H102K  | CHIP C 1000PF K    |             |
| C17                             |     |     | CC73HCH1H390J | CHIP C 39PF J      |             |
| C18                             |     |     | CK73HB1H102K  | CHIP C 1000PF K    |             |
| C20                             |     |     | CK73GB1H104K  | CHIP C 0.10UF K    |             |
| C21                             |     |     | CK73HB1H102K  | CHIP C 1000PF K    |             |
| C22                             |     |     | CK73GB1H104K  | CHIP C 0.10UF K    |             |
| C23                             |     |     | CC73GCH1H680J | CHIP C 68PF J      |             |
| C24                             |     |     | CK73GB1H104K  | CHIP C 0.10UF K    |             |
| C25,26                          |     |     | CK73HB1H102K  | CHIP C 1000PF K    |             |
| C27                             |     |     | CC73GCH1H102J | CHIP C 1000PF J    |             |
| C28                             |     |     | CC73HCH1H101J | CHIP C 100PF J     |             |
| C29,30                          |     |     | CK73GB1H104K  | CHIP C 0.10UF K    |             |
| C31                             |     |     | CC73GCH1H681J | CHIP C 680PF J     |             |
| C32                             |     |     | CK73GB1H104K  | CHIP C 0.10UF K    |             |
| C33                             |     |     | CC73HCH1H101J | CHIP C 100PF J     |             |
| C34                             |     |     | CK73FB1A225K  | CHIP C 2.2UF K     |             |
| C35                             |     |     | CK73EB1E105K  | CHIP C 1.0UF K     |             |
| C36                             |     |     | CK73FB0J106K  | CHIP C 10UF K      |             |
| C37                             |     |     | CK73FB1C105K  | CHIP C 1.0UF K     |             |
| C38                             |     |     | CK73GB1H223K  | CHIP C 0.022UF K   |             |
| C39,40                          |     |     | CC73GCH1H101J | CHIP C 100PF J     |             |
| C51                             |     |     | CK73GB1H104K  | CHIP C 0.10UF K    |             |
| C81                             |     |     | CE32CL0J470M  | CHIP EL 47UF 6.3WV |             |
| C101                            |     |     | CK73EB1A106K  | CHIP C 10UF K      |             |
| C104                            |     |     | CE32CL1C470M  | CHIP EL 47UF 16WV  |             |
| C105                            |     |     | CK73GB1H104K  | CHIP C 0.10UF K    |             |
| C107                            |     |     | CK73GB1H104K  | CHIP C 0.10UF K    |             |
| C110                            |     |     | CE32CL1C220M  | CHIP EL 22UF 16WV  |             |
| C111                            |     |     | CK73GB1H102K  | CHIP C 1000PF K    |             |
| C112                            |     |     | CK73GB1A105K  | CHIP C 1.0UF K     |             |
| C113                            |     |     | CE32CL1C220M  | CHIP EL 22UF 16WV  |             |
| C114                            |     |     | CK73GB1H104K  | CHIP C 0.10UF K    |             |
| C115,116                        |     |     | CK73GB1H102K  | CHIP C 1000PF K    |             |
| C118                            |     |     | CK73GB1H103K  | CHIP C 0.010UF K   |             |
| C120                            |     |     | CK73GB1H103K  | CHIP C 0.010UF K   |             |
| C121                            |     |     | CK73GB1H104K  | CHIP C 0.10UF K    |             |
| C122                            |     |     | CK73GB1H103K  | CHIP C 0.010UF K   |             |
| C124                            |     |     | CK73GB1H103K  | CHIP C 0.010UF K   |             |
| C125                            |     |     | CK73GB1H104K  | CHIP C 0.10UF K    |             |

| Ref. No. | Add | New | Parts No.     | Description         | Destination |
|----------|-----|-----|---------------|---------------------|-------------|
| C126     |     |     | CK73GB1H103K  | CHIP C 0.010UF K    |             |
| C127     |     |     | CK73GB1H102K  | CHIP C 1000PF K     |             |
| C128     |     |     | CK73HB1E103K  | CHIP C 0.010UF K    |             |
| C129     |     |     | CK73GB1H103K  | CHIP C 0.010UF K    |             |
| C130     |     |     | CK73GB1A105K  | CHIP C 1.0UF K      |             |
| C131     |     |     | CC73GCH1H821J | CHIP C 820PF J      |             |
| C132     |     |     | CK73EB1A106K  | CHIP C 10UF K       |             |
| C133     |     |     | CK73GB1A105K  | CHIP C 1.0UF K      |             |
| C134     |     |     | CK73GB1H104K  | CHIP C 0.10UF K     |             |
| C135     |     |     | CK73GB1H682K  | CHIP C 6800PF K     |             |
| C136     |     |     | CK73EB1A106K  | CHIP C 10UF K       |             |
| C138     |     |     | CK73GB1H104K  | CHIP C 0.10UF K     |             |
| C139     |     |     | CE32CL1C470M  | CHIP EL 47UF 16WV   |             |
| C140     |     |     | CK73GB1H104K  | CHIP C 0.10UF K     |             |
| C141     |     |     | CK73GB1H103K  | CHIP C 0.010UF K    |             |
| C142,143 |     |     | CC73GCH1H080D | CHIP C 8.0PF D      |             |
| C144-146 |     |     | CK73GB1A105K  | CHIP C 1.0UF K      |             |
| C147     |     |     | CK73GB1A474K  | CHIP C 0.47UF K     |             |
| C148-150 |     |     | CK73HB1E103K  | CHIP C 0.010UF K    |             |
| C210     |     |     | CK73GB1H103K  | CHIP C 0.010UF K    |             |
| C218     |     |     | CK73GB1H104K  | CHIP C 0.10UF K     |             |
| C221     |     |     | CC73GCH1H270J | CHIP C 27PF J       |             |
| C227     |     |     | CK73GB1H153K  | CHIP C 0.015UF K    |             |
| C228     |     |     | CK73EB1E105K  | CHIP C 1.0UF K      |             |
| C231,232 |     |     | CK73GB1H104K  | CHIP C 0.10UF K     |             |
| C234     |     |     | CK73GB1H104K  | CHIP C 0.10UF K     |             |
| C252     |     |     | CK73GB1H104K  | CHIP C 0.10UF K     |             |
| C253     |     |     | CK73DF1E106Z  | CHIP C 10UF Z       |             |
| C254     |     |     | CK73EB1E105K  | CHIP C 1.0UF K      |             |
| C255     |     |     | CC73GCH1H270J | CHIP C 27PF J       |             |
| C257     |     |     | CK73FB0J106K  | CHIP C 10UF K       |             |
| C259     |     |     | CK73GB1H104K  | CHIP C 0.10UF K     |             |
| C270     |     |     | CK73GB1A105K  | CHIP C 1.0UF K      |             |
| C300     |     |     | CE32CL0J101M  | CHIP EL 100UF 6.3WV |             |
| C301     |     |     | CK73HB1E103K  | CHIP C 0.010UF K    |             |
| C302     |     |     | CK73HB1H102K  | CHIP C 1000PF K     |             |
| C303     |     |     | CE32BM1C100M  | CHIP EL 10UF 16WV   |             |
| C305     |     |     | CK73GB1H104K  | CHIP C 0.10UF K     |             |
| C306,307 |     |     | CK73HB1H102K  | CHIP C 1000PF K     |             |
| C308     |     |     | CK73GB1H104K  | CHIP C 0.10UF K     |             |
| C309     |     |     | CC73GCH1H101J | CHIP C 100PF J      |             |
| C310,311 |     |     | CK73GB1H104K  | CHIP C 0.10UF K     |             |
| C312     |     |     | CK73GB1H153K  | CHIP C 0.015UF K    |             |
| C313     |     |     | CC73HCH1H020C | CHIP C 2.0PF C      |             |
| C314     |     |     | CC73HCH1H101J | CHIP C 100PF J      |             |
| C315     |     |     | CK73GB1H104K  | CHIP C 0.10UF K     |             |
| C317-320 |     |     | CC73GCH1H101J | CHIP C 100PF J      |             |
| C321-323 |     |     | CC73HCH1H100D | CHIP C 10PF D       |             |
| C324     |     |     | CK73GB1H102K  | CHIP C 1000PF K     |             |
| C325     |     |     | CK73GB1H103K  | CHIP C 0.010UF K    |             |
| C326,327 |     |     | CK73GB1H104K  | CHIP C 0.10UF K     |             |
| C329     |     |     | CK73GB1H102K  | CHIP C 1000PF K     |             |
| C400     |     |     | CE32BM1C100M  | CHIP EL 10UF 16WV   |             |
| C401     |     |     | CK73GB1H104K  | CHIP C 0.10UF K     |             |
| C402     |     |     | CK73GB1H103K  | CHIP C 0.010UF K    |             |

E : Europe K : North America M : Other Areas W : Without Europe

△ Indicates safety critical components.

## PARTS LIST

## VIDEO UNIT (X35-4640-60)

| Ref. No. | Add | New | Parts No.     | Description        | Destination | Ref. No.  | Add | New | Parts No.    | Description                     | Destination |
|----------|-----|-----|---------------|--------------------|-------------|-----------|-----|-----|--------------|---------------------------------|-------------|
| C403     |     |     | CE32BM1C100M  | CHIP EL 10UF 16WV  |             | C821,822  |     |     | CE32CL1C100M | CHIP EL 10UF 16WV               |             |
| C404,405 |     |     | CK73GB1H103K  | CHIP C 0.010UF K   |             | C823      |     |     | CE32BJ1C101M | CHIP EL 100UF 16WV              |             |
| C406     |     |     | CK73FB1C105K  | CHIP C 1.0UF K     |             | C824-826  |     |     | CK73GB1H104K | CHIP C 0.10UF K                 |             |
| C407-409 |     |     | CK73GB1H103K  | CHIP C 0.010UF K   |             | C827      |     |     | CE32BJ1C470M | CHIP EL 47UF 16WV               |             |
| C410     |     |     | CK73GB1H104K  | CHIP C 0.10UF K    |             | C904      |     |     | C90-5670-05  | ELECTRO 2200UF 16WV             |             |
| C412     |     |     | CK73GB1H104K  | CHIP C 0.10UF K    |             | C906      |     |     | CE32BM1C221M | CHIP EL 220UF 16WV              |             |
| C413     |     |     | CK73FB1C105K  | CHIP C 1.0UF K     |             | C907-909  |     |     | CK73GB0J475K | CHIP C 4.7UF K                  |             |
| C500     |     |     | CK73FB1C105K  | CHIP C 1.0UF K     |             | C910,911  |     |     | CE32BM1C221M | CHIP EL 220UF 16WV              |             |
| C501     |     |     | CK73GB1A474K  | CHIP C 0.47UF K    |             | C913      |     |     | CE32BF1C221M | CHIP EL 220UF 16WV              |             |
| C502     |     |     | CK73GB1H152K  | CHIP C 1500PF K    |             | C914      |     |     | CK73GB1H104K | CHIP C 0.10UF K                 |             |
| C503     |     |     | CK73GB1A105K  | CHIP C 1.0UF K     |             | CN1       |     |     | E41-2208-05  | FLAT CABLE CONNECTOR            |             |
| C504     |     |     | CK73GB1A474K  | CHIP C 0.47UF K    |             | CN200     |     |     | E41-2088-05  | FLAT CABLE CONNECTOR            |             |
| C505     |     |     | CK73GB1H103K  | CHIP C 0.010UF K   |             | CN300     |     |     | E41-2435-05  | FLAT CABLE CONNECTOR            |             |
| C506     |     |     | CK73EB1E105K  | CHIP C 1.0UF K     |             | CN302     |     |     | E41-2642-05  | PIN ASSY                        |             |
| C507     |     |     | C93-1363-05   | CHIP C 10PF        |             | CN801     |     |     | E41-2550-05  | PIN ASSY                        |             |
| C508     |     |     | CK73GB1H103K  | CHIP C 0.010UF K   |             | J900      |     |     | E58-1035-05  | RECTANGULAR RECEPTACLE          |             |
| C509     |     |     | CK73GB1H104K  | CHIP C 0.10UF K    |             | F501      |     |     | F53-0374-05  | FUSE (1.5A)                     |             |
| C510     |     |     | C93-1377-05   | CHIP C 4700PF 50WV |             | F901      |     | *   | F53-0388-05  | FUSE (1.25A)                    |             |
| C511     |     |     | CK73GB1H104K  | CHIP C 0.10UF K    |             | L1-4      |     |     | L41-1005-33  | SMALL FIXED INDUCTOR (10UH)     |             |
| C512     |     |     | CK73FB1C105K  | CHIP C 1.0UF K     |             | L5        |     |     | L40-6895-85  | SMALL FIXED INDUCTOR (6.8UH)    |             |
| C513-515 |     |     | CK73GB1H104K  | CHIP C 0.10UF K    |             | L6        |     |     | L92-0397-05  | CHIP FERRITE                    |             |
| C516     |     |     | CC73GCH1H101J | CHIP C 100PF J     |             | L100      |     |     | L41-1005-33  | SMALL FIXED INDUCTOR (10UH)     |             |
| C517     |     |     | CC73GCH1H221J | CHIP C 220PF J     |             | L102-104  |     |     | L41-1005-33  | SMALL FIXED INDUCTOR (10UH)     |             |
| C518     |     |     | CC73GCH1H101J | CHIP C 100PF J     |             | L200      |     |     | L41-1005-33  | SMALL FIXED INDUCTOR (10UH)     |             |
| C519     |     |     | CE32BM1C220M  | CHIP EL 22UF 16WV  |             | L201      |     |     | L33-2299-05  | SMALL FIXED INDUCTOR (10UH)     |             |
| C520-522 |     |     | CK73GB1H104K  | CHIP C 0.10UF K    |             | L500      |     | *   | L19-0793-05  | CHOKE COIL                      |             |
| C523     |     |     | CK73GB1H102K  | CHIP C 1000PF K    |             | L501-503  |     |     | L33-2258-05  | TRANSFORMER FOR CONVERTER       |             |
| C524     |     |     | CK73GB1H104K  | CHIP C 0.10UF K    |             | L801      |     |     | L92-0371-05  | SMALL FIXED INDUCTOR (47UH)     |             |
| C525     |     |     | CE32CL1C470M  | CHIP EL 47UF 16WV  |             | L901,902  |     |     | L33-2258-05  | FERRITE CORE                    |             |
| C526     |     |     | CK73GB1H103K  | CHIP C 0.010UF K   |             | X100      |     |     | L77-2906-05  | SMALL FIXED INDUCTOR (47UH)     |             |
| C527     |     |     | CK73GB1H102K  | CHIP C 1000PF K    |             | X101      |     |     | L77-2905-05  | CRYSTAL RESONATOR (4.433619MHZ) |             |
| C528     |     |     | CE32CL0J470M  | CHIP EL 47UF 6.3WV |             | X300      |     |     | L78-1212-05  | CRYSTAL RESONATOR (3.579545MHZ) |             |
| C529     |     |     | CK73GB1A334K  | CHIP C 0.33UF K    |             | CP300     |     |     | RK74HB1J101J | RESONATOR (16.00MHZ)            |             |
| C530     |     |     | CE32BM1C221M  | CHIP EL 220UF 16WV |             | CP301     |     |     | RK74HB1J103J | CHIP-COM 100 J 1/16W            |             |
| C531     |     |     | CK73GB1A105K  | CHIP C 1.0UF K     |             | CP302     |     |     | RK74HB1J101J | CHIP-COM 10K J 1/16W            |             |
| C532     |     |     | CK73FB1C105K  | CHIP C 1.0UF K     |             | CP303     |     |     | RK74HB1J103J | CHIP-COM 100 J 1/16W            |             |
| C533     |     |     | CE32BM1C221M  | CHIP EL 220UF 16WV |             | CP304-309 |     |     | RK74HB1J101J | CHIP-COM 10K J 1/16W            |             |
| C534,535 |     |     | CK73FB1C105K  | CHIP C 1.0UF K     |             | CP310     |     |     | RK74HB1J103J | CHIP-COM 100 J 1/16W            |             |
| C536     |     |     | CK73GB1H104K  | CHIP C 0.10UF K    |             | CP312-315 |     |     | RK74HB1J101J | CHIP-COM 100 J 1/16W            |             |
| C537     |     |     | CE32BJ1C470M  | CHIP EL 47UF 16WV  |             | CP322     |     |     | RK74HB1J101J | CHIP-COM 100 J 1/16W            |             |
| C538,539 |     |     | CE32BM1C220M  | CHIP EL 22UF 16WV  |             | CP323     |     |     | RK74HB1J103J | CHIP-COM 10K J 1/16W            |             |
| C542     |     |     | CK73GB1H103K  | CHIP C 0.010UF K   |             | CP325     |     |     | RK74HB1J103J | CHIP-COM 10K J 1/16W            |             |
| C547     |     |     | CK73EB1E105K  | CHIP C 1.0UF K     |             | R1        |     |     | RK73HB1J000J | CHIP R 0.0 J 1/16W              |             |
| C548     |     |     | CE32BJ1C101M  | CHIP EL 100UF 16WV |             | R4,5      |     |     | RK73HB1J000J | CHIP R 0.0 J 1/16W              |             |
| C549     |     |     | CE32CL1C470M  | CHIP EL 47UF 16WV  |             | R8-10     |     |     | RK73HB1J000J | CHIP R 0.0 J 1/16W              |             |
| C809     |     |     | CC73GCH1H471J | CHIP C 470PF J     |             | R17       |     |     | RK73HB1J101J | CHIP R 100 J 1/16W              |             |
| C810     |     |     | CE32CL1H2R2M  | CHIP EL 2.2UF 50WV |             | R18       |     |     | RK73HB1J621J | CHIP R 620 J 1/16W              |             |
| C811     |     |     | CK73GB1H104K  | CHIP C 0.10UF K    |             | R21,22    |     |     | RK73HB1J221J | CHIP R 220 J 1/16W              |             |
| C812     |     |     | CE32CL1C100M  | CHIP EL 10UF 16WV  |             | R23       |     |     | RK73HB1J000J | CHIP R 0.0 J 1/16W              |             |
| C813     |     |     | CE32CL1H2R2M  | CHIP EL 2.2UF 50WV |             | R24       |     |     | RK73HB1J561J | CHIP R 560 J 1/16W              |             |
| C814     |     |     | CE32BJ1C101M  | CHIP EL 100UF 16WV |             | R25       |     |     | RK73HB1J103J | CHIP R 10K J 1/16W              |             |
| C815     |     |     | CK73GB1A105K  | CHIP C 1.0UF K     |             | R26       |     |     | RK73HB1J102J | CHIP R 1.0K J 1/16W             |             |
| C816     |     |     | CC73GCH1H471J | CHIP C 470PF J     |             | R27       |     |     | RK73HB1J103J | CHIP R 10K J 1/16W              |             |
| C817     |     |     | CK73GB1A474K  | CHIP C 0.47UF K    |             |           |     |     |              |                                 |             |
| C818     |     |     | CK73GB1H104K  | CHIP C 0.10UF K    |             |           |     |     |              |                                 |             |

E : Europe K : North America M : Other Areas W : Without Europe

△ Indicates safety critical components.

## PARTS LIST

### VIDEO UNIT (X35-4640-60)

| Ref. No.                                     | A<br>d<br>d | N<br>e<br>w | Parts No.                                                                    | Description                                                                                                   | Desti-<br>nation |
|----------------------------------------------|-------------|-------------|------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------|------------------|
| R28,29<br>R30,31<br>R32<br>R33<br>R34        |             |             | RK73HB1J000J<br>RK73HB1J103J<br>RK73HB1J100J<br>RK73HB1J102J<br>RK73HH1J472D | CHIP R 0.0 J 1/16W<br>CHIP R 10K J 1/16W<br>CHIP R 10 J 1/16W<br>CHIP R 1.0K J 1/16W<br>CHIP R 4.7K D 1/16W   |                  |
| R35<br>R36<br>R37<br>R38,39<br>R40           |             |             | RK73GH2A152D<br>RK73HB1J100J<br>RK73HB1J102J<br>RK73HH1J472D<br>RK73HB1J102J | CHIP R 1.5K D 1/10W<br>CHIP R 10 J 1/16W<br>CHIP R 1.0K J 1/16W<br>CHIP R 4.7K D 1/16W<br>CHIP R 1.0K J 1/16W |                  |
| R41<br>R42<br>R43<br>R44<br>R45              |             |             | RK73HH1J473D<br>RK73HB1J000J<br>RK73HH1J683D<br>RK73HB1J000J<br>RK73HH1J153D | CHIP R 47K D 1/16W<br>CHIP R 0.0 J 1/16W<br>CHIP R 68K D 1/16W<br>CHIP R 0.0 J 1/16W<br>CHIP R 15K D 1/16W    |                  |
| R46<br>R47<br>R48<br>R49<br>R51              |             |             | RK73HH1J101D<br>RK73HH1J331D<br>RK73HH1J182D<br>RK73HH1J332D<br>RK73HB1J330J | CHIP R 100 D 1/16W<br>CHIP R 330 D 1/16W<br>CHIP R 1.8K D 1/16W<br>CHIP R 3.3K D 1/16W<br>CHIP R 33 J 1/16W   |                  |
| R52-54<br>R55<br>R56-63<br>R64<br>R65        |             |             | RK73HB1J101J<br>RK73HH1J153D<br>RK73HB1J101J<br>RK73HH1J105D<br>RK73HH1J683D | CHIP R 100 J 1/16W<br>CHIP R 15K D 1/16W<br>CHIP R 100 J 1/16W<br>CHIP R 1.0M D 1/16W<br>CHIP R 68K D 1/16W   |                  |
| R66<br>R67<br>R68<br>R69<br>R70-73           |             |             | RK73GH2A512D<br>RK73HB1J000J<br>RK73GH2A512D<br>RK73GH2A752D<br>RK73HB1J000J | CHIP R 5.1K D 1/10W<br>CHIP R 0.0 J 1/16W<br>CHIP R 5.1K D 1/10W<br>CHIP R 7.5K D 1/10W<br>CHIP R 0.0 J 1/16W |                  |
| R74<br>R75<br>R88,89<br>R98<br>R100          |             |             | RK73HB1J221J<br>RK73HB1J000J<br>RK73HB1J000J<br>RK73HB1J221J<br>RK73HB1J101J | CHIP R 220 J 1/16W<br>CHIP R 0.0 J 1/16W<br>CHIP R 0.0 J 1/16W<br>CHIP R 220 J 1/16W<br>CHIP R 100 J 1/16W    |                  |
| R101,102<br>R103<br>R110<br>R111<br>R112     |             |             | RK73HB1J303J<br>RK73HB1J102J<br>RK73HB1J103J<br>RK73HB1J473J<br>RK73HB1J103J | CHIP R 30K J 1/16W<br>CHIP R 1.0K J 1/16W<br>CHIP R 10K J 1/16W<br>CHIP R 47K J 1/16W<br>CHIP R 10K J 1/16W   |                  |
| R113<br>R114-116<br>R117<br>R118,119<br>R120 |             |             | RK73HB1J102J<br>RK73HB1J103J<br>RK73HB1J271J<br>RK73GH2A102D<br>RK73GH2A183D | CHIP R 1.0K J 1/16W<br>CHIP R 10K J 1/16W<br>CHIP R 270 J 1/16W<br>CHIP R 1.0K D 1/10W<br>CHIP R 18K D 1/10W  |                  |
| R121<br>R122<br>R123<br>R124,125<br>R126     |             |             | RN73GH1J472D<br>RK73HB1J101J<br>RK73HB1J000J<br>RK73GH2A102D<br>RK73HB1J101J | CHIP R 4.7K D 1/16W<br>CHIP R 100 J 1/16W<br>CHIP R 0.0 J 1/16W<br>CHIP R 1.0K D 1/10W<br>CHIP R 100 J 1/16W  |                  |
| R128<br>R129<br>R130<br>R132<br>R133         |             |             | RK73GH2A512D<br>RK73GH2A152D<br>RK73HB1J101J<br>RN73GH1J472D<br>RK73HB1J000J | CHIP R 5.1K D 1/10W<br>CHIP R 1.5K D 1/10W<br>CHIP R 100 J 1/16W<br>CHIP R 4.7K D 1/16W<br>CHIP R 0.0 J 1/16W |                  |

| Ref. No.                                         | A<br>d<br>d | N<br>e<br>w | Parts No.                                                                    | Description                                                                                                    | Desti-<br>nation |
|--------------------------------------------------|-------------|-------------|------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|------------------|
| R134<br>R135,136<br>R137,138<br>R139<br>R140-142 |             |             | RN73GH1J222D<br>RK73HB1J000J<br>RK73GH2A102D<br>RK73HB1J561J<br>RK73HB1J102J | CHIP R 2.2K D 1/16W<br>CHIP R 0.0 J 1/16W<br>CHIP R 1.0K D 1/10W<br>CHIP R 560 J 1/16W<br>CHIP R 1.0K J 1/16W  |                  |
| R143<br>R144<br>R145<br>R146<br>R147             |             |             | RN73GH1J472D<br>RK73HB1J105J<br>RK73HB1J102J<br>RN73GH1J103D<br>RN73GH1J302D | CHIP R 4.7K D 1/16W<br>CHIP R 1.0M J 1/16W<br>CHIP R 1.0K J 1/16W<br>CHIP R 10K D 1/16W<br>CHIP R 3.0K D 1/16W |                  |
| R149<br>R150<br>R151<br>R152<br>R153             |             |             | RK73HB1J105J<br>RN73GH1J103D<br>RN73GH1J302D<br>RK73HB1J102J<br>RN73GH1J103D | CHIP R 1.0M J 1/16W<br>CHIP R 10K D 1/16W<br>CHIP R 3.0K D 1/16W<br>CHIP R 1.0K J 1/16W<br>CHIP R 10K D 1/16W  |                  |
| R154<br>R155<br>R156<br>R158<br>R159             |             |             | RN73GH1J302D<br>RN73GH1J681D<br>RN73GH1J222D<br>RK73HB1J822J<br>RK73HB1J562J | CHIP R 3.0K D 1/16W<br>CHIP R 680 D 1/16W<br>CHIP R 2.2K D 1/16W<br>CHIP R 8.2K J 1/16W<br>CHIP R 5.6K J 1/16W |                  |
| R160<br>R162-165<br>R167<br>R172<br>R173         |             |             | RK73HB1J000J<br>RK73HB1J000J<br>RK73HB1J000J<br>RK73HB1J000J<br>RK73HB1J820J | CHIP R 0.0 J 1/16W<br>CHIP R 0.0 J 1/16W<br>CHIP R 0.0 J 1/16W<br>CHIP R 0.0 J 1/16W<br>CHIP R 82 J 1/16W      |                  |
| R174<br>R175<br>R176,177<br>R200,201<br>R202-205 |             |             | RK73HB1J000J<br>RK73HB1J101J<br>RK73HB1J000J<br>RK73HB1J333J<br>RK73EB2E100J | CHIP R 0.0 J 1/16W<br>CHIP R 100 J 1/16W<br>CHIP R 0.0 J 1/16W<br>CHIP R 33K J 1/16W<br>CHIP R 10 J 1/4W       |                  |
| R219<br>R226<br>R227<br>R228<br>R230             |             |             | RK73GB2A104J<br>RK73EB2E000J<br>RK73GB2A682J<br>RK73GH2A203D<br>RK73GB2A100J | CHIP R 100K J 1/10W<br>CHIP R 0.0 J 1/4W<br>CHIP R 6.8K J 1/10W<br>CHIP R 20K D 1/10W<br>CHIP R 10 J 1/10W     |                  |
| R231<br>R233<br>R235<br>R236<br>R237             |             |             | RK73GH2A184D<br>RK73GH2A184D<br>RK73GH2A133D<br>RK73GB2A100J<br>RK73GH2A184D | CHIP R 180K D 1/10W<br>CHIP R 180K D 1/10W<br>CHIP R 13K D 1/10W<br>CHIP R 10 J 1/10W<br>CHIP R 180K D 1/10W   |                  |
| R256<br>R265<br>R270<br>R274<br>R289             |             |             | RK73GH2A203D<br>RK73HB1J000J<br>RK73GB2A105J<br>RK73GH2A123D<br>RK73GH2A243D | CHIP R 20K D 1/10W<br>CHIP R 0.0 J 1/16W<br>CHIP R 1.0M J 1/10W<br>CHIP R 12K D 1/10W<br>CHIP R 24K D 1/10W    |                  |
| R297,298<br>R300<br>R301<br>R302<br>R303         |             |             | RK73GB2A682J<br>RK73GB2A101J<br>RK73HB1J103J<br>RK73HB1J102J<br>RK73HB1J104J | CHIP R 6.8K J 1/10W<br>CHIP R 100 J 1/10W<br>CHIP R 10K J 1/16W<br>CHIP R 1.0K J 1/16W<br>CHIP R 100K J 1/16W  |                  |
| R304<br>R305<br>R306,307<br>R308<br>R309         |             |             | RK73HB1J331J<br>RK73HB1J102J<br>RK73HB1J101J<br>RK73HB1J332J<br>RK73HB1J103J | CHIP R 330 J 1/16W<br>CHIP R 1.0K J 1/16W<br>CHIP R 100 J 1/16W<br>CHIP R 3.3K J 1/16W<br>CHIP R 10K J 1/16W   |                  |

E : Europe K : North America M : Other Areas W : Without Europe

△ Indicates safety critical components.

## PARTS LIST

## VIDEO UNIT (X35-4640-60)

| Ref. No. | Add | New | Parts No.    | Description         | Destination | Ref. No. | Add | New | Parts No.      | Description                  | Destination |
|----------|-----|-----|--------------|---------------------|-------------|----------|-----|-----|----------------|------------------------------|-------------|
| R311     |     |     | RK73HB1J101J | CHIP R 100 J 1/16W  |             | R526     |     |     | RK73GB2A330J   | CHIP R 33 J 1/10W            |             |
| R312     |     |     | RK73HB1J332J | CHIP R 3.3K J 1/16W |             | R527     |     |     | RK73GB2A102J   | CHIP R 1.0K J 1/10W          |             |
| R313     |     |     | RK73GB2A473J | CHIP R 47K J 1/10W  |             | R528     |     |     | RK73GB2A470J   | CHIP R 47 J 1/10W            |             |
| R314     |     |     | RK73HB1J223J | CHIP R 22K J 1/16W  |             | R529,530 |     |     | RK73GB2A221J   | CHIP R 220 J 1/10W           |             |
| R315     |     |     | RK73HB1J621J | CHIP R 620 J 1/16W  |             | R531     |     |     | RK73GB2A330J   | CHIP R 33 J 1/10W            |             |
| R316     |     |     | RK73HB1J103J | CHIP R 10K J 1/16W  |             | R532     |     |     | RK73GB2A470J   | CHIP R 47 J 1/10W            |             |
| R317     |     |     | RK73HB1J621J | CHIP R 620 J 1/16W  |             | R533     |     |     | RN73GH1J363D   | CHIP R 36K D 1/16W           |             |
| R318     |     |     | RK73HB1J101J | CHIP R 100 J 1/16W  |             | R534     |     |     | RK73GB2A393J   | CHIP R 39K J 1/10W           |             |
| R319     |     |     | RK73HB1J621J | CHIP R 620 J 1/16W  |             | R535     |     |     | RK73GB2A563J   | CHIP R 56K J 1/10W           |             |
| R320     |     |     | RK73HB1J101J | CHIP R 100 J 1/16W  |             | R536     |     |     | RK73GB2A823J   | CHIP R 82K J 1/10W           |             |
| R321     |     |     | RK73HB1J103J | CHIP R 10K J 1/16W  |             | R537     |     |     | RK73GB2A563J   | CHIP R 56K J 1/10W           |             |
| R322     |     |     | RK73HB1J101J | CHIP R 100 J 1/16W  |             | R538,539 |     |     | RK73EB2E471J   | CHIP R 470 J 1/4W            |             |
| R324     |     |     | RK73HB1J101J | CHIP R 100 J 1/16W  |             | R541     |     |     | RK73GB2A103J   | CHIP R 10K J 1/10W           |             |
| R325     |     |     | RK73HB1J223J | CHIP R 22K J 1/16W  |             | R542     |     |     | RK73GB2A183J   | CHIP R 18K J 1/10W           |             |
| R326-329 |     |     | RK73HB1J101J | CHIP R 100 J 1/16W  |             | R545     |     |     | RK73GB2A183J   | CHIP R 18K J 1/10W           |             |
| R330,331 |     |     | RK73HB1J103J | CHIP R 10K J 1/16W  |             | R547     |     |     | RN73GH1J183D   | CHIP R 18K D 1/16W           |             |
| R332,333 |     |     | RK73HB1J101J | CHIP R 100 J 1/16W  |             | R548     |     |     | RN73GH1J332D   | CHIP R 3.3K D 1/16W          |             |
| R334     |     |     | RK73HB1J103J | CHIP R 10K J 1/16W  |             | R549     |     |     | RK73GB2A000J   | CHIP R 0.0 J 1/10W           |             |
| R400     |     |     | RK73GB2A101J | CHIP R 100 J 1/10W  |             | R549,806 |     |     | RK73GB2A471J   | CHIP R 470 J 1/10W           |             |
| R401     |     |     | RK73FB2B100J | CHIP R 10 J 1/8W    |             | R814     |     |     | RK73GB2A302J   | CHIP R 3.0K J 1/10W          |             |
| R403     |     |     | RK73GB2A220J | CHIP R 22 J 1/10W   |             | R817,818 |     |     | RK73GB2A103J   | CHIP R 10K J 1/10W           |             |
| R404     |     |     | RK73GB2A681J | CHIP R 680 J 1/10W  |             | R819     |     |     | RK73GB2A512J   | CHIP R 5.1K J 1/10W          |             |
| R405     |     |     | RK73GB2A101J | CHIP R 100 J 1/10W  |             | R820,821 |     |     | RK73GB2A223J   | CHIP R 22K J 1/10W           |             |
| R406     |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W |             | R822     |     |     | RK73GB2A393J   | CHIP R 39K J 1/10W           |             |
| R407     |     |     | RK73GB2A681J | CHIP R 680 J 1/10W  |             | R823     |     |     | RK73GB2A513J   | CHIP R 51K J 1/10W           |             |
| R408     |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W |             | R824     |     |     | RK73GB2A302J   | CHIP R 3.0K J 1/10W          |             |
| R410     |     |     | RK73FB2B100J | CHIP R 10 J 1/8W    |             | R825     |     |     | RK73GB2A103J   | CHIP R 10K J 1/10W           |             |
| R411     |     |     | RK73GB2A333J | CHIP R 33K J 1/10W  |             | R900     |     |     | RK73FB2B750J   | CHIP R 75 J 1/8W             |             |
| R412     |     |     | RK73GB2A681J | CHIP R 680 J 1/10W  |             | R901-906 |     |     | RK73EB2E101J   | CHIP R 100 J 1/4W            |             |
| R413     |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W |             | R907,908 |     |     | RK73FB2B101J   | CHIP R 100 J 1/8W            |             |
| R414     |     |     | RK73GB2A473J | CHIP R 47K J 1/10W  |             | R909-911 |     |     | RK73FB2B750J   | CHIP R 75 J 1/8W             |             |
| R415     |     |     | RK73GB2A681J | CHIP R 680 J 1/10W  |             | R912     |     |     | RK73FB2B101J   | CHIP R 100 J 1/8W            |             |
| R416     |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W |             | R913-915 |     |     | RK73FB2B000J   | CHIP R 0.0 J 1/8W            |             |
| R417     |     |     | RK73GB2A681J | CHIP R 680 J 1/10W  |             | R921-923 |     |     | RK73HB1J000J   | CHIP R 0.0 J 1/16W           |             |
| R418     |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W |             | R930     |     |     | RK73HB1J000J   | CHIP R 0.0 J 1/16W           |             |
| R419     |     |     | RK73GB2A681J | CHIP R 680 J 1/10W  |             | R986     |     |     | RK73GB2A363J   | CHIP R 36K J 1/10W           |             |
| R420,421 |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W |             | R987     |     |     | RS14KB3D1R5J   | FL-PROOF RS 1.5 J 2W         |             |
| R500,501 |     | *   | RK73PB2H1R0J | CHIP R 1.0 J 1/2W   |             | VR3      |     |     | R32-0328-05    | SEMI FIXED VARIABLE RESISTOR |             |
| R502     |     |     | RK73GB2A304J | CHIP R 300K J 1/10W |             | VR100    |     |     | R32-0328-05    | SEMI FIXED VARIABLE RESISTOR |             |
| R503     |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W |             | VR500    |     |     | R32-0328-05    | SEMI FIXED VARIABLE RESISTOR |             |
| R504     |     |     | RK73GB2A224J | CHIP R 220K J 1/10W |             | S400-405 |     | *   | S70-0933-05    | TACT SWITCH                  |             |
| R505,506 |     |     | RK73GB2A103J | CHIP R 10K J 1/10W  |             | S406     |     |     | S70-0851-05    | TACT SWITCH                  |             |
| R507     |     |     | RK73GB2A304J | CHIP R 300K J 1/10W |             | D2       |     |     | MA2X335        | VARIABLE CAPACITANCE DIODE   |             |
| R508     |     |     | RK73GB2A222J | CHIP R 2.2K J 1/10W |             | D4       |     |     | DA204U         | DIODE                        |             |
| R509     |     |     | RK73GB2A131J | CHIP R 130 J 1/10W  |             | D101     |     |     | DAN202U        | DIODE                        |             |
| R510-512 |     |     | RK73GB2A104J | CHIP R 100K J 1/10W |             | D200-203 |     |     | UDZS5.1B       | ZENER DIODE                  |             |
| R513     |     |     | RK73GB2A432J | CHIP R 4.3K J 1/10W |             | D204-207 |     |     | AVRM1608120M6A | VARISTOR                     |             |
| R514     |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W |             | D214     |     |     | EP05Q04        | DIODE                        |             |
| R516,517 |     |     | RK73GB2A103J | CHIP R 10K J 1/10W  |             | D216     |     |     | EC10QS04AG     | DIODE                        |             |
| R518     |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W |             | D217     |     |     | EP05Q04        | DIODE                        |             |
| R519,520 |     |     | RK73GB2A103J | CHIP R 10K J 1/10W  |             | D240,241 |     |     | EP05Q04        | DIODE                        |             |
| R521     |     |     | RN73GH1J103D | CHIP R 10K D 1/16W  |             | D301,302 |     |     | DAN202U        | DIODE                        |             |
| R522     |     |     | RN73GH1J622D | CHIP R 6.2K D 1/16W |             | D303     |     |     | DAP202U        | DIODE                        |             |
| R523,524 |     |     | RK73GB2A223J | CHIP R 22K J 1/10W  |             | D400     |     |     | DA204U         | DIODE                        |             |
| R525     |     |     | RK73GB2A472J | CHIP R 4.7K J 1/10W |             |          |     |     |                |                              |             |

E : Europe K : North America M : Other Areas W : Without Europe

△ Indicates safety critical components.

## PARTS LIST

### VIDEO UNIT (X35-4640-60)

| Ref. No.                                             | A<br>d<br>d | N<br>e<br>w | Parts No.                                                                       | Description                                                                                                | Desti-<br>nation |
|------------------------------------------------------|-------------|-------------|---------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|------------------|
| D401-406<br>D407<br>D408<br>D500,501<br>D502         |             |             | UDZS5.1B<br>DAN202U<br>UDZS6.8B<br>EC31QS04AG<br>UDZS6.8B                       | ZENER DIODE<br>DIODE<br>ZENER DIODE<br>DIODE<br>ZENER DIODE                                                |                  |
| D808<br>D900,901<br>D902,903<br>D904,905<br>D906,907 |             |             | 1SR154-400<br>STZ6.2N<br>DA204U<br>STZ6.2N<br>DA204U                            | DIODE<br>ZENER DIODE<br>DIODE<br>ZENER DIODE<br>DIODE                                                      |                  |
| D909,910<br>D915<br>D916<br>IC1<br>IC3               |             |             | AVRM1608180M6A<br>DAP202U<br>1SR154-400<br>TC7SH08FU-F<br>TC200G02G0104         | VARISTOR<br>DIODE<br>DIODE<br>MOS-IC<br>MOS-IC                                                             |                  |
| IC4<br>IC101<br>IC103<br>IC104<br>IC105              |             |             | NJM2107F-ZB<br>TC7SET04FU-F<br>RB5P0090M<br>TC7SET32FU-F<br>TC7SET08FU-F        | ANALOGUE IC<br>MOS-IC<br>ANALOGUE IC<br>MOS-IC<br>MOS-IC                                                   |                  |
| IC106<br>IC108<br>IC202<br>IC300<br>IC301            |             | *           | TC7SET04FU-F<br>TC7SET32FU-F<br>MP1530DM-LF-Z<br>S-80830CNNB-G<br>M306VPMGD513F | MOS-IC<br>MOS-IC<br>ANALOGUE IC<br>MOS-IC<br>MICROPROCESSOR IC                                             |                  |
| IC302<br>IC303<br>IC304<br>IC400<br>IC401            |             |             | S-24CS04AFT<br>S-24CS02AFTTBG<br>TC7W53FU-F<br>RS-171<br>TPS855                 | ROM IC<br>ROM IC<br>MOS-IC<br>ANALOGUE IC<br>ANALOGUE IC                                                   |                  |
| IC402<br>IC500<br>IC501<br>IC502<br>IC503            |             |             | TC7SH08FU-F<br>MP1015EMC011LF<br>BA9743AFV<br>TA58L05F<br>SI-3033LUSNF          | MOS-IC<br>ANALOGUE IC<br>ANALOGUE IC<br>ANALOGUE IC<br>ANALOGUE IC                                         |                  |
| IC505<br>IC506<br>IC801<br>IC802<br>IC901            |             |             | SI-3050KMS<br>SI-3033LUSNF<br>NJM4565MD-ZB<br>TDA7052BT-F<br>TC7SH08FU-F        | ANALOGUE IC<br>ANALOGUE IC<br>ANALOGUE IC<br>ANALOGUE IC<br>MOS-IC                                         |                  |
| Q1<br>Q100<br>Q102<br>Q103-106<br>Q109,110           |             |             | 2SC4097<br>2SC4081<br>DTC143ZUA<br>UMZ1N<br>DTA124EUA                           | TRANSISTOR<br>TRANSISTOR<br>DIGITAL TRANSISTOR<br>TRANSISTOR<br>DIGITAL TRANSISTOR                         |                  |
| Q111<br>Q114<br>Q116,117<br>Q200<br>Q201             |             |             | DTC323TU<br>DTC323TU<br>DTC323TU<br>DTA123JUA<br>DTC123JUA                      | DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR |                  |
| Q202<br>Q203<br>Q204<br>Q300<br>Q301,302             |             |             | DTA123JUA<br>DTC123JUA<br>DTC124EUA<br>DTA124EUA<br>DTC124EUA                   | DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR |                  |

| Ref. No.                                     | A<br>d<br>d | N<br>e<br>w | Parts No.                                               | Description                                                                 | Desti-<br>nation |
|----------------------------------------------|-------------|-------------|---------------------------------------------------------|-----------------------------------------------------------------------------|------------------|
| Q500,501<br>Q502,503<br>Q504<br>Q505<br>Q506 |             |             | IMZ4<br>2SJ599-Z-E<br>DTA124EUA<br>DTC124EUA<br>2SC4081 | TRANSISTOR<br>FET<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>TRANSISTOR |                  |
| Q807<br>Q808<br>Q810,811<br>Q812             |             |             | 2SB1188 (Q,R)<br>2SC4081<br>DTC323TU<br>DTA124EUA       | TRANSISTOR<br>TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR        |                  |

E : Europe K : North America M : Other Areas W : Without Europe

△ Indicates safety critical components.