
9. EXPLODED VIEWS AND PARTS LIST

NOTES:
- *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Screws adjacent to ▼ mark on product are used for disassembly.*
- *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)*

9.1 PACKING SECTION

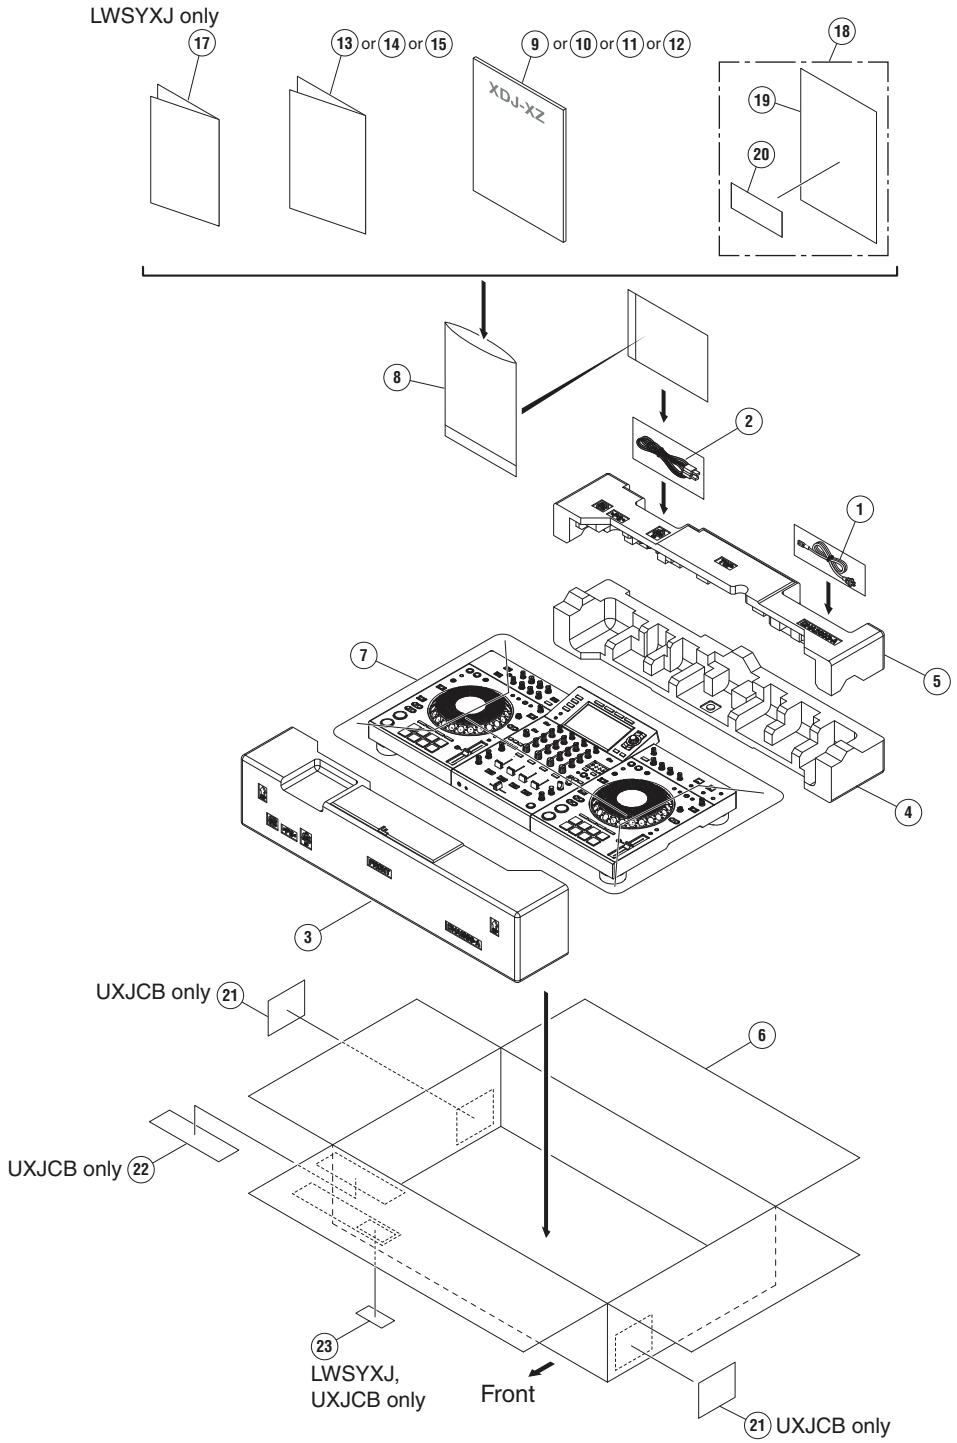

(1) PACKING SECTION PARTS LIST


Mark	No.	Description	Part No.
⚠	1	Power Cord	See Contrast table (2)
	2	USB Cable	DDE1150
	3	Packing Pad	DHA1999
	4	Packing Pad	DHA2000
	5	Packing Pad	DHA2003
	6	Packing Case	See Contrast table (2)
	7	Mirror Mat	DHL1201
NSP	8	Polyethylene Bag	AHG7117
	9	Operating Instructions (Quick nStart Guide)	See Contrast table (2)
	10	Operating Instructions (Quick nStart Guide)	See Contrast table (2)
	11	Operating Instructions (Quick nStart Guide)	See Contrast table (2)
	12	Operating Instructions (Quick nStart Guide)	See Contrast table (2)
	13	Sub Manual	See Contrast table (2)
	14	Sub Manual	See Contrast table (2)
	15	Sub Manual	See Contrast table (2)
	16	•••••	
NSP	17	Warranty	See Contrast table (2)
NSP	18	1..License Key Card Assy	DEA1046
NSP	19	2..Leaflet	DRM1410
NSP	20	2..rekordbox dj license key card	DXA2304
	21	Label	See Contrast table (2)
	22	Label	See Contrast table (2)
NSP	23	Label	See Contrast table (2)

(2) CONTRAST TABLE

XDJ-XZ/AXJ, LWSYXJ and UXJCB are constructed the same except for the following:

Mark	No.	Symbol and Description	XDJ-XZ/AXJ	XDJ-XZ/LWSYXJ	XDJ-XZ/UXJCB
⚠	1	Power Cord	DDG1114	ADG1244	DDG1108
	6	Packing Case	DHG3732	DHG3731	DHG3731
	9	Operating Instructions (Quick nStart Guide)(En)	Not used	Not used	DRH1539
	10	Operating Instructions (Quick nStart Guide)(En, Fr, De, It)	Not used	DRH1540	Not used
	11	Operating Instructions (Quick nStart Guide)(Nl, Es, Pt, Ru)	Not used	DRH1541	Not used
	12	Operating Instructions (Quick nStart Guide)(Zhcn)	DRH1542	Not used	Not used
	13	Sub Manual	DRH1594	Not used	Not used
	14	Sub Manual	Not used	DRH1592	DRH1592
	15	Sub Manual	Not used	DRH1593	DRH1593
NSP	17	Warranty	Not used	DRY1270	Not used
	21	Label	Not used	Not used	DRW2831
	22	Label	Not used	Not used	DRW2839
NSP	23	Label	Not used	DRW2838	DRW2838

9.2 BOTTOM SECTION

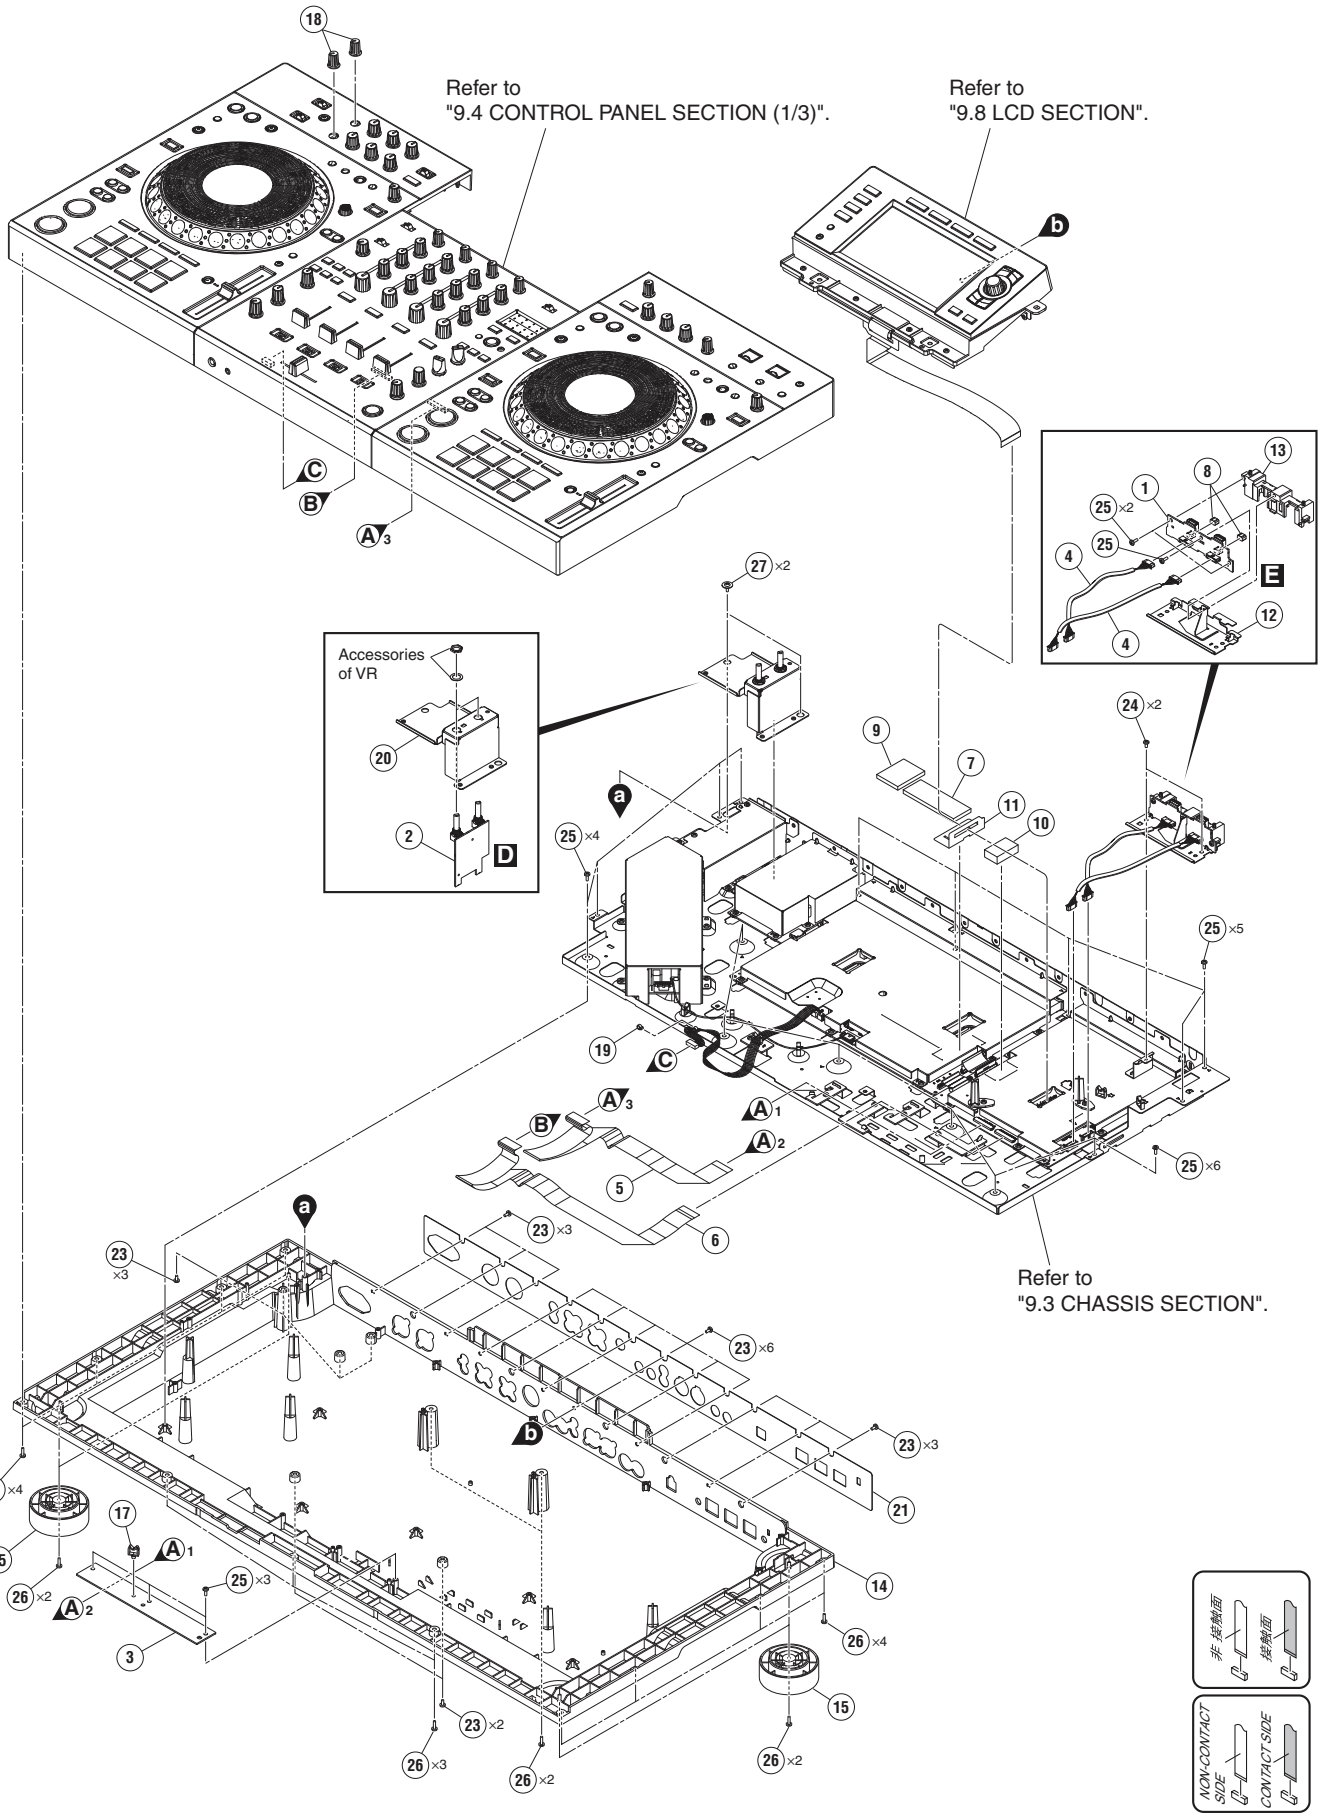

(1) BOTTOM SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	USBA Assy	DWX4294
	2	MCTR Assy	DWX4302
	3	STL4 Assy	DWX4322
	4	Shielded Conn-Cable	DDA1094
	5	FFC	DDD1952
	6	FFC	DDD1953
	7	Cushion/FFC	DEC3531
	8	Gasket/JOG	DEC3562
	9	Cushion	DEC3592
	10	Cushion	DEC3887
	11	Barrier	DEC3888
	12	Stay	DNH3311
	13	Base	DNK6708
⚠	14	Chassis	DNK6862
	15	Insulator Assy	DXB2131
	16	•••••	
	17	Holder	VEC1355
	18	Knob	DAA1442
	19	Binder	ZCA-SKB90BK
	20	Stay	DNH3429
	21	Rear Panel	See Contrast table (2)
	22	•••••	
	23	Screw	BBZ30P060FTB
	24	Screw	BBZ30P060FTC
	25	Screw	BPZ30P080FNI
	26	Screw	BPZ30P100FTB
	27	DM Screw (FTC)	DBA1260

(2) CONTRAST TABLE

XDJ-XZ/AXJ, LWSYXJ and UXJCB are constructed the same except for the following:

Mark	No.	Symbol and Description	XDJ-XZ/AXJ	XDJ-XZ/LWSYXJ	XDJ-XZ/UXJCB
	21	Rear Panel	DAH3271	DAH3268	DAH3269


9.3 CHASSIS SECTION

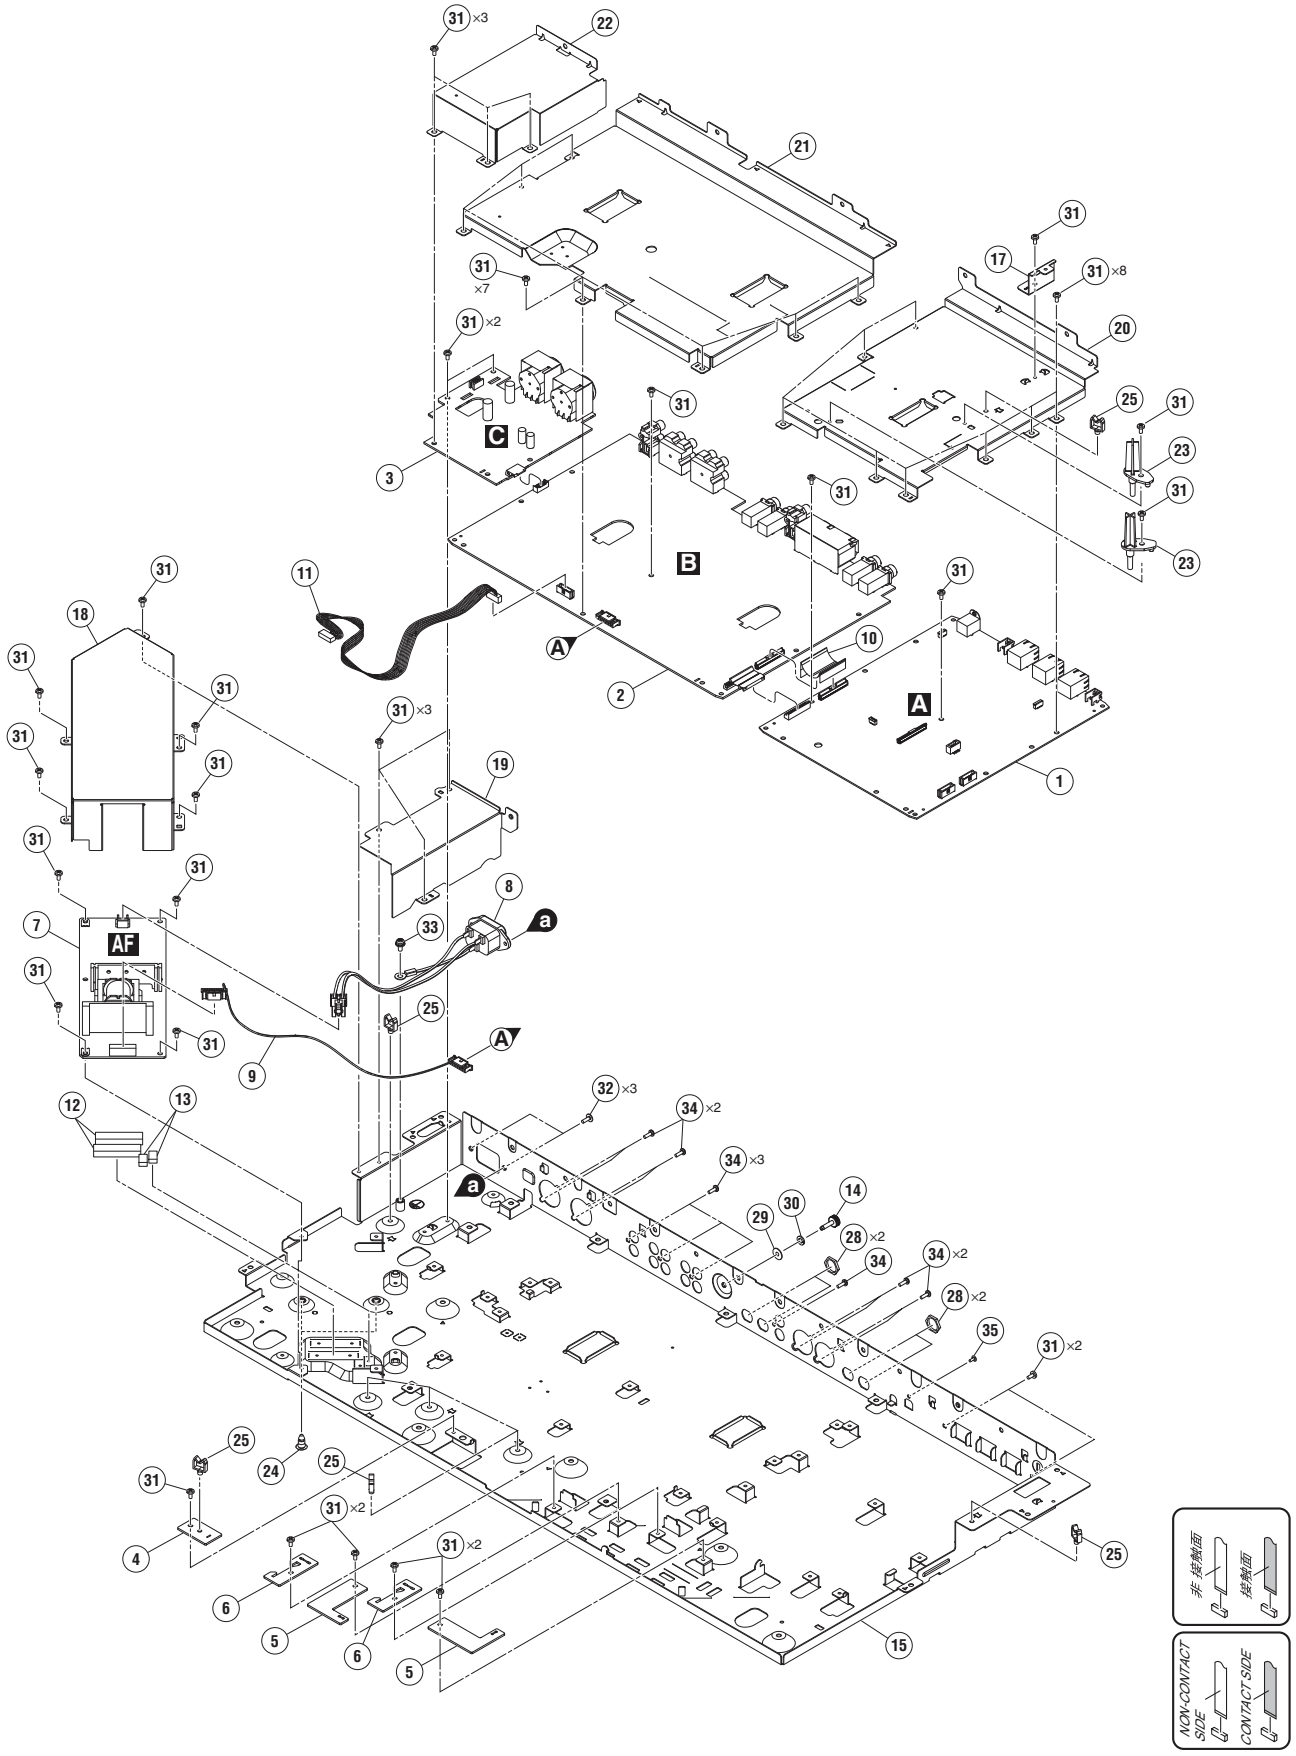


CHASSIS SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	MAIN Assy	DWX4287
	2	AUDIO Assy	DWX4298
	3	MCIN Assy	DWX4300
	4	STL1 Assy	DWX4319
	5	STL2 Assy	DWX4320
	6	STL3 Assy	DWX4321
⚠	7	SW POWER SUPPLY	DWR1548
⚠	8	AC Inlet	DKP3994
	9	Crimp Connector	DKP3993
	10	FFC	DDD1950
	11	Connector Assy	PF06PP-D37
	12	Heat Cond Sheet	DEB2020
	13	Heat Cond Sheet	DEB2073
	14	Earth Terminal	DKE1015
	15	Stay	DNH3430
	16	•••••	
	17	Bracket	DNH3431
	18	Shield Case	DNH3432
	19	Shield Case	DNH3433
	20	Shield Case	DNH3434
	21	Shield Case	DNH3435
	22	Shield Case	DNH3436
	23	Support	DNK6869
NSP	24	PCB Holder	PNW1706
	25	Holder	VEC1355
	26	•••••	
	27	•••••	
	28	Nut (M12)	NKX2FNI
	29	Washer	WA32F100Q050
	30	Spring Lock Washer	WS40FNI
	31	Screw	BBZ30P060FTC
	32	Screw	IBZ30P080FTB
	33	Screw	PMH40P080FTC
	34	Screw	PPZ30P080FTB
	35	Screw (M3 * 5)	DBA1340

9.4 CONTROL PANEL SECTION (1/3)

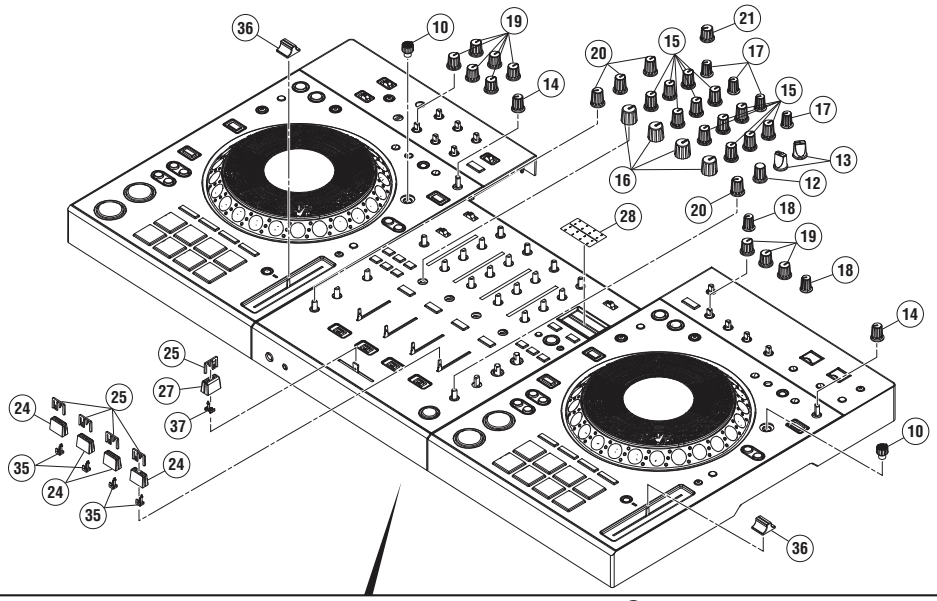


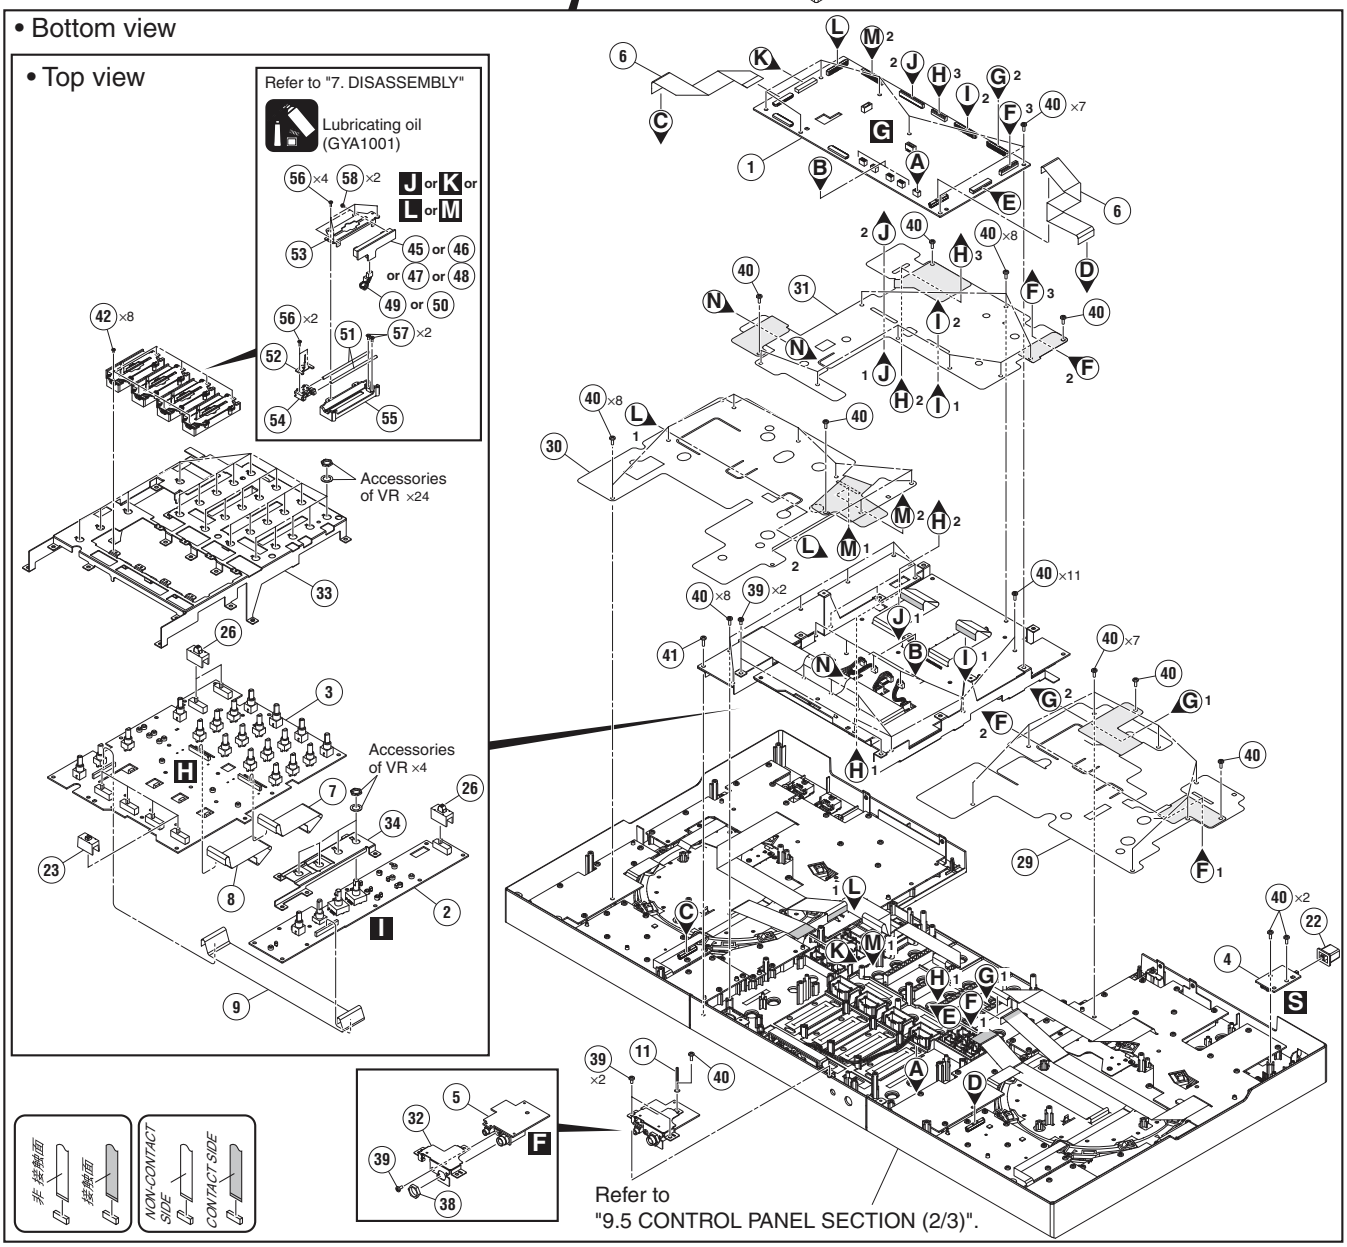

CONTROL PANEL SECTION (1/3) PARTS LIST

Mark No.	Description	Part No.
1	UCOM Assy	DWX4296
2	EFSW Assy	DWX4297
3	MIXER Assy	DWX4299
4	PWSW Assy	DWX4312
5	HPJK Assy	DWX4301
6	FFC	DDD1935
7	FFC	DDD1943
8	FFC	DDD1944
9	FFC	DDD1946
10	Knob	DAA1406
11	Cord Clamper (Steel)	RNH-184
12	Rotary SW Knob (C)	DAA1180
13	Select Knob	DAA1205
14	Knob/LBK	DAA1284
15	Knob/RSW	DAA1305
16	Knob/FRE	DAA1309
17	Knob	DAA1408
18	Knob	DAA1409
19	Knob	DAA1432
20	Knob	DAA1434
21	Knob	DAA1435
22	Power Knob	DAC2306
23	Slide SW Cap (W)	DAC2401
24	Knob	DAC3539
25	Slider Knob 2	DAC2685
26	Cap	DAC3136
27	Knob	DAC3238
28	Sheet	DEC3843
29	Barrier	DEC3847
30	Barrier	DEC3848
31	Barrier	DEC3849
32	Stay/HP	DNH3182
33	Stay	DNH3426
34	Stay	DNH3427
35	Slider Knob Stopper	DNK5888
36	Knob/SLD	DNK5981
37	Stopper	DNK6440
38	Nut M12	DBN1018
39	Screw	BBZ30P060FTC
40	Screw	BPZ30P080FNI
41	Screw	BPZ30P100FTB
42	Screw	BSZ20P040FTB
43	•••••	
44	•••••	
45	CHF1 Assy	DWX4303
46	CHF2 Assy	DWX4304
47	CHF3 Assy	DWX4305
48	CHF4 Assy	DWX4306
49	Connector Assy (CH1 to CH3)	PF03PP-B05
50	Connector Assy (CH4)	PF03PP-B07
51	Guide Shaft VK1	DLA1978
52	Lever Plate	DNH2954
53	VR Stay	DNH2955
54	Slider Base	DNK5851
55	Shaft Holder	DNK5852
56	Screw	BPZ20P060FTC
57	Screw	CPZ26P080FTC
58	Screw	PMH20P040FTC

9.5 CONTROL PANEL SECTION (2/3)

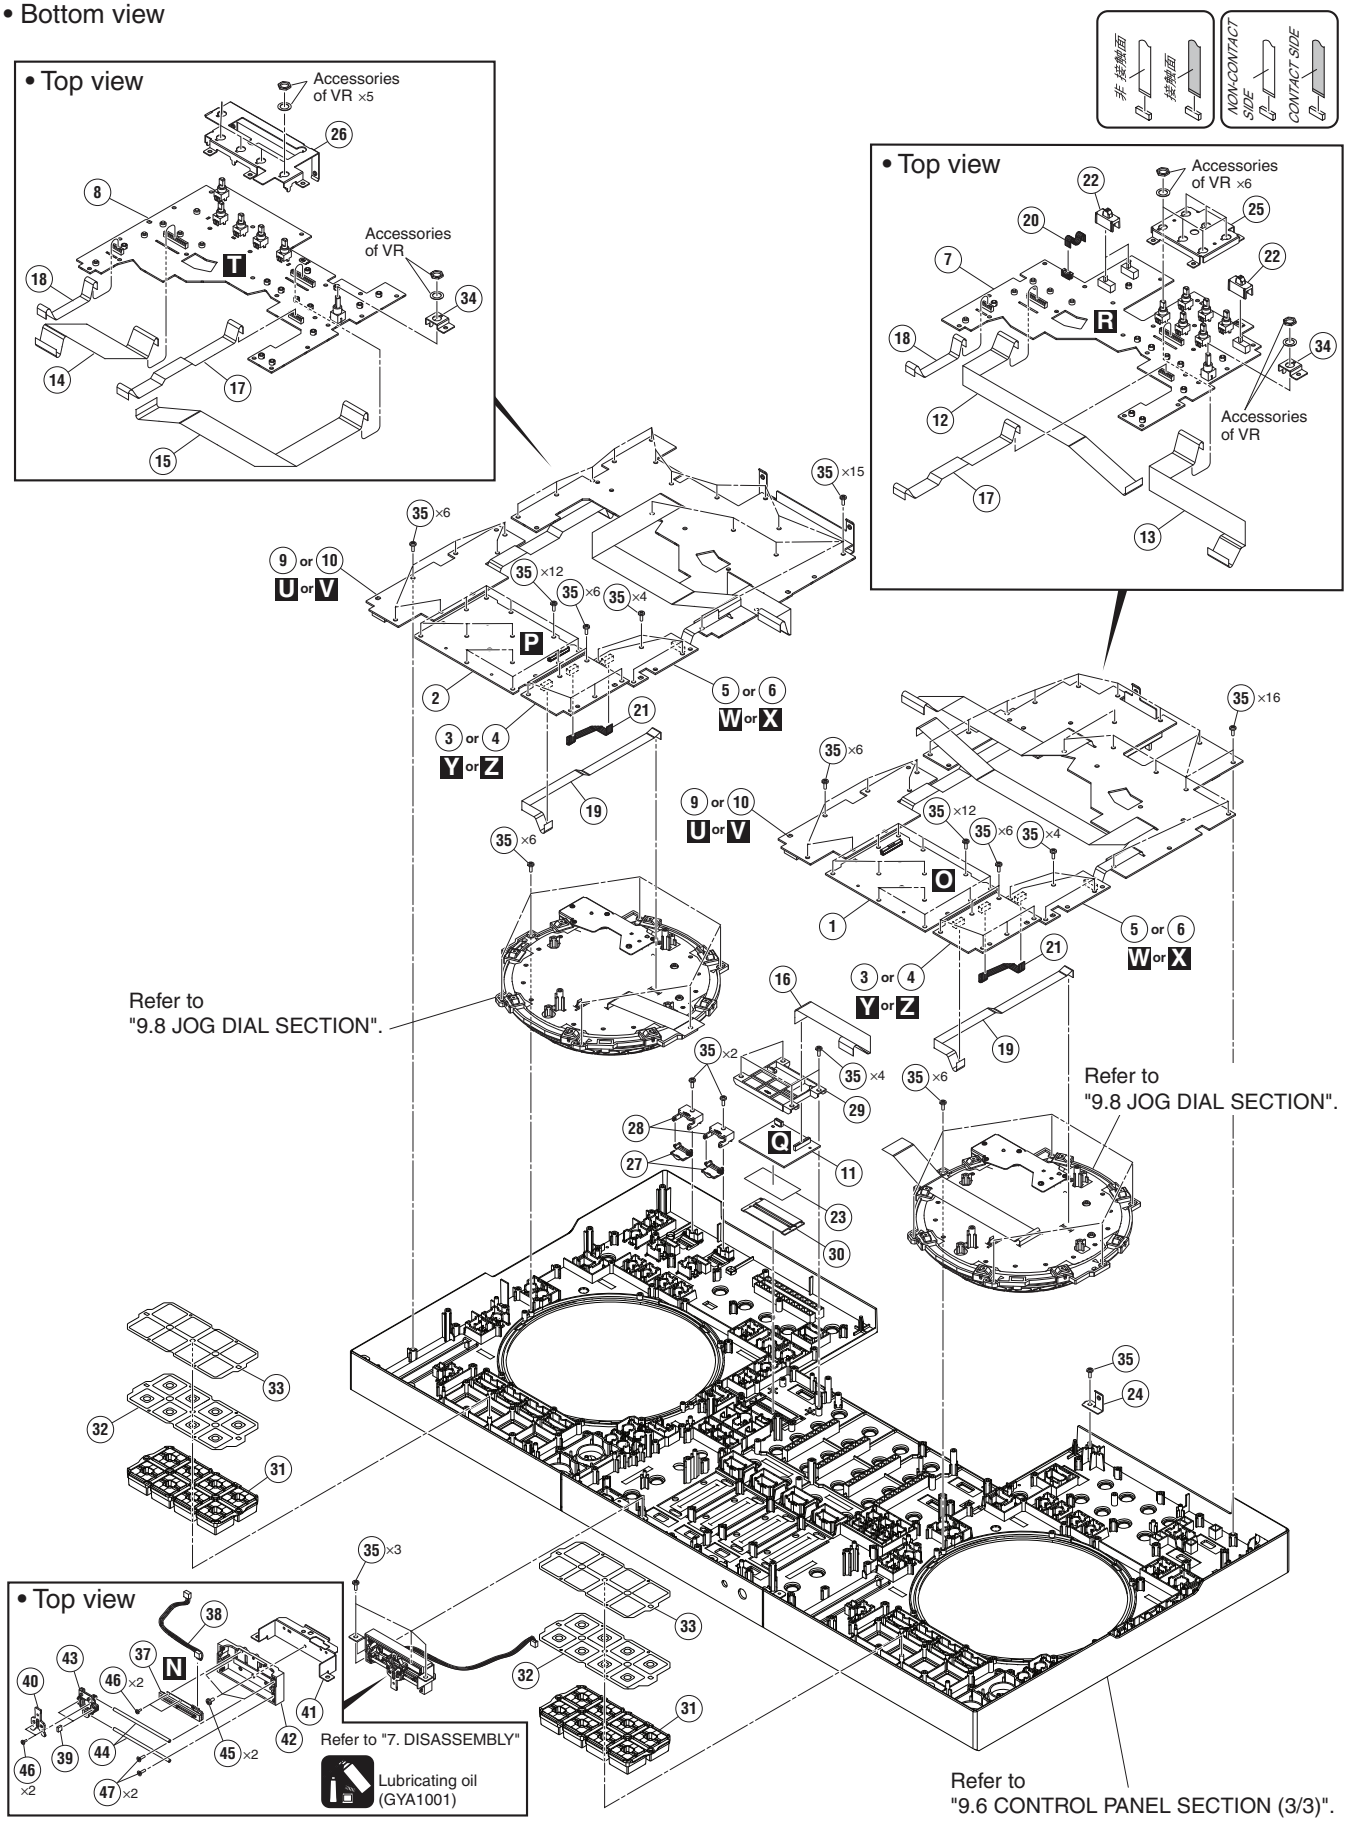


CONTROL PANEL SECTION (2/3) PARTS LIST


Mark	No.	Description	Part No.
	1	PAD1 Assy	DWX4292
	2	PAD2 Assy	DWX4293
	3	PLAY1 Assy	DWX4307
	4	PLAY2 Assy	DWX4308
	5	SER1 Assy	DWX4310
	6	SER2 Assy	DWX4314
	7	DCK1 Assy	DWX4309
	8	DCK2 Assy	DWX4313
	9	TMP1 Assy	DWX4311
	10	TMP2 Assy	DWX4315
	11	XPAD Assy	DWX4290
	12	FFC	DDD1939
	13	FFC	DDD1940
	14	FFC	DDD1941
	15	FFC	DDD1942
	16	FFC	DDD1945
	17	FFC	DDD1947
	18	FFC	DDD1948
	19	FFC	DDD1949
	20	Jumper Wire	D20PYY0405E
	21	Jumper Wire	D20PYY0410E
	22	SW Cap	DAC2753
	23	Tape	DEH1083
	24	Bracket	DNH3312
	25	Stay	DNH3424
	26	Stay	DNH3425
	27	Door	DNK6497
	28	Holder	DNK6710
	29	Holder	DNK6867
	30	Lens	DNK6868
	31	Button	DEB2075
	32	Sheet	DEC3739
	33	Spacer	DEC3740
	34	VR Stay S	DNH2964
	35	Screw	BPZ30P080FNI
	36	•••••	
	37	CRFD Assy	DWX4295
	38	Connector Assy	PF03PP-B15
NSP	39	Cushion	DEC3356
	40	Lever	DNH3211
	41	Stay	DNH3301
	42	Holder	DNK6425
	43	Slider	DNK6426
	44	Guide Bar	VLL1514
	45	Screw	BBZ30P060FTC
	46	Screw	BPZ20P050FTC
	47	Screw	CPZ26P080FTC

9.6 CONTROL PANEL SECTION (3/3)


• Bottom view

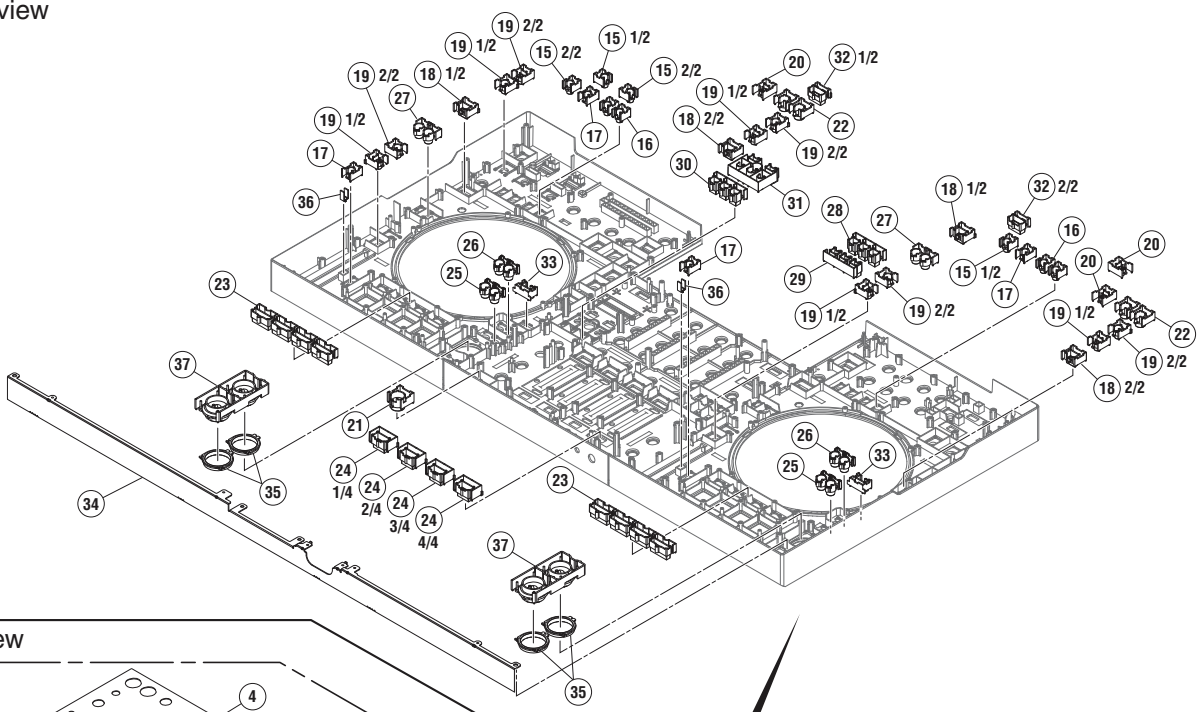

• Top view

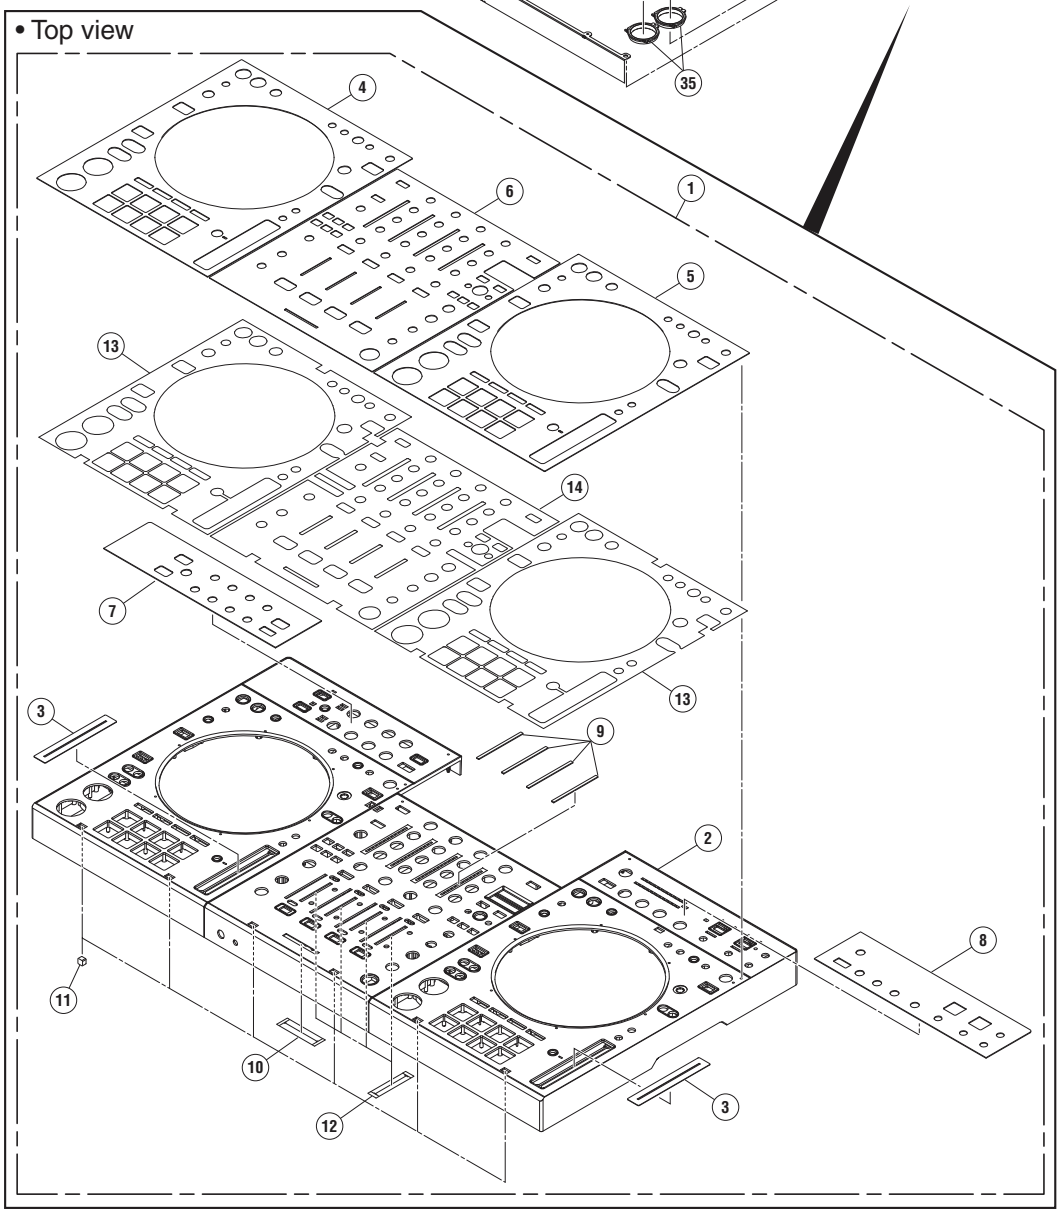

• **The position of the divided parts / 分割部品の取り付け位置**

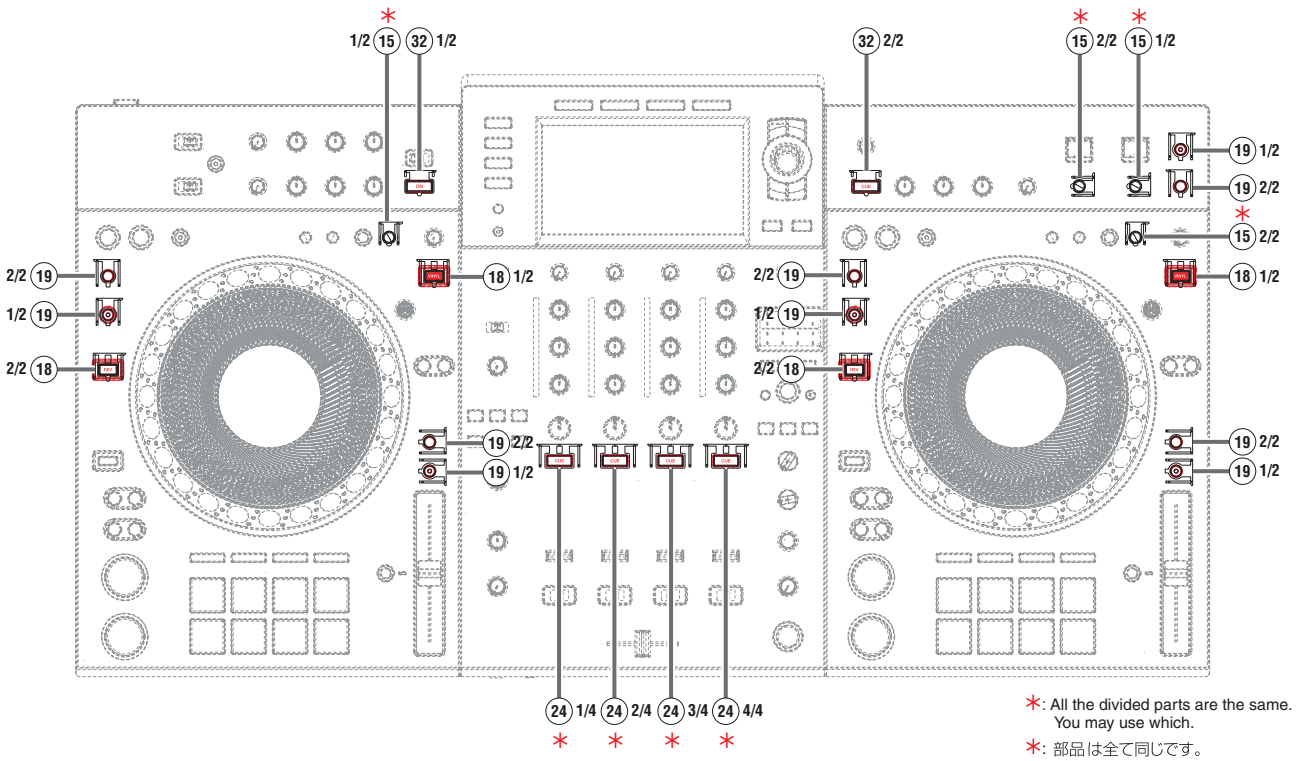


CONTROL PANEL SECTION (3/3) PARTS LIST

Mark	No.	Description	Part No.
	1	1..Control Panel Service Assy	DEA1094
⚠NSP	2	2..Control Panel	DNK6863
	3	2..Slide Sheet 1C	DAH2404
NSP	4	2..Plate	DAH3261
NSP	5	2..Plate	DAH3262
NSP	6	2..Plate	DAH3263
NSP	7	2..Plate	DAH3265
NSP	8	2..Plate	DAH3266
NSP	9	2..Plate	DAH3267
	10	2..Packing	DEC3642
	11	2..Gasket	DEC3719
	12	2..Sheet	DEC3795
NSP	13	2..DS Tape	DEH1108
NSP	14	2..DS Tape	DEH1109
	15	Button/TMP	DAC2845
	16	Button/CAL	DAC3020
	17	Button/DLT	DAC3021
	18	Button/RVL	DAC3023
	19	Button/MT	DAC3029
	20	Button/REL	DAC3030
	21	Button/EF	DAC3040
	22	Button/LOP	DAC3074
	23	Button	DAC3285
	24	Button	DAC3287
	25	Button	DAC3363
	26	Button	DAC3413
	27	Button	DAC3478
	28	Button	DAC3479
	29	Button	DAC3480
	30	Button	DAC3481
	31	Button	DAC3482
	32	Button	DAC3483
	33	Button	DAC3502
	34	Frame	DNH3423
	35	Ring Rens (PLAY)	DNK5315
	36	Lens	DNK5862
	37	Button Unit	DXB2198

9.7 JOG DIAL SECTION


• Bottom view

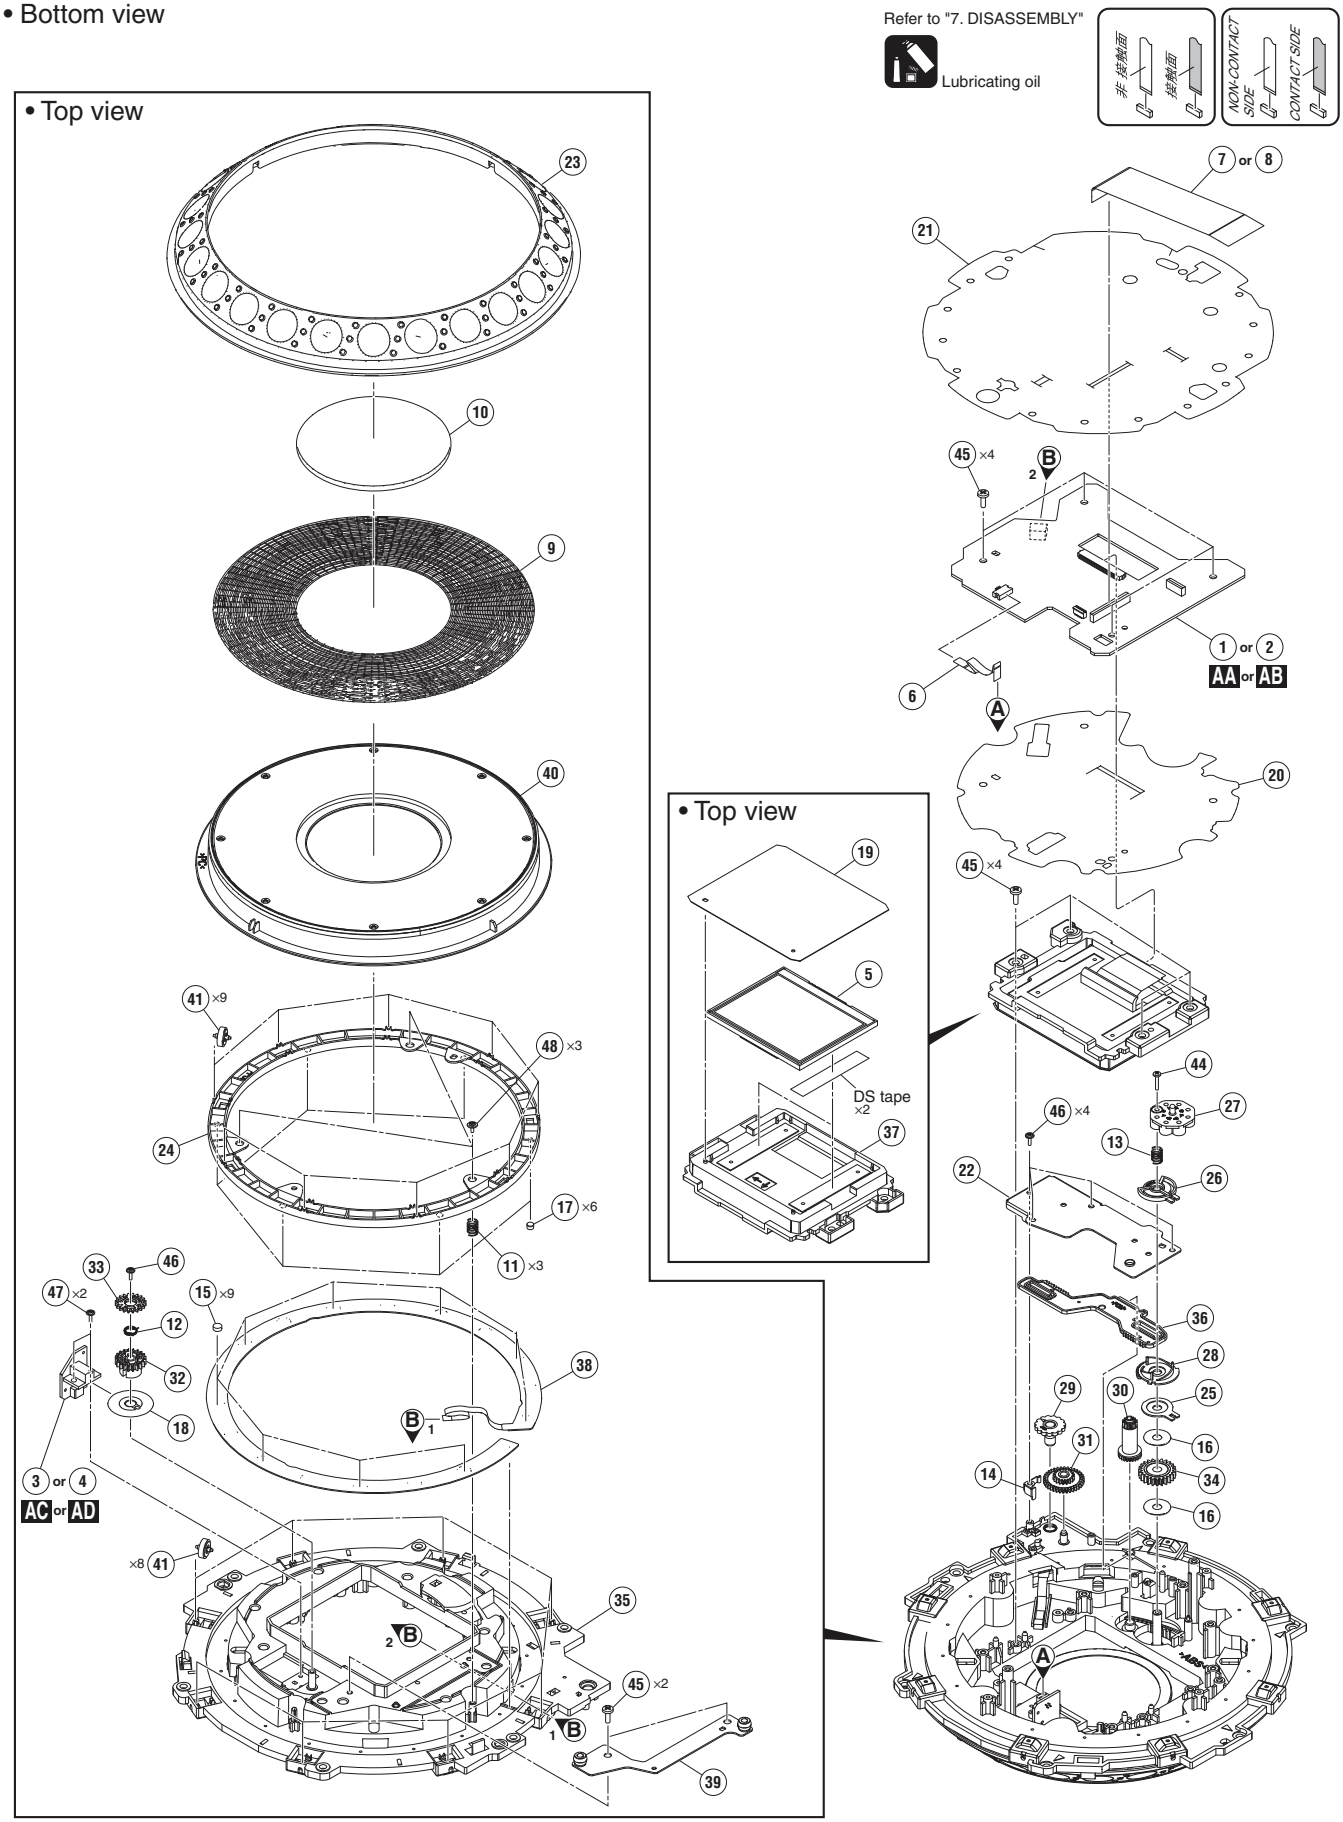


JOG DIAL SECTION PARTS LIST

Mark No.	Description	Part No.
1	JLCD1 Assy	DWX4288
2	JLCD2 Assy	DWX4289
3	JOG1 Assy	DWX4317
4	JOG2 Assy	DWX4318
5	TFT LCD	DWX4228
6	FFC	DDD1843
7	FFC (for Left Deck)	DDD1937
8	FFC (for Right Deck)	DDD1938
9	JOG Plate	DAH2679
10	Window	DAH3189
11	SW Spring	DBH1681
12	Encoder Spring	DBH1710
13	Coil Spring/LD	DBH1798
14	Leaf Spring/ADJ	DBK1376
15	SW Cushion HH48/2	DEC2538
16	Washer	DEC3137
17	Cushion/RNG	DEC3466
18	Plate	DEC3700
19	Sheet	DEC3844
20	Barrier	DEC3845
21	Barrier	DEC3846
22	Plate	DNH3345
23	JOG B	DNK4068
24	SW Ring	DNK5233
25	Smoother	DNK5237
26	Comp Plate	DNK5243
27	Adjust Plate	DNK5300
28	Cam Plate	DNK5301
29	Dial Gear	DNK5302
30	Link Gear A	DNK5303
31	Link Gear B	DNK5304
32	Gear/A	DNK6143
33	Gear/B	DNK6144
34	Gear/LD	DNK6145
35	Holder	DNK6745
36	Plate	DNK6748
37	Holder	DNK6866
38	Sheet SW	DSX1078
39	Stay Assy/JOG	DXB2133
40	JOG Dial A Assy	DXA2159
41	Roller	DXB2178
42	•••••	
43	•••••	
44	Screw	BPZ20P100FTC
45	Screw	BPZ30P080FNI
46	Screw	IPZ20P060FTC
47	Screw	IPZ20P080FTC
48	Screw (FE)	DBA1265


9.8 LCD SECTION

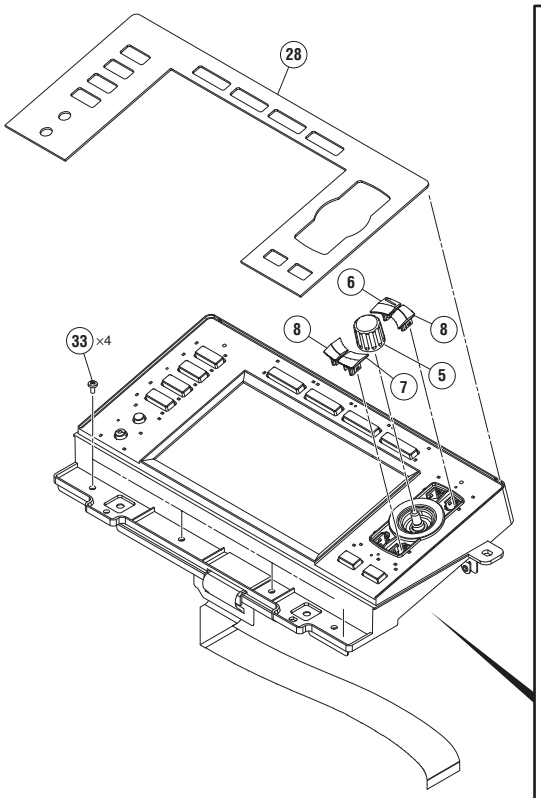

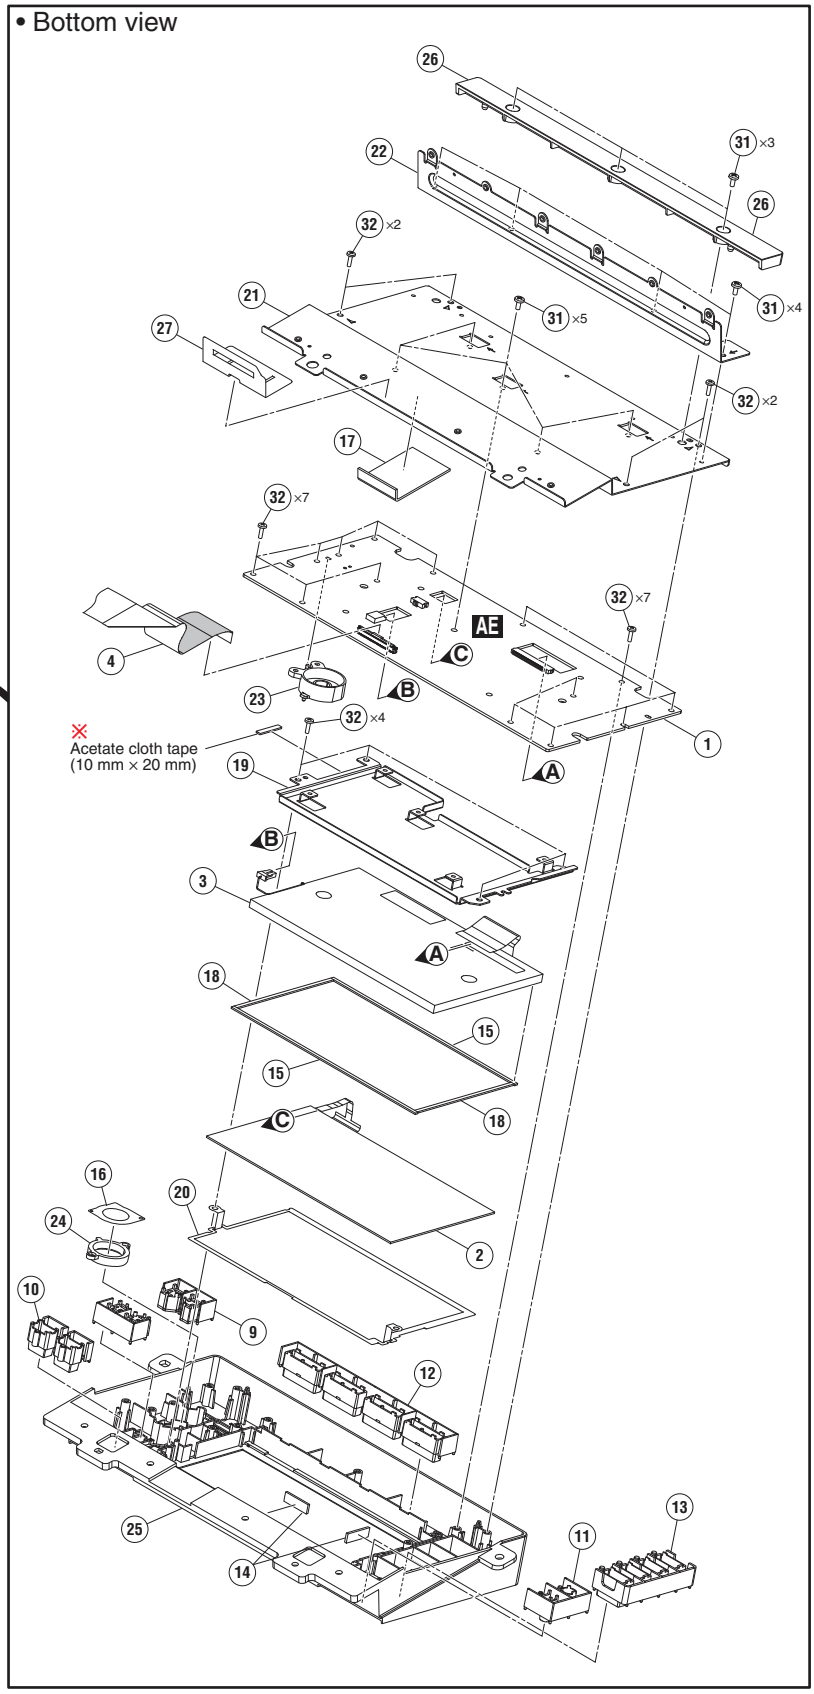



Note ※:
If it exchanges the Stay (⑲), be sure to use Acetate cloth tape.
If possible, reuse the original tape.
If cannot reuse, paste Acetate cloth tape of service parts as shown in the picture.
Incidentally, width of original tape is 10 mm, but width of service parts tape is 25 mm.

- **Acetate cloth tape for Service**

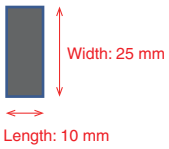

- **Pasting position**

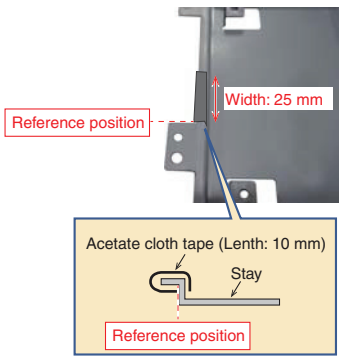

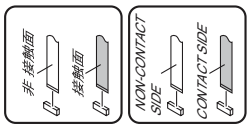

LCD SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	LCDB Assy	DWX4291
	2	Touch Panel	DSX1130
	3	TFT LCD	DWX4375
	4	FFC	DDD1951
	5	Dial Knob	DAA1246
	6	Button	DAC3113
	7	Button	DAC3117
	8	Button	DAC3118
	9	Button	DAC3289
	10	Button	DAC3290
	11	Button	DAC3291
	12	Button	DAC3292
	13	Button	DAC3484
	14	Packing/LCD	DEC3565
	15	Packing/L	DEC3568
	16	Light-D Sheet	DEC3613
	17	Sheet	DEC3741
	18	Packing	DEC3886
	19	Stay	DNH3309
	20	Plate	DNH3310
	21	Shield Case	DNH3438
	22	Angle	DNH3439
	23	Holder	DNK6467
	24	Lens	DNK6468
	25	Panel	DNK6864
	26	Cover	DNK6865
	27	Barrier	DEC3888
	28	Plate	DAH3264
	29	•••••	
	30	•••••	
	31	Screw	BBZ30P060FTB
	32	Screw	BPZ26P080FTC
	33	Screw	BBZ30P060FTC

12. PCB PARTS LIST

NOTES: ● *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
● *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
● *When ordering resistors, first convert resistance values into code form as shown in the following examples.*

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47 k ohm (tolerance is shown by J = 5%, and K = 10%).

560 Ω	→ *56 × 10¹*	→ *561*	*RD1/4PU 5 6 1 J*
47 kΩ	→ *47 × 10³*	→ *473*	*RD1/4PU 4 7 3 J*
0.5 Ω	→ *R50*		*RN2H R 5 0 K*
1 Ω	→ *1R0*		*RS1P 1 R 0 K*

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62 kΩ	→ *562 × 10¹*	→ *5621*	*RN1/4PC 5 6 2 1 F*

LIST OF ASSEMBLIES

Mark	No.	Description	Part No.
	1	MAIN ASSY	DWX4287
	1	AUDIO ASSY	DWX4298
NSP	1	SUBA ASSY	DWM2724
	2	MCIN ASSY	DWX4300
	2	HPJK ASSY	DWX4301
	2	MCTR ASSY	DWX4302
	2	CHF1 ASSY	DWX4303
	2	CHF2 ASSY	DWX4304
	2	PLAY1 ASSY	DWX4307
	2	PLAY2 ASSY	DWX4308
	2	SER1 ASSY	DWX4310
	2	SER2 ASSY	DWX4314
NSP	1	PADA ASSY	DWM2720
	2	LCDB ASSY	DWX4291
	2	PAD1 ASSY	DWX4292
	2	PAD2 ASSY	DWX4293
	2	USBA ASSY	DWX4294
	2	CRFD ASSY	DWX4295
NSP	1	UCOMA ASSY	DWM2721
	2	UCOM ASSY	DWX4296
	2	EFSW ASSY	DWX4297
	1	MIXER ASSY	DWX4299
NSP	1	PNL1 ASSY	DWM2725
	2	DCK1 ASSY	DWX4309
	2	TMP1 ASSY	DWX4311
	2	PWSW ASSY	DWX4312
	2	CHF3 ASSY	DWX4305
	2	STL1 ASSY	DWX4319
	2	STL2 ASSY	DWX4320
	2	STL3 ASSY	DWX4321
NSP	1	PNL2 ASSY	DWM2726
	2	DCK2 ASSY	DWX4313
	2	TMP2 ASSY	DWX4315
	2	CHF4 ASSY	DWX4306
	2	JOG1 ASSY	DWX4317
	2	JOG2 ASSY	DWX4318
	2	STL4 ASSY	DWX4322
NSP	1	JOGA ASSY	DWM2719
	2	JLCD1 ASSY	DWX4288
	2	JLCD2 ASSY	DWX4289
	2	XPAD ASSY	DWX4290
⚠	1	SW POWER SUPPLY	DWR1548

A
MAIN ASSY

SEMICONDUCTORS

Mark	No.	Description	Part No.
⚠	IC	301,501,1801,1802	BD9328EFJ
⚠	IC	302	BD00IC0WEFJ
⚠	IC	303	IS31BL3555-ZLS4
⚠	IC	502	MMPF0100F0AEP
	IC	701	MCIMX6Q6AVT10AD
	IC	901,902	K4B4G1646E-BYMA
	IC	1101	H337S3959
NSP	IC	1102	DYW2156*
		*Part number of the initial firmware equipped	
	IC	1301,2301	TC7SH04FUS2
⚠	IC	1803,1804	TPS2557DRB
	IC	1805	TUSB4020BIPHP
NSP	IC	2001	RTL8152B-VB-CG
	IC	2002	TUSB4041IPAP
	IC	2003,2306-2308	TC7SH08FUS2
	IC	2151	RTL8309M-CG
NSP	IC	2302	R5S72690W266FP
NSP	IC	2303	DYW2157*
		*Part number of the initial firmware equipped	
	IC	2304	TC7SZU04FUS2
	IC	2305	TC7SHU04FUS2
	IC	2501	D810K013DZKB400
	IC	2502	W9812G6KH-6
	IC	2606	SN74AUC1G08DCK
	Q	301	RT3T22M
	Q	302-305,2001	2SA1576A
	Q	306	LTC023JEB
	Q	1401	LTC014EEB
	Q	1801,1802,2303	RT3N22M
	Q	1803	HN1C01FUS1
	Q	2002,2302	LTC024EEB
	D	301	RB060MM-30TF
	D	302-305	1SS355VM
	D	501	RB160M-60
	D	1801,1802	UDZV5R1

MISCELLANEOUS

	L	105-108,110,111	INDUCTOR CTF1545
	L	109	POWER INDUCTOR ATH7053
	L	301	COIL (47 uH) CTH1475
	L	302	SMD SPL INDUCTOR CTH1527
	L	501	SMD SPL INDUCTOR CTH1501
	L	502	SMD SPL INDUCTOR CTH1531
	L	503-506	SMD SPL INDUCTOR CTH1530
	L	1101	CHIP SOLID INDUCTOR XTL3010
	L	1801,1802	INDUCTOR CTH1253
	L	1803,1808,1809,2005	COIL ATH7015
	L	2151-2156	CHOKE COIL ATH7098
	L	2301-2303,2601	INDUCTOR CTF1545
	L	2304	CHIP COIL (33 uH) LCTAW330J2520

Mark	No.	Description	Part No.
	L	2305,2306 CHIP SOLID INDUCTOR	QTL1013
	L	2307 CHIP BEADS	VTL1129
	L	2501 SMD FERRITE BEADS	CTF1823
	F	1801,1802,2001-2003 EMI FILTER	CCG1352
	F	2151,2152 EMI FILTER	CCG1352
	F	2501 EMI FILTER	DTL1106
	JA	2001 USB CONNECTOR	DKN1237
	JA	2151-2153 RJ45 CONNECTOR	AKN7115
	KN	2151,2152 SCREW PLATE	VNE1948
	X	1401 RESONATOR (32.768 kHz)	CSS1807
	X	1402 CRYSTAL TRANSDUCER (24 MHz)	DSS1208
	X	1801,2002 RESONATOR (24 MHz)	CSS1773
	X	2001,2151 CRYSTAL (25.000 MHz)	DSS1205
	X	2301 RESONATOR (48.000 MHz)	CSS1760
	X	2302 CRYSTAL RESONATOR (13.333 3 MHz)	CSS1840
	CN	101,103 FFC/FPC CONNECTOR	CKS6543
	CN	102 19P RECEPTACLE	AKP7199
	CN	104,105 FFC/FPC CONNECTOR	CKS6645
	CN	1801,1802 CONNECTOR	AKM1277
	VA	2001-2003 SMD VARISTOR	EZJZ1V80010

RESISTORS

	R	305	RS1/4SA1R0J
	R	308,317	RS1/10SR472J
	R	312	RS1/10SR151J
	R	313	RS1/16SS2701D
	R	314	RS1/16SS6201D
	R	319,505,506	RS1/16SS1502D
	R	321	RS1/16SS2202D
	R	322,2380	RS1/16SS5601D
	R	323,2206	RS1/16SS6800D
	R	324	RS1/16SS3301D
	R	325,336,1808,1812	RS1/16SS1002D
	R	329	RS1/10SR3302F
	R	337	RS1/16SS1202D
	R	338,507	RS1/16SS8201D
	R	339	RS1/16SS3302D
	R	514,517,702,707	RS1/10SR0R0J
	R	515	RS1/10SR561J
	R	521	RS1/16SS1002F
	R	708,905,908	RS1/16SS2400F
	R	903,904	RS1/16SS1001D
	R	1108,1109,1120,2501	RAB4CQ680J
	R	1127	RAB4CQ222J
	R	1139,1140	RAB4CQ220J
	R	1328,1333,1335	RAB4CQ470J
	R	1502,1505,1530-1533	RAB4CQ103J
	R	1507,1526-1529	RAB4CQ472J
	R	1803,1804	RS1/10SR220J
	R	1806,1810	RS1/10SR1100D
	R	1807,1811	RS1/16SS4702D
	R	1821,1822	RS1/10SR2702F
	R	1823,1824	RS1/10SR5602F
	R	1839,2052	RS1/16SS4300D
	R	1840,2051	RS1/16SS9101D
	R	1847	RS1/16SS1201F
	R	1848	RS1/16SS6801D
	R	1872,1873	RS1/10SR102J
	R	2005	RS1/16SS91R0F
	R	2006	RS1/16SS2401D
	R	2044	RS1/16SS1002D
	R	2045	RS1/16SS9102F
	R	2047,2407,2408	RS1/10SR0R0J
	R	2172,2197	RS1/8SQ0R0J
	R	2205	RS1/16SS1801D
	R	2301-2304	RAB4CQ560J
	R	2355,2392	RAB4CQ103J
	R	2400,2401	RAB4CQ101J
	R	2405	RAB4CQ104J
	R	2413,2414	RS1/10SR105J
	R	2422	RAB4CQ223J
	R	2502	RAB4CQ680J
	R	2509,2510,2516	RAB4CQ820J
	R	2517,2518	RAB4CQ330J
	R	2528-2531	RAB4CQ470J
	Other Resistors		RS1/16SS###J

CAPACITORS

	C	101,303,316,320 (10 uF/10 V)	DCH1201
	C	103-107,109,116	CKSSYB102K50
	C	108,112,113,117	CKSSYB104K10
	C	111,114,115,134	CKSSYB104K16
	C	119-123,321,2303	CEVW101M16
	C	124,130,136,140	CKSSYB104K10
	C	129,135,137,139	CKSSYB102K50
	C	138,142,304,331	CKSSYB104K16
	C	141,144,153,306	CKSSYB102K50
	C	143,155,305,309	CKSSYB104K10
	C	160,1837,1838 (100 uF/16 V)	CCH1565
	C	162,164,342,574 (0.1 uF/35 V)	ACE7100
	C	301,302,334,335 (10 uF/16 V)	DCH1263
	C	307,325,505,512	CCSSCH102J50
	C	310,315,318,322	CKSSYB104K10
	C	311,524,536,557	CKSRYB474K10
	C	312	CCSRCH121J50
	C	313	CKSSYB153K16
	C	314,1809,1810,2151	CKSSYB102K50
	C	317,328,523,526	CKSRYB105K10
	C	319,513,1402,1405	CKSSYB103K16
	C	324	CKSSYB472K25
	C	326,329,339-341	CKSSYB104K10
	C	330,515,516,529 (10 uF/10 V)	DCH1201
	C	332,338,503,506	CKSSYB104K16
	C	333	CEVW221M4
	C	501,1803-1806 (10 uF/16 V)	DCH1263
	C	507	CKSSYB682K25
	C	511,514,525,528	CKSSYB104K10
	C	517 (1000 pF/63 V)	ACE7099
	C	518 (100 uF/6.3 V)	ACH7275
	C	519,520,549 (22 uF/6.3 V)	DCH1256
	C	527,701,703-710	CKSSYB224K6R3
	C	530,545,909,910	CKSRYB105K10
	C	532,535,538,540 (4.7 uF/10 V)	CCG1201
	C	533,537,539,541	CKSSYB104K10
	C	542,546,548,551	CKSSYB104K10
	C	543,544,547,565 (4.7 uF/10 V)	CCG1201
	C	550	CCSRCH102J50
	C	552-555,558 (22 uF/6.3 V)	DCH1256
	C	556,559,740,907	CKSSYB104K10
	C	560-563,571-573 (22 uF/6.3 V)	DCH1256
	C	564	CKSRYB474K10
	C	570,1101,1106,1109	CCSSCH102J50
	C	702,711,715,734 (22 uF/6.3 V)	DCH1256
	C	712-714,716-718	CKSSYB224K6R3
	C	719,722,728,908 (4.7 uF/10 V)	DCH1201
	C	720,721,723-727	CKSSYB224K6R3
	C	729-733,735-739	CKSSYB224K6R3
	C	741,743,745-747	CKSSYB224K6R3
	C	742,744,748,750 (22 uF/6.3 V)	DCH1256
	C	749,751-755	CKSSYB224K6R3
	C	901-906,913-924	CKSSYB224K6R3
	C	911,912,925,1107	CKSSYB104K10
	C	926,1817,1818,1826 (4.7 uF/10 V)	DCH1201
	C	927-932,1105	CKSSYB224K6R3
	C	1102,2001,2416	CCSSCH100D50
	C	1108	CKSSYB222K50
	C	1301,1304,1503	CCSSCH470J50
	C	1309,1828,1829,1846	CKSSYB104K10
	C	1401,1403	CCSSCH9R0D50
	C	1807,1808,1811-1814	CKSSYB104K16
	C	1815,1816,1823,1824	CKSSYB103K16
	C	1821,1822	CEHVAW101M6R3

Mark	No.	Description	Part No.
	C	1827,1833-1836,1843 (4.7 uF/10 V)	DCH1201
	C	1831,1832,1845,1847	CKSSYB103K16
	C	1839,1840,2024,2025	CCSSCH101J50
	C	1844,1874-1876,2002 (4.7 uF/10 V)	DCH1201
	C	1848,1849,1851	CKSSYB104K10
	C	1850,1852,1854,1856	CKSSYB103K16
	C	1853,1855,2003,2047	CCSSCH120J50
	C	1857-1860,1863,1865	CKSSYB104K10
	C	1861,1862,1864	CKSSYB103K16
	C	1866-1869,2037,2040	CKSSYB103K16
	C	1870-1872,1877,1878	CKSSYB104K10
	C	1873,1883,1884,2026	CCSSCH102J50
	C	1879,1880,2166	CKSSYB104K16
	C	2004-2012,2014,2017	CKSSYB104K10
	C	2015,2016,2019,2540	CKSRYB105K10
	C	2018,2036,2039,2043	CKSSYB104K10
	C	2028,2041,2152	CCSSCH102J50
	C	2029,2032,2156,2159 (4.7 uF/10 V)	DCH1201
	C	2042,2044,2048,2050	CKSSYB103K16
	C	2045,2046,2049,2052	CKSSYB104K10
	C	2051,2054-2056	CKSSYB103K16
	C	2053,2165,2415,2417	CCSSCH120J50
	C	2057-2059,2063,2065	CKSSYB104K10
	C	2060 (2.2 uF/10 V)	CCG1218
	C	2066,2368,2375,2378	CCSSCH471J50
	C	2067,2154,2155,2157	CKSSYB104K10
	C	2068 (22 uF/16 V)	CCG1254
	C	2158,2160,2162-2164	CKSSYB104K10
	C	2161,2414	CCSSCH150J50
	C	2167-2177,2301,2302	CKSSYB104K10
	C	2184-2186,2397,2538	CCSSCH102J50
	C	2187,2314,2319,2320	CKSSYB102K50
	C	2305,2307-2313	CKSSYB104K10
	C	2306,2507	CKSSYB471K50
	C	2315-2318,2321,2322	CKSSYB104K10
	C	2324,2325,2328-2331	CKSSYB104K10
	C	2326,2327,2332,2333	CKSSYB102K50
	C	2334-2337,2340-2343	CKSSYB104K10
	C	2338,2339,2344,2345	CKSSYB102K50
	C	2346-2348,2351,2352	CKSSYB104K10
	C	2349,2350,2353,2359	CKSSYB102K50
	C	2354-2358,2361,2367	CKSSYB104K10
	C	2360	CKSSYB221K50
	C	2362,2370,2371,2386	CKSSYB102K50
	C	2363-2366,2369,2372	CKSSYB103K16
	C	2373,2385,2387,2398 (4.7 uF/10 V)	DCH1201
	C	2374,2381-2383,2394	CKSSYB104K10
	C	2376,2377,2379,2392	CKSSYB103K16
	C	2380,2419	CCSSCH471J50
	C	2384	CEVW101M16
	C	2389,2390,2408,2409	CKSSYB102K50
	C	2393,2400,2406,2407	CKSSYB103K16
	C	2395,2401,2403-2405	CKSSYB104K10
	C	2396,2411,2412,2537	CCSSCH101J50
	C	2399,2402,2541 (4.7 uF/10 V)	DCH1201
	C	2410,2418,2422,2423	CKSSYB104K10
	C	2413,2420,2421,2503	CKSSYB102K50
	C	2501,2505,2603,2610	CKSSYB104K10
	C	2502	CEVW101M4
	C	2504,2506,2508-2510	CKSSYB103K16
	C	2511,2513,2515,2517	CKSSYB102K50
	C	2512,2514,2516,2518	CKSSYB103K16
	C	2519,2521,2523,2525	CKSSYB102K50
	C	2520,2522,2524,2526	CKSSYB103K16
	C	2527,2529,2531,2533	CKSSYB102K50
	C	2528,2530,2532,2534	CKSSYB103K16
	C	2535	CKSSYB102K50
	C	2536,2539,2542-2548	CKSSYB103K16
	C	2602,2609,2612	CCSSCH102J50
	C	2608,2611	CKSSYB103K16
	C	2613	CKSSYB104K10

B
AUDIO ASSY

SEMICONDUCTORS

	IC	5101,5102,5104-5107	TC7SH08FUS2
	IC	5103	TC7WHU04FKS1
	IC	5109	TC7SH08FUS2
	IC	5201,5401,6001-6003	NJM4580MD
	IC	5202,5203,5402,5403	NJM2121MD
	IC	5204,5404	AK5386VT
	IC	5601,5602	NJM2121MD
	IC	5603,5604	AK5358AET
	IC	5801	AK4384ET
	IC	5802	AK4458VN
	IC	6004,6005,6203,6204	NJM4580DD
	IC	6201,6202,6401	NJM4580MD
	IC	6402	NJM4565MD
⚠	IC	6601	MM1856A50N
⚠	IC	6602,6603	BD9328EFJ
⚠	IC	6604	NJM2831F33
⚠	IC	6605,6606	BD9851EFV
⚠	IC	6607	NJM78M09DL1A
⚠	IC	6608	NJM2872BF33
⚠	IC	6609,6610	NJM7805DL1A
⚠	IC	6611	NJM78M15DL1A
⚠	IC	6612	NJM79M15DL1A
	Q	5201,5203,5401,5403	2SK3320
	Q	5202,5402,5601	LTC114EUB
	Q	6001	RN2903
	Q	6002-6011,6014-6017	INC2002AC1
	Q	6201-6208,6401,6402	INC2002AC1
	Q	6405,6406	2SK209
	Q	6407,6408	INC2002AC1
	Q	6409,6411,6606,6808	2SC4081
	Q	6410,6412,6801-6806	2SA1576A
	Q	6413,6415	2SCR573D3
	Q	6414,6416	2SAR573D3
	Q	6601	LTC024EEB
⚠	Q	6602,6604	RSQ030P03
⚠	Q	6603	RSR020P05
⚠	Q	6605	RSQ045N03
⚠	Q	6607	RTQ040P02
	Q	6807	LTC014YEB
	Q	6809,6903	LSCR523UB
	Q	6901	RT3T22M
	Q	6902	RT3N22M
	Q	6904	HN1A01FUS1
	D	6201,6401-6404,6608	1SS355VM
	D	6602-6606	RB162MM-40TF
	D	6609,6610	RB501V-40
	D	6801-6806,6904	1SS355VM
	D	6901	UDZV7R5
	D	6902	RB160M-30

MISCELLANEOUS

	L	5101 CHIP BEADS	VTL1126
	L	6601 POWER INDUCTOR (0.22 uH)	ATH7053
	L	6602,6603 CHOKE COIL (22 uH)	CTH1561
	L	6604-6607 POWER INDUCTOR (22 uH)	ATH7011
	JA	5201,5401 4P PIN JACK	DKB1090
	JA	5601,6001 RCA JACK	DKB1122
	JA	6002,6003 CANON CONNECTOR	DKB1093
	JA	6201,6202 6.5 DIA JACK	DKN1653
	JA	6401,6402 6.5 DIA JACK	DKN1652
	X	5101 CRYSTAL OSCILLATOR (22.579 2 MHz)	DSS1215
	CN	5001 19P PLUG	AKM7077
	CN	5002 FFC/FPC CONNECTOR	CKS6543
	CN	5601 9P CONNECTOR	09R-1.25FJ

Mark	No.	Description	Part No.
	CN 6401	CONNECTOR	AKM1277
	CN 6601	CONNECTOR	DKN1661
	VA 5201-5206,5401-5406	VARISTORS	EZJZ1V270RM
	VA 5601-5603,6001-6009	VARISTORS	EZJZ1V270RM
	VA 6201-6205,6401-6403	VARISTORS	EZJZ1V270RM

RESISTORS

	R	5130,6678,6679	RS1/10SR0R0J
	R	5201,5203-5205,5401	RS1/16SS1000D
	R	5202,5207,5209,5210	RS1/16SS2000D
	R	5206,5211,5214,5216	RS1/16SS4702D
	R	5212,5213,5222,5223	RN1/16SE1201D
	R	5217,5224,5416,5424	RS1/10SR470J
	R	5218,5227,5420,5427	RN1/16SE1001D
	R	5220,5225,5228,5232	RN1/16SE1501D
	R	5231,5235,5429,5435	RN1/16SE2703D
	R	5234,5237,5434,5437	RN1/16SE2202D
	R	5239,5240,5439,5440	RS1/16SS3001D
	R	5241,5242,5441,5613	RS1/10SR2701D
	R	5243,5244,5443,5444	RS1/16SS2701D
	R	5245,5246,5445,5446	RS1/16SS6800D
	R	5402,5407,5409,5410	RS1/16SS2000D
	R	5403-5405,5601,5602	RS1/16SS1000D
	R	5406,5411,5412,5415	RS1/16SS4702D
	R	5413,5414,5422,5423	RN1/16SE1201D
	R	5421,5425,5428,5430	RN1/16SE1501D
	R	5442	RN1/16SE2701D
	R	5603,5604	RS1/16SS2000D
	R	5605,5606,6613	RS1/16SS4702D
	R	5609-5612,6666	RS1/16SS3001D
	R	5614,5616	RS1/10SR8201D
	R	5615,6021-6028	RS1/10SR2701D
	R	5617,5618,5621,5622	RS1/16SS3601D
	R	5619,5620,5623,5624	RS1/16SS8200D
	R	5829-5831	RS1/4SA0R0J
	R	6001-6004	RS1/10SR513J
	R	6005-6012	RS1/10SR3301D
	R	6013-6020	RS1/10SR1202D
	R	6029-6036	RS1/8SQ5600F
	R	6037-6040,6049-6052	RS1/10SR223J
	R	6041-6044	RS1/8SQ2700F
	R	6053-6060	RS1/10SR1800F
	R	6061,6062	RS1/10SR2202D
	R	6063,6064,6405-6408	RS1/10SR1002D
	R	6065-6072,6225-6232	RS1/10SR5601D
	R	6073,6074,6413,6414	RS1/10SR6800D
	R	6075-6082,6233-6240	RS1/10SR6801D
	R	6083,6084,6427,6428	RS1/10SR104J
	R	6085-6092	RS1/4SA471J
	R	6093,6094,6107-6110	RS1/10SR183J
	R	6095-6098,6245-6248	RS1/10SR2201D
	R	6111,6112,6253-6256	RS1/10SR330J
	R	6113,6114,6117,6120	RS1/16SS15R0D
	R	6121-6124 (22 ohm)	DCN1198
	R	6201-6208	RS1/10SR4701D
	R	6209-6216	RS1/10SR1602D
	R	6217-6224,6409-6412	RS1/10SR3601D
	R	6241-6244 (330 ohm)	DCN1200
	R	6249-6252,6257-6260	RS1/10SR183J
	R	6261-6264,6641,6647	RS1/10SR330J
	R	6401-6404	RS1/10SR5601D
	R	6415,6416	RS1/10SR183J
	R	6421,6422	RS1/16SS3300D
	R	6425,6426	RS1/16SS3901D
	R	6429,6430	RN1/16SE1502D
	R	6431,6432	RS1/16SS3301D
	R	6438,6440	RS1/8SQ680J
	R	6441-6444	RN1/16SE3301D
	R	6445-6448,6663	RS1/16SS1001D
	R	6449-6452,6612,6615	RS1/16SS1801D
	R	6453-6460	RS1/4SA220J

Mark	No.	Description	Part No.
	R	6601,6682-6685	RS1/8SQ0R0J
	R	6610,6623,6626,6655	RS1/16SS6802D
	R	6611	RS1/16SS3302D
	R	6614,6619,6621,6634	RS1/16SS1002D
	R	6616	RS1/16SS1802D
	R	6617	RS1/16SS2201D
	R	6618,6620,6638	RS1/16SS1502D
	R	6622,6625,6646,6651	RS1/16SS3002D
	R	6628	RS1/16SS5102D
	R	6629	RS1/16SS5601D
	R	6631	RS1/16SS1803D
	R	6633	RS1/16SS2200D
	R	6635,6658,6659	RS1/16SS1002D
	R	6639,6648	RS1/10SR220J
	R	6649,6652	RS1/10SR105J
	R	6654	RS1/16SS6201D
	R	6656	RS1/16SS6802D
	R	6662	RS1/16SS6202D
	R	6664	RS1/16SS1503D
	R	6665	RS1/16SS5101D
	R	6669	RS1/16SS2002D
	Other Resistors		RS1/16SS###J

CAPACITORS

	C	5001,5003,5004,5218	CKSSYB104K16
	C	5007,5009,5014,5015	CKSSYB104K10
	C	5101,5106,5109,5112	CKSSYB104K10
	C	5102,5107,5111,5113	CCSSCH102J50
	C	5103,5206,5210-5212	CCSSCH101J50
	C	5104,5110,5632,5806	CKSSYB103K16
	C	5116	CCSSCH180J50
	C	5117,5119,5121,5123	CKSSYB104K10
	C	5118,5120,5122,5124	CCSSCH102J50
	C	5127,5240,5243,5247	CKSSYB104K10
	C	5128,5223,5226,5241	CCSSCH102J50
	C	5201,5204,5401,5404	CKSSYB102K50
	C	5202,5205,5402,5405	CKSRYB104K25
	C	5203,5207,5403,5407	CCSSCH221J50
	C	5208,5209,5214,5219	CCSSCH471J50
	C	5213,5217,5413,5417	CKSRYB123K50
	C	5215,5220,5255,5415	CCSSCH331J50
	C	5216,5221,5416,5421	CEVW101M16
	C	5222,5225,5422,5425 (0.012 uF/63 V)	ACE7125
	C	5224,5227,5424,5427 (3 300 pF/50 V)	DCG1049
	C	5228,5230-5232,5263	CCSSCH101J50
	C	5229,5233,5429,5433 (100 uF/25 V)	CCH2000
	C	5234,5235,5408,5409	CCSSCH471J50
	C	5236,5237,5249,5250 (220 uF/16 V)	CCH2090
	C	5238,5242,5438,5442 (10 uF/16 V)	CCH1998
	C	5239,5439,5809,5812 (1 uF/25 V)	ACE7129
	C	5244,5423,5426,5441	CCSSCH102J50
	C	5245,5445,5631,5634 (10 uF/10 V)	DCH1201
	C	5248,5440,5443,5447	CKSSYB104K10
	C	5251,5252,5449,5450 (0.1 uF/35 V)	ACE7100
	C	5253,5826,6720,6784 (0.01 uF/50 V)	ACE7113
	C	5254,6076,6083 (1 000 pF/50 V)	ACE7120
	C	5264,6235-6238 (470 pF/50 V)	ACE7119
	C	5265,5854,6618,6754	ACE7115
	C	5406,5410-5412,5428	CCSSCH101J50
	C	5414,5419,5434,5435	CCSSCH471J50
	C	5418,6423,6601,6606	CKSSYB104K16
	C	5420,6005-6008,6074	CCSSCH331J50
	C	5430-5432,5605,5606	CCSSCH101J50
	C	5436,5437,5811,5828 (220 uF/16 V)	CCH2090
	C	5444,5608,5609,5637	CCSSCH102J50
	C	5448,5633,5638,5641	CKSSYB104K10
	C	5601,6064	CKSSYB102K50
	C	5602,5607,5610,6428	CKSRYB104K25
	C	5603,5604,6401,6402	CCSSCH221J50
	C	5612,5620	CEVW101M25

Mark	No.	Description	Part No.
	C	5616-5619,5643,5645	CCSSCH101J50
	C	5621,5622,5626,5627	CCSSCH471J50
	C	5623,5628,6634,6636 (100 uF/16 V)	CCH1565
	C	5624,5625,5810	CEVW101M16
	C	5629,5630 (22 uF/6.3 V)	DCH1256
	C	5635,5636	CEVW220M16
	C	5639,5802,5818,5819	CCSSCH102J50
	C	5640,5642,5646,5647 (10 uF/10 V)	DCH1201
	C	5644,5648-5651,5801	CKSSYB104K10
	C	5803	CEVW220M6R3
	C	5804,5807,5817,5831	CKSSYB104K10
	C	5808,6620-6622,6669	CKSSYB103K16
	C	5813,5834,5841,5857 (1 uF/25 V)	ACE7129
	C	5814,5827,5840,5853 (0.1 uF/35 V)	ACE7100
	C	5815,5839,6077,6084 (0.01 uF/63 V)	ACE7097
	C	5816,6625,6662,6681	CKSRYB105K10
	C	5820,5821,5829,5835	CCSSCH101J50
	C	5823,5830,5832,5836	CCSSCH102J50
	C	5833,6623,6624,6652	CKSSYB104K10
	C	5843,6035,6036,6053 (220 uF/16 V)	CCH2090
	C	5855,6078,6085,6629 (0.1 uF/35 V)	ACE7100
	C	5856,5868,5869	CCSSCH101J50
	C	6001-6004,6743,6744 (100 uF/25 V)	CCH2000
	C	6009-6016,6018,6021	CCSSCH101J50
	C	6023,6024,6027,6030	CCSSCH101J50
	C	6037,6040,6042,6043	CCSSCH101J50
	C	6045-6052,6205-6228	CCSSCH101J50
	C	6054,6056,6057,6434 (220 uF/16 V)	CCH2090
	C	6058,6059,6066-6069 (1 000 pF/63 V)	ACE7099
	C	6070,6072,6239,6432	CKSSYB103K25
	C	6081	CCSSCH331J50
	C	6201-6204,6714	CCSSCH271J50
	C	6229-6234,6403,6407	CEVW101M16
	C	6404,6406,6420,6421	CCSSCH121J50
	C	6408,6409,6610-6612	CCSSCH101J50
	C	6411,6412,6658,6684	CEVW101M16
	C	6413,6414	CEVW470M16
	C	6415,6416,6424,6426	CCSSCH102J50
	C	6418,6419 (2 200 pF/63 V)	ACE7116
	C	6422,6425	CCSSCH330J50
	C	6427,6435-6438	CKSRYB104K16
	C	6430,6715,6716,6748	CKSRYB104K25
	C	6439,6641,6902,6904 (220 uF/16 V)	CCH2090
	C	6442,6443	CCSSCH121J50
	C	6602,6603	CKSRYB474K16
	C	6604,6605,6630,6633 (10 uF/16 V)	DCH1263
	C	6607,6619,6639,6640	CKSSYB104K16
	C	6608,6609,6615-6617	CCSSCH102J50
	C	6628 (0.01 uF/63 V)	ACE7097
	C	6631,6689,6717,6761 (0.1 uF/35 V)	ACE7100
	C	6635,6693,6757,6768 (1 uF/25 V)	ACE7129
	C	6637 (3.3 uF/16 V)	DCE1029
	C	6644	CKSSYB332K50
	C	6645	CCSSCH821J50
	C	6650,6651,6679,6700	CCSSCH102J50
	C	6653,6671,6794,6796	CKSSYB104K16
	C	6654,6656,6709,6710 (10 uF/10 V)	DCH1201
	C	6655,6657,6670,6672 (10 uF/16 V)	DCH1263
	C	6659,6765,6770,6773 (100 uF/16 V)	CCH1565
	C	6660	CKSRYB474K10
	C	6661	CKSRYB334K10
	C	6664	CCSSCH221J50
	C	6665	CKSSYB223K16
	C	6666	CCSSCH680J50
	C	6673,6676,6680,6686 (22 uF/16 V)	CCG1254
	C	6674,6677	CCSSCH561J50
	C	6675,6683,6690,6786 (10 uF/16 V)	DCH1263
	C	6678,6747,6753,6755	CCSSCH101J50
	C	6682,6687,6707,6708	CKSSYB104K10
	C	6685,6691	CKSYB105K16

Mark	No.	Description	Part No.
	C	6688,6695,6697,6725	CKSRYB105K10
	C	6696,6730	CKSQYB105K16
	C	6698 (2.2 uF/10 V)	CCG1218
	C	6702,6706	CKSSYB682K25
	C	6703 (4.7 uF/10 V)	CCG1201
	C	6713	CCSSCH471J50
	C	6718,6719 (10 uF/35 V)	CCG1236
	C	6721,6722,6728,6729	CCSSCH102J50
	C	6724,6727,6731	CKSQYB105K25
	C	6726	CKSRYB105K10
	C	6734,6737,6745,6746	CKSQYB334K50
	C	6738,6741,6742,6749	CCSSCH102J50
	C	6739,6740 (10 uF/10 V)	DCH1201
	C	6750	CKSSYB103K25
	C	6751,6756,6760	CCSRCH102J50
	C	6752,6762,6763,6777	CCSSCH102J50
	C	6758,6759	CCSRCH101J50
	C	6764	CKSRYB104K10
	C	6766,6767	CKSRYB104K25
	C	6769,6771,6772 (1 uF/25 V)	ACE7129
	C	6776	CCSSCH101J50
	C	6779,6780	CCSRCH331J50
	C	6783 (0.1 uF/35 V)	ACE7100
	C	6785 (4 700 pF/63 V)	ACE7115
	C	6787 (10 uF/16 V)	DCH1263
	C	6792 (100 uF/16 V)	CCH1565
	C	6793,6795	CCSSCH102J50
	C	6801,6903	CKSSYB103K16

SUBA ASSY
Consists of
MCIN ASSY
HPJK ASSY
MCTR ASSY
CHF1 ASSY
CHF2 ASSY
PLAY1 ASSY
PLAY2 ASSY
SER1 ASSY
SER2 ASSY

C D F J K W X Y Z

SUBA ASSY

SEMICONDUCTORS

IC	7601,7602		NJM4580MD
Q	7601-7604		2SK209
Q	7701,7702		INC2002AC1
Q	7951,7952,8001,8002		LTC114YUB
Q	8301,9401		LTC124EUB
D	7701-7704		DF2B18FU
D	7951,8001		LTL17KCGP4J
D	7952,8002		LTL17KSL5D-P
D	8301-8305,9401-9405		1SS355VM

MISCELLANEOUS

L	7601,7602	CHIP SOLID INDUCTOR	XTL3010
JA	7601,7602	XLR SOCKET	DKB1124
JA	7701	STEREO MINI JACK	XKN3017
JA	7702	6.5 DIA JACK	DKN1669
KN	7701	SCREW PLATE	VNE1948
S	7951,7952,8001	TACTILE SWITCH	DSG1151
S	8002	TACTILE SWITCH	DSG1151
S	8301-8305,9401-9405	TACT SWITCH	DSG1089
CN	7601	CONNECTOR	CKS3561
CN	7602	9P CONNECTOR	09P-1.25FJ
CN	7701	L-PLUG(6P)	KM200NA6L
CN	7751	PLUG	CKS3533
CN	7901,7911	L-PLUG(3P)	KM200NA3L
CN	7951,8001	10P CONNECTOR	VKN1241
CN	7952,8002	4P JUMPER CONNECTOR	52147-0410

Mark	No.	Description	Part No.
	CN	8301,9401 4P JUMPER CONNECTOR	52147-0410
	CN	8302,9402 12P CONNECTOR	VKN1243
	VA	7601-7606,7702,7703 VARISTORS	EZJZ1V270RM

RESISTORS

	R	7601-7604	RN1/16SE1000D
	R	7605-7608	RN1/16SE2200D
	R	7609-7612	RN1/16SE3301D
	R	7613,7614,7627,7628	RN1/16SE2701D
	R	7615,7616,7624,7626	RN1/16SE4701D
	R	7617,7618,7621,7622	RN1/16SE1501D
	R	7619,7620	RN1/16SE8200D
	R	7623,7625	RS1/10SR1500D
	R	7631,7632	RN1/16SE1201D
	R	7633,7634	RS1/10SR5102D
	VR	7751,7752 ROTARY VR	DCS1123
	VR	7901,7911 SLIDE VR	DCV1027
		Other Resistors	RS1/10SR###J

CAPACITORS

	C	7601,7603,7609-7616	CCSRCH102J50
	C	7602,7604,7623,7624	CKSRYB103K50
	C	7605-7608 (0.01 uF/50 V)	ACE7113
	C	7617-7620,7627,7628	CCSRCH471J50
	C	7621,7622	CCSRCH101J50
	C	7625,7626	CCSRCH331J50
	C	7635,7636	CEAT101M25
	C	7638,7640,7642	CCSRCH102J50
	C	7643,7644	CEANP101M16
	C	7645,7646	CCSRCH471J50
	C	7647,7648	CKSRYB102K50
	C	7649,7650	CKSRYB104K25
	C	7701,7702,7710,7711 (220 uF/6.3 V)	DCH1344
	C	7703-7706	CKSRYB223K50
	C	7707,7709	CKSRYB103K50
	C	7951,7952,8001,8002	CKSRYB103K25
	C	7954,8004 (10 uF/10 V)	DCH1201
	C	7955,8005	CKSRYB104K10

PADA ASSY
Consists of
LCDB ASSY
PAD1 ASSY
PAD2 ASSY
USBA ASSY
CRFD ASSY

E N O P AE

PADA ASSY

SEMICONDUCTORS

	IC	3601	BU90R104
	IC	3602-3604	74LCX541FT
⚠	IC	3605	R1290K103A
	IC	3606	AK4187VN
	IC	3901,3902,4101,4102	74VHC595FT
	Q	3601	2SAR502UB
	Q	3603-3614	LTC023JEB
	Q	3901-3908,3929-3934	LTC123JUB
	Q	3917,3919,3921,4117	LTC124EUB
	Q	3918,3920,3922,4118	2SB1689
	Q	3923-3928,3935-3940	LSCR523UB
	Q	3941-3946,4101-4108	LTC123JUB
	Q	4119,4121	LTC124EUB
	Q	4120,4122	2SB1689
	Q	4123-4128,4135-4140	LSCR523UB
	Q	4129-4134,4141-4146	LTC123JUB
	D	3602-3604	RB548W
	D	3605	RB162MM-40TF
	D	3606,3619-3622	NHSW146A-A21460
	D	3607	FC-F1608BAK5
	D	3608,3609,3611-3618	SML-D12M8W(NP)
	D	3610	SML-D12V8W
	D	3909-3912,3921-3924	NSSM124F-A21107
	D	3913-3920,3925-3932	1SS355VM
	D	3933,3935,3937,3939	NSSM124F-A21107
	D	3934,3936,3938	1SS355VM
	D	3940-3960,4113-4120	1SS355VM
	D	4109-4112,4121-4124	NSSM124F-A21107
	D	4125-4132,4134,4136	1SS355VM
	D	4133,4135,4137,4139	NSSM124F-A21107
	D	4138,4140-4160	1SS355VM

MISCELLANEOUS

	L	3601,3623 CHIP BEEDS FILTER	BTX1042
	L	3602 CHIP BEEDS FILTER	BTX1047
	L	3603,3604 CHIP SOLID INDUCTOR	XTL3010
	L	3605,3612-3621 CHIP BEADS	VTL1126
	L	3607 SMD SPL INDUCTOR	CTH1531
	L	3608,3622 CHIP INDUCTOR (10 uH)	DTL1105
	L	3609 INDUCTOR (10 uH)	CTF1635
	L	3624-3632 CHIP BEADS	VTL1126
	JA	4301,4302 USB JACK	DKB1118
	S	3601,3604-3610 TACT SWITCH	DSG1134
	S	3602,3603,3611,3616 PUSH SWITCH	CSG1155
	S	3612-3615 TACT SWITCH	DSG1134
	S	3617 ENCODER SW	DSX1080
	S	3901-3904,4101-4104 PUSH SWITCH	CSG1155
	CN	3601 FFC/FPC CONNECTOR	CKS6543
	CN	3602 CONNECTOR	CKS4428
	CN	3603 FFC/FPC CONNECTOR	CKS6646
	CN	3604 FFC/FPC CONNECTOR	CKS6625
	CN	3901,4101 FFC/FPC CONNECTOR	DKP3953
	CN	4301,4302 CONNECTOR	AKM1277
	CN	4401 CONNECTOR	AKM1289
	VA	4301-4306 SMD VARISTOR	EZJZ1V80010

RESISTORS

	R	3606-3609,3655,3671	RS1/16SS1000D
	R	3610,3680	RAB4CQ103J
	R	3614,3616,3617,3620	RAB4CQ220J
	R	3629-3632	RAB4CQ331J
	R	3635	RS1/16SS3603D
	R	3636	RS1/16SS5602D
	R	3637	RS1/16SS5601D
	R	3642	RS1/16SS1103D
	R	3643	RS1/16SS1202D
	R	3647	RS1/16SS1102D
	R	3650	RS1/16SS3303D
	R	3651	RS1/16SS2202D
	R	3654	RS1/16SS3902D
	R	3659	RS1/16SS15R0D
	R	3660,3664	RS1/16SS22R0D
	R	3662	RS1/16SS82R0D
	R	3663,3668,3669	RS1/16SS39R0D
	R	3665	RS1/16SS68R0D
	R	3666	RS1/16SS1500D
	R	3667	RS1/16SS27R0D
	R	3670	RS1/16SS1200D
	R	3672	RS1/16SS8200D
	R	3673	RS1/16SS1000D
	R	3674	RS1/16SS4700D
	R	3917-3928,3948-3959	RS1/10SR681J
	R	3929-3932,3960-3963	RS1/8SQ331J
	R	3933-3936,3964-3967	RS1/8SQ391J
	R	3938-3941,3969-3972	RS1/4SA271J
	R	3944-3947,3975-3978	RS1/4SA331J
	R	3979-3986,4179-4186	RS1/4SA561J
	R	3987-3994,4187-4194	RS1/8SQ122J
	R	3996-3999,4196-4199	RS1/4SA152J
	R	4002-4005,4202-4205	RS1/4SA122J
	R	4006,4010,4018,4025	RAB4CQ222J
	R	4007,4011,4019,4022	RS1/10SR822J

Mark	No.	Description	Part No.
	R	4008,4012,4020,4023	RS1/10SR123J
	R	4009,4013,4021,4024	RS1/10SR103J
	R	4014-4017,4026-4030	RS1/10SR0R0J
	R	4117-4128,4148-4159	RS1/10SR681J
	R	4129-4132,4144-4147	RS1/8SQ331J
	R	4133-4136,4164-4167	RS1/8SQ391J
	R	4138-4141,4169-4172	RS1/8SQ271J
	R	4160-4163,4175-4178	RS1/8SQ331J
	R	4206,4207,4214,4217	RAB4CQ222J
	R	4208,4211,4220,4223	RS1/10SR822J
	R	4209,4212,4221,4224	RS1/10SR123J
	R	4210,4213,4222,4225	RS1/10SR103J
	R	4215,4216,4218,4219	RS1/10SR0R0J
	R	4226-4230,4401	RS1/10SR0R0J
	VR	4401 VARIABLE RESISTOR	CCW1024
		Other Resistors	RS1/16SS###J

CAPACITORS

	C	3604,3615,3620,3623	CKSSYB104K10
	C	3614,3617,3760,3763 (10 uF/10 V)	DCH1201
	C	3616 (22 uF/16 V)	CCG1254
	C	3619,3621,3622,3625	CKSSYB103K16
	C	3624,3635,3637,3645	CKSSYB104K10
	C	3628,3738 (2.2 uF/10 V)	CCG1218
	C	3633,3639,3646,3697	CKSSYB103K16
	C	3654-3656,3721-3723	CKSSYB104K10
	C	3677	CKSRYB103K50
	C	3678,3694,3701-3704	CKSSYB102K50
	C	3679,3719,3720	CKSRYB105K10
	C	3680,3690,3724,3751 (1 uF/10 V)	DCH1246
	C	3682,3683	CKSQYB105K25
	C	3684	CKSQYB475K6R3
	C	3686,3689,3699	CKSSYB104K16
	C	3687,3688	CKSQYB474K25
	C	3692	CKSSYB224K6R3
	C	3693,3715	CKSYB475K16
	C	3695	CKSSYB561K50
	C	3696	CKSSYB332K50
	C	3698,3700,3728,3735 (10 uF/16 V)	DCH1263
	C	3716-3718,3731	CKSSYB104K16
	C	3727,3734,3736	CKSSYB102K50
	C	3729 (10 uF/6.3 V)	CCG1234
	C	3732,3743,3745,3761	CKSSYB104K10
	C	3739	CKSSYB103K25
	C	3741 (4.7 uF/10 V)	CCG1201
	C	3742	CKSQYB334K50
	C	3744	CKSRYB104K25
	C	3748-3750,3752-3754	CCSSCH102J50
	C	3756-3758,4305,4306	CCSSCH102J50
	C	3762,3930,4130,4402	CKSSYB104K10
	C	3901,3902,3920-3925	CKSSYB103K16
	C	3903-3910,4103-4110	CCSSCH101J50
	C	3913,4113 (10 uF/10 V)	DCH1201
	C	3927,4127	CEVW101M16
	C	3928,3929,4101,4102	CKSSYB103K16
	C	4120-4125,4128,4129	CKSSYB103K16
	C	4303,4304	CKSSYB103K16
	C	4401	CKSSYB471K50

UCOMA ASSY
Consists of
UCOM ASSY
EFSW ASSY

G I

UCOMA ASSY

SEMICONDUCTORS

	IC	4501	74LCX244FT
NSP	IC	4502	DYW2159*
		*Part number of the initial firmware equipped	
	IC	4503	PST8430N
NSP	IC	4505	DYW2160*
		*Part number of the initial firmware equipped	
⚠	IC	4508	NJM2872BF33
	IC	4509-4514	TC7SH08FUS2
	Q	4501	LTA024EEB
	Q	4503	LTC043EEB
	Q	4505,4507,4509	LSAR523UB
	Q	4506,4508,4510	LTC024EEB
	Q	4901-4908	LTC124EUB
	Q	4909-4914	2SC4081
	Q	4915	KTA1532U
	D	4501-4511,4901-4924	1SS355
	D	4925,4927,4929,4935	SLR343BD2T
	D	4931	LTL17KCGP4J
	D	4933	LTL17KRH5D-P

MISCELLANEOUS

	L	4501,4502 CHIP COIL (33 uH)	LCTAW330J2520
	S	4901,4902,4904,4908 TACT SWITCH	DSG1089
	S	4903,4905,4906,4910 TACT SWITCH	DSG1079
	S	4907 SLIDE SWITCH	DSH1058
	S	4909 TACT SWITCH	DSG1089
	S	4911,4912 ROTARY ENCODER	DSX1137
	S	4913 ROTARY ENCODER	DSX1136
	X	4501 CRYSTAL RESONATOR (16 MHz)	BSS1146
	CN	4503,4515 27P CONNECTOR	VKN1287
	CN	4504,4505 FFC/FPC CONNECTOR	CKS6645
	CN	4506,4901 35P CONNECTOR	VKN2025
	CN	4507 19P CONNECTOR	VKN1250
	CN	4508 FFC/FPC CONNECTOR	CKS6645
	CN	4509,4517,4519,4520 CONNECTOR	CKS3871
	CN	4510-4514 PLUG(3P)	KM200NA3
	CN	4516 FFC/FPC CONNECTOR	DKP3953
	CN	4518 24P CONNECTOR	VKN1255

RESISTORS

	R	4514-4517,4594,4595	RAB4CQ101J
	R	4556,4566,4568	RAB4CQ560J
	R	4567,4638	RAB4CQ103J
	R	4583-4586,4626,4636	RAB4CQ560J
	R	4646,4647,4654	RAB4CQ560J
	R	4690,4693,4712,4740	RS1/8SQ0R0J
	R	4697-4704,4750-4752	RS1/4SA2R0J
	R	4716-4723	RS1/4SA3R3J
	R	4741,4745	RS1/8SQ0R0J
	R	4907-4912	RS1/10SR222J
	R	4919-4924	RS1/10SR473J
	R	4925	RS1/10SR681J
	R	4926,4927	RS1/10SR223J
	R	4928-4930,4934-4936	RS1/10SR122J
	R	4931,4937,4940	RS1/10SR561J
	R	4932,4933	RS1/10SR821J
	R	4939	RS1/10SR102J
	VR	4901 POTENTIONETER	DCS1065
		Other Resistors	RS1/16SS###J

CAPACITORS

	C	4502,4510,4528,4529	CKSSYB104K10
	C	4503-4508,4540	CCSSCH100D50
	C	4509,4563,4672,4698	CEVW101M16
	C	4511-4527,4530-4533	CCSSCH471J50
	C	4534,4535,4539,4544	CCSSCH102J50
	C	4536,4537,4541,4542	CKSSYB103K16
	C	4538,4543,4547,4548	CKSSYB104K10
	C	4545	CCSSCH120J50
	C	4546,4549-4551,4553	CCSSCH471J50
	C	4552	CKSSYB473K10
	C	4558,4577-4579,4581	CCSSCH101J50
	C	4564,4576,4592,4593	CKSSYB104K10
	C	4565,4588,4591,4594	CCSSCH471J50
	C	4566-4570,4589,4598	CCSSCH102J50

Mark	No.	Description	Part No.
	C	4571-4575	CKSSYB103K16
	C	4583-4585,4587	CCSSCH101J50
	C	4595,4614,4617,4620	CKSSYB104K10
	C	4596,4597,4599,4601	CCSSCH471J50
	C	4600,4659	CCSSCH102J50
	C	4602,4606	CCSSCH471J50
	C	4603-4605,4607	CCSSCH101J50
	C	4615,4616,4618,4621	CKSSYB104K16
	C	4635,4640,4644,4645	CKSSYB104K10
	C	4637,4683,4687,4699	CKSSYB104K16
	C	4642,4651,4695,4696 (10 uF/10 V)	DCH1201
	C	4648	CKSSYB103K25
	C	4650 (2.2 uF/10 V)	CCG1218
	C	4655,4661,4663,4665	CKSSYB104K10
	C	4662,4664,4666,4690	CKSSYB102K50
	C	4667-4669,4678,4682	CKSSYB104K10
	C	4675-4677,4701-4703	CCSSCH101J50
	C	4686,4689,4691,4693	CKSSYB104K10
	C	4692,4694	CKSSYB102K50
	C	4697,4704,4705,4708	CKSSYB104K10
	C	4710,4715,4717,4718	CKSSYB104K10
	C	4720,4721,4737,4739	CKSSYB104K10
	C	4735,4736,4738,4740	CKSSYB104K16
	C	4741,4742,4747-4750	CKSSYB104K10
	C	4761,4762	CKSSYB104K10
	C	4901,4908,4909	CKSRYB104K16
	C	4903,4906	CKSRYB104K10
	C	4905,4907	CEVW470M16

H
MIXER ASSY

SEMICONDUCTORS

	IC	7001-7003	TC74HC4051AF
	IC	7004	TC74VHC164F
	IC	7005,7006	TC74VHC595F
	Q	7001-7007,7010	LSCR523UB
	Q	7008,7009,7025,7027	LTC124EUB
NSP	Q	7011	2SB1694
	Q	7012-7024	LSCR523UB
	Q	7026,7028,7030,7032	KTA1532U
	Q	7029,7031,7033-7036	LTC124EUB
	D	7001,7002,7009-7014	LTL17KSL5D-P
	D	7003-7008	SLR343WBC7T
	D	7015,7016,7026,7027	LTL17KRH5D-P
	D	7017-7020,7028-7031	LTL17KSL5D-P
	D	7021-7025,7032-7036	LTL17KGH5D-P
	D	7037,7038,7048,7049	LTL17KRH5D-P
	D	7039-7042,7050-7053	LTL17KSL5D-P
	D	7043-7047,7054-7058	LTL17KGH5D-P
	D	7059-7082	1SS355VM

MISCELLANEOUS

	S	7001,7003-7008 TACT SWITCH	DSG1079
	S	7002,7009 SLIDE SWITCH	DSH1058
	S	7010-7012 TACT SWITCH	DSG1079
	S	7013-7016 SLIDE SWITCH	DSH1058
	CN	7001,7003 35P CONNECTOR	VKN2025
	CN	7002 30P CONNECTOR	VKN1261

RESISTORS

	R	7023-7046	RS1/10SR5600D
	VR	7001,7002,7008,7014 ROTARY VR	DCS1104
	VR	7003-7007,7009-7013 ROTARY VR	DCS1078
	VR	7015-7018 ROTARY VR	DCS1078
	VR	7019,7020 ROTARY VR	DCS1104
	VR	7021-7024 ROTARY VR	DCS1126
		Other Resistors	RS1/10SR###J

Mark	No.	Description	Part No.

CAPACITORS

	C	7001-7006	CCSRCH681J50
	C	7007-7011,7076,7099	CKSRYB104K16
	C	7012-7023,7028-7039	CCSRCH471J50
	C	7024-7027,7040-7066	CKSRYB104K10
	C	7073,7080,7082,7086	CKSRYB104K10
	C	7074,7078,7084	CEJQ101M16
	C	7081,7083 (10 uF/10 V)	DCH1201
	C	7085,7088	CCSRCH471J50
	C	7087,7090	CKSRYB103K25
	C	7089,7092,7093,7100	CKSRYB104K10
	C	7101-7109	CCSRCH102J50

PNL1 ASSY
Consists of
DCK1 ASSY
TMP1 ASSY
PWSW ASSY
CHF3 ASSY
STL1 ASSY
STL2 ASSY
STL3 ASSY

L R S U
PNL1 ASSY

SEMICONDUCTORS

	IC	8101	TC74HC4051AF
	IC	8102	TC74VHC164F
	Q	8101-8105,8109,8114	LTC124EUB
	Q	8106,8110,8116,8120	2SAR502UB
	Q	8107,8108,8111-8113	LTC123JUB
	Q	8115,8117,8122,8126	HN1A01FUS1
	Q	8118,8351	LTC124EUB
	Q	8119,8123,8127,8128	LTC123JUB
	Q	8121,8124,8125	LSCR523UB
	D	8101-8111,8113,8115	1SS355VM
	D	8112,8116,8117,8119	LTL17KRH5D-P
	D	8118,8120,8122,8127	LTL17KSL5D-P
	D	8121,8123,8126,8351	LTL17KRH5D-P
	D	8124	LTL17KCBH5D
	D	8125	SLR343WBC7T
	D	8128,8130	LTL17KCGP4J
	D	8129,8131,8353	LTL17KGH5D-P
	D	8352,8354-8359	1SS355VM

MISCELLANEOUS

	KN	8101,8351 EARTH TERMINAL	AKF7002
	S	8101,8103,8104,8107 TACT SWITCH	DSG1089
	S	8102,8105,8106,8109 TACT SWITCH	DSG1079
	S	8108,8110,8112,8113 TACT SWITCH	DSG1089
	S	8111 TACT SWITCH	DSG1079
	S	8115,8117,8351-8353 TACT SWITCH	DSG1089
	S	8116,8118,8119 SLIDE SWITCH	DSH1066
	S	8401 PUSH SW	ASG1102
	CN	7921 L-PLUG(3P)	KM200NA3L
	CN	8101 30P CONNECTOR	VKN1261
	CN	8102 24P CONNECTOR	VKN1255
	CN	8103 12P CONNECTOR	VKN1243
	CN	8104,8351 16P CONNECTOR	VKN1247
	CN	8105,8401 4P JUMPER CONNECTOR	52147-0410

RESISTORS

	VR	7921 SLIDE VR	DCV1027
	VR	8101 ROTARY VR	DCS1104
	VR	8102-8107 ROTARY VR	DCS1116
	VR	8351 SLIDE VR	DCV1032
	VR	8352 VARIABLE RESISTOR	DCP1107
		Other Resistors	RS1/10SR###J

CAPACITORS

	C	8101,8107,8115-8120	CKSRYB104K10

Mark	No.	Description	Part No.
	C	8102-8105,8108-8111	CCSRCH471J50
	C	8112-8114,8352	CCSRCH102J50
	C	8121,8122,8124,8128	CKSRYB103K25
	C	8123,8126,8127,8131	CKSRYB104K10
	C	8125,8129,8132	CEJQ101M16
	C	8130	CKSRYB105K10
	C	8134,8135	CCSRCH471J50
	C	8136-8141,8353,8354	CKSRYB104K10
	C	8355	CEJQ470M16
	C	8356	CKSRYB104K10
	C	8401	CKSRYB103K25

PNL2 ASSY
Consists of
DCK2 ASSY
TMP2 ASSY
CHF4 ASSY
JOG1 ASSY
JOG2 ASSY
STL4 ASSY

M T V AC AD

PNL2 ASSY

SEMICONDUCTORS

	IC	9001	TC74HC4051AF
	IC	9002	NJM2903M
	IC	9003,9004	TC74VHC595F
	IC	9005	TC74VHC164F
	Q	9001-9003,9005,9006	LTC124EUB
	Q	9004	LTA143EUB
	Q	9007,9011,9013,9018	2SA1577
	Q	9008,9009,9014	LTC123JUB
	Q	9010,9012,9015,9019	LTC124EUB
	Q	9016,9017	HN1A01FUS1
	Q	9020	2SAR502UB
	Q	9021-9034	LSCR523UB
	Q	9035,9037,9451	LTC124EUB
	Q	9036,9038	2SB1689
	D	9001-9016,9452	1SS355VM
	D	9017,9018,9023,9024	LTL17KRH5D-P
	D	9019-9022,9025,9029	LTL17KSL5D-P
	D	9026,9030,9031	LTL17KRH5D-P
	D	9027	LTL17KCBH5D
	D	9028	SLR343WBC7T
	D	9032-9035,9044-9047	LTL17KSL5D-P
	D	9036-9040,9048-9052	LTL17KGH5D-P
	D	9041-9043,9451	LTL17KRH5D-P
	D	9453	LTL17KGH5D-P
	D	9454-9459	1SS355VM

MISCELLANEOUS

	KN	9001,9451 EARTH TERMINAL	AKF7002
	S	9001,9003,9004,9007 TACT SWITCH	DSG1089
	S	9002,9005,9006,9009 TACT SWITCH	DSG1079
	S	9008,9010,9012-9017 TACT SWITCH	DSG1089
	S	9011,9018 TACT SWITCH	DSG1079
	S	9451-9453 TACT SWITCH	DSG1089
	CN	7931 L-PLUG(3P)	KM200NA3L
	CN	9001,9002 30P CONNECTOR	VKN1261
	CN	9003 12P CONNECTOR	VKN1243
	CN	9004,9451 16P CONNECTOR	VKN1247
	CN	9601,9701 4P CONNECTOR	VKN1264
	PC	9601,9701 PHOTO INTERRUPTER	KE-2N18-15

RESISTORS

	R	9103-9113	RS1/4SA0R0J
	R	9171-9177	RS1/8SQ101J
	VR	7931 SLIDE VR	DCV1027
	VR	9001 ROTARY VR	DCS1104
	VR	9002,9006 ROTARY VR	DCS1117
	VR	9003-9005 ROTARY VR	DCS1116
	VR	9451 SLIDE VR	DCV1032
	VR	9452 VARIABLE RESISTOR	DCP1107
	Other Resistors		RS1/10SR###J

CAPACITORS

	C	9001,9004,9005,9007	CKSRYB104K10
	C	9002,9003,9008,9010	CCSRCH471J50
	C	9009,9015-9021,9023	CKSRYB104K10
	C	9011,9039,9043	CCSRCH471J50
	C	9012-9014,9452	CCSRCH102J50
	C	9022,9024,9032,9036	CKSRYB103K25
	C	9029,9035,9038	CEJQ101M16
	C	9030,9033,9037,9040	CKSRYB104K10
	C	9031,9601,9701	CKSRYB105K10
	C	9041,9042,9602,9603	CKSRYB103K25
	C	9045-9047,9055,9453	CKSRYB104K10
	C	9454	CEJQ470M16
	C	9455,9456	CKSRYB104K10
	C	9702,9703	CKSRYB103K25

JOGA ASSY
Consists of
JLCD1 ASSY
JLCD2 ASSY
XPAD ASSY

Q AA AB

JOGA ASSY

SEMICONDUCTORS

⚠	IC	3001,3201	BD00IC0WEFJ
NSP	IC	3002,3202	R5S72690W266FP
NSP	IC	3003,3203	DYW2158*
	*Part number of the initial firmware equipped		
	IC	3007,3206	W9864G6KH-5
	IC	3401	ATSAMD20E15A-MU
	Q	3001,3014,3201,3202	LTC024EEB
	Q	3002,3203	ISA1602AM1
	Q	3005,3006,3206,3207	IMX25
	Q	3007,3208	HN1A01FUS1
	Q	3008,3011,3209,3212	LSCR523UB
	Q	3401-3403	2SC4081
	D	3001-3004,3201-3204	NHSW157B-A13072
	D	3401-3403,3406-3408	SWBA05

MISCELLANEOUS

	L	3001-3004,3011-3024 INDUCTOR	CTF1639
	L	3005-3007,3205-3207 INDUCTOR	CTF1545
	L	3008-3010,3208-3210 CHIP BEADS	VTL1126
	L	3025,3225 CHIP BEADS	VTL1129
	L	3026,3226 CHIP INDUCTOR (10 uH)	DTL1105
	L	3201-3204,3211-3224 INDUCTOR	CTF1639
	L	3401 CHIP SOLID INDUCTOR	XTL3010
	X	3001,3201 CRYSTAL RESONATOR (13.333 3 MHz)	CSS1840
	CN	3001,3201 10P CONNECTOR	VKN1414
	CN	3003,3203 CONNECTOR	CKS1072
	CN	3004,3204 FFC/FPC CONNECTOR	CKS6625
	CN	3005,3205 27P CONNECTOR	VKN1431
	CN	3006,3206 FFC/FPC CONNECTOR	CKS6646
NSP	CN	3401 CONNECTOR	CKS3860

RESISTORS

	R	3001,3020,3081,3138	RS1/10SR0R0J
	R	3002,3202	RS1/10SR9101D
	R	3003,3203	RS1/10SR1602D
	R	3013,3016,3017,3019	RAB4CQ121J
	R	3018,3041,3043,3050	RAB4CQ102J
	R	3033,3040,3048,3049	RAB4CQ560J
	R	3063,3269	RAB4CQ472J
	R	3075,3272	RS1/16SS2402F
	R	3086,3279	RAB4CQ103J
	R	3113,3304	RS1/10SR104J

Mark	No.	Description	Part No.
	R	3114,3305	RS1/10SR332J
	R	3115,3303	RAB4CQ222J
	R	3118,3309	RAB4CQ473J
	R	3126,3313	RS1/10SR5600D
	R	3127,3314	RS1/10SR4300D
	R	3128,3315	RS1/16SS1201D
	R	3129,3316	RS1/16SS6800D
	R	3130,3317	RS1/16SS2401D
	R	3131,3318	RS1/16SS1801D
	R	3132,3319	RS1/16SS91R0F
	R	3133,3320	RS1/16SS5101D
	R	3135,3322	RS1/16SS9101D
	R	3136,3323	RS1/16SS8201D
	R	3137,3324	RS1/16SS56R0D
	R	3139,3147,3326,3334	RS1/10SR122J
	R	3140,3148,3327,3335	RS1/10SR473J
	R	3143,3146,3151,3154	RS1/10SR0R0J
	R	3144,3152,3331,3339	RS1/10SR181J
	R	3201,3220,3278,3325	RS1/10SR0R0J
	R	3213,3216,3217,3219	RAB4CQ121J
	R	3218,3242,3244,3251	RAB4CQ102J
	R	3234,3241,3249,3250	RAB4CQ560J
	R	3330,3333,3338,3341	RS1/10SR0R0J
	R	3428-3436,3443-3451	RS1/10SR122J
	Other Resistors		RS1/16SS###J

CAPACITORS

	C	3002,3202	CKSRYB105K10
	C	3003,3004,3009,3019 (10 uF/10 V)	DCH1201
	C	3005,3020-3028,3031	CKSSYB104K10
	C	3006,3017,3018,3029	CCSSCH471J50
	C	3008,3208	CKSSYB104K16
	C	3015,3215	CCSSCH470J50
	C	3030,3032,3053-3055	CCSSCH101J50
	C	3035,3036,3038-3041	CKSSYB104K10
	C	3051,3052,3056-3059	CKSSYB104K10
	C	3065-3068,3071-3074	CKSSYB104K10
	C	3076,3078-3090,3092	CKSSYB104K10
	C	3091,3097,3107-3113	CKSSYB103K16
	C	3094,3230,3232	CCSSCH101J50
	C	3095,3098,3102,3116	CKSSYB104K10
	C	3096,3118,3124,3129	CCSSCH102J50
	C	3099,3115,3122,3203 (10 uF/10 V)	DCH1201
	C	3100,3101,3299,3300	CCSSCH120J50
	C	3103,3302,3401,3402 (10 uF/6.3 V)	CCG1234
	C	3114,3312 (47 uF/16 V)	CCH1961
	C	3117,3290,3296	CKSSYB103K16
	C	3119,3120,3317,3318	CKSRYB104K25
	C	3123,3205,3220-3228	CKSSYB104K10
	C	3132,3295,3316,3322	CCSSCH102J50
	C	3204,3209,3219,3298 (10 uF/10 V)	DCH1201
	C	3206,3217,3218,3229	CCSSCH471J50
	C	3231,3235,3236	CKSSYB104K10
	C	3238-3241,3251,3252	CKSSYB104K10
	C	3253-3255,3293	CCSSCH101J50
	C	3256-3259,3265-3268	CKSSYB104K10
	C	3270-3273,3275	CKSSYB104K10
	C	3277-3289,3291,3294	CKSSYB104K10
	C	3297,3301,3314,3321	CKSSYB104K10
	C	3305-3311,3315	CKSSYB103K16
	C	3313,3320 (10 uF/10 V)	DCH1201
	C	3324,3325	CCSSCH102J50
	C	3403	CKSRYB104K10
	C	3404 (10 uF/6.3 V)	CCG1234
	C	3405,3407	CKSSYB104K10
	C	3406 (1 uF/10 V)	DCH1266
	C	3408-3410,3413-3415	CKSSYB102K50
	C	3416 (10 uF/16 V)	DCH1263

Mark	No.	Description	Part No.

AF

SW POWER SUPPLY

There is no service parts.