
Exploded View (Cabinet)

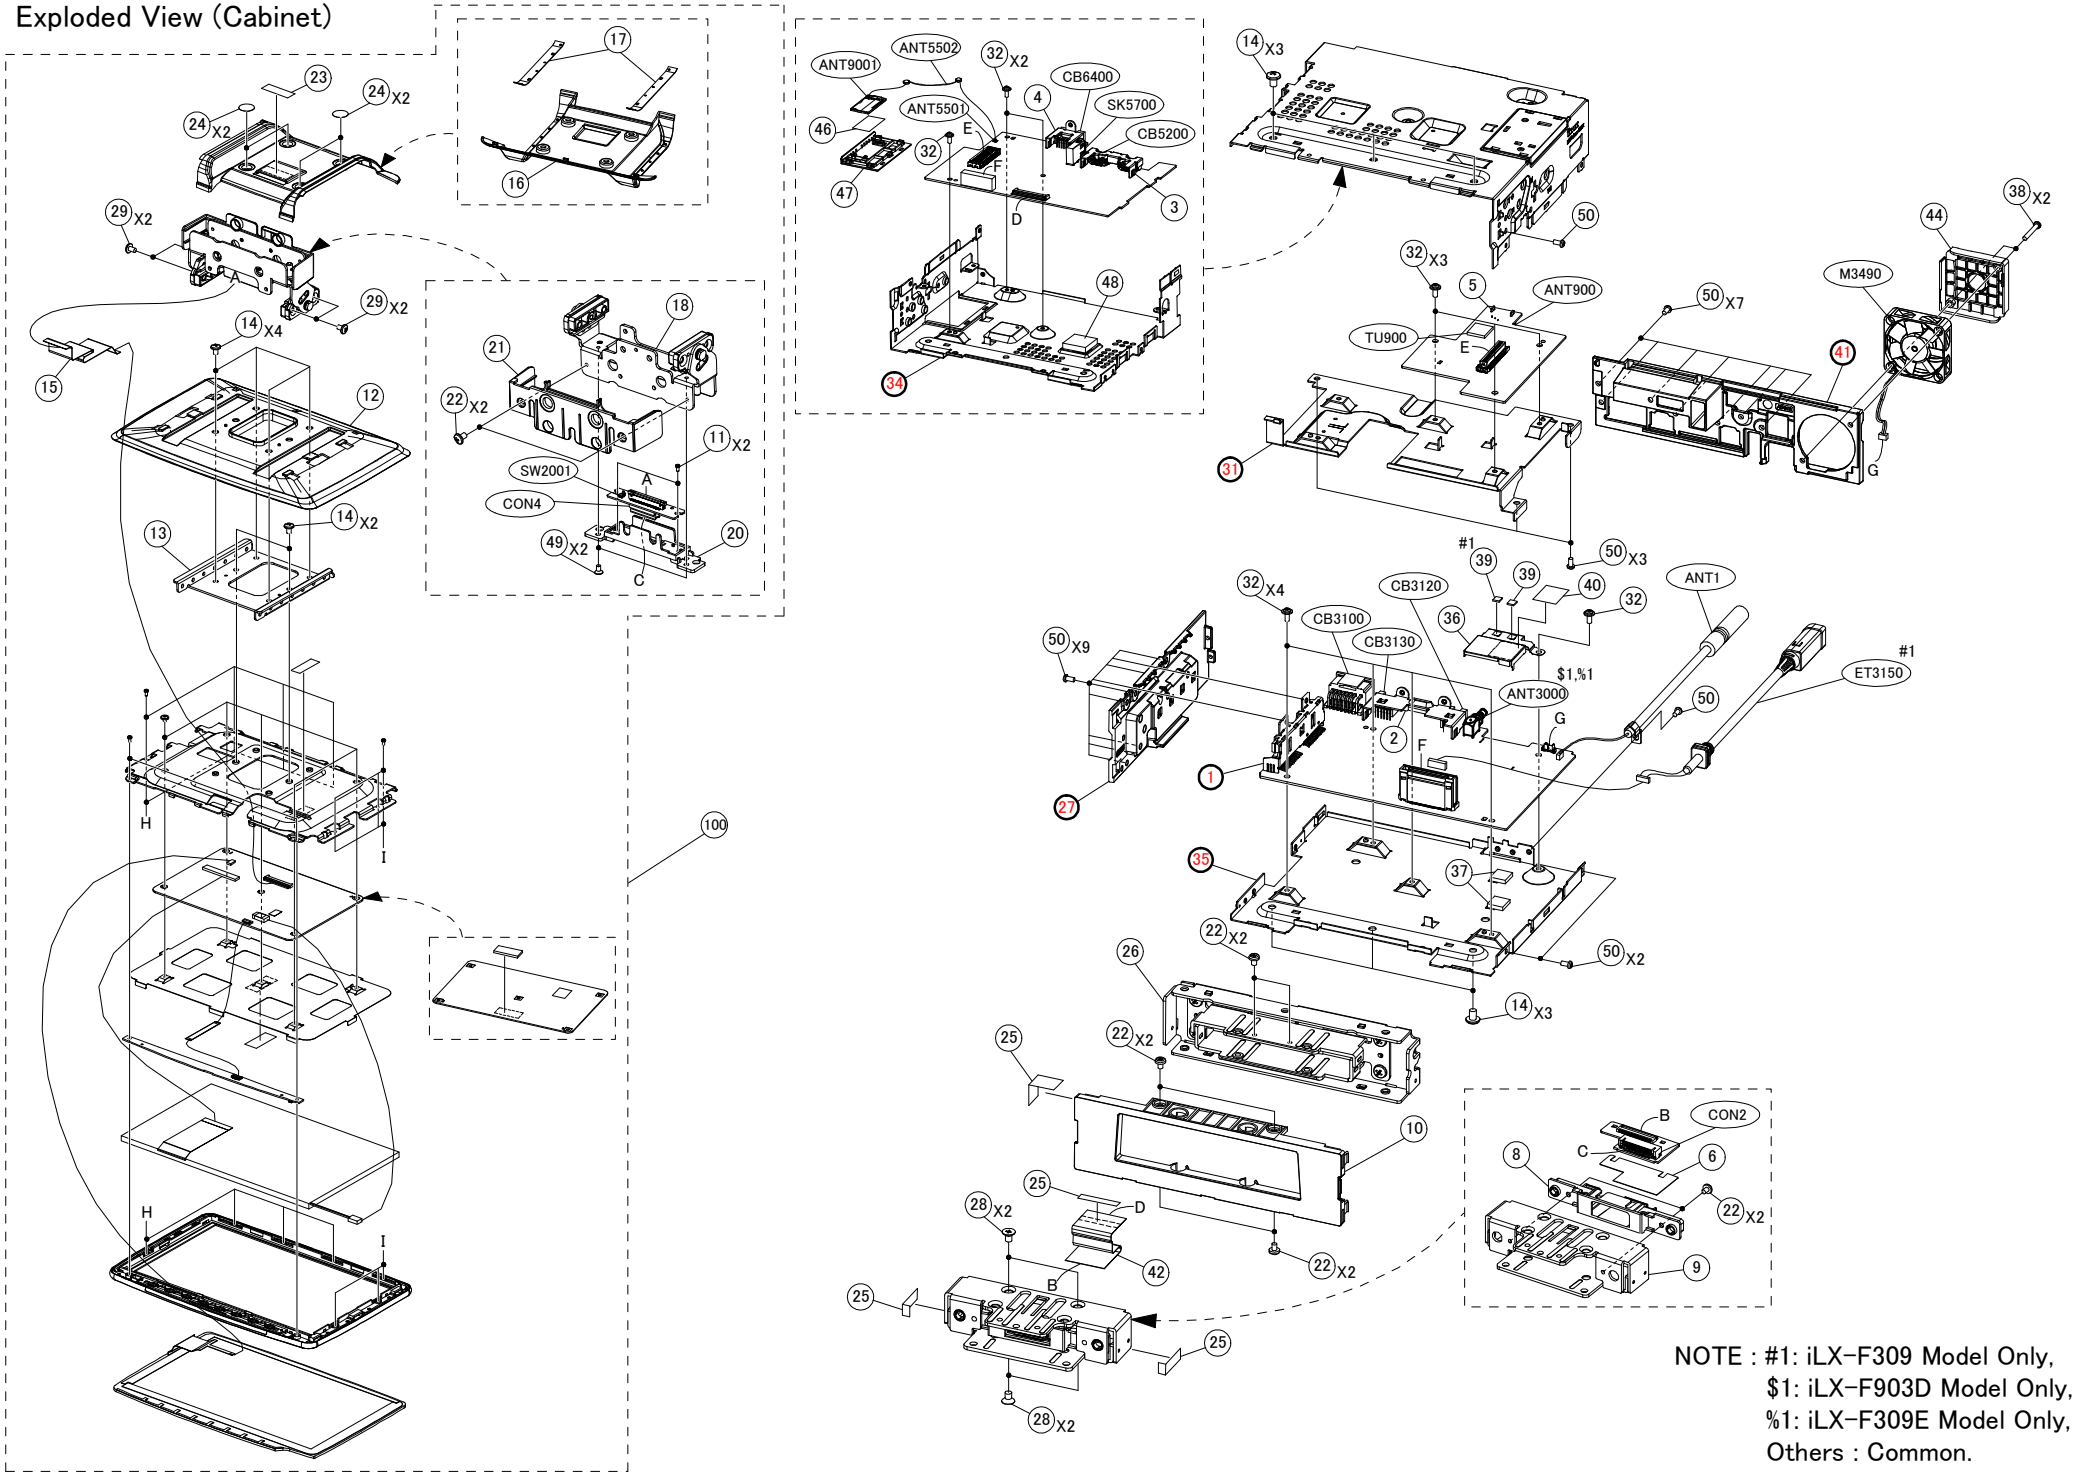

NOTE : #1: iLX-F309 Model Only,
$1: iLX-F903D Model Only,
%1: iLX-F309E Model Only,
Others : Common.

MODEL	Symbol No.	Parts No.	Description
	1	- - - - - - - - -	BKT, POWER IC
	2	M2002612010	BKT, PREOUT
	3	M2002611010	BKT, HDMI
	4	M2002610010	BKT, CAN
	5	M2002415010	BKT,CONNECTOR
	6	M1214548010	SHEET, PCB
	8	M0251895010	COVER, DETACH -B
	9	M2002619010	BKT, SHUTTLE BASE
#1	10	JAMNT011520	ASS'Y NOSE ESC(US)
$1	10	JAMNT011530	ASS'Y NOSE ESC(EU/AP)
%1	10	JAMNT011530	ASS'Y NOSE ESC(EU/AP)
	11	M984409101A	SCR,M2X6(B)TPG-TPT(CR3BK)
	12	M1481179010	PANEL, REAR
	13	M2002613010	BKT, MONITOR
	14	M9814178010	SCR,M4X6(B)MCH(WHT)
	15	E2704000870	FLAT CABLE;50P;0.5;140mm
	16	M8061144010	CASE, REAR
	17	M1214544010	SHEET, REAR FELT
	18	JAMNT010500	ASS'Y HINGE MONITOR
	20	M0251894010	COVER, DETACH -A
	21	M0251897010	COVER, MIDDLE-B
	22	M9814180010	SCR,M3X4(B)MCH(BLK)

Mark Model Code
#1 iLX-F309 Only,
$1 iLX-F903D Only,
%1 iLX-F309E Only,
Others:Common.
Note: This Service Manual contains only construction parts of the unit.
Not all construction parts are repair parts and can be used for repairs.
For repair parts ask our local service partner.


MODEL	Symbol No.	Parts No.	Description
	23	M3224150010	TAPE;FPC(BLK)
	24	M1214542010	SHEET, CAP
	25	M3222015010	TAPE, BACK LIGHT
	26	JAMNT010540	ASS'Y SHUTTLE MOUNT
	27	- - - - - - - - -	HEAT, SINK(SIDE)
	28	M9814182010	SCR,M4X6(F)MCH(BLK)-NYLOK
	29	M9814184010	SCR;M4X13(F)MCH(BLK)-NYLOK
	31	- - - - - - - - -	CHAS, MID
	32	M9824075010	SCR,M2.6X6.0(B)MCH-TPT(WHT);C
	34	- - - - - - - - -	CHAS, MAIN
	35	- - - - - - - - -	CHAS, TOP
	36	M2002620010	BKT, SHIELD
	37	75-31381Z03	GAP PAD;5580H-5.5-12-12
	38	M982401301A	SCR,M2.6X18(P)MCH-TPT(Zn,3-BLK)
	39	E3401003970	GASKET(5~7.5~2T)
	40	14-15738Z01	HMSZW8002A_20~20
	41	- - - - - - - - -	HEAT, SINK(REAR)
	42	E2704000880	FLAT CABLE;50P;0.5;120mm
	44	M0251892010	COVER, FAN
	46	M3224149010	TAPE, BT ANT PCB
	47	M0251893010	COVER, PLATE TOP
	48	75-31381Z02	5580H-1.5-20-20

Mark Model Code
#1 iLX-F309 Only,
$1 iLX-F903D Only,
%1 iLX-F309E Only,
Others:Common.
Note: This Service Manual contains only construction parts of the unit.
Not all construction parts are repair parts and can be used for repairs.
For repair parts ask our local service partner.

MODEL	Symbol No.	Parts No.	Description
	49	M9814179010	SCR,M3X6(F)MCH(BLK)
	50	M982400101A	SCR,M2.6X6(P)MCH-TPT(Zn,3-WHT)
	100	PCMMNT02640	ASS'Y DISPLAY UNIT(A/S)
	ANT1	E2703004340	ASSY CABLE;09-17241Z06-A
$1	ANT3000	09-22644Z02	SMB1252B1-019-5GT-DT
%1	ANT3000	09-22644Z02	SMB1252B1-019-5GT-DT
	ANT5501	09-07494Z01	U.FL-R-SMT-1(80)-E2
	ANT5502	09-24492Z04	ASSY,U.FL-2LP-066N1
	ANT900	09T45601Y01	GT5-1P-DS(70)
	ANT9001	09-07494Z01	U.FL-R-SMT-1(80)-E2
	CB3100	09T35473Y16	WTB,F169B001-16 -DB
	CB3120	09-25106Z01	WTB,S10B-PUDSS-1 -DB
	CB3130	09-25106Z02	WTB,S12B-PUDSS-1 -DB
	CB5200	09-25213Z01	WTB,TCX3400-011187-T
	CB6400	09-25106Z05	WTB,S18B-PUDSS-1 -DB
	CON2	E2601012760	CONNECTOR;IMSA-9828B-50Y800
	CON4	E2601012770	CONNECTOR;IMSA-9828S-50Y800
#1	ET3150	E2703004380	ASSY CABLE;09-19615Z02-A
	M3490	59-14185Z03	MOTOR,ASB0412MA-9D11
	SK5700	09-34073Z01	SKT,48204-0001 -DB
	SW2001	E1705000210	SW DETECT;SPVR110102
	TU900	E190100104A	TUNER; GV8720 (DR/GPS Module)

Mark Model Code
#1 iLX-F309 Only,
$1 iLX-F903D Only,
%1 iLX-F309E Only,
Others:Common.
Note: This Service Manual contains only construction parts of the unit.
Not all construction parts are repair parts and can be used for repairs.
For repair parts ask our local service partner.

Packing Method View

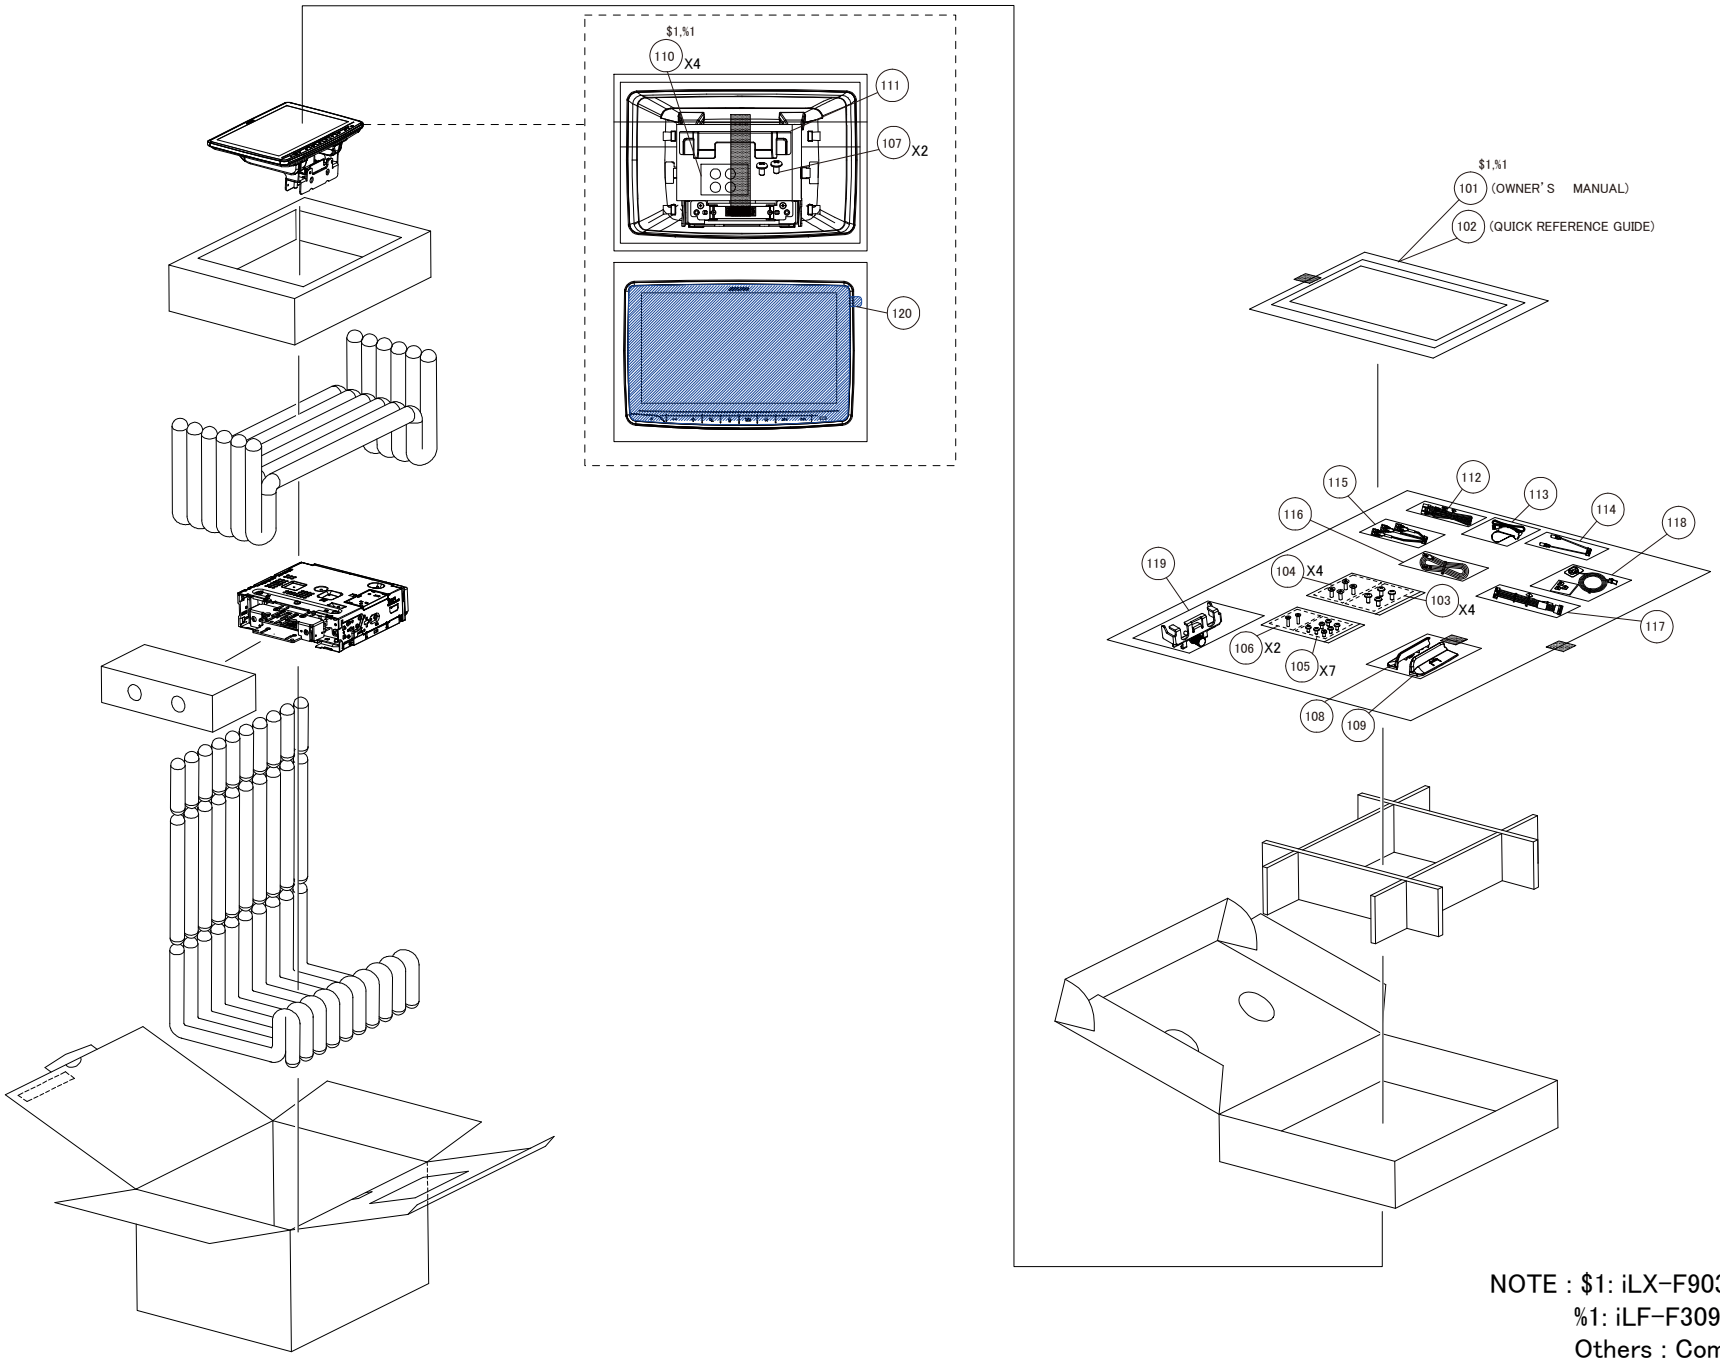

NOTE : $1: iLX-F903D Model Only,
%1: iLF-F309E Model Only,
Others : Common.

MODEL	Symbol No.	Parts No.	Description
$1	101	E3401004060	OWNER'S@MANUAL
%1	101	M3514658010	OWNER'S@MANUAL
#1	102	M3514657010	MANUAL,QUICK-GUIDE(US)
$1	102	M3514661010	MANUAL,QUICK-GUIDE(EU)
%1	102	M3514662010	MANUAL,QUICK-GUIDE(AP)
	103	M981400501A	SCR,M5X8(B)MCH(Zn,3-WHT)
	104	M981401501A	SCR,M5X8(F)MCH(WHT);3008007B19-A
	105	M9814185010	SCR;M4X6(B)MCH(WHT)-NYLOK
	106	M9814184010	SCR;M4X13(F)MCH(BLK)-NYLOK
	107	M9814180010	SCR,M3X4(B)MCH(BLK)
	108	M8061145010	CASE, SIDE-L
	109	M8061146010	CASE, SIDE-R
$1	110	M1214542010	SHEET, CAP
%1	110	M1214542010	SHEET, CAP
	111	M0251896010	COVER, MIDDLE-A
#1	112	E2703004300	ASSY CABLE;09-17244Z09-A
$1	112	E2703004320	ASSY CABLE;09-17245Z06-A
%1	112	E2703004300	ASSY CABLE;09-17244Z09-A
	113	50-14386Z03	ASSY CABLE
	114	E2703004390	ASSY CABLE;ANIF-2432-01A
	115	E2703004350	ASSY CABLE;09-31130Z01-A
	116	E2703004360	ASSY CABLE;09-22649Z04


Mark Model Code
#1 iLX-F309 Only,
$1 iLX-F903D Only,
%1 iLX-F309E Only,
Others:Common.
Note: This Service Manual contains only construction parts of the unit.
Not all construction parts are repair parts and can be used for repairs.
For repair parts ask our local service partner.

MODEL	Symbol No.	Parts No.	Description
#1	117	E2703004400	ASSY CABLE;ANIF-2433-01A
$1	117	E2703004410	ASSY CABLE;ANIF-2434-01A
%1	117	E2703004410	ASSY CABLE;ANIF-2434-01A
	118	85-34947Z01	APN FBD GPS ANT
	119	JAMNT011510	CM;Monitor;ASS'Y BKT HDMI
	120	M1214549010	SHEET;PROTECTION(TOUCH)

Mark Model Code
#1 iLX-F309 Only,
$1 iLX-F903D Only,
%1 iLX-F309E Only,
Others:Common.
Note: This Service Manual contains only construction parts of the unit.
Not all construction parts are repair parts and can be used for repairs.
For repair parts ask our local service partner.

System Connection (iLX-F309)

Connections

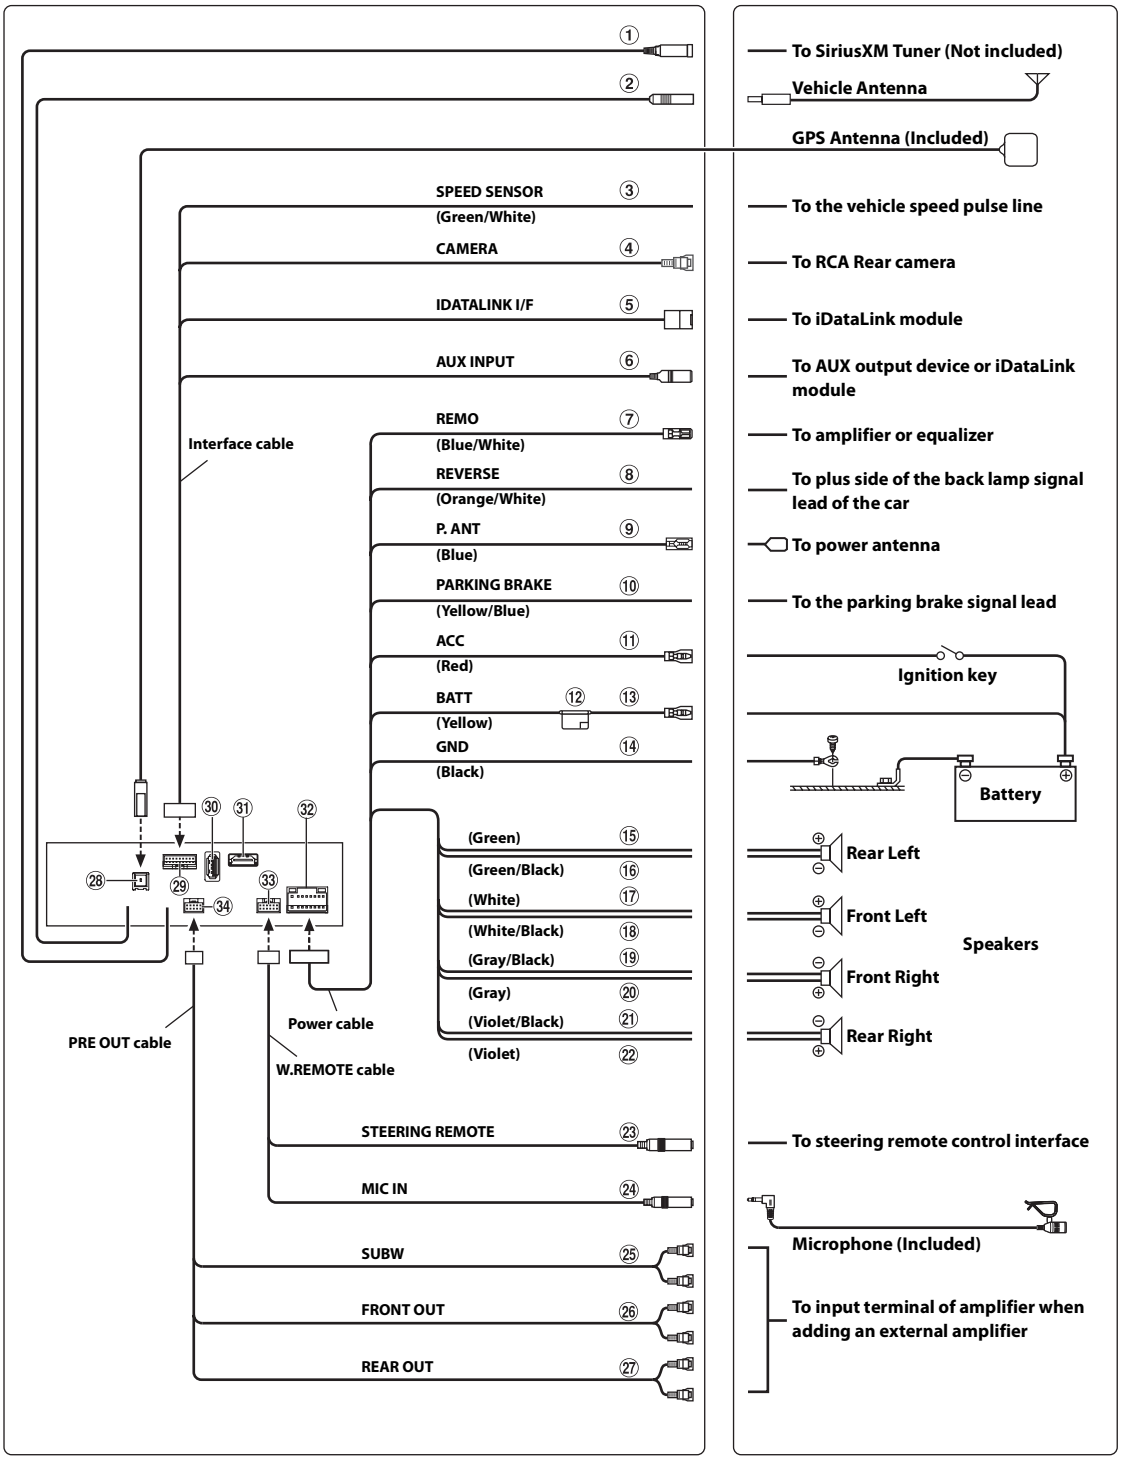

① **SiriusXM Tuner Input Connector**
To SiriusXM Tuner (Not included).
- *For more information on how to install the SiriusXM Connect Vehicle tuner, consult the installation guide included with the tuner.*

② **Radio Antenna Receptacle**

③ **Speed Sensor Lead (Green/White)**
Improper connection of the speed pulse line may cause important safety features of the vehicle to fail (such as the brakes or air bags). Such failures may result in an accident and loss of life. We strongly recommend that the installation be performed by a trained, authorized Alpine dealer.

④ **CAMERA Input RCA Connector**
Use when connecting a camera with RCA Output Connector.

⑤ **iDataLink Interface Connector**
To iDataLink module.

⑥ **AUX Input Connector**
Input lead for AUX video/audio signal or iDataLink audio signal.
- *A separately sold AV/RCA interface cable (4-pole mini AV plug to 3-RCA) is required. For details on using an AV/RCA interface cable (4-pole mini AV plug to 3-RCA), see "Usable AV/RCA Interface Cable (4-pole mini AV plug to 3-RCA)".*

⑦ **Remote Turn-On Lead (Blue/White)**
Connect this lead to the remote turn-on lead of your amplifier or signal processor.

⑧ **Reverse Lead (Orange/White)**

⑨ **Power Antenna Lead (Blue)**
Connect this lead to the +B terminal of your power antenna, if applicable.
- *This lead should be used only for controlling the vehicle's power antenna. Do not use this lead to turn on an amplifier or a signal processor, etc.*

⑩ **Parking Brake Lead (Yellow/Blue)**
Connect this lead to the power supply side of parking brake switch to transmit the parking brake status signals to the unit.

⑪ **Switched Power Lead (Ignition) (Red)**
Connect this lead to an open terminal on the vehicle's fuse box or another unused power source that provides (+) 12V only when the ignition is turned on or in the accessory position.

⑫ **Fuse Holder (15A)**

⑬ **Battery Lead (Yellow)**
Connect this lead to the positive (+) post of the vehicle's battery.

⑭ **Ground Lead (Black)**
Connect this lead to a good chassis ground on the vehicle. Make sure the connection is made to bare metal and is securely fastened using the sheet metal screw provided.

⑮ **Left Rear (+) Speaker Output Lead (Green)**

⑯ **Left Rear (–) Speaker Output Lead (Green/Black)**

⑰ **Left Front (+) Speaker Output Lead (White)**

⑱ **Left Front (–) Speaker Output Lead (White/Black)**

⑲ **Right Front (–) Speaker Output Lead (Gray/Black)**

⑳ **Right Front (+) Speaker Output Lead (Gray)**

㉑ **Right Rear (–) Speaker Output Lead (Violet/Black)**

㉒ **Right Rear (+) Speaker Output Lead (Violet)**

㉓ **Steering Remote Control Interface Connector**
To steering remote control interface.
For details about connections, consult your nearest Alpine dealer.

㉔ **MIC Input Connector**
To microphone (Included)

㉕ **Subwoofer RCA Connectors**
RED is right and WHITE is left.

㉖ **Front Output RCA Connectors**
Can be used as Front Output RCA Connectors. RED is right and WHITE is left.

㉗ **Rear Output RCA Connectors**
Can be used as Rear Output RCA Connectors. RED is right and WHITE is left.

㉘ **GPS Antenna Receptacle**
Connect to GPS antenna (Included).

㉙ **CAN-I/F Connector**

㉚ **USB Connector**
To USB flash drive, iPod/iPhone or Android smartphone.

㉛ **HDMI Input Connector**


㉜ **Power Supply Connector**

㉝ **W.REMOTE Connector**

㉞ **PRE OUT Connector**

Usable AV/RCA Interface Cable (4-pole mini AV plug to 3-RCA)


Wiring convention of this system is as follows;

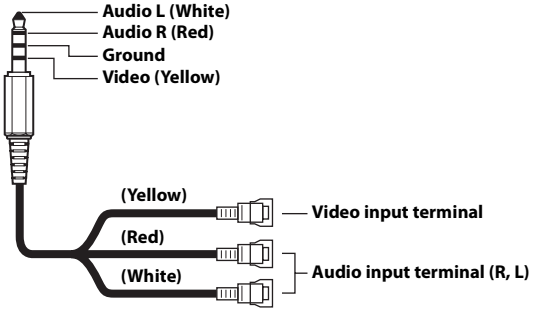

- *Configuration commercially available 4-pole mini AV plugs is not standardized.*

If an ACC power supply is not available

Connection Diagram of SPST Switch (sold separately)

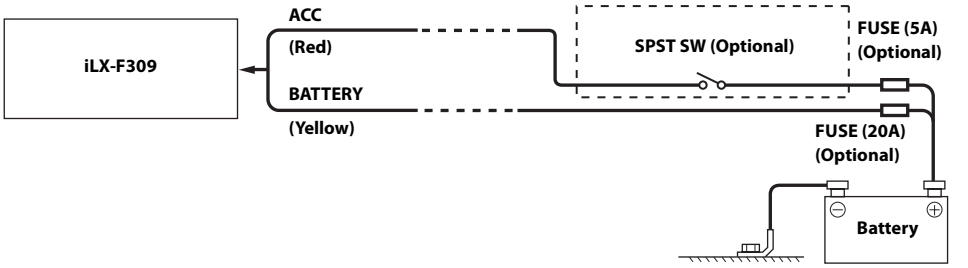

- *If your vehicle has no ACC power supply, add an SPST (single-pole, single-throw) switch (sold separately) and fuse (sold separately).*
- *The diagram and the fuse amperage shown above are in the case when the unit is used individually.*
- *If the switched power (ignition) lead of the unit is connected directly to the positive (+) post of the vehicle's battery, the unit draws some current (several hundred milliamperes) even when its switch is placed in the OFF position, and the battery may be discharged.*


To prevent external noise from entering the audio system.

- Locate the unit and route the leads at least 10 cm away from the car harness.
- Keep the battery power leads as far away from other leads as possible.
- Connect the ground lead securely to a bare metal spot (remove any paint, dirt or grease if necessary) of the car chassis.
- If you add an optional noise suppressor, connect it as far away from the unit as possible. Your Alpine dealer carries various noise suppressors, contact them for further information.
- Your Alpine dealer knows best about noise prevention measures so consult your dealer for further information.


System Example

Connection of an iPod/iPhone

■ When connecting to an iPod/iPhone with a Lightning connector

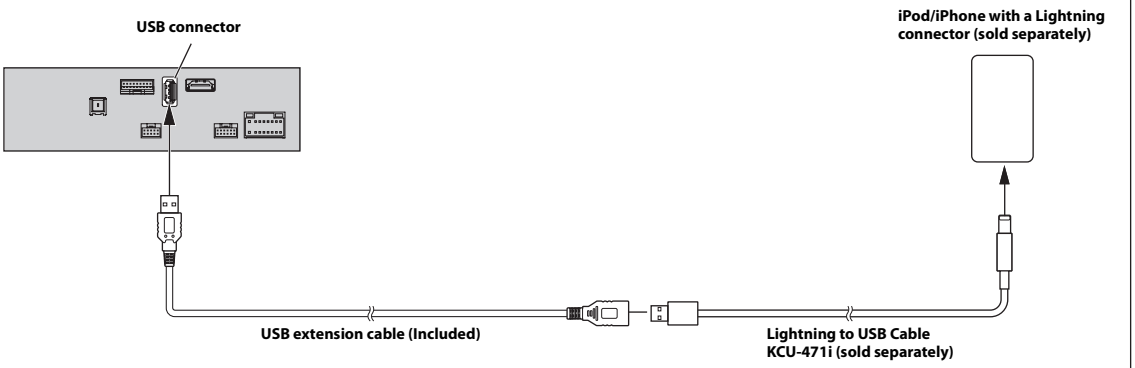


■ When connecting to iPhone 4S

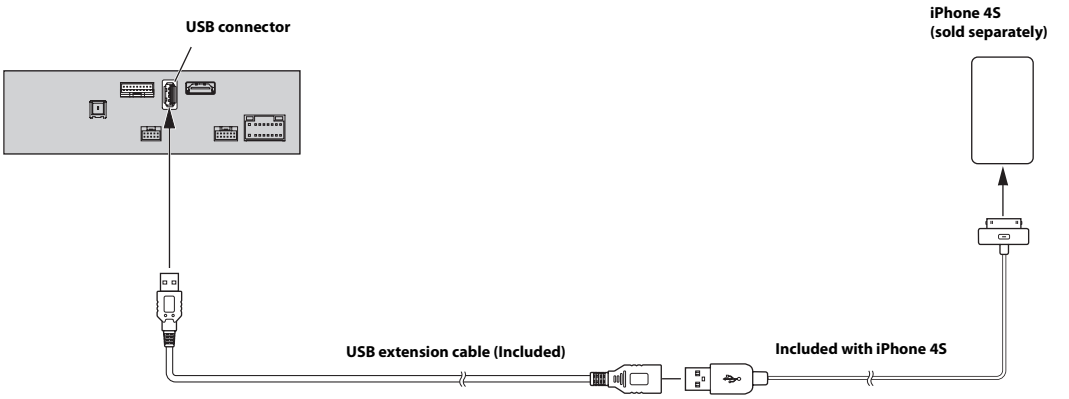


- *Do not leave an iPod/iPhone in a vehicle for a long time. Heat and humidity may damage the iPod/iPhone, and you may not be able to play it again.*

Connection of a Flash Drive

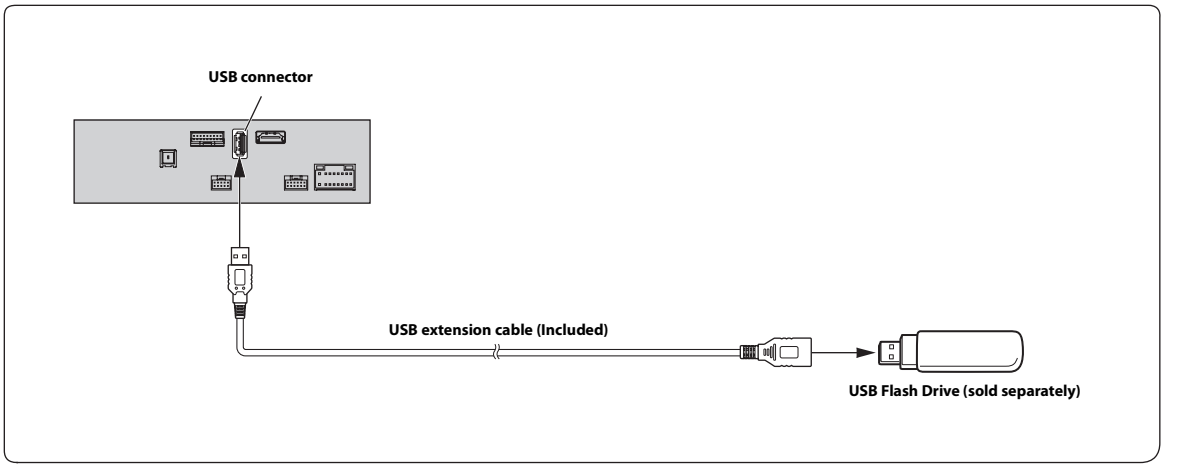

- *Do not leave a flash drive in a vehicle for a long time. Heat and humidity may damage the flash drive.*


Connection of an HDMI Device (iPhone with a Lightning connector)

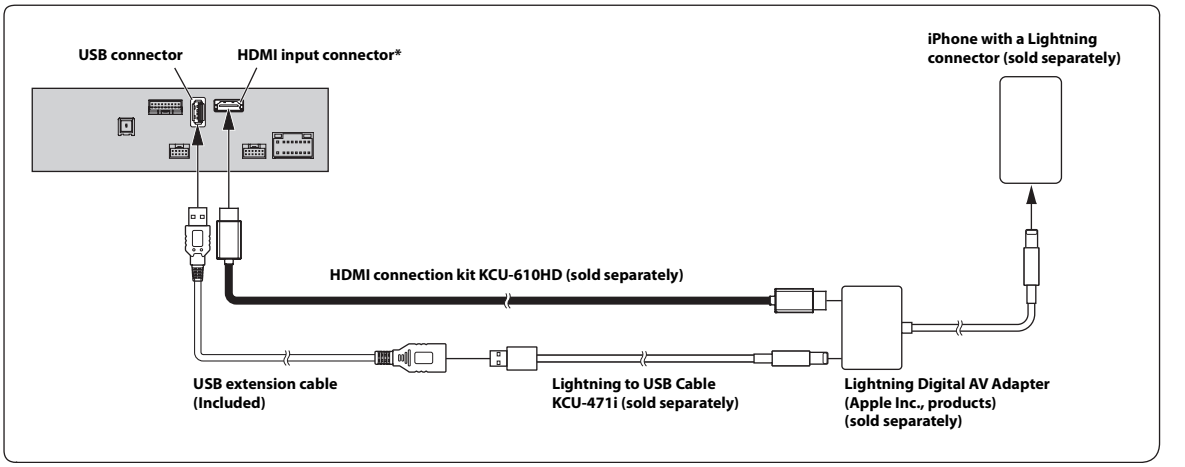

** When connecting an HDMI connection cable, be sure to secure it using the supplied HDMI Bracket.*

- *Set the HDMI Setup to "HDMI." For details, refer to "HDMI Setup" in the OWNER'S MANUAL.*


Connection of an HDMI Device (Android device)

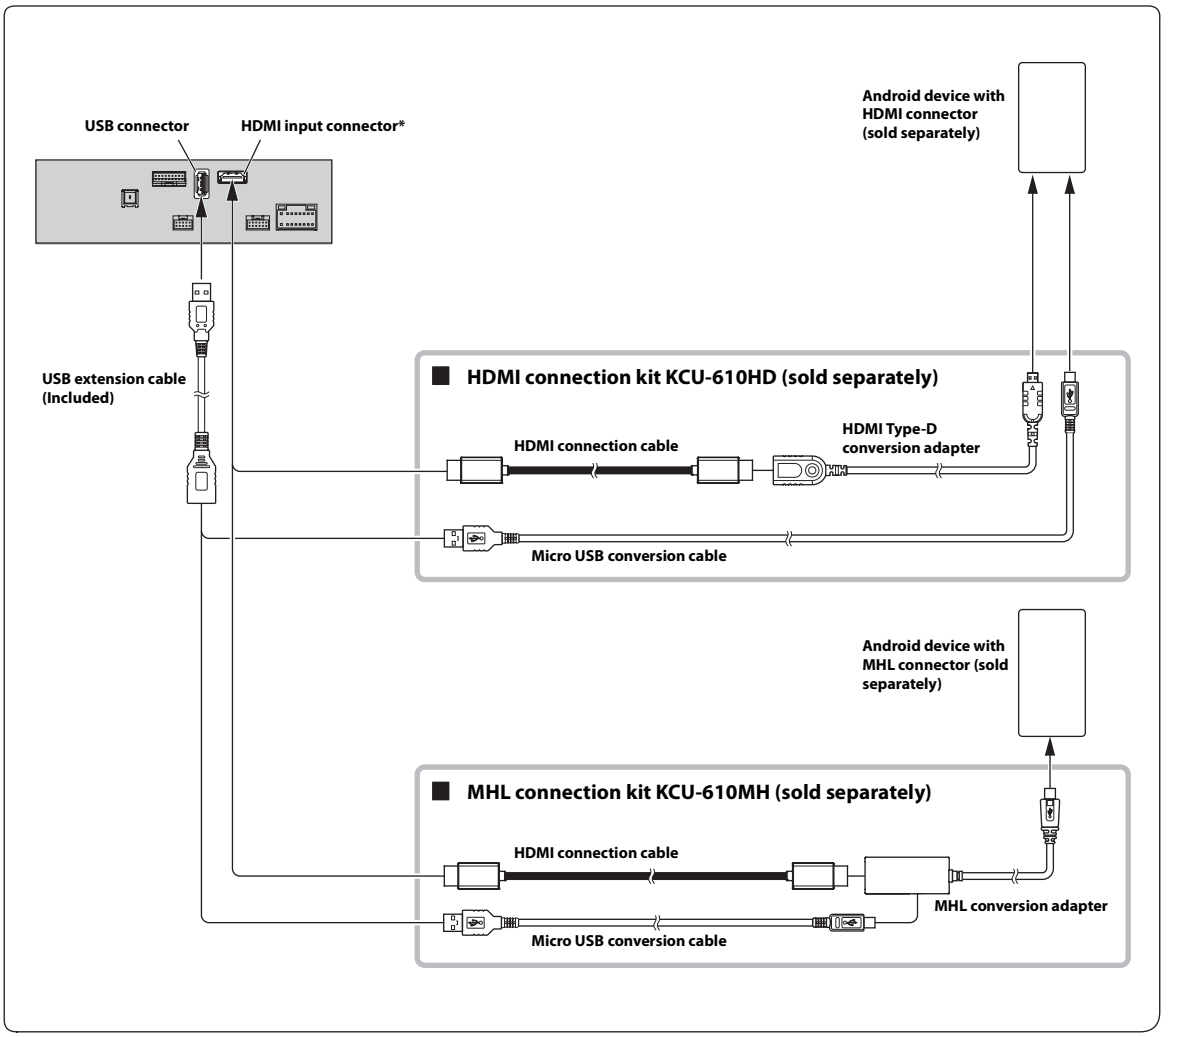

- *A connection kit or adapter kit suitable for the type of terminal on the connecting device is required.*
- *Set the HDMI Setup to "HDMI." For details, refer to "HDMI Setup" in the OWNER'S MANUAL.*

** When connecting an HDMI connection cable, be sure to secure it using the supplied HDMI Bracket.*

Connection of an External Device

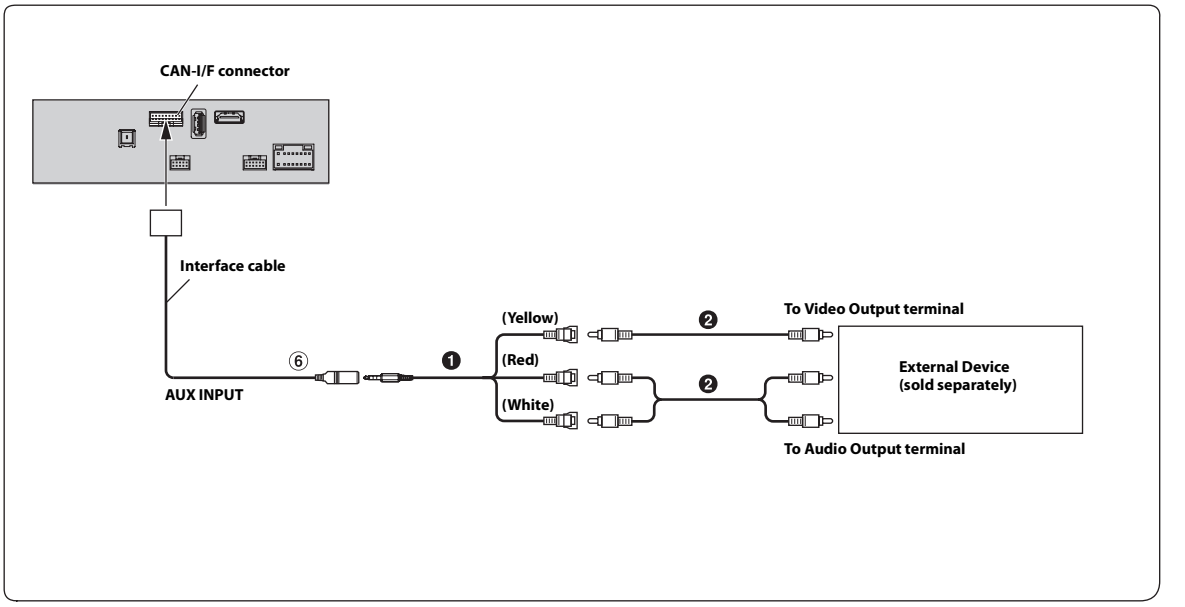


⑥ **AUX Input Connector**

❶ **AV/RCA Interface Cable (4-pole mini AV plug to 3-RCA) (sold separately)**

❷ **RCA Extension Cable (sold separately)**

- *You can change the name of an external device. For details, refer to "Setting the Auxiliary (AUX) Name" in the OWNER'S MANUAL.*
- *For details on using an AV/RCA interface cable (4-pole mini AV plug to 3-RCA), see "Usable AV/RCA Interface Cable (4-pole mini AV plug to 3-RCA)".*

Connection of an External Amplifier

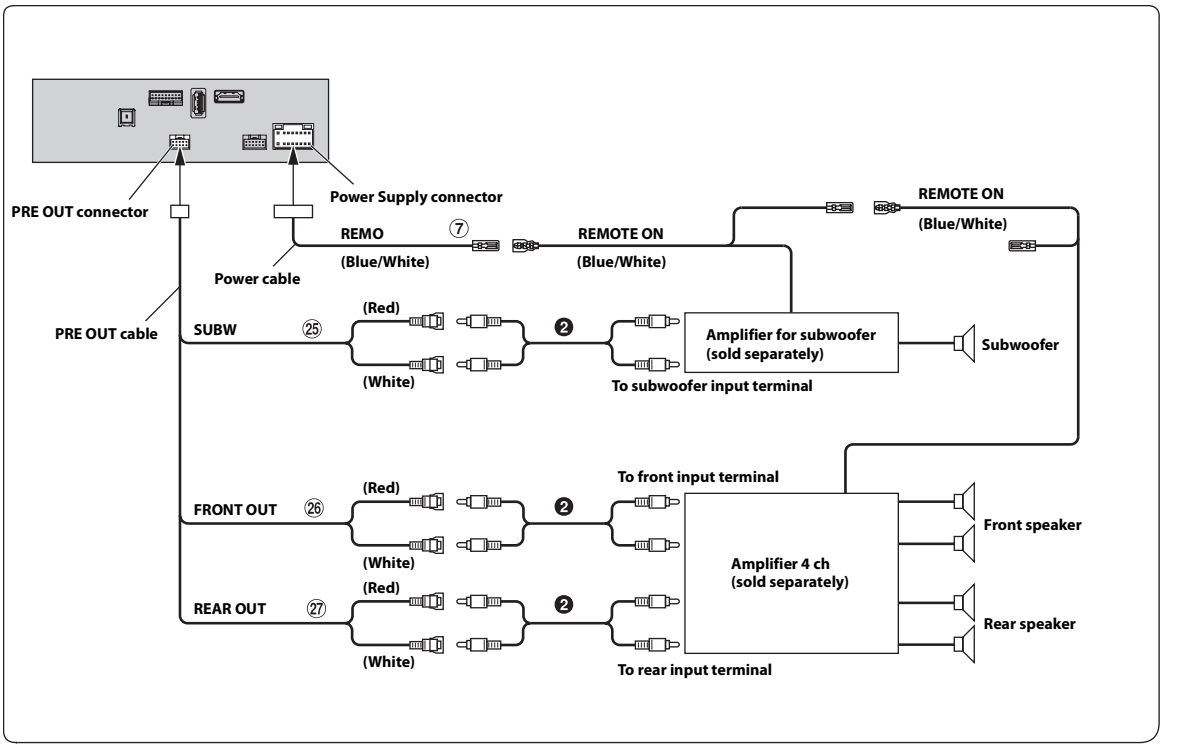

⑦ **Remote Turn-On Lead (Blue/White)**


㉕ **Subwoofer RCA Connectors**

㉖ **Front Output RCA Connectors**

㉗ **Rear Output RCA Connectors**

❷ **RCA Extension Cable (sold separately)**

Connection of a Rearview camera

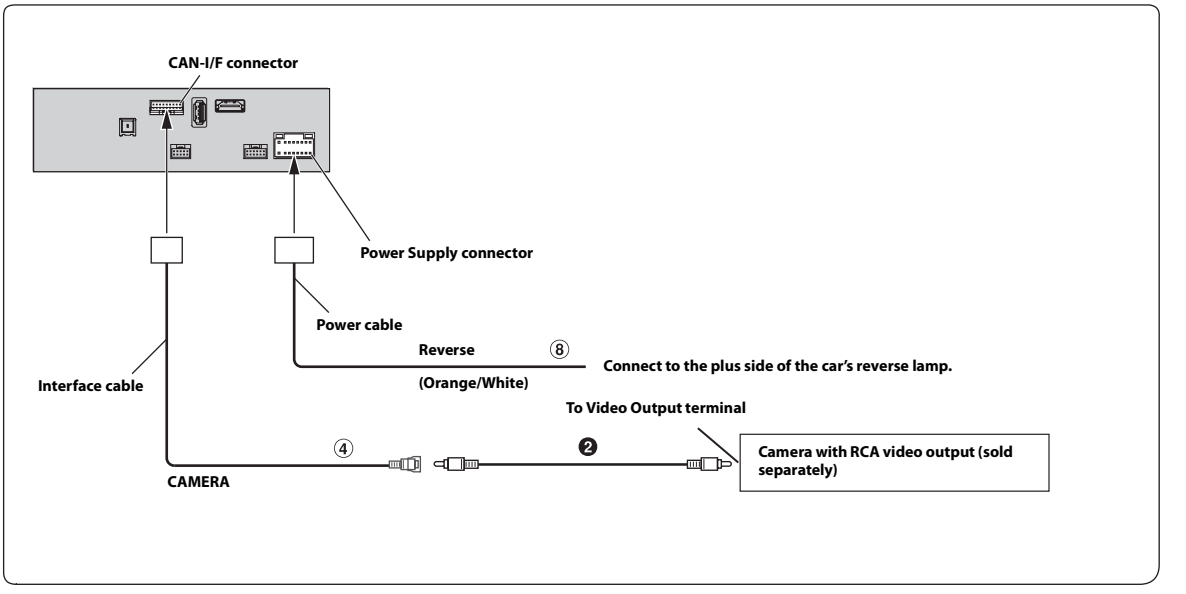

④ **CAMERA Input RCA Connector**


⑧ **Reverse Lead (Orange/White)**

❷ **RCA Extension Cable (sold separately)**

- *Set the Camera Select to "Rear." For details, refer to "Setting the Camera Input" in the OWNER'S MANUAL.*

System Connection (iLX-F903D)

Connections

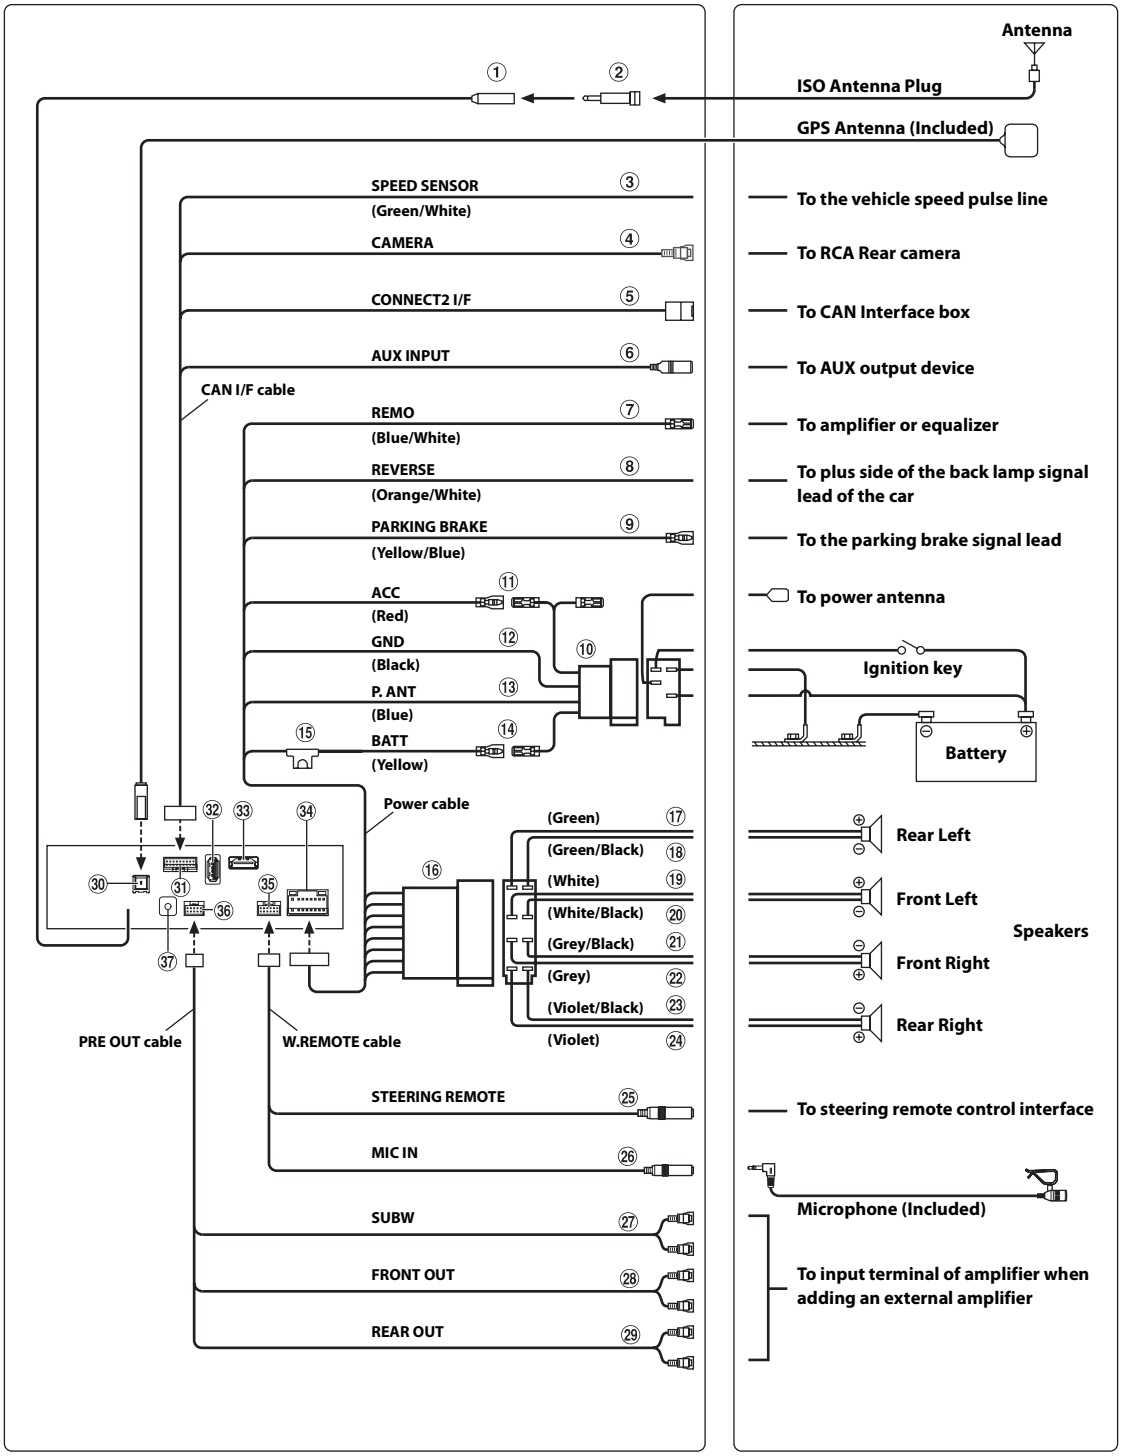

① **Radio Antenna Receptacle**

② **ISO/JASO Antenna Adapter (sold separately)**
ISO/JASO Antenna Adapter may be required, depending on the vehicle.

③ **Speed Sensor Lead (Green/White)**
Improper connection of the speed pulse line may cause important safety features of the vehicle to fail (such as the brakes or air bags). Such failures may result in an accident and loss of life. We strongly recommend that the installation be performed by a trained, authorized Alpine dealer.

④ **CAMERA Input RCA Connector**
Use when connecting a camera with RCA Output Connector.

⑤ **CAN Interface Connector**
To CAN Interface box

⑥ **AUX Input Connector**
Input lead for AUX video/audio signal.
- *A separately sold AV/RCA interface cable (4-pole mini AV plug to 3-RCA) is required. For details on using an AV/RCA interface cable (4-pole mini AV plug to 3-RCA), see "Usable AV/RCA Interface Cable (4-pole mini AV plug to 3-RCA)".*

⑦ **Remote Turn-On Lead (Blue/White)**
Connect this lead to the remote turn-on lead of your amplifier or signal processor.

⑧ **Reverse Lead (Orange/White)**

⑨ **Parking Brake Lead (Yellow/Blue)**
Connect this lead to the power supply side of parking brake switch to transmit the parking brake status signals to the unit.

⑩ **ISO Power Supply Connector**

⑪ **Switched Power Lead (Ignition) (Red)**
Connect this lead to an open terminal on the vehicle's fuse box or another unused power source that provides (+) 12V only when the ignition is turned on or in the accessory position.

⑫ **Ground Lead (Black)**
Connect this lead to a good chassis ground on the vehicle. Make sure the connection is made to bare metal and is securely fastened using the sheet metal screw provided.

⑬ **Power Antenna Lead (Blue)**
Connect this lead to the +B terminal of your power antenna, if applicable.
- *This lead should be used only for controlling the vehicle's power antenna. Do not use this lead to turn on an amplifier or a signal processor, etc.*

⑭ **Battery Lead (Yellow)**
Connect this lead to the positive (+) post of the vehicle's battery.

⑮ **Fuse Holder (15A)**

⑯ **ISO Connector (Speaker Output)**

⑰ **Left Rear (+) Speaker Output Lead (Green)**

⑱ **Left Rear (–) Speaker Output Lead (Green/Black)**

⑲ **Left Front (+) Speaker Output Lead (White)**

⑳ **Left Front (–) Speaker Output Lead (White/Black)**

㉑ **Right Front (–) Speaker Output Lead (Grey/Black)**

㉒ **Right Front (+) Speaker Output Lead (Grey)**

㉓ **Right Rear (–) Speaker Output Lead (Violet/Black)**

㉔ **Right Rear (+) Speaker Output Lead (Violet)**

㉕ **Steering Remote Control Interface Connector**
To steering remote control interface.
For details about connections, consult your nearest Alpine dealer.

㉖ **MIC Input Connector**
To microphone (Included)

㉗ **Subwoofer RCA Connectors**
RED is right and WHITE is left.

㉘ **Front Output RCA Connectors**
Can be used as Front Output RCA Connectors. RED is right and WHITE is left.

㉙ **Rear Output RCA Connectors**
Can be used as Rear Output RCA Connectors. RED is right and WHITE is left.

㉚ **GPS Antenna Receptacle**
Connect to GPS antenna (Included).

㉛ **CAN I/F Connector**

㉜ **USB Connector**
To USB flash drive, iPod/iPhone or Android smartphone.

㉝ **HDMI Input Connector**

㉞ **Power Supply Connector**


㉟ **W.REMOTE Connector**

㊱ **PRE OUT Connector**

㊲ **DAB Antenna Connector**
To DAB Antenna (sold separately).

Usable AV/RCA Interface Cable (4-pole mini AV plug to 3-RCA)


Wiring convention of this system is as follows;

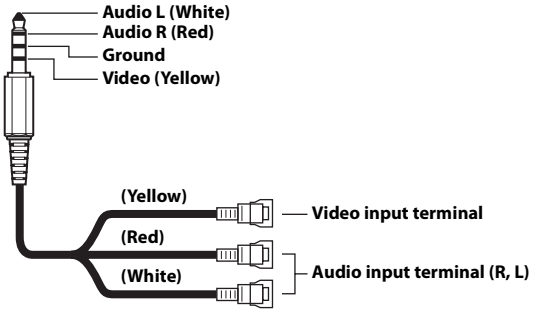

- *Configuration commercially available 4-pole mini AV plugs is not standardised.*

If an ACC power supply is not available

Connection Diagram of SPST Switch (sold separately)

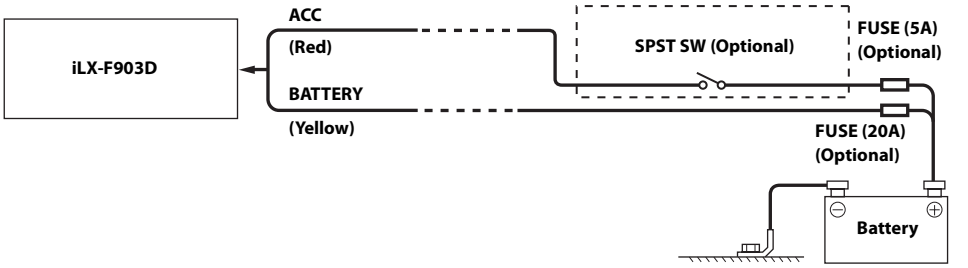

- *If your vehicle has no ACC power supply, add an SPST (single-pole, single-throw) switch (sold separately) and fuse (sold separately).*
- *The diagram and the fuse amperage shown above are in the case when the unit is used individually.*
- *If the switched power (ignition) lead of the unit is connected directly to the positive (+) post of the vehicle's battery, the unit draws some current (several hundred milliamperes) even when its switch is placed in the OFF position, and the battery may be discharged.*


To prevent external noise from entering the audio system.

- Locate the unit and route the leads at least 10 cm away from the car harness.
- Keep the battery power leads as far away from other leads as possible.
- Connect the ground lead securely to a bare metal spot (remove any paint, dirt or grease if necessary) of the car chassis.
- If you add an optional noise suppressor, connect it as far away from the unit as possible. Your Alpine dealer carries various noise suppressors, contact them for further information.
- Your Alpine dealer knows best about noise prevention measures so consult your dealer for further information.


System Example

Connection of an iPod/iPhone

■ When connecting to an iPod/iPhone with a Lightning connector

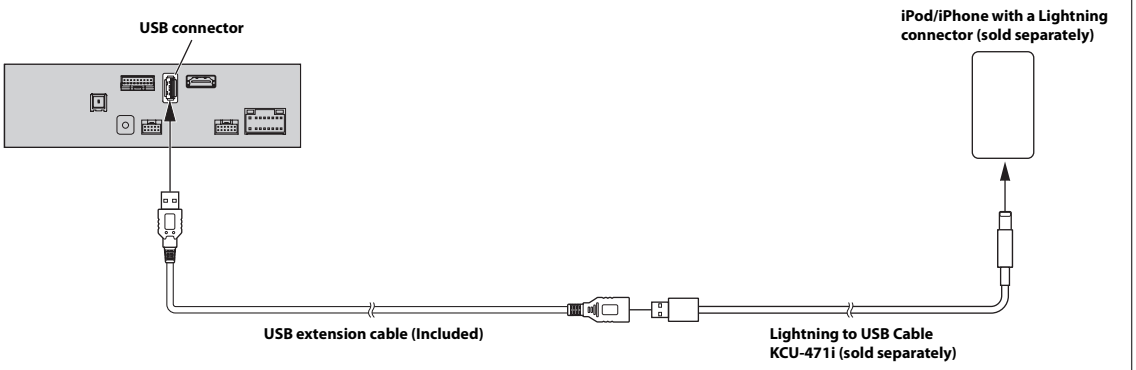


■ When connecting to iPhone 4S

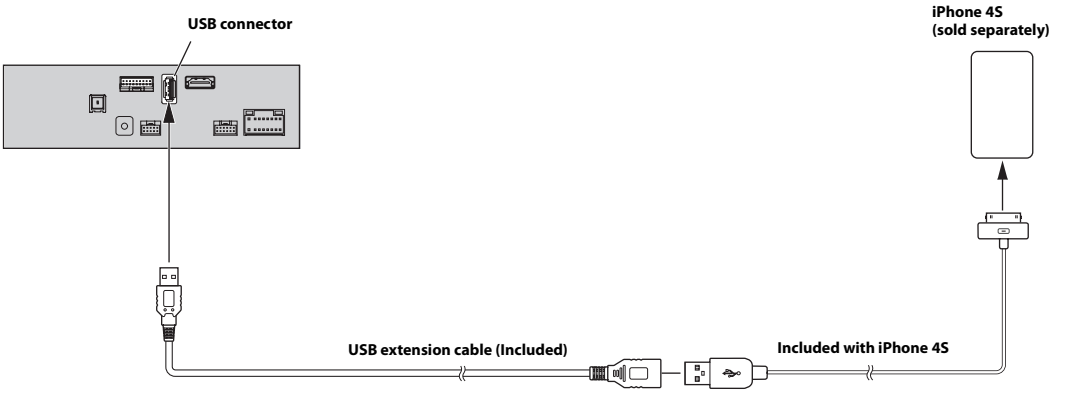


- *Do not leave an iPod/iPhone in a vehicle for a long time. Heat and humidity may damage the iPod/iPhone, and you may not be able to play it again.*

Connection of a Flash Drive

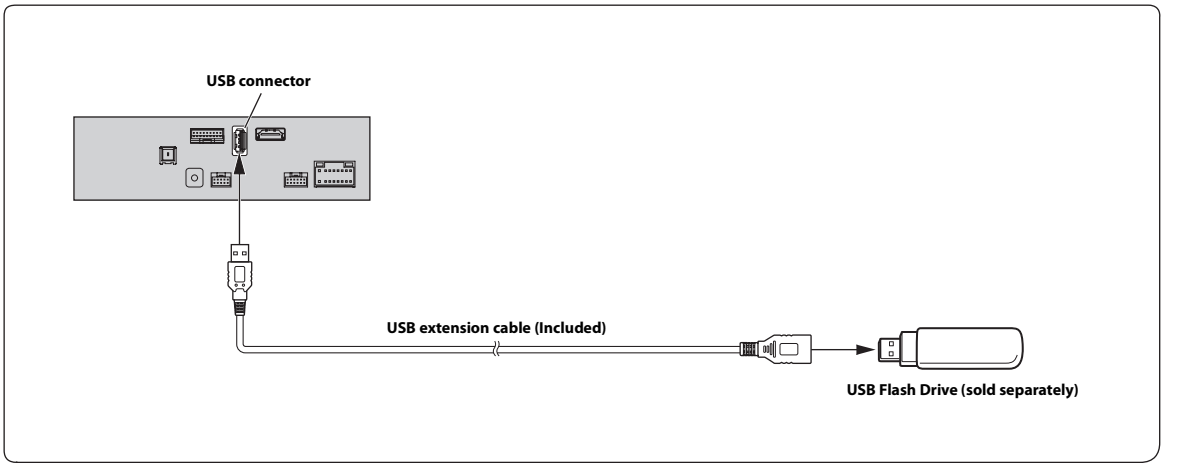

- *Do not leave a flash drive in a vehicle for a long time. Heat and humidity may damage the flash drive.*


Connection of an HDMI Device (iPhone with a Lightning connector)

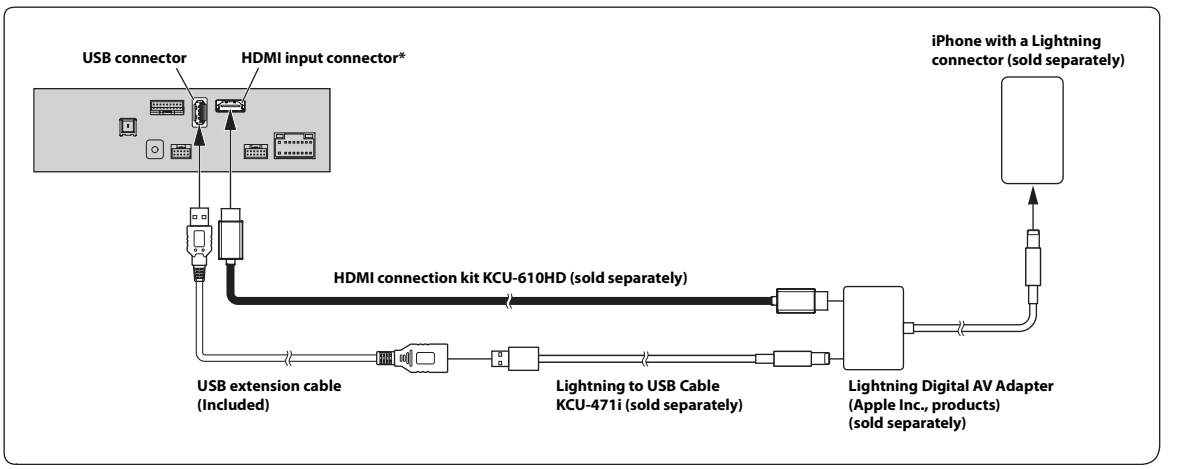

** When connecting an HDMI connection cable, be sure to secure it using the supplied HDMI Bracket.*

- *Set the HDMI Setup to "HDMI." For details, refer to "HDMI Setup" in the OWNER'S MANUAL (CD-ROM).*


Connection of an HDMI Device (Android device)

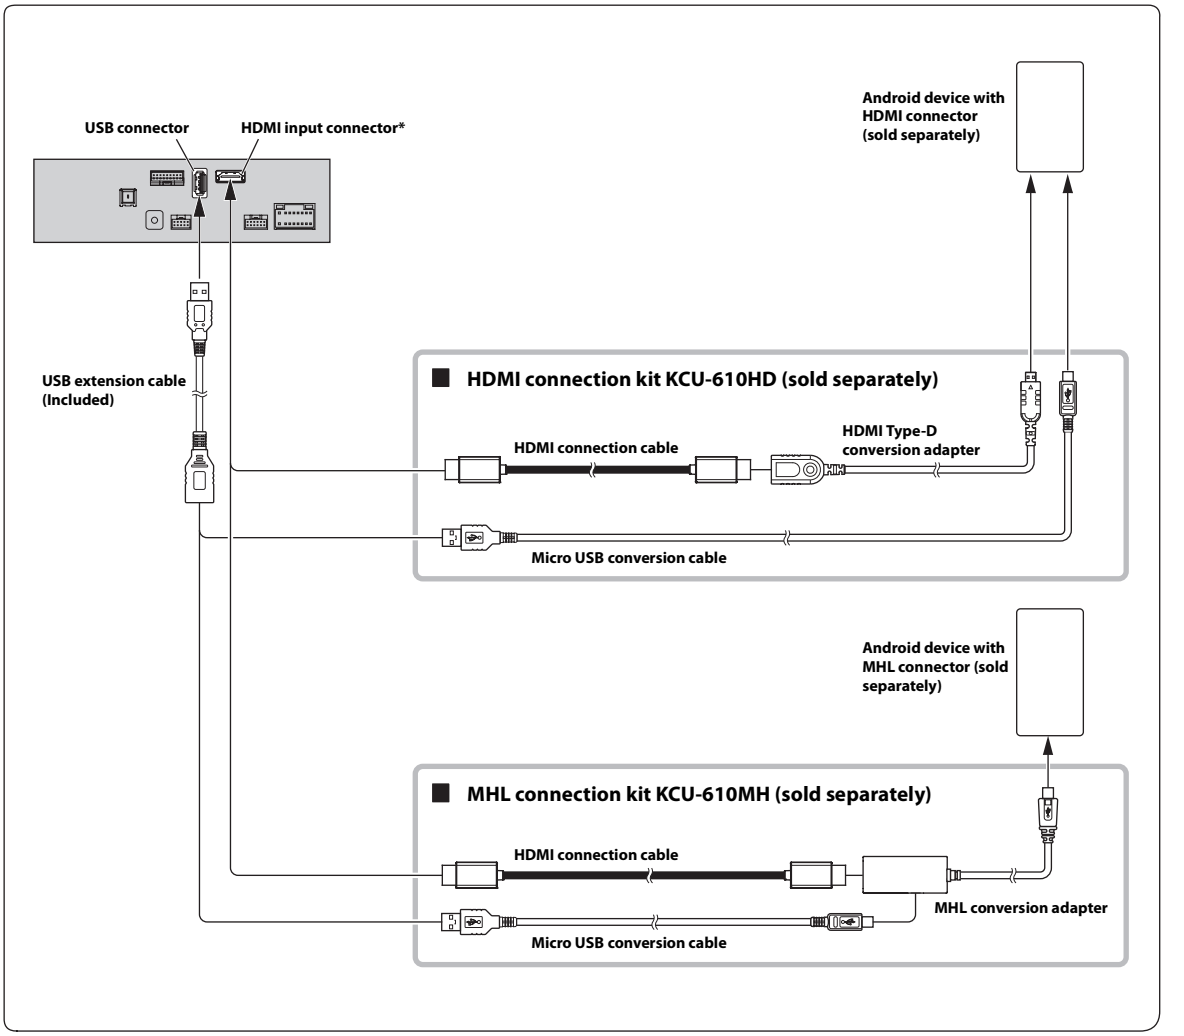

- *A connection kit or adapter kit suitable for the type of terminal on the connecting device is required.*
- *Set the HDMI Setup to "HDMI." For details, refer to "HDMI Setup" in the OWNER'S MANUAL (CD-ROM).*

** When connecting an HDMI connection cable, be sure to secure it using the supplied HDMI Bracket.*

Connection of an External Device

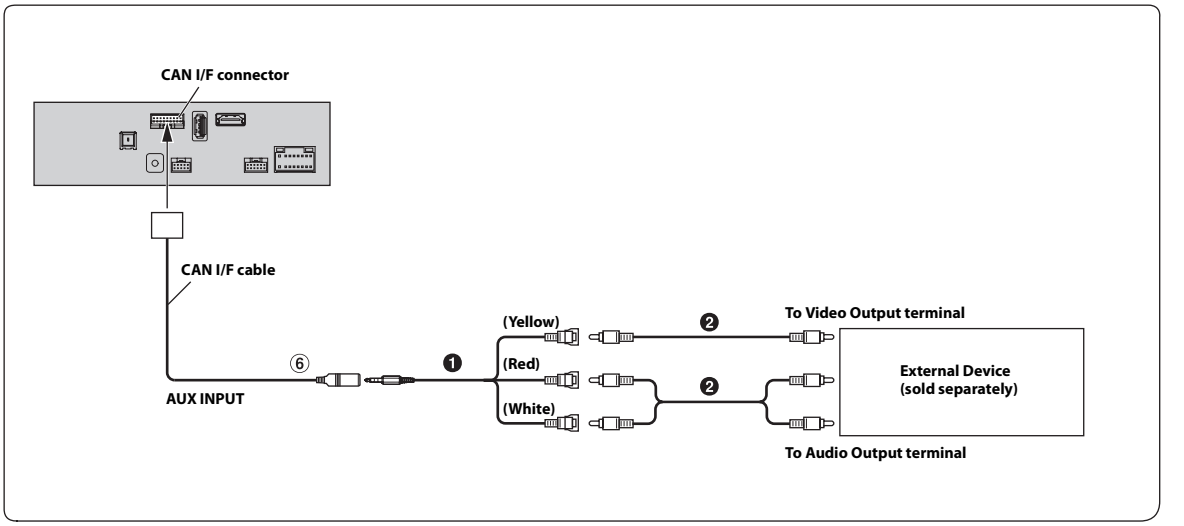


⑥ **AUX Input Connector**

❶ **AV/RCA Interface Cable (4-pole mini AV plug to 3-RCA) (sold separately)**

❷ **RCA Extension Cable (sold separately)**

- *You can change the name of an external device. For details, refer to "Setting the Auxiliary (AUX) Name" in the OWNER'S MANUAL (CD-ROM).*
- *For details on using an AV/RCA interface cable (4-pole mini AV plug to 3-RCA), see "Usable AV/RCA Interface Cable (4-pole mini AV plug to 3-RCA)"*

Connection of an External Amplifier

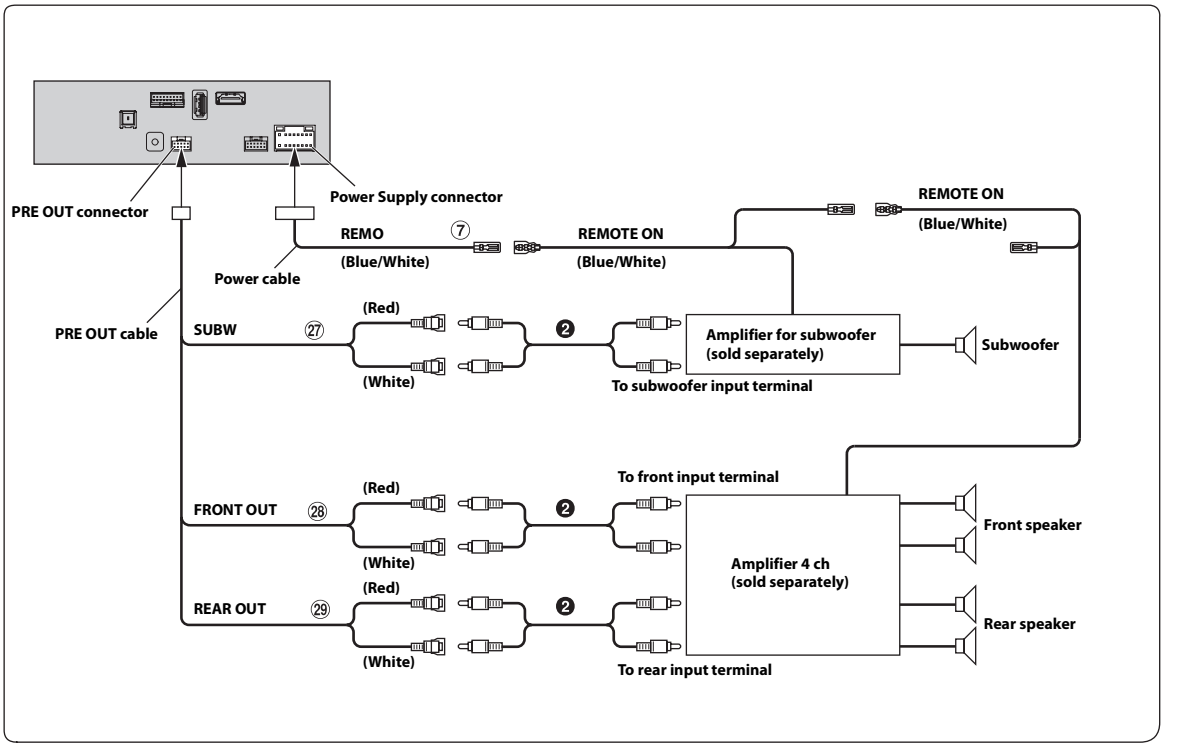

⑦ **Remote Turn-On Lead (Blue/White)**


❷ **RCA Extension Cable (sold separately)**

㉗ **Subwoofer RCA Connectors**

㉘ **Front Output RCA Connectors**

㉙ **Rear Output RCA Connectors**

Connection of a Rearview camera

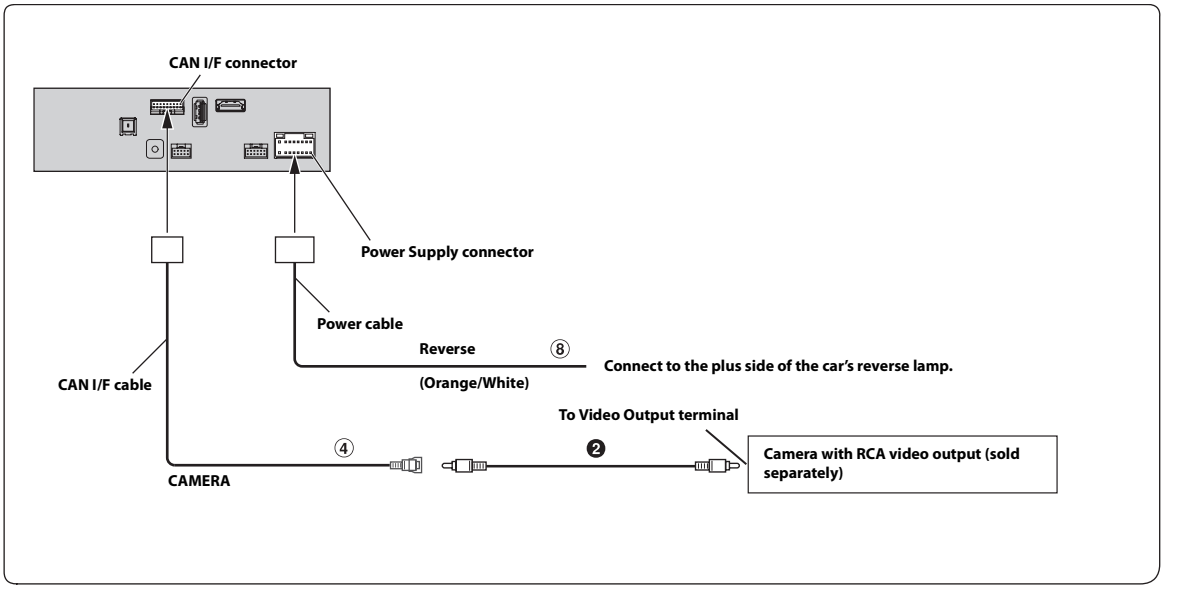

④ **CAMERA Input RCA Connector**


❷ **RCA Extension Cable (sold separately)**

⑧ **Reverse Lead (Orange/White)**

- *Set the Camera Select to "Rear." For details, refer to "Setting the Camera Input" in the OWNER'S MANUAL (CD-ROM).*

System Connection (iLX-F309E)

Connections

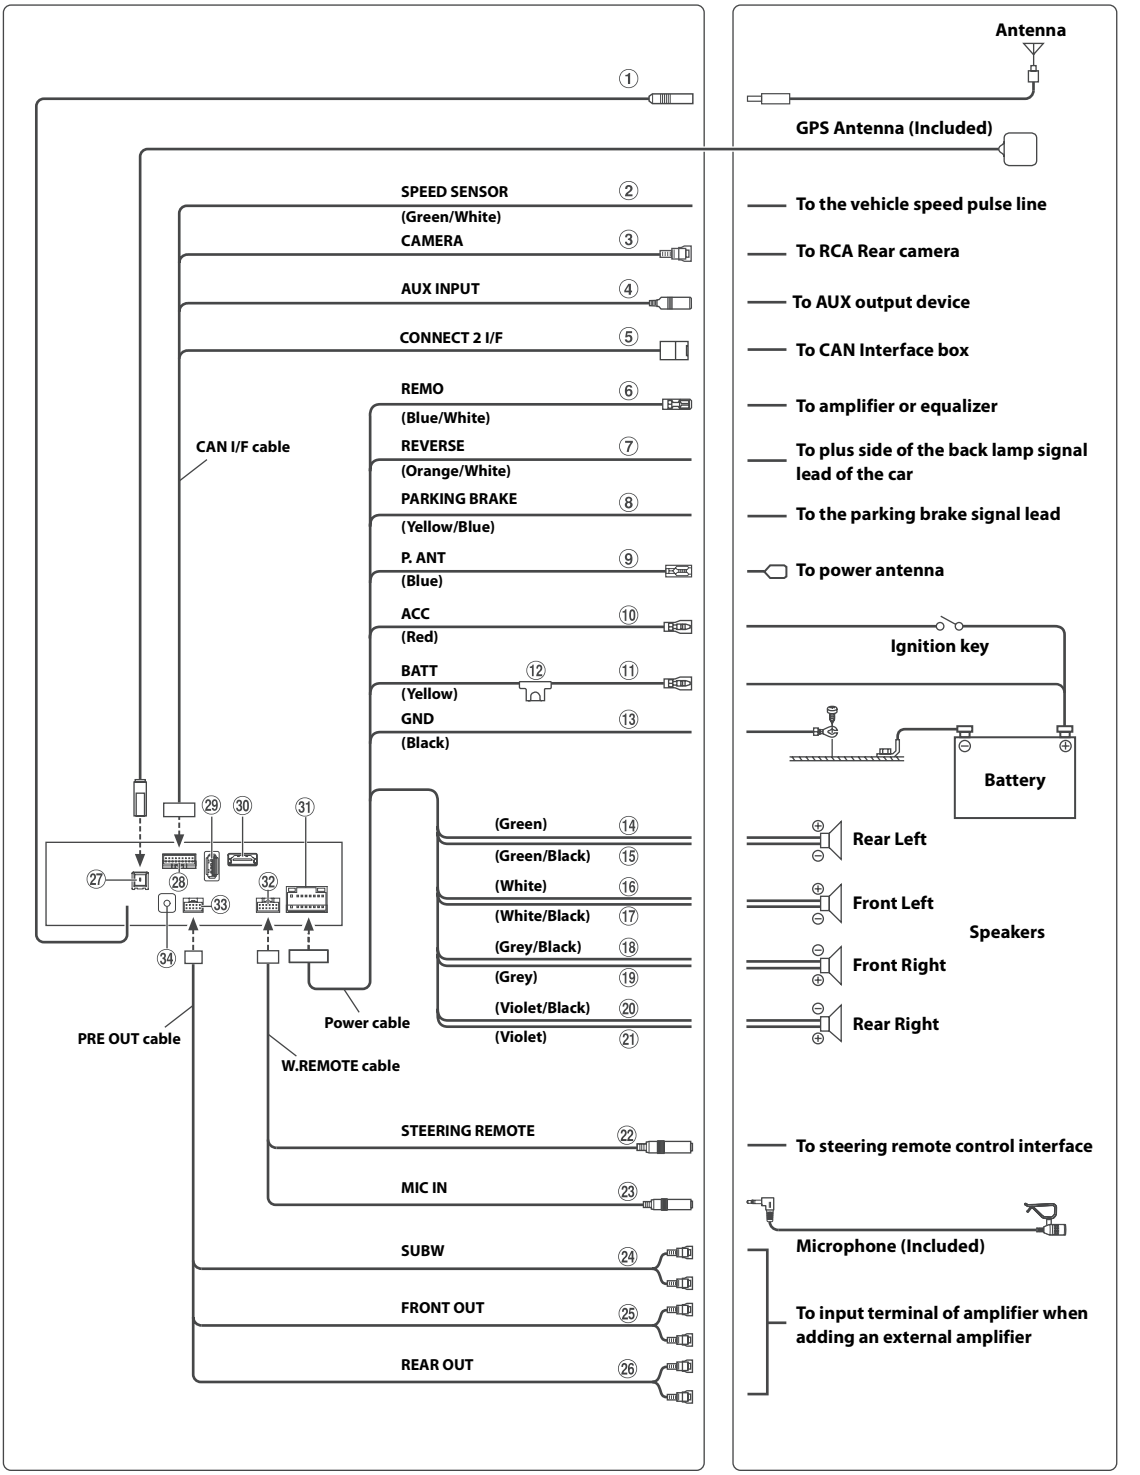

① **Radio Antenna Receptacle**

② **Speed Sensor Lead (Green/White)**
Improper connection of the speed pulse line may cause important safety features of the vehicle to fail (such as the brakes or air bags). Such failures may result in an accident and loss of life. We strongly recommend that the installation be performed by a trained, authorized Alpine dealer.

③ **CAMERA Input RCA Connector**
Use when connecting a camera with RCA Output Connector.

④ **AUX Input Connector**
Input lead for AUX video/audio signal.
- *A separately sold AV/RCA interface cable (4-pole mini AV plug to 3-RCA) is required. For details on using an AV/RCA interface cable (4-pole mini AV plug to 3-RCA), see "Usable AV/RCA Interface Cable (4-pole mini AV plug to 3-RCA)".*

⑤ **CAN Interface Connector**
To CAN Interface box.

⑥ **Remote Turn-On Lead (Blue/White)**
Connect this lead to the remote turn-on lead of your amplifier or signal processor.

⑦ **Reverse Lead (Orange/White)**

⑧ **Parking Brake Lead (Yellow/Blue)**
Connect this lead to the power supply side of parking brake switch to transmit the parking brake status signals to the unit.

⑨ **Power Antenna Lead (Blue)**
Connect this lead to the +B terminal of your power antenna, if applicable.
- *This lead should be used only for controlling the vehicle's power antenna. Do not use this lead to turn on an amplifier or a signal processor, etc.*

⑩ **Switched Power Lead (Ignition) (Red)**
Connect this lead to an open terminal on the vehicle's fuse box or another unused power source that provides (+) 12V only when the ignition is turned on or in the accessory position.

⑪ **Battery Lead (Yellow)**
Connect this lead to the positive (+) post of the vehicle's battery.

⑫ **Fuse Holder (15A)**

⑬ **Ground Lead (Black)**
Connect this lead to a good chassis ground on the vehicle. Make sure the connection is made to bare metal and is securely fastened using the sheet metal screw provided.

⑭ **Left Rear (+) Speaker Output Lead (Green)**

⑮ **Left Rear (–) Speaker Output Lead (Green/Black)**

⑯ **Left Front (+) Speaker Output Lead (White)**

⑰ **Left Front (–) Speaker Output Lead (White/Black)**

⑱ **Right Front (–) Speaker Output Lead (Grey/Black)**

⑲ **Right Front (+) Speaker Output Lead (Grey)**

⑳ **Right Rear (–) Speaker Output Lead (Violet/Black)**

㉑ **Right Rear (+) Speaker Output Lead (Violet)**

㉒ **Steering Remote Control Interface Connector**
To steering remote control interface.
For details about connections, consult your nearest Alpine dealer.

㉓ **MIC Input Connector**
To microphone (Included)

㉔ **Subwoofer RCA Connectors**
RED is right and WHITE is left.

㉕ **Front Output RCA Connectors**
Can be used as Front Output RCA Connectors. RED is right and WHITE is left.

㉖ **Rear Output RCA Connectors**
Can be used as Rear Output RCA Connectors. RED is right and WHITE is left.

㉗ **GPS Antenna Receptacle**
Connect to GPS antenna (Included).

㉘ **CAN I/F Connector**

㉙ **USB Connector**
To USB flash drive, iPod/iPhone or Android smartphone.

㉚ **HDMI Input Connector**

㉛ **Power Supply Connector**


㉜ **W.REMOTE Connector**

㉝ **PRE OUT Connector**

㉞ **DAB Antenna Connector**
To DAB Antenna (Sold Separately).

Usable AV/RCA Interface Cable (4-pole mini AV plug to 3-RCA)


Wiring convention of this system is as follows;

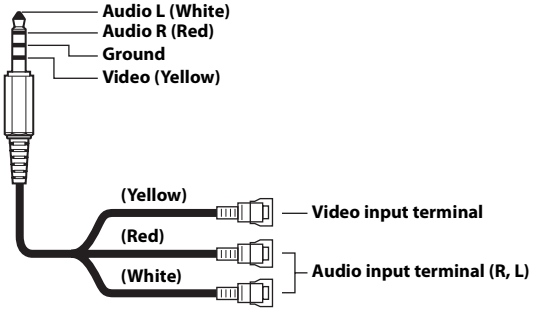

- *Configuration commercially available 4-pole mini AV plugs is not standardised.*

If an ACC power supply is not available

Connection Diagram of SPST Switch (sold separately)

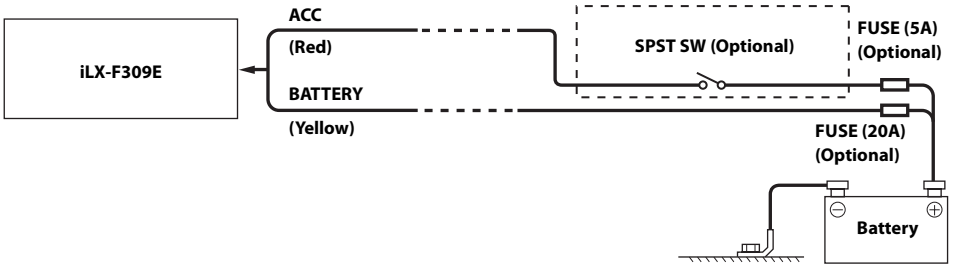

- *If your vehicle has no ACC power supply, add an SPST (single-pole, single-throw) switch (sold separately) and fuse (sold separately).*
- *The diagram and the fuse amperage shown above are in the case when the unit is used individually.*
- *If the switched power (ignition) lead of the unit is connected directly to the positive (+) post of the vehicle's battery, the unit draws some current (several hundred milliamperes) even when its switch is placed in the OFF position, and the battery may be discharged.*


To prevent external noise from entering the audio system.

- Locate the unit and route the leads at least 10 cm away from the car harness.
- Keep the battery power leads as far away from other leads as possible.
- Connect the ground lead securely to a bare metal spot (remove any paint, dirt or grease if necessary) of the car chassis.
- If you add an optional noise suppressor, connect it as far away from the unit as possible. Your Alpine dealer carries various noise suppressors, contact them for further information.
- Your Alpine dealer knows best about noise prevention measures so consult your dealer for further information.


System Example

Connection of an iPod/iPhone

■ When connecting to an iPod/iPhone with a Lightning connector

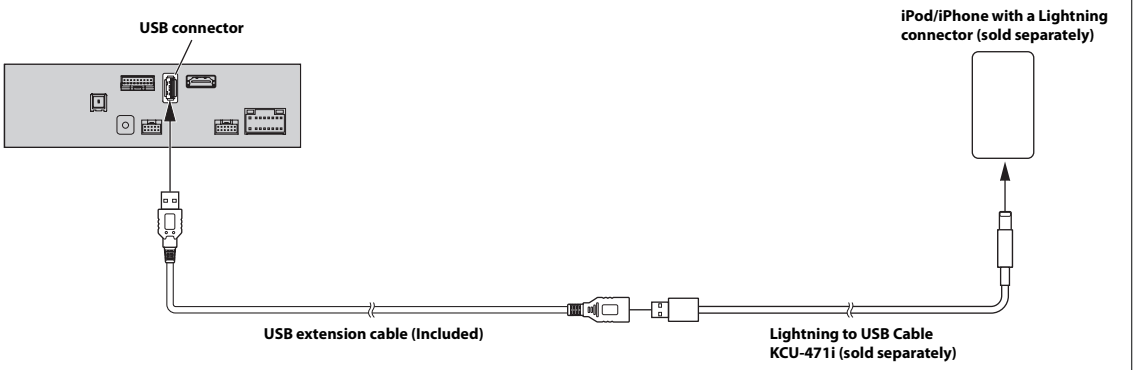


■ When connecting to iPhone 4S

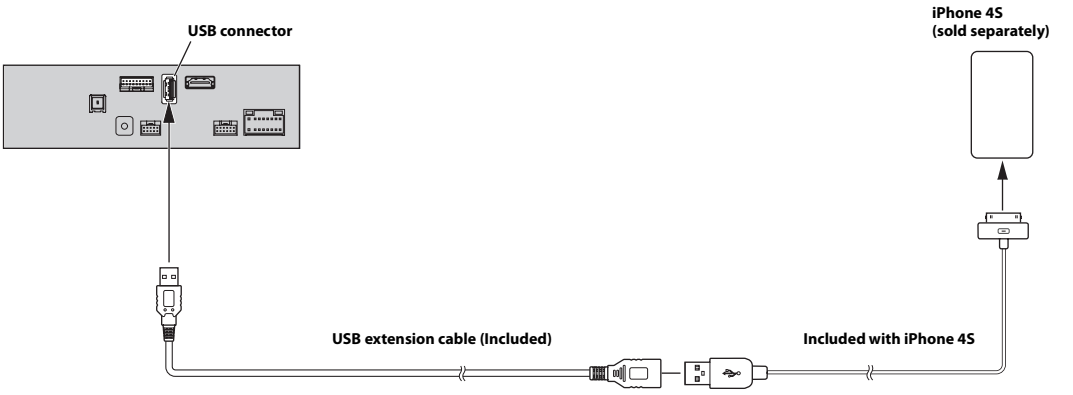


- *Do not leave an iPod/iPhone in a vehicle for a long time. Heat and humidity may damage the iPod/iPhone, and you may not be able to play it again.*

Connection of a Flash Drive

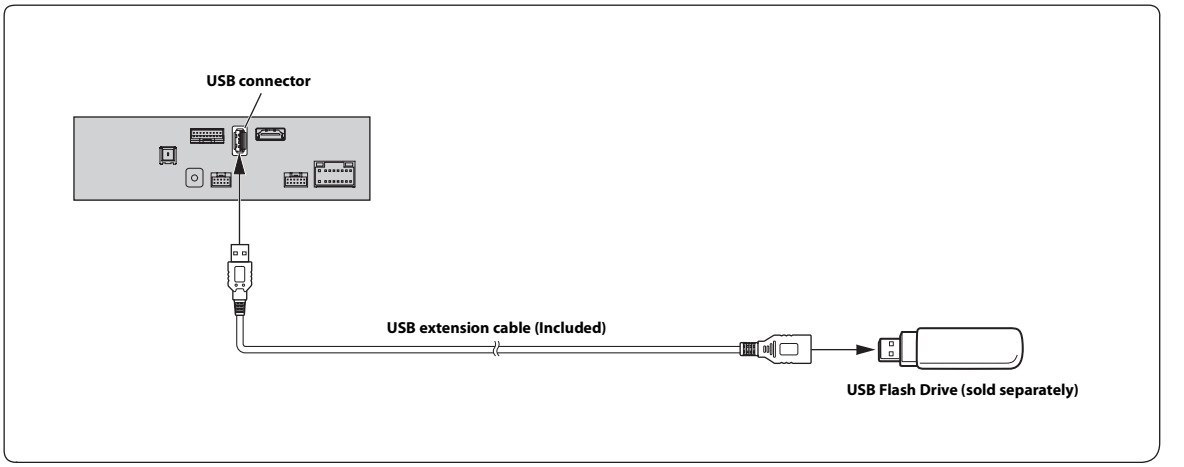

- *Do not leave a flash drive in a vehicle for a long time. Heat and humidity may damage the flash drive.*


Connection of an HDMI Device (iPhone with a Lightning connector)

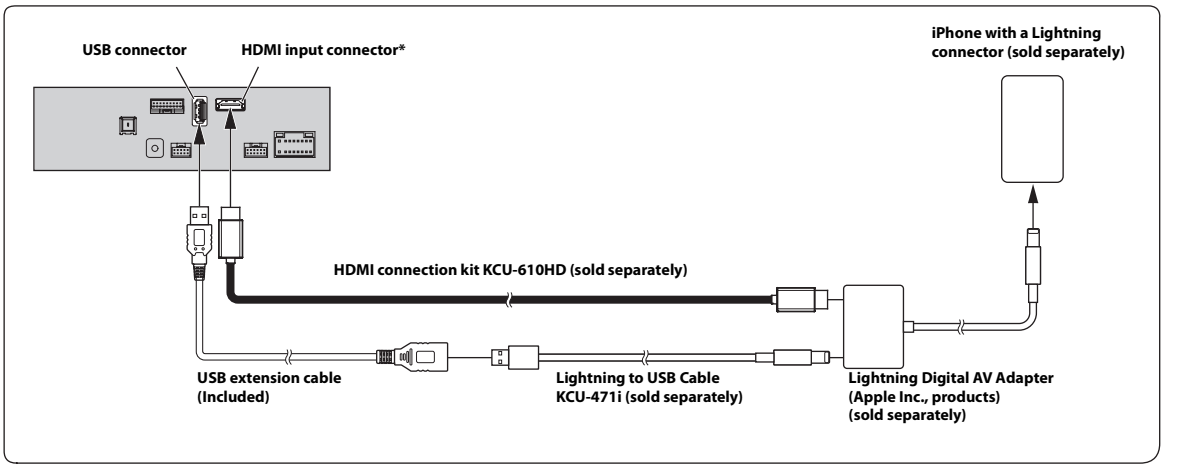

** When connecting an HDMI connection cable, be sure to secure it using the supplied HDMI Bracket.*

- *Set the HDMI Setup to "HDMI." For details, see "HDMI Setup" in the OWNER'S MANUAL.*


Connection of an HDMI Device (Android device)

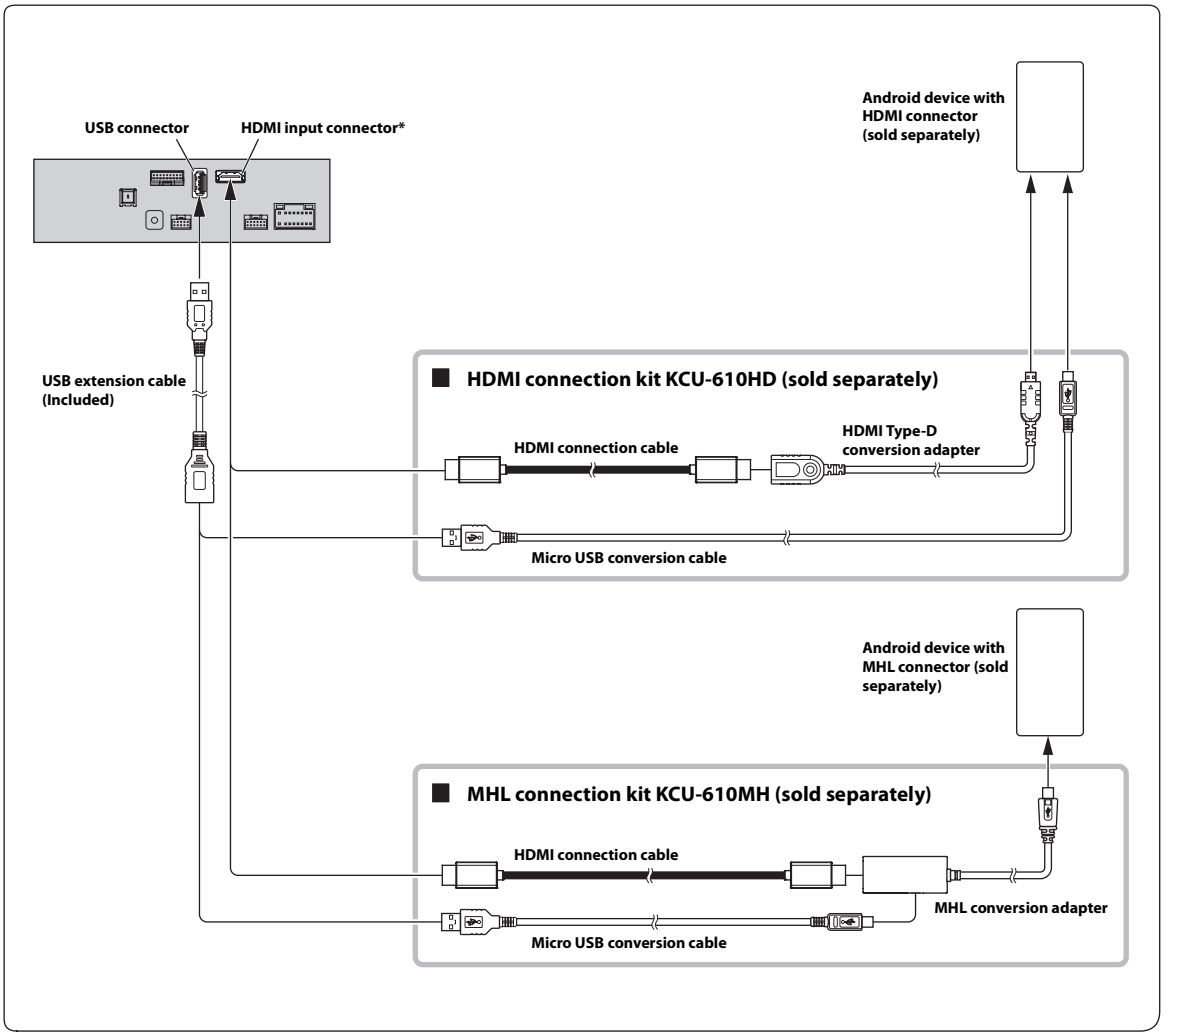

- *A connection kit or adapter kit suitable for the type of terminal on the connecting device is required.*
- *Set the HDMI Setup to "HDMI." For details, see "HDMI Setup" in the OWNER'S MANUAL.*

** When connecting an HDMI connection cable, be sure to secure it using the supplied HDMI Bracket.*

Connection of an External Device

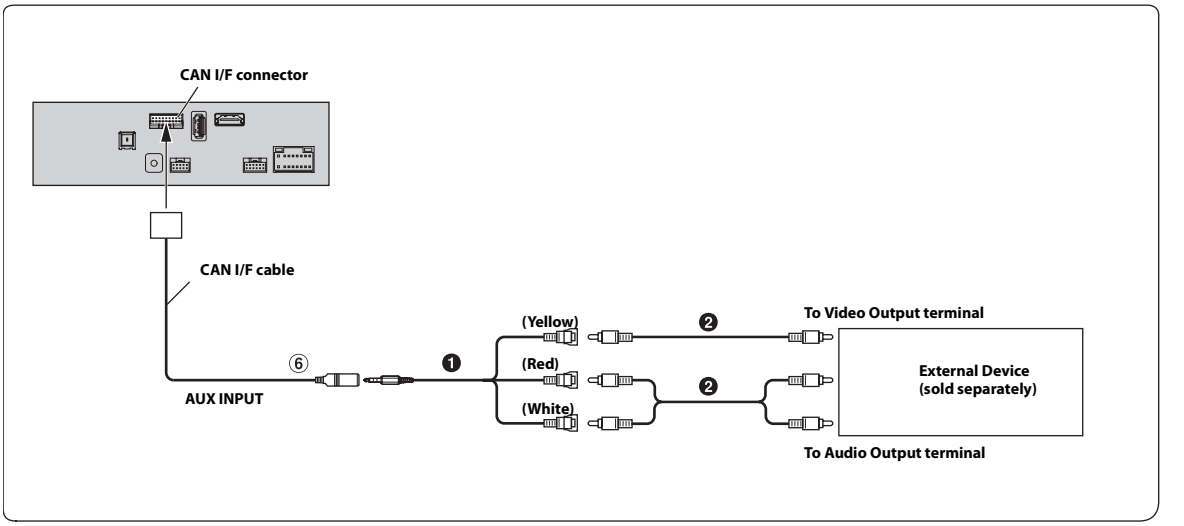


④ **AUX Input Connector**

❶ **AV/RCA Interface Cable (4-pole mini AV plug to 3-RCA) (sold separately)**

❷ **RCA Extension Cable (sold separately)**

- *You can change the name of an external device. For details, see "Setting the Auxiliary (AUX) Name" in the OWNER'S MANUAL.*
- *For details on using an AV/RCA interface cable (4-pole mini AV plug to 3-RCA), see "Usable AV/RCA Interface Cable (4-pole mini AV plug to 3-RCA)".*

Connection of an External Amplifier

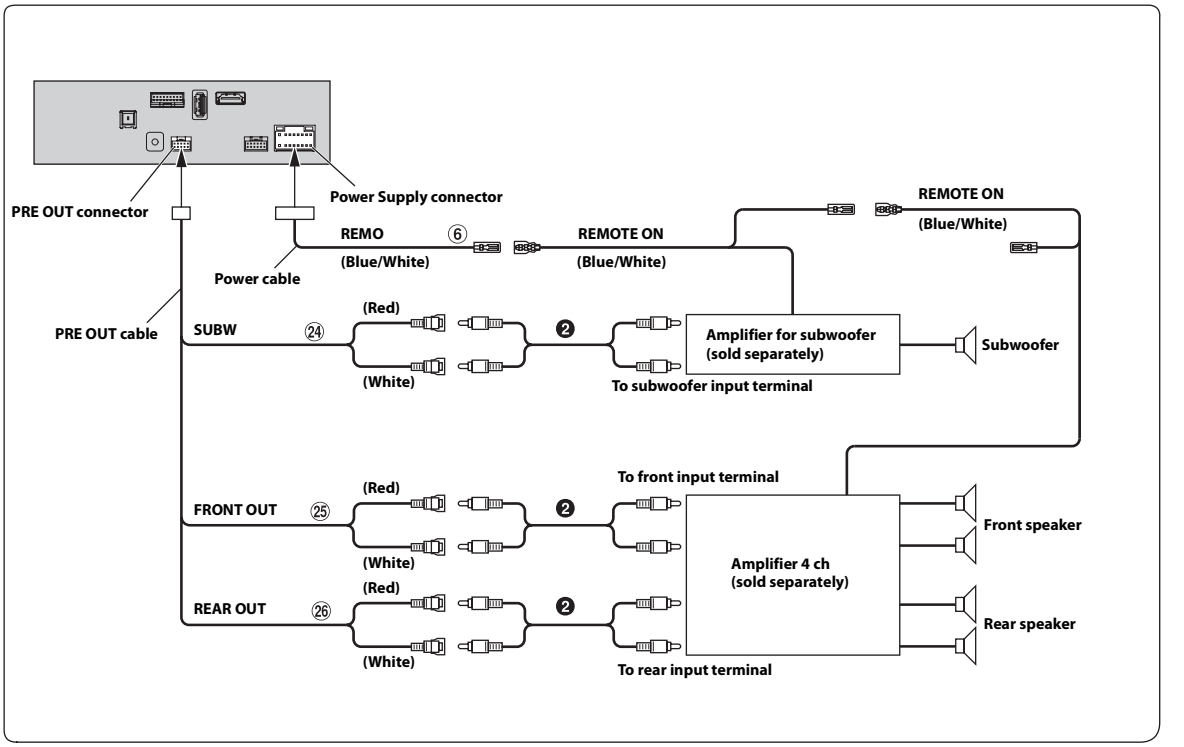

⑥ **Remote Turn-On Lead (Blue/White)**


㉔ **Subwoofer RCA Connectors**

㉕ **Front Output RCA Connectors**

㉖ **Rear Output RCA Connectors**

❷ **RCA Extension Cable (sold separately)**

Connection of a Rearview camera

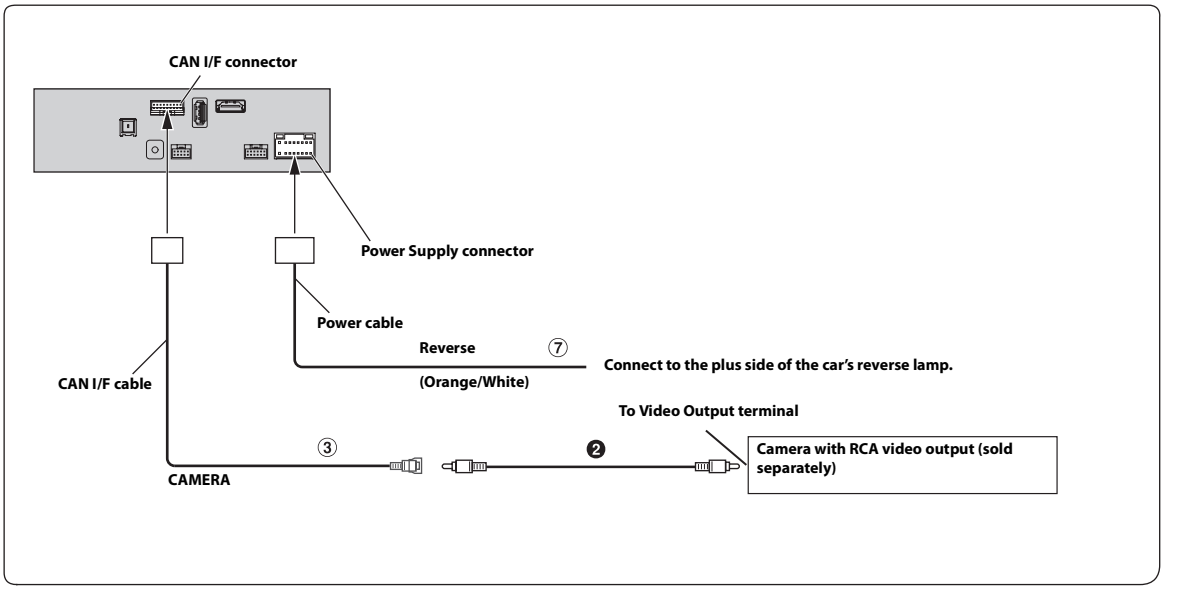

③ **CAMERA Input RCA Connector**

⑦ **Reverse Lead (Orange/White)**

❷ **RCA Extension Cable (sold separately)**

- *Set the Camera Select to "Rear." For details, see "Setting the Camera Input" in the OWNER'S MANUAL.*

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			ANT5501	09-07494Z01	U.FL-R-SMT-1(80)-E2
I.MX-P.W.Board(Main-unit)			C4000	E1101010000	2pF;50V;*;NPO;1005;CP
I.MX-P.W.Board(Main-unit)			C4001	E1101010000	2pF;50V;*;NPO;1005;CP
I.MX-P.W.Board(Main-unit)			C4002	E1101007240	7pF;50V;0.5P;NPO;1005;TP
I.MX-P.W.Board(Main-unit)			C4003	E1101007240	7pF;50V;0.5P;NPO;1005;TP
I.MX-P.W.Board(Main-unit)			C4007	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4008	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4009	E1101006240	1nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4010	E1101006240	1nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4014	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4015	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4016	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4017	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4018	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4024	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4025	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4026	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4027	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4028	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4029	E1101007930	10uF;10V;K;X5R;2012;TP
I.MX-P.W.Board(Main-unit)			C4030	E1101006560	220nF;10V;10%;X5R;1005;CP
I.MX-P.W.Board(Main-unit)			C4031	E1101006560	220nF;10V;10%;X5R;1005;CP
I.MX-P.W.Board(Main-unit)			C4032	E1101009770	22uF;16V;10%;X5R;3216;TP
I.MX-P.W.Board(Main-unit)			C4033	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4034	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4035	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4036	08-12461Z01	LLL153C80J104ME01E

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			C4037	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4038	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4039	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4040	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4041	E1101007930	10uF;10V;K;X5R;2012;TP
I.MX-P.W.Board(Main-unit)			C4042	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4043	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4044	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4045	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4046	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4047	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4048	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4049	E1101010240	1uF;25V;K;X7R;1608;TP
I.MX-P.W.Board(Main-unit)			C4050	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4051	E1101009080	4.7uF;16V;10%;X5R;2012;TP
I.MX-P.W.Board(Main-unit)			C4052	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4053	E1101009020	220nF;50V;K;X7R;2012;TP
I.MX-P.W.Board(Main-unit)			C4054	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4055	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4056	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4057	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4058	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4061	E1101009770	22uF;16V;10%;X5R;3216;TP
I.MX-P.W.Board(Main-unit)			C4063	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4064	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4065	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4066	08-12461Z01	LLL153C80J104ME01E

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			C4067	E1101009770	22uF;16V;10%;X5R;3216;TP
I.MX-P.W.Board(Main-unit)			C4068	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4069	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4070	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4071	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4072	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4073	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4074	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4075	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4076	E1101009080	4.7uF;16V;10%;X5R;2012;TP
I.MX-P.W.Board(Main-unit)			C4077	E1101006560	220nF;10V;10%;X5R;1005;CP
I.MX-P.W.Board(Main-unit)			C4078	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4079	E1101007930	10uF;10V;K;X5R;2012;TP
I.MX-P.W.Board(Main-unit)			C4080	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4081	E1101009770	22uF;16V;10%;X5R;3216;TP
I.MX-P.W.Board(Main-unit)			C4082	E1101007930	10uF;10V;K;X5R;2012;TP
I.MX-P.W.Board(Main-unit)			C4083	E1101009770	22uF;16V;10%;X5R;3216;TP
I.MX-P.W.Board(Main-unit)			C4200	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4201	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4202	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4203	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4204	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4205	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4206	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4207	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4208	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4209	08-12461Z01	LLL153C80J104ME01E

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			C4210	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4211	E1101006240	1nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4212	E1101006240	1nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4213	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4214	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4215	E1101006240	1nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4216	E1101006240	1nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4217	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4218	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4219	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4220	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4221	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4222	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4223	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4224	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4225	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4226	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4227	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4228	E1101006240	1nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4229	E1101006240	1nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4230	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4231	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4232	E1101006240	1nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4233	E1101006240	1nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4234	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4235	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4236	08-12461Z01	LLL153C80J104ME01E

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			C4237	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4238	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4239	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4240	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4241	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4242	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4243	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4244	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4245	E1101006240	1nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4246	E1101006240	1nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4247	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4248	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4249	E1101006240	1nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4250	E1101006240	1nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4251	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4252	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4253	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4254	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4255	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4256	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4257	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4258	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4259	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4260	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4261	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4262	E1101006240	1nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4263	E1101006240	1nF;50V;10%;X7R;1005;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			C4264	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4265	08-12461Z01	LLL153C80J104ME01E
I.MX-P.W.Board(Main-unit)			C4266	E1101006240	1nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4267	E1101006240	1nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4268	E1101010810	47uF;6.3V;20%;X5R;3216;TP
I.MX-P.W.Board(Main-unit)			C4269	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4270	E1101010810	47uF;6.3V;20%;X5R;3216;TP
I.MX-P.W.Board(Main-unit)			C4271	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4300	E1101010240	1uF;25V;K;X7R;1608;TP
I.MX-P.W.Board(Main-unit)			C4301	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4302	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4400	E1101006560	220nF;10V;10%;X5R;1005;CP
I.MX-P.W.Board(Main-unit)			C4401	E1101006560	220nF;10V;10%;X5R;1005;CP
I.MX-P.W.Board(Main-unit)			C4402	E1101006560	220nF;10V;10%;X5R;1005;CP
I.MX-P.W.Board(Main-unit)			C4403	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4404	E1101009080	4.7uF;16V;10%;X5R;2012;TP
I.MX-P.W.Board(Main-unit)			C4500	E1101006560	220nF;10V;10%;X5R;1005;CP
I.MX-P.W.Board(Main-unit)			C4600	E1101006560	220nF;10V;10%;X5R;1005;CP
I.MX-P.W.Board(Main-unit)			C4601	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4602	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4603	E1101006220	10nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C4700	E1101006560	220nF;10V;10%;X5R;1005;CP
I.MX-P.W.Board(Main-unit)			C5200	E1101009770	22uF;16V;10%;X5R;3216;TP
I.MX-P.W.Board(Main-unit)			C5201	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5202	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5203	E1101006220	10nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5204	E1101009220	100nF;16V;10%;X7R;1005;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			C5205	E1101006220	10nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5206	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5207	E1101006220	10nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5208	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5209	E1101006220	10nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5210	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5211	E1101006220	10nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5212	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5213	E1101006220	10nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5214	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5215	E1101006220	10nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5216	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5217	E1101006220	10nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5218	E1101009130	2.2uF;16V;10%;X7R;2012;TP
I.MX-P.W.Board(Main-unit)			C5219	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5220	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5221	E1101006220	10nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5222	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5223	E1101006220	10nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5224	E1101008080	1000pF;1kV;10%;X7R;3216;CP
I.MX-P.W.Board(Main-unit)			C5225	E1101009020	220nF;50V;K;X7R;2012;TP
I.MX-P.W.Board(Main-unit)			C5226	E1101008080	1000pF;1kV;10%;X7R;3216;CP
I.MX-P.W.Board(Main-unit)			C5227	E1101006440	15pF;50V;5%;NPO;1005;CP
I.MX-P.W.Board(Main-unit)			C5228	E1101006440	15pF;50V;5%;NPO;1005;CP
I.MX-P.W.Board(Main-unit)			C5300	E1101007930	10uF;10V;K;X5R;2012;TP
I.MX-P.W.Board(Main-unit)			C5301	E1101010240	1uF;25V;K;X7R;1608;TP
I.MX-P.W.Board(Main-unit)			C5302	E1101009220	100nF;16V;10%;X7R;1005;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			C5303	E1101010240	1uF;25V;K;X7R;1608;TP
I.MX-P.W.Board(Main-unit)			C5304	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5305	E1101010240	1uF;25V;K;X7R;1608;TP
I.MX-P.W.Board(Main-unit)			C5306	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5307	E1101006220	10nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5308	E1101006240	1nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5309	E1101006220	10nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5310	E1101006240	1nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5311	E1101007930	10uF;10V;K;X5R;2012;TP
I.MX-P.W.Board(Main-unit)			C5312	E1101010240	1uF;25V;K;X7R;1608;TP
I.MX-P.W.Board(Main-unit)			C5313	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5314	E1101010240	1uF;25V;K;X7R;1608;TP
I.MX-P.W.Board(Main-unit)			C5315	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5316	E1101010240	1uF;25V;K;X7R;1608;TP
I.MX-P.W.Board(Main-unit)			C5317	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5318	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5319	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5320	E1101010240	1uF;25V;K;X7R;1608;TP
I.MX-P.W.Board(Main-unit)			C5321	E1101010240	1uF;25V;K;X7R;1608;TP
I.MX-P.W.Board(Main-unit)			C5322	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5323	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5324	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5325	E1101006220	10nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5326	E1101010820	8pF;50V;C;COG;1005;TP
I.MX-P.W.Board(Main-unit)			C5327	E1101007850	10pF;50V;J;NPO;1005;TP
I.MX-P.W.Board(Main-unit)			C5500	E1101006560	220nF;10V;10%;X5R;1005;CP
I.MX-P.W.Board(Main-unit)			C5501	E1101006560	220nF;10V;10%;X5R;1005;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			C5502	E1101006560	220nF;10V;10%;X5R;1005;CP
I.MX-P.W.Board(Main-unit)			C5503	E1101006560	220nF;10V;10%;X5R;1005;CP
I.MX-P.W.Board(Main-unit)			C5504	E1101006560	220nF;10V;10%;X5R;1005;CP
I.MX-P.W.Board(Main-unit)			C5505	E1101006560	220nF;10V;10%;X5R;1005;CP
I.MX-P.W.Board(Main-unit)			C5506	E1101006560	220nF;10V;10%;X5R;1005;CP
I.MX-P.W.Board(Main-unit)			C5509	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5510	E1101010240	1uF;25V;K;X7R;1608;TP
I.MX-P.W.Board(Main-unit)			C5511	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5512	E1101009080	4.7uF;16V;10%;X5R;2012;TP
I.MX-P.W.Board(Main-unit)			C5513	E1101009080	4.7uF;16V;10%;X5R;2012;TP
I.MX-P.W.Board(Main-unit)			C5514	E1101007930	10uF;10V;K;X5R;2012;TP
I.MX-P.W.Board(Main-unit)			C5515	E1101010240	1uF;25V;K;X7R;1608;TP
I.MX-P.W.Board(Main-unit)			C5516	E1101007930	10uF;10V;K;X5R;2012;TP
I.MX-P.W.Board(Main-unit)			C5517	E1101007930	10uF;10V;K;X5R;2012;TP
I.MX-P.W.Board(Main-unit)			C5518	E1101010240	1uF;25V;K;X7R;1608;TP
I.MX-P.W.Board(Main-unit)			C5519	E1101007930	10uF;10V;K;X5R;2012;TP
I.MX-P.W.Board(Main-unit)			C5600	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5601	E1101009770	22uF;16V;10%;X5R;3216;TP
I.MX-P.W.Board(Main-unit)			C5602	E1101009770	22uF;16V;10%;X5R;3216;TP
I.MX-P.W.Board(Main-unit)			C5603	E1101010240	1uF;25V;K;X7R;1608;TP
I.MX-P.W.Board(Main-unit)			C5604	E1101010240	1uF;25V;K;X7R;1608;TP
I.MX-P.W.Board(Main-unit)			C5605	E1101010240	1uF;25V;K;X7R;1608;TP
I.MX-P.W.Board(Main-unit)			C5606	E1101010240	1uF;25V;K;X7R;1608;TP
I.MX-P.W.Board(Main-unit)			C5607	E1101006700	100pF;50V;5%;NPO;1005;CP
I.MX-P.W.Board(Main-unit)			C5608	E1101009770	22uF;16V;10%;X5R;3216;TP
I.MX-P.W.Board(Main-unit)			C5609	E1101009770	22uF;16V;10%;X5R;3216;TP
I.MX-P.W.Board(Main-unit)			C5610	E1101009190	0.22uF;25V;10%;X7R;1608;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			C5611	E1101006700	100pF;50V;5%;NPO;1005;CP
I.MX-P.W.Board(Main-unit)			C5612	E1101009770	22uF;16V;10%;X5R;3216;TP
I.MX-P.W.Board(Main-unit)			C5613	E1101009770	22uF;16V;10%;X5R;3216;TP
I.MX-P.W.Board(Main-unit)			C5614	E1101009190	0.22uF;25V;10%;X7R;1608;CP
I.MX-P.W.Board(Main-unit)			C5615	E1101006700	100pF;50V;5%;NPO;1005;CP
I.MX-P.W.Board(Main-unit)			C5616	E1101009770	22uF;16V;10%;X5R;3216;TP
I.MX-P.W.Board(Main-unit)			C5617	E1101009770	22uF;16V;10%;X5R;3216;TP
I.MX-P.W.Board(Main-unit)			C5618	E1101009190	0.22uF;25V;10%;X7R;1608;CP
I.MX-P.W.Board(Main-unit)			C5619	E1101006700	100pF;50V;5%;NPO;1005;CP
I.MX-P.W.Board(Main-unit)			C5620	E1101009770	22uF;16V;10%;X5R;3216;TP
I.MX-P.W.Board(Main-unit)			C5621	E1101009770	22uF;16V;10%;X5R;3216;TP
I.MX-P.W.Board(Main-unit)			C5622	E1101009190	0.22uF;25V;10%;X7R;1608;CP
I.MX-P.W.Board(Main-unit)			C5623	E1101010240	1uF;25V;K;X7R;1608;TP
I.MX-P.W.Board(Main-unit)			C5624	E1101009190	0.22uF;25V;10%;X7R;1608;CP
I.MX-P.W.Board(Main-unit)			C5625	E1101010240	1uF;25V;K;X7R;1608;TP
I.MX-P.W.Board(Main-unit)			C5626	E1101010240	1uF;25V;K;X7R;1608;TP
I.MX-P.W.Board(Main-unit)			C5627	E1101009190	0.22uF;25V;10%;X7R;1608;CP
I.MX-P.W.Board(Main-unit)			C5628	E1101010240	1uF;25V;K;X7R;1608;TP
I.MX-P.W.Board(Main-unit)			C5629	E1101010240	1uF;25V;K;X7R;1608;TP
I.MX-P.W.Board(Main-unit)			C5630	E1101009190	0.22uF;25V;10%;X7R;1608;CP
I.MX-P.W.Board(Main-unit)			C5631	E1101010240	1uF;25V;K;X7R;1608;TP
I.MX-P.W.Board(Main-unit)			C5632	E1101010240	1uF;25V;K;X7R;1608;TP
I.MX-P.W.Board(Main-unit)			C5633	E1101009190	0.22uF;25V;10%;X7R;1608;CP
I.MX-P.W.Board(Main-unit)			C5637	E1101010010	100uF;6.3V;20%;X5R;3216;CP
I.MX-P.W.Board(Main-unit)			C5638	E1101010010	100uF;6.3V;20%;X5R;3216;CP
I.MX-P.W.Board(Main-unit)			C5650	E1101007950	10uF;25V;10%;X5R;3225;CP
I.MX-P.W.Board(Main-unit)			C5651	E1101009360	3.3nF;50V;10%;X7R;1005;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			C5652	E1101004040	470pF;50V;10%;X7R;1005;CP
I.MX-P.W.Board(Main-unit)			C5653	E1101006700	100pF;50V;5%;NPO;1005;CP
I.MX-P.W.Board(Main-unit)			C5655	E1101010010	100uF;6.3V;20%;X5R;3216;CP
I.MX-P.W.Board(Main-unit)			C5657	E1101009020	220nF;50V;K;X7R;2012;TP
I.MX-P.W.Board(Main-unit)			C5659	E1101009020	220nF;50V;K;X7R;2012;TP
I.MX-P.W.Board(Main-unit)			C5680	E1101009020	220nF;50V;K;X7R;2012;TP
I.MX-P.W.Board(Main-unit)			C5702	E1101010240	1uF;25V;K;X7R;1608;TP
I.MX-P.W.Board(Main-unit)			C5703	E1101007950	10uF;25V;10%;X5R;3225;CP
I.MX-P.W.Board(Main-unit)			C5704	E1101007950	10uF;25V;10%;X5R;3225;CP
I.MX-P.W.Board(Main-unit)			C5705	E1101009380	4.7uF;50V;10%;X7R;3216;TP
I.MX-P.W.Board(Main-unit)			C5706	E1101007420	100nF;50V;10%;X7R;1608;TP
I.MX-P.W.Board(Main-unit)			C5707	E1101009770	22uF;16V;10%;X5R;3216;TP
I.MX-P.W.Board(Main-unit)			C5708	E1101009020	220nF;50V;K;X7R;2012;TP
I.MX-P.W.Board(Main-unit)			C5709	E1101009380	4.7uF;50V;10%;X7R;3216;TP
I.MX-P.W.Board(Main-unit)			C5710	E1101010240	1uF;25V;K;X7R;1608;TP
I.MX-P.W.Board(Main-unit)			C5711	E1101006240	1nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5712	E1101007850	10pF;50V;J;NPO;1005;TP
I.MX-P.W.Board(Main-unit)			C5713	E1101006240	1nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C5715	E1101006070	3.9pF;50V;C;COG;1005;CP
I.MX-P.W.Board(Main-unit)			C5716	E1101006070	3.9pF;50V;C;COG;1005;CP
I.MX-P.W.Board(Main-unit)			C6004	E1101006220	10nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C6007	E1101009770	22uF;16V;10%;X5R;3216;TP
I.MX-P.W.Board(Main-unit)			C6008	E1101009020	220nF;50V;K;X7R;2012;TP
I.MX-P.W.Board(Main-unit)			C6009	E1101009030	3.3uF;25V;10%;X7R;3216;TP
I.MX-P.W.Board(Main-unit)			C6014	E1101006560	220nF;10V;10%;X5R;1005;CP
I.MX-P.W.Board(Main-unit)			C6103	E1101006220	10nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C6104	E1101006220	10nF;50V;10%;X7R;1005;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			C6105	E1101006220	10nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C6106	E1101009220	100nF;16V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C6107	E1101006220	10nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C6108	E1101006220	10nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C6109	E1101006220	10nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C6110	E1101006220	10nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C6111	E1101006220	10nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C6112	E1101006220	10nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C6300	E1101006220	10nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C6301	E1101006220	10nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C6302	E1101006220	10nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C6303	E1101009020	220nF;50V;K;X7R;2012;TP
I.MX-P.W.Board(Main-unit)			C6310	E1101009020	220nF;50V;K;X7R;2012;TP
I.MX-P.W.Board(Main-unit)			C6311	E1101009020	220nF;50V;K;X7R;2012;TP
I.MX-P.W.Board(Main-unit)			C6313	E1101009020	220nF;50V;K;X7R;2012;TP
I.MX-P.W.Board(Main-unit)			C6314	E1101009020	220nF;50V;K;X7R;2012;TP
I.MX-P.W.Board(Main-unit)			C6315	E1101009020	220nF;50V;K;X7R;2012;TP
I.MX-P.W.Board(Main-unit)			C6320	E1101006240	1nF;50V;10%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C6400	E1101001830	47nF;25V;K;X7R;1.6X0.8;CP
I.MX-P.W.Board(Main-unit)			C6401	E1101009390	4.7uF;25V;10%;X7R;3216;TP
I.MX-P.W.Board(Main-unit)			C6402	E1101009390	4.7uF;25V;10%;X7R;3216;TP
I.MX-P.W.Board(Main-unit)			C6403	E1101006560	220nF;10V;10%;X5R;1005;CP
I.MX-P.W.Board(Main-unit)			C6404	E1101001830	47nF;25V;K;X7R;1.6X0.8;CP
I.MX-P.W.Board(Main-unit)			C6405	E1101009390	4.7uF;25V;10%;X7R;3216;TP
I.MX-P.W.Board(Main-unit)			C6406	E1101009390	4.7uF;25V;10%;X7R;3216;TP
I.MX-P.W.Board(Main-unit)			C6407	E1101006560	220nF;10V;10%;X5R;1005;CP
I.MX-P.W.Board(Main-unit)			C6412	E1101006560	220nF;10V;10%;X5R;1005;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			C6413	E1101006560	220nF;10V;10%;X5R;1005;CP
I.MX-P.W.Board(Main-unit)			C6414	E1101007650	10uF;25V;10%;X5R;3216;TP
I.MX-P.W.Board(Main-unit)			C6415	E1101007650	10uF;25V;10%;X5R;3216;TP
I.MX-P.W.Board(Main-unit)			C6416	E1101007380	10nF;50V;10%;X7R;1608;TP
I.MX-P.W.Board(Main-unit)			C6417	E1101007650	10uF;25V;10%;X5R;3216;TP
I.MX-P.W.Board(Main-unit)			C6418	E1101004630	330pF;50V;5%;X7R;1005;TP
I.MX-P.W.Board(Main-unit)			C6419	E1101006700	100pF;50V;5%;NPO;1005;CP
I.MX-P.W.Board(Main-unit)			C6420	E1101007650	10uF;25V;10%;X5R;3216;TP
I.MX-P.W.Board(Main-unit)			C6421	E1101007650	10uF;25V;10%;X5R;3216;TP
I.MX-P.W.Board(Main-unit)			C6422	E1101006700	100pF;50V;5%;NPO;1005;CP
I.MX-P.W.Board(Main-unit)			C6423	E1101008080	1000pF;1kV;10%;X7R;3216;CP
I.MX-P.W.Board(Main-unit)			C6424	E1101007930	10uF;10V;K;X5R;2012;TP
I.MX-P.W.Board(Main-unit)			C6425	E1101006560	220nF;10V;10%;X5R;1005;CP
I.MX-P.W.Board(Main-unit)			C6426	E1101006560	220nF;10V;10%;X5R;1005;CP
I.MX-P.W.Board(Main-unit)			C6427	E1101006450	22pF;50V;5%;NPO;1005;CP
I.MX-P.W.Board(Main-unit)			C6428	E1101009020	220nF;50V;K;X7R;2012;TP
I.MX-P.W.Board(Main-unit)			C6429	E1101006450	22pF;50V;5%;NPO;1005;CP
I.MX-P.W.Board(Main-unit)			C6430	E1101007930	10uF;10V;K;X5R;2012;TP
I.MX-P.W.Board(Main-unit)			C6431	E1101007650	10uF;25V;10%;X5R;3216;TP
I.MX-P.W.Board(Main-unit)			C6432	E1101006700	100pF;50V;5%;NPO;1005;CP
I.MX-P.W.Board(Main-unit)			C6433	E1101006700	100pF;50V;5%;NPO;1005;CP
I.MX-P.W.Board(Main-unit)			CB4001	09-14451Z06	502790-3091 -ED
I.MX-P.W.Board(Main-unit)			CB5200	09-25213Z01	TCX3400-011187-T
I.MX-P.W.Board(Main-unit)			CB6100	09-19907Z03	IMSA9984B-100YEZ
I.MX-P.W.Board(Main-unit)			CB6200	09-29915Z04	50FHH-SM1-GAN-TF
I.MX-P.W.Board(Main-unit)			CB6300	09-29652Z01	FX23-100P-0.5S-T
I.MX-P.W.Board(Main-unit)			CB6400	09-25106Z05	S18B-PUDSS-1

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			D4700	48-05965Z01	DIO,1SS361-L -CP
I.MX-P.W.Board(Main-unit)			D5204	48-05164Z01	1SS352-TPH3 -CP
I.MX-P.W.Board(Main-unit)			D6401	E1403000190	1SR154-400;400V;1.0A;SOD-106;CP
I.MX-P.W.Board(Main-unit)			E4000	23-22657Z06	220uF;6.3V;10%;*;7.3x4.3x1.9;*;TP
I.MX-P.W.Board(Main-unit)			E4001	23-22657Z06	220uF;6.3V;10%;*;7.3x4.3x1.9;*;TP
I.MX-P.W.Board(Main-unit)			E5700	E1103012990	100uF;16V;20%;A10;6.3X5.7;*;105C;TP
I.MX-P.W.Board(Main-unit)			E5701	E1103012750	33uF;25V;20%;MVK;6.6x5.2;7.2mm;105;TP
I.MX-P.W.Board(Main-unit)			E6310	E1103012750	33uF;25V;20%;MVK;6.6x5.2;7.2mm;105;TP
I.MX-P.W.Board(Main-unit)			F6200	65-10745Z09	TF16AT 2.00A-CP
I.MX-P.W.Board(Main-unit)			IC4000	51-29541Z01	MCIMX6D6AVT08AD
I.MX-P.W.Board(Main-unit)			IC4200	51-34669Z01	H5TQ4G63EFR-RDC -BT
I.MX-P.W.Board(Main-unit)			IC4201	51-34669Z01	H5TQ4G63EFR-RDC -BT
I.MX-P.W.Board(Main-unit)			IC4202	51-34669Z01	H5TQ4G63EFR-RDC -BT
I.MX-P.W.Board(Main-unit)			IC4203	51-34669Z01	H5TQ4G63EFR-RDC -BT
I.MX-P.W.Board(Main-unit)			IC4300	51-27465Z01	S29GL256S90TFI010-ST
I.MX-P.W.Board(Main-unit)			IC4400	51-34725Z02	H26M41208HPRN -BT
I.MX-P.W.Board(Main-unit)			IC4500	51-26850Z01	MFI337S3959 -CP
I.MX-P.W.Board(Main-unit)			IC4600	51T15185Y03	TC7SH08FU,LJ -CP
I.MX-P.W.Board(Main-unit)			IC4601	51T65003Y03	TC7SZ05FU,LJ -CP
I.MX-P.W.Board(Main-unit)			IC4602	51T65003Y03	TC7SZ05FU,LJ -CP
I.MX-P.W.Board(Main-unit)			IC4700	51T35220Y01	TC7WH126FU-TE12L-SE1
I.MX-P.W.Board(Main-unit)			IC4702	51T25238Y05	TC7SH32FU,LJ -CP
I.MX-P.W.Board(Main-unit)			IC5200	51-29819Z01	ADV7480WBBCZ -BT
I.MX-P.W.Board(Main-unit)			IC5300	51-29818Z01	ML86V8201 -QT
I.MX-P.W.Board(Main-unit)			IC5500	51-29718Z01	UGKZ4D6009B -NE9
I.MX-P.W.Board(Main-unit)			IC5501	51-13971Z01	TC74VCX08FT-EL -SE5
I.MX-P.W.Board(Main-unit)			IC5502	51-31856Z01	TC7WPB9306FK -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			IC5503	51-31856Z01	TC7WPB9306FK -CP
I.MX-P.W.Board(Main-unit)			IC5504	51-31856Z01	TC7WPB9306FK -CP
I.MX-P.W.Board(Main-unit)			IC5600	51-29896Z01	LTC3676HUJ#TRA1 -LE6
I.MX-P.W.Board(Main-unit)			IC5650	E1605009450	BD90640EFJ-C;HTSOP-J8;8P;3.3V;CP
I.MX-P.W.Board(Main-unit)			IC5700	51-32064Z01	MAX16987RATI/V+ -LE2
I.MX-P.W.Board(Main-unit)			IC6001	51-23593Z02	BD00IC0WEFJ-ME2 -SE2
I.MX-P.W.Board(Main-unit)			IC6400	E1501001920	BH7073G;*;540mW;SSOP5;*;TP
I.MX-P.W.Board(Main-unit)			IC6401	E1501001920	BH7073G;*;540mW;SSOP5;*;TP
I.MX-P.W.Board(Main-unit)			IC6403	51T25183Y04	TC7SET08FU,LJ -CP
I.MX-P.W.Board(Main-unit)			IC6404	51T15185Y03	TC7SH08FU,LJ -CP
I.MX-P.W.Board(Main-unit)			IC6405	51-31236Z01	ML22331 -ST
I.MX-P.W.Board(Main-unit)			L5502	24-22766Z01	LBC3225 2R2M -CP
I.MX-P.W.Board(Main-unit)			L5503	24-22766Z03	LBC3225 1R0M -CP
I.MX-P.W.Board(Main-unit)			L5504	24T25164Y09	#FSLM2520-R47J=P2
I.MX-P.W.Board(Main-unit)			L5600	24-22372Z05	NRS6045T 2R3N-E2
I.MX-P.W.Board(Main-unit)			L5601	24-22372Z05	NRS6045T 2R3N-E2
I.MX-P.W.Board(Main-unit)			L5602	24-22372Z05	NRS6045T 2R3N-E2
I.MX-P.W.Board(Main-unit)			L5603	24-22372Z05	NRS6045T 2R3N-E2
I.MX-P.W.Board(Main-unit)			L5650	24-22372Z05	NRS6045T 2R3N-E2
I.MX-P.W.Board(Main-unit)			L5651	24-08610Z03	DS106C2 10RM -EA
I.MX-P.W.Board(Main-unit)			L5700	24-23871Z01	NRS8040T 10RM-E6
I.MX-P.W.Board(Main-unit)			L5701	24T95458W06	BLM31PG121SH1-CP
I.MX-P.W.Board(Main-unit)			L5704	24T75143Y13	HK1005 R01J -CP
I.MX-P.W.Board(Main-unit)			L5705	24T75143Y13	HK1005 R01J -CP
I.MX-P.W.Board(Main-unit)			L5723	24T75143Y14	HK1005 R012J -CP
I.MX-P.W.Board(Main-unit)			L5725	24T75143Y14	HK1005 R012J -CP
I.MX-P.W.Board(Main-unit)			L6400	24T65067Y02	MMZ1005S601AT-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			L6401	24T65067Y02	MMZ1005S601AT-CP
I.MX-P.W.Board(Main-unit)			PS6400	E2801000670	24V;1.5A;4.37x3.07x0.80;*
I.MX-P.W.Board(Main-unit)			Q4000	48-18270Z01	LSA1576UB FS8 -CP
I.MX-P.W.Board(Main-unit)			Q4001	48-13000Z05	LTC124EUBFS8-TLCP
I.MX-P.W.Board(Main-unit)			Q4700	48-12999Z01	LTA114EUBFS8-TLCP
I.MX-P.W.Board(Main-unit)			Q5200	E1506000300	UMD3N;*;150mW;UMT6;*;6;TP
I.MX-P.W.Board(Main-unit)			R4000	E1001024820	2.2Mohm;J;1/16W;*;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R4001	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4003	E1001016860	1Mohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4005	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4006	E1001016720	1Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4007	E1001016740	2.2Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4008	E1001016740	2.2Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4009	E1001016740	2.2Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4010	E1001016740	2.2Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4011	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4012	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4013	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4014	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4015	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4016	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4017	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4018	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4020	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4021	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4022	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4023	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			R4024	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4025	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4026	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4027	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4028	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4030	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4031	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4032	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4033	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4034	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4035	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4036	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4037	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4038	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4044	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4045	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4046	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4047	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4048	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4049	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4050	E1001016740	2.2Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4051	E1001016740	2.2Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4052	E1001024230	68ohm;J;1/16W;DA;1005;TP
I.MX-P.W.Board(Main-unit)			R4053	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4054	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4055	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4056	E1001020810	240ohm;F;1/16;*;1.0X0.5;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			R4058	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4059	E1001016720	1Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4060	E1001016720	1Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4061	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4062	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4064	E1001016980	0ohm;J;1/16;DA;1.6X0.8;CP
I.MX-P.W.Board(Main-unit)			R4065	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4066	E1001016720	1Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4068	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4069	E1001012140	24Kohm;F;1/16W;DA;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R4070	E1001011660	330Kohm;F;1/16W;DA;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R4071	E1001017870	5.6Kohm;F;1/16;*;1.0X0.5;*
I.MX-P.W.Board(Main-unit)			R4073	E1001016980	0ohm;J;1/16;DA;1.6X0.8;CP
I.MX-P.W.Board(Main-unit)			R4074	E1001024840	6.04Kohm;F;1/16W;*;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R4076	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4077	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4079	E1001011500	82Kohm;F;1/16W;DA;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R4080	E1001018940	5.1Kohm;F;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4086	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4087	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4102	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4103	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4104	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4105	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4106	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4108	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4200	E1001018710	200ohm;F;1/16W;DA;1.0X0.5;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			R4201	E1001019470	1Kohm;F;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4202	E1001019470	1Kohm;F;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4203	E1001019470	1Kohm;F;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4204	E1001019470	1Kohm;F;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4205	E1001020810	240ohm;F;1/16;*;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4206	E1001018710	200ohm;F;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4207	E1001019470	1Kohm;F;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4208	E1001019470	1Kohm;F;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4209	E1001019470	1Kohm;F;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4210	E1001019470	1Kohm;F;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4211	E1001020810	240ohm;F;1/16;*;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4212	E1001018710	200ohm;F;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4213	E1001019470	1Kohm;F;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4214	E1001019470	1Kohm;F;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4215	E1001019470	1Kohm;F;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4216	E1001019470	1Kohm;F;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4217	E1001020810	240ohm;F;1/16;*;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4218	E1001018710	200ohm;F;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4219	E1001019470	1Kohm;F;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4220	E1001019470	1Kohm;F;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4221	E1001019470	1Kohm;F;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4222	E1001019470	1Kohm;F;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4223	E1001020810	240ohm;F;1/16;*;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4300	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4303	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4304	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4305	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			R4306	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4307	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4308	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4309	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4310	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4311	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4312	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4314	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4315	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4316	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4317	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4318	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4319	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4320	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4321	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4322	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4323	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4324	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4325	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4326	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4327	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)		$1	R4329	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)		%1	R4330	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4332	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4336	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)		#1	R4337	E1001004330	10Kohm;J;1/16W;DA;1.6X0.8;CP
I.MX-P.W.Board(Main-unit)		%1	R4337	E1001004330	10Kohm;J;1/16W;DA;1.6X0.8;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)		#1	R4338	E1001004330	10Kohm;J;1/16W;DA;1.6X0.8;CP
I.MX-P.W.Board(Main-unit)		$1	R4338	E1001004330	10Kohm;J;1/16W;DA;1.6X0.8;CP
I.MX-P.W.Board(Main-unit)			R4339	E1001004330	10Kohm;J;1/16W;DA;1.6X0.8;CP
I.MX-P.W.Board(Main-unit)			R4340	E1001004330	10Kohm;J;1/16W;DA;1.6X0.8;CP
I.MX-P.W.Board(Main-unit)			R4341	E1001004330	10Kohm;J;1/16W;DA;1.6X0.8;CP
I.MX-P.W.Board(Main-unit)			R4400	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4401	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4402	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4403	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4404	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4405	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4406	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4407	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4408	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4409	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4410	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4411	E1001016980	0ohm;J;1/16;DA;1.6X0.8;CP
I.MX-P.W.Board(Main-unit)			R4500	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4501	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4601	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4602	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4603	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4604	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4700	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4701	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4702	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R4703	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			R4706	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R4707	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5200	E1001016980	0ohm;J;1/16;DA;1.6X0.8;CP
I.MX-P.W.Board(Main-unit)			R5201	E1001016980	0ohm;J;1/16;DA;1.6X0.8;CP
I.MX-P.W.Board(Main-unit)			R5202	E1001016980	0ohm;J;1/16;DA;1.6X0.8;CP
I.MX-P.W.Board(Main-unit)			R5203	E1001016980	0ohm;J;1/16;DA;1.6X0.8;CP
I.MX-P.W.Board(Main-unit)			R5204	E1001016980	0ohm;J;1/16;DA;1.6X0.8;CP
I.MX-P.W.Board(Main-unit)			R5205	E1001016980	0ohm;J;1/16;DA;1.6X0.8;CP
I.MX-P.W.Board(Main-unit)			R5206	E1001006800	1Kohm;J;1/4W;DA;3.2X1.6;CP
I.MX-P.W.Board(Main-unit)			R5207	E1001006620	100ohm;J;1/4W;DA;3.2X1.6;CP
I.MX-P.W.Board(Main-unit)			R5208	E1001006620	100ohm;J;1/4W;DA;3.2X1.6;CP
I.MX-P.W.Board(Main-unit)			R5209	E1001006620	100ohm;J;1/4W;DA;3.2X1.6;CP
I.MX-P.W.Board(Main-unit)			R5210	E1001016820	47Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5212	E1001016980	0ohm;J;1/16;DA;1.6X0.8;CP
I.MX-P.W.Board(Main-unit)			R5213	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R5214	E1001016300	27Kohm;J;1/16W;*;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R5216	E1001016260	470ohm;J;1/16W;*;1X0.5;TP
I.MX-P.W.Board(Main-unit)			R5217	E1001016840	100Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5218	E1001016820	47Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5227	E1001018140	4.7Kohm;F;1/16;DA;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R5228	E1001018140	4.7Kohm;F;1/16;DA;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R5230	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5232	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5233	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5234	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5235	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5236	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			R5248	E1001018140	4.7Kohm;F;1/16;DA;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R5300	E1001016980	0ohm;J;1/16;DA;1.6X0.8;CP
I.MX-P.W.Board(Main-unit)			R5301	E1001016980	0ohm;J;1/16;DA;1.6X0.8;CP
I.MX-P.W.Board(Main-unit)			R5302	E1001016980	0ohm;J;1/16;DA;1.6X0.8;CP
I.MX-P.W.Board(Main-unit)			R5303	E1001016980	0ohm;J;1/16;DA;1.6X0.8;CP
I.MX-P.W.Board(Main-unit)			R5304	E1001016980	0ohm;J;1/16;DA;1.6X0.8;CP
I.MX-P.W.Board(Main-unit)			R5305	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5306	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5308	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5309	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5312	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5313	E1001016860	1Mohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5314	E1001016720	1Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5316	E1001016690	33ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5317	E1001016690	33ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5318	E1001016690	33ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5319	E1001016690	33ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5320	E1001016690	33ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5321	E1001016690	33ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5322	E1001016690	33ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5323	E1001016690	33ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5324	E1001016690	33ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5406	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5407	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5408	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5450	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5451	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			R5452	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5453	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5454	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5455	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5456	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5457	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5458	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5459	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5500	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5501	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5502	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5503	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5504	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5505	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5506	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5507	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5508	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5509	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5510	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5511	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5512	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5513	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5514	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5520	E1001016980	0ohm;J;1/16;DA;1.6X0.8;CP
I.MX-P.W.Board(Main-unit)			R5521	E1001016980	0ohm;J;1/16;DA;1.6X0.8;CP
I.MX-P.W.Board(Main-unit)			R5522	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5523	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			R5524	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5525	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5526	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5527	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5528	E1001016750	4.7Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5529	E1001016720	1Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5530	E1001016720	1Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5531	E1001016720	1Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5532	E1001016750	4.7Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5533	E1001016720	1Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5534	E1001016720	1Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5535	E1001016750	4.7Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5536	E1001016720	1Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5537	E1001016720	1Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5538	E1001016750	4.7Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5539	E1001016750	4.7Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5540	E1001016720	1Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5541	E1001016750	4.7Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5600	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5601	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5602	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5603	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5604	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5605	E1001011470	68Kohm;F;1/16W;DA;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R5606	E1001021040	2.2Kohm;F;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5607	E1001011470	68Kohm;F;1/16W;DA;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R5608	E1001018140	4.7Kohm;F;1/16;DA;1.0X0.5;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			R5609	E1001018940	5.1Kohm;F;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5610	E1001010920	130Kohm;F;1/16W;DA;1005;CP
I.MX-P.W.Board(Main-unit)			R5611	E1001011470	68Kohm;F;1/16W;DA;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R5612	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5613	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R5614	E1001016260	470ohm;J;1/16W;*;1X0.5;TP
I.MX-P.W.Board(Main-unit)			R5615	E1001017700	200K;F;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5616	E1001017870	5.6Kohm;F;1/16;*;1.0X0.5;*
I.MX-P.W.Board(Main-unit)			R5617	E1001011470	68Kohm;F;1/16W;DA;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R5618	E1001021040	2.2Kohm;F;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5619	E1001011470	68Kohm;F;1/16W;DA;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R5620	E1001018140	4.7Kohm;F;1/16;DA;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R5621	E1001024850	430Kohm;F;1/16W;*;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R5622	E1001016310	75Kohm;F;1/16W;*;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R5623	E1001011470	68Kohm;F;1/16W;DA;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R5624	E1001018140	4.7Kohm;F;1/16;DA;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R5625	E1001011470	68Kohm;F;1/16W;DA;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R5627	E1001024860	160Kohm;F;1/16W;*;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R5628	E1001018940	5.1Kohm;F;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5629	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R5630	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5631	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5632	E1001016260	470ohm;J;1/16W;*;1X0.5;TP
I.MX-P.W.Board(Main-unit)			R5633	E1001011470	68Kohm;F;1/16W;DA;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R5634	E1001011350	2.7Kohm;F;1/16W;DA;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R5635	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R5636	E1001016260	470ohm;J;1/16W;*;1X0.5;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			R5637	E1001011450	62Kohm;F;1/16W;DA;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R5638	E1001012020	6.2Kohm;F;1/16W;DA;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R5639	E1001011470	68Kohm;F;1/16W;DA;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R5640	E1001016260	470ohm;J;1/16W;*;1X0.5;TP
I.MX-P.W.Board(Main-unit)			R5641	E1001012030	6.8Kohm;F;1/16W;DA;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R5642	E1001012200	39Kohm;F;1/16W;DA;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R5643	E1001017700	200K;F;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5644	E1001016310	75Kohm;F;1/16W;*;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R5645	E1001016260	470ohm;J;1/16W;*;1X0.5;TP
I.MX-P.W.Board(Main-unit)			R5646	E1001016260	470ohm;J;1/16W;*;1X0.5;TP
I.MX-P.W.Board(Main-unit)			R5647	E1001016260	470ohm;J;1/16W;*;1X0.5;TP
I.MX-P.W.Board(Main-unit)			R5648	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5650	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5651	E1001017850	5.6Kohm;J;1/16W;*;1.0x0.5mm;CP
I.MX-P.W.Board(Main-unit)			R5652	E1001019480	3.3Kohm;F;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5653	E1001011300	1.2Kohm;F;1/16W;DA;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R5654	E1001016790	12Kohm;F;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5655	E1001010930	27Kohm;F;1/16W;DA;1005;CP
I.MX-P.W.Board(Main-unit)			R5657	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5658	E1001011650	390Kohm;F;1/16W;DA;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R5659	E1001017870	5.6Kohm;F;1/16;*;1.0X0.5;*
I.MX-P.W.Board(Main-unit)			R5680	E1001016720	1Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5700	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5701	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5702	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5704	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5706	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			R5707	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5708	E1001011430	56Kohm;F;1/16W;DA;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R5710	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5712	E1001016980	0ohm;J;1/16;DA;1.6X0.8;CP
I.MX-P.W.Board(Main-unit)			R5713	E1001024830	0.1ohm;F;1/10W;*;1.6X0.8;TP
I.MX-P.W.Board(Main-unit)			R5714	E1001024830	0.1ohm;F;1/10W;*;1.6X0.8;TP
I.MX-P.W.Board(Main-unit)			R5715	E1001011350	2.7Kohm;F;1/16W;DA;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R5716	E1001018640	220ohm;F;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5717	E1001011410	3.9Kohm;F;1/16W;DA;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R5718	E1001018640	220ohm;F;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5719	E1001016980	0ohm;J;1/16;DA;1.6X0.8;CP
I.MX-P.W.Board(Main-unit)			R5721	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5722	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5798	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5808	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R5809	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6000	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6008	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6012	E1001016790	12Kohm;F;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6013	E1001011350	2.7Kohm;F;1/16W;DA;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R6014	E1001018140	4.7Kohm;F;1/16;DA;1.0X0.5;TP
I.MX-P.W.Board(Main-unit)			R6015	E1001005560	68Kohm;F;1/16W;DA;1.6X0.8;CP
I.MX-P.W.Board(Main-unit)			R6016	E1001022690	270kohm;F;1/10W;DA;1.6x0.8;TP
I.MX-P.W.Board(Main-unit)			R6025	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6026	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6027	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6029	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			R6102	E1001016740	2.2Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6103	E1001016740	2.2Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6104	E1001016740	2.2Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6112	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6113	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6114	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6115	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6116	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6119	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6120	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6123	E1001016740	2.2Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6124	E1001016750	4.7Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6125	E1001016750	4.7Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6225	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6226	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6303	E1001016750	4.7Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6304	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6305	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6307	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6308	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6309	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6310	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6311	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6401	E1001006690	330ohm;J;1/4W;DA;3.2X1.6;CP
I.MX-P.W.Board(Main-unit)			R6402	E1001024470	75ohm;F;1/4W;DA;3.2x1.6;TP
I.MX-P.W.Board(Main-unit)			R6403	E1001004100	1Kohm;J;1/16W;DA;1.6X0.8;CP
I.MX-P.W.Board(Main-unit)			R6404	E1001004100	1Kohm;J;1/16W;DA;1.6X0.8;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			R6406	E1001006690	330ohm;J;1/4W;DA;3.2X1.6;CP
I.MX-P.W.Board(Main-unit)			R6407	E1001024470	75ohm;F;1/4W;DA;3.2x1.6;TP
I.MX-P.W.Board(Main-unit)			R6408	E1001004100	1Kohm;J;1/16W;DA;1.6X0.8;CP
I.MX-P.W.Board(Main-unit)			R6409	E1001004100	1Kohm;J;1/16W;DA;1.6X0.8;CP
I.MX-P.W.Board(Main-unit)			R6414	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6415	E1001023210	22kohm;J;1/16W;DA;1.0x0.5;TP
I.MX-P.W.Board(Main-unit)			R6416	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6418	E1001006620	100ohm;J;1/4W;DA;3.2X1.6;CP
I.MX-P.W.Board(Main-unit)			R6419	E1001024010	4.7K;J;1/4;*;3.2X1.6;CP
I.MX-P.W.Board(Main-unit)			R6420	E1001004100	1Kohm;J;1/16W;DA;1.6X0.8;CP
I.MX-P.W.Board(Main-unit)			R6421	E1001006800	1Kohm;J;1/4W;DA;3.2X1.6;CP
I.MX-P.W.Board(Main-unit)			R6422	E1001006800	1Kohm;J;1/4W;DA;3.2X1.6;CP
I.MX-P.W.Board(Main-unit)			R6423	E1001006620	100ohm;J;1/4W;DA;3.2X1.6;CP
I.MX-P.W.Board(Main-unit)			R6424	E1001006800	1Kohm;J;1/4W;DA;3.2X1.6;CP
I.MX-P.W.Board(Main-unit)			R6425	E1001006800	1Kohm;J;1/4W;DA;3.2X1.6;CP
I.MX-P.W.Board(Main-unit)			R6426	E1001006800	1Kohm;J;1/4W;DA;3.2X1.6;CP
I.MX-P.W.Board(Main-unit)			R6427	E1001006800	1Kohm;J;1/4W;DA;3.2X1.6;CP
I.MX-P.W.Board(Main-unit)			R6428	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6431	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6432	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6433	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6434	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6440	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
I.MX-P.W.Board(Main-unit)			R6443	E1001006620	100ohm;J;1/4W;DA;3.2X1.6;CP
I.MX-P.W.Board(Main-unit)			R6444	E1001006800	1Kohm;J;1/4W;DA;3.2X1.6;CP
I.MX-P.W.Board(Main-unit)			RA4000	E1007000480	100ohm;J;1/16W;S;CP;8;1005 CP
I.MX-P.W.Board(Main-unit)			RA4001	E1007000480	100ohm;J;1/16W;S;CP;8;1005 CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			RA4002	E1007000480	100ohm;J;1/16W;S;CP;8;1005 CP
I.MX-P.W.Board(Main-unit)			RA4003	E1007000480	100ohm;J;1/16W;S;CP;8;1005 CP
I.MX-P.W.Board(Main-unit)			RA4004	E1007000480	100ohm;J;1/16W;S;CP;8;1005 CP
I.MX-P.W.Board(Main-unit)			RA4005	E1007000480	100ohm;J;1/16W;S;CP;8;1005 CP
I.MX-P.W.Board(Main-unit)			RA4006	E1007000480	100ohm;J;1/16W;S;CP;8;1005 CP
I.MX-P.W.Board(Main-unit)			RA4007	E1007000480	100ohm;J;1/16W;S;CP;8;1005 CP
I.MX-P.W.Board(Main-unit)			RA4008	E1007000480	100ohm;J;1/16W;S;CP;8;1005 CP
I.MX-P.W.Board(Main-unit)			RA4009	E1007000480	100ohm;J;1/16W;S;CP;8;1005 CP
I.MX-P.W.Board(Main-unit)			SD5650	E1405001220	RB056L-40;40V;3A;PMDS;CP
I.MX-P.W.Board(Main-unit)			SD5700	E1405001220	RB056L-40;40V;3A;PMDS;CP
I.MX-P.W.Board(Main-unit)			SK5700	09-34073Z01	48204-0001
I.MX-P.W.Board(Main-unit)			TML5400	29-22483Z02	OG-453065 -E5
I.MX-P.W.Board(Main-unit)			TML6300	29-22483Z02	OG-453065 -E5
I.MX-P.W.Board(Main-unit)			XL4000	91-26661Z36	24Mhz;*;*;8pf;*;TP
I.MX-P.W.Board(Main-unit)			XL4001	91-26198Z03	32.76Mhz;*;*;*;*;TP
I.MX-P.W.Board(Main-unit)			XL5200	91-26661Z32	28.63Mhz;*;*;8pf;*;TP
I.MX-P.W.Board(Main-unit)			XL5300	91-26661Z24	25Mhz;*;*;8pf;*;TP
I.MX-P.W.Board(Main-unit)			XL6401	91-16024Z01	3.98Mhz;*;*;*;*;TP
I.MX-P.W.Board(Main-unit)			ZD5200	48-28494Z01	ZEN ECMF04-4H-CP
I.MX-P.W.Board(Main-unit)			ZD5201	48-28494Z01	ZEN ECMF04-4H-CP
I.MX-P.W.Board(Main-unit)			ZD5202	48-16145Z20	ZEN PZU5.1B3 -CP
I.MX-P.W.Board(Main-unit)			ZD5203	48-25907Z01	ZEN PESD5V0F1-CP
I.MX-P.W.Board(Main-unit)			ZD5204	48-25907Z01	ZEN PESD5V0F1-CP
I.MX-P.W.Board(Main-unit)			ZD5205	48-25907Z01	ZEN PESD5V0F1-CP
I.MX-P.W.Board(Main-unit)			ZD5206	48-25907Z01	ZEN PESD5V0F1-CP
I.MX-P.W.Board(Main-unit)			ZD6402	48-16145Z22	ZEN PZU5.6B2 -CP
I.MX-P.W.Board(Main-unit)			ZD6403	48-16145Z22	ZEN PZU5.6B2 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			ANT1	E2703004340	ASSY CABLE;09-17241Z06-A
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2000	E1101006450	22pF;50V;5%;NPO;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2001	E1101006450	22pF;50V;5%;NPO;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2004	E1101006240	1nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2005	E1101006240	1nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2006	E1101006240	1nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2008	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2009	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2010	E1101009190	0.22uF;25V;10%;X7R;1608;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2011	E1101009190	0.22uF;25V;10%;X7R;1608;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2012	E1101009190	0.22uF;25V;10%;X7R;1608;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2013	E1101009190	0.22uF;25V;10%;X7R;1608;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2014	E1101009190	0.22uF;25V;10%;X7R;1608;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2015	E1101009080	4.7uF;16V;10%;X5R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2016	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2017	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2018	E1101009220	100nF;16V;10%;X7R;1005;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2019	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2020	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2021	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2022	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2023	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2024	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2050	E1101004630	330pF;50V;5%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2180	E1101006560	220nF;10V;10%;X5R;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2190	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2192	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2201	E1101006560	220nF;10V;10%;X5R;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2206	E1101007380	10nF;50V;10%;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2208	E1101009130	2.2uF;16V;10%;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2209	E1101009130	2.2uF;16V;10%;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2210	E1101009130	2.2uF;16V;10%;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2211	E1101009130	2.2uF;16V;10%;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2212	E1101006240	1nF;50V;10%;X7R;1005;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2213	E1101009190	0.22uF;25V;10%;X7R;1608;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2214	E1101009360	3.3nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2215	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2216	E1101007930	10uF;10V;K;X5R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2217	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2218	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2219	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2220	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2221	E1101006240	1nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2222	E1101006220	10nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2223	E1101008050	2.2nF;50V;10%;X7R;1608;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2224	E1101006220	10nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2225	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2226	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2227	E1101009360	3.3nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2228	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2229	E1101007850	10pF;50V;J;NPO;1005;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2230	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2231	E1101007850	10pF;50V;J;NPO;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2232	E1101006240	1nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2234	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2235	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2236	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2237	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2238	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2239	E1101004220	1uF;50V;K;X7R;3216;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2240	E1101009390	4.7uF;25V;10%;X7R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2241	E1101009360	3.3nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2242	E1101009360	3.3nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2243	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2244	E1101009360	3.3nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2245	E1101009360	3.3nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2246	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2247	E1101009220	100nF;16V;10%;X7R;1005;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2248	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2249	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2250	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2251	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2252	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2253	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2254	E1101009360	3.3nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2255	E1101009360	3.3nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2256	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2257	E1101004630	330pF;50V;5%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2258	E1101004630	330pF;50V;5%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2259	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2400	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2401	08-30898Z01	16MU155KA23216
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2402	08-30898Z01	16MU155KA23216
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2403	08-30898Z01	16MU155KA23216
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2404	08-30898Z01	16MU155KA23216

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2405	E1101009030	3.3uF;25V;10%;X7R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2406	E1101009030	3.3uF;25V;10%;X7R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2407	E1101007420	100nF;50V;10%;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2408	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2409	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2410	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2411	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2412	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2413	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2414	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2416	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2417	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2418	E1101009360	3.3nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2420	08-30898Z01	16MU155KA23216
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2421	08-30898Z01	16MU155KA23216
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2422	08-30898Z01	16MU155KA23216
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2423	08-30898Z01	16MU155KA23216

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2424	E1101009080	4.7uF;16V;10%;X5R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2425	E1101009080	4.7uF;16V;10%;X5R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2426	E1101007850	10pF;50V;J;NPO;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2427	E1101007850	10pF;50V;J;NPO;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2428	E1101009030	3.3uF;25V;10%;X7R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2429	E1101009030	3.3uF;25V;10%;X7R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2430	E1101007850	10pF;50V;J;NPO;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2431	E1101007850	10pF;50V;J;NPO;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2432	E1101007850	10pF;50V;J;NPO;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2433	E1101007850	10pF;50V;J;NPO;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2434	E1101009030	3.3uF;25V;10%;X7R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2435	E1101009030	3.3uF;25V;10%;X7R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2437	E1101006450	22pF;50V;5%;NPO;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2440	E1101010670	22uF;16V;10%;X5R;3225;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2441	E1101010670	22uF;16V;10%;X5R;3225;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2442	E1101004220	1uF;50V;K;X7R;3216;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2443	E1101004220	1uF;50V;K;X7R;3216;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2444	E1101010670	22uF;16V;10%;X5R;3225;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2445	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2446	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2447	E1101007650	10uF;25V;10%;X5R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2449	E1101007650	10uF;25V;10%;X5R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2450	E1101009090	1uF;16V;10%;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2452	E1101009090	1uF;16V;10%;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2453	E1101006450	22pF;50V;5%;NPO;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2454	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2457	E1101007420	100nF;50V;10%;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2458	E1101009090	1uF;16V;10%;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2459	E1101009090	1uF;16V;10%;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2460	E1101009030	3.3uF;25V;10%;X7R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2461	E1101009030	3.3uF;25V;10%;X7R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2462	E1101009030	3.3uF;25V;10%;X7R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2463	E1101009030	3.3uF;25V;10%;X7R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2464	E1101009020	220nF;50V;K;X7R;2012;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2465	E1101007420	100nF;50V;10%;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2468	E1101006450	22pF;50V;5%;NPO;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2470	E1101007650	10uF;25V;10%;X5R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2472	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2503	E1101006220	10nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2505	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2506	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2507	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2508	E1101007930	10uF;10V;K;X5R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2509	E1101010820	8pF;50V;C;COG;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2510	E1101007850	10pF;50V;J;NPO;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2511	E1101010240	1uF;25V;K;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2512	E1101007040	2.2uF;10V;K;X5R;1608;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2513	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2514	E1101007040	2.2uF;10V;K;X5R;1608;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2519	E1101007420	100nF;50V;10%;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2523	E1101007930	10uF;10V;K;X5R;2012;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2524	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2600	08-30898Z02	25MU105KA23216
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2601	08-30898Z02	25MU105KA23216
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2602	08-30898Z02	25MU105KA23216
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2603	08-30898Z02	25MU105KA23216
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2604	08-30898Z02	25MU105KA23216
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2605	08-30898Z02	25MU105KA23216
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2606	08-30898Z02	25MU105KA23216
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2607	E1101006680	2.2uF;16V;10%;X7R;3216;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2611	08-30898Z02	25MU105KA23216
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2612	E1101010240	1uF;25V;K;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2613	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2650	E1101010240	1uF;25V;K;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2901	E1101007380	10nF;50V;10%;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2903	E1101001260	15pF;50V;J;C0G;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2905	E1101007960	1nF;50V;10%;X7R;1608;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2906	E1101004900	3pF;50V;C;COG;1005;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2907	E1101006440	15pF;50V;5%;NPO;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2908	E1101007290	47pF;50V;5%;NPO;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2912	E1101005290	1.5pF;50V;C;C0G;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2913	E1101008560	18pF;50V;J;C0G;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2914	E1101006240	1nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C2918	E1101004550	82pF;50V;5%;COG;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3001	E1101006700	100pF;50V;5%;NPO;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3002	E1101006430	12pF;50V;5%;NPO;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3017	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3018	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3019	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3020	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3021	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3022	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3026	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3029	E1101006560	220nF;10V;10%;X5R;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3030	E1101007650	10uF;25V;10%;X5R;3216;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3031	E1101007650	10uF;25V;10%;X5R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3032	E1101007650	10uF;25V;10%;X5R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3047	E1101006430	12pF;50V;5%;NPO;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3100	E1101001890	1nF;50V;K;X7R;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3101	E1101008080	1000pF;1kV;10%;X7R;3216;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3103	E1101008080	1000pF;1kV;10%;X7R;3216;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3104	E1101010220	10nF;630V;K;X7R;3216;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3134	E1101006240	1nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3135	E1101006240	1nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3150	E1101002710	220pF;50V;J;COG;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3151	E1101002710	220pF;50V;J;COG;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3152	E1101002710	220pF;50V;J;COG;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3153	E1101005550	0.22uF;50V;K;X7R;2012;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3203	E1101006700	100pF;50V;5%;NPO;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3204	E1101006240	1nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3205	E1101007420	100nF;50V;10%;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3206	E1101007420	100nF;50V;10%;X7R;1608;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3210	E1101007650	10uF;25V;10%;X5R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3221	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3222	E1101007380	10nF;50V;10%;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3223	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3224	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3225	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3226	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3227	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3230	E1101004310	0.33uF;25V;K;X7R;2012;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3233	E1101009130	2.2uF;16V;10%;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3236	E1101006440	15pF;50V;5%;NPO;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3238	E1101004310	0.33uF;25V;K;X7R;2012;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3239	E1101003020	47nF;50V;K;X7R;1608;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3240	E1101006440	15pF;50V;5%;NPO;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3350	E1101007420	100nF;50V;10%;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3351	E1101007420	100nF;50V;10%;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3352	E1101009220	100nF;16V;10%;X7R;1005;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3353	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3354	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3400	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3401	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3402	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3403	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3404	E1101007380	10nF;50V;10%;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3405	E1101007420	100nF;50V;10%;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3406	E1101007420	100nF;50V;10%;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3407	E1101010240	1uF;25V;K;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3408	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3410	E1101010670	22uF;16V;10%;X5R;3225;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3411	E1101010670	22uF;16V;10%;X5R;3225;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3412	E1101010670	22uF;16V;10%;X5R;3225;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3430	E1101009380	4.7uF;50V;10%;X7R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3431	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3432	E1101009020	220nF;50V;K;X7R;2012;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3440	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3441	E1101010010	100uF;6.3V;20%;X5R;3216;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3442	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3460	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3461	E1101007930	10uF;10V;K;X5R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3462	E1101009130	2.2uF;16V;10%;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3464	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3470	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3471	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3480	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3481	E1101009770	22uF;16V;10%;X5R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3482	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3490	E1101009390	4.7uF;25V;10%;X7R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3492	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3493	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3494	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3495	E1101009220	100nF;16V;10%;X7R;1005;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3496	E1101009080	4.7uF;16V;10%;X5R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3498	E1101010240	1uF;25V;K;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3499	E1101010240	1uF;25V;K;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3502	E1101009130	2.2uF;16V;10%;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3503	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3504	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3505	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3506	E1101007650	10uF;25V;10%;X5R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3510	E1101006220	10nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3511	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3512	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3551	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3552	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3602	E1101009360	3.3nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3603	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3605	E1101009770	22uF;16V;10%;X5R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3607	E1101006700	100pF;50V;5%;NPO;1005;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3608	E1101009380	4.7uF;50V;10%;X7R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			C3612	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			CB2000	09-14451Z06	502790-3091 -ED
AUDIO-P.W.Board(Main-unit)(iLX-F309)			CB3100	09T35473Y16	F169B001-16
AUDIO-P.W.Board(Main-unit)(iLX-F309)			CB3120	09-25106Z01	S10B-PUDSS-1
AUDIO-P.W.Board(Main-unit)(iLX-F309)			CB3130	09-25106Z02	S12B-PUDSS-1
AUDIO-P.W.Board(Main-unit)(iLX-F309)			CB3150	09-16961Z09	A1257WV0-10PS-ED
AUDIO-P.W.Board(Main-unit)(iLX-F309)			CB3490	09T85454W03	53398-0371 -E6
AUDIO-P.W.Board(Main-unit)(iLX-F309)			CH3300	09-29653Z01	FX23-100S-0.5S-T
AUDIO-P.W.Board(Main-unit)(iLX-F309)			D2460	48-17624Z01	DA3J102D0L -CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			D2461	48-17624Z01	DA3J102D0L -CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			D2462	48-17624Z01	DA3J102D0L -CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			D2650	48-05965Z01	DIO,1SS361-L -CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			D2901	48-19711Z01	BAV99W -CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			D3200	48-05965Z01	DIO,1SS361-L -CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			D3201	48-05164Z01	1SS352-TPH3 -CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			D3202	48-05965Z01	DIO,1SS361-L -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			D3204	48-05965Z01	DIO,1SS361-L -CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			D3205	48-05164Z01	1SS352-TPH3 -CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			D3400	E1403000190	1SR154-400;400V;1.0A;SOD-106;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			E2404	E1103013920	100UF;25V;20%;MVK;8X6;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			E2405	E1103013900	100UF;10V;20%;BDA;6.3X6;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			E2420	E1103012740	22uF;16V;20%;*;5X5;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			E2421	E1103012740	22uF;16V;20%;*;5X5;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			E2440	E1103012990	100uF;16V;20%;A10;6.3X5.7;*;105C;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			E2441	E1103014050	22UF;16V;20%;BXJ;4X5;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			E2442	E1103014050	22UF;16V;20%;BXJ;4X5;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			E2460	E1103013940	3.3UF;50V;20%;MVK;4X5;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			E2461	E1103013940	3.3UF;50V;20%;MVK;4X5;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			E2600	E1103013930	10UF;25V;20%;MVK;5X5;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			E2601	E1103013930	10UF;25V;20%;MVK;5X5;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			E2650	E1103012990	100uF;16V;20%;A10;6.3X5.7;*;105C;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			E3100	23-19876Z04	4700uF;25V;20%;*;18X20;7.5mm;*;*
AUDIO-P.W.Board(Main-unit)(iLX-F309)			E3200	E1103013930	10UF;25V;20%;MVK;5X5;*;105;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			E3300	E1103014040	470UF;25V;20%;BXJ;10X10;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			E3301	E1103014000	470UF;16V;20%;BXJ;8X10;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			E3400	E1103012990	100uF;16V;20%;A10;6.3X5.7;*;105C;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			E3404	E1103014010	10UF;25V;20%;BXJ;4X5;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			E3405	E1103014020	22UF;25V;20%;BXJ;5X5;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			E3406	E1103013980	680UF;10V;20%;BXJ;8X10;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			E3430	E1103014020	22UF;25V;20%;BXJ;5X5;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			E3440	E1103014030	33UF;25V;20%;BXF;5X5;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			E3470	E1103013890	33UF;10V;20%;BXJ;5X5;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			E3471	E1103013910	47UF;16V;20%;MVK;6X5;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			E3480	E1103013960	22UF;6.3V;20%;BXJ;4X5;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			E3510	E1103013960	22UF;6.3V;20%;BXJ;4X5;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			E3511	E1103013890	33UF;10V;20%;BXJ;5X5;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			E3600	E1103013970	330UF;6.3V;20%;BXJ;6.3X8;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			E3601	E1103014020	22UF;25V;20%;BXJ;5X5;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			IC2000	51-23912Z01	MTP,D70F3479AGJAQ-QT
AUDIO-P.W.Board(Main-unit)(iLX-F309)			IC2001	51T15185Y03	TC7SH08FU,LJ -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			IC2180	51-24805Z01	BR24T16F-WGE2 -SE2
AUDIO-P.W.Board(Main-unit)(iLX-F309)			IC2190	51-04315Z22	BU4229G-TR -CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			IC2200	51-30382Z02	SAF7754HV/N205K
AUDIO-P.W.Board(Main-unit)(iLX-F309)			IC2202	51-18520Z01	MX25L8035EM21-10G-ST
AUDIO-P.W.Board(Main-unit)(iLX-F309)			IC2203	51-29083Z01	SN74AHCU04QPWRG4-SE2
AUDIO-P.W.Board(Main-unit)(iLX-F309)			IC2400	51-16740Z02	BD34601FS-ME2 -SE6
AUDIO-P.W.Board(Main-unit)(iLX-F309)			IC2401	E1605006440	BA4560RFVM;MSOP8;8P;DUAL;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			IC2420	51T25576W07	NJM4580V-TE2 -SE2
AUDIO-P.W.Board(Main-unit)(iLX-F309)			IC2421	51T25576W07	NJM4580V-TE2 -SE2
AUDIO-P.W.Board(Main-unit)(iLX-F309)			IC2422	51T25576W07	NJM4580V-TE2 -SE2
AUDIO-P.W.Board(Main-unit)(iLX-F309)			IC2440	51-20907Z01	TPS60402QDBVRQ1 -CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			IC2441	51-16845Z04	TAR5S50U-TE85L -CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			IC2500	51-32736Z01	AK7738VQ -QEA
AUDIO-P.W.Board(Main-unit)(iLX-F309)			IC2600	51-30375Z01	STPA003OD-4WX -ZS
AUDIO-P.W.Board(Main-unit)(iLX-F309)			IC3000	51-29945Z01	SAF3600EL/V1040A-BEA
AUDIO-P.W.Board(Main-unit)(iLX-F309)			IC3001	51-30259Z02	S25FL116K0XMFA040-ST
AUDIO-P.W.Board(Main-unit)(iLX-F309)			IC3150	51T15194Y03	74VHCT08AFT-EL -SE2

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			IC3200	51-20765Z31	S-1009N37H-M5T2U -CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			IC3207	51T15614Y01	TC74HC4051AFT-EL-SE5
AUDIO-P.W.Board(Main-unit)(iLX-F309)			IC3208	51T15614Y01	TC74HC4051AFT-EL-SE5
AUDIO-P.W.Board(Main-unit)(iLX-F309)			IC3209	51T35360Y01	TC7WH08FU-L -SE1
AUDIO-P.W.Board(Main-unit)(iLX-F309)			IC3210	51T15194Y03	74VHCT08AFT-EL -SE2
AUDIO-P.W.Board(Main-unit)(iLX-F309)			IC3213	51T15647Y01	NJM4558V-TE2 -SE2
AUDIO-P.W.Board(Main-unit)(iLX-F309)			IC3220	E1605006440	BA4560RFVM;MSOP8;8P;DUAL;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			IC3400	51-13711Z02	TB2920AHQ(Z); HZIP25-P-1.00F
AUDIO-P.W.Board(Main-unit)(iLX-F309)			IC3430	E1605010310	BD00FC0EEFJ-ME2;HTSOP-J8;8P;1V/15V;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			IC3440	51-23593Z02	BD00IC0WEFJ-ME2 -SE2
AUDIO-P.W.Board(Main-unit)(iLX-F309)			IC3460	51-23593Z02	BD00IC0WEFJ-ME2 -SE2
AUDIO-P.W.Board(Main-unit)(iLX-F309)			IC3470	51-23593Z05	BD00IA5EEFJ-ME2 -SE2
AUDIO-P.W.Board(Main-unit)(iLX-F309)			IC3480	51-23593Z02	BD00IC0WEFJ-ME2 -SE2
AUDIO-P.W.Board(Main-unit)(iLX-F309)			IC3500	51-07902Z01	NJM2871BF05-TE1 -CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			IC3510	51-07902Z02	NJM2871BF33-TE1 -CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			IC3601	E1605009450	BD90640EFJ-C;HTSOP-J8;8P;3.3V;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			L2200	24-24463Z01	BLM15HD601SH1-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			L2201	24-24463Z01	BLM15HD601SH1-CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			L2202	24-24463Z01	BLM15HD601SH1-CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			L2203	24-17733Z06	NLCV32T 47RK -CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			L2204	24-17733Z06	NLCV32T 47RK -CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			L2205	24-24463Z01	BLM15HD601SH1-CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			L2206	24-24463Z01	BLM15HD601SH1-CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			L2210	24-24463Z01	BLM15HD601SH1-CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			L2440	24T95202W25	CDRH64B 102M -E6
AUDIO-P.W.Board(Main-unit)(iLX-F309)			L2441	24T95202W25	CDRH64B 102M -E6
AUDIO-P.W.Board(Main-unit)(iLX-F309)			L2500	24-06212Z05	BLM15BB121SH1-CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			L2501	24-06212Z05	BLM15BB121SH1-CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			L2502	24-06212Z05	BLM15BB121SH1-CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			L2902	24-30185Z23	LQW2BAS R22J -CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			L2904	24T25164Y12	#FSLM2520-R82J=P2
AUDIO-P.W.Board(Main-unit)(iLX-F309)			L2905	24-09036Z11	LQW18AN R27J -CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			L2906	24T25164Y19	#FSLM2520-3R3J=P2
AUDIO-P.W.Board(Main-unit)(iLX-F309)			L3150	24-06212Z08	BLM15BD102SH1-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			L3490	24T95456W27	BLM18PG181SH1-CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			L3492	24T95456W27	BLM18PG181SH1-CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			L3493	24T95456W27	BLM18PG181SH1-CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			L3494	24T95456W27	BLM18PG181SH1-CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			L3495	24-28869Z04	BKP1608HS121 -CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			L3601	24-17581Z02	NRS5020T 1R5N-E2
AUDIO-P.W.Board(Main-unit)(iLX-F309)			L3602	24-08610Z03	DS106C2 10RM -EA
AUDIO-P.W.Board(Main-unit)(iLX-F309)			PS3101	E2801000650	24V;40A;4.37x3.07x0.81;*
AUDIO-P.W.Board(Main-unit)(iLX-F309)			PS3150	E2801000660	24V;1.5A;4.37x3.07x1.00;*
AUDIO-P.W.Board(Main-unit)(iLX-F309)			Q2460	E1502002040	IMH23;NPN;300mW;SMT6;4.7K;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			Q2461	E1502002040	IMH23;NPN;300mW;SMT6;4.7K;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			Q2462	E1502002040	IMH23;NPN;300mW;SMT6;4.7K;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			Q2650	E1506000300	UMD3N;*;150mW;UMT6;*;6;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			Q2651	48-20093Z01	DMC561010R -CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			Q2652	48T25737Y01	UMD2N-TR -CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			Q3200	48-12999Z01	LTA114EUBFS8-TLCP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			Q3202	48-13000Z05	LTC124EUBFS8-TLCP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			Q3203	48T25737Y01	UMD2N-TR -CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			Q3204	48-13000Z01	LTC114EUBFS8-TLCP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			Q3205	48T25737Y01	UMD2N-TR -CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			Q3207	48-13000Z01	LTC114EUBFS8-TLCP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			Q3208	48-18270Z01	LSA1576UB FS8 -CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			Q3210	E1502000300	KRC101S;NPN;200mW;SOT-23;4.7K,4.7K;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2001	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2005	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2006	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2007	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2008	E1001011350	2.7Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2009	E1001011350	2.7Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2010	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2011	E1001021040	2.2Kohm;F;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2012	E1001021040	2.2Kohm;F;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2014	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2015	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2016	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2017	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2018	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2019	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2023	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2024	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2025	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2026	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2027	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2028	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2029	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2030	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2031	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2032	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2033	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2034	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2035	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2036	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2039	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2040	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2041	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2042	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2043	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2044	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2045	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2046	E1001021040	2.2Kohm;F;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2047	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2048	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2053	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2054	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2055	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2060	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2061	E1001016720	1Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2062	E1001003870	100ohm;J;1/16W;DA;1.6X0.8;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2063	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2064	E1001016260	470ohm;J;1/16W;*;1X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2070	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2071	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2072	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2073	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2074	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2076	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2077	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2078	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2081	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2083	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2089	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2092	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2093	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2100	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2101	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2102	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2103	E1001016720	1Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2104	E1001016720	1Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2105	E1001016720	1Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2108	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2109	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2110	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2111	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2180	E1001018140	4.7Kohm;F;1/16;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2181	E1001018140	4.7Kohm;F;1/16;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2190	E1001004330	10Kohm;J;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2191	E1001004100	1Kohm;J;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2192	E1001021580	680ohm;J;1/16W;DA;1.0x0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2204	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2207	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2213	E1001012030	6.8Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2214	E1001012030	6.8Kohm;F;1/16W;DA;1.0X0.5;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2215	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2216	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2217	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2218	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2221	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2222	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2226	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2227	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2228	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2229	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2230	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2231	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2232	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2233	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2234	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2249	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2250	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2251	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2253	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2254	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2255	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2256	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2258	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2260	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2262	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2263	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2268	E1001012030	6.8Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2270	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2400	E1001017870	5.6Kohm;F;1/16;*;1.0X0.5;*
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2401	E1001011430	56Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2402	E1001016740	2.2Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2404	E1001012030	6.8Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2405	E1001016310	75Kohm;F;1/16W;*;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2406	E1001012030	6.8Kohm;F;1/16W;DA;1.0X0.5;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2407	E1001016310	75Kohm;F;1/16W;*;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2408	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2409	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2410	E1001022180	15Kohm;J;1/16W;DA;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2411	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2412	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2413	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2414	E1001005350	6.8Kohm;F;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2415	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2416	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2417	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2418	E1001005350	6.8Kohm;F;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2419	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2420	E1001011530	100Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2421	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2422	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2423	E1001011530	100Kohm;F;1/16W;DA;1.0X0.5;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2424	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2425	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2426	E1001011530	100Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2427	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2428	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2429	E1001011530	100Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2430	E1001011530	100Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2431	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2432	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2433	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2434	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2435	E1001011530	100Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2436	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2437	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2438	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2439	E1001018130	3.3Kohm;J;1/16;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2453	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2454	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2457	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2459	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2460	E1001011480	75Kohm;J;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2461	E1001011480	75Kohm;J;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2462	E1001011480	75Kohm;J;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2463	E1001011480	75Kohm;J;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2464	E1001011480	75Kohm;J;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2465	E1001011480	75Kohm;J;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2466	E1001006620	100ohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2467	E1001006620	100ohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2468	E1001006620	100ohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2469	E1001006620	100ohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2470	E1001006620	100ohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2471	E1001006620	100ohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2472	E1001006660	220ohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2473	E1001006660	220ohm;J;1/4W;DA;3.2X1.6;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2474	E1001006660	220ohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2475	E1001006660	220ohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2476	E1001006660	220ohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2477	E1001006660	220ohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2500	E1001016260	470ohm;J;1/16W;*;1X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2501	E1001016260	470ohm;J;1/16W;*;1X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2502	E1001016260	470ohm;J;1/16W;*;1X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2503	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2504	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2505	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2506	E1001016750	4.7Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2507	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2509	E1001016260	470ohm;J;1/16W;*;1X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2510	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2511	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2512	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2513	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2514	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2515	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2516	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2519	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2520	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2522	E1001006970	0ohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2523	E1001016750	4.7Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2524	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2525	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2528	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2530	E1001006970	0ohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2532	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2533	E1001003160	2Kohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2534	E1001006970	0ohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2540	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2541	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2542	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2543	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2544	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2545	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2546	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2547	E1001016260	470ohm;J;1/16W;*;1X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2548	E1001016260	470ohm;J;1/16W;*;1X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2549	E1001016260	470ohm;J;1/16W;*;1X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2604	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2605	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2650	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2651	E1001016720	1Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2652	E1001016720	1Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2653	E1001016820	47Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2654	E1001003940	220ohm;J;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2655	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2900	E1001016980	0ohm;J;1/16;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2902	E1001005700	470Kohm;F;1/16W;DA;1.6X0.8;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2903	E1001005700	470Kohm;F;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R2904	E1001012270	68ohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3000	E1001009770	470Kohm;J;1/16W;DA;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3005	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3007	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3008	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3009	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3010	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3011	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3012	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3014	E1001022980	56ohm;J;1/16W;*;1.0x0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3015	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3016	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3019	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3020	E1001016750	4.7Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3021	E1001016750	4.7Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3022	E1001016750	4.7Kohm;J;1/16;DA;1.0X0.5;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3023	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3024	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3025	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3030	E1001016750	4.7Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3100	E1001004330	10Kohm;J;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3102	E1001004330	10Kohm;J;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3105	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3106	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3107	E1001003870	100ohm;J;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3108	E1001003870	100ohm;J;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3109	E1001004100	1Kohm;J;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3134	E1001004100	1Kohm;J;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3136	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3137	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3150	E1001016980	0ohm;J;1/16;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3151	E1001016980	0ohm;J;1/16;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3152	E1001016980	0ohm;J;1/16;DA;1.6X0.8;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3153	E1001006800	1Kohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3154	E1001006800	1Kohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3155	E1001006800	1Kohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3156	E1001019970	33Kohm;F;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3158	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3159	E1001016260	470ohm;J;1/16W;*;1X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3200	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3202	E1001009770	470Kohm;J;1/16W;DA;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3203	E1001011120	15Kohm;F;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3204	E1001023270	36kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3205	E1001011350	2.7Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3206	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3207	E1001019970	33Kohm;F;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3208	E1001013040	18Kohm;F;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3209	E1001024010	4.7K;J;1/4;*;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3210	E1001024010	4.7K;J;1/4;*;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3211	E1001016820	47Kohm;J;1/16;DA;1.0X0.5;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3213	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3218	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3219	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3222	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3223	E1001016180	24Kohm;F;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3226	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3234	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3235	E1001005270	3.3Kohm;F;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3236	E1001004170	2.2Kohm;J;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3237	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3239	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3246	E1001018130	3.3Kohm;J;1/16;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3249	E1001004100	1Kohm;J;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3250	E1001011580	220Kohm;J;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3251	E1001018130	3.3Kohm;J;1/16;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3252	E1001004100	1Kohm;J;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3254	E1001011580	220Kohm;J;1/16W;DA;1.0X0.5;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3305	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3308	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3311	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3313	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3400	E1001022870	130kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3401	E1001008390	120Kohm;F;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3402	E1001019540	5.1Kohm;F;1/10W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3403	E1001022540	75kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3404	E1001005330	5.6Kohm;F;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3405	E1001018320	300Kohm;F;1/16;DA;1.6X0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3406	E1001022530	82kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3407	E1001006880	2.7Kohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3408	E1001011410	3.9Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3409	E1001012030	6.8Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3410	E1001006940	10Kohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3411	E1001012030	6.8Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3412	E1001012030	6.8Kohm;F;1/16W;DA;1.0X0.5;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3413	E1001021070	33Kohm;F;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3414	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3415	E1001019540	5.1Kohm;F;1/10W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3416	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3417	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3430	E1001011470	68Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3431	E1001011350	2.7Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3432	E1001012030	6.8Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3433	E1001024070	680Kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3434	E1001018280	51Kohm;F;1/16;DA;1.6X0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3440	E1001024070	680Kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3442	E1001016790	12Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3443	E1001011350	2.7Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3444	E1001018140	4.7Kohm;F;1/16;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3445	E1001019390	56Kohm;F;1/10W;*;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3461	E1001021040	2.2Kohm;F;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3462	E1001012490	270ohm;F;1/16W;DA;1.0X0.5;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3463	E1001018140	4.7Kohm;F;1/16;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3464	E1001005330	5.6Kohm;F;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3465	E1001005560	68Kohm;F;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3471	E1001021040	2.2Kohm;F;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3472	E1001018700	470ohm;F;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3473	E1001018140	4.7Kohm;F;1/16;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3474	E1001005370	8.2Kohm;F;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3475	E1001008470	560Kohm;F;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3480	E1001008370	62Kohm;F;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3482	E1001016790	12Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3483	E1001011350	2.7Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3484	E1001018140	4.7Kohm;F;1/16;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3485	E1001005690	390Kohm;F;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3492	E1001021590	3.3ohm;F;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3493	E1001016980	0ohm;J;1/16;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3500	E1001016720	1Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3510	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3511	E1001019540	5.1Kohm;F;1/10W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3512	E1001015960	160Kohm;F;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3600	E1001006970	0ohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3601	E1001016790	12Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3602	E1001018320	300Kohm;F;1/16;DA;1.6X0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3603	E1001019480	3.3Kohm;F;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3604	E1001010930	27Kohm;F;1/16W;DA;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3606	E1001023130	1.5kohm;F;1/16W;DA;1.0x0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3608	E1001019540	5.1Kohm;F;1/10W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3609	E1001016760	6.8Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3610	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			R3630	E1001009050	120ohm;J;1/4W;DA;3.2x1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			SA2901	08-19391Z01	IMSA-6803-01Y-CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			SD2440	48-22179Z01	SHT DB3X313F0LCP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			SD2441	E1405000160	RB160L-40;40V;1A;SOD-106;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			SD3601	E1405001220	RB056L-40;40V;3A;PMDS;CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			T3100	25-12466Z01	GLI-UB3442 -DB

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F309)			TH2000	48T75219Y02	NCP18WB473F1S-CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			TML3000	29-22540Z01	OGCP-702020 -E4
AUDIO-P.W.Board(Main-unit)(iLX-F309)			VT2901	24-29820Z01	RF FM M5-N/R-E5
AUDIO-P.W.Board(Main-unit)(iLX-F309)			XL2000	91-16024Z01	3.98Mhz;*;*;*;*;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			XL2200	91-26661Z31	55.46Mhz;*;*;8pf;*;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			XL2500	91-26661Z02	12.28Mhz;*;*;8pf;*;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			XL3001	91-26661Z31	55.46Mhz;*;*;8pf;*;TP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			ZD3100	48-23921Z01	ZEN ZSH5MAZ27-ED
AUDIO-P.W.Board(Main-unit)(iLX-F309)			ZD3150	48-21149Z23	ZEN DZ2J056M0LCP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			ZD3151	48-21149Z23	ZEN DZ2J056M0LCP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			ZD3152	48-21149Z23	ZEN DZ2J056M0LCP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			ZD3200	48-16145Z25	ZEN PZU6.2B2 -CP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			ZD3201	48-21149Z23	ZEN DZ2J056M0LCP
AUDIO-P.W.Board(Main-unit)(iLX-F309)			ZD3202	48-01607Z08	DIO,ZEN LUDZ3.9B -CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			ANT1	E2703004340	ASSY CABLE;09-17241Z06-A
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			ANT3000	09-22644Z02	SMB1252B1-019-5GT-DT
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2000	E1101006450	22pF;50V;5%;NPO;1005;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2001	E1101006450	22pF;50V;5%;NPO;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2004	E1101006240	1nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2005	E1101006240	1nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2006	E1101006240	1nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2008	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2009	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2010	E1101009190	0.22uF;25V;10%;X7R;1608;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2011	E1101009190	0.22uF;25V;10%;X7R;1608;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2012	E1101009190	0.22uF;25V;10%;X7R;1608;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2013	E1101009190	0.22uF;25V;10%;X7R;1608;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2014	E1101009190	0.22uF;25V;10%;X7R;1608;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2015	E1101009080	4.7uF;16V;10%;X5R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2016	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2017	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2018	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2019	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2020	E1101009220	100nF;16V;10%;X7R;1005;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2021	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2022	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2023	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2024	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2050	E1101004630	330pF;50V;5%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2180	E1101006560	220nF;10V;10%;X5R;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2190	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2192	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2201	E1101006560	220nF;10V;10%;X5R;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2206	E1101007380	10nF;50V;10%;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2212	E1101006240	1nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2213	E1101009190	0.22uF;25V;10%;X7R;1608;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2214	E1101009360	3.3nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2215	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2216	E1101007930	10uF;10V;K;X5R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2217	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2218	E1101009220	100nF;16V;10%;X7R;1005;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2219	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2220	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2221	E1101006240	1nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2222	E1101006220	10nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2223	E1101008050	2.2nF;50V;10%;X7R;1608;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2224	E1101006220	10nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2225	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2226	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2227	E1101009360	3.3nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2228	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2229	E1101007850	10pF;50V;J;NPO;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2230	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2231	E1101007850	10pF;50V;J;NPO;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2232	E1101006240	1nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2234	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2235	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2236	E1101009220	100nF;16V;10%;X7R;1005;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2237	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2238	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2239	E1101004220	1uF;50V;K;X7R;3216;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2240	E1101009390	4.7uF;25V;10%;X7R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2241	E1101009360	3.3nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2242	E1101009360	3.3nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2243	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2244	E1101009360	3.3nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2245	E1101009360	3.3nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2246	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2247	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2248	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2249	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2250	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2251	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2252	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2253	E1101009220	100nF;16V;10%;X7R;1005;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2254	E1101009360	3.3nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2255	E1101009360	3.3nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2256	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2257	E1101004630	330pF;50V;5%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2258	E1101004630	330pF;50V;5%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2259	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2400	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2401	08-30898Z01	16MU155KA23216
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2402	08-30898Z01	16MU155KA23216
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2403	08-30898Z01	16MU155KA23216
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2404	08-30898Z01	16MU155KA23216
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2405	E1101009030	3.3uF;25V;10%;X7R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2406	E1101009030	3.3uF;25V;10%;X7R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2407	E1101007420	100nF;50V;10%;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2408	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2409	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2410	E1101009020	220nF;50V;K;X7R;2012;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2411	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2412	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2413	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2414	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2415	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2416	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2417	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2418	E1101009360	3.3nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2420	08-30898Z01	16MU155KA23216
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2421	08-30898Z01	16MU155KA23216
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2422	08-30898Z01	16MU155KA23216
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2423	08-30898Z01	16MU155KA23216
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2424	E1101009080	4.7uF;16V;10%;X5R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2425	E1101009080	4.7uF;16V;10%;X5R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2426	E1101007850	10pF;50V;J;NPO;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2427	E1101007850	10pF;50V;J;NPO;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2428	E1101009030	3.3uF;25V;10%;X7R;3216;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2429	E1101009030	3.3uF;25V;10%;X7R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2430	E1101007850	10pF;50V;J;NPO;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2431	E1101007850	10pF;50V;J;NPO;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2432	E1101007850	10pF;50V;J;NPO;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2433	E1101007850	10pF;50V;J;NPO;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2434	E1101009030	3.3uF;25V;10%;X7R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2435	E1101009030	3.3uF;25V;10%;X7R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2437	E1101006450	22pF;50V;5%;NPO;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2440	E1101010670	22uF;16V;10%;X5R;3225;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2441	E1101010670	22uF;16V;10%;X5R;3225;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2442	E1101004220	1uF;50V;K;X7R;3216;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2443	E1101004220	1uF;50V;K;X7R;3216;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2444	E1101010670	22uF;16V;10%;X5R;3225;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2445	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2446	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2447	E1101007650	10uF;25V;10%;X5R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2449	E1101007650	10uF;25V;10%;X5R;3216;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2450	E1101009090	1uF;16V;10%;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2452	E1101009090	1uF;16V;10%;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2453	E1101006450	22pF;50V;5%;NPO;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2454	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2457	E1101007420	100nF;50V;10%;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2458	E1101009090	1uF;16V;10%;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2459	E1101009090	1uF;16V;10%;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2460	E1101009030	3.3uF;25V;10%;X7R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2461	E1101009030	3.3uF;25V;10%;X7R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2462	E1101009030	3.3uF;25V;10%;X7R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2463	E1101009030	3.3uF;25V;10%;X7R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2464	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2465	E1101007420	100nF;50V;10%;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2468	E1101006450	22pF;50V;5%;NPO;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2470	E1101007650	10uF;25V;10%;X5R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2472	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2480	E1101009130	2.2uF;16V;10%;X7R;2012;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2481	E1101006240	1nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2482	E1101006220	10nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2483	E1101007840	33nF;16V;K;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2484	E1101010240	1uF;25V;K;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2485	E1101004010	2.2nF;50V;10%;X7R;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2486	E1101009130	2.2uF;16V;10%;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2487	E1101007650	10uF;25V;10%;X5R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2488	E1101007650	10uF;25V;10%;X5R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2489	E1101007650	10uF;25V;10%;X5R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2503	E1101006220	10nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2505	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2506	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2507	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2508	E1101007930	10uF;10V;K;X5R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2509	E1101010820	8pF;50V;C;COG;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2510	E1101007850	10pF;50V;J;NPO;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2511	E1101010240	1uF;25V;K;X7R;1608;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2512	E1101007040	2.2uF;10V;K;X5R;1608;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2513	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2514	E1101007040	2.2uF;10V;K;X5R;1608;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2519	E1101007420	100nF;50V;10%;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2523	E1101007930	10uF;10V;K;X5R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2524	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2600	08-30898Z02	25MU105KA23216
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2601	08-30898Z02	25MU105KA23216
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2602	08-30898Z02	25MU105KA23216
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2603	08-30898Z02	25MU105KA23216
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2604	08-30898Z02	25MU105KA23216
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2605	08-30898Z02	25MU105KA23216
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2606	08-30898Z02	25MU105KA23216
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2607	E1101006680	2.2uF;16V;10%;X7R;3216;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2611	08-30898Z02	25MU105KA23216
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2612	E1101010240	1uF;25V;K;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2613	E1101009020	220nF;50V;K;X7R;2012;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2650	E1101010240	1uF;25V;K;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2801	E1101007930	10uF;10V;K;X5R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2803	E1101009190	0.22uF;25V;10%;X7R;1608;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2804	E1101006240	1nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2805	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2806	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2808	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2809	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2810	E1101007930	10uF;10V;K;X5R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2811	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2813	E1101004190	220pF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2817	E1101007820	56pF;50V;J;NPO;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2818	E1101007820	56pF;50V;J;NPO;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2901	E1101007380	10nF;50V;10%;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2903	E1101001260	15pF;50V;J;C0G;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2905	E1101007960	1nF;50V;10%;X7R;1608;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2906	E1101004900	3pF;50V;C;COG;1005;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2907	E1101006440	15pF;50V;5%;NPO;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2908	E1101007290	47pF;50V;5%;NPO;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2912	E1101005290	1.5pF;50V;C;C0G;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2913	E1101008560	18pF;50V;J;C0G;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2914	E1101006240	1nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C2918	E1101004550	82pF;50V;5%;COG;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3000	E1101006430	12pF;50V;5%;NPO;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3003	E1101006430	12pF;50V;5%;NPO;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3004	E1101006240	1nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3005	E1101006240	1nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3006	E1101006240	1nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3007	E1101006240	1nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3008	E1101006240	1nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3009	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3010	E1101007930	10uF;10V;K;X5R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3011	E1101007930	10uF;10V;K;X5R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3012	E1101009220	100nF;16V;10%;X7R;1005;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3013	E1101010240	1uF;25V;K;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3014	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3015	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3016	E1101010790	4PF;50V;C;COG;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3017	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3018	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3019	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3020	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3021	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3022	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3023	E1101006240	1nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3024	E1101006240	1nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3025	E1101006700	100pF;50V;5%;NPO;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3026	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3027	E1101010240	1uF;25V;K;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3028	E1101010240	1uF;25V;K;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3029	E1101006560	220nF;10V;10%;X5R;1005;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3030	E1101007650	10uF;25V;10%;X5R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3031	E1101007650	10uF;25V;10%;X5R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3032	E1101007650	10uF;25V;10%;X5R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3033	E1101007380	10nF;50V;10%;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3034	E1101010800	51PF;50V;J;COG;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3035	E1101010800	51PF;50V;J;COG;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3036	E1101007420	100nF;50V;10%;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3037	E1101009460	56pF;50V;5%;NPO;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3038	E1101006460	33pF;50V;5%;NPO;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3039	E1101006460	33pF;50V;5%;NPO;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3043	E1101006240	1nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3044	E1101006240	1nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3045	E1101006240	1nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3048	E1101006240	1nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3049	E1101007930	10uF;10V;K;X5R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3050	E1101007930	10uF;10V;K;X5R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3051	E1101009220	100nF;16V;10%;X7R;1005;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3081	E1101006240	1nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3100	E1101001890	1nF;50V;K;X7R;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3101	E1101008080	1000pF;1kV;10%;X7R;3216;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3103	E1101008080	1000pF;1kV;10%;X7R;3216;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3104	E1101010220	10nF;630V;K;X7R;3216;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3134	E1101006240	1nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3135	E1101006240	1nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3203	E1101006700	100pF;50V;5%;NPO;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3204	E1101006240	1nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3205	E1101007420	100nF;50V;10%;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3206	E1101007420	100nF;50V;10%;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3210	E1101007650	10uF;25V;10%;X5R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3221	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3222	E1101007380	10nF;50V;10%;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3223	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3224	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3225	E1101009020	220nF;50V;K;X7R;2012;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3226	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3227	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3230	E1101004310	0.33uF;25V;K;X7R;2012;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3233	E1101009130	2.2uF;16V;10%;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3236	E1101006440	15pF;50V;5%;NPO;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3238	E1101004310	0.33uF;25V;K;X7R;2012;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3239	E1101003020	47nF;50V;K;X7R;1608;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3240	E1101006440	15pF;50V;5%;NPO;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3350	E1101007420	100nF;50V;10%;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3351	E1101007420	100nF;50V;10%;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3352	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3353	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3354	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3400	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3401	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3402	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3403	E1101009020	220nF;50V;K;X7R;2012;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3404	E1101007380	10nF;50V;10%;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3405	E1101007420	100nF;50V;10%;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3406	E1101007420	100nF;50V;10%;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3407	E1101010240	1uF;25V;K;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3408	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3410	E1101010670	22uF;16V;10%;X5R;3225;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3411	E1101010670	22uF;16V;10%;X5R;3225;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3412	E1101010670	22uF;16V;10%;X5R;3225;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3420	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3421	E1101009380	4.7uF;50V;10%;X7R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3422	E1101007650	10uF;25V;10%;X5R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3423	E1101009830	10uF;16V;10%;X5R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3424	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3430	E1101009380	4.7uF;50V;10%;X7R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3431	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3432	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3440	E1101009020	220nF;50V;K;X7R;2012;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3441	E1101010010	100uF;6.3V;20%;X5R;3216;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3442	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3450	E1101007640	47uF;6.3V;10%;X5R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3451	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3452	E1101009770	22uF;16V;10%;X5R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3453	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3460	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3461	E1101007930	10uF;10V;K;X5R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3462	E1101009130	2.2uF;16V;10%;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3464	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3470	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3471	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3480	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3481	E1101009770	22uF;16V;10%;X5R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3482	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3490	E1101009390	4.7uF;25V;10%;X7R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3492	E1101009220	100nF;16V;10%;X7R;1005;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3493	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3494	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3495	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3496	E1101009080	4.7uF;16V;10%;X5R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3497	E1101007650	10uF;25V;10%;X5R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3498	E1101010240	1uF;25V;K;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3499	E1101010240	1uF;25V;K;X7R;1608;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3500	E1101009080	4.7uF;16V;10%;X5R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3501	E1101009080	4.7uF;16V;10%;X5R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3502	E1101009130	2.2uF;16V;10%;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3503	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3504	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3505	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3506	E1101007650	10uF;25V;10%;X5R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3510	E1101006220	10nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3511	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3512	E1101009020	220nF;50V;K;X7R;2012;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3551	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3552	E1101009220	100nF;16V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3602	E1101009360	3.3nF;50V;10%;X7R;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3603	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3605	E1101009770	22uF;16V;10%;X5R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3607	E1101006700	100pF;50V;5%;NPO;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3608	E1101009380	4.7uF;50V;10%;X7R;3216;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			C3612	E1101009020	220nF;50V;K;X7R;2012;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			CB2000	09-14451Z06	502790-3091 -ED
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			CB3100	09T35473Y16	F169B001-16
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			CB3120	09-25106Z01	S10B-PUDSS-1
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			CB3130	09-25106Z02	S12B-PUDSS-1
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			CB3490	09T85454W03	53398-0371 -E6
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			CH3300	09-29653Z01	FX23-100S-0.5S-T
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			D2460	48-17624Z01	DA3J102D0L -CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			D2461	48-17624Z01	DA3J102D0L -CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			D2462	48-17624Z01	DA3J102D0L -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			D2480	48-19711Z01	BAV99W -CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			D2650	48-05965Z01	DIO,1SS361-L -CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			D2901	48-19711Z01	BAV99W -CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			D3200	48-05965Z01	DIO,1SS361-L -CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			D3201	48-05164Z01	1SS352-TPH3 -CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			D3202	48-05965Z01	DIO,1SS361-L -CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			D3204	48-05965Z01	DIO,1SS361-L -CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			D3205	48-05164Z01	1SS352-TPH3 -CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			D3400	E1403000190	1SR154-400;400V;1.0A;SOD-106;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			E2404	E1103013920	100UF;25V;20%;MVK;8X6;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			E2405	E1103013900	100UF;10V;20%;BDA;6.3X6;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			E2420	E1103012740	22uF;16V;20%;*;5X5;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			E2421	E1103012740	22uF;16V;20%;*;5X5;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			E2440	E1103012990	100uF;16V;20%;A10;6.3X5.7;*;105C;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			E2441	E1103014050	22UF;16V;20%;BXJ;4X5;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			E2442	E1103014050	22UF;16V;20%;BXJ;4X5;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			E2460	E1103013940	3.3UF;50V;20%;MVK;4X5;*;105;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			E2461	E1103013940	3.3UF;50V;20%;MVK;4X5;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			E2600	E1103013930	10UF;25V;20%;MVK;5X5;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			E2601	E1103013930	10UF;25V;20%;MVK;5X5;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			E2650	E1103012990	100uF;16V;20%;A10;6.3X5.7;*;105C;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			E3100	23-19876Z04	4700uF;25V;20%;*;18X20;7.5mm;*;*
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			E3200	E1103013930	10UF;25V;20%;MVK;5X5;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			E3300	E1103014040	470UF;25V;20%;BXJ;10X10;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			E3301	E1103014000	470UF;16V;20%;BXJ;8X10;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			E3400	E1103012990	100uF;16V;20%;A10;6.3X5.7;*;105C;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			E3404	E1103014010	10UF;25V;20%;BXJ;4X5;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			E3405	E1103014020	22UF;25V;20%;BXJ;5X5;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			E3406	E1103013980	680UF;10V;20%;BXJ;8X10;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			E3430	E1103014020	22UF;25V;20%;BXJ;5X5;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			E3440	E1103014030	33UF;25V;20%;BXF;5X5;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			E3470	E1103013890	33UF;10V;20%;BXJ;5X5;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			E3471	E1103013910	47UF;16V;20%;MVK;6X5;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			E3480	E1103013960	22UF;6.3V;20%;BXJ;4X5;*;105;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			E3510	E1103013960	22UF;6.3V;20%;BXJ;4X5;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			E3511	E1103013890	33UF;10V;20%;BXJ;5X5;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			E3600	E1103013970	330UF;6.3V;20%;BXJ;6.3X8;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			E3601	E1103014020	22UF;25V;20%;BXJ;5X5;*;105;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC2000	51-23912Z01	MTP,D70F3479AGJAQ-QT
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC2001	51T15185Y03	TC7SH08FU,LJ -CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC2180	51-24805Z01	BR24T16F-WGE2 -SE2
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC2190	51-04315Z22	BU4229G-TR -CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC2200	51-30382Z02	SAF7754HV/N205K
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC2202	51-18520Z01	MX25L8035EM21-10G-ST
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC2203	51-29083Z01	SN74AHCU04QPWRG4-SE2
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC2400	51-16740Z02	BD34601FS-ME2 -SE6
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC2401	E1605006440	BA4560RFVM;MSOP8;8P;DUAL;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC2420	51T25576W07	NJM4580V-TE2 -SE2
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC2421	51T25576W07	NJM4580V-TE2 -SE2
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC2422	51T25576W07	NJM4580V-TE2 -SE2
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC2440	51-20907Z01	TPS60402QDBVRQ1 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC2441	51-16845Z04	TAR5S50U-TE85L -CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC2480	51T15647Y01	NJM4558V-TE2 -SE2
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC2500	51-32736Z01	AK7738VQ -QEA
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC2600	51-30375Z01	STPA003OD-4WX -ZS
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC2801	51-29751Z01	TEF7016HN/V102Y
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC3000	51-29497Z01	SAF3602EL/V3040BY
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC3001	51-30259Z02	S25FL116K0XMFA040-ST
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC3200	51-20765Z31	S-1009N37H-M5T2U -CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC3207	51T15614Y01	TC74HC4051AFT-EL-SE5
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC3208	51T15614Y01	TC74HC4051AFT-EL-SE5
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC3209	51T35360Y01	TC7WH08FU-L -SE1
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC3210	51T15194Y03	74VHCT08AFT-EL -SE2
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC3213	51T15647Y01	NJM4558V-TE2 -SE2
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC3220	E1605006440	BA4560RFVM;MSOP8;8P;DUAL;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC3400	51-13711Z02	TB2920AHQ(Z); HZIP25-P-1.00F
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC3420	E1605010310	BD00FC0EEFJ-ME2;HTSOP-J8;8P;1V/15V;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC3430	E1605010310	BD00FC0EEFJ-ME2;HTSOP-J8;8P;1V/15V;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC3440	51-23593Z02	BD00IC0WEFJ-ME2 -SE2
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC3450	51-23593Z02	BD00IC0WEFJ-ME2 -SE2
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC3460	51-23593Z02	BD00IC0WEFJ-ME2 -SE2
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC3470	51-23593Z05	BD00IA5EEFJ-ME2 -SE2
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC3480	51-23593Z02	BD00IC0WEFJ-ME2 -SE2
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC3500	51-07902Z01	NJM2871BF05-TE1 -CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC3510	51-07902Z02	NJM2871BF33-TE1 -CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			IC3601	E1605009450	BD90640EFJ-C;HTSOP-J8;8P;3.3V;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			L2200	24-24463Z01	BLM15HD601SH1-CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			L2201	24-24463Z01	BLM15HD601SH1-CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			L2202	24-24463Z01	BLM15HD601SH1-CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			L2203	24-17733Z06	NLCV32T 47RK -CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			L2204	24-17733Z06	NLCV32T 47RK -CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			L2205	24-24463Z01	BLM15HD601SH1-CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			L2206	24-24463Z01	BLM15HD601SH1-CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			L2210	24-24463Z01	BLM15HD601SH1-CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			L2440	24T95202W25	CDRH64B 102M -E6

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			L2441	24T95202W25	CDRH64B 102M -E6
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			L2500	24-06212Z05	BLM15BB121SH1-CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			L2501	24-06212Z05	BLM15BB121SH1-CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			L2502	24-06212Z05	BLM15BB121SH1-CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			L2801	24T95456W33	BLM18PG121SH1-CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			L2802	24T95456W27	BLM18PG181SH1-CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			L2803	24T95456W27	BLM18PG181SH1-CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			L2804	24-06212Z10	BLM15BB750SH1-CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			L2808	24-06212Z10	BLM15BB750SH1-CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			L2902	24-30185Z23	LQW2BAS R22J -CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			L2904	24T25164Y12	#FSLM2520-R82J=P2
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			L2905	24-09036Z11	LQW18AN R27J -CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			L2906	24T25164Y19	#FSLM2520-3R3J=P2
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			L3000	24-09036Z07	LQW18AN R047J-CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			L3001	24T25164Y17	#FSLM2520-2R2J=P2
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			L3490	24T95456W27	BLM18PG181SH1-CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			L3491	24-28869Z04	BKP1608HS121 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			L3492	24T95456W27	BLM18PG181SH1-CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			L3493	24T95456W27	BLM18PG181SH1-CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			L3494	24T95456W27	BLM18PG181SH1-CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			L3495	24-28869Z04	BKP1608HS121 -CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			L3601	24-17581Z02	NRS5020T 1R5N-E2
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			L3602	24-08610Z03	DS106C2 10RM -EA
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			MC2480	50-06821Z02	KUB2823-013991
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			PS3101	E2801000650	24V;40A;4.37x3.07x0.81;*
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			Q2460	E1502002040	IMH23;NPN;300mW;SMT6;4.7K;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			Q2461	E1502002040	IMH23;NPN;300mW;SMT6;4.7K;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			Q2462	E1502002040	IMH23;NPN;300mW;SMT6;4.7K;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			Q2650	E1506000300	UMD3N;*;150mW;UMT6;*;6;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			Q2651	48-20093Z01	DMC561010R -CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			Q2652	48T25737Y01	UMD2N-TR -CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			Q3080	48-13000Z05	LTC124EUBFS8-TLCP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			Q3200	48-12999Z01	LTA114EUBFS8-TLCP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			Q3202	48-13000Z05	LTC124EUBFS8-TLCP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			Q3203	48T25737Y01	UMD2N-TR -CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			Q3204	48-13000Z01	LTC114EUBFS8-TLCP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			Q3205	48T25737Y01	UMD2N-TR -CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			Q3207	48-13000Z01	LTC114EUBFS8-TLCP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			Q3208	48-18270Z01	LSA1576UB FS8 -CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			Q3210	E1502000300	KRC101S;NPN;200mW;SOT-23;4.7K,4.7K;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2001	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2005	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2006	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2007	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2008	E1001011350	2.7Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2009	E1001011350	2.7Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2010	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2011	E1001021040	2.2Kohm;F;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2012	E1001021040	2.2Kohm;F;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2014	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2015	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2016	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2017	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2018	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2019	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2023	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2024	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2025	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2026	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2027	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2028	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2029	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2030	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2031	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2032	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2033	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2034	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2035	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2036	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2039	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2040	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2041	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2042	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2043	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2044	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2045	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2046	E1001021040	2.2Kohm;F;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2047	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2048	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2053	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2054	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2055	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2060	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2061	E1001016720	1Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2062	E1001003870	100ohm;J;1/16W;DA;1.6X0.8;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2063	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2070	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2071	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2072	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2073	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2074	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2076	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2077	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2078	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2081	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2083	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2089	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2092	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2093	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2100	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2101	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2102	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2103	E1001016720	1Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2104	E1001016720	1Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2105	E1001016720	1Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2108	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2109	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2110	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2111	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2180	E1001018140	4.7Kohm;F;1/16;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2181	E1001018140	4.7Kohm;F;1/16;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2190	E1001004330	10Kohm;J;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2191	E1001004100	1Kohm;J;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2192	E1001021580	680ohm;J;1/16W;DA;1.0x0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2204	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2207	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2213	E1001012030	6.8Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2214	E1001012030	6.8Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2215	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2216	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2217	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2218	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2221	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2222	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2226	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2227	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2228	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2229	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2230	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2231	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2232	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2233	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2234	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2235	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2249	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2250	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2251	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2253	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2254	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2255	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2256	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2258	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2260	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2262	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2263	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2268	E1001012030	6.8Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2270	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2400	E1001017870	5.6Kohm;F;1/16;*;1.0X0.5;*
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2401	E1001011430	56Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2402	E1001016740	2.2Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2404	E1001012030	6.8Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2405	E1001016310	75Kohm;F;1/16W;*;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2406	E1001012030	6.8Kohm;F;1/16W;DA;1.0X0.5;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2407	E1001016310	75Kohm;F;1/16W;*;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2408	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2409	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2410	E1001022180	15Kohm;J;1/16W;DA;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2411	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2412	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2413	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2414	E1001005350	6.8Kohm;F;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2415	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2416	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2417	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2418	E1001005350	6.8Kohm;F;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2419	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2420	E1001011530	100Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2421	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2422	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2423	E1001011530	100Kohm;F;1/16W;DA;1.0X0.5;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2424	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2425	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2426	E1001011530	100Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2427	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2428	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2429	E1001011530	100Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2430	E1001011530	100Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2431	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2432	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2433	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2434	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2435	E1001011530	100Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2436	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2437	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2438	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2439	E1001018130	3.3Kohm;J;1/16;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2453	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2454	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2457	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2459	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2460	E1001011480	75Kohm;J;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2461	E1001011480	75Kohm;J;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2462	E1001011480	75Kohm;J;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2463	E1001011480	75Kohm;J;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2464	E1001011480	75Kohm;J;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2465	E1001011480	75Kohm;J;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2466	E1001006620	100ohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2467	E1001006620	100ohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2468	E1001006620	100ohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2469	E1001006620	100ohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2470	E1001006620	100ohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2471	E1001006620	100ohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2472	E1001006660	220ohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2473	E1001006660	220ohm;J;1/4W;DA;3.2X1.6;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2474	E1001006660	220ohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2475	E1001006660	220ohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2476	E1001006660	220ohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2477	E1001006660	220ohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2480	E1001011660	330Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2481	E1001016840	100Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2482	E1001022180	15Kohm;J;1/16W;DA;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2483	E1001016840	100Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2484	E1001022180	15Kohm;J;1/16W;DA;1005;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2485	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2486	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2487	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2488	E1001021040	2.2Kohm;F;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2489	E1001009770	470Kohm;J;1/16W;DA;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2490	E1001021040	2.2Kohm;F;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2500	E1001016260	470ohm;J;1/16W;*;1X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2501	E1001016260	470ohm;J;1/16W;*;1X0.5;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2502	E1001016260	470ohm;J;1/16W;*;1X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2503	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2504	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2505	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2506	E1001016750	4.7Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2507	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2509	E1001016260	470ohm;J;1/16W;*;1X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2510	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2511	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2512	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2513	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2514	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2515	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2516	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2519	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2520	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2522	E1001006970	0ohm;J;1/4W;DA;3.2X1.6;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2523	E1001016750	4.7Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2524	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2525	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2528	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2530	E1001006970	0ohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2532	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2533	E1001003160	2Kohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2534	E1001006970	0ohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2540	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2541	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2542	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2543	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2544	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2545	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2546	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2547	E1001016260	470ohm;J;1/16W;*;1X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2548	E1001016260	470ohm;J;1/16W;*;1X0.5;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2549	E1001016260	470ohm;J;1/16W;*;1X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2604	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2605	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2650	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2651	E1001016720	1Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2652	E1001016720	1Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2653	E1001016820	47Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2654	E1001003940	220ohm;J;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2655	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2800	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2804	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2900	E1001016980	0ohm;J;1/16;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2902	E1001005700	470Kohm;F;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2903	E1001005700	470Kohm;F;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R2904	E1001012270	68ohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3005	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3007	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3008	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3009	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3010	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3011	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3012	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3013	E1001021080	22ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3014	E1001022980	56ohm;J;1/16W;*;1.0x0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3015	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3016	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3017	E1001011770	15ohm;J;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3018	E1001011770	15ohm;J;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3019	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3020	E1001016750	4.7Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3021	E1001016750	4.7Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3022	E1001016750	4.7Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3023	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3025	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3029	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3030	E1001016750	4.7Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3080	E1001018140	4.7Kohm;F;1/16;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3081	E1001018140	4.7Kohm;F;1/16;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3082	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3100	E1001004330	10Kohm;J;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3102	E1001004330	10Kohm;J;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3105	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3106	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3107	E1001003870	100ohm;J;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3108	E1001003870	100ohm;J;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3109	E1001004100	1Kohm;J;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3134	E1001004100	1Kohm;J;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3136	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3137	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3200	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3202	E1001009770	470Kohm;J;1/16W;DA;1005;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3203	E1001011120	15Kohm;F;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3204	E1001023270	36kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3205	E1001011350	2.7Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3206	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3207	E1001019970	33Kohm;F;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3208	E1001013040	18Kohm;F;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3209	E1001024010	4.7K;J;1/4;*;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3210	E1001024010	4.7K;J;1/4;*;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3211	E1001016820	47Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3213	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3218	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3219	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3222	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3223	E1001016180	24Kohm;F;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3226	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3234	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3235	E1001005270	3.3Kohm;F;1/16W;DA;1.6X0.8;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3236	E1001004170	2.2Kohm;J;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3237	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3239	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3246	E1001018130	3.3Kohm;J;1/16;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3249	E1001004100	1Kohm;J;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3250	E1001011580	220Kohm;J;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3251	E1001018130	3.3Kohm;J;1/16;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3252	E1001004100	1Kohm;J;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3254	E1001011580	220Kohm;J;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3305	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3308	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3311	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3313	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3400	E1001022870	130kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3401	E1001008390	120Kohm;F;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3402	E1001019540	5.1Kohm;F;1/10W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3403	E1001022540	75kohm;F;1/10W;DA;1.6x0.8;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3404	E1001005330	5.6Kohm;F;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3405	E1001022690	270kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3406	E1001022530	82kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3407	E1001006880	2.7Kohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3408	E1001011410	3.9Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3409	E1001012030	6.8Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3410	E1001006940	10Kohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3411	E1001012030	6.8Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3412	E1001012030	6.8Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3413	E1001021070	33Kohm;F;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3414	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3415	E1001019540	5.1Kohm;F;1/10W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3416	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3417	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3420	E1001012030	6.8Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3421	E1001011470	68Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3422	E1001011350	2.7Kohm;F;1/16W;DA;1.0X0.5;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3423	E1001019540	5.1Kohm;F;1/10W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3424	E1001022540	75kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3426	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3430	E1001011470	68Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3431	E1001011350	2.7Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3432	E1001012030	6.8Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3433	E1001024070	680Kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3434	E1001018280	51Kohm;F;1/16;DA;1.6X0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3440	E1001024070	680Kohm;F;1/10W;DA;1.6x0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3442	E1001016790	12Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3443	E1001011350	2.7Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3444	E1001018140	4.7Kohm;F;1/16;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3445	E1001019390	56Kohm;F;1/10W;*;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3450	E1001017870	5.6Kohm;F;1/16;*;1.0X0.5;*
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3451	E1001024740	330ohm;J;1/16W;*;1.0x0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3452	E1001016750	4.7Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3453	E1001017870	5.6Kohm;F;1/16;*;1.0X0.5;*

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3454	E1001011500	82Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3461	E1001021040	2.2Kohm;F;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3462	E1001012490	270ohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3463	E1001018140	4.7Kohm;F;1/16;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3464	E1001005330	5.6Kohm;F;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3465	E1001005560	68Kohm;F;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3471	E1001021040	2.2Kohm;F;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3472	E1001018700	470ohm;F;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3473	E1001018140	4.7Kohm;F;1/16;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3474	E1001005370	8.2Kohm;F;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3475	E1001008470	560Kohm;F;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3480	E1001008370	62Kohm;F;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3482	E1001016790	12Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3483	E1001011350	2.7Kohm;F;1/16W;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3484	E1001018140	4.7Kohm;F;1/16;DA;1.0X0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3485	E1001008450	360Kohm;F;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3491	E1001016980	0ohm;J;1/16;DA;1.6X0.8;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3492	E1001021590	3.3ohm;F;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3493	E1001016980	0ohm;J;1/16;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3500	E1001016720	1Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3510	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3511	E1001019540	5.1Kohm;F;1/10W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3512	E1001015960	160Kohm;F;1/16W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3600	E1001006970	0ohm;J;1/4W;DA;3.2X1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3601	E1001016790	12Kohm;F;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3602	E1001018320	300Kohm;F;1/16;DA;1.6X0.8;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3603	E1001019480	3.3Kohm;F;1/16W;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3604	E1001010930	27Kohm;F;1/16W;DA;1005;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3606	E1001023130	1.5kohm;F;1/16W;DA;1.0x0.5;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3608	E1001019540	5.1Kohm;F;1/10W;DA;1.6X0.8;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3609	E1001016760	6.8Kohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3610	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			R3630	E1001009050	120ohm;J;1/4W;DA;3.2x1.6;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			SA2901	08-19391Z01	IMSA-6803-01Y-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			SA3000	48-08988Z01	EZJZ0V800AA -CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			SD2440	48-22179Z01	SHT DB3X313F0LCP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			SD2441	E1405000160	RB160L-40;40V;1A;SOD-106;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			SD3080	E1405000160	RB160L-40;40V;1A;SOD-106;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			SD3601	E1405001220	RB056L-40;40V;3A;PMDS;CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			SF3000	91-29821Z01	B39152B1664U4-CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			T3000	25-29029Z01	DXP18BN5014-CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			T3100	25-12466Z01	GLI-UB3442 -DB
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			TH2000	48T75219Y02	NCP18WB473F1S-CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			TML3000	29-22540Z01	OGCP-702020 -E4
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			VT2901	24-29820Z01	RF FM M5-N/R-E5
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			XL2000	91-16024Z01	3.98Mhz;*;*;*;*;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			XL2200	91-26661Z31	55.46Mhz;*;*;8pf;*;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			XL2500	91-26661Z02	12.28Mhz;*;*;8pf;*;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			XL3000	91-26661Z31	55.46Mhz;*;*;8pf;*;TP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			ZD2480	48T62934F05	ZEN.RD3.0MB2 -CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			ZD3100	48-23921Z01	ZEN ZSH5MAZ27-ED

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			ZD3200	48-16145Z25	ZEN PZU6.2B2 -CP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			ZD3201	48-21149Z23	ZEN DZ2J056M0LCP
AUDIO-P.W.Board(Main-unit)(iLX-F903D-iLX-F309E)			ZD3202	48-01607Z08	DIO,ZEN LUDZ3.9B -CP
GPS-P.W.Board(Main-unit)			ANT900	09T45601Y01	GT5-1P-DS(70)
GPS-P.W.Board(Main-unit)			C905	E1101010240	1uF;25V;K;X7R;1608;TP
GPS-P.W.Board(Main-unit)			C906	E1101007970	22nF;50V;10%;X7R;1608;CP
GPS-P.W.Board(Main-unit)			C907	E1101010050	150pF;50V;5%;NPO;1608;TP
GPS-P.W.Board(Main-unit)			C908	E1101009220	100nF;16V;10%;X7R;1005;TP
GPS-P.W.Board(Main-unit)			C909	E1101006430	12pF;50V;5%;NPO;1005;CP
GPS-P.W.Board(Main-unit)			C910	E1101007420	100nF;50V;10%;X7R;1608;TP
GPS-P.W.Board(Main-unit)			C911	E1101009020	220nF;50V;K;X7R;2012;TP
GPS-P.W.Board(Main-unit)			C912	E1101006460	33pF;50V;5%;NPO;1005;CP
GPS-P.W.Board(Main-unit)			C913	E1101007930	10uF;10V;K;X5R;2012;TP
GPS-P.W.Board(Main-unit)			C914	E1101009020	220nF;50V;K;X7R;2012;TP
GPS-P.W.Board(Main-unit)			C915	E1101007930	10uF;10V;K;X5R;2012;TP
GPS-P.W.Board(Main-unit)			C917	E1101006450	22pF;50V;5%;NPO;1005;CP
GPS-P.W.Board(Main-unit)			C918	E1101007930	10uF;10V;K;X5R;2012;TP
GPS-P.W.Board(Main-unit)			C919	E1101009020	220nF;50V;K;X7R;2012;TP
GPS-P.W.Board(Main-unit)			C920	E1101009020	220nF;50V;K;X7R;2012;TP
GPS-P.W.Board(Main-unit)			C921	E1101009020	220nF;50V;K;X7R;2012;TP
GPS-P.W.Board(Main-unit)			C922	E1101010670	22uF;16V;10%;X5R;3225;TP
GPS-P.W.Board(Main-unit)			C923	E1101007430	100nF;50V;10%;X7R;2012;TP
GPS-P.W.Board(Main-unit)			C924	E1101007040	2.2uF;10V;K;X5R;1608;CP
GPS-P.W.Board(Main-unit)			C925	E1101006680	2.2uF;16V;10%;X7R;3216;CP
GPS-P.W.Board(Main-unit)			C926	E1101004190	220pF;50V;10%;X7R;1005;TP
GPS-P.W.Board(Main-unit)			C928	E1101007930	10uF;10V;K;X5R;2012;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
GPS-P.W.Board(Main-unit)			C929	E1101007930	10uF;10V;K;X5R;2012;TP
GPS-P.W.Board(Main-unit)			C930	E1101009190	0.22uF;25V;10%;X7R;1608;CP
GPS-P.W.Board(Main-unit)			CH900	09-32417Z01	IMSA9984S-100YEZ
GPS-P.W.Board(Main-unit)			D900	E1404000140	DA204U;20V;200mA;UMD3;CP
GPS-P.W.Board(Main-unit)			IC901	E1605004180	NJM2903V;SSOP;8P;DUAL;CP
GPS-P.W.Board(Main-unit)			IC902	E3304000100	GYRO;SMI130;4.5X3X1
GPS-P.W.Board(Main-unit)			IC903	51-18743Z01	TLF4277EL -SE2
GPS-P.W.Board(Main-unit)			L900	24T95456W31	BLM18PG471SH1-CP
GPS-P.W.Board(Main-unit)			L901	24T75143Y22	HK1005 R056J -CP
GPS-P.W.Board(Main-unit)			Q900	48-13000Z01	LTC114EUBFS8-TLCP
GPS-P.W.Board(Main-unit)			Q901	48-13000Z05	LTC124EUBFS8-TLCP
GPS-P.W.Board(Main-unit)			R901	E1001021040	2.2Kohm;F;1/16W;DA;1.0X0.5;CP
GPS-P.W.Board(Main-unit)			R902	E1001006940	10Kohm;J;1/4W;DA;3.2X1.6;CP
GPS-P.W.Board(Main-unit)			R903	E1001016840	100Kohm;J;1/16;DA;1.0X0.5;CP
GPS-P.W.Board(Main-unit)			R904	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
GPS-P.W.Board(Main-unit)			R905	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
GPS-P.W.Board(Main-unit)			R906	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
GPS-P.W.Board(Main-unit)			R907	E1001016770	10Kohm;J;1/16;DA;1.0X0.5;CP
GPS-P.W.Board(Main-unit)			R908	E1001016820	47Kohm;J;1/16;DA;1.0X0.5;CP
GPS-P.W.Board(Main-unit)			R909	E1001018360	47Kohm;J;1/4W;DA;3.2x1.6;TP
GPS-P.W.Board(Main-unit)			R910	E1001022820	16kohm;F;1/10W;DA;1.6x0.8;TP
GPS-P.W.Board(Main-unit)			R911	E1001008290	24Kohm;F;1/16W;DA;1.6X0.8;CP
GPS-P.W.Board(Main-unit)			R913	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
GPS-P.W.Board(Main-unit)			R914	E1001016690	33ohm;J;1/16;DA;1.0X0.5;CP
GPS-P.W.Board(Main-unit)			R915	E1001023210	22kohm;J;1/16W;DA;1.0x0.5;TP
GPS-P.W.Board(Main-unit)			R916	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
GPS-P.W.Board(Main-unit)			R917	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
GPS-P.W.Board(Main-unit)			R918	E1001016740	2.2Kohm;J;1/16;DA;1.0X0.5;CP
GPS-P.W.Board(Main-unit)			R919	E1001016740	2.2Kohm;J;1/16;DA;1.0X0.5;CP
GPS-P.W.Board(Main-unit)			R920	E1001016660	0ohm;J;1/16W;DA;1.0X0.5;CP
GPS-P.W.Board(Main-unit)			R921	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
GPS-P.W.Board(Main-unit)			R922	E1001016700	100ohm;J;1/16;DA;1.0X0.5;CP
GPS-P.W.Board(Main-unit)			R923	E1001023210	22kohm;J;1/16W;DA;1.0x0.5;TP
GPS-P.W.Board(Main-unit)			R925	E1001023210	22kohm;J;1/16W;DA;1.0x0.5;TP
GPS-P.W.Board(Main-unit)			R927	E1001018140	4.7Kohm;F;1/16;DA;1.0X0.5;TP
GPS-P.W.Board(Main-unit)			R928	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
GPS-P.W.Board(Main-unit)			R929	E1001018140	4.7Kohm;F;1/16;DA;1.0X0.5;TP
GPS-P.W.Board(Main-unit)			R930	E1001021590	3.3ohm;F;1/4W;DA;3.2X1.6;CP
GPS-P.W.Board(Main-unit)			R931	E1001005560	68Kohm;F;1/16W;DA;1.6X0.8;CP
GPS-P.W.Board(Main-unit)			R932	E1001021790	330ohm;F;1/4W;DA;3.2x1.6;CP
GPS-P.W.Board(Main-unit)			R933	E1001023130	1.5kohm;F;1/16W;DA;1.0x0.5;TP
GPS-P.W.Board(Main-unit)			R934	E1001022570	6.2kohm;F;1/10W;DA;1.6x0.8;TP
GPS-P.W.Board(Main-unit)			SD900	48-16030Z02	SHT 1PS79SB31-CP
GPS-P.W.Board(Main-unit)			TU900	E190100104A	DRGPS;1575.42MHz;16X12.2;N.C
GPS-P.W.Board(Main-unit)			Z900	91T45556Y03	NFM21HC101U1H-CP
GPS-P.W.Board(Main-unit)			Z901	91T45556Y03	NFM21HC101U1H-CP
BT.ANT-P.W.Board(Main-unit)			ANT9001	09-07494Z01	U.FL-R-SMT-1(80)-E2
BT.ANT-P.W.Board(Main-unit)			C9003	E1101006070	3.9pF;50V;C;COG;1005;CP
Miscellaneous			ANT5502	09-24492Z04	U.FL-2LP-066N1
Miscellaneous		#1	ET3150	E2703004380	ASSY CABLE;09-19615Z02-A
Miscellaneous			M3490	59-14185Z03	ASB0412MA-00DWT
LCD P.W.Board(Display-unit)			BD138	E1801006690	470ohm;25%;1.6X0.8;TP;1
LCD P.W.Board(Display-unit)			BD2001	E1801006690	470ohm;25%;1.6X0.8;TP;1

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
LCD P.W.Board(Display-unit)			BD2002	E1801006690	470ohm;25%;1.6X0.8;TP;1
LCD P.W.Board(Display-unit)			BD2003	E1801006690	470ohm;25%;1.6X0.8;TP;1
LCD P.W.Board(Display-unit)			BD2004	E1801006690	470ohm;25%;1.6X0.8;TP;1
LCD P.W.Board(Display-unit)			BD2006	E1203002700	60ohm;25%;3500mA;2012;TP
LCD P.W.Board(Display-unit)			BD2007	E1801006690	470ohm;25%;1.6X0.8;TP;1
LCD P.W.Board(Display-unit)			BD2008	E1801006690	470ohm;25%;1.6X0.8;TP;1
LCD P.W.Board(Display-unit)			BD2009	E1801006690	470ohm;25%;1.6X0.8;TP;1
LCD P.W.Board(Display-unit)			BD2010	E1801006690	470ohm;25%;1.6X0.8;TP;1
LCD P.W.Board(Display-unit)			BD2011	E1801006690	470ohm;25%;1.6X0.8;TP;1
LCD P.W.Board(Display-unit)			BD2018	E1203002130	60ohm;25%;2000mA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			BD2019	E1203002130	60ohm;25%;2000mA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			BD313	E1001016670	0ohm;J;1/8;DA;2.0X1.2;CP
LCD P.W.Board(Display-unit)			C116	E1101009110	2.2uF;16V;10%;X5R;1608;TP
LCD P.W.Board(Display-unit)			C1551	E1101009640	0.47uF;50V;10%;X5R;1608;TP
LCD P.W.Board(Display-unit)			C1559	E1101009380	4.7uF;50V;10%;X7R;3216;TP
LCD P.W.Board(Display-unit)			C1560	E1101005340	1uF;50V;K;X7R;1608;CP
LCD P.W.Board(Display-unit)			C1561	E1101006550	0.1uF;16V;K;X7R;1005;CP
LCD P.W.Board(Display-unit)			C1562	E1101009110	2.2uF;16V;10%;X5R;1608;TP
LCD P.W.Board(Display-unit)			C1563	E1101007960	1nF;50V;10%;X7R;1608;CP
LCD P.W.Board(Display-unit)			C1564	E1101009380	4.7uF;50V;10%;X7R;3216;TP
LCD P.W.Board(Display-unit)			C1565	E1101006550	0.1uF;16V;K;X7R;1005;CP
LCD P.W.Board(Display-unit)			C1568	E1101009110	2.2uF;16V;10%;X5R;1608;TP
LCD P.W.Board(Display-unit)			C1569	E1101009380	4.7uF;50V;10%;X7R;3216;TP
LCD P.W.Board(Display-unit)			C1570	E1101007930	10uF;10V;K;X5R;2012;TP
LCD P.W.Board(Display-unit)			C1571	E1101007930	10uF;10V;K;X5R;2012;TP
LCD P.W.Board(Display-unit)			C1573	E1101007930	10uF;10V;K;X5R;2012;TP
LCD P.W.Board(Display-unit)			C1574	E1101007930	10uF;10V;K;X5R;2012;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
LCD P.W.Board(Display-unit)			C1575	E1101007930	10uF;10V;K;X5R;2012;TP
LCD P.W.Board(Display-unit)			C1576	E1101009110	2.2uF;16V;10%;X5R;1608;TP
LCD P.W.Board(Display-unit)			C2033	E1101009230	220nF;50V;10%;X7R;1608;CP
LCD P.W.Board(Display-unit)			C2037	E1101007420	100nF;50V;10%;X7R;1608;TP
LCD P.W.Board(Display-unit)			C2040	E1101007420	100nF;50V;10%;X7R;1608;TP
LCD P.W.Board(Display-unit)			C2044	E1101007960	1nF;50V;10%;X7R;1608;CP
LCD P.W.Board(Display-unit)			C2045	E1101007320	100pF;50V;5%;NPO;1608;TP
LCD P.W.Board(Display-unit)			C2046	E1101007420	100nF;50V;10%;X7R;1608;TP
LCD P.W.Board(Display-unit)			C2047	E1101009940	10uF;16V;20%;X5R;1608;TP
LCD P.W.Board(Display-unit)			C2048	E1101008050	2.2nF;50V;10%;X7R;1608;CP
LCD P.W.Board(Display-unit)			C2052	E1101009480	47pF;50V;5%;NPO;1608;TP
LCD P.W.Board(Display-unit)			C2053	E1101007960	1nF;50V;10%;X7R;1608;CP
LCD P.W.Board(Display-unit)			C2054	E1101009230	220nF;50V;10%;X7R;1608;CP
LCD P.W.Board(Display-unit)			C2056	E1101007420	100nF;50V;10%;X7R;1608;TP
LCD P.W.Board(Display-unit)			C2058	E1101010240	1uF;25V;K;X7R;1608;TP
LCD P.W.Board(Display-unit)			C2059	E1101009900	10uF;10V;10%;X5R;3216;TP
LCD P.W.Board(Display-unit)			C2060	E1101007420	100nF;50V;10%;X7R;1608;TP
LCD P.W.Board(Display-unit)			C2061	E1101007960	1nF;50V;10%;X7R;1608;CP
LCD P.W.Board(Display-unit)			C2062	E1101007420	100nF;50V;10%;X7R;1608;TP
LCD P.W.Board(Display-unit)			C2064	E1101007420	100nF;50V;10%;X7R;1608;TP
LCD P.W.Board(Display-unit)			C2066	E1101007420	100nF;50V;10%;X7R;1608;TP
LCD P.W.Board(Display-unit)			C2067	E1101007420	100nF;50V;10%;X7R;1608;TP
LCD P.W.Board(Display-unit)			C2068	E1101007420	100nF;50V;10%;X7R;1608;TP
LCD P.W.Board(Display-unit)			C2069	E1101007420	100nF;50V;10%;X7R;1608;TP
LCD P.W.Board(Display-unit)			C2070	E1101007420	100nF;50V;10%;X7R;1608;TP
LCD P.W.Board(Display-unit)			C2071	E1101010240	1uF;25V;K;X7R;1608;TP
LCD P.W.Board(Display-unit)			C2072	E1101007420	100nF;50V;10%;X7R;1608;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
LCD P.W.Board(Display-unit)			C2073	E1101010260	10uF;25V;20%;X5R;1608;TP
LCD P.W.Board(Display-unit)			C2074	E1101007380	10nF;50V;10%;X7R;1608;TP
LCD P.W.Board(Display-unit)			C2075	E1101009900	10uF;10V;10%;X5R;3216;TP
LCD P.W.Board(Display-unit)			C2076	E1101009130	2.2uF;16V;10%;X7R;2012;TP
LCD P.W.Board(Display-unit)			C2077	E1101007420	100nF;50V;10%;X7R;1608;TP
LCD P.W.Board(Display-unit)			C2078	E1101007420	100nF;50V;10%;X7R;1608;TP
LCD P.W.Board(Display-unit)			C2079	E1101010200	390pF;50V;J;C0G;1608;CP
LCD P.W.Board(Display-unit)			C2083	E1101007420	100nF;50V;10%;X7R;1608;TP
LCD P.W.Board(Display-unit)			C2084	E1101007420	100nF;50V;10%;X7R;1608;TP
LCD P.W.Board(Display-unit)			C2085	E1101007960	1nF;50V;10%;X7R;1608;CP
LCD P.W.Board(Display-unit)			C2086	E1101007650	10uF;25V;10%;X5R;3216;TP
LCD P.W.Board(Display-unit)			C2087	E1101007420	100nF;50V;10%;X7R;1608;TP
LCD P.W.Board(Display-unit)			C2089	E1101007420	100nF;50V;10%;X7R;1608;TP
LCD P.W.Board(Display-unit)			C2090	E1101009230	220nF;50V;10%;X7R;1608;CP
LCD P.W.Board(Display-unit)			C2093	E1101007450	1uF;16V;10%;X5R;1608;TP
LCD P.W.Board(Display-unit)			C2094	E1101010260	10uF;25V;20%;X5R;1608;TP
LCD P.W.Board(Display-unit)			C2095	E1101010260	10uF;25V;20%;X5R;1608;TP
LCD P.W.Board(Display-unit)			C2096	E1101007420	100nF;50V;10%;X7R;1608;TP
LCD P.W.Board(Display-unit)			C2097	E1101007930	10uF;10V;K;X5R;2012;TP
LCD P.W.Board(Display-unit)			C2098	E1101007420	100nF;50V;10%;X7R;1608;TP
LCD P.W.Board(Display-unit)			C2099	E1101007420	100nF;50V;10%;X7R;1608;TP
LCD P.W.Board(Display-unit)			C2101	E1101007420	100nF;50V;10%;X7R;1608;TP
LCD P.W.Board(Display-unit)			C2102	E1101007420	100nF;50V;10%;X7R;1608;TP
LCD P.W.Board(Display-unit)			C2103	E1101007450	1uF;16V;10%;X5R;1608;TP
LCD P.W.Board(Display-unit)			C2104	E1101007420	100nF;50V;10%;X7R;1608;TP
LCD P.W.Board(Display-unit)			C2105	E1101007450	1uF;16V;10%;X5R;1608;TP
LCD P.W.Board(Display-unit)			C2106	E1101007420	100nF;50V;10%;X7R;1608;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
LCD P.W.Board(Display-unit)			C2107	E1101007420	100nF;50V;10%;X7R;1608;TP
LCD P.W.Board(Display-unit)			C2108	E1101007420	100nF;50V;10%;X7R;1608;TP
LCD P.W.Board(Display-unit)			C2109	E1101007420	100nF;50V;10%;X7R;1608;TP
LCD P.W.Board(Display-unit)			C2110	E1101007450	1uF;16V;10%;X5R;1608;TP
LCD P.W.Board(Display-unit)			C2111	E1101007380	10nF;50V;10%;X7R;1608;TP
LCD P.W.Board(Display-unit)			C2112	E1101007420	100nF;50V;10%;X7R;1608;TP
LCD P.W.Board(Display-unit)			C2113	E1101007420	100nF;50V;10%;X7R;1608;TP
LCD P.W.Board(Display-unit)			C2114	E1101007420	100nF;50V;10%;X7R;1608;TP
LCD P.W.Board(Display-unit)			C410	E1101006550	0.1uF;16V;K;X7R;1005;CP
LCD P.W.Board(Display-unit)			C411	E1101006550	0.1uF;16V;K;X7R;1005;CP
LCD P.W.Board(Display-unit)			C412	E1101006550	0.1uF;16V;K;X7R;1005;CP
LCD P.W.Board(Display-unit)			C413	E1101006550	0.1uF;16V;K;X7R;1005;CP
LCD P.W.Board(Display-unit)			C414	E1101006550	0.1uF;16V;K;X7R;1005;CP
LCD P.W.Board(Display-unit)			C415	E1101006550	0.1uF;16V;K;X7R;1005;CP
LCD P.W.Board(Display-unit)			C416	E1101006550	0.1uF;16V;K;X7R;1005;CP
LCD P.W.Board(Display-unit)			C417	E1101006550	0.1uF;16V;K;X7R;1005;CP
LCD P.W.Board(Display-unit)			C418	E1101006550	0.1uF;16V;K;X7R;1005;CP
LCD P.W.Board(Display-unit)			C419	E1101006550	0.1uF;16V;K;X7R;1005;CP
LCD P.W.Board(Display-unit)			C420	E1101006550	0.1uF;16V;K;X7R;1005;CP
LCD P.W.Board(Display-unit)			C431	E1101007250	10pF;50V;5%;NPO;1005;TP
LCD P.W.Board(Display-unit)			C432	E1101007250	10pF;50V;5%;NPO;1005;TP
LCD P.W.Board(Display-unit)			C516	E1101010260	10uF;25V;20%;X5R;1608;TP
LCD P.W.Board(Display-unit)			C517	E1101010260	10uF;25V;20%;X5R;1608;TP
LCD P.W.Board(Display-unit)			C558	E1101007850	10pF;50V;J;NPO;1005;TP
LCD P.W.Board(Display-unit)			C582	E1101009130	2.2uF;16V;10%;X7R;2012;TP
LCD P.W.Board(Display-unit)			C585	E1101009560	2.2uF;6.3V;10%;X5R;1608;TP
LCD P.W.Board(Display-unit)			C588	E1101007930	10uF;10V;K;X5R;2012;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
LCD P.W.Board(Display-unit)			C589	E1101009560	2.2uF;6.3V;10%;X5R;1608;TP
LCD P.W.Board(Display-unit)			C597	E1101007850	10pF;50V;J;NPO;1005;TP
LCD P.W.Board(Display-unit)			C598	E1101007850	10pF;50V;J;NPO;1005;TP
LCD P.W.Board(Display-unit)			C599	E1101007850	10pF;50V;J;NPO;1005;TP
LCD P.W.Board(Display-unit)			C600	E1101007850	10pF;50V;J;NPO;1005;TP
LCD P.W.Board(Display-unit)			C602	E1101007850	10pF;50V;J;NPO;1005;TP
LCD P.W.Board(Display-unit)			C603	E1101007850	10pF;50V;J;NPO;1005;TP
LCD P.W.Board(Display-unit)			C609	E1101007850	10pF;50V;J;NPO;1005;TP
LCD P.W.Board(Display-unit)			C610	E1101007850	10pF;50V;J;NPO;1005;TP
LCD P.W.Board(Display-unit)			C611	E1101007850	10pF;50V;J;NPO;1005;TP
LCD P.W.Board(Display-unit)			C612	E1101007850	10pF;50V;J;NPO;1005;TP
LCD P.W.Board(Display-unit)			C613	E1101007850	10pF;50V;J;NPO;1005;TP
LCD P.W.Board(Display-unit)			C614	E1101007850	10pF;50V;J;NPO;1005;TP
LCD P.W.Board(Display-unit)			C621	E1101007850	10pF;50V;J;NPO;1005;TP
LCD P.W.Board(Display-unit)			C622	E1101007850	10pF;50V;J;NPO;1005;TP
LCD P.W.Board(Display-unit)			C623	E1101007850	10pF;50V;J;NPO;1005;TP
LCD P.W.Board(Display-unit)			C624	E1101007850	10pF;50V;J;NPO;1005;TP
LCD P.W.Board(Display-unit)			C625	E1101007850	10pF;50V;J;NPO;1005;TP
LCD P.W.Board(Display-unit)			C626	E1101007850	10pF;50V;J;NPO;1005;TP
LCD P.W.Board(Display-unit)			C635	E1101007850	10pF;50V;J;NPO;1005;TP
LCD P.W.Board(Display-unit)			C636	E1101007850	10pF;50V;J;NPO;1005;TP
LCD P.W.Board(Display-unit)			C637	E1101007850	10pF;50V;J;NPO;1005;TP
LCD P.W.Board(Display-unit)			C638	E1101007850	10pF;50V;J;NPO;1005;TP
LCD P.W.Board(Display-unit)			C639	E1101006450	22pF;50V;5%;NPO;1005;CP
LCD P.W.Board(Display-unit)			C642	E1101007850	10pF;50V;J;NPO;1005;TP
LCD P.W.Board(Display-unit)			C642	E1101007850	10pF;50V;J;NPO;1005;TP
LCD P.W.Board(Display-unit)			C643	E1101007850	10pF;50V;J;NPO;1005;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
LCD P.W.Board(Display-unit)			C644	E1101007850	10pF;50V;J;NPO;1005;TP
LCD P.W.Board(Display-unit)			C645	E1101007850	10pF;50V;J;NPO;1005;TP
LCD P.W.Board(Display-unit)			C647	E1101007850	10pF;50V;J;NPO;1005;TP
LCD P.W.Board(Display-unit)			C648	E1101007850	10pF;50V;J;NPO;1005;TP
LCD P.W.Board(Display-unit)			C650	E1101007420	100nF;50V;10%;X7R;1608;TP
LCD P.W.Board(Display-unit)			C692	E1101009520	27pF;50V;5%;NPO;1608;TP
LCD P.W.Board(Display-unit)			C726	E1101010630	220nF;16V;10%;X7R;1005;TP
LCD P.W.Board(Display-unit)			C728	E1101010630	220nF;16V;10%;X7R;1005;TP
LCD P.W.Board(Display-unit)			C8050	E1101007650	10uF;25V;10%;X5R;3216;TP
LCD P.W.Board(Display-unit)			C808	E1101010640	22uF;10V;10%;X5R;3225;TP
LCD P.W.Board(Display-unit)			C809	E1101010640	22uF;10V;10%;X5R;3225;TP
LCD P.W.Board(Display-unit)			C810	E1101010640	22uF;10V;10%;X5R;3225;TP
LCD P.W.Board(Display-unit)			C811	E1101010640	22uF;10V;10%;X5R;3225;TP
LCD P.W.Board(Display-unit)			C812	E1101010640	22uF;10V;10%;X5R;3225;TP
LCD P.W.Board(Display-unit)			C813	E1101010640	22uF;10V;10%;X5R;3225;TP
LCD P.W.Board(Display-unit)			C814	E1101010640	22uF;10V;10%;X5R;3225;TP
LCD P.W.Board(Display-unit)			CON1001	09-29915Z04-A	50FHH-SM1-GAN-TF
LCD P.W.Board(Display-unit)			CON2001	E2601012250	WTB;10P;0.5;Hor;*;1
LCD P.W.Board(Display-unit)			CON2003	E2601010520	SM02B;4P;6.5;ANG;*;2
LCD P.W.Board(Display-unit)			CON2004	E2601012260	WTB;60P;0.5;Hor;*;1
LCD P.W.Board(Display-unit)			CON2005	E2601012750	WTB;6P;0.5;BF;*;1
LCD P.W.Board(Display-unit)			D2001	E1404000230	DAN217UM;80V;300mA;UMD3F;TP
LCD P.W.Board(Display-unit)			D2002	E1401000140	KDS160;80V;100mA;USC;CP
LCD P.W.Board(Display-unit)			D2004	E1404000230	DAN217UM;80V;300mA;UMD3F;TP
LCD P.W.Board(Display-unit)			D2005	E1405000410	SMAB34;40V;3A;SMA;TP
LCD P.W.Board(Display-unit)			D2006	E1405000410	SMAB34;40V;3A;SMA;TP
LCD P.W.Board(Display-unit)			D2007	E1401000140	KDS160;80V;100mA;USC;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
LCD P.W.Board(Display-unit)			D2008	E1402004580	KDZ15EV;15V;13.8V~15.6V;150mW;ESC;TP
LCD P.W.Board(Display-unit)			D2009	E1402003180	KDZ7.5V;7.5V;*;200mW;USC;CP
LCD P.W.Board(Display-unit)			D2010	E1407000120	uClamp;*;100W;SC-89;TP
LCD P.W.Board(Display-unit)			EC1504	E1103012990	100uF;16V;20%;A10;6.3X5.7;*;105C;TP
LCD P.W.Board(Display-unit)			EC1505	E1103012990	100uF;16V;20%;A10;6.3X5.7;*;105C;TP
LCD P.W.Board(Display-unit)			EC2080	E1103012990	100uF;16V;20%;A10;6.3X5.7;*;105C;TP
LCD P.W.Board(Display-unit)			EC2117	E1103013510	33uF;25V;20%;BXJ;6.3x5.7x*;6.6mm;105;TP
LCD P.W.Board(Display-unit)			EC2120	E1103012990	100uF;16V;20%;A10;6.3X5.7;*;105C;TP
LCD P.W.Board(Display-unit)			ED3	E1203002600	ADMF;30%;22pF;1.27x1.0mm;TP
LCD P.W.Board(Display-unit)			ED4	E1203002600	ADMF;30%;22pF;1.27x1.0mm;TP
LCD P.W.Board(Display-unit)			ED5	E1203002600	ADMF;30%;22pF;1.27x1.0mm;TP
LCD P.W.Board(Display-unit)			ED6	E1203002600	ADMF;30%;22pF;1.27x1.0mm;TP
LCD P.W.Board(Display-unit)			ED7	E1203002600	ADMF;30%;22pF;1.27x1.0mm;TP
LCD P.W.Board(Display-unit)			IC112	E1601002670	TC7SH04FU;INVERTER;USV;5;1;TP
LCD P.W.Board(Display-unit)			IC113	E1601003830	TC7WH74FK,LJ;*;SSOP8;8;*;TP
LCD P.W.Board(Display-unit)			IC121	E1602003860	TW8834;*;TQFP;100;TR
LCD P.W.Board(Display-unit)			L137	E1203002630	120ohm;25%;2A;1.6x0.8mm;TP
LCD P.W.Board(Display-unit)			L138	E1203002630	120ohm;25%;2A;1.6x0.8mm;TP
LCD P.W.Board(Display-unit)			L139	E1203002630	120ohm;25%;2A;1.6x0.8mm;TP
LCD P.W.Board(Display-unit)			L140	E1203002630	120ohm;25%;2A;1.6x0.8mm;TP
LCD P.W.Board(Display-unit)			L141	E1203002630	120ohm;25%;2A;1.6x0.8mm;TP
LCD P.W.Board(Display-unit)			L142	E1203002630	120ohm;25%;2A;1.6x0.8mm;TP
LCD P.W.Board(Display-unit)			L143	E1203002630	120ohm;25%;2A;1.6x0.8mm;TP
LCD P.W.Board(Display-unit)			L144	E1203002630	120ohm;25%;2A;1.6x0.8mm;TP
LCD P.W.Board(Display-unit)			L145	E1203002630	120ohm;25%;2A;1.6x0.8mm;TP
LCD P.W.Board(Display-unit)			L1504	E1801006700	15UH;20%;1X6.5mm;TP;1
LCD P.W.Board(Display-unit)			L2002	E1801006710	6.8uH;20%;1X6.5mm;TP;1

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
LCD P.W.Board(Display-unit)			L2003	E1203002130	60ohm;25%;2000mA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			L2004	E1801006510	10uH;20%;7.1x6.5mm;TP;1
LCD P.W.Board(Display-unit)			L405	E1203001750	NFE31P;50%;6A;3.2X1.6mm;CP
LCD P.W.Board(Display-unit)			Q2000	E1502000310	KRC102S;NPN;200mW;SOT-23;10K,10K;CP
LCD P.W.Board(Display-unit)			Q2001	E1501000080	2SC4081R;NPN;200mW;T106;120-560;CP
LCD P.W.Board(Display-unit)			Q2002	48T25737Y01	UMD2N-TR -CP
LCD P.W.Board(Display-unit)			Q2003	E1501000860	KTA1504S;PNP;150mW;SOT-23;70-400;CP
LCD P.W.Board(Display-unit)			Q2004	E1501001700	KTA1666;PNP;500mW;SOT-89;70-240;TP
LCD P.W.Board(Display-unit)			Q2005	E1502002170	DTC101;NPN;246mW;SOT-23;4.7k/4.7k;TP
LCD P.W.Board(Display-unit)			Q2006	E1502002220	KRC653E;NPN;200mW;TESV;22K/22K;TR
LCD P.W.Board(Display-unit)			R1547	E1001007120	10ohm;J;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R1548	E1001009060	100ohm;F;1/16W;DA;1.6x0.8;CP
LCD P.W.Board(Display-unit)			R1549	E1001024460	88.7Kohm;F;1/10W;DA;1.6x0.8;TP
LCD P.W.Board(Display-unit)			R1550	E1001024420	22.1Kohm;F;1/10W;DA;1.6x0.8;TP
LCD P.W.Board(Display-unit)			R1551	E1001007920	0ohm;J;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R1552	E1001019040	22ohm;J;1/4W;DA;3.2x1.6;CP
LCD P.W.Board(Display-unit)			R2038	E1001006400	1Kohm;J;1/8W;DA;2.0X1.2;CP
LCD P.W.Board(Display-unit)			R2038	E1001006400	1Kohm;J;1/8W;DA;2.0X1.2;CP
LCD P.W.Board(Display-unit)			R2049	E1001007750	100Kohm;J;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R2049	E1001007750	100Kohm;J;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R2050	E1001006400	1Kohm;J;1/8W;DA;2.0X1.2;CP
LCD P.W.Board(Display-unit)			R2050	E1001006400	1Kohm;J;1/8W;DA;2.0X1.2;CP
LCD P.W.Board(Display-unit)			R2052	E1001006400	1Kohm;J;1/8W;DA;2.0X1.2;CP
LCD P.W.Board(Display-unit)			R2052	E1001006400	1Kohm;J;1/8W;DA;2.0X1.2;CP
LCD P.W.Board(Display-unit)			R2056	E1001024150	20ohm;J;1/4W;DA;3.2x1.6;TP
LCD P.W.Board(Display-unit)			R2056	E1001024150	20ohm;J;1/4W;DA;3.2x1.6;TP
LCD P.W.Board(Display-unit)			R2057	E1001007420	2.7Kohm;J;1/16W;DA;1.6X0.8;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
LCD P.W.Board(Display-unit)			R2057	E1001007420	2.7Kohm;J;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R2059	E1001007920	0ohm;J;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R2059	E1001007920	0ohm;J;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R2065	E1001013000	11Kohm;F;1/16W;DA;1.6x0.8;*
LCD P.W.Board(Display-unit)			R2065	E1001013000	11Kohm;F;1/16W;DA;1.6x0.8;*
LCD P.W.Board(Display-unit)			R2066	E1001008220	10Kohm;F;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R2066	E1001008220	10Kohm;F;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R2067	E1001005030	300ohm;F;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R2067	E1001005030	300ohm;F;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R2068	E1001018870	33ohm;J;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R2068	E1001018870	33ohm;J;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R2075	E1001007920	0ohm;J;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R2075	E1001007920	0ohm;J;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R2079	E1001009060	100ohm;F;1/16W;DA;1.6x0.8;CP
LCD P.W.Board(Display-unit)			R2079	E1001009060	100ohm;F;1/16W;DA;1.6x0.8;CP
LCD P.W.Board(Display-unit)			R2080	E1001003660	0ohm;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R2080	E1001003660	0ohm;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R2082	E1001007920	0ohm;J;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R2082	E1001007920	0ohm;J;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R2084	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
LCD P.W.Board(Display-unit)			R2084	E1001022710	22kohm;F;1/10W;DA;1.6x0.8;TP
LCD P.W.Board(Display-unit)			R2087	E1001024750	237ohm;F;1/10W;*;1.6X0.8;TP
LCD P.W.Board(Display-unit)			R2087	E1001024750	237ohm;F;1/10W;*;1.6X0.8;TP
LCD P.W.Board(Display-unit)			R2090	E1001007170	100ohm;J;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R2090	E1001007170	100ohm;J;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R2095	E1001009720	10K;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R2095	E1001009720	10K;J;1/16W;DA;1005;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
LCD P.W.Board(Display-unit)			R2106	E1001009720	10K;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R2106	E1001009720	10K;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R2116	E1001009730	4.7K;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R2118	E1001007920	0ohm;J;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R2119	E1001008960	240ohm;F;1/16W;DA;1.6x0.8;CP
LCD P.W.Board(Display-unit)			R2122	E1001003660	0ohm;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R2128	E1001009720	10K;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R2133	E1001024150	20ohm;J;1/4W;DA;3.2x1.6;TP
LCD P.W.Board(Display-unit)			R2135	E1001007690	47Kohm;J;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R2136	E1001011910	33ohm;J;1/16W;DA;1.0X0.5;TP
LCD P.W.Board(Display-unit)			R2137	E1001004420	24Kohm;J;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R2138	E1001007690	47Kohm;J;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R2139	E1001009720	10K;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R2140	E1001024780	196ohm;F;1/10W;*;1.6X0.8;TP
LCD P.W.Board(Display-unit)			R2144	E1001007690	47Kohm;J;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R2145	E1001009720	10K;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R2147	E1001007690	47Kohm;J;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R2151	E1001007740	82Kohm;J;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R2152	E1001003660	0ohm;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R2153	E1001003660	0ohm;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R2154	E1001024790	40.2ohm;F;1/10W;*;1.6X0.8;TP
LCD P.W.Board(Display-unit)			R2155	E1001003660	0ohm;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R2156	E1001003660	0ohm;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R2157	E1001008160	4.7Kohm;F;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R2158	E1001003660	0ohm;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R2160	E1001003660	0ohm;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R2161	E1001003660	0ohm;J;1/16W;DA;1005;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
LCD P.W.Board(Display-unit)			R2162	E1001003660	0ohm;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R2163	E1001024800	61.9ohm;F;1/10W;*;1.6X0.8;TP
LCD P.W.Board(Display-unit)			R2164	E1001003660	0ohm;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R2165	E1001003660	0ohm;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R2166	E1001003660	0ohm;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R2167	E1001003660	0ohm;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R2169	E1001024810	165ohm;F;1/10W;*;1.6X0.8;TP
LCD P.W.Board(Display-unit)			R2170	E1001003660	0ohm;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R722	E1001003660	0ohm;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R723	E1001009720	10K;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R724	E1001003660	0ohm;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R725	E1001003660	0ohm;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R726	E1001003660	0ohm;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R727	E1001021040	2.2Kohm;F;1/16W;DA;1.0X0.5;CP
LCD P.W.Board(Display-unit)			R728	E1001021040	2.2Kohm;F;1/16W;DA;1.0X0.5;CP
LCD P.W.Board(Display-unit)			R729	E1001009700	1K;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R734	E1001009720	10K;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R735	E1001009720	10K;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R736	E1001003660	0ohm;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R737	E1001003660	0ohm;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R738	E1001003660	0ohm;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R739	E1001009360	100R;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R740	E1001009360	100R;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R741	E1001009360	100R;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R742	E1001003660	0ohm;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R743	E1001011310	1.5Kohm;F;1/16W;DA;1.0X0.5;TP
LCD P.W.Board(Display-unit)			R744	E1001003660	0ohm;J;1/16W;DA;1005;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
LCD P.W.Board(Display-unit)			R745	E1001016860	1Mohm;J;1/16;DA;1.0X0.5;CP
LCD P.W.Board(Display-unit)			R746	E1001009360	100R;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R747	E1001009700	1K;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R748	E1001003660	0ohm;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R749	E1001003660	0ohm;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R750	E1001003660	0ohm;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R8029	E1001024720	24.9ohm;F;1/10W;*;1.6X0.8;TP
LCD P.W.Board(Display-unit)			R8030	E1001011910	33ohm;J;1/16W;DA;1.0X0.5;TP
LCD P.W.Board(Display-unit)			R8031	E1001006400	1Kohm;J;1/8W;DA;2.0X1.2;CP
LCD P.W.Board(Display-unit)			R8032	E1001007170	100ohm;J;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R8035	E1001007170	100ohm;J;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R8039	E1001007920	0ohm;J;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R8040	E1001007540	10Kohm;J;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R8041	E1001008360	47Kohm;F;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R8042	E1001024710	62ohm;F;1/10W;*;1.6X0.8;TP
LCD P.W.Board(Display-unit)			R8043	E1001022720	220kohm;J;1/10W;DA;1.6x0.8;TP
LCD P.W.Board(Display-unit)			R8044	E1001009720	10K;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R8046	E1001008000	470ohm;F;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R8047	E1001004090	910ohm;J;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R8048	E1001007750	100Kohm;J;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R8053	E1001007580	15Kohm;J;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R8054	E1001006750	560ohm;J;1/4W;DA;3.2X1.6;CP
LCD P.W.Board(Display-unit)			R8055	E1001007540	10Kohm;J;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R8061	E1001007620	22Kohm;J;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R8062	E1001008250	15Kohm;F;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R8063	E1001007920	0ohm;J;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R8064	E1001012820	56Kohm;F;1/10;*;1608;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
LCD P.W.Board(Display-unit)			R8070	E1001007920	0ohm;J;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R8071	E1001008220	10Kohm;F;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R8072	E1001022110	124Kohm;F;1/16W;DA;1.6x0.8;CP
LCD P.W.Board(Display-unit)			R8073	E1001003660	0ohm;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R8074	E1001003660	0ohm;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R8076	E1001024700	69.8ohm;F;1/10W;*;1.6X0.8;TP
LCD P.W.Board(Display-unit)			R8077	E1001004560	91Kohm;J;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R8078	E1001007920	0ohm;J;1/16W;DA;1.6X0.8;CP
LCD P.W.Board(Display-unit)			R8081	E1001003660	0ohm;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R8083	E1001023950	2.2ohm;J;1/4W;*;3.2X1.6;TP
LCD P.W.Board(Display-unit)			R8092	E1001024760	64.9ohm;F;1/10W;*;1.6X0.8;TP
LCD P.W.Board(Display-unit)			R8100	E1001011910	33ohm;J;1/16W;DA;1.0X0.5;TP
LCD P.W.Board(Display-unit)			R8103	E1001011910	33ohm;J;1/16W;DA;1.0X0.5;TP
LCD P.W.Board(Display-unit)			R8109	E1001024770	82.5ohm;F;1/10W;*;1.6X0.8;TP
LCD P.W.Board(Display-unit)			R827	E1001009360	100R;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R828	E1001009360	100R;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R830	E1001009360	100R;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R9001	E1001016780	10Kohm;F;1/16;DA;1.0X0.5;CP
LCD P.W.Board(Display-unit)			R9002	E1001017870	5.6Kohm;F;1/16;*;1.0X0.5;*
LCD P.W.Board(Display-unit)			R9003	E1001010830	12Kohm;F;1/16W;DA;1.0X0.5;TP
LCD P.W.Board(Display-unit)			R9004	E1001003660	0ohm;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R9005	E1001012120	22Kohm;F;1/16W;DA;1.0X0.5;TP
LCD P.W.Board(Display-unit)			R926	E1001009360	100R;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R926	E1001009360	100R;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R940	E1001009360	100R;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R941	E1001009360	100R;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R942	E1001009360	100R;J;1/16W;DA;1005;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
LCD P.W.Board(Display-unit)			R943	E1001009360	100R;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R944	E1001009360	100R;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R950	E1001009360	100R;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R951	E1001009360	100R;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R952	E1001009360	100R;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R969	E1001009360	100R;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R970	E1001009360	100R;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R971	E1001009360	100R;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R972	E1001009360	100R;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R973	E1001009360	100R;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R974	E1001009360	100R;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R975	E1001011910	33ohm;J;1/16W;DA;1.0X0.5;TP
LCD P.W.Board(Display-unit)			R982	E1001009360	100R;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R983	E1001009360	100R;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R984	E1001009360	100R;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R985	E1001009360	100R;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R989	E1001009360	100R;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R990	E1001009360	100R;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R991	E1001009360	100R;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R992	E1001009360	100R;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R994	E1001009360	100R;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			R995	E1001009360	100R;J;1/16W;DA;1005;CP
LCD P.W.Board(Display-unit)			RA2000	E1007000460	33ohm;J;1/16W;*;SMD;8;TP
LCD P.W.Board(Display-unit)			RA2001	E1007000460	33ohm;J;1/16W;*;SMD;8;TP
LCD P.W.Board(Display-unit)			RA2002	E1007000460	33ohm;J;1/16W;*;SMD;8;TP
LCD P.W.Board(Display-unit)			RA2003	E1007000460	33ohm;J;1/16W;*;SMD;8;TP
LCD P.W.Board(Display-unit)			RA2004	E1007000460	33ohm;J;1/16W;*;SMD;8;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
LCD P.W.Board(Display-unit)			RA2005	E1007000460	33ohm;J;1/16W;*;SMD;8;TP
LCD P.W.Board(Display-unit)			U1503	E1605010240	LMR23630AF;R-PDSO-G;8;1.0V/36V;CP
LCD P.W.Board(Display-unit)			U2001	E1605004730	NJM2130F;MTP5;5;SING;CP
LCD P.W.Board(Display-unit)			U2002	E1605009240	LT1946AEMS8E;MSOP;8P;*;TP
LCD P.W.Board(Display-unit)			U2003	E1603003190	ISL97671AIRZ;*;QFN;20;TP
LCD P.W.Board(Display-unit)			U9001	E1605009800	BD00IC0MEFJ-ME2;HTSOP-J8;8P;ADJ;CP
LCD P.W.Board(Display-unit)			U9002	E1605009360	XC6210B182PR-G;SOT-89-5;5P;1.5V/6V;CP
LCD P.W.Board(Display-unit)			X101	E2401002450	27Mhz;50ppm;SMD3225;8;*;TP
KEY P.W.Board(Display-unit)			BD315	E1001016670	0ohm;J;1/8;DA;2.0X1.2;CP
KEY P.W.Board(Display-unit)			BD316	E1001016670	0ohm;J;1/8;DA;2.0X1.2;CP
KEY P.W.Board(Display-unit)			C7000	E1606000820	21V;20A;1.0X0.5;TP
KEY P.W.Board(Display-unit)			C7001	E1606000820	21V;20A;1.0X0.5;TP
KEY P.W.Board(Display-unit)			C7002	E1606000820	21V;20A;1.0X0.5;TP
KEY P.W.Board(Display-unit)			C7003	E1606000820	21V;20A;1.0X0.5;TP
KEY P.W.Board(Display-unit)			C7004	E1606000820	21V;20A;1.0X0.5;TP
KEY P.W.Board(Display-unit)			C7005	E1606000820	21V;20A;1.0X0.5;TP
KEY P.W.Board(Display-unit)			C7006	E1606000820	21V;20A;1.0X0.5;TP
KEY P.W.Board(Display-unit)			C7007	E1606000820	21V;20A;1.0X0.5;TP
KEY P.W.Board(Display-unit)			C7008	E1606000820	21V;20A;1.0X0.5;TP
KEY P.W.Board(Display-unit)			C7009	E1606000820	21V;20A;1.0X0.5;TP
KEY P.W.Board(Display-unit)			C7010	E1606000820	21V;20A;1.0X0.5;TP
KEY P.W.Board(Display-unit)			C7011	E1606000820	21V;20A;1.0X0.5;TP
KEY P.W.Board(Display-unit)			C7012	E1606000820	21V;20A;1.0X0.5;TP
KEY P.W.Board(Display-unit)			C7013	E1606000820	21V;20A;1.0X0.5;TP
KEY P.W.Board(Display-unit)			C7014	E1606000820	21V;20A;1.0X0.5;TP
KEY P.W.Board(Display-unit)			C7015	E1606000820	21V;20A;1.0X0.5;TP
KEY P.W.Board(Display-unit)			C7017	E1606000820	21V;20A;1.0X0.5;TP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
KEY P.W.Board(Display-unit)			C7018	E1606000820	21V;20A;1.0X0.5;TP
KEY P.W.Board(Display-unit)			C7019	E1606000820	21V;20A;1.0X0.5;TP
KEY P.W.Board(Display-unit)			C7020	E1606000820	21V;20A;1.0X0.5;TP
KEY P.W.Board(Display-unit)			C7021	E1606000820	21V;20A;1.0X0.5;TP
KEY P.W.Board(Display-unit)			C7022	E1606000820	21V;20A;1.0X0.5;TP
KEY P.W.Board(Display-unit)			C7023	E1606000820	21V;20A;1.0X0.5;TP
KEY P.W.Board(Display-unit)			C7024	E1606000820	21V;20A;1.0X0.5;TP
KEY P.W.Board(Display-unit)			C7025	E1101007970	22nF;50V;10%;X7R;1608;CP
KEY P.W.Board(Display-unit)			C7026	E1101009110	2.2uF;16V;10%;X5R;1608;TP
KEY P.W.Board(Display-unit)			CON2000	E2601012250	WTB;10P;0.5;Hor;*;1
KEY P.W.Board(Display-unit)			D9001	E1606000820	21V;20A;1.0X0.5;TP
KEY P.W.Board(Display-unit)			D9002	E1606000820	21V;20A;1.0X0.5;TP
KEY P.W.Board(Display-unit)			LD2000	E1301002280	CP;WHITE;*;474;1.6X0.8mm;1
KEY P.W.Board(Display-unit)			LD2001	E1301002280	CP;WHITE;*;474;1.6X0.8mm;1
KEY P.W.Board(Display-unit)			LD2002	E1301002280	CP;WHITE;*;474;1.6X0.8mm;1
KEY P.W.Board(Display-unit)			LD2003	E1301002280	CP;WHITE;*;474;1.6X0.8mm;1
KEY P.W.Board(Display-unit)			LD2004	E1301002280	CP;WHITE;*;474;1.6X0.8mm;1
KEY P.W.Board(Display-unit)			LD2005	E1301002280	CP;WHITE;*;474;1.6X0.8mm;1
KEY P.W.Board(Display-unit)			LD2006	E1301002280	CP;WHITE;*;474;1.6X0.8mm;1
KEY P.W.Board(Display-unit)			LD2007	E1301002280	CP;WHITE;*;474;1.6X0.8mm;1
KEY P.W.Board(Display-unit)			LD2008	E1301002280	CP;WHITE;*;474;1.6X0.8mm;1
KEY P.W.Board(Display-unit)			LD2009	E1301002280	CP;WHITE;*;474;1.6X0.8mm;1
KEY P.W.Board(Display-unit)			LD2010	E1301002280	CP;WHITE;*;474;1.6X0.8mm;1
KEY P.W.Board(Display-unit)			LD2011	E1301002280	CP;WHITE;*;474;1.6X0.8mm;1
KEY P.W.Board(Display-unit)			LD2012	E1301002280	CP;WHITE;*;474;1.6X0.8mm;1
KEY P.W.Board(Display-unit)			LD2013	E1301002280	CP;WHITE;*;474;1.6X0.8mm;1
KEY P.W.Board(Display-unit)			LD2014	E1301002280	CP;WHITE;*;474;1.6X0.8mm;1

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
KEY P.W.Board(Display-unit)			LD2015	E1301002280	CP;WHITE;*;474;1.6X0.8mm;1
KEY P.W.Board(Display-unit)			LD2017	E1301002280	CP;WHITE;*;474;1.6X0.8mm;1
KEY P.W.Board(Display-unit)			LD2018	E1301002280	CP;WHITE;*;474;1.6X0.8mm;1
KEY P.W.Board(Display-unit)			LD2019	E1301002280	CP;WHITE;*;474;1.6X0.8mm;1
KEY P.W.Board(Display-unit)			LD2020	E1301002280	CP;WHITE;*;474;1.6X0.8mm;1
KEY P.W.Board(Display-unit)			LD2021	E1301002280	CP;WHITE;*;474;1.6X0.8mm;1
KEY P.W.Board(Display-unit)			LD2022	E1301002280	CP;WHITE;*;474;1.6X0.8mm;1
KEY P.W.Board(Display-unit)			LD2023	E1301002280	CP;WHITE;*;474;1.6X0.8mm;1
KEY P.W.Board(Display-unit)			LD2024	E1301002280	CP;WHITE;*;474;1.6X0.8mm;1
KEY P.W.Board(Display-unit)			R7000	E1001015430	620ohm;F;1/16W;DA;1.6X0.8;CP
KEY P.W.Board(Display-unit)			R7001	E1001015430	620ohm;F;1/16W;DA;1.6X0.8;CP
KEY P.W.Board(Display-unit)			R7002	E1001015430	620ohm;F;1/16W;DA;1.6X0.8;CP
KEY P.W.Board(Display-unit)			R7003	E1001015430	620ohm;F;1/16W;DA;1.6X0.8;CP
KEY P.W.Board(Display-unit)			R7004	E1001015430	620ohm;F;1/16W;DA;1.6X0.8;CP
KEY P.W.Board(Display-unit)			R7005	E1001015430	620ohm;F;1/16W;DA;1.6X0.8;CP
KEY P.W.Board(Display-unit)			R7006	E1001015430	620ohm;F;1/16W;DA;1.6X0.8;CP
KEY P.W.Board(Display-unit)			R7007	E1001015430	620ohm;F;1/16W;DA;1.6X0.8;CP
KEY P.W.Board(Display-unit)			R7008	E1001015430	620ohm;F;1/16W;DA;1.6X0.8;CP
KEY P.W.Board(Display-unit)			R7009	E1001015430	620ohm;F;1/16W;DA;1.6X0.8;CP
KEY P.W.Board(Display-unit)			R7010	E1001015430	620ohm;F;1/16W;DA;1.6X0.8;CP
KEY P.W.Board(Display-unit)			R7011	E1001015430	620ohm;F;1/16W;DA;1.6X0.8;CP
KEY P.W.Board(Display-unit)			R7012	E1001015430	620ohm;F;1/16W;DA;1.6X0.8;CP
KEY P.W.Board(Display-unit)			R7013	E1001015430	620ohm;F;1/16W;DA;1.6X0.8;CP
KEY P.W.Board(Display-unit)			R7014	E1001015430	620ohm;F;1/16W;DA;1.6X0.8;CP
KEY P.W.Board(Display-unit)			R7015	E1001015430	620ohm;F;1/16W;DA;1.6X0.8;CP
KEY P.W.Board(Display-unit)			R7017	E1001008030	1Kohm;F;1/16W;DA;1.6X0.8;CP
KEY P.W.Board(Display-unit)			R7018	E1001008030	1Kohm;F;1/16W;DA;1.6X0.8;CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
KEY P.W.Board(Display-unit)			R7019	E1001008030	1Kohm;F;1/16W;DA;1.6X0.8;CP
KEY P.W.Board(Display-unit)			R7020	E1001008030	1Kohm;F;1/16W;DA;1.6X0.8;CP
KEY P.W.Board(Display-unit)			R7021	E1001008030	1Kohm;F;1/16W;DA;1.6X0.8;CP
KEY P.W.Board(Display-unit)			R7022	E1001008030	1Kohm;F;1/16W;DA;1.6X0.8;CP
KEY P.W.Board(Display-unit)			R7023	E1001008030	1Kohm;F;1/16W;DA;1.6X0.8;CP
KEY P.W.Board(Display-unit)			R7024	E1001008030	1Kohm;F;1/16W;DA;1.6X0.8;CP
KEY P.W.Board(Display-unit)			R7025	E1001024950	47Mohm;J;1/10W;*;1.6X0.8;TP
KEY P.W.Board(Display-unit)			R7027	E1001008030	1Kohm;F;1/16W;DA;1.6X0.8;CP
KEY P.W.Board(Display-unit)			SW2000	E1701000660	SW TACT;SKRPABE010(SPST;3.2x4.6x2.5mm;1.57N;TOP)
KEY P.W.Board(Display-unit)			U2000	E1307000360	SENSOR OPTICAL(RM;PNJ4K01F;*;*)
SUB1 P.W.Board(Display-unit)			CON1	09-29915Z04	50FHH-SM1-GAN-TF
SUB1 P.W.Board(Display-unit)			CON2	E2601012760	WTB;50P;0.8;PLUG;AU;2
SUB2 P.W.Board(Display-unit)			CON3	E2601012900	WTB;50P;0.5;Ver-S;GOLD;2
SUB2 P.W.Board(Display-unit)			CON4	E2601012770	WTB;50P;0.8;SOK;AU;2
SUB2 P.W.Board(Display-unit)			Q2007	E1503001600	KMB3D0P30;PNP;30V;SOT-23;1.25W;3A
SUB2 P.W.Board(Display-unit)			SW2001	E1705000210	SW DETECT;SPVR110102
Miscellaneous(Display-unit)			ET2005	E3401003900	DM-C91800U
Miscellaneous(Display-unit)			LCD2004	E2501001270	HSD090IDW1-C