
EXPLODED VIEW

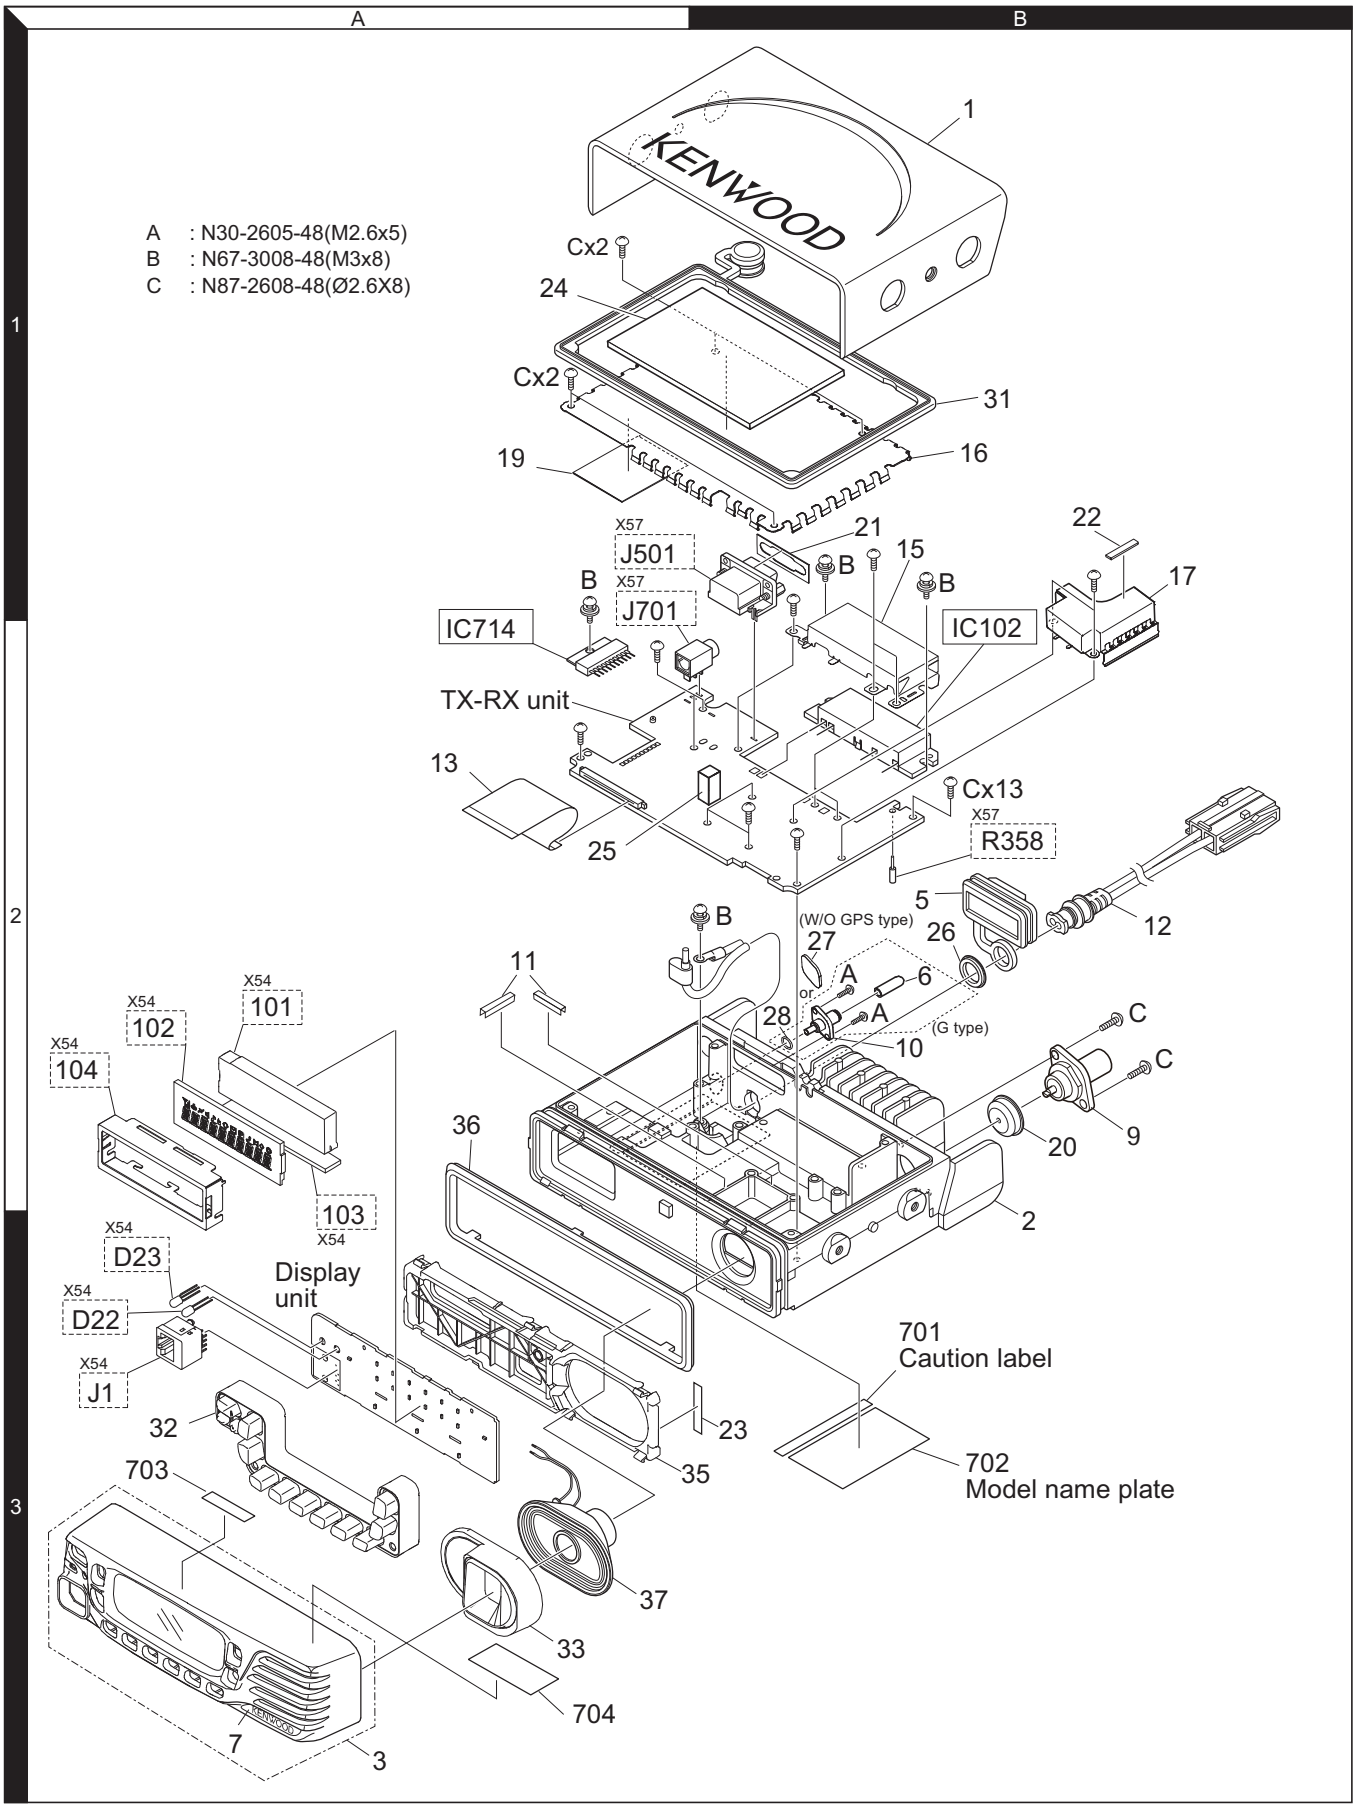

Parts with the exploded numbers larger than 700 are not supplied.
If a part reference number is listed in a box on the exploded view of the PCB, that part does not come with the PCB. These parts must be ordered separately.

NX-720(G)/720

PARTS LIST

✻ New Parts. ⚠indicates safety critical components.
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

L : Scandinavia **K** : USA **P** : Canada
Y : PX (Far East, Hawaii) **T** : England **E** : Europe
C : China **X** : Australia **M** : Other Areas

NX-720(G)/720
DISPLAY UNIT (X54-3830-10)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
			NX-720(G)/720		
1	1B		A02-4073-21	PLASTIC CABINET	
2	2B		A10-4161-01	CHASSIS	
3	3A		A62-1200-03	PANEL ASSY	
5	2B		B09-0732-03	CAP(D-SUB)	
6	2B		B09-0754-05	CAP(SMA)	GE
7	3A		B43-1675-04	BADGE	
9	2B		E04-0454-15	RF COAXIAL RECEPTACLE(BNC)	
10	2B		E04-0492-05	RF COAXIAL RECEPTACLE(SMA)	GE
11	2A		E29-1244-14	RELAY HARDWARE(CHASSIS)	
12	2B		E30-7684-15	DC CORD	
13	2A		E37-1461-05	FLAT CABLE(30P)	
15	2B		F10-3183-03	SHIELDING CASE(POWER MODULE)	
16	1B		F10-3184-03	SHIELDING COVER(TOP)	
17	1B		F10-3203-02	SHIELDING CASE(LPF)	
19	1A		G11-4353-04	SHEET(SHIELDING/BOTTOM)	
20	2B		G11-4578-04	SHEET(FOR W/O SMA)	E
21	1B		G11-4611-04	SHEET(D-SUB)	
22	1B		G13-2102-04	CONDUCTIVE CUSHION	
23	3B		G13-2363-04	CUSHION(PANEL HOLDER)	
24	1B		G13-2389-04	CUSHION(SHIELDING/TOP)	
25	2B		G13-2395-04	CUSHION(X57)	
26	2B		G53-1643-04	PACKING(DC CORD)	
27	2B		G53-1662-04	PACKING(BNC/ANT)	
28	2B		G53-1768-04	PACKING(SMA)	GE
31	1B		G53-1819-21	PACKING(CHASSIS)	
32	3A		G53-1820-03	PACKING(PANEL)	
33	3A		G53-1858-03	PACKING(SP)	
35	3A		J19-5542-02	HOLDER(PANEL)	
36	3A		K29-9479-01	KEY TOP	
A	2B		N30-2605-48	PAN HEAD MACHINE SCREW	GE
B	2A,2B		N67-3008-48	PAN HEAD SEMS SCREW	
C	2A,2B		N87-2608-48	BRAZIER HEAD TAPTITE SCREW	
37	3A		T07-0785-15	SPEAKER	
IC714	2A		LA4600	BI-POLAR IC	
IC102	2B		RA60H1317M1A	MOS-IC	
				ACCESSORY	
			B62-2447-00	INSTRUCTION MANUAL ACCESSORY	
			E30-7523-55	DC CORD ASSY ACCESSORY	
			F52-0024-05	FUSE(15A/BLADE) ACCESSORY	
			J29-0726-03	BRACKET ACCESSORY	
			N99-2039-05	SCREW SET ACCESSORY	
			X57-8230-12	TX-RX UNIT(FOR SERVICE)	GE
			X57-8230-13	TX-RX UNIT(FOR SERVICE)	E

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
			DISPLAY UNIT (X54-3830-10)		
101	2A		B11-1885-03	ILLUMINATION GUIDE	
102	2A		B38-0936-05	LCD	
D5 -9			B30-2337-05	LED(YELLOW8)	
D11 -21			B30-2337-05	LED(YELLOW8)	
D22	3A		B30-2321-05	LED(BLUE)	
D23	3A		B30-2151-05	LED(RED/GREEN)	
D24			B30-2337-05	LED(YELLOW)	
C1			CC73HCH1H101J	CHIP C 100PF J	
C2 ,3			CC73HCH1H221J	CHIP C 220PF J	
C4			CC73HCH1H101J	CHIP C 100PF J	
C5			CC73HCH1H221J	CHIP C 220PF J	
C6			CK73HB1H471K	CHIP C 470PF K	
C7			CK73HB1H102K	CHIP C 1000PF K	
C10			CK73HB1H102K	CHIP C 1000PF K	
C11			CC73HCH1H221J	CHIP C 220PF J	
C12			CC73HCH1H101J	CHIP C 100PF J	
C13			CK73HB1E103K	CHIP C 0.010UF K	
C14 ,15			CK73HB1H102K	CHIP C 1000PF K	
C21			CK73HB1E103K	CHIP C 0.010UF K	
C23			CK73HB1H102K	CHIP C 1000PF K	
C24 ,25			CK73HB1E103K	CHIP C 0.010UF K	
C27			CK73HB1A105K	CHIP C 1.0UF K	
C31			CK73HB1H102K	CHIP C 1000PF K	
C32 ,33			CK73HB1C473K	CHIP C 0.047UF K	
C34			CC73HCH1H470J	CHIP C 47PF J	
C35 ,36			CC73HCH1H221J	CHIP C 220PF J	
103	2A		E29-1231-15	INTER CONNECTOR	
CN1			E40-6924-05	FLAT CABLE CONNECTOR(30P)	
J1	3A		E58-0535-05	MODULAR JACK(MIC)	
104	2A		J21-8629-03	MOUNTING HARDWARE(LCD)	
L1			L92-0138-05	CHIP FERRITE	
L2 ,3			L92-0140-05	CHIP FERRITE	
CP1			RK74HB1J101J	CHIP-COM 100 J 1/16W	
R1			RK73HB1J101J	CHIP R 100 J 1/16W	
R2 -4			RK73HB1J103J	CHIP R 10K J 1/16W	
R5			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R7			RK73HB1J000J	CHIP R 0 J 1/16W	
R9			RK73HB1J000J	CHIP R 0 J 1/16W	
R12			RK73HB1J101J	CHIP R 100 J 1/16W	
R14			RK73HB1J122J	CHIP R 1.2K J 1/16W	
R15			RK73HB1J000J	CHIP R 0 J 1/16W	
R17			RK73HB1J000J	CHIP R 0 J 1/16W	
R18			RK73GB2A331J	CHIP R 330 J 1/10W	
R19			RK73GB2A221J	CHIP R 220 J 1/10W	
R20			RK73HB1J000J	CHIP R 0 J 1/16W	
R22			RK73HB1J000J	CHIP R 0 J 1/16W	
R23			RK73HB1J473J	CHIP R 47K J 1/16W	
R24 ,25			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R26			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R28			RK73FB2B121J	CHIP R 120 J 1/8W	
R29			RK73FB2B221J	CHIP R 220 J 1/8W	
R34 -37			RK73GB2A271J	CHIP R 270 J 1/10W	

GE: NX-720(G)
E: NX-720

PARTS LIST

DISPLAY UNIT (X54-3830-10)
TX-RX UNIT (X57-8230-1X)

Ref. No.	Address	New parts	Parts No.	Description				Destination
R38 -40			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R41			RK73HB1J101J	CHIP R	100	J	1/16W	
R42			RK73HB1J272J	CHIP R	2.7K	J	1/16W	
R43			RK73HB1J103J	CHIP R	10K	J	1/16W	
R44			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R45			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
D1			DZ2J062(M)	ZENER DIODE				
D2			DA3S101F	DIODE				
D25			MINISMDC020F	VARISTOR				
D26			HN2S03FE	DIODE				
D27			DZ2J062(M)	ZENER DIODE				
IC1			LC75857W-E	MOS-IC				
Q3			KTC4075E(Y,GR)	TRANSISTOR				
Q6			KTC4075E(Y,GR)	TRANSISTOR				
Q8			KTC4075E(Y,GR)	TRANSISTOR				
Q9			QST7	TRANSISTOR				
Q10			LTC014EEBFS8	TRANSISTOR				
Q11			KTC4075E(Y,GR)	TRANSISTOR				
TX-RX UNIT (X57-8230-1X) -10: (G)E -11: E								
C1			CK73HB1E103K	CHIP C	0.010UF	K		
C2			CC73HCH1H101J	CHIP C	100PF	J		
C3 ,4			CK73HB1H103K	CHIP C	0.010UF	K		
C5 ,6			CC73HCH1H100B	CHIP C	10PF	B		
C7			CK73HB1H103K	CHIP C	0.010UF	K		
C9			CC73HCH1H100B	CHIP C	10PF	B		
C10 ,11			CK73HB1H103K	CHIP C	0.010UF	K		
C16 -21			CC73HCH1H101J	CHIP C	100PF	J		
C22			CK73HB1A104K	CHIP C	0.10UF	K		
C23			CC73HCH1H101J	CHIP C	100PF	J		
C24			CK73HB1A104K	CHIP C	0.10UF	K		
C25 ,26			CC73HCH1H101J	CHIP C	100PF	J		
C28			CC73HCH1H101J	CHIP C	100PF	J		
C29			CS77MA1VR15M	CHIP TNTL	0.15UF	35WV		
C30			CK73GB1E105K	CHIP C	1.0UF	K		
C31			CC73HCH1H101J	CHIP C	100PF	J		
C32			CS77BA1D100M	CHIP TNTL	10UF	20WV		
C33			CK73HB1H103K	CHIP C	0.010UF	K		
C34			C93-1906-05	CHIP FILM	0.047UF	35WV		
C35			CC73HCH1H060B	CHIP C	6.0PF	B		
C36			CC73HCH1H101J	CHIP C	100PF	J		
C37			CC73HCH1H080B	CHIP C	8.0PF	B		
C39			CC73HCH1H330J	CHIP C	33PF	J		
C40			CC73HCH1H080B	CHIP C	8.0PF	B		
C41 -44			CC73HCH1H101J	CHIP C	100PF	J		
C45			CC73HCH1H331J	CHIP C	330PF	J		
C46			CC73HCH1H100B	CHIP C	10PF	B		
C49			CC73HCH1H221J	CHIP C	220PF	J		
C50			CC73HCH1H070B	CHIP C	7.0PF	B		
C51			CK73HB1A105K	CHIP C	1.0UF	K		
C52			CK73HB1H471K	CHIP C	470PF	K		
C53			CC73HCH1H221J	CHIP C	220PF	J		
C54			CC73HCH1H181J	CHIP C	180PF	J		
C55			CC73HCH1H390G	CHIP C	39PF	G		
C56			CC73HCH1H080B	CHIP C	8.0PF	B		
C57			CC73HCH1H040B	CHIP C	4.0PF	B		
C58			CK73HB1H471K	CHIP C	470PF	K		
C59 ,60			CC73HCH1H040B	CHIP C	4.0PF	B		
C61			CK73HB1H471K	CHIP C	470PF	K		
C63			CC73HCH1HR75B	CHIP C	0.75PF	B		
C64			CK73FB1A106K	CHIP C	10UF	K		
C66			CC73HCH1H100B	CHIP C	10PF	B		
C67			CC73HCH1H060B	CHIP C	6.0PF	B		
C68			CC73HCH1H100B	CHIP C	10PF	B		
C69			CC73HCH1H080B	CHIP C	8.0PF	B		
C70			CK73GB1E105K	CHIP C	1.0UF	K		
C71			CC73HCH1H471J	CHIP C	470PF	J		
C73 ,74			CK73HB1H103K	CHIP C	0.010UF	K		
C76 ,77			CC73HCH1H0R5B	CHIP C	0.5PF	B		
C78 ,79			CK73HB1H102K	CHIP C	1000PF	K		
C80			CK73HB1H471K	CHIP C	470PF	K		
C81			CC73HCH1H220J	CHIP C	22PF	J		
C82			CK73HB1H102K	CHIP C	1000PF	K		
C83			CC73HCH1H050B	CHIP C	5.0PF	B		
C84			CC73HCH1H150J	CHIP C	15PF	J		
C85			CK73HB1H102K	CHIP C	1000PF	K		
C86			CK73HB1H471K	CHIP C	470PF	K		
C87			CK73HB1H102K	CHIP C	1000PF	K		
C88			CK73HB1A104K	CHIP C	0.10UF	K		
C89			CC73HCH1H150G	CHIP C	15PF	G		
C91			C93-0787-05	CHIP C	0.1UF	J		
C101			CK73HB1H102K	CHIP C	1000PF	K		
C102			CK73HB1H471K	CHIP C	470PF	K		
C103			CK73HB1H103K	CHIP C	0.010UF	K		
C104			CK73HB1H102K	CHIP C	1000PF	K		
C108			CK73FB1E475K	CHIP C	4.7UF	K		
C111			CK73HB1H471K	CHIP C	470PF	K		
C113			CK73HB1H471K	CHIP C	470PF	K		
C116-118			CK73HB1H471K	CHIP C	470PF	K		
C119			CC73HCH1H270J	CHIP C	27PF	J		
C120			CC73HCH1H220J	CHIP C	22PF	J		
C121			CC73HCH1H060B	CHIP C	6.0PF	B		
C123			CC73HCH1H220J	CHIP C	22PF	J		
C124			CC73HCH1H330J	CHIP C	33PF	J		
C125			CK73HB1H471K	CHIP C	470PF	K		
C127			CC73HCH1H220J	CHIP C	22PF	J		
C128			CC73HCH1H470J	CHIP C	47PF	J		
C129			CC73HCH1H330J	CHIP C	33PF	J		
C131			CC73HCH1H101J	CHIP C	100PF	J		
C133			CC73HCH1H221J	CHIP C	220PF	J		
C134,135			CK73HB1H471K	CHIP C	470PF	K		
C136			CK73FB1H471K	CHIP C	470PF	K		
C137			CC73HCH1H101J	CHIP C	100PF	J		
C140			CS77LA1C4R7M	CHIP TNTL	4.7UF	16WV		
C142			CC73HCH1H220J	CHIP C	22PF	J		
C144			CC73HCH1H470J	CHIP C	47PF	J		
C145			CK73HB1A104K	CHIP C	0.10UF	K		
C146			C93-0561-05	CHIP C	12PF	J		
C148			CC73HCH1H101J	CHIP C	100PF	J		
C149			CK73HB1H471K	CHIP C	470PF	K		
C151			C93-0563-05	CHIP C	18PF	J		
C152			C92-0875-05	ELECTRO	47UF	25WV		
C154			CK73HB1E223K	CHIP C	0.022UF	K		
C155			CK73HB1H471K	CHIP C	470PF	K		
C156			CC73HCH1H101J	CHIP C	100PF	J		

GE: NX-720(G)
E: NX-720

PARTS LIST

TX-RX UNIT (X57-8230-1X)

Ref. No.	Address	New parts	Parts No.	Description			Destination
C157			CK73HB1H102K	CHIP C	1000PF	K	
C158			CK73HB1H471K	CHIP C	470PF	K	
C161			CC73GCH1H040C	CHIP C	4.0PF	C	
C163			CC73GCH1H220J	CHIP C	22PF	J	
C165			CK73HB1H471K	CHIP C	470PF	K	
C167			CC73GCH1H150J	CHIP C	15PF	J	
C168			CK73HB1H471K	CHIP C	470PF	K	
C171			CC73HCH1H101J	CHIP C	100PF	J	
C172,173			CK73HB1H471K	CHIP C	470PF	K	
C175			CC73FCH1H390J	CHIP C	39PF	J	
C176			C93-0564-05	CHIP C	22PF	J	
C177,178			C93-1871-05	CHIP CERAMIC	100PF	250WV	
C179			C93-0559-05	CHIP C	9.0PF	D	
C182			C93-1866-05	CHIP CERAMIC	27PF	250WV	
C184			C93-0564-05	CHIP C	22PF	J	
C187,188			CK73HB1H102K	CHIP C	1000PF	K	
C191			CC73GCH1H151J	CHIP C	150PF	J	
C192			CC73GCH1H100C	CHIP C	10PF	C	
C193			CC73GCH1H101J	CHIP C	100PF	J	
C194			CC73HCH1H050B	CHIP C	5.0PF	B	
C201			CK73HB1H103K	CHIP C	0.010UF	K	
C202			CK73HB1E103K	CHIP C	0.010UF	K	
C203			CK73HB1H471K	CHIP C	470PF	K	
C204			CK73FB1E475K	CHIP C	4.7UF	K	
C205			CK73HB1H471K	CHIP C	470PF	K	
C207			CK73HB1H102K	CHIP C	1000PF	K	
C208,209			CC73HCH1H120G	CHIP C	12PF	G	
C210			CK73HB1H103K	CHIP C	0.010UF	K	
C211			CC73HCH1H060B	CHIP C	6.0PF	B	
C212			CC73HCH1H220G	CHIP C	22PF	G	
C213			CC73HCH1H030B	CHIP C	3.0PF	B	
C214			CC73HCH1H150G	CHIP C	15PF	G	
C215,216			CK73HB1H102K	CHIP C	1000PF	K	
C217			CC73HCH1H040B	CHIP C	4.0PF	B	
C218			CC73HCH1H020B	CHIP C	2.0PF	B	
C223			CK73HB1H102K	CHIP C	1000PF	K	
C224			CC73HCH1H220G	CHIP C	22PF	G	
C225			CK73HB1H102K	CHIP C	1000PF	K	
C227			CK73HB1H102K	CHIP C	1000PF	K	
C229			CK73HB1H102K	CHIP C	1000PF	K	
C231			CC73GCH1H060B	CHIP C	6.0PF	B	
C232			CC73HCH1H220J	CHIP C	22PF	J	
C233			CC73GCH1H060B	CHIP C	6.0PF	B	
C234			CC73HCH1H390J	CHIP C	39PF	J	
C235			CC73HCH1H270G	CHIP C	27PF	G	
C239			CK73GB1H104K	CHIP C	0.10UF	K	
C240			CK73GB1E105K	CHIP C	1.0UF	K	
C246,247			CK73HB1H102K	CHIP C	1000PF	K	
C250			CK73HB1A104K	CHIP C	0.10UF	K	
C251			CC73HCH1H050B	CHIP C	5.0PF	B	
C253			CK73HB1H102K	CHIP C	1000PF	K	
C254			CC73HCH1H120G	CHIP C	12PF	G	
C255			CC73HCH1H470J	CHIP C	47PF	J	
C256			CC73HCH1H180G	CHIP C	18PF	G	
C257			CK73HB1H102K	CHIP C	1000PF	K	
C258			CC73HCH1H150G	CHIP C	15PF	G	
C259			CK73HB1H102K	CHIP C	1000PF	K	
C260			CC73HCH1H180G	CHIP C	18PF	G	
C261			CC73HCH1H560J	CHIP C	56PF	J	
C262			CK73HB1H102K	CHIP C	1000PF	K	

Ref. No.	Address	New parts	Parts No.	Description			Destination
C293			CK73HB1H471K	CHIP C	470PF	K	
C306			CK73HB1E103K	CHIP C	0.010UF	K	
C307			CK73HB1A104K	CHIP C	0.10UF	K	
C309			CC73HCH1H100B	CHIP C	10PF	B	
C312			CK73HB1H103K	CHIP C	0.010UF	K	
C313			CK73HB1A104K	CHIP C	0.10UF	K	
C315			CK73HB1E103K	CHIP C	0.010UF	K	
C316			CC73HCH1H100B	CHIP C	10PF	B	
C317			CC73HCH1H101J	CHIP C	100PF	J	
C322			CC73HCH1H101J	CHIP C	100PF	J	
C323			CC73HCH1H151J	CHIP C	150PF	J	
C324			CC73HCH1H330G	CHIP C	33PF	G	
C325			CC73HCH1H680G	CHIP C	68PF	G	
C326			CC73HCH1H100B	CHIP C	10PF	B	
C327			CK73HB1A104K	CHIP C	0.10UF	K	
C330			CK73HB1A104K	CHIP C	0.10UF	K	
C332-335			CK73HB1A104K	CHIP C	0.10UF	K	
C336			CK73FB1A106K	CHIP C	10UF	K	
C337			CK73HB1A104K	CHIP C	0.10UF	K	
C338			CK73FB1A106K	CHIP C	10UF	K	
C339			CK73HB1A104K	CHIP C	0.10UF	K	
C340			CK73HB1H103K	CHIP C	0.010UF	K	
C341			CK73HB1A104K	CHIP C	0.10UF	K	
C342			CK73HB1A105K	CHIP C	1.0UF	K	
C343-345			CK73HB1A104K	CHIP C	0.10UF	K	
C346			CK73HB1A105K	CHIP C	1.0UF	K	
C347			CK73HB1H103K	CHIP C	0.010UF	K	
C348			CC73HCH1H470J	CHIP C	47PF	J	
C350			CK73HB1H103K	CHIP C	0.010UF	K	
C351			CC73HCH1H101J	CHIP C	100PF	J	
C357			CC73HCH1H0R5B	CHIP C	0.5PF	B	
C358			CC73HCH1H100B	CHIP C	10PF	B	
C359-361			CK73HB1E103K	CHIP C	0.010UF	K	
C366			CK73HB1E103K	CHIP C	0.010UF	K	
C367			CK73HB1H103K	CHIP C	0.010UF	K	
C368			CK73HB1H471K	CHIP C	470PF	K	
C369			CK73HB1H103K	CHIP C	0.010UF	K	
C370			CC73HCH1H220G	CHIP C	22PF	G	
C371			CK73HB1H103K	CHIP C	0.010UF	K	
C401			C92-0968-05	ELECTRO	470UF	25WV	
C403			CK73HB1H471K	CHIP C	470PF	K	
C405			CK73HB1H103K	CHIP C	0.010UF	K	
C408,409			CK73HB1H103K	CHIP C	0.010UF	K	
C410			CK73GB1C225K	CHIP C	2.2UF	K	
C411			CK73GB1H104K	CHIP C	0.10UF	K	
C413			CC73HCH1H101J	CHIP C	100PF	J	
C416			CK73HB1H103K	CHIP C	0.010UF	K	
C417			CC73HCH1H101J	CHIP C	100PF	J	
C420			CK73GB1E105K	CHIP C	1.0UF	K	
C422			CK73HB1H102K	CHIP C	1000PF	K	
C423,424			CC73HCH1H101J	CHIP C	100PF	J	
C425			CK73HB1H103K	CHIP C	0.010UF	K	
C427			CK73GB1H473K	CHIP C	0.047UF	K	
C428			CK73HB1A104K	CHIP C	0.10UF	K	
C429			CK73HB1H471K	CHIP C	470PF	K	
C430			CK73FB1E475K	CHIP C	4.7UF	K	
C431			CC73HCH1H101J	CHIP C	100PF	J	
C432			CK73GB1H104K	CHIP C	0.10UF	K	
C433,434			CK73FB1E475K	CHIP C	4.7UF	K	
C435			CK73GB1C225K	CHIP C	2.2UF	K	

GE: NX-720(G)
E: NX-720

PARTS LIST

TX-RX UNIT (X57-8230-1X)

Ref. No.	Address	New parts	Parts No.	Description			Destination
C436			CK73HB1H103K	CHIP C	0.010UF	K	
C437			CK73FB1E475K	CHIP C	4.7UF	K	
C438,439			CK73GB1H104K	CHIP C	0.10UF	K	
C440			C92-0875-05	ELECTRO	47UF	25WV	
C441			CK73GB1C225K	CHIP C	2.2UF	K	
C442			CK73HB1H103K	CHIP C	0.010UF	K	
C443			CK73GB1E105K	CHIP C	1.0UF	K	
C445,446			CK73HB1H103K	CHIP C	0.010UF	K	
C447			CK73GB1E105K	CHIP C	1.0UF	K	
C448			CK73HB1H103K	CHIP C	0.010UF	K	
C449			CK73GB1E105K	CHIP C	1.0UF	K	
C450,451			CK73FB1A106K	CHIP C	10UF	K	
C452			CS77LA1C4R7M	CHIP TNTL	4.7UF	16WV	
C453			CK73HB1H103K	CHIP C	0.010UF	K	
C454,455			CK73GB1C225K	CHIP C	2.2UF	K	
C456			CK73HB1H103K	CHIP C	0.010UF	K	
C457,458			CC73HCH1H101J	CHIP C	100PF	J	
C460			CC73HCH1H101J	CHIP C	100PF	J	
C461			CK73HB1A105K	CHIP C	1.0UF	K	
C462			CK73GB1E105K	CHIP C	1.0UF	K	
C463			CC73HCH1H101J	CHIP C	100PF	J	
C464			CK73HB1A105K	CHIP C	1.0UF	K	
C465,466			CK73GB1E105K	CHIP C	1.0UF	K	
C468			CK73HB1H103K	CHIP C	0.010UF	K	
C469			CK73HB1A105K	CHIP C	1.0UF	K	
C471			CC73HCH1H101J	CHIP C	100PF	J	
C472			CK73HB1H102K	CHIP C	1000PF	K	
C475			CK73GB1E105K	CHIP C	1.0UF	K	
C476			CK73HB1A104K	CHIP C	0.10UF	K	
C477			CK73GB1H104K	CHIP C	0.10UF	K	
C501-504			CK73HB1A104K	CHIP C	0.10UF	K	
C505-507			CK73GB0J106K	CHIP C	10UF	K	
C508,509			CK73HB1A105K	CHIP C	1.0UF	K	
C510			CK73HB1A104K	CHIP C	0.10UF	K	
C512			CK73HB1A104K	CHIP C	0.10UF	K	
C514-516			CK73HB1A104K	CHIP C	0.10UF	K	
C518-520			CK73HB1A104K	CHIP C	0.10UF	K	
C521			CC73HCH1H101J	CHIP C	100PF	J	
C522,523			CK73HB1A104K	CHIP C	0.10UF	K	
C524			CK73HB1A105K	CHIP C	1.0UF	K	
C525-531			CK73HB1A104K	CHIP C	0.10UF	K	
C532			CK73HB1H103K	CHIP C	0.010UF	K	
C533			CK73GB0J106K	CHIP C	10UF	K	
C534			CK73HB1A104K	CHIP C	0.10UF	K	
C535			CK73HB1H272K	CHIP C	2700PF	K	
C536			CK73HB1A104K	CHIP C	0.10UF	K	
C537			CK73HB1H102K	CHIP C	1000PF	K	
C541			CK73HB1A104K	CHIP C	0.10UF	K	
C542			CK73HB1H103K	CHIP C	0.010UF	K	
C543,544			CK73HB1A104K	CHIP C	0.10UF	K	
C545			CK73FB1A106K	CHIP C	10UF	K	
C546			CK73HB1H103K	CHIP C	0.010UF	K	
C547			CC73HCH1H101J	CHIP C	100PF	J	
C548			CK73HB1H103K	CHIP C	0.010UF	K	
C549			CK73HB1A104K	CHIP C	0.10UF	K	
C551			CK73HB1A104K	CHIP C	0.10UF	K	
C552			CK73HB1H103K	CHIP C	0.010UF	K	
C553			CK73HB1A105K	CHIP C	1.0UF	K	
C555,556			CK73HB1H103K	CHIP C	0.010UF	K	
C558			CK73HB1A104K	CHIP C	0.10UF	K	

Ref. No.	Address	New parts	Parts No.	Description			Destination
C559			CK73FB1A106K	CHIP C	10UF	K	
C560			CC73HCH1H030B	CHIP C	3.0PF	B	
C563			CC73HCH1H101J	CHIP C	100PF	J	
C565-568			CK73HB1A104K	CHIP C	0.10UF	K	
C569			CK73HB1H103K	CHIP C	0.010UF	K	
C570			CK73HB1A105K	CHIP C	1.0UF	K	
C572-576			CK73HB1A104K	CHIP C	0.10UF	K	
C577			CK73HB1H103K	CHIP C	0.010UF	K	
C578			CK73HB1A105K	CHIP C	1.0UF	K	
C579-581			CK73HB1H103K	CHIP C	0.010UF	K	
C602			CK73HB1H103K	CHIP C	0.010UF	K	
C603			CC73HCH1H101J	CHIP C	100PF	J	
C604			CK73HB1H102K	CHIP C	1000PF	K	
C605			CC73HCH1H101J	CHIP C	100PF	J	
C607			CC73HCH1H101J	CHIP C	100PF	J	
C609-611			CC73HCH1H470J	CHIP C	47PF	J	
C612			CC73HCH1H101J	CHIP C	100PF	J	
C613			CK73HB1H103K	CHIP C	0.010UF	K	
C614-618			CC73HCH1H101J	CHIP C	100PF	J	
C620			CC73HCH1H101J	CHIP C	100PF	J	
C621			CK73HB1H102K	CHIP C	1000PF	K	
C622-624			CK73HB1H103K	CHIP C	0.010UF	K	
C625			CK73HB1A104K	CHIP C	0.10UF	K	
C626			CK73GB1H103K	CHIP C	0.010UF	K	
C627-630			CK73GB1E105K	CHIP C	1.0UF	K	
C632			CK73HB1H102K	CHIP C	1000PF	K	
C633-642			CC73HCH1H101J	CHIP C	100PF	J	
C643			CK73HB1E223K	CHIP C	0.022UF	K	
C644			CC73HCH1H101J	CHIP C	100PF	J	
C645			CK73GB1H103K	CHIP C	0.010UF	K	
C646			CC73HCH1H101J	CHIP C	100PF	J	
C647			CK73HB1H103K	CHIP C	0.010UF	K	
C648			CK73GB1H104K	CHIP C	0.10UF	K	
C650-652			CK73HB1A104K	CHIP C	0.10UF	K	
C660			CC73HCH1H101J	CHIP C	100PF	J	
C661			CC73HCH1H470J	CHIP C	47PF	J	
C680			CK73HB1A104K	CHIP C	0.10UF	K	
C701			CK73HB1H682K	CHIP C	6800PF	K	
C702			CK73HB1H102K	CHIP C	1000PF	K	
C704			CK73HB1A105K	CHIP C	1.0UF	K	
C705			CC73HCH1H470J	CHIP C	47PF	J	
C706			CK73HB1A104K	CHIP C	0.10UF	K	
C707			CK73HB1H681K	CHIP C	680PF	K	
C708			CK73HB1H102K	CHIP C	1000PF	K	
C709			CC73HCH1H270J	CHIP C	27PF	J	
C711			CC73HCH1H331J	CHIP C	330PF	J	
C712			CC73HCH1H181J	CHIP C	180PF	J	
C714			CC73HCH1H680J	CHIP C	68PF	J	
C716			CC73HCH1H101J	CHIP C	100PF	J	
C718			CK73HB1A104K	CHIP C	0.10UF	K	
C719			CC73HCH1H101J	CHIP C	100PF	J	
C720			CK73HB1A104K	CHIP C	0.10UF	K	
C722			CK73HB1A104K	CHIP C	0.10UF	K	
C723			CC73HCH1H470J	CHIP C	47PF	J	
C725			CC73HCH1H121J	CHIP C	120PF	J	
C728			CK73HB1H821K	CHIP C	820PF	K	
C729			CK73HB1H681K	CHIP C	680PF	K	
C732			CK73HB1H102K	CHIP C	1000PF	K	
C733			CK73FB1E475K	CHIP C	4.7UF	K	
C734			CK73HB1H472K	CHIP C	4700PF	K	

GE: NX-720(G)
E: NX-720

PARTS LIST

TX-RX UNIT (X57-8230-1X)

Ref. No.	Address	New parts	Parts No.	Description			Destination
C735			CK73GB0J106K	CHIP C	10UF	K	
C738			CK73HB1A104K	CHIP C	0.10UF	K	
C739			CK73HB1A105K	CHIP C	1.0UF	K	
C740			CK73HB1H102K	CHIP C	1000PF	K	
C741			CK73HB1A224K	CHIP C	0.22UF	K	
C743			CC73HCH1H470J	CHIP C	47PF	J	
C744			CK73HB1A224K	CHIP C	0.22UF	K	
C746			CK73HB1A104K	CHIP C	0.10UF	K	
C747			CC73HCH1H221J	CHIP C	220PF	J	
C749			CK73HB1H102K	CHIP C	1000PF	K	
C752,753			CK73HB1A104K	CHIP C	0.10UF	K	
C758			CC73HCH1H101J	CHIP C	100PF	J	
C762			CK73HB1H103K	CHIP C	0.010UF	K	
C765			CC73HCH1H220J	CHIP C	22PF	J	
C766,767			CK73GB0J475K	CHIP C	4.7UF	K	
C769			CK73HB1E103K	CHIP C	0.010UF	K	
C770			CK73HB1A104K	CHIP C	0.10UF	K	
C771			CK73HB1H122K	CHIP C	1200PF	K	
C773			CK73HB1E103K	CHIP C	0.010UF	K	
C774			CK73HB1A104K	CHIP C	0.10UF	K	
C775			CC73HCH1H101J	CHIP C	100PF	J	
C776			CK73HB1A393K	CHIP C	0.039UF	K	
C777			CK73HB1A104K	CHIP C	0.10UF	K	
C778			CK73HB1A105K	CHIP C	1.0UF	K	
C779,780			CC73HCH1H101J	CHIP C	100PF	J	
C782			CK73HB1A104K	CHIP C	0.10UF	K	
C784			CK73FB1A106K	CHIP C	10UF	K	
C786			CK73HB1A104K	CHIP C	0.10UF	K	
C788			CK73FB1E475K	CHIP C	4.7UF	K	
C790,791			CK73FB1A106K	CHIP C	10UF	K	
C796			CK73GB1E105K	CHIP C	1.0UF	K	
C797,798			CK73GB1C224K	CHIP C	0.22UF	K	
C801			C92-0875-05	ELECTRO	47UF	25WV	
C802			CK73HB1H102K	CHIP C	1000PF	K	
C803,804			C92-0906-05	ELECTRO	330UF	16WV	
C805			CK73HB1H102K	CHIP C	1000PF	K	
C806			CK73GB1E105K	CHIP C	1.0UF	K	
C807			CK73HB1C473K	CHIP C	0.047UF	K	
C808			CK73HB1A683K	CHIP C	0.068UF	K	
C809			CK73HB1H102K	CHIP C	1000PF	K	GE
C810			CK73FB1E475K	CHIP C	4.7UF	K	
C811			CK73HB1H102K	CHIP C	1000PF	K	
C812			CK73FB1A106K	CHIP C	10UF	K	
C813			CK73GB0J106K	CHIP C	10UF	K	E
C813,814			CK73GB0J106K	CHIP C	10UF	K	GE
C815			CK73HB1A104K	CHIP C	0.10UF	K	GE
C816			CK73HB1H102K	CHIP C	1000PF	K	GE
C820			CK73HB1A104K	CHIP C	0.10UF	K	GE
C821,822			CC73HCH1H180J	CHIP C	18PF	J	GE
C823			CK73HB1H102K	CHIP C	1000PF	K	GE
C824,825			CC73HCH1H180J	CHIP C	18PF	J	GE
C826			CK73HB1A104K	CHIP C	0.10UF	K	GE
C829			CK73GB0J106K	CHIP C	10UF	K	
C830,831			CK73HB1A104K	CHIP C	0.10UF	K	
C832,833			CK73HB1H102K	CHIP C	1000PF	K	
CN10-15			E23-1278-05	TERMINAL			
CN203-206			E23-1278-05	TERMINAL			
CN514			E40-6847-05	FLAT CABLE CONNECTOR			
CN801			E04-0410-05	PIN SOCKET(3P)			GE
J501	1B		E58-0536-05	D-SUB SOCKET(15P)			

Ref. No.	Address	New parts	Parts No.	Description	Destination
J701	2B		E11-0425-05	3.5D PHONE JACK(3P)	
F401			F53-0328-15	FUSE(5A)	
F501			F53-0324-15	FUSE(2.5A)	
F502,503			F53-0315-15	FUSE(250MA)	
F701			F53-0324-15	FUSE(2.5A)	
CF1			L72-1017-05	CERAMIC FILTER(450KHZ)	
CF2			L72-1040-05	CERAMIC FILTER(450KHZ)	
L1			L92-0163-05	BEADS CORE	
L2			L41-4795-39	SMALL FIXED INDUCTOR(4.7UH)	
L3			L92-0163-05	BEADS CORE	
L4			L40-1075-71	SMALL FIXED INDUCTOR(10NH)	
L5			L92-0163-05	BEADS CORE	
L6 ,7			L40-1001-86	SMALL FIXED INDUCTOR(10UH)	
L10			L40-5663-71	SMALL FIXED INDUCTOR(5.6NH)	
L11			L40-2285-92	SMALL FIXED INDUCTOR(220NH)	
L12			L40-3391-86	SMALL FIXED INDUCTOR(3.3UH)	
L13			L40-2285-92	SMALL FIXED INDUCTOR(220NH)	
L14			L40-3391-86	SMALL FIXED INDUCTOR(3.3UH)	
L15 ,16			L40-1885-92	SMALL FIXED INDUCTOR(180NH)	
L17			L40-6865-71	SMALL FIXED INDUCTOR(6.8NH)	
L18			L34-4611-15	AIR-CORE COIL(10T)	
L19			L92-0163-05	BEADS CORE	
L20			L34-4609-15	AIR-CORE COIL(8T)	
L21			L40-4775-92	SMALL FIXED INDUCTOR(47NH)	
L22			L92-0446-05	BEADS CORE	
L23 ,24			L40-3391-86	SMALL FIXED INDUCTOR(3.3UH)	
L25			L40-1285-71	SMALL FIXED INDUCTOR(120NH)	
L26			L92-0163-05	BEADS CORE	
L27			L40-1085-92	SMALL FIXED INDUCTOR(100NH)	
L102			L40-6875-92	SMALL FIXED INDUCTOR(68NH)	
L103			L92-0140-05	CHIP FERRITE	
L104			L40-3375-92	SMALL FIXED INDUCTOR(33NH)	
L105			L92-0163-05	BEADS CORE	
L106			L40-3975-92	SMALL FIXED INDUCTOR(39NH)	
L107			L92-0140-05	CHIP FERRITE	
L108-110			L92-0179-05	CHIP FERRITE	
L111			L92-0163-05	BEADS CORE	
L112			L34-4478-15	AIR-CORE COIL(9.5T)	
L113			L34-4909-05	AIR-CORE COIL(5T)	
L114			L34-4478-15	AIR-CORE COIL(9.5T)	
L115			L34-4670-05	AIR-CORE COIL(5T)	
L116			L34-4481-15	AIR-CORE COIL(6T)	
L117			L34-4736-05	AIR-CORE COIL(5T)	
L118			L40-6875-92	SMALL FIXED INDUCTOR(68NH)	
L130			L40-5675-71	SMALL FIXED INDUCTOR(56NH)	
L201			L92-0138-05	CHIP FERRITE	
L202			L41-5685-39	SMALL FIXED INDUCTOR(0.56UH)	
L203			L41-2785-39	SMALL FIXED INDUCTOR(0.27UH)	
L204			L40-3375-71	SMALL FIXED INDUCTOR(33NH)	
L205			L40-3975-71	SMALL FIXED INDUCTOR(39NH)	
L206			L40-1085-71	SMALL FIXED INDUCTOR(100NH)	
L207			L41-2285-14	SMALL FIXED INDUCTOR(220NH)	
L209,210			L41-2778-14	SMALL FIXED INDUCTOR(27NH)	
L212			L92-0138-05	CHIP FERRITE	
L213			L41-1085-14	SMALL FIXED INDUCTOR(100NH)	
L214			L40-1275-92	SMALL FIXED INDUCTOR(12NH)	
L215,216			L41-3378-14	SMALL FIXED INDUCTOR(33NH)	
L220			L40-2785-92	SMALL FIXED INDUCTOR(270NH)	
L221			L40-5663-71	SMALL FIXED INDUCTOR(5.6NH)	

GE: NX-720(G)
E: NX-720

PARTS LIST

TX-RX UNIT (X57-8230-1X)

Ref. No.	Address	New parts	Parts No.	Description	Destination
L232,233			L41-3978-14	SMALL FIXED INDUCTOR(39NH)	
L301			L41-1585-14	SMALL FIXED INDUCTOR(150N)	
L302			L40-5681-86	SMALL FIXED INDUCTOR(0.56UH)	
L304			L40-5675-92	SMALL FIXED INDUCTOR(56NH)	
L307			L40-2291-86	SMALL FIXED INDUCTOR(2.2UH)	
L309			L40-1085-57	SMALL FIXED INDUCTOR(100NH)	
L310			L92-0138-05	CHIP FERRITE	
L317			L41-3985-39	SMALL FIXED INDUCTOR(0.39UH)	
L319			L41-1885-39	SMALL FIXED INDUCTOR(0.18UH)	
L404			L92-0639-05	CHIP FERRITE	
L405			L33-1496-05	SMALL FIXED INDUCTOR(22UH)	
L501			L92-0138-05	CHIP FERRITE	
L503			L92-0138-05	CHIP FERRITE	
L504-506			L92-0162-05	BEADS CORE	
L508			L92-0138-05	CHIP FERRITE	
L510			L92-0138-05	CHIP FERRITE	
L801			L79-1958-05	FILTER	GE
L802			L40-2775-57	SMALL FIXED INDUCTOR(27.0NH)	GE
L805,806			L92-0138-05	CHIP FERRITE	GE
X1			L77-3073-05	TCXO(16.8MHZ)	
X501			L77-3015-05	TCXO(18.432MHZ)	
XF1			L71-0678-05	MCF(49.95MHZ)	
CP1			RK74HB1J100J	CHIP-COM 10 J 1/16W	
CP501			RK74HB1J104J	CHIP-COM 100K J 1/16W	
CP502			RK74HA1J104J	CHIP-COM 100K J 1/16W	
CP503			RK74HB1J104J	CHIP-COM 100K J 1/16W	
CP504			RK74HA1J101J	CHIP-COM 100 J 1/16W	
CP505			RK74HA1J104J	CHIP-COM 100K J 1/16W	
CP506-508			RK74HB1J104J	CHIP-COM 100K J 1/16W	
CP510			RK74HA1J104J	CHIP-COM 100K J 1/16W	
CP511			RK74HA1J101J	CHIP-COM 100 J 1/16W	
CP512			RK74HA1J104J	CHIP-COM 100K J 1/16W	
CP513			RK74HB1J104J	CHIP-COM 100K J 1/16W	
CP514			RK74HA1J104J	CHIP-COM 100K J 1/16W	
CP515			RK74HA1J101J	CHIP-COM 100 J 1/16W	
CP516			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP701			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP703,704			RK74HB1J104J	CHIP-COM 100K J 1/16W	
CP705,706			RK74HA1J104J	CHIP-COM 100K J 1/16W	
CP707			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
R1			RK73HB1J000J	CHIP R 0 J 1/16W	
R4			RK73HB1J000J	CHIP R 0 J 1/16W	
R10			RK73HB1J100J	CHIP R 10 J 1/16W	
R12			RK73HB1J683J	CHIP R 68K J 1/16W	
R13 ,14			RK73HB1J473J	CHIP R 47K J 1/16W	
R15			RK73HB1J100J	CHIP R 10 J 1/16W	
R16			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R17			RK73HB1J104J	CHIP R 100K J 1/16W	
R18			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R19 ,20			RK73HB1J000J	CHIP R 0 J 1/16W	
R21			RK73HB1J470J	CHIP R 47 J 1/16W	
R22			RK73HB1J121J	CHIP R 120 J 1/16W	
R23			RK73HB1J100J	CHIP R 10 J 1/16W	
R24			RK73HH1J391D	CHIP R 390 D 1/16W	
R25			RK73HB1J104J	CHIP R 100K J 1/16W	
R26			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R27			RK73HB1J103J	CHIP R 10K J 1/16W	
R28			RK73HB1J106J	CHIP R 10M J 1/16W	
R29			RK73HB1J470J	CHIP R 47 J 1/16W	

Ref. No.	Address	New parts	Parts No.	Description	Destination
R30			RK73HB1J184J	CHIP R 180K J 1/16W	
R31			RK73HB1J473J	CHIP R 47K J 1/16W	
R33			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R34			RK73HB1J182J	CHIP R 1.8K J 1/16W	
R35 -38			RK73HB1J000J	CHIP R 0 J 1/16W	
R39			RK73HB1J103J	CHIP R 10K J 1/16W	
R42 ,43			RK73HB1J104J	CHIP R 100K J 1/16W	
R44			RK73HB1J273J	CHIP R 27K J 1/16W	
R45 ,46			RK73HB1J473J	CHIP R 47K J 1/16W	
R48			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R50			RK73HB1J560J	CHIP R 56 J 1/16W	
R51			RK73HB1J561J	CHIP R 560 J 1/16W	
R52			RK73HB1J474J	CHIP R 470K J 1/16W	
R53			RK73HB1J563J	CHIP R 56K J 1/16W	
R54			RN73HH1J331D	CHIP R 330 D 1/16W	
R55			RN73HH1J221D	CHIP R 220 D 1/16W	
R56			RK73HB1J000J	CHIP R 0 J 1/16W	
R57 ,58			RN73HH1J220D	CHIP R 22 D 1/16W	
R59			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R60			RK73HB1J473J	CHIP R 47K J 1/16W	
R61			RK73HB1J154J	CHIP R 150K J 1/16W	
R62			RK73HB1J101J	CHIP R 100 J 1/16W	
R63			RK73HB1J103J	CHIP R 10K J 1/16W	
R64			RK73HB1J822J	CHIP R 8.2K J 1/16W	
R65 -67			RK73HB1J101J	CHIP R 100 J 1/16W	
R69			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R70			RK73HB1J474J	CHIP R 470K J 1/16W	
R71			RK73HB1J101J	CHIP R 100 J 1/16W	
R72			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R73			RK73GB2A000J	CHIP R 0 J 1/10W	
R75			RK73HB1J100J	CHIP R 10 J 1/16W	
R76			RK73HB1J000J	CHIP R 0 J 1/16W	
R80 -83			RK73GB2A000J	CHIP R 0 J 1/10W	
R86 -88			RK73HB1J000J	CHIP R 0 J 1/16W	
R101			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R103			RK73HB1J000J	CHIP R 0 J 1/16W	
R111			RK73HB1J272J	CHIP R 2.7K J 1/16W	
R112			RK73HB1J182J	CHIP R 1.8K J 1/16W	
R113			RK73GB2A680J	CHIP R 68 J 1/10W	
R114			RK73HB1J331J	CHIP R 330 J 1/16W	
R115			RK73GB2A680J	CHIP R 68 J 1/10W	
R120			RK73HB1J153J	CHIP R 15K J 1/16W	
R121			RK73FB2B471J	CHIP R 470 J 1/8W	
R122,123			RK73FB2B220J	CHIP R 22 J 1/8W	
R125			RK73FB2B471J	CHIP R 470 J 1/8W	
R128			RK73HB1J471J	CHIP R 470 J 1/16W	
R130			RK73HB1J273J	CHIP R 27K J 1/16W	
R131			RK73HB1J103J	CHIP R 10K J 1/16W	
R133			RK73HB1J153J	CHIP R 15K J 1/16W	
R134			RK73GB2A181J	CHIP R 180 J 1/10W	
R135			RK73HB1J104J	CHIP R 100K J 1/16W	
R136			RK73GB2A181J	CHIP R 180 J 1/10W	
R137			RK73HB1J104J	CHIP R 100K J 1/16W	
R138			RK73HB1J103J	CHIP R 10K J 1/16W	
R139			RK73GH2A101D	CHIP R 100 D 1/10W	
R141			RK73HB1J333J	CHIP R 33K J 1/16W	
R142			RK73HB1J000J	CHIP R 0 J 1/16W	
R143			RK73HB1J104J	CHIP R 100K J 1/16W	
R145			RK73GB2A000J	CHIP R 0 J 1/10W	
R146			RK73HB1J393J	CHIP R 39K J 1/16W	

GE: NX-720(G)
E: NX-720

PARTS LIST

TX-RX UNIT (X57-8230-1X)

Ref. No.	Address	New parts	Parts No.	Description			Destination
R147			RK73HB1J124J	CHIP R	120K	J 1/16W	
R148			RK73HB1J000J	CHIP R	0	J 1/16W	
R149			RK73HB1J103J	CHIP R	10K	J 1/16W	
R150			RK73HB1J124J	CHIP R	120K	J 1/16W	
R152			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R154			RK73HB1J000J	CHIP R	0	J 1/16W	
R155			RK73HB1J223J	CHIP R	22K	J 1/16W	
R157,158			RK73HB1J333J	CHIP R	33K	J 1/16W	
R159,160			RK73HB1J000J	CHIP R	0	J 1/16W	
R161			RK73HB1J104J	CHIP R	100K	J 1/16W	
R167			RK73HB1J153J	CHIP R	15K	J 1/16W	
R168,169			RK73EB2E241J	CHIP R	240	J 1/4W	
R171			R92-1061-05	JUMPER REST		0 OHM	
R176			RK73GB2A471J	CHIP R	470	J 1/10W	
R177,178			RK73HB1J000J	CHIP R	0	J 1/16W	
R179,180			RK73HB1J333J	CHIP R	33K	J 1/16W	
R181			RK73HB1J000J	CHIP R	0	J 1/16W	
R183			RK73HB1J103J	CHIP R	10K	J 1/16W	
R184			RK73HB1J473J	CHIP R	47K	J 1/16W	
R201			RK73HB1J470J	CHIP R	47	J 1/16W	
R203			RK73HB1J681J	CHIP R	680	J 1/16W	
R204			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R205			RK73HB1J151J	CHIP R	150	J 1/16W	
R207			RK73HB1J104J	CHIP R	100K	J 1/16W	
R208			RK73HB1J184J	CHIP R	180K	J 1/16W	
R209			RK73HB1J104J	CHIP R	100K	J 1/16W	
R210			RK73HB1J224J	CHIP R	220K	J 1/16W	
R212			RK73HB1J104J	CHIP R	100K	J 1/16W	
R223			RK73HB1J000J	CHIP R	0	J 1/16W	
R230			RK73HB1J000J	CHIP R	0	J 1/16W	
R233			RK73HB1J274J	CHIP R	270K	J 1/16W	
R234			RK73HB1J104J	CHIP R	100K	J 1/16W	
R235			RK73HB1J103J	CHIP R	10K	J 1/16W	
R237			RK73HB1J104J	CHIP R	100K	J 1/16W	
R241			RK73HB1J103J	CHIP R	10K	J 1/16W	
R242			RK73HB1J154J	CHIP R	150K	J 1/16W	
R243			RK73HB1J104J	CHIP R	100K	J 1/16W	
R245			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R246			RK73HB1J100J	CHIP R	10	J 1/16W	
R247			RK73HB1J390J	CHIP R	39	J 1/16W	
R249			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R250			RK73HB1J222J	CHIP R	2.2K	J 1/16W	
R255-258			RK73HB1J104J	CHIP R	100K	J 1/16W	
R259			RK73HB1J000J	CHIP R	0	J 1/16W	
R303-305			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R306			RK73HB1J334J	CHIP R	330K	J 1/16W	
R307			RK73HB1J561J	CHIP R	560	J 1/16W	
R308			RK73HB1J000J	CHIP R	0	J 1/16W	
R315			RK73HB1J000J	CHIP R	0	J 1/16W	
R316			RK73HB1J332J	CHIP R	3.3K	J 1/16W	
R323			RK73HB1J000J	CHIP R	0	J 1/16W	
R324			RK73HB1J183J	CHIP R	18K	J 1/16W	
R326			RK73GB2A331J	CHIP R	330	J 1/10W	
R328			RK73HB1J183J	CHIP R	18K	J 1/16W	
R329			RK73HB1J100J	CHIP R	10	J 1/16W	
R332			RK73HB1J000J	CHIP R	0	J 1/16W	
R336,337			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R338			RK73HB1J473J	CHIP R	47K	J 1/16W	
R339			RK73HB1J153J	CHIP R	15K	J 1/16W	
R340			RK73HB1J274J	CHIP R	270K	J 1/16W	

Ref. No.	Address	New parts	Parts No.	Description			Destination
R341			RK73HB1J103J	CHIP R	10K	J 1/16W	
R342			RK73HB1J104J	CHIP R	100K	J 1/16W	
R343			RK73HB1J223J	CHIP R	22K	J 1/16W	
R344			RK73HB1J272J	CHIP R	2.7K	J 1/16W	
R345			RK73HB1J000J	CHIP R	0	J 1/16W	
R350			RK73HB1J103J	CHIP R	10K	J 1/16W	
R351			RK73HB1J104J	CHIP R	100K	J 1/16W	
R355			RK73HB1J000J	CHIP R	0	J 1/16W	
R357			RK73HB1J124J	CHIP R	120K	J 1/16W	
R358	2B		RK73HB1J333J	CHIP R	33K	J 1/16W	
R368			RK73HB1J221J	CHIP R	220	J 1/16W	
R378			RK73HB1J394J	CHIP R	390K	J 1/16W	
R379			RK73HB1J222J	CHIP R	2.2K	J 1/16W	
R381			RK73HB1J221J	CHIP R	220	J 1/16W	
R390			RK73HB1J103J	CHIP R	10K	J 1/16W	
R394			RK73HB1J181J	CHIP R	180	J 1/16W	
R401			RK73HB1J471J	CHIP R	470	J 1/16W	
R402			RK73HB1J103J	CHIP R	10K	J 1/16W	
R403			RK73HH1J274D	CHIP R	270K	D 1/16W	
R404			RK73HH1J104D	CHIP R	100K	D 1/16W	
R405,406			RK73HB1J103J	CHIP R	10K	J 1/16W	
R407			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R408			RK73HB1J684J	CHIP R	680K	J 1/16W	
R409			RK73HB1J104J	CHIP R	100K	J 1/16W	
R410			RK73GB2A4R7J	CHIP R	4.7	J 1/10W	
R411			RK73HB1J473J	CHIP R	47K	J 1/16W	
R412,413			RK73GB2A100J	CHIP R	10	J 1/10W	
R414,415			RK73HB1J103J	CHIP R	10K	J 1/16W	
R417			RK73HB1J104J	CHIP R	100K	J 1/16W	
R418			RK73HB1J000J	CHIP R	0	J 1/16W	
R419			RK73HB1J272J	CHIP R	2.7K	J 1/16W	
R421			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R422			RK73HB1J474J	CHIP R	470K	J 1/16W	
R423			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R424			RK73HB1J103J	CHIP R	10K	J 1/16W	
R425			RK73HH1J124D	CHIP R	120K	D 1/16W	
R426			RK73HH1J183D	CHIP R	18K	D 1/16W	
R427			RK73HH1J223D	CHIP R	22K	D 1/16W	
R428			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R429			RK73HB1J000J	CHIP R	0	J 1/16W	
R430			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R431			RK73HB1J000J	CHIP R	0	J 1/16W	
R432			RK73HB1J103J	CHIP R	10K	J 1/16W	
R433			RK73HB1J274J	CHIP R	270K	J 1/16W	
R434			RK73HB1J103J	CHIP R	10K	J 1/16W	
R435			RK73HB1J000J	CHIP R	0	J 1/16W	
R438			RK73GB2A100J	CHIP R	10	J 1/10W	
R439			RK73HB1J474J	CHIP R	470K	J 1/16W	
R440			RK73HB1J000J	CHIP R	0	J 1/16W	
R441			RK73HB1J272J	CHIP R	2.7K	J 1/16W	
R501			RK73HB1J220J	CHIP R	22	J 1/16W	
R503,504			RK73HB1J104J	CHIP R	100K	J 1/16W	
R505,506			RK73GB2A000J	CHIP R	0	J 1/10W	
R508-511			RK73HB1J101J	CHIP R	100	J 1/16W	
R512			RK73HB1J104J	CHIP R	100K	J 1/16W	
R513			RK73HB1J000J	CHIP R	0	J 1/16W	
R515-517			RK73HB1J000J	CHIP R	0	J 1/16W	
R518			RK73HB1J101J	CHIP R	100	J 1/16W	
R519			RK73HB1J000J	CHIP R	0	J 1/16W	
R521,522			RK73HB1J104J	CHIP R	100K	J 1/16W	

PARTS LIST

TX-RX UNIT (X57-8230-1X)

Ref. No.	Address	New parts	Parts No.	Description				Destination
R524			RK73HB1J000J	CHIP R	0	J	1/16W	
R525			RK73HB1J474J	CHIP R	470K	J	1/16W	
R526			RK73HB1J104J	CHIP R	100K	J	1/16W	
R531			RK73HB1J104J	CHIP R	100K	J	1/16W	
R532			RK73HB1J000J	CHIP R	0	J	1/16W	
R533,534			RK73HB1J473J	CHIP R	47K	J	1/16W	
R536			RK73HB1J000J	CHIP R	0	J	1/16W	
R541			RK73HB1J101J	CHIP R	100	J	1/16W	
R546			RK73HB1J000J	CHIP R	0	J	1/16W	
R549			RK73HB1J103J	CHIP R	10K	J	1/16W	
R550			RK73HB1J104J	CHIP R	100K	J	1/16W	
R552,553			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R554			RK73HB1J332J	CHIP R	3.3K	J	1/16W	
R555			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R556			RK73HB1J220J	CHIP R	22	J	1/16W	
R557			RK73HB1J153J	CHIP R	15K	J	1/16W	
R558			RK73HB1J220J	CHIP R	22	J	1/16W	
R559			RK73HB1J392J	CHIP R	3.9K	J	1/16W	
R560			RK73HB1J474J	CHIP R	470K	J	1/16W	
R561			RK73HB1J000J	CHIP R	0	J	1/16W	GE
R566			RK73HB1J474J	CHIP R	470K	J	1/16W	
R567			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R568,569			RK73HB1J000J	CHIP R	0	J	1/16W	
R571,572			RK73HB1J000J	CHIP R	0	J	1/16W	
R580			RK73HB1J332J	CHIP R	3.3K	J	1/16W	
R581			RK73HB1J104J	CHIP R	100K	J	1/16W	
R583			RK73HH1J104D	CHIP R	100K	D	1/16W	
R584			RK73HB1J473J	CHIP R	47K	J	1/16W	
R599			RK73HB1J104J	CHIP R	100K	J	1/16W	
R603			RK73HB1J474J	CHIP R	470K	J	1/16W	
R606			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R610			RK73HB1J474J	CHIP R	470K	J	1/16W	
R611			RK73HB1J103J	CHIP R	10K	J	1/16W	
R612			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R613			RK73HB1J103J	CHIP R	10K	J	1/16W	
R614			RK73HB1J000J	CHIP R	0	J	1/16W	
R615			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R616			RK73HB1J474J	CHIP R	470K	J	1/16W	
R617			RK73HB1J000J	CHIP R	0	J	1/16W	
R620			RK73HB1J103J	CHIP R	10K	J	1/16W	
R621-624			RK73HB1J104J	CHIP R	100K	J	1/16W	
R626			RK73HB1J101J	CHIP R	100	J	1/16W	
R627,628			RK73HB1J682J	CHIP R	6.8K	J	1/16W	
R629			RK73HB1J104J	CHIP R	100K	J	1/16W	
R631			RK73HB1J104J	CHIP R	100K	J	1/16W	
R632			RK73GB2A000J	CHIP R	0	J	1/10W	
R634			RK73HB1J101J	CHIP R	100	J	1/16W	
R635			RK73GB2A000J	CHIP R	0	J	1/10W	
R636			RK73HB1J474J	CHIP R	470K	J	1/16W	
R637,638			RK73FB2B102J	CHIP R	1.0K	J	1/8W	
R639			RK73HB1J471J	CHIP R	470	J	1/16W	
R641			RK73GB2A000J	CHIP R	0	J	1/10W	
R643			RK73GB2A000J	CHIP R	0	J	1/10W	
R657			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R658,659			RK73GB2A000J	CHIP R	0	J	1/10W	
R661			RK73HB1J473J	CHIP R	47K	J	1/16W	
R662			RK73GB2A000J	CHIP R	0	J	1/10W	
R664			RK73GB2A000J	CHIP R	0	J	1/10W	
R667			RK73GB2A101J	CHIP R	100	J	1/10W	
R668			RK73HB1J471J	CHIP R	470	J	1/16W	

Ref. No.	Address	New parts	Parts No.	Description				Destination
R669-671			RK73HB1J101J	CHIP R	100	J	1/16W	
R672			RK73GB2A471J	CHIP R	470	J	1/10W	
R673			RK73HB1J104J	CHIP R	100K	J	1/16W	
R674			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R677-680			RK73GB2A000J	CHIP R	0	J	1/10W	
R681			RK73HB1J000J	CHIP R	0	J	1/16W	
R682,683			RK73GB2A000J	CHIP R	0	J	1/10W	
R684			RK73HB1J473J	CHIP R	47K	J	1/16W	
R685			RK73HB1J103J	CHIP R	10K	J	1/16W	
R686			RK73HB1J223J	CHIP R	22K	J	1/16W	
R687			RK73HB1J103J	CHIP R	10K	J	1/16W	
R688			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R690			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R701			RK73HB1J103J	CHIP R	10K	J	1/16W	
R702			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R703			RK73HB1J563J	CHIP R	56K	J	1/16W	
R704			RK73HB1J153J	CHIP R	15K	J	1/16W	
R705			RK73HB1J683J	CHIP R	68K	J	1/16W	
R706			RK73HB1J823J	CHIP R	82K	J	1/16W	
R707			RK73HB1J182J	CHIP R	1.8K	J	1/16W	
R708			RK73HB1J333J	CHIP R	33K	J	1/16W	
R709			RK73HB1J104J	CHIP R	100K	J	1/16W	
R710			RK73HB1J563J	CHIP R	56K	J	1/16W	
R711			RK73HB1J104J	CHIP R	100K	J	1/16W	
R712			RK73HB1J473J	CHIP R	47K	J	1/16W	
R713			RK73HB1J223J	CHIP R	22K	J	1/16W	
R716			RK73HB1J104J	CHIP R	100K	J	1/16W	
R720			RK73HB1J334J	CHIP R	330K	J	1/16W	
R722			RK73HB1J104J	CHIP R	100K	J	1/16W	
R724			RK73HB1J473J	CHIP R	47K	J	1/16W	
R728			RK73HB1J393J	CHIP R	39K	J	1/16W	
R730			RK73HB1J473J	CHIP R	47K	J	1/16W	
R738			RK73HB1J103J	CHIP R	10K	J	1/16W	
R739			RK73HB1J334J	CHIP R	330K	J	1/16W	
R741			RK73HB1J470J	CHIP R	47	J	1/16W	
R742			RK73HB1J332J	CHIP R	3.3K	J	1/16W	
R743			RK73HB1J471J	CHIP R	470	J	1/16W	
R745			RK73HB1J104J	CHIP R	100K	J	1/16W	
R746			RK73HB1J103J	CHIP R	10K	J	1/16W	
R748,749			RK73HB1J104J	CHIP R	100K	J	1/16W	
R750			RK73HB1J393J	CHIP R	39K	J	1/16W	
R751			RK73HB1J104J	CHIP R	100K	J	1/16W	
R752			RK73HB1J394J	CHIP R	390K	J	1/16W	
R754			RK73HB1J563J	CHIP R	56K	J	1/16W	
R755			RK73HB1J224J	CHIP R	220K	J	1/16W	
R756			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R769			RK73HB1J684J	CHIP R	680K	J	1/16W	
R770,771			RK73HB1J473J	CHIP R	47K	J	1/16W	
R772			RK73HB1J153J	CHIP R	15K	J	1/16W	
R773			RK73HB1J000J	CHIP R	0	J	1/16W	
R775			RK73HB1J562J	CHIP R	5.6K	J	1/16W	
R776,777			RK73HB1J103J	CHIP R	10K	J	1/16W	
R778			RK73HB1J273J	CHIP R	27K	J	1/16W	
R779			RK73HB1J223J	CHIP R	22K	J	1/16W	
R783			RK73HB1J154J	CHIP R	150K	J	1/16W	
R785			RK73HB1J000J	CHIP R	0	J	1/16W	
R786			RK73HB1J563J	CHIP R	56K	J	1/16W	
R787			RK73HB1J123J	CHIP R	12K	J	1/16W	
R796,797			RK73GB2A000J	CHIP R	0	J	1/10W	
R800			RK73HB1J104J	CHIP R	100K	J	1/16W	

GE: NX-720(G)
E: NX-720

PARTS LIST

TX-RX UNIT (X57-8230-1X)

Ref. No.	Address	New parts	Parts No.	Description	Destination
R801			RK73HB1J102J	CHIP R 1.0K J 1/16W	E
R801,802			RK73HB1J102J	CHIP R 1.0K J 1/16W	GE
R803,804			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R805,806			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R810			RK73HB1J123J	CHIP R 12K J 1/16W	
R811			RK73HB1J103J	CHIP R 10K J 1/16W	
R813			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R814			RK73HB1J391J	CHIP R 390 J 1/16W	
R816			RK73HB1J123J	CHIP R 12K J 1/16W	
R818			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R819,820			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R821,822			RK73GB2A000J	CHIP R 0 J 1/10W	
R823			RK73HB1J123J	CHIP R 12K J 1/16W	
R824			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R825			RK73HB1J000J	CHIP R 0 J 1/16W	
R826			RK73HB1J103J	CHIP R 10K J 1/16W	
R827			RK73HB1J823J	CHIP R 82K J 1/16W	
R831,832			RK73HB1J683J	CHIP R 68K J 1/16W	
R833			RK73HB1J101J	CHIP R 100 J 1/16W	
R834			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R835			RK73HB1J100J	CHIP R 10 J 1/16W	GE
R837			RK73HB1J562J	CHIP R 5.6K J 1/16W	
R838			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R839			RK73EB2E100J	CHIP R 10 J 1/4W	GE
R842-844			RK73HB1J000J	CHIP R 0 J 1/16W	GE
R845			RK73HB1J101J	CHIP R 100 J 1/16W	
R846,847			RK73HB1J223J	CHIP R 22K J 1/16W	
D2			DZ2J091(M)	ZENER DIODE	
D4 ,5			1SV325F	VARIABLE CAPACITANCE DIODE	
D6			1SV305F	VARIABLE CAPACITANCE DIODE	
D7 -12			1SV282-F	VARIABLE CAPACITANCE DIODE	
D13			1SV305F	VARIABLE CAPACITANCE DIODE	
D14			DA2S101	DIODE	
D15			1SV278F	VARIABLE CAPACITANCE DIODE	
D16 ,17			RKS151KJ	DIODE	
D101			DZ2J056(M)	ZENER DIODE	
D102			DA3S101F	DIODE	
D103			RKS151KJ	DIODE	
D104,105			HSB88AS-E	DIODE	
D106			DZ2J056(M)	ZENER DIODE	
D107			RKP351KW-1P2	DIODE	
D108,109			RB520SM-30	DIODE	
D110,111			L407CDB	DIODE	
D112-114			RN142S	DIODE	
D202,203			1SV283F	VARIABLE CAPACITANCE DIODE	
D204-207			1SV325F	VARIABLE CAPACITANCE DIODE	
D401			DZ2J180(M)	ZENER DIODE	
D403			RB520SM-30	DIODE	
D404			DA2S101	DIODE	
D405			DB2S310	DIODE	
D406			DB22306	DIODE	
D407			RB520SM-30	DIODE	
D408,409			DB2S310	DIODE	
D410			22ZR-10D	SURGE ABSORBER	
D411			DSA3A1	DIODE	
D502			DB2S310	DIODE	
D504			DB2S310	DIODE	
D505-510			MC2850	DIODE	
D511-513			DB2S310	DIODE	

Ref. No.	Address	New parts	Parts No.	Description	Destination
D601			DB2S310	DIODE	
D701			DA2S101	DIODE	
D702			1SS422	DIODE	
D703,704			DA3S101F	DIODE	
D705,706			EMZ6.8N	ZENER DIODE	
D801,802			RN142S	DIODE	GE
IC1			TA7808F-NQ	ANALOGUE IC	
IC2			SKY72310-362	MOS-IC	
IC3			BD7542FVM	MOS-IC	
IC103			NJM12904RB1	MOS-IC	
IC201			BD7542FVM	MOS-IC	
IC301			TC7SH08FU-F	MOS-IC	
IC303			TK10931VTL-G	ANALOGUE IC	
IC304			BU7445HFV	MOS-IC	
IC401			XC6209B332M-G	MOS-IC	
IC402			XC6118C23CMR	MOS-IC	
IC404			XC6209B502P-G	MOS-IC	
IC405			LT1616ES6-PBF	ANALOGUE IC	
IC406			XC6209B332M-G	MOS-IC	
IC407			NJM2878F4-33	BI-POLAR IC	
IC408			XC6205B152P-G	MOS-IC	
IC409			NJM2878F4-33	BI-POLAR IC	
IC501			**Note1(BGA)**	ROM IC	
IC502			**Note1(BGA)**	DSP IC	
IC503			**Note1(BGA)**	SRAM IC	
IC504			BD5329FVE	MOS-IC	
IC506			SM5023CNDH-G	MOS-IC	
IC507			**Note1(BGA)**	MOS-IC	
IC508			TC7SH08FU-F	MOS-IC	
IC509			TC7WH126FU-F	MOS-IC	
IC511			TC74VHCT244AFK	MOS-IC	
IC512			TC7WBD125AFK	MOS-IC	
IC513			TC7WT126FU-F	MOS-IC	
IC514			TC7WH126FU-F	MOS-IC	
IC515			PCA9535BS	MOS-IC	
IC516			ADM202EARNZ	MOS-IC	
IC701			BU7462NUX	MOS-IC	
IC702			BU7242NUX	MOS-IC	
IC703			BU7462NUX	MOS-IC	
IC705			BU7242NUX	MOS-IC	
IC711			BU7462NUX	MOS-IC	
IC712			R2A20178NP	DAC IC	
IC713			TC7W53FK(F)	MOS-IC	
IC716			TC7WT126FU-F	MOS-IC	
IC801			TC7WH126FU-F	MOS-IC	GE
Q1			LTC014EEBFS8	TRANSISTOR	
Q2			2SJ648-A	FET	
Q4			2SC5383-T111	TRANSISTOR	
Q5			2SC5108(Y)F	TRANSISTOR	
Q6 ,7			MCH3914(7)-H	FET	
Q8			EM6M1	FET	
Q9			SSM3J15FS	FET	
Q10 ,11			2SC5108(Y)F	TRANSISTOR	
Q102			2SC3357-A	TRANSISTOR	
Q105			FK330301	FET	
Q106			EMD5	TRANSISTOR	
Q201			3SK318	FET	
Q202			NESG240034	TRANSISTOR	
Q303			2SC5108(Y)F	TRANSISTOR	
Q305			2SC4215-F(Y)	TRANSISTOR	

Note 1: This part cannot be replaced. Therefore, this part is not supplied as a service part.

GE: NX-720(G)
E: NX-720

PARTS LIST

TX-RX UNIT (X57-8230-1X)

Ref. No.	Address	New parts	Parts No.	Description	Destination
Q401			LTC014EEBFS8	TRANSISTOR	
Q402			2SA1955A-F	TRANSISTOR	
Q403			MTM981400BF	FET	
Q404			2SA1955A-F	TRANSISTOR	
Q405			LTC014EEBFS8	TRANSISTOR	
Q407			FK330301	FET	
Q408			EMD5	TRANSISTOR	
Q409			EM6M1	FET	
Q410			2SA1955A-F	TRANSISTOR	
Q411,412			LTC014EEBFS8	TRANSISTOR	
Q414			EMD9	TRANSISTOR	
Q415			2SC4738(GR)F	TRANSISTOR	
Q416			2SA1832(GR)F	TRANSISTOR	
Q417			EMD5	TRANSISTOR	
Q418			LTC014EEBFS8	TRANSISTOR	
Q501			FK330301	FET	
Q502			LTC014TEBFS8	TRANSISTOR	
Q503			MTM981400BF	FET	
Q504			LTC014TEBFS8	TRANSISTOR	
Q701			FK330301	FET	
Q702			KTC4075E(Y,GR)	TRANSISTOR	
Q703			2SA1832(GR)F	TRANSISTOR	
Q704			2SC4738(GR)F	TRANSISTOR	
Q705,706			SSM3J15FS	FET	
Q708			LTC014EEBFS8	TRANSISTOR	
Q709			SSM6N37FE	FET	
TH1			ERTJ0EV104H	THERMISTOR	
TH101			ERTJ0EV104H	THERMISTOR	
TH103			ERTJ0EV104H	THERMISTOR	
TH701			ERTJ0EV104H	THERMISTOR	
A801			W02-3768-05	GPS MODULE	GE

Ref. No.	Address	New parts	Parts No.	Description	Destination

GE: NX-720(G)
E: NX-720