
9. EXPLODED VIEWS AND PARTS LIST

NOTES:
- *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Screws adjacent to ▼ mark on product are used for disassembly.*
- *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)*

9.1 PACKING SECTION

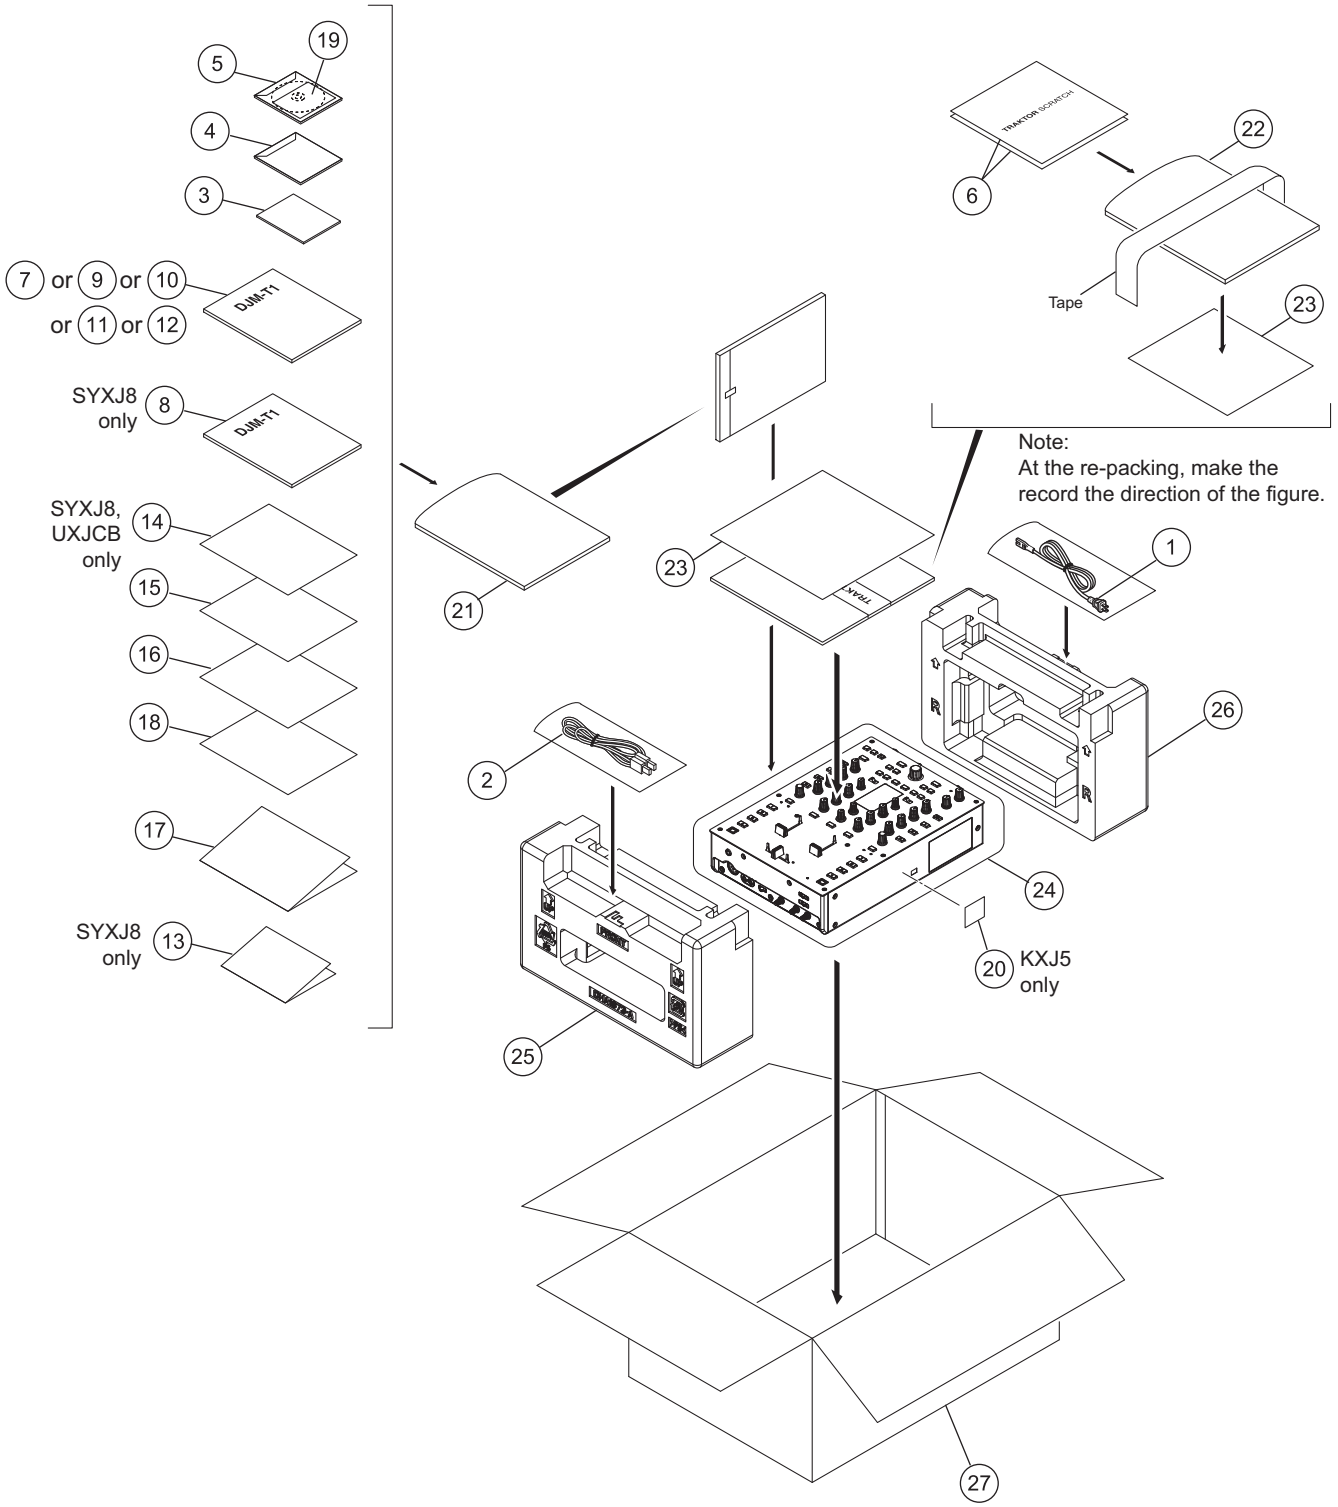

(1) PACKING SECTION PARTS LIST


Mark	No.	Description	Part No.
⚠	1	Power Cord	See Contrast table (2)
	2	USB Cable	DDE1128
NSP	3	TRAKTOR SCRATCH CONTROL CD	DXX2673
	4	Driver Software CD-ROM	DXX2675
	5	TRAKTOR SCRATCH DUO 2 Software DVD-ROM	DXX2676
NSP	6	TRAKTOR SCRATCH CONTROL VINYL	DXX2677
	7	Operating Instructions	See Contrast table (2)
	8	Operating Instructions	See Contrast table (2)
	9	Operating Instructions	See Contrast table (2)
	10	Operating Instructions	See Contrast table (2)
	11	Operating Instructions	See Contrast table (2)
	12	Operating Instructions	See Contrast table (2)
NSP	13	Warranty Card (WY)	See Contrast table (2)
	14	Leaflet/TRK	See Contrast table (2)
	15	Leaflet/A	DRM1358
	16	Leaflet/B	DRM1359
	17	Leaflet/C	DRM1360
	18	Leaflet/D	DRM1361
NSP	19	License Key Label Assy	DXA2244
NSP	20	Label/RCY	See Contrast table (2)
NSP	21	Polyethylene Bag	AHG7117
NSP	22	Polyethylene Bag	AHG7082
	23	Packing Board	DHB1002
	24	Sheet	RHX1006
	25	Pad F	DHA1873
	26	Pad R	DHA1874
	27	Packing Case	See Contrast table (2)

(2) CONTRAST TABLE

DJM-T1/SYXJ8, UXJCB, LXJ, KXJ5 and XJCN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-T1/ SYXJ8	DJM-T1/ UXJCB	DJM-T1/ LXJ	DJM-T1/ KXJ5	DJM-T1/ XJCN5
⚠	1	Power Cord	ADG7062	DDG1108	ADG7062	ADG7115	ADG7105
	7	Operating Instructions (En, Fr, De)	DRB1557	Not used	Not used	Not used	Not used
	8	Operating Instructions (It, Nl, Es, Ru)	DRB1562	Not used	Not used	Not used	Not used
	9	Operating Instructions (En)	Not used	DRB1558	Not used	Not used	Not used
	10	Operating Instructions (En, Es, ZHtw)	Not used	Not used	DRB1559	Not used	Not used
	11	Operating Instructions (Ko)	Not used	Not used	Not used	DRB1560	Not used
	12	Operating Instructions (En, Zhcn)	Not used	Not used	Not used	Not used	DRB1561
NSP	13	Warranty Card (WY)	ARY7107	Not used	Not used	Not used	Not used
	14	Leaflet/TRK	DRM1357	DRM1357	Not used	Not used	Not used
NSP	20	Label/RCY	Not used	Not used	Not used	DRW2487	Not used
	27	Packing Case	DHG3019	DHG3020	DHG3022	DHG3023	DHG3024

9.2 EXTERIOR SECION

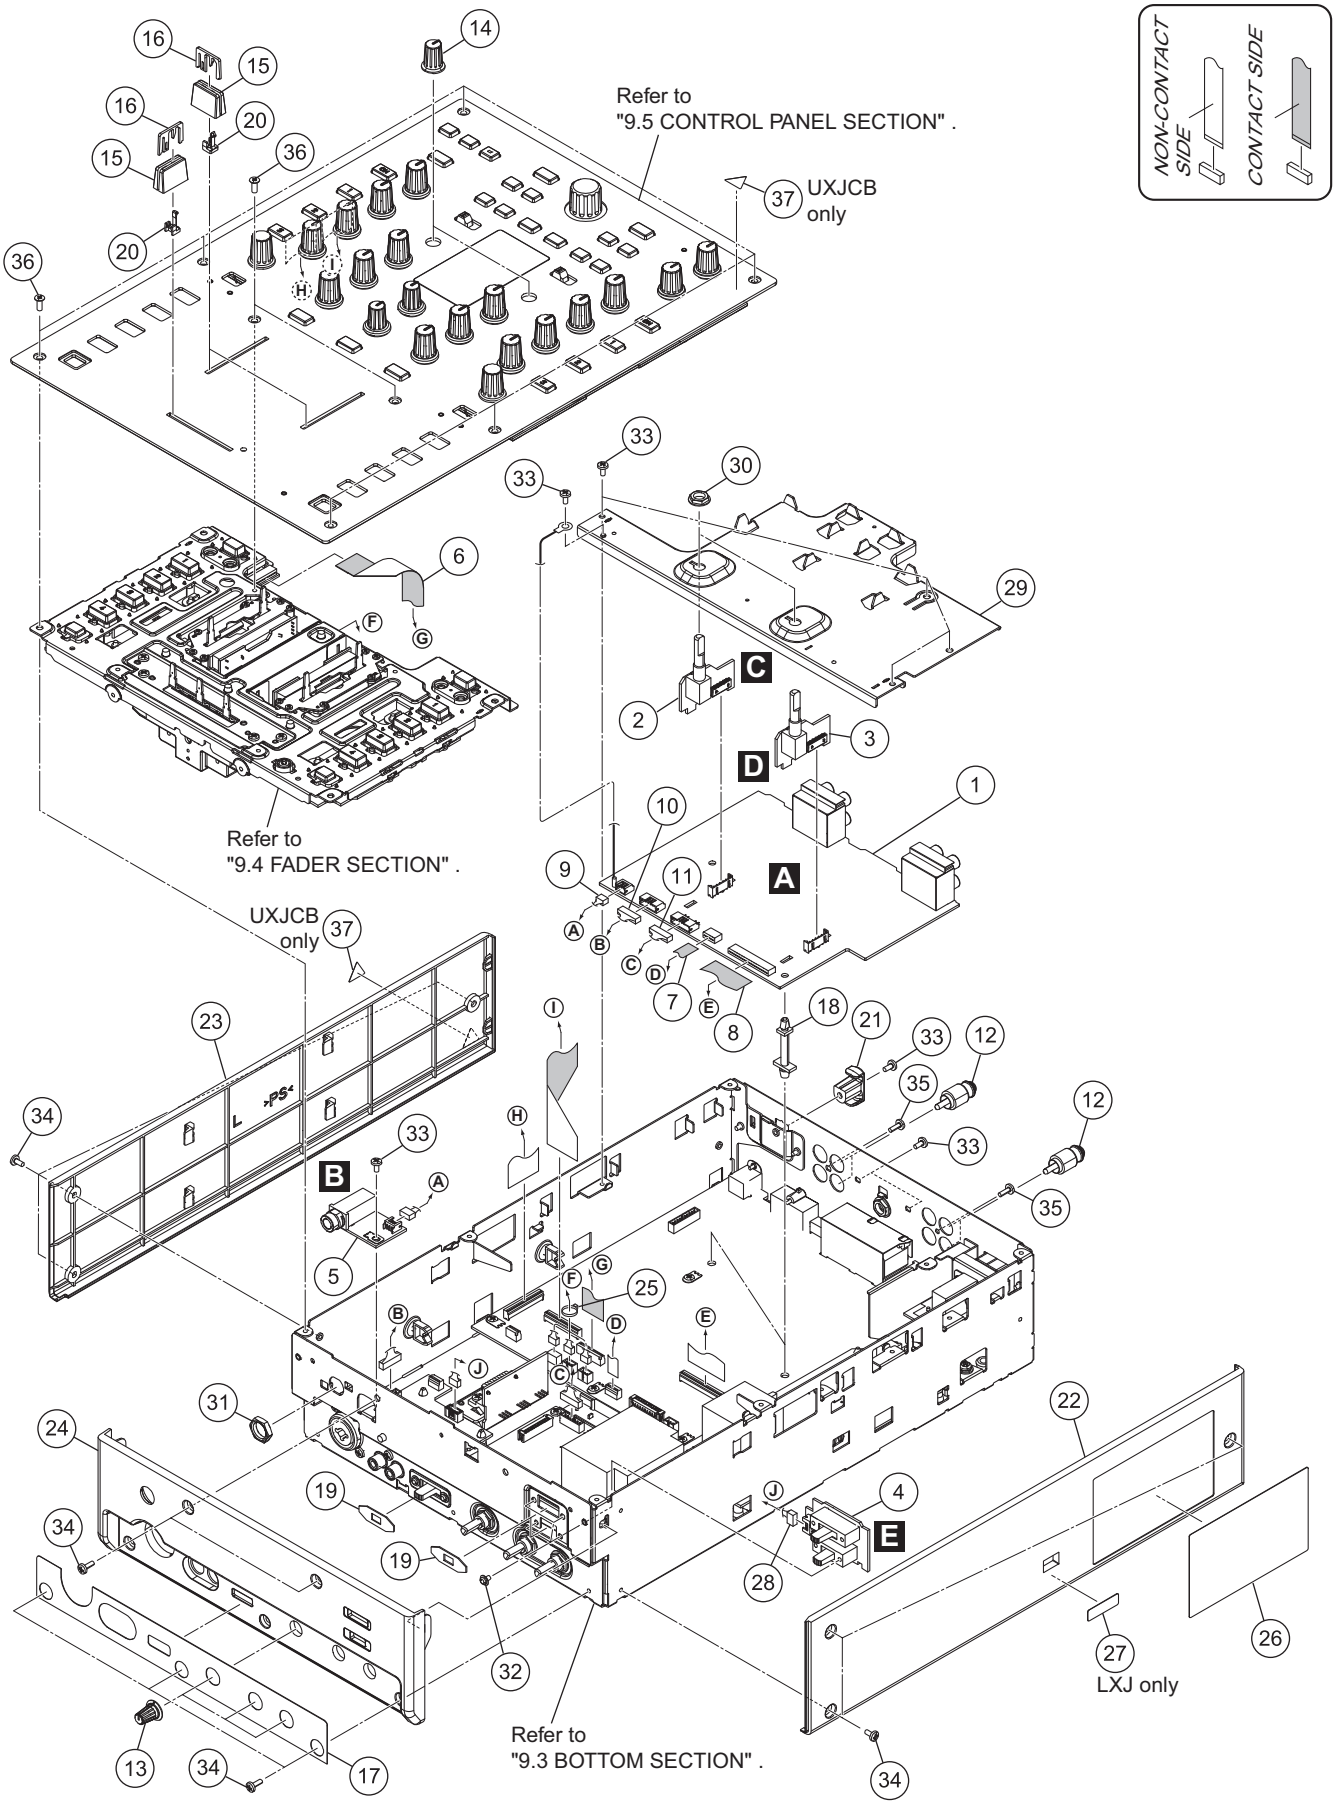

(1) EXTERIOR SECION SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	INPUT Assy	DWX3282
	2	TRM1 Assy	DWX3268
	3	TRM2 Assy	DWX3269
	4	FDSW Assy	DWX3266
	5	HPJK Assy	DWX3267
	6	FFC/17P	DDD1577
	7	FFC/7P	DDD1579
	8	FFC/31P	DDD1580
	9	Crimp Connector/3P	DKP3917
	10	Connector Assy 6P	PF06PP-D22
	11	Connector Assy	PF07PP-D15
	12	Short Pin Plug	AKM7008
	13	Rotary Knob (SS)	DAA1164
	14	Rotary VR Knob	DAA1276
	15	Slider Knob 1	DAC2684
	16	Slider Knob 2	DAC2685
	17	Front Sheet	DAK1002
NSP	18	PCB Spacer	DEC1389
	19	Packing/SW	DEC3378
	20	Slider Knob Stopper	DNK5888
	21	Cord Hook	DNK5928
⚠	22	Side Panel R	See Contrast table (2)
⚠	23	Side Panel L	DNK5942
⚠	24	Front Panel	DNK5943
	25	Binder	ZCA-SKB90BK
NSP	26	Label	See Contrast table (2)
NSP	27	V Select Label	See Contrast table (2)
	28	Connector Assy	PF04PP-B20
	29	TRIM Stay	DNF1878
	30	Flange Nut M7	DBN1011
	31	Nut M12	DBN1018
	32	Screw	AMZ26P040FTC
	33	Screw	BBZ30P060FTB
	34	Screw	BBZ30P080FTB
	35	Screw	BPZ30P080FTB
	36	Screw (FE)	DBA1290
NSP	37	Label	See Contrast table (2)

(2) CONTRAST TABLE

DJM-T1/SYXJ8, UXJCB, LXJ, KXJ5 and XJCN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-T1/ SYXJ8	DJM-T1/ UXJCB	DJM-T1/ LXJ	DJM-T1/ KXJ5	DJM-T1/ XJCN5
⚠	22	Side Panel R	DNK5941	DNK5941	DNK5946	DNK5941	DNK5941
NSP	26	Label	DAL1181	DAL1182	DAL1184	DAL1185	DAL1186
NSP	27	V Select Label	Not used	Not used	DRW2349	Not used	Not used
NSP	37	Label	Not used	DRW1975	Not used	Not used	Not used

9.3 BOTTOM SECTION

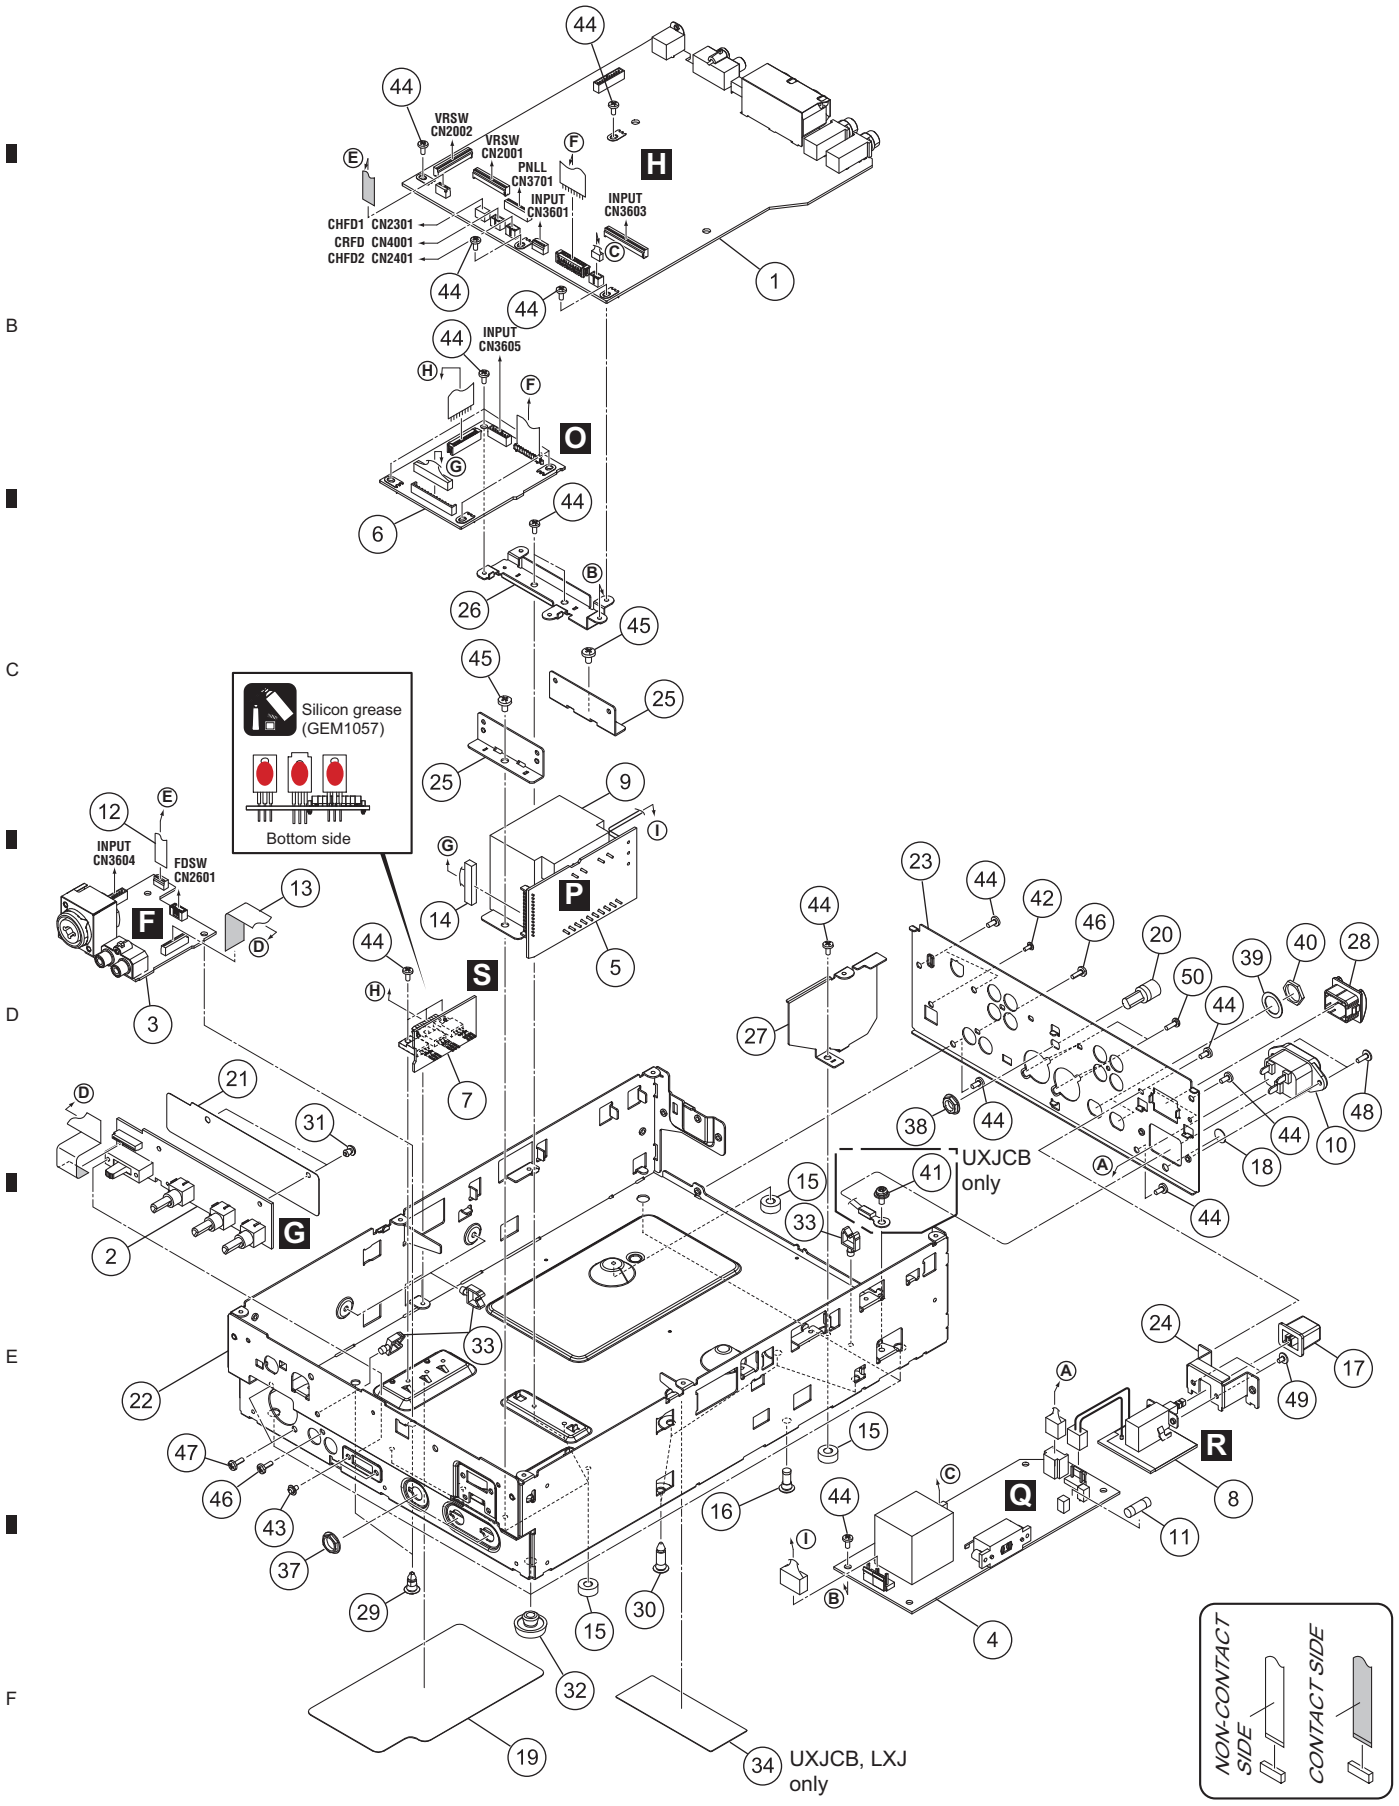

(1) BOTTOM SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	OUTPUT Assy	DWX3257
	2	MCVR Assy	DWX3264
	3	MCJK Assy	DWX3265
	4	PRIMARY Assy	See Contrast table (2)
	5	TRANS Assy	See Contrast table (2)
	6	SECONDARY Assy	DWR1503
	7	REG Assy	DWR1504
	8	ACSW Assy	DWS1435
⚠	9	Power Transformer (T3101)	See Contrast table (2)
⚠	10	AC Inlet	See Contrast table (2)
⚠	11	Fuse (FU1901: T500 mA)	AEK1051
	12	FFC/6P	DDD1578
	13	FFC/17P	DDD1581
	14	Connector Assy	PF13EE-S12
NSP	15	Spacer	AEB7092
	16	PCB Holder	AEC7057
	17	Power Knob	DAC2306
	18	Blind Label	DEC2928
	19	Bottom Sheet	DEC3365
	20	Terminal Screw	DKE1014
	21	Shield Sheet C	DMR1003
	22	Chassis	DNA1430
	23	Rear Panel	See Contrast table (2)
	24	Bracket PSW	DNF1759
	25	Trans Stay	DNF1839
	26	MAIN Stay	DNF1879
	27	Shield Plate/PW	DNF1886
	28	Power Knob Guard	DNK4534
NSP	29	PCB Holder	PNW1706
	30	PCB Holder	PNW2029
	31	Rivet (Plastic)	RBM-003
	32	Foot (Rubber)	REC-434
	33	Holder	VEC1355
NSP	34	FCC Label	See Contrast table (2)
	35	• • • • •	
	36	• • • • •	
	37	Flange Nut M9	DBN1008
	38	Flange Nut M7	DBN1011
	39	Washer	DEC2920
	40	Nut (M12)	NKX2FNI
	41	Screw	See Contrast table (2)
	42	Screw (M3x5)	DBA1340
	43	Screw	AMZ26P040FTC
	44	Screw	BBZ30P060FTB
	45	Screw	BBZ40P060FTC
	46	Screw	BPZ30P080FTB
	47	Screw	BPZ30P120FTB
	48	Screw	IBZ30P080FTB
	49	Screw	IMZ30P040FTC
	50	Screw	PPZ30P080FTB

(2) CONTRAST TABLE

DJM-T1/SYXJ8, UXJCB, LXJ, KXJ5 and XJCN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-T1/ SYXJ8	DJM-T1/ UXJCB	DJM-T1/ LXJ	DJM-T1/ KXJ5	DJM-T1/ XJCN5
	4	PRIMARY Assy	DWR1496	DWR1498	DWR1497	DWR1496	DWR1496
	5	TRANS Assy	DWR1500	DWR1501	DWR1505	DWR1500	DWR1500
⚠	9	Power Transformer (T3101)	DTT1225	DTT1226	DTT1225	DTT1225	DTT1225
⚠	10	AC Inlet/2P	DKP3916	Not used	DKP3916	DKP3916	DKP3916
⚠	10	AC Inlet/3P	Not used	DKP3915	Not used	Not used	Not used
	23	Rear Panel	DNC2055	DNC2056	DNC2058	DNC2059	DNC2060
NSP	34	FCC,CLASS B Label	Not used	DRW2300	Not used	Not used	Not used
NSP	34	FCC Label	Not used	Not used	DRW2299	Not used	Not used
	41	Screw	Not used	PMH40P080FTC	Not used	Not used	Not used


9.4 FADER SECTION

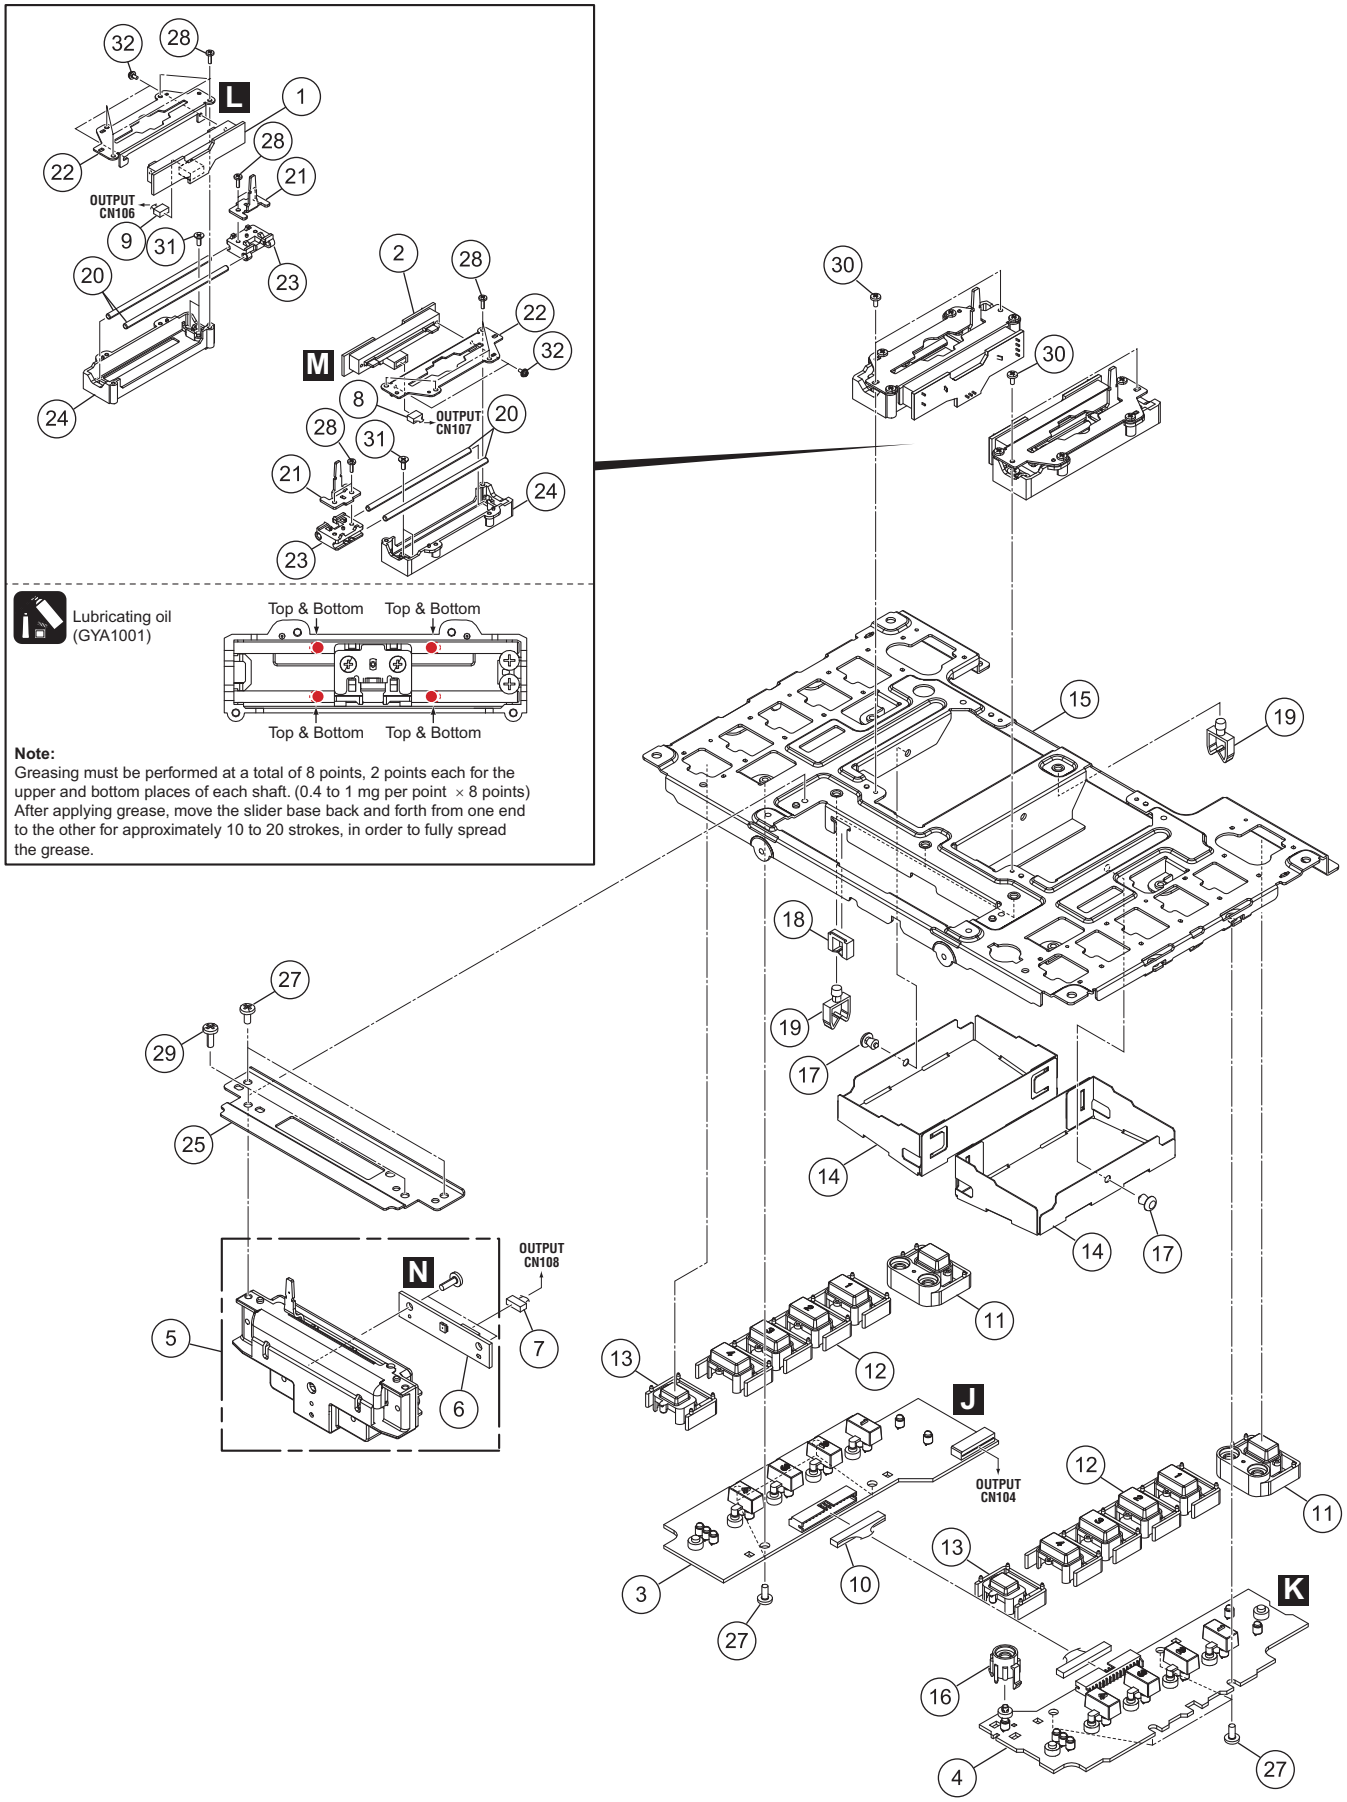

FADER SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	CHFD1 Assy	DWX3260
	2	CHFD2 Assy	DWX3261
	3	PNLL Assy	DWX3262
	4	PNLR Assy	DWX3263
	5	1..CROSS FADER Assy	DXA2243
NSP	6	2..CRFD Assy	DWX3258
	7	Connector Assy	PF03PP-Q30
	8	Connector Assy	PF03PP2Q17
	9	Connector Assy	PF03PP6Q17
	10	Connector Assy	PF15PP-Q20
	11	Button MODE	DAC2759
	12	Button HOT CUE	DAC2762
	13	Button/ACT	DAC2775
	14	Shield Sheet B	DMR1002
	15	Panel Stay	DNF1880
	16	Holder/LED	DNK5973
	17	Rivet (Plastic)	RBM-003
	18	Edge Saddle	DEC1807
	19	Holder	VEC1355
NSP	20	Guide Shaft (S)	DLA1918
	21	Lever Plate	DNH2954
	22	VR Stay	DNH2955
	23	Slider Base	DNK5851
	24	Shaft Holder	DNK5852
	25	CRF Stay	DNF1874
	26	• • • • •	
	27	Screw	BBZ30P060FTB
	28	Screw	BPZ20P060FTC
	29	Screw	BPZ30P080FTB
	30	Screw	BSZ20P040FTB
	31	Screw	CPZ26P080FTC
	32	Screw	PMH20P040FTC

9.5 CONTROL PANEL SECTION

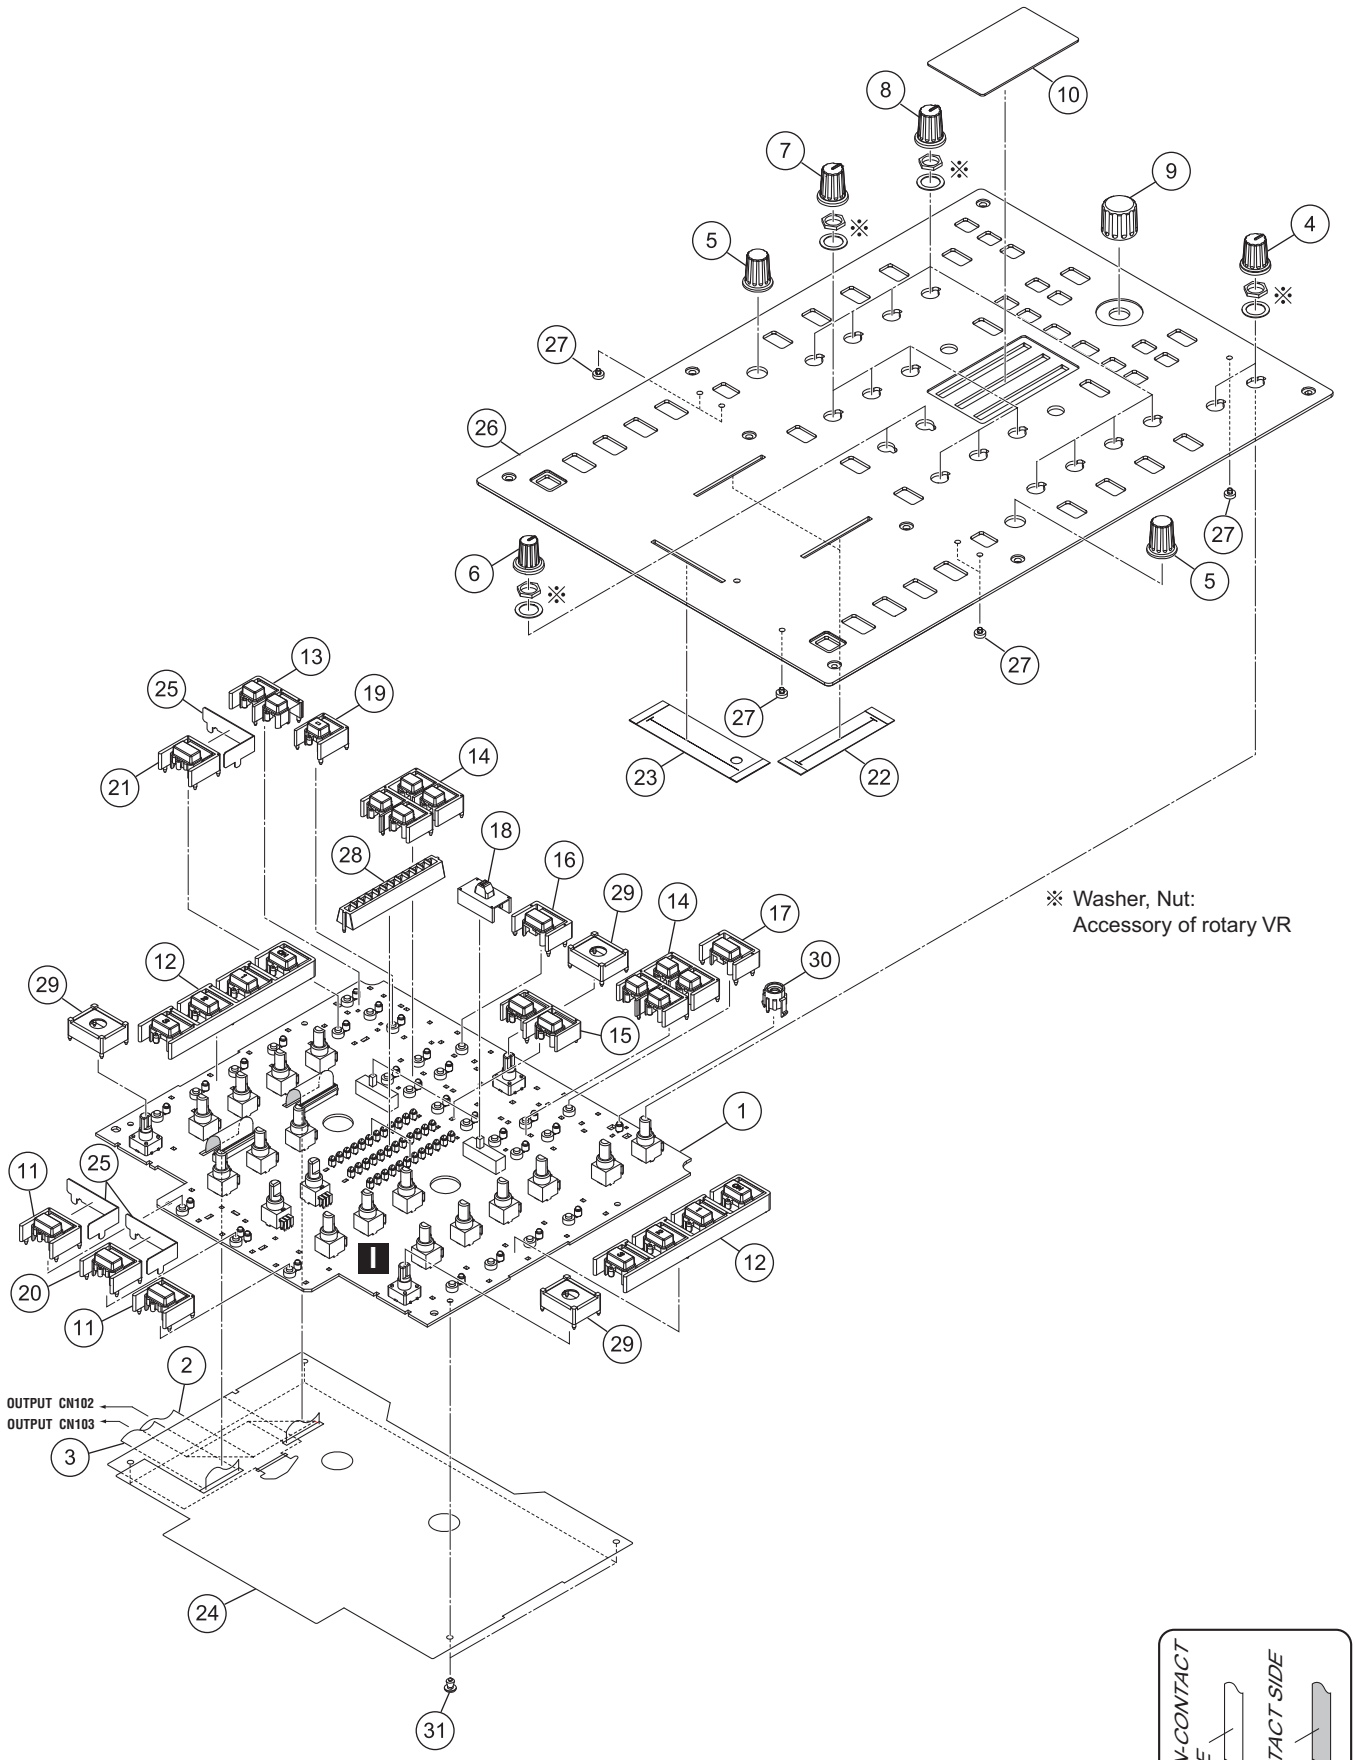

CONTROL PANEL SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	VRSW Assy	DWX3259
	2	FFC/25P	DDD1575
	3	FFC/27P	DDD1576
	4	Rotary VR Knob (B)	DAA1183
	5	Dial Knob	DAA1277
	6	Rotary VR Knob	DAA1278
	7	Rotary VR Knob (B)	DAA1279
	8	Rotary VR Knob (G)	DAA1280
	9	Knob	DAA1281
	10	Level Plate	DAH2855
	11	Button CUE	DAC2758
	12	Button FX	DAC2760
	13	Button MIDI	DAC2761
	14	Button DECK	DAC2763
	15	Button SYNC	DAC2765
	16	Button LOAD A	DAC2766
	17	Button LOAD B	DAC2767
	18	Cap/MIC	DAC2773
	19	Button/UTI	DAC2776
	20	Button/SFT	DAC2778
	21	Button/SNP	DAC2779
	22	Fader Packing	DEC2903
	23	Packing/FAD	DEC3377
⚠	24	Shield Sheet A	DMR1001
	25	Shield Sheet/D	DMR1004
	26	Control Panel	DNB1191
	27	Lens	DNK4532
	28	Level Meter Holder	DNK5940
	29	Spacer	DNK5944
	30	Holder/LED	DNK5973
	31	Rivet (Plastic)	RBM-003

12. PCB PARTS LIST

NOTES: ● *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*

● *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*

● *When ordering resistors, first convert resistance values into code form as shown in the following examples.*

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47 k ohm (tolerance is shown by J = 5%, and K = 10%).

560 Ω	→	*56 × 10¹*	→	*561* ····· *RD1/4PU 5 6 1 J*
47 kΩ	→	*47 × 10³*	→	*473* ····· *RD1/4PU 4 7 3 J*
0.5 Ω	→	*R50*		····· *RN2H R 5 0 K*
1 Ω	→	*1R0*		····· *RS1P 1 R 0 K*

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62 kΩ	→	*562 × 10¹*	→	*5621* ····· *RN1/4PC 5 6 2 1 F*

● *Meaning of the figures and others in the parentheses in the parts list.*

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.
IC 301 (A, 91, 111) IC NJM2068V

LIST OF ASSEMBLIES

Mark	No.	Description	Part No.
NSP	1	..MAIN ASSY	DWM2437
	2	..OUTPUT ASSY	DWX3257
	2	..MCVR ASSY	DWX3264
	2	..TRM1 ASSY	DWX3268
	2	..TRM2 ASSY	DWX3269
NSP	1	..PANEL ASSY	DWM2438
	2	..VRSW ASSY	DWX3259
	2	..CHFD1 ASSY	DWX3260
	2	..CHFD2 ASSY	DWX3261
	2	..MCJK ASSY	DWX3265
	2	..FDSW ASSY	DWX3266
	2	..HPJK ASSY	DWX3267
NSP	1	..POWER ASSY (SYXJ8, KXJ5, XJCN5)	DWM2440
NSP	1	..POWER ASSY (UXJCB)	DWM2442
NSP	1	..POWER ASSY (LXJ)	DWM2441
	2	..PRIMARY ASSY (SYXJ8, KXJ5, XJCN5)	DWR1496
	2	..PRIMARY ASSY (UXJCB)	DWR1498
	2	..PRIMARY ASSY (LXJ)	DWR1497
	2	..TRANS ASSY (SYXJ8, KXJ5, XJCN5)	DWR1500
	2	..TRANS ASSY (UXJCB)	DWR1501
	2	..TRANS ASSY (LXJ)	DWR1505
	2	..SECONDARY ASSY	DWR1503
	2	..REG ASSY	DWR1504
	2	..ACSW ASSY	DWS1435
	2	..PNLL ASSY	DWX3262
	2	..PNLR ASSY	DWX3263
	2	..INPUT ASSY	DWX3282
	1	..CROSS FADER ASSY	DXA2243
NSP	2	..CRFD ASSY	DWX3258

CONTRAST OF PCB ASSEMBLIES

P TRANS ASSY

DWR1500, DWR1501 and DWR1505 are constructed the same except for the following:

Mark	Symbol and Description	DWR1500	DWR1501	DWR1505
⚠	JP3101 Board in Jumper/3P	Not used	Not used	DKP3924
⚠	JP3102 Connector Assy 2P	DKP3847	DKP3847	Not used

Q PRIMARY ASSY

DWR1496, DWR1498 and DWR1497 are constructed the same except for the following:

Mark	Symbol and Description	DWR1496	DWR1498	DWR1497
⚠	CN3004 Connector	B2P3-VH	B2P3-VH	Not used
⚠	CN3003 Connector (VH)	Not used	Not used	B3P5-VH
⚠	T3001 Transfomer	DTT1245	DTT1255	DTT1242
⚠	S3001 Voltage Selector	Not used	Not used	AKX7020

Mark	No.	Description	Part No.

PARTS LIST (DJM-T1/SYXJ8)

A INPUT ASSY

SEMICONDUCTORS

	IC	3501,3502,3507,3508	NJM4580MD
	IC	3503-3506	NJM2121MD
	IC	3601	NJM4565MD
	IC	3602	NJM4580MD
	Q	3501-3508,3601,3602	2SK209
	Q	3509,3510	LTC114EUB
	Q	3603,3604	INC2002AC1
	Q	3609,3611	2SD1859X
	Q	3610,3612	2SB1238X

MISCELLANEOUS

	JA	3501,3502 JACK	DKB1083
	CN	3501,3502 11P PLUG	XKP3065
	CN	3601 7P CONNECTOR	VKN1267
	CN	3602 L-PLUG (3P)	KM200NA3L
	CN	3603 31P CONNECTOR	VKN1291
	CN	3604 L-PLUG (6P)	KM200NA6L
	CN	3605 L-PLUG (7P)	KM200NA7L
	0	SHIELD CASE/PIN	DNF1885
⚠	P	3601,3602 PROTECTOR (400 mA)	AEK7004

RESISTORS

	R	3501-3508	RN1/16SE1000D
	R	3513-3520	RN1/16SE4702D
	R	3521,3523,3525,3527	RN1/16SE1501D
	R	3522,3524,3526,3528	RN1/16SE2401D
	R	3529-3532	RN1/16SE1501D
	R	3537-3540	RN1/16SE5600D
	R	3541-3544	RN1/16SE2703D
	R	3545-3548	RN1/16SE2202D
	R	3549-3552	RM1/16SE1003D
	R	3557-3560,3621,3622	RN1/16SE1001D
	R	3577,3578,3643	RS1/8SQ0R0J
	R	3587,3589,3591,3593	RN1/16SE2702D
	R	3588,3590,3592,3594	RN1/16SE1102D
	R	3599,3626-3628	RS1/10SR0R0J
	R	3601,3602,3644-3647	RN1/16SE5601D
	R	3603,3604,3639,3641	RN1/16SE3002D
	R	3605,3606	RN1/16SE3901D
	R	3607,3608,3613,3614	RN1/16SE1002D
	R	3619,3620	RS1/10SR68R0D
	R	3623,3624	RS2LMF150J
	R	3640,3642	RN1/16SE4701D
	Other Resistors		RS1/10SR###J

CAPACITORS

	C	3501-3508	CCSRCH102J50
	C	3509-3516,3612,3613	CCSRCH101J50
	C	3517-3520	CCSRCH471J50
	C	3521-3524	CKSRYB223K50
	C	3525,3527,3529,3531	CCSRCH331J50
	C	3526,3528,3530,3532	CEAT221M16
	C	3537-3540,3549-3552	CKSRYB104K25
	C	3541-3544,3638,3639	DCG1049
	C	3545-3548,3561-3564	CEANP100M35
	C	3553,3556,3559,3560	CEAT100M50
	C	3554,3555,3557,3558	CKSRYB104K25
	C	3565,3566,3572-3574	CKSRYB104K25
	C	3577,3607,3608,3615	CKSRYB104K25
	C	3579-3582	CFTLA123J50
	C	3601,3602,3609,3610	CEANP100M35
	C	3603,3604	CCSRCH681J50
	C	3605,3606	CCSRCH470J50
	C	3614,3617,3634,3635	CEAT100M50
	C	3616,3628,3629	CKSRYB104K25
	C	3620,3625,3636,3637	CEAT101M16
	C	3621-3624,3630,3631	CKSRYB104K16
	C	3626,3627	CEANP471M16
	C	3632,3633	CKSQYB105K25

B HPJK ASSY

MISCELLANEOUS

	JA	2701 HEADPHONE JACK	DKN1622
	KN	2701 EARTH TERMINAL	AKF7002
	CN	2701 L-PLUG (3P)	KM200NA3L

RESISTORS

	All Resistors		RS1/10SR###J

CAPACITORS

	C	2701,2702	CKSRYB104K16
	C	2703	CFTLA104J50

C TRM1 ASSY

MISCELLANEOUS

	VR	2801 ROTARY VR	DCS1118
	CN	2801 11P SOCKET	XKP3076

RESISTORS

	All Resistors		RS1/16SS###J

D TRM2 ASSY

MISCELLANEOUS

	VR	2901 ROTARY VR	DCS1118
	CN	2901 11P SOCKET	XKP3076

RESISTORS

	All Resistors		RS1/16SS###J

E FDSW ASSY

MISCELLANEOUS

	S	2601 SLIDE SWITCH	DSH1050
	S	2602 SLIDE SWITCH	DSH1036
	CN	2601 L-PLUG (4P)	KM200NA4L

F MCJK ASSY

SEMICONDUCTORS

	IC	2501	NJM4580MD
	IC	2502,2503	NJM2121MD
	Q	2501,2502	2SK209
	Q	2503	LTC114EUB
	D	2505	UDZS15(B)

MISCELLANEOUS

	L	2501,2502 FERRITE CORE	VTF1093
	JA	2501 CANON CONNECTOR	DKB1108

Mark	No.	Description	Part No.
	JA 2502	RCA JACK/2P	DKB1114
	CN 2501	17P CONNECTOR	VKN1248
	CN 2502	PLUG (4P)	KM200NA4
	CN 2503	6P CONNECTOR	VKN1237
	CN 2504	PLUG (6P)	KM200NA6
	0	MIC SHIELD	DNF1849

RESISTORS

	R	2501,2517	RN1/16SE1202D
	R	2502,2516	RN1/16SE1000D
	R	2503,2504	RN1/16SE2201D
	R	2505,2506	RN1/16SE1502D
	R	2507,2508	RN1/16SE4702D
	R	2509,2511,2514,2515	RN1/16SE4701D
	R	2510,2513	RN1/16SE1501D
	R	2512	RN1/16SE1800D
	Other Resistors		RS1/10SR###J

CAPACITORS

	C	2501,2502	CCSRCH102J50
	C	2509,2511,2512	CCSRCH471J50
	C	2513	CEANP100M35
	C	2514,2515,2518,2519	CKSRYB104K25
	C	2516,2517	DCE1020
	C	2520,2521,2524,2525	CEAT100M50
	C	2522,2523	CKSRYB104K25
	C	2526,2527	CFTLA123J50

G MCVR ASSY

SEMICONDUCTORS

	IC	1901,1902	NJM4565MD

MISCELLANEOUS

	VR	1901 ROTARY VR	DCS1072
	VR	1902,1903 VARIABLE RESISTOR	DCS1100
	S	1901 SLIDE SWITCH	DSH1050
	CN	1901 17P CONNECTOR	VKN1248

RESISTORS

	R	1901-1904	RN1/16SE1003D
	R	1905-1908,1911,1912	RN1/16SE2701D
	R	1909,1910,1913,1914	RN1/16SE1001D
	R	1916,1918	RN1/16SE3301D
	R	1917,1919	RN1/16SE1001D

CAPACITORS

	C	1901,1902,1905,1906	CEJQNP100M35
	C	1903,1904,1909,1910	CKSRYB104K25
	C	1907,1908	CKSRYB103K50
	C	1911,1917	CEJQ100M35
	C	1912-1915,1919,1920	CKSRYB104K25
	C	1916,1918	CCSRCH220J50

H OUTPUT ASSY

SEMICONDUCTORS

	IC	101	R5S72630P200FP
	IC	102,104,107	TC74VHC08FK
	IC	103	S-80927CNMC-G8X
	IC	105	TC7SU04FU
	IC	106,140	TC7SH08FUS1
	IC	108	IS42S16400F-6TL
	IC	109	DYW1804
	IC	110,111,116,117	NJM4580MD
	IC	113,119,137	NJM4565MD
	IC	114,120	PCM1804DB
	IC	115,121	TC7WH157FK
	IC	122	AK5358AET
	IC	123	PCM1691DCA
	IC	124	TC74VHC4052AFK
⚠	IC	125	NJM2393M
	IC	126	S-80942CNMC-G9C
⚠	IC	127,130,131	BH33FB1WG
⚠	IC	128	BD9326EFJ
⚠	IC	129	BD9106FVM
	IC	132,133,136	NJM4580MD
	IC	134,135	NJM2114D
	IC	138,139	NJM4580DD
	Q	101,103,112	LTC114EUB
	Q	102,104	LTA114EUB
	Q	105-111,115	LSA1576UB
	Q	113,140	LTC124EUB
	Q	114	LSC4081UB
	Q	120-123,132-135	2SK209
	Q	124-131,136-139	INC2002AC1
	Q	141	LTA124EUB
	Q	144-147	INC2002AC1
	D	103-106,109-114	1SS302
⚠	D	115	RB160L-40
⚠	D	116	CMS03
	D	117,126	1SS352
	D	135-138	RSB18V

MISCELLANEOUS

	L	101	COIL	ATH7015
	L	102	INDUCTOR (470 UH)	DTL1123
	L	103	INDUCTOR	CTH1253
	L	104	INDUCTOR	BTH1112
	F	101,102	EMI FILTER	DTL1106
	JA	101	USB CONNECTOR	DKN1237
	JA	102,103	CANON CONNECTOR	DKB1093
	JA	104	PIN JACK (2P)	AKB7181
	JA	105,106	HEADPHONE JACK	DKN1622
	KN	101-104	EARTH TERMINAL	AKF7002
	S	101	SLIDE SWITCH	CSH1042
	X	101	CRYSTAL (33 MHz)	DSS1193
	X	102	CRYSTAL (48 MHz)	ASS7099
	X	103	CRYSTAL (24.576 MHz)	DSS1204
	CN	102	25P CONNECTOR	VKN1256
	CN	103	27P CONNECTOR	VKN1258
	CN	104	17P CONNECTOR	VKN1248
	CN	105	6P CONNECTOR	VKN1237
	CN	106	PLUG (3P)	KM200NA3E
	CN	107	PLUG (3P)	KM200NA3R
	CN	108,111	PLUG (3P)	KM200NA3
	CN	109	7P CONNECTOR	VKN1238
	CN	110	31P CONNECTOR	VKN1262
	CN	112	10PJUMPER CONNECTOR	52147-1010
	0		CANON SHIELD	DNF1789
⚠	P	101,102	PROTECTOR (400 mA)	AEK7004
⚠	P	103,104	PROTECTOR (1 A)	AEK1073

Mark	No.	Description	Part No.
RESISTORS			
	R	101,102,298	RAB4CQ103J
	R	104-108,128,131	RAB4CQ101J
	R	109-113,124,202	RAB4CQ680J
	R	132,136,140,143	RAB4CQ330J
	R	146	RAB4CQ330J
	R	153,155,159,311	RS1/10SR103J
	R	157	RS1/16SS5601F
	R	158,163,245,246	RS1/10SR0R0J
	R	165,196,197	RAB4CQ101J
	R	173,178	RAB4CQ472J
	R	203,209,210	RAB4CQ680J
	R	211-218,251-258	RN1/16SE1101D
	R	222-225,262-265	RN1/16SE2000D
	R	226-229,266-269	RN1/16SE2200D
	R	230-233,270-273	RN1/16SE1001D
	R	236,239,240,243	RN1/16SE1201D
	R	237,238,241,242	RN1/16SE2401D
	R	276,279,280,283	RN1/16SE1201D
	R	277,278,281,282	RN1/16SE2401D
	R	285,286,295,297	RS1/10SR0R0J
	R	291,292	RN1/16SE6801D
	R	293,294	RN1/16SE1301D
	R	301,304,453,454	RS1/10SR0R0J
	R	312,451,452	RS1/10SR183J
	R	313,317,331,332	RS1/10SR332J
	R	314	RS1/4SAR82J
	R	315,320,333,334	RS1/10SR101J
	R	318	RS1/16SS3302D
	R	319	RS1/16SS1102D
	R	322,329	RS1/10SR272J
	R	323,330,587	RS1/10SR103J
	R	335	RS1/4SA0R0J
	R	345,349	RS1/16SS1002D
	R	346	RS1/16SS2002D
	R	348	RS1/16SS4702D
	R	350,541-543,584	RS1/8SQ0R0J
	R	351,352,355,356	RS1/10SR473J
	R	353,354,572,573	RS1/10SR223J
	R	357-364	RN1/16SE3301D
	R	365-372,381-388	RN1/16SE2402D
	R	373-380	RN1/16SE3001D
	R	389-396	RN1/16SE2701D
	R	397,399,401,403	RN1/16SE2201D
	R	398,400,402,404	RN1/16SE1002D
	R	405-412,439-446	RN1/16SE5601D
	R	418,420,588,590	RN1/16SE1002D
	R	423,425,427,429	RN1/16SE4301D
	R	424,426,428,430	RN1/16SE1501D
	R	433-438,494,497	RD1/2VM331J
	R	447,448,562,563	RS1/10SR473J
	R	449,450,463,464	RS1/10SR474J
	R	455-458,515-518	RS1/10SR183J
	R	473,474	RN1/16SE5101D
	R	475,476,479,480	RN1/16SE9102D
	R	477,478,481,482	RN1/16SE4701D
	R	483,484,544,582	RS1/10SR0R0J
	R	485-492	RN1/16SE3601D
	R	493,496,499,502	RN1/16SE4301D
	R	495,498,501,504	RN1/16SE1501D
	R	500,503	RD1/2VM331J
	R	505-512	RN1/16SE5601D
	R	513,514	RS1/10SR474J
	R	585	RS1/8SQ0R0J
	R	586,618,620	RS1/10SR0R0J
	R	589,591	RN1/16SE3302D
	R	603	RS1/10SR102J
	R	606-609	RS1/10SR473J
	R	615	RS1/10SR101J
	Other Resistors		RS1/16SS###J
CAPACITORS			
	C	101,102,119,120	CKSSYB103K16
	C	103,104,106,108	CKSRYB104K16
	C	105,107,109,111	CCSRCH102J50
	C	110,112,114-118	CKSRYB104K16
	C	113,121,123,129	CCSRCH102J50
	C	122,124-126	CKSRYB104K16
	C	127,128,169,199	CKSSYB103K16
	C	130,134,147,157	CCSRCH102J50
	C	131-133,140,146	CKSRYB104K16
	C	135-139,141-145	CKSSYB104K10
	C	148,153-155,158	CKSRYB104K16
	C	149-151,171,186	CKSSYB104K10
	C	159,163,166,175	CCSRCH102J50
	C	160,161,164,165	CKSRYB104K16
	C	162,167,194,201	CCSSCH100D50
	C	168,172-174,176	CKSRYB104K16
	C	170,226,259,260	CKSSYB102K50
	C	177,179,181,184	CCSRCH102J50
	C	178,180,183,188	CKSRYB104K16
	C	182,187,193,200	CKSRYB103K50
	C	185,190,196,206	DCH1201
	C	189,202,203,207	CKSSYB104K10
	C	191,198,622	CCSRCH102J50
	C	192	CKSSYB472K50
	C	195,204,252,292	CKSRYB104K16
	C	205,220,264,304	CKSSYB103K16
	C	208-212,215,216	CCSSCH471J50
	C	213,217,219	CKSSYB104K10
	C	214,218,635,638	CCSSCH100D50
	C	221-225,227-230	CKSSYB104K10
	C	237,243,253,258	CEAT100M50
	C	238-241,278-281	CKSRYB104K25
	C	245-248,285-288	CCSRCH101J50
	C	250,254,255,257	CKSSYB104K10
	C	256,263,296,303	CKSSYB272K50
	C	261,267,277,283	CEAT100M50
	C	262,265,266,268	CKSSYB104K10
	C	270,290,294,295	CKSSYB104K10
	C	293,298,301,307	CEAT100M50
	C	297,302,305,306	CKSSYB104K10
	C	299,300,322,326	CKSSYB102K50
	C	308,310,314,315	CKSSYB104K10
	C	311,312,328,329	CEANP100M35
	C	313,320,325,332	CEAT100M50
	C	316,350	CEAT470M25
	C	317,318,321,324	CKSSYB104K10
	C	319,323,336,337	CKSSYB103K16
	C	327,583,598,611	CKSSYB102K50

Mark	No.	Description	Part No.
	C	330,331,578,584	CKSRYB105K10
	C	333	CEAT100M50
	C	334,338-340	CKSSYB104K10
	C	341-344,402-405	CCSSCH471J50
	C	345-349,364,367	CKSSYB104K10
	C	351,369	CCG1236
	C	352,361,377	CKSRYB104K16
	C	353,354,358,368	CKSRYB104K25
	C	355	CCSRCH560J50
	C	356	CKSSYB473K16
	C	357,359,414,418	CEAT101M25
	C	360	CCSSCH221J50
	C	362	CEAT221M16
	C	363,374,384,389	CEAT101M16
	C	365,375,380,381	DCH1201
	C	370,415-417,419	CKSRYB104K25
	C	371,373,378,382	CKSSYB104K10
	C	372,392,395	CCG1205
	C	376	CKSSYB222K50
	C	379,470,471	CCSRCH561J50
	C	383	DCH1201
	C	385	CKSQYB105K25
	C	387,388,391,393	CKSSYB104K10
	C	394,397	CEAT101M16
	C	396,510-512,514	CKSSYB104K10
	C	398-401	CCSRCH222J50
	C	406-413	CCSRCH680J50
	C	420-423	DCH1323
	C	430,435,445,446	CEHAZL101M25
	C	432,433,437,438	CCSRCH101J50
	C	440,447,474,477	CEAT101M25
	C	448-451,478-481	CCSRCH101J50
	C	452,453	CEANP100M35
	C	462-467,496-499	DCE1018
	C	468,469	DCG1049
	C	472,473	CCSRCH150J50
	C	475,476,585-594	CKSRYB104K25
	C	482,485,488,489	CEAT101M25
	C	490-493,572	CCSRCH101J50
	C	505-508	CKSRYB104K16
	C	515,516,602	CKSRYB103K50
	C	519,568-571,575	CKSSYB104K10
	C	521-524	CKSRYB473K50
	C	525-529,595-597	CKSSYB103K16
	C	530-537	CEANP470M35
	C	538-545,579-582	CCSSCH471J50
	C	603,604	CKSSYB103K16
	C	609,610,614	CKSSYB104K10
	C	612	CKSRYB105K10
	C	613,615-618	CKSSYB102K50
	C	619-621	CCSSCH101J50
	C	634,636,637	CCSRCH100D50
	C	639	CCSSCH100D50
	C	640,642-644	CKSSYB105K6R3
	C	645-651	CKSSYB223K16

I VRSW ASSY

SEMICONDUCTORS

Mark	No.	Description	Part No.
	IC	2201	NJM2903M
	IC	2202,2203	TC74HC4052AF
	Q	2001-2012,2203-2225	LSC4081UB
	Q	2013,2015,2017,2019	LTC143EUB
	Q	2014,2016,2018,2020	2SB1689
	Q	2021,2023,2025	LTC143EUB
	Q	2022,2024,2026	2SB1689
	Q	2027,2029,2030,2032	LSA1576UB
	Q	2031	LTA114EUB
	Q	2201	LTA143EUB
	Q	2226,2227,2229-2231	LSA1576UB
	Q	2228	LSC4081UB
	D	2001,2013,2025,2070	SLI-343U8RC(HJKL)
	D	2002-2005,2014-2017	SLI-343YYW(TUV)
	D	2006-2012,2018-2024	SLR-343MC(NPQ)
	D	2026-2029,2037-2040	SLI-343YYW(TUV)
	D	2030-2036,2094	SLR-343MC(NPQ)
	D	2043-2046,2048-2057	SLI-343YYW(TUV)
	D	2058,2059,2095	SLR343BC4T(JK)
	D	2060-2069,2071-2093	1SS352
	D	2096,2097	SLR343WBC7T(MN)
	D	2099-2102	SLI-343YYW(TUV)

MISCELLANEOUS

Mark	No.	Description	Part No.
	VR	2201,2202,2204 ROTARY VR	DCS1116
	VR	2203,2205,2216 ROTARY VR	DCS1117
	VR	2206-2215,2217,2218 ROTARY VR	DCS1116
	S	2001-2006,2008-2010 TACT SWITCH	DSG1079
	S	2007,2011 SLIDE SWITCH	DSH1058
	S	2012-2014,2016-2019 TACT SWITCH	DSG1079
	S	2015,2020,2025 ENCODER	DSX1082
	S	2021-2024,2026-2032 TACT SWITCH	DSG1079
	CN	2001 25P CONNECTOR	VKN1256
	CN	2002 27P CONNECTOR	VKN1258

RESISTORS

Mark	No.	Description	Part No.
	All Resistors		RS1/10SR###J

CAPACITORS

Mark	No.	Description	Part No.
	C	2003,2004	CEJQ101M16
	C	2005-2013,2201-2203	CKSRYB104K16
	C	2206-2209,2213-2216	CKSRYB471K50
	C	2210-2212,2217,2218	CKSRYB104K16
	C	2219-2222,2226,2228	CKSRYB471K50
	C	2223-2225,2227,2229	CKSRYB104K16
	C	2230,2231	CKSRYB471K50
	C	2232-2241,2243	CKSRYB104K16

J PNLL ASSY

SEMICONDUCTORS

Mark	No.	Description	Part No.
	Q	3701-3706	LSC4081UB
	Q	3707,3709	LTC143EUB
	Q	3708,3710	2SB1689
	Q	3711-3718,3721,3723	LSA1576UB
	D	3701-3706,3719	SLI-343YYW(TUV)
	D	3707-3712	SLR343EC4T(LMN)
	D	3713-3718	1SS352

Mark	No.	Description	Part No.
		MISCELLANEOUS	
	S	3701-3706 TACT SWITCH	DSG1079
	CN	3701 17P CONNECTOR	VKN1277
	CN	3702 L-PLUG (15P)	KM200NA15L
		RESISTORS	
		All Resistors	RS1/10SR###J
		CAPACITORS	
	C	3701	CEJQ101M16
	C	3702-3704	CKSRYB104K16

K PNLR ASSY

		SEMICONDUCTORS	
	Q	3801-3806,3824	LSC4081UB
	Q	3807,3809	LTC143EUB
	Q	3808,3810	2SB1689
	Q	3811-3818,3821,3823	LSA1576UB
	D	3801-3806,3819	SLI-343YYW(TUV)
	D	3807-3812	SLR343EC4T(LMN)
	D	3813-3818	1SS352
	D	3820	SLI-343U8RC(HJKL)
		MISCELLANEOUS	
	S	3801-3806 TACT SWITCH	DSG1079
	CN	3801 L-PLUG (15P)	KM200NA15L
		RESISTORS	
		All Resistors	RS1/10SR###J
		CAPACITORS	
	C	3801	CEJQ101M16
	C	3802-3804	CKSRYB104K16

L CHFD1 ASSY

		SEMICONDUCTORS	
	D	2301,2302	1SS352
		MISCELLANEOUS	
	VR	2301 SLIDE VR	DCV1027
	CN	2301 PLUG (3P)	KM200NA3E
		CAPACITORS	
	C	2301	CKSRYB104K16

M CHFD2 ASSY

		SEMICONDUCTORS	
	D	2401,2402	1SS352
		MISCELLANEOUS	
	VR	2401 SLIDE VR	DCV1027
	CN	2401 PLUG (3P)	KM200NA3R
		CAPACITORS	
	C	2401	CKSRYB104K16

N CRFD ASSY

* When replacement of the CRFD Assy is required, be sure to order the CROSS FADER Assy (DXA2243) which is a parent Assy.

Mark	No.	Description	Part No.

O SECONDARY ASSY

		SEMICONDUCTORS	
	IC	3202	PST3228
	Q	3205	LSC4081UB
⚠	D	3201-3204,3207-3214	1SR154-400
⚠	D	3205,3206	RB160L-40
	D	3215-3217	1SS352
		MISCELLANEOUS	
	J	3201 10PJUMPER WIRE	D20PDY1010E
	KN	3202,3203 EARTH TERMINAL	AKF7002
	CN	3201 CONNECTOR	B13B-EH
	CN	3202 PLUG (7P)	KM200NA7
	CN	3203 10PJUMPER CONNECTOR	52147-1010
	JH	3201 10P CABLE HOLDER	51048-1000
		RESISTORS	
	R	3201	RS1/4SA0R0J
	R	3221	RN1/16SE1502D
	R	3222	RN1/16SE2202D
		Other Resistors	RS1/10SR###J
		CAPACITORS	
	C	3201-3210	CKSRYB473K50
	C	3211-3219,3222,3231	CCSRCH102J50
	C	3220	CEAT472M16
	C	3221	CEAT222M25
	C	3223,3224	CEAT102M16
	C	3225	CKSRYB104K25
	C	3228,3239	CKSRYB103K50
	C	3232,3233	CEAT222M35
	C	3234	CEAT101M16
	C	3235	CEANP1R0M50
	C	3237,3238	CEAT101M25

P TRANS ASSY

		MISCELLANEOUS	
	CN	3101 CONNECTOR	B13B-EH
⚠	JP	3102 CONNECTOR ASSY 2P	DKP3847
⚠	P	3101,3103 PROTECTOR (1.5 A)	AEK7011
⚠	P	3102 PROTECTOR (800 mA)	AEK7008

Q PRIMARY ASSY

		SEMICONDUCTORS	
	Q	3001	2SD1859X
	D	3001	1SS302
	D	3002	1SS352
⚠	D	3003-3006	1SR154-400
		MISCELLANEOUS	
⚠	L	3001 FILTER	DTL1131
	H	3001,3002 FUSE CLIP	AKR1004
⚠	RY	3001 RELAY	ASR7029
⚠	T	3001 TRANSFOMER (SY)	DTT1245
⚠	CN	3001 AC CODE SOCKET	RKP1751
⚠	CN	3002,3004 CONNECTOR	B2P3-VH
		RESISTORS	
		All Resistors	RS1/10SR###J

Mark	No.	Description	Part No.
MISCELLANEOUS			
	JP	3001 CONNECTOR ASSY	PF03PG-Q07
CAPACITORS			
⚠	C	3001	ACE7027
⚠	C	3003	ACG7030
	C	3004,3005	CKSRYB473K50
	C	3006	CEAT222M25
	C	3007	CKSRYB103K50

R ACSW ASSY

Mark	No.	Description	Part No.
MISCELLANEOUS			
⚠	S	3301 SWITCH	DSA1037
⚠	JP	3301 CONNECTOR ASSY 2P	DKP3847
CAPACITORS			
⚠	C	3301	ACG7030

S REG ASSY

Mark	No.	Description	Part No.
SEMICONDUCTORS			
⚠	IC	3401	BA15T
⚠	IC	3402	NJM7805FA
⚠	IC	3403	NJM7915FA
	D	3401,3402	RB501V-40
MISCELLANEOUS			
	J	3401 10PJUMPER WIRE	D20PDY1010E
	JH	3401 10P CABLE HOLDER	51048-1000
CAPACITORS			
	C	3401-3403,3411-3413	CKSRYB103K50
	C	3404-3406,3410	CKSRYB104K16
	C	3407	CKSQYB225K10
	C	3414-3416	CCSRCH102J50