2. EXPLODED VIEWS AND PARTS LIST


*NOTES : • Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*

• The ⚠ mark found on some component parts indicatesthe importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

• Screw adjacent to▽mark on the product are used for disassembly.

• For the applying amount of lobricants or glue, follow the instructions in this manual. (In the case of no amount instructions,apply as you think it appropriate.)

2.1 PACKING

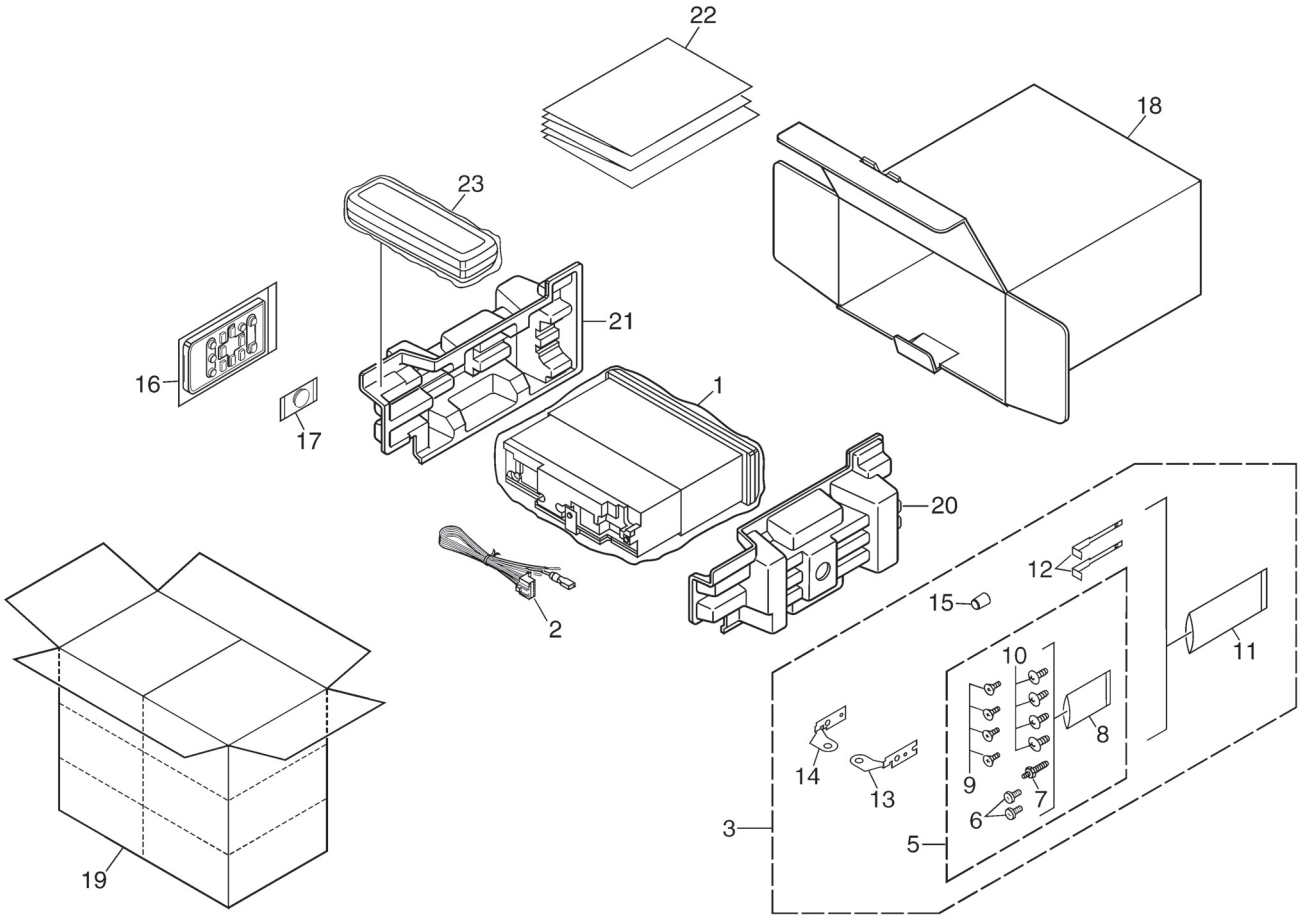


PACKING SECTION PARTS LIST

Mark	No.	Description	DEH-P670MP/XN/UC	DEH-P6700MP/XN/UC	DEH-P6750MP/XN/ES
	1	Polyethylene Bag	CEG1173	CEG1173	CEG-162
	2	Cord Assy	XDE7007	XDE7007	XDE7007
	3	Accessory Assy	CEA4993	CEA4993	CEA4850
	4	•••••			
	5	Screw Assy	CEA3848	CEA3848	CEA3849
	6	Fixing Screw	BPZ20P060FZK	BPZ20P060FZK	Not used
	7	Screw	CBA1650	CBA1650	CBA1650
*	8	Polyethylene Bag	CEG-127	CEG-127	CEG-127
	9	Screw	CRZ50P090FTC	CRZ50P090FTC	CRZ50P090FTC
	10	Screw	TRZ50P080FTC	TRZ50P080FTC	TRZ50P080FTC
*	11	Polyethylene Bag	CEG-158	CEG-158	CEG-158
	12	Handle	CNC5395	CNC5395	CNC5395
	13	Holder	CND1249	CND1249	Not used
	14	Holder	CND1250	CND1250	Not used
	15	Bush	CNV3930	CNV3930	CNV3930
	16	Remote Control Unit	CXC3173	CXC3173	CXC3173
*	17	Battery	CEX1065	CEX1065	CEX1065
	18	Carton	XHG7079	XHG7078	XHG7076
	19	Contain Box	XHL7079	XHL7078	XHL7076
	20	Protector	XHP7003	XHP7003	XHP7003
	21	Protector	XHP7004	XHP7004	XHP7004
	22-1	Owner's Manual	XRD7074	XRD7065	XRD7067
	22-2	Owner's Manual	Not used	Not used	XRD7068
	22-3	Installation Manual	XRD7075	XRD7066	XRD7069
*	22-4	Warranty Card	CRY1070	Not used	Not used
*	22-5	Card	Not used	ARY1048	Not used
*	22-6	Caution Card	CRP1207	CRP1207	CRP1207
*	22-7	Caution Card	Not used	CRP1294	CRP1216
	22-8	Caution Card	CRP1310	CRP1310	CRP1310
	23	Case Assy	CXB3520	Not used	CXB3520

Owner's Manual,Installation Manual

Part No.	Language
XRD7074, XRD7075, XRD7065, XRD7066	English,French,Spanish
XRD7067	English,Spanish,Portuguese(B)
XRD7068	Arabic,Traditional Chinese
XRD7069	English,Spanish,Portuguese(B),Arabic,Traditional Chinese

2.2 EXTERIOR

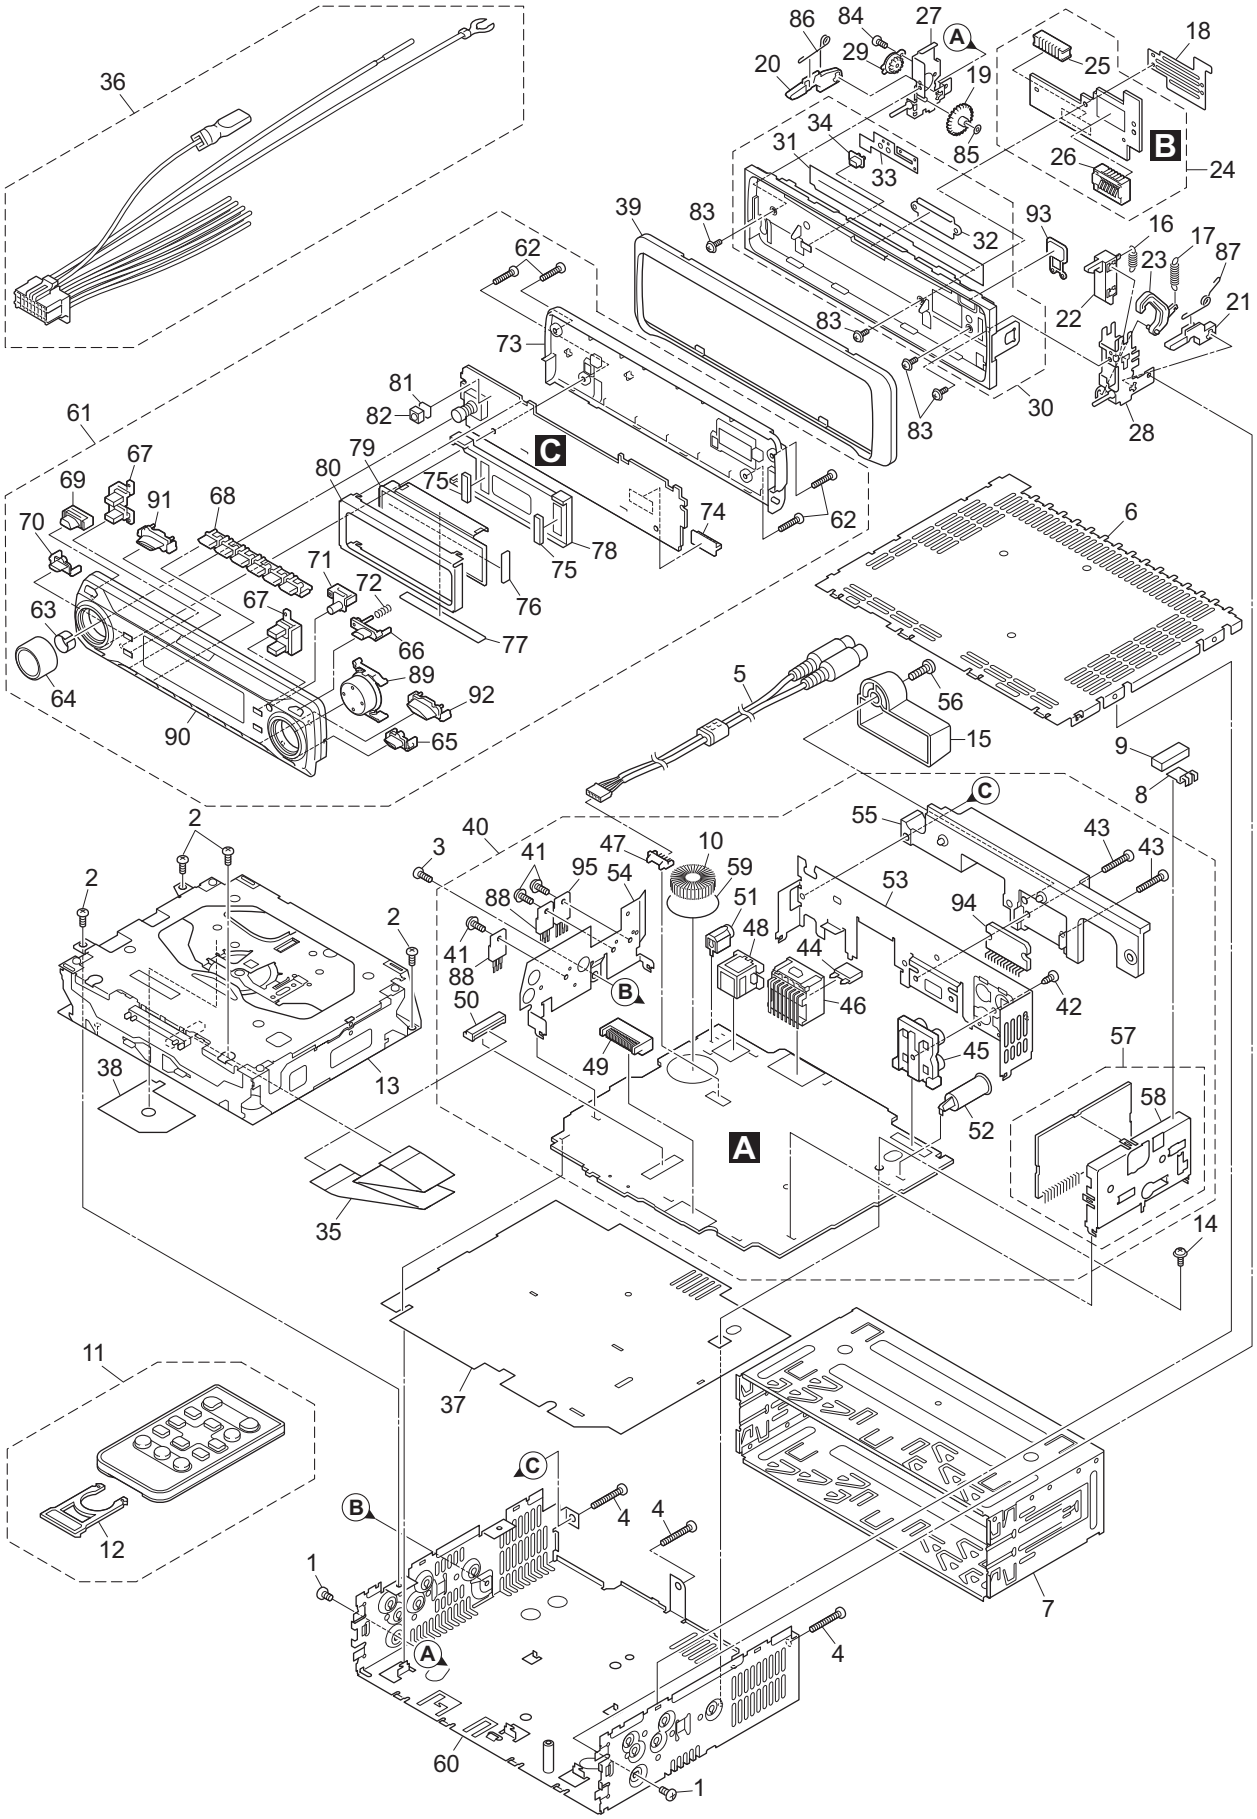
1
2
3
4
A
B
C
D
E
F
36
86
84
27
29
20
19
85
18
25
26
24
31
34
33
39
83
32
93
16
17
87
23
22
21
62
73
81
82
61
67
69
91
68
70
79
80
75
78
74
71
72
76
63
66
77
64
89
92
90
65
6
5
56
15
9
8
40
41
47
10
59
95
54
88
51
48
53
55
43
94
44
46
42
50
49
45
57
58
52
38
13
35
37
14
11
12
60
7

EXTERIOR SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	Screw	BMZ30P040FZK
	2	Screw	BSZ26P060FTC
	3	Screw	BSZ30P060FTC
	4	Screw	BSZ30P200FTC
	5	Cord Assy	See Contrast table(2)
	6	Case	CNB2793
	7	Holder	CNC8659
	8	Earth Plate	CNC8915
	9	Cushion	CNM8890
	10	Choke Coil(L301)	CTH1280
	11	Remote Control Unit	CXC3173
	12	Cover	CNS7068
	13	CD Mechanism Module(S10.1AAC)	CXK5663
	14	Screw	ISS26P055FTC
	15	Holder	See Contrast table(2)
	16	Spring	CBH2652
	17	Spring	CBH2653
	18	Holder	CND1254
	19	Gear	CNV5997
	20	Arm	CNV7400
	21	Arm	CNV7401
	22	Arm	CNV7402
	23	Arm	CNV7403
	24	Panel Unit	CWM8758
	25	Socket(CN1950)	CKS3550
	26	Connector(CN1951)	CKS4806
	27	Holder Unit	CXB9501
	28	Holder Unit	CXB9502
	29	Damper Unit	CXB9503
	30	Sub Panel Unit	XXA7361
	31	Cover	CNM6854
	32	Lighting Conductor	CNV6487
	33	Spring	CBL1512
	34	Pin	CNV6486
	35	Cable	XDE7002
	36	Cord Assy	XDE7007
	37	Insulator	XNM7100
	38	Insulator	XNM7106
	39	Panel	See Contrast table(2)
	40	Tuner Amp Unit	See Contrast table(2)
	41	Screw	ASZ26P060FTC
	42	Screw	BPZ26P080FTC
	43	Screw	BSZ26P160FTC
⚠	44	Fuse(10A)	CEK1208
	45	Pin Jack(CN352)	CKB1051
	46	Plug(CN901)	CKM1376
	47	Plug(CN351)	See Contrast table(2)
	48	Connector(CN101)	CKS3408
	49	Plug(CN801)	CKS3537
	50	Connector(CN651)	CKS3837
	51	Connector(CN161)	See Contrast table(2)
	52	Antenna Jack(CN401)	CKX1056
	53	Holder	See Contrast table(2)
	54	Holder	CND1352
	55	Heat Sink	CNR1668
	56	Screw	See Contrast table(2)
	57	FM/AM Tuner Unit	CWE1646
	58	Holder	CND1054
	59	Insulator	XNM7031
	60	Chassis Unit	CXB9528
	61	Detachable Assy	See Contrast table(2)
	62	Screw	BPZ20P100FZK
	63	Spring	CBL1470
	64	Knob	XAA7021
	65	Button(SW)	XAC7064
	66	Button(OPEN)	XAC7065
	67	Button(FUNC,AUDIO)	XAC7072
	68	Button(1-6)	See Contrast table(2)
	69	Button(CLK)	XAC7062
	70	Button(EQ)	XAC7090
	71	Button(E)	XAC7094
	72	Spring	XBH7001
	73	Cover	XNS7087
	74	Connector(CN1901)	CKS4524
	75	Cushion	CNM6633
	76	Spacer	CNM7697
	77	Spacer	CNM7698
	78	Holder	CNV6910
	79	OEL Unit	MXS8221
	80	Holder	XNC7006
	81	Cushion	XNM7049
	82	IC(IC1901)	GP1UX30RX
	83	Screw(M2x4.5)	CBA1647
	84	Screw(M2x4)	CBA1649
	85	Washer	CBF1038
	86	Spring	CBH2650
	87	Spring	CBH2651
	88	Transistor(Q651,Q911)	2SD2396
	89	Sub Button Assy	XXA7310
	90	Sub Grille Assy	See Contrast table(2)
	91	Button Unit(SRC)	XXA7367
	92	Button Unit(BAND)	XXA7368
	93	Button(EJECT)	CAC7752
	94	IC(IC301)	PAL007A
	95	IC(IC910)	NJM2388F84

(2) CONTRAST TABLE

DEH-P670MP/XN/UC , DEH-P6700MP/XN/UC and DEH-P6750MP/XN/ES are constructed the same except for the following:

Mark	No.	Description	DEH-P670MP/XN/UC	DEH-P6700MP/XN/UC	DEH-P6750MP/XN/ES
	5	Cord Assy	CDE7129	Not used	Not used
	15	Holder	Not used	CNV7619	Not used
	39	Panel	XNS7088	XNS7089	XNS7088
	40	Tuner Amp Unit	XWM7096	XWM7097	XWM7098
	47	Plug(CN351)	CKS1238	Not used	Not used
	51	Connector(CN161)	CKS4124	CKS4124	Not used
	53	Holder	CND1270	XNC7003	CND1477
	56	Screw	Not used	BMZ40P140FTC	Not used
	61	Detachable Assy	XXA7349	XXA7348	XXA7346
	68	Button	XAC7070	XAC7076	XAC7070
	90	Sub Grille Assy	XXA7353	XXA7352	XXA7350

2.3 CD MECHANISM MODULE

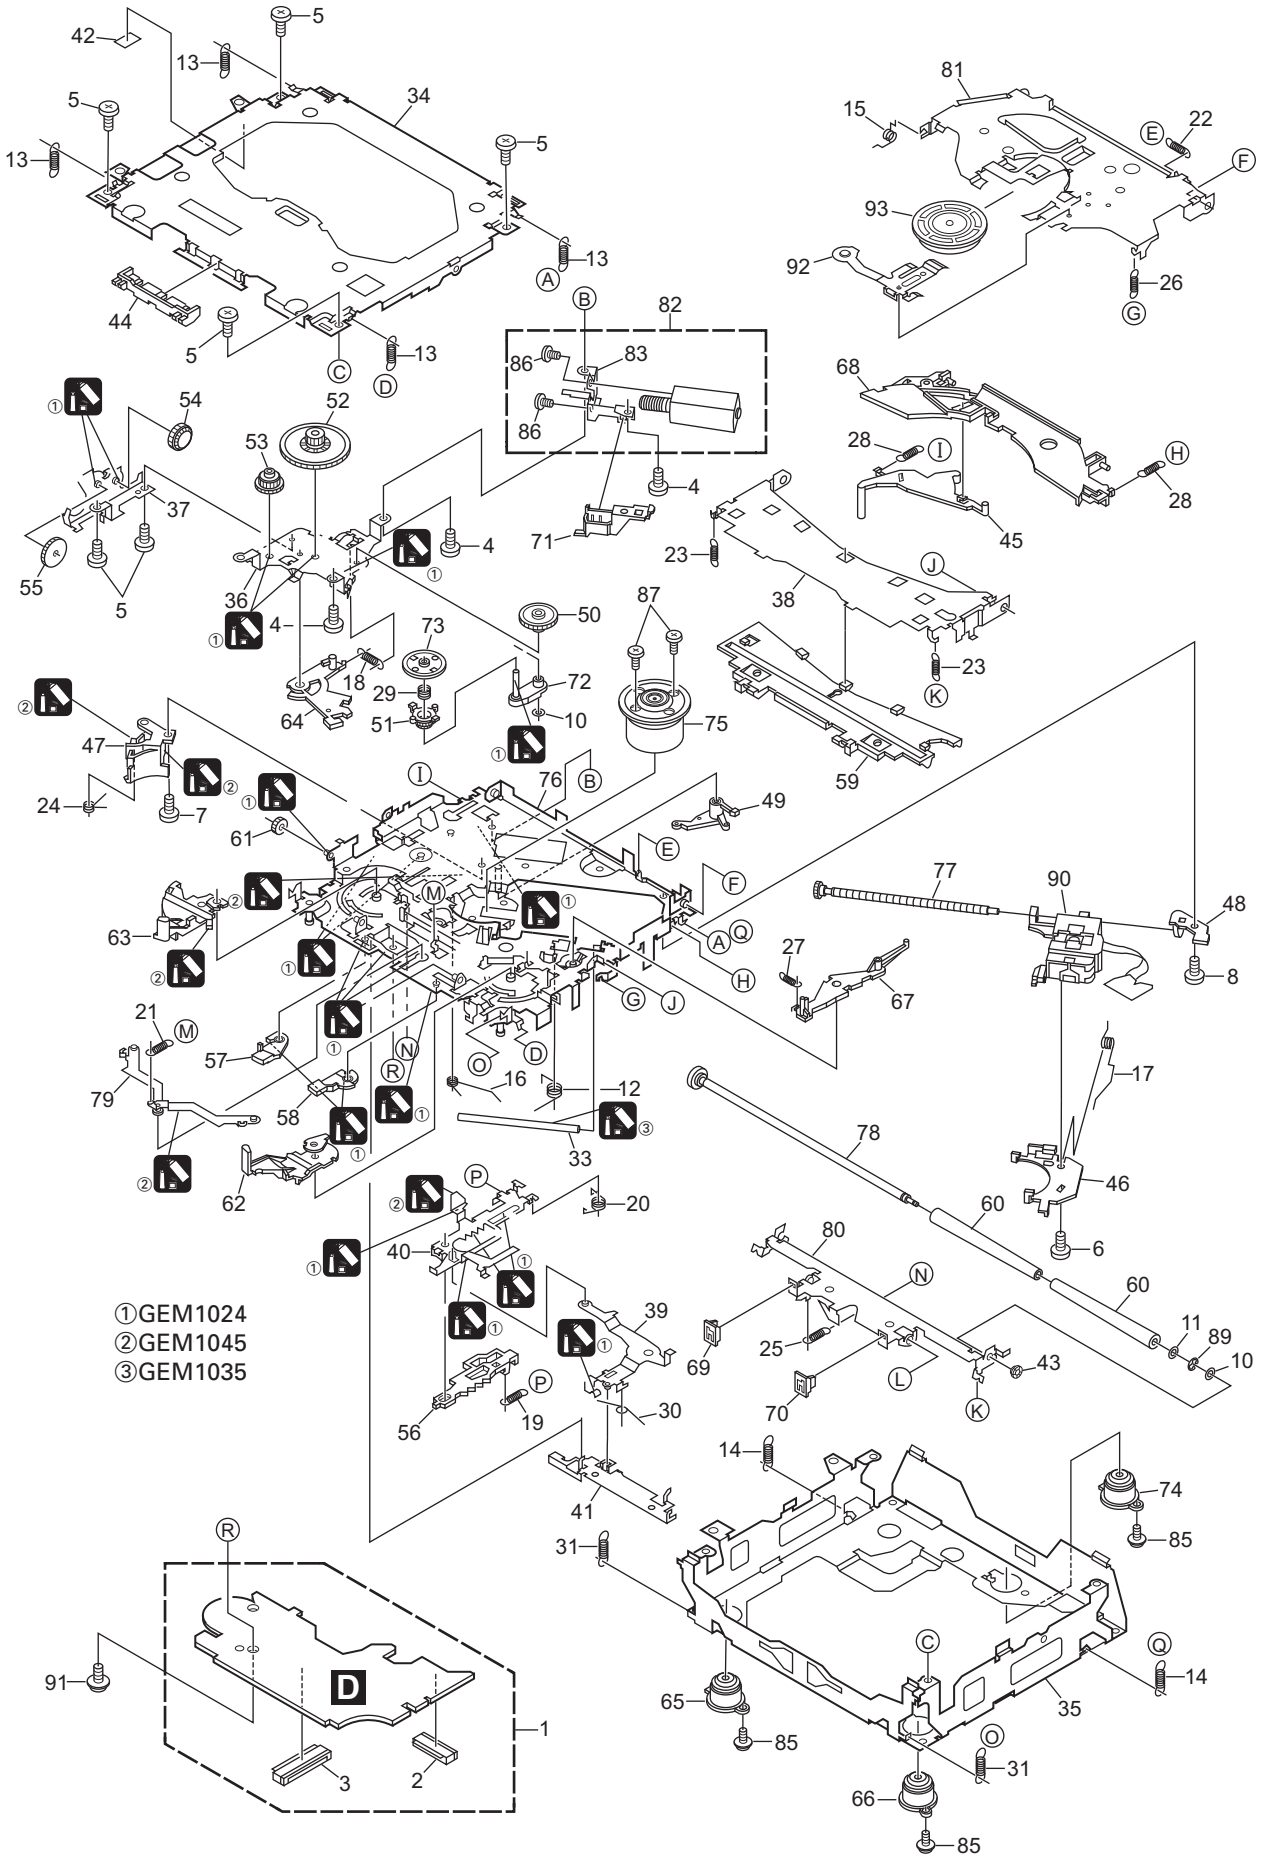

CD MECHANISM SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	CD Core Unit(S10.1)	CWX3096
	2	Connector(CN101)	CKS4182
	3	Connector(CN901)	CKS4017
	4	Screw	BMZ20P035FTC
	5	Screw	BSZ20P040FTC
	6	Screw(M2x4)	CBA1362
	7	Screw(M2x3)	CBA1824
	8	Screw(M2x3)	CBA1825
	9	•••••	
	10	Washer	CBF1038
	11	Washer	CBF1060
	12	Spring	CBH2390
	13	Spring	CBH2606
	14	Spring	CBH2607
	15	Spring	CBH2608
	16	Spring	CBH2609
	17	Spring	CBH2610
	18	Spring	CBH2735
	19	Spring	CBH2612
	20	Spring	CBH2613
	21	Spring	CBH2614
	22	Spring	CBH2615
	23	Spring	CBH2616
	24	Spring	CBH2617
	25	Spring	CBH2620
	26	Spring	CBH2621
	27	Spring	CBH2641
	28	Spring	CBH2642
	29	Spring	CBH2643
	30	Spring	CBH2659
	31	Spring	CBH2688
	32	•••••	
	33	Shaft	CLA4441
	34	Frame	CNC9962
	35	Frame	CNC9963
	36	Bracket	CND2712
	37	Bracket	CND1895
	38	Arm	CNC9968
	39	Arm	CND1909
	40	Lever	CND2032
	41	Lever	CNC9984
	42	Sheet	CNM8134
	43	Collar	CNV7798
	44	Guide	CNV7799
	45	Arm	CNV8403
	46	Rack	CNV8374
	47	Holder	CNV8376
	48	Holder	CNV8377
	49	Arm	CNV8378
	50	Gear	CNV8379
	51	Gear	CNV8380
	52	Gear	CNV8381
	53	Gear	CNV8382
	54	Gear	CNV8383
	55	Gear	CNV8384
	56	Rack	CNV8385
	57	Arm	CNV8386
	58	Arm	CNV8387
	59	Guide	CNV8388
	60	Roller	CNV7218
	61	Gear	CNV8389
	62	Arm	CNV8391
	63	Arm	CNV8390
	64	Arm	CNV8392
	65	Damper	CNV7313
	66	Damper	CNV7314
	67	Arm	CNV8394
	68	Arm	CNV8395
	69	Guide	CNV8396
	70	Guide	CNV8397
	71	Holder	CNV8398
	72	Arm	CNV8402
	73	Gear	CNV8400
	74	Damper	CNV7618
	75	Motor Unit(M1)	CXC4440
	76	Chassis Unit	CXC2318
	77	Screw Unit	CXB8729
	78	Gear Unit	CXC2397
	79	Arm Unit	CXC2316
	80	Arm	CND1896
	81	Arm	CND1894
	82	Motor Unit(M2)	CXB8933
	83	Bracket	CNC9985
	84	•••••	
	85	Screw(M2x5)	EBA1028
	86	Screw	JFZ20P020FTC
	87	Screw	JGZ17P022FTC
	88	•••••	
	89	Washer	YE20FTC
	90	Pickup Unit(P10)(Service)	CXX1641
	91	Screw	IMS26P030FTC
	92	Spring	CBL1635
	93	Clamper	CNV8372

5. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

Chip Resistor

RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- *The ⚠ mark found on some component parts indicatesthe importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*

A

Unit Number:XWM7096(P670MP)
Unit Number:XWM7097(P6700MP)
Unit Number:XWM7098(P6750MP)
Unit Name:Tuner Amp Unit

MISCELLANEOUS

Circuit Symbol and No.		Part No.
IC 101	(A,76,82) IC	HA12240FP
IC 131	(A,112,107) IC	NJM4558MD
IC 201	(A,122,85) IC	PML009A
IC 301	(A,91,132) IC	PAL007A
IC 401	(A,147,28) IC	NJM2391DL1-33
IC 601	(A,106,54) IC	PEG057A
IC 602	(A,59,56) IC	S-80835CNUA-B8U
IC 801	(A,99,36) IC	TC7SET08FUS1
IC 851	(B,42,25) IC	NJM2360M
IC 910	(A,5,119) IC	NJM2388F84
Q 101	(B,44,101) Transistor	2SA1576
Q 102	(B,26,110) Transistor	DTC114EU
Q 301	(A,42,81) Transistor	DTC124EU
Q 351	(B,57,104) Transistor(P670MP)	UMH3N
Q 352	(B,132,123) Transistor	UMH3N
Q 353	(B,141,125) Transistor	UMH3N
Q 650	(B,38,50) Transistor	2SA1577
Q 651	(A,5,66) Transistor	2SD2396
Q 652	(B,34,56) Transistor	UMD2N
Q 653	(B,38,41) Transistor	DTC114EU
Q 803	(A,44,35) Transistor	2SD1767
Q 804	(B,42,35) Transistor	UMD2N
Q 805	(B,97,21) Transistor	DTC143EU
Q 807	(B,127,27) Transistor	2SA1576
Q 808	(B,126,34) Transistor	DTC114EU
Q 851	(A,18,29) Transistor	2SD1760F5
Q 852	(B,22,33) Transistor	UMD2N
Q 911	(A,5,100) Transistor	2SD2396
Q 913	(B,30,69) Transistor	UMD2N
Q 931	(A,61,78) Transistor	UMX1N
Q 932	(B,78,86) Transistor	DTC114EU
Q 951	(A,95,74) Transistor	2SA1576
Q 981	(B,29,84) Transistor	2SC4081
Q 982	(A,44,70) Transistor	UMD2N
D 131	(A,118,113) Diode Network	DA204U
D 132	(A,132,62) Diode Network	DA204U
D 133	(A,138,60) Diode	DAN202U
D 301	(A,68,113) Diode	S5688G
D 302	(A,64,116) Diode	S5688G
D 303	(A,88,98) Diode	S5688G
D 304	(A,83,98) Diode	S5688G
D 403	(A,143,51) Diode	S5688G
D 651	(A,11,65) Diode	HZS7L(C3)
D 803	(A,106,22) Diode Network	DA204U
D 804	(A,113,24) Diode	DAN202U
D 805	(A,122,20) Diode	DAP202U
D 806	(A,122,24) Diode	DAN202U
D 807	(A,113,20) Diode	DAP202U
D 808	(A,50,28) Diode	HZS11L(A1)
D 851	(A,31,27) Diode	HZS11L(A1)
D 852	(B,40,19) Diode	RB411D
D 911	(A,35,72) Diode	S5688G
D 912	(A,13,82) Diode	HZS6L(B1)
D 931	(A,51,77) Diode	HZS7L(A1)
D 932	(A,46,73) Diode	HZS7L(C3)
D 937	(B,73,88) Diode	MA111
D 951	(A,88,80) Diode	DAN202U
D 981	(A,39,83) Diode	DAN202U
D 982	(A,24,85) Diode	HZS9L(A2)
L 101	(A,85,75) Inductor	LAU2R2K
L 201	(A,123,112) Ferri-Inductor	LAU4R7K
L 301	(A,30,106) Choke Coil 600µH	CTH1280
L 401	(B,154,97) Inductor	LCTAW4R7J2520
L 403	(A,145,103) Inductor	LAU1R0K
L 404	(A,151,54) Inductor	LAU1R0K
L 405	(A,154,64) Inductor	LAUR47K
L 406	(A,128,39) Inductor	CTF1385
L 601	(A,81,64) Ferri-Inductor	LAU100K
L 683	(A,81,53) Ferri-Inductor	LAU100K
L 802	(B,99,43) Inductor	CTF1382
L 852	(A,41,24) Inductor	CTF1510
L 951	(A,90,84) Inductor	LAU2R2K
X 601	(A,87,64) Radiator 10.00MHz	CSS1599
S 802	(A,21,8) Switch(DETACH SENSE)	CSN1039
⚠FU351	(A,43,92) Fuse 3A(670MP)	CEK1286
⚠FU353	(B,122,136) Fuse 3A	CEK1286
BZ641	(A,55,11) Buzzer	CPV1062
AR401	(A,159,119) Surge Protector	DSP-201M-S00B
	FM/AM Tuner Unit	CWE1646
⚠	Fuse 10A	CEK1208

RESISTORS

Circuit Symbol and No.		Part No.
R 101	(B,36,134)	RS1/16S101J
R 102	(B,35,132)	RS1/16S620J
R 103	(B,37,127)	RS1/16S101J
R 104	(B,40,104)	RS1/16S222J
R 105	(A,76,77)	RS1/16S102J
R 106	(B,44,104)	RS1/16S472J
R 107	(B,47,103)	RS1/16S223J
R 108	(A,89,73)	RS1/16S472J
R 109	(B,24,127)	RS1/16S821J
R 110	(B,28,118)	RS1/16S821J
R 111	(A,57,111)	RS1/16S223J
R 112	(B,26,118)	RS1/16S223J
R 113	(A,59,111)	RS1/16S102J
R 114	(B,24,118)	RS1/16S102J
R 115	(A,87,74)	RS1/16S472J
R 133	(A,112,112)	RS1/16S563J
R 134	(A,106,108)	RS1/16S104J
R 139	(A,108,112)	RS1/16S563J
R 140	(A,118,106)	RS1/16S104J
R 147	(A,125,115)	RS1/16S474J
R 148	(A,138,63)	RS1/16S474J
R 161	(A,19,134) (P670MP,P6700MP)	RS1/16S102J
R 162	(B,7,131) (P670MP,P6700MP)	RS1/16S102J
R 163	(A,19,132) (P670MP,P6700MP)	RS1/16S103J
R 164	(A,19,130) (P670MP,P6700MP)	RS1/16S103J
R 165	(A,72,67) (P6750MP)	RS1/16S103J
R 201	(A,118,64)	RAB4C102J
R 241	(B,99,78)	RS1/16S102J
R 242	(B,127,89)	RS1/16S102J
R 247	(B,116,86)	RS1/16S471J
R 248	(B,137,82)	RS1/16S471J
R 249	(A,115,76)	RS1/16S471J
R 250	(B,124,80)	RS1/16S471J
R 301	(A,49,74)	RS1/16S103J
R 302	(A,42,85)	RS1/16S103J
R 303	(A,104,111)	RS1/16S153J
R 304	(A,52,74)	RS1/16S331J
R 351	(B,51,90) (P670MP)	RS1/16S471J
R 352	(B,60,90) (P670MP)	RS1/16S471J
R 353	(B,137,122)	RS1/16S471J
R 354	(B,127,123)	RS1/16S471J
R 355	(B,143,114)	RS1/16S821J
R 356	(B,144,131)	RS1/16S821J
R 357	(B,48,91) (P670MP)	RS1/16S223J
R 358	(B,61,104) (P670MP)	RS1/16S223J
R 359	(B,135,126)	RS1/16S223J
R 360	(B,125,127)	RS1/16S223J
R 361	(B,160,129)	RS1/16S223J
R 362	(B,157,127)	RS1/16S223J
R 403	(B,157,89)	RS1/16S681J
R 405	(B,157,87)	RS1/16S681J
R 406	(B,157,85)	RS1/16S681J
R 407	(B,157,83)	RS1/16S681J
R 408	(B,157,81)	RS1/16S681J
R 410	(B,157,62)	RS1/16S681J
R 416	(B,97,57)	RS1/16S681J
R 417	(B,113,50)	RS1/16S681J
R 419	(B,125,53)	RS1/16S681J
R 421	(B,125,51)	RS1/16S681J
R 601	(B,108,59) (P670MP,P6750MP)	RS1/16S104J
R 602	(B,101,56) (P6700MP)	RS1/16S104J
R 603	(B,114,60) (P670MP,P6700MP)	RS1/16S104J
R 604	(B,114,57) (P6750MP)	RS1/16S104J
R 606	(B,101,58)	RS1/16S104J
R 607	(B,57,54)	RS1/16S822J
R 608	(A,85,28)	RS1/16S221J
R 609	(B,83,24)	RS1/16S221J
R 610	(B,85,24)	RS1/16S682J
R 611	(A,86,25)	RS1/16S682J
R 612	(A,65,52)	RS1/16S104J
R 613	(B,93,50)	RS1/16S102J
R 616	(A,94,53)	RS1/16S473J
R 617	(B,63,55)	RS1/16S102J
R 618	(A,102,67) (P6750MP)	RS1/16S104J
R 619	(A,143,57)	RS1/16S0R0J
R 630	(A,92,77)	RS1/16S104J
R 632	(A,134,53)	RS1/16S104J
R 641	(B,84,15)	RS1/16S102J
R 645	(B,35,47)	RS1/16S103J
R 651	(A,16,68)	RD1/4PU221J
R 652	(A,16,60)	RD1/4PU271J
R 656	(B,62,44)	RS1/16S102J
R 657	(B,58,41)	RS1/16S102J
R 665	(A,11,62)	RD1/4PU0R0J
R 676	(B,78,41)	RS1/16S102J
R 677	(B,48,44)	RS1/16S104J
R 678	(A,64,46)	RS1/16S102J
R 680	(B,63,31)	RS1/16S222J
R 681	(B,78,45)	RS1/16S104J
R 686	(B,35,42)	RS1/16S182J
R 689	(A,75,51)	RS1/16S0R0J
R 802	(B,120,33)	RS1/16S222J
R 803	(B,60,24)	RS1/16S472J
R 804	(B,63,17)	RS1/16S1R0J
R 805	(B,45,32)	RS1/16S391J
R 806	(B,40,32)	RS1/16S391J
R 807	(A,99,21)	RS1/16S473J
R 808	(A,99,22)	RS1/16S473J
R 809	(A,24,16)	RS1/16S102J
R 810	(B,123,21)	RS1/16S222J
R 811	(B,121,21)	RS1/16S222J
R 812	(B,114,23)	RS1/16S222J
R 813	(B,112,23)	RS1/16S222J
R 814	(B,106,21)	RS1/16S222J
R 815	(A,116,24)	RS1/16S473J
R 816	(A,105,35)	RS1/16S104J
R 817	(A,54,33)	RD1/4PU391J
R 818	(A,12,25)	RS1/16S104J
R 819	(B,102,27)	RS1/16S222J
R 820	(B,99,25)	RS1/16S222J
R 823	(B,133,29)	RS1/16S102J
R 824	(B,133,26)	RS1/16S473J
R 825	(B,112,31)	RS1/16S102J
R 826	(B,112,29)	RS1/16S102J
R 827	(B,113,27)	RS1/16S102J
R 828	(B,105,30)	RS1/16S102J
R 851	(B,16,32)	RS1/16S331J
R 852	(A,48,20)	RD1/4PU302J
R 853	(A,48,22)	RD1/4PU302J
R 854	(B,45,19)	RS1/16S121J

Circuit Symbol and No.		Part No.
R 855	(B,35,26)	RS1/16S391J
R 856	(B,35,20)	RS1/16S1R0J
R 857	(B,18,30)	RS1/16S331J
R 859	(B,30,33)	RS1/16S0R0J
R 903	(B,34,80)	RS1/16S223J
R 909	(B,34,92)	RS1/16S103J
R 910	(B,30,93)	RS1/16S102J
R 912	(B,27,67)	RS1/16S222J
R 913	(B,15,85)	RS1/16S223J
R 914	(A,63,71)	RS1/16S104J
R 915	(A,62,69)	RS1/16S104J
R 916	(A,109,73)	RS1/16S104J
R 917	(A,13,94)	RD1/4PU391J
R 931	(B,59,77)	RS1/16S472J
R 932	(A,55,73)	RS1/16S473J
R 933	(A,57,73)	RS1/16S103J
R 934	(A,63,73)	RS1/16S473J
R 935	(A,64,76)	RS1/16S104J
R 936	(B,76,89)	RS1/16S103J
R 938	(A,75,92)	RD1/4PU102J
R 939	(A,56,81)	RD1/4PU102J
R 951	(A,79,92)	RD1/4PU153J
R 952	(A,92,79)	RS1/16S472J
R 953	(A,92,74)	RS1/16S472J
R 954	(A,95,77)	RS1/16S102J
R 983	(B,26,81)	RS1/16S683J
R 984	(B,23,88)	RS1/16S683J
R 985	(B,49,76)	RS1/16S102J

CAPACITORS

C 101	(B,30,135)	CKSRYB104K16
C 102	(A,78,86)	CKSRYB473K25
C 103	(B,36,136)	CKSRYB102K50
C 104	(B,21,114)	CKSRYB102K50
C 131	(A,108,114)	CKSRYB104K16
C 132	(A,106,112)	CKSRYB104K16
C 141	(A,116,112)	CKSRYB104K16
C 142	(A,120,109)	CKSRYB103K50
C 143	(A,123,115)	CKSRYB474K10
C 144	(A,136,63)	CKSRYB474K10
C 145	(A,121,115)	CCSRCH101J50
C 146	(A,135,63)	CCSRCH101J50
C 147	(A,113,114)	CKSRYB104K16
C 201	(A,102,88)	CEJQ1R0M50
C 202	(A,102,82)	CEJQ1R0M50
C 203	(B,145,86)	CKSRYB104K16
C 204	(B,145,84)	CKSRYB104K16
C 205	(B,121,91)	CKSRYB105K10
C 206	(A,130,106)	CEJQ470M16
C 207	(A,127,101)	CEJQ1R0M50
C 208	(A,131,112)	CEJQ1R0M50
C 209	(A,120,101)	CEJQ1R0M50
C 210	(A,133,99)	CEJQ1R0M50
C 211	(A,108,88)	CEJQ4R7M35
C 212	(A,135,91)	CEJQ4R7M35
C 213	(A,106,82)	CEJQ4R7M35
C 214	(A,135,85)	CEJQ4R7M35
C 215	(A,106,76)	CEJQ4R7M35
C 216	(A,135,80)	CEJQ4R7M35
C 217	(A,114,73)	CEJQ4R7M35
C 218	(A,136,73)	CEJQ4R7M35
C 219	(B,116,84)	CCSRCH120J50
C 220	(B,130,83)	CCSRCH120J50
C 221	(A,115,78)	CCSRCH120J50
C 222	(B,127,83)	CCSRCH120J50
C 225	(A,129,75)	CEJQ100M16
C 241	(B,96,80)	CKSRYB152K50
C 242	(B,129,89)	CKSRYB152K50
C 306	(A,96,99)	CEJQ330M10
C 307	(A,49,121) 3300µF/16V	CCH1486
C 309	(B,46,123)	CKSRYB104K16
C 310	(A,112,118)	CEJQ100M16
C 311	(B,85,136)	CKSYB225K16
C 317	(B,101,125)	CKSRYB474K10
C 318	(B,101,129)	CKSRYB474K10
C 321	(A,109,125)	CKSRYB474K10
C 322	(A,106,125)	CKSRYB474K10
C 323	(A,120,130)	CKSRYB474K10
C 324	(A,120,133)	CKSRYB474K10
C 325	(A,122,132)	CKSQYB225K10
C 326	(A,122,128)	CKSQYB225K10
C 327	(B,121,125)	CKSRYB474K10
C 328	(B,121,128)	CKSRYB474K10
C 351	(A,48,87) (P670MP)	CEJQ4R7M35
C 352	(A,55,87) (P670MP)	CEJQ4R7M35
C 353	(A,138,117)	CEJQ4R7M35
C 354	(A,129,117)	CEJQ4R7M35
C 355	(A,143,110)	CEJQ4R7M35
C 356	(A,142,117)	CEJQ4R7M35
C 363	(B,43,81) (P670MP)	CKSRYB104K16
C 401	(B,144,100)	CKSRYB103K50
C 402	(A,146,95)	CEJQ101M16
C 406	(A,149,42)	CEJQ470M10
C 408	(B,141,32)	CKSYB475K16
C 409	(A,140,36)	CEJQ1R0M50
C 411	(B,162,72)	CCSRCH101J50
C 412	(B,103,52)	CCSRCH101J50
C 601	(A,71,56)	CEJQ4R7M35
C 602	(B,79,59)	CKSQYB105K10
C 603	(A,50,59)	CEJQ2R2M50
C 604	(B,89,58)	CCSRCH200J50
C 605	(B,89,61)	CCSRCH200J50
C 609	(B,77,59)	CCSRCH101J50
C 647	(B,66,52)	CKSRYB683K16
C 651	(A,13,54)	CEJQ101M16
C 652	(B,14,70)	CKSRYB473K25
C 654	(B,57,45)	CKSRYB152K50
C 655	(B,58,43)	CKSRYB152K50
C 657	(B,76,18)	CCSRCH470J50
C 658	(A,62,37)	CEAT471M16
C 662	(A,73,51)	CCSRCH471J50
C 755	(B,117,80)	CKSRYB104K16
C 805	(A,102,36)	CKSRYB473K25
C 806	(B,46,36)	CKSRYB473K25
C 807	(B,57,29)	CKSRYB473K25
C 811	(B,121,28)	CKSRYB105K10
C 851	(A,26,25)	CEJQ470M16
C 856	(B,43,29)	CCSRCH331J50
C 857	(A,43,14)	CEJQ470M25
C 858	(B,26,31)	CKSRYB104K16

Circuit Symbol and No.		Part No.
C 859	(A,29,15)	CEJQ101M16
C 860	(B,27,17)	CKSRYB104K16
C 861	(B,52,17)	CKSRYB223K50
C 911	(A,24,69) 470µF/16V	CCH1331
C 912	(B,31,72)	CKSRYB472K50
C 913	(B,12,78)	CKSRYB103K50
C 914	(A,15,76)	CEJQ470M10
C 921	(A,22,78)	CEJQ221M10
C 922	(B,10,112)	CKSRYB103K50
C 923	(A,13,116)	CEJQ101M16
C 930	(B,14,114)	CKSRYB103K50
C 931	(A,83,88)	CEJQ1R0M50
C 932	(B,63,77)	CKSRYB104K16

B
Unit Number:CWM8758
Unit Name:Panel Unit

MISCELLANEOUS

D 1970	LED	CL220PGC
S 1970	Push Switch(EJECT)	CSG1112

RESISTORS

R 1970		RS1/16S101J
R 1971		RS1/16S101J
R 1972		RS1/16S0R0J

CAPACITORS

C 1970		CKSRYB104K16

C
Unit Number:
Unit Name:Keyboard Unit

MISCELLANEOUS

IC 1901	(A,6,26) IC	GP1UX30RK
IC 1902	(B,13,117) IC	S-818A33AUC-BGN
IC 1940	(B,27,63) IC	PEG090A
IC 1990	(B,27,97) IC(P670MP)	PD8142A
IC 1990	(B,27,97) IC(P6700MP,P6750MP)	PD8141A
Q 1960	(B,11,33) Transistor	2SC4617
Q 1961	(B,17,38) Transistor	2SC2411K
D 1905	(A,39,16) LED	CL-195PG-CD
D 1906	(A,4,8) LED	CL-195PG-CD
D 1911	(A,15,27) LED	CL-195PG-CD
D 1912	(A,38,134) LED	CL-195PG-CD
D 1914	(A,4,156) LED	CL-195PG-CD
D 1918	(A,39,150) LED	CL-195PG-CD
D 1920	(A,38,32) LED	CL-195PG-CD
D 1921	(A,33,18) LED	CL-195PG-CD
D 1923	(A,22,3) LED	CL-195PG-CD
D 1924	(A,7,13) LED	CL-195PG-CD
D 1940	(B,28,43) Diode	1SS355
L 1901	(A,15,105) Inductor	CTF1530
L 1940	(B,25,111) Inductor	CTF1530
TH1960	(B,9,36) Thermistor	CCX1037

Circuit Symbol and No.		Part No.
X 1940	(B,27,49) Radiator 10.0MHz	CSS1577
S 1901	(A,20,15) Push Switch	XSD7002
S 1902	(A,25,36) Push Switch	CSG1174
S 1903	(A,38,75) Push Switch	CSG1174
S 1904	(A,18,36) Push Switch	CSG1174
S 1905	(A,7,8) Push Switch	CSG1155
S 1906	(A,36,15) Push Switch	CSG1155
S 1907	(A,38,91) Push Switch	CSG1174
S 1908	(A,38,67) Push Switch	CSG1174
S 1909	(A,38,52) Push Switch	CSG1174
S 1910	(A,38,37) Push Switch	CSG1174
S 1911	(A,38,129) Push Switch	CSG1174
S 1912	(A,38,114) Push Switch	CSG1174
S 1913	(A,38,99) Push Switch	CSG1174
S 1914	(A,11,137) Push Switch	CSG1174
S 1915	(A,36,151) Push Switch	CSG1155
S 1916	(A,18,130) Push Switch	CSG1174
S 1917	(A,25,130) Push Switch	CSG1174
S 1918	(A,12,151) Switch	CSG1107
S 1919	(A,28,151) Switch	CSG1107
S 1921	(A,20,159) Switch	CSG1107
S 1922	(A,20,143) Switch	CSG1107
VR1970	(B,15,108) Semi-fixed 15kΩ(B)	CCP1230
VR1971	(B,15,102) Semi-fixed 15kΩ(B)	CCP1230
	OEL UNIT	MXS8221

RESISTORS

R 1901	(B,5,143)	RS1/16S222J
R 1902	(B,6,140)	RS1/16S222J
R 1903	(A,20,120)	RS1/16S473J
R 1909	(B,22,155)	RS1/16S470J
R 1911	(B,38,29)	RS1/16S103J
R 1912	(B,8,138)	RS1/16S682J
R 1913	(A,5,40)	RS1/16S101J
R 1914	(B,15,25)	RS1/16S103J
R 1915	(A,8,39)	RS1/16S2R2J
R 1916	(A,28,26)	RS1/16S470J
R 1917	(B,32,155)	RS1/16S820J
R 1918	(B,32,157)	RS1/16S101J
R 1920	(B,29,115)	RS1/16S560J
R 1924	(B,31,7)	RS1/16S390J
R 1928	(B,31,9)	RS1/16S390J
R 1940	(B,19,118)	RS1/16S222J
R 1941	(B,37,112)	RS1/16S101J
R 1942	(A,29,55)	RAB4C101J
R 1943	(A,27,101)	RAB4C101J
R 1945	(A,23,102)	RAB4C101J
R 1947	(A,27,73)	RAB4C101J
R 1948	(A,22,73)	RAB4C101J
R 1949	(B,28,78)	RAB4C101J
R 1950	(B,23,78)	RAB4C101J
R 1952	(A,24,113)	RS1/16S101J
R 1953	(A,19,66)	RS1/16S473J
R 1954	(A,19,62)	RAB4C473J
R 1955	(A,18,69)	RS1/16S473J
R 1956	(B,10,55)	RS1/16S103J
R 1957	(B,21,49)	RAB4C101J
R 1958	(B,24,42)	RS1/16S473J
R 1959	(B,29,40)	RS1/16S154J
R 1960	(B,9,33)	RS1/16S333J

Circuit Symbol and No.		Part No.
R 1961	(B,11,36)	RS1/16S683J
R 1962	(B,18,42)	RS1/16S392J
R 1963	(B,13,39)	RS1/16S393J
R 1967	(B,11,155)	RS1/16S560J
R 1980	(B,37,54)	RS1/16S473J
R 1991	(B,27,86)	RS1/16S101J
R 1992	(A,22,80)	RS1/16S101J
R 1993	(B,24,84)	RS1/16S101J
R 1994	(B,15,66)	RS1/16S101J
R 1995	(B,32,41)	RS1/16S473J
R 1996	(A,16,97)	RS1/16S222J
R 1997	(B,18,106)	RS1/16S222J
R 1998	(A,19,57)	RS1/16S102J
R 1999	(B,17,51)	RS1/16S102J
R 2104	(B,37,76)	RS1/16S101J
R 2105	(B,36,73)	RS1/16S101J
R 2106	(B,35,77)	RS1/16S101J
R 2107	(B,33,76)	RS1/16S101J
R 2108	(B,35,108)	RS1/16S101J
R 2109	(B,33,79)	RS1/16S101J
R 2110	(B,33,81)	RS1/16S101J
R 2111	(B,32,84)	RS1/16S101J
R 2112	(B,12,64)	RS1/16S102J
R 2113	(B,15,55)	RS1/16S102J
R 2114	(B,14,69)	RS1/16S102J
R 2115	(B,16,53)	RS1/16S102J

CAPACITORS

C 1908	(B,7,20)	CKSYF106Z10
C 1909	(A,14,114)	CSZSR4R7M16
C 1910	(A,14,119)	CSZSR4R7M10
C 1940	(B,24,115)	CKSRYB103K50
C 1941	(B,30,52)	CKSRYB104K16
C 1942	(B,38,57)	CKSRYB105K10
C 1943	(B,28,74)	CKSRYB103K50
C 1944	(B,33,111)	CSZSR4R7M10
C 1972	(A,16,42)	CKSRYB104K16
C 1973	(B,15,97)	CKSRYB104K25
C 1974	(B,15,99)	CKSRYB104K25
C 1975	(A,16,89)	CKSRYB104K25
C 1976	(A,15,56)	CKSRYB104K25
C 1990	(B,29,109)	CKSRYB103K50
C 1991	(B,15,44)	CKSRYB104K25
C 1992	(B,22,85)	CKSRYB104K16

D

Unit Number:CWX3096
Unit Name:CD Core Unit(S10.1)

MISCELLANEOUS

IC 201	(A,39,24)	IC	UPD63763GJ
IC 203	(B,45,78)	IC	NJM2885DL1-33
IC 301	(A,49,88)	IC	BA5835FP
IC 701	(A,48,51)	IC	PE5454A
IC 703	(A,30,44)	IC	S-812C33AUA-C2N
Q 101	(A,20,22)	Transistor	2SA1577
Q 701	(B,62,59)	Transistor	UN2111
L 203	(A,53,32)	Inductor	CTF1389
L 207	(A,53,31)	Inductor	CTF1389
L 209	(A,26,20)	Inductor	CTF1389
L 703	(A,64,49)	Inductor	CTF1389
X 201	(A,51,35)	Ceramic Resonator	16.934MHzCSS1603
X 701	(A,59,53)	Ceramic Resonator	4.00MHzCSS1652
S 901	(A,15,43)	Switch(HOME)	CSN1067
S 903	(B,53,100)	Switch(DSCSNS)	CSN1068
S 904	(B,35,108)	Switch(12EJ)	CSN1067
S 905	(B,48,109)	Switch(8EJ)	CSN1067

RESISTORS

R 101	(A,22,24)	RS1/10SR2R4J
R 102	(A,22,26)	RS1/10SR2R4J
R 103	(A,25,25)	RS1/10SR2R7J
R 201	(A,53,16)	RS1/16SS102J
R 202	(A,55,21)	RS1/16SS333J
R 221	(B,31,18)	RS1/16SS103J
R 222	(B,26,18)	RS1/16SS103J
R 225	(A,27,8)	RS1/16SS103J
R 226	(A,27,7)	RS1/16SS393J
R 227	(B,33,10)	RS1/16SS562J
R 228	(B,36,8)	RS1/16SS122J
R 229	(B,34,8)	RS1/16SS472J
R 232	(B,35,10)	RS1/16SS122J
R 241	(B,42,28)	RS1/16SS333J
R 243	(B,44,28)	RS1/16SS333J
R 245	(A,39,38)	RS1/16SS333J
R 301	(A,48,78)	RS1/16SS183J
R 302	(A,42,78)	RS1/16SS822J
R 304	(A,50,78)	RS1/16SS183J
R 305	(A,42,77)	RS1/16SS822J
R 307	(A,36,85)	RS1/16SS183J
R 308	(A,32,83)	RS1/16SS183J
R 309	(A,38,89)	RS1/16SS183J
R 310	(A,35,88)	RS1/16SS183J
R 601	(B,43,59)	RS1/16S101J
R 602	(B,41,62)	RS1/16S101J
R 606	(B,44,67)	RS1/16S0R0J
R 607	(B,43,56)	RS1/16SS0R0J
R 608	(B,36,67)	RS1/16SS0R0J
R 705	(B,50,59)	RS1/16SS221J
R 706	(B,57,61)	RS1/16SS221J
R 707	(A,62,47)	RS1/16SS473J
R 708	(B,50,57)	RS1/16SS221J
R 710	(A,28,77)	RS1/16SS102J
R 711	(B,44,53)	RS1/16SS221J
R 714	(B,51,53)	RS1/16SS473J
R 716	(A,63,56)	RS1/16SS472J
R 719	(B,49,45)	RS1/16SS221J
R 720	(B,46,52)	RS1/16SS471J
R 724	(A,62,42)	RS1/16S473J
R 725	(B,57,43)	RS1/16SS222J
R 726	(A,52,41)	RS1/16SS103J
R 727	(B,50,54)	RS1/16SS473J
R 729	(A,57,40)	RS1/16SS223J
R 730	(A,65,41)	RS1/16SS473J
R 731	(A,53,41)	RS1/16SS104J
R 737	(A,41,42)	RS1/16SS104J
R 740	(A,35,46)	RS1/16SS473J
R 742	(A,50,41)	RS1/16SS104J

Circuit Symbol and No.		Part No.
R 746	(B,60,56)	RS1/16SS104J
R 750	(A,39,59)	RS1/16SS473J
R 754	(B,48,60)	RS1/16SS102J
R 755	(A,43,61)	RS1/16SS102J
R 765	(B,51,40)	RAB4CQ221J
R 769	(B,48,40)	RAB4CQ221J
R 773	(B,39,37)	RAB4CQ221J
R 777	(B,48,51)	RS1/16SS221J
R 778	(B,48,52)	RS1/16SS221J
R 779	(B,45,54)	RS1/16SS221J
R 901	(B,52,65)	RAB4CQ221J
R 905	(B,54,60)	RS1/16SS221J
R 906	(B,56,68)	RS1/16SS221J
R 908	(B,45,69)	RS1/16SS0R0J
R 910	(B,44,69)	RS1/16SS0R0J
R 911	(B,40,73)	RS1/16SS102J

CAPACITORS

C 103	(B,14,8) 100µF/16V	CCH1504
C 105	(A,19,15)	CKSSYB104K10
C 108	(B,39,16)	CKSSYB104K10
C 110	(A,18,6)	CKSSYB104K10
C 201	(A,51,14)	CKSSYB102K50
C 202	(B,50,17)	CKSSYB104K10
C 203	(A,55,23)	CKSSYB104K10
C 204	(B,28,22)	CEVW220M6R3
C 205	(A,53,25)	CKSSYB104K10
C 208	(B,44,25)	CKSSYB104K10
C 209	(A,54,29)	CKSSYB104K10
C 212	(A,45,37)	CKSRYB105K10
C 216	(A,25,8)	CKSSYB332K50
C 217	(A,28,12)	CKSSYB104K10
C 218	(A,25,7)	CKSSYB473K10
C 219	(A,34,7)	CKSSYB104K10
C 220	(A,33,11)	CKSSYB182K50
C 221	(B,35,6)	CKSSYB104K10
C 222	(B,35,8)	CCSSCH560J50
C 223	(B,33,8)	CCSSCH4R0C50
C 224	(B,40,16)	CKSSYB104K10
C 225	(B,45,14)	CKSSYB103K16
C 226	(B,43,12)	CCSSCH680J50
C 227	(A,45,10)	CCSSCH470J50
C 228	(A,49,9)	CKSSYB103K16
C 234	(B,36,81)	CEVW221M4
C 237	(B,38,29)	CKSSYB104K10
C 239	(B,34,10)	CCSSCH220J50
C 242	(B,58,32)	CKSSYB104K10
C 243	(B,39,76)	CKSSYB104K10
C 244	(B,49,70)	CKSSYB104K10
C 246	(A,23,19)	CKSSYB104K10
C 251	(B,28,31)	CKSRYB102K50
C 260	(A,54,25)	CKSSYB104K10
C 301	(A,43,78)	CKSSYB221K50
C 302	(A,50,79)	CKSSYB221K50
C 303	(A,37,85)	CKSSYB472K25
C 304	(A,39,89)	CKSSYB103K16
C 305	(B,34,92)	CEVW101M16
C 307	(B,56,90)	CKSSYB104K10
C 601	(B,46,60)	CCSRCH102J50
C 602	(B,41,65)	CCSRCH102J50
C 701	(A,64,46)	CKSSYB104K10
C 703	(B,50,61)	CKSSYB103K16
C 706	(B,50,62)	CKSSYB104K10
C 707	(A,36,45)	CKSSYB104K10
C 712	(A,22,42)	CKSRYB224K16
C 714	(B,60,45)	CKSSYB104K10
C 716	(A,61,40)	CKSSYB103K16
C 722	(B,52,48)	CKSQYB475K6R3
C 723	(A,26,41)	CKSRYB105K10
C 903	(B,56,70)	CKSSYB471K50
C 906	(A,40,77)	CKSRYB224K16
C 907	(A,47,76)	CKSSYB103K16
C 910	(B,60,71)	CKSQYB225K10

Miscellaneous Parts List

	Pickup Unit(P10)(Service)	CXX1641
M 1	Motor Unit(SPINDLE)	CXC4440
M 2	Motor Unit(LOADING/CARRIAGE)	CXB8933