


9. EXPLODED VIEWS AND PARTS LIST

- NOTES :
- Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.
 - The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screw adjacent to  mark on the product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING

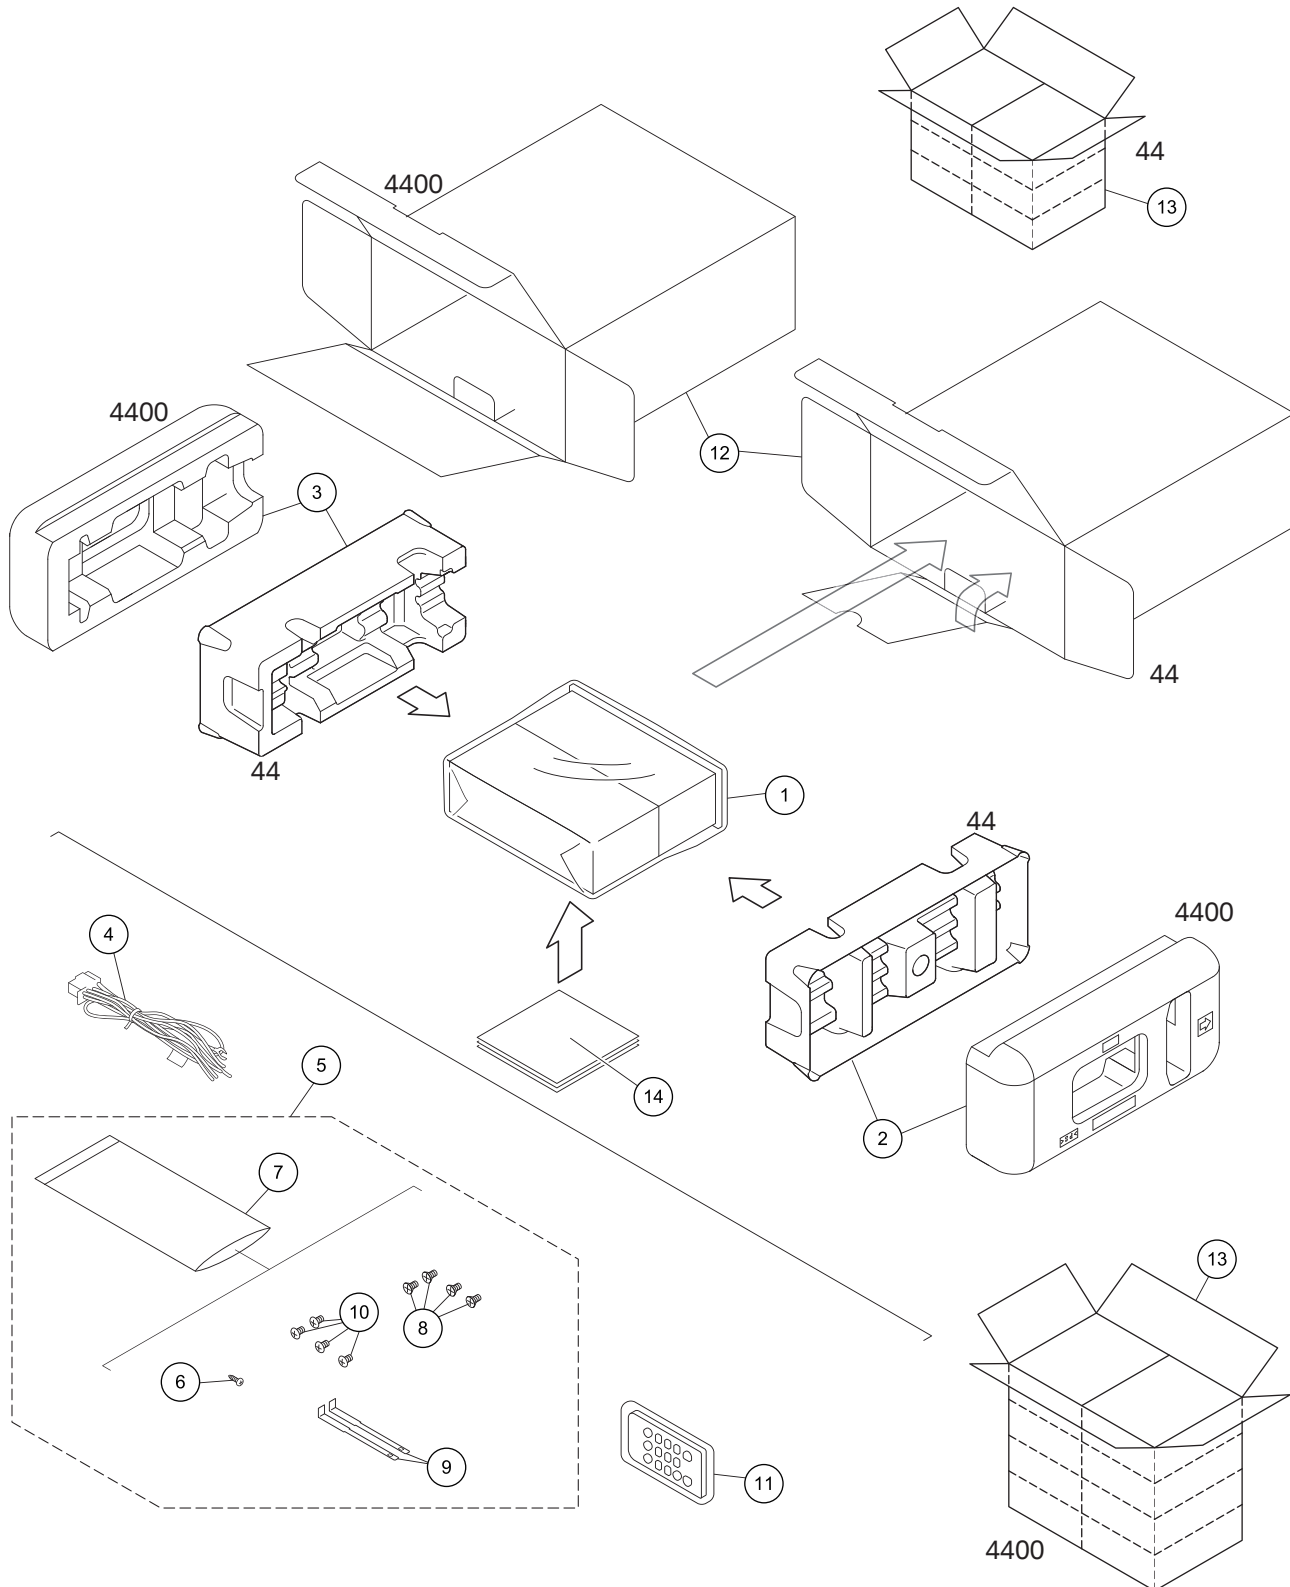


	5		6		7		8	
PACKING SECTION PARTS LIST								
	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>		<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
	1	Polyethylene Bag	CEG1173		9	Handle	QNC3021	A
	2	Protector(44)	CHP4103		10	Screw	TRZ50P080FTC	
		Protector(4400)	QHP3016		11	Card type RC Unit	QXE1047	
	3	Protector(44)	CHP4104		12	Unit Box(44)	YHG5636	
		Protector(4400)	QHP3016			Unit Box(4400)	YHG5635	
	4	Cord Assy	QDP3013					
*	5	Accessory Assy	QEA3008		13	Contain Box(44)	YHL5637	
	6	Screw	BPZ20P060FTC			Contain Box(4400)	YHL5635	
	7	Polyethylene Bag	CEG1160		14-1	Installation Manual	YRD5349	
	8	Screw	CRZ50P090FTC	*	14-2	Warranty Card	QRY3001	

Owner's Manual,Installation Manual

Part No.	Language
YRD5349	English, Spanish(Espanol)


9.2 EXTERIOR

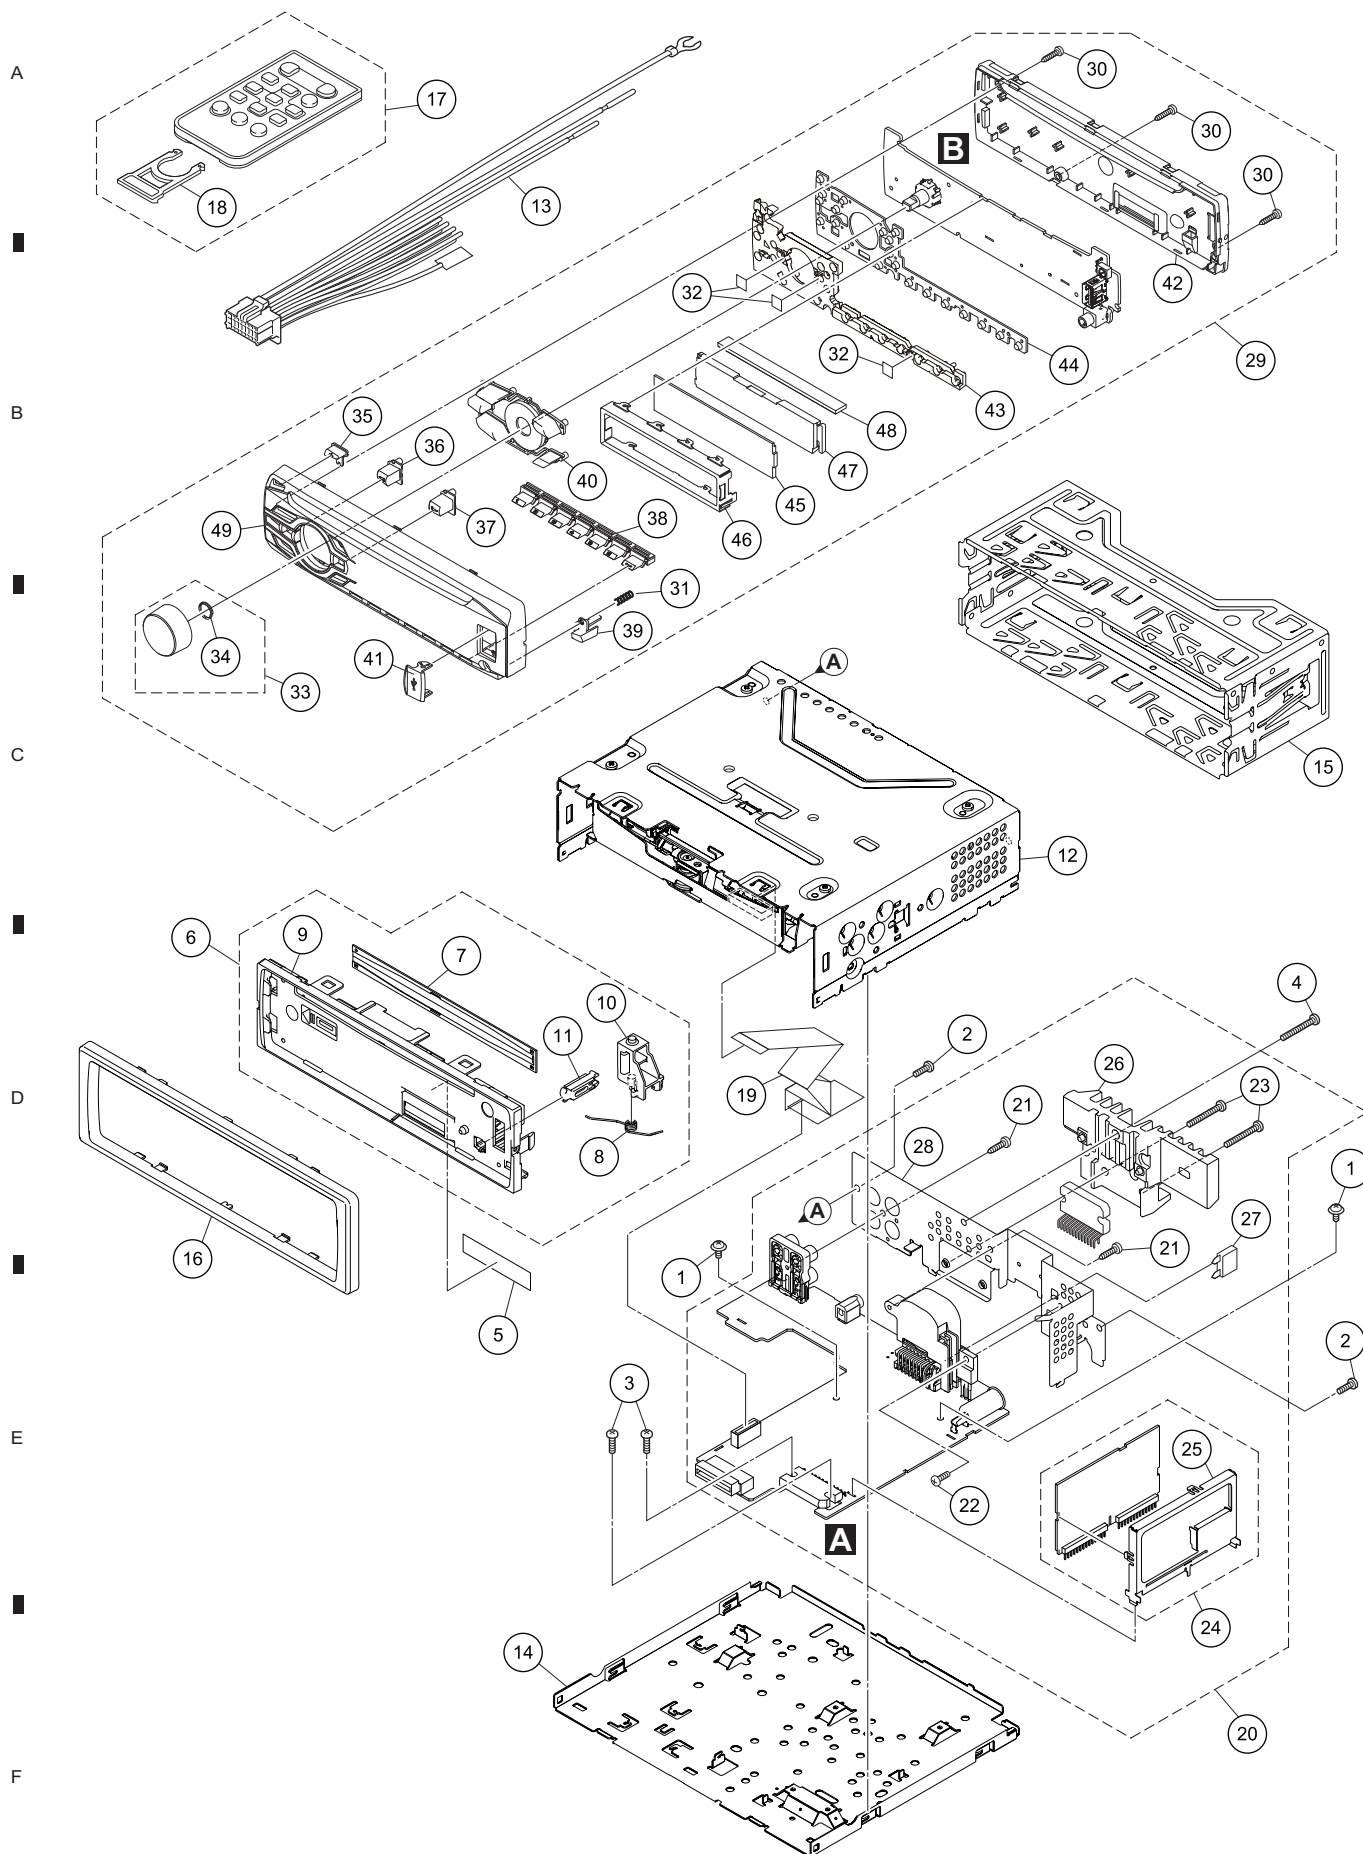

EXTERIOR SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	Screw	ASZ26P050FTC	49	Grille Unit(44)	YXA5836	
2	Screw	BSZ26P060FTC				
3	Screw	BSZ26P080FTC		Grille Unit(4400)	YXA5809	A
4	Screw	BSZ26P120FTC				
* 5	Seal	CAN3984				
6	Panel Unit	CXE3805				
* 7	Cover	CNN1665				
8	Spring	QBH3001				
* 9	Panel	QNS3126				
* 10	Arm	QNV3025				
* 11	Button	QNV3026				B
12	CD Mechanism Module(S11.6)	CXK5804				
13	Cord Assy	QDP3013				
14	Case	YNB5083				
15	Holder	QNC3020				
16	Panel	QNS3127				
17	Card type RC Unit	QXE1047				
18	Cover	CNS7068				
19	Cable	YDE5094				
20	Tuner Amp Unit	YWM5546				C
21	Screw	BPZ26P080FTC				
22	Screw	BSZ26P060FTC				
23	Screw	BSZ26P120FTC				
24	WWR C-TUN Unit	CWE2328				
25	Holder	CND5830				
26	Heat Sink	QNR3002				
⚠ 27	Fuse(10 A)	YEK5001				
28	Holder	YND5072				
29	Grille Assy(44)	YXA5837				D
	Grille Assy(4400)	YXA5807				
30	Screw	BPZ20P100FTC				
31	Spring	CBH2210				
32	Sheet	CNN3494				
33	Knob Unit	CXE3692				
34	Spring	YBL5010				
35	Button(EJECT)	QAC3066				
36	Button(LEFT)	QAC3068				
37	Button(RIGHT)	QAC3069				E
38	Button(1-6, -)	QAC3070				
39	Button(DETACH)	QAC3071				
40	Button(LIST, SRC, COLOR, RETURN, BAND)	QAC3073				
41	Door	QAT3004				
42	Cover	QNS3226				
43	Lighting Conductor	QNV3039				
44	Contact Rubber	QNV3041				
45	Segment LCD(V1801)	CAW2017				F
46	Holder	QNC3031				
47	Lighting Conductor	QNV3040				
48	Rubber Connector	QNV3045				

9.3 CD MECHANISM MODULE

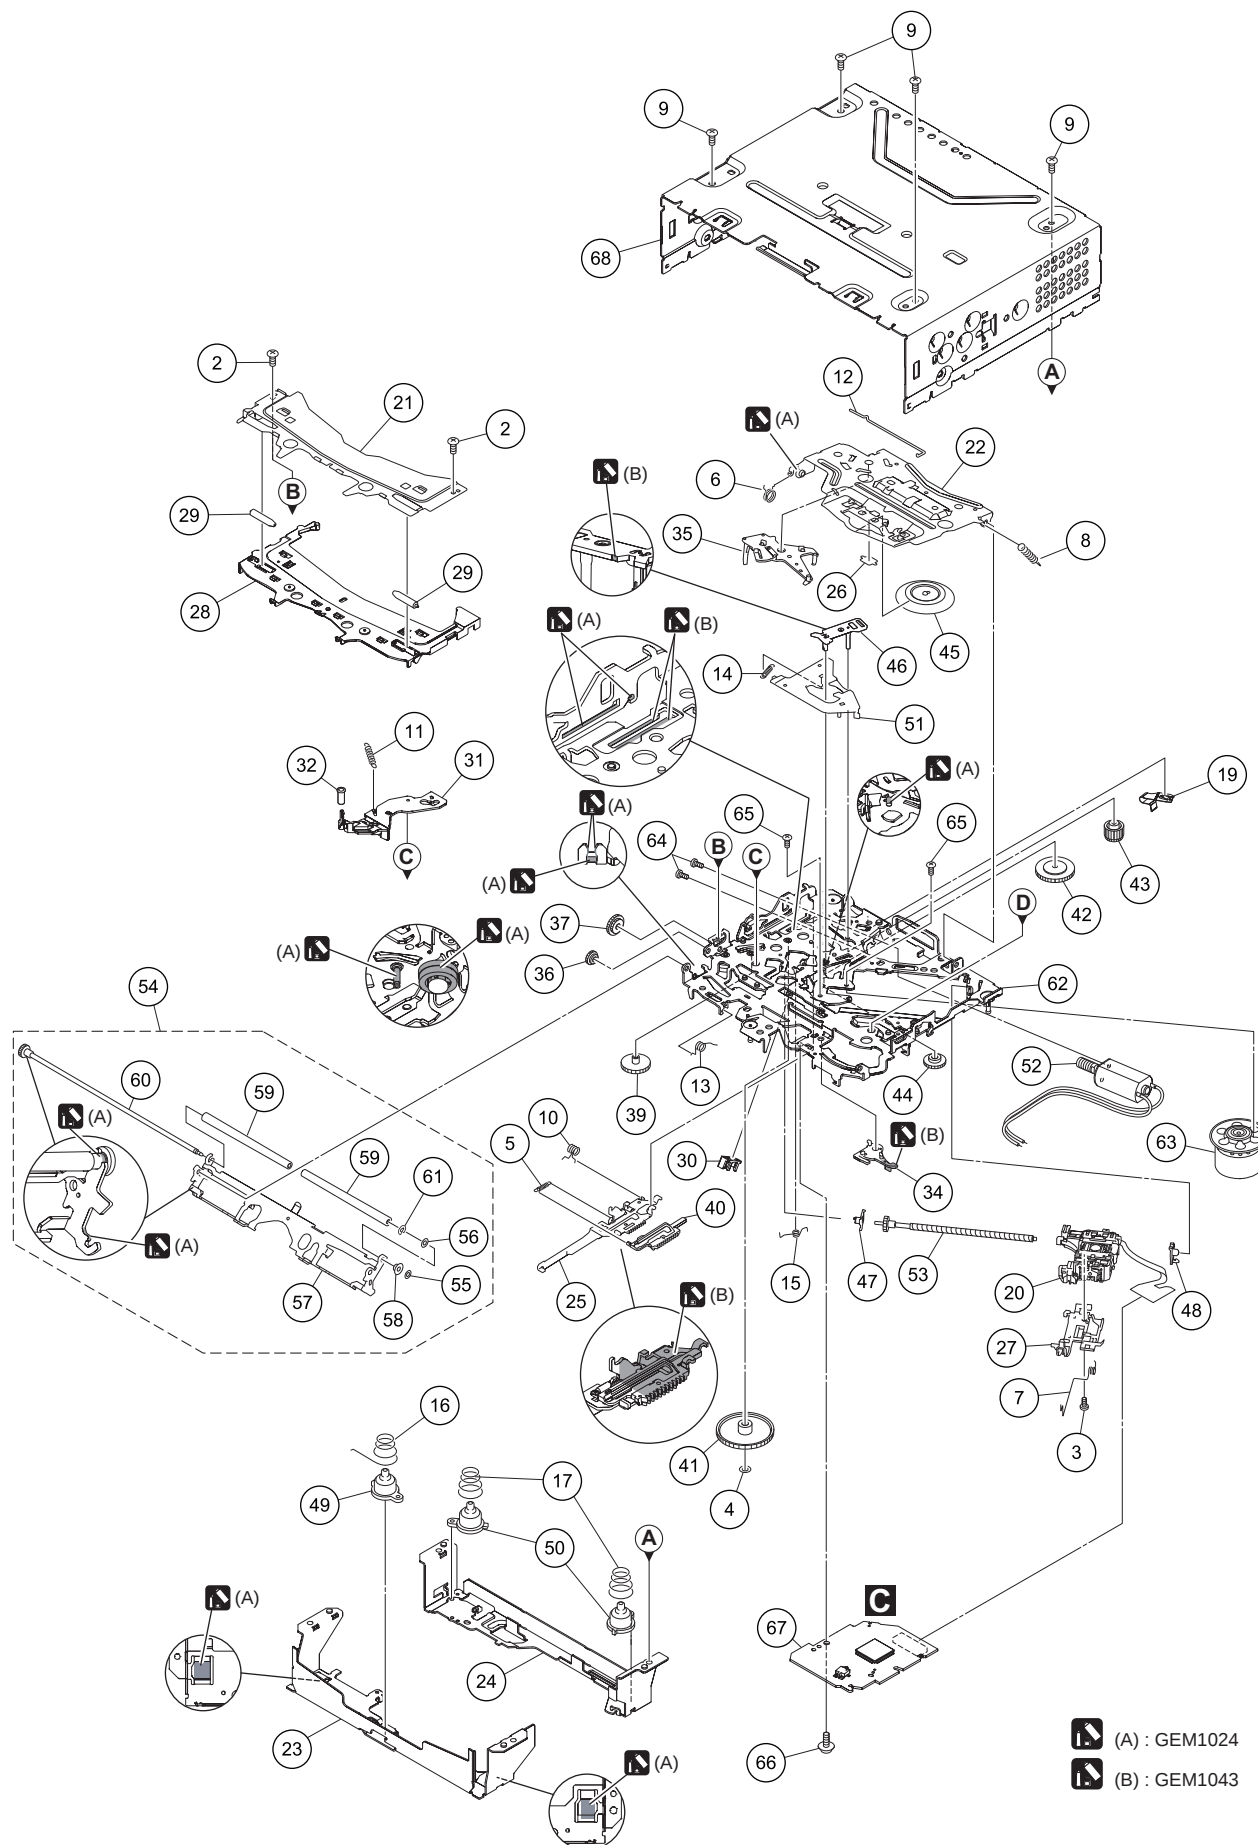

DEH-44HD/XSUS

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1			50	Damper	CNW1198	
2	Screw	BSZ20P040FTC	51	Arm	CNW1726	A
3	Screw(M2 x 4)	CBA1835	52	Motor Unit(M2)(LOAD/CRG)	CXC4026	
4	Washer	CBF1038	53	Screw Unit	CXC8894	
5	Spring	CBH3010	54	Arm Assy	CXE5027	
6	Spring	CBH2855	55	Washer	CBF1037	
7	Spring	CBH2856				
8	Spring	CBH2860	56	Washer	CBF1038	
9	Screw	BSZ26P060FTC	57	Arm	CND6242	
10	Spring	CBH3011	58	Collar	CNW2444	
11	Coil Spring	CBH3095	59	Roller	CNW1196	
12	Spring	CBH3014	60	Gear Unit	CXC8893	B
13	Spring	CBH3015	61	Washer	YE15FTC	
14	Spring	CBH3016	62	Chassis Unit	CXE4528	
15	Spring	CBH3017	63	Motor Unit(M1)(SPDL)	CXE2273	
16	Spring	CBH3086	64	Screw	JFZ20P025FTC	
17	Spring	CBH3019	65	Screw	JGZ17P022FTC	
18			66	Screw	EBA1028	
19	Leaf Spring	CBL1824	67	CD Core Unit (S11.6STD)	CWX4023	
20	Pickup Unit(P10.6)(Service)	CXX3556	68	Chassis	CNA3181	C
21	Bracket	CND4553				
22	Arm	CND4555				
23	Bracket	CND6127				
24	Bracket	CND5710				
25	Lever	CND5398				
26	Sheet	CNN3678				
27	Rack	CNV8342				
28	Guide	CNW2240				
29	Roller	CNW1172				D
30	Holder	CNW1195				
31	Arm	CNW2241				
32	Roller	CNW1175				
33						
34	Arm	CNW1177				
35	Arm	CNW1178				
36	Gear	CNW1180				
37	Gear	CNW1181				
38						E
39	Gear	CNW1183				
40	Rack	CNW1184				
41	Gear	CNW1185				
42	Gear	CNW1186				
43	Gear	CNW1187				
44	Gear	CNW2287				
45	Clamper	CNW1190				
46	Arm	CNW1192				F
47	Holder	CNW1193				
48	Holder	CNW1194				
49	Damper	CNW1197				

12. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○○○○○J,RS1/○○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

	Circuit Symbol and No.	Part No.	Circuit Symbol and No.	Part No.
Unit Number : YWM5546			D 510 (A,121,113) Diode	CRG03
Unit Name : Tuner Amp Unit			D 513 (A,139,107) Diode	CRG03
Unit Number :			D 514 (A,128,108) Diode	CRG03
Unit Name : Keyboard Unit			D 515 (A,145,62) Diode	CRG03
Unit Number : CWX4023			D 601 (A,118,45) Diode	RB551V-30
Unit Name : CD Core Unit (S11.6STD)			D 602 (A,108,77) Diode	RB751S-40
A			D 751 (A,139,131) Diode	RKZ8.2KG(B2)
Unit Number : YWM5546			D 801 (A,113,12) Diode	DZ2S068C
Unit Name : Tuner Amp Unit			D 802 (A,114,12) Diode	DZ2S068C
MISCELLANEOUS			D 803 (A,120,12) Diode	DZ2S068C
IC 201 (A,95,113) IC PML022A			D 804 (A,117,12) Diode	DZ2S068C
IC 231 (A,107,96) D/A Converter PCM1753DBQ			D 805 (A,119,12) Diode	DZ2S068C
IC 301 (A,78,141) IC PAL007E			D 806 (A,105,12) Diode	DZ2S068C
IC 512 (A,146,70) Regulator IC S-1172B11-E6			D 807 (A,111,12) Diode	DZ2S068C
IC 513 (A,147,57) Regulator IC S-1155B33-U5			D 808 (A,116,12) Diode	DZ2S068C
IC 551 (A,106,41) IC 341S2162			D 871 (A,93,21) Diode	CRG03
IC 601 (A,118,61) IC R5S7266ZD144FP			D 872 (A,97,22) Diode	CRG03
IC 651 (A,132,78) IC S-80827CNMC-B8M			D 901 (A,139,128) Diode	1SR154-400
IC 671 (A,97,51) IC PEB010A8			D 902 (A,139,125) Diode	1SR154-400
IC 801 (A,106,20) L-MOS And Gate TC7SET08FUS1			D 911 (A,121,42) Diode	1SR154-400
IC 912 (A,145,28) IC BA49182-V12			D 912 (A,124,41) Diode	1SR154-400
IC 954 (A,10,119) Regulator IC BD9781HFP			D 913 (A,139,100) Diode	1SS301
IC 956 (A,89,86) IC BD82001FVJ			D 931 (A,117,109) Diode	HZU7L(A1)
Q 251 (A,25,130) Chip Transistor RN1910			D 986 (A,9,110) Diode	CRG03
Q 252 (A,14,129) Chip Transistor RN1910			D 987 (A,11,110) Diode	CRG03
Q 351 (A,88,127) Chip Transistor RN4983			D 988 (A,23,114) Diode	CMS02
Q 551 (A,112,42) Transistor LSA1576UB			D 989 (A,19,114) Diode	CMS02
Q 751 (A,142,138) Transistor 2SD2396			ZNR401 (A,155,106) Surge Protector	IMSA-6802-01Y900
Q 752 (A,138,133) Chip Transistor RN4983			L 601 (A,142,47) Inductor	CTF1786
Q 871 (A,91,17) Transistor 2SA1577			L 602 (A,139,51) Inductor	CTF1786
Q 872 (A,92,14) Transistor LTC143EUB			L 671 (A,97,55) Inductor	CTF1786
Q 931 (A,121,105) Transistor LSC4081UB			L 802 (A,114,16) Inductor	CTF1713
D 301 (A,99,126) Diode CRG03			L 901 (A,112,140) Choke Coil 600 uH	CTH1432
D 302 (A,96,126) Diode CRG03			L 982 (A,31,116) Inductor	CTH1253
			X 601 (A,100,66) Ceramic Resonator 16.934 MHz	CSS1603
			X 602 (A,123,78) Oscillator 12 MHz	YSS5005
			 P251 (A,7,129) Fuse 3 A	CEK1286
			VA804 (A,104,12) Varistor	EZJP0V270RM
			VA805 (A,109,12) Varistor	EZJP0V270RM
			CN701 (A,92,38) Connector	VKN1192
			CN801 (A,109,3) Connector	CKS6288

5		6		7		8	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
JA251	(A,19,137) Pin Jack	YKB5011		R 631	(A,127,75)	RS1/16SS473J	
JA401	(A,158,128) Antenna Jack	YKS5041		R 632	(A,126,74)	RS1/16SS473J	
				R 633	(A,115,76)	RS1/16SS5601F	
JA901	(A,113,140) Plug	CKM1586		R 634	(A,121,74)	RS1/16SS473J	A
JA941	(A,42,138) Connector	CKS4124					
	WWR C-TUN Unit	CWE2328		R 636	(A,128,74)	RS1/16SS102J	
⚠	Fuse(10 A)	YEK5001		R 638	(A,107,74)	RS1/16SS473J	
RESISTORS				R 639	(A,117,77)	RS1/16SS103J	
				R 640	(A,112,78)	RS1/16SS101J	
				R 641	(A,130,47)	RS1/16SS473J	
R 201	(A,124,86)	RAB4CQ102J					
R 205	(A,92,104)	RS1/16SS223J		R 642	(A,130,46)	RS1/16SS473J	
R 206	(A,105,111)	RS1/16SS223J		R 643	(A,132,47)	RS1/16SS473J	
R 207	(A,96,104)	RS1/16SS101J		R 644	(A,127,44)	RS1/16SS473J	
R 231	(A,111,92)	RS1/16SS821J		R 645	(A,133,82)	RS1/16SS103J	
				R 646	(A,132,84)	RS1/16SS103J	
R 232	(A,111,93)	RS1/16SS821J					
R 251	(A,20,130)	RS1/16SS821J		R 651	(A,129,79)	RS1/16SS104J	B
R 252	(A,29,131)	RS1/16SS821J		R 671	(A,103,54)	RS1/10SR473J	
R 253	(A,10,130)	RS1/16SS821J		R 672	(A,92,56)	RS1/10SR473J	
R 254	(A,19,130)	RS1/16SS821J		R 691	(A,123,12)	RS1/10SR222J	
				R 692	(A,124,47)	RS1/10SR222J	
R 255	(A,23,130)	RS1/16SS223J					
R 256	(A,26,131)	RS1/16SS223J		R 701	(A,97,45)	RS1/16SS473J	
R 257	(A,12,129)	RS1/16SS223J		R 702	(A,96,38)	RS1/16SS104J	
R 258	(A,16,130)	RS1/16SS223J		R 703	(A,97,42)	RS1/16SS104J	
R 303	(A,88,123)	RS1/16SS103J		R 704	(A,88,44)	RS1/16SS472J	
				R 705	(A,88,42)	RS1/16SS472J	
R 304	(A,87,123)	RS1/16SS473J					
R 331	(A,74,125)	RS1/16SS471J		R 706	(A,88,40)	RS1/16SS472J	C
R 332	(A,81,125)	RS1/16SS471J		R 707	(A,96,47)	RS1/16SS221J	
R 333	(A,75,125)	RS1/16SS471J		R 708	(A,97,46)	RS1/16SS221J	
R 334	(A,80,125)	RS1/16SS471J		R 709	(A,96,44)	RS1/16SS101J	
				R 710	(A,96,41)	RS1/16SS221J	
R 351	(A,92,127)	RS1/16SS103J					
R 352	(A,90,127)	RS1/16SS103J		R 711	(A,96,40)	RS1/16SS101J	
R 353	(A,92,128)	RS1/16SS221J		R 712	(A,96,39)	RS1/16SS102J	
R 401	(A,137,63)	RS1/10SR680J		R 713	(A,96,36)	RS1/16SS151J	
R 402	(A,151,45)	RS1/10SR680J		R 714	(A,96,34)	RS1/16SS151J	
				R 715	(A,96,32)	RS1/16SS151J	
R 403	(A,151,47)	RS1/10SR680J					
R 405	(A,151,48)	RS1/10SR473J		R 716	(A,96,29)	RS1/16SS221J	
R 551	(A,112,38)	RS1/16SS473J		R 717	(A,96,30)	RS1/16SS104J	D
R 552	(A,111,45)	RS1/16SS103J		R 751	(A,149,137)	RS1/16SS473J	
R 553	(A,113,45)	RS1/16SS103J		R 752	(A,149,135)	RS1/16SS103J	
				R 753	(A,140,134)	RS1/10SR821J	
R 556	(A,108,38)	RS1/16SS272J					
R 557	(A,110,37)	RS1/16SS472J		R 801	(A,120,16)	RS1/10SR101J	
R 558	(A,114,42)	RS1/16SS472J		R 802	(A,117,16)	RS1/10SR101J	
R 559	(A,107,45)	RS1/16SS101J		R 806	(A,103,12)	RS1/10SR222J	
R 560	(A,107,47)	RS1/16SS101J		R 807	(A,109,20)	RS1/10SR222J	
				R 808	(A,103,18)	RS1/16SS822J	
R 602	(A,118,42)	RS1/16SS473J					
R 603	(A,101,18)	RS1/16SS104J		R 809	(A,111,20)	RS1/10SR8R2J	
R 604	(A,117,45)	RS1/16SS103J		R 810	(A,113,19)	RS1/10SR8R2J	
R 605	(A,107,77)	RS1/16SS103J		R 811	(A,124,15)	RS1/10SR222J	E
R 609	(A,130,56)	RS1/16SS473J		R 812	(A,102,12)	RS1/10SR222J	
				R 813	(A,99,15)	RS1/10SR222J	
R 612	(A,131,56)	RS1/16SS473J					
R 613	(A,100,59)	RS1/16SS101J		R 814	(A,116,16)	RS1/10SR222J	
R 614	(A,131,61)	RS1/16SS222J		R 815	(A,110,22)	RS1/10SR222J	
R 615	(A,98,60)	RS1/16SS101J		R 816	(A,122,17)	RS1/10SR222J	
R 616	(A,133,62)	RS1/16SS473J		R 851	(A,96,16)	RS1/16SS472J	
				R 873	(A,94,15)	RS1/16SS152J	
R 617	(A,100,61)	RS1/16SS101J					
R 619	(A,134,63)	RS1/16SS104J		R 874	(A,94,17)	RS1/16SS103J	
R 621	(A,99,63)	RS1/16SS221J		R 875	(A,94,13)	RS1/16SS122J	
R 625	(A,131,70)	RS1/16SS473J		R 878	(A,110,31)	RS1/16SS0R0J	F
R 629	(A,120,75)	RS1/16SS473J		R 911	(A,140,42)	RS1/10SR1R0J	
				R 912	(A,148,43)	RS1/10SR1R0J	
R 630	(A,123,74)	RS1/16SS152J		R 931	(A,119,109)	RS1/16SS223J	

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

R 932 (A,119,105)
R 933 (A,118,105)
R 934 (A,113,109)
R 941 (A,49,133)
R 942 (A,48,133)

RS1/16SS473J
RS1/16SS472J
RS1/4SA102J
RS1/10SR102J
RS1/10SR102J

C 413 (A,149,98)
C 414 (A,153,106)
C 425 (A,154,86)
C 428 (A,153,76)
C 511 (A,152,68) 10 uF
C 513 (A,140,72) 10 uF

CEVW101M16

CCSRCJ3R0C50

CKSSYB102K50

CKSSYB102K50

CCG1192

CCG1192

R 967 (A,18,119)
R 969 (A,18,122)
R 971 (A,34,125)
R 972 (A,32,124)
R 973 (A,35,124)

RS1/16SS1003F
RS1/16SS683J
RS1/10SR1003D
RS1/10SR2402D
RS1/10SR333J

C 515 (A,141,57)
C 516 (A,142,56)
C 517 (A,151,53)
C 551 (A,112,39)
C 552 (A,110,38)

CKSRYB102K50

CKSQYB475K6R3

CKSQYB475K6R3

CKSSYB104K10

CKSSYB104K10

R 974 (A,28,124)
R 975 (A,30,124)
R 976 (A,133,61)
R 977 (A,36,125)

RS1/10SR471J
RS1/10SR121J
RS1/16SS104J
RS1/10SR821J

C 601 (A,111,47)
C 602 (A,117,48)
C 603 (A,122,48)
C 604 (A,131,51)
C 605 (A,104,50)

CKSSYB104K10

CKSSYB104K10

CKSSYB104K10

CKSSYB104K10

CKSSYB104K10

CAPACITORS

C 201 (A,98,107) 10 uF
C 203 (A,100,109) 10 uF
C 205 (A,91,106)
C 206 (A,91,121)
C 207 (A,93,108)

CCG1192
CCG1192
CKSRYB105K10
CKSRYB105K10
CKSRYB105K10

C 606 (A,130,53)
C 607 (A,105,55)
C 608 (A,132,56)
C 609 (A,104,58)
C 610 (A,131,59)

CKSSYB104K10

CKSSYB104K10

CKSSYB104K10

CKSSYB104K10

CKSSYB104K10

C 208 (A,106,115)
C 209 (A,95,108)
C 210 (A,103,115)
C 211 (A,92,106)
C 212 (A,107,115)

CKSRYB105K10
CKSRYB105K10
CKSRYB105K10
CKSRYB105K10
CKSRYB105K10

C 611 (A,97,80)
C 612 (A,104,60)
C 613 (A,98,80)
C 615 (A,99,80)
C 616 (A,132,64)

CCSSCH220J50

CKSSYB104K10

CCSSCH220J50

CCSSCH220J50

CKSSYB104K10

C 213 (A,106,113)
C 233 (A,109,90) 10 uF
C 234 (A,109,102) 10 uF
C 237 (A,113,93)
C 238 (A,112,95)

CKSRYB105K10
CCG1192
CCG1192
CCSRCH182J50
CCSRCH182J50

C 617 (A,97,63)
C 618 (A,131,64)
C 619 (A,104,64)
C 620 (A,104,65)
C 621 (A,131,69)

CCSSCH220J50

CKSSYB104K10

CKSSYB104K10

CKSSYB104K10

CKSSYB104K10

C 240 (A,110,95)
C 251 (A,30,129) 4.7 uF
C 252 (A,35,131) 4.7 uF
C 253 (A,35,128) 4.7 uF
C 254 (A,40,128) 4.7 uF

CKSSYB102K50
CCG1201
CCG1201
CCG1201
CCG1201

C 622 (A,108,74)
C 623 (A,113,75)
C 624 (A,114,75)
C 625 (A,115,75)
C 626 (A,116,76)

CKSSYB104K10

CKSSYB104K10

CKSSYB104K10

CKSSYB104K10

CKSSYB104K10

C 255 (A,21,131)
C 256 (A,28,131)
C 257 (A,11,130)
C 258 (A,17,129)
C 261 (A,34,138)

CCSRCH101J50
CCSRCH101J50
CCSRCH101J50
CCSRCH101J50
CKSRYB102K50

C 627 (A,119,74)
C 628 (A,122,74)
C 629 (A,128,72)
C 630 (A,109,74)
C 632 (A,121,78)

CKSSYB104K10

CKSSYB104K10

CKSSYB104K10

CKSSYB104K10

CCSSCH120J50

C 301 (A,74,128)
C 302 (A,81,128)
C 303 (A,76,128)
C 304 (A,79,128)
C 305 (A,74,131)

CKSRYB474K10
CKSRYB474K10
CKSRYB474K10
CKSRYB474K10
CKSRYB474K10

C 633 (A,123,80)
C 638 (A,113,77)
C 651 (A,129,77)
C 671 (A,91,51)
C 701 (A,97,43)

CCSSCH120J50

CKSRYB105K10

CKSRYB105K10

CKSSYB104K10

CKSSYB103K16

C 306 (A,81,131)
C 307 (A,76,131)
C 308 (A,79,131)
C 309 (A,62,137)
C 310 (A,83,129) 2.2 uF

CKSRYB474K10
CKSRYB474K10
CKSRYB474K10
CKSRYB104K16
CCG1205

C 702 (A,94,25)
C 751 (A,143,130) 10 uF
C 754 (A,141,131)
C 801 (A,125,12)
C 802 (A,106,16)

CCSRCH100D50

CCG1192

CKSSYB104K10

CKSRYB104K16

CKSRYB102K50

C 311 (A,84,126) 2.2 uF
C 312 (A,102,128)
C 313 (A,69,129)
C 314 (A,65,131)
C 315 (A,85,129)

CCG1205
CKSRYB104K16
CEVW100M16
CCSRCH100D50
CCSRCH100D50

C 803 (A,106,14)
C 804 (A,99,12)
C 808 (A,110,12)
C 809 (A,122,12)
C 810 (A,100,12)

CKSRYB102K50

CKSRYB104K16

CKSRYB104K16

CKSRYB104K16

CCSRCH221J50

C 351 (A,94,127) 10 uF
C 409 (A,152,57) 10 uF
C 410 (A,152,72) 10 uF
C 412 (A,154,97)

CCG1192
CCG1192
CCG1192
CKSSYB104K16

C 811 (A,98,12)
C 817 (A,108,21)
C 871 (A,92,11)
C 901 (A,133,124) 3 300 uF/16 V

CCSRCH221J50

CKSSYB104K10

CKSRYB104K16

CCH1732

5			6			7			8		
<u>Circuit Symbol and No.</u>			<u>Part No.</u>			<u>Circuit Symbol and No.</u>			<u>Part No.</u>		
C 913	(A,139,44)		CKSSYB102K50			CN1911	(A,155,22) Connector		CKS6266		
						JA1921	(A,154,8) Jack		YKN5001		
C 916	(A,147,40)	4.7 uF	CCG1201			V 1801	(A,106,23) Segment LCD		CAW2017		A
C 917	(A,131,42)	4.7 uF	CCG1201			RESISTORS					
C 918	(A,151,41)	4.7 uF	CCG1201			R 1801	(B,88,7)		RS1/10SR222J		
C 919	(A,146,46)		CKSSYB102K50			R 1802	(B,88,8)		RS1/10SR222J		
C 921	(A,130,42)		CKSRYB104K16			R 1803	(B,141,29)		RS1/10SR101J		
						R 1822	(B,63,8)		RS1/16SS273J		
C 922	(A,119,36)		CEAT102M16			R 1851	(B,71,20)		RS1/16SS102J		
C 923	(A,154,40)		CKSSYB102K50								
C 929	(A,138,41)	4.7 uF	CCG1201			R 1852	(B,49,19)		RS1/16SS101J		
C 930	(A,146,44)	4.7 uF	CCG1201			R 1853	(B,55,30)		RS1/16SS181J		
C 931	(A,117,105)		CKSRYB104K16			R 1854	(B,55,31)		RS1/16SS181J		
						R 1855	(B,24,14)		RS1/16SS101J		B
C 935	(A,129,40)		CKSSYB102K50			R 1856	(B,18,11)		RS1/16SS181J		
C 941	(A,49,137)		CKSRYB103K50								
C 942	(A,48,137)		CKSRYB103K50			R 1857	(B,18,10)		RS1/16SS181J		
C 970	(A,28,105)	Capacitor	CEVW221M16			R 1858	(B,24,19)		RS1/16SS101J		
C 971	(A,14,113)		CKSRYB105K16			R 1859	(B,18,20)		RS1/16SS181J		
						R 1860	(B,18,19)		RS1/16SS181J		
C 972	(A,18,118)		CKSRYB104K16			R 1861	(B,54,27)		RS1/16SS101J		
C 973	(A,17,120)		CKSSYB471K50								
C 974	(A,18,120)		CKSSYB103K16			R 1862	(B,63,29)		RS1/16SS181J		
C 975	(A,22,125)		CEVQW221M6R3			R 1863	(B,63,27)		RS1/16SS151J		
C 976	(A,37,124)		CCSRCH221J50			R 1864	(B,57,16)		RS1/16SS102J		
						R 1865	(B,46,13)		RS1/16SS101J		
C 977	(A,89,90)		CKSRYB104K16			R 1866	(B,53,30)		RS1/16SS121J		C
C 978	(A,92,80)		CKSRYB105K16								
C 980	(A,92,82)		CKSRYB104K16			R 1867	(B,53,31)		RS1/16SS221J		
C 981	(A,90,73)		CEVW101M16			R 1868	(B,24,16)		RS1/16SS101J		
B						R 1869	(B,18,15)		RS1/16SS121J		
Unit Number :						R 1870	(B,18,14)		RS1/16SS221J		
Unit Name : Keyboard Unit						R 1871	(B,24,22)		RS1/16SS101J		
MISCELLANEOUS											
IC 1801	(B,85,23)	IC	PD6538A			R 1872	(B,18,23)		RS1/16SS121J		
IC 1802	(A,159,37)	Remote IC	GP1UXC14RK			R 1873	(B,18,22)		RS1/16SS221J		
IC 1851	(B,62,18)	DAC	BU2507FV			R 1874	(B,62,25)		RS1/16SS101J		
Q 1851	(B,51,14)	Transistor	LSC4081UB			R 1875	(B,62,29)		RS1/16SS181J		
Q 1852	(B,52,25)	Transistor	LSC4081UB			R 1876	(B,62,27)		RS1/16SS181J		D
Q 1853	(B,21,11)	Transistor	LSC4081UB			R 1877	(B,57,17)		RS1/16SS102J		
Q 1854	(B,21,20)	Transistor	LSC4081UB			R 1878	(B,45,30)		RS1/16SS101J		
Q 1855	(B,57,28)	Transistor	LSC4081UB			R 1879	(B,51,30)		RS1/16SS181J		
Q 1856	(B,56,14)	Transistor	LSC4081UB			R 1880	(B,51,31)		RS1/16SS181J		
Q 1857	(B,51,28)	Transistor	LSC4081UB			R 1881	(B,24,17)		RS1/16SS101J		
Q 1858	(B,21,14)	Transistor	LSC4081UB			R 1882	(B,18,18)		RS1/16SS181J		
Q 1859	(B,21,23)	Transistor	LSC4081UB			R 1883	(B,18,16)		RS1/16SS181J		
Q 1860	(B,60,28)	Transistor	LSC4081UB			R 1884	(B,24,23)		RS1/16SS101J		
Q 1861	(B,53,16)	Transistor	LSC4081UB			R 1885	(B,18,26)		RS1/16SS181J		
Q 1862	(B,48,27)	Transistor	LSC4081UB			R 1886	(B,18,25)		RS1/16SS181J		
Q 1863	(B,21,17)	Transistor	LSC4081UB			R 1887	(B,70,22)		RS1/16SS101J		E
Q 1864	(B,21,25)	Transistor	LSC4081UB			R 1888	(B,67,29)		RS1/16SS181J		
Q 1865	(B,68,27)	Transistor	LSC4081UB			R 1889	(B,69,29)		RS1/16SS181J		
Q 1866	(B,57,24)	Transistor	LSC4081UB			R 1890	(B,57,18)		RS1/16SS102J		
Q 1867	(B,63,23)	Transistor	LSC4081UB			R 1891	(B,57,20)		RS1/16SS102J		
Q 1868	(B,69,25)	Transistor	LSC4081UB			R 1892	(B,69,22)		RS1/16SS102J		
D 1851	(A,50,21)	LED	SMLV56RGB1U1			R 1893	(B,65,13)		RS1/10SR222J		
D 1852	(A,112,6)	LED	SMLV56RGB1U1			R 1894	(B,63,13)		RS1/10SR222J		
D 1853	(A,22,21)	LED	SMLV56RGB1U1			R 1895	(B,62,13)		RS1/10SR222J		
D 1854	(A,64,22)	Chip LED	NSSM038A-6430			CAPACITORS					
X 1801	(B,83,10)	Ceramic Resonator 5.00 MHz	CSS1547			C 1801	(B,144,31) 10 uF		CCG1192		F
S 1842	(A,36,21)	Encoder(ROTARY COMMANDER)	CSD1168			C 1802	(B,89,11)		CKSRYB105K10		
CN1821	(B,108,10)	Connector	CKS6287			C 1803	(B,88,10)		CKSSYB104K10		

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

C 1804 (B,89,13)
C 1805 (B,90,13)

CKSSYB104K10
CKSSYB104K10

R 301 (A,27,9)
R 302 (A,28,9)

RS1/16SS0R0J
RS1/16SS0R0J

A

C 1851 (B,68,19)
C 1852 (B,49,22)
C 1853 (B,57,9)
C 1854 (B,24,27)
C 1855 (B,55,27)

CKSRYB105K10
CKSSYB104K16
CKSSYB104K16
CKSSYB104K16
CKSSYB104K16

R 303 (A,27,11)
R 304 (A,28,11)
R 305 (A,26,9)
R 306 (A,26,11)
R 307 (A,25,9)

RS1/16SS123J
RS1/16SS123J
RS1/16SS102J
RS1/16SS472J
RS1/16SS102J

C 1856 (B,104,19)
C 1857 (B,103,19)
C 1858 (B,106,19)
C 1859 (B,59,14)
C 1863 (B,59,26)

CCSRCH100D50
CCSRCH100D50
CCSRCH100D50
CKSSYB103K16
CKSSYB104K16

R 308 (A,25,11)
R 309 (A,35,6)
R 310 (B,30,9)
R 311 (B,30,10)
R 312 (B,30,11)

RS1/16SS472J
RS1/16SS473J
RS1/16SS472J
RS1/16SS472J
RS1/16SS472J

C 1867 (B,66,24)

CKSSYB104K16

R 313 (B,30,12)
R 701 (A,21,38)
R 702 (A,23,38)
R 706 (A,32,42)
R 708 (B,28,26)

R 709 (B,29,28)

RS1/16SS472J
RS1/16SS101J
RS1/16SS101J
RS1/16SS221J
RS1/16SS0R0J

RS1/16SS0R0J

C**Unit Number: CWX4023****Unit Name : CD Core Unit (S11.6STD)****MISCELLANEOUS**

IC 201 (B,23,37) IC PE5791A
IC 301 (A,37,11) IC BD8223EFV
Q 101 (B,11,53) Transistor 2SA1577
C Q 102 (B,15,54) Chip Digital Transistor LTA123JUB
X 201 (B,25,49) Ceramic Resonator 16.934 MHz CSS1603

S 901 (A,42,53) Spring Switch(HOME) CSN1080
S 903 (B,21,12) Spring Switch(DSCSNS) CSN1081
CN101 (A,16,58) Connector CKS4808
CN701 (A,25,29) Connector CKS6146

RESISTORS

R 101 (B,6,57) RS1/10SR2R4J
R 102 (B,8,57) RS1/10SR2R4J
R 103 (B,9,57) RS1/10SR2R7J
D R 108 (B,18,55) RS1/16SS105J
R 109 (B,12,50) RS1/16SS222J

R 201 (A,24,11) RS1/16SS0R0J
R 202 (A,23,9) RS1/16SS0R0J
R 214 (B,18,28) RS1/16SS103J
R 215 (B,17,28) RS1/16SS393J
R 216 (B,12,35) RS1/16SS122J

R 217 (B,10,32) RS1/16SS562J
R 218 (B,10,35) RS1/16SS472J
R 229 (B,12,34) RS1/16SS471J
E R 232 (A,31,54) RS1/16SS0R0J
R 237 (B,33,45) RS1/16SS221J

R 240 (B,34,40) RS1/16SS473J
R 245 (A,34,46) RS1/16SS104J
R 254 (A,37,56) RS1/16SS104J
R 260 (B,30,27) RS1/16SS103J
R 264 (A,22,9) RS1/16SS102J

R 281 (B,33,38) RS1/16SS560J
R 282 (B,33,39) RS1/16SS560J
R 283 (B,35,38) RS1/16SS0R0J
R 291 (B,33,34) RS1/16SS560J
F R 292 (B,33,36) RS1/16SS0R0J

R 293 (B,35,39) RS1/16SS0R0J
R 294 (B,27,48) RS1/16SS471J
R 296 (B,34,43) RS1/16SS0R0J

CAPACITORS

C 104 (B,12,57) CKSQYB475K6R3
C 203 (B,22,47) CKSSYB104K10
C 209 (B,28,47) CKSRYB104K16
C 210 (B,33,43) CKSSYB104K10
C 211 (B,33,41) CKSSYB104K10

C 212 (B,22,28) CKSSYB104K10
C 213 (B,18,26) CKSSYB332K50
C 214 (B,17,26) CKSSYB473K16
C 215 (B,19,28) CKSSYB104K10
C 216 (B,12,33) CKSSYB182K50

C 217 (B,10,34) CCSSCH560J50
C 218 (B,10,36) CCSSCH4R0C50
C 219 (B,14,34) CKSSYB104K10
C 220 (A,18,38) CKSSYB104K10
C 221 (B,14,32) CKSSYB104K10

C 222 (B,13,37) CKSSYB104K10
C 223 (B,12,42) CCSSCH680J50
C 224 (B,13,45) CCSSCH470J50
C 225 (B,13,46) CKSSYB103K16
C 228 (B,10,33) CCSSCH270J50

C 229 (B,9,40) CKSSYB104K10
C 233 (B,32,46) CKSSYB103K16
C 236 (B,8,40) CKSSYB104K10
C 238 (A,25,44) CKSRYB104K16
C 299 (A,26,41) CKSSYB104K10

C 302 (B,28,12) CKSSYB102K50
C 303 (B,29,12) CKSSYB102K50
C 304 (B,27,12) CKSSYB223K16
C 305 (B,26,12) CKSSYB104K10
C 306 (A,31,7) CKSSYB104K10

C 307 (A,41,19) CKSRYB105K10
C 308 (A,31,15) CKSRYB105K10
C 710 (A,34,42) CKSSYB102K50

Miscellaneous Parts List

Pickup Unit(P10.6)(Service) CXX3556
Motor Unit(SPINDLE) CXE2273
Motor Unit(LOADING/CARRIAGE) CXC4026

M 1
M 2

1

2

3

4