


2. EXPLODED VIEWS AND PARTS LIST

2.1 PACKING

(DEH-P350/XM/UC, DEH-P350/XN/UC, DEH-P3500/XM/UC, DEH-P3500/XN/UC)

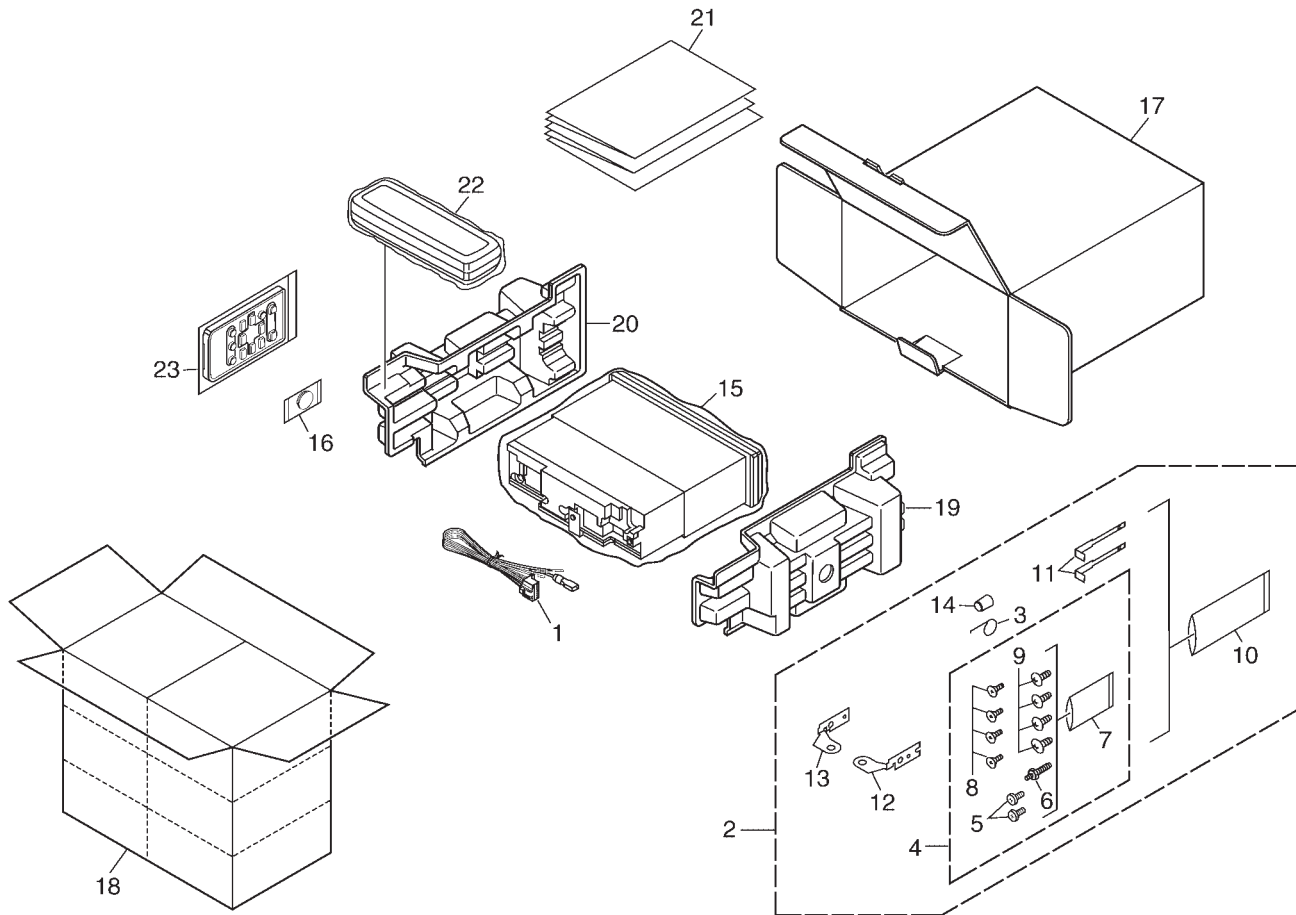

NOTE:

- Parts marked by "*" are generally unavailable because they are not in our Master Spare Parts List.
- Screws adjacent to ▽ mark on the product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

(1) PACKING(DEH-P350/XM/UC, DEH-P350/XN/UC, DEH-P3500/XM/UC, DEH-P3500/XN/UC) SECTION

PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Cord Assy	CDE7154	* 16	Battery	CEX1065
2	Accessory Assy	CEA3376	17	Carton	See Contrast table(2)
3	Spring	CBH1650	18	Contain Box	See Contrast table(2)
4	Screw Assy	CEA3445	19	Protector	CHP2663
5	Fixing Screw	BPZ20P060FZK	20	Protector	CHP2664
6	Screw	CBA1002	21-1	Owner's Manual	See Contrast table(2)
* 7	Polyethylene Bag	CEG-127	21-2	Installation Manual	See Contrast table(2)
8	Screw	CRZ50P090FTC	* 21-3	Warranty Card	See Contrast table(2)
9	Screw	TRZ50P080FTC	* 21-4	Card	See Contrast table(2)
* 10	Polyethylene Bag	CEG-158	* 21-5	Caution Card	See Contrast table(2)
11	Handle	CNC5395	22	Case Assy	CXB3520
12	Holder	CND1249	23	Remote Control Unit	CXC1265
13	Holder	CND1250			
14	Bush	CNV3930			
15	Polyethylene Bag	CEG1173			

(2) CONTRAST TABLE

DEH-P350/XM/UC, DEH-P350/XN/UC, DEH-P3500/XM/UC and DEH-P3500/XN/UC are constructed the same except for the following:


Mark No.	Symbol and Description	Part No.	
		DEH-P350/XM/UC	DEH-P3500/XM/UC
17	Carton	CHG4787	CHG4788
18	Contain Box	CHL4787	CHL4788
21-1	Owner's Manual	CRD3697	CRD3699
21-2	Installation Manual	CRD3698	CRD3700
* 21-3	Warranty Card	CRY1070	Not used
* 21-4	Card	Not used	ARY1048
* 21-5	Caution Card	Not used	CRP1294

Mark No.	Symbol and Description	Part No.	
		DEH-P350/XN/UC	DEH-P3500/XN/UC
17	Carton	CHG4931	CHG4930
18	Contain Box	CHL4931	CHL4930
21-1	Owner's Manual	CRD3697	CRD3699
21-2	Installation Manual	CRD3698	CRD3700
* 21-3	Warranty Card	CRY1070	Not used
* 21-4	Card	Not used	ARY1048
* 21-5	Caution Card	Not used	CRP1294

● Owner's Manual, Installation Manual

Model	Part No.	Language
DEH-P350/XM/UC	CRD3697	English, French, Spanish
DEH-P350/XN/UC	CRD3698	
DEH-P3500/XM/UC	CRD3699	English, French, Spanish
DEH-P3500/XN/UC	CRD3700	

2.3 EXTERIOR

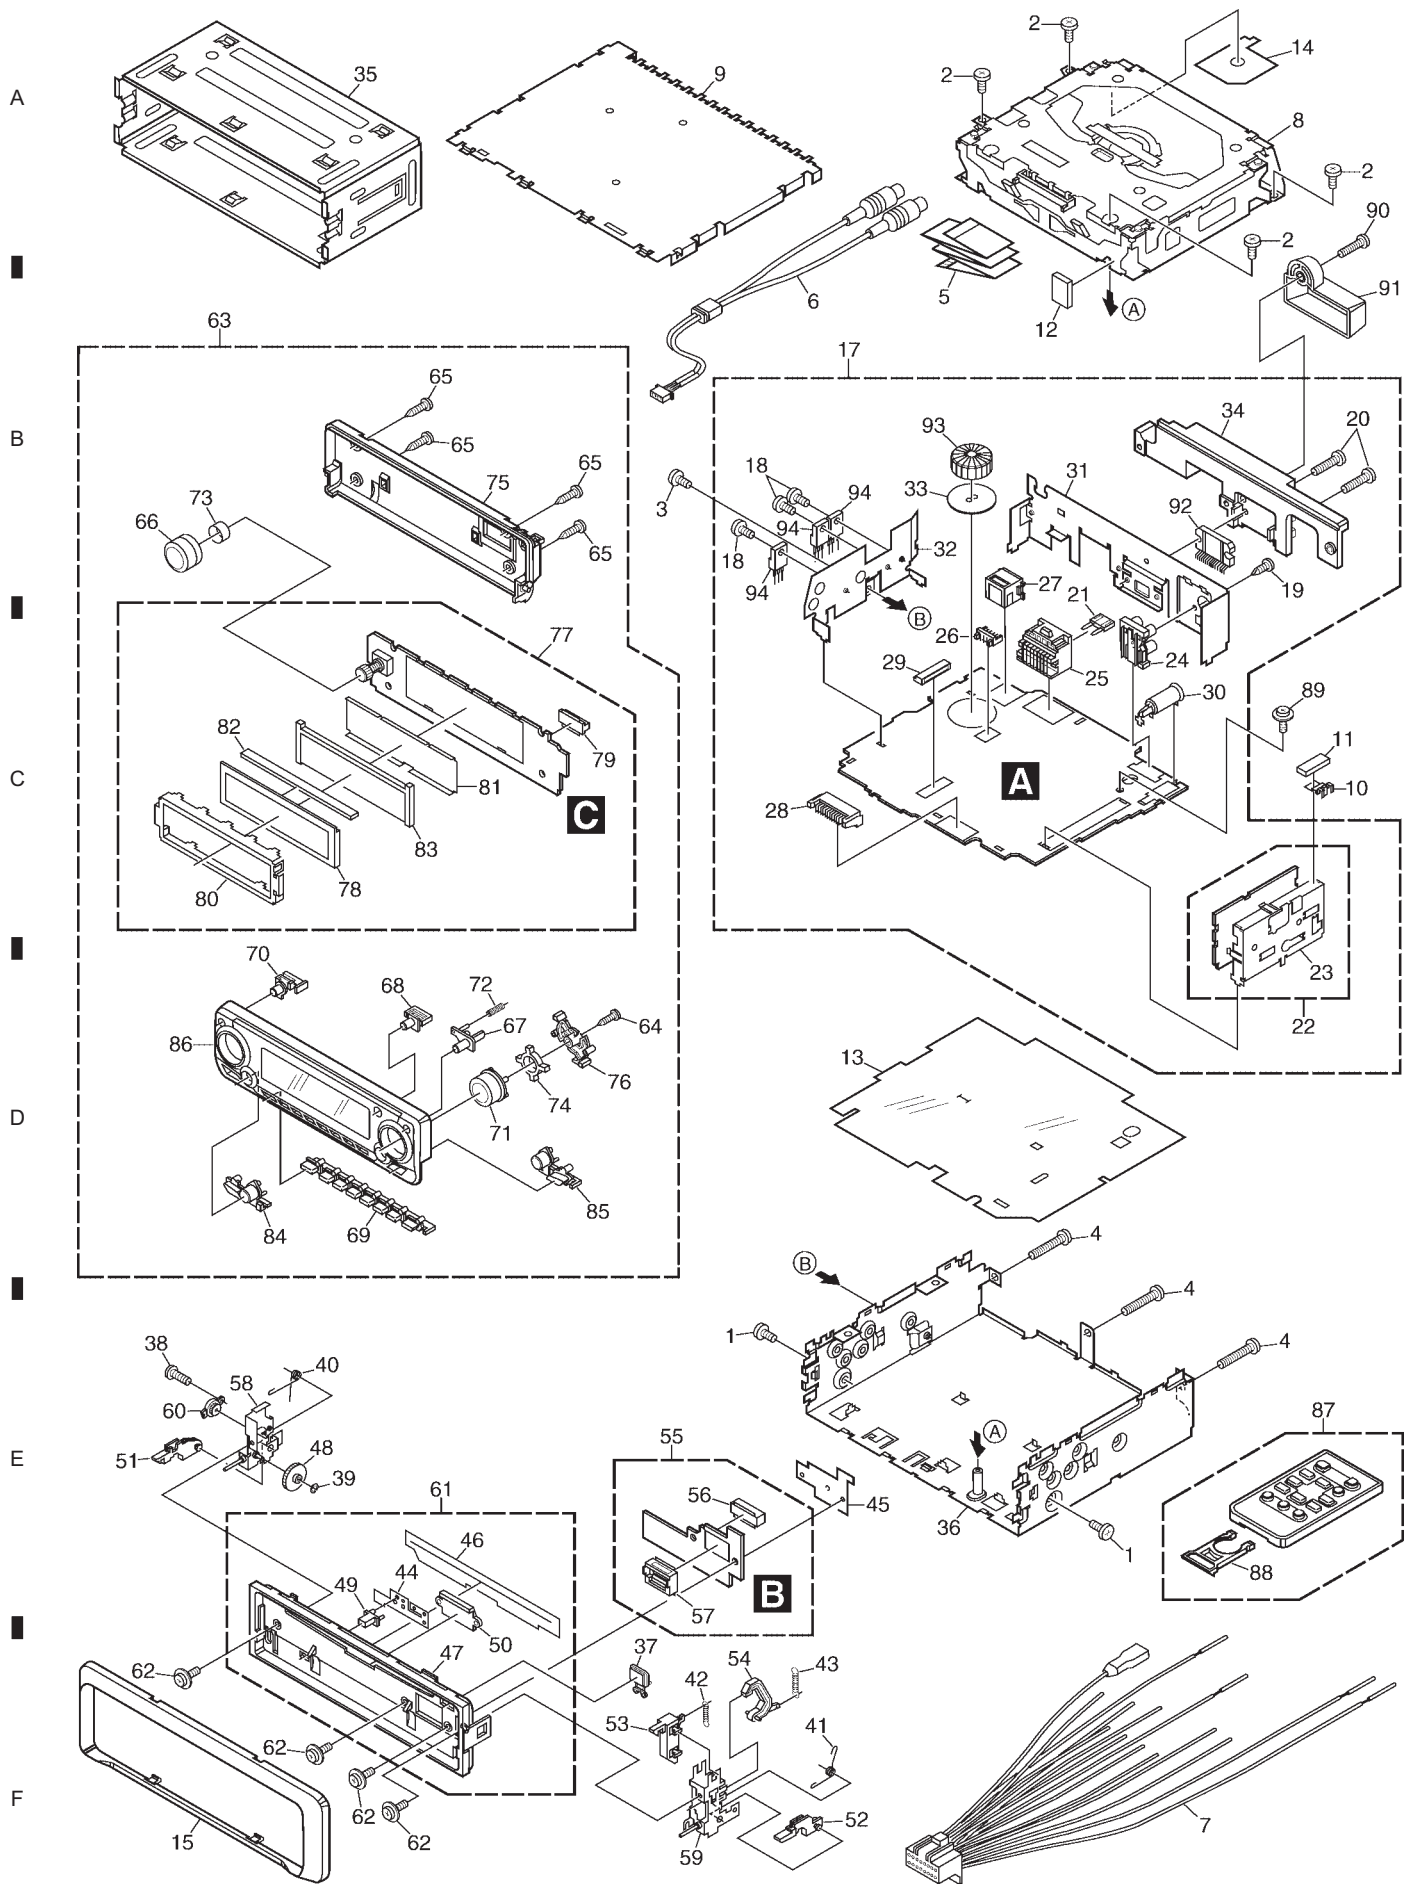

(1) EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	Screw	BMZ30P040FZK	51	Arm	CNV7400	A
2	Screw	BSZ26P060FTC	52	Arm	CNV7401	
3	Screw	BSZ30P060FTC	53	Arm	CNV7402	
4	Screw	BSZ30P200FTC	54	Arm	CNV7403	
5	Cable	CDE7128	55	Panel Unit	CWM8758	
6	Cord Assy	See Contrast table(2)	56	Socket(CN1950)	CKS3550	
7	Cord Assy	CDE7154	57	Connector(CN1951)	CKS4462	
8	CD Mechanism Module(S10)	CXK5600	58	Holder Unit	CXB9501	
9	Case	CNB2793	59	Holder Unit	CXB9502	
10	Holder	CNC8915	60	Damper Unit	CXB9503	B
11	Cushion	CNM4870	61	Service Panel Unit	CXX1691	
12	Insulator	CNM7682	62	Screw	IMS20P045FZK	
13	Insulator	CNM7935	63	Detach Grille Assy	See Contrast table(2)	
14	Insulator	CNM8174	64	Screw	BPZ20P060FTC	
15	Panel	See Contrast table(2)	65	Screw	BPZ20P100FZK	
16			66	Knob	See Contrast table(2)	
17	Tuner Amp Unit	See Contrast table(2)	67	Button(OPEN)	CAC7728	
18	Screw	ASZ26P060FTC	68	Button(AUDIO)	CAC7729	
19	Screw	BPZ26P080FTC	69	Button(DISP, 1-6, FUNC)	CAC7730	
20	Screw	BSZ26P160FTC	70	Button(CLK)	CAC7751	
21	Fuse(10A)	CEK1208	71	Button(SELECT)	See Contrast table(2)	C
22	FM/AM Tuner Unit	CWE1646	72	Spring	CBH2654	
23	Holder	CND1054	73	Spring	CBL1470	
24	Pin Jack(CN352)	CKB1051	74	Cushion	CNM8291	
25	Plug(CN901)	CKM1376	75	Cover	CNS7247	
26	Plug(CN351)	See Contrast table(2)	76	Holder	CNV7405	
27	Connector(CN101)	CKS3408	77	Keyboard Unit	CWM8607	
28	Plug(CN801)	CKS3537	78	LCD	CAW1755	
29	Connector(CN651)	CKS3835	79	Connector(CN1901)	CKS4524	
30	Antenna Jack(CN401)	CKX1056	80	Holder	CND1215	
31	Holder	See Contrast table(2)	81	Sheet	CNM7921	D
32	Holder	CND1352	82	Connector	CNV7365	
33	Insulator	CNM8245	83	Lighting Conductor	CNV7406	
34	Heat Sink	CNR1668	84	Button Unit(SRC, EQ)	CXB9924	
35	Holder Unit	See Contrast table(2)	85	Button Unit(BAND, EQ-EX)	CXB9925	
36	Chassis Unit	CXB9528	86	Sub Grille Assy	See Contrast table(2)	
37	Button(EJECT)	CAC7752	87	Remote Control Unit	CXC1265	
38	Screw(M2x2)	CBA1176	88	Cover	CNS7068	
39	Washer	CBF1038	89	Screw	ISS26P055FTC	
40	Spring	CBH2650	90	Screw	See Contrast table(2)	
41	Spring	CBH2651	91	Holder	See Contrast table(2)	E
42	Spring	CBH2652	92	IC(IC301)	PAL007A	
43	Spring	CBH2653	93	Choke Coil(L301)	CTH1280	
44	Spring	CBL1512	94	Transistor(Q651, 911, 921)	2SD2396	
45	Holder	CND1254				
46	Cover	CNM6854				
47	Panel	CNS7245				
48	Gear	CNV5997				
49	Pin	CNV6486				
50	Lighting Conductor	CNV6487				F


(2) CONTRAST TABLE

DEH-P350/XM/UC, DEH-P350/XN/UC, DEH-P3500/XM/UC, DEH-P3500/XN/UC, DEH-P4550/XM/ES and DEH-P4550/XN/ES are constructed the same except for the following:

Mark No.	Symbol and Description	Part No.		
		DEH-P350/XM/UC	DEH-P3500/XM/UC	DEH-P4550/XM/ES
6	Cord Assy	CDE7129	Not used	Not used
15	Panel	CNS6935	CNS6934	CNS6935
17	Tuner Amp Unit	CWM8593	CWM8594	CWM8596
26	Plug(CN351)	CKS1238	Not used	Not used
31	Holder	CND1239	CND1477	CND1477
35	Holder Unit	CXB6681	CXB6681	CXB6681
63	Detach Grille Assy	CXB9677	CXB9678	CXB9680
66	Knob	CAA2755	CAA2753	CAA2755
71	Button(SELECT)	CAC7733	CAC7731	CAC7733
86	Sub Grille Assy	CXB9977	CXB9978	CXB9980
90	Screw	Not used	BMZ40P140FTC	Not used
91	Holder	Not used	CNV7619	Not used

Mark No.	Symbol and Description	Part No.		
		DEH-P350/XN/UC	DEH-P3500/XN/UC	DEH-P4550/XN/ES
6	Cord Assy	CDE7129	Not used	Not used
15	Panel	CNS6935	CNS6934	CNS6935
17	Tuner Amp Unit	CWM8593	CWM8594	CWM8596
26	Plug(CN351)	CKS1238	Not used	Not used
31	Holder	CND1239	CND1477	CND1477
35	Holder	CNC8659	CNC8659	CNC8659
63	Detach Grille Assy	CXB9677	CXB9678	CXB9680
66	Knob	CAA2755	CAA2753	CAA2755
71	Button(SELECT)	CAC7733	CAC7731	CAC7733
86	Sub Grille Assy	CXB9977	CXB9978	CXB9980
90	Screw	Not used	BMZ40P140FTC	Not used
91	Holder	Not used	CNV7619	Not used

2.4 CD MECHANISM MODULE

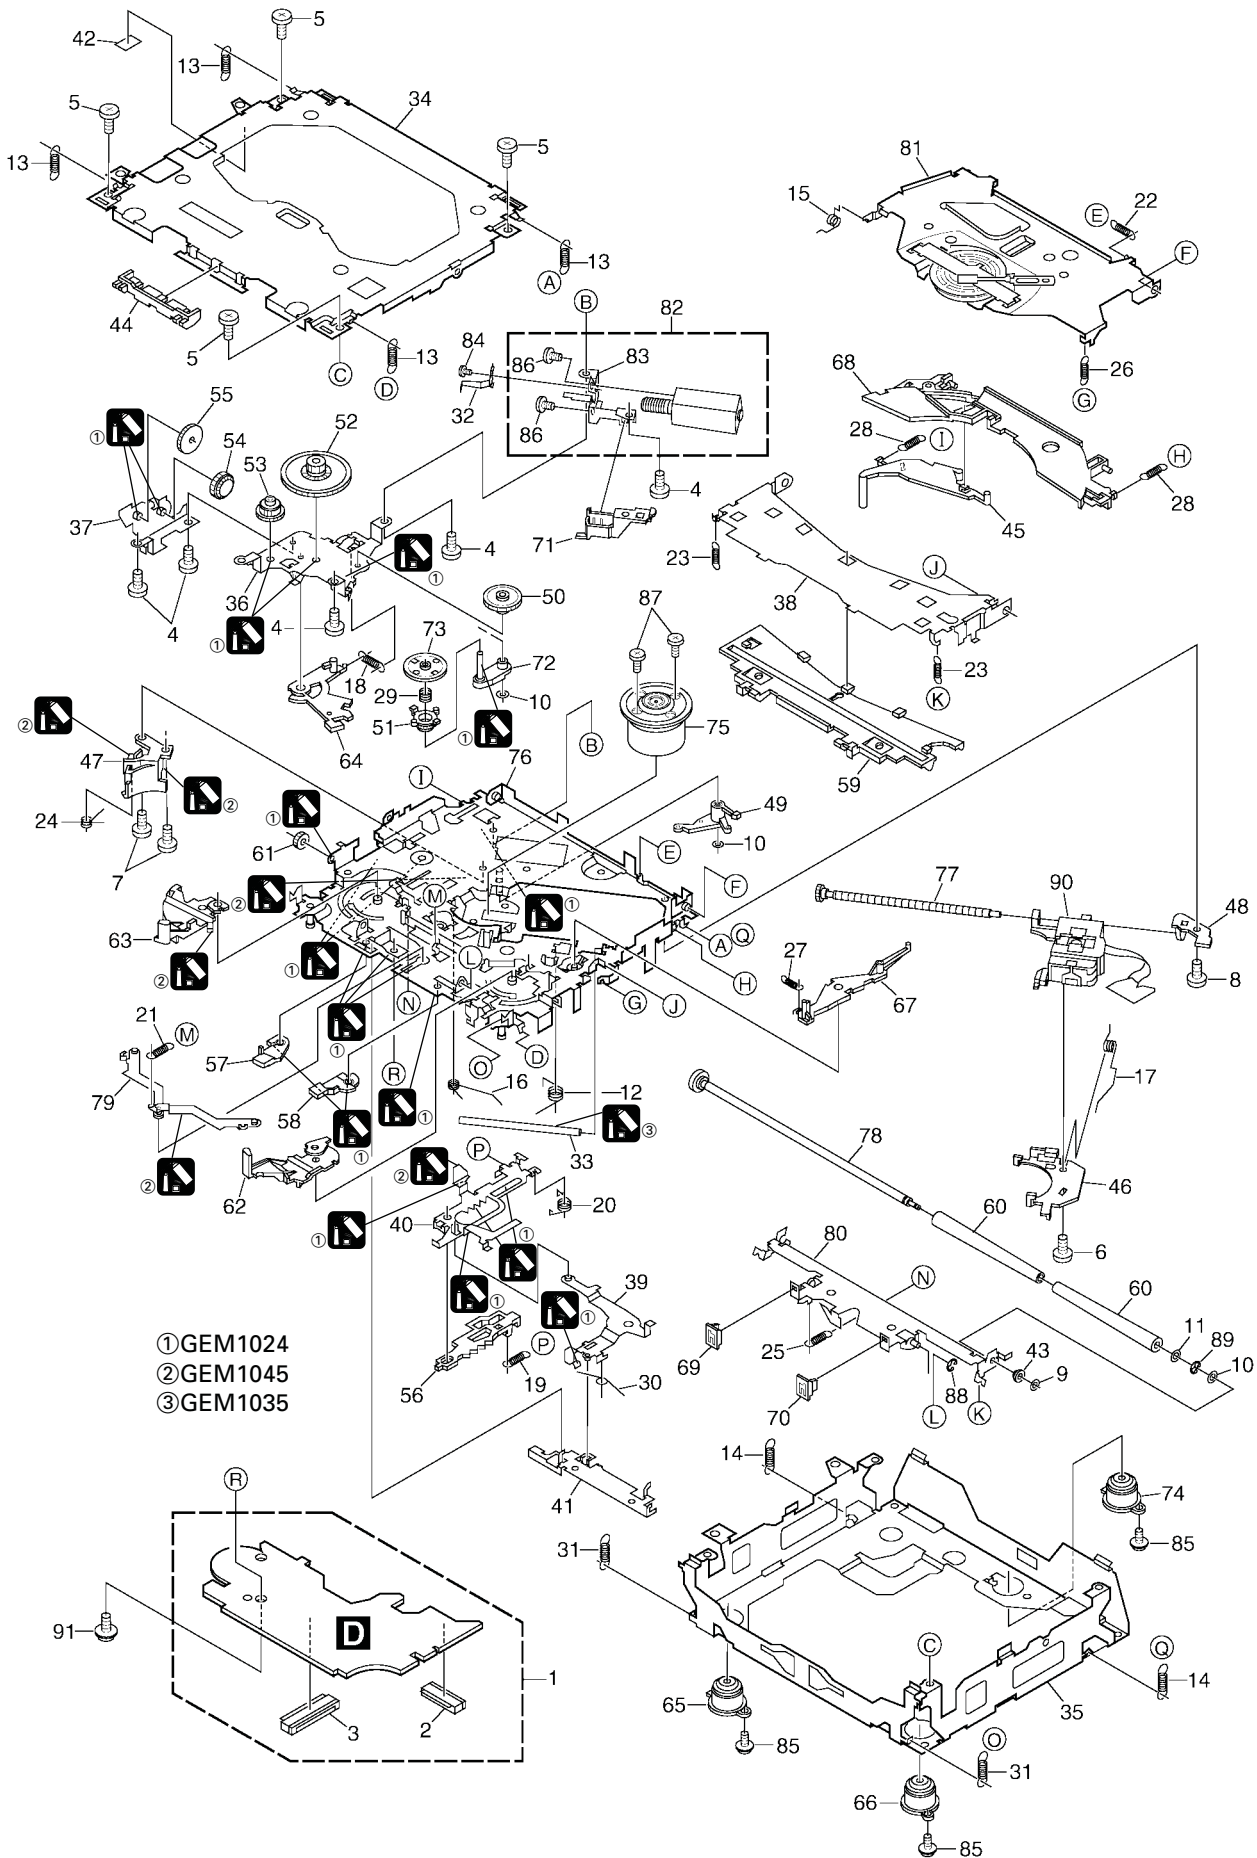

● CD MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	CD Core Unit(S10)	CWX2708	46	Rack	CNV7199
2	Connector(CN101)	CKS4182	47	Holder	CNV7201
3	Connector(CN701)	CKS4188	48	Holder	CNV7202
4	Screw	BMZ20P035FTC	49	Arm	CNV7203
5	Screw	BSZ20P040FTC	50	Gear	CNV7207
6	Screw(M2x4)	CBA1362	51	Gear	CNV7208
7	Screw(M2x3)	CBA1511	52	Gear	CNV7209
8	Screw(M2x3)	CBA1527	53	Gear	CNV7210
9	Washer	CBF1037	54	Gear	CNV7211
10	Washer	CBF1038	55	Gear	CNV7212
11	Washer	CBF1060	56	Rack	CNV7214
12	Spring	CBH2390	57	Arm	CNV7215
13	Spring	CBH2606	58	Arm	CNV7216
14	Spring	CBH2607	59	Guide	CNV7217
15	Spring	CBH2608	60	Roller	CNV7218
16	Spring	CBH2609	61	Gear	CNV7219
17	Spring	CBH2610	62	Arm	CNV7221
18	Spring	CBH2611	63	Arm	CNV7220
19	Spring	CBH2612	64	Arm	CNV7222
20	Spring	CBH2613	65	Damper	CNV7313
21	Spring	CBH2614	66	Damper	CNV7314
22	Spring	CBH2615	67	Arm	CNV7341
23	Spring	CBH2616	68	Arm	CNV7342
24	Spring	CBH2617	69	Guide	CNV7360
25	Spring	CBH2620	70	Guide	CNV7361
26	Spring	CBH2621	71	Holder	CNV7437
27	Spring	CBH2641	72	Arm	CNV7444
28	Spring	CBH2642	73	Gear	CNV7595
29	Spring	CBH2643	74	Damper	CNV7618
30	Spring	CBH2659	75	Motor Unit(M1)	CXB6007
31	Spring	CBH2688	76	Chassis Unit	CXB8728
* 32	Spring	CBL1614	77	Screw Unit	CXB8729
33	Shaft	CLA3845	78	Gear Unit	CXB8731
34	Frame	CNC9962	79	Arm Unit	CXB8732
35	Frame	CNC9963	80	Arm Unit	CXB8735
36	Bracket	CNC9966	81	Arm Unit	CXB8852
37	Bracket	CNC9967	82	Motor Unit(M2)	CXB8933
38	Arm	CNC9968	83	Bracket	CNC9985
39	Arm	CNC9973	84	Screw	JFZ20P020FTC
40	Lever	CNC9983	85	Screw(M2x5)	EBA1028
41	Lever	CNC9984	86	Screw	JFZ20P020FTC
42	Sheet	CNM8134	87	Screw	JGZ17P022FTC
43	Collar	CNV6906	88	Washer	YE15FTC
44	Guide	CNV6925	89	Washer	YE20FTC
45	Arm	CNV7198	90	Pickup Unit(Service)(P10)	CXX1641
			91	Screw	IMS26P030FMC

5. ELECTRICAL PARTS LIST

NOTES:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J, RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

====Circuit Symbol and No.====Part Name	Part No.	====Circuit Symbol and No.====Part Name	Part No.
A Unit Number : CWM8593(DEH-P350) CWM8594(DEH-P3500) CWM8596(DEH-P4550) Unit Name : Tuner Amp Unit		D 808 Diode D 911 Diode D 912 Diode D 921 Diode D 931 Diode	HZS11L(A1) S5688G HZS6L(B2) HZS9L(B3) HZS7L(A1)
MISCELLANEOUS		D 932 Diode D 937 Diode D 951 Diode D 981 Diode D 982 Diode	HZS7L(C3) MA110 DAN202U DAN202U HZS9L(A2)
IC 101 IC IC 131 IC IC 201 IC IC 301 IC IC 401 IC	HA12187FP NJM4558MD PML009A PAL007A NJM2391DL1-33	L 101 Inductor L 201 Ferri-Inductor L 301 Choke Coil 600μH L 401 Ferri-Inductor L 403 Inductor	LAU2R2K LAU4R7K CTH1280 LAU4R7K LAU1R0K
IC 601 IC IC 602 IC IC 652 IC IC 653 IC Q 101 Transistor	PD5802A S-80835ANUP-EDZ TC7SET08FU TC7SET08FU 2SA1037K	L 404 Inductor L 406 Inductor L 601 Ferri-Inductor L 651 Inductor L 801 Inductor	LAU1R0K CTF1385 LAU100K CTF1382 LAU2R2K
Q 102 Transistor Q 301 Transistor Q 351 Transistor(DEH-P350) Q 352 Transistor Q 353 Transistor	DTC114EU DTC124EU IMH3A IMH3A IMH3A	L 951 Inductor X 601 Radiator 10.00MHz S 802 Switch(DSENS) BZ 641 Buzzer AR 401 Arrester	LAU2R2K CSS1599 CSN1039 CPV1062 DSP-201M
Q 651 Transistor Q 652 Transistor Q 803 Transistor Q 804 Transistor Q 805 Transistor	2SD2396 IMD2A 2SD1767 IMD2A DTC143EU	FM/AM Tuner Unit Fuse 10A	CWE1646 CEK1208
Q 806 Transistor Q 807 Transistor Q 808 Transistor Q 911 Transistor Q 913 Transistor	IMD14 2SA1037K DTC114EU 2SD2396 IMD2A	RESISTORS	
Q 921 Transistor Q 922 Transistor Q 923 Transistor Q 931 Transistor Q 932 Transistor	2SD2396 DTC114EU 2SB1243 IMX1 DTC114EU	R 101 R 102 R 103 R 104 R 105	RS1/16S101J RS1/16S620J RS1/16S101J RS1/16S222J RS1/16S103J
Q 951 Transistor Q 981 Transistor Q 982 Transistor	2SA1037K 2SC2412K IMD2A	R 106 R 107 R 108 R 109 R 110	RS1/16S472J RS1/16S223J RS1/16S472J RS1/16S821J RS1/16S821J
D 131 Diode Network D 132 Diode Network	DA204U DA204U	R 111 R 112 R 113 R 114 R 133	RS1/16S223J RS1/16S223J RS1/16S102J RS1/16S102J RS1/16S563J
D 133 Diode D 134 Diode D 301 Diode D 302 Diode D 303 Diode	DAN202U DAP202U S5688G S5688G S5688G	R 134 R 139 R 140 R 147 R 148	RS1/16S104J RS1/16S563J RS1/16S104J RS1/16S474J RS1/16S474J
D 304 Diode D 401 Diode D 402 Diode D 403 Diode D 651 Diode	S5688G S5688G S5688G S5688G HZS9L(B1)	R 201 R 241 R 242 R 247 R 248	RAB4C102J RS1/16S0R0J RS1/16S0R0J RS1/16S101J RS1/16S101J
D 803 Diode Network D 804 Diode D 805 Diode D 806 Diode D 807 Diode	DA204U DAN202U DAP202U DAN202U DAP202U		

====Circuit Symbol and No.====Part Name	Part No.	====Circuit Symbol and No.====Part Name	Part No.	
R 249	RS1/16S101J	R 804	RS1/16S1R0J	A
R 250	RS1/16S101J	R 805	RS1/16S391J	
R 301	RS1/16S103J	R 806	RS1/16S391J	
R 302	RS1/16S103J	R 807	RS1/16S473J	
R 303	RS1/16S153J	R 808	RS1/16S473J	
R 304	RS1/16S331J	R 809	RS1/16S102J	
R 351 (DEH-P350)	RS1/16S821J	R 810	RS1/16S222J	
R 352 (DEH-P350)	RS1/16S821J	R 811	RS1/16S222J	
R 353	RS1/16S821J	R 812	RS1/16S222J	
R 354	RS1/16S821J	R 813	RS1/16S222J	
R 355	RS1/16S821J	R 814	RS1/16S222J	
R 356	RS1/16S821J	R 815	RS1/16S473J	
R 357 (DEH-P350)	RS1/16S223J	R 816	RS1/16S104J	B
R 358 (DEH-P350)	RS1/16S223J	R 817	RD1/4PU391J	
R 359	RS1/16S223J	R 818	RS1/16S104J	
R 360	RS1/16S223J	R 819	RS1/16S222J	
R 361	RS1/16S223J	R 820	RS1/16S222J	
R 362	RS1/16S223J	R 821	RS1/16S472J	
R 403	RS1/16S681J	R 822	RS1/16S0R0J	
R 404	RS1/16S0R0J	R 823	RS1/16S102J	
R 405	RS1/16S681J	R 824	RS1/16S473J	
R 406	RS1/16S681J	R 825	RS1/16S102J	
R 407	RS1/16S681J	R 826	RS1/16S102J	
R 408	RS1/16S681J	R 827	RS1/16S102J	
R 410	RS1/16S681J	R 828	RS1/16S102J	
R 413	RS1/16S0R0J	R 903	RS1/16S223J	C
R 416	RS1/16S681J	R 912	RS1/16S222J	
R 417	RS1/16S681J	R 913	RS1/16S223J	
R 419	RS1/16S681J	R 914	RS1/16S104J	
R 421	RS1/16S681J	R 915	RS1/16S104J	
R 423	RD1/4PU0R0J	R 916	RS1/16S104J	
R 601 (DEH-P4550)	RS1/16S104J	R 923	RS1/16S103J	
R 602 (DEH-P350)	RS1/16S104J	R 924	RD1/4PU122J	
R 602 (DEH-P3500)	RS1/16S104J	R 925	RS1/16S182J	
R 606	RS1/16S104J	R 931	RS1/16S472J	
R 607	RS1/16S822J	R 932	RS1/16S473J	
R 615	RS1/16S0R0J	R 933	RS1/16S103J	
R 616	RS1/16S473J	R 934	RS1/16S473J	
R 617	RS1/16S102J	R 935	RS1/16S104J	
R 618	RS1/16S104J	R 936	RS1/16S103J	D
R 630	RS1/16S104J	R 938	RD1/4PU102J	
R 632	RS1/16S104J	R 939	RD1/4PU102J	
R 641	RS1/16S102J	R 951	RD1/4PU153J	
R 648	RS1/16S221J	R 952	RS1/16S472J	
R 649	RS1/16S221J	R 953	RS1/16S472J	
R 651	RD1/4PU221J	R 954	RS1/16S102J	
R 652	RD1/4PU221J	R 983	RS1/16S223J	
R 653	RS1/16S472J	R 984	RS1/16S473J	
R 654	RS1/16S222J	R 985	RS1/16S102J	
R 655	RS1/16S102J			
R 656	RS1/16S0R0J	CAPACITORS		
R 657	RS1/16S0R0J	C 101	CKSRYB104K16	E
R 658	RS1/16S102J	C 102	CKSRYB473K25	
R 659	RS1/16S221J	C 131	CKSRYB104K16	
R 660	RS1/16S221J	C 132	CKSRYB104K16	
		C 141	CKSRYB104K16	
R 661	RS1/16S221J			
R 662	RS1/16S221J	C 142	CKSRYB103K50	
R 663	RS1/16S102J	C 143	CKSRYB474K10	
R 664	RS1/16S221J	C 144	CKSRYB474K10	
R 665	RD1/4PU0R0J	C 145	CCSRCH101J50	
		C 146	CCSRCH101J50	
R 667	RS1/16S221J			
R 668	RS1/16S222J	C 147	CKSRYB104K16	
R 670	RS1/16S221J	C 201	CEJQ1R0M50	
R 673	RS1/16S104J	C 202	CEJQ1R0M50	
R 677	RS1/16S104J	C 203	CKSRYB104K16	
		C 204	CKSRYB104K16	
R 682	RS1/16S221J			F
R 684	RS1/16S0R0J	C 205	CKSRYB104K16	
R 689	RS1/16S0R0J	C 206	CEJQ470M16	
R 802	RS1/16S222J	C 207	CEJQ1R0M50	
R 803	RS1/16S472J	C 208	CEJQ1R0M50	
		C 209	CEJQ1R0M50	

A	====Circuit Symbol and No.==Part Name		Part No.	====Circuit Symbol and No.==Part Name		Part No.
	C	210	CEJQ1R0M50	 Unit Number : CWM8607 Unit Name : Keyboard Unit		
	C	211	CEJQ4R7M35			
	C	212	CEJQ4R7M35	MISCELLANEOUS		
	C	213	CEJQ4R7M35			
	C	214	CEJQ4R7M35			
	C	215	CEJQ4R7M35	IC	1900	IC
	C	216	CEJQ4R7M35	IC	1901	HIC Module
	C	217	CEJQ4R7M35	Q	1910	Transistor
	C	218	CEJQ4R7M35	D	1902	Diode Network
	C	219	CCSRCH120J50	D	1910	LED
	C	220	CCSRCH120J50	D	1912	LED
	C	221	CCSRCH120J50	D	1914	LED
	C	222	CCSRCH120J50	D	1930	LED
	C	225	CEJQ100M16	D	1931	LED
	C	301	CKSRYB104K16	D	1932	LED
	C	306	CEJQ330M10	D	1935	LED
	C	307	CCH1486	D	1942	LED
	C	309	CKSRYB104K16	D	1943	LED
	C	310	CEJQ100M16	D	1946	LED
	C	311	CKSYB475K16	D	1947	LED
	C	312	CKSYB475K16	X	1900	Ceramic Resonator 5.00MHz
	C	317	CKSRYB474K10	S	1901	Push Switch
	C	318	CKSRYB474K10	S	1902	Push Switch
	C	319	CKSRYB474K10	S	1903	Switch
	C	320	CKSRYB474K10	S	1904	Switch
	C	321	CKSRYB474K10	S	1905	Switch
	C	322	CKSRYB474K10	S	1906	Switch
	C	323	CKSRYB474K10	S	1907	Switch
	C	324	CKSRYB474K10	S	1908	Switch
	C	325	CKSQYB225K10	S	1909	Switch
	C	326	CKSQYB225K10	S	1910	Switch
	C	351	CEJQ4R7M35	S	1911	Push Switch
	C	352	CEJQ4R7M35	S	1912	Push Switch(DEH-P350)
	C	353	CEJQ4R7M35	S	1912	Push Switch(DEH-P3500, P4550)
	C	354	CEJQ4R7M35	S	1913	Push Switch
	C	355	CEJQ4R7M35	S	1914	Push Switch(DEH-P350)
	C	356	CEJQ4R7M35	S	1914	Push Switch(DEH-P3500, P4550)
	C	401	CKSRYB103K50	S	1915	Push Switch
	C	402	CEJQ101M10	S	1916	Push Switch
	C	403	CKSQYB105K16	S	1917	Push Switch
	C	404	CKSYB475K10	S	1918	Push Switch
	C	406	CEJQ470M10	S	1950	Encoder
	C	408	CKSYB475K10	RESISTORS		
	C	409	CEJQ1R0M50			
	C	411	CCSRCH101J50	R	1900	RS1/16S222J
	C	412	CCSRCH470J50	R	1901	RS1/16S222J
	C	601	CEJQ4R7M35	R	1902	RS1/16S121J
	C	602	CKSQYB105K16	R	1903	RS1/16S2R2J
	C	603	CEJQ2R2M50	R	1910	RS1/16S101J
	C	604	CCSRCH200J50	R	1912	RS1/16S680J
	C	605	CCSRCH200J50	R	1914	RS1/16S181J
	C	609	CCSRCH101J50	R	1915	RS1/16S181J
	C	651	CEJQ101M10	R	1919	RS1/16S101J
	C	652	CKSRYB473K25	R	1930	RS1/16S560J
	C	653	CKSRYB473K25	R	1932	RS1/16S560J
	C	656	CKSRYB473K25	R	1934	RS1/16S560J
	C	657	CCSRCH470J50	R	1936	RS1/16S560J
	C	755	CKSRYB104K16	R	1938	RS1/16S151J
	C	806	CKSRYB473K25	R	1939	RS1/16S151J
	C	807	CKSRYB473K25	R	1940	RS1/16S560J
	C	811	CKSQYB105K16	R	1941	RS1/16S151J
	C	854	CKSRYB473K25	R	1942	RS1/16S0R0J
	C	911	CCH1331	R	1943	RS1/16S151J
	C	912	CKSRYB472K50	R	1950	RS1/16S472J
	C	913	CKSRYB103K50	R	1960	RS1/16S473J
	C	914	CEJQ470M10			
	C	921	CEJQ221M10			
	C	922	CKSRYB103K50			
	C	923	CEJQ101M16			
	C	931	CEJQ1R0M50			

====Circuit Symbol and No.==Part Name

Part No.

CAPACITORS

C 1900	CKSRYB104K16
C 1901	CKSYF106Z10
C 1902	CKSRYB104K16
C 1903	CKSRYB104K16
C 1904	CKSRYB104K16
C 1910	CKSRYF104Z25
C 1911	CKSRYF104Z25
C 1913	CKSRYF104Z25

B Unit Number : CWM8758
Unit Name : Panel Unit

MISCELLANEOUS

D 1970	LED	CL220PGC
S 1970	Push Switch(EJECT)	CSG1112

RESISTORS

R 1970	RS1/16S101J
R 1971	RS1/16S101J
R 1972	RS1/16S0R0J

CAPACITORS

C 1970	CKSRYB104K16
--------	--------------

D Unit Number : CWX2708
Unit Name : CD Core Unit(S10)

MISCELLANEOUS

IC 201	IC	UPD63712GC
IC 301	IC	BA5996FP
IC 701	IC	NJM2391DL1-33
Q 101	Transistor	2SB1132
D 101	Diode	1SS355
D 701	Diode	1SR154-400
X 201	Ceramic Resonator 16.934MHz	CSS1603
S 901	Spring Switch(HOME)	CSN1051
S 902	Spring Switch(CLAMP)	CSN1051
S 903	Spring Switch(DSCSNS)	CSN1052
S 904	Spring Switch(12EJ)	CSN1051
S 905	Spring Switch(8EJ)	CSN1051

RESISTORS

R 101	RS1/10S1R5J
R 102	RS1/10S1R5J
R 103	RS1/10S1R5J
R 104	RS1/10S1R5J
R 105	RS1/10S1R5J
R 201	RS1/16S102J
R 202	RS1/16S1002D
R 203	RS1/16S1002D
R 204	RS1/16S1002D
R 205	RS1/16S1002D
R 206	RS1/16S1002D
R 207	RS1/16S1002D
R 208	RS1/16S1002D
R 209	RS1/16S1002D
R 214	RS1/16S103J
R 215	RS1/16S393J
R 216	RS1/16S122J
R 217	RS1/16S562J
R 218	RS1/16S472J
R 234	RS1/16S0R0J
R 235	RS1/16S103J
R 236	RS1/16S103J
R 301	RS1/16S183J
R 302	RS1/16S822J
R 303	RS1/16S183J

====Circuit Symbol and No.==Part Name

Part No.

R 304	RS1/16S822J
R 305	RS1/16S183J
R 306	RS1/16S183J
R 307	RS1/16S183J
R 308	RS1/16S183J
R 501	RS1/16S102J
R 503	RS1/16S102J
R 505	RS1/16S102J
R 506	RS1/16S221J
R 507	RS1/16S221J
R 508	RS1/16S221J
R 509	RS1/16S221J
R 601	RS1/16S101J
R 602	RS1/16S101J
R 603	RS1/16S0R0J
R 901	RS1/16S104J
R 902	RS1/16S473J
R 903	RS1/16S273J

CAPACITORS

C 101	CKSRYB104K16
C 102	CKSRYB104K16
C 103	100μF/16V
C 104	47μF/6.3V
C 106	CCH1504
	CCH1506
	CCSRCH101J50
C 108	CKSRYB224K16
C 109	CKSRYB224K16
C 201	CKSRYB104K16
C 202	CKSRYB471K50
C 203	CKSRYB104K16

C 205	22μF/6.3V	CCH1507
C 206		CKSRYB103K25
C 207		CKSRYB104K16
C 208	100μF/6.3V	CCH1505
C 209		CKSRYB104K16

C 210	CKSRYB104K16
C 211	CKSRYB104K16
C 212	CKSRYB104K16
C 213	CKSRYB332K50
C 214	CKSRYB473K25

C 215	CKSRYB104K16
C 216	CKSRYB103K25
C 217	CCSRCH560J50
C 218	CCSRCH5R0C50
C 219	CKSRYB104K16

C 220	CKSRYB104K16
C 221	CKSRYB104K16
C 222	CKSRYB103K25
C 223	CCSRCH680J50
C 224	CCSRCH470J50

C 225	CKSRYB682K50
C 231	CKSRYB102K50
C 232	CKSRYB102K50
C 301	100μF/16V
C 302	CCH1504
	CCSRCH221J50

C 303	CCSRCH221J50
C 304	CKSRYB472K50
C 305	CKSRYB103K25
C 306	CKSRYB104K16
C 501	CKSRYB103K25

C 502	CKSRYB103K25
C 702	100μF/16V
C 703	CCH1504
C 704	CKSRYB224K16
C 705	CKSRYB104K16
	CCH1470

Miscellaneous Parts List

M 1	Pickup Unit(Service)(P10)	CXX1641
M 2	Motor Unit(SPINDLE)	CXB6007
	Motor Unit(LOADING/CARRIAGE)	CXB8933