
EXPLODED VIEW (DVD MECHANISM)


A	ADJUSTMENT	: N09-4495-05
B	ϕ2x5	: N09-4496-05
C	M1.7x1.8	: N09-6060-05
D	M1.7x3.5	: N09-6061-05
E	M1.7x3.5	: N09-6103-05
F	ϕ2x10	: N09-6104-05
G	M1.7x2.5	: N09-6106-05
J	WASHER	: N19-2022-04
K	WASHER	: N19-2171-04

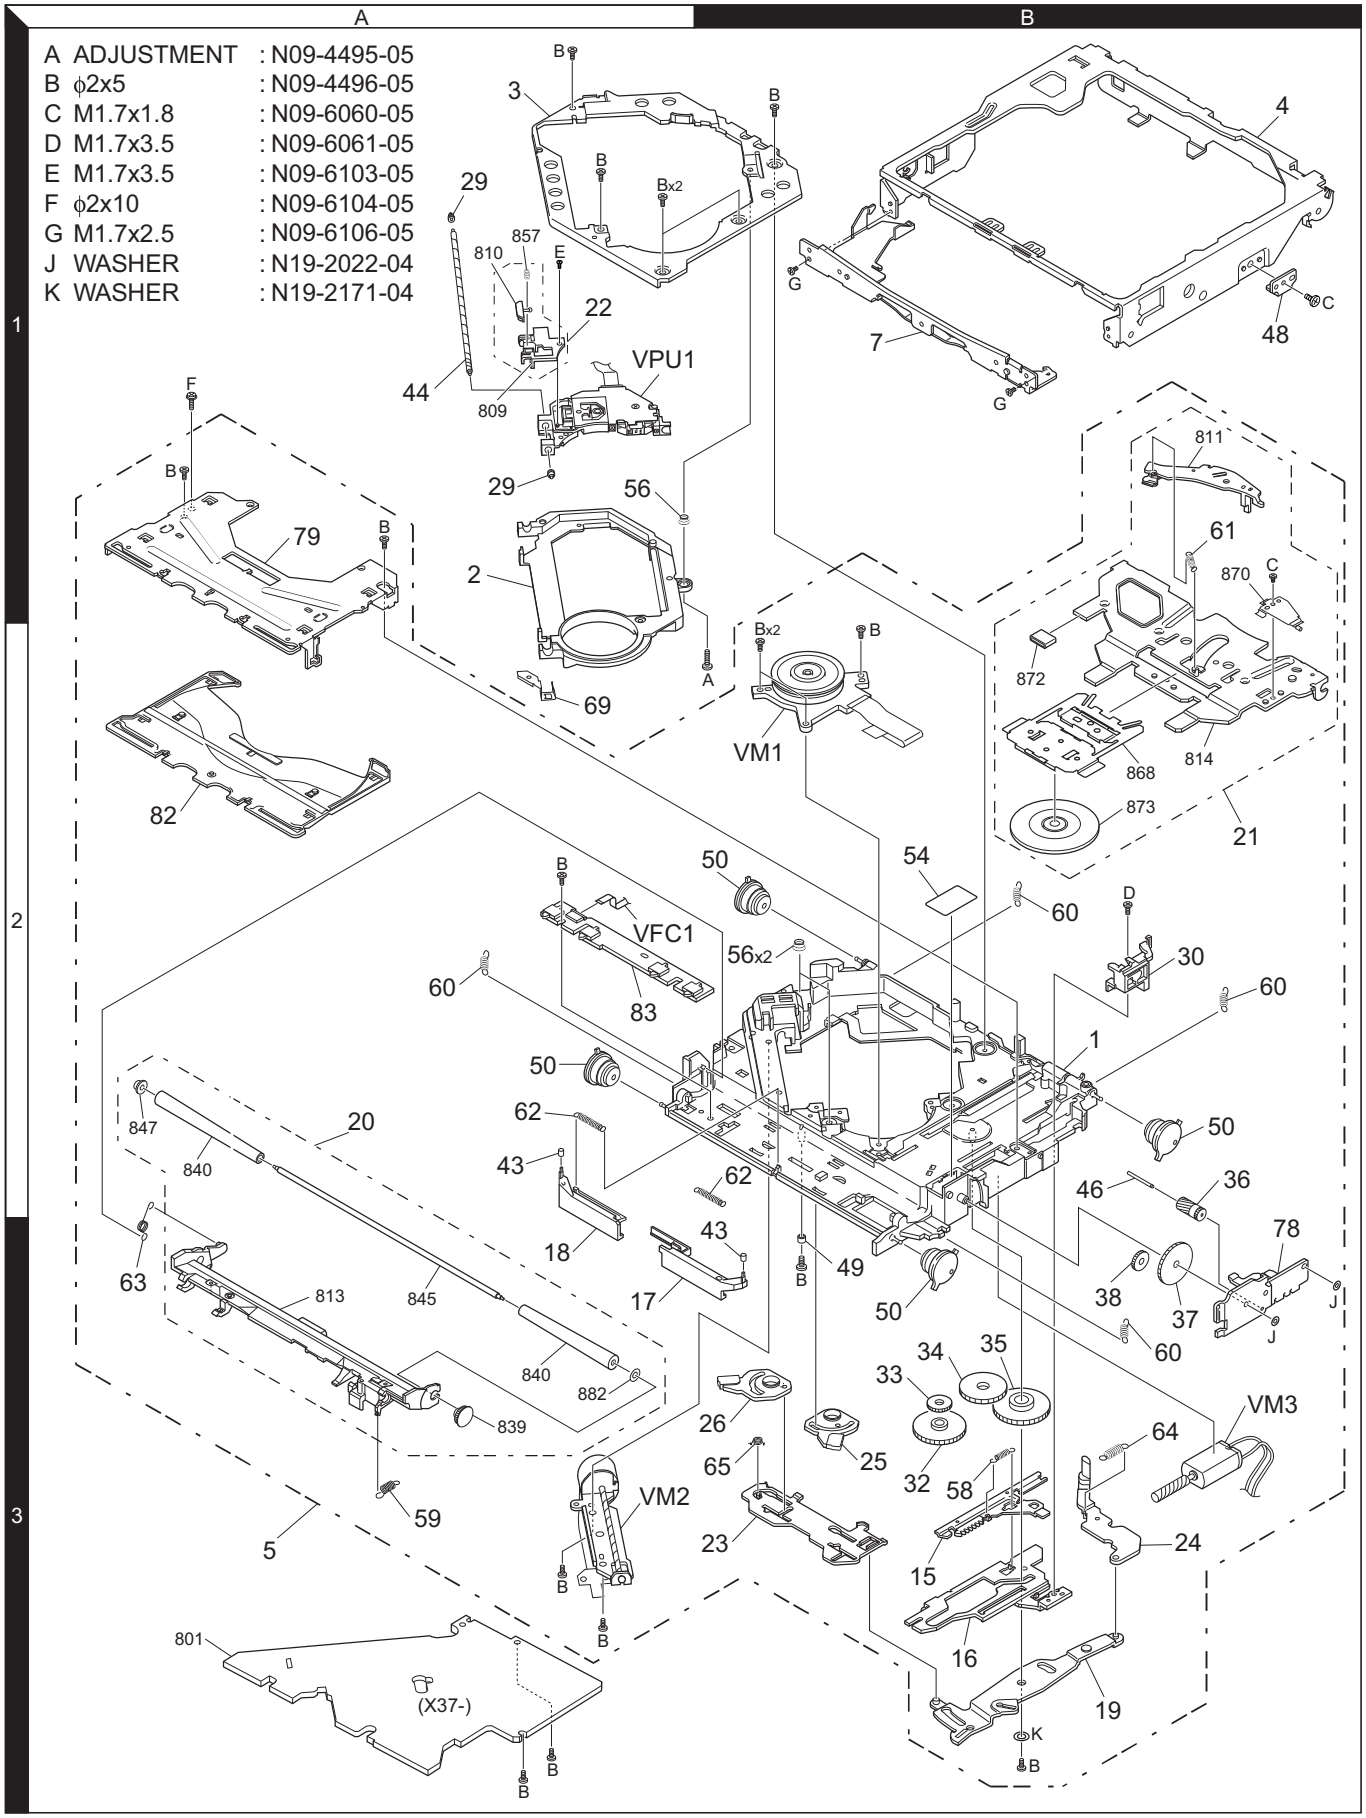

Parts with the exploded numbers larger than 700 are not supplied.


EXPLODED VIEW (UNIT)

F	M2X3(BLK)	:N09-6232-05
H	M2X5	:N09-6124-05
J	ϕ2x4	:N09-6125-05
K	ϕ1.6x3.2 WASHER	:N19-2022-04
N	ϕ2.6x3	:N35-2603-41
P	ϕ2x5	:N80-2005-46
Q	ϕ2x8(BLK)	:N80-2008-43
R	ϕ2x6	:N82-2006-48
S	ϕ2x8(BLK)	:N82-2008-43
T	ϕ2.6x8	:N89-2608-46
U	ϕ2x5	:N80-2005-48

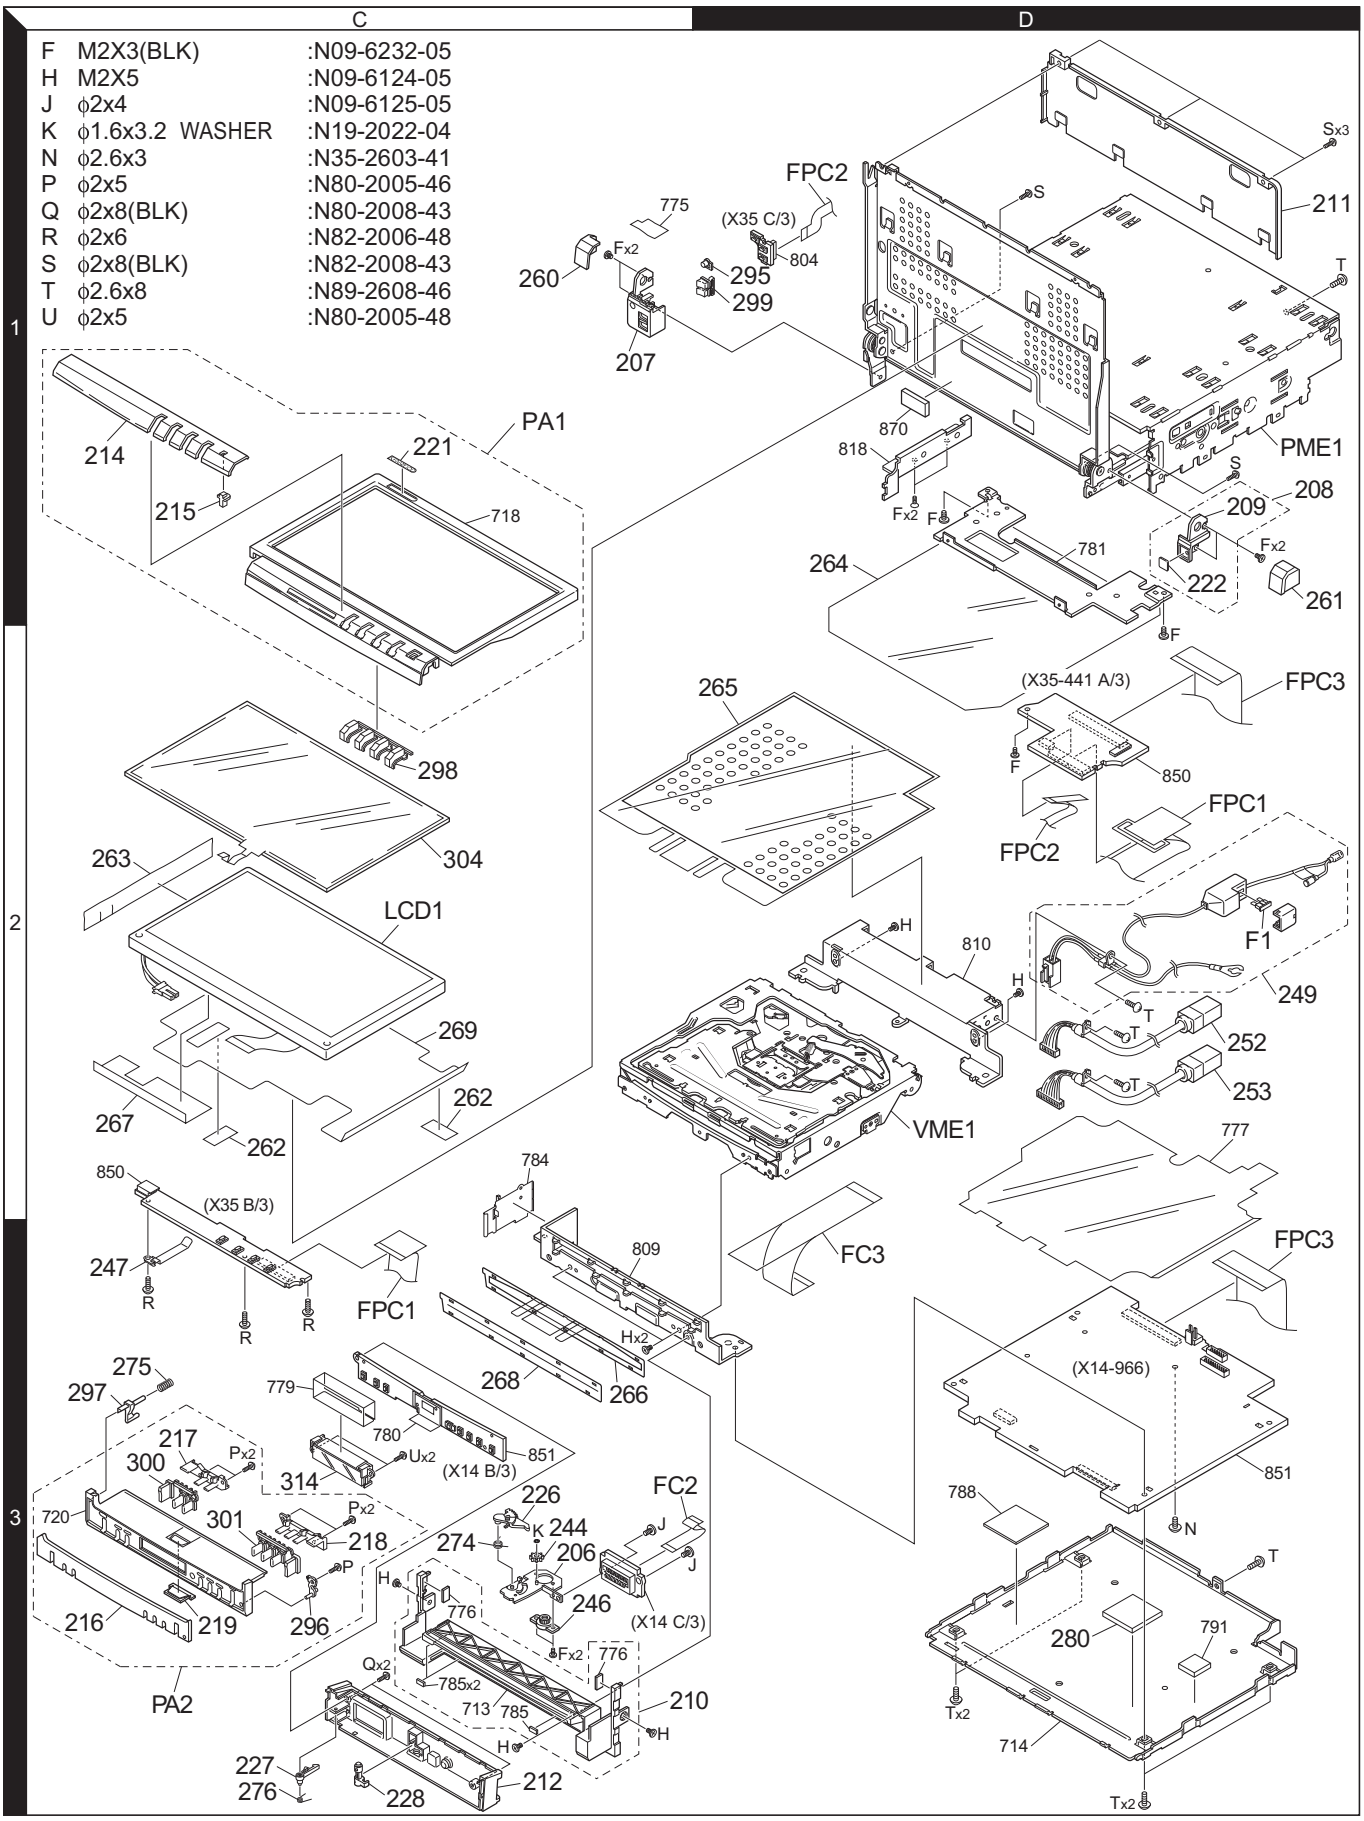


EXPLODED VIEW (PANEL MECHANISM)

A	STEPPED SCREW	:N09-6062-15
B	M2X2.2(BLK)	:N09-6063-25
C	M2X3.5(BLK)	:N09-6064-25
D	M1.7X2.5	:N09-6065-25
E	STEPPED SCREW	:N09-6066-25
G	M1.7X2.2	:N09-6111-25
L	WASHER	:N19-2127-14
M	RETAINING RING	:N29-0206-04

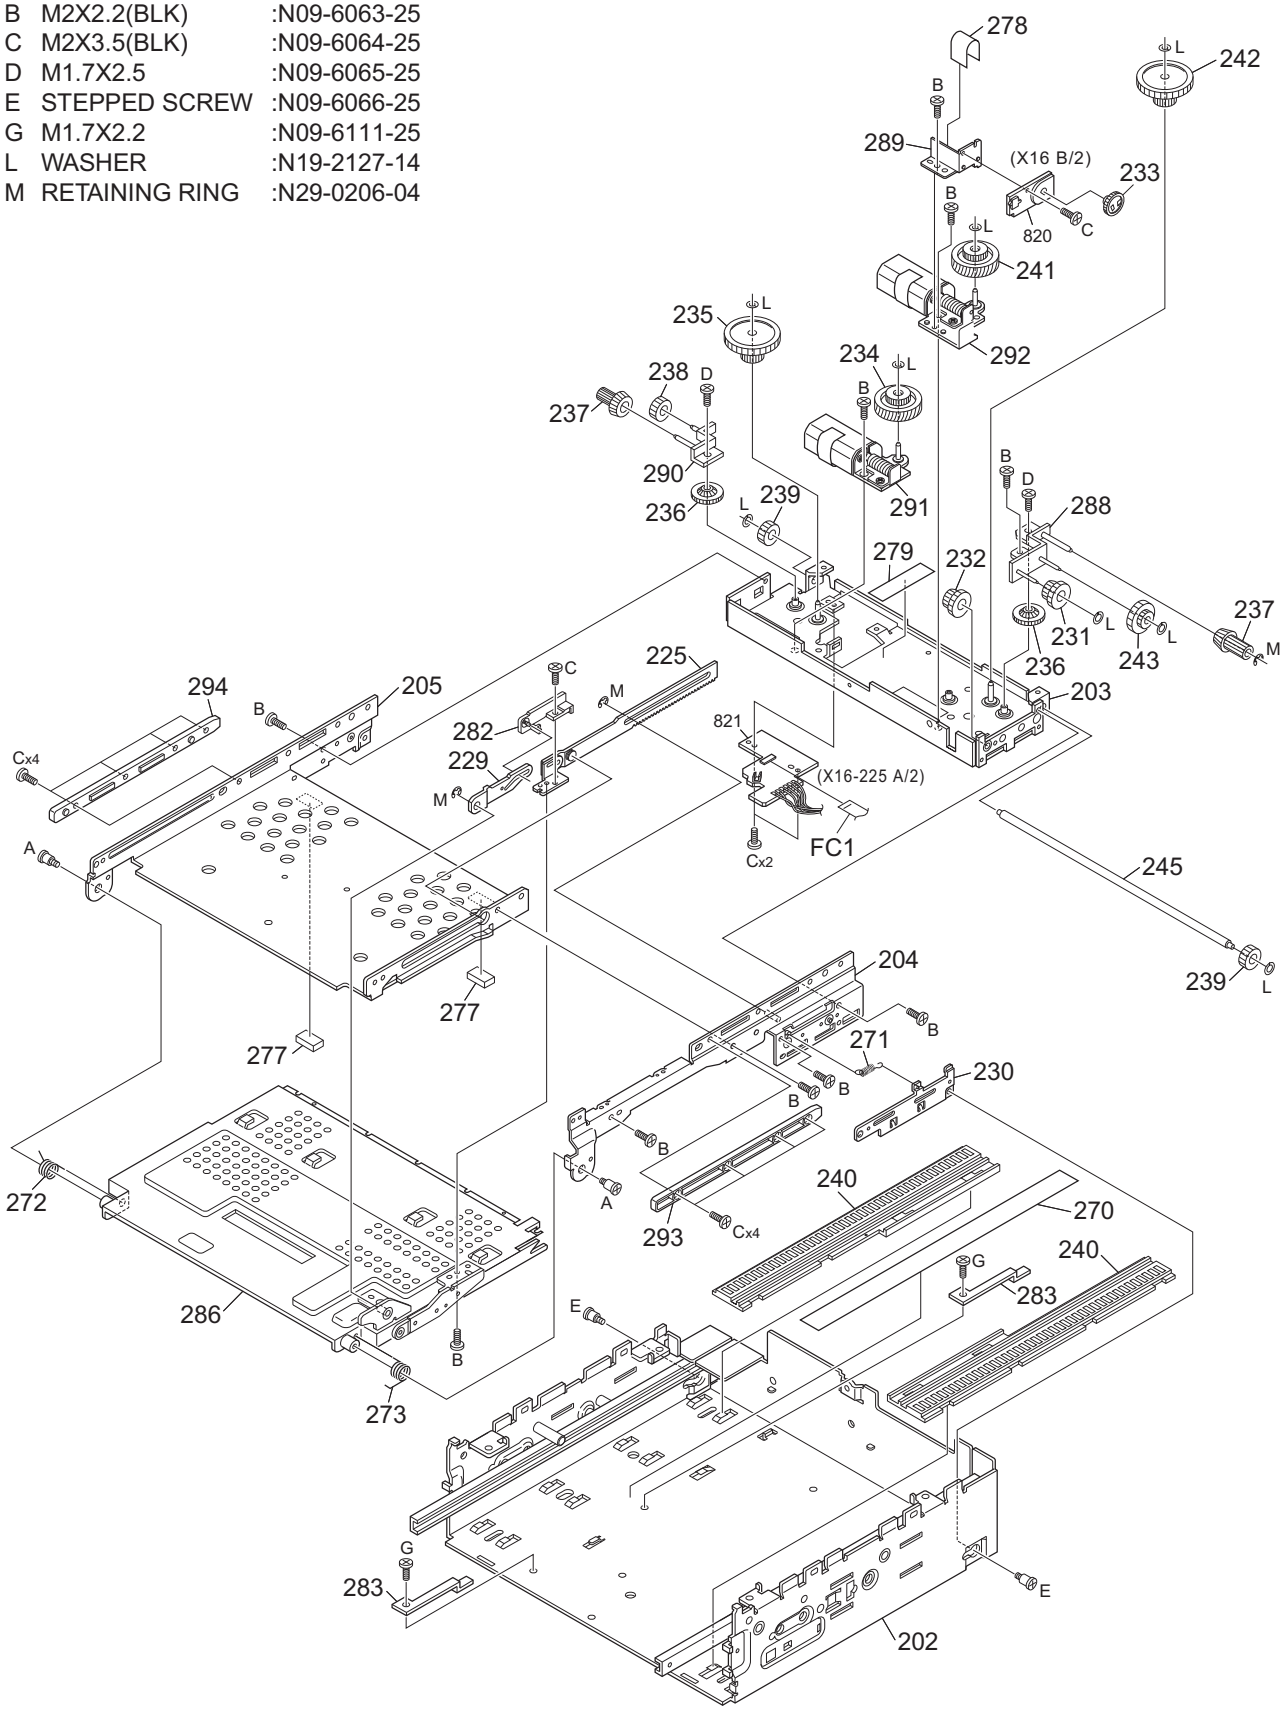

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (AMP UNIT / ACCESSORIES)

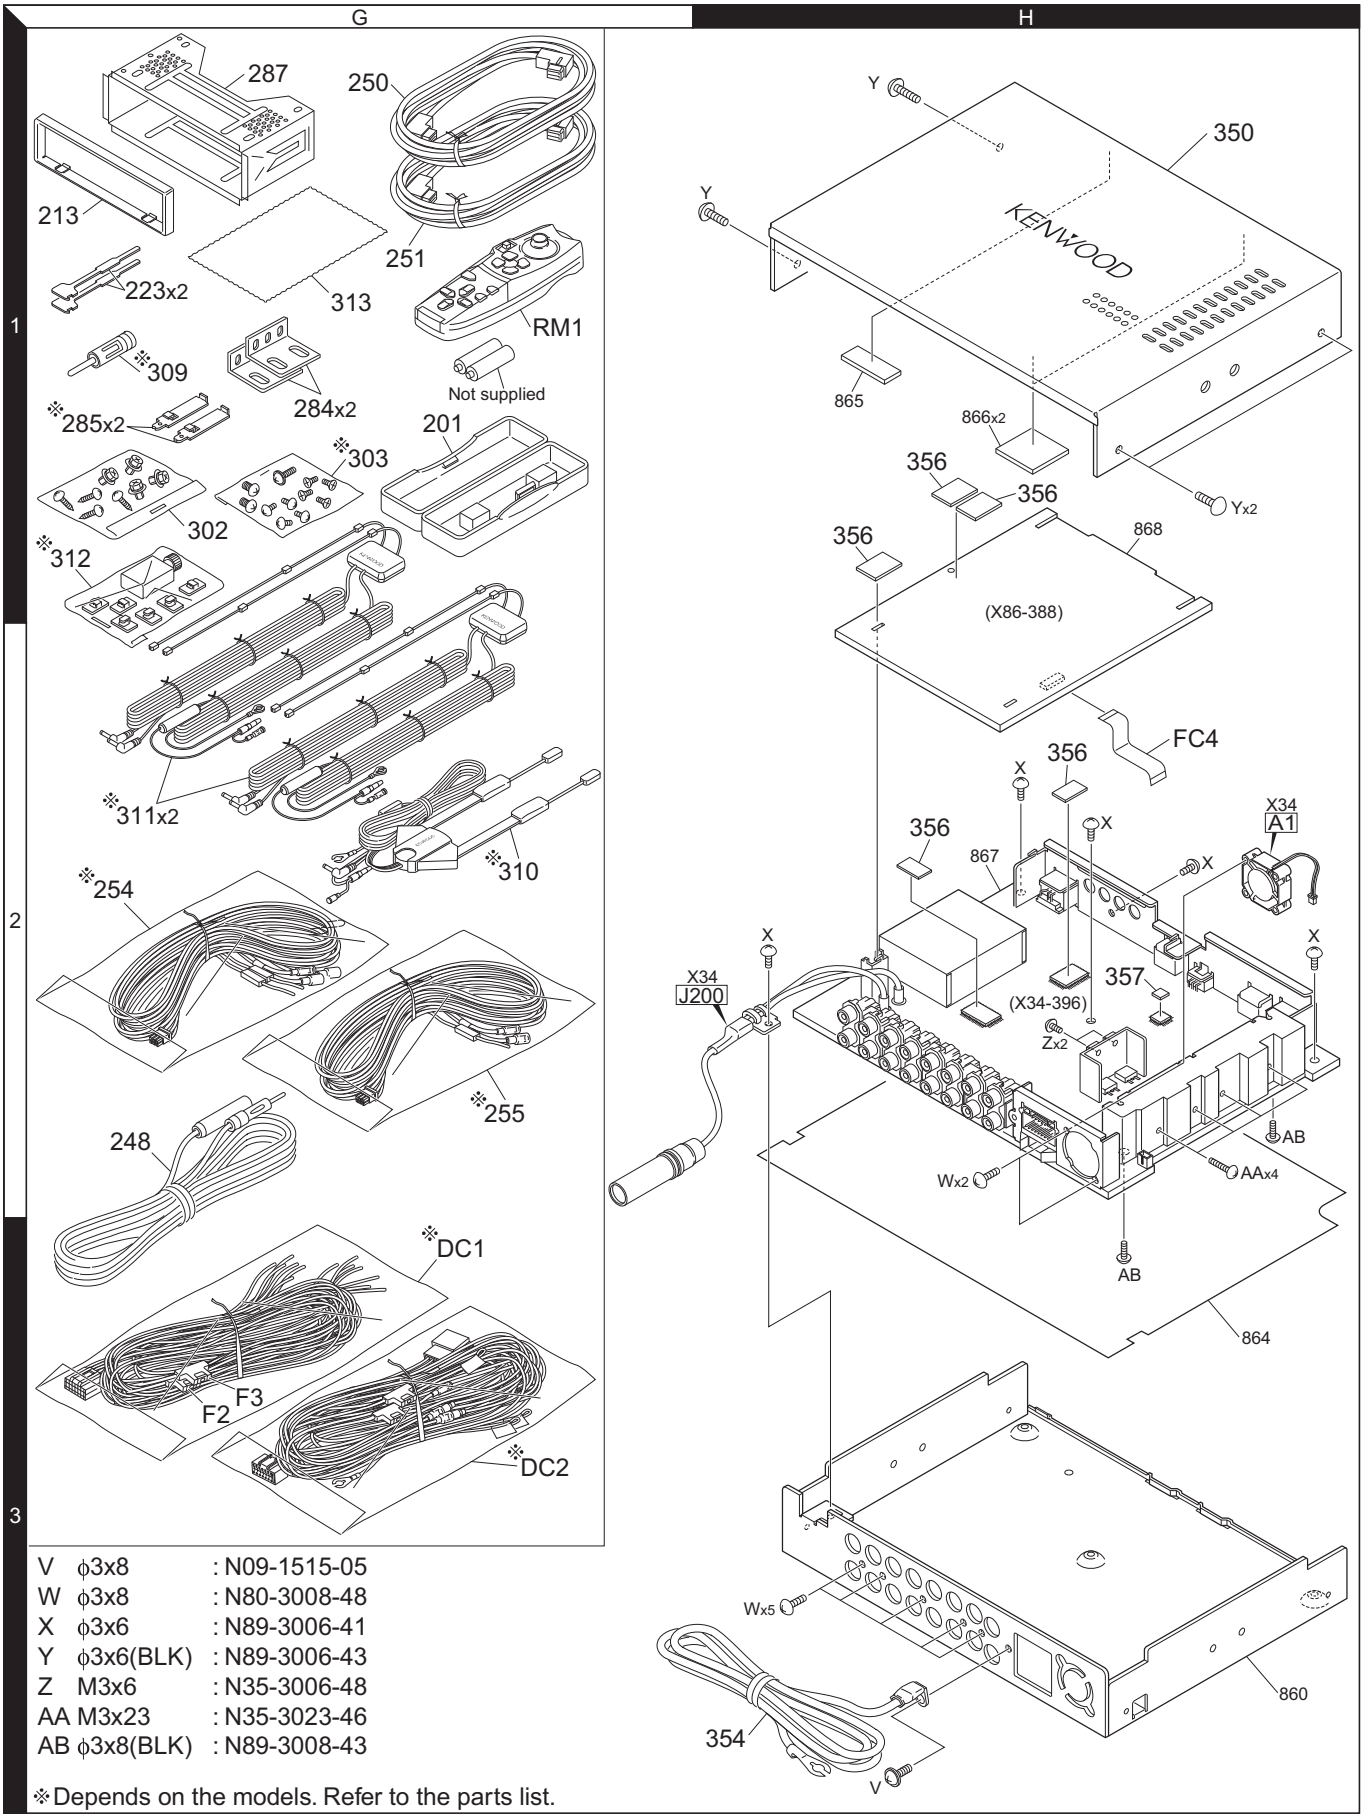

V	ϕ3x8	: N09-1515-05
W	ϕ3x8	: N80-3008-48
X	ϕ3x6	: N89-3006-41
Y	ϕ3x6(BLK)	: N89-3006-43
Z	M3x6	: N35-3006-48
AA	M3x23	: N35-3023-46
AB	ϕ3x8(BLK)	: N89-3008-43

※Depends on the models. Refer to the parts list.

Parts with the exploded numbers larger than 700 are not supplied.

XXV-05V

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
XXV-05V					
201	1G		A02-2723-03	PLASTIC CABINET ASSY	
202	3F		A10-5009-32	CHASSIS CALKING ASSY	
203	2F	✻	A10-5013-23	CHASSIS CALKING ASSY	
204	2F		A10-5015-33	CHASSIS CALKING ASSY	
205	2E	✻	A10-5018-32	CHASSIS	
206	3C		A11-1622-04	SUB CHASSIS CALKING ASSY	
207	1C	✻	A21-4553-02	DRESSING PANEL	
208	1D	✻	A21-4554-04	DRESSING PANEL ASSY	
209	1D	✻	A21-4555-03	DRESSING PANEL	
210	3C	✻	A22-3084-02	SUB PANEL ASSY	
211	1D		A46-1776-02	REAR COVER	
212	3C		A46-1785-11	REAR COVER	
PA1	1C	✻	A64-3679-01	PANEL ASSY	K
PA1	1C	✻	A64-3680-01	PANEL ASSY	EWM
PA1	1C	✻	A64-3691-01	PANEL ASSY	R
PA2	3C	✻	A64-3677-02	PANEL ASSY	EWM
PA2	3C	✻	A64-3683-02	PANEL ASSY	KR
PME1	1D	✻	A10-5206-21	CHASSIS ASSY	
RM1	1G		A70-2046-05	REMOTE CONTROLLER ASSY	
-			B46-0100-50	WARRANTY CARD	
-			B46-0606-04	ID CARD	KRM
-			B46-0612-14	ID CARD	EW
-		✻	B46-0665-04	USER CARD	K
-		✻	B46-0668-04	USER CARD	R
-		✻	B46-0669-04	USER CARD	E
-		✻	B46-0670-04	USER CARD	W
-		✻	B46-0671-04	USER CARD	M
-			B58-1370-04	CAUTION CARD	
-			B58-1411-04	CAUTION CARD	EW
-		✻	B64-3071-00	INSTRUCTION MANUAL (ENGLISH)	KR
-		✻	B64-3072-00	INSTRUCTION MANUAL (FRENCH)	K
-		✻	B64-3073-00	INSTRUCTION MANUAL (SPANISH)	KR
-		✻	B64-3074-00	INSTRUCTION MANUAL (PORTUGUESE)	R
-		✻	B64-3075-00	INSTRUCTION MANUAL (ENGLISH)	M
-		✻	B64-3076-00	INSTRUCTION MANUAL (T-CHI)	M
-		✻	B64-3077-00	INSTRUCTION MANUAL (KOREAN)	M
-		✻	B64-3078-00	INSTRUCTION MANUAL (ENGLISH)	E
-		✻	B64-3079-00	INSTRUCTION MANUAL (FRENCH)	E
-		✻	B64-3080-00	INSTRUCTION MANUAL (GERMAN)	E
-		✻	B64-3081-00	INSTRUCTION MANUAL (DUTCH)	E
-		✻	B64-3082-00	INSTRUCTION MANUAL (ITALIAN)	W
-		✻	B64-3083-00	INSTRUCTION MANUAL (SPANIAN)	E
-		✻	B64-3084-00	INSTRUCTION MANUAL (PORTUGUESE)	E
213	1G		B07-3057-02	ESCUTCHEON	
214	1C	✻	B07-3156-02	ESCUTCHEON	
215	1C		B10-4404-04	FRONT GLASS	
216	3C	✻	B10-4718-02	FRONT GLASS	EWM
216	3C	✻	B10-4719-02	FRONT GLASS	KR
217	3C		B19-2217-13	LIGHTING BOARD	
218	3C		B19-2218-13	LIGHTING BOARD	
219	3C		B19-2219-04	LIGHTING BOARD	
221	1C		B43-1527-04	BADGE	
222	1C	✻	B43-1534-04	BADGE	

Ref. No.	Add	New	Parts No.	Description	Destination
LCD1	2C		B38-1122-15	LCD	
223	1G		D10-4674-04	LEVER	
225	2F		D10-4703-23	ARM ASSY	
226	3C		D10-4727-03	ARM	
227	3C		D10-4728-04	ARM	
228	3C		D10-4729-04	LEVER	
229	2E		D10-4733-23	ARM	
230	2F	✻	D10-4761-24	LEVER ASSY	
231	2F		D13-2251-14	GEAR	
232	2F		D13-2252-14	GEAR	
233	1F		D13-2253-14	GEAR	
234	1F		D13-2256-14	GEAR	
235	1F		D13-2257-14	GEAR	
236	1F		D13-2258-24	GEAR	
237	1E		D13-2259-24	GEAR	
238	1F		D13-2260-14	GEAR	
239	1F		D13-2261-14	GEAR	
240	3F		D13-2262-23	RACK (GEAR)	
241	1F		D13-2263-14	GEAR	
242	1F		D13-2264-14	GEAR	
243	2F		D13-2265-14	GEAR	
244	3C		D13-2280-04	GEAR	
245	2F	✻	D21-2416-23	SHAFT	
246	3C		D39-0239-05	DAMPER	
247	3C		E29-1924-04	LEAD PLATE	
248	2G		E30-6453-05	CORD WITH PLUG	
⚠ 249	2D		E30-6164-15	DC CORD	
250	1G		E30-6171-05	CORD WITH CONNECTOR	
251	1G		E30-6172-05	CORD WITH CONNECTOR	
252	2D		E30-6173-05	CORD WITH CONNECTOR	
253	2D		E30-6174-05	CORD WITH CONNECTOR	
254	2G		E30-6197-25	CORD WITH CONNECTOR	EW
255	2G		E30-6241-25	CORD WITH CONNECTOR	KRM
⚠ DC1	3G		E30-6195-05	DC CORD	KRM
⚠ DC2	3G	✻	E30-6196-25	DC CORD	EW
FC1	2F		E39-0537-15	FLAT CABLE	
FC2	3C		E39-0549-15	FLAT CABLE	
FC3	3D		E39-0550-05	FLAT CABLE	
260	1C	✻	F07-1160-03	COVER	
261	1D	✻	F07-1161-03	COVER	
262	2C	✻	F09-1850-04	SHEET	
263	2C		F09-1802-04	SHEET	
264	1D		F09-1832-24	SHEET	
265	2D		F09-1833-33	SHEET	
266	3C		F09-1873-04	SHEET	
267	2C		F12-0775-04	SHIELDING SHEET	
268	3C		F19-1408-23	BLIND PLATE	
269	2C		F20-2235-14	INSULATING SHEET	
270	3F	✻	F20-2240-14	INSULATING SHEET	
⚠ F1	2D		F52-0004-05	FUSE (5A)	
⚠ F2	2G		F52-0002-05	FUSE (3A) ACC	
⚠ F3	2G		F52-0006-05	FUSE (10A) BU	
271	2F		G01-3152-14	EXTENSION SPRING	

W : Italy **E** : Europe without Italy **K** : North America
R : Latin America **M** : Other Areas

⚠ Indicates safety critical components.

PARTS LIST

XXV-05V

Ref. No.	Add	New	Parts No.	Description	Destination
272	3E		G01-3153-14	TORSION COIL SPRING	
273	3E		G01-3161-14	TORSION COIL SPRING	
274	3C		G01-3168-04	TORSION COIL SPRING	
275	3C		G01-3169-14	COMPRESSION SPRING	
276	3C		G01-3170-04	TORSION COIL SPRING	
277	2E	✻	G11-3512-14	CUSHION	
278	1F	✻	G16-1452-14	SHEET	
279	2F	✻	G16-1453-14	SHEET	
280	3D		G16-1465-24	SHEET	
-			H02-0832-03	INNER CARTON CASE	
-			H12-2724-03	PACKING FIXTURE	
-			H12-2725-14	PACKING FIXTURE	
-			H13-2004-04	CARTON BOARD	
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-			H25-0338-04	PROTECTION BAG (250X350X0.03)	
-			H25-1115-04	PROTECTION BAG	E
-			H25-1132-04	PROTECTION BAG (0.3X280X450)	KRW
-			H25-1132-04	PROTECTION BAG (0.3X280X450)	M
-		✻	H54-3488-03	ITEM CARTON CASE	K
-		✻	H54-3489-03	ITEM CARTON CASE	EW
-		✻	H54-3491-03	ITEM CARTON CASE	M
-		✻	H54-3492-03	ITEM CARTON CASE	R
282	2E		J19-5207-23	HOLDER	
283	3E	✻	J19-5235-14	HOLDER	
284	1G		J21-3801-04	MOUNTING HARDWARE	
285	1G		J21-9784-04	MOUNTING HARDWARE	KRM
286	3E		J21-9916-32	MOUNTING HARDWARE ASSY	
287	1G		J21-9823-03	MOUNTING HARDWARE ASSY	
288	1F	✻	J21-9947-14	MOUNTING HARDWARE ASSY	
289	1F	✻	J21-9949-14	MOUNTING HARDWARE	
290	1F	✻	J21-9984-14	MOUNTING HARDWARE ASSY	
291	1F	✻	J21-9986-23	MOUNTING HARDWARE ASSY	
292	1F	✻	J21-9987-23	MOUNTING HARDWARE ASSY	
293	3F		J90-1053-13	GUIDE	
294	2E		J90-1064-13	GUIDE	
FPC1	2D		J84-0150-05	FLEXIBLE PRINTED WIRING BOARD	
FPC2	2D		J84-0151-05	FLEXIBLE PRINTED WIRING BOARD	
FPC3	2D		J84-0158-15	FLEXIBLE PRINTED WIRING BOARD	
295	1D		K24-4145-04	PUSH KNOB (OPEN)	
296	3C	✻	K24-4393-04	PUSH KNOB (RESET)	
297	3C	✻	K24-4394-04	PUSH KNOB (REMOVE)	
298	2C	✻	K25-1552-13	PUSH KNOB (TI)	
299	1D		K25-1637-04	PUSH KNOB (VOL)	
300	3C	✻	K25-1761-03	PUSH KNOB (EJECT)	
301	3C	✻	K25-1762-03	PUSH KNOB (SRC)	
302	1G		N99-1753-05	SCREW SET	
303	1G		N99-1723-05	SCREW SET	KRM
A	2E		N09-6062-15	STEPPED SCREW	
B	3E	✻	N09-6063-25	MACHINE SCREW (M2X2.2)	
C	3F	✻	N09-6064-25	MACHINE SCREW (M2X3.5)	
D	1F	✻	N09-6065-25	MACHINE SCREW (M1.7X2.5)	
E	3F	✻	N09-6066-25	STEPPED SCREW	
F	1D		N09-6232-05	MACHINE SCREW (M2.0X3.0)	
G	3F	✻	N09-6111-25	MACHINE SCREW	
H	2D		N09-6124-05	MACHINE SCREW (M2.6X3)	
J	3C		N09-6125-05	TAPTITE SCREW (P2X4)	
K	3C		N19-2022-04	FLAT WASHER	
L	2F		N19-2127-14	FLAT WASHER	
M	2F		N29-0206-04	RETAINING RING (2)	
N	3D		N35-2603-41	BINDING HEAD MACHINE SCREW	
P	3C		N80-2005-46	PAN HEAD TAPTITE SCREW	
Q	3C		N80-2008-43	PAN HEAD TAPTITE SCREW	
R	3C		N82-2006-48	BINDING HEAD TAPTITE SCREW	
S	1D		N82-2008-43	BINDING HEAD TAPTITE SCREW	
T	2D		N89-2608-46	BINDING HEAD TAPTITE SCREW	
U	3C		N80-2005-48	PAN HEAD TAPTITE SCREW	
304	1C		S79-0845-05	SWITCH ASSY	
309	1G		T90-0552-05	ANTENNA ADAPTOR	EW
310	3G		T90-0545-05	ANTENNA ASSY	M
311	3G		T90-0551-15	ANTENNA ASSY	KRE
311	3G		T90-0551-15	ANTENNA ASSY	W
312	2G		W01-1552-05	ACCESSORIES	M
313	1G	✻	W01-1649-05	CLEANING CLOTH	
314	3C		W02-3401-25	ELECTRIC CIRCUIT MODULE	
VME1	2D		X92-5150-00	DVD MECHANISM ASSY	

XXV-05V (RECEIVER UNIT)

350	1H		A01-2813-01	METALLIC CABINET			
354	3H		E30-4972-15	GROUND WIRE			
FC4	2H		E39-0555-05	FLAT CABLE			
356	1H	✻	F12-0908-04	SHIELDING SHEET			
357	2H	✻	F12-0915-04	SHIELDING SHEET			
-			H25-0329-04	PROTECTION BAG (280X450X0.03)			KRM
-			H25-1111-04	PROTECTION BAG (280X450X0.03)			EW
V	3H		N09-1515-05	TAPPING SCREW (3X8)			
W	3H		N80-3008-48	PAN HEAD TAPTITE SCREW			
X	2H		N89-3006-41	BINDING HEAD TAPTITE SCREW			
Y	1H		N89-3006-43	BINDING HEAD TAPTITE SCREW			

VIDEO CONTROL UNIT (X14-966x-xx)

D301			B30-1658-05	LED (RED,S)		
D304			B30-1462-05	LED		
D305			B30-1523-05	LED		
C100		✻	C90-6757-05	ELECTRO	2200UF	16WV
C101			CK73GB1H562K	CHIP C	5600PF	K
C102-104			CK73GB1C224K	CHIP C	0.22UF	K
C105,106			CK73GB1H472K	CHIP C	4700PF	K
C107-118			CK73GB1H104K	CHIP C	0.10UF	K
C119,120			CK73GB1H472K	CHIP C	4700PF	K
C121			CK73GB1H104K	CHIP C	0.10UF	K
C122			C92-0667-05	ELECTRO	10UF	10WV
C123			C92-1775-05	CHIP-TAN	10UF	6.3WV
C124			CK73GB1H104K	CHIP C	0.10UF	K
C125,126			CE32AU1A560M	CHIP EL	56UF	10WV
C127,128			CE32AU0G331M	CHIP EL	330UF	4.0WV

W : Italy **E** : Europe without Italy **K** : North America
R : Latin America **M** : Other Areas

⚠ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X14-966x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
C129			CE32AU1C390M	CHIP EL	39UF	16WV	
C130			CK73DF1C106Z	CHIP C	10UF	Z	
C131			CC73GCH1H391J	CHIP C	390PF	J	
C132,133			C92-1766-05	ELECTRO	22UF	12.5WV	
C134			C92-1610-05	ELECTRO	220UF	16WV	
C135,136			CK73GB1H103K	CHIP C	0.010UF	K	
C137,138			C93-1210-05	CHIP C	10UF	K	
C139,140			CK73GB1H104K	CHIP C	0.10UF	K	
C141-144			C93-1210-05	CHIP C	10UF	K	
C145-147			CK73GB1H104K	CHIP C	0.10UF	K	
C148			CK73GB1H103K	CHIP C	0.010UF	K	
C149			CK73FB1C105K	CHIP C	1.0UF	K	
C150			CK73GB1H104K	CHIP C	0.10UF	K	
C151-153			CK73GB1H471K	CHIP C	470PF	K	
C154			CK73GB1H272K	CHIP C	2700PF	K	
C155			C92-1428-05	ELECTRO	330UF	6.3WV	
C156-159			CK73GB1H104K	CHIP C	0.10UF	K	
C160			CK73GB1H103K	CHIP C	0.010UF	K	
C200,201			CK73GB1H103K	CHIP C	0.010UF	K	
C202			CC73GCH1H220J	CHIP C	22PF	J	
C203			CC73GCH1H080D	CHIP C	8.0PF	D	
C204			C92-1359-05	CHIP-TAN	10UF	16WV	
C205-210			CK73GB1H103K	CHIP C	0.010UF	K	
C211			CK73FB1C105K	CHIP C	1.0UF	K	
C212-214			CK73GB1H103K	CHIP C	0.010UF	K	
C215			CC73GCH1H220J	CHIP C	22PF	J	
C216			CK73GB1C224K	CHIP C	0.22UF	K	
C217,218			CK73FB1C105K	CHIP C	1.0UF	K	
C219			CK73GB1H103K	CHIP C	0.010UF	K	
C220			CK73GB1H104K	CHIP C	0.10UF	K	
C221,222			CC73GCH1H101J	CHIP C	100PF	J	
C223			CK73GB1H103K	CHIP C	0.010UF	K	
C224,225			CK73GB1H104K	CHIP C	0.10UF	K	
C226-228			CK73GB1H103K	CHIP C	0.010UF	K	
C300			CK73GB1H221K	CHIP C	220PF	K	
C301			CK73FB1A225K	CHIP C	2.2UF	K	
C302-317			CC73GCH1H101J	CHIP C	100PF	J	
C322			CC73GCH1H101J	CHIP C	100PF	J	
C351-354			CC73GCH1H101J	CHIP C	100PF	J	
C355,356			CK73GB1A105K	CHIP C	1.0UF	K	
C400			C92-1359-05	CHIP-TAN	10UF	16WV	
C401-403			CK73GB1H103K	CHIP C	0.010UF	K	
C404			CK73GB1H104K	CHIP C	0.10UF	K	
C405			CK73FB1C105K	CHIP C	1.0UF	K	
C406			CK73DF1C106Z	CHIP C	10UF	Z	
C407			CK73GB1H103K	CHIP C	0.010UF	K	
C408,409			CK73FB1C105K	CHIP C	1.0UF	K	
C410			CK73EB1A475K	CHIP C	4.7UF	K	
C411			CC73GCH1H331J	CHIP C	330PF	J	
C412-414			CK73GB1H104K	CHIP C	0.10UF	K	
C415			CK73EB1A475K	CHIP C	4.7UF	K	
C416,417			CK73GB1H103K	CHIP C	0.010UF	K	
C418			CK73DF1E106Z	CHIP C	10UF	Z	
C419-422			CK73GB1H103K	CHIP C	0.010UF	K	
C423			CK73GB1H102K	CHIP C	1000PF	K	

Ref. No.	Add	New	Parts No.	Description			Destination
C424			CK73GB1H103K	CHIP C	0.010UF	K	
C425,426			CK73GB1C683K	CHIP C	0.068UF	K	
C427,428			CK73GB1H103K	CHIP C	0.010UF	K	
C429			CK73DF1C106Z	CHIP C	10UF	Z	
C430			CK73GB1C683K	CHIP C	0.068UF	K	
C431,432			CK73GB1H104K	CHIP C	0.10UF	K	
C500-502			CK73GB1H104K	CHIP C	0.10UF	K	
C503			CK73GB1A334K	CHIP C	0.33UF	K	
C504			CK73GB1H104K	CHIP C	0.10UF	K	
C505,506			CK73FB1C105K	CHIP C	1.0UF	K	
C507			CK73GB1A334K	CHIP C	0.33UF	K	
C508			CK73GB1H104K	CHIP C	0.10UF	K	
C509			CC73GCH1H681J	CHIP C	680PF	J	
C510			CC73GCH1H101J	CHIP C	100PF	J	
C511			CK73GB1C683K	CHIP C	0.068UF	K	
C512,513			CK73FB1C105K	CHIP C	1.0UF	K	
C514-516			CK73GB1H104K	CHIP C	0.10UF	K	
C517			C92-0628-05	CHIP-TAN	10UF	10WV	
C518,519			CK73GB1H104K	CHIP C	0.10UF	K	
C520			C92-0628-05	CHIP-TAN	10UF	10WV	
C521-534			CK73GB1H104K	CHIP C	0.10UF	K	
C535			C92-1359-05	CHIP-TAN	10UF	16WV	
C536,537			CK73GB1H104K	CHIP C	0.10UF	K	
C538			C92-1359-05	CHIP-TAN	10UF	16WV	
C539,540			CK73GB1H104K	CHIP C	0.10UF	K	
C541,542			CC73GCH1H471J	CHIP C	470PF	J	
C543-556			CK73GB1H104K	CHIP C	0.10UF	K	
C557			C92-1359-05	CHIP-TAN	10UF	16WV	
C558			CK73GB1H104K	CHIP C	0.10UF	K	
C559			CC73GCH1H331J	CHIP C	330PF	J	
C560			CC73GCH1H101J	CHIP C	100PF	J	
C561			CK73GB1H104K	CHIP C	0.10UF	K	
C562			CK73FB1C105K	CHIP C	1.0UF	K	
C564			CK73GB1H104K	CHIP C	0.10UF	K	
C568			CK73GB1H104K	CHIP C	0.10UF	K	
C569			CK73FB1C105K	CHIP C	1.0UF	K	
C570			CK73GB1H153K	CHIP C	0.015UF	K	
C571			CK73EB1A475K	CHIP C	4.7UF	K	
C572			CC73GCH1H151J	CHIP C	150PF	J	
C573			CC73GCH1H102J	CHIP C	1000PF	J	
C575			C92-1359-05	CHIP-TAN	10UF	16WV	
C576			CK73GB1H104K	CHIP C	0.10UF	K	
C579			CC73GCH1H471J	CHIP C	470PF	J	
C580-584			CK73GB1H104K	CHIP C	0.10UF	K	
C586,587			CK73GB1H104K	CHIP C	0.10UF	K	
C589			CK73GB1H104K	CHIP C	0.10UF	K	
C590			C92-1359-05	CHIP-TAN	10UF	16WV	
C591			CK73GB1H104K	CHIP C	0.10UF	K	
C592			CC73GCH1H471J	CHIP C	470PF	J	
C593			CK73GB1H104K	CHIP C	0.10UF	K	
C594,595			C92-0628-05	CHIP-TAN	10UF	10WV	
C596-598			CK73FB1C105K	CHIP C	1.0UF	K	
C599-607			CK73GB1H104K	CHIP C	0.10UF	K	
C608			C92-0628-05	CHIP-TAN	10UF	10WV	
C609-618			CK73GB1H104K	CHIP C	0.10UF	K	

W : Italy **E** : Europe without Italy **K** : North America
R : Latin America **M** : Other Areas

⚠ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X14-966x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
C619			C92-0628-05	CHIP-TAN	10UF	10WV	
C620-653			CK73GB1H104K	CHIP C	0.10UF	K	
C654-656			C92-0628-05	CHIP-TAN	10UF	10WV	
C657			CK73GB1H104K	CHIP C	0.10UF	K	
C658,659			C92-0628-05	CHIP-TAN	10UF	10WV	
C660-667			CK73GB1H104K	CHIP C	0.10UF	K	
C670			C92-0628-05	CHIP-TAN	10UF	10WV	
C671-678			CK73GB1H104K	CHIP C	0.10UF	K	
C700			C92-0628-05	CHIP-TAN	10UF	10WV	
C701,702			CK73GB1H104K	CHIP C	0.10UF	K	
C703			C92-0628-05	CHIP-TAN	10UF	10WV	
C704-723			CK73GB1H104K	CHIP C	0.10UF	K	
C724			C92-0628-05	CHIP-TAN	10UF	10WV	
C725,726			CK73GB1H104K	CHIP C	0.10UF	K	
C727			C92-0628-05	CHIP-TAN	10UF	10WV	
C728			C92-0633-05	CHIP-TAN	22UF	10WV	
C729-738			CK73GB1H104K	CHIP C	0.10UF	K	
C739			C92-1326-05	CHIP-TAN	47UF	10WV	
C740			CC73GCH1H150J	CHIP C	15PF	J	
C741			CK73GB1A105K	CHIP C	1.0UF	K	
C742			CK73GB1H104K	CHIP C	0.10UF	K	
C743			C92-1485-05	CHIP C	22UF	6.3WV	
C744-749			CK73GB1H104K	CHIP C	0.10UF	K	
C750			C92-0628-05	CHIP-TAN	10UF	10WV	
C751-757			CK73GB1H104K	CHIP C	0.10UF	K	
C761			CC73GCH1H150J	CHIP C	15PF	J	
C765			C92-0676-05	ELECTRO	10UF	25WV	
C766			CK73EB1A475K	CHIP C	4.7UF	K	
C767			CC73GCH1H040C	CHIP C	4.0PF	C	
C768			CK73GB1H104K	CHIP C	0.10UF	K	
C770			CC73GCH1H050C	CHIP C	5.0PF	C	
C771			C92-0628-05	CHIP-TAN	10UF	10WV	
C772			CK73GB1H104K	CHIP C	0.10UF	K	
C774			C92-0093-05	CHIP C	100UF	6.3WV	
C775			CK73GB1H104K	CHIP C	0.10UF	K	
C777			CK73GB1H103K	CHIP C	0.010UF	K	
C778			CK73GB1H104K	CHIP C	0.10UF	K	
C779			C92-1359-05	CHIP-TAN	10UF	16WV	
C780,781			CC73GCH1H100D	CHIP C	10PF	D	
C782			CC73GCH1H150J	CHIP C	15PF	J	
C783			CK73GB1H104K	CHIP C	0.10UF	K	
C784			CC73GCH1H150J	CHIP C	15PF	J	
C897			CK73GB1H103K	CHIP C	0.010UF	K	
C899			CK73GB1H104K	CHIP C	0.10UF	K	
C900,901			C92-0628-05	CHIP-TAN	10UF	10WV	
C902			CK73GB1H104K	CHIP C	0.10UF	K	
C903			C92-1485-05	CHIP C	22UF	6.3WV	
C904			CK73GB1H104K	CHIP C	0.10UF	K	
C905			CK73GB1C224K	CHIP C	0.22UF	K	
C906-917			CK73GB1H104K	CHIP C	0.10UF	K	
C918,919			CK73GB1H103K	CHIP C	0.010UF	K	
C920,921			CK73GB1H104K	CHIP C	0.10UF	K	
C922			CK73GB1H103K	CHIP C	0.010UF	K	
C923-927			CK73GB1H104K	CHIP C	0.10UF	K	
C928,929			CK73FB1C105K	CHIP C	1.0UF	K	

Ref. No.	Add	New	Parts No.	Description			Destination
C930,931			C92-1324-05	CHIP-TAN	4.7UF	16WV	
C932			CK73GB1H104K	CHIP C	0.10UF	K	
C933			C92-0628-05	CHIP-TAN	10UF	10WV	
C934			CK73GB1H104K	CHIP C	0.10UF	K	
C935,936			C92-1359-05	CHIP-TAN	10UF	16WV	
C937-940			CK73GB1H104K	CHIP C	0.10UF	K	
C941,942			CC73GCH1H471J	CHIP C	470PF	J	
C943			C92-1359-05	CHIP-TAN	10UF	16WV	
C944-947			CK73GB1H104K	CHIP C	0.10UF	K	
C948			C92-1359-05	CHIP-TAN	10UF	16WV	
C949			C92-0672-05	ELECTRO	22UF	16WV	
C950			CK73GB1H104K	CHIP C	0.10UF	K	
C951			C92-0672-05	ELECTRO	22UF	16WV	
C952-954			CK73GB1H104K	CHIP C	0.10UF	K	
C955			C92-1359-05	CHIP-TAN	10UF	16WV	
C956			CK73GB1H104K	CHIP C	0.10UF	K	
C957			CK73GB1H332K	CHIP C	3300PF	K	
C958			C92-1359-05	CHIP-TAN	10UF	16WV	
C959			CK73GB1H332K	CHIP C	3300PF	K	
C960,961			CK73GB1H681K	CHIP C	680PF	K	
C962			CK73GB1H104K	CHIP C	0.10UF	K	
C963,964			CK73GB1H681K	CHIP C	680PF	K	
C965,966			CK73GB1H332K	CHIP C	3300PF	K	
C967,968			CK73GB1H104K	CHIP C	0.10UF	K	
C969-972			CC73GCH1H681J	CHIP C	680PF	J	
C973			CK73GB1H104K	CHIP C	0.10UF	K	
C974			CK73GB1H332K	CHIP C	3300PF	K	
C975			CK73GB1H104K	CHIP C	0.10UF	K	
C976			CK73GB1H332K	CHIP C	3300PF	K	
C977			CK73GB1H104K	CHIP C	0.10UF	K	
C978			CK73GB1H332K	CHIP C	3300PF	K	
C979			CK73GB1H152K	CHIP C	1500PF	K	
C980			CK73GB1H332K	CHIP C	3300PF	K	
C981,982			CK73GB1H681K	CHIP C	680PF	K	
C983,984			CK73GB1H104K	CHIP C	0.10UF	K	
C985			CK73GB1H681K	CHIP C	680PF	K	
C986			CK73GB1H152K	CHIP C	1500PF	K	
C987-989			CK73GB1H681K	CHIP C	680PF	K	
C990-997			CK73EB1A106K	CHIP C	10UF	K	
C998,999			CK73GB1H104K	CHIP C	0.10UF	K	
CN100			E40-9120-05	PIN ASSY			
CN200			E40-9409-05	PIN ASSY			
CN201			E41-0390-05	PIN ASSY			
CN202			E41-0391-05	PIN ASSY			
CN203			E40-5888-05	FLAT CABLE CONNECTOR			
CN204			E41-0341-05	FLAT CABLE CONNECTOR			
CN300			E41-0395-05	FLAT CABLE CONNECTOR			
CN301			E41-0456-05	FLAT CABLE CONNECTOR			
CN500			E40-5661-05	PIN ASSY			
CN701			E40-9409-05	PIN ASSY			
CN702			E41-0333-05	FLAT CABLE CONNECTOR			
J300			E58-0865-05	RECTANGULAR RECEPTACLE			
J301			E59-0829-05	RECTANGULAR PLUG			
CF100-105			L72-0780-05	CERAMIC FILTER			

W : Italy **E** : Europe without Italy **K** : North America
R : Latin America **M** : Other Areas

⚠ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X14-966x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
L100			L33-1914-05	CHOKE COIL	
L101,102			L33-1906-05	CHOKE COIL	
L103			L33-1933-05	CHOKE COIL	
L104			L19-0733-05	TRANSFORMER FOR CONVERTER	
L105			L33-1914-05	CHOKE COIL	
L106-108			L40-1001-78	SMALL FIXED INDUCTOR (10UH)	
L200			L92-0319-05	CHIP FERRITE	
L400			L40-1001-78	SMALL FIXED INDUCTOR (10UH)	
L500			L92-0381-05	CHIP FERRITE	
L507,508			L40-1001-78	SMALL FIXED INDUCTOR (10UH)	
L509			L92-0319-05	CHIP FERRITE	
L512			L40-1001-78	SMALL FIXED INDUCTOR (10UH)	
L514			L40-1001-78	SMALL FIXED INDUCTOR (10UH)	
L515,516			L92-0319-05	CHIP FERRITE	
L519			L40-1001-78	SMALL FIXED INDUCTOR (10UH)	
L700,701			L92-0373-05	CHIP FERRITE	
L705			L92-0381-05	CHIP FERRITE	
L709			L40-1001-78	SMALL FIXED INDUCTOR (10UH)	
L710-713			L92-0381-05	CHIP FERRITE	
L900			L92-0330-05	CHIP FERRITE	
L901-903			L40-1001-78	SMALL FIXED INDUCTOR (10UH)	
X1			L78-0596-05	RESONATOR	
X2			L77-2304-05	CRYSTAL RESONATOR (32.768KHZ)	
X501			L78-0549-05	RESONATOR (15.734KHZ)	
X700			L77-2866-05	CRYSTAL RESONATOR (27MHZ)	
CP1-10			R90-1096-05	MULTI-COMP 10K X4	
CP11,12			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP13-20			RK74HB1J470J	CHIP-COM 47 J 1/16W	
CP21-34			R90-1096-05	MULTI-COMP 10K X4	
CP35-43			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP44			RK74HB1J470J	CHIP-COM 47 J 1/16W	
CP45-54			RK74HB1J680J	CHIP-COM 68 J 1/16W	
CP55-57			R90-1096-05	MULTI-COMP 10K X4	
CP58-62			RK74HB1J680J	CHIP-COM 68 J 1/16W	
CP63,64			R90-1096-05	MULTI-COMP 10K X4	
CP65-71			RK74HB1J470J	CHIP-COM 47 J 1/16W	
CP200			R90-1096-05	MULTI-COMP 10K X4	
CP700,701			RK74HB1J472J	CHIP-COM 4.7K J 1/16W	
CP702-704			RK74HB1J330J	CHIP-COM 33 J 1/16W	
CP705,706			RK74HB1J472J	CHIP-COM 4.7K J 1/16W	
CP707,708			RK74HB1J330J	CHIP-COM 33 J 1/16W	
CP709-713			RK74HB1J472J	CHIP-COM 4.7K J 1/16W	
CP714-717			R90-1096-05	MULTI-COMP 10K X4	
CP718,719			RK74HB1J472J	CHIP-COM 4.7K J 1/16W	
CP720,721			RK74HB1J470J	CHIP-COM 47 J 1/16W	
CP722,723			RK74HB1J330J	CHIP-COM 33 J 1/16W	
CP724-733			RK74HB1J680J	CHIP-COM 68 J 1/16W	
CP734			RK74HB1J472J	CHIP-COM 4.7K J 1/16W	
CP735-742			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP743			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP744			RK74HB1J472J	CHIP-COM 4.7K J 1/16W	
CP900			R90-1096-05	MULTI-COMP 10K X4	
CP901-904			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP905-913			R90-1096-05	MULTI-COMP 10K X4	
CP914-919			RK74HB1J220J	CHIP-COM 22 J 1/16W	

Ref. No.	Add	New	Parts No.	Description	Destination
R100			RK73GB2A681J	CHIP R 680 J 1/10W	
R101			RK73GB2A363J	CHIP R 36K J 1/10W	
R102			RK73GB2A513J	CHIP R 51K J 1/10W	
R103			RK73GB2A363J	CHIP R 36K J 1/10W	
R104			RK73GB2A473J	CHIP R 47K J 1/10W	
R105			RK73GB2A100J	CHIP R 10 J 1/10W	
R106-108			RK73GB2A220J	CHIP R 22 J 1/10W	
R109-111			RK73GB2A101J	CHIP R 100 J 1/10W	
R112			RK73GB2A220J	CHIP R 22 J 1/10W	
R113			RK73GB2A242J	CHIP R 2.4K J 1/10W	
R115			RN73GH1J104D	CHIP R 100K D 1/16W	
R116			RN73GH1J154D	CHIP R 150K D 1/16W	
R117			RN73GH1J2212D	CHIP R 22.1K D 1/16W	
R118			RN73GH1J154D	CHIP R 150K D 1/16W	
R119			RN73GH1J132D	CHIP R 1.3K D 1/16W	
R120			RN73GH1J2552D	CHIP R 25.5K D 1/16W	
R121			RN73GH1J433D	CHIP R 43K D 1/16W	
R172			RK73GB2A223J	CHIP R 22K J 1/10W	
R173			RK73GB2A103J	CHIP R 10K J 1/10W	
R174			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R175			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R177-179			RK73GB2A223J	CHIP R 22K J 1/10W	
R180			RK73GB2A752J	CHIP R 7.5K J 1/10W	
R181			RK73GB2A104J	CHIP R 100K J 1/10W	
R183			RK73GB2A103J	CHIP R 10K J 1/10W	
R186			RK73GB2A103J	CHIP R 10K J 1/10W	
R191			RK73GB2A822J	CHIP R 8.2K J 1/10W	
R192-197			RK73GB2A104J	CHIP R 100K J 1/10W	
R198			RN73GH1J4021D	CHIP R 4.02K D 1/16W	
R199			RN73GH1J102D	CHIP R 1.0K D 1/16W	
R200			RK73GB2A622J	CHIP R 6.2K J 1/10W	
R201			RN73GH1J102D	CHIP R 1.0K D 1/16W	
R202			RN73GH1J242D	CHIP R 2.4K D 1/16W	
R203			RN73GH1J102D	CHIP R 1.0K D 1/16W	
R204			RN73GH1J821D	CHIP R 820 D 1/16W	
R205,206			RN73GH1J102D	CHIP R 1.0K D 1/16W	
R207			RN73GH1J752D	CHIP R 7.5K D 1/16W	
R208			RN73GH1J102D	CHIP R 1.0K D 1/16W	
R209			RK73GB2A622J	CHIP R 6.2K J 1/10W	
R210			RK73GB2A104J	CHIP R 100K J 1/10W	
R212			RK73GB2A511J	CHIP R 510 J 1/10W	
R213			RK73GB2A104J	CHIP R 100K J 1/10W	
R214			RK73EB2E100J	CHIP R 10 J 1/4W	
R215			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R216			RK73EB2E100J	CHIP R 10 J 1/4W	
R217,218			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R219			RK73GB2A104J	CHIP R 100K J 1/10W	
R220-222			RK73GB2A750J	CHIP R 75 J 1/10W	
R223			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R224			RK73GB2A750J	CHIP R 75 J 1/10W	
R225-227			RK73EB2E101J	CHIP R 100 J 1/4W	
R228			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R229,230			RK73EB2E101J	CHIP R 100 J 1/4W	
R231			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R232			RK73GB2A102J	CHIP R 1.0K J 1/10W	

W : Italy **E** : Europe without Italy **K** : North America
R : Latin America **M** : Other Areas

⚠ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X14-966x-xx)

Ref. No.	Add	New	Parts No.	Description				Destination
R233			RK73EB2E102J	CHIP R	1.0K	J	1/4W	
R234			RK73GB2A103J	CHIP R	10K	J	1/10W	RM
R235			RK73GB2A103J	CHIP R	10K	J	1/10W	KEW
R236			RK73EB2E102J	CHIP R	1.0K	J	1/4W	
R237			RK73GB2A103J	CHIP R	10K	J	1/10W	REW
R238			RK73GB2A103J	CHIP R	10K	J	1/10W	M
R238,239			RK73GB2A103J	CHIP R	10K	J	1/10W	K
R239			RK73GB2A103J	CHIP R	10K	J	1/10W	REW
R240			RK73GB2A103J	CHIP R	10K	J	1/10W	M
R241			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R243			RK73GB2A225J	CHIP R	2.2M	J	1/10W	
R244			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R245,246			RK73GB2A392J	CHIP R	3.9K	J	1/10W	
R247			RK73GB2A104J	CHIP R	100K	J	1/10W	
R248			RK73GB2A473J	CHIP R	47K	J	1/10W	
R249			RK73GB2A104J	CHIP R	100K	J	1/10W	
R250			RK73EB2E102J	CHIP R	1.0K	J	1/4W	
R251			RK73GB2A104J	CHIP R	100K	J	1/10W	
R252			RK73GB2A683J	CHIP R	68K	J	1/10W	
R253			RK73GB2A104J	CHIP R	100K	J	1/10W	
R254			RK73GB2A683J	CHIP R	68K	J	1/10W	
R255			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R256-262			RK73GB2A104J	CHIP R	100K	J	1/10W	
R263			RK73GB2A123J	CHIP R	12K	J	1/10W	
R264-267			RK73GB2A104J	CHIP R	100K	J	1/10W	
R268			RK73GB2A123J	CHIP R	12K	J	1/10W	
R269			RK73GB2A473J	CHIP R	47K	J	1/10W	
R270			RK73GB2A104J	CHIP R	100K	J	1/10W	
R271			RK73GB2A224J	CHIP R	220K	J	1/10W	
R272			RK73GB2A104J	CHIP R	100K	J	1/10W	
R273			RK73GB2A103J	CHIP R	10K	J	1/10W	
R274			RK73GB2A104J	CHIP R	100K	J	1/10W	
R275			RK73GB2A514J	CHIP R	510K	J	1/10W	
R276-279			RK73GB2A104J	CHIP R	100K	J	1/10W	
R280			RK73GB2A101J	CHIP R	100	J	1/10W	
R281,282			RK73GB2A104J	CHIP R	100K	J	1/10W	
R283			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R284			RK73GB2A473J	CHIP R	47K	J	1/10W	
R285			RK73GB2A105J	CHIP R	1.0M	J	1/10W	
R286			RK73GB2A104J	CHIP R	100K	J	1/10W	
R287			RK73GB2A473J	CHIP R	47K	J	1/10W	
R288-292			RK73GB2A101J	CHIP R	100	J	1/10W	
R293,294			RK73GB2A104J	CHIP R	100K	J	1/10W	
R295-299			RK73GB2A101J	CHIP R	100	J	1/10W	
R300			RK73GB2A681J	CHIP R	680	J	1/10W	
R301-303			RK73EB2E102J	CHIP R	1.0K	J	1/4W	
R304-310			RK73EB2E101J	CHIP R	100	J	1/4W	
R311			RK73EB2E391J	CHIP R	390	J	1/4W	
R312			RK73EB2E511J	CHIP R	510	J	1/4W	
R313			RK73GB2A104J	CHIP R	100K	J	1/10W	
R314,315			RK73EB2E561J	CHIP R	560	J	1/4W	
R316			RK73EB2E121J	CHIP R	120	J	1/4W	
R317			RK73EB2E101J	CHIP R	100	J	1/4W	
R318			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R319			RK73GB2A332J	CHIP R	3.3K	J	1/10W	
R320			RK73EB2E241J	CHIP R	240	J	1/4W	
R321			RK73EB2E361J	CHIP R	360	J	1/4W	
R322			RK73GB2A562J	CHIP R	5.6K	J	1/10W	
R323			RK73GB2A103J	CHIP R	10K	J	1/10W	
R324			RK73EB2E391J	CHIP R	390	J	1/4W	
R325			RK73EB2E511J	CHIP R	510	J	1/4W	
R326			RK73EB2E101J	CHIP R	100	J	1/4W	
R327,328			RK73GB2A271J	CHIP R	270	J	1/10W	
R329			RK73GB2A223J	CHIP R	22K	J	1/10W	
R330-336			RK73GB2A101J	CHIP R	100	J	1/10W	
R337			RK73EB2E911J	CHIP R	910	J	1/4W	
R338			RK73EB2E621J	CHIP R	620	J	1/4W	
R339			RK73GB2A104J	CHIP R	100K	J	1/10W	
R340			RK73GB2A473J	CHIP R	47K	J	1/10W	
R341-343			RK73EB2E100J	CHIP R	10	J	1/4W	
R344-347			RK73EB2E102J	CHIP R	1.0K	J	1/4W	
R348,349			RK73EB2E101J	CHIP R	100	J	1/4W	
R350			RK73EB2E102J	CHIP R	1.0K	J	1/4W	
R351			RK73GB2A103J	CHIP R	10K	J	1/10W	
R353			RK73GB2A103J	CHIP R	10K	J	1/10W	
R403			RK73GB2A303J	CHIP R	30K	J	1/10W	
R404			RK73GB2A103J	CHIP R	10K	J	1/10W	
R405			RK73GB2A123J	CHIP R	12K	J	1/10W	
R407			RK73GB2A433J	CHIP R	43K	J	1/10W	
R408			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R409			RK73GB2A103J	CHIP R	10K	J	1/10W	
R410			RK73GB2A271J	CHIP R	270	J	1/10W	
R411			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R412			RK73GB2A101J	CHIP R	100	J	1/10W	
R413			RK73GB2A473J	CHIP R	47K	J	1/10W	
R414			RK73GB2A123J	CHIP R	12K	J	1/10W	
R415-418			RK73GB2A103J	CHIP R	10K	J	1/10W	
R419			RK73GB2A201J	CHIP R	200	J	1/10W	
R420			RK73GB2A123J	CHIP R	12K	J	1/10W	
R421			RK73GB2A243J	CHIP R	24K	J	1/10W	
R422			RK73GB2A153J	CHIP R	15K	J	1/10W	
R423			RK73GB2A273J	CHIP R	27K	J	1/10W	
R424,425			RK73GB2A822J	CHIP R	8.2K	J	1/10W	
R426,427			RK73GB2A101J	CHIP R	100	J	1/10W	
R428,429			RK73GB2A103J	CHIP R	10K	J	1/10W	
R430			RK73GB2A303J	CHIP R	30K	J	1/10W	
R431			RK73GB2A622J	CHIP R	6.2K	J	1/10W	
R432,433			RK73GB2A103J	CHIP R	10K	J	1/10W	
R434			RK73GB2A101J	CHIP R	100	J	1/10W	
R435,436			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R500			RK73GB2A103J	CHIP R	10K	J	1/10W	
R501,502			RN73GH1J302D	CHIP R	3.0K	D	1/16W	
R503			RK73GB2A220J	CHIP R	22	J	1/10W	
R504			RK73GB2A101J	CHIP R	100	J	1/10W	
R505			RK73GB2A104J	CHIP R	100K	J	1/10W	
R506,507			RK73GB2A330J	CHIP R	33	J	1/10W	
R508			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R509,510			RK73GB2A103J	CHIP R	10K	J	1/10W	
R511			RK73GB2A104J	CHIP R	100K	J	1/10W	
R512			RK73GB2A272J	CHIP R	2.7K	J	1/10W	

W : Italy **E** : Europe without Italy **K** : North America
R : Latin America **M** : Other Areas

⚠ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X14-966x-xx)

Ref. No.	Add	New	Parts No.	Description				Destination
R513			RK73GB2A912J	CHIP R	9.1K	J	1/10W	
R520			RK73GB2A104J	CHIP R	100K	J	1/10W	
R529			RK73GB2A104J	CHIP R	100K	J	1/10W	
R537-539			RK73GB2A104J	CHIP R	100K	J	1/10W	
R543			RK73GB2A273J	CHIP R	27K	J	1/10W	
R550,551			RK73GB2A104J	CHIP R	100K	J	1/10W	
R553			RK73GB2A104J	CHIP R	100K	J	1/10W	
R559			RK73GB2A104J	CHIP R	100K	J	1/10W	
R561,562			RK73GB2A220J	CHIP R	22	J	1/10W	
R563			RK73GB2A104J	CHIP R	100K	J	1/10W	
R567			RK73GB2A331J	CHIP R	330	J	1/10W	
R570			RK73GB2A914J	CHIP R	910K	J	1/10W	
R572			RK73GB2A103J	CHIP R	10K	J	1/10W	
R577			RN73GH1J302D	CHIP R	3.0K	D	1/16W	
R578			RN73GH1J182D	CHIP R	1.8K	D	1/16W	
R579			RN73GH1J391D	CHIP R	390	D	1/16W	
R580			RK73GB2A473J	CHIP R	47K	J	1/10W	
R582			RK73GB2A912J	CHIP R	9.1K	J	1/10W	
R586			RK73GB2A272J	CHIP R	2.7K	J	1/10W	
R590			RN73GH1J222D	CHIP R	2.2K	D	1/16W	
R592			RN73GH1J332D	CHIP R	3.3K	D	1/16W	
R593,594			RN73GH1J222D	CHIP R	2.2K	D	1/16W	
R597,598			RN73GH1J101D	CHIP R	100	D	1/16W	
R599,600			RK73GB2A104J	CHIP R	100K	J	1/10W	
R601			RN73GH1J101D	CHIP R	100	D	1/16W	
R602			RN73GH1J562D	CHIP R	5.6K	D	1/16W	
R603-609			RK73GB2A104J	CHIP R	100K	J	1/10W	
R610-612			RK73GB2A330J	CHIP R	33	J	1/10W	
R613,614			RK73GB2A104J	CHIP R	100K	J	1/10W	
R615-617			RN73GH1J562D	CHIP R	5.6K	D	1/16W	
R618			RK73GB2A330J	CHIP R	33	J	1/10W	
R623-625			RK73GB2A470J	CHIP R	47	J	1/10W	
R629			RK73GB2A203J	CHIP R	20K	J	1/10W	
R630			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R631			RK73GB2A330J	CHIP R	33	J	1/10W	
R632,633			RK73GB2A103J	CHIP R	10K	J	1/10W	
R635			RK73GB2A101J	CHIP R	100	J	1/10W	
R700,701			RK73GB2A104J	CHIP R	100K	J	1/10W	
R702			RK73GB2A473J	CHIP R	47K	J	1/10W	
R703			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R704-710			RK73GB2A103J	CHIP R	10K	J	1/10W	
R711			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R712			RK73GB2A103J	CHIP R	10K	J	1/10W	
R713			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R714,715			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R716			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R717			RK73GB2A330J	CHIP R	33	J	1/10W	
R718			RK73GB2A820J	CHIP R	82	J	1/10W	
R719,720			RK73GB2A220J	CHIP R	22	J	1/10W	
R721			RK73GB2A330J	CHIP R	33	J	1/10W	
R722,723			RK73GB2A820J	CHIP R	82	J	1/10W	
R724			RK73GB2A103J	CHIP R	10K	J	1/10W	
R725			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R726-728			RK73GB2A103J	CHIP R	10K	J	1/10W	
R729			RK73GB2A330J	CHIP R	33	J	1/10W	

Ref. No.	Add	New	Parts No.	Description				Destination
R730			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R731			RK73GB2A220J	CHIP R	22	J	1/10W	
R732			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R733			RK73GB2A103J	CHIP R	10K	J	1/10W	
R734			RK73GB2A471J	CHIP R	470	J	1/10W	
R735,736			RK73GB2A104J	CHIP R	100K	J	1/10W	
R737			RK73GB2A182J	CHIP R	1.8K	J	1/10W	
R738			RK73GB2A151J	CHIP R	150	J	1/10W	
R739,740			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R741,742			RK73GB2A101J	CHIP R	100	J	1/10W	
R743			RK73GB2A103J	CHIP R	10K	J	1/10W	
R744			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R745-747			RK73GB2A151J	CHIP R	150	J	1/10W	
R751			RK73GB2A331J	CHIP R	330	J	1/10W	
R752,753			RK73GB2A151J	CHIP R	150	J	1/10W	
R754			RK73FB2B221J	CHIP R	220	J	1/8W	
R755			RK73EB2E750J	CHIP R	75	J	1/4W	
R756			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R762			RN73GH1J123D	CHIP R	12K	D	1/16W	
R763			RN73GH1J152D	CHIP R	1.5K	D	1/16W	
R764			RN73GH1J243D	CHIP R	24K	D	1/16W	
R765			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R766			RK73GB2A220J	CHIP R	22	J	1/10W	
R767-769			RK73GB2A101J	CHIP R	100	J	1/10W	
R770			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R771,772			RK73GB2A101J	CHIP R	100	J	1/10W	
R900-903			RK73GB2A470J	CHIP R	47	J	1/10W	
R904,905			RK73GB2A220J	CHIP R	22	J	1/10W	
R906			RK73GB2A103J	CHIP R	10K	J	1/10W	
R907,908			RK73GB2A821J	CHIP R	820	J	1/10W	
R909,910			RK73GB2A202J	CHIP R	2.0K	J	1/10W	
R911			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R912-914			RK73GB2A470J	CHIP R	47	J	1/10W	
R915			RK73GB2A103J	CHIP R	10K	J	1/10W	
R916-918			RK73GB2A750J	CHIP R	75	J	1/10W	
R919			RK73GB2A4R7J	CHIP R	4.7	J	1/10W	
R920			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R921			RK73GB2A470J	CHIP R	47	J	1/10W	
R922-926			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R927,928			RK73GB2A302J	CHIP R	3.0K	J	1/10W	
R929			RK73GB2A470J	CHIP R	47	J	1/10W	
R930-933			RK73GB2A201J	CHIP R	200	J	1/10W	
R934			RK73GB2A302J	CHIP R	3.0K	J	1/10W	
R935-938			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R939-941			RK73GB2A302J	CHIP R	3.0K	J	1/10W	
R942-944			RK73GB2A201J	CHIP R	200	J	1/10W	
R945			RK73GB2A470J	CHIP R	47	J	1/10W	
R946			RK73GB2A201J	CHIP R	200	J	1/10W	
R947			RK73GB2A302J	CHIP R	3.0K	J	1/10W	
R948-956			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R957-959			RK73GB2A470J	CHIP R	47	J	1/10W	
R960-963			RK73GB2A302J	CHIP R	3.0K	J	1/10W	
R964			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R965,966			RK73GB2A201J	CHIP R	200	J	1/10W	
R967			RK73GB2A102J	CHIP R	1.0K	J	1/10W	

W : Italy **E** : Europe without Italy **K** : North America
R : Latin America **M** : Other Areas

⚠ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X14-966x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
R968-971			RK73GB2A201J	CHIP R 200 J 1/10W	
R972			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R973,974			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R975			RK73GB2A103J	CHIP R 10K J 1/10W	
R976			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R977-984			RK73GB2A100J	CHIP R 10 J 1/10W	
R985,986			RK73GB2A223J	CHIP R 22K J 1/10W	
R987			RK73GB2A103J	CHIP R 10K J 1/10W	
R989-992			RK73GB2A223J	CHIP R 22K J 1/10W	
R993			RK73GB2A470J	CHIP R 47 J 1/10W	
R994,995			RK73GB2A223J	CHIP R 22K J 1/10W	
R996			RK73GB2A104J	CHIP R 100K J 1/10W	
VR100			R32-0244-05	SEMI FIXED VARIABLE RESISTOR	
VR400			R32-0235-05	SEMI FIXED VARIABLE RESISTOR	
VR401-403			R32-0245-05	SEMI FIXED VARIABLE RESISTOR	
VR404			R32-0235-05	SEMI FIXED VARIABLE RESISTOR	
VR405-409			R32-0245-05	SEMI FIXED VARIABLE RESISTOR	
VR700			R32-0258-05	SEMI FIXED VARIABLE RESISTOR	
W100-110			R92-1252-05	CHIP R 0 OHM J 1/16W	
W114			R92-1252-05	CHIP R 0 OHM J 1/16W	
W117,118			R92-1252-05	CHIP R 0 OHM J 1/16W	
W201,202			R92-1252-05	CHIP R 0 OHM J 1/16W	
W300			R92-2053-05	CHIP R 0 OHM J 1/8W	
W504,505			R92-1252-05	CHIP R 0 OHM J 1/16W	
W516			R92-1252-05	CHIP R 0 OHM J 1/16W	
W524			R92-1252-05	CHIP R 0 OHM J 1/16W	
W538,539			R92-1252-05	CHIP R 0 OHM J 1/16W	
W543			R92-1252-05	CHIP R 0 OHM J 1/16W	
W551			R92-1252-05	CHIP R 0 OHM J 1/16W	
W557-561			R92-1252-05	CHIP R 0 OHM J 1/16W	
W565			R92-1252-05	CHIP R 0 OHM J 1/16W	
W700-703			R92-1252-05	CHIP R 0 OHM J 1/16W	
W706-708			R92-1252-05	CHIP R 0 OHM J 1/16W	
W710			R92-1252-05	CHIP R 0 OHM J 1/16W	
W712-717			R92-1252-05	CHIP R 0 OHM J 1/16W	
W722-724			R92-1252-05	CHIP R 0 OHM J 1/16W	
W726-730			R92-1252-05	CHIP R 0 OHM J 1/16W	
S2-6			S70-0856-05	TACT SWITCH	
S8,9			S70-0856-05	TACT SWITCH	
S200			S62-0863-05	SLIDE SWITCH	EW
S300			S70-0826-05	TACT SWITCH	
D102,103		✻	SB05-05CP-E	DIODE	
D104-108		✻	EC31QS04AG	DIODE	
D109,110			D1F60-5063	DIODE	
D112,113		✻	SB05-05CP-E	DIODE	
D114			MA8082-M	ZENER DIODE	
D115			MA8056-M	ZENER DIODE	
D116			1SR154-400	DIODE	
D117,118			RB491D	DIODE	
D119			RD6.8M(B2)	ZENER DIODE	
D120			RD16S	ZENER DIODE	
D200			DA204U	DIODE	
D201			MA8047-H	ZENER DIODE	
D203-207			MA3062WA	ZENER DIODE	

Ref. No.	Add	New	Parts No.	Description	Destination
D208			AVRM1608120M6A	VARISTOR	
D209			DA204U	DIODE	
D210			MA142WA	DIODE	
D211,212			DA204U	DIODE	
D213			MA142WA	DIODE	
D214			MA3062WA	ZENER DIODE	
D215-224			AVRM1608120M6A	VARISTOR	
D225			DA204U	DIODE	
D226			MA8062-M	ZENER DIODE	
D227-229			AVRM1608120M6A	VARISTOR	
D300			DA204U	DIODE	
D302,303			DA204U	DIODE	
D306			MA8062-M	ZENER DIODE	
D307-310			MA3062WA	ZENER DIODE	
D311-313			DA204U	DIODE	
D314			AVRM1608120M6A	VARISTOR	
D315			MA142WK	DIODE	
D350			MA8062-M	ZENER DIODE	
D500			MA3062WA	ZENER DIODE	
D501			HVD133	DIODE	
D502			RB491D	DIODE	
D503,504			MA3062WA	ZENER DIODE	
D700,701			DA204U	DIODE	
D900-910			AVRM1608270MAB	VARISTOR	
IC100-102			FA7703V	ANALOGUE IC	
IC103			TC75W56FU	MOS-IC	
IC104			TA78DS05AF	ANALOGUE IC	
IC105			PQ1X331M2ZP	ANALOGUE IC	
IC106			TC7SH04FU	MOS-IC	
IC200			S-24CS02AFT	ROM IC	
IC202		✻	703068YGJ-119	MICROCONTROLLER IC	
IC203		✻	LB1836M-TLM-E	ANALOGUE IC	
IC204		✻	PST9137NR-E	ANALOGUE IC	
IC205		✻	LB1836M-TLM-E	ANALOGUE IC	
IC206			TC7SH08F	MOS-IC	
IC207			TC7SET08FU	MOS-IC	
IC208			NJM4565V	ANALOGUE IC	
IC209			TC7W14FU	MOS-IC	
IC300			RS-181	ANALOGUE IC	
IC400			TC7WH123FU	MOS-IC	
IC401			IR3Y26A1	ANALOGUE IC	
IC402			M5237ML	ANALOGUE IC	
IC500			TA78L05F	ANALOGUE IC	
IC501			NJM2235M	ANALOGUE IC	
IC502			HD74LV157AT-E	MOS-IC	
IC503			MM1234XFBE-E	ANALOGUE IC	
IC504			NJM2235M	ANALOGUE IC	
IC505			TA78L05F	ANALOGUE IC	
IC506			HD6417706F120D	MICROPROCESSOR IC	
IC507,508			TC7SET08FU	MOS-IC	
IC509			NJW1303V	ANALOGUE IC	
IC510			CXA3266Q	MOS-IC	
IC511			TC7SH08FU	MOS-IC	
IC512			TC7W00FU	MOS-IC	
IC514			TC7SET08FU	MOS-IC	

W : Italy **E** : Europe without Italy **K** : North America
R : Latin America **M** : Other Areas

⚠ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X14-966x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
IC515		✻	HD74LV1G04AC-E	MOS-IC	
IC516			TC74LCX74FT	MOS-IC	
IC517		✻	MM1389XFBE-E	ANALOGUE IC	
IC519		✻	MB29D64E9E1U2	ROM IC	
IC520			TC7WH123FU	MOS-IC	
IC521		✻	CY6126DVLL7ZI	SRAM IC	
IC522		✻	MT48LC2M32P7I	DRAM IC	
IC523			MN67761	MOS-IC	
IC524		✻	HD74LV1G04AC-E	MOS-IC	
IC525			HD74LVC08TTP	MOS-IC	
IC526		✻	HD74CBT3244T-E	MOS-IC	
IC527,528			TC7SH08FU	MOS-IC	
IC529,530			K4S641632HTC75	DRAM IC	
IC531			TC7SH32FU	MOS-IC	
IC532			NJM2373AF-TE1	ANALOGUE IC	
IC533			HD74LV2G74AU-E	MOS-IC	
IC534			TC7SH08FU	MOS-IC	
IC535			TC7SH04FU	MOS-IC	
IC536			HD74LV2G74AU-E	MOS-IC	
IC537			TC7WH241FK	MOS-IC	
IC700			K6F1008V2CYF55	SRAM IC	
IC701			TC7SH00FU	MOS-IC	
IC702			29LV160BTI2T1	ROM IC	
IC703		✻	M43212VNI8TV1	MOS-IC	
IC704			ES6218SF	MOS-IC	
IC705			UPC2933T	ANALOGUE IC	
IC707			SI-3012KM	ANALOGUE IC	
IC708			NJM2373AF-TE1	ANALOGUE IC	
IC709			ADV7170KSU	MOS-IC	
IC710			K4S641632HTC75	DRAM IC	
IC712			TK15446L	ANALOGUE IC	
IC713			NJU7222U50	ANALOGUE IC	
IC714			CY22392FI-K01	ANALOGUE IC	
IC716			HD74LV2G74AU-E	MOS-IC	
IC900			DSPB56367PV150	MOS-IC	
IC901			M5280FP	ANALOGUE IC	
IC902			NJM4565V	ANALOGUE IC	
IC903			PCM1800E	MOS-IC	
IC904,905			CY7C1021CV10ZI	SRAM IC	
IC906			TC7SH08FU	MOS-IC	
IC907			TC7WH241FK	MOS-IC	
IC908			AK4355VF	ANALOGUE IC	
IC909			NJU7222U50	ANALOGUE IC	
IC910			AK4382AVT	ANALOGUE IC	
IC911			HD74LV2G125A-E	MOS-IC	
IC912			TC7SH08FU	MOS-IC	
IC913			TC7WH241FK	MOS-IC	
IC914			NJM4580V-ZB	ANALOGUE IC	
IC915			TC7SH08FU	MOS-IC	
IC916			TC7WH241FK	MOS-IC	
IC917-919			NJM4580V-ZB	ANALOGUE IC	
IC920			TC7SET00FU	MOS-IC	
IC921			TC7SET08FU	MOS-IC	
IC922			TC7WH241FK	MOS-IC	
Q100-103			UN5212	DIGITAL TRANSISTOR	
Q104			2SD1819A	TRANSISTOR	
Q105		✻	HAT1038R-E	FET	
Q107,108		✻	HAT1016R-E	DUAL FET	
Q109		✻	HAT3008R-E	DUAL FET	
Q110			UN5212	DIGITAL TRANSISTOR	
Q112			2SD1819A	TRANSISTOR	
Q114			2SA2013	TRANSISTOR	
Q115			2SD1819A	TRANSISTOR	
Q200			UN5212	DIGITAL TRANSISTOR	
Q201			UN5213	DIGITAL TRANSISTOR	
Q202			UN5113	DIGITAL TRANSISTOR	
Q212			UN5212	DIGITAL TRANSISTOR	
Q213			UN5214	DIGITAL TRANSISTOR	
Q214			UN5113	DIGITAL TRANSISTOR	
Q215			DTB123YK	DIGITAL TRANSISTOR	
Q216			UN5212	DIGITAL TRANSISTOR	
Q217			UN5113	DIGITAL TRANSISTOR	
Q218			DTB123YK	DIGITAL TRANSISTOR	
Q220			UN5213	DIGITAL TRANSISTOR	
Q221,222			UN5212	DIGITAL TRANSISTOR	
Q223			DTB123YK	DIGITAL TRANSISTOR	
Q300			UN5212	DIGITAL TRANSISTOR	
Q301,302			UN5112	DIGITAL TRANSISTOR	
Q303,304			UN5214	DIGITAL TRANSISTOR	
Q305			UN5112	DIGITAL TRANSISTOR	
Q306			UN5214	DIGITAL TRANSISTOR	
Q307			UN5212	DIGITAL TRANSISTOR	
Q308			UN5112	DIGITAL TRANSISTOR	
Q400			2SB1189	TRANSISTOR	
Q510			2SB1218A	TRANSISTOR	
Q511			2SD1819A	TRANSISTOR	
Q513,514			2SD1819A	TRANSISTOR	
Q515			2SB1218A	TRANSISTOR	

SWITCH UNIT (X16-3130-00) (W02-3386-25)

CN1			E41-2300-05	FLAT CABLE (19PIN)			
R2			RK73GB2A273J	CHIP R	27K	J	1/10W
R1			RK73GB2A751J	CHIP R	750	J	1/10W
VR1			R31-0237-05	SEMI FIXED VARIABLE RESISTOR			
S1			S68-0863-05	PUSH SWITCH			
S2,S3			S68-0871-05	PUSH SWITCH			
S4			S68-0863-05	PUSH SWITCH			
PH1			T95-0253-05	PHOTO INTERRPTER			

ELECTRIC UNIT (X34-396x-xx)

C1			CK73GB1H473K	CHIP C	0.047UF	K	
C2			CD04BJ1H100M	ELECTRO	10UF	50WV	
C3,4			CK73GB1H103K	CHIP C	0.010UF	K	
C5			C90-5619-05	ELECTRO	220UF	16WV	
C6			CD04BJ1A101M	ELECTRO	100UF	10WV	
C7		✻	C90-6758-05	ELECTRO	3900UF	16WV	
C8			CK73GB1H103K	CHIP C	0.010UF	K	
C9,10			CK73FB1C105K	CHIP C	1.0UF	K	
C11			CK73GB1H104K	CHIP C	0.10UF	K	
C12			CK73FB1C105K	CHIP C	1.0UF	K	

W : Italy **E** : Europe without Italy **K** : North America
R : Latin America **M** : Other Areas

⚠ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-396x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
C13			CD04AY1A221M	ELECTRO	220UF	10WV	
C14			CK73FB1C105K	CHIP C	1.0UF	K	
C16			CD04BA1H3R3M	ELECTRO	3.3UF	50WV	
C17			CK73GB1H561K	CHIP C	560PF	K	
C18			CK73GB1A105K	CHIP C	1.0UF	K	
C21		*	CD04AB0J470M	ELECTRO	47UF	6.3WV	
C22-24			CK73GB1H103K	CHIP C	0.010UF	K	
C25			CK73FB1C105K	CHIP C	1.0UF	K	
C26			CD04AY1A221M	ELECTRO	220UF	10WV	
C27			CK73GB1H473K	CHIP C	0.047UF	K	
C28			CK73FB1C105K	CHIP C	1.0UF	K	
C29			CD04BJ1A221M	ELECTRO	220UF	10WV	
C31,32			CK73FB1C105K	CHIP C	1.0UF	K	
C33			CD04BJ1A221M	ELECTRO	220UF	10WV	
C34		*	CD04AC1V4R7M	ELECTRO	4.7UF	35WV	
C35			CD04BJ1E101M	ELECTRO	100UF	25WV	
C36-39			CK73EB1E225K	CHIP C	2.2UF	K	
C40			CD04BJ1H220M	ELECTRO	22UF	50WV	
C41			CK73GB1H223K	CHIP C	0.022UF	K	
C42			CK73GB1H103K	CHIP C	0.010UF	K	
C43,44			CD04BA1E4R7M	ELECTRO	4.7UF	25WV	
C45			CK73GB1H103K	CHIP C	0.010UF	K	
C100			CK73GB1H102K	CHIP C	1000PF	K	
C101			CK73GB1H103K	CHIP C	0.010UF	K	
C102			CD04BJ0J331M	ELECTRO	330UF	6.3WV	
C103,104			CK73GB1H103K	CHIP C	0.010UF	K	
C105			CK73GB1H104K	CHIP C	0.10UF	K	
C106			CK73FB1C105K	CHIP C	1.0UF	K	
C107			CK73GB1H104K	CHIP C	0.10UF	K	
C108-110			CK73GB1H103K	CHIP C	0.010UF	K	
C111			CK73GB1H104K	CHIP C	0.10UF	K	
C112			CK73GB1H103K	CHIP C	0.010UF	K	
C113			CK73GB1H104K	CHIP C	0.10UF	K	
C114,115			CK73GB1H103K	CHIP C	0.010UF	K	
C201,202			CK73GB1H103K	CHIP C	0.010UF	K	
C206			CK73GB1H103K	CHIP C	0.010UF	K	
C209			CD04BJ1H100M	ELECTRO	10UF	50WV	
C211			CC73GCH1H331J	CHIP C	330PF	J	
C212			CD04BJ1H100M	ELECTRO	10UF	50WV	
C213			CK73GB1H103K	CHIP C	0.010UF	K	
C215-217			CK73GB1H103K	CHIP C	0.010UF	K	
C219,220			CC73GCH1H100D	CHIP C	10PF	D	
C222,223			CK73GB1H104K	CHIP C	0.10UF	K	
C224			CK73GB1H103K	CHIP C	0.010UF	K	
C225			CC73GCH1H151J	CHIP C	150PF	J	
C226			CK73GB1A474K	CHIP C	0.47UF	K	
C227			CK73GB1H223K	CHIP C	0.022UF	K	
C228			CK73GB1H103K	CHIP C	0.010UF	K	
C229			CD04BJ1H100M	ELECTRO	10UF	50WV	
C230		*	CD04AB1H2R2M	ELECTRO	2.2UF	50WV	
C231-243			CK73GB1H103K	CHIP C	0.010UF	K	EWM
C244			CD04BJ1H100M	ELECTRO	10UF	50WV	EWM
C245			CK73GB1H103K	CHIP C	0.010UF	K	EWM
C300			CK73GB1H104K	CHIP C	0.10UF	K	
C301			C92-0675-05	ELECTRO	4.7UF	25WV	

Ref. No.	Add	New	Parts No.	Description			Destination
C302			C92-1428-05	ELECTRO	330UF	6.3WV	
C303			C92-0675-05	ELECTRO	4.7UF	25WV	
C304			C92-0093-05	CHIP C	100UF	6.3WV	
C305			CK73GB1H104K	CHIP C	0.10UF	K	
C306			C92-0675-05	ELECTRO	4.7UF	25WV	
C307			C92-1428-05	ELECTRO	330UF	6.3WV	
C308			C92-0675-05	ELECTRO	4.7UF	25WV	
C309			C92-0093-05	CHIP C	100UF	6.3WV	
C310			CK73GB1H104K	CHIP C	0.10UF	K	
C311			C92-0675-05	ELECTRO	4.7UF	25WV	
C312			CK73GB1H104K	CHIP C	0.10UF	K	
C313			C92-1428-05	ELECTRO	330UF	6.3WV	
C314,315			C92-0675-05	ELECTRO	4.7UF	25WV	
C316			C92-0093-05	CHIP C	100UF	6.3WV	
C317			C92-0092-05	CHIP C	47UF	6.3WV	
C318		*	CD04AB1C220M	ELECTRO	22UF	16WV	
C319			C92-0675-05	ELECTRO	4.7UF	25WV	
C320			CD04BJ1H100M	ELECTRO	10UF	50WV	
C321,322			CK73GB1H104K	CHIP C	0.10UF	K	
C323			CD04BJ1A221M	ELECTRO	220UF	10WV	
C324			CK73GB1H103K	CHIP C	0.010UF	K	
C325			CD04BJ1A221M	ELECTRO	220UF	10WV	
C326			CK73GB1H104K	CHIP C	0.10UF	K	
C327			CK73GB1H103K	CHIP C	0.010UF	K	
C328			CD04BJ1A221M	ELECTRO	220UF	10WV	
C329			CD04BJ0J331M	ELECTRO	330UF	6.3WV	
C330			CK73GB1H104K	CHIP C	0.10UF	K	
C331			C92-0672-05	ELECTRO	22UF	16WV	
C332-334			CK73GB1H104K	CHIP C	0.10UF	K	
C342,343			CK73EB1A106K	CHIP C	10UF	K	
C344			CK73GB1H103K	CHIP C	0.010UF	K	
C400-405			CK73GB1H104K	CHIP C	0.10UF	K	
C406			CK73GB1H103K	CHIP C	0.010UF	K	
C407,408			CK73GB1A474K	CHIP C	0.47UF	K	
C409			CK73FB1C105K	CHIP C	1.0UF	K	
C410			CK73GB1A474K	CHIP C	0.47UF	K	
C411-414			CK73FB1C105K	CHIP C	1.0UF	K	
C415			CK73GB1A474K	CHIP C	0.47UF	K	
C416-422			CK73FB1C105K	CHIP C	1.0UF	K	
C423			CK73GB1C224K	CHIP C	0.22UF	K	
C424			CK73FB1C105K	CHIP C	1.0UF	K	
C425			CK73GB1C224K	CHIP C	0.22UF	K	
C426			CK73EB1A475K	CHIP C	4.7UF	K	
C427			CK73FB1C105K	CHIP C	1.0UF	K	
C428			CK73GB1H103K	CHIP C	0.010UF	K	
C429			CK73GB1H104K	CHIP C	0.10UF	K	
C430		*	CD04AB1C100M	ELECTRO	10UF	16WV	
C431,432			CK73EB1A475K	CHIP C	4.7UF	K	
C433,434			CK73FB1C105K	CHIP C	1.0UF	K	
C436			CK73GB1H104K	CHIP C	0.10UF	K	
C437,438			CK73FB1C105K	CHIP C	1.0UF	K	
C439			CD04BJ1H220M	ELECTRO	22UF	50WV	
C440		*	CD04AB1C100M	ELECTRO	10UF	16WV	
C441-446			CD04AX1A100M	ELECTRO	10UF	10WV	
C447,448			CK73FB1C105K	CHIP C	1.0UF	K	

W : Italy **E** : Europe without Italy **K** : North America
R : Latin America **M** : Other Areas

⚠ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-396x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
C449			CK73GB1H103K	CHIP C	0.010UF	K	
C450			CD04BJ1A101M	ELECTRO	100UF	10WV	
C451-456		✻	CD04AB1C220M	ELECTRO	22UF	16WV	
C457			CK73GB1H103K	CHIP C	0.010UF	K	
C459,460			CK73GB1H561K	CHIP C	560PF	K	
C461			CK73GB1H104K	CHIP C	0.10UF	K	
C462			CK73GB1A474K	CHIP C	0.47UF	K	
C465		✻	CD04AY1H220M	ELECTRO	22UF	50WV	
C466			CK73GB1A105K	CHIP C	1.0UF	K	
C482			CK73GB1H103K	CHIP C	0.010UF	K	
C483-485			CK73FB1C105K	CHIP C	1.0UF	K	
C486		✻	CD04AB1C100M	ELECTRO	10UF	16WV	
C487			CK73GB1A474K	CHIP C	0.47UF	K	
C488		✻	CD04AB1C100M	ELECTRO	10UF	16WV	
C489			CK73GB1H103K	CHIP C	0.010UF	K	
C490		✻	CD04AB1C100M	ELECTRO	10UF	16WV	
C491,492			CK73EB1A106K	CHIP C	10UF	K	
C493-495			CD04AX1A100M	ELECTRO	10UF	10WV	
C496-499			C90-5684-05	NP-ELECT	0.22UF	50WV	
C500-503		✻	CD04AB1H4R7M	ELECTRO	4.7UF	50WV	
C504-506			CK73GB1H103K	CHIP C	0.010UF	K	
C507		✻	CD04AB1C220M	ELECTRO	22UF	16WV	
C508			CK73GB1H103K	CHIP C	0.010UF	K	
C509			CD04BJ1A221M	ELECTRO	220UF	10WV	
C510,511			CD04BJ1E470M	ELECTRO	47UF	25WV	
C512			CD04BJ1E101M	ELECTRO	100UF	25WV	
C513-516			CD04BJ1E470M	ELECTRO	47UF	25WV	
C517			CD04BJ1E101M	ELECTRO	100UF	25WV	
C518-523			CK73GB1H103K	CHIP C	0.010UF	K	
C524,525			CD04BJ1H100M	ELECTRO	10UF	50WV	
C526,527			CK73GB1H222K	CHIP C	2200PF	K	
C528-533			CD04BJ1E470M	ELECTRO	47UF	25WV	
C534			CD04BJ0J331M	ELECTRO	330UF	6.3WV	
C535-540			CK73GB1H103K	CHIP C	0.010UF	K	
C541,542		✻	CD04AB1C220M	ELECTRO	22UF	16WV	
C543,544		✻	CD04AB1C470M	ELECTRO	47UF	16WV	
C545			CK73GB1H103K	CHIP C	0.010UF	K	
C600			CD04BJ1H4R7M	ELECTRO	4.7UF	50WV	
C602			CD04BJ1H4R7M	ELECTRO	4.7UF	50WV	
C606,607		✻	CD04AB1H4R7M	ELECTRO	4.7UF	50WV	
C608,609			CD04BJ1E470M	ELECTRO	47UF	25WV	
C611,612		✻	CD04AB1C220M	ELECTRO	22UF	16WV	
C613,614			CK73GB1H103K	CHIP C	0.010UF	K	
C615		✻	CD04AB1C220M	ELECTRO	22UF	16WV	
C700		✻	CD04AY1H220M	ELECTRO	22UF	50WV	
C701			C90-5684-05	NP-ELECT	0.22UF	50WV	
C704			CK73GB1A105K	CHIP C	1.0UF	K	
C705,706			CK73GB1H103K	CHIP C	0.010UF	K	
C711,712			CK73GB1H473K	CHIP C	0.047UF	K	
C713			CK73GB1A474K	CHIP C	0.47UF	K	
CN1			E41-0927-05	PIN ASSY			
CN11			E40-4970-05	FLAT CABLE CONNECTOR			
CN20,21			E40-9423-05	SOCKET FOR PIN ASSY			
CN22,23			E40-9421-05	PIN ASSY			
⚠ J1			E58-0836-05	RECTANGULAR RECEPTACLE			

Ref. No.	Add	New	Parts No.	Description				Destination
J2			E58-0969-05	RECTANGULAR RECEPTACLE				
J200		✻	E30-6208-35	CORD WITH PLUG				
J300			E58-0964-05	RECTANGULAR RECEPTACLE				
J301			E58-0963-05	RECTANGULAR RECEPTACLE				
J500			E63-0865-05	PIN JACK				
J501			E63-0891-05	PIN JACK				
J502			E63-0864-05	PIN JACK				
J600			E56-0843-05	CYLINDRICAL RECEPTACLE				
J601			E56-0846-05	CYLINDRICAL RECEPTACLE				
A1	2H		F09-1759-05	FAN				
L1		✻	L33-1063-25	CHOKE COIL				
L2			L41-2205-33	SMALL FIXED INDUCTOR (22U)				
L100			L41-1005-33	SMALL FIXED INDUCTOR (10U)				
L101			L92-0075-05	CHIP FERRITE				
L102-106			L92-0330-05	CHIP FERRITE				
L200			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)				
L203			L33-1123-05	LINE FILTER				
L204-207			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)				
L209			L41-1005-33	SMALL FIXED INDUCTOR (10U)				
L400,401			L41-1005-33	SMALL FIXED INDUCTOR (10U)				
L403			L92-0330-05	CHIP FERRITE				
X100			L78-0821-05	RESONATOR				
X200			L77-2002-05	CRYSTAL RESONATOR				
AA	2H		N35-3023-46	BINDING HEAD MACHINE SCREW				
AB	3H		N89-3008-43	BINDING HEAD TAPTITE SCREW				
W	2H		N80-3008-48	PAN HEAD TAPTITE SCREW				
Z	2H		N35-3006-48	BINDING HEAD MACHINE SCREW				
R1			RK73EB2E102J	CHIP R	1.0K	J	1/4W	
R2			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R3			RK73GB2A101J	CHIP R	100	J	1/10W	
R4			RK73EB2E103J	CHIP R	10K	J	1/4W	
R5,6			RK73GB2A223J	CHIP R	22K	J	1/10W	
R7			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R8			RK73GB2A104J	CHIP R	100K	J	1/10W	
R9,10			RK73EB2E750J	CHIP R	75	J	1/4W	
R11			RK73FB2B221J	CHIP R	220	J	1/8W	
R12			RK73EB2E472J	CHIP R	4.7K	J	1/4W	
R13			RK73GB2A223J	CHIP R	22K	J	1/10W	
R14			RK73GB2A104J	CHIP R	100K	J	1/10W	
R15			R92-2063-05	CHIP R	680	J	1/2W	
R16,17			R92-0365-05	CHIP R	1.0K	J	1/2W	
R18			RK73GB2A153J	CHIP R	15K	J	1/10W	
R19			RK73GB2A223J	CHIP R	22K	J	1/10W	
R20			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R21			RK73GH2A273D	CHIP R	27K	D	1/10W	
R22			RK73GH2A472D	CHIP R	4.7K	D	1/10W	
R23,24			RK73FB2B472J	CHIP R	4.7K	J	1/8W	
R25		✻	RK73SB3A561J	CHIP R	560	J	1W	KRM
R26			RK73GB2A561J	CHIP R	560	J	1/10W	
R27			RK73GB2A223J	CHIP R	22K	J	1/10W	KRM
R28			RK73FB2B221J	CHIP R	220	J	1/8W	
R30			RK73FB2B221J	CHIP R	220	J	1/8W	
R31			RK73GB2A334J	CHIP R	330K	J	1/10W	

W : Italy **E** : Europe without Italy **K** : North America
R : Latin America **M** : Other Areas

⚠ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-396x-xx)

Ref. No.	Add	New	Parts No.	Description				Destination
R34			RK73GB2A103J	CHIP R	10K	J	1/10W	
R35			RK73GB2A104J	CHIP R	100K	J	1/10W	
R36			RK73FB2B561J	CHIP R	560	J	1/8W	
R37			RK73GB2A153J	CHIP R	15K	J	1/10W	
R38			RK73GB2A103J	CHIP R	10K	J	1/10W	
R39			RK73GB2A223J	CHIP R	22K	J	1/10W	
R40			RK73GB2A473J	CHIP R	47K	J	1/10W	
R41			RK73GH2A273D	CHIP R	27K	D	1/10W	
R42			RK73GH2A472D	CHIP R	4.7K	D	1/10W	
R43			RK73GB2A153J	CHIP R	15K	J	1/10W	
R44			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R45			RK73GB2A223J	CHIP R	22K	J	1/10W	
R46			RK73GB2A104J	CHIP R	100K	J	1/10W	
R47			RK73GH2A243D	CHIP R	24K	D	1/10W	
R48			RK73GH2A432D	CHIP R	4.3K	D	1/10W	
R49			R92-3243-05	SMALL-RD	3.3K	J	1/2W	
R50			RK73GB2A912J	CHIP R	9.1K	J	1/10W	
R51			RK73GB2A104J	CHIP R	100K	J	1/10W	
R52			RK73FB2B221J	CHIP R	220	J	1/8W	
R53			RK73EB2E153J	CHIP R	15K	J	1/4W	
R54			RK73GB2A473J	CHIP R	47K	J	1/10W	
R55			RK73GB2A153J	CHIP R	15K	J	1/10W	
R56			RK73EB2E123J	CHIP R	12K	J	1/4W	
R57			RK73GH2A153D	CHIP R	15K	D	1/10W	
R58			RK73GH2A512D	CHIP R	5.1K	D	1/10W	
R59			RK73EB2E472J	CHIP R	4.7K	J	1/4W	
R60			RK73GB2A104J	CHIP R	100K	J	1/10W	
R61			RK73GB2A473J	CHIP R	47K	J	1/10W	
R62			RK73EB2E102J	CHIP R	1.0K	J	1/4W	
R63			RK73FB2B102J	CHIP R	1.0K	J	1/8W	
R64			RK73GB2A104J	CHIP R	100K	J	1/10W	
R65			RK73GB2A272J	CHIP R	2.7K	J	1/10W	
R66			RK73GB2A470J	CHIP R	47	J	1/10W	
R67			RK73GB2A752J	CHIP R	7.5K	J	1/10W	
R68			RK73GB2A913J	CHIP R	91K	J	1/10W	
R69			RK73GB2A563J	CHIP R	56K	J	1/10W	
R70			RK73GB2A470J	CHIP R	47	J	1/10W	
R71			RK73GB2A103J	CHIP R	10K	J	1/10W	
R72,73			RK73GB2A913J	CHIP R	91K	J	1/10W	
R74			RK73GB2A473J	CHIP R	47K	J	1/10W	
R75			R92-1252-05	CHIP R	0 OHM	J	1/16W	EW
R77			R92-1252-05	CHIP R	0 OHM	J	1/16W	KRM
R77,78			R92-1252-05	CHIP R	0 OHM	J	1/16W	EW
R100,101			RK73GB2A104J	CHIP R	100K	J	1/10W	
R103			RK73GB2A104J	CHIP R	100K	J	1/10W	
R105			RK73GB2A104J	CHIP R	100K	J	1/10W	
R107,108			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R109			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R110-113			RK73GB2A104J	CHIP R	100K	J	1/10W	
R114			RK73GB2A223J	CHIP R	22K	J	1/10W	
R115,116			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R118-122			RK73GB2A104J	CHIP R	100K	J	1/10W	
R123,124			RK73GB2A101J	CHIP R	100	J	1/10W	
R125			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R127			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R129			R92-1252-05	CHIP R	0 OHM	J	1/16W	
R130-132			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R133			RK73GB2A101J	CHIP R	100	J	1/10W	
R134			RK73GB2A103J	CHIP R	10K	J	1/10W	
R135			RK73GB2A101J	CHIP R	100	J	1/10W	
R136			RK73GB2A103J	CHIP R	10K	J	1/10W	
R138			R92-1252-05	CHIP R	0 OHM	J	1/16W	
R140,141			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R142			RK73GB2A104J	CHIP R	100K	J	1/10W	
R143,144			RK73GB2A101J	CHIP R	100	J	1/10W	
R145,146			RK73GB2A103J	CHIP R	10K	J	1/10W	
R147,148			RK73GB2A101J	CHIP R	100	J	1/10W	
R149			RK73GB2A104J	CHIP R	100K	J	1/10W	
R150,151			RK73GB2A102J	CHIP R	1.0K	J	1/10W	EWM
R155			RK73GB2A102J	CHIP R	1.0K	J	1/10W	M
R155,156			RK73GB2A102J	CHIP R	1.0K	J	1/10W	EW
R159,160			RK73GB2A562J	CHIP R	5.6K	J	1/10W	
R161			RK73GB2A103J	CHIP R	10K	J	1/10W	
R162			RK73GB2A104J	CHIP R	100K	J	1/10W	RM
R163			RK73GB2A104J	CHIP R	100K	J	1/10W	K
R163,164			RK73GB2A104J	CHIP R	100K	J	1/10W	EW
R164			RK73GB2A104J	CHIP R	100K	J	1/10W	R
R165			RK73GB2A104J	CHIP R	100K	J	1/10W	M
R165,166			RK73GB2A104J	CHIP R	100K	J	1/10W	K
R166			RK73GB2A104J	CHIP R	100K	J	1/10W	R
R167			RK73GB2A104J	CHIP R	100K	J	1/10W	EWM
R169-174			R92-1252-05	CHIP R	0 OHM	J	1/16W	
R175,176			RK73GB2A104J	CHIP R	100K	J	1/10W	
R202,203			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R204			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R205			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R206			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R207			RK73GB2A332J	CHIP R	3.3K	J	1/10W	
R211			RK73GB2A223J	CHIP R	22K	J	1/10W	
R214			RK73FB2B102J	CHIP R	1.0K	J	1/8W	
R215			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R216			RK73GB2A103J	CHIP R	10K	J	1/10W	
R217			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R218			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R219			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R221			RK73GB2A103J	CHIP R	10K	J	1/10W	EWM
R222			RK73GB2A104J	CHIP R	100K	J	1/10W	EWM
R223			RK73GB2A103J	CHIP R	10K	J	1/10W	EWM
R224			RK73GB2A562J	CHIP R	5.6K	J	1/10W	EWM
R225			RK73GB2A153J	CHIP R	15K	J	1/10W	EWM
R226			RK73GB2A823J	CHIP R	82K	J	1/10W	EWM
R227			RK73GB2A103J	CHIP R	10K	J	1/10W	EWM
R228			RK73GB2A333J	CHIP R	33K	J	1/10W	EWM
R229			RK73GB2A272J	CHIP R	2.7K	J	1/10W	EWM
R230-233			RK73GB2A103J	CHIP R	10K	J	1/10W	EWM
R234			RK73GB2A222J	CHIP R	2.2K	J	1/10W	EWM
R300			RK73FB2B100J	CHIP R	10	J	1/8W	
R301			RK73FB2B4R7J	CHIP R	4.7	J	1/8W	
R302,303			RK73FB2B100J	CHIP R	10	J	1/8W	
R304			RK73FB2B4R7J	CHIP R	4.7	J	1/8W	

W : Italy **E** : Europe without Italy **K** : North America
R : Latin America **M** : Other Areas

⚠ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-396x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
R305,306			RK73FB2B100J	CHIP R 10 J 1/8W	
R307			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	
R308			RK73FB2B100J	CHIP R 10 J 1/8W	
R309			RK73EB2E100J	CHIP R 10 J 1/4W	
R310			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	
R311			RK73FB2B100J	CHIP R 10 J 1/8W	
R312-316			RK73GB2A622J	CHIP R 6.2K J 1/10W	
R317-319			RK73GB2A223J	CHIP R 22K J 1/10W	
R320-327			RK73EB2E101J	CHIP R 100 J 1/4W	
R328-330			RK73EB2E750J	CHIP R 75 J 1/4W	
R331			RK73GB2A750J	CHIP R 75 J 1/10W	
R332			RK73EB2E750J	CHIP R 75 J 1/4W	
R333,334			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R335-339			RK73GB2A133J	CHIP R 13K J 1/10W	
R340			RK73GB2A103J	CHIP R 10K J 1/10W	
R343			RK73EB2E100J	CHIP R 10 J 1/4W	
R344			RK73GB2A473J	CHIP R 47K J 1/10W	
R345,346			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R347,348			RK73GB2A471J	CHIP R 470 J 1/10W	
R349-351			RK73EB2E100J	CHIP R 10 J 1/4W	
R400-402			RK73GB2A680J	CHIP R 68 J 1/10W	
R403			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R404-416			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R417			R92-1252-05	CHIP R 0 OHM J 1/16W	
R418			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R419			R92-1252-05	CHIP R 0 OHM J 1/16W	
R422,423			RK73GB2A223J	CHIP R 22K J 1/10W	
R424			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R425,426			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R427-434			RK73GB2A103J	CHIP R 10K J 1/10W	
R435-440			RK73GB2A471J	CHIP R 470 J 1/10W	
R441-446			RK73GB2A223J	CHIP R 22K J 1/10W	
R448			RK73GB2A473J	CHIP R 47K J 1/10W	
R451			RK73GB2A242J	CHIP R 2.4K J 1/10W	
R452			RK73GB2A101J	CHIP R 100 J 1/10W	
R453			RK73GB2A103J	CHIP R 10K J 1/10W	
R454			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R455			RK73GB2A103J	CHIP R 10K J 1/10W	
R456-459			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R460,461			RK73GB2A103J	CHIP R 10K J 1/10W	
R462			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R463			RK73GB2A103J	CHIP R 10K J 1/10W	
R464			RK73GB2A104J	CHIP R 100K J 1/10W	
R465			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R466-468			RK73GB2A103J	CHIP R 10K J 1/10W	
R469-472			RK73GB2A223J	CHIP R 22K J 1/10W	
R473,474			RK73GB2A103J	CHIP R 10K J 1/10W	
R475			RK73GB2A473J	CHIP R 47K J 1/10W	
R476			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R477			RK73GB2A104J	CHIP R 100K J 1/10W	
R478			RK73GB2A103J	CHIP R 10K J 1/10W	
R479			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R480			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R481,482			RK73GB2A103J	CHIP R 10K J 1/10W	
R500			RK73EB2E102J	CHIP R 1.0K J 1/4W	

Ref. No.	Add	New	Parts No.	Description	Destination
R501			RK73EB2E101J	CHIP R 100 J 1/4W	
R502			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R503			RK73EB2E101J	CHIP R 100 J 1/4W	
R504,505			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R506,507			RK73GB2A750J	CHIP R 75 J 1/10W	
R508-513			RK73FB2B473J	CHIP R 47K J 1/8W	
R514-519			RK73FB2B103J	CHIP R 10K J 1/8W	
R520,521			RK73GB2A361J	CHIP R 360 J 1/10W	
R522-527			RK73FB2B223J	CHIP R 22K J 1/8W	
R528,529			RK73GB2A223J	CHIP R 22K J 1/10W	
R530-532			RK73GB2A101J	CHIP R 100 J 1/10W	
R533-538			RK73FB2B820J	CHIP R 82 J 1/8W	
R539			RK73GB2A361J	CHIP R 360 J 1/10W	
R540			RK73EB2E750J	CHIP R 75 J 1/4W	
R541			RK73GB2A361J	CHIP R 360 J 1/10W	
R600-602			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R603			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R604,605			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R606			RK73EB2E100J	CHIP R 10 J 1/4W	
R607			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R608			RK73EB2E100J	CHIP R 10 J 1/4W	
R609			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R610			RK73EB2E101J	CHIP R 100 J 1/4W	
R611-614			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R615,616			RK73EB2E101J	CHIP R 100 J 1/4W	
R617			RK73GB2A750J	CHIP R 75 J 1/10W	
R700			RK73GB2A223J	CHIP R 22K J 1/10W	
R702			RK73GB2A103J	CHIP R 10K J 1/10W	
R703			RK73GB2A101J	CHIP R 100 J 1/10W	
R704			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R705			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R706			RK73GB2A103J	CHIP R 10K J 1/10W	
D1			RM10ZLF	DIODE	
D2			MA8056-M	ZENER DIODE	
D3			RB160L-40	DIODE	
D4			MA8056-M	ZENER DIODE	
D5,6			1SR154-400	DIODE	
D7			DAP202U	DIODE	
D8,9			1SR154-400	DIODE	
D10			MA8068-M	ZENER DIODE	
D11			MA8056-M	ZENER DIODE	
D12			MA8047-M	ZENER DIODE	
D13			DAN202U	DIODE	
D14			MA8068-M	ZENER DIODE	
D15			DAP202U	DIODE	
D16			MA3062WA	ZENER DIODE	
D17			MA3110-M	ZENER DIODE	
D18			MA8056-M	ZENER DIODE	
D19			MA8068-M	ZENER DIODE	
D101-104			DAP202U	DIODE	
D105,106			DAN202U	DIODE	
D107			DAP202U	DIODE	
D201			IMSA-6801	SURGE ABSORBER	
D202			DAN202U	DIODE	EWM

W : Italy **E** : Europe without Italy **K** : North America
R : Latin America **M** : Other Areas

⚠ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-396x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
D300-311			DA204U	DIODE	
D312			MA3062WA	ZENER DIODE	
D316			MA3062-M	ZENER DIODE	
D317-319			MA3062WA	ZENER DIODE	
D320-323			DA204U	DIODE	
D325			DAP202U	DIODE	
D326,327			MA3062WA	ZENER DIODE	
D400			DA204U	DIODE	
D402			DA204U	DIODE	
D404			DA204U	DIODE	
D405-414			1SR154-400	DIODE	
D415-418			DAP202U	DIODE	
D422			DAP202U	DIODE	
D423			MA8068-M	ZENER DIODE	
D425,426			MA3062WA	ZENER DIODE	
D500-505			DA204U	DIODE	
D506-508			DAP202U	DIODE	
D509-516			MAZ9120H	ZENER DIODE	
D600-605			DA204U	DIODE	
D606-612			MA3062WA	ZENER DIODE	
D700,701			DAP202U	DIODE	
IC1			M5237ML	ANALOGUE IC	
IC2			MM1108XFFE-E	ANALOGUE IC	
IC3-5			M5237ML	ANALOGUE IC	
IC6			ICL7660SIBAZ	ANALOGUE IC	
IC10			703030BYGF-M12	MICROCONTROLLER IC	
IC12			S-24CS02AFT	ROM IC	EW
IC13			S-80837CNNB	MOS-IC	
IC14			TC7W14FU	MOS-IC	
IC15			SN74LV10APWR	MOS-IC	
IC16			TC7W08FU	MOS-IC	
IC21			TDA7479D	ANALOGUE IC	
IC22			E-TDA7407D	ANALOGUE IC	
IC23			NJM4565M-TE2	ANALOGUE IC	EWM
IC31-34			BA3121F	ANALOGUE IC	
IC36,37			NJM2267V	ANALOGUE IC	
IC40			MM1234XFBE-E	ANALOGUE IC	
IC41			CXA2069Q	MOS-IC	
IC42			NJM4580V-ZB	ANALOGUE IC	
IC43			TC9215AF	MOS-IC	
IC44			TDA7501	ANALOGUE IC	
IC45			TA8273H	ANALOGUE IC	
IC47			NJM4565V	ANALOGUE IC	
IC50,51			BA3121F	ANALOGUE IC	
IC52-54			NJM4565M-TE2	ANALOGUE IC	
IC60			TC7SET08FU	MOS-IC	
IC61,62			BA3121F	ANALOGUE IC	
IC63			TC7SH14FU	MOS-IC	
IC70			TA8263BH	ANALOGUE IC	
Q1			DTC144EUA	DIGITAL TRANSISTOR	
Q2			2SC4081	TRANSISTOR	
Q3			2SA1576A	TRANSISTOR	
Q4			2SB1443	TRANSISTOR	
Q5			DTA124EUA	DIGITAL TRANSISTOR	
Q6			2SB1184	TRANSISTOR	

Ref. No.	Add	New	Parts No.	Description	Destination
Q7			2SC4081	TRANSISTOR	
Q8			DTC124EUA	DIGITAL TRANSISTOR	
Q9			2SA1906	TRANSISTOR	
Q10			DTC114YUA	DIGITAL TRANSISTOR	
Q11			2SB1443	TRANSISTOR	
Q12			DTC114YUA	DIGITAL TRANSISTOR	KRM
Q13			2SA1576A	TRANSISTOR	
Q14			DTC114YUA	DIGITAL TRANSISTOR	
Q15			DTA114EUA	DIGITAL TRANSISTOR	
Q16			2SA1576A	TRANSISTOR	
Q17			2SB1240	TRANSISTOR	EW
Q17,18			2SB1240	TRANSISTOR	KRM
Q19			2SB1548(P)	TRANSISTOR	
Q20			2SA1906	TRANSISTOR	
Q21			2SC4081	TRANSISTOR	
Q22			DTA123JK	DIGITAL TRANSISTOR	
Q23			2SC4081	TRANSISTOR	
Q24			2SB1548(P)	TRANSISTOR	
Q25			DTA124EUA	DIGITAL TRANSISTOR	
Q26			DTC144EUA	DIGITAL TRANSISTOR	
Q27			DTC124EUA	DIGITAL TRANSISTOR	
Q28			2SB1443	TRANSISTOR	
Q29			2SC4081	TRANSISTOR	
Q30			2SA1576A	TRANSISTOR	
Q31			2SC4081	TRANSISTOR	
Q32			2SA1576A	TRANSISTOR	
Q33			2SC4081	TRANSISTOR	
Q34			2SA1576A	TRANSISTOR	
Q35			2SC4081	TRANSISTOR	
Q36			DTC144EUA	DIGITAL TRANSISTOR	
Q37			DTA124EUA	DIGITAL TRANSISTOR	
Q100-104			DTA124EUA	DIGITAL TRANSISTOR	
Q201			2SC4081	TRANSISTOR	
Q203			2SB1188(Q,R)	TRANSISTOR	
Q204			DTC124EUA	DIGITAL TRANSISTOR	
Q206			2SC4081	TRANSISTOR	
Q207			DTC124EUA	DIGITAL TRANSISTOR	
Q210			2SC4081	TRANSISTOR	EWM
Q211			DTC114EUA	DIGITAL TRANSISTOR	EWM
Q212			DTA124EUA	DIGITAL TRANSISTOR	EWM
Q400,401			2SA1576A	TRANSISTOR	
Q402-407			DTC323TU	DIGITAL TRANSISTOR	
Q408			DTA124EUA	DIGITAL TRANSISTOR	
Q410,411			DTC323TU	DIGITAL TRANSISTOR	
Q500			DTA124EUA	DIGITAL TRANSISTOR	
Q501,502			DTC323TU	DIGITAL TRANSISTOR	
Q503			2SA1576A	TRANSISTOR	
TH41			PT722A100C	POSITIVE RESISTOR	
TH700			PT722A100C	POSITIVE RESISTOR	
A200		✻	X86-3870-11	FRONT-END UNIT	KR
A200		✻	X86-3872-70	FRONT-END UNIT	EWM

VIDEO UNIT (X35-4410-00)

C1,2			CK73DF1E106Z	CHIP C	10UF	Z	
C3			C93-1281-05	CHIP C	0.47UF	K	

W : Italy **E** : Europe without Italy **K** : North America
R : Latin America **M** : Other Areas

⚠ Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-4410-00)

Ref. No.	Add	New	Parts No.	Description			Destination
C5			C93-1273-05	CHIP C	15PF	J	
C6			C93-1278-05	CHIP C	0.018UF	K	
C7			CK73GB1E473K	CHIP C	0.047UF	K	
C8			C93-1269-05	CHIP C	220PF	J	
C9			CK73GB0J225K	CHIP C	2.2UF	K	
C10			CK73GB1H103K	CHIP C	0.010UF	K	
C11			CK73GB0J225K	CHIP C	2.2UF	K	
C13			CK73GB1A474K	CHIP C	0.47UF	K	
C14			CK73HB1C103K	CHIP C	0.010UF	K	
C15			CK73GB1E473K	CHIP C	0.047UF	K	
C16			CK73HB1C183K	CHIP C	0.018UF	K	
C17			CK73HB1C103K	CHIP C	0.010UF	K	
C18			C93-1281-05	CHIP C	0.47UF	K	
C21			CK73GB0J225K	CHIP C	2.2UF	K	
C22			CK73HB1H152K	CHIP C	1500PF	K	
C23			CK73DF1E106Z	CHIP C	10UF	Z	
C24			CK73GB1H103K	CHIP C	0.010UF	K	
C25			C93-1270-05	CHIP C	3300PF	K	
C26			CK73GB1H103K	CHIP C	0.010UF	K	
C101			CK73GB1H104K	CHIP C	0.10UF	K	
C102			CK73DF1C106Z	CHIP C	10UF	Z	
C103			CK73GB1H103K	CHIP C	0.010UF	K	
C104			C93-1210-05	CHIP C	10UF	K	
C105			CE32AU1C390M	CHIP EL	39UF	16WV	
C106			CK73GB1H103K	CHIP C	0.010UF	K	
C107			C93-1210-05	CHIP C	10UF	K	
C108			CE32AU1C390M	CHIP EL	39UF	16WV	
C109			CK73FB1C105K	CHIP C	1.0UF	K	
C110			CK73GB1H103K	CHIP C	0.010UF	K	
C111			C93-1210-05	CHIP C	10UF	K	
C112			CK73FB1E154K	CHIP C	0.15UF	K	
C113			CK73EB1C225K	CHIP C	2.2UF	K	
C114			CK73FB1C224K	CHIP C	0.22UF	K	
C115			CK73GB1H104K	CHIP C	0.10UF	K	
C116			CE32BB0J221M	CHIP EL	220UF	6.3WV	
C118			CK73GB1H103K	CHIP C	0.010UF	K	
C210			CK73GB1H103K	CHIP C	0.010UF	K	
C211			CK73EB1A475K	CHIP C	4.7UF	K	
C230			CK73GB1H103K	CHIP C	0.010UF	K	
C231,232			CK73DF1E106Z	CHIP C	10UF	Z	
C233			CK73GB1H103K	CHIP C	0.010UF	K	
C234			CC73HCH1H560J	CHIP C	56PF	J	
C301,302			CK73DF1E106Z	CHIP C	10UF	Z	
C303			CK73GB1H103K	CHIP C	0.010UF	K	
C304			CK73GB1H104K	CHIP C	0.10UF	K	
C305,306			CK73GB1H103K	CHIP C	0.010UF	K	
C307			CE32BB0J221M	CHIP EL	220UF	6.3WV	
C308			CK73GB1H103K	CHIP C	0.010UF	K	
C309			CC73HCH1H100D	CHIP C	10PF	D	
C310			CK73HB1H561K	CHIP C	560PF	K	
C311			CK73HB1C103K	CHIP C	0.010UF	K	
C312			CK73GB1H103K	CHIP C	0.010UF	K	
C313,314			CK73HB1C103K	CHIP C	0.010UF	K	
C315,316			CK73GB1H104K	CHIP C	0.10UF	K	
C317			CK73HB1C103K	CHIP C	0.010UF	K	

Ref. No.	Add	New	Parts No.	Description			Destination
C318,319			CK73GB1H104K	CHIP C	0.10UF	K	
C320			CC73HCH1H560J	CHIP C	56PF	J	
C321			CK73GB1H104K	CHIP C	0.10UF	K	
C322			CC73GCH1E102J	CHIP C	1000PF	J	
C323			CC73HCH1H101J	CHIP C	100PF	J	
C324,325			CK73HB1C103K	CHIP C	0.010UF	K	
C326			CC73GCH1H681J	CHIP C	680PF	J	
C327,328			CK73GB1H104K	CHIP C	0.10UF	K	
C329			CC73HCH1H390J	CHIP C	39PF	J	
C330			CE32BB0J221M	CHIP EL	220UF	6.3WV	
C331,332			CC73HCH1H390J	CHIP C	39PF	J	
C333			CK73GB1H104K	CHIP C	0.10UF	K	
C334			CK73GB1H103K	CHIP C	0.010UF	K	
C335,336			CK73GB1H104K	CHIP C	0.10UF	K	
C338			CK73DF1C106Z	CHIP C	10UF	Z	
C339			CK73HB1C103K	CHIP C	0.010UF	K	
C401			CK73HB1H102K	CHIP C	1000PF	K	
C421,422			CK73FB1C105K	CHIP C	1.0UF	K	
C423			CK73EB0J106K	CHIP C	10UF	K	
C424			CK73HB1C103K	CHIP C	0.010UF	K	
C425			CK73FB1C105K	CHIP C	1.0UF	K	
C426			CK73EB1E105K	CHIP C	1.0UF	K	
C427			CK73FB1A225K	CHIP C	2.2UF	K	
C428			CK73EB0J106K	CHIP C	10UF	K	
C501-503			CK73HB1C103K	CHIP C	0.010UF	K	
C504			CK73EB0J106K	CHIP C	10UF	K	
C505			CK73HB1H271K	CHIP C	270PF	K	
CN1			E40-9797-05	PIN ASSY			
CN301			E41-0341-05	FLAT CABLE CONNECTOR			
CN302			E41-0133-05	FLAT CABLE CONNECTOR			
CN303			E41-0404-05	FLAT CABLE CONNECTOR			
CN304			E40-9623-05	FLAT CABLE CONNECTOR			
CN305			E40-9708-05	PIN ASSY			
CN501			E41-2087-05	FLAT CABLE CONNECTOR			
CN502			E41-0133-05	FLAT CABLE CONNECTOR			
CN503			E41-0455-05	FLAT CABLE CONNECTOR			
CN601			E41-0340-05	FLAT CABLE CONNECTOR			
P1,2		*	E29-1963-05	PINCHER TIP			
F1			F53-0251-05	FUSE (CHIP 1.5A)			
CF308			L72-0786-05	CERAMIC FILTER			
L1			L19-0727-05	TRANSFORMER FOR CONVERTER			
L101,102			L41-3392-13	SMALL FIXED INDUCTOR (3.3UH)			
L103			L41-4792-13	SMALL FIXED INDUCTOR (4.7UH)			
L104-106			L40-1001-78	SMALL FIXED INDUCTOR (10UH)			
L301-303			L79-0982-05	LC FILTER			
L306			L41-5695-33	SMALL FIXED INDUCTOR (5.6U)			
L309			L79-0982-05	LC FILTER			
L401			L40-1001-78	SMALL FIXED INDUCTOR (10UH)			
L501			L40-1001-78	SMALL FIXED INDUCTOR (10UH)			
CP301,302			R90-1094-05	MULTI-COMP	1K X4		
CP303			R90-1524-05	MULTI-COMP	220 X4		
R1			RK73HB1J512J	CHIP R	5.1K	J 1/16W	
R3			RK73HB1J220J	CHIP R	22	J 1/16W	

W : Italy **E** : Europe without Italy **K** : North America
R : Latin America **M** : Other Areas

⚠ Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-4410-00)

Ref. No.	Add	New	Parts No.	Description	Destination
R4			RN73GH1J153D	CHIP R 15K D 1/16W	
R5			RK73HB1J153J	CHIP R 15K J 1/16W	
R6			RN73GH1J623D	CHIP R 62K D 1/16W	
R7			RK73HB1J220J	CHIP R 22 J 1/16W	
R8			RK73HB1J512J	CHIP R 5.1K J 1/16W	
R9			RK73GH2A244D	CHIP R 240K D 1/10W	
R10			RK73HB1J331J	CHIP R 330 J 1/16W	
R11			RK73HB1J220J	CHIP R 22 J 1/16W	
R12			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R13			RK73HB1J220J	CHIP R 22 J 1/16W	
R14			RN73GH1J4220D	CHIP R 422.0 D 1/16W	
R15			RN73GH1J513D	CHIP R 51K D 1/16W	
R16,17			RK73HB1J220J	CHIP R 22 J 1/16W	
R18			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R101			RK73GH2A104D	CHIP R 100K D 1/10W	
R102			RK73GH2A113D	CHIP R 11K D 1/10W	
R103			RK73GH2A184D	CHIP R 180K D 1/10W	
R104			RK73GH2A133D	CHIP R 13K D 1/10W	
R105			RK73HB1J473J	CHIP R 47K J 1/16W	
R106			RK73HB1J103J	CHIP R 10K J 1/16W	
R218			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R219			RK73HB1J513J	CHIP R 51K J 1/16W	
R234			RN73GH1J472D	CHIP R 4.7K D 1/16W	
R235			RN73GH1J912D	CHIP R 9.1K D 1/16W	
R236			RN73GH1J222D	CHIP R 2.2K D 1/16W	
R239			RK73HB1J123J	CHIP R 12K J 1/16W	
R240			RK73HB1J220J	CHIP R 22 J 1/16W	
R241			RK73HB1J123J	CHIP R 12K J 1/16W	
R242			RK73HB1J220J	CHIP R 22 J 1/16W	
R253			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R307			RK73HB1J101J	CHIP R 100 J 1/16W	
R308			RK73HB1J621J	CHIP R 620 J 1/16W	
R311			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R313			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R314,315			RK73HB1J103J	CHIP R 10K J 1/16W	
R316			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R318			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R320			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R321			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R323			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R324,325			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R326			RK73HB1J473J	CHIP R 47K J 1/16W	
R327			RK73HB1J683J	CHIP R 68K J 1/16W	
R328			RK73HB1J153J	CHIP R 15K J 1/16W	
R329			RK73HB1J101J	CHIP R 100 J 1/16W	
R330			RK73HB1J182J	CHIP R 1.8K J 1/16W	
R331			RK73HB1J331J	CHIP R 330 J 1/16W	
R332			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R333-335			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R337,338			RK73HB1J101J	CHIP R 100 J 1/16W	
R339			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R340-344			RK73HB1J101J	CHIP R 100 J 1/16W	
R345			RK73HB1J683J	CHIP R 68K J 1/16W	
R346			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R347			RK73HB1J153J	CHIP R 15K J 1/16W	

Ref. No.	Add	New	Parts No.	Description	Destination
R348			RK73HB1J362J	CHIP R 3.6K J 1/16W	
R349			RK73HB1J103J	CHIP R 10K J 1/16W	
R350-352			RK73HB1J101J	CHIP R 100 J 1/16W	
R353			RK73HB1J100J	CHIP R 10 J 1/16W	
R359,360			RK73HB1J100J	CHIP R 10 J 1/16W	
R361			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R362			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R367-369			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R371			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R373,374			RK73HB1J561J	CHIP R 560 J 1/16W	
R401			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R402			RK73HB1J432J	CHIP R 4.3K J 1/16W	
R403			RK73HB1J912J	CHIP R 9.1K J 1/16W	
R404			RK73HB1J303J	CHIP R 30K J 1/16W	
R421			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R422			RK73HB1J154J	CHIP R 150K J 1/16W	
R423			RK73HB1J104J	CHIP R 100K J 1/16W	
R441			RK73GB2A681J	CHIP R 680 J 1/10W	
R451,452			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R453			RK73GB2A681J	CHIP R 680 J 1/10W	
R454			RK73GB2A331J	CHIP R 330 J 1/10W	
R455			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R456			RK73GB2A331J	CHIP R 330 J 1/10W	
R501,502			RK73HB1J333J	CHIP R 33K J 1/16W	
R503-506			RK73EB2E100J	CHIP R 10 J 1/4W	
R641			RK73GB2A621J	CHIP R 620 J 1/10W	
R642			RK73HB1J391J	CHIP R 390 J 1/16W	
R651			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R652			RK73FB2B471J	CHIP R 470 J 1/8W	
R654			RK73GB2A301J	CHIP R 300 J 1/10W	
VR203			R32-0235-05	SEMI FIXED VARIABLE RESISTOR	
VR301			R32-0245-05	SEMI FIXED VARIABLE RESISTOR	
W107			R92-2052-05	CHIP R 0 OHM J 1/10W	
W216,217			R92-2052-05	CHIP R 0 OHM J 1/10W	
W301-304			R92-1252-05	CHIP R 0 OHM J 1/16W	
W310			R92-1252-05	CHIP R 0 OHM J 1/16W	
W354-358			R92-1252-05	CHIP R 0 OHM J 1/16W	
S401-404			S70-0856-05	TACT SWITCH	
S601-603			S70-0856-05	TACT SWITCH	
D1,2			MA8047-M	ZENER DIODE	
D3			MA115	DIODE	
D4,5			DA204U	DIODE	
D6			MA2S784	DIODE	
D7			MA8056-M	ZENER DIODE	
D8			1608SGXA	ZENER DIODE	
D9			DA204U	DIODE	
D10			AVRM1005270MAA	VARISTOR	
D101			MA2ZD18	DIODE	
D102-104			MA2S784	DIODE	
D301			MA8051-M	ZENER DIODE	
D302,303			DA204U	DIODE	
D304			MA8051-M	ZENER DIODE	
D309			1SV231	VARIABLE CAPACITANCE DIODE	
D310-313			1608SGXA	ZENER DIODE	

W : Italy **E** : Europe without Italy **K** : North America
R : Latin America **M** : Other Areas

⚠ Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-4410-00)

Ref. No.	Add	New	Parts No.	Description	Destination
D314			DA204U	DIODE	
D401			1608SGXA	ZENER DIODE	
D403-410			AVRM1608180M6A	VARISTOR	
D501-504			MA8051-M	ZENER DIODE	
IC1			OZ960IS-C	ANALOGUE IC	
IC101			LT1947	ANALOGUE IC	
IC203			TA75W558FU	ANALOGUE IC	
IC301			TC200G02AF0104	MOS-IC	
IC302			TC7SH08FU	MOS-IC	
IC303			NJM2107F	ANALOGUE IC	
IC304			TC7WH14FU	MOS-IC	
IC401			TPS819	ANALOGUE IC	
Q1			2SC4081	TRANSISTOR	
Q2,3			SI5513DC	DUAL FET	
Q5			2SC4081	TRANSISTOR	
Q201			IMZ1A	DUAL TRANSISTOR	
Q202			2SD601A	TRANSISTOR	
Q203			2SB709A	TRANSISTOR	
Q301			2SC4097	TRANSISTOR	
Q501			DTC124EE	DIGITAL TRANSISTOR	
Q502,503			PUMD10	DUAL TRANSISTOR	
Q601			DTC124EE	DIGITAL TRANSISTOR	

DVD UNIT (X37-1050-00)

Ref. No.	Add	New	Parts No.	Description			Destination
C1			CK73FB0J106M	CHIP C	10UF	M	
C2			CK73HB1A104K	CHIP C	0.10UF	K	
C3,4			CK73FB0J106M	CHIP C	10UF	M	
C5			CK73HB1A104K	CHIP C	0.10UF	K	
C6			CC73HCH1E221J	CHIP C	220PF	J	
C7			CK73HB1A104K	CHIP C	0.10UF	K	
C8			CK73FB0J106M	CHIP C	10UF	M	
C9,10			CK73HB1A104K	CHIP C	0.10UF	K	
C11			CK73HB1H332K	CHIP C	3300PF	K	
C12			CK73HB1A104K	CHIP C	0.10UF	K	
C13			CK73FB0J106M	CHIP C	10UF	M	
C14			C92-1792-05	ELECTRO	22UF	6.3WV	
C15			CK73HB1C103K	CHIP C	0.010UF	K	
C17			CC73GCH1H471J	CHIP C	470PF	J	
C18			CK73HB1A104K	CHIP C	0.10UF	K	
C19			CC73GCH1H471J	CHIP C	470PF	J	
C20			CK73HB1A333K	CHIP C	0.033UF	K	
C21			CK73HB1A473K	CHIP C	0.047UF	K	
C22-24			CK73HB1A104K	CHIP C	0.10UF	K	
C25,26			C93-1215-05	CERAMIC	10UF	K	
C27			CK73HB1A104K	CHIP C	0.10UF	K	
C31			C92-1685-05	ELECTRO	47UF	6.3WV	
C32,33			CC73GCH1E102J	CHIP C	1000PF	J	
C34,35			CC73GCH1H681J	CHIP C	680PF	J	
C36			CK73HB1H222K	CHIP C	2200PF	K	
C37			CC73GCH1H331J	CHIP C	330PF	J	
C38,39			CK73HB1C103K	CHIP C	0.010UF	K	
C40,41			CK73HB1A104K	CHIP C	0.10UF	K	
C42			CK73HB1C223K	CHIP C	0.022UF	K	
C43			CC73HCH1H470J	CHIP C	47PF	J	
C44			CC73GCH1H681J	CHIP C	680PF	J	
C45			CK73HB1E682K	CHIP C	6800PF	K	
C46			CK73HB1A104K	CHIP C	0.10UF	K	
C47			CC73GCH1E102J	CHIP C	1000PF	J	
C48-50			CK73HB1A104K	CHIP C	0.10UF	K	
C51			C93-1271-05	CERAMIC	0.1UF	M	
C52-55			CK73HB1A104K	CHIP C	0.10UF	K	
C56,57			C93-1271-05	CERAMIC	0.1UF	M	
C58-60			CK73HB1A104K	CHIP C	0.10UF	K	
C62			CK73HB1A104K	CHIP C	0.10UF	K	
C63			C93-1271-05	CERAMIC	0.1UF	M	
C64,65			CK73HB1C103K	CHIP C	0.010UF	K	
C67			CC73HCH1H220J	CHIP C	22PF	J	
C68			CC73HCH1H150J	CHIP C	15PF	J	
C69-73			CK73HB1A104K	CHIP C	0.10UF	K	
C74			CK73EB1A106K	CHIP C	10UF	K	
C75,76			CK73HB1C103K	CHIP C	0.010UF	K	
C77			CK73HB1A104K	CHIP C	0.10UF	K	
C78			CC73GCH1H331J	CHIP C	330PF	J	
C79-81			CK73HB1C103K	CHIP C	0.010UF	K	
C82			CK73HB1A104K	CHIP C	0.10UF	K	
C83			CC73HCH1E221J	CHIP C	220PF	J	
C84			CC73HCH1H101J	CHIP C	100PF	J	
C85			C92-1684-05	ELECTRO	82UF	10WV	
C87,88			CK73HB1C103K	CHIP C	0.010UF	K	
C89			CK73FB0J106M	CHIP C	10UF	M	
C90-95			CK73HB1A104K	CHIP C	0.10UF	K	
C96			CK73GB1A224K	CHIP C	0.22UF	K	
C97,98			CK73HB1A104K	CHIP C	0.10UF	K	
C99			C92-1685-05	ELECTRO	47UF	6.3WV	
C100			CK73GB0J105K	CHIP C	1.0UF	K	
C101			CK73HB1C103K	CHIP C	0.010UF	K	
C102			CK73FB0J106M	CHIP C	10UF	M	
C103			CK73FB1A225K	CHIP C	2.2UF	K	
C104			CK73HB1A104K	CHIP C	0.10UF	K	
C106			CK73HB1A104K	CHIP C	0.10UF	K	
C107			CK73GB0J105K	CHIP C	1.0UF	K	
C108			C93-1228-05	CERAMIC	1UF	M	
C110-113			CC73HCH1H470J	CHIP C	47PF	J	
C114,115			CK73FB1A225K	CHIP C	2.2UF	K	
C116			CK73GB1A224K	CHIP C	0.22UF	K	
C117			CK73HB1C223K	CHIP C	0.022UF	K	
C119			CK73EB0J226K	CHIP C	22UF	K	
C123			CC73HCH1H470J	CHIP C	47PF	J	
C125-134			CK73HB1C103K	CHIP C	0.010UF	K	
C135,136			CC73HCH1H050C	CHIP C	5.0PF	C	
C137			CK73HB1H102K	CHIP C	1000PF	K	
C138			CK73EB1A106K	CHIP C	10UF	K	
CN1			E41-0273-05	FLAT CABLE CONNECTOR			
CN2			E41-0271-05	FLAT CABLE CONNECTOR			
CN3			E41-0272-05	FLAT CABLE CONNECTOR			
CN4			E41-0312-05	FLAT CABLE CONNECTOR			
CN5			E41-0335-05	FLAT CABLE CONNECTOR			
L1			L92-0365-05	CHIP FERRITE			
L2			L92-0329-05	CHIP FERRITE			

W : Italy **E** : Europe without Italy **K** : North America
R : Latin America **M** : Other Areas

⚠ Indicates safety critical components.

PARTS LIST

DVD UNIT (X37-1050-00)

Ref. No.	Add	New	Parts No.	Description	Destination
L3-8			L92-0365-05	CHIP FERRITE	
L10-13			L92-0365-05	CHIP FERRITE	
L16-18			L92-0365-05	CHIP FERRITE	
L21-27			L92-0365-05	CHIP FERRITE	
L28			L92-0375-05	CHIP FERRITE	
X1			L77-2808-05	CRYSTAL RESONATOR (16.897849MHZ)	
CP1			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
CP3			RK74HB1J472J	CHIP-COM 4.7K J 1/16W	
CP4-8			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP9			RK74HB1J820J	CHIP-COM 82 J 1/16W	
CP11			R90-0726-05	MULTI-COMP 10K X2	
CP12			RK74HB1J472J	CHIP-COM 4.7K J 1/16W	
CP13-16			RK74HB1J103J	CHIP-COM 10K J 1/16W	
R3,4			RK73GH2A103D	CHIP R 10K D 1/10W	
R5			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R6			RK73GB2A100J	CHIP R 10 J 1/10W	
R7,8			RK73HB1J273J	CHIP R 27K J 1/16W	
R9			RK73GH2A223D	CHIP R 22K D 1/10W	
R10			RK73GH2A392D	CHIP R 3.9K D 1/10W	
R11			RK73GH2A183D	CHIP R 18K D 1/10W	
R12			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R13,14			RK73HB1J125J	CHIP R 1.2M J 1/16W	
R15			RK73GB2A200J	CHIP R 20 J 1/10W	
R16			R92-3409-05	MG-R 6.8 F 1/4W	
R17			R92-3350-05	MG-R 2.2 F 1/10W	
R18			RK73GH2A221D	CHIP R 220 D 1/10W	
R19			RK73HB1J100J	CHIP R 10 J 1/16W	
R27,28			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R29			RK73HB1J103J	CHIP R 10K J 1/16W	
R30			RK73HB1J473J	CHIP R 47K J 1/16W	
R31			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R32			RK73GH2A153D	CHIP R 15K D 1/10W	
R33			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R36			RK73HB1J103J	CHIP R 10K J 1/16W	
R37			RK73HB1J273J	CHIP R 27K J 1/16W	
R38			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R39			RK73HB1J273J	CHIP R 27K J 1/16W	
R40			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R41			RK73HB1J103J	CHIP R 10K J 1/16W	
R42			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R43			RK73HB1J152J	CHIP R 1.5K J 1/16W	
R44			RK73HB1J202J	CHIP R 2.0K J 1/16W	
R45			RK73GH2A183D	CHIP R 18K D 1/10W	
R46			RK73GB2A752J	CHIP R 7.5K J 1/10W	
R47			RK73GH2A103D	CHIP R 10K D 1/10W	
R48			R92-3353-05	MG-R 1.0 F 1/8W	
R53			R92-3353-05	MG-R 1.0 F 1/8W	
R54			R92-3348-05	MG-R 0.47 F 1/2W	
R55,56			RK73GB2A820J	CHIP R 82 J 1/10W	
R57			RK73GB2A391J	CHIP R 390 J 1/10W	
R58,59			RK73GB2A103J	CHIP R 10K J 1/10W	
R60			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R61			RK73GB2A153J	CHIP R 15K J 1/10W	
R62,63			RK73GH2A153D	CHIP R 15K D 1/10W	

Ref. No.	Add	New	Parts No.	Description	Destination
R64			RK73GH2A303D	CHIP R 30K D 1/10W	
R65			RK73GH2A183D	CHIP R 18K D 1/10W	
R66,67			RK73GH2A153D	CHIP R 15K D 1/10W	
R68			RK73GH2A513D	CHIP R 51K D 1/10W	
R71			RK73GH2A202D	CHIP R 2.0K D 1/10W	
R72			RK73GH2A123D	CHIP R 12K D 1/10W	
R73			RK73HB1J103J	CHIP R 10K J 1/16W	
R74			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R75-79			RK73HB1J132J	CHIP R 1.3K J 1/16W	
R80-83			RK73HB1J103J	CHIP R 10K J 1/16W	
R88			RK73HB1J103J	CHIP R 10K J 1/16W	
R89			RK73HB1J820J	CHIP R 82 J 1/16W	
R90			RK73HB1J103J	CHIP R 10K J 1/16W	
R91			RK73HB1J220J	CHIP R 22 J 1/16W	
R92			RK73HB1J820J	CHIP R 82 J 1/16W	
R93			RK73HB1J103J	CHIP R 10K J 1/16W	
R94,95			RK73HB1J820J	CHIP R 82 J 1/16W	
R101			RK73HB1J103J	CHIP R 10K J 1/16W	
R103-106			RK73HB1J220J	CHIP R 22 J 1/16W	
R107,108			RK73HB1J103J	CHIP R 10K J 1/16W	
R109			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R110			RK73HB1J473J	CHIP R 47K J 1/16W	
R111			RK73GB2A150J	CHIP R 15 J 1/10W	
R112,113			RK73HB1J221J	CHIP R 220 J 1/16W	
R114			RK73HB1J220J	CHIP R 22 J 1/16W	
R117			RK73GB2A752J	CHIP R 7.5K J 1/10W	
R119,120			RK73HB1J510J	CHIP R 51 J 1/16W	
R121,122			RK73HB1J103J	CHIP R 10K J 1/16W	
R123			R92-3385-05	MG-R 8.2 F 1/10W	
R124			RK73HB1J103J	CHIP R 10K J 1/16W	
R126,127			RK73HB1J104J	CHIP R 100K J 1/16W	
R128,129			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R130			RK73HB1J751J	CHIP R 750 J 1/16W	
R131-143			RK73HB1J103J	CHIP R 10K J 1/16W	
W1-3			R92-1252-05	CHIP R 0 OHM J 1/16W	
S4			S68-0874-05	PUSH SWITCH	
S5			S68-0866-15	PUSH SWITCH	
D1,2			MAZS0510M	ZENER DIODE	
D3-5			MA2J729	DIODE	
D6			MAZS0560M	ZENER DIODE	
D7			MA4ZD03	DIODE	
D8			MA142WA-F	DIODE	
IC1			AN8703FH	ANALOGUE IC	
IC2			NJU7042	ANALOGUE IC	
IC4			MN103S26E	MOS-IC	
IC5			S-80829CLPF	ANALOGUE IC	
IC6			LA6505	ANALOGUE IC	
IC7			D32328G13TEIV	MICROCONTROLLER IC	
IC8			S-80815CLPF	ANALOGUE IC	
IC9			UPC2918T	ANALOGUE IC	
IC10			NJM2880U33	ANALOGUE IC	
IC11			S-24C04BMFN	MEMORY IC	
IC12			HD74LV2G66A	MOS-IC	
Q1			2SB0970	TRANSISTOR	

W : Italy **E** : Europe without Italy **K** : North America
R : Latin America **M** : Other Areas

⚠ Indicates safety critical components.

PARTS LIST

DVD UNIT (X37-1050-00)

Ref. No.	Add	New	Parts No.	Description			Destination
Q2			MCH6101-E	TRANSISTOR			
Q3			2SJ0536	FET			
Q4			UN5114-F	DIGITAL TRANSISTOR			
Q5			UN5214-F	DIGITAL TRANSISTOR			
Q6			2SD1819A-F	TRANSISTOR			
Q9			UN5114-F	DIGITAL TRANSISTOR			
Q10			UN5214-F	DIGITAL TRANSISTOR			
Q13			UN5114-F	DIGITAL TRANSISTOR			
Q15			UN5114-F	DIGITAL TRANSISTOR			
TH1			TH11-3H103FT	THERMISTOR			
TUNER UNIT (X86-388x-xx)							
C1-4			CC73GCH1H101J	CHIP C	100PF	J	
C5			CK73GB1H103K	CHIP C	0.010UF	K	
C6,7			CC73GCH1H101J	CHIP C	100PF	J	
C8			CK73GB1C104K	CHIP C	0.10UF	K	EW
C9,10			CC73GCH1H101J	CHIP C	100PF	J	
C11			CK73GB1H103K	CHIP C	0.010UF	K	KRM
C11-14			CK73GB1H103K	CHIP C	0.010UF	K	EW
C15-18			CK73GB1H102K	CHIP C	1000PF	K	
C19			CK73GB1E223K	CHIP C	0.022UF	K	
C20			CK73GB1H472K	CHIP C	4700PF	K	
C21			CK73GB1H332K	CHIP C	3300PF	K	
C22,23			CK73GB1H103K	CHIP C	0.010UF	K	
C24		✻	CD04AB0J470M	ELECTRO	47UF	6.3WV	
C25			CC73GCH1H330J	CHIP C	33PF	J	
C26,27			CK73GB1H222K	CHIP C	2200PF	K	EWM
C28			CK73GB1H103K	CHIP C	0.010UF	K	
C29-32			CC73GCH1H101J	CHIP C	100PF	J	
C33			CK73GB1H222K	CHIP C	2200PF	K	EWM
C34,35			CK73GB1H103K	CHIP C	0.010UF	K	EWM
C38			CK73GB1H103K	CHIP C	0.010UF	K	
C39			CK73GB1H222K	CHIP C	2200PF	K	
C40			CK73GB1H102K	CHIP C	1000PF	K	
C41		✻	CD04AB1H4R7M	ELECTRO	4.7UF	50WV	KR
C42			CK73GB1H103K	CHIP C	0.010UF	K	KR
C43		✻	CD04AB0J470M	ELECTRO	47UF	6.3WV	KR
C44			CK73GB1H103K	CHIP C	0.010UF	K	
C45,46			CD04BJ1A221M	ELECTRO	220UF	10WV	
C47			CK73GB1H222K	CHIP C	2200PF	K	
C48		✻	CD04AB1C220M	ELECTRO	22UF	16WV	
C49			CK73GB1H103K	CHIP C	0.010UF	K	
C50,51		✻	CD04AB1H4R7M	ELECTRO	4.7UF	50WV	KR
C52		✻	CD04AB1C330M	ELECTRO	33UF	16WV	KR
C53-56			CC73GCH1H101J	CHIP C	100PF	J	
C57			CK73GB1H103K	CHIP C	0.010UF	K	
C101			CC73GCH1H221J	CHIP C	220PF	J	
C102			CK73GB1H103K	CHIP C	0.010UF	K	
C103			CK73GB1E223K	CHIP C	0.022UF	K	
C104,105			CK73GB1C104K	CHIP C	0.10UF	K	
C106			CK73GB1H103K	CHIP C	0.010UF	K	
C107			CK73GB1C104K	CHIP C	0.10UF	K	
C108			CK73GB1H103K	CHIP C	0.010UF	K	
C109			CK73GB1E223K	CHIP C	0.022UF	K	
C110,111			CK73GB1C104K	CHIP C	0.10UF	K	
C112			CC73GCH1H100D	CHIP C	10PF	D	KR
C112,113			CC73GCH1H100D	CHIP C	10PF	D	EWM
C114			CK73GB1C104K	CHIP C	0.10UF	K	
C115			CC73GCH1H560J	CHIP C	56PF	J	
C116			CK73GB1H222K	CHIP C	2200PF	K	EW
C117			CC73GCH1H220J	CHIP C	22PF	J	EW
C118			CK73GB1H102K	CHIP C	1000PF	K	EWM
C119			CK73GB1H103K	CHIP C	0.010UF	K	KR
C120		✻	CD04AB1C470M	ELECTRO	47UF	16WV	
C121			CK73GB1H103K	CHIP C	0.010UF	K	
C122			CK73GB1E473K	CHIP C	0.047UF	K	
C123			CK73GB1H103K	CHIP C	0.010UF	K	
C124		✻	CD04AB1C470M	ELECTRO	47UF	16WV	KR
C125			CK73GB1A474K	CHIP C	0.47UF	K	EW
C125			CK73GB1E473K	CHIP C	0.047UF	K	KRM
C126			CK73GB1C104K	CHIP C	0.10UF	K	
C127			CC73GCH1H471J	CHIP C	470PF	J	
C128			CK73GB1H472K	CHIP C	4700PF	K	
C129			CC73GCH1H560J	CHIP C	56PF	J	M
C130			CC73GCH1H330J	CHIP C	33PF	J	
C131			CC73GCH1H270J	CHIP C	27PF	J	
C132			CK73GB1H102K	CHIP C	1000PF	K	
C133			CK73GB1C104K	CHIP C	0.10UF	K	
C134		✻	CD04AB1H010M	ELECTRO	1.0UF	50WV	
C135			CK73GB1H222K	CHIP C	2200PF	K	
C136			CK73GB1A224K	CHIP C	0.22UF	K	
C137			CK73GB1H472K	CHIP C	4700PF	K	
C138		✻	CD04AB1H010M	ELECTRO	1.0UF	50WV	
C139			CK73GB1E473K	CHIP C	0.047UF	K	
C140			CK73GB1A224K	CHIP C	0.22UF	K	
C141-143			CK73GB1H103K	CHIP C	0.010UF	K	
C144		✻	CD04AB1HR47M	ELECTRO	0.47UF	50WV	
C145			CC73GCH1H100D	CHIP C	10PF	D	
C146		✻	CD04AB1C470M	ELECTRO	47UF	16WV	
C147			CK73GB1C104K	CHIP C	0.10UF	K	
C148			CK73GB1E223K	CHIP C	0.022UF	K	
C149		✻	CD04AB1H2R2M	ELECTRO	2.2UF	50WV	
C150			CK73GB1H103K	CHIP C	0.010UF	K	
C151			CK73GB1C104K	CHIP C	0.10UF	K	
C152,153			CK73GB1H102K	CHIP C	1000PF	K	
C154			CK73GB1C104K	CHIP C	0.10UF	K	
C155			CC73GCH1H101J	CHIP C	100PF	J	EWM
C156			CK73GB1H103K	CHIP C	0.010UF	K	KR
C157			CK73GB1A224K	CHIP C	0.22UF	K	EWM
C201		✻	CD04AB1C100M	ELECTRO	10UF	16WV	EW
C202			CK73GB1H103K	CHIP C	0.010UF	K	EW
C203			CK73GB1A224K	CHIP C	0.22UF	K	EW
C203			CK73GB1A474K	CHIP C	0.47UF	K	KRM
C204,205			CK73GB1H222K	CHIP C	2200PF	K	EW
C206,207			CK73GB1E223K	CHIP C	0.022UF	K	EW
C208		✻	CD04AB1HR47M	ELECTRO	0.47UF	50WV	EW
C209		✻	CD04AB1E4R7M	ELECTRO	4.7UF	25WV	EW
C210-212			CK73GB1H103K	CHIP C	0.010UF	K	EW
C211,212			CK73GB1H103K	CHIP C	0.010UF	K	KRM
C213		✻	CD04AB1C100M	ELECTRO	10UF	16WV	
C214			CK73GB1H103K	CHIP C	0.010UF	K	

W : Italy **E** : Europe without Italy **K** : North America
R : Latin America **M** : Other Areas

⚠ Indicates safety critical components.

PARTS LIST

TUNER UNIT (X86-388x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
C218-220			CK73FB1C105K	CHIP C 1.0UF K	
C221			CK73GB1A474K	CHIP C 0.47UF K	KRM
C221			CK73GB1C104K	CHIP C 0.10UF K	EW
C224			CK73GB1H103K	CHIP C 0.010UF K	
C225			CK73GB1C104K	CHIP C 0.10UF K	
C226			CC73GCH1H560J	CHIP C 56PF J	
C227			CK73FB1C105K	CHIP C 1.0UF K	
C229,230			CK73GB1H103K	CHIP C 0.010UF K	
C231,232			CK73GB1E223K	CHIP C 0.022UF K	KR
C231,232			CK73GB1H153K	CHIP C 0.015UF K	EWM
C233-236			CK73GB1H102K	CHIP C 1000PF K	
C237,238			CC73GCH1H121J	CHIP C 120PF J	
C239,240			CK73GB1H102K	CHIP C 1000PF K	
C241,242			CK73GB1H103K	CHIP C 0.010UF K	
C243		✻	CD04AB1C470M	ELECTRO 47UF 16WV	
C245,246			CK73GB1A474K	CHIP C 0.47UF K	
CN1			E40-9636-05	FLAT CABLE CONNECTOR	
CN2			E40-9184-05	PIN ASSY	
CN3			E40-3640-05	PIN ASSY	
J1-4			E11-0625-05	PHONE JACK (LGY6502-0900)	
CF1		✻	L72-0794-05	CERAMIC FILTER	KR
CF2			L72-0758-05	CERAMIC FILTER	EWM
CF3			L72-0774-05	CERAMIC FILTER	EWM
CF101			L72-0742-05	CERAMIC FILTER	
CF102			L72-0792-05	CERAMIC FILTER	KR
CF103			L72-0751-05	CERAMIC FILTER	EWM
L1			L41-1585-33	SMALL FIXED INDUCTOR	
L2			L41-5685-33	SMALL FIXED INDUCTOR	
L3			L41-1585-33	SMALL FIXED INDUCTOR	
L4			L41-5685-33	SMALL FIXED INDUCTOR	
L5			L41-1585-33	SMALL FIXED INDUCTOR	
L6			L41-5685-33	SMALL FIXED INDUCTOR	
L7			L41-1585-33	SMALL FIXED INDUCTOR	
L8			L41-5685-33	SMALL FIXED INDUCTOR	
L9			L41-6805-33	SMALL FIXED INDUCTOR (68U)	
L10			L92-0329-05	CHIP FERRITE	
L11		✻	L41-2795-33	SMALL FIXED INDUCTOR	EWM
L12,13		✻	L41-1295-33	SMALL FIXED INDUCTOR	EWM
L13,14			L41-1095-33	SMALL FIXED INDUCTOR (1U)	KR
L14			L41-1095-33	SMALL FIXED INDUCTOR (1U)	EWM
L15,16			L41-1005-33	SMALL FIXED INDUCTOR (10U)	KR
L16			L41-1005-33	SMALL FIXED INDUCTOR (10U)	EWM
L17			L33-1152-05	CHOKE COIL	KR
L101			L30-0756-05	TV IFT	
L102		✻	L41-1505-33	SMALL FIXED INDUCTOR	KR
L103			L30-0745-05	TV IFT	KR
L103			L30-0749-05	TV IFT	EWM
L104			L40-1001-78	SMALL FIXED INDUCTOR (10UH)	
L105			L41-5695-33	SMALL FIXED INDUCTOR (5.6U)	EWM
L106			L40-1001-78	SMALL FIXED INDUCTOR (10UH)	
L108			L41-2285-33	SMALL FIXED INDUCTOR (0.22U)	M
L201,202			L41-1005-33	SMALL FIXED INDUCTOR (10U)	EW
L202			L41-1005-33	SMALL FIXED INDUCTOR (10U)	KRM
X101			L77-2084-05	CRYSTAL RESONATOR (30.55MHZ)	KR

Ref. No.	Add	New	Parts No.	Description	Destination
X102			L77-2720-05	CRYSTAL RESONATOR (22.70MHZ)	EWM
X103			L77-2721-05	CRYSTAL RESONATOR (22.20MHZ)	EWM
X104			L77-2722-05	CRYSTAL RESONATOR (21.70MHZ)	EWM
X105			L77-2095-05	CRYSTAL RESONATOR (3.58MHZ)	
X106			L77-2096-05	CRYSTAL RESONATOR (4.43MHZ)	KEW
X106			L77-2096-05	CRYSTAL RESONATOR (4.43MHZ)	M
X106		✻	L77-2835-05	CRYSTAL RESONATOR (3.575611MHZ)	R
R1			RK73GB2A471J	CHIP R 470 J 1/10W	
R2-5			RK73GB2A101J	CHIP R 100 J 1/10W	
R6			RK73GB2A472J	CHIP R 4.7K J 1/10W	EWM
R7			RK73GB2A101J	CHIP R 100 J 1/10W	
R8			RK73GB2A473J	CHIP R 47K J 1/10W	
R9			RK73GB2A333J	CHIP R 33K J 1/10W	
R10			RK73GB2A822J	CHIP R 8.2K J 1/10W	
R11			RK73GB2A223J	CHIP R 22K J 1/10W	
R12-15			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R16			RK73GB2A682J	CHIP R 6.8K J 1/10W	EWM
R17,18			RK73GB2A103J	CHIP R 10K J 1/10W	EWM
R19			RK73GB2A222J	CHIP R 2.2K J 1/10W	EWM
R20			RK73GB2A470J	CHIP R 47 J 1/10W	EWM
R21			RK73GB2A681J	CHIP R 680 J 1/10W	EWM
R22			RK73GB2A222J	CHIP R 2.2K J 1/10W	EWM
R23			RK73GB2A123J	CHIP R 12K J 1/10W	EWM
R24			RK73GB2A470J	CHIP R 47 J 1/10W	EWM
R25			RK73GB2A151J	CHIP R 150 J 1/10W	EWM
R26,27			RK73GB2A101J	CHIP R 100 J 1/10W	
R28			RK73GB2A151J	CHIP R 150 J 1/10W	
R29			RK73GB2A681J	CHIP R 680 J 1/10W	
R30			RK73GB2A123J	CHIP R 12K J 1/10W	
R31			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R32			RK73GB2A470J	CHIP R 47 J 1/10W	
R33			RK73GB2A122J	CHIP R 1.2K J 1/10W	KR
R34			RK73GB2A392J	CHIP R 3.9K J 1/10W	KR
R35			RK73GB2A102J	CHIP R 1.0K J 1/10W	EWM
R36			RK73GB2A272J	CHIP R 2.7K J 1/10W	EWM
R38			R92-1252-05	CHIP R 0 OHM J 1/16W	EW
R38,39			R92-1252-05	CHIP R 0 OHM J 1/16W	KRM
R40,41			R92-1261-05	CHIP R 150 J 1/2W	EW
R42			R92-1252-05	CHIP R 0 OHM J 1/16W	EW
R43			R92-0686-05	CHIP R 33 J 1/2W	EWM
R101			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R102			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R103,104			RK73GB2A471J	CHIP R 470 J 1/10W	EW
R105			RK73GB2A333J	CHIP R 33K J 1/10W	EWM
R105			RK73GB2A473J	CHIP R 47K J 1/10W	KR
R106			RK73GB2A563J	CHIP R 56K J 1/10W	
R107			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R108,109			RK73GB2A331J	CHIP R 330 J 1/10W	
R110			RK73GB2A273J	CHIP R 27K J 1/10W	EWM
R111			RK73GB2A181J	CHIP R 180 J 1/10W	KR
R112			RK73GB2A333J	CHIP R 33K J 1/10W	
R113			RK73GB2A473J	CHIP R 47K J 1/10W	
R114,115			RK73GB2A331J	CHIP R 330 J 1/10W	KR
R116			RK73GB2A272J	CHIP R 2.7K J 1/10W	

W : Italy **E** : Europe without Italy **K** : North America
R : Latin America **M** : Other Areas

⚠ Indicates safety critical components.

PARTS LIST

TUNER UNIT (X86-388x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
R117			RK73GB2A103J	CHIP R 10K J 1/10W	EWM
R119			RK73GB2A222J	CHIP R 2.2K J 1/10W	EWM
R120			RK73GB2A182J	CHIP R 1.8K J 1/10W	KR
R121			RK73GB2A103J	CHIP R 10K J 1/10W	
R122			RK73GB2A223J	CHIP R 22K J 1/10W	KR
R123			RK73GB2A103J	CHIP R 10K J 1/10W	EW
R124			RK73GB2A222J	CHIP R 2.2K J 1/10W	EWM
R125			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R126			RK73GB2A104J	CHIP R 100K J 1/10W	EWM
R127			RK73GB2A222J	CHIP R 2.2K J 1/10W	EWM
R128			RK73GB2A104J	CHIP R 100K J 1/10W	EWM
R129			RK73GB2A332J	CHIP R 3.3K J 1/10W	KR
R130			RK73GB2A104J	CHIP R 100K J 1/10W	EWM
R131,132			RK73GB2A103J	CHIP R 10K J 1/10W	EW
R133			RK73GB2A472J	CHIP R 4.7K J 1/10W	EW
R134			RK73GB2A103J	CHIP R 10K J 1/10W	
R135			RK73GB2A273J	CHIP R 27K J 1/10W	
R136			RK73GB2A103J	CHIP R 10K J 1/10W	
R137			RK73GB2A393J	CHIP R 39K J 1/10W	
R138			RK73GB2A103J	CHIP R 10K J 1/10W	
R139			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R140			RK73GB2A103J	CHIP R 10K J 1/10W	
R141			RK73GB2A223J	CHIP R 22K J 1/10W	
R146,147			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R148			RK73GB2A561J	CHIP R 560 J 1/10W	
R149			RK73GB2A103J	CHIP R 10K J 1/10W	EWM
R149			R92-1252-05	CHIP R 0 OHM J 1/16W	KR
R150,151			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R152			RK73GB2A561J	CHIP R 560 J 1/10W	
R153			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R154			RK73GB2A104J	CHIP R 100K J 1/10W	
R155			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R157			RK73GB2A561J	CHIP R 560 J 1/10W	
R158			RK73GB2A153J	CHIP R 15K J 1/10W	
R160			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R161			RK73GB2A273J	CHIP R 27K J 1/10W	
R162			RK73GB2A104J	CHIP R 100K J 1/10W	
R163			RK73GB2A303J	CHIP R 30K J 1/10W	EWM
R164			RK73GB2A223J	CHIP R 22K J 1/10W	EWM
R165,166			RK73GB2A391J	CHIP R 390 J 1/10W	EWM
R167			RK73GB2A393J	CHIP R 39K J 1/10W	
R168			RK73GB2A391J	CHIP R 390 J 1/10W	
R169,170			RK73GB2A101J	CHIP R 100 J 1/10W	
R171			RK73GB2A470J	CHIP R 47 J 1/10W	EWM
R172			RK73GB2A471J	CHIP R 470 J 1/10W	EWM
R173			RK73GB2A473J	CHIP R 47K J 1/10W	
R174			RK73GB2A513J	CHIP R 51K J 1/10W	
R175			RK73GB2A473J	CHIP R 47K J 1/10W	
R176			RK73GB2A333J	CHIP R 33K J 1/10W	
R177-180			R92-1252-05	CHIP R 0 OHM J 1/16W	KR
R177,178			R92-1252-05	CHIP R 0 OHM J 1/16W	EWM
R181			RK73GB2A103J	CHIP R 10K J 1/10W	KR
R182			R92-1252-05	CHIP R 0 OHM J 1/16W	EWM
R201			RK73GB2A822J	CHIP R 8.2K J 1/10W	EW
R202			RK73GB2A392J	CHIP R 3.9K J 1/10W	EW

Ref. No.	Add	New	Parts No.	Description	Destination
R203			RK73GB2A473J	CHIP R 47K J 1/10W	EW
R204			RK73GB2A823J	CHIP R 82K J 1/10W	
R205			RK73GB2A124J	CHIP R 120K J 1/10W	
R207			RK73GB2A334J	CHIP R 330K J 1/10W	
R208			RK73GB2A474J	CHIP R 470K J 1/10W	
R211-214			RK73GB2A153J	CHIP R 15K J 1/10W	
R215,216			RK73GB2A683J	CHIP R 68K J 1/10W	
R217,218			RK73GB2A273J	CHIP R 27K J 1/10W	
R219			RK73GB2A823J	CHIP R 82K J 1/10W	
R220			RK73GB2A104J	CHIP R 100K J 1/10W	
R221			RK73GB2A223J	CHIP R 22K J 1/10W	KR
R221			RK73GB2A683J	CHIP R 68K J 1/10W	EWM
R222			RK73GB2A124J	CHIP R 120K J 1/10W	KR
R222			RK73GB2A473J	CHIP R 47K J 1/10W	EWM
R223			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R227			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R228,229			R92-1252-05	CHIP R 0 OHM J 1/16W	KRM
R229			R92-1252-05	CHIP R 0 OHM J 1/16W	EW
VR1			R32-0234-05	SEMI FIXED VARIABLE RESISTOR	
VR101			R32-0234-05	SEMI FIXED VARIABLE RESISTOR	KR
VR102			R32-0246-05	SEMI FIXED VARIABLE RESISTOR	KR
D1-4			RN739F	DIODE	
D5			DAN235U	DIODE	EWM
D6			1SS250	DIODE	KR
D7			1SS250	DIODE	EWM
D8			DAN202U	DIODE	EWM
D101			DA204U	DIODE	
D102,103			DAP236U	DIODE	EWM
D104			DAN235U	DIODE	EW
D105			DA204U	DIODE	KR
D105,106			DA204U	DIODE	EWM
IC1			BA7652AF	ANALOGUE IC	EW
IC2			CM0018AM	MOS-IC	
IC3			BA6161F	ANALOGUE IC	KR
IC101			AN5186FBV	ANALOGUE IC	
IC102			TDA8842H	ANALOGUE IC	
IC201			TDA9830T	ANALOGUE IC	EW
IC202			AN5281NSC	ANALOGUE IC	
IC203,204			NJM4565M-TE2	ANALOGUE IC	
Q1			UN5111	DIGITAL TRANSISTOR	EW
Q2			UN5212	DIGITAL TRANSISTOR	EWM
Q3			UN5216	DIGITAL TRANSISTOR	EWM
Q4,5			2SC2714(Y)	TRANSISTOR	EWM
Q5			2SC2714(Y)	TRANSISTOR	KR
Q6			2SA2013	TRANSISTOR	EWM
Q101,102			2SD1819A	TRANSISTOR	EW
Q102			2SD1819A	TRANSISTOR	M
Q102,103			2SD1819A	TRANSISTOR	KR
Q104-106			UN5212	DIGITAL TRANSISTOR	M
Q104-107			UN5212	DIGITAL TRANSISTOR	EW
Q108,109			2SD1819A	TRANSISTOR	
Q111-114			2SD1819A	TRANSISTOR	KR
Q111-115			2SD1819A	TRANSISTOR	EWM
Q116			2SB1218A	TRANSISTOR	EWM

W : Italy **E** : Europe without Italy **K** : North America
R : Latin America **M** : Other Areas

⚠ Indicates safety critical components.

PARTS LIST

TUNER UNIT (X86-388x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
Q117-119			UN5213	DIGITAL TRANSISTOR	
Q201,202			UN5213	DIGITAL TRANSISTOR	
A1			W02-3389-05	TUNER ASSY	KR
A1		*	W02-5106-05	TUNER ASSY	EWM
DVD MECHANISM ASSY (X92-5150-00)					
1	2B		A10-4909-21	CHASSIS	
2	1A		A10-4910-11	CHASSIS	
3	1A		A10-4911-02	CHASSIS	
4	1B		A10-4913-11	CHASSIS	
5	3A		A10-4952-81	CHASSIS ASSY	
7	1B		A10-4990-33	CHASSIS ASSY	
15	3B		D10-4650-03	SLIDER	
16	3B		D10-4651-02	SLIDER	
17	3B		D10-4652-02	SLIDER	
18	2A		D10-4653-02	SLIDER	
19	3B		D10-4654-04	ARM ASSY	
20	3A		D10-4658-33	ARM ASSY	
21	1B		D10-4659-43	LEVER ASSY	
22	1A		D10-4660-04	ARM ASSY	
23	3B		D10-4686-03	SLIDER	
24	3B		D10-4687-03	ARM	
25	3B		D10-4689-03	ARM	
26	3B		D10-4690-03	ARM	
29	1A		D12-0635-03	CAM	
30	2B		D12-0636-13	CAM	
32	3B		D13-2221-04	GEAR	
33	3B		D13-2222-04	GEAR	
34	3B		D13-2223-04	GEAR	
35	3B		D13-2224-04	GEAR	
36	2B		D13-2225-04	GEAR	
37	2B		D13-2226-04	GEAR	
38	3B		D13-2227-04	GEAR	
43	2A		D14-0785-04	ROLLER	
44	1A		D21-2395-13	SHAFT	
46	2B		D21-2414-04	SHAFT	
48	1B		D32-0648-04	STOPPER	
49	2B		D32-0654-04	STOPPER	
50	2A		D39-0254-05	DAMPER	
VFC1	2A		E39-0464-05	FLAT CABLE	
54	2B		F09-1748-04	SHEET	
56	1A		G01-3112-04	COMPRESSION SPRING	
58	3B		G01-3114-14	EXTENSION SPRING	
59	3A		G01-3116-14	EXTENSION SPRING	
60	2B		G01-3117-04	EXTENSION SPRING	
61	1B		G01-3118-04	EXTENSION SPRING	
62	2A		G01-3119-04	EXTENSION SPRING	
63	3A		G01-3121-14	TORSION COIL SPRING	
64	3B		G01-3140-04	EXTENSION SPRING	
65	3B		G01-3142-04	TORSION COIL SPRING	
69	2A		G02-1421-03	FLAT SPRING	
78	3B		J21-9792-03	MOUNTING HARDWARE	
79	1A		J21-9793-12	MOUNTING HARDWARE	
82	2A		J90-1031-31	GUIDE	
A	1A		N09-4495-05	ADJUSTABLE SCREW (ADJUSTMENT SC	
B	1A		N09-4496-05	TAPTITE SCREW (02 2X5P-TITE)	
C	1B		N09-6060-05	MACHINE SCREW (02M1.7X1.8 CR)	
D	2B		N09-6061-05	MACHINE SCREW (02M1.7X3.5CUP)	
E	1A		N09-6103-05	MACHINE SCREW (M1.7X3.5 (NK G)	
F	1A		N09-6104-05	MACHINE SCREW (2X10 S-TITE)	
G	1B		N09-6106-05	MACHINE SCREW (M1.7X2.5)	
J	2A		N19-2022-04	FLAT WASHER	
K	3A		N19-2171-04	FLAT WASHER	
VM1	2B		T42-1058-25	MOTOR ASSY	
VM2	3A		T49-0101-15	MOTOR ASSY	
VM3	3B		T42-1061-14	MOTOR ASSY	
VPU1	1A		T25-0222-05	OPTICAL PICKUP HEAD	
83	2A		W02-3408-15	ELECTRIC CIRCUIT MODULE	

W : Italy **E** : Europe without Italy **K** : North America
R : Latin America **M** : Other Areas

⚠ Indicates safety critical components.