

EXPLODED VIEW (MECHANISM)

A	M1.7x2.5	: N09-4249-05
B	ϕ2x3.5	: N09-4172-05
C	M1.7x4	: N09-4202-05
D	M2x2	: N38-2020-46
E	ϕ2x6	: N09-4294-05
F	WASHER ϕ1.2	: N19-2023-04
G	WASHER ϕ1.6	: N19-2058-04
H	WASHER ϕ1.6	: N19-2093-04
J	M2x2	: N39-2020-46

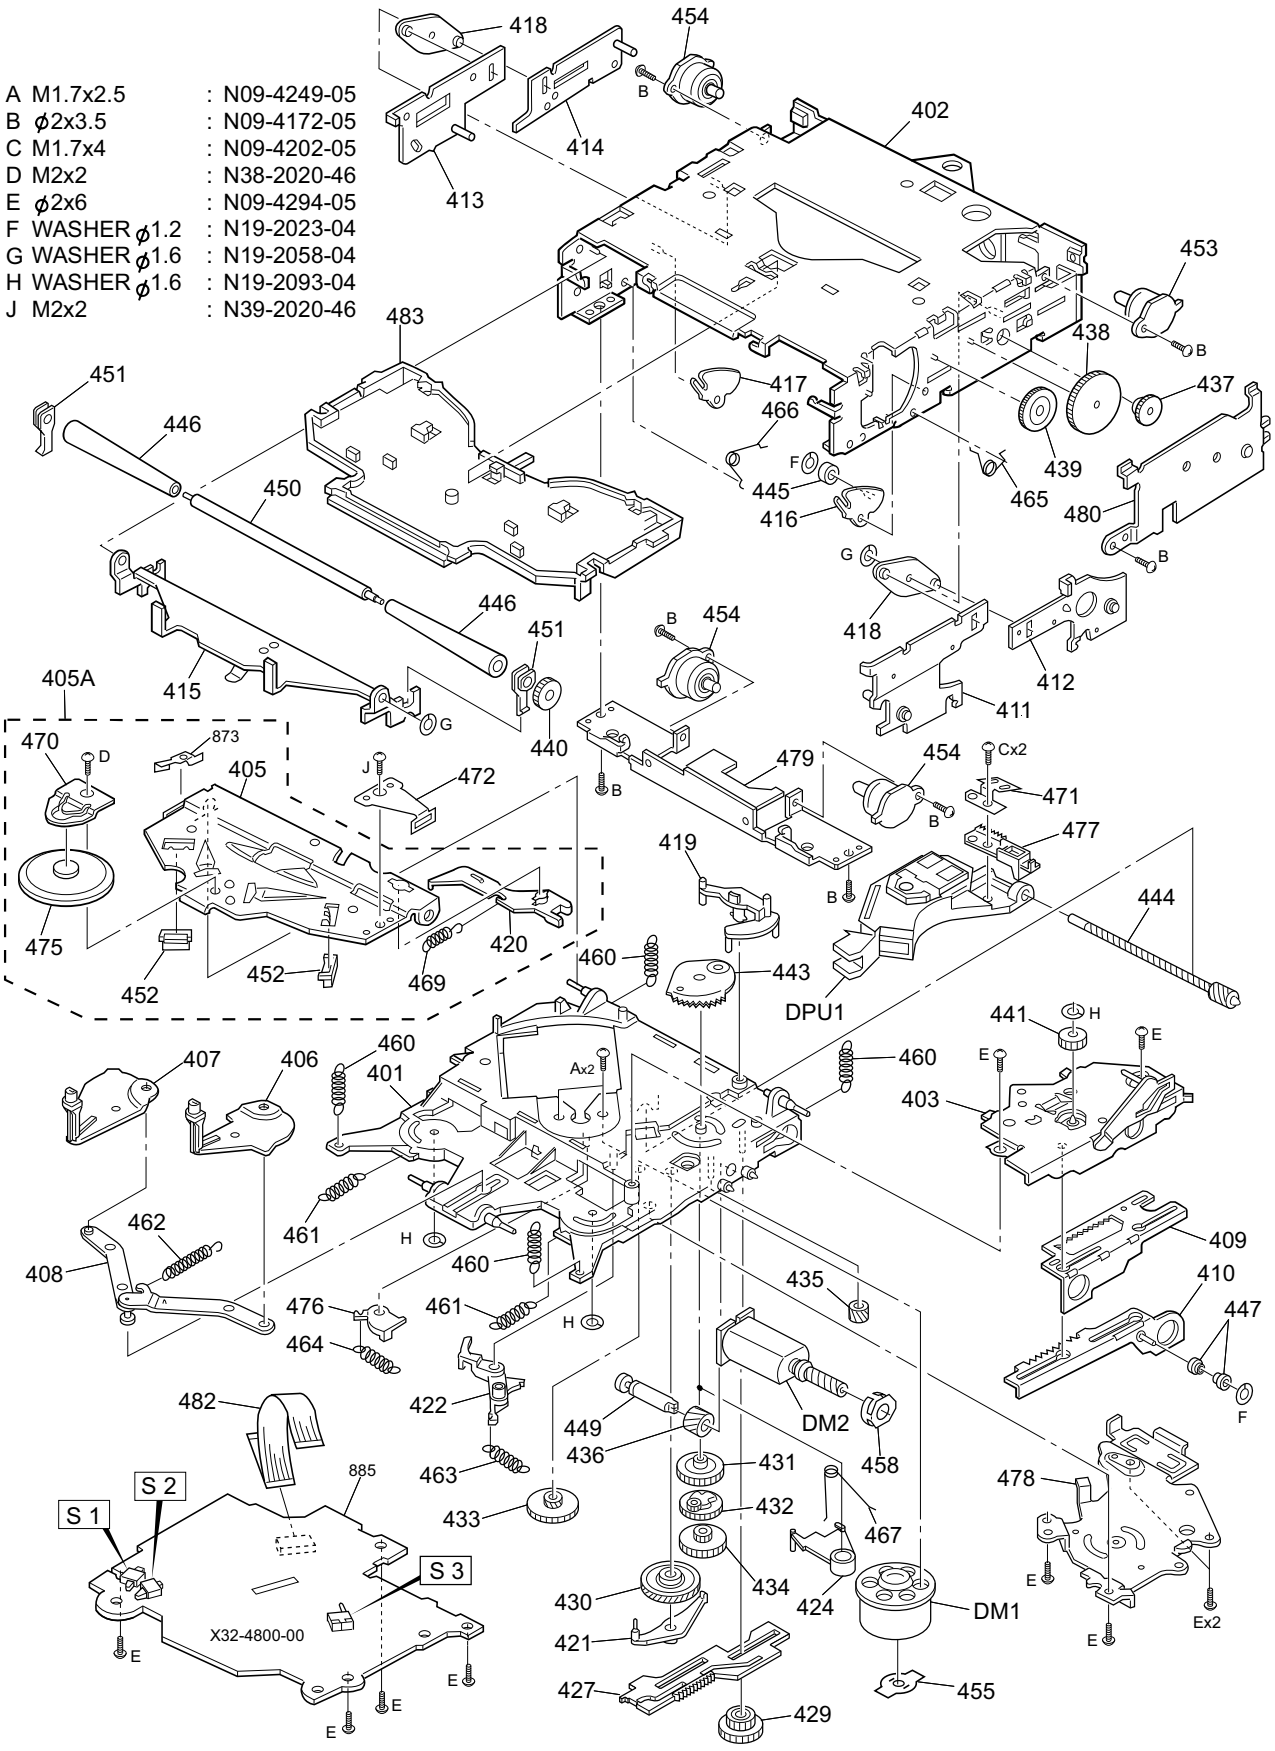

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (UNIT)

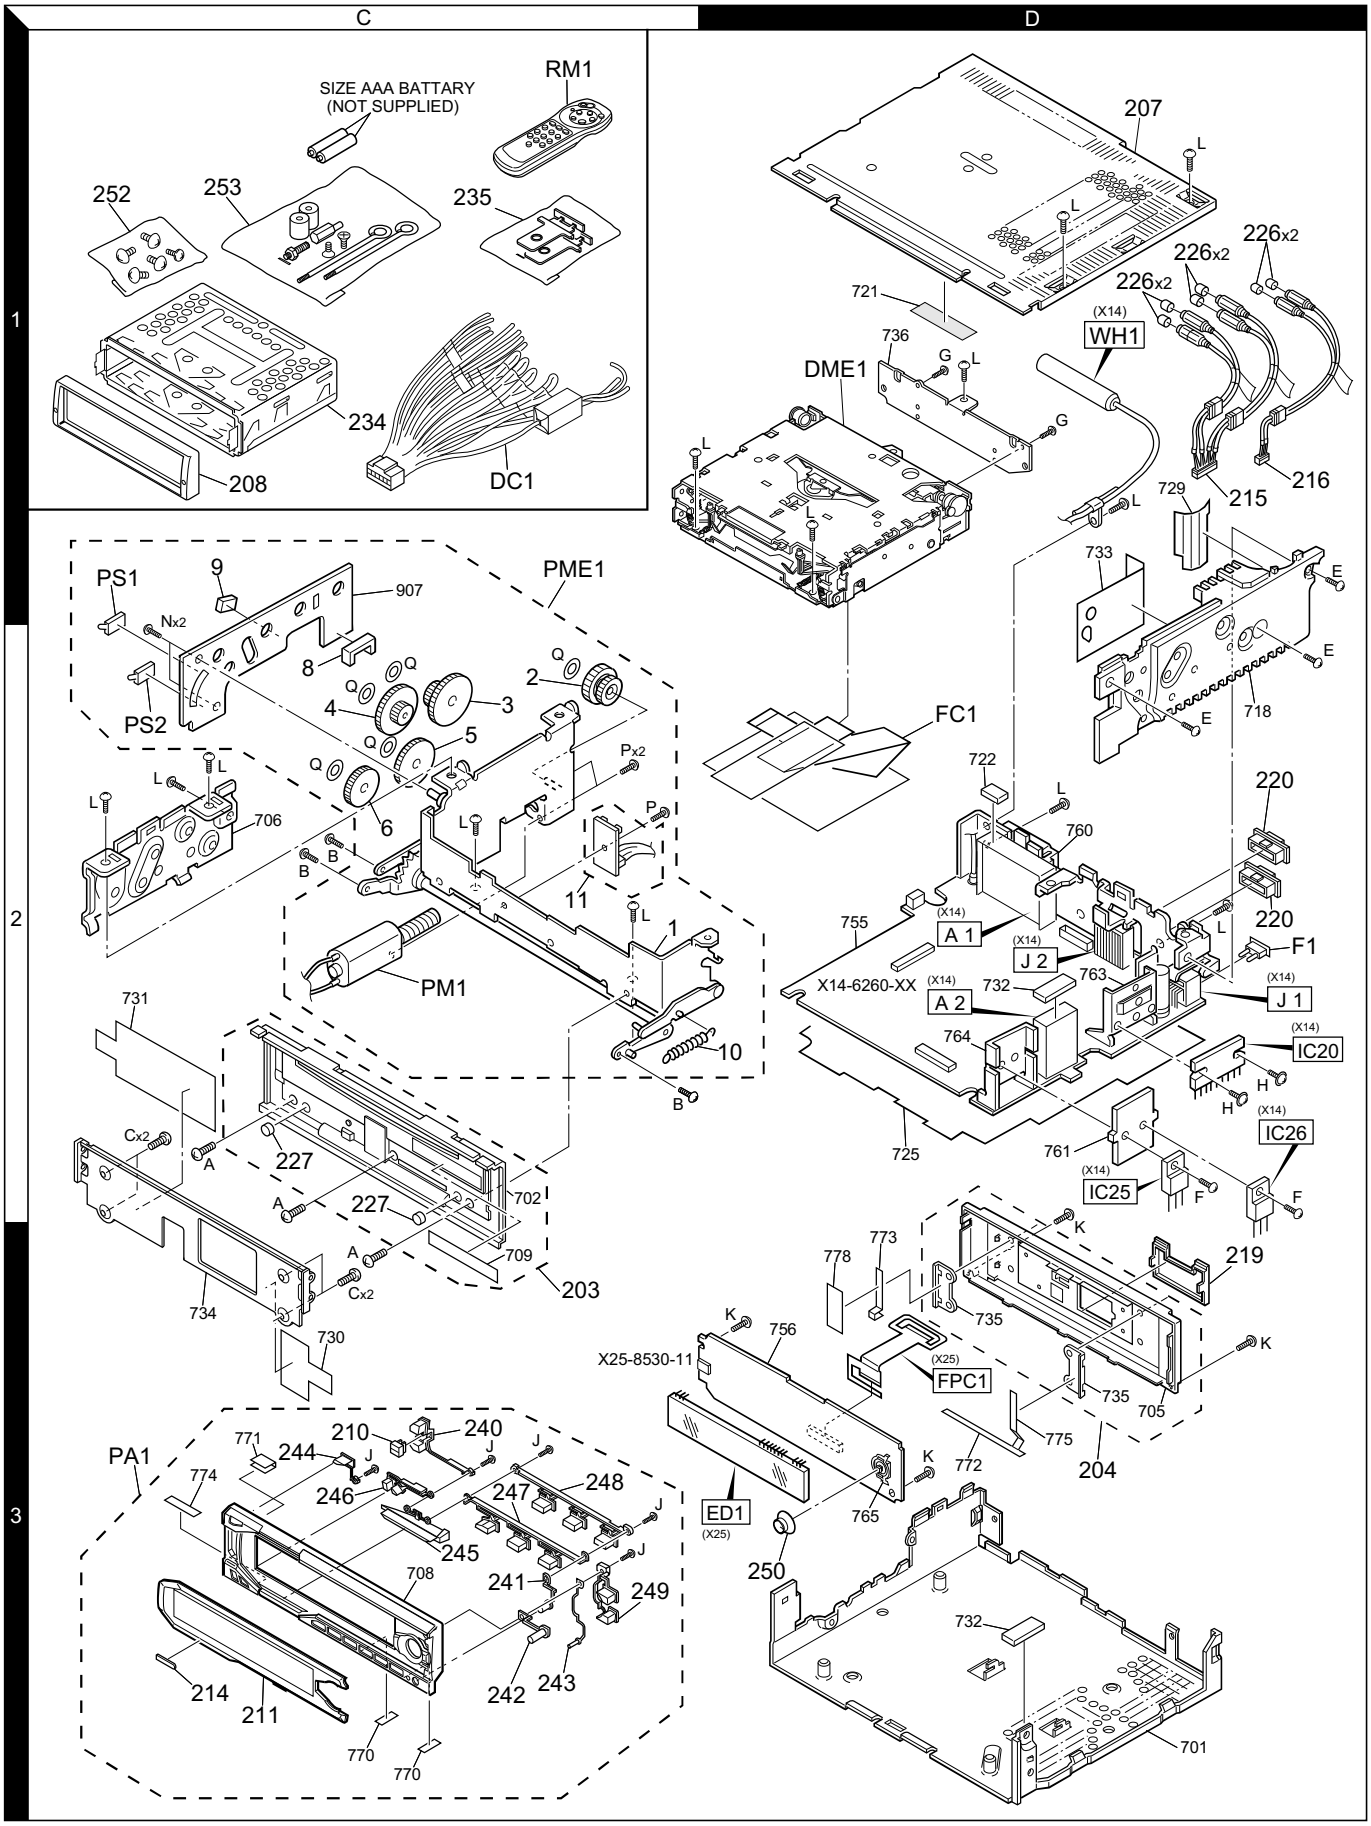

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

* New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref.No.	Add	New	PartsNo.	Description	Destination
Z919					
203	3C	*	A22-2803-13	SUB PANEL ASSY	K
203	3C	*	A22-2857-03	SUB PANEL ASSY	M
204	3D	*	A46-1685-03	REAR COVER ASSY	M
204	3D	*	A46-1695-03	REAR COVER ASSY	K
207	1D		A52-0728-42	TOP PLATE	
PA1	3C	*	A64-2119-02	PANEL ASSY	K
PA1	3C	*	A64-2120-02	PANEL ASSY	M
RM1	1C	*	A70-2006-05	REMOTE CONTROLLER ASSY (RC-601)	
208	1C		B01-0887-05	PANEL ESCUTCHEON	K
210	3C	*	B10-3157-14	FRONT GLASS	
211	3C	*	B10-3229-02	FRONT GLASS	
214	3C		B43-1227-04	BADGE	
-			B46-0100-50	WARRANTY CARD	
-		*	B58-1354-04	CAUTION CARD	
-		*	B64-1686-00	INST.MANUAL (CHINESE,KOREAN)	M
-		*	B64-1687-00	INST.MANUAL (ENGLISH)	K
-		*	B64-1688-00	INST.MANUAL (FRENCH,SPANISH)	K
-		*	B64-1694-00	INST.MANUAL (ENGLISH)	M
PME1	2C		D40-1112-35	PANEL MECHANISM ASSY	
215	1D		E30-4597-05	AUDIO CORD (4P RCA)	
216	1D		E30-4598-05	AUDIO CORD (2P RCA)	
⚠ DC1	1C		E30-4737-15	DC CORD	
FC1	2D	*	E39-0353-05	FLAT CABLE	
219	3D		F07-1077-03	COVER	
220	2D		F07-1079-05	COVER	
226	1D		F29-0049-05	INSULATING COVER	
⚠ F1	2D		F52-0006-05	FUSE (MINI BLADE TYPE) 10A	
227	3C		G11-1767-04	CUSHION	
-		*	H10-4663-12	POLYSTYRENE FOAMED FIXTURE	
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-			H25-1132-04	PROTECTION BAG (0.3X280X450)	
-		*	H54-1813-03	ITEM CARTON CASE	
234	1C		J21-7596-02	MOUNTING HARDWARE ASSY	K
235	1C		J21-7673-05	MOUNTING HARDWARE	K
240	3C	*	K24-3552-13	KNOB (VOL)	
241	3C	*	K24-3553-14	KNOB (CLK)	
242	3C	*	K24-3555-04	KNOB (OPEN/EJECT)	
243	3C	*	K24-3556-04	KNOB (RESET)	
244	3C	*	K24-3558-04	KNOB (AUD)	
245	3C	*	K24-3561-03	KNOB (SRC)	
246	3C	*	K25-1110-13	KNOB (SBF,S/S)	
247	3C	*	K25-1111-13	KNOB (1,3,5)	
248	3C	*	K25-1112-13	KNOB (2,4,6)	
249	3C	*	K25-1113-03	KNOB (DISP,S/A)	
250	3C	*	K25-1114-03	KNOB (FM,AM,FWD,REV)	
252	1C		N99-1559-05	SCREW SET	
253	1C	*	N99-1694-05	SCREW SET	K
A		3C	N09-4248-05	MACHINE SCREW (M2.6X3.5)	
B		2C	N09-4278-15	STEPPED SCREW (M2X6,PAN)	
C		3C	N09-4312-05	MACHINE SCREW (M2.6X3.5)	

Ref.No.	Add	New	PartsNo.	Description	Destination
E	1D		N30-3006-46	PAN HEAD MACHINE SCREW	
G	1D		N39-2022-46	PAN HEAD MACHIN SCREW	
J	3C		N80-2005-46	PAN HEAD TAPTITE SCREW	
K	3D		N80-2006-46	PAN HEAD TAPTITE SCREW	
L	1D		N83-3005-46	PAN HEAD TAPTITE SCREW	
DME1	1D		X92-3800-01	MECHANISM ASSY	
SYNTHESIZER UNIT (X14-6260-11 : K type 0-21 : M type)					
D10		*	B30-1575-05	LED (1608,YG)	
C8-12			CK73FB1A105K	CHIP C 1.0UF K	
C13			C90-2592-05	ELECTRO 10UF 6.3WV	
C19			CK73GB1H472K	CHIP C 4700PF K	
C20,21			CK73GB1H103K	CHIP C 0.010UF K	
C23			CK73GB1H103K	CHIP C 0.010UF K	
C24			C90-2594-05	ELECTRO 10UF 10WV	
C33			CK73GB1H103K	CHIP C 0.010UF K	
C34			CK73EB1E105K	CHIP C 1.0UF K	
C36,37			CC73GCH1H220J	CHIP C 22PF J	
C38,39			CK73GB1H103K	CHIP C 0.010UF K	
C40			CE04CW1A330M	ELECTRO 33UF 10WV	
C47			CK73FB1A105K	CHIP C 1.0UF K	
C52			CC73GCH1H121J	CHIP C 120PF J	
C53			CK73GB1H103K	CHIP C 0.010UF K	
C54			C90-2594-05	ELECTRO 10UF 10WV	
C56			CK73GB1H103K	CHIP C 0.010UF K	
C57			C90-2975-05	ELECTRO 130UF 10WV	
C58			CK73GB1C104K	CHIP C 0.10UF K	
C59,60			C90-2807-05	NP-ELEC 0.47UF 50WV	
C61			CK73GB1E333K	CHIP C 0.033UF K	
C62			CK73GB1H153K	CHIP C 0.015UF K	
C63			CK73FB1C474K	CHIP C 0.47UF K	
C64,65			C90-2600-05	ELECTRO 2.2UF 35WV	
C66			CK73GB1C823K	CHIP C 0.082UF K	
C69			CK73GB1H103K	CHIP C 0.010UF K	
C70			CE04CW1A101M	ELECTRO 100UF 10WV	
C71			C90-2600-05	ELECTRO 2.2UF 35WV	
C72			C90-5308-05	ELECTRO 1.0UF 50WV	
C76			CK73FB1A105K	CHIP C 1.0UF K	
C77			CK73FB1C474K	CHIP C 0.47UF K	
C78			CK73GB1H103K	CHIP C 0.010UF K	
C80			C90-2608-05	ELECTRO 1.0UF 50WV	
C81			CK73GB1H103K	CHIP C 0.010UF K	
C82			CE04CW0J470M	ELECTRO 47UF 6.3WV	
C83			C90-2608-05	ELECTRO 1.0UF 50WV	
C85			CE04CW1A101M	ELECTRO 100UF 10WV	
C86			CK73FB1E104K	CHIP C 0.10UF K	
C87			C92-1404-05	ELECTRO 10UF 16WV	
C88,89			CE04CW0J101M	ELECTRO 100UF 6.3WV	
C90,91			C92-1404-05	ELECTRO 10UF 16WV	
C92,93			CE04CW0J101M	ELECTRO 100UF 6.3WV	
C94			C92-1404-05	ELECTRO 10UF 16WV	
C95			CK73FB1E104K	CHIP C 0.10UF K	
C96,97			CK73GB1H103K	CHIP C 0.010UF K	
C99			CK73FB1A105K	CHIP C 1.0UF K	

E : Europe **K :** North America **M :** Other Areas
W : Without Europe

⚠ Indicates safety critical components.

PARTS LIST

* New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

SYNTHESIZER UNIT (X14-6260-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
C100			CK73FB1C224K	CHIP C	0.22UF	K	
C101			C90-2608-05	ELECTRO	1.0UF	50WV	
C102,103			CK73GB1H103K	CHIP C	0.010UF	K	
C104			CC73GCH1H220J	CHIP C	22PF	J	
C108-110			CK73GB1H103K	CHIP C	0.010UF	K	
C111			CK73GB1E223K	CHIP C	0.022UF	K	
C112			C90-2592-05	ELECTRO	10UF	6.3WV	
C113			CK73GB1C473K	CHIP C	0.047UF	K	
C114-121			CK73FB1C274K	CHIP C	0.27UF	K	
C122			C90-2600-05	ELECTRO	2.2UF	35WV	
C123			CK73GB1H103K	CHIP C	0.010UF	K	
C126,127			CK73GB1H103K	CHIP C	0.010UF	K	
C128			CK73GB1H223K	CHIP C	0.022UF	K	
C129		*	C90-5315-05	ELECTRO	3300UF	16WV	
C130,131			CK73GB1H103K	CHIP C	0.010UF	K	
C132			CE04CW1A101M	ELECTRO	100UF	10WV	
C133			C90-2608-05	ELECTRO	1.0UF	50WV	
C134			CE04CW1A101M	ELECTRO	100UF	10WV	
C135			C90-2608-05	ELECTRO	1.0UF	50WV	
C136			C92-1429-05	ELECTRO	220UF	6.3WV	
C137			C90-2962-05	ELECTRO	100UF	16WV	
C138			CK73FB1A105K	CHIP C	1.0UF	K	
C139,140			CE04NW1C100MCC	ELECTRO	10UF	16WV	
C141-144			C90-2597-05	ELECTRO	10UF	16WV	
C145-148			C90-5296-05	NP-ELECT	0.22UF	50WV	
C149			C90-5248-05	ELECTRO	100UF	10WV	
C150,151			C90-5244-05	ELECTRO	56UF	25WV	
C152			CC73ECH1H332J	CHIP C	3300PF	J	
C153-156			CK73FB1E104K	CHIP C	0.10UF	K	
C158-163			C93-1044-05	CERAMIC	2200PF	K	
C164			C90-5248-05	ELECTRO	100UF	10WV	
C165			CK73EB1E105K	CHIP C	1.0UF	K	
C166			C90-5261-05	ELECTRO	68UF	16WV	
C167			C90-2984-05	ELECTRO	47UF	50WV	
C168,169			CK73GB1H103K	CHIP C	0.010UF	K	
C170			C90-2962-05	ELECTRO	100UF	16WV	
C171			CK73FB1E104K	CHIP C	0.10UF	K	
C172-175			CK73GB1H103K	CHIP C	0.010UF	K	
C176			CK73FB1E104K	CHIP C	0.10UF	K	
C177			CK73GB1H103K	CHIP C	0.010UF	K	
C178			CE04CW1C470M	ELECTRO	47UF	16WV	
C179			CK73FB1E104K	CHIP C	0.10UF	K	
C182,183			C90-5244-05	ELECTRO	56UF	25WV	
C185			CK73GB1H102K	CHIP C	1000PF	K	
C186			C92-0671-05	ELECTRO	10UF	16WV	
C187			CK73GB1H103K	CHIP C	0.010UF	K	
C188-192			CK73GB1C104K	CHIP C	0.10UF	K	
CN2			E40-9339-05	FLAT CABLE CONNECTOR			
CN3			E40-9621-05	PIN ASSY			
CN4			E40-3261-05	PIN ASSY			
CN5			E40-5639-05	FLAT CABLE CONNECTOR			
CN6			E40-3241-05	PIN ASSY			
CN7			E40-3300-05	PIN ASSY			
⚠ J1			E58-0836-05	RECTANGULAR RECEPTACLE			

Ref. No.	Add	New	Parts No.	Description				Destination
J2			E58-0870-05	RECTANGULAR RECEPTACLE				
WH1		*	E30-4889-05	CORD WITH PLUG (ANT)				
L3			L92-0308-05	FERRITE CORE				
L5			L33-1001-05	SMALL FIXED INDUCTOR				
L6			L33-1123-05	LINE FILTER COI				
L7			L33-1124-05	CHOKE COI				
L8			L33-0385-05	SMALL FIXED INDUCTOR				
L9-11			L40-4792-78	SMALL FIXED INDUCTOR (4.7UH)				
L13			L33-1153-05	SMALL FIXED INDUCTOR				
L17,18			L40-4792-78	SMALL FIXED INDUCTOR (4.7UH)				
X1			L78-0576-05	RESONATOR (6.29MHZ)				
X2		*	L77-2739-05	CRYSTAL RESONATOR (32.768KHZ)				
X3			L78-0575-05	RESONATOR (12.58MHZ)				
F	2D		N30-3008-46	PAN HEAD MACHINE SCREW				
H	2D		N64-3010-46	PAN HEAD SEMS SCREW				
L	1D		N83-3005-46	PAN HEAD TAPTITE SCREW				
CP2			R90-1013-05	MULTI-COMP	2.2K	X2		
CP3			R90-0725-05	MULTI-COMP	1K	X2		
CP4			R90-0722-05	MULTI-COMP	2.2K	X4		
CP5			R90-0724-05	MULTI-COMP	1K	X4		
CP6,7			R90-0722-05	MULTI-COMP	2.2K	X4		
CP9			R90-0726-05	MULTI-COMP	10K	X2		
CP10			R90-1013-05	MULTI-COMP	2.2K	X2		
CP11			R90-0719-05	MULTI-COMP	4.7K	X2		
CP12			R90-0725-05	MULTI-COMP	1K	X2		
CP13,14			R90-1013-05	MULTI-COMP	2.2K	X2		
CP15			R90-0719-05	MULTI-COMP	4.7K	X2		
CP16			R90-0722-05	MULTI-COMP	2.2K	X4		
CP18			R90-1013-05	MULTI-COMP	2.2K	X2		
CP19			R90-0737-05	MULTI-COMP	100K	X2		
CP20			R90-0723-05	MULTI-COMP	47K	X2		
R1			RK73GB1J472J	CHIP R	4.7K	J	1/16W	
R4,5			RK73FB2A472J	CHIP R	4.7K	J	1/10W	
R6			RK73GB1J472J	CHIP R	4.7K	J	1/16W	
R12			RK73FB2A102J	CHIP R	1.0K	J	1/10W	
R13			RK73FB2A473J	CHIP R	47K	J	1/10W	
R15			RK73GB1J561J	CHIP R	560	J	1/16W	
R16			RK73GB1J751J	CHIP R	750	J	1/16W	
R19			RK73FB2A104J	CHIP R	100K	J	1/10W	
R20			RK73GB1J473J	CHIP R	47K	J	1/16W	
R21			RK73GB1J224J	CHIP R	220K	J	1/16W	
R23			RK73GB1J101J	CHIP R	100	J	1/16W	
R25			RK73GB1J101J	CHIP R	100	J	1/16W	
R26			RK73GB1J164J	CHIP R	160K	J	1/16W	
R27			RK73FB2A472J	CHIP R	4.7K	J	1/10W	
R28			RK73FB2A471J	CHIP R	470	J	1/10W	
R29,30			RK73FB2A222J	CHIP R	2.2K	J	1/10W	
R31			RK73FB2A104J	CHIP R	100K	J	1/10W	
R32			RK73FB2A471J	CHIP R	470	J	1/10W	
R33			RK73GB1J223J	CHIP R	22K	J	1/16W	
R34,35			RK73FB2A223J	CHIP R	22K	J	1/10W	
R36			RK73FB2A102J	CHIP R	1.0K	J	1/10W	
R38			RK73GB1J222J	CHIP R	2.2K	J	1/16W	

E : Europe **K :** North America **M :** Other Areas
W : Without Europe

⚠ Indicates safety critical components.

PARTS LIST

* New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

SYNTHESIZER UNIT (X14-6260-xx)

Ref.No.	Add	New	PartsNo.	Description			Destination
R39,40			RK73FB2A473J	CHIP R 47K	J	1/10W	
R41			RK73FB2A104J	CHIP R 100K	J	1/10W	
R42			RK73FB2A472J	CHIP R 4.7K	J	1/10W	
R43			RK73FB2A272J	CHIP R 2.7K	J	1/10W	
R44,45			RK73EB2B101J	CHIP R 100	J	1/8W	
R46,47			RK73FB2A220J	CHIP R 22	J	1/10W	
R48			RK73GB1J102J	CHIP R 1.0K	J	1/16W	
R49			RK73GB1J104J	CHIP R 100K	J	1/16W	
R50			RK73FB2A152J	CHIP R 1.5K	J	1/10W	
R51			R92-2023-05	CHIP R 820	J	1/2W	
R52			RK73FB2A101J	CHIP R 100	J	1/10W	
R53			RK73FB2A684J	CHIP R 680K	J	1/10W	
R54			RK73FB2A473J	CHIP R 47K	J	1/10W	
R55			RK73FB2A224J	CHIP R 220K	J	1/10W	
R57			RK73GB1J222J	CHIP R 2.2K	J	1/16W	
R58,59			RK73GB1J473J	CHIP R 47K	J	1/16W	
R60			RK73FB2A222J	CHIP R 2.2K	J	1/10W	
R61			RK73GB1J102J	CHIP R 1.0K	J	1/16W	
R64			RK73FB2A102J	CHIP R 1.0K	J	1/10W	
R65			RK73FB2A222J	CHIP R 2.2K	J	1/10W	
R66			RK73GB1J222J	CHIP R 2.2K	J	1/16W	
R71-73			RK73FB2A222J	CHIP R 2.2K	J	1/10W	
R74			RK73FB2A102J	CHIP R 1.0K	J	1/10W	
R75			RK73GB1J104J	CHIP R 100K	J	1/16W	
R76			RK73FB2A473J	CHIP R 47K	J	1/10W	
R77-79			RK73GB1J104J	CHIP R 100K	J	1/16W	
R80			RK73FB2A392J	CHIP R 3.9K	J	1/10W	
R81			RK73GB1J472J	CHIP R 4.7K	J	1/16W	
R82			RK73FB2A222J	CHIP R 2.2K	J	1/10W	
R83			RK73FB2A470J	CHIP R 47	J	1/10W	
R88			RK73GB1J472J	CHIP R 4.7K	J	1/16W	
R89			RK73FB2A331J	CHIP R 330	J	1/10W	
R90			RK73GB1J102J	CHIP R 1.0K	J	1/16W	
R95			RK73EB2B102J	CHIP R 1.0K	J	1/8W	
R96			RK73FB2A223J	CHIP R 22K	J	1/10W	
R97-100			RK73EB2B102J	CHIP R 1.0K	J	1/8W	
R101			RK73FB2A912J	CHIP R 9.1K	J	1/10W	
R102			RK73FB2A243J	CHIP R 24K	J	1/10W	
R103-106			RK73GB1J103J	CHIP R 10K	J	1/16W	
R107			RK73FB2A104J	CHIP R 100K	J	1/10W	
R108			R92-0366-05	CHIP R 560	J	1W	
R109			RK73GB1J472J	CHIP R 4.7K	J	1/16W	
R112			RK73GB1J224J	CHIP R 220K	J	1/16W	
R113			RK73GB1J103J	CHIP R 10K	J	1/16W	
R114			RK73FB2A103J	CHIP R 10K	J	1/10W	
R115			RK73GB1J103J	CHIP R 10K	J	1/16W	
R116			RK73GB1J472J	CHIP R 4.7K	J	1/16W	
R118			RK73FB2A104J	CHIP R 100K	J	1/10W	
R119			RK73FB2A472J	CHIP R 4.7K	J	1/10W	
R120,121			RK73EB2B102J	CHIP R 1.0K	J	1/8W	
R122-129			RK73GH1J472D	CHIP R 4.7K	D	1/16W	
R131			RK73GB1J102J	CHIP R 1.0K	J	1/16W	
R132			RK73EB2B221J	CHIP R 220	J	1/8W	
R133			RK73GB1J333J	CHIP R 33K	J	1/16W	
R134			RK73FB2A102J	CHIP R 1.0K	J	1/10W	

Ref.No.	Add	New	PartsNo.	Description			Destination
R135			RK73FB2A271J	CHIP R 270	J	1/10W	
R136			RK73GB1J473J	CHIP R 47K	J	1/16W	
R137-140			RK73GH1J562D	CHIP R 5.6K	D	1/16W	
R141,142			RK73FB2A104J	CHIP R 100K	J	1/10W	
R143-146			RK73GH1J562D	CHIP R 5.6K	D	1/16W	
R147,148			RK73FB2A471J	CHIP R 470	J	1/10W	
R149			RK73EB2B472J	CHIP R 4.7K	J	1/8W	
R150			RK73EB2B153J	CHIP R 15K	J	1/8W	
R151			RD14DB2H332J	SMALL-RD 3.3K	J	1/2W	
R153			RK73GB1J912J	CHIP R 9.1K	J	1/16W	
R154			RK73FB2A183J	CHIP R 18K	J	1/10W	
R155			RK73GB1J223J	CHIP R 22K	J	1/16W	
R156			RK73GB1J153J	CHIP R 15K	J	1/16W	
R160			RK73GB1J562J	CHIP R 5.6K	J	1/16W	
R161			RK73GH1J243D	CHIP R 24K	D	1/16W	
R162			RK73GH1J432D	CHIP R 4.3K	D	1/16W	
R163			RK73GH1J153D	CHIP R 15K	D	1/16W	
R164			RK73GB1J153J	CHIP R 15K	J	1/16W	
R165			RK73GH1J822D	CHIP R 8.2K	D	1/16W	
R167			RK73GH1J432D	CHIP R 4.3K	D	1/16W	
R168-173			RK73GB1J471J	CHIP R 470	J	1/16W	
R175-178			RK73EB2B102J	CHIP R 1.0K	J	1/8W	
R179			RK73EB2B221J	CHIP R 220	J	1/8W	
R180-185			RK73GB1J223J	CHIP R 22K	J	1/16W	
R186-191			RK73GB1J101J	CHIP R 100	J	1/16W	
R192			RK73EB2B152J	CHIP R 1.5K	J	1/8W	
R193,194			RK73FB2A222J	CHIP R 2.2K	J	1/10W	
R195			RK73GB1J224J	CHIP R 220K	J	1/16W	
R196			RK73GB1J751J	CHIP R 750	J	1/16W	
R198			RK73FB2A271J	CHIP R 270	J	1/10W	
R199			RK73FB2A103J	CHIP R 10K	J	1/10W	
R200-202			R92-2104-05	CHIP R 2.2	J	1W	
R203			RK73FB2A161J	CHIP R 160	J	1/10W	
R204			RK73FB2A152J	CHIP R 1.5K	J	1/10W	
R205-208			RK73EB2B101J	CHIP R 100	J	1/8W	
R209			RK73FB2A222J	CHIP R 2.2K	J	1/10W	
R210			RK73GH1J562D	CHIP R 5.6K	D	1/16W	
R211			RK73GH1J102D	CHIP R 1K	D	1/16W	
R213			RK73GB1J103J	CHIP R 10K	J	1/16W	
R214			RK73GB1J472J	CHIP R 4.7K	J	1/16W	
R215			RK73GB1J101J	CHIP R 100	J	1/16W	
R217			RK73GB1J472J	CHIP R 4.7K	J	1/16W	
R219			RK73GB1J473J	CHIP R 47K	J	1/16W	
R221			RK73GB1J473J	CHIP R 47K	J	1/16W	K
R222			RK73GB1J473J	CHIP R 47K	J	1/16W	M
R224			RK73EB2B102J	CHIP R 1.0K	J	1/8W	
R225			RK73GB1J102J	CHIP R 1.0K	J	1/16W	
W3-6			R92-1252-05	CHIP R 0 OHM			
BZ1			T95-0214-05	PIEZOELECTRIC VIBRATOR			
D3			HZM5.6N(B2)	ZENER DIODE			
D4			IMSA-6801	SURGE ABSORBER			
D5			STZ6.8N	ZENER DIODE			
D6			RD8.2M(B2)	ZENER DIODE			
D7			DAP202U	DIODE			

E : Europe **K :** North America **M :** Other Areas
W : Without Europe

⚠ Indicates safety critical components.

PARTS LIST

* New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
D9			DAP202U	DIODE	
D13,14			1SR154-400	DIODE	
D15			DA204K	DIODE	
D16			1SR154-400	DIODE	
D17			DAP202K	DIODE	
D18,19			HZS7A3L	ZENER DIODE	
D20			RM10ZLF	DIODE	
D21			DAP202K	DIODE	
D22			HZS6B1L	ZENER DIODE	
D24,25			DAP202U	DIODE	
D26			HZM5.6N(B2)	ZENER DIODE	
D27			DA204U	DIODE	
D28			DAN202K	DIODE	
D29,30			DAP202K	DIODE	
D31		*	HZM24N(B2)	ZENER DIODE	
D32			MTZ5.6J(B)	ZENER DIODE	
D33			HZM8.2N(B2)	ZENER DIODE	
D34			DA204K	DIODE	
D35			DAP202U	DIODE	
D36			1SR154-400	DIODE	
D37			DAN202U	DIODE	
D38			1SR154-400	DIODE	
D39			DA204U	DIODE	
D40			1SR154-400	DIODE	
D41			DAN202U	DIODE	
D42,43			1SR154-400	DIODE	
D44			RB160L-40	DIODE	
D45,46			DAN202K	DIODE	
D48			DAN202U	DIODE	
D49			HZM24N(B2)	ZENER DIODE	
D51-55			1SR154-400	DIODE	
D56			RD8.2M(B2)	ZENER DIODE	
D57			DA204U	DIODE	
IC2			UPD72042BGT	MOS-IC	
IC3			784215YGC-038	MI-COM IC	
IC4			M5237ML	IC (VOLTAGE REGULATOR)	
IC5			S-24C01B	MEMORY IC	
IC6			TDA7400	ANALOGUE IC	
IC7			TC7W02F	MOS-IC	
IC9			S-80830ANNP	MOS-IC	
IC10,11			NJM4565M-TE2	ANALOGUE IC	
IC12			L9820D013TR	ANALOGUE IC	
IC13			TC4W66F	IC	
IC14-16			NJM4565M-TE2	ANALOGUE IC	
IC17			TDA7401	ANALOGUE IC	
IC19			M5237ML	IC (VOLTAGE REGULATOR)	
IC20			TDA7386	ANALOGUE IC	
IC21			BA6219BFP-Y	ANALOGUE IC	
IC23		*	NJM2130F	ANALOGUE IC	
IC24			LM2675M-ADJ	ANALOGUE IC	
IC25			BA05T	ANALOGUE IC	
IC26			M5278D05	IC (VOLTAGE REGULATOR)	
Q1			DTC144EUA	DIGITAL TRANSISTOR	
Q2			DTA144EUA	DIGITAL TRANSISTOR	
Q3			DTA144EK	DIGITAL TRANSISTOR	

SYNTHESIZER UNIT (X14-6260-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
Q5			UMC2N	TRANSISTOR	
Q6,7			DTC124EK	DIGITAL TRANSISTOR	
Q8,9		*	CPH3105	TRANSISTOR	
Q10			DTC124EK	DIGITAL TRANSISTOR	
Q11			DTC114YK	DIGITAL TRANSISTOR	
Q12			DTC114EK	DIGITAL TRANSISTOR	
Q13			DTC144EK	DIGITAL TRANSISTOR	
Q14		*	UMG2N	TRANSISTOR	
Q16			DTA124EK	DIGITAL TRANSISTOR	
Q17			UMA2N	TRANSISTOR	
Q19		*	2SB1277(Q,R)	TRANSISTOR	
Q20			2SC2412K	TRANSISTOR	
Q21			DTA123JK	DIGITAL TRANSISTOR	
Q22			DTC124EK	DIGITAL TRANSISTOR	
Q24			2SC4081	TRANSISTOR	
Q25			DTC144EK	DIGITAL TRANSISTOR	
Q26,27			2SC2412K	TRANSISTOR	
Q28,29			DTC144EK	DIGITAL TRANSISTOR	
Q30			2SD2114K	TRANSISTOR	
Q31			DTC144EUA	DIGITAL TRANSISTOR	
Q32			DTB123YK	DIGITAL TRANSISTOR	
Q33			DTA124EUA	DIGITAL TRANSISTOR	
Q34			DTC114YK	DIGITAL TRANSISTOR	
Q35			2SB1184	TRANSISTOR	
Q39			2SB1184	TRANSISTOR	
Q40,41			DTA124EK	DIGITAL TRANSISTOR	
Q42-47			DTC343TK	DIGITAL TRANSISTOR	
Q49			DTC144EK	DIGITAL TRANSISTOR	
Q50			2SC2412K	TRANSISTOR	
Q53			DTC114YUA	DIGITAL TRANSISTOR	
Q54			DTC144EK	DIGITAL TRANSISTOR	
Q56			UMC2N	TRANSISTOR	
Q57			2SC4081	TRANSISTOR	
Q59		*	CPH3105	TRANSISTOR	
Q63			2SB1443	TRANSISTOR	
A1			W02-3119-15	FM/AM FRONT-END	
A2		*	W02-3221-05	ELECTRIC CIRCUIT MODULE	

SWITCH UNIT (X25-8530-11)

D7,8			B30-1566-05	LED (1608,RED)		
D10			B30-1564-05	LED (1608,BLUE)		
D11			B30-1575-05	LED (1608,YG)		
D20			B30-1564-05	LED (1608,BLUE)		
C1			CK73EB1C225K	CHIP C	2.2UF	K
C2			CK73GB1H103K	CHIP C	0.010UF	K
C3			CK73FB1H103K	CHIP C	0.010UF	K
C4 ,5			CK73GB1C104K	CHIP C	0.10UF	K
C10,11			CK73GB1C104K	CHIP C	0.10UF	K
C12			CK73GB1H103K	CHIP C	0.010UF	K
C13			CK73GB1C104K	CHIP C	0.10UF	K
C14			CK73GB1H103K	CHIP C	0.010UF	K
C15			C92-0628-05	CHIP-TAN	10UF	10WV
C16,17			CK73GB1H103K	CHIP C	0.010UF	K
C18,19			CK73FB1H103K	CHIP C	0.010UF	K

E : Europe **K :** North America **M :** Other Areas
W : Without Europe

⚠ Indicates safety critical components.

PARTS LIST

*New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
CN1			E40-9620-05	FLAT CABLE CONNECTOR	
FPC1	3D		J84-0077-14	FLEXIBLE PRINTED WIRING BOARD	
L2			L40-4792-78	SMALL FIXED INDUCTOR (4.7UH)	
L3,4			L92-0331-05	CHIP FERRITE	
X1			L78-0556-05	RESONATOR	
CP1			R90-1031-05	MULTI-COMP 22 X2	
CP5			R90-0726-05	MULTI-COMP 10K X2	
CP6			R90-0725-05	MULTI-COMP 1K X2	
CP7,8			R90-0724-05	MULTI-COMP 1K X4	
CP9			R90-1022-05	MULTI-COMP 470 X2	
CP10,11			R90-0748-05	MULTI-COMP 47K X4	
CP12			R90-1022-05	MULTI-COMP 470 X2	
R1			R92-3078-05	CHIP R 680 J 1/4W	
R2			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R3			RK73EB2B471J	CHIP R 470 J 1/8W	
R4			RK73EB2B102J	CHIP R 1.0K J 1/8W	
R25,26			RK73EB2B391J	CHIP R 390 J 1/8W	
R27,28			R92-3078-05	CHIP R 680 J 1/4W	
R30			RK73GB1J473J	CHIP R 47K J 1/16W	
R31			RK73GB1J103J	CHIP R 10K J 1/16W	
R32,33			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R34			RK73GB1J221J	CHIP R 220 J 1/16W	
R35			RK73GB1J473J	CHIP R 47K J 1/16W	
R36			RK73GB1J471J	CHIP R 470 J 1/16W	
R37			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R39			RK73GB1J473J	CHIP R 47K J 1/16W	
R41			RK73GB1J220J	CHIP R 22 J 1/16W	
R43			RK73GB1J103J	CHIP R 10K J 1/16W	
R47			RK73GB1J473J	CHIP R 47K J 1/16W	
R48			RK73GB1J823J	CHIP R 82K J 1/16W	
R49			RK73GB1J222J	CHIP R 2.2K J 1/16W	
R53			RK73GB1J221J	CHIP R 220 J 1/16W	
R61			RK73GB1J104J	CHIP R 100K J 1/16W	
S1,2			S70-0841-05	TACT SWITCH	
S3,4			S70-0815-05	TACT SWITCH	
S5			S70-0841-05	TACT SWITCH	
S6			S70-0863-05	TACT SWITCH	
S7		*	S70-0874-05	TACT SWITCH	
S12-17			S70-0841-05	TACT SWITCH	
S18			S70-0863-05	TACT SWITCH	
S19,20			S70-0841-05	TACT SWITCH	
S21			S70-0863-05	TACT SWITCH	
S23			S70-0841-05	TACT SWITCH	
D1			DA204K	DIODE	
D2		*	STZ6.8N	ZENER DIODE	
D3			DA204K	DIODE	
D5,6		*	STZ6.8N	ZENER DIODE	
D12-14			HZM5.6N(B2)	ZENER DIOD	
D15			IMN10	DIODE	
D16			DA227	DIODE	
D17			HZM5.6N(B2)	ZENER DIODE	
D18			FTZ6.8E	ZENER DIODE	
D25,26			HZM5.6N(B2)	ZENER DIODE	

SWITCH UNIT (X25-8530-11)

Ref. No.	Add	New	Parts No.	Description	Destination
ED1		*	CN1930M	FLUORESCENT INDICATOR TUBE	
IC1			HA12187FP	ANALOGUE IC	
IC3		*	MB90583BPFV110	MI-COM IC	
IC4			RS-171	ANALOGUE IC	
Q5			DTA144EUA	DIGITAL TRANSISTOR	
Q10			DTC114EUA	DIGITAL TRANSISTOR	
Q11			DTA114YK	DIGITAL TRANSISTOR	
Q12,13			DTC114EUA	DIGITAL TRANSISTOR	

PROCESSOR UNIT (X32-4800-00)

Ref. No.	Add	New	Parts No.	Description	Destination
C1			C92-0633-05	CHIP-TAN 22UF 10WV	
C2,3			CK73GB1H222K	CHIP C 2200PF K	
C4,5			C92-0628-05	CHIP-TAN 10UF 10WV	
C7			CK73EB1A475K	CHIP C 4.7UF K	
C8,9			CK73GB1C104K	CHIP C 0.10UF K	
C10,11			CK73GB1H102K	CHIP C 1000PF K	
C12-14			CK73GB1C104K	CHIP C 0.10UF K	
C15			CK73EB1A475K	CHIP C 4.7UF K	
C16			C92-0628-05	CHIP-TAN 10UF 10WV	
C17,18			CK73GB1H102K	CHIP C 1000PF K	
C19			CK73FB1A105K	CHIP C 1.0UF K	
C20			CK73GB1H102K	CHIP C 1000PF K	
C21			CC73GCH1H150J	CHIP C 15PF J	
C22			C92-1359-05	CHIP-TAN 10UF 16WV	
C23			CK73GB1H102K	CHIP C 1000PF K	
C24			CC73GCH1H471J	CHIP C 470PF J	
C25			CK73GB1C104K	CHIP C 0.10UF K	
C26			CK73GB1H472K	CHIP C 4700PF K	
C27,28			CK73FB1A105K	CHIP C 1.0UF K	
C29-31			CK73GB1C104K	CHIP C 0.10UF K	
C32			C92-1359-05	CHIP-TAN 10UF 16WV	
C33,34			CK73GB1C104K	CHIP C 0.10UF K	
C35			CC73GCH1H221J	CHIP C 220PF J	
C36			CK73GB1H102K	CHIP C 1000PF K	
C37			CK73GB1H103K	CHIP C 0.010UF K	
C39			CK73GB1H222K	CHIP C 2200PF K	
C40			CK73GB1C104K	CHIP C 0.10UF K	
C41			CK73GB1H103K	CHIP C 0.010UF K	
C42			CC73GCH1H101J	CHIP C 100PF J	
C43			CK73GB1C473K	CHIP C 0.047UF K	
C45			CK73GB1C104K	CHIP C 0.10UF K	
C46			CK73GB1H103K	CHIP C 0.010UF K	
C48			CK73GB1H103K	CHIP C 0.010UF K	
C49			CK73GB1C104K	CHIP C 0.10UF K	
C50			CK73GB1H103K	CHIP C 0.010UF K	
C52			CK73EB1A475K	CHIP C 4.7UF K	
C53			CK73GB1H103K	CHIP C 0.010UF K	
C54			CK73EB1A475K	CHIP C 4.7UF K	
C55			CK73GB1C104K	CHIP C 0.10UF K	
C56			C92-0628-05	CHIP-TAN 10UF 10WV	
C58			C92-0628-05	CHIP-TAN 10UF 10WV	
C60			CK73EB1A475K	CHIP C 4.7UF K	
C61			CK73GB1C273K	CHIP C 0.027UF K	
C62			CK73FB1C274K	CHIP C 0.27UF K	
C63			CK73GB1H472K	CHIP C 4700PF K	

E : Europe **K :** North America **M :** Other Areas
W : Without Europe

⚠ Indicates safety critical components.

PARTS LIST

* New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

PROCESSOR UNIT (X32-4800-00)

Ref. No.	Add	New	Parts No.	Description	Destination
C64			CK73GB1H222K	CHIP C 2200PF K	
C65			C92-1359-05	CHIP-TAN 10UF 16WV	
C66			CK73EB1A475K	CHIP C 4.7UF K	
C67			CK73GB1C104K	CHIP C 0.10UF K	
C68,69			CK73EB1A475K	CHIP C 4.7UF K	
C70			CK73GB1H102K	CHIP C 1000PF K	
C71-74			CK73GB1C104K	CHIP C 0.10UF K	
C75			CK73GB1H103K	CHIP C 0.010UF K	
C76			CK73GB1H102K	CHIP C 1000PF K	
C77,78			CC73GCH1H471J	CHIP C 470PF J	
C79,80			CC73GCH1H680J	CHIP C 68PF J	
C81			CK73EB1A475K	CHIP C 4.7UF K	
C82,83			C92-0628-05	CHIP-TAN 10UF 10WV	
C84,85			C92-0633-05	CHIP-TAN 22UF 10WV	
C86			C92-0628-05	CHIP-TAN 10UF 10WV	
C87			C92-0093-05	CHIP C 100UF 6.3WV	
C100			CK73GB1H103K	CHIP C 0.010UF K	
C101			CK73GB1C104K	CHIP C 0.10UF K	
CN1			E40-9339-05	FLAT CABLE CONNECTOR	
CN2			E40-9536-05	FLAT CABLE CONNECTOR	
L1-4			L92-0308-05	FERRITE CORE	
L5			L40-1001-78	SMALL FIXED INDUCTOR (10UH)	
X1		*	L78-0810-05	RESONATOR	
X2			L78-0573-05	RESONATOR	
CP1-7			R90-0714-05	MULTI-COMP 10K X4	
CP8-10			R90-1012-05	MULTI-COMP 22 X4	
R1,2			RK73GB1J183J	CHIP R 18K J 1/16W	
R4-7			RK73GB1J101J	CHIP R 100 J 1/16W	
R8			RK73GB1J681J	CHIP R 680 J 1/16W	
R9			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R10			RK73GB1J103J	CHIP R 10K J 1/16W	
R12			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R13			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R14,15			RK73FB2A100J	CHIP R 10 J 1/10W	
R16-19			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R20,21			RK73GB1J222J	CHIP R 2.2K J 1/16W	
R22,23			RK73GB1J122J	CHIP R 1.2K J 1/16W	
R24-26			RK73GB1J222J	CHIP R 2.2K J 1/16W	
R27			RK73GB1J122J	CHIP R 1.2K J 1/16W	
R28,29			RK73GB1J222J	CHIP R 2.2K J 1/16W	
R30-33			RK73GB1J122J	CHIP R 1.2K J 1/16W	
R34			RK73GB1J104J	CHIP R 100K J 1/16W	
R35			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R36,37			RK73GB1J4R7J	CHIP R 4.7 J 1/16W	
R38,39			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R40			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R41			RK73GB1J471J	CHIP R 470 J 1/16W	
R42			RK73GB1J104J	CHIP R 100K J 1/16W	
R43			RK73GB1J393J	CHIP R 39K J 1/16W	
R44			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R45			RK73GB1J103J	CHIP R 10K J 1/16W	
R46			RK73GB1J912J	CHIP R 9.1K J 1/16W	
R47			RK73GB1J332J	CHIP R 3.3K J 1/16W	
R48			RK73GB1J682J	CHIP R 6.8K J 1/16W	
R49			RK73GB1J103J	CHIP R 10K J 1/16W	
R50			RK73GB1J123J	CHIP R 12K J 1/16W	
R51			RK73GB1J824J	CHIP R 820K J 1/16W	
R52			RK73GB1J103J	CHIP R 10K J 1/16W	
R53			RK73GB1J563J	CHIP R 56K J 1/16W	
R54			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R55			RK73GB1J103J	CHIP R 10K J 1/16W	
R56			RK73GB1J682J	CHIP R 6.8K J 1/16W	
R57			RK73GB1J622J	CHIP R 6.2K J 1/16W	
R58			RK73GB1J122J	CHIP R 1.2K J 1/16W	
R59			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R60			RK73GB1J183J	CHIP R 18K J 1/16W	
R63			RK73GB1J103J	CHIP R 10K J 1/16W	
R64			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R65			RK73EB2B100J	CHIP R 10 J 1/8W	
R66			RK73GB1J103J	CHIP R 10K J 1/16W	
R67			RK73EB2B4R7J	CHIP R 4.7 J 1/8W	
R68			RK73FB2A820J	CHIP R 82 J 1/10W	
R73			RK73FB2A103J	CHIP R 10K J 1/10W	
R75,76			RK73GB1J103J	CHIP R 10K J 1/16W	
R77,78			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R79			RK73GB1J223J	CHIP R 22K J 1/16W	
R80,81			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R82			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R83			RK73GB1J223J	CHIP R 22K J 1/16W	
R84			RK73GB1J331J	CHIP R 330 J 1/16W	
R85			RK73GB1J220J	CHIP R 22 J 1/16W	
R86			RK73GB1J222J	CHIP R 2.2K J 1/16W	
R87			RK73GB1J122J	CHIP R 1.2K J 1/16W	
R88			RK73GB1J104J	CHIP R 100K J 1/16W	
R90			RK73GB1J101J	CHIP R 100 J 1/16W	
R91			RK73GB1J222J	CHIP R 2.2K J 1/16W	
R94			RK73GB1J512J	CHIP R 5.1K J 1/16W	
R95			RK73GB1J222J	CHIP R 2.2K J 1/16W	
R96-99			RK73GB1J203J	CHIP R 20K J 1/16W	
R100			RK73GB1J103J	CHIP R 10K J 1/16W	
R101			RK73GB1J512J	CHIP R 5.1K J 1/16W	
R102			RK73FB2A4R7J	CHIP R 4.7 J 1/10W	
R103			RK73GB1J103J	CHIP R 10K J 1/16W	
R104			RK73GB1J681J	CHIP R 680 J 1/16W	
R107,108			RK73GB1J332J	CHIP R 3.3K J 1/16W	
R109,110			RK73GB1J562J	CHIP R 5.6K J 1/16W	
R200			RK73GB1J103J	CHIP R 10K J 1/16W	
R202			RK73GB1J681J	CHIP R 680 J 1/16W	
W1			R92-1252-05	CHIP R 0 OHM	
W61,62			R92-1252-05	CHIP R 0 OHM	
W69-72			R92-1252-05	CHIP R 0 OHM	
S1,2			S68-0838-05	PUSH SWITCH	
S3			S68-0823-05	PUSH SWITCH	
D1-3			DAN202U	DIODE	
IC1		*	M30620MCAA56GP	MI-COM IC	
IC2		*	UPD63724B	MOS-IC	
IC3			TC74HC157AF	IC (MULTIPLEXER)	
IC4			LP2982-3.3	ANALOGUE IC	

E : Europe **K :** North America **M :** Other Areas
W : Without Europe

⚠ Indicates safety critical components.

PARTS LIST

* New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref.No.	w	New	PartsNo.	Description	Destination
IC5		*	STA013	MOS-IC	
IC6		*	MSM5416125A-50	MEMORY IC	
IC7			TC7SH04F	MOS-IC	
IC8			TA78L05F	IC (VOLTAGE REGULATOR/ +5V)	
IC9			PCM1716E	MOS-IC	
IC10		*	UPC2575GS	ANALOGUE IC	
IC11			BA5917AFP	ANALOGUE IC	
IC12			NJM4565MD	IC (OP AMP X2)	
IC13			NJM2903M	IC (COMPARATOR X2)	
Q1			MCH6101	TRANSISTOR	
Q2			DTC124EUA	DIGITAL TRANSISTOR	
Q3			MCH6101	TRANSISTOR	
Q4			DTC124EUA	DIGITAL TRANSISTOR	
Q5-7			2SK3018	FET	
Q8			MCH6101	TRANSISTOR	
CD MECHANISM ASSY (X92-3800-01)					
401	2A		A10-4482-01	CHASSIS	
402	1B		A10-4225-33	CHASSIS CALKING ASSY	
403	2B		A11-0915-43	SUB CHASSIS CALKING ASSY	
405	2A		D10-3082-13	ARM	
405A	2A		D10-4038-23	ARM ASSY	
406	2A		D10-4306-14	ARM ASSY	
407	2A		D10-4305-14	ARM ASSY	
408	3A		D10-3087-44	ARM ASSY	
409	3B		D10-3092-03	SLIDER	
410	3B		D10-3093-04	SLIDER ASSY	
411	2B		D10-3095-04	SLIDER ASSY	
412	2B		D10-3096-04	SLIDER ASSY	
413	1A		D10-3099-24	SLIDER ASSY	
414	1A		D10-3100-04	SLIDER ASSY	
415	2A		D10-4123-24	LEVER ASSY	
416	1B		D10-4004-04	LEVER ASSY	
417	1B		D10-4006-04	LEVER	
418	1A		D10-4007-04	LEVER	
419	2B		D10-4008-14	LEVER	
420	2A		D10-4009-23	ARM	
421	3A		D10-4010-04	LEVER	
422	3A		D10-4307-04	LEVER ASSY	
424	3B		D10-4050-04	ARM	
427	3B		D13-1442-03	RACK (GEAR)	
429	3B		D13-1231-04	GEAR	
430	3A		D13-1240-04	GEAR	
431	3B		D13-1233-04	GEAR	
432	3B		D13-1234-14	GEAR ASSY	
433	3A		D13-1441-03	GEAR	
434	3B		D13-1232-04	GEAR	
435	3B		D13-1241-04	GEAR	
436	3B		D13-1242-04	GEAR	
437	1B		D13-1243-04	GEAR	
438	1B		D13-1244-04	GEAR	
439	1B		D13-1245-14	GEAR	
440	2A		D13-1246-04	GEAR	
441	2B		D13-1247-04	GEAR	
443	2B		D13-1249-04	GEAR ASSY	

SYNTHESIZERUNIT(X14-6260-xx)

Ref.No.	Add	New	PartsNo.	Description	Destination
444	2B		D13-2090-04	GEAR ASSY	
445	1B		D14-0668-04	ROLLER	
446	1A		D14-0670-04	ROLLER	
447	3B		D14-0674-04	ROLLER	
449	3A		D21-2228-14	SHAFT	
450	1A		D21-2229-04	SHAFT	
451	1A		D23-0925-24	RETAINER	
452	2A		D32-0614-04	STOPPER	
453	1B		D39-0223-05	DAMPER	
454	2B		D39-0224-05	DAMPER	
455	3B		F09-1246-04	SHEET	
458	3B		F09-1266-14	SHEET	
460	2A		G01-2770-04	EXTENSION SPRING	
461	3A		G01-2771-04	EXTENSION SPRING	
462	3A		G01-2772-24	EXTENSION SPRING	
463	3A		G01-2773-14	EXTENSION SPRING	
464	3A		G01-2774-34	EXTENSION SPRING	
465	1B		G01-2775-04	TORSION COIL SPRING	
466	1B		G01-2776-14	TORSION COIL SPRING	
467	3B		G01-2777-24	TORSION COIL SPRING	
469	2A		G01-2844-04	EXTENSION SPRING	
470	2A		G02-1231-04	FLAT SPRING	
471	2B		G02-1232-24	FLAT SPRING	
472	2A		G02-1241-24	FLAT SPRING	
475	2A		J11-0613-13	CLAMPER	
476	3A		J19-4678-13	HOLDER	
477	2B		J19-4679-24	HOLDER	
478	3B		J21-7684-13	MOUNTING HARDWARE	
479	2A		J21-7686-13	MOUNTING HARDWARE	
480	1B		J21-7690-03	MOUNTING HARDWARE	
482	3A		J84-0107-05	FLEXIBLE PRINTED WIRING BOARD	
483	1A		J90-0757-22	GUIDE	
A	2A		N09-4249-05	MACHINE SCREW (M1.7X2.5,LOCK)	
B	1B		N09-4172-05	TAPPING SCREW (2X3.5,C)	
C	2B		N09-4202-05	STEPPED SCREW	
D	2A		N38-2020-46	PAN HEAD MACHIN SCREW	
E	3A		N09-4294-05	TAPTITE SCREW (BIND P TAPTIT)	
F	3B		N19-2023-04	FLAT WASHER	
G	2A		N19-2058-04	FLAT WASHER	
H	3A		N19-2093-04	FLAT WASHER	
J	2A		N39-2020-46	PAN HEAD MACHIN SCREW	
DM1	3B		T42-1026-04	DC MOTOR ASSY (SP)	
DM2	3B		T42-1028-04	DC MOTOR ASSY (SLD)	
DPU1	2B		T25-0215-05	OPTICAL PICKUP HEAD	
PANEL MECHANISM ASSY (D40-1112-35)					
1	2C		A11-0960-18	SUB CHASSIS ASSY	
2	2C		D19-0626-08	CLUTCH GEAR ASSY	
3	2C		D13-1409-08	GEAR B	
4	2C		D13-1410-18	GEAR C	
5	2C		D13-1411-18	GEAR D	
6	2C		D13-1412-18	GEAR E	
8	2C		E40-9654-08	PIN ASSY (5P)	

E : Europe **K** : North America **M** : Other Areas
W : Without Europe

⚠ Indicates safety critical components.

PARTS LIST

* New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
9	2C		E40-9655-08	PIN ASSY(2P)	
10	2C		G01-2912-08	TENSION SPRING	
11	2C		J26-4032-18	RIGID PRINTED WIRING BOARD	
N	2C		N09-4171-08	SCREW (M2X4)	
P	2C		N38-2030-45	SCREW (M2X3)	
Q	2C		N29-0512-08	FLAT WASHER	
PS1,2	2C		S68-0832-08	PUSH SWITCH	
PM1	2C		T42-0786-08	MOTOR ASSY	

Ref. No.	Add	New	Parts No.	Description	Destination

E : Europe **K :** North America **M :** Other Areas
W : Without Europe

⚠ Indicates safety critical components.