
9. EXPLODED VIEWS AND PARTS LIST

NOTES : • *Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
• *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
• *Screw adjacent to▽ mark on the product are used for disassembly.*
• *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions,apply as you think it appropriate.)*

9.1 PACKING

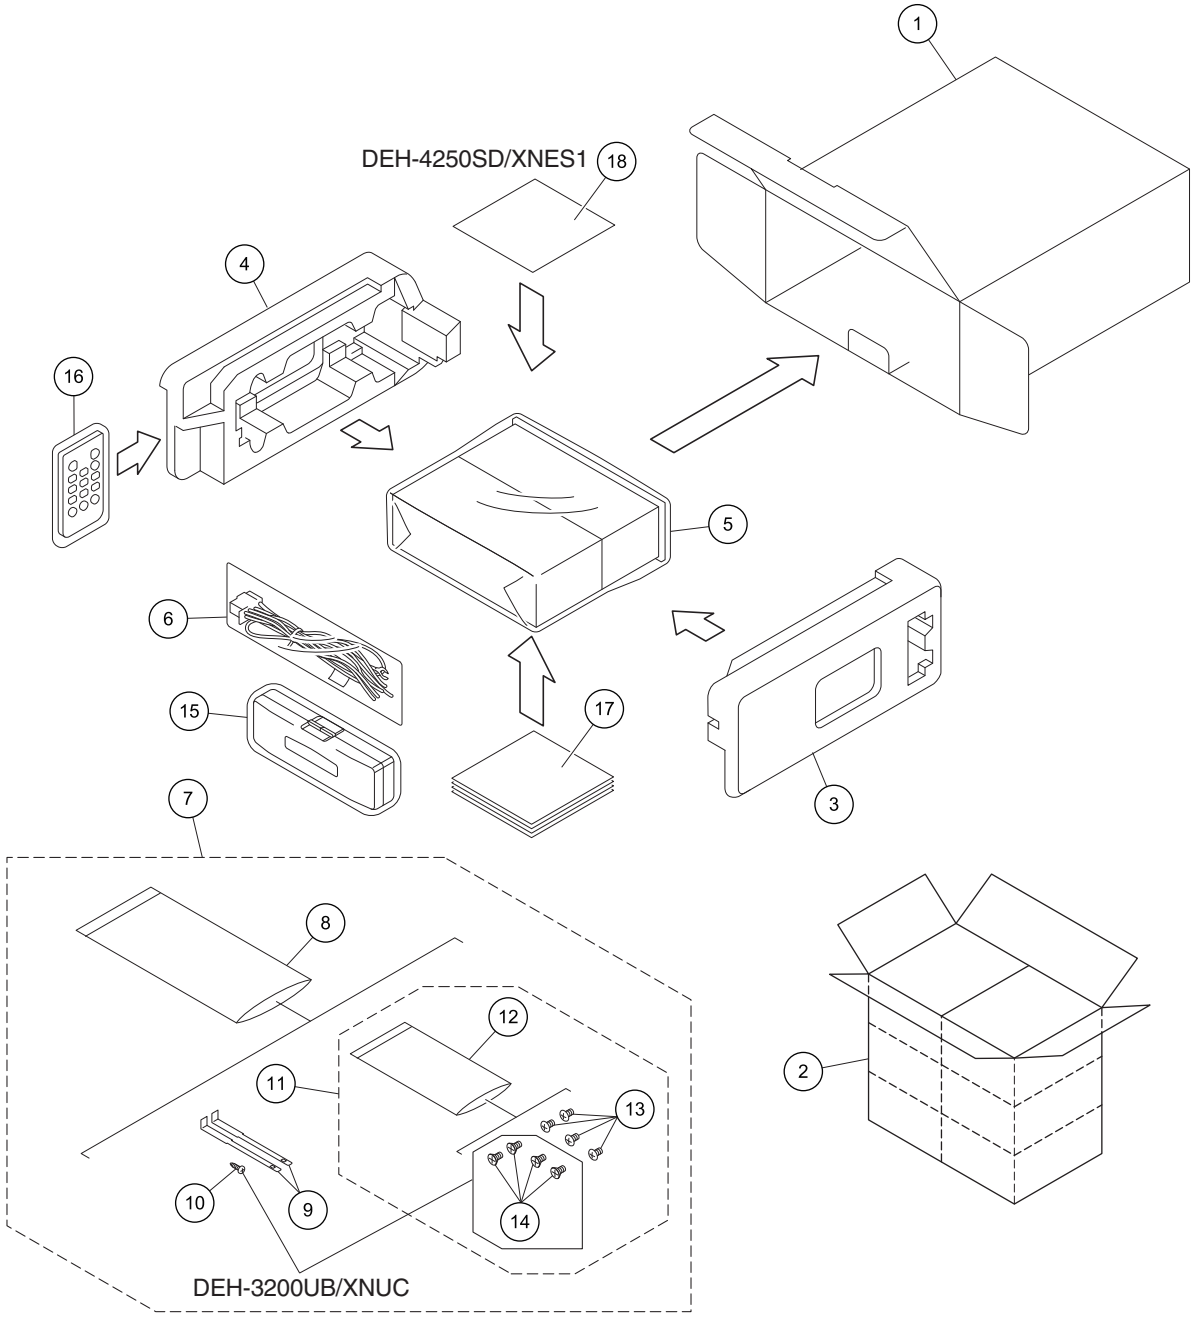

PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Unit Box	See Contrast table (2)
	2	Contain Box	See Contrast table (2)
	3	Protector	See Contrast table (2)
	4	Protector	See Contrast table (2)
	5	Polyethylene Bag	See Contrast table (2)
	6	Cord Assy	YDP5039
	7	Accessory Assy	See Contrast table (2)
	8	Polyethylene Bag	CEG1160
	9	Handle	CND3707
	10	Screw	See Contrast table (2)
	11	Screw Assy	See Contrast table (2)
*	12	Polyethylene Bag	CEG-127
	13	Screw	TRZ50P080FTC
	14	Screw	See Contrast table (2)
	15	Case Assy	See Contrast table (2)
	16	Remote Control Unit	CXE2758
	17-1	Owner's Manual	See Contrast table (2)
	17-2	Installation Manual	See Contrast table (2)
*	17-3	Warranty Card	See Contrast table (2)
*	17-4	Service Network	See Contrast table (2)
*	18	Service Network	See Contrast table (2)

(2) CONTRAST TABLE


DEH-4250SD/XNES, DEH-4250SD/XNES1, DEH-4290SD/XNID and DEH-3200UB/XNUC are constructed the same except for the following:

Mark	No.	Description	DEH-4250SD/XNES	DEH-4250SD/XNES1	DEH-4290SD/XNID	DEH-3200UB/XNUC
	1	Unit Box	CHG7062	CHG7063	CHG7064	CHG7118
	2	Contain Box	CHL7062	CHL7063	CHL7064	CHL7118
	3	Protector	CHP3931	CHP3931	CHP3931	CHP3941
	4	Protector	CHP3932	CHP3932	CHP3932	CHP3942
	5	Polyethylene Bag	QEG3001	QEG3001	QEG3001	CEG1173
	7	Accessory Assy	YEA5084	YEA5084	YEA5084	*YEA5071
	10	Screw	Not Used	Not Used	Not Used	BPZ20P060FTC
	11	Screw Assy	YEA5082	YEA5082	YEA5082	YEA5072
	14	Screw	Not Used	Not Used	Not Used	CRZ50P090FTC
	15	Case Assy	YXB5009	YXB5009	YXB5009	Not Used
	17-1	Owner's Manual	CRD4434	CRD4434	CRB3094	CRD4457
	17-2	Installation Manual	CRD4437	CRD4437	Not Used	CRD4458
*	17-3	Warranty Card	Not Used	CRY1250	CRY1304	CRY1276
*	17-4	Service Network	Not Used	Not Used	CRY1305	Not Used
*	18	Service Network	Not Used	CRY1251	Not Used	Not Used

Owner's Manual,Installation Manual

Part No.	Language
CRD4434	English, Spanish(Espanol), Portuguese(B), Traditional Chinese, Arabic
CRD4437	English, Spanish(Espanol), Portuguese(B), Traditional Chinese, Arabic
CRB3094	English
CRD4457	English, French, Spanish(Espanol)
CRD4458	English, French, Spanish(Espanol)

9.2 EXTERIOR(1)

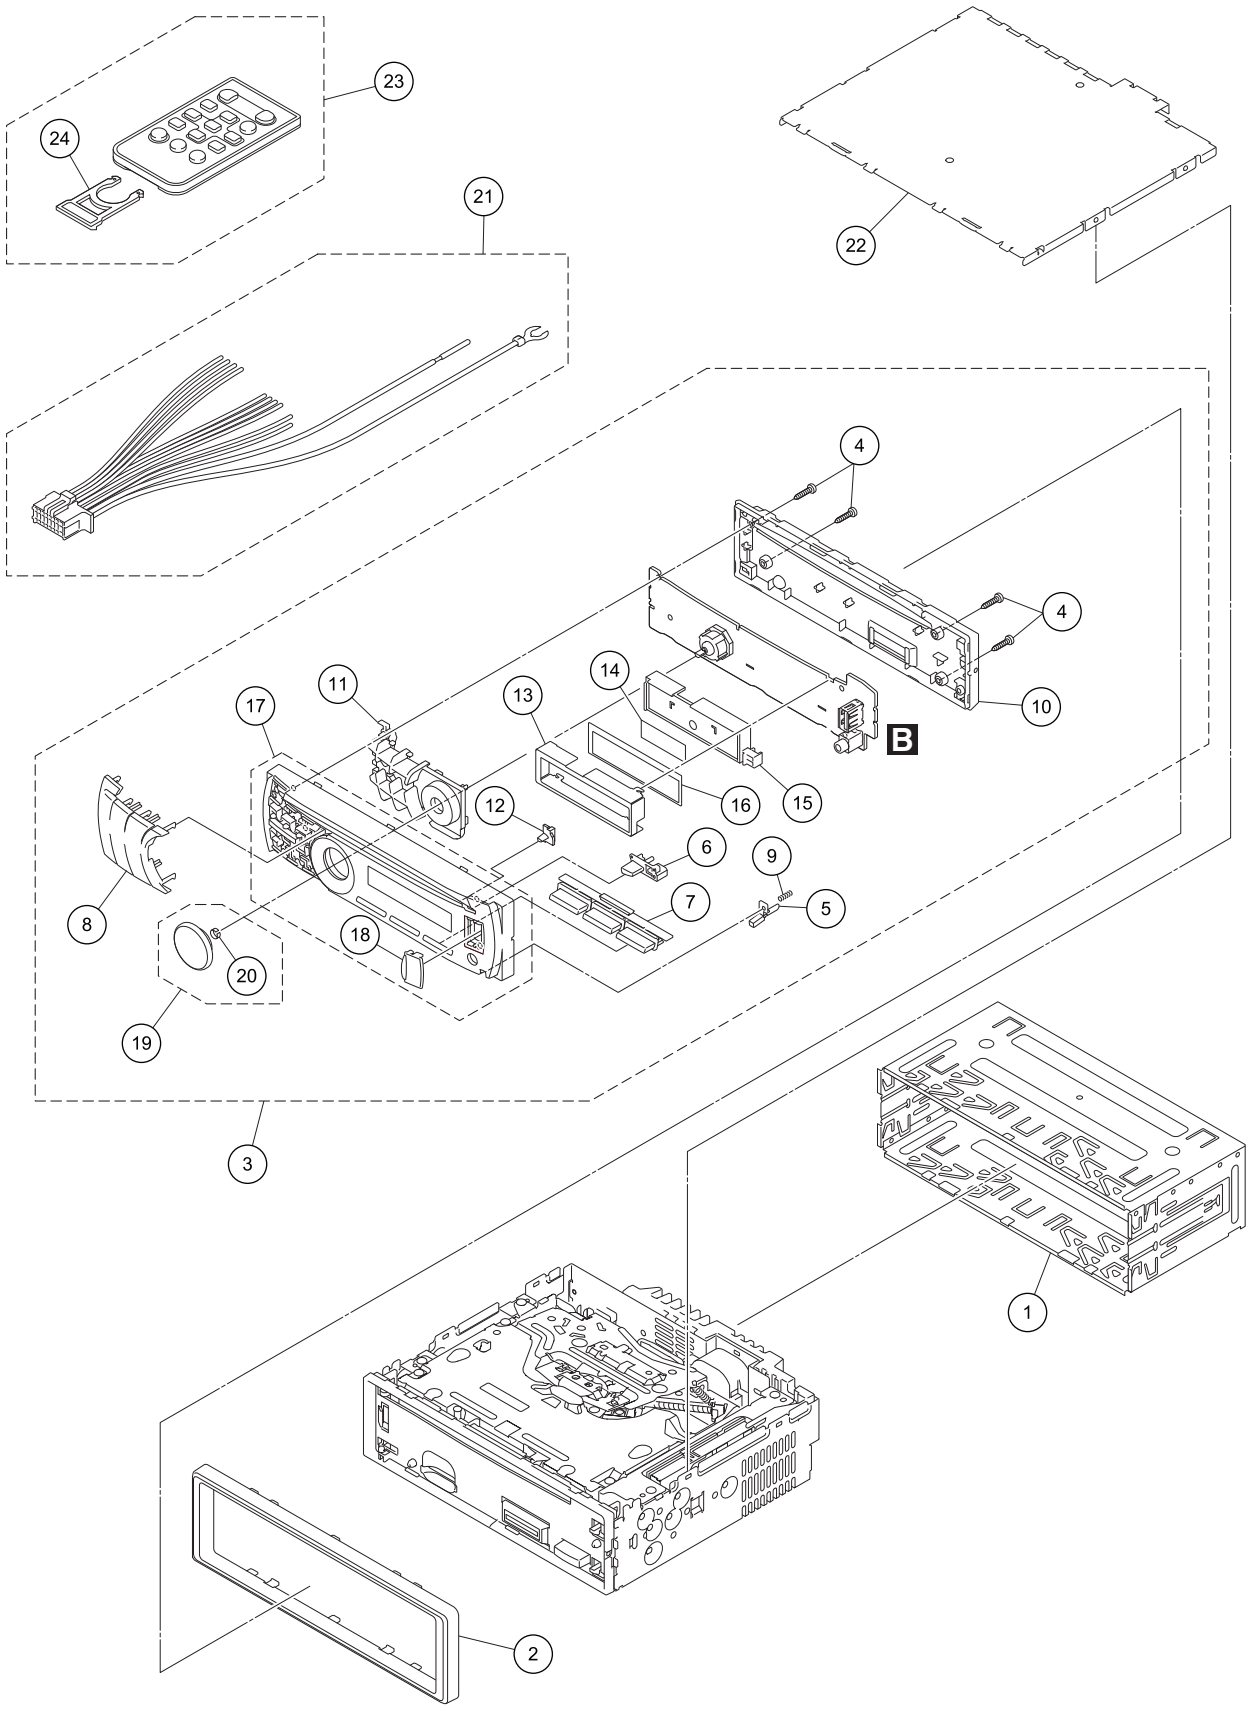

EXTERIOR(1) SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	Holder	CND3598
	2	Panel	CNU1016
	3	Detach Grille Assy	See Contrast table (2)
	4	Screw	BPZ20P100FTC
	5	Button(DETACH)	CAI2688
	6	Button(EJECT)	CAI2689
	7	Button(1-6)	CAI2690
	8	Button (SRC, BAND, S.Rtrv, CLK, LIST, BACK)	See Contrast table (2)
	9	Spring	CBH2210
	10	Cover	CNU1012
	11	Lighting Conductor	CNW1752
	12	Lighting Conductor	CNW1753
	13	Holder	CND5407
	14	Double Side Tape	CNN1878
	15	Holder	CNW1754
	16	OEL Module	See Contrast table (2)
	17	Grille Unit	See Contrast table (2)
	18	Door(USB)	CAT2911
	19	Knob Unit	CXE2417
	20	Spring	XBL7005
	21	Cord Assy	YDP5039
	22	Case	YNB5063
	23	Remote Control Unit	CXE2758
	24	Cover	CNS7068

(2) CONTRAST TABLE

DEH-4250SD/XNES, DEH-4250SD/XNES1, DEH-4290SD/XNID and DEH-3200UB/XNUC are constructed the same except for the following:

Mark	No.	Description	DEH-4250SD/XNES	DEH-4250SD/XNES1	DEH-4290SD/XNID	DEH-3200UB/XNUC
	3	Detach Grille Assy	CXE2428	CXE2428	CXE2429	CXE3006
	8	Button(SRC, BAND, S.Rtrv, CLK, LIST, DISP)	CAI2692	CAI2692	CAI2692	CAI2713
	16	OEL Module	MXS4012	MXS4012	MXS4012	MXS4013
	17	Grille Unit	CXE2410	CXE2410	CXE2412	CXE2413

9.3 EXTERIOR(2)

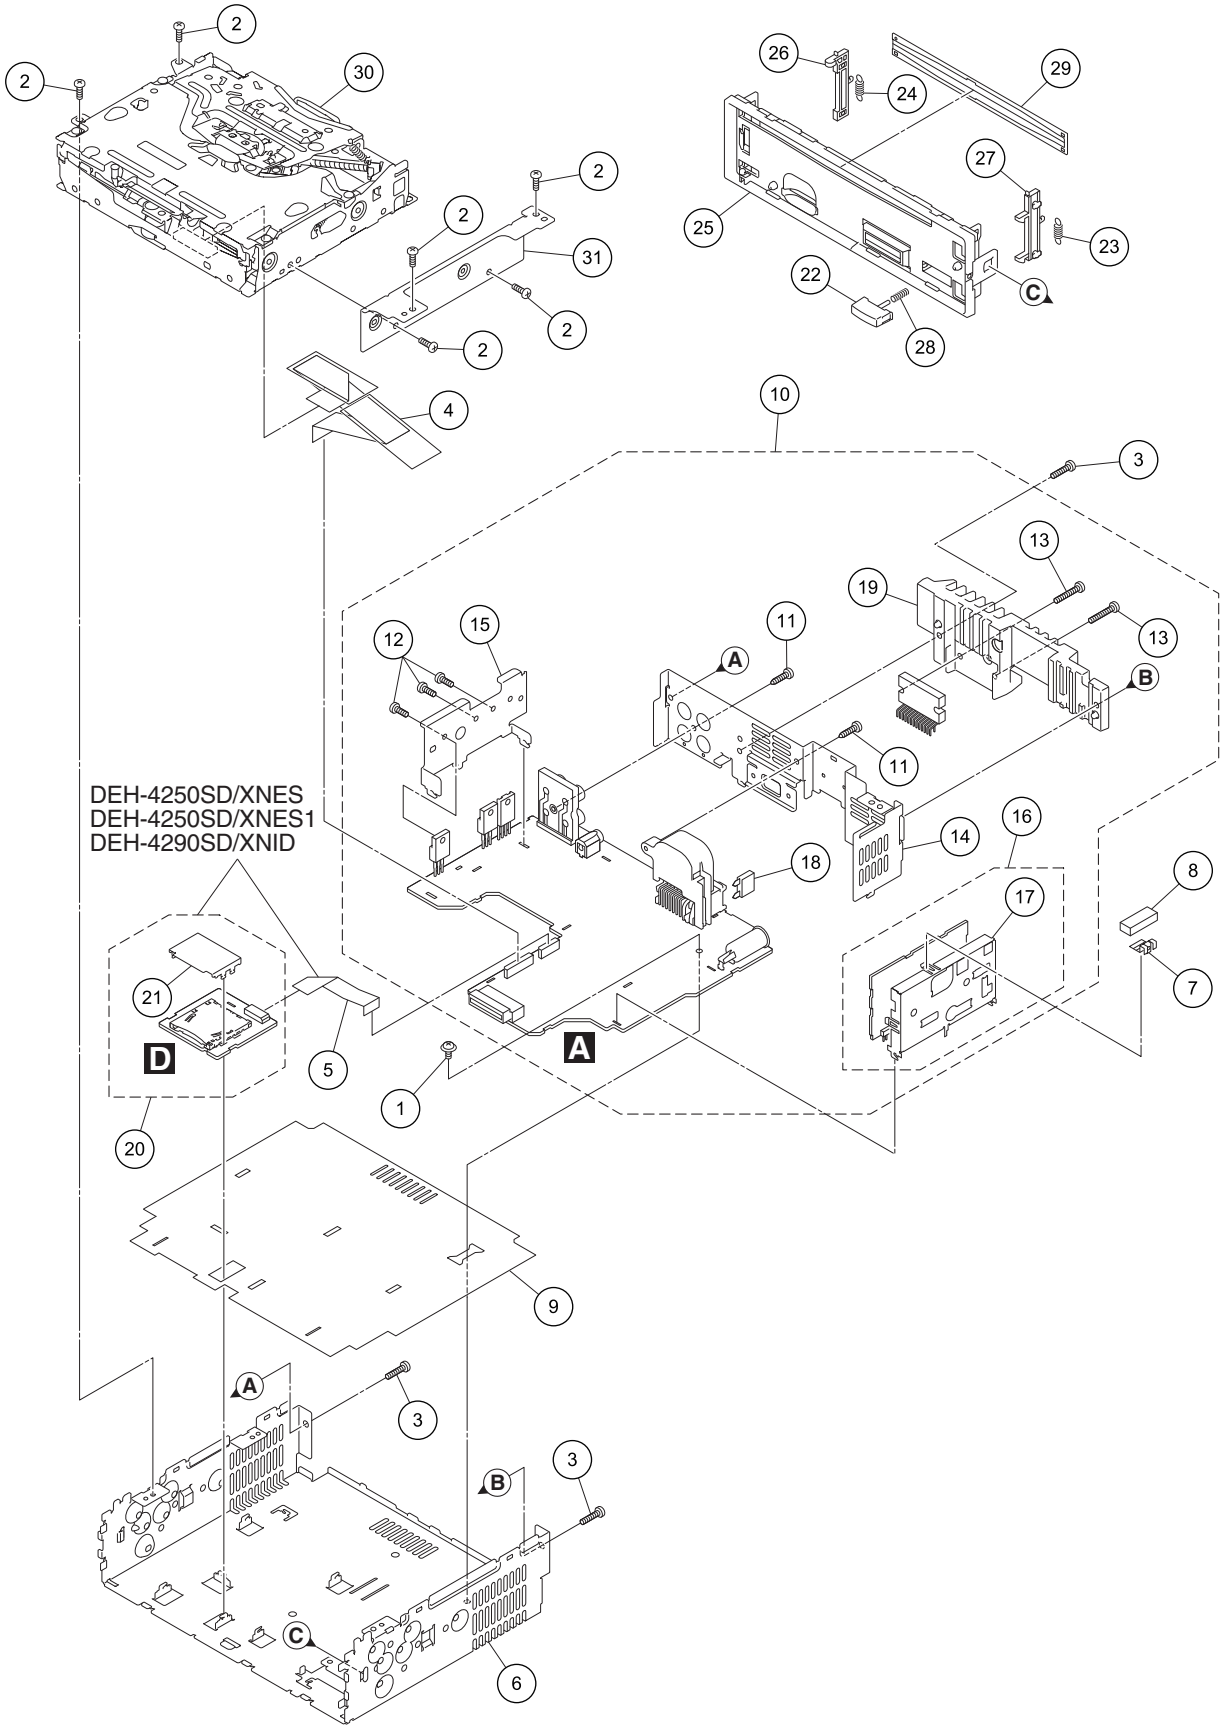

EXTERIOR(2) SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	Screw	ASZ26P050FTC
	2	Screw	BSZ26P060FTC
	3	Screw	BSZ26P100FTC
	4	Cable	CDE9106
	5	Cable	See Contrast table (2)
	6	Chassis	CNA3151
	7	Earth Plate	CNC8915
	8	Cushion	CNM8890
	9	Insulator	CNN3145
	10	Tuner Amp Unit	See Contrast table (2)
	11	Screw	BPZ26P080FTC
	12	Screw	BSZ26P060FTC
	13	Screw	BSZ26P160FTC
	14	Holder	CND5411
	15	Holder	CND5423
	16	FM/AM Tuner Unit	CWE2098
	17	Holder	CND4324
⚠	18	Fuse(10 A)	YEK5001
	19	Heat Sink	YNR5139
	20	SD Unit	See Contrast table (2)
	21	Holder	See Contrast table (2)
	22	Button	CAC4836
	23	Spring(Thin)	CBH2961
	24	Spring(Thick)	CBH2962
	25	Panel	See Contrast table (2)
	26	Arm	CNV9312
	27	Arm	CNW1439
	28	Spring	YBH5012
	29	Cover	YNN5030
	30	CD Mechanism Module(S11)	CXK5800
	31	Holder	YND5048

(2) CONTRAST TABLE

DEH-4250SD/XNES, DEH-4250SD/XNES1, DEH-4290SD/XNID and DEH-3200UB/XNUC are constructed the same except for the following:

Mark	No.	Description	DEH-4250SD/XNES	DEH-4250SD/XNES1	DEH-4290SD/XNID	DEH-3200UB/XNUC
	5	Cable	CDE9107	CDE9107	CDE9107	Not Used
	10	Tuner Amp Unit	CWN4805	CWN4805	CWN4805	CWN5219
	20	SD Unit	CWN4816	CWN4816	CWN4816	Not Used
	21	Holder	CND5417	CND5417	CND5417	Not Used
	25	Panel	CNU1015	CNU1015	CNU1015	CNU1017

9.4 CD MECHANISM MODULE

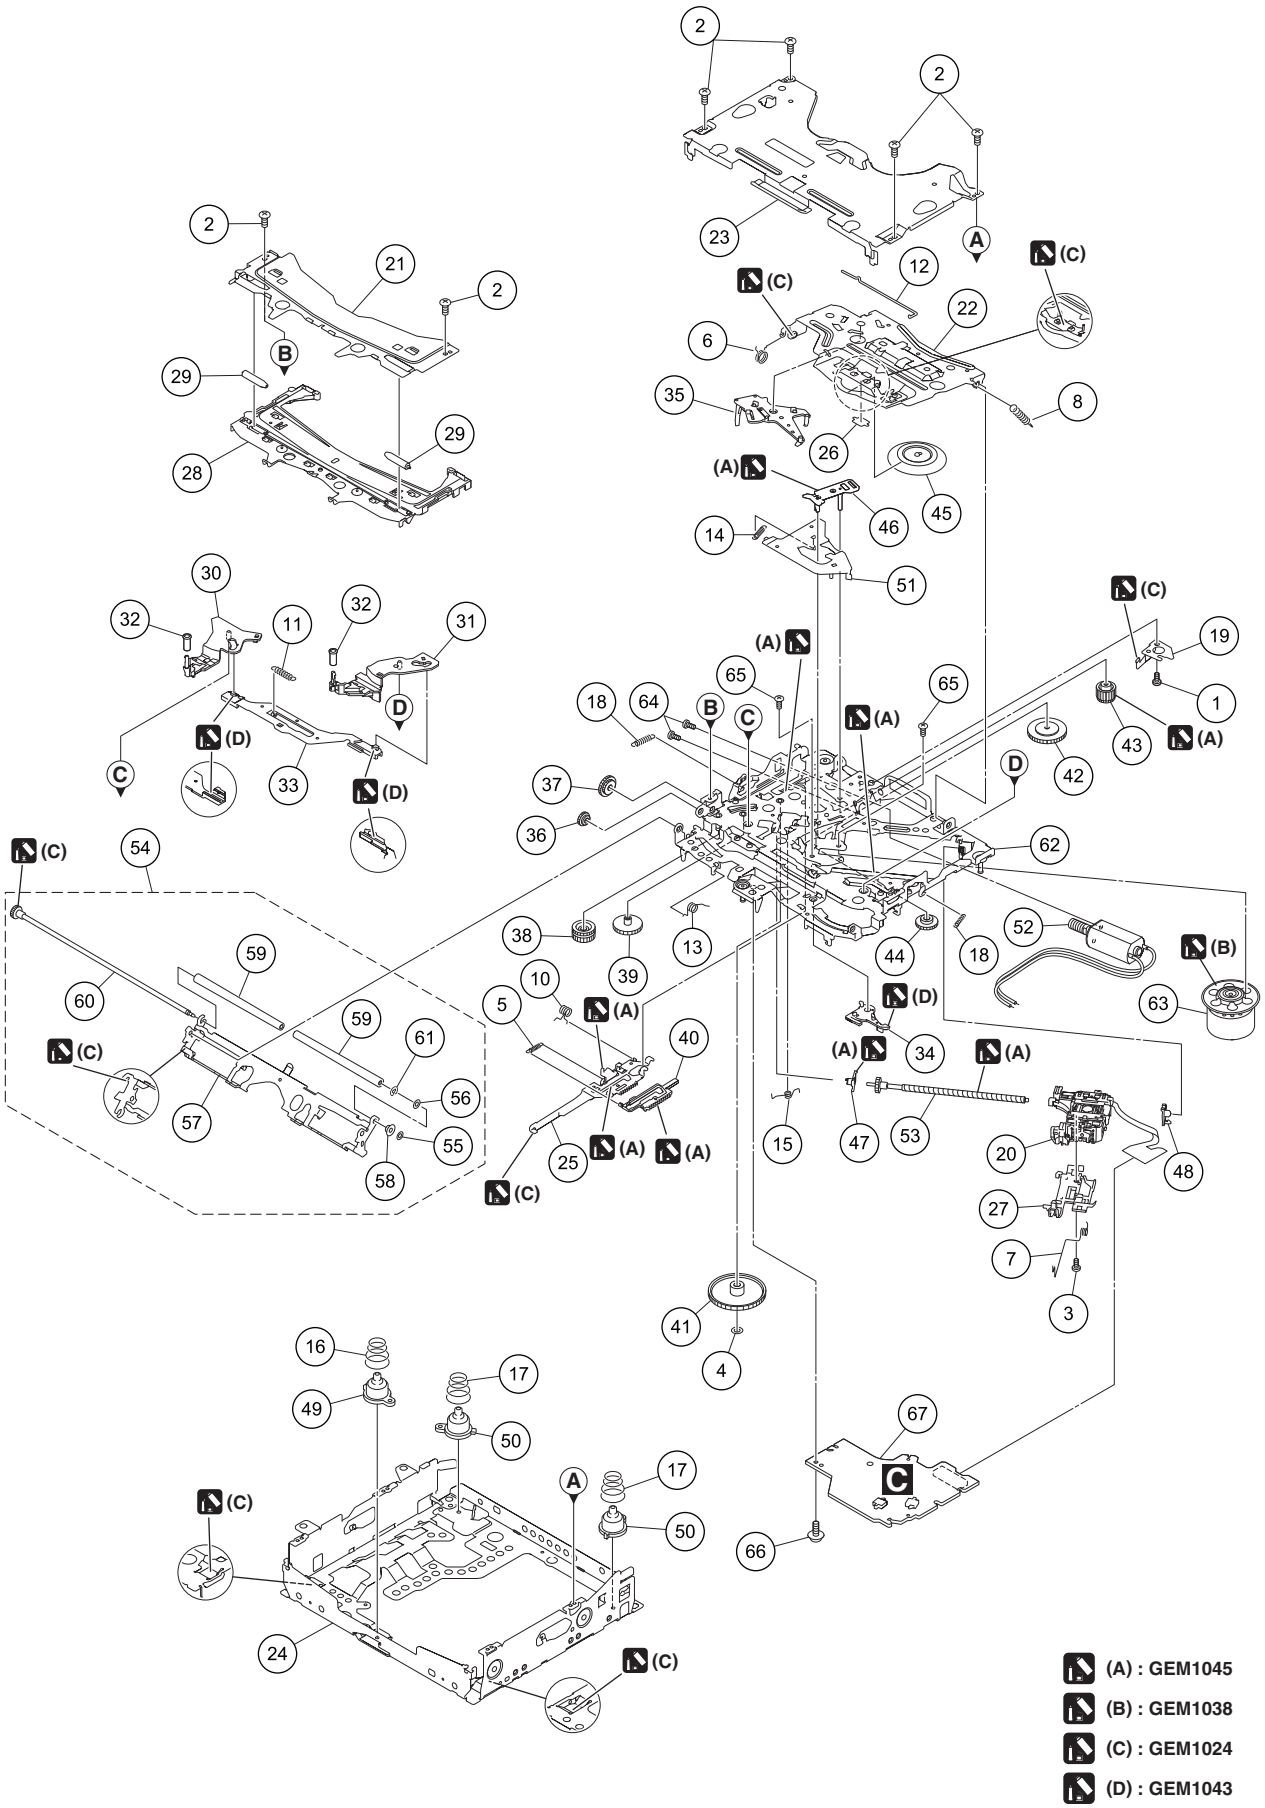

CD MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.
1	Screw	BMZ20P020FTC
2	Screw	BSZ20P040FTC
3	Screw(M2 x 4)	CBA1835
4	Washer	CBF1038
5	Spring	CBH3010
6	Spring	CBH2855
7	Spring	CBH2856
8	Spring	CBH2860
9	•••••	
10	Spring	CBH3011
11	Spring	CBH3012
12	Spring	CBH3014
13	Spring	CBH3015
14	Spring	CBH3016
15	Spring	CBH3017
16	Spring	CBH3018
17	Spring	CBH3019
18	Spring	CBH3020
19	Spring	CBL1797
20	Pickup Unit(S10.5)(Service)	CXX1942
21	Bracket	CND4553
22	Arm	CND4555
23	Frame	CND4557
24	Frame	CND5217
25	Lever	CND5398
26	Sheet	CNN2280
27	Rack	CNV8342
28	Guide	CNW1171
29	Roller	CNW1172
30	Arm	CNW1173
31	Arm	CNW1174
32	Roller	CNW1175
33	Lever	CNW1176
34	Arm	CNW1177
35	Arm	CNW1178
36	Gear	CNW1180
37	Gear	CNW1181
38	Gear	CNW1182
39	Gear	CNW1183
40	Rack	CNW1184
41	Gear	CNW1185
42	Gear	CNW1186
43	Gear	CNW1187
44	Gear	CNW1188
45	Clamper	CNW1190
46	Arm	CNW1192
47	Holder	CNW1193
48	Holder	CNW1194
49	Damper	CNW1197
50	Damper	CNW1198
51	Arm	CNW1726
52	Motor Unit(M2)(LOAD/CRG)	CXC4026
53	Screw Unit	CXC8894
54	Arm Assy	CXC8896
55	Washer	CBF1037
56	Washer	CBF1038
57	Arm	CND4554
58	Collar	CNV6906
59	Roller	CNW1196
60	Gear Unit	CXC8893
61	Washer	YE15FTC
62	Chassis Unit	CXE1946
63	Motor Unit(M1)(SPDL)	CXE2273
64	Screw	JFZ20P025FTC
65	Screw	JGZ17P022FTC
66	Screw	IMS20P030FTC
67	CD Core Unit (S11STD-DOUT)	CWX3774

12. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

  Chip Resistor

  RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J

  Chip Capacitor (except for CQS.....)

  CKS....., CCS....., CSZS.....
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Meaning of the figures and others in the parentheses in the parts list.*

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

A:DEH-4250SD/XNES

B:DEH-4250SD/XNES1

C:DEH-4290SD/XNID

D:DEH-3200UB/XNUC

Unit Number : CWN4805(A,B,C)

Unit Number : CWN5219(D)

Unit Name : Tuner Amp Unit

Unit Number : CWN4813(A,B,C)

Unit Name : Keyboard Unit

Unit Number : CWN5220(D)

Unit Name : Keyboard Unit

Unit Number : CWX3774

Unit Name : CD Core Unit(S11STD-DOUT)

Unit Number : CWN4816(A,B,C)

Unit Name : SD Unit

A

Unit Number : CWN4805(A,B,C)

Unit Number : CWN5219(D)

Unit Name : Tuner Amp Unit

MISCELLANEOUS

Circuit Symbol and No.		Part No.
IC 151	(A,62,91) IC	R5523N001B
IC 161	(A,50,102) Regulator IC	BD9781HFP
IC 181	(A,108,75) IC	WM8761GED
IC 182	(A,80,99) IC	NJM2872F05
IC 201	(A,75,118) IC	PM9012A
IC 351	(A,83,142) IC	PA2030A
IC 431	(B,152,131) IC	NJM2885DL1-33
IC 501	(A,121,50) IC	R5S7262ZD144FPU
IC 571	(A,148,51) Software Unit	CWW1967
IC 581	(A,24,80) IC	S-1172B33-E6
IC 583	(A,24,89) IC	BH12PB3WHFV
IC 591	(A,102,23) IC	341S2162
IC 601	(A,128,96) IC	PEG640A8
IC 651	(A,119,108) IC	S-80827CNNB-B8M
IC 901	(B,24,70) Regulator IC	S-1132B33-U5
IC 911	(A,7,122) IC	NJM2388F84
Q 301	(A,14,126) Transistor	UMH3N
Q 303	(A,29,126) Transistor	UMH3N
Q 361	(A,57,131) Transistor	LTC114EUB
Q 363	(A,70,128) Transistor	RT3T22M
Q 381	(B,55,131) Transistor	2SC4081
Q 382	(A,45,129) Transistor	RT3T22M
Q 591	(A,108,25) Transistor	LSA1576UB
Q 751	(A,7,94) Transistor	2SD2396
Q 752	(A,16,104) Transistor	RT3T22M
Q 781	(A,72,92) Chip Transistor(A,B,C)	2SB1689
Q 782	(A,70,92) Transistor(A,B,C)	LTC114EUB
Q 783	(A,106,95) Transistor(A,B,C)	DTA123EU
Q 821	(A,95,126) Transistor	2SA1036K
Q 822	(A,96,121) Transistor	LTC114EUB
Q 831	(B,93,118) Transistor	2SD1664
Q 832	(A,91,122) Transistor	RT3T22M
Q 841	(A,94,16) Transistor	LSA1576UB
Q 842	(A,93,11) Transistor	LTC114EUB
Q 901	(A,7,71) Transistor	2SD2396
Q 902	(A,14,77) Transistor	RT3T22M
Q 921	(A,136,108) Transistor	RT3CLLM
D 161	(A,28,96) Diode	CRG03
D 162	(A,28,94) Diode	CRG03
D 163	(A,36,94) Diode	CMS02
D 381	(B,61,131) Diode	UDZS8R2(B)
D 382	(B,47,126) Diode	DAN202U
D 383	(A,54,128) Diode	1SS352
D 581	(A,19,79) Diode	1SS352
D 582	(B,23,80) Diode	CRG03
D 601	(A,122,85) Diode	RB551V-30
D 602	(A,128,107) Diode	RB751S-40
D 651	(A,118,105) Diode	1SS352
D 751	(A,12,104) Diode	HZU8R2(B1)

Circuit Symbol and No.		Part No.
D 801	(A,116,14) Diode	DZ2S068C
D 802	(A,119,14) Diode	DZ2S068C
D 803	(A,122,13) Diode	DZ2S068C
D 804	(A,123,13) Diode	DZ2S068C
D 805	(A,124,13) Diode	DZ2S068C
D 831	(A,91,119) Diode	HZU10(B1)
D 901	(B,14,97) Diode	CRG03
D 902	(A,12,77) Diode	UDZS5R6(B)
D 921	(A,141,122) Diode	HZU7L(C3)
D 922	(A,139,122) Diode	HZU7L(A1)
D 941	(A,100,129) Diode	CRG03
D 942	(A,105,125) Diode	CRG03
D 981	(A,139,130) Diode	CRG03
D 982	(A,139,128) Diode	CRG03
ZNR401	(B,164,117) Surge Protector	IMSA-6802-01Y900
L 161	(A,44,92) Inductor	CTH1253
L 181	(A,102,80) Chip Ferrite Bead	DTL1107
L 401	(A,153,103) Chip Coil	BTH1100
L 402	(A,155,73) Chip Coil	BTH1100
L 404	(B,167,103) Chip Coil	BTH1104
L 501	(A,98,74) Inductor	VTL1145
L 502	(A,98,79) Inductor	CTF1410
L 601	(A,109,89) Chip Coil	BTH1103
L 801	(A,117,17) Inductor	CTF1713
L 981	(A,116,141) Choke Coil 600 uH	CTH1445
X 501	(A,124,69) Oscillator 48.000 MHz	CSS1760
X 503	(A,103,43) Oscillator 16.93 MHz	CSS1794
X 601	(A,114,97) Oscillator 20.000 MHz	CSS1795
S 651	(A,134,10) Switch	CSG1020
P 301	(A,40,118) Poly Switch	MINISMDC075F/24
VA661	(A,53,135) Varistor	VR105C5R0AAA
VA662	(A,53,133) Varistor	VR105C5R0AAA
VA801	(A,106,15) Varistor	VR105C5R0AAA
VA802	(A,115,16) Varistor	VR105C5R0AAA
VA803	(A,120,14) Varistor	VR105C5R0AAA
VA806	(A,110,15) Varistor	VR105C5R0AAA
VA807	(A,111,15) Varistor	VR105C5R0AAA
VA808	(A,127,14) Varistor	VR105C5R0AAA
CN701	(A,96,39) Connector	VKN1192
CN781	(A,96,61) Connector(A,B,C)	VKN1186
CN801	(A,114,4) Connector	CKS6188
JA301	(A,25,138) Pin Jack	YKB5011
JA401	(A,169,129) Antenna Jack	CKX1070
JA661	(A,47,139) Connector	CKS4124
JA981	(A,118,141) Plug	CKM1586
	FM/AM Tuner Unit	CWE2098
⚠	Fuse(10 A)	YEK5001

RESISTORS

R 151	(A,96,90)	RS1/16SS104J
R 161	(A,42,103)	RS1/16SS1003F
R 163	(A,42,98)	RS1/16SS683J
R 165	(B,48,97)	RS1/10SR1003D
R 166	(B,47,99)	RS1/10SR2402D
R 167	(B,45,96)	RS1/10SR333J
R 168	(B,52,99)	RS1/10SR471J
R 169	(B,47,101)	RS1/10SR121J
R 181	(A,102,95)	RS1/10SR0R0J
R 191	(A,92,103)	RS1/16SS821J
R 192	(A,92,104)	RS1/16SS821J
R 201	(A,69,124)	RAB4CQ102J
R 202	(A,80,105)	RS1/16SS331J
R 207	(A,81,105)	RS1/16SS223J
R 208	(A,81,106)	RS1/16SS223J
R 301	(A,12,128)	RS1/16SS821J
R 302	(A,18,126)	RS1/16SS821J
R 305	(A,27,128)	RS1/16SS821J
R 306	(A,32,128)	RS1/16SS821J
R 307	(A,12,129)	RS1/16SS223J
R 308	(A,17,129)	RS1/16SS223J
R 311	(A,28,129)	RS1/16SS223J
R 312	(A,32,129)	RS1/16SS223J
R 315	(A,23,130)	RS1/16SS0R0J
R 316	(A,26,130)	RS1/16SS0R0J
R 361	(A,59,132)	RS1/16SS103J
R 362	(A,57,129)	RS1/16SS103J
R 363	(A,60,132)	RS1/16SS331J
R 365	(A,69,131)	RS1/16SS103J
R 366	(A,70,131)	RS1/16SS103J
R 381	(B,59,132)	RS1/10SR473J
R 382	(B,63,133)	RS1/10SR104J
R 383	(A,134,84)	RS1/16SS473J
R 384	(B,50,129)	RS1/10SR473J
R 385	(A,45,131)	RS1/16SS102J
R 401	(A,156,92)	RS1/16SS681J
R 403	(A,156,94)	RS1/16SS681J
R 404	(A,156,95)	RS1/16SS681J
R 405	(A,156,96)	RS1/16SS681J
R 406	(A,156,97)	RS1/16SS681J
R 407	(A,156,98)	RS1/16SS681J
R 408	(A,156,99)	RS1/16SS152J
R 501	(A,134,65)	RS1/16SS473J
R 502	(A,140,66)	RS1/16SS101J
R 504	(A,132,65)	RS1/16SS473J
R 505	(A,131,65)	RS1/16SS473J
R 509	(A,130,65)	RS1/16SS473J
R 510	(A,129,65)	RS1/16SS473J
R 513	(A,122,65)	RS1/16SS102J
R 518	(A,96,71)	RS1/16SS101J
R 519	(A,118,65)	RS1/16SS5601F
R 521	(A,106,55)	RS1/16SS473J
R 522	(A,106,54)	RS1/16SS473J
R 526	(B,114,63)	RS1/10SR221J
R 529	(A,106,43)	RS1/16SS332J
R 530	(A,106,41)	RS1/16SS473J
R 531	(B,109,38)	RS1/10SR473J
R 532	(B,120,51)	RS1/10SR221J
R 533	(B,120,49)	RS1/10SR101J
R 534	(B,120,46)	RS1/10SR101J
R 535	(B,120,42)	RS1/10SR101J
R 544	(A,137,40)	RS1/16SS472J
R 547	(A,136,40)	RS1/16SS0R0J
R 554	(A,112,67)	RS1/16SS473J
R 560	(B,135,43)	RS1/10SR473J
R 561	(A,101,71)	RS1/16SS103J
R 572	(A,141,38)	RS1/16SS472J
R 574	(A,143,38)	RS1/16SS472J
R 575	(A,142,29)	RAB4CQ221J
R 576	(A,139,31)	RAB4CQ221J

Circuit Symbol and No.		Part No.
R 577	(A,142,33)	RAB4CQ221J
R 578	(A,138,35)	RAB4CQ221J
R 591	(A,111,24)	RS1/16SS472J
R 592	(A,108,28)	RS1/16SS101J
R 593	(A,102,28)	RS1/16SS103J
R 594	(A,108,27)	RS1/16SS101J
R 595	(A,101,28)	RS1/16SS103J
R 596	(A,108,23)	RS1/16SS473J
R 599	(A,103,18)	RS1/16SS272J
R 600	(A,101,17)	RS1/16SS472J
R 602	(B,121,98)	RS1/10SR472J
R 603	(A,116,97)	RS1/16SS105J
R 604	(A,117,98)	RS1/16SS101J
R 605	(A,116,92)	RS1/16SS104J
R 606	(A,117,91)	RS1/16SS222J
R 607	(A,129,83)	RS1/16SS104J
R 608	(A,118,86)	RS1/16SS104J
R 609	(A,134,109)	RS1/16SS104J
R 610	(A,134,107)	RS1/16SS104J
R 613	(A,125,84)	RS1/16SS104J
R 614	(A,126,84)	RS1/16SS104J
R 615	(A,124,84)	RS1/16SS104J
R 616	(A,127,84)	RS1/16SS104J
R 617	(A,129,84)	RS1/16SS104J
R 618	(A,130,84)	RS1/16SS104J
R 619	(A,132,83)	RS1/16SS472J
R 620	(A,131,83)	RS1/16SS104J
R 623	(A,138,96)	RS1/16SS104J
R 624	(A,130,107)	RS1/16SS473J
R 626	(A,128,108)	RS1/16SS103J
R 627	(A,125,109)	RS1/16SS104J
R 630	(A,142,105)	RS1/16SS104J
R 631	(A,122,107) (A,B,C)	RS1/16SS104J
R 632	(A,121,107) (D)	RS1/16SS104J
R 643	(A,147,93)	RS1/16SS104J
R 651	(A,117,104)	RS1/16SS104J
R 652	(A,117,103)	RS1/16SS152J
R 661	(A,56,135)	RS1/10SR102J
R 662	(A,56,133)	RS1/10SR102J
R 701	(A,100,49)	RS1/16SS472J
R 702	(A,100,46)	RS1/16SS473J
R 703	(A,106,29)	RS1/16SS472J
R 704	(A,106,30)	RS1/16SS472J
R 705	(A,101,47)	RS1/16SS221J
R 706	(A,103,39)	RS1/16SS221J
R 707	(A,110,35)	RS1/16SS101J
R 708	(A,102,37)	RS1/16SS221J
R 709	(A,110,34)	RS1/16SS101J
R 710	(A,103,36)	RS1/16SS102J
R 711	(A,100,36)	RS1/16SS151J
R 712	(A,100,35)	RS1/16SS151J
R 713	(A,100,34)	RS1/16SS151J
R 714	(A,100,32)	RS1/16SS221J
R 715	(A,119,31)	RS1/16SS104J
R 716	(A,101,32)	RS1/16SS104J
R 717	(A,100,37)	RS1/16SS104J
R 751	(A,15,101)	RS1/10SR821J
R 753	(A,13,99)	RS1/16SS473J
R 754	(A,14,99)	RS1/16SS103J
R 781	(A,100,62) (A,B,C)	RS1/16SS221J
R 783	(A,100,61) (A,B,C)	RS1/16SS221J

Circuit Symbol and No.		Part No.
R 784	(A,100,60) (A,B,C)	RS1/16SS221J
R 785	(A,100,59) (A,B,C)	RS1/16SS221J
R 786	(A,100,58) (A,B,C)	RS1/16SS221J
R 787	(A,100,53) (A,B,C)	RS1/16SS221J
R 788	(A,100,54) (A,B,C)	RS1/16SS221J
R 789	(A,70,90) (A,B,C)	RS1/10SR681J
R 790	(A,72,90) (A,B,C)	RS1/10SR103J
R 792	(A,104,54)	RAB4CQ473J
R 793	(A,103,58)	RAB4CQ473J
R 794	(A,76,91) (A,B,C)	RS1/10SR102J
R 795	(A,104,56) (D)	RS1/10SS0R0J
R 801	(A,127,16)	RS1/10SR222J
R 802	(A,112,15)	RS1/10SR222J
R 803	(A,109,15)	RS1/10SR222J
R 804	(A,120,17)	RS1/10SR222J
R 805	(A,114,15)	RS1/10SR222J
R 808	(A,108,15)	RS1/10SR222J
R 809	(B,134,21)	RS1/10SR104J
R 810	(A,118,20)	RS1/10SR8R2J
R 811	(A,117,20)	RS1/10SR8R2J
R 812	(A,126,24)	RS1/16SS104J
R 813	(A,127,24)	RS1/16SS104J
R 814	(A,122,17)	RS1/10SR101J
R 816	(A,124,17)	RS1/10SR101J
R 821	(A,94,123)	RS1/10SR1R0J
R 822	(A,97,124)	RS1/16SS472J
R 823	(A,95,129)	RS1/16SS103J
R 831	(A,90,115)	RS1/10SR103J
R 832	(A,87,117)	RS1/16SS1R0J
R 833	(A,91,126)	RS1/10SR122J
R 842	(A,96,12)	RS1/16SS472J
R 843	(A,94,14)	RS1/16SS102J
R 844	(A,92,16)	RS1/16SS103J
R 901	(A,14,73)	RS1/16SS332J
R 902	(A,12,73)	RS1/16SS223J
R 911	(A,12,108)	RS1/16SS102J
R 912	(A,12,111)	RS1/16SS473J
R 921	(A,139,106)	RS1/16SS104J
R 922	(A,139,109)	RS1/16SS103J
R 923	(A,140,106)	RS1/16SS473J
R 924	(A,140,108)	RS1/16SS473J
R 925	(A,128,126)	RS1/16SS472J
R 926	(A,124,127)	RS1/4SA102J

CAPACITORS

C 151	(A,60,92)	CKSSYB104K10
C 152	(A,59,90)	CKSSYB104K10
C 161	(A,35,104) Capacitor	CEVW221M16
C 162	(A,42,107)	CKSRYB105K16
C 163	(A,43,103)	CKSSYB104K16
C 165	(A,42,100)	CKSSYB103K10
C 166	(A,54,93) 150 uF/6.3 V	CCH1804(P25)
C 167	(B,48,95)	CCSRCH221J50
C 182	(A,113,77) 10 uF	CCG1192
C 183	(A,105,80)	CKSSYB103K16
C 184	(A,104,81) 10 uF	CCG1192
C 186	(A,99,81)	CKSRYB105K10
C 187	(A,82,98)	CKSSYB104K10
C 188	(A,77,99)	CKSSYB104K10

Circuit Symbol and No.		Part No.	Circuit Symbol and No.		Part No.
C 190	(A,119,74)	CKSSYB102K10	C 519	(A,127,65)	CKSSYB104K10
C 191	(A,89,103)	CCSRCH182J50	C 520	(A,124,65)	CKSSYB104K10
C 192	(A,90,103)	CCSRCH182J50	C 521	(A,124,66)	CKSSYB104K10
C 196	(A,99,83)	CKSSYB681K50	C 522	(A,119,67)	CKSSYB104K10
C 201	(A,79,104)	CKSRYB105K10	C 523	(A,122,71)	CCSSCH100D50
C 202	(A,79,107)	CKSRYB105K10	C 524	(A,125,71)	CCSSCH100D50
C 203	(A,77,105)	CKSQYB225K10	C 525	(A,119,66)	CKSSYB104K10
C 209	(A,88,109)	CKSRYB224K16	C 526	(A,116,67)	CKSSYB104K10
C 210	(A,88,108)	CKSRYB224K16	C 527	(A,116,66)	CKSSYB104K10
C 211	(B,70,113)	CKSRYB105K10	C 528	(A,115,65)	CKSSYB104K10
C 212	(B,72,113)	CKSRYB105K10	C 529	(A,111,65)	CKSSYB104K10
C 213	(B,83,119) 10 uF	CCG1203	C 530	(A,110,65)	CKSSYB104K10
C 214	(A,84,121) 10 uF	CCG1192	C 531	(A,106,57)	CKSSYB104K10
C 215	(A,84,119)	CKSSYB104K10	C 532	(A,106,56)	CKSSYB104K10
C 216	(B,80,122) 10 uF	CCG1203	C 533	(A,106,52)	CKSSYB104K10
C 217	(A,85,126)	CKSSYB104K10	C 534	(A,106,50)	CKSSYB104K10
C 218	(A,84,124) 10 uF	CCG1192	C 535	(B,109,45)	CKSRYB104K16
C 219	(B,72,118)	CKSRYB105K10	C 536	(B,109,43)	CKSRYB104K16
C 220	(B,79,117)	CKSRYB105K10	C 537	(A,106,40)	CKSSYB104K10
C 301	(A,28,119) 10 uF	CCG1192	C 538	(A,106,38)	CKSSYB104K10
C 302	(A,29,121) 10 uF	CCG1192	C 539	(A,115,34)	CKSSYB104K10
C 305	(A,35,125) 10 uF	CCG1192	C 540	(A,116,33)	CKSSYB104K10
C 306	(A,39,127) 10 uF	CCG1192	C 541	(A,120,34)	CKSSYB104K10
C 351	(A,82,129)	CKSRYB474K10	C 542	(A,124,35)	CKSSYB104K10
C 352	(A,80,129)	CKSRYB474K10	C 543	(A,129,34)	CKSSYB104K10
C 353	(A,84,129)	CKSRYB474K10	C 544	(A,130,35)	CKSSYB104K10
C 354	(A,86,129)	CKSRYB474K10	C 545	(A,100,71)	CKSSYB105K6R3
C 355	(A,82,132)	CKSRYB474K16	C 546	(A,137,70)	CKSSYB102K10
C 356	(A,80,132)	CKSRYB474K16	C 547	(B,120,53)	CCSRCH220J50
C 357	(A,84,132)	CKSRYB474K16	C 548	(A,101,42)	CCSSCH120J50
C 358	(A,86,132)	CKSRYB474K16	C 549	(A,101,44)	CCSSCH120J50
C 361	(A,136,122) 3 300 uF/16 V	CCH1486	C 550	(B,120,44)	CCSRCH220J50
C 362	(B,98,143)	CKSRYB104K16	C 571	(A,139,40) 10 uF	CCG1192
C 363	(A,88,126)	CKSQYB225K10	C 572	(A,140,39)	CKSSYB104K10
C 364	(A,88,130)	CKSQYB225K10	C 574	(A,148,62)	CKSSYB103K10
C 365	(A,76,130) 10 uF	CCG1236	C 581	(B,22,77) 10 uF	CCG1203
C 367	(A,62,132) 10 uF	CCG1192	C 583	(A,30,81) 10 uF	CCG1192
C 381	(A,50,128) Capacitor	CEVW220M16	C 585	(A,23,86) 10 uF	CCG1192
C 401	(A,154,105)	CKSSYB103K10	C 588	(A,34,85) 10 uF	CCG1192
C 402	(A,156,104) 10 uF	CCG1192	C 591	(A,108,22)	CKSSYB104K10
C 405	(A,156,69)	CKSSYB103K10	C 592	(A,101,18)	CKSSYB104K10
C 406	(A,155,70) 10 uF	CCG1192	C 601	(A,106,90) 10 uF	CCG1192
C 407	(A,155,78)	CKSSYB103K10	C 603	(A,113,90) 4.7 uF	CCG1201
C 431	(B,159,125)	CKSQYB475K6R3	C 604	(A,111,98)	CCSSCH100D50
C 432	(B,159,122)	CKSRYB103K50	C 605	(A,111,96)	CCSSCH120J50
C 433	(B,159,136)	CKSQYB475K10	C 606	(A,117,95)	CKSSYB104K10
C 501	(A,98,75) 10 uF	CCG1192	C 608	(A,138,95)	CKSSYB104K10
C 503	(A,102,73) 10 uF	CCG1192	C 610	(A,118,101)	CKSSYB104K10
C 504	(A,98,77) 10 uF	CCG1192	C 651	(A,117,108)	CKSRYB105K10
C 506	(A,102,77) 10 uF	CCG1192	C 703	(A,103,33)	CCSSCH220J50
C 507	(A,136,42)	CKSSYB104K10	C 704	(A,103,32)	CCSSCH100D50
C 508	(A,137,43)	CKSSYB104K10	C 705	(A,103,31)	CCSSCH220J50
C 509	(A,136,48)	CKSSYB104K10	C 706	(A,118,31)	CKSSYB103K10
C 510	(A,137,49)	CKSSYB104K10	C 751	(A,14,96) 10 uF	CCG1192
C 511	(A,136,54)	CKSSYB104K10	C 754	(A,13,104)	CKSSYB473K10
C 512	(A,137,55)	CKSSYB104K10	C 788	(B,98,68)	CKSRYB102K50
C 513	(A,136,59)	CKSSYB104K10	C 801	(B,104,17)	CKSRYB104K16
C 514	(A,137,59)	CKSSYB104K10	C 802	(B,128,22)	CKSRYB105K16
C 515	(A,136,61)	CKSSYB103K10	C 831	(A,91,118)	CKSSYB473K16
C 516	(A,133,65)	CKSSYB104K10	C 832	(A,89,115)	CKSSYB102K50

Circuit Symbol and No.		Part No.
C 901	(A,15,63)	CEAT102M16
C 902	(A,14,79)	CKSSYB103K10
C 904	(A,16,72) 10 uF	CCG1192
C 905	(B,24,66)	CKSQYB475K6R3
C 907	(B,29,69)	CKSQYB475K6R3
C 911	(A,25,108) Capacitor	CEVW221M10
C 913	(A,16,114)	CEVW101M16
C 921	(A,128,127)	CKSSYB104K16
C 941	(A,103,128)	CKSSYB473K16

B

Unit Number : CWN4813(A,B,C)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1891	(A,144,18) Remote IC	GP1UXC14RK
IC 1901	(B,87,23) IC	PEG642A8
D 1804	(B,87,14) Diode	DAN202U
D 1805	(B,91,15) Diode	DAP202U
D 1831	(A,152,39) LED	CL-195SR-CD
D 1833	(A,7,29) LED	CL-195SR-CD
D 1834	(A,18,28) LED	CL-195SR-CD
D 1835	(A,30,27) LED	CL-195SR-CD
D 1836	(A,8,12) LED	CL-195SR-CD
D 1837	(A,19,12) LED	CL-195SR-CD
D 1838	(A,30,13) LED	CL-195SR-CD
D 1839	(A,77,8) LED	CL-195SR-CD
D 1840	(A,87,8) LED	CL-195SR-CD
D 1841	(A,101,8) LED	CL-195SR-CD
D 1842	(A,111,8) LED	CL-195SR-CD
D 1843	(A,125,8) LED	CL-195SR-CD
D 1844	(A,135,8) LED	CL-195SR-CD
D 1845	(A,43,24) LED	CL-195SR-CD
D 1846	(A,64,28) LED	CL-195SR-CD
D 1901	(B,97,31) Diode	1SS355
X 1901	(B,87,29) Radiator 10.0 MHz	CSS1577
S 1801	(A,5,36) Push Switch	CSG1155
S 1811	(A,55,20) Switch	CSX1120
S 1871	(A,11,6) Push Switch	CSG1155
S 1872	(A,22,6) Push Switch	CSG1155
S 1873	(A,34,7) Push Switch	CSG1155
S 1874	(A,72,7) Push Switch	CSG1155
S 1875	(A,91,7) Push Switch	CSG1155
S 1876	(A,139,7) Push Switch	CSG1155
S 1877	(A,21,34) Push Switch	CSG1155
S 1878	(A,33,33) Push Switch	CSG1155
S 1879	(A,95,7) Push Switch	CSG1155
S 1880	(A,115,7) Push Switch	CSG1155
S 1881	(A,120,7) Push Switch	CSG1155
S 1882	(A,149,42) Push Switch	CSG1155
CN1801	(B,108,10) Connector	CKS6049
CN1802	(A,154,25) Connector	YKS5036
CN1921	(A,97,21) Connector	CKS6036
JA1801	(A,153,10) Jack	YKN5006
	OEL Module	MXS4012

RESISTORS

R 1804	(B,88,12)	RS1/10SR222J
R 1805	(B,90,17)	RS1/10SR222J
R 1811	(B,68,16)	RS1/10SR102J
R 1812	(B,47,12)	RS1/10SR102J
R 1813	(B,49,13)	RS1/10SR103J
R 1814	(B,61,12)	RS1/10SR122J
R 1815	(B,59,25)	RS1/10SR182J
R 1816	(B,48,28)	RS1/10SR332J
R 1817	(B,48,26)	RS1/10SR822J
R 1818	(B,42,27)	RS1/10SR103J
R 1831	(B,150,37)	RS1/4SA271J
R 1835	(B,13,24)	RS1/4SA331J
R 1837	(B,15,10)	RS1/4SA331J
R 1838	(B,67,8)	RS1/4SA331J
R 1839	(B,120,23)	RS1/4SA331J
R 1840	(B,31,26)	RS1/4SA471J
R 1859	(B,43,8)	RS1/10SR0R0J
R 1871	(A,6,7)	RS1/10SR103J
R 1872	(A,15,7)	RS1/10SR122J
R 1873	(A,30,7)	RS1/10SR182J
R 1874	(A,39,8)	RS1/10SR332J
R 1875	(A,81,9)	RS1/10SR822J
R 1876	(A,119,22)	RS1/10SR333J
R 1877	(A,17,33)	RS1/10SR103J
R 1878	(A,26,32)	RS1/10SR122J
R 1879	(A,38,32)	RS1/10SR182J
R 1880	(A,118,27)	RS1/10SR332J
R 1881	(A,122,19)	RS1/10SR822J
R 1882	(A,125,18)	RS1/10SR333J
R 1891	(B,131,24)	RS1/10SR121J
R 1893	(B,140,17)	RS1/10SR2R2J
R 1901	(B,75,28)	RS1/10SR473J
R 1902	(B,94,32)	RS1/10SR154J
R 1903	(B,81,31)	RS1/10SR473J
R 1904	(B,98,19)	RS1/10SR473J
R 1905	(B,99,21)	RS1/10SR473J
R 1906	(A,109,28)	RS1/10SR473J
R 1907	(A,110,30)	RS1/10SR473J
R 1908	(B,86,16)	RS1/10SR103J
R 1909	(B,71,21)	RS1/10SR102J
R 1910	(B,75,24)	RS1/10SR473J
R 1922	(A,89,21)	RS1/10SR5102D
R 1924	(A,107,25)	RAB4C101J
R 1925	(B,95,22)	RAB4C101J
R 1941	(B,155,37)	RS1/4SA561J
R 1942	(B,15,23)	RS1/10SR151J
R 1943	(B,13,20)	RS1/10SR151J
R 1944	(B,70,8)	RS1/10SR151J
R 1945	(B,122,21)	RS1/10SR151J
R 1946	(B,31,30)	RS1/10SR221J

CAPACITORS

C 1801	(B,146,32)	CKSRYB104K16
C 1802	(B,157,17)	CKSRYB472K50
C 1803	(B,145,13)	CKSRYB472K50
C 1804	(B,145,27)	CCSRCH101J50
C 1805	(B,143,27)	CKSRYB102K50
C 1806	(B,108,19)	CKSRYB105K6R3
C 1808	(B,135,7)	CKSRYB105K6R3
C 1891	(B,138,20)	CKSYF106Z10
C 1901	(B,99,29)	CKSRYB104K16
C 1902	(B,82,24)	CKSRYB103K50

Circuit Symbol and No.		Part No.
C 1921	(A,89,25)	CKSRYB105K10
C 1922	(A,89,23)	CKSRYB105K10
C 1923	(B,99,22)	CKSRYB105K10

B

Unit Number : CWN5220(D)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1891	(A,144,18) Remote IC	GP1UXC14RK
IC 1901	(B,87,23) IC	PEG642A8
Q 1831	(B,40,8) Transistor	IMX9
Q 1832	(B,40,15) Transistor	LTC114EUB
D 1804	(B,87,14) Diode	DAN202U
D 1805	(B,91,15) Diode	DAP202U
D 1831	(A,152,39) LED	CL-195SR-CD
D 1833	(A,7,29) LED	CL-195SR-CD
D 1834	(A,18,28) LED	CL-195SR-CD
D 1835	(A,30,27) LED	CL-195SR-CD
D 1836	(A,8,12) LED	CL-195SR-CD
D 1837	(A,19,12) LED	CL-195SR-CD
D 1838	(A,30,13) LED	CL-195SR-CD
D 1839	(A,77,8) LED	CL-195SR-CD
D 1840	(A,87,8) LED	CL-195SR-CD
D 1841	(A,101,8) LED	CL-195SR-CD
D 1842	(A,111,8) LED	CL-195SR-CD
D 1843	(A,125,8) LED	CL-195SR-CD
D 1844	(A,135,8) LED	CL-195SR-CD
D 1845	(A,43,24) LED	CL-195SR-CD
D 1846	(A,64,28) LED	CL-195SR-CD
D 1849	(A,7,31) LED	CL-195PG-CD
D 1850	(A,18,30) LED	CL-195PG-CD
D 1851	(A,30,29) LED	CL-195PG-CD
D 1852	(A,8,11) LED	CL-195PG-CD
D 1853	(A,19,11) LED	CL-195PG-CD
D 1854	(A,30,11) LED	CL-195PG-CD
D 1855	(A,76,8) LED	CL-195PG-CD
D 1856	(A,88,8) LED	CL-195PG-CD
D 1857	(A,100,8) LED	CL-195PG-CD
D 1858	(A,112,8) LED	CL-195PG-CD
D 1859	(A,124,8) LED	CL-195PG-CD
D 1860	(A,136,8) LED	CL-195PG-CD
D 1861	(A,45,24) LED	CL-195PG-CD
D 1862	(A,62,28) LED	CL-195PG-CD
D 1865	(A,150,39) LED	CL-195PG-CD
D 1901	(B,97,31) Diode	1SS355
X 1901	(B,87,29) Radiator 10.0 MHz	CSS1577
S 1801	(A,5,36) Push Switch	CSG1155
S 1811	(A,55,20) Switch	CSX1120
S 1871	(A,11,6) Push Switch	CSG1155
S 1872	(A,22,6) Push Switch	CSG1155
S 1873	(A,34,7) Push Switch	CSG1155
S 1874	(A,72,7) Push Switch	CSG1155
S 1875	(A,91,7) Push Switch	CSG1155
S 1876	(A,139,7) Push Switch	CSG1155
S 1877	(A,21,34) Push Switch	CSG1155
S 1878	(A,33,33) Push Switch	CSG1155
S 1879	(A,95,7) Push Switch	CSG1155

Circuit Symbol and No.		Part No.
S 1880	(A,115,7) Push Switch	CSG1155
S 1881	(A,120,7) Push Switch	CSG1155
S 1882	(A,149,42) Push Switch	CSG1155
CN1801	(B,108,10) Connector	CKS6049
CN1802	(A,154,25) Connector	YKS5036
CN1921	(A,97,21) Connector	CKS6036
JA1801	(A,153,10) Jack	YKN5006
	OEL Module	MXS4013

RESISTORS

R 1804	(B,88,12)	RS1/10SR222J
R 1805	(B,90,17)	RS1/10SR222J
R 1811	(B,68,16)	RS1/10SR102J
R 1812	(B,47,12)	RS1/10SR102J
R 1813	(B,49,13)	RS1/10SR103J
R 1814	(B,61,12)	RS1/10SR122J
R 1815	(B,59,25)	RS1/10SR182J
R 1816	(B,48,28)	RS1/10SR332J
R 1817	(B,48,26)	RS1/10SR822J
R 1818	(B,42,27)	RS1/10SR103J
R 1831	(B,150,37)	RS1/4SA271J
R 1835	(B,13,24)	RS1/4SA331J
R 1837	(B,15,10)	RS1/4SA331J
R 1838	(B,67,8)	RS1/4SA331J
R 1839	(B,120,23)	RS1/4SA331J
R 1840	(B,31,26)	RS1/4SA471J
R 1841	(B,10,24)	RS1/4SA471J
R 1842	(B,12,10)	RS1/4SA471J
R 1843	(B,67,6)	RS1/4SA471J
R 1844	(B,117,23)	RS1/4SA471J
R 1845	(B,33,26)	RS1/4SA391J
R 1849	(B,149,35)	RS1/4SA271J
R 1854	(B,41,12)	RS1/10SR103J
R 1855	(B,43,12)	RS1/10SR222J
R 1856	(B,35,14)	RS1/10SR103J
R 1857	(B,35,16)	RS1/10SR682J
R 1867	(B,43,15)	RS1/10SR562J
R 1871	(A,6,7)	RS1/10SR103J
R 1872	(A,15,7)	RS1/10SR122J
R 1873	(A,30,7)	RS1/10SR182J
R 1874	(A,39,8)	RS1/10SR332J
R 1875	(A,81,9)	RS1/10SR822J
R 1876	(A,119,22)	RS1/10SR333J
R 1877	(A,17,33)	RS1/10SR103J
R 1878	(A,26,32)	RS1/10SR122J
R 1879	(A,38,32)	RS1/10SR182J
R 1880	(A,118,27)	RS1/10SR332J
R 1881	(A,122,19)	RS1/10SR822J
R 1882	(A,125,18)	RS1/10SR333J
R 1891	(B,131,24)	RS1/10SR121J
R 1893	(B,140,17)	RS1/10SR2R2J
R 1901	(B,75,28)	RS1/10SR473J
R 1902	(B,94,32)	RS1/10SR154J
R 1903	(B,81,31)	RS1/10SR473J
R 1904	(B,98,19)	RS1/10SR473J
R 1905	(B,99,21)	RS1/10SR473J
R 1906	(A,109,28)	RS1/10SR473J
R 1907	(A,110,30)	RS1/10SR473J
R 1908	(B,86,16)	RS1/10SR103J
R 1909	(B,71,21)	RS1/10SR102J

Circuit Symbol and No.		Part No.
R 1910	(B,75,24)	RS1/10SR473J
R 1922	(A,89,21)	RS1/10SR5102D
R 1924	(A,107,25)	RAB4C101J
R 1925	(B,95,22)	RAB4C101J
R 1941	(B,155,37)	RS1/4SA561J
R 1942	(B,15,23)	RS1/10SR151J
R 1943	(B,13,20)	RS1/10SR151J
R 1944	(B,70,8)	RS1/10SR151J
R 1945	(B,122,21)	RS1/10SR151J
R 1946	(B,31,30)	RS1/10SR221J
R 1947	(B,34,30)	RS1/10SR181J
R 1948	(B,155,35)	RS1/4SA471J

CAPACITORS

C 1801	(B,146,32)	CKSRYB104K16
C 1802	(B,157,17)	CKSRYB472K50
C 1803	(B,145,13)	CKSRYB472K50
C 1804	(B,145,27)	CCSRCH101J50
C 1805	(B,143,27)	CKSRYB102K50
C 1806	(B,108,19)	CKSRYB105K6R3
C 1808	(B,135,7)	CKSRYB105K6R3
C 1891	(B,138,20)	CKSYF106Z10
C 1901	(B,99,29)	CKSRYB104K16
C 1902	(B,82,24)	CKSRYB103K50
C 1921	(A,89,25)	CKSRYB105K10
C 1922	(A,89,23)	CKSRYB105K10
C 1923	(B,99,22)	CKSRYB105K10

C

Unit Number : CWX3774
Unit Name : CD Core Unit(S11STD-DOUT)

MISCELLANEOUS

IC 201	(A,28,33)	IC	PE5706A
IC 301	(A,64,27)	IC	BA5839FP
Q 101	(B,8,56)	Transistor	2SA1577
Q 102	(B,21,51)	Digital TR(PNP)	UNR511MG
X 201	(A,15,27)	Ceramic Resonator 16.934 MHz	CSS1603
S 901	(A,42,53)	Switch	CSN1067
S 903	(B,21,12)	Switch	CSN1068
S 905	(B,11,25)	Switch	CSN1068
CN101	(A,16,58)	Connector	CKS4808
CN701	(A,37,10)	Connector	CKS6146

RESISTORS

R 101	(B,6,59)	RS1/10SR2R4J
R 102	(B,7,59)	RS1/10SR2R4J
R 103	(B,8,59)	RS1/10SR2R7J
R 108	(B,19,53)	RS1/16SS105J
R 109	(B,11,52)	RS1/16SS222J
R 214	(A,38,41)	RS1/16SS103J
R 215	(A,38,40)	RS1/16SS393J
R 216	(A,30,44)	RS1/16SS122J
R 217	(A,33,46)	RS1/16SS562J
R 218	(A,30,46)	RS1/16SS472J
R 225	(A,33,23)	RS1/16SS0R0J
R 229	(A,31,44)	RS1/16SS471J
R 232	(A,19,21)	RS1/16SS0R0J
R 235	(A,45,32)	RS1/16SS103J
R 236	(A,46,32)	RS1/16SS103J
R 237	(B,24,25)	RS1/16SS221J
R 240	(B,26,30)	RS1/16SS473J
R 245	(B,28,30)	RS1/16SS104J
R 253	(B,27,30)	RS1/16SS104J
R 254	(B,29,30)	RS1/16SS104J
R 260	(B,41,21)	RS1/16SS103J
R 262	(A,44,32)	RS1/16SS472J
R 263	(A,47,32)	RS1/16SS472J
R 264	(A,44,25)	RS1/16SS102J
R 281	(A,31,22)	RS1/16SS560J
R 282	(A,30,22)	RS1/16SS560J
R 283	(B,32,18)	RS1/16SS0R0J
R 291	(B,31,17)	RS1/16SS560J
R 292	(B,32,16)	RS1/16SS0R0J
R 293	(B,32,11)	RS1/16SS0R0J
R 294	(A,18,28)	RS1/16SS471J
R 296	(B,32,30)	RS1/16SS0R0J
R 299	(B,31,13)	RS1/16SS0R0J
R 305	(A,60,34)	RS1/16SS183J
R 306	(A,61,37)	RS1/16SS183J
R 307	(A,58,34)	RS1/16SS183J
R 308	(A,58,36)	RS1/16SS183J
R 701	(B,37,21)	RS1/16SS101J
R 702	(B,38,20)	RS1/16SS101J
R 706	(B,43,11)	RS1/16SS221J
R 708	(A,40,22)	RS1/16SS0R0J
R 709	(A,40,21)	RS1/16SS0R0J
R 722	(B,37,22)	RS1/16SS0R0J

CAPACITORS

C 104	(B,11,55)	CKSQYB475K6R3
C 203	(A,18,35)	CKSSYB104K10
C 209	(A,17,28)	CKSRYB104K16
C 210	(A,21,21)	CKSSYB104K10
C 211	(A,24,23)	CKSSYB104K10
C 212	(A,38,33)	CKSSYB104K10
C 213	(A,40,41)	CKSSYB332K50
C 214	(A,40,40)	CKSSYB473K10
C 215	(A,38,37)	CKSSYB104K10
C 216	(A,36,46)	CKSSYB182K50
C 217	(A,31,46)	CCSSCH560J50
C 218	(A,29,46)	CCSSCH4R0C50
C 219	(A,32,43)	CKSSYB104K10
C 220	(B,32,41)	CKSSYB104K10
C 221	(A,35,43)	CKSSYB104K10
C 222	(A,29,43)	CKSSYB104K10
C 223	(A,25,44)	CCSSCH680J50
C 224	(A,23,44)	CCSSCH470J50
C 225	(A,20,43)	CKSSYB103K16
C 228	(A,32,46)	CCSSCH270J50
C 229	(B,28,40)	CKSSYB104K10
C 231	(B,44,28)	CKSSYB102K50
C 232	(B,45,28)	CKSSYB102K50
C 233	(B,25,25)	CKSSYB103K16
C 236	(B,26,41)	CKSSYB104K10
C 238	(A,15,35)	CKSRYB104K16

Circuit Symbol and No.		Part No.
C 299	(A,17,33)	CKSSYB104K10
C 304	(A,60,35)	CKSSYB472K25
C 305	(A,58,35)	CKSSYB223K16
C 306	(A,68,20)	CKSRYB105K10
C 710	(B,43,10)	CKSSYB102K50

D

Unit Number : CWN4816(A,B,C)
Unit Name : SD Unit

MISCELLANEOUS

CN1202	(A,33,43)		VKN1302
CN1203	(A,23,19)	Connector	CKS6180

Miscellaneous Parts List

	Pickup Unit(S10.5)(Service)	CXX1942
M 1	Motor Unit(SPINDLE)	CXE2273
M 2	Motor Unit(LOADING/CARRIAGE)	CXC4026