


KDC-316S/316V/37MR


EXPLODED VIEW (CD MECHANISM)

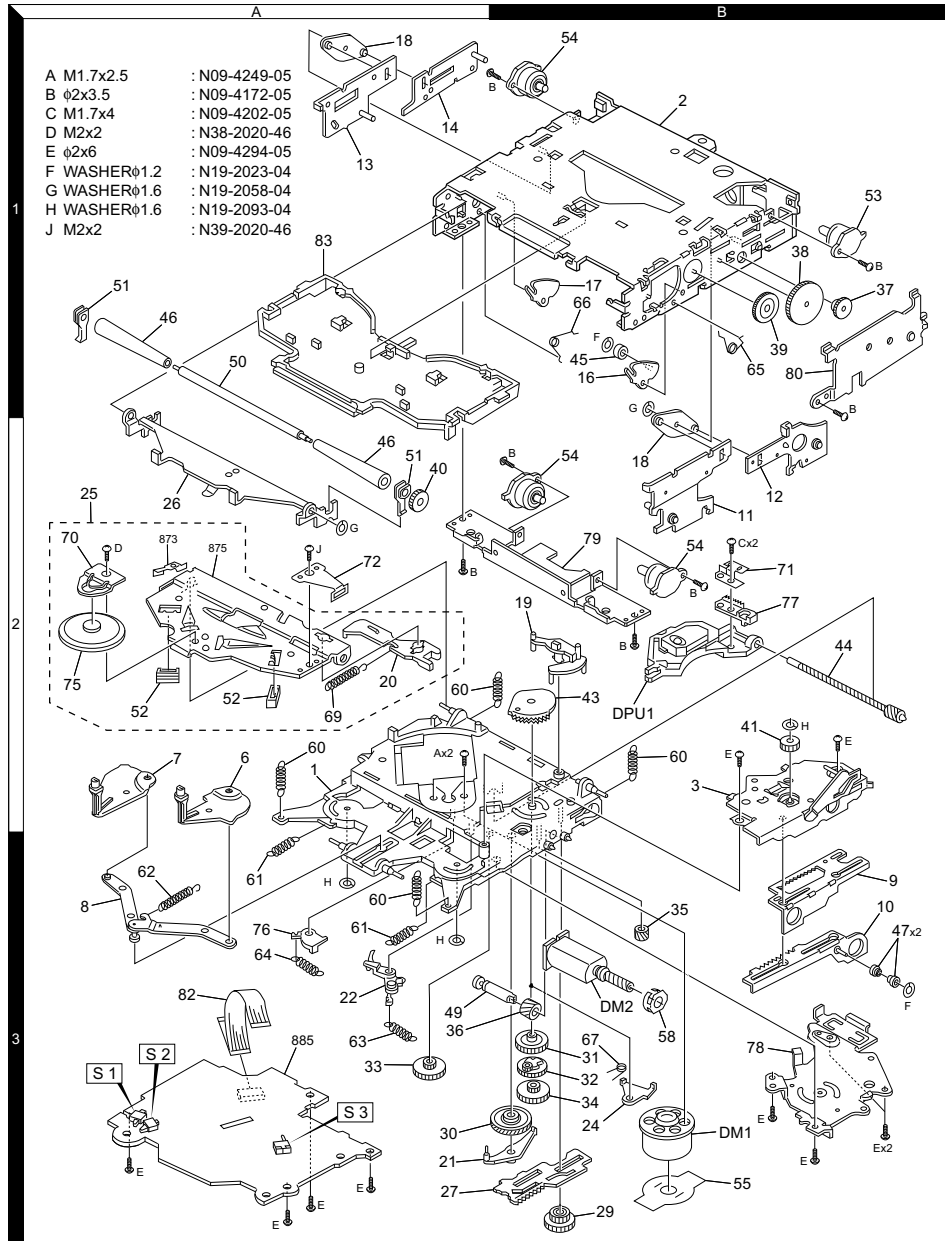

Parts with exploded numbers larger than 700 are not supplied.

KDC-316S/316V/37MR

EXPLODED VIEW (UNIT)

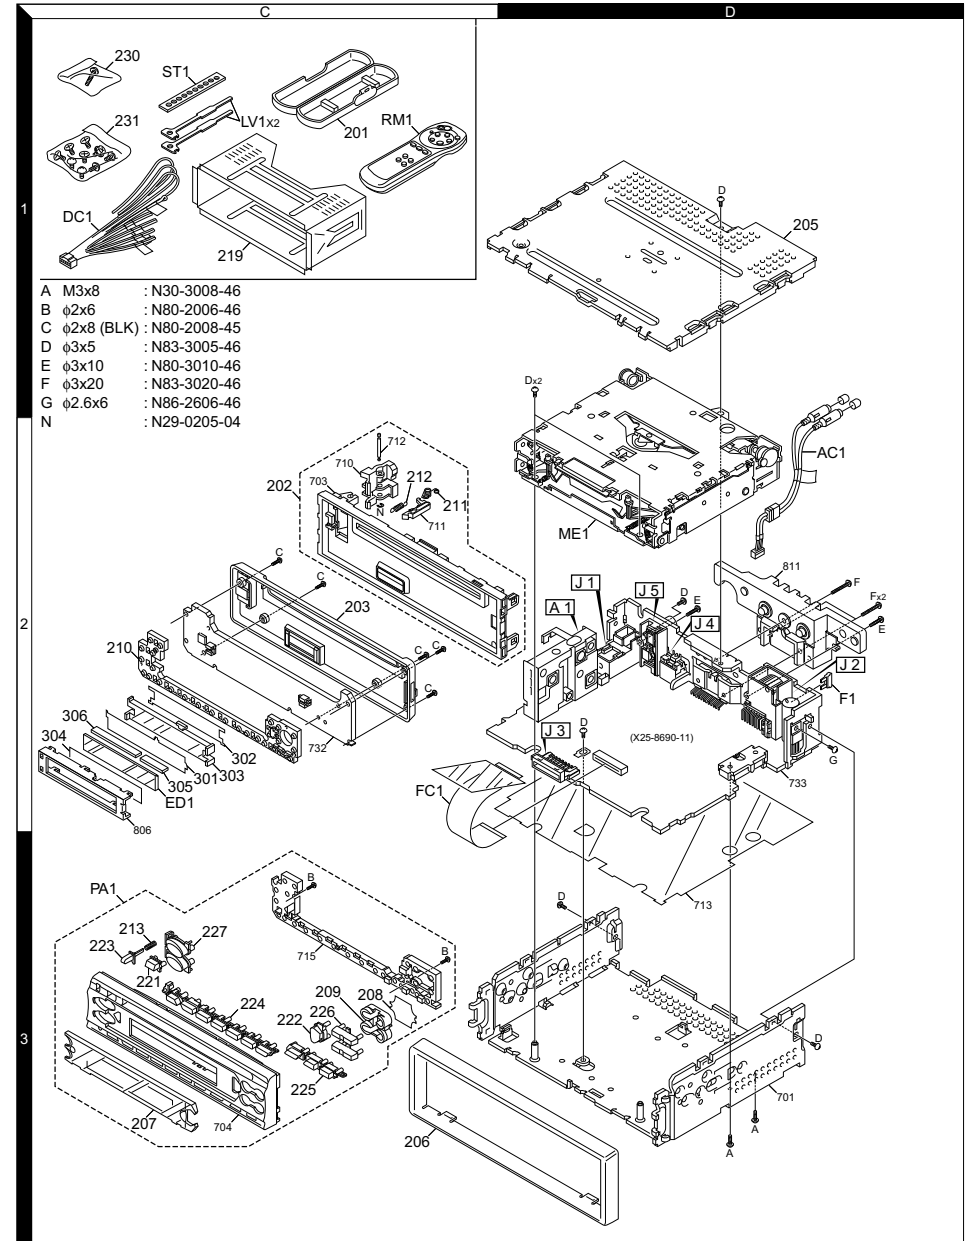

Parts with exploded numbers larger than 700 are not supplied.

KDC-316S/316V/37MR

PARTS LIST

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

KDC-316S/V/37MR

SWITCH UNIT(X13-9880-XX)

ELECTRIC UNIT(X25-8690-XX)

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
KDC-316S/V/37MR					
201	1C		A02-1486-13	PLASTIC CABINET ASSY	
202	2C		A22-2863-03	SUB PANEL ASSY	
203	2C		A46-1694-01	REAR COVER	
205	1D		A52-0783-02	TOP PLATE	
PA1	3C	*	A64-2199-02	PANEL ASSY	K1
PA1	3C	*	A64-2200-02	PANEL ASSY	K2
PA1	3C	*	A64-2201-02	PANEL ASSY	K3
RM1	1C		A70-0883-05	REMOTE CONTROLLER ASSY	K3
206	3C		B07-3001-02	ESCUTCHEON	K1,K3
206	3C		B07-3002-02	ESCUTCHEON	K2
207	3C		B10-3291-01	FRONT GLASS	K1
207	3C		B10-3292-01	FRONT GLASS	K2
207	3C		B10-3293-01	FRONT GLASS	K3
208	3C	*	B11-1345-04	OPTICAL DIFFUSER	
209	3C		B19-2076-03	LIGHTING BOARD	
-			B46-0100-50	WARRANTY CARD	
-			B46-0606-04	ID CARD	
-			B58-1344-04	CAUTION CARD	K1
-		*	B64-1830-00	INSTRUCTION MANUAL	
LV1	1C		D10-4589-04	LEVER	
210	2C		E29-1830-02	CONDUCTIVE RUBBER	
AC1	2D		E30-4801-05	CORD WITH PINPLUG	K1
DC1	1C		E30-4783-05	DC CORD	
FC1	2C		E39-0343-05	FLAT CABLE	
F1	2D		F52-0006-05	FUSE(MINI BLADE TYPE)	
F1	2D		F52-0011-05	FUSE(MINI BLADE TYPE)	
211	3C		G01-2987-04	TORSION COIL SPRING	
212	3C		G01-2988-04	EXTENSION SPRING	
213	3C		G01-2990-04	COMPRESSION SPRING	
-			H10-4740-02	POLYSTYRENE FOAMED FIXTURE	
-			H25-0329-04	PROTECTION BAG (280X450X0.03)	
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-		*	H54-1893-03	ITEM CARTON CASE	K1
-		*	H54-1894-03	ITEM CARTON CASE	K2
-		*	H54-1895-03	ITEM CARTON CASE	K3
219	1C		J21-9641-03	MOUNTING HARDWARE ASSY	
ST1	1C		J54-0606-04	STAY	
221	3C		K24-3653-04	KNOB EJ	
222	3C		K24-3652-04	KNOB Q	
223	3C		K24-3665-04	KNOB RELEASE	
224	3C		K25-1253-03	KNOB 1-6	
225	3C		K25-1254-03	KNOB CLK	
226	3C		K25-1255-03	KNOB FM/AM	
227	3C		K25-1256-03	KNOB VOL	
230	1C		N99-1610-15	SCREW SET	
231	1C		N99-1632-05	SCREW SET	
A	3D		N30-3008-46	PAN HEAD MACHINE SCREW	
B	3C		N80-2006-46	PAN HEAD TAPTITE SCREW	
C	3C		N80-2008-45	PAN HEAD TAPTITE SCREW	

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
D N	1D 2C		N83-3005-46 N29-0205-04	PAN HEAD TAPTITE SCREW RETAINING RING (1.5φ)	
ME1	2C		X92-4130-00	MECHANISM ASSY	
SWITCH UNIT (X13-9880-XX)					
301	3C		B11-1327-04	OPTICAL DIFFUSER	K1
301	3C		B11-1333-04	OPTICAL DIFFUSER	K3,K2
302	3C		B11-1328-04	REFLECTION SHEET	
303	3C		B19-2065-03	LIGHTING BOARD	
304	3C		B11-1332-04	COLOR FILTER	K3
D1-14			B30-1533-05	LED(1608,PG)	K1
D1-14			B30-1567-05	LED(1608,RED)	K3
D17			B30-1533-05	LED(1608,PG)	K1
D17			B30-1567-05	LED(1608,RED)	K3
D18,19			B30-1572-05	LED(WHITE)	
D20			B30-1567-05	LED(1608,RED)	K3
D20,21			B30-1533-05	LED(1608,PG)	K1
D24,25			B30-1533-05	LED(1608,PG)	K1
ED1			B38-1061-05	LIQUID CRYSTAL	K1
ED1			B38-1062-05	LIQUID CRYSTAL	K3,K2
C1			CK73GB1H102K	CHIP C 1000PF K	
C2,3			CK73GB1E473K	CHIP C 0.047UF K	
C2,3			CK73GB1H473K	CHIP C 0.047UF K	
C4			CK73GB1H103K	CHIP C 0.010UF K	
C5			CK73EB1C225K	CHIP C 2.2UF K	
C8,9			CK73GB1H103K	CHIP C 0.010UF K	
305	3C		E29-1834-04	CONDUCTIVE RUBBER	
306	3C		E29-1829-04	CONDUCTIVE RUBBER	
J1			E59-0828-05	RECTANGULAR PLUG	
CP1,2			R90-0724-05	MULTI-COMP 1K X4	
R2-4			RK73FB2A471J	CHIP R 470 J 1/10W	
R5			RK73FB2A102J	CHIP R 1.0K J 1/10W	
R7			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R8			RK73GB1J563J	CHIP R 56K J 1/16W	
R9			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R10			RK73EB2B4R7J	CHIP R 4.7 J 1/8W	
R12			RK73FB2A102J	CHIP R 1.0K J 1/10W	
R13			RK73FB2A470J	CHIP R 47 J 1/10W	
R14-16			RK73EB2B331J	CHIP R 330 J 1/8W	
R17,18			RK73EB2B511J	CHIP R 510 J 1/8W	
R19			RK73EB2B331J	CHIP R 330 J 1/8W	
R20			RK73EB2B271J	CHIP R 270 J 1/8W	
R21			RK73EB2B331J	CHIP R 330 J 1/8W	K1
D22,23			DA204K	DIODE	
IC1			LC75853NE	MOS-IC	
IC2			RS-171	ANALOGUE IC	
Q1			DTA114EK	DIGITAL TRANSISTOR	
Q1			KRA102S	DIGITAL TRANSISTOR	
Q1			UN2111	DIGITAL TRANSISTOR	
ELECTRIC UNIT (X25-8690-XX)					
D102			B30-1567-05	LED(1608,RED)	
C1			C90-2853-05	ELECTRO 4700UF 16WV	

K1: KDC-316S K2: KDC-37MR K3: KDC-316V

⚠ indicates safety critical components.

KDC-316S/316V/37MR

PARTS LIST

* New Parts
Parts without Parts No. are not supplied.
Les articles non mentionnes dans le Parts No. ne sont pas fournis.
Teile ohne Parts No. werden nicht geliefert.

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
C21 C40 C50 C52-54 C55			CK73GB1H103K CK73GB1H103K CE04CW1E100M C90-2597-05 CE04CW1E100M	CHIP C 0.010UF K CHIP C 0.010UF K ELECTRO 10UF 25WV ELECTRO 10UF 16WV ELECTRO 10UF 25WV	
C56 C57 C63 C101 C102			CE04CW1H100M C90-2926-05 CE04CW1C220M CE04CW0J101M CK73GB1H103K	ELECTRO 10UF 50WV ELECTRO 220UF 16WV ELECTRO 22UF 16WV ELECTRO 100UF 6.3WV CHIP C 0.010UF K	
C103 C103 C104,105 C106 C142			CK73GB1C104K CK73GB1H104K CC73GCH1H150J CK73GB1H472K CK73GB1C104K	CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 15PF J CHIP C 4700PF K CHIP C 0.10UF K	
C142 C201 C202 C203-205 C206			CK73GB1H104K CE04CW1A470M CK73GB1H103K C90-2610-05 CK73GB1H153K	CHIP C 0.10UF K ELECTRO 47UF 10WV CHIP C 0.010UF K ELECTRO 2.2UF 50WV CHIP C 0.015UF K	
C207 C208,209 C208,209 C210 C210			CK73GB1A474K CK73GB1C104K CK73GB1H104K CK73GB1E333K CK73GB1H333K	CHIP C 0.47UF K CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 0.033UF K CHIP C 0.033UF K	
C211 C221-224 C223,224 C225 C225,226			CC73GCH1H151J C90-2597-05 C90-2597-05 CK73GB1H103K CK73GB1H103K	CHIP C 150PF J ELECTRO 10UF 16WV ELECTRO 10UF 16WV CHIP C 0.010UF K CHIP C 0.010UF K	K1 K3 K3 K1
C251-254 C255 C256 C257 C258			C90-5296-05 C90-2608-05 CE04CW1A101M C90-2608-05 C90-2935-05	NP-ELECT 0.22UF 50WV ELECTRO 1.0UF 50WV ELECTRO 100UF 10WV ELECTRO 1.0UF 50WV ELECTRO 1.0UF 50WV	
C301 C302,303 C304 C305 C306			CE04CW1A101M CK73GB1H103K CE04CW1A101M CK73GB1H103K C90-2594-05	ELECTRO 100UF 10WV CHIP C 0.010UF K ELECTRO 100UF 10WV CHIP C 0.010UF K ELECTRO 10UF 10WV	
C307 C401,402 C403 C404			CK73GB1H103K C90-2608-05 CE04CW1A101M CK73GB1H103K	CHIP C 0.010UF K ELECTRO 1.0UF 50WV ELECTRO 100UF 10WV CHIP C 0.010UF K	
CN1 CN2 CN3 J1 J2			E40-9550-05 E40-3238-05 E40-3246-05 E04-0312-05 E58-0863-15	FLAT CABLE CONNECTOR PIN ASSY PIN ASSY RF COAXIAL CABLE RECEPTACLE RECTANGULAR RECEPTACLE	K1 K2
J3 J4 J5 P1			E58-0879-05 E56-0834-05 E63-0852-05 E23-0745-05	RECTANGULAR RECEPTACLE CYLINDRICAL RECEPTACLE PIN JACK TERMINAL	
L1			L33-1170-05	CHOKE COIL ASSY	

ELECTRIC UNIT(X25-8690-XX)

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
L4 L101 L201 L303-306 X1			L33-1123-05 L40-4795-91 L40-4795-91 L40-4795-91 L77-1167-05	LINE FILTER COIL SMALL FIXED INDUCTOR(4.7UH,J) SMALL FIXED INDUCTOR(4.7UH,J) SMALL FIXED INDUCTOR(4.7UH,J) CRYSTAL RESONATOR(4.19M)	
D E F G	2D 2D 2D 2D		N83-3005-46 N80-3010-46 N83-3020-46 N86-2606-46	PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW BINDING HEAD TAPTITE SCREW	
CP1 CP2 CP3 R10 R11			R90-1056-05 R90-1047-05 R90-1046-05 RK73FB2A303J RK73GB1J103J	MULTIPLE RESISTOR MULTIPLE RESISTOR MULTIPLE RESISTOR CHIP R 30K J 1/10W CHIP R 10K J 1/16W	
R12 R20 R22 R23 R51			RK73GB1J104J RD14DB2H332J RK73GB1J103J RK73GB1J104J RK73GB1J473J	CHIP R 100K J 1/16W SMALL-RD 3.3K J 1/2W CHIP R 10K J 1/16W CHIP R 100K J 1/16W CHIP R 47K J 1/16W	
R57 R58 R67 R71 R72			RK73FB2A152J RK73GB1J472J RK73GB1J103J RK73FB2A823J RK73FB2A363J	CHIP R 1.5K J 1/10W CHIP R 4.7K J 1/16W CHIP R 10K J 1/16W CHIP R 82K J 1/10W CHIP R 36K J 1/10W	
R73 R103,104 R105 R106 R107,108			RK73GB1J104J RK73GB1J222J RK73GB1J471J RK73GB1J104J RK73GB1J222J	CHIP R 100K J 1/16W CHIP R 2.2K J 1/16W CHIP R 470 J 1/16W CHIP R 100K J 1/16W CHIP R 2.2K J 1/16W	
R110 R113,114 R115 R116 R117			RK73GB1J472J RK73GB1J473J RK73GB1J102J RK73GB1J103J RK73GB1J102J	CHIP R 4.7K J 1/16W CHIP R 47K J 1/16W CHIP R 1.0K J 1/16W CHIP R 10K J 1/16W CHIP R 1.0K J 1/16W	
R118 R119 R121,122 R125 R126			RK73GB1J103J RK73GB1J473J RK73GB1J222J RK73GB1J102J RK73GB1J104J	CHIP R 10K J 1/16W CHIP R 47K J 1/16W CHIP R 2.2K J 1/16W CHIP R 1.0K J 1/16W CHIP R 100K J 1/16W	
R127 R128 R129,130 R131 R132			RK73GB1J222J RK73GB1J225J RK73GB1J222J RK73GB1J682J RK73GB1J223J	CHIP R 2.2K J 1/16W CHIP R 2.2M J 1/16W CHIP R 2.2K J 1/16W CHIP R 6.8K J 1/16W CHIP R 22K J 1/16W	
R133 R135 R136,137 R137 R139			RK73GB1J164J RK73GB1J473J RK73GB1J473J RK73GB1J473J RK73GB1J473J	CHIP R 160K J 1/16W CHIP R 47K J 1/16W CHIP R 47K J 1/16W CHIP R 47K J 1/16W CHIP R 47K J 1/16W	K3 K1,K2 K3
R143 R144 R201 R202,203 R221-224			RK73FB2A222J RK73GB1J104J RK73GB1J272J RK73GB1J472J RK73FB2A271J	CHIP R 2.2K J 1/10W CHIP R 100K J 1/16W CHIP R 2.7K J 1/16W CHIP R 4.7K J 1/16W CHIP R 270 J 1/10W	K1

K1: KDC-316S K2: KDC-37MR K3: KDC-316V

 indicates safety critical components.

KDC-316S/316V/37MR

PARTS LIST

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

ELECTRIC UNIT(X25-8690-XX)

CD PLAYER UNIT(X32-5010-00)

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
R223,224			RK73FB2A271J	CHIP R 270 J 1/10W	K3
R251			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R254			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R255			RK73GB1J333J	CHIP R 33K J 1/16W	
R256			RK73FB2A102J	CHIP R 1.0K J 1/10W	
R257			RK73GB1J362J	CHIP R 3.6K J 1/16W	
R258			RK73GB1J101J	CHIP R 100 J 1/16W	
R260			RK73GB1J751J	CHIP R 750 J 1/16W	
R261			RK73GB1J431J	CHIP R 430 J 1/16W	
R263			RK73GB1J184J	CHIP R 180K J 1/16W	
R264			RK73GB1J473J	CHIP R 47K J 1/16W	
R412-415			RK73GB1J104J	CHIP R 100K J 1/16W	
W151			R92-2053-05	CHIP R 0 J 1/8W	
W152			R92-1252-05	CHIP R 0 OHM	
W155			R92-1252-05	CHIP R 0 OHM	
W156,157			R92-2053-05	CHIP R 0 J 1/8W	
W158,159			R92-1252-05	CHIP R 0 OHM	
W160-165			R92-2053-05	CHIP R 0 J 1/8W	
W167-169			R92-1252-05	CHIP R 0 OHM	
D1			S2V20*A	DIODE	
D2			1SS133	DIODE	
D4			IMSA-6801	SURGE ABSORBER	
D4			SA-C2012-101TB	SURGE ABSORBER	
D10			MA4068(N)-M	ZENER DIODE	
D13,14			AM01Z	DIODE	
D13,14			DSM1SD2	DIODE	
D13,14			ERA15-02	DIODE	
D20			MA4068(N)-M	ZENER DIODE	
D40			1SS133	DIODE	
D50			1SS133	DIODE	
D51			HZS9A1L	ZENER DIODE	
D51			MA4082(N)-L	ZENER DIODE	
D70			MA4068(N)-M	ZENER DIODE	
D101			1SS133	DIODE	
D103,104			1SS133	DIODE	
D106,107			HZS6C1	ZENER DIODE	
D106,107			MA4062-L	ZENER DIODE	
D201,202			MA4068(N)-M	ZENER DIODE	
D251-253			1SS133	DIODE	
D401,402			MA4068(N)-M	ZENER DIODE	
D403,404			HZS6C1	ZENER DIODE	
D403,404			MA4062-L	ZENER DIODE	
D409-411			HZS6C1	ZENER DIODE	
D409-411			MA4062-L	ZENER DIODE	
IC1			UPD780058GC231	MI-COM IC	
IC2			TDA7407D	ANALOGUE IC	
IC4			TDA7386	ANALOGUE IC	
IC7			BA4911-V4	ANALOGUE IC	
IC8			HD74HC27FP	MOS-IC	
IC11			S-80830ANNP	MOS-IC	
IC12			BR24C01AF	MEMORY IC	
IC12			BR24C01AF-W	MEMORY IC	
IC12			M24C01-WMN6T	MEMORY IC	
IC12			S-24C01B	MEMORY IC	

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
Q10			2SC4081	TRANSISTOR	
Q10			2SD1819A	TRANSISTOR	
Q20			2SC4081	TRANSISTOR	
Q20			2SD1819A	TRANSISTOR	
Q40			DTA124EUA	DIGITAL TRANSISTOR	
Q40			UN5112	DIGITAL TRANSISTOR	
Q50			2SA1036K	TRANSISTOR	
Q51			UMC2N	TRANSISTOR	
Q53			UMC2N	TRANSISTOR	
Q55			2SD2375	TRANSISTOR	
Q55			2SD2396	TRANSISTOR	
Q70			2SC4081	TRANSISTOR	
Q70			2SD1819A	TRANSISTOR	
Q101			2SC4081	TRANSISTOR	
Q101			2SD1819A	TRANSISTOR	
Q102			DTA114YUA	DIGITAL TRANSISTOR	
Q102			UN5114	DIGITAL TRANSISTOR	
Q221-224			DTC143TUA	DIGITAL TRANSISTOR	K1
Q221-224			UN5216	DIGITAL TRANSISTOR	K1
Q223,224			DTC143TUA	DIGITAL TRANSISTOR	K3
Q223,224			UN5216	DIGITAL TRANSISTOR	K3
Q251			DTC114YUA	DIGITAL TRANSISTOR	
Q251			UN5214	DIGITAL TRANSISTOR	
TH1			PTH9C42BE471Q	POSITIVE RESISTOR	
A1	2D		X86-3300-10	TUNER UNIT	
CD PLAYER UNIT (X32-5010-00)					
C1,2			CK73FB1C105K	CHIP C 1.0UF K	
C3			CK73FB0J475K	CHIP C 4.7UF K	
C4			C92-0566-05	CHIP-TAN 10UF 6.3WV	
C5			CC73GCH1H330J	CHIP C 33PF J	
C6			CC73GCH1H030C	CHIP C 3.0PF C	
C7			CK73GB1C104K	CHIP C 0.10UF K	
C8			CK73FB1C105K	CHIP C 1.0UF K	
C10			CK73GB1H472K	CHIP C 4700PF K	
C11			CK73GB1H682K	CHIP C 6800PF K	
C12			CK73GB1H332K	CHIP C 3300PF K	
C13			CK73GB1C333K	CHIP C 0.033UF K	
C14			CK73GB1H472K	CHIP C 4700PF K	
C15			CK73GB1C473K	CHIP C 0.047UF K	
C16			CC73GCH1H221J	CHIP C 220PF J	
C17			CK73GB1H472K	CHIP C 4700PF K	
C18			CC73GCH1H471J	CHIP C 470PF J	
C19,20			CK73GB1C104K	CHIP C 0.10UF K	
C21			CK73FB0J475K	CHIP C 4.7UF K	
C23			CK73GB1H102K	CHIP C 1000PF K	
C24			CK73GB1E223K	CHIP C 0.022UF K	
C25			CK73GB1H153K	CHIP C 0.015UF K	
C26			CK73GB0J105K	CHIP C 1.0UF K	
C28			CK73GB0J105K	CHIP C 1.0UF K	
C29			CK73GB1C104K	CHIP C 0.10UF K	
C33			CK73GB1C104K	CHIP C 0.10UF K	
C35			CK73GB1C104K	CHIP C 0.10UF K	
C41			CK73EB1C225K	CHIP C 2.2UF K	
C43			CK73GB1H153K	CHIP C 0.015UF K	

K1: KDC-316S K2: KDC-37MR K3: KDC-316V

⚠ indicates safety critical components.

KDC-316S/316V/37MR

PARTS LIST

* New Parts
Parts without Parts No. are not supplied.
Les articles non mentionnes dans le Parts No. ne sont pas fournis.
Teile ohne Parts No. werden nicht geliefert.

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
C45			CK73GB1H153K	CHIP C 0.015UF K	
C46			CK73GB1C473K	CHIP C 0.047UF K	
C55			CK73GB1C104K	CHIP C 0.10UF K	
C68			CK73GB1C104K	CHIP C 0.10UF K	
C71,72			CK73GB1H471K	CHIP C 470PF K	
C77,78			CC73GCH1H680J	CHIP C 68PF J	
C79,80			CK73GB1H222K	CHIP C 2200PF K	
C85			CK73GB1C104K	CHIP C 0.10UF K	
C89			CK73GB1H222K	CHIP C 2200PF K	
C90			CK73GB1C104K	CHIP C 0.10UF K	
CN1			E40-9536-05	FLAT CABLE CONNECTOR	
CN2			E40-9339-05	FLAT CABLE CONNECTOR	
CN2			E41-0036-05	FLAT CABLE CONNECTOR	
CN2			E41-0129-05	FLAT CABLE CONNECTOR	
X1			L78-0572-05	RESONATOR (16.93MHZ)	
CP1-3			R90-1019-05	MULTI-COMP 100 X 2	
R3			RK73GB1J272J	CHIP R 2.7K J 1/16W	
R5			RK73GB1J151J	CHIP R 150 J 1/16W	
R6			RK73GB1J272J	CHIP R 2.7K J 1/16W	
R8			RK73EB2B4R7J	CHIP R 4.7 J 1/8W	
R9			RK73EB2B100J	CHIP R 10 J 1/8W	
R10,11			RK73GB1J682J	CHIP R 6.8K J 1/16W	
R12			RK73GB1J432J	CHIP R 4.3K J 1/16W	
R15			RK73GB1J824J	CHIP R 820K J 1/16W	
R16			RK73GB1J223J	CHIP R 22K J 1/16W	
R17			RK73GB1J363J	CHIP R 36K J 1/16W	
R18			RK73GB1J392J	CHIP R 3.9K J 1/16W	
R19			RK73GB1J333J	CHIP R 33K J 1/16W	
R20			RK73GB1J104J	CHIP R 100K J 1/16W	
R21			RK73GB1J334J	CHIP R 330K J 1/16W	
R32			RK73GB1J104J	CHIP R 100K J 1/16W	
R34			RK73GB1J683J	CHIP R 68K J 1/16W	
R36			RK73GB1J151J	CHIP R 150 J 1/16W	
R37			RK73GB1J471J	CHIP R 470 J 1/16W	
R38			RK73GB1J224J	CHIP R 220K J 1/16W	
R46			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R47			RK73GB1J103J	CHIP R 10K J 1/16W	
R49			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R52			RK73GB1J104J	CHIP R 100K J 1/16W	
R54			RK73GB1J104J	CHIP R 100K J 1/16W	
R71			RK73GB1J103J	CHIP R 10K J 1/16W	
R72			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R73			RK73GB1J473J	CHIP R 47K J 1/16W	
R75			RK73GB1J333J	CHIP R 33K J 1/16W	
R76			RK73GB1J622J	CHIP R 6.2K J 1/16W	
R77			RK73GB1J563J	CHIP R 56K J 1/16W	
R78			RK73GB1J243J	CHIP R 24K J 1/16W	
R81			RK73GB1J333J	CHIP R 33K J 1/16W	
R82			RK73GB1J123J	CHIP R 12K J 1/16W	
R83			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R102			RK73GB1J332J	CHIP R 3.3K J 1/16W	
R104			RK73GB1J562J	CHIP R 5.6K J 1/16W	
R107,108			RK73FB2A331J	CHIP R 330 J 1/10W	
R117,118			RK73FB2A203J	CHIP R 20K J 1/10W	

CD PLAYER UNIT(X32-5010-00) MECHANISM ASSY(X92-4130-00)

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
R121,122			RK73FB2A203J	CHIP R 20K J 1/10W	
R125,126			RK73FB2A203J	CHIP R 20K J 1/10W	
R202			RK73GB1J104J	CHIP R 100K J 1/16W	
R214			RK73GB1J104J	CHIP R 100K J 1/16W	
R218			RK73GB1J473J	CHIP R 47K J 1/16W	
R233			RK73GB1J622J	CHIP R 6.2K J 1/16W	
R234			RK73GB1J103J	CHIP R 10K J 1/16W	
R238			RK73FB2A201J	CHIP R 200 J 1/10W	
W17			R92-2053-05	CHIP R 0 J 1/8W	
S1,2			S68-0838-05	PUSH SWITCH	
S3			S68-0859-05	PUSH SWITCH	
D1,2			DAN202U	DIODE	
D3			DA204U	DIODE	
D4			DAN202U	DIODE	
D5			MA8051-L	ZENER DIODE	
IC1			AN22000AA	ANALOGUE IC	
IC2			MN662774KG1	MOS-IC	
IC4			BA5917AFP	ANALOGUE IC	
IC6			NJM4565MD	IC(OP AMP X2)	
Q1			MCH6101	TRANSISTOR	
Q2			DTC124EUA	DIGITAL TRANSISTOR	
Q3			DTA143XUA	DIGITAL TRANSISTOR	
Q4			2SA1362(Y)	TRANSISTOR	
Q5			DTC124EUA	DIGITAL TRANSISTOR	
MECHANISM ASSY (X92-4130-00)					
1	2A		A10-4482-01	CHASSIS	
2	1B		A10-4225-33	CHASSIS CALKING ASSY	
3	2B		A11-0915-43	SUB CHASSIS CALKING ASSY	
6	2A		D10-4306-04	ARM ASSY	
7	2A		D10-4305-04	ARM ASSY	
8	3A		D10-3087-44	ARM ASSY	
9	3B		D10-3092-03	SLIDER	
10	3B		D10-3093-04	SLIDER ASSY	
11	2B		D10-3095-04	SLIDER ASSY	
12	2B		D10-3096-04	SLIDER ASSY	
13	1A		D10-3099-24	SLIDER ASSY	
14	1A		D10-3100-04	SLIDER ASSY	
16	1B		D10-4004-04	LEVER ASSY	
17	1B		D10-4006-04	LEVER	
18	1A		D10-4007-04	LEVER	
19	2B		D10-4008-14	LEVER	
20	2A		D10-4009-23	ARM	
21	3A		D10-4010-04	LEVER	
22	3A		D10-4307-04	LEVER ASSY	
24	3B		D10-4050-04	ARM	
25	3A		D10-4038-23	ARM ASSY	
26	2A		D10-4123-24	LEVER ASSY	
27	3A		D13-1442-03	RACK (GEAR)	
29	3B		D13-1231-04	GEAR	
30	3A		D13-1240-04	GEAR	
31	3B		D13-1233-04	GEAR	
32	3B		D13-1234-14	GEAR ASSY	
33	3A		D13-1441-03	GEAR	

K1: KDC-316S K2: KDC-37MR K3: KDC-316V

 indicates safety critical components.

PARTS LIST

Teile ohne Parts No. werden nicht geliefert.

MECHANISM ASSY(X92-4130-00)

Ref.No.	Add	New	Parts No.	Description	Destination

25