
9. EXPLODED VIEWS AND PARTS LIST

NOTES : • *Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
• *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
• *Screw adjacent to▽ mark on the product are used for disassembly.*
• *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions,apply as you think it appropriate.)*

9.1 EXTERIOR

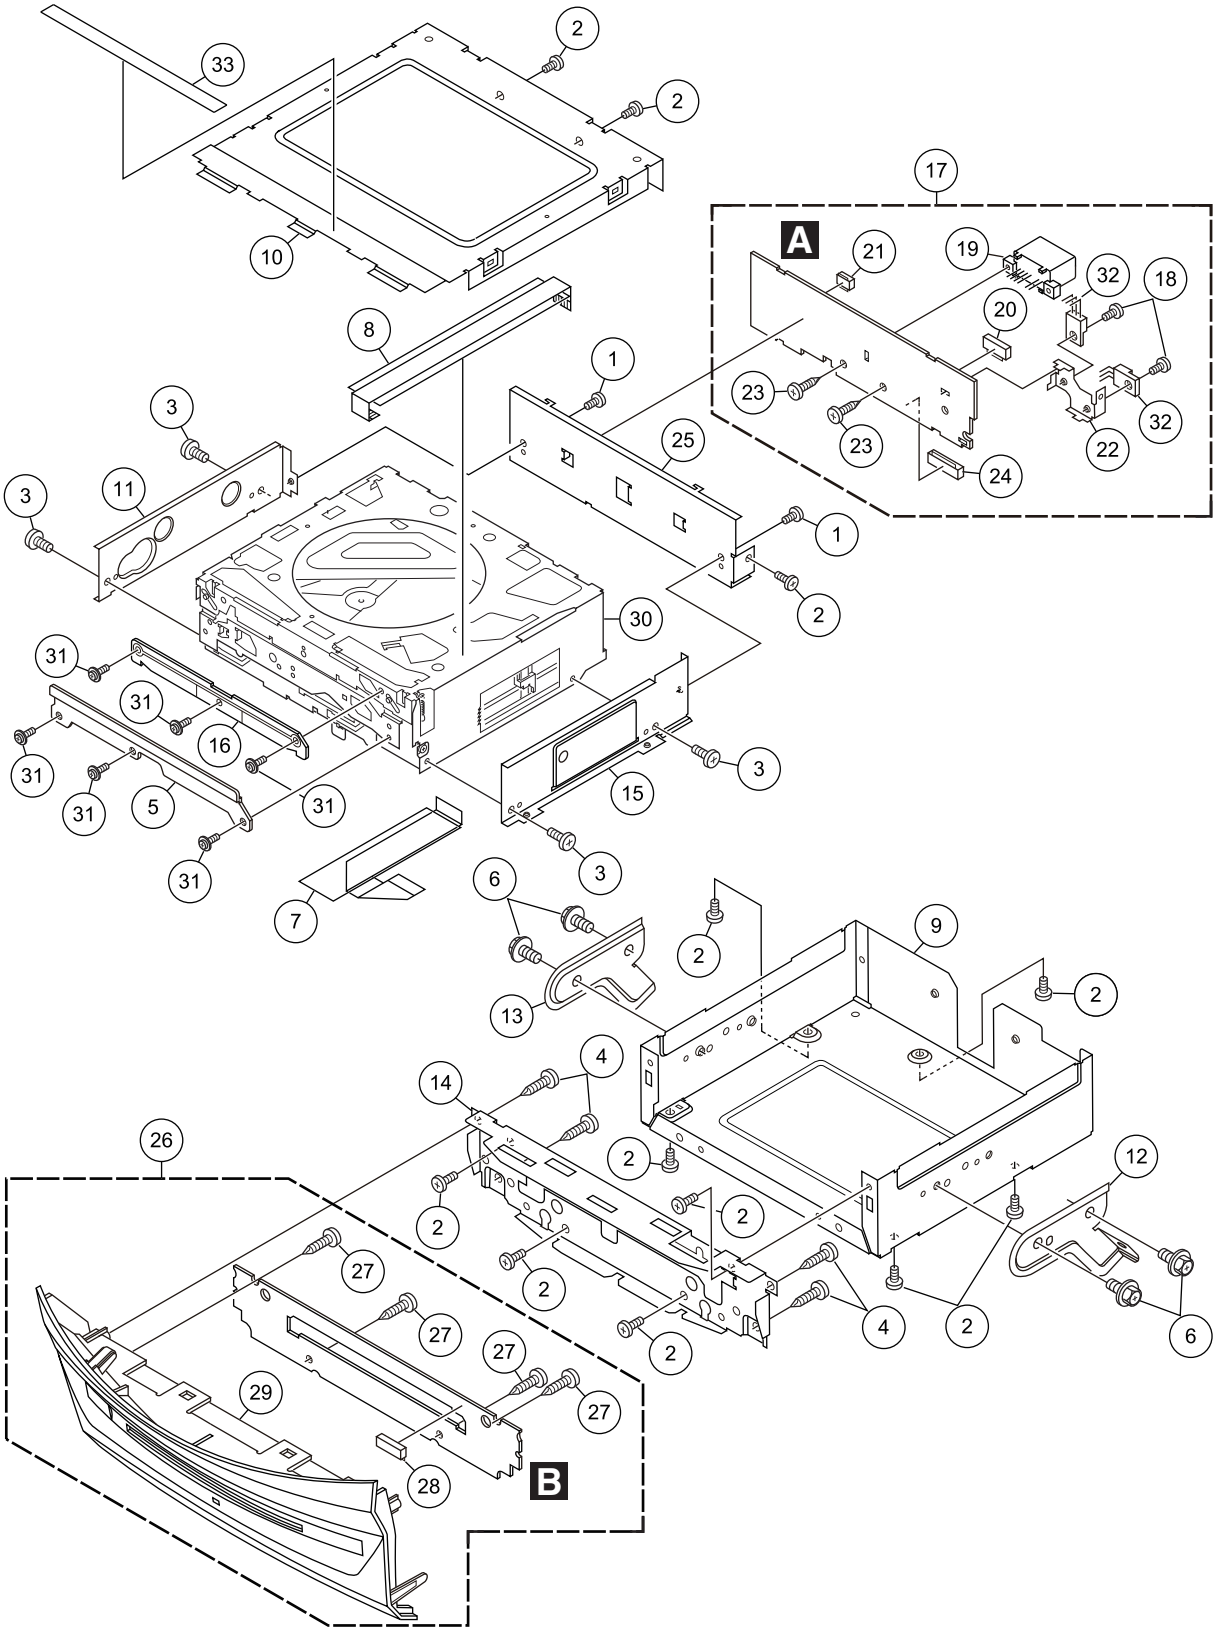

(1) EXTERIOR SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	Screw	BMZ26P030FTB
	2	Screw	BMZ26P060FTC
	3	Screw	BMZ30P040FTC
	4	Screw	BPZ30P100FTC
	5	Door	CAT2842
	6	Screw	CBA2055
	7	Flat Cable	CDE8360
	8	Flat Cable	CDE8361
	9	Chassis	CNA2976
	10	Case	CNB3370
	11	Holder	CND2958
	12	Bracket	CND3792
	13	Bracket	CND3793
	14	Front Frame	CND3796
	15	Holder	CND4189
	16	Guide	CNV9576
	17	Extension Unit	CWN2184
	18	Screw	BMZ30P060FTC
	19	Plug(CN101)	CKM1513
	20	Connector(CN103)	CKS3880
	21	Connector(CN601)	CKS4374
	22	Holder	CND3797
	23	Screw	PBZ30P060FSN
	24	18P FFC Connector(CN102)	VKN1310
	25	Holder Unit	CXC7401
	26	Grille Assy	See Contrast table(2)
	27	Screw	BPZ26P100FTC
	28	Connector(CN1001)	CKS3880
	29	Grille Assy	See Contrast table(2)
	30	CD Mechanism Module(Service)	CXX2182
	31	Screw	IMS20P025FTC
	32	Transistor(Q402,403)	2SB1724A
	33	Sheet	CNN1899

(2) CONTRAST TABLE

"CDX-MG3177ZH/XU/UC, CDX-MG3277ZH/XU/UC, CDX-MG3377ZH/XU/UC, CDX-MG3777ZH/XU/UC and CDX-MG3877ZH/XU/UC are constructed the same except for the following:"

Mark	No.	Description	CDX-MG3177ZH/XU/UC	CDX-MG3277ZH/XU/UC	CDX-MG3377ZH/XU/UC	CDX-MG3777ZH/XU/UC	CDX-MG3877ZH/XU/UC
	26	Grille Assy	CXC8095	CXC7222	CXC8096	CXC8659	CXC8660
	29	Grille Assy	CXC7330	CXC7402	CXC7403	CXC8661	CXC8662

9.2 CD MECHANISM MODULE

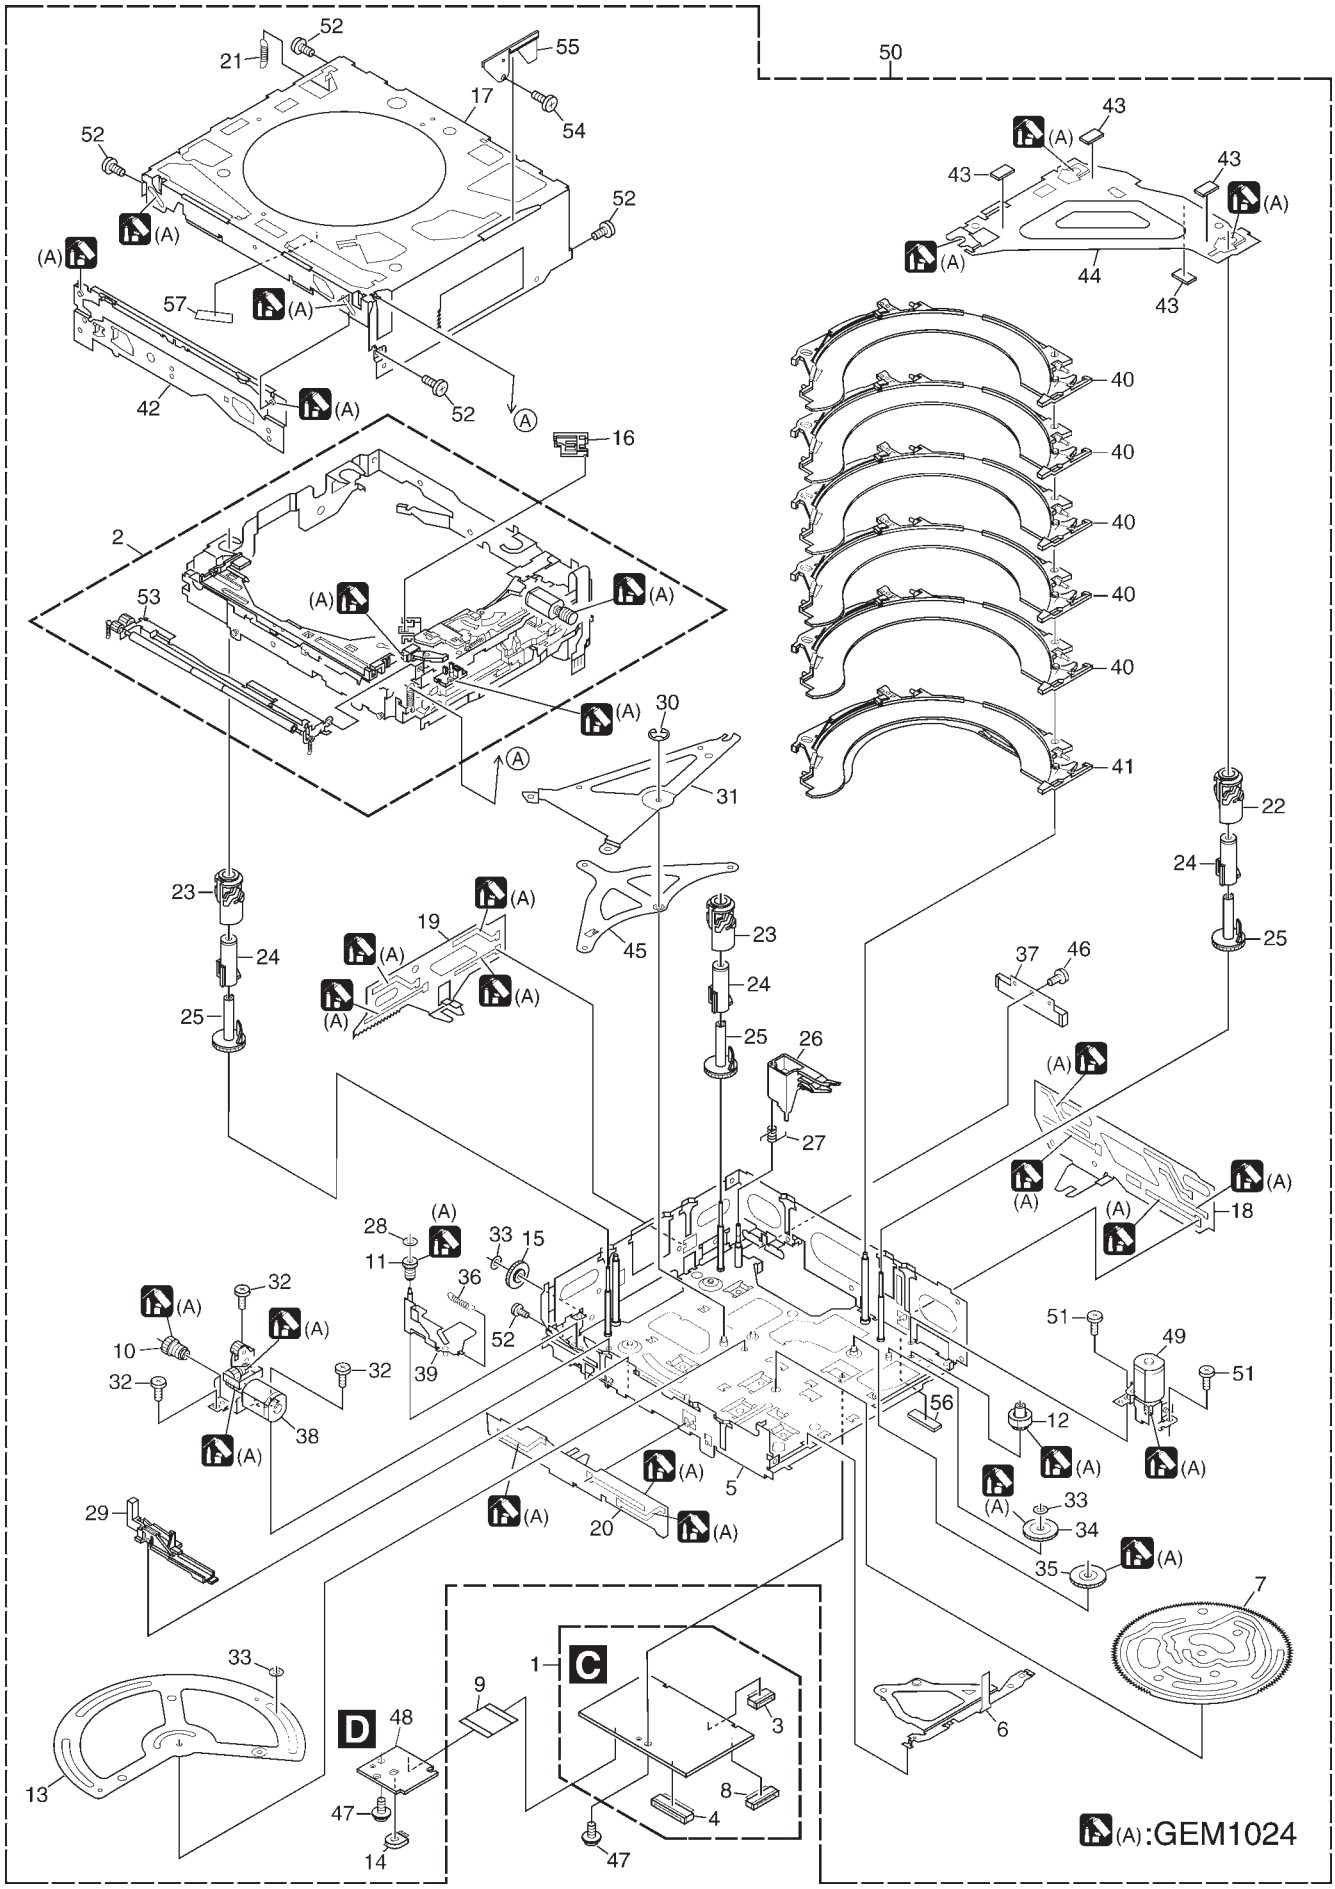

CD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Control Unit	CWX3467
	2	Stage Assy(Service)	CXX2229
	3	Connector(CN102)	CKS4937
	4	Connector(CN902)	CKS4914
*	5	Chassis Unit	CXC2394
*	6	Lever Unit	CXC2393
*	7	Cam Gear Unit	CXC2435
	8	Connector(CN101)	CKS5667
	9	Flexible PCB	CNP7958
	10	Gear	CNV8945
	11	Gear	CNV8944
	12	Gear	CNV7854
*	13	Gear	CND1924
	14	Variable Resistor(VR13)	CCW1029
	15	Gear	CND1939
	16	Arm	CNV7869
	17	Case	CND3948
	18	Stair	CND1932
	19	Stair	CND1931
	20	Stair	CND1930
	21	Spring	CBH2731
	22	Cam	CNV8779
	23	Cam	CNV8778
	24	Cam	CNV7868
	25	Cam	CNV7866
	26	Arm	CNV9327
	27	Spring	CBH2732
	28	Washer	CBF1094
	29	Holder	CNV7861
	30	Washer	YE15FTC
*	31	Arm	CND3709
	32	Screw(M2 x 2.5)	CBA1823
	33	Washer	CBF1064
*	34	Gear	CND1936
*	35	Gear	CND1937
	36	Spring	CBH2720
	37	PCB Assy	CXC3142
	38	ELV Motor Assy(ELV)(M2)	CXC5910
*	39	Lever Unit	CXC2392
	40	Tray Assy	CXC7678
	41	Under Tray Assy	CXC7677
	42	Shutter Assy	CXC5818
	43	Sheet	CNM9680
	44	Holder Unit	CXC2418
*	45	Arm	CND1933
	46	Screw	BMZ20P025FTC
	47	Screw	IMS26P025FTC
	48	RPS PCB Assy	CWX2986
	49	Cam Motor Assy(CAM)(M1)	CXC5908
	50	Mechanism Unit(G3)(Service)	CXX2228
	51	Screw	JFZ20P020FTC
	52	Screw(M2 x 2.5)	CBA1623
	53	Load Arm Assy	CXC6901
	54	Screw(M2 x 1.4)	CBA2025
	55	Spring	CBL1728
	56	Sheet	CNN1311
	57	Sheet	CNN1310

12. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

  Chip Resistor

  RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J

  Chip Capacitor (except for CQS.....)

  CKS....., CCS....., CSZS.....
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Meaning of the figures and others in the parentheses in the parts list.*

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

Circuit Symbol and No. **Part No.**

Unit Number : CWN2184
Unit Name : Extension Unit
Unit Number :
Unit Name : Keyboard Unit
Unit Number : CWX3467
Unit Name : Control Unit
Unit Number : CWX2986
Unit Name : RPS PCB Assy

A

Unit Number : CWN2184
Unit Name : Extension Unit

MISCELLANEOUS

IC 100	(B,49,35) IC	NJM4580MD
IC 101	(B,56,35) IC	NJM4580MD
IC 102	(B,63,42) IC	TC4066BFT
IC 131	(B,51,22) IC	NJM2068MD
IC 201	(B,120,30) IC	HA12241FP
IC 300	(B,154,27) IC	PAJ002A
IC 601	(A,138,29) IC	PEG337B
IC 602	(B,79,39) IC	OPA2134UA
Q 100	(B,139,28) Transistor	DTA123YU
Q 300	(A,166,36) Transistor	2SB1181F5
Q 301	(B,144,31) Transistor	2SA1163
Q 401	(B,36,35) Transistor	2SD1767
Q 402	(A,24,12) Transistor	2SB1724A
Q 403	(A,23,37) Transistor	2SB1724A
Q 404	(B,35,15) Transistor	2SD1767
Q 405	(B,43,9) Chip Transistor	DTC124EUA
Q 406	(B,40,9) Transistor	DTA123YU
Q 407	(B,72,41) Transistor	2SB1189
Q 408	(B,70,33) Transistor	IMX1
Q 409	(A,59,41) Transistor	FMC2A
Q 500	(A,117,21) Chip Transistor	2SA1576A
Q 501	(A,114,18) Transistor	DTA123YU
Q 502	(A,108,16) Transistor	2SC4081
D 201	(B,120,20) Diode	UDZS18(B)
D 202	(B,120,24) Diode	UDZS18(B)
D 301	(B,159,34) Diode	1SS355
D 302	(B,154,36) Diode	1SR154-400
D 303	(B,98,33) Diode	1SR154-400
D 304	(A,90,36) Diode	5KP24A
D 401	(B,41,15) Diode	HZU4R3(B2)
D 402	(B,73,37) Diode	HZU8R2(B1)
D 403	(B,76,37) Diode	UDZS4R7(B)
D 404	(B,78,32) Chip Diode	MA716
D 405	(B,29,22) Diode	1SR154-400
D 501	(A,112,24) Diode	1SR154-400
D 502	(A,105,24) Diode	1SR154-400
D 503	(A,112,22) Diode	UDZS7R5(B)
D 504	(A,105,21) Diode	1SR154-400
L 300	(A,105,37) Coil	CTH1389
L 402	(B,47,13) Chip Coil	LCTAW100J2520
L 403	(A,10,32) Choke Coil 1.6 mH	CTH1372
L 601	(A,138,45) Chip Coil	LCTAW100J2520
TH300	(A,70,23) Poly Switch	RUEF500
X 601	(A,139,40) Radiator 10.0 MHz	CSS1577

RESISTORS

R 104	(B,46,42)	RSK1/16S103J
R 105	(B,43,42)	RS1/16S103J
R 106	(B,61,34)	RS1/16S103J
R 107	(B,52,42)	RSK1/16S103J
R 108	(B,46,40)	RS1/16S102J
R 109	(B,45,33)	RS1/16S102J
R 110	(B,53,31)	RS1/16S102J
R 111	(B,53,38)	RS1/16S102J
R 112	(B,49,43)	RS1/16S273J
R 113	(B,55,42)	RS1/16S273J
R 114	(B,52,28)	RS1/16S103J
R 115	(B,59,29)	RS1/16S103J
R 116	(B,69,44)	RS1/16S104J
R 117	(B,57,42)	RS1/16S104J
R 118	(B,69,43)	RS1/16S104J
R 119	(B,58,42)	RS1/16S104J

Circuit Symbol and No.		Part No.
R 120	(B,65,38)	RSK1/16S221J
R 121	(B,67,38)	RSK1/16S221J
R 122	(B,61,37)	RSK1/16S221J
R 123	(B,63,38)	RSK1/16S221J
R 137	(B,53,26)	RS1/16S393J
R 138	(B,57,23)	RS1/16S393J
R 139	(B,46,23)	RS1/16S393J
R 140	(B,51,26)	RS1/16S393J
R 141	(B,58,21)	RS1/16S393J
R 142	(B,46,20)	RS1/16S393J
R 144	(B,56,26)	RS1/16S393J
R 146	(B,59,25)	RS1/16S393J
R 147	(B,56,25)	RS1/16S393J
R 148	(B,59,26)	RS1/16S393J
R 151	(B,55,43)	RS1/16S273J
R 152	(B,49,42)	RS1/16S273J
R 153	(B,48,25)	RS1/16S393J
R 154	(B,48,27)	RS1/16S393J
R 155	(B,45,25)	RS1/16S393J
R 156	(B,45,27)	RS1/16S393J
R 201	(A,126,35)	RS1/16S472J
R 202	(A,133,42)	RS1/16S472J
R 203	(B,116,20)	RS1/4S101J
R 204	(B,116,23)	RS1/4S101J
R 300	(B,149,20)	RS1/16S473J
R 301	(B,151,20)	RS1/16S473J
R 302	(B,152,20)	RS1/16S473J
R 304	(B,154,20)	RS1/16S683J
R 305	(B,156,19)	RS1/16S333J
R 306	(A,164,27)	RS1/16S1R0J
R 307	(B,163,28)	RS1/16S102J
R 308	(B,161,27)	RS1/8S3R9J
R 309	(A,164,24)	RS1/16S1R0J
R 310	(B,155,33)	RS1/16S103J
R 311	(B,160,37)	RS1/8S471J
R 312	(B,144,34)	RS1/10S223J
R 313	(B,147,34)	RS1/16S683J
R 314	(B,147,32)	RS1/16S473J
R 315	(B,150,36)	RS1/10S204J
R 316	(B,147,37)	RS1/16S104J
R 317	(B,144,36)	RS1/10S153J
R 318	(B,110,34)	RS1/10S473J
R 403	(B,51,13)	RS1/16S0R0J
R 406	(B,36,41)	RS1/16S112J
R 407	(B,35,39)	RSK1/16S471J
R 408	(B,34,41)	RSK1/16S102J
R 409	(B,36,31)	RS1/4S330J
R 410	(B,36,28)	RS1/4S330J
R 411	(A,34,23)	RS1/4SR68J
R 412	(A,34,16)	RS1/4SR68J
R 413	(A,33,29)	RS1/16S223J
R 414	(B,40,15)	RS1/16S473J
R 415	(A,34,26)	RS1/4SR68J
R 416	(A,34,19)	RS1/4SR68J
R 417	(B,40,13)	RS1/16S101J
R 418	(B,72,45)	RS1/16S223J
R 419	(B,73,34)	RS1/16S472J
R 420	(B,70,35)	RSK1/16S102J
R 421	(B,73,36)	RSK1/16S101J
R 422	(A,62,43)	RS1/16S102J

Circuit Symbol and No.		Part No.
R 423	(B,76,41)	RSK1/16S331J
R 424	(A,47,45)	RS1/16S473J
R 427	(B,71,30)	RS1/16S510J
R 500	(A,112,15)	RS1/16S473J
R 501	(A,118,28)	RS1/16S473J
R 502	(A,116,18)	RS1/16S103J
R 503	(A,114,21)	RS1/16S102J
R 504	(A,107,18)	RS1/16S473J
R 505	(A,115,27)	RS1/16S473J
R 506	(A,100,24)	RS1/16S103J
R 507	(A,96,24)	RS1/4S102J
R 601	(A,69,7)	RS1/16S102J
R 602	(B,65,9)	RS1/16S102J
R 603	(A,142,40)	RS1/16S0R0J
R 605	(B,134,21)	RS1/16S561J
R 606	(A,149,22)	RS1/16S561J
R 607	(A,146,40)	RS1/16S561J
R 608	(A,149,26)	RS1/16S561J
R 613	(A,143,40)	RS1/16S103J
R 614	(A,125,29)	RS1/16S101J
R 615	(A,122,30)	RS1/16S473J
R 616	(A,126,24)	RS1/16S101J
R 617	(A,123,27)	RS1/16S473J
R 618	(A,122,25)	RS1/16S473J
R 619	(A,126,22)	RS1/16S102J
R 621	(A,127,19)	RS1/16S102J
R 622	(A,124,17)	RS1/16S473J
R 623	(A,128,18)	RS1/16S102J
R 624	(A,122,24)	RS1/16S473J
R 628	(A,142,15)	RS1/16S102J
R 629	(A,138,15)	RS1/16S102J
R 630	(B,142,17)	RS1/16S102J
R 631	(A,138,18)	RS1/16S102J
R 632	(B,128,29)	RS1/16S473J
R 633	(B,136,29)	RS1/16S473J
R 635	(A,142,12)	RS1/16S473J
R 636	(A,130,18)	RS1/16S473J
R 638	(A,140,15)	RS1/16S473J
R 639	(A,135,18)	RS1/16S473J
R 640	(B,140,24)	RS1/16S473J
R 641	(A,133,44)	RS1/16S473J
R 642	(A,126,26)	RS1/16S101J
R 643	(A,122,28)	RS1/16S473J
R 645	(A,122,37)	RS1/16S473J
R 646	(A,119,38)	RS1/16S473J

CAPACITORS

C 100	(A,47,40)	CEVWNP100M10
C 101	(A,48,31)	CEVWNP100M10
C 102	(B,49,40)	CCSRCH820J50
C 103	(B,56,40)	CCSRCH820J50
C 104	(B,51,30)	CCSRCH101J50
C 105	(B,61,31)	CCSRCH101J50
C 106	(B,60,34)	CKSRYB223K50
C 107	(B,53,35)	CKSRYB223K50
C 108	(A,53,38)	CEVW4R7M16
C 109	(A,54,30)	CEVW4R7M16
C 110	(A,59,35)	CEVW4R7M16
C 111	(A,59,28)	CEVW4R7M16

Circuit Symbol and No.		Part No.
C 131	(B,56,21)	CCSRCH270J50
C 132	(B,45,20)	CCSRCH270J50
C 135	(A,48,23) 10 µF/16 V	CCH1585
C 136	(A,58,21) 10 µF/16 V	CCH1585
C 137	(A,53,22) 10 µF/16 V	CCH1585
C 138	(A,39,32)	CEVW101M10
C 201	(B,121,33)	CKSRYB104K25
C 204	(B,123,21)	CKSRYB102K50
C 205	(B,123,24)	CKSRYB102K50
C 301	(B,156,21)	CKSRYB103K50
C 302	(A,167,45)	CEVW330M10
C 303	(A,167,24) 22 µF/6.3 V	CCH1300
C 304	(B,147,29)	CKSRYB103K50
C 305	(B,147,31)	CKSRYB103K50
C 306	(B,158,33)	CKSRYB103K50
C 307	(A,168,14) 2 200 µF/16V	CCH1659
C 309	(B,147,35)	CKSRYB223K50
C 311	(A,157,45) 2 200 µF/16V	CCH1659
C 312	(B,119,42)	CKSRYB102K50
C 404	(A,43,22)	CEVW330M10
C 405	(B,32,30)	CKSRYB103K50
C 406	(A,7,44)	CEVW101M16
C 407	(B,38,15)	CKSRYB102K50
C 408	(B,73,33)	CKSRYB103K50
C 409	(B,69,39)	CKSRYB103K50
C 410	(A,64,18) 100 µF/10 V	CCH1402(P35)
C 411	(A,55,47)	CEVW470M16
C 412	(B,83,41)	CKSRYB103K50
C 413	(B,83,44)	CKSRYB103K50
C 414	(A,81,37)	CEVW470M16
C 415	(A,82,46)	CEVW470M16
C 416	(A,61,46)	CKSRYB103K50
C 601	(A,141,44)	CKSRYF104Z50
C 602	(A,138,43)	CKSRYF104Z50
C 603	(B,135,24)	CKSRYF104Z50

B

Unit Number :
Unit Name : Keyboard Unit

MISCELLANEOUS

Q 1002	(A,144,19) Transistor	DTA123EU
Q 1003	(A,132,17) Transistor	DTA123EU
Q 1004	(A,129,17) Transistor	DTA123EU
Q 1005	(A,147,19) Transistor	DTA123EU
Q 1006	(A,126,17) Transistor	DTC123EU
Q 1007	(A,150,19) Transistor	DTC123EU
Q 1008	(A,74,16) Transistor	2SB1181F5
Q 1009	(A,57,20) Transistor	FMW1
Q 1010	(A,89,16) Transistor	2SB1181F5
Q 1011	(A,153,19) Transistor	DTC123EU
D 1001	(A,110,21) LED	VFA1105W
D 1002	(A,112,20) LED Diode	CL191SMGD(BCD)
D 1003	(A,135,17) Diode	DAN202U
S 1001	(A,19,21) Switch(LOAD)	CSG1181
S 1002	(A,203,21) Switch(EJECT)	CSG1181
IL 1001	(A,19,30) Lamp 115 mA, 5 V	CEL1781
IL 1002	(A,203,30) Lamp 115 mA, 5 V	CEL1781

Circuit Symbol and No.		Part No.

RESISTORS

R 1003	(A,115,19)	RS1/10S221J
R 1004	(A,115,21)	RS1/16S151J
R 1005	(A,146,22)	RS1/10S222J
R 1006	(A,130,19)	RS1/16S102J
R 1008	(A,96,6)	RS1/8S4R7J
R 1010	(A,90,6)	RS1/8S4R7J
R 1012	(A,54,19)	RS1/16S1801F
R 1013	(A,53,16)	RS1/16S1801F
R 1014	(A,56,16)	RS1/16S102J
R 1015	(A,66,20)	RS1/4S3R3J
R 1016	(A,98,19)	RS1/4S3R3J
R 1017	(A,61,22)	RS1/16S223J
R 1018	(A,58,16)	RS1/16S105J
R 1019	(A,61,17)	RS1/10S470J
R 1020	(A,91,38)	RS1/4S0R0J
R 1021	(A,153,22)	RS1/10S0R0J
R 1022	(A,149,15)	RS1/10S0R0J
R 1024	(A,122,15)	RS1/10S0R0J
R 1025	(A,50,38)	RS1/8S0R0J

CAPACITORS

C 1003	(A,40,36)	CEVQW220M16

C

Unit Number : CWX3467
Unit Name : Control Unit

MISCELLANEOUS

IC 201	(A,44,26) IC	UPD63763AGJ
IC 202	(B,62,32) IC	MSM56V16160F8TKFM
IC 203	(A,63,11) IC	NJM2885DL1-33
IC 301	(A,67,22) IC	BA6859AFP-Y
IC 302	(A,65,38) IC	BD7962FM
IC 701	(B,16,23) IC	PE5595A
IC 702	(A,5,24) IC	BR93L56RFVM-W
IC 703	(A,20,26) IC	S-812C33AMC-C2N
Q 101	(A,41,44) Transistor	2SB1132
Q 601	(B,32,11) Transistor	IMH20
Q 602	(B,40,11) Transistor	2SB709A
Q 701	(A,15,24) Transistor	UMF21N
D 201	(B,72,11) Diode	1SR154-400
D 202	(B,72,14) Diode	1SR154-400
D 601	(B,37,11) Diode	M1MA152WAT1
L 102	(A,31,45) Inductor	CTF1389
L 206	(A,40,12) Inductor	CTF1645
X 201	(A,42,9) Ceramic Resonator 16.934 MHz	CSS1603
X 701	(B,16,11) Ceramic Resonator 4 MHz	CSS1652

RESISTORS

R 101	(A,15,37)	RS1/10SR471J
R 102	(A,16,37)	RS1/10SR331J
R 103	(A,49,45)	RS1/10SR2R7J
R 104	(A,47,45)	RS1/10SR2R4J
R 105	(A,46,45)	RS1/10SR2R4J
R 108	(B,34,30)	RS1/16SS272J
R 201	(B,44,35)	RS1/16SS393J
R 202	(B,44,36)	RS1/16SS103J

Circuit Symbol and No.		Part No.
R 203	(A,38,39)	RS1/16SS222J
R 204	(A,34,39)	RS1/16SS562J
R 205	(A,35,36)	RS1/16SS472J
R 207	(A,36,37)	RS1/16SS101J
R 208	(B,51,20)	RS1/16SS333J
R 209	(B,46,39)	RS1/16SS472J
R 212	(B,47,39)	RS1/16SS472J
R 214	(A,50,40)	RS1/16SS103J
R 215	(A,28,23)	RS1/16SS102J
R 216	(A,48,41)	RS1/16SS472J
R 218	(A,50,39)	RS1/16SS103J
R 219	(A,49,39)	RS1/16SS472J
R 221	(B,33,21)	RS1/16SS333J
R 222	(B,36,18)	RS1/16SS221J
R 223	(A,49,12)	RS1/16SS333J
R 224	(A,47,11)	RS1/16SS333J
R 227	(B,51,22)	RS1/16SS271J
R 229	(A,41,41)	RS1/16SS0R0J
R 237	(A,37,14)	RS1/16SS0R0J
R 238	(B,43,14)	RS1/16SS0R0J
R 239	(A,44,9)	RS1/16SS0R0J
R 301	(B,47,21)	RS1/16SS221J
R 302	(A,71,46)	RS1/16SS473J
R 303	(B,68,46)	RS1/16SS473J
R 304	(A,72,44)	RS1/16SS333J
R 305	(B,68,43)	RS1/16SS822J
R 306	(B,67,43)	RS1/16SS822J
R 307	(B,67,41)	RS1/16SS333J
R 308	(A,70,16)	RS1/16SS102J
R 309	(B,45,23)	RS1/16SS102J
R 310	(A,61,16)	RS1/16SS221J
R 311	(B,65,44)	RS1/16SS822J
R 312	(B,63,42)	RS1/16SS822J
R 313	(B,65,43)	RS1/16SS273J
R 314	(B,61,42)	RS1/16SS183J
R 315	(B,70,42)	RAB4CQ103J
R 316	(A,73,16)	RS1/10SR1R0J
R 317	(A,73,14)	RS1/10SR2R2J
R 319	(A,71,30)	RS1/16SS393J
R 320	(A,63,30)	RS1/16SS333J
R 321	(A,69,30)	RS1/16SS273J
R 322	(A,65,30)	RS1/16SS183J
R 323	(A,73,45)	RS1/16SS822J
R 601	(A,33,9)	RS1/16SS101J
R 602	(A,32,13)	RS1/16SS101J
R 603	(B,35,9)	RS1/16SS223J
R 604	(A,32,15)	RS1/16SS223J
R 605	(B,33,14)	RS1/16SS103J
R 606	(B,33,13)	RS1/16SS0R0J
R 701	(A,23,20)	RS1/16SS103J
R 702	(A,24,22)	RS1/16SS103J
R 703	(A,21,23)	RS1/16SS184J
R 704	(A,21,20)	RS1/16SS223J
R 705	(B,32,23)	RAB4CQ221J
R 706	(B,28,20)	RS1/16SS221J
R 707	(A,14,15)	RS1/16SS473J
R 708	(A,26,17)	RS1/16SS103J
R 709	(A,12,26)	RS1/16SS103J
R 710	(B,26,17)	RS1/16SS473J
R 711	(B,27,17)	RS1/16SS123J
R 712	(B,29,22)	RAB4CQ221J
R 713	(B,28,31)	RAB4CQ221J
R 714	(A,12,25)	RS1/16SS272J
R 715	(A,19,15)	RS1/16SS473J
R 716	(B,20,34)	RS1/16SS221J
R 717	(B,19,33)	RS1/16SS221J
R 718	(B,18,33)	RS1/16SS221J
R 719	(B,17,36)	RS1/16SS473J
R 720	(B,16,33)	RS1/16SS102J
R 721	(A,15,15)	RS1/16SS102J
R 723	(B,13,9)	RS1/16SS473J
R 724	(B,15,33)	RS1/16SS471J
R 725	(B,12,9)	RS1/16SS473J
R 726	(A,12,18)	RS1/16SS472J
R 729	(A,12,15)	RS1/16SS0R0J
R 731	(B,9,33)	RS1/16SS473J
R 732	(B,10,9)	RS1/16SS221J
R 735	(A,9,25)	RS1/16SS472J
R 736	(A,9,24)	RS1/16SS473J
R 740	(A,7,14)	RS1/16SS104J
R 742	(A,12,22)	RS1/16SS103J
R 743	(A,21,30)	RS1/16SS103J
R 744	(A,20,31)	RS1/16SS103J
R 745	(B,12,7)	RS1/16SS104J
R 747	(A,11,28)	RS1/16SS104J
R 749	(A,13,30)	RS1/16SS104J
R 901	(B,17,4)	RS1/16SS221J
R 902	(B,18,6)	RS1/16SS221J
R 903	(A,9,13)	RS1/16SS102J
R 904	(B,15,6)	RS1/16SS101J
R 906	(B,20,4)	RS1/16SS221J
R 909	(A,20,22)	RS1/16SS473J
R 912	(A,8,18)	RS1/16SS0R0J

CAPACITORS

C 102	(B,25,37)		CKSSYB104K10
C 103	(A,37,46)		CKSSYB104K10
C 104	(A,35,43)		CSZS150M6R3
C 201	(B,44,33)		CKSSYB182K50
C 202	(B,43,33)		CKSSYB473K10
C 203	(A,38,38)		CKSSYB104K10
C 204	(B,32,29)		CKSSYB102K50
C 205	(A,33,39)		CCSSCH5R0C50
C 206	(A,40,39)		CKSSYB152K50
C 207	(A,35,39)		CCSSCH330J50
C 208	(A,33,34)	0.47 µF	CCG1213
C 209	(B,35,28)		CKSSYB103K16
C 210	(A,27,31)		CCSSCH470J50
C 211	(A,29,29)		CKSSYB682K25
C 212	(A,43,41)		CKSSYB104K10
C 213	(A,38,37)		CKSSYB104K10
C 214	(A,29,31)		CCSSCH680J50
C 216	(A,50,41)		CKSSYB152K50
C 217	(A,29,24)		CKSSYB104K10
C 218	(A,29,22)		CKSSYB102K50
C 219	(A,51,39)		CKSSYB102K50
C 220	(A,51,37)		CKSSYB104K10
C 221	(B,51,24)		CKSSYB104K10
C 222	(A,36,16)		CKSSYB104K10

Circuit Symbol and No.		Part No.
C 223	(B,62,24)	CKSSYB104K10
C 225	(A,36,15)	CKSSYB104K10
C 226	(A,36,11)	CKSRYB105K6R3
C 227	(B,36,13)	CKSSYB103K16
C 228	(B,67,24)	CKSSYB104K10
C 230	(B,42,15)	CKSSYB104K10
C 231	(A,40,11)	CKSSYB104K10
C 232	(B,69,24)	CKSSYB104K10
C 233	(A,54,15)	CKSSYB104K10
C 234	(A,53,9)	CKSRYB105K6R3
C 235	(B,58,20)	CEVW221M4
C 237	(B,57,9)	CKSSYB104K10
C 238	(A,71,6)	CKSRYB474K10
C 242	(B,65,40)	CKSSYB104K10
C 243	(B,47,41)	CKSSYB104K10
C 246	(A,75,8) 4.7 µF/6.3 V	CCG1212
C 301	(B,61,43)	CKSSYB221K50
C 302	(B,65,42)	CCSSCH151J50
C 303	(A,63,16)	CKSSYB104K10
C 304	(A,60,31)	CKSQYB475K10
C 305	(B,67,20)	CEVW101M10
C 306	(A,71,31)	CKSSYB472K25
C 307	(A,63,31)	CKSSYB103K16
C 601	(A,36,9)	CKSQYB475K6R3
C 602	(A,35,13)	CKSQYB475K6R3
C 603	(A,33,10)	CCSRCH102J50
C 604	(A,33,15)	CCSRCH102J50
C 701	(A,14,22)	CKSRYB104K25
C 703	(B,41,20)	CKSSYB103K16
C 704	(B,38,20)	CKSSYB103K16
C 705	(B,41,19)	CKSSYB103K16
C 706	(B,38,19)	CKSSYB103K16
C 709	(A,23,15)	CKSRYB105K6R3
C 711	(B,20,33)	CKSSYB104K10
C 712	(A,20,15)	CKSSYB103K16
C 713	(A,17,19)	CKSQYB475K6R3
C 714	(A,14,18)	CKSSYB102K50
C 715	(A,8,20)	CKSSYB104K10
C 717	(A,16,27)	CKSRYB105K6R3
C 718	(A,23,25)	CKSSYB103K16
C 719	(A,22,18)	CKSSYB103K16
C 901	(A,15,33)	CKSSYB104K10
C 902	(A,27,17)	CKSSYB104K10
C 903	(B,29,10)	CKSSYB104K10
C 904	(B,73,8)	CKSSYB104K10
C 905	(B,60,42)	CKSSYB104K10
C 906	(B,8,5)	CKSSYB104K10

D

Unit Number : CWX2986
Unit Name : RPS PCB Assy

MISCELLANEOUS

VR11	(A,8,10) Semi-fixed 1 kΩ(B)	CCP1442
VR12	(A,9,23) Semi-fixed 1 kΩ(B)	CCP1442
R 11	(A,8,15)	RS1/16S562J
R 12	(A,10,15)	RS1/16S472J
R 13	(A,8,18)	RS1/16S562J
R 14	(A,9,6)	RS1/16S562J

Miscellaneous Parts List

	Stage Assy(Service)	CXX2229
M 1	Cam Motor Assy(CAM)	CXC5908
M 2	ELV Motor Assy(ELV)	CXC5910
VR13	Variable Resistor 10 kΩ(B)	CCW1029