

△

A

- B



D

E

F

(1) PACKING SECTION PARTS LIST


<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
⚠	1 Power Cord	See Contrast table (2)	10	Operating Instructions (Quick Start Guide)	See Contrast table (2)
	2 USB Cable	DDE1140			
	3 Packing Pad	DHA1965	11	Operating Instructions (Quick Start Guide)	See Contrast table (2)
	4 Packing Pad	DHA1966			
	5 Packing Case	See Contrast table (2)	12	Software License Notice	See Contrast table (2)
	6 Mirror Mat (1200 * 1000)	DHL1169	13	Software License Notice	See Contrast table (2)
NSP	7 Polyethylene Bag	AHG7117	NSP	14 Leaflet	See Contrast table (2)
	8 Operating Instructions (Quick Start Guide)	See Contrast table (2)	NSP	15 Warranty	See Contrast table (2)
	9 Operating Instructions (Quick Start Guide)	See Contrast table (2)	NSP	16 1..License Key Card Assy	DEA1046
			NSP	17 2..Leaflet	DRM1410
			NSP	18 2..rekordbox dj License Key Card	DXA2304
			NSP	19 1..License Key Card Assy	See Contrast table (2)
			NSP	20 2..Leaflet	See Contrast table (2)
			NSP	21 2..License Key Label Assy	See Contrast table (2)

(2) CONTRAST TABLE

XDJ-RX2/LWSYXJ, UXJCB and AXJ are constructed the same except for the following:

Mark	No.	Symbol and Description	XDJ-RX2 /LWSYXJ	XDJ-RX2 /UXJCB	XDJ-RX2 /AXJ
⚠	1	Power Cord	ADG1244	DDG1108	DDG1114
	5	Packing Case	DHG3568	DHG3569	DHG3570
	8	Operating Instructions (Quick Start Guide)(En, Fr, De, It)	DRH1448	Not used	Not used
	9	Operating Instructions (Quick Start Guide)(NI, Es, Pt, Ru)	DRH1449	Not used	Not used
	10	Operating Instructions (Quick Start Guide)(En)	Not used	DRH1447	Not used
	11	Operating Instructions (Quick Start Guide)(Zhcn)	Not used	Not used	DRH1450
	12	Software License Notice	DRH1451	DRH1451	DRH1453
	13	Software License Notice	DRH1452	DRH1452	Not used
NSP	14	Leaflet	DRH1431	DRH1431	DRH1432
NSP	15	Warranty	DRY1270	Not used	Not used
NSP	19	1..License Key Card Assy	DEA1048	DEA1048	Not used
NSP	20	2..Leaflet	DRM1415	DRM1415	Not used
NSP	21	2..License Key Label Assy	DXA2331	DXA2331	Not used

9.2 BOTTOM SECTION

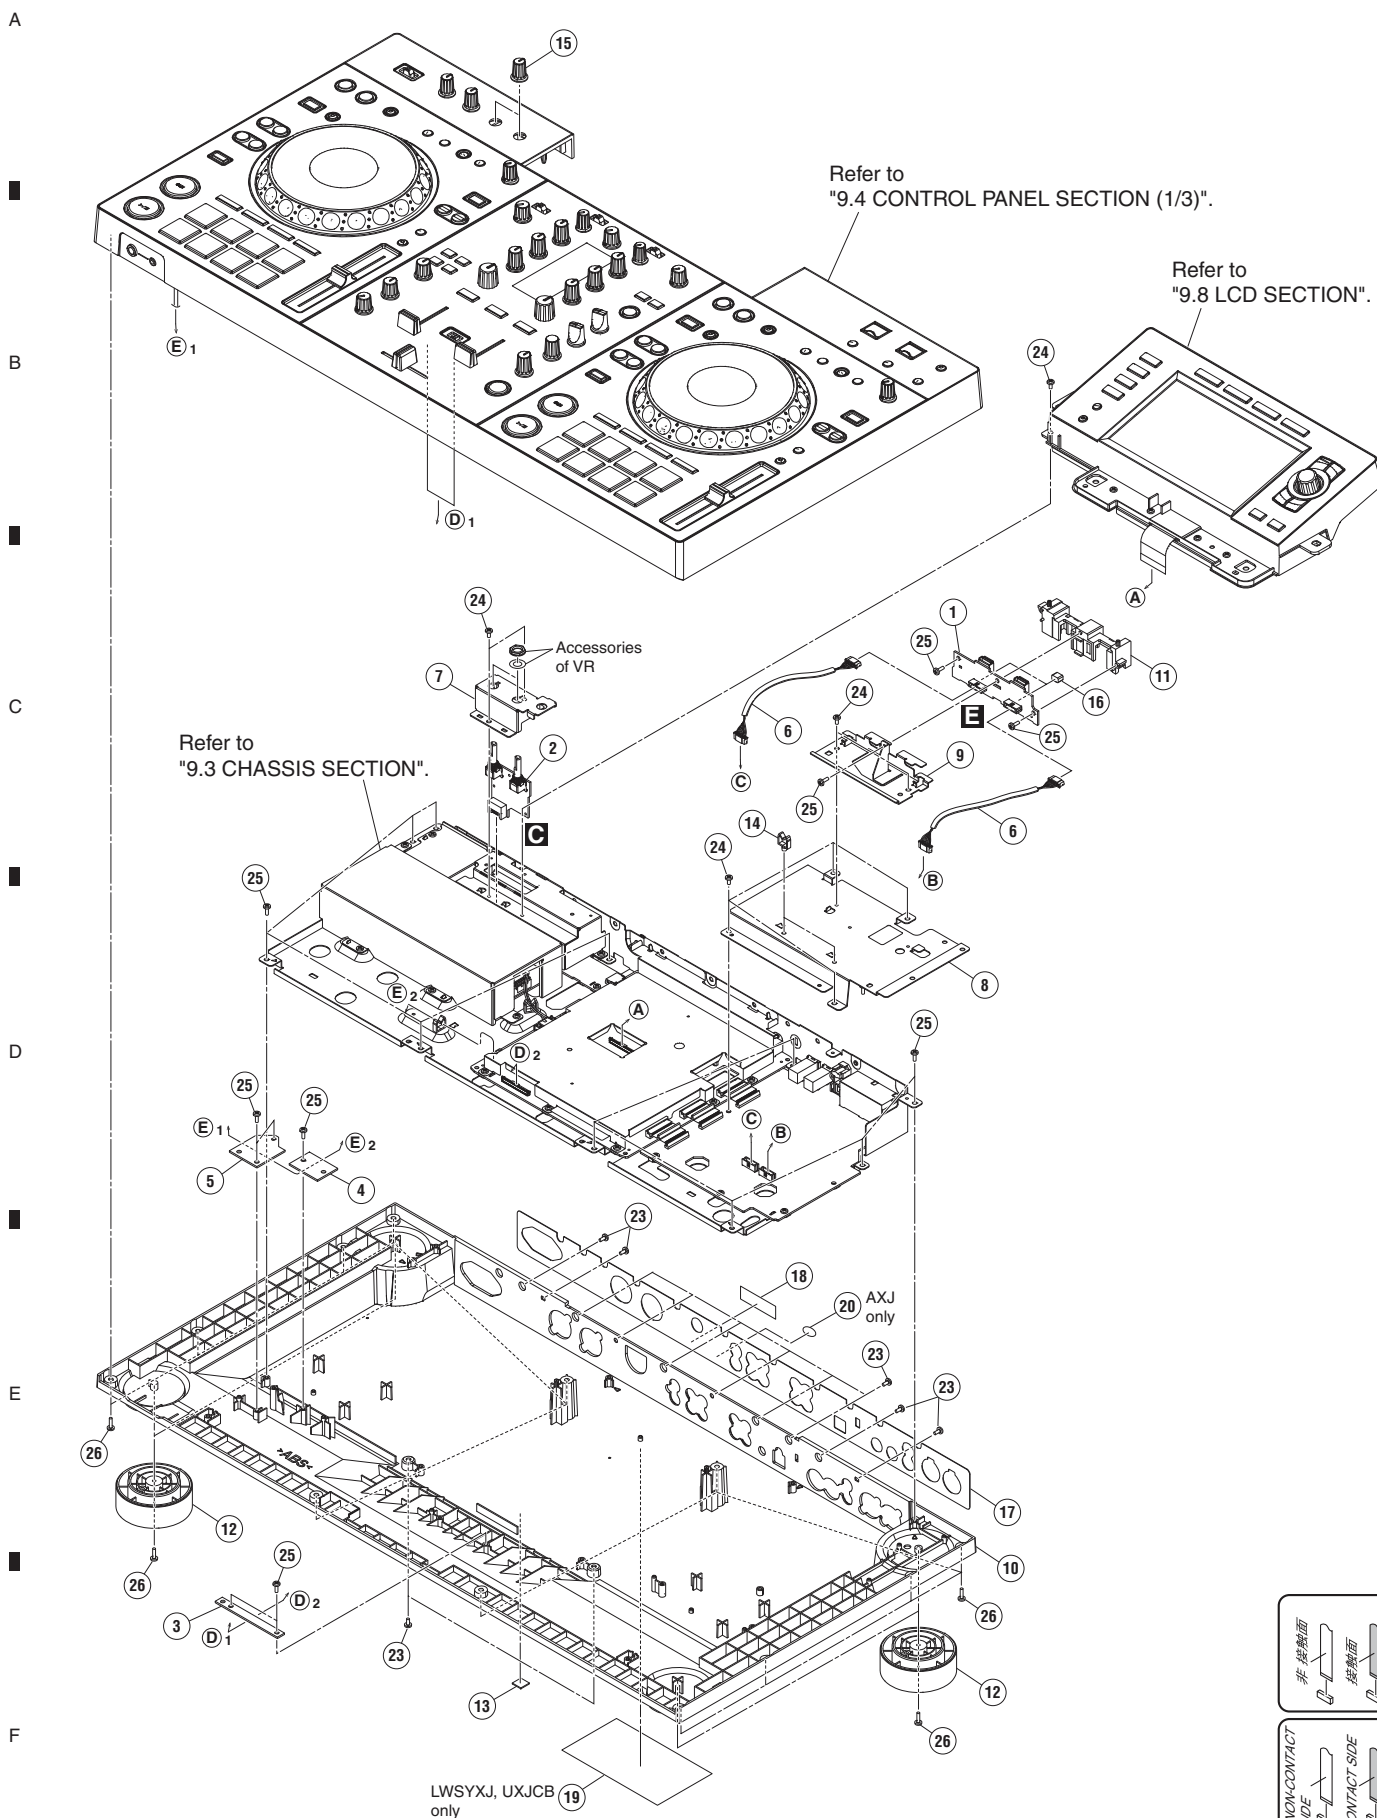

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	USBA Assy	DWX4039	16	Gasket/JOG	DEC3562
2	MTRM Assy	DWX4052	17	Rear Panel	See Contrast table (2)
3	DKHD Assy	DWX4066	NSP 18	Serial Label (UPC)	DRW2311
4	HPHD Assy	DWX4067	NSP 19	Label	See Contrast table (2)
5	HMHD Assy	DWX4068	NSP 20	CCC S & E Label	See Contrast table (2)
6	Shielded Conn-Cable	DDA1080	21	•••••	
7	Stay	DNH3299	22	•••••	
8	Shield Case	DNH3303	23	Screw	BBZ30P060FTB
9	Stay	DNH3311	24	Screw	BBZ30P060FTC
⚠ 10	Chassis	DNK6704	25	Screw	BPZ30P080FNI
11	Base	DNK6708	26	Screw	BPZ30P100FTB
12	Insulator Assy	DXB2131			
13	Rubber Foot	VEB1349			
14	Holder	VEC1355			
15	Knob/LBK	DAA1284			

(2) CONTRAST TABLE

XDJ-RX2/LWSYXJ, UXJCB and AXJ are constructed the same except for the following:

Mark	No.	Symbol and Description	XDJ-RX2 /LWSYXJ	XDJ-RX2 /UXJCB	XDJ-RX2 /AXJ
NSP	17	Rear Panel	DAH3158	DAH3158	DAH3195
NSP	19	Label	DRW2704	DRW2704	Not used
NSP	20	CCC S & E Label	Not used	Not used	DRW2310

1 2 3 4

9.3 CHASSIS SECTION

A



B

C

D

E

F

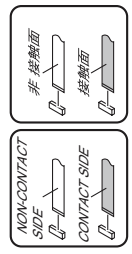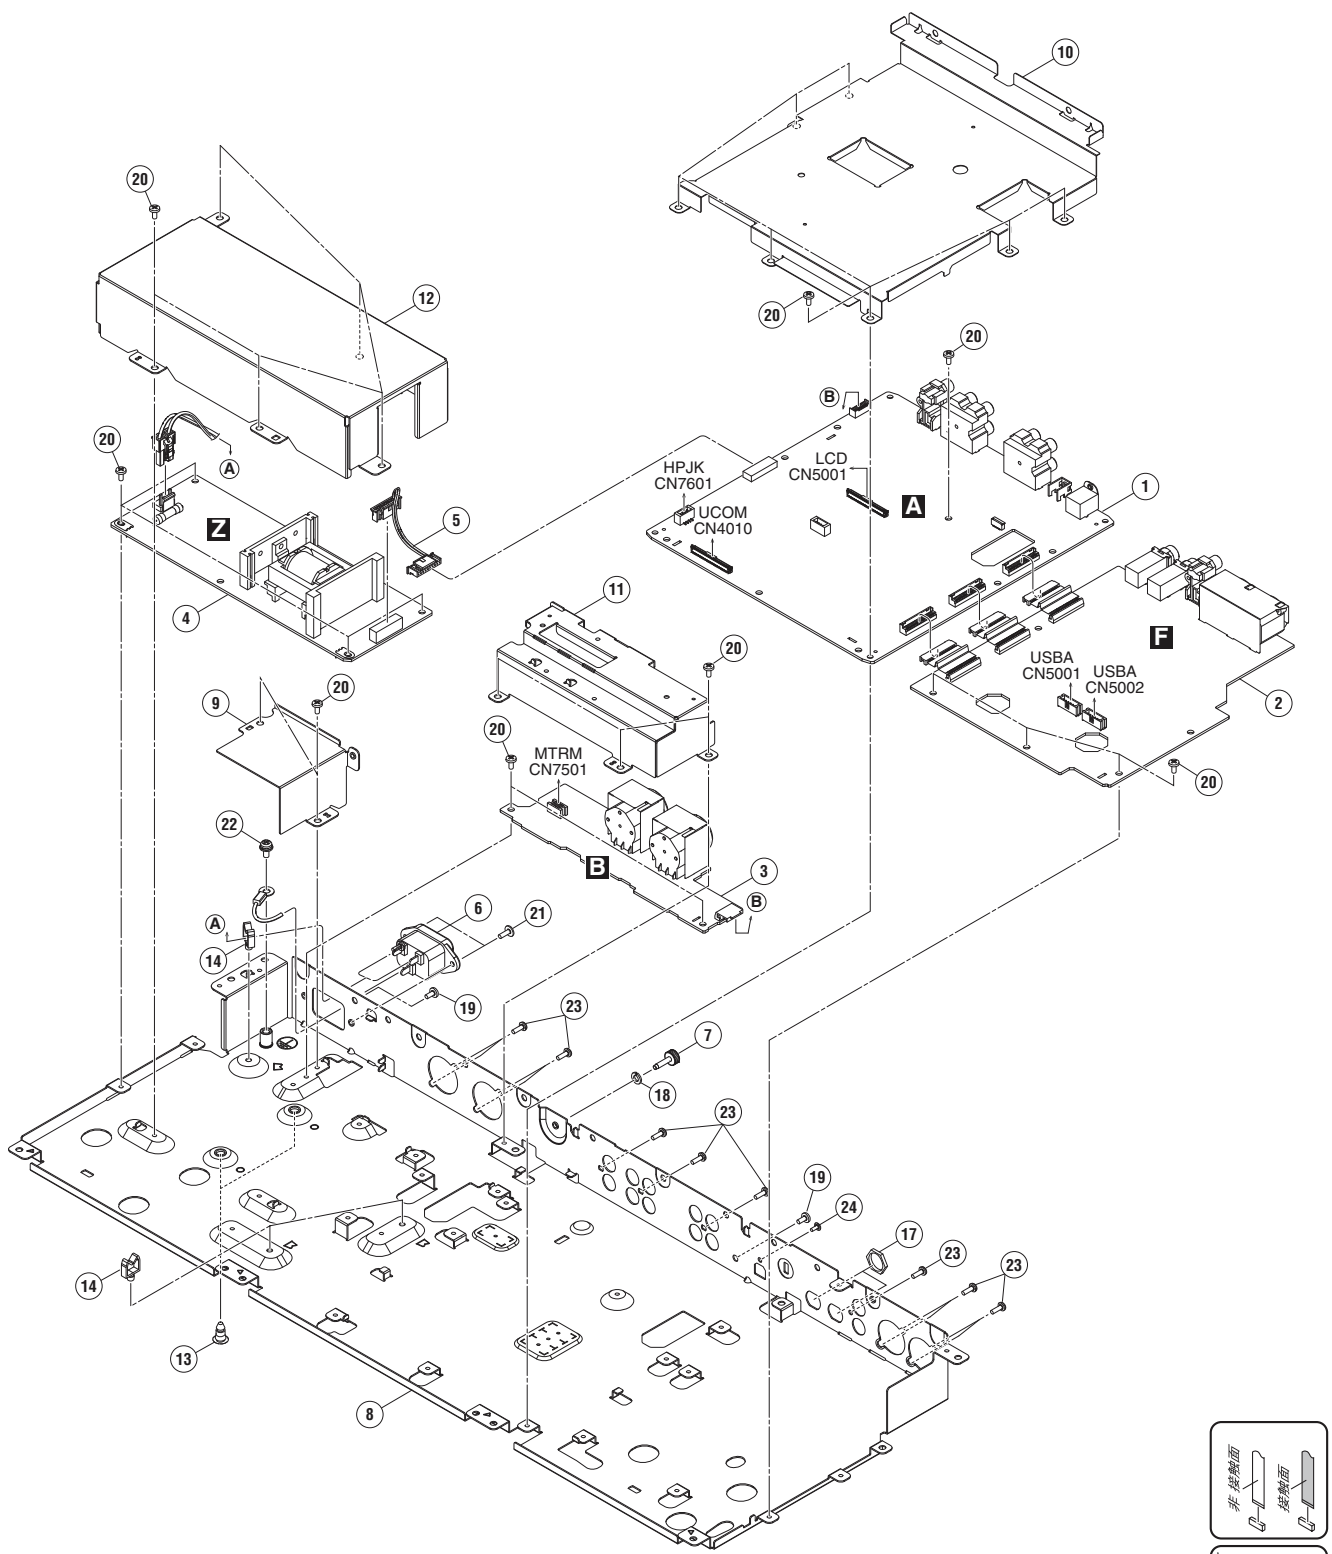

CHASSIS SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	MAIN Assy	DWX4035
2	AOUT Assy	DWX4046
3	MCJK Assy	DWX4047
⚠	4 SW POWER SUPPLY	DWR1548
	5 Crimp Connector	DDC1026
⚠	6 AC Inlet	DKP3983
	7 Earth Terminal	DKE1015
	8 Stay	DNH3298
	9 Shield Case	DNH3302
	10 Shield Case	DNH3304
	11 Shield Case	DNH3305
	12 Shield Case	DNH3306
NSP	13 PCB Holder	PNW1706
	14 Holder	VEC1355
	15 ●●●●●	
	16 ●●●●●	
	17 Nut (M12)	NKX2FNI
	18 Spring Lock Washer	WS40FNI
	19 Screw	BBZ30P060FTB
	20 Screw	BBZ30P060FTC
	21 Screw	IBZ30P080FTB
	22 Screw	PMH40P080FTC
	23 Screw	PPZ30P080FTB
	24 Screw (M3*5)	DBA1340

A

B


C

D

E


F

9.4 CONTROL PANEL SECTION (1/3)

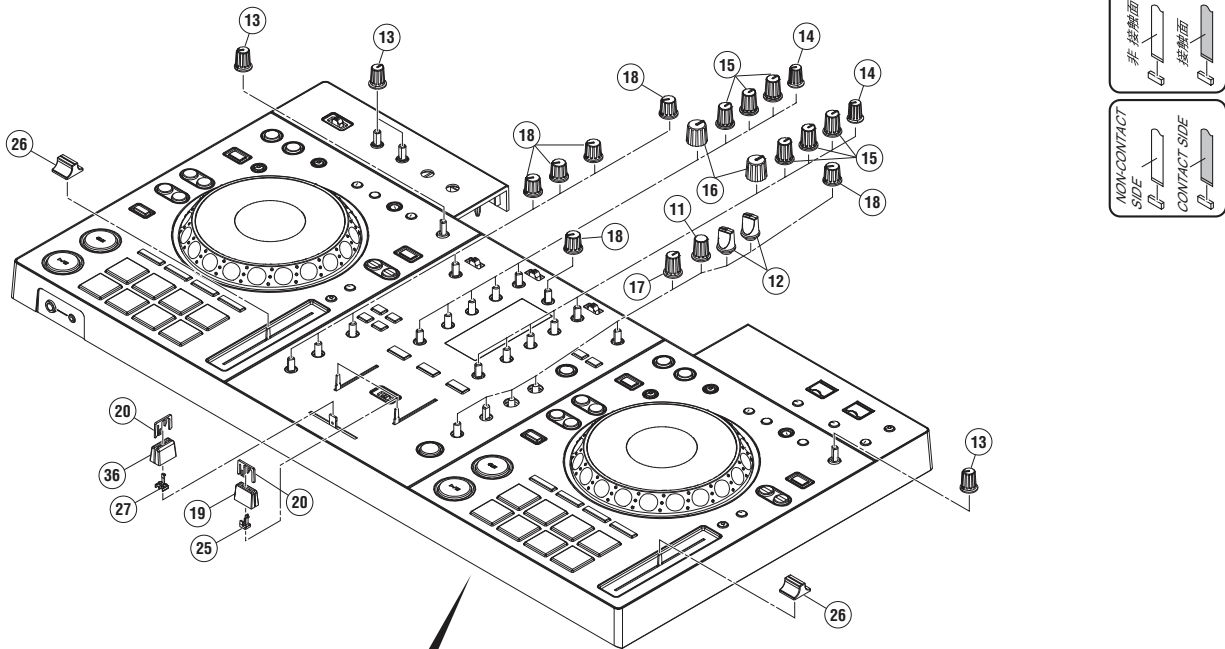

• Bottom view

• Top view

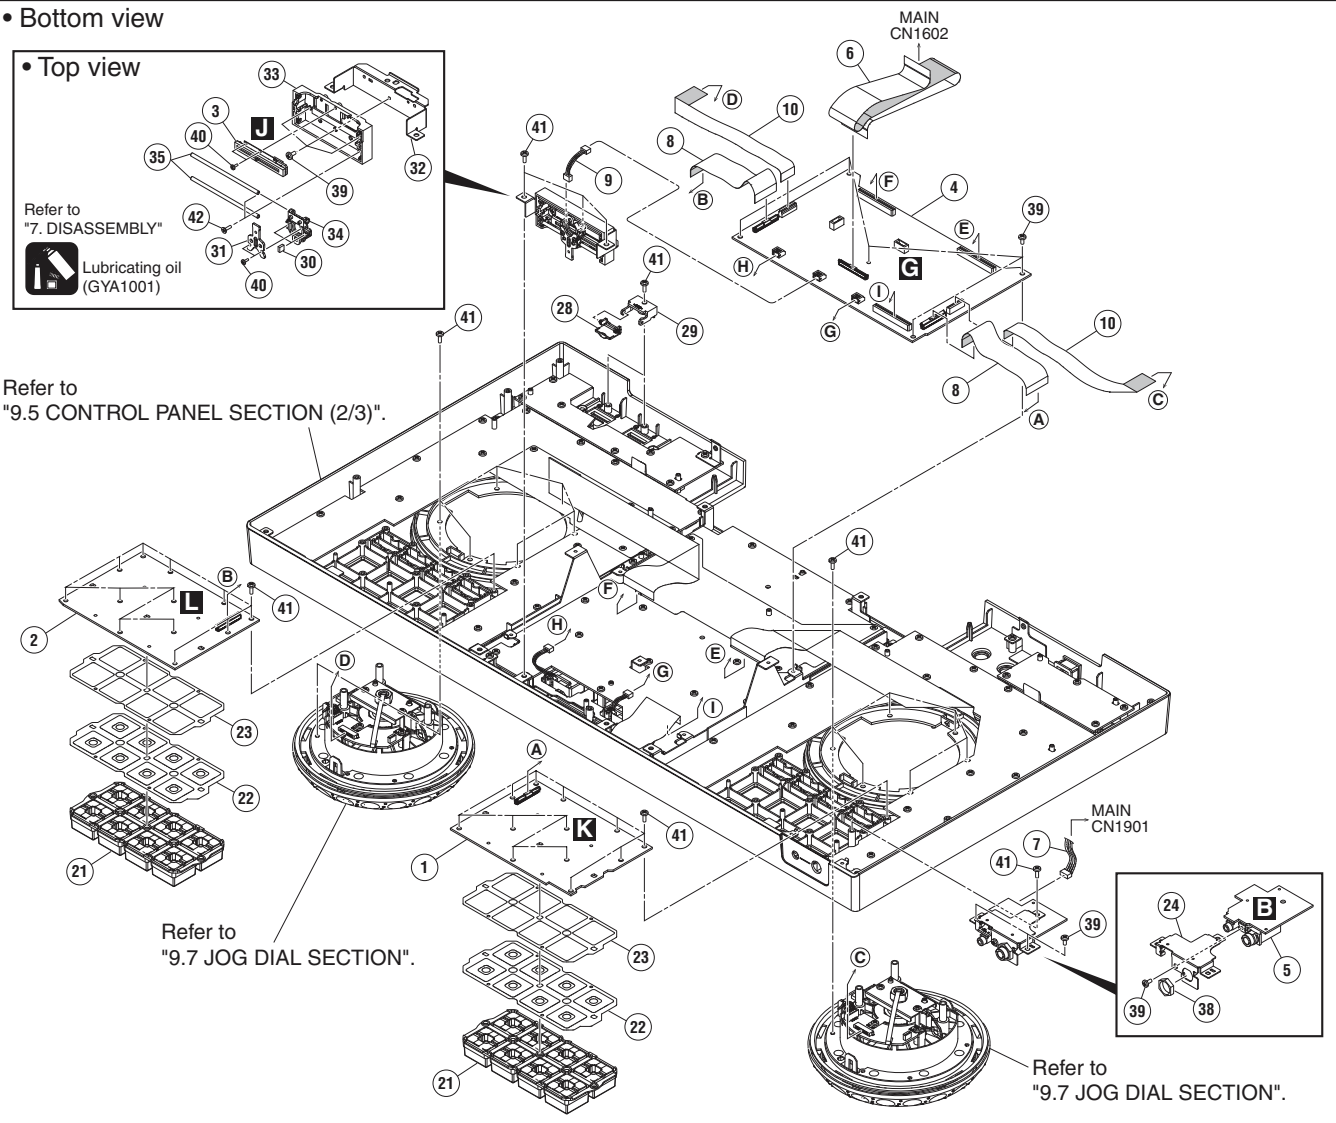


CONTROL PANEL SECTION (1/3) SECTION PARTS LIST

Mark No.	Description	Part No.	
1	PAD1 Assy	DWX4037	
2	PAD2 Assy	DWX4038	A
3	CRFD Assy	DWX4040	
4	UCOM Assy	DWX4045	
5	HPJK Assy	DWX4053	
6	FFC	DDD1812	
7	Connector Assy	PF04PP-D42	
8	FFC/50P	DDD1686	
9	Connector Assy	PF03PP-B05	
10	FFC	DDD1814	
11	Rotary SW Knob (C)	DAA1180	B
12	FX SEL Knob	DAA1213	
13	Knob/LBK	DAA1284	
14	Knob/CH	DAA1300	
15	Knob/RSW	DAA1305	
16	Knob/FRE	DAA1309	
17	Knob	DAA1368	
18	Knob	DAA1370	
19	Slider Knob 1	DAC2684	
20	Slider Knob 2	DAC2685	C
21	Button	DEB2057	
22	Sheet	DEC3739	
23	Spacer	DEC3740	
24	Stay/HP	DNH3182	
25	Slider Knob Stopper	DNK5888	
26	Knob/SLD	DNK5981	
27	Stopper	DNK6440	
28	Door	DNK6497	
29	Holder	DNK6710	D
NSP 30	Cushion	DEC3356	
31	Lever	DNH3211	
32	Stay	DNH3301	
33	Holder	DNK6425	
34	Slider	DNK6426	
35	Guide Bar	VLL1514	
36	Knob	DAC3238	
37	•••••		
38	Nut M12	DBN1018	E
39	Screw	BBZ30P060FTC	
40	Screw	BPZ20P050FTC	
41	Screw	BPZ30P080FNI	
42	Screw	CPZ26P080FTC	

9.5 CONTROL PANEL SECTION (2/3)

A • Bottom view

• Top view

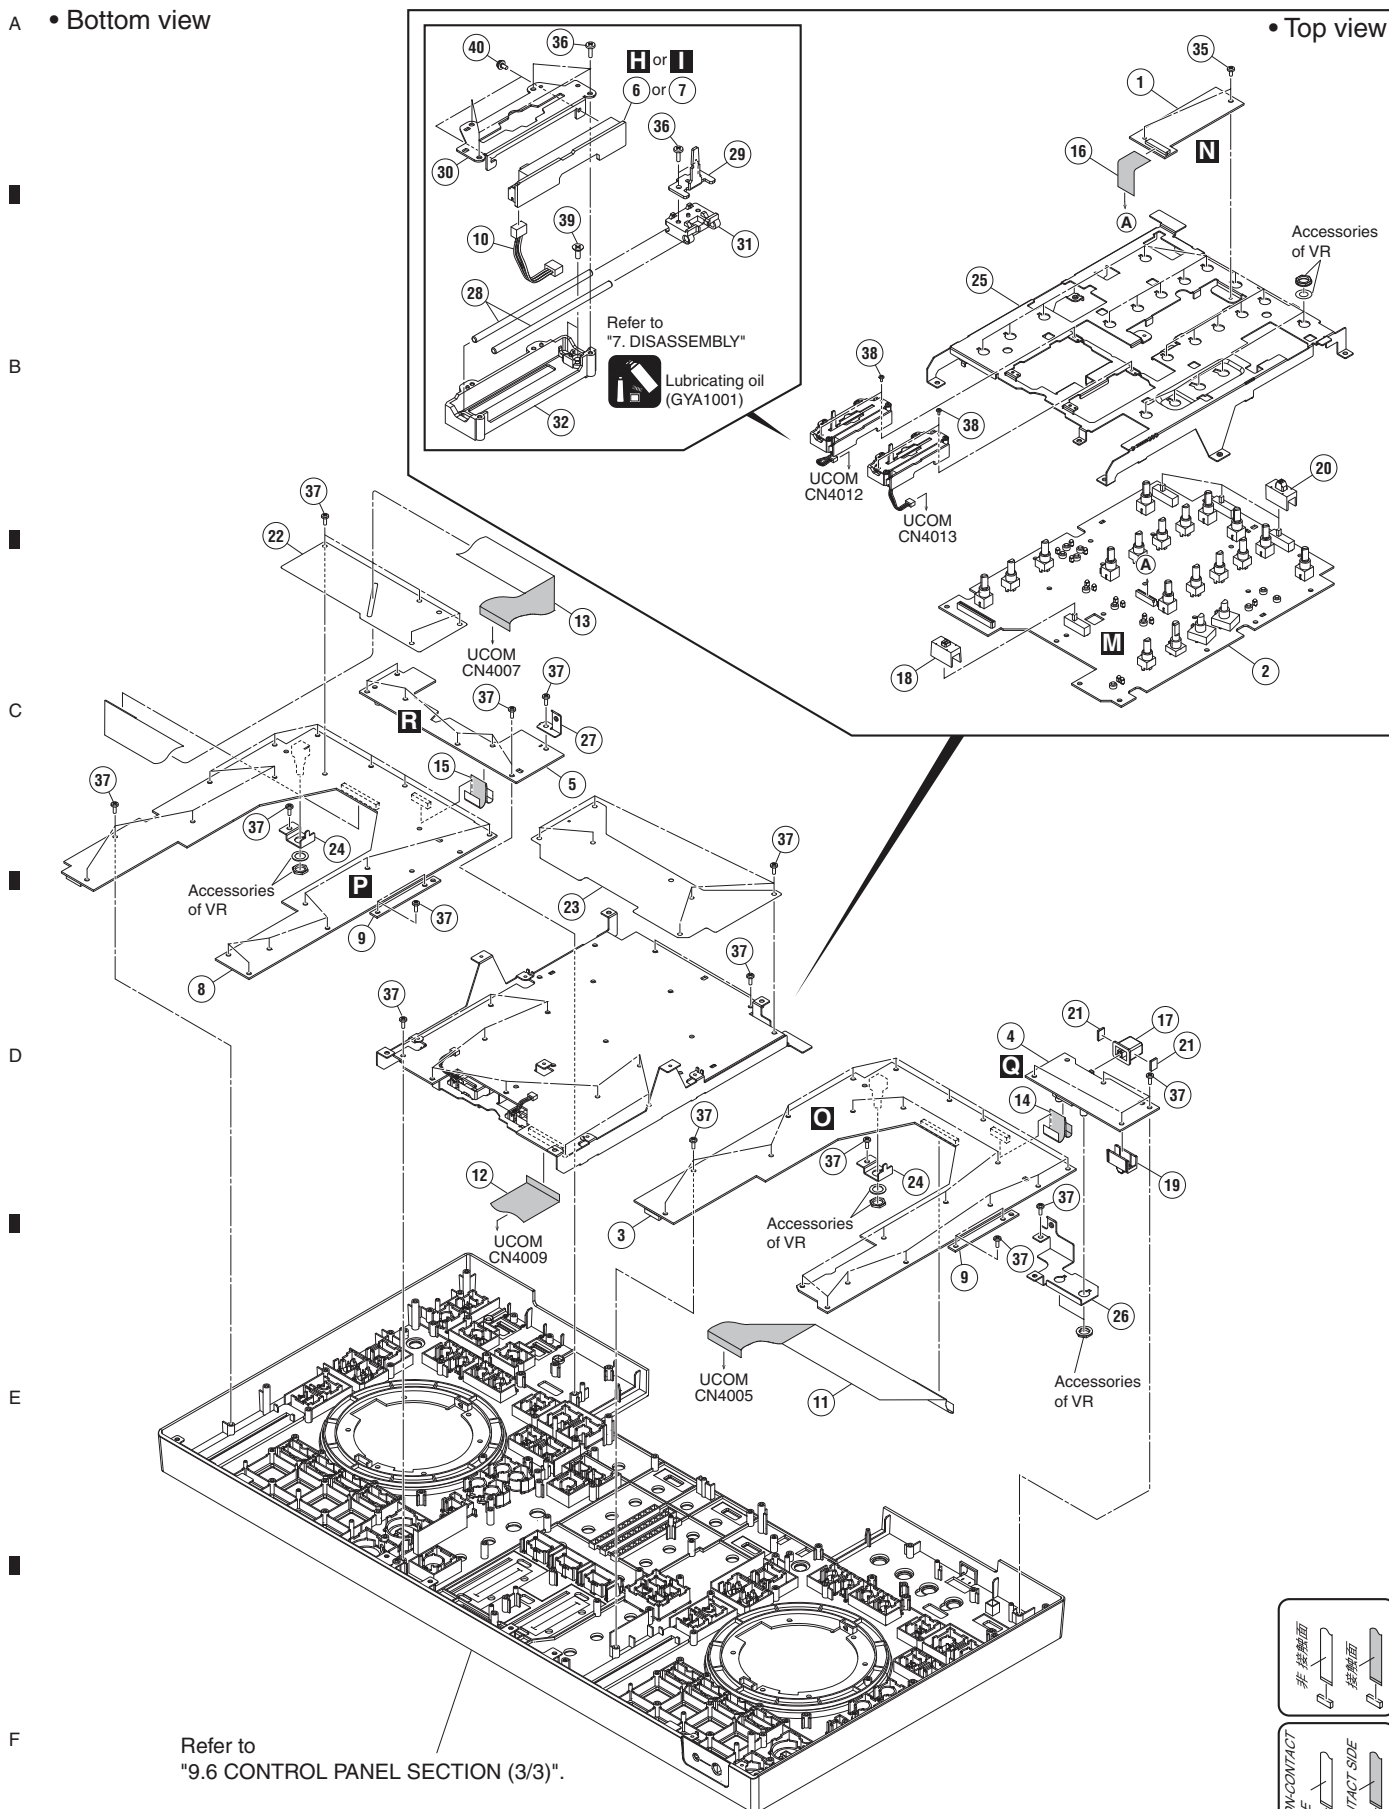




Refer to
"9.6 CONTROL PANEL SECTION (3/3)".

CONTROL PANEL SECTION (2/3) SECTION PARTS LIST


Mark No.	Description	Part No.	
1	LVMB Assy	DWX4048	
2	MXRB Assy	DWX4051	A
3	DCK1 Assy	DWX4054	
4	MEQB Assy	DWX4055	
5	RECB Assy	DWX4056	
6	CHF1 Assy	DWX4057	
7	CHF2 Assy	DWX4058	
8	DCK2 Assy	DWX4062	
9	DKHD Assy	DWX4066	
10	Connector Assy	PF03PP-B05	
11	FFC/39P	DDD1687	B
12	FFC	DDD1813	
13	FFC	DDD1745	
14	FFC/17P	DDD1684	
15	FFC/15P	DDD1660	
16	FFC/19P	DDD1689	
17	Power Knob	DAC2306	
18	Slide SW Cap (W)	DAC2401	
19	SW Cap	DAC2753	
20	Cap	DAC3136	C
21	Insulating Sheet	DEC3594	
22	Barrier	DEC3742	
23	Barrier	DEC3743	
24	VR Stay S	DNH2964	
25	Stay	DNH3297	
26	Stay	DNH3300	
27	Bracket	DNH3312	
NSP 28	Guide Shaft VK1	DLA1978	
29	Lever Plate	DNH2954	D
30	VR Stay	DNH2955	
31	Slider Base	DNK5851	
32	Shaft Holder	DNK5852	
33			
34			
35	Screw	BBZ30P060FTC	
36	Screw	BPZ20P060FTC	
37	Screw	BPZ30P080FNI	
38	Screw	BSZ20P040FTB	E
39	Screw	CPZ26P080FTC	
40	Screw	PMH20P040FTC	

9.6 CONTROL PANEL SECTION (3/3)

A • Bottom view

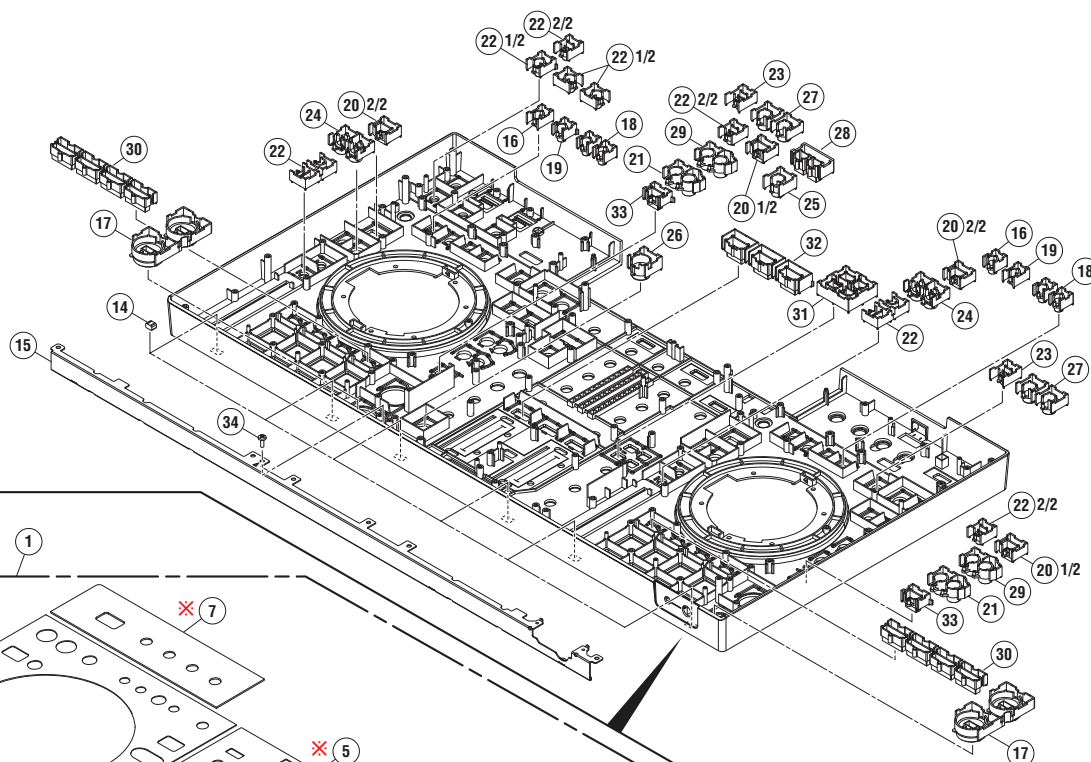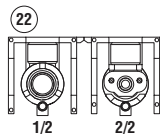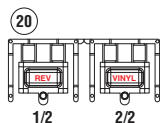

• Top view

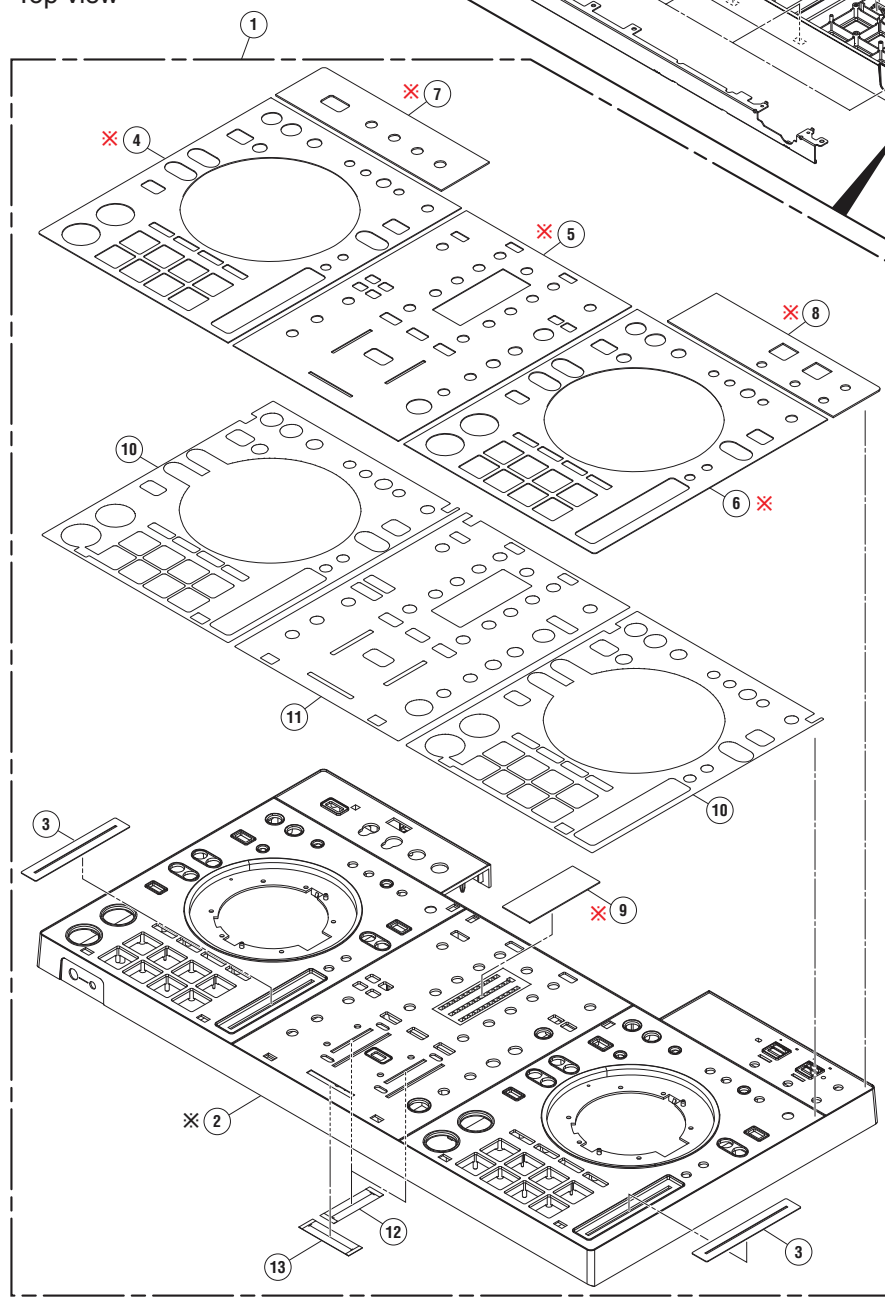

Note ✕:
Plate (No.4, 5, 6, 7, 8 and 9) is bonded to the double-sided tape in the Control panel (No.2), it is difficult to replacement. Please order the following XDJ-RX2 Panel Service Assy (No.1).

CONTROL PANEL SECTION (3/3) SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	1..XDJ-RX2 Panel Service Assy	DEA1076
△NSP 2	2..Control Panel	DNK6705
3	2..Slide Sheet 1C	DAH2404
NSP 4	2..Plate	DAH3151
NSP 5	2..Plate	DAH3152
NSP 6	2..Plate	DAH3153
NSP 7	2..Plate	DAH3154
NSP 8	2..Plate	DAH3155
NSP 9	2..Plate	DAH3157
NSP 10	2..DS Tape	DEH1091
NSP 11	2..DS Tape	DEH1093
12	2..Fader Packing	DEC3355
13	2..Packing	DEC3642
14	Gasket/JOG	DEC3562
15	Frame	DNH3296
16	Button/TMP	DAC2845
17	Button/PLY	DAC3018
18	Button/CAL	DAC3020
19	Button/DLT	DAC3021
20	Button/RVL	DAC3023
21	Button/SRC	DAC3028
22	Button/MT	DAC3029
23	Button/REL	DAC3030
24	Button/SYN	DAC3032
25	Button/TAP	DAC3038
26	Button/EF	DAC3040
27	Button/LOP	DAC3074
28	Button/BEF	DAC3075
29	Button/TSR	DAC3076
30	Button	DAC3285
31	Button	DAC3286
32	Button	DAC3287
33	Button	DAC3288
34	Screw	BPZ30P080FNI

A

B

C

D



E

F


1 2 3 4

9.7 JOG DIAL SECTION

A • Bottom view

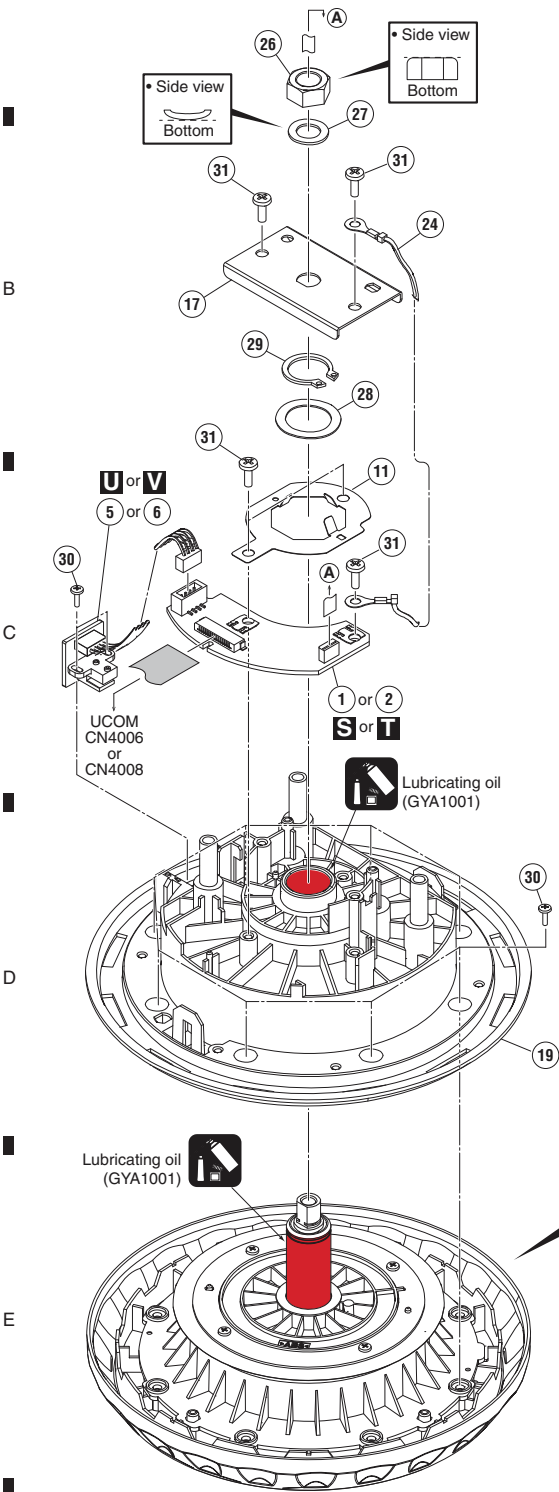

• Top view

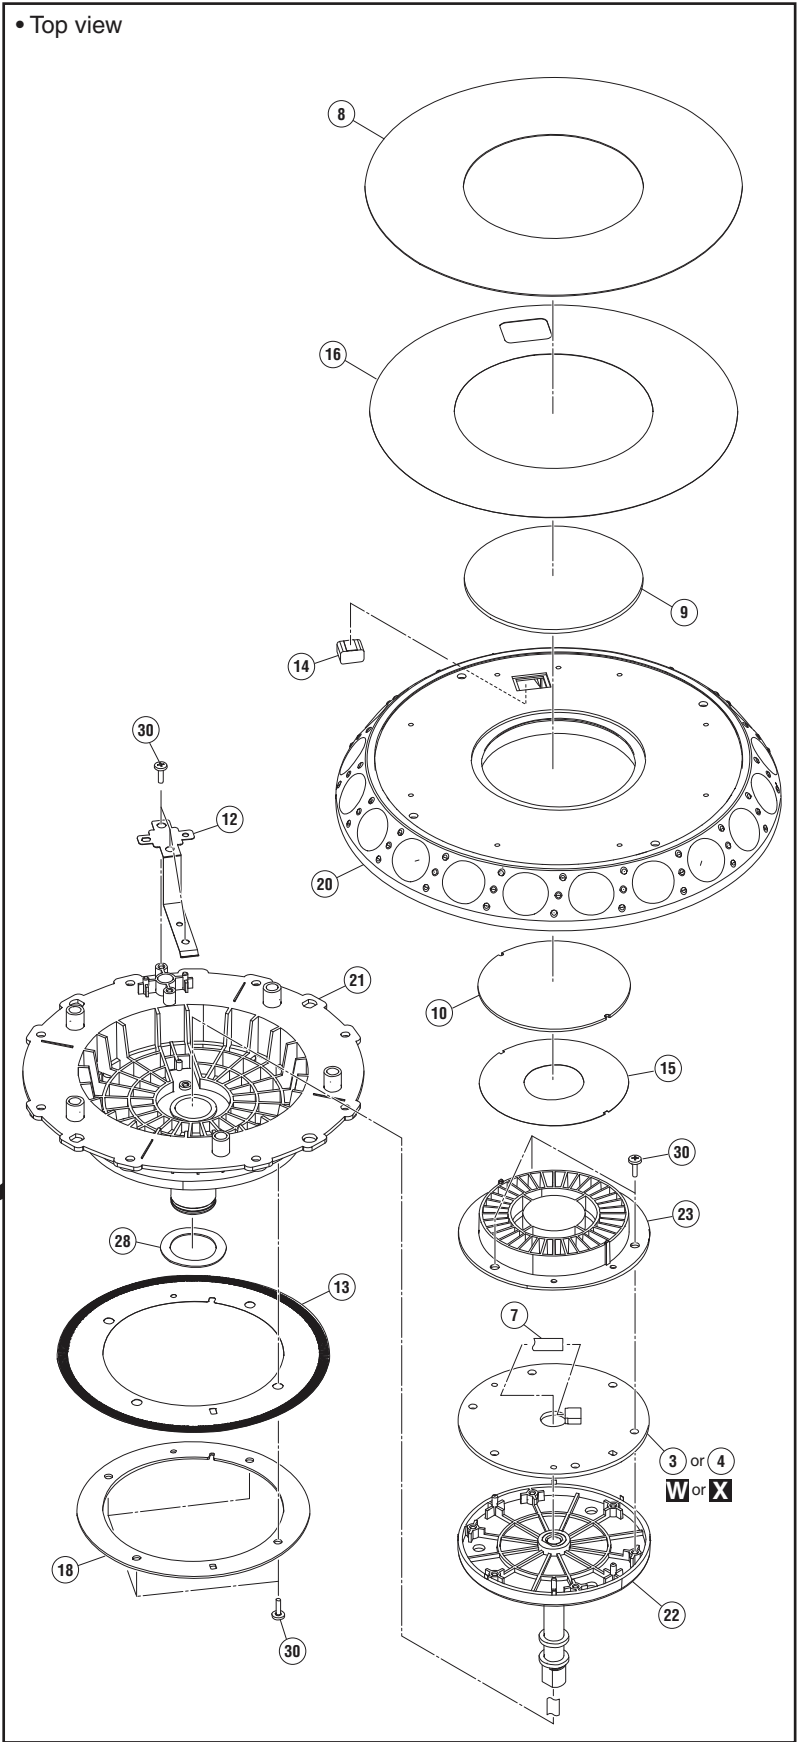

JOG DIAL SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	JOGT1 Assy	DWX4043
2	JOGT2 Assy	DWX4044
3	JLED1 Assy	DWX4041
4	JLED2 Assy	DWX4042
5	JOG1 Assy	DWX4064
6	JOG2 Assy	DWX4065
7	FFC/6P	DDD1690
8	Plate	DAH3167
9	Window/JOG	DAH3003
10	Window	DAH3004
11	Leaf Spring/1	DBK1383
12	Leaf Spring/2	DBK1384
13	Slit/JOG	DEC3515
14	Gasket/JOG	DEC3562
15	Diffuser/LED	DEC3575
16	DS Tape/JOG	DEH1058
17	Stay/LED	DNH3167
18	Bracket/SLT	DNH3168
19	Holder	DNK6741
20	JOG Dial	DNK6709
21	JOG Dial/IN	DNK6373
22	Holder/LED	DNK6374
23	Spacer/LED	DNK6375
24	Earth Lead Unit	DE005VC0
25		
26	Nut	NA80FTC
27	Spring Washer	WN80FTC
28	Washer	WA154D225D050
29	Washer	YC150FAC
30	Screw	BPZ20P060FTC
31	Screw	BPZ30P080FNI

A

B

C


D

E

F

9.8 LCD SECTION

• Bottom view

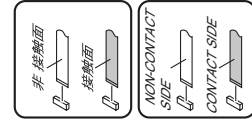

Note ※:


If it exchanges the Stay (22), be sure to use Acetate cloth tape.

If possible, reuse the original tape.



If cannot reuse, paste Acetate cloth tape of service parts as shown in the picture.

Incidentally, width of original tape is 10 mm, but width of service parts tape is 25 mm.

• Acetate cloth tape for Service

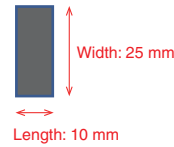

• Pasting position

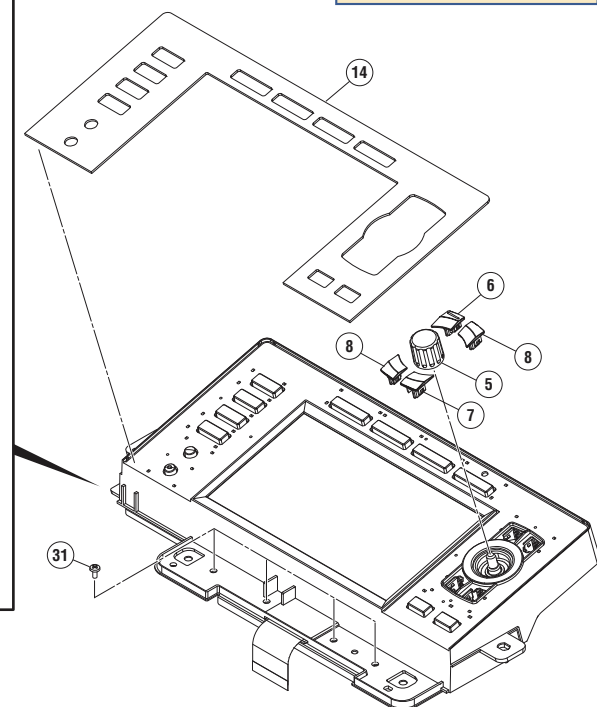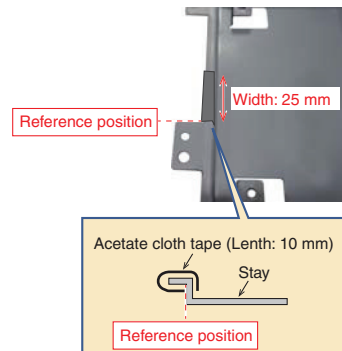

LCD SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	LCD Assy	DWX4036
2	Touch Panel	DSX1130
3	TFT LCD	CWX4352
4	FFC	DDD1811
5	Dial Knob	DAA1246
6	Button	DAC3113
7	Button	DAC3117
8	Button	DAC3118
9	Button	DAC3289
10	Button	DAC3290
11	Button	DAC3291
12	Button	DAC3292
13	Button	DAC3293
14	Plate	DAH3156
15	Packing/LCD	DEC3565
16	Packing/L	DEC3568
17	Packing/S	DEC3569
18	Light-D Sheet	DEC3613
19	Sheet	DEC3741
20	Angle	DNH3307
21	Bracket	DNH3308
22	Stay	DNH3309
23	Plate	DNH3310
24	Holder	DNK6467
25	Lens	DNK6468
⚠ 26	Panel	DNK6706
27	Cover	DNK6707
28		
29		
30	Screw	BBZ30P060FTB
31	Screw	BBZ30P060FTC
32	Screw	BPZ26P080FTC

A

B

C

D

E

F

12. PCB PARTS LIST

- NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 ● The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 ● When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47 k ohm (tolerance is shown by J = 5%, and K = 10%).

560 Ω $\rightarrow$ 56 $\times 10^1$ $\rightarrow$ 561 RD1/APU $\begin{bmatrix} 5 & 6 & 1 \end{bmatrix}$ J
 47 k Ω $\rightarrow$ 47 $\times 10^3$ $\rightarrow$ 473 RD1/APU $\begin{bmatrix} 4 & 7 & 3 \end{bmatrix}$ J
 0.5 Ω $\rightarrow$ R50 RN2H $\begin{bmatrix} R & 5 & 0 \end{bmatrix}$ K
 1 Ω $\rightarrow$ 1R0 RS1P $\begin{bmatrix} 1 & R & 0 \end{bmatrix}$ K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62 k Ω $\rightarrow$ 562 $\times 10^1$ $\rightarrow$ 5621 RN1/4PC $\begin{bmatrix} 5 & 6 & 2 & 1 \end{bmatrix}$ F

Mark	No.	Description	Part No.
LIST OF ASSEMBLIES			
	1..	MAIN ASSY	DWX4035
NSP	1..	PAD ASSY	DWM2657
	2..	LCD ASSY	DWX4036
	2..	PAD1 ASSY	DWX4037
	2..	PAD2 ASSY	DWX4038
	2..	USBA ASSY	DWX4039
	2..	CRFD ASSY	DWX4040
	2..	LVMB ASSY	DWX4048
NSP	1..	JCK ASSY	DWM2658
	2..	UCOM ASSY	DWX4045
	2..	AOUT ASSY	DWX4046
	2..	MCJK ASSY	DWX4047
NSP	1..	JOG ASSY	DWM2659
	2..	JLED1 ASSY	DWX4041
	2..	JLED2 ASSY	DWX4042
	2..	JOGT1 ASSY	DWX4043
	2..	JOGT2 ASSY	DWX4044
NSP	1..	MXR ASSY	DWM2660
	2..	MXRB ASSY	DWX4051
	2..	MTRM ASSY	DWX4052
	2..	HPJK ASSY	DWX4053
NSP	1..	PNL1 ASSY	DWM2661
	2..	DCK1 ASSY	DWX4054
	2..	MEQB ASSY	DWX4055
	2..	RECB ASSY	DWX4056
	2..	CHF1 ASSY	DWX4057
	2..	CHF2 ASSY	DWX4058
NSP	1..	PNL2 ASSY	DWM2662
	2..	DCK2 ASSY	DWX4062
	2..	JOG1 ASSY	DWX4064
	2..	JOG2 ASSY	DWX4065
	2..	DKHD ASSY	DWX4066
	2..	HPHD ASSY	DWX4067
	2..	HMHD ASSY	DWX4068
$\triangle$	1..	SW POWER SUPPLY	DWR1548

Mark	No.	Description	Part No.
A MAIN ASSY			
SEMICONDUCTORS			
$\triangle$	IC	101,102,502	BD9328EFJ
$\triangle$	IC	301,302	NJM2886DL3-05
$\triangle$	IC	303	BD81A04EFV-M
	IC	304	74VHC4066AFT
$\triangle$	IC	305,306	BD9851EFV
$\triangle$	IC	501	MMPF0100FOAEP
	IC	701	MCIMX6D6AVT10AD
	IC	702,703	H5TQ2G63GFR-RDC
NSP	IC	901	DYW2021*
	*Part number of the initial firmware equipped		
	IC	902	H337S3959
	IC	1001,1002,1402	TC7SH08FUS2
	IC	1401	TC7SZU04FUS2
	IC	1403	74LCX08FT
	IC	1901	AK4384ET
	IC	1902	NJM4565MD
	IC	2101,2301	NJM4580MD
	IC	2102,2103,2302,2303	NJM2121MD
	IC	2104,2304,2501,2503	AK5358AET
	IC	2502,2504	NJM2121MD
NSP	IC	2701	RTL8201F-VB-CG
	IC	2702	RTL8152B-VB-CG
	IC	2703	USB2512B-AEZG-TR
	Q	101	LTC024EEB
	Q	102-106,108,110	LSAR523UB
	Q	107,109	LSC4081UB
	Q	111	LTC124EUB
	Q	112,303,1908,1910	LSAR523UB
	Q	301	LTC043EEB
	Q	302,305	RTQ045N03
	Q	304	RSR020P05
	Q	306,307	RSQ030P03
	Q	1201,1911	RT3N22M
	Q	1401	LTC014EEB
	Q	1901,1913	2SK209
	Q	1902,1904	2SCR573DG
	Q	1903,1905	2SAR573DG
	Q	1906,1914,1916,1917	INC2002AC1
	Q	1907,1909,1915	LSCR523UB
	Q	1912	HN1A01FUS1
	Q	1918,2701	RT3T22M
	Q	2101,2102,2301,2302	2SK3320
	Q	2103,2303,2501	LTC114EUB

Mark	No.	Description	Part No.
A	D 101,102,104-109	1SS355VM	
	D 110,308,309	RB551VM-30	
	D 303,304	RB060M-30	
	D 305-307	DB2J41100	
	D 1901-1904,1907	1SS355VM	
	D 1905	RB160M-30	
	D 1908	DZ2J056M0	
	D 2701	DZ2J062M0	

Mark	No.	Description	Part No.
	R 336	RS1/10SR132J	
	R 339,374	RS1/16SS3002D	
	R 340,364,377	RS1/16SS6802D	
	R 341	RS1/16SS1503D	
	R 343	RS1/16SS5101D	
	R 352	RS1/16SS6201D	
	R 353	RS1/10SR6802D	
	R 354,362,370,379	RS1/16SS1002D	
	R 357	RS1/10SR5101D	
	R 358	RS1/16SS2002D	
	R 359,360	RS1/4SA0R0J	
	R 363	RS1/10SR3002D	
	R 365	RS1/16SS5102D	
	R 366	RS1/16SS5601D	
	R 372	RS1/16SS4701D	
	R 373	RS1/10SR100J	

MISCELLANEOUS

L 101,304 SMD SPL INDUCTOR(33 uH)	CTH1527
L 103 INDUCTOR(15 uH)	CTH1253
L 305,306,309 POWER INDUCTOR(22 uH)	ATH7011
L 310 POWER INDUCTOR(22 uH)	ATH7011
L 501-504 SMD SPL INDUCTOR(1 uH)	CTH1530

L 505 SMD SPL INDUCTOR(10 uH)	CTH1524
L 901 CHIP SOLID INDUCTOR	XTL3010
L 2703 COIL	ATH7015
F 2701 EMI FILTER	DTL1106
F 2702-2704 EMI FILTER	CGG1352

JA 2101,2301 4P PIN JACK	DKB1090
JA 2501 RCA JACK	DKB1122
JA 2701 USB CONNECTOR	DKN1237
KN2701 SCREW PLATE	VNE1948
X 1401 RESONATOR(32.768 kHz)	CSS1807

X 1402 CRYSTAL OSCILLATOR(22.5792 MHz)	DSS1215
X 1403 CRYSTAL TRANSDUCER(24 MHz)	DSS1208
X 2701,2703 CRYSTAL(25 MHz)	DSS1205
X 2702 RESONATOR(24.000 MHz)	CSS1773
CN101 CONNECTOR	DKN1661

CN1601,1602 FFC/FPC CONNECTOR	CKS6543
CN1603 9P CONNECTOR	09R-1.25FJ
CN1604-1606 19P RECEPTACLE	AKP7199
CN1901 CONNECTOR	AKM1275
VA 2101,2102,2301,2302 VARISTORS	EZJZ1V270RM

VA 2501 VARISTORS	EZJZ1V270RM
VA 2701,2702 SMD VARISTOR	EZJZ1V80010

RESISTORS

R 102,110,349	RS1/10SR220J
R 104	RS1/16SS2702D
R 105,111,338,342	RS1/16SS1002D
R 112,323,327,2112	RS1/16SS4702D
R 113,1930,1931,1941	RS1/16SS1801D

R 124	RS1/10SR223J
R 131,139	RS1/16SS2201D
R 136	RS1/16SS2701D
R 140	RS1/16SS2200D
R 141,346,361,523	RS1/16SS1502D

R 303,389,390,707	RS1/10SR0R0J
R 312	RS1/16SS5100F
R 314,315,317,319	RS1/4SA2R7J
R 320,324,332,356	RS1/16SS1203D
R 321	RS1/16SS1303D

R 322	RS1/16SS3902D
R 325,1218-1221,2701	RAB4CQ472J
R 326	RS1/16SS3302D
R 328	RS1/16SS1003D
R 333	RS1/16SS1602D

R 334,335	RS1/10SR152J
-----------	--------------

R 358	RS1/16SS2002D
R 359,360	RS1/4SA0R0J
R 363	RS1/10SR3002D
R 365	RS1/16SS5102D
R 366	RS1/16SS5601D

R 372	RS1/16SS4701D
R 373	RS1/10SR100J
R 380	RS1/16SS6202D
R 383,2103,2107,2303	RS1/16SS3001D
R 507	RS1/16SS1002F

R 515	RAB4CQ104J
R 524	RS1/16SS1502D
R 525	RS1/16SS8201D
R 526	RS1/10SR561J
R 708,718,721	RS1/16SS2400F

R 716,717,1934,1935	RS1/16SS1001D
R 901,908,913	RAB4CQ680J
R 902,909,1015,1034	RAB4CQ470J
R 916	RAB4CQ222J
R 924,925,2704	RAB4CQ220J

R 1035,1041	RAB4CQ470J
R 1201,1204,1206,1211	RAB4CQ103J
R 1209	RAB4CQ331J
R 1222,1223,2122,2326	RAB4CQ103J
R 1902,1903,1918	RS1/4SA220J

R 1905,1917,1929,1936	RN1/16SE3301D
R 1909,1910	RS1/16SS3901D
R 1911,1912	RS1/16SS3301D
R 1913,1915	RN1/16SE1502D
R 1914,1916	RS1/16SS3300D

R 1924,1928	RS1/8SQ680J
R 1925-1927,1937,1940	RS1/4SA220J
R 1942	RS1/16SS1801D
R 1943,1945,2132,2133	RS1/16SS1001D
R 2101,2102,2117,2119	RN1/16SE1201D

R 2104,2108,2304,2312	RN1/16SE2701D
R 2105,2106,2140,2141	RS1/16SS1000D
R 2109,2110,2142,2143	RS1/16SS2000D
R 2113,2144,2145,2316	RS1/16SS4702D
R 2116,2118,2120,2121	RN1/16SE1501D

R 2128,2328,2509,2520	RS1/10SR0R0J
R 2136,2137,2336,2337	RN1/16SE2703D
R 2138,2139,2338,2339	RN1/16SE2202D
R 2150,2152,2350,2352	RS1/16SS3601D
R 2151,2153,2351,2353	RS1/16SS8200D

R 2301,2302,2321,2323	RN1/16SE1201D
R 2305,2306,2340,2341	RS1/16SS1000D
R 2307,2501,2515,2517	RS1/16SS3001D
R 2313,2314,2342,2343	RS1/16SS2000D
R 2317,2344,2345,2534	RS1/16SS4702D

5			7			8		
Mark	No.	Description	Part No.	Mark	No.	Description	Part No.	
R	2320,2322,2324,2325		RN1/16SE1501D					
R	2332,2333		RS1/16SS1001D	C	360		CKSSYB472K50	
R	2502,2528		RN1/16SE2701D	C	381,385,504,507		CKSRYB105K10	A
R	2506,2544		RAB4CQ103J	C	388,389		CCSRCH101J50	
R	2511,2512,2523,2529		RS1/16SS3601D	C	390,391(100 uF/25 V)		CCH2000	
				C	392,396		CKSSYB103K25	
R	2513,2514,2530,2531		RS1/16SS8200D					
R	2516,2518		RN1/16SE8201D	C	501,510,561,718(10 uF/10 V)		DCH1201	
R	2527		RS1/16SS3001D	C	505,515,535,542		CKSRYB474K10	
R	2532,2535		RS1/16SS1000D	C	509,513,516,518		CKSSYB104K10	
R	2533,2536		RS1/16SS2000D	C	511,524,764,765		CKSRYB105K10	
				C	512,514,517,519 (10 uF/10 V)		CCG1201	
R	2537		RS1/16SS4702D					
R	2703		RAB4CQ472J	C	520,521,525,527		CKSSYB104K10	
R	2706		RS1/16SS2491F	C	522,523,526,543(10 uF/10 V)		CCG1201	
R	2725		RS1/10SR0R0J	C	528,530-533,536(22 uF/6.3 V)		DCH1256	B
R	2733		RS1/16SS91R0F	C	529,534,537,558		CKSSYB104K10	
				C	538-541,548,550(22 uF/6.3 V)		DCH1256	
R	2734		RS1/16SS2401D					
R	2740		RS1/16SS1202D	C	554,1601,1634,1639		CKSSYB104K16	
R	2751		RAB4CQ473J	C	562(100 uF/6.3 V)		ACH7275	
Other Resistors			RS1/16SS###J	C	563,739,762,766		CKSSYB104K10	
				C	566,902,903,1009		CCSSCH102J50	
				C	701,710,714,733(22 uF/6.3 V)		DCH1256	
CAPACITORS								
C	101,151,152,154		CKSSYB104K10					
C	102,107,133,144		CKSSYB103K16	C	711-713,715-717		CKSSYB224K6R3	
C	103,108,117,2105		CCSSCH101J50	C	719,720,722-726		CKSSYB224K6R3	
C	104,109,125,128		CKSSYB104K16	C	721,727,763,781(10 uF/10 V)		DCH1201	
C	105,110,118,129		CCSSCH102J50	C	728-732,734-738		CKSSYB224K6R3	C
				C	740,742,744-746		CKSSYB224K6R3	
C	112,120,393,397(0.1 uF/35 V)		ACE7100					
C	113,114,127,138(10 uF/16 V)		DCH1263	C	741,743,747,749(22 uF/6.3 V)		DCH1256	
C	115,1609		CEHVAW101M16	C	748,750-761		CKSSYB224K6R3	
C	116,149,325,2132(100 uF/16 V)		CCH1565	C	767,780,904,1008		CKSSYB104K10	
C	119		ACE7115	C	768-779,782-787		CKSSYB224K6R3	
				C	901		CKSSYB224K6R3	
C	121,400,402(0.01 uF/63 V)		ACE7097					
C	123,395,399(1 uF 25 V)		ACE7129	C	1001,1002,1004-1006		CCSSCH470J50	
C	124,384,387,1917(220 uF/16 V)		CCH2090	C	1010,1401,1403,1407		CKSSYB104K10	
C	130,131,140,142		CKSSYB104K16	C	1011,1405,1410,1411		CCSSCH102J50	
C	132,146,378,382(10 uF/10 V)		DCH1201	C	1201,1202		CCSSCH470J50	
				C	1402,1404,2714,2716		CCSSCH100D50	D
C	137		CEVW330M10					
C	139,162,301,305(10 uF/16 V)		DCH1263	C	1409,1625,1627,1632		CKSSYB104K10	
C	141,147,307,354		CCSSCH102J50	C	1412,1413,1903,1920		CKSSYB103K16	
C	143,150,161,552		CKSSYB104K16	C	1622,1624,1626,1636		CKSSYB102K50	
C	145,905		CKSSYB222K50	C	1628,1630		CKSRYB103K25	
				C	1633,1635,1901,1906		CKSSYB104K10	
C	153,156,348,351		CKSRYB104K25					
C	155,157-160,313		CKSSYB104K10	C	1638,1640,2101,2125		CKSSYB102K50	
C	304,308(2.2 uF/10V)		CCG1218	C	1641,1642,1930,1931		CKSRYB104K25	
C	309,320-323,336(10 uF/16 V)		DCH1263	C	1902		CEVW220M6R3	
C	310,508,702-709		CKSSYB224K6R3	C	1904,1909,1910		CCSSCH102J50	
				C	1908,2111,2112,2130		CEVW101M16	
C	315,328,357,564		CKSSYB103K16					
C	316		CCSQCH472J50	C	1911,1912		CCSSCH121J50	E
C	317,318		CKSQYB225K16	C	1918,2129,2134,2135		CKSSYB104K10	
C	319,377,380,506		CKSSYB104K10	C	1921,1922		CEVW470M16	
C	324(0.01 uF/50 V)		ACE7113	C	1926,1927		CCSSCH330J50	
				C	1932,1933,2113,2114		CCSSCH331J50	
C	330,350		CCSSCH271J50					
C	332		CKSSYB332K50	C	2102,2126,2302,2327		CKSRYB104K25	
C	335,340(22 uF/16 V)		CCG1254	C	2103,2104,2107,2108		CCSSCH471J50	
C	337,366		CCSSCH561J50	C	2106,2123,2124,2127		CCSSCH101J50	
C	338,343,367,372		CKSRYB105K10	C	2109,2110,2309,2311		CKSRYB123K50	
				C	2115,2116,2316,2317(0.012 uF)		ACE7125	
C	339,364,369,551(10 uF/16 V)		DCH1263					
C	341,342,370,371		CKSQYB105K16	C	2117,2118,2318,2319(3300 pF/50 V)		DCG1049	F
C	346,376,556		CKSSYB682K25	C	2121,2122,2322,2323		CCSSCH221J50	
C	349,353(10 uF/35 V)		CCG1236	C	2128,2305,2306,2324		CCSSCH101J50	
C	356,383,386,565		CCSSCH102J50	C	2131,2312,2313,2331		CEVW101M16	

Mark	No.	Description	Part No.
A	C	2133,2509,2510(100 uF/16 V)	CCH1565
	C	2137,2148,2149,2333(10 uF/10 V)	DCH1201
	C	2138,2310,2330,2335	CKSSYB104K10
	C	2139,2147,2303,2304	CCSSCH471J50
	C	2142,2341,2533,2703	CKSSYB103K16
B	C	2144,2145,2343,2344	CEVW101M25
	C	2150,2348,2542,2544(22 uF/6.3 V)	DCH1256
	C	2301,2326,2531,2713	CKSSYB102K50
	C	2307,2308,2346,2347	CCSSCH471J50
	C	2314,2315	CCSSCH331J50
C	C	2325,2328,2329,2520	CCSSCH101J50
	C	2332,2507,2508	CEVW101M16
	C	2334,2338,2513,2527(10 uF/10 V)	DCH1201
	C	2336,2506,2511,2512	CKSSYB104K10
	C	2504,2505	CEVW101M25
D	C	2514,2522,2526,2528	CKSSYB104K10
	C	2518,2525	CCSSCH221J50
	C	2523,2524	CEVW220M16
	C	2529,2702,2704-2708	CKSSYB104K10
	C	2530	CCSSCH101J50
E	C	2532	CKSRB104K25
	C	2534,2535,2540,2541(10 uF/10 V)	DCH1201
	C	2536-2539	CCSSCH471J50
	C	2701,2709-2712,2715(10 uF/10 V)	DCH1201
	C	2717-2725,2727,2730	CKSSYB104K10
F	C	2728,2729,2732,2742	CKSRB105K10
	C	2731,2734,2736-2739	CKSSYB104K10
	C	2733(10 uF/10 V)	DCH1201
	C	2735,2745	CCSSCH120J50
	C	2741,2744,2746,2748	CKSSYB104K10
G	C	2747,2749	CKSSYB103K16
	C	2750,2751	CCSSCH7R0D50
	C	2752(2.2 uF/10 V)	CCG1205
	C	2753,2754	CCSSCH120J50
	C	2755,2756	CKSSYB104K10

Mark	No.	Description	Part No.
H	Q	5101	2SAR502UB
	Q	5301-5312	LTC023JEB
	Q	5402,5404,5406,5718	2SB1689
	Q	5405,5717,5719,5721	LTC124EUB
	Q	5419-5438,5701-5708	LTC123JUB
I	Q	5720,5722	2SB1689
	Q	5723-5734	LSCR523UB
	Q	5735-5746	LTC123JUB
	D	3401-3407,3409-3415	SML-D12M8W(NP)
	D	3408,3416-3419,3421	SML-D12Y8W
J	D	3420,3422,3426,3437	SML-D12V8W
	D	3423-3425,3427,3428	SML-D12Y8W
	D	3429-3435,5301-5304	SML-D12M8W(NP)
	D	3436,5320	SML-D12Y8W
	D	5101-5103	DB3S308F0
K	D	5104	DB2J41100
	D	5309-5312,5322,5324	SML-D12M8W(NP)
	D	5313-5316,5318	NHSW146A-A21460
	D	5317	SML-D12V8W
	D	5401-5412,5701-5704	NSSM124F-A21107
L	D	5413-5440,5449-5460	1SS355VM
	D	5705-5712,5717-5724	1SS355VM
	D	5713-5716,5725,5727	NSSM124F-A21107
	D	5726,5728,5730	1SS355VM
	D	5729,5731	NSSM124F-A21107
M	D	5732-5740,5749-5760	1SS355VM
	D	5733-5736,5738	NHSW146A-A21460
	D	5737	SML-D12V8W
	D	5738	NSSM124F-A21107
	D	5739	1SS355VM

MISCELLANEOUS

L	5001,5217 CHIP BEEDS FILTER	BTX1042
L	5002 CHIP BEEDS FILTER	BTX1047
L	5003,5004 CHIP SOLID INDUCTOR	XTL3010
L	5005,5204,5206-5215 CHIP BEADS	VTL1126
L	5102 CHOKE COIL(22 uH)	CTH1426
L	5201 INDUCTOR(10 uH)	CTF1635
L	5202,5216 CHIP INDUCTOR(10 uH)	DTL1105
L	5218-5226 CHIP BEADS	VTL1126
JA	6001,6002 USB JACK	DKB1118
S	5301-5306,5308,5309 TACT SWITCH	DSG1134
S	5307,5310,5316,5317 PUSH SWITCH	CSG1155
S	5311 ENCODER SW	DSX1080
S	5312-5315 TACT SWITCH	DSG1134
S	5401-5404,5701-5704 PUSH SWITCH	CSG1155
CN	3401 CONNECTOR	CKS5854

CN	5001 FFC/FPC CONNECTOR	CKS6543
CN	5003 CONNECTOR	CKS4428
CN	5201 FFC/FPC CONNECTOR	CKS6646
CN	5301 FFC/FPC CONNECTOR	CKS6625
CN	5401,5701 FFC/FPC CONNECTOR	DKP3953
CN	6001,6002 CONNECTOR	AKM1277
CN	6051 CONNECTOR	AKM1289
	5001 SPACER	DEC3622

VA	6001-6003 SMD VARISTOR	EZJZ1V80010
VA	6005-6007 SMD VARISTOR	EZJZ1V80010

RESISTORS

VR	6051 VARIABLE RESISTOR	CCW1024
R	3401,3412,3423,3430	RS1/10SR431J
R	3404-3410,3415-3421	RS1/10SR620J
R	3411,3422,3451	RS1/10SR101J
R	3426-3429,3433-3440	RS1/10SR620J
R	3441	RS1/10SR431J

PAD ASSY

Consists of

LCD ASSY

PAD1 ASSY

PAD2 ASSY

USBA ASSY

CRFD ASSY

LVMB ASSY

E J K L N Y

PAD ASSY

SEMICONDUCTORS

IC	3401	74VHC164FT
IC	3402,5401,5402,5701	74VHC595FT
IC	5001	BU90R104
IC	5002-5004	74LCX541FT
IC	5101	R1290K103A

IC	5301	AK4187VN
IC	5702	74VHC595FT
Q	3401,3403,3409	RT3N22M
Q	3402,3404,3406,3408	2SA1577
Q	3405,3407,5401,5403	LTC124EUB

Q	3410	2SA1577
Q	3411-3418,5407-5418	LSCR523UB

5	6	7	8
Mark No. Description	Part No.	Mark No. Description	Part No.
R 3444-3450,3494	RS1/10SR620J	CAPACITORS	
R 3468-3471	RAB4CQ101J	C 3402,3409	CCSSCH471J50
R 5001-5004	RS1/16SS1000D	C 3403,3404,5005,5008	CKSSYB104K10
R 5006,5237	RAB4CQ103J	C 3405,5244-5246,5248	CCSSCH102J50
R 5012,5015,5016,5019	RAB4CQ220J	C 3406-3408	CCSSCH221J50
		C 5002,5068,5301,5304(10 uF/10 V)	DCH1201
R 5026,5027,5032,5033	RAB4CQ331J		
R 5103	RS1/16SS3603D	C 5004,5006,5007,5010	CKSSYB103K16
R 5104	RS1/16SS6802D	C 5009,5020,5022,5030	CKSSYB104K10
R 5105	RS1/16SS3901D	C 5013,5234	CCG1218
R 5110	RS1/16SS1103D	C 5018,5024,5031,5121	CKSSYB103K16
		C 5040-5042,5065,5067	CKSSYB104K10
R 5111	RS1/16SS1002D		
R 5113,5116	RS1/16SS1502D	C 5069,5110,5113,5123	CKSSYB104K16
R 5115	RS1/16SS8201D	C 5076	CCG1254
R 5118	RS1/16SS3303D	C 5102,5118,5125-5128	CKSSYB102K50
R 5119	RS1/16SS5601D	C 5103,5215,5216	CKSRYB105K10
		C 5104,5114,5220,5247(1 uF/10 V)	DCH1246
R 5122	RS1/16SS3902D		
R 5205,5221	RS1/16SS39R0D	C 5106,5107	CKSQYB105K25
R 5208,5225	RS1/16SS47R0D	C 5108	CKSQYB475K6R3
R 5212,5222	RS1/16SS75R0F	C 5111,5112	CKSQYB474K25
R 5219,5223	RS1/16SS1300D	C 5116	CKSSYB224K6R3
		C 5117,5211	CKSYB475K16
R 5220	RS1/16SS51R0D		
R 5224,5228	RS1/16SS82R0D	C 5119	CKSSYB561K50
R 5226	RS1/16SS56R0D	C 5120	CKSSYB332K50
R 5227	RS1/16SS1800D	C 5122,5124,5224,5231(10 uF/16 V)	DCH1263
R 5229	RS1/16SS1001D	C 5212-5214,5227	CKSSYB104K16
		C 5217-5219,5228,5239	CKSSYB104K10
R 5231	RS1/16SS8200D		
R 5401-5404,5416-5419	RS1/10SR102J	C 5223,5230,5232	CKSSYB102K50
R 5405-5408,5420-5423	RS1/8SQ471J	C 5225(10 uF/6.3 V)	CCG1234
R 5410-5413,5425-5428	RS1/4SA471J	C 5235	CKSSYB103K25
R 5431-5434,5509,5512	RS1/4SA471J	C 5237(4.7 uF/10 V)	CCG1201
		C 5238	CKSQYB334K50
R 5435-5438,5791-5794	RS1/8SQ102J		
R 5441-5443,5515	RS1/4SA102J	C 5240	CKSRYB104K25
R 5449-5451,5553	RAB4CQ222J	C 5241,5302,5303,5411	CKSSYB104K10
R 5456,5459,5462,5465	RS1/10SR822J	C 5251-5254,6003,6006	CCSSCH102J50
R 5457,5460,5463,5466	RS1/10SR123J	C 5410,5727	CEVW101M16
		C 5412,5413,5422-5429	CKSSYB103K16
R 5458,5461,5464,5467	RS1/10SR103J		
R 5470-5474,5477,5482	RS1/10SR122J	C 5414-5421,5703-5710	CCSSCH101J50
R 5475,5476,5478-5481	RS1/10SR0R0J	C 5430,5713(10 uF/10 V)	DCH1201
R 5483-5485,5822-5830	RS1/10SR0R0J	C 5701,5702,5720-5725	CKSSYB103K16
R 5508,5511,5517,5521	RS1/10SR102J	C 5728,5729,6002,6005	CKSSYB103K16
		C 5730,6052	CKSSYB104K10
R 5510,5513,5519,5522	RS1/8SQ821J		
R 5518,5520,5524,5527	RS1/4SA471J	C 6051	CKSSYB471K50
R 5523,5526,5529,5532	RS1/10SR102J		
R 5525,5528,5531,5534	RS1/8SQ821J		
R 5530,5533,5738-5741	RS1/4SA471J		
		JCK ASSY	
R 5561,5717-5720	RS1/10SR122J	Consists of	
R 5721-5728,5752-5759	RS1/10SR102J	UCOM ASSY	
R 5729-5732,5760-5763	RS1/8SQ821J	AOUT ASSY	
R 5733-5736,5764-5767	RS1/8SQ471J	MCJK ASSY	
R 5744-5747,5769-5772	RS1/4SA471J		
		BFG	
R 5748-5751	RS1/10SR122J	JCK ASSY	
R 5775-5778,5783-5786	RS1/4SA471J	SEMICONDUCTORS	
R 5802-5805	RS1/4SA102J	IC 4001	DYW2022*
R 5806-5808,5812	RAB4CQ222J	*Part number of the initial firmware equipped	
R 5809,5813,5816,5819	RS1/10SR822J	IC 4002	S-80930CNMC-G80
		IC 4003	DYW2023*
R 5810,5814,5817,5820	RS1/10SR123J	*Part number of the initial firmware equipped	
R 5811,5815,5818,5821	RS1/10SR103J		
R 6051	RS1/10SR0R0J		
Other Resistors	RS1/16SS###J	IC 4501	USB2512B-AEZG-TR
		IC 4502,4503	BD9328EFJ



Mark No. Description**Part No.****Mark No. Description****Part No.**

A

IC 4504,4505 TPS2557DRB
 IC 4506 AK4382AVT
 IC 4507-4509,4513,4901 NJM4580MD
 IC 4510,4511,4514,4515 NJM4580DD
 IC 4512 AK4384ET
 IC 4902 NJM4580MD
 Q 4001,4002 LTC043EEB
 Q 4003 LTA024EEB

R 4520,4521 RS1/10SR102J
 R 4526,4527 RS1/10SR220J
 R 4529,4533 RS1/10SR1100D
 R 4530,4534 RS1/16SS4702D
 R 4531,4535 RS1/16SS1002D
 R 4552,4553 RS1/10SR2702F
 R 4554,4555 RS1/10SR5602F

B

Q 4004,4006 LSAR523UB
 Q 4005,4007 LTC024EEB
 Q 4501 RN2903
 Q 4503,4504 RT3N22M
 Q 4507-4516,4519-4534 INC2002AC1
 Q 4535 HN1C01FUS1
 Q 4901-4904 2SK209
 D 4001-4006,4503 1SS355VM
 D 4501,4502 DZ2J051M0

R 4573,4574,4587,4588 RS1/10SR513J
 R 4575-4582,4710,4711 RS1/10SR0R0J
 R 4593-4600 RS1/10SR3301D
 R 4601-4608 RN1/16SE1202D
 R 4609-4616,4724-4731 RS1/10SR2701D
 R 4617-4624 RS1/8SQ5600F
 R 4625-4628,4637-4640 RS1/10SR223J
 R 4629-4632 RS1/8SQ2700F
 R 4641-4644,4649,4650 RS1/10SR1800F
 R 4651-4658 RS1/10SR5601D

MISCELLANEOUS

L 4001,4002 CHIP COIL LCTAW330J2520
 L 4003 POWER INDUCTOR ATH7053
 L 4004-4007 CHIP BEADS VTL1126
 L 4501,4502 COIL ATH7015
 L 4503,4504 INDUCTOR(15 uH) CTH1253

R 4659,4663 RS1/10SR2202D
 R 4660,4661 RS1/10SR1202D
 R 4662,4664 RS1/10SR6800D
 R 4665-4672,4722,4723 RN1/16SE6801D
 R 4673,4674,4689-4692 RS1/10SR183J

C

F 4501 EMI FILTER CGG1352
 JA 4501 RCA JACK DKB1122
 JA 4502,4503 CANON CONNECTOR DKB1093
 JA 4504,4505 6.5 DIA JACK DKN1653
 JA 4901,4902 XLR SOCKET DKB1124

R 4675-4678,4766 RS1/4SA471J
 R 4683-4686,4744-4747 RS1/10SR2201D
 R 4687,4688 RS1/10SR103J
 R 4695-4698,4714,4715 RS1/10SR183J
 R 4699,4700 RS1/10SR1800F

D

X 4001 CERAMIC OSCILLATOR(16 MHz) CSS1616
 X 4501 RESONATOR(24 MHz) CSS1773
 CN 4003,4004 FFC/FPC CONNECTOR DKP3953
 CN 4005,4009 39P CONNECTOR VKN2097
 CN 4006,4008 15P CONNECTOR VKN1246

R 4713,4905-4908 RS1/10SR0R0J
 R 4716,4717 RS1/10SR6801D
 R 4718,4719 RS1/10SR1201D
 R 4720,4721 RN1/16SE2001D
 R 4732-4739 RN1/16SE8201D

CN 4007 35P CONNECTOR VKN2025
 CN 4010 FFC/FPC CONNECTOR CKS6543
 CN 4011-4013 L-PLUG(3P) KM200NA3L
 CN 4501-4503 19P PLUG AKM7077
 CN 4504,4505 CONNECTOR AKM1277

R 4740-4743 DCN1200
 R 4749-4756 RS1/10SR183J
 R 4757-4760 RS1/10SR680J
 R 4768-4770 RS1/4SA471J
 R 4901-4904 RN1/16SE2200D

E

CN 4901 CONNECTOR CKS3561
 CN 4902 9P CONNECTOR 09P-1.25FJ
 4501 CANON SHIELD DNF1789
 4502,4503 PHONE SHIELD DNF1875
 4901,4902 MIC SHIELD DNF1849

R 4909-4912 RN1/16SE3301D
 R 4913,4914,4927,4928 RN1/16SE2701D
 R 4915,4916,4924,4926 RN1/16SE4701D
 R 4917,4918,4921,4922 RN1/16SE1501D
 R 4919,4920 RN1/16SE8200D

VA 4501,4503-4506,4511 VARISTORS EZJZ1V270RM
 VA 4512,4901-4906 VARISTORS EZJZ1V270RM

R 4923,4925 RS1/10SR1500D
 R 4929,4930 RS1/10SR2201D
 R 4931,4932 RN1/16SE4702D
 Other Resistors RS1/16SS###J

RESISTORS

R 4018,4021,4022 RAB4CQ560J
 R 4024-4026,4036,4038 RAB4CQ560J
 R 4027,4033,4223,4224 RAB4CQ223J
 R 4029 RAB4CQ103J
 R 4061,4092,4105,4110 RAB4CQ560J
 R 4088-4091,4116 RAB4CQ101J
 R 4112,4128,4133,4135 RAB4CQ560J
 R 4173,4174 RAB4CQ560J
 R 4202-4205,4207-4210 RS1/4SA2R0J
 R 4212-4215 RS1/4SA2R2J
 R 4502,4748 RAB4CQ472J
 R 4506,4507,4701,4702 RS1/16SS33R0D
 R 4518 RS1/16SS1202F

CAPACITORS

C 4001,4015,4055,4110 CEVW101M16
 C 4002,4020,4026,4030 CKSSYB104K10
 C 4003-4014,4076,4077 CCSSCH102J50
 C 4018,4019,4021-4025 CCSSCH471J50
 C 4028,4029,4033,4034 CCSSCH471J50
 C 4031,4508,4550,4551 CKSSYB103K16
 C 4035,4036,4056,4078 CKSSYB104K10
 C 4037-4046,4048-4051 CCSSCH471J50
 C 4047 CKSRYB273K16
 C 4052-4054,4091,4092 CCSSCH101J50
 C 4057-4075,4082,4083 CCSSCH471J50
 C 4080,4502,4534,4535 CCSSCH102J50

Mark	No.	Description	Part No.
C	4081,4085,4105,4111		CKSSYB104K10
C	4086-4090,4923,4924		CCSSCH471J50
C	4109,4119,4133,4151		CCSSCH101J50
C	4112,4120,4134,4136		CEVW101M16
C	4113,4121-4124,4131		CKSSYB104K10
C	4132,4137,4148,4150		CKSSYB104K10
C	4135,4542,4543		CKSSYB104K16
C	4138,4515		CEVW101M16
C	4139		CCSSCH100D50
C	4149,4507,4552,4553(10 uF/10 V)		DCH1201
C	4504		CKSSYB103K25
C	4506,4660-4662(100 uF/16 V)		CCH1565
C	4509,4511,4518,4652		CCSRCH102J50
C	4510,4514,4519		CCSRCH101J50
C	4512,4521,4523		CKSSYB104K10
C	4513(4700 pF/63 V)		ACE7115
C	4516,4522,4585(1 uF/25 V)		ACE7129
C	4517,4525,4608,4610(100 uF/25 V)		CCH2000
C	4520(4.7 uF/10 V)		CCG1201
C	4524		CCSSCH120J50
C	4526-4529,4533,4564		CKSSYB104K10
C	4532		CCSSCH150J50
C	4538-4541(10 uF/16 V)		DCH1263
C	4544,4545		CKSSYB102K50
C	4546-4549,4580,4656		CKSSYB104K16
C	4558,4559,4574,4575		CEHVAW101M6R3
C	4560,4561,4566,4568		CKSSYB103K16
C	4562,4563,4570-4573(10 uF/10 V)		DCH1201
C	4565,4639,4659,5001		CKSSYB104K10
C	4569,4927,4928		CKSSYB103K16
C	4581,4937,4938		CCSSCH101J50
C	4582,4658,4909-4917		CCSSCH102J50
C	4583(0.1 uF/35 V)		ACE7100
C	4586,4631,4632(220 uF/16 V)		CCH2090
C	4591-4594		CCSRCH331J50
C	4595-4602,4621-4628		CCSRCH101J50
C	4616,4618,4629,4630(100 uF/25 V)		CCH2000
C	4633,4634,4691,4902		CKSRYB103K50
C	4635-4638(220 uF/16 V)		CCH2090
C	4642,4643,4648-4651(1000 pF)		ACE7099
C	4657		CEVW220M6R3
C	4663,4664,4901,4903		CCSRCH102J50
C	4665,4666		CCSRCH221J50
C	4669-4676(100 pF/50 V)		DCG1062
C	4681-4684(100 uF/16 V)		CCH1565
C	4686-4689(1000 pF)		ACE7099
C	4904		CKSRYB103K50
C	4905-4908		ACE7113
C	4919		CCSSCH102J50
C	4925,4926		CCSRCH101J50
C	4929,4930		CCSSCH331J50
C	4931,4932		CCSSCH471J50
C	4939,4940		CEVW101M25

Mark No.	Description	Part No.
JOG ASSY		
Consists of		
JLED1 ASSY		
JLED2 ASSY		
JOGT1 ASSY		
JOGT2 ASSY		
S U W X		
JOG ASSY		
SEMICONDUCTORS		
IC	3001-3005,3101-3105	74VHC595FT
IC	3201,3301	PIC10F206-I/OT
IC	3202,3302	74VHCT126AFT
D	3001-3035,3042	NHSW146A-A21460
D	3036-3041,3043,3044	FC-F1608BAK5
D	3101-3136	NHSW146A-A21460
D	3137-3144	FC-F1608BAK5
D	3201,3301	RB520G-30
D	3202,3302	DAN217UM
MISCELLANEOUS		
L	3201,3202,3204,3301 INDUCTOR	CTF1786
L	3205,3206,3305,3306 CHIP BEADS	VTL1126
L	3302,3304 INDUCTOR	CTF1786
KN	3201,3202 WRAPPING TERMINAL	CKF1089
KN	3301,3302 WRAPPING TERMINAL	CKF1089
CN	3001,3101 FFC/FPC CONNECTOR	CKS6634
CN	3202,3302 CONNECTOR	AKM1275
CN	3203,3303 15P CONNECTOR	VKN1307
CN	3204,3304 FFC/FPC CONNECTOR	CKS6634
VA	3201,3202,3301 SMD VARISTOR	EZJZ1V80010
VA	3302 SMD VARISTOR	EZJZ1V80010
RESISTORS		
R	3201,3202,3301,3302(750 ohm)	DCN1187
R	3206,3306	RS1/16SS2202D
R	3213,3218,3313,3318	RS1/10SR0R0J
R	3219,3319	RAB4CQ221J
Other Resistors		RS1/16SS###J
CAPACITORS		
C	3001,3006-3009,3101	CKSSYB104K10
C	3002-3005,3102-3105	CCSSCH221J50
C	3010-3013,3110-3113	CCSSCH102J50
C	3014,3114,3205,3305(10 uF/10 V)	DCH1201
C	3106-3109,3202,3203	CKSSYB104K10
C	3201,3301	CCSSCH221J50
C	3204,3304	CEVW101M16
C	3206,3302,3303,3306	CKSSYB104K10
C	3208,3211,3308,3311	CCSSCH220J50

Mark	No.	Description	Part No.
------	-----	-------------	----------

MXR ASSY**Consists of****MXRB ASSY****MTRM ASSY****HPJK ASSY****CDM****MXR ASSY****SEMICONDUCTORS**

IC 7001	TC74VHC164F
IC 7002,7003	TC74HC4052AF
Q 7001,7002,7004,7005	LTC124EUB
Q 7003,7006,7009	ISA1602AM1
Q 7007,7008,7012-7014	LTC124EUB

Q 7010,7011,7015-7017	LSCR523UB
Q 7018	HN1A01FUS1
Q 7019	HN1C01FUS1
Q 7020	LSCR523UB
Q 7021	LTA143EUB

D 7001-7003,7006-7011	1SS355VM
D 7004,7005,7012,7013	SLR343WBC7T
D 7014-7016,7019,7020	1SS355VM
D 7017	SLR343BD2T
D 7018	LTL17KGH5D

D 7022-7026,7033,7034	1SS355VM
D 7027-7032	LTL17KSL5D

MISCELLANEOUS

JA 7601 HEADPHONE JACK	DKN1622
JA 7602 STEREO MINI JACK	XKN3017
KN 7601 SCREW PLATE	VNE1948
S 7001,7003,7005 TACT SWITCH	DSG1079
S 7002,7004,7006 SLIDE SWITCH	DSH1058

S 7007-7011,7013-7015 TACT SWITCH	DSG1079
S 7012 SLIDE SWITCH	DSH1058
S 7016 ROTARY ENCODER	DSX1136
S 7017 ROTARY SWITCH	DSG1144
S 7018 ROTARY SWITCH	DSG1098

CN 7001 19P CONNECTOR	VKN1250
CN 7002 39P CONNECTOR	VKN2097
CN 7501 PLUG	CKS3533
CN 7601 L-PLUG(4P)	KM200NA4L
VA 7601-7603 VARISTORS	EZJZ1V270RM

RESISTORS

VR 7001-7003,7007,7011 ROTARY VR	DCS1104
VR 7004-7006,7008-7010 ROTARY VR	DCS1078

VR 7012,7013,7017 ROTARY VR	DCS1078
VR 7014 ROTARY VR	DCS1104
VR 7015,7016 ROTARY VR	DCS1126
VR 7501,7502 ROTARY VR	DCS1123
R 7014	RS1/4SA561J
R 7015,7097	RS1/4SA471J
Other Resistors	RS1/10SR###J

CAPACITORS

C 7001,7004	CCSRCH471J50
C 7005,7014,7015	CKSRYB104K10
C 7006-7013,7020-7027	CKSRYB471K50
C 7028-7042,7044-7048	CKSRYB104K10
C 7043,7057,7058(10 uF/10 V)	DCH1201

C 7049,7050	CEJQ101M16
-------------	------------

Mark	No.	Description	Part No.
------	-----	-------------	----------

C	7053,7054,7603-7606	CKSRYB104K16
C	7055,7056	CKSRYB104K10
C	7501-7504	CEAL101M16
C	7601,7602,7609,7610(220 uF/6.3 V)	DCH1344

C	7607,7608	CKSRYB103K50
---	-----------	--------------

PNL1 ASSY**Consists of****DCK1 ASSY****MEQB ASSY****RECB ASSY****CHF1 ASSY****CHF2 ASSY****HIOPR****PNL1 ASSY****SEMICONDUCTORS**

IC 8201	TC74VHC164F
IC 8202	TC74HC4052AF
Q 8001-8003,8101,8102	LTC124EUB
Q 8103,8108	LTC123JUB
Q 8104,8107,8109,8112	2SAR502UB

Q 8105,8106,8110,8114	LTC124EUB
Q 8111,8113	HN1A01FUS1
Q 8115	2SAR502UB
Q 8116,8117,8404,8405	LSCR523UB
Q 8118,8401,8402	LTC124EUB

Q 8403	LSAR523UB
D 8001-8019,8401-8403	1SS355VM
D 8101,8103	LTL17KGH5D
D 8102,8104,8105,8108	LTL17KSL5D
D 8106,8107,8113,8301	LTL17KRH5D

D 8109,8112	LTL17KSL5D
D 8110	LTL17KCBH5D
D 8111	SLR343WBC7T
D 8404-8406	LTL17KRH5D

MISCELLANEOUS

KN 8001,8301 EARTH TERMINAL	AKF7002
S 8001,8003-8006 TACT SWITCH	DSG1089
S 8002,8007,8008,8013 TACT SWITCH	DSG1079
S 8009-8012,8014-8019 TACT SWITCH	DSG1089
S 8020,8021 TACT SWITCH	DSG1117

S 8301 SLIDE SWITCH	DSH1058
S 8302 PUSH SW	ASG1102
S 8401-8404 TACT SWITCH	DSG1089
CN 8201 39P CONNECTOR	VKN2097
CN 8202,8301 17P CONNECTOR	VKN1248

CN 8401 15P CONNECTOR	VKN1246
CN 8501,8601 L-PLUG(3P)	KM200NA3L
VA 8002,8003 VARISTORS	EZJZ1V270RM

RESISTORS

VR 8001 ROTARY VR	DCS1104
VR 8002 SLIDE VR	DCV1033
VR 8301,8302 ROTARY VR	DCS1078
VR 8501,8601 SLIDE VR	DCV1027
Other Resistors	RS1/10SR###J

CAPACITORS

C 8003,8302(10 uF/10 V)	DCH1201
-------------------------	---------

Mark	No.	Description	Part No.
	C	8004,8201-8203,8210	CKSRYB104K10
	C	8204,8206	CEJQ101M16
	C	8205,8401	CKSRYB105K10
	C	8208,8209,8211,8212	CCSRCH471J50
	C	8213,8301,8306,8307	CKSRYB104K10
	C	8214-8219	CCSRCH471J50
	C	8304,8305	CKSRYB471K50

PNL2 ASSY

Consists of

DCK2 ASSY

JOG1 ASSY

JOG2 ASSY

DKHD ASSY

HPHD ASSY

HMHD ASSY

QTV

PNL2 ASSY

SEMICONDUCTORS

IC	9201	TC74VHC164F
Q	9001-9003,9101,9102	LTC124EUB
Q	9103,9108	LTC123JUB
Q	9104,9107,9110,9113	2SAR502UB
Q	9105,9106,9109,9111	LTC124EUB
Q	9112,9114	HN1A01FUS1
Q	9115	LTC124EUB
Q	9116	2SAR502UB
Q	9117,9118	LSCR523UB
D	9001-9019	1SS355VM
D	9101,9103	LTL17KGH5D
D	9102,9104,9105,9108	LTL17KSL5D
D	9106,9107,9113	LTL17KRH5D
D	9109,9112	LTL17KSL5D
D	9110	LTL17KCBH5D
D	9111	SLR343WBC7T

MISCELLANEOUS

KN	9001	EARTH TERMINAL	AKF7002
S	9001,9002,9004-9006	TACT SWITCH	DSG1089
S	9003,9007,9008,9012	TACT SWITCH	DSG1079
S	9009-9011,9013-9019	TACT SWITCH	DSG1089
S	9020,9021	TACT SWITCH	DSG1117
CN	9201	35P CONNECTOR	VKN2025
CN	9202	15P CONNECTOR	VKN1246
JP	9401,9501	CONNECTOR ASS'Y	PF04PG-Q07
PC	9401,9501	PHOTO INTERRUPTER	KE-2N18-15
VA	9002,9003	VARISTORS	EZJZ1V270RM

RESISTORS

VR	9001	ROTARY VR	DCS1104
VR	9002	SLIDE VR	DCV1033
		Other Resistors	RS1/10SR###J

CAPACITORS

C	9003(10 uF/10 V)	DCH1201
C	9004,9201,9202,9206	CKSRYB104K10
C	9203,9401,9501	CKSRYB105K10
C	9204,9207	CEJQ101M16
C	9208,9209	CCSRCH471J50
C	9210	CKSRYB104K10

Mark	No.	Description	Part No.
	C	9402,9502	CKSRYB103K50

Z SW POWER SUPPLY

There is no service parts.