

EXPLODED VIEW

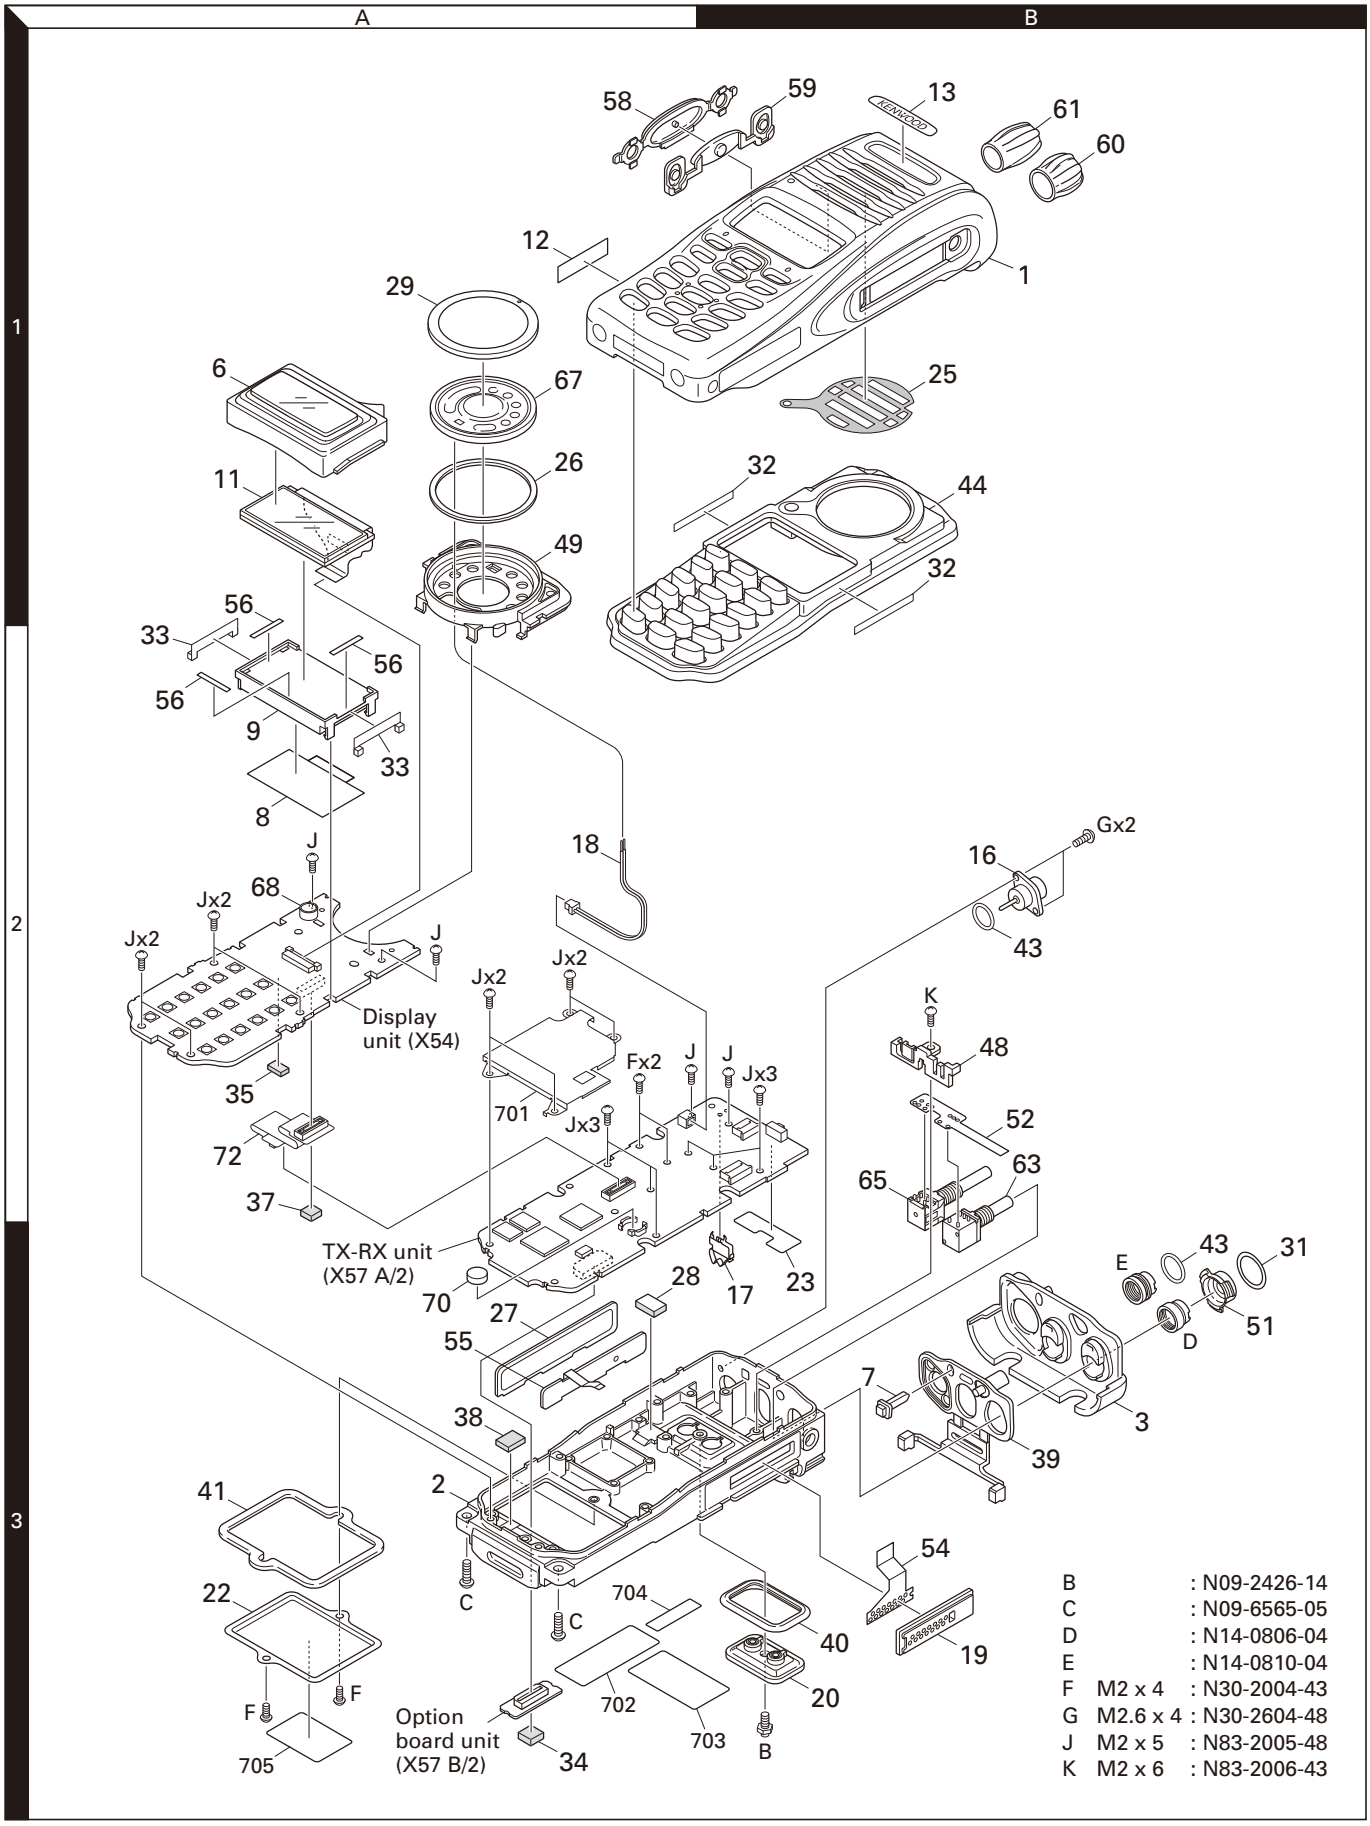

Parts with the exploded numbers larger than 700 are not supplied.

PACKING

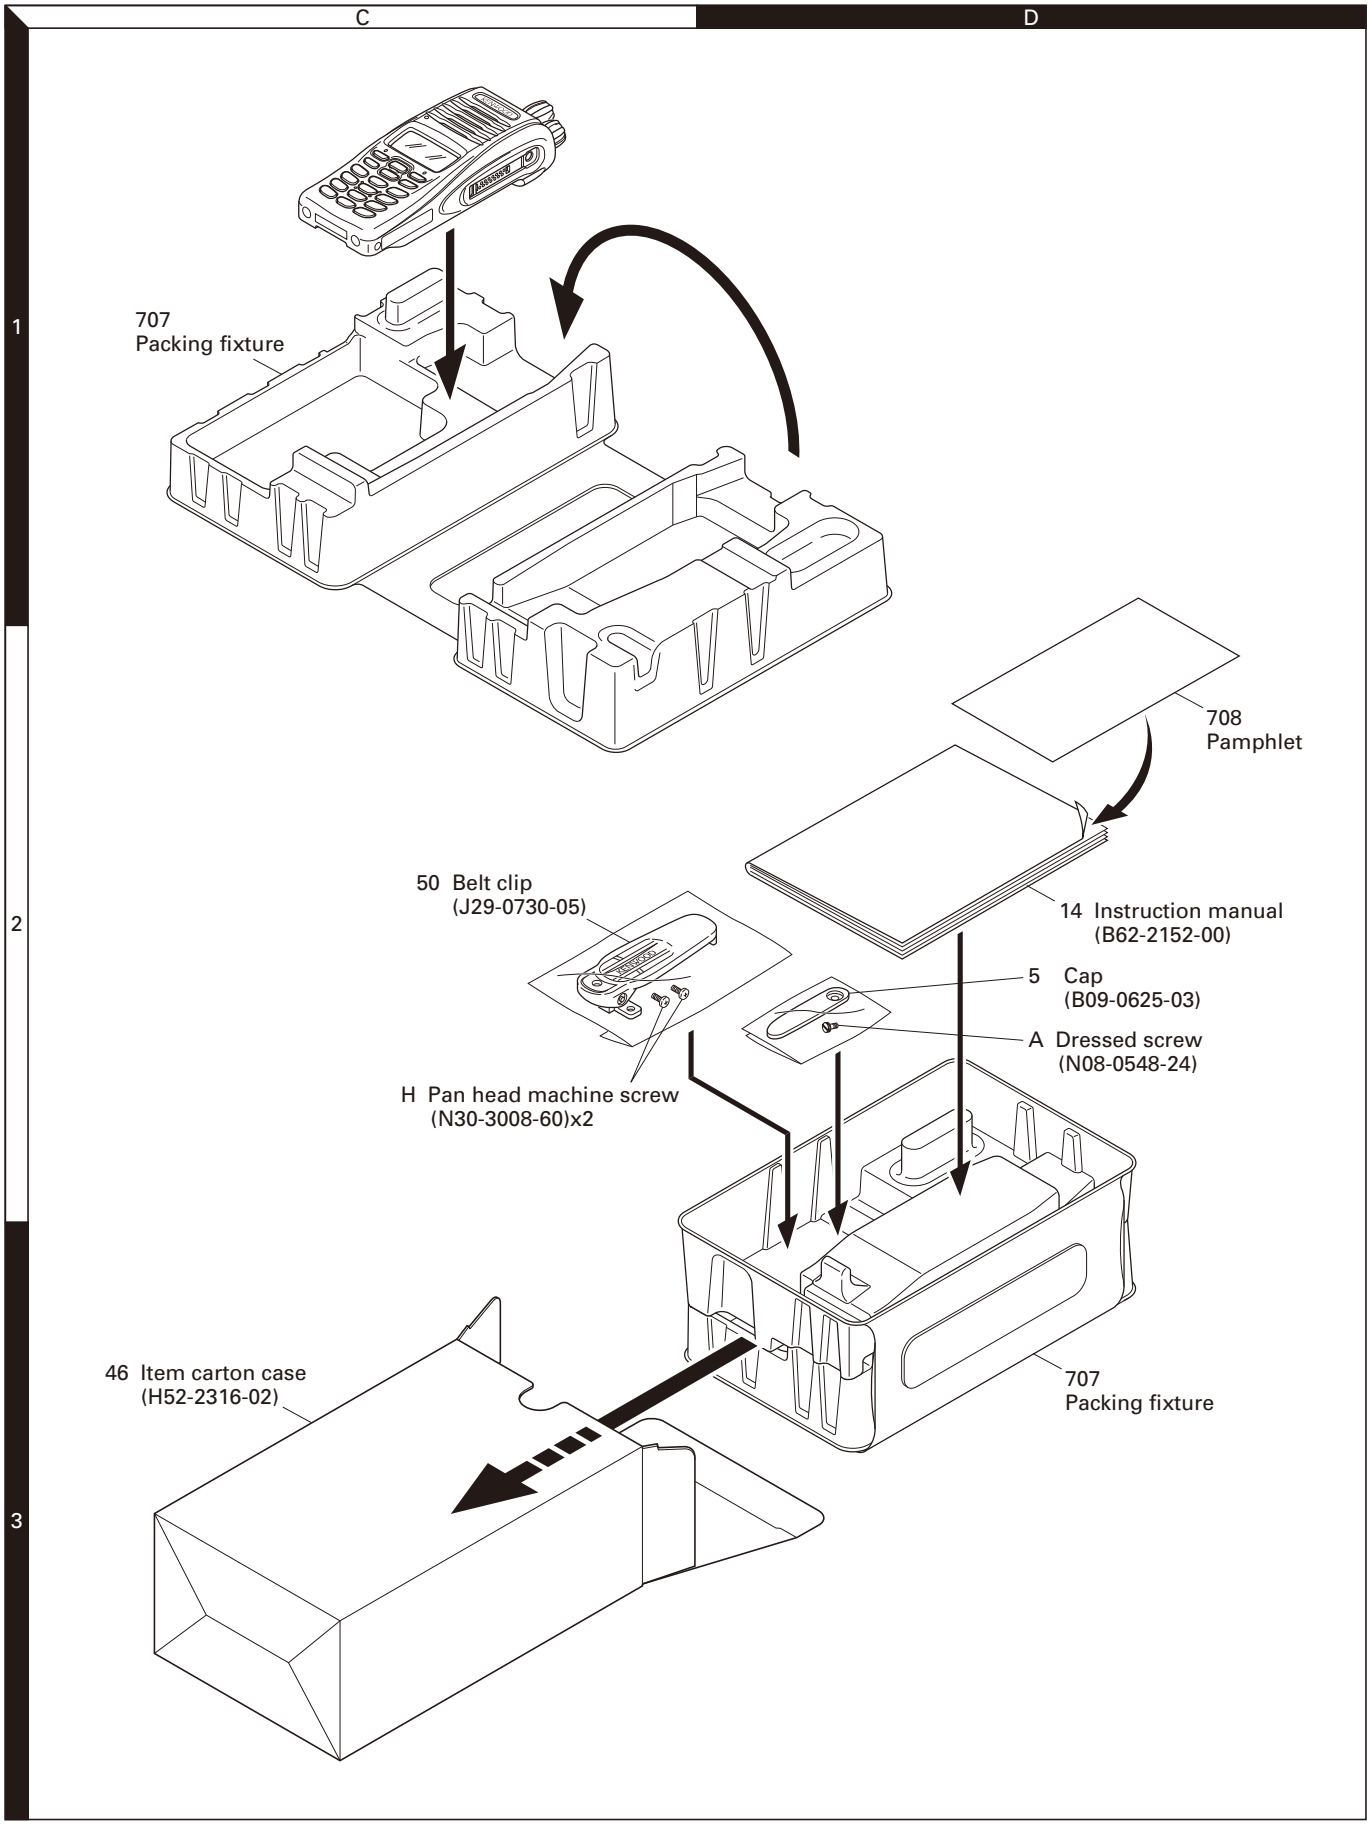

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

✻ New Parts. ⚠indicates safety critical components.
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

L : Scandinavia **K** : USA **P** : Canada
Y : PX (Far East, Hawaii) **T** : England **E** : Europe
Y : AAFES (Europe) **X** : Australia **M** : Other Areas

NX-210 (Y50-6480-10)
DISPLAY UNIT (X54-3660-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination
NX-210					
1	1B	✻	A02-4076-01	MAIN CABINET (18KEY)	
2	3A	✻	A10-4132-03	CHASSIS	
3	3B		A62-1093-12	PANEL (TOP)	
5	2D		B09-0625-03	CAP ACCESSORY	
6	1A	✻	B10-2795-02	FRONT GLASS	
7	3B		B11-1820-04	ILLUMINATION GUIDE (TX/BUSY)	
8	2A		B11-1853-24	FILTER (LCD)	
9	2A		B11-1854-02	ILLUMINATION GUIDE (LCD)	
11	1A		B38-0923-05	LCD ASSY	
12	1A		B42-7296-04	STICKER	
13	1B		B43-1606-04	BADGE	
14	2D	✻	B62-2152-00	INSTRUCTION MANUAL	
16	2B		E04-0416-25	RF COAXIAL RECEPTACLE (SMA)	
17	2B		E23-1104-04	TERMINAL (ANT)	
18	2A	✻	E37-1462-05	LEAD WIRE WITH CONNECTOR (SP)	
19	3B		E58-0511-15	RECTANGULAR RECEPTACLE (SP/MIC)	
20	3B		E72-0419-23	TERMINAL BLOCK	
22	3A		F07-1880-04	COVER (OP BOARD)	
23	3B		F20-3350-04	INSULATING SHEET (TX-RX PCB)	
25	1B	✻	G10-1400-04	FIBROUS SHEET (SP)	
26	1A		G11-4272-14	RUBBER CUSHION (SP)	
27	3A		G11-4273-24	SHEET (PTT)	
28	3A		G11-4308-14	RUBBER SHEET (FET)	
29	1A		G11-4458-14	SHEET (SP)	
31	3B	✻	G11-4493-04	SHEET (VOL-RING)	
32	1B	✻	G11-4494-04	SHEET (18KEY PACKING)	
33	2A	✻	G11-4495-04	SHEET (LCD-HOLDER)	
34	3A		G13-2020-04	CUSHION (OP BOARD)	
35	2A		G13-2068-04	CUSHION (DISPLAY PCB)	
37	2A		G13-2258-04	CUSHION (50PIN FPC)	
38	3A	✻	G13-2288-04	CUSHION (DC-DC)	
39	3B		G53-1600-12	PACKING (TOP)	
40	3B		G53-1601-04	PACKING (TERMINAL BLOCK)	
41	3A		G53-1602-14	PACKING (OP BOARD COVER)	
43	2B,3B		G53-1603-04	PACKING (SMA/SELECTOR O-RING)	
44	1B	✻	G53-1823-11	PACKING (18KEY)	
46	3C	✻	H52-2316-02	ITEM CARTON CASE	
48	2B		J19-5478-03	HOLDER (VOL/SELECTOR)	
49	1A	✻	J19-5529-02	HOLDER (SP)	
50	2C		J29-0730-05	BELT CLIP ACCESSORY	
51	3B		J30-1279-04	SPACER (VOL)	
52	2B		J82-0089-05	FPC (VOL/SELECTOR)	
54	3B		J82-0090-25	FPC (UNIVERSAL)	
55	3A		J82-0091-35	FPC (PTT)	
56	2A		J99-0714-04	ADHESIVE SHEET (LCD)	
58	1A		K29-9302-33	KNOB (PTT)	
59	1B		K29-9303-03	BUTTON KNOB (SIDE)	
60	1B		K29-9304-03	KNOB (VOLUME)	
61	1B		K29-9305-03	KNOB (SELECTOR)	
A	2D		N08-0548-24	DRESSED SCREW ACCESSORY	
B	3B		N09-2426-14	HEXAGON HEAD SCREW (BATT-)	
C	3A		N09-6565-05	PAN HEAD SCREW (CASE/CHASSIS)	
D	3B		N14-0806-04	CIRCULAR NUT (VOL)	
E	3B		N14-0810-04	CIRCULAR NUT (SELECTOR)	
F	2A,3A		N30-2004-43	PAN HEAD MACHINE SCREW (OPB/FET)	
G	2B		N30-2604-48	PAN HEAD MACHINE SCREW (ANT)	
H	2C		N30-3008-60	PAN HEAD MACHINE SCREW (CLIP)	
J	2A,2B		N83-2005-48	PAN HEAD TAPTITE SCREW (PCB)	
K	2B		N83-2006-43	PAN HEAD TAPTITE SCREW (HOLDER)	
63	2B		R31-0652-15	VARIABLE RESISTOR (VOL)	
65	2B		S60-0430-05	ROTARY SWITCH (SELECTOR)	
67	1A		T07-0749-25	SPEAKER	
68	2A		T91-0579-05	MIC ELEMENT	
70	3A		W09-0971-05	LITHIUM CELL	
72	2A		X42-3340-10	CORD ASSY (50PIN FPC)	
DISPLAY UNIT (X54-3660-10)					
D1-10			B30-2215-05	LED	
D15-18			B30-2215-05	LED	
C1			CK73HB1A104K	CHIP C 0.10UF K	
C6-10			CK73GB1E105K	CHIP C 1.0UF K	
C11,12			CK73HB1A104K	CHIP C 0.10UF K	
C14			CC73HCH1H221J	CHIP C 220PF J	
C15			CK73HB1A104K	CHIP C 0.10UF K	
C16,17			CK73HB1H471K	CHIP C 470PF K	
C20-29			CC73HCH1H470J	CHIP C 47PF J	
C33-44			CC73HCH1H470J	CHIP C 47PF J	
C119			CK73HB1A104K	CHIP C 0.10UF K	
C122			CC73HCH1H101J	CHIP C 100PF J	
C123			CS77AP1C2R2M	CHIP TNTL 2.2UF 16WV	
C125			CS77AP1C2R2M	CHIP TNTL 2.2UF 16WV	
C133			CS77AP1C2R2M	CHIP TNTL 2.2UF 16WV	
C135			CK73HB0J105K	CHIP C 1.0UF K	
C136,137			CK73HB1H102K	CHIP C 1000PF K	
C138			CC73HCH1H470J	CHIP C 47PF J	
CN3			E40-6755-05	FLAT CABLE CONNECTOR	
CN8			E40-6421-15	PIN ASSY	
R1,2			RK73HB1J122J	CHIP R 1.2K J 1/16W	
R3-5			RK73HB1J152J	CHIP R 1.5K J 1/16W	
R6-14			RK73HB1J471J	CHIP R 470 J 1/16W	
R15			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R16-23			RK73HB1J103J	CHIP R 10K J 1/16W	
R24			RK73HB1J104J	CHIP R 100K J 1/16W	
R25			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R26,27			RK73HB1J151J	CHIP R 150 J 1/16W	
R112			RK73HB1J123J	CHIP R 12K J 1/16W	
R113			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R115			RK73HB1J104J	CHIP R 100K J 1/16W	
R133			RK73HB1J470J	CHIP R 47 J 1/16W	
R134			RK73HB1J000J	CHIP R 0.0 J 1/16W	

PARTS LIST

DISPLAY UNIT (X54-3660-10)
TX-RX UNIT (X57-7710-10)

Ref. No.	Address	New parts	Parts No.	Description			Destination
S1-18			S70-0509-05	TACT SWITCH			
D11-14			1SS388F	DIODE			
IC102			NJM2130F3-ZB	BI-POLAR IC			
IC105			LM2682MMX	MOS-IC			
TH101			ERTJ0EV104H	THERMISTOR			
TX-RX UNIT (X57-7710-10)							
D214			B30-2278-05	LED (RED/YELLOW)			
C2-5			CC73HCH1H470J	CHIP C	47PF	J	
C106,107			CC73HCH1H101J	CHIP C	100PF	J	
C116			CK73HB1A104K	CHIP C	0.10UF	K	
C118			CK73HB1H102K	CHIP C	1000PF	K	
C121			CK73HB0J105K	CHIP C	1.0UF	K	
C124			CK73HB0J105K	CHIP C	1.0UF	K	
C126			CK73HB1A104K	CHIP C	0.10UF	K	
C127			CK73HB0J105K	CHIP C	1.0UF	K	
C129			CK73HB1A104K	CHIP C	0.10UF	K	
C131,132			CK73HB1A563K	CHIP C	0.056UF	K	
C134			CK73HB1A104K	CHIP C	0.10UF	K	
C142			CC73HCH1H470J	CHIP C	47PF	J	
C201			CC73GCH1H220J	CHIP C	22PF	J	
C202			CK73HB1H471K	CHIP C	470PF	K	
C204,205			CK73HB1H471K	CHIP C	470PF	K	
C206			CK73HB1E682K	CHIP C	6800PF	K	
C207			CK73HB1H471K	CHIP C	470PF	K	
C209,210			CK73HB1H471K	CHIP C	470PF	K	
C212			CK73HB1H471K	CHIP C	470PF	K	
C213			CK73HB0J105K	CHIP C	1.0UF	K	
C214-216			CK73HB1H471K	CHIP C	470PF	K	
C218			CK73GB0J475K	CHIP C	4.7UF	K	
C219,220			CK73HB1A104K	CHIP C	0.10UF	K	
C221,222			CK73HB0J105K	CHIP C	1.0UF	K	
C223			CK73GB1C224K	CHIP C	0.22UF	K	
C224			CK73HB0J105K	CHIP C	1.0UF	K	
C225		✻	CK73GB0J106K	CHIP C	10UF	K	
C226			CK73HB1H471K	CHIP C	470PF	K	
C227		✻	CK73HB1A105K	CHIP C	1.0UF	K	
C228			CK73HB1H102K	CHIP C	1000PF	K	
C229			CS77AP1A100M	CHIP TNTL	10UF	10WV	
C230			CK73FB0J106K	CHIP C	10UF	K	
C231		✻	CK73HB1A105K	CHIP C	1.0UF	K	
C232			CK73GB1E105K	CHIP C	1.0UF	K	
C233			CC73HCH1H221J	CHIP C	220PF	J	
C234			CK73GB1E105K	CHIP C	1.0UF	K	
C235,236			CK73HB1H102K	CHIP C	1000PF	K	
C237			CK73HB1E103K	CHIP C	0.010UF	K	
C238,239			CK73GB1E105K	CHIP C	1.0UF	K	
C240			CK73HB1H102K	CHIP C	1000PF	K	
C241			CK73GB1C224K	CHIP C	0.22UF	K	
C242			CK73HB1H102K	CHIP C	1000PF	K	
C243			CK73FB1E475K	CHIP C	4.7UF	K	
C244,245			CK73GB1C224K	CHIP C	0.22UF	K	
C246			CK73HB1H102K	CHIP C	1000PF	K	
C247			CK73HB1E682K	CHIP C	6800PF	K	
C248			CK73GB1C224K	CHIP C	0.22UF	K	

Ref. No.	Address	New parts	Parts No.	Description			Destination
C249			CK73HB0J105K	CHIP C	1.0UF	K	
C250			CK73HB1H471K	CHIP C	470PF	K	
C252,253			CK73GB1E105K	CHIP C	1.0UF	K	
C254			CK73HB1H102K	CHIP C	1000PF	K	
C255,256			CK73FB0J106K	CHIP C	10UF	K	
C257			CK73GB1E105K	CHIP C	1.0UF	K	
C258			CK73HB1H471K	CHIP C	470PF	K	
C259			CK73GB1E105K	CHIP C	1.0UF	K	
C260			CK73HB0J105K	CHIP C	1.0UF	K	
C261			C92-0765-05	CHIP TNTL	4.7UF	16WV	
C262			CK73HB1A104K	CHIP C	0.10UF	K	
C263			CK73GB1E105K	CHIP C	1.0UF	K	
C264			CC73HCH1E181J	CHIP C	180PF	J	
C265			CK73HB1H471K	CHIP C	470PF	K	
C266			CC73HCH1H220J	CHIP C	22PF	J	
C267,268			CK73HB1H471K	CHIP C	470PF	K	
C269,270			CK73GB1E105K	CHIP C	1.0UF	K	
C271			CC73HCH1H470J	CHIP C	47PF	J	
C272			CK73GB1E105K	CHIP C	1.0UF	K	
C273			CK73HB0J105K	CHIP C	1.0UF	K	
C301,302			CC73HCH1H470J	CHIP C	47PF	J	
C305			CC73HCH1H470J	CHIP C	47PF	J	
C314-316			CC73HCH1H470J	CHIP C	47PF	J	
C318-327			CC73HCH1H470J	CHIP C	47PF	J	
C328-331			CK73HB1A104K	CHIP C	0.10UF	K	
C332			CK73HB0J105K	CHIP C	1.0UF	K	
C333			CK73HB1E103K	CHIP C	0.010UF	K	
C334			CK73HB1A104K	CHIP C	0.10UF	K	
C335,336			CK73HB1H102K	CHIP C	1000PF	K	
C337-341			CK73HB1A104K	CHIP C	0.10UF	K	
C342			CK73HB0J105K	CHIP C	1.0UF	K	
C343			CK73HB1A104K	CHIP C	0.10UF	K	
C344			CK73HB0J105K	CHIP C	1.0UF	K	
C345			CK73HB1A104K	CHIP C	0.10UF	K	
C346			CC73HCH1H220J	CHIP C	22PF	J	
C347,348			CK73HB1E103K	CHIP C	0.010UF	K	
C349			CK73HB1A104K	CHIP C	0.10UF	K	
C350			CK73HB1E103K	CHIP C	0.010UF	K	
C353			CK73HB1H102K	CHIP C	1000PF	K	
C355			CK73HB1A104K	CHIP C	0.10UF	K	
C356			CK73HB1E682K	CHIP C	6800PF	K	
C357			CK73HB1E103K	CHIP C	0.010UF	K	
C359			CK73HB1A104K	CHIP C	0.10UF	K	
C360			CS77CP0J100M	CHIP TNTL	10UF	6.3WV	
C361			CK73HB0J105K	CHIP C	1.0UF	K	
C362			CK73HB1E103K	CHIP C	0.010UF	K	
C363			CK73HB1H102K	CHIP C	1000PF	K	
C364			CK73HB1E103K	CHIP C	0.010UF	K	
C365			CK73GB1E105K	CHIP C	1.0UF	K	
C366,367			CK73HB1A104K	CHIP C	0.10UF	K	
C368			CK73HB1E682K	CHIP C	6800PF	K	
C369			CK73HB1A104K	CHIP C	0.10UF	K	
C370			CS77CP0J100M	CHIP TNTL	10UF	6.3WV	
C371			CC73HCH1H101J	CHIP C	100PF	J	
C372			CC73HCH1H030C	CHIP C	3.0PF	C	
C373			CK73HB1A104K	CHIP C	0.10UF	K	
C374			CK73HB1E103K	CHIP C	0.010UF	K	
C375			CK73GB1E105K	CHIP C	1.0UF	K	
C376-379			CK73HB1A104K	CHIP C	0.10UF	K	
C380			CK73HB1E103K	CHIP C	0.010UF	K	

PARTS LIST

TX-RX UNIT (X57-7710-10)

Ref. No.	Address	New parts	Parts No.	Description			Destination
C381			CK73GB1E105K	CHIP C	1.0UF	K	
C382-386			CK73HB1A104K	CHIP C	0.10UF	K	
C387			CK73HB1E103K	CHIP C	0.010UF	K	
C389			CK73GB0J475K	CHIP C	4.7UF	K	
C390,391			CK73HB1H102K	CHIP C	1000PF	K	
C392			CK73HB1E103K	CHIP C	0.010UF	K	
C393			CK73HB1H102K	CHIP C	1000PF	K	
C501			CK73HB1A104K	CHIP C	0.10UF	K	
C502			CK73HB1H471K	CHIP C	470PF	K	
C503,504			CC73HCH1H101J	CHIP C	100PF	J	
C505			CK73HB1A104K	CHIP C	0.10UF	K	
C506			CK73HB1C103K	CHIP C	0.010UF	K	
C507			CC73HCH1H100B	CHIP C	10PF	B	
C508			CK73HB1C103K	CHIP C	0.010UF	K	
C509			CC73HCH1H100B	CHIP C	10PF	B	
C510			CK73FB0J106K	CHIP C	10UF	K	
C511			CK73HB1C103K	CHIP C	0.010UF	K	
C512			CC73HCH1H101J	CHIP C	100PF	J	
C514			CK73HB1C103K	CHIP C	0.010UF	K	
C515			CC73HCH1H101J	CHIP C	100PF	J	
C516			CK73GB1E105K	CHIP C	1.0UF	K	
C517-522			CC73HCH1H101J	CHIP C	100PF	J	
C523			CK73HB1A104K	CHIP C	0.10UF	K	
C524			CC73HCH1H101J	CHIP C	100PF	J	
C525			CK73HB1A104K	CHIP C	0.10UF	K	
C526			CC73HCH1H101J	CHIP C	100PF	J	
C527			CK73HB1E682K	CHIP C	6800PF	K	
C528,529			CC73HCH1H101J	CHIP C	100PF	J	
C530			CK73HB1H471K	CHIP C	470PF	K	
C531			CC73HCH1H101J	CHIP C	100PF	J	
C532			CS77AA1VR15M	CHIP TNTL	0.15UF	35WV	
C533			C93-0787-05	CERAMIC	0.1UF	50WV	
C535			CS77BA1D100M	CHIP TNTL	10UF	20WV	
C538			C92-0863-05	CHIP TNTL	0.047UF	35WV	
C539			CK73HB1H472K	CHIP C	4700PF	K	
C540			CC73HCH1H470J	CHIP C	47PF	J	
C541			CK73HB0J105K	CHIP C	1.0UF	K	
C542			CK73HB1H102K	CHIP C	1000PF	K	
C543,544			CC73HCH1H101J	CHIP C	100PF	J	
C545			CK73HB0J105K	CHIP C	1.0UF	K	
C546			CK73HB1A104K	CHIP C	0.10UF	K	
C547,548			CK73HB1H471K	CHIP C	470PF	K	
C549			CC73HCH1H101J	CHIP C	100PF	J	
C550,551			CK73HB1H471K	CHIP C	470PF	K	
C552			CC73HCH1H070B	CHIP C	7.0PF	B	
C553			CK73HB1A104K	CHIP C	0.10UF	K	
C554			CC73HCH1H220G	CHIP C	22PF	G	
C555			CK73HB1C103K	CHIP C	0.010UF	K	
C556			CC73HCH1H030B	CHIP C	3.0PF	B	
C557			CC73HCH1H270J	CHIP C	27PF	J	
C558			CC73HCH1H470J	CHIP C	47PF	J	
C559			CK73HB1A104K	CHIP C	0.10UF	K	
C560,561			CC73HCH1H030B	CHIP C	3.0PF	B	
C562			CK73FB0J106K	CHIP C	10UF	K	
C563			CC73HCH1H100B	CHIP C	10PF	B	
C564			CK73HB1A104K	CHIP C	0.10UF	K	
C566			CC73HCH1H680J	CHIP C	68PF	J	
C567			CK73HB1H471K	CHIP C	470PF	K	
C568-570			CK73HB1A104K	CHIP C	0.10UF	K	
C572			CC73HCH1H180G	CHIP C	18PF	G	

Ref. No.	Address	New parts	Parts No.	Description			Destination
C573			CK73HB1H471K	CHIP C	470PF	K	
C574			CC73HCH1HR75B	CHIP C	0.75PF	B	
C575			CK73FB0J106K	CHIP C	10UF	K	
C576			CC73HCH1H101J	CHIP C	100PF	J	
C577			CC73HCH1H180G	CHIP C	18PF	G	
C578			CC73HCH1H080B	CHIP C	8.0PF	B	
C579			CC73HCH1H100B	CHIP C	10PF	B	
C580			CC73HCH1H680J	CHIP C	68PF	J	
C581,582			CC73HCH1H100B	CHIP C	10PF	B	
C583			CK73GB0J475K	CHIP C	4.7UF	K	
C584			CC73HCH1H1R5B	CHIP C	1.5PF	B	
C585			CC73HCH1H100B	CHIP C	10PF	B	
C586			CK73HB1H471K	CHIP C	470PF	K	
C587			CK73GB1H103K	CHIP C	0.010UF	K	
C588			CK73GB1H102K	CHIP C	1000PF	K	
C589			CC73HCH1H820J	CHIP C	82PF	J	
C590			CC73HCH1H020B	CHIP C	2.0PF	B	
C591			CC73HCH1H180G	CHIP C	18PF	G	
C592			CK73HB1H471K	CHIP C	470PF	K	
C593,594			CC73HCH1H0R5B	CHIP C	0.5PF	B	
C595-597			CK73HB1A104K	CHIP C	0.10UF	K	
C598			CC73HCH1H100B	CHIP C	10PF	B	
C599			CK73HB1H471K	CHIP C	470PF	K	
C600			CK73FB0J106K	CHIP C	10UF	K	
C601-603			CK73HB1H471K	CHIP C	470PF	K	
C604			CK73HB1A104K	CHIP C	0.10UF	K	
C605			CK73HB1C103K	CHIP C	0.010UF	K	
C606			CK73HB1H102K	CHIP C	1000PF	K	
C607			CK73HB1C103K	CHIP C	0.010UF	K	
C608			CK73HB1A104K	CHIP C	0.10UF	K	
C609			CK73HB1H471K	CHIP C	470PF	K	
C611			CK73HB1H102K	CHIP C	1000PF	K	
C612			CC73HCH1H100B	CHIP C	10PF	B	
C613			CK73HB1H102K	CHIP C	1000PF	K	
C614-616			CK73HB1A104K	CHIP C	0.10UF	K	
C617			CC73HCH1H050B	CHIP C	5.0PF	B	
C618			CC73HCH1H100B	CHIP C	10PF	B	
C619			CK73HB1A104K	CHIP C	0.10UF	K	
C620			CK73HB1H471K	CHIP C	470PF	K	
C621			CK73FB1E474K	CHIP C	0.47UF	K	
C622			CK73HB1C103K	CHIP C	0.010UF	K	
C623			CK73HB1H102K	CHIP C	1000PF	K	
C625			CK73HB1H102K	CHIP C	1000PF	K	
C626			CK73HB1H471K	CHIP C	470PF	K	
C627			CK73HB1C103K	CHIP C	0.010UF	K	
C628			CC73HCH1H470G	CHIP C	47PF	G	
C629			CK73HB1A104K	CHIP C	0.10UF	K	
C630,631			CK73HB1C103K	CHIP C	0.010UF	K	
C633			CC73HCH1H100B	CHIP C	10PF	B	
C635			CC73HCH1H050B	CHIP C	5.0PF	B	
C636			CC73HCH1H220G	CHIP C	22PF	G	
C637			CC73HCH1H060B	CHIP C	6.0PF	B	
C638			CK73HB1C103K	CHIP C	0.010UF	K	
C639			CK73HB1H102K	CHIP C	1000PF	K	
C640			CC73HCH1H470G	CHIP C	47PF	G	
C641			CK73HB1H102K	CHIP C	1000PF	K	
C642			CC73HCH1H270J	CHIP C	27PF	J	
C643			CK73HB1C103K	CHIP C	0.010UF	K	
C644			CC73HCH1H270J	CHIP C	27PF	J	
C645			CK73FB1A475K	CHIP C	4.7UF	K	

PARTS LIST

TX-RX UNIT (X57-7710-10)

Ref. No.	Address	New parts	Parts No.	Description			Destination
C646			CK73HB1C103K	CHIP C	0.010UF	K	
C647,648			CK73HB1H102K	CHIP C	1000PF	K	
C649			CC73HCH1H560J	CHIP C	56PF	J	
C650			CK73HB1H471K	CHIP C	470PF	K	
C651			CC73HCH1H120G	CHIP C	12PF	G	
C652			CC73HCH1H100B	CHIP C	10PF	B	
C653			CC73HCH1H050B	CHIP C	5.0PF	B	
C655			CK73HB1A104K	CHIP C	0.10UF	K	
C656			CK73HB1H471K	CHIP C	470PF	K	
C657			CC73HCH1H220G	CHIP C	22PF	G	
C658			CK73HB1H102K	CHIP C	1000PF	K	
C659			CC73HCH1H030B	CHIP C	3.0PF	B	
C660			CK73HB1C103K	CHIP C	0.010UF	K	
C661-663			CK73HB1H102K	CHIP C	1000PF	K	
C664			CC73HCH1H100B	CHIP C	10PF	B	
C665			CK73HB1A104K	CHIP C	0.10UF	K	
C666			CC73HCH1H040B	CHIP C	4.0PF	B	
C667			CK73HB1H102K	CHIP C	1000PF	K	
C668			CC73HCH1H270J	CHIP C	27PF	J	
C669			CK73HB1H102K	CHIP C	1000PF	K	
C670			CC73HCH1H070B	CHIP C	7.0PF	B	
C671			CC73HCH1H220J	CHIP C	22PF	J	
C678			CK73HB1H102K	CHIP C	1000PF	K	
C679			CK73HB1H471K	CHIP C	470PF	K	
C681			CC73HCH1H220J	CHIP C	22PF	J	
C682			CC73HCH1H100B	CHIP C	10PF	B	
C683			CK73HB1H102K	CHIP C	1000PF	K	
C684			CC73HCH1H040B	CHIP C	4.0PF	B	
C685			CC73HCH1H390J	CHIP C	39PF	J	
C686			CK73GB1E105K	CHIP C	1.0UF	K	
C687			CK73HB1H102K	CHIP C	1000PF	K	
C688			CC73HCH1H470J	CHIP C	47PF	J	
C690			CK73HB1H471K	CHIP C	470PF	K	
C691			CK73HB1A104K	CHIP C	0.10UF	K	
C692			CK73HB1H102K	CHIP C	1000PF	K	
C693			CK73GB1H104K	CHIP C	0.10UF	K	
C695			CC73HCH1H1R5B	CHIP C	1.5PF	B	
C696			CC73HCH1H470J	CHIP C	47PF	J	
C698			CC73HCH1H270J	CHIP C	27PF	J	
C700			CK73HB1H471K	CHIP C	470PF	K	
C701			CS77AA1A6R8M	CHIP TNTL	6.8UF	10WV	
C702			CK73HB1H102K	CHIP C	1000PF	K	
C703			CC73HCH1H020B	CHIP C	2.0PF	B	
C704			CK73HB1H102K	CHIP C	1000PF	K	
C706			CK73HB1C103K	CHIP C	0.010UF	K	
C707			CC73HCH1H330J	CHIP C	33PF	J	
C710			CC73GCH1H151J	CHIP C	150PF	J	
C712,713			CK73HB1H471K	CHIP C	470PF	K	
C714			CK73HB1H102K	CHIP C	1000PF	K	
C716			CK73HB1H102K	CHIP C	1000PF	K	
C717			CK73HB1C103K	CHIP C	0.010UF	K	
C718			CK73GB1E105K	CHIP C	1.0UF	K	
C719,720			CK73HB1H102K	CHIP C	1000PF	K	
C721			CK73GB1C104K	CHIP C	0.10UF	K	
C722			CK73GB1E105K	CHIP C	1.0UF	K	
C725			CK73HB1C103K	CHIP C	0.010UF	K	
C727			CK73HB1H471K	CHIP C	470PF	K	
C729			CK73GB1H104K	CHIP C	0.10UF	K	
C731			CK73GB1H104K	CHIP C	0.10UF	K	
C734			CC73HCH1H101J	CHIP C	100PF	J	

Ref. No.	Address	New parts	Parts No.	Description			Destination
C735			CK73HB1H102K	CHIP C	1000PF	K	
C736			CC73GCH1H220G	CHIP C	22PF	G	
C741			CC73GCH1H070B	CHIP C	7.0PF	B	
C742			CC73HCH1H330J	CHIP C	33PF	J	
C743			CC73HCH1H100B	CHIP C	10PF	B	
C744			CC73GCH1H680G	CHIP C	68PF	G	
C745			CC73HCH1H030B	CHIP C	3.0PF	B	
C748			CK73HB1H471K	CHIP C	470PF	K	
C749			CC73HCH1H180J	CHIP C	18PF	J	
C750			CC73GCH1H220G	CHIP C	22PF	G	
C751			CC73HCH1H101J	CHIP C	100PF	J	
C753			CC73HCH1H020B	CHIP C	2.0PF	B	
C754			CC73HCH1H100B	CHIP C	10PF	B	
C755			CK73HB1H471K	CHIP C	470PF	K	
C756			CK73HB1H102K	CHIP C	1000PF	K	
C758		*	CC73GCH1H820G	CHIP C	82PF	G	
C759			CC73GCH1H050B	CHIP C	5.0PF	B	
C763			CC73GCH1H060B	CHIP C	6.0PF	B	
C764			CC73HCH1H180J	CHIP C	18PF	J	
C766			CC73GCH1H100C	CHIP C	10PF	C	
C767			CC73GCH1H090B	CHIP C	9.0PF	B	
C768			CC73GCH1H180G	CHIP C	18PF	G	
C769			CC73HCH1H120J	CHIP C	12PF	J	
C772			CC73HCH1H080B	CHIP C	8.0PF	B	
C773			CC73GCH1H150G	CHIP C	15PF	G	
C774			CC73GCH1H020B	CHIP C	2.0PF	B	
C775			CC73HCH1H180J	CHIP C	18PF	J	
C776			CC73HCH1H390J	CHIP C	39PF	J	
C778			CC73HCH1H120J	CHIP C	12PF	J	
C779			CC73GCH1H270G	CHIP C	27PF	G	
C780			CC73GCH1H100C	CHIP C	10PF	C	
C781			CC73GCH1H470G	CHIP C	47PF	G	
C782			CC73GCH1H330G	CHIP C	33PF	G	
C801			CK73HB1A104K	CHIP C	0.10UF	K	
C802			CK73HB0J105K	CHIP C	1.0UF	K	
C803-806			CK73HB1A104K	CHIP C	0.10UF	K	
C807,808			CK73HB1E103K	CHIP C	0.010UF	K	
C809			CK73HB1H122K	CHIP C	1200PF	K	
C810			CK73HB1H152K	CHIP C	1500PF	K	
C811			CK73HB1A104K	CHIP C	0.10UF	K	
C812-814			CK73HB1E103K	CHIP C	0.010UF	K	
C815			CK73HB1H152K	CHIP C	1500PF	K	
C816,817			CK73HB1A104K	CHIP C	0.10UF	K	
C818			CC73HCH1E181J	CHIP C	180PF	J	
C819			CK73HB1E103K	CHIP C	0.010UF	K	
C820			CK73HB1H331K	CHIP C	330PF	K	
C821			CK73HB1A104K	CHIP C	0.10UF	K	
C823			CK73HB1H331K	CHIP C	330PF	K	
C824			CK73HB1H122K	CHIP C	1200PF	K	
C825,826			CK73HB1E103K	CHIP C	0.010UF	K	
C827			CK73HB1A104K	CHIP C	0.10UF	K	
C828			CK73HB1H102K	CHIP C	1000PF	K	
C829			CK73HB1A104K	CHIP C	0.10UF	K	
C830			CK73HB1H102K	CHIP C	1000PF	K	
C832			CK73HB1E682K	CHIP C	6800PF	K	
C833			CK73HB0J105K	CHIP C	1.0UF	K	
C834-836			CK73HB1E103K	CHIP C	0.010UF	K	
C837,838			CK73HB1A104K	CHIP C	0.10UF	K	
C839,840			CC73HCH1H470J	CHIP C	47PF	J	
C842			CK73HB1A104K	CHIP C	0.10UF	K	

PARTS LIST

TX-RX UNIT (X57-7710-10)

Ref. No.	Address	New parts	Parts No.	Description			Destination
C843,844			CK73GB0J475K	CHIP C	4.7UF	K	
C845			CK73HB1E103K	CHIP C	0.010UF	K	
C846			CC73HCH1H100B	CHIP C	10PF	B	
C847			CK73HB1A104K	CHIP C	0.10UF	K	
C848			CC73HCH1H680J	CHIP C	68PF	J	
C849			CC73HCH1H270J	CHIP C	27PF	J	
C850			CK73HB1H332K	CHIP C	3300PF	K	
C851			CK73HB1H681K	CHIP C	680PF	K	
C852			CK73HB1E103K	CHIP C	0.010UF	K	
C853-855			CK73HB1A104K	CHIP C	0.10UF	K	
C856			CK73HB1C223K	CHIP C	0.022UF	K	
C859			CK73HB1A104K	CHIP C	0.10UF	K	
C860			CK73HB1E103K	CHIP C	0.010UF	K	
C863			CC73HCH1H470J	CHIP C	47PF	J	
C865			CK73HB1H102K	CHIP C	1000PF	K	
C866			CK73HB0J105K	CHIP C	1.0UF	K	
C867			CK73HB1E103K	CHIP C	0.010UF	K	
C868,869			CK73HB0J105K	CHIP C	1.0UF	K	
C870			CK73HB1H102K	CHIP C	1000PF	K	
C872			CK73HB1A224K	CHIP C	0.22UF	K	
C873			CC73HCH1H470J	CHIP C	47PF	J	
C874			CK73HB1E103K	CHIP C	0.010UF	K	
C875			CK73HB1H102K	CHIP C	1000PF	K	
C876			CK73HB1E103K	CHIP C	0.010UF	K	
C877			CK73HB0J105K	CHIP C	1.0UF	K	
C878			CC73HCH1H150J	CHIP C	15PF	J	
C879			CC73HCH1H680J	CHIP C	68PF	J	
C880			CC73HCH1H100B	CHIP C	10PF	B	
C881,882			CC73HCH1H101J	CHIP C	100PF	J	
C883			CK73HB1A104K	CHIP C	0.10UF	K	
C884			CC73HCH1H470J	CHIP C	47PF	J	
C886			CK73HB1A104K	CHIP C	0.10UF	K	
C887			CK73HB1A393K	CHIP C	0.039UF	K	
C888			CK73HB0J105K	CHIP C	1.0UF	K	
C889,890			CK73HB1A104K	CHIP C	0.10UF	K	
C891,892			CK73HB1E103K	CHIP C	0.010UF	K	
C893			CK73HB1H102K	CHIP C	1000PF	K	
C894			CK73HB1E103K	CHIP C	0.010UF	K	
C896,897			CK73HB1A104K	CHIP C	0.10UF	K	
C898			CK73HB1H102K	CHIP C	1000PF	K	
C899			CK73HB1E103K	CHIP C	0.010UF	K	
C900			CK73HB1A224K	CHIP C	0.22UF	K	
C901			CK73HB0J105K	CHIP C	1.0UF	K	
C902			CS77AP1A100M	CHIP TNTL	10UF	10WV	
C903			CK73HB1A104K	CHIP C	0.10UF	K	
C904			CK73HB1H471K	CHIP C	470PF	K	
C905			CK73HB1A104K	CHIP C	0.10UF	K	
C906			CK73HB1A563K	CHIP C	0.056UF	K	
C907			CK73HB1A224K	CHIP C	0.22UF	K	
C908			CK73HB1A104K	CHIP C	0.10UF	K	
C909			CK73HB1A563K	CHIP C	0.056UF	K	
C910			CK73HB1H102K	CHIP C	1000PF	K	
C911			CK73HB0J105K	CHIP C	1.0UF	K	
C912			CK73GB1E105K	CHIP C	1.0UF	K	
C913			CK73HB1E103K	CHIP C	0.010UF	K	
C914			CK73GB1E105K	CHIP C	1.0UF	K	
C915,916			CK73HB1E103K	CHIP C	0.010UF	K	
C917			CK73HB1H102K	CHIP C	1000PF	K	
C918			CC73HCH1H470J	CHIP C	47PF	J	
C919			CK73HB1H102K	CHIP C	1000PF	K	

Ref. No.	Address	New parts	Parts No.	Description			Destination
C920			CC73HCH1H101J	CHIP C	100PF	J	
C921			CK73HB1H102K	CHIP C	1000PF	K	
C922			CC73HCH1H101J	CHIP C	100PF	J	
C923			CK73HB1H102K	CHIP C	1000PF	K	
C924-927			CC73HCH1H101J	CHIP C	100PF	J	
C928			CK73HB1E682K	CHIP C	6800PF	K	
C929,930			CC73HCH1H101J	CHIP C	100PF	J	
C931,932			CK73HB1H102K	CHIP C	1000PF	K	
C933			CK73HB1E103K	CHIP C	0.010UF	K	
CN201			E40-6452-05	FLAT CABLE CONNECTOR			
CN202			E23-1263-05	TERMINAL			
CN313			E40-6586-05	SOCKET FOR PIN ASSY			
CN336			E40-6389-05	PIN ASSY			
CN337			E40-6422-15	SOCKET FOR PIN ASSY			
CN505			E23-1262-05	TERMINAL			
CN804			E40-6453-05	FLAT CABLE CONNECTOR			
CN805			E41-1486-05	PIN ASSY			
CN806		✻	E40-6853-05	FLAT CABLE CONNECTOR			
CN923			E40-6358-05	SOCKET FOR PIN ASSY			
F201			F53-0324-05	FUSE (2.5A)			
F301			F53-0360-05	FUSE (0.25A)			
CN203			J19-5386-05	HOLDER (LITHIUM CELL)			
CF501			L72-1017-05	CERAMIC FILTER			
CF502		✻	L72-1040-05	CERAMIC FILTER			
L101,102			L92-0408-05	CHIP FERRITE			
L103			L92-0162-05	BEADS CORE			
L201,202			L92-0444-05	CHIP FERRITE			
L203			L92-0408-05	CHIP FERRITE			
L204			L92-0149-05	CHIP FERRITE			
L205			L33-1494-05	SMALL FIXED INDUCTOR			
L206			L92-0466-05	CHIP FERRITE			
L207,208			L92-0162-05	BEADS CORE			
L209			L92-0467-05	CHIP FERRITE			
L211			L92-0408-05	CHIP FERRITE			
L212			L92-0467-05	CHIP FERRITE			
L213		✻	L33-1530-05	SMALL FIXED INDUCTOR			
L214,215			L92-0467-05	CHIP FERRITE			
L216			L33-1462-05	SMALL FIXED INDUCTOR			
L217			L92-0408-05	CHIP FERRITE			
L301-303			L92-0444-05	CHIP FERRITE			
L304,305			L92-0162-05	BEADS CORE			
L306			L92-0444-05	CHIP FERRITE			
L307			L92-0163-05	BEADS CORE			
L308			L92-0444-05	CHIP FERRITE			
L309			L92-0140-05	CHIP FERRITE			
L310,311			L92-0162-05	BEADS CORE			
L501			L41-4795-39	SMALL FIXED INDUCTOR (4.7UH)			
L502-504			L92-0163-05	BEADS CORE			
L505			L40-1891-86	SMALL FIXED INDUCTOR (1.8UH)			
L506			L40-3391-86	SMALL FIXED INDUCTOR (3.3UH)			
L509-512			L40-2285-92	SMALL FIXED INDUCTOR (220NH)			
L513			L40-1575-92	SMALL FIXED INDUCTOR (15NH)			
L514			L40-5681-86	SMALL FIXED INDUCTOR (0.56UH)			
L515			L40-2285-92	SMALL FIXED INDUCTOR (220NH)			
L516			L40-1285-92	SMALL FIXED INDUCTOR (120NH)			
L517			L40-8275-92	SMALL FIXED INDUCTOR (82NH)			
L518			L40-5678-67	SMALL FIXED INDUCTOR (56NH)			
L519			L40-2778-67	SMALL FIXED INDUCTOR (27NH)			

PARTS LIST

TX-RX UNIT (X57-7710-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination
L520			L92-0446-05	BEADS CORE	
L521			L41-4778-45	SMALL FIXED INDUCTOR (47NH)	
L522			L40-6865-92	SMALL FIXED INDUCTOR (6.8NH)	
L523			L40-1878-92	SMALL FIXED INDUCTOR (18NH)	
L524,525			L40-3391-86	SMALL FIXED INDUCTOR (3.3UH)	
L526			L40-1085-57	SMALL FIXED INDUCTOR (100NH)	
L527			L40-8275-92	SMALL FIXED INDUCTOR (82NH)	
L528			L40-6865-92	SMALL FIXED INDUCTOR (6.8NH)	
L529			L40-1285-71	SMALL FIXED INDUCTOR (120NH)	
L530			L40-3975-92	SMALL FIXED INDUCTOR (39NH)	
L531			L40-1891-86	SMALL FIXED INDUCTOR (1.8UH)	
L532			L92-0138-05	CHIP FERRITE	
L533			L40-1285-92	SMALL FIXED INDUCTOR (120NH)	
L534			L40-2702-86	SMALL FIXED INDUCTOR (27UH)	
L535			L92-0138-05	CHIP FERRITE	
L536			L40-6875-92	SMALL FIXED INDUCTOR (68NH)	
L537			L41-2785-39	SMALL FIXED INDUCTOR (0.27UH)	
L538			L41-5685-39	SMALL FIXED INDUCTOR (0.56UH)	
L539,540			L40-3375-92	SMALL FIXED INDUCTOR (33NH)	
L541			L40-1085-92	SMALL FIXED INDUCTOR (100NH)	
L542			L92-0138-05	CHIP FERRITE	
L543			L40-1085-92	SMALL FIXED INDUCTOR (100NH)	
L544			L41-2285-14	SMALL FIXED INDUCTOR (220NH)	
L545			L40-3975-92	SMALL FIXED INDUCTOR (39NH)	
L546			L41-6878-14	SMALL FIXED INDUCTOR (68NH)	
L548			L41-1085-43	SMALL FIXED INDUCTOR (100NH)	
L549			L92-0149-05	CHIP FERRITE	
L550			L40-3375-92	SMALL FIXED INDUCTOR (33NH)	
L551			L92-0138-05	CHIP FERRITE	
L553			L41-6878-14	SMALL FIXED INDUCTOR (68NH)	
L554			L34-4576-05	AIR-CORE COIL	
L555			L92-0149-05	CHIP FERRITE	
L556			L34-4563-05	AIR-CORE COIL	
L557			L34-4564-05	AIR-CORE COIL	
L558			L34-4565-05	AIR-CORE COIL	
L559			L41-6878-14	SMALL FIXED INDUCTOR (68NH)	
L560			L41-2295-39	SMALL FIXED INDUCTOR (2.2UH)	
L561			L34-4577-05	AIR-CORE COIL	
L562,563			L34-4568-05	AIR-CORE COIL	
L564			L41-6878-14	SMALL FIXED INDUCTOR (68NH)	
L565			L34-4566-05	AIR-CORE COIL	
L566			L40-5675-92	SMALL FIXED INDUCTOR (56NH)	
L801			L92-0408-05	CHIP FERRITE	
L802			L92-0140-05	CHIP FERRITE	
L803-806			L92-0408-05	CHIP FERRITE	
L807			L92-0140-05	CHIP FERRITE	
X301			L77-1802-05	CRYSTAL RESONATOR (32768HZ)	
X302			L77-3015-05	TCXO (18.432MHZ)	
X501			L77-3014-05	TCXO (19.2MHZ)	
XF501			L71-0640-05	MCF (58.05MHZ)	
R117,118			RK73HB1J103J	CHIP R 10K J 1/16W	
R119,120			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R121,122			RK73HH1J104D	CHIP R 100K D 1/16W	
R123			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R124			RK73HB1J331J	CHIP R 330 J 1/16W	
R125,126			RK73HH1J223D	CHIP R 22K D 1/16W	
R128			RK73HB1J331J	CHIP R 330 J 1/16W	
R129			RK73HB1J333J	CHIP R 33K J 1/16W	
R130			RK73HB1J474J	CHIP R 470K J 1/16W	

Ref. No.	Address	New parts	Parts No.	Description	Destination
R131			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R132			RK73HB1J223J	CHIP R 22K J 1/16W	
R134			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R201			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R202			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R203			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R204			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R205-208			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R210,211			RK73HB1J683J	CHIP R 68K J 1/16W	
R212			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R213			RK73HB1J100J	CHIP R 10 J 1/16W	
R216			RK73HH1J683D	CHIP R 68K D 1/16W	
R217			RK73HH1J333D	CHIP R 33K D 1/16W	
R218			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R219			RK73HB1J474J	CHIP R 470K J 1/16W	
R220			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R221			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R222			RK73HB1J474J	CHIP R 470K J 1/16W	
R224			RK73HB1J474J	CHIP R 470K J 1/16W	
R226			RK73HB1J471J	CHIP R 470 J 1/16W	
R227-230			RK73HB1J104J	CHIP R 100K J 1/16W	
R231			RK73HB1J564J	CHIP R 560K J 1/16W	
R232			RK73HB1J154J	CHIP R 150K J 1/16W	
R233			RK73HB1J473J	CHIP R 47K J 1/16W	
R234			RK73HB1J474J	CHIP R 470K J 1/16W	
R235			RK73HB1J103J	CHIP R 10K J 1/16W	
R236-242			RK73HB1J474J	CHIP R 470K J 1/16W	
R243			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R244,245			RK73HB1J473J	CHIP R 47K J 1/16W	
R246			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R247			RK73HB1J103J	CHIP R 10K J 1/16W	
R248			RK73HB1J474J	CHIP R 470K J 1/16W	
R249			RK73HB1J103J	CHIP R 10K J 1/16W	
R250			RK73HB1J474J	CHIP R 470K J 1/16W	
R251			RK73HB1J103J	CHIP R 10K J 1/16W	
R253			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R254			RK73HB1J474J	CHIP R 470K J 1/16W	
R255			RK73HB1J330J	CHIP R 33 J 1/16W	
R256			RK73HB1J103J	CHIP R 10K J 1/16W	
R257			RK73HB1J474J	CHIP R 470K J 1/16W	
R258			RK73GB2A100J	CHIP R 10 J 1/10W	
R259			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R260			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R261			RK73HB1J154J	CHIP R 150K J 1/16W	
R263			RK73HB1J391J	CHIP R 390 J 1/16W	
R264			RK73HB1J123J	CHIP R 12K J 1/16W	
R265			RK73HB1J100J	CHIP R 10 J 1/16W	
R266			RK73HB1J821J	CHIP R 820 J 1/16W	
R267			RK73HB1J273J	CHIP R 27K J 1/16W	
R268			RK73HH1J334D	CHIP R 330K D 1/16W	
R269			RK73HH1J223D	CHIP R 22K D 1/16W	
R271			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R272,273			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R301,302			RK73HB1J474J	CHIP R 470K J 1/16W	
R303			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R304,305			RK73HB1J104J	CHIP R 100K J 1/16W	
R306			RK73HB1J121J	CHIP R 120 J 1/16W	
R310,311			RK73HB1J473J	CHIP R 47K J 1/16W	
R312,313			RK73HB1J104J	CHIP R 100K J 1/16W	
R314			RK73HB1J474J	CHIP R 470K J 1/16W	

PARTS LIST

TX-RX UNIT (X57-7710-10)

Ref. No.	Address	New parts	Parts No.	Description				Destination
R315-317			RK73HB1J104J	CHIP R	100K	J	1/16W	
R318,319			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R320-322			RK73HB1J101J	CHIP R	100	J	1/16W	
R323			RK73HB1J104J	CHIP R	100K	J	1/16W	
R324			RK73HB1J101J	CHIP R	100	J	1/16W	
R326-329			RK73HB1J104J	CHIP R	100K	J	1/16W	
R330			RK73HB1J473J	CHIP R	47K	J	1/16W	
R331			RK73HB1J104J	CHIP R	100K	J	1/16W	
R332			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R333-340			RK73HB1J104J	CHIP R	100K	J	1/16W	
R341			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R342			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R343			RK73HB1J151J	CHIP R	150	J	1/16W	
R344-350			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R352,353			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R354			RK73HB1J104J	CHIP R	100K	J	1/16W	
R355			RK73HB1J332J	CHIP R	3.3K	J	1/16W	
R356			RK73HB1J104J	CHIP R	100K	J	1/16W	
R357			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R358			RK73HB1J473J	CHIP R	47K	J	1/16W	
R359,360			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R361,362			RK73HB1J220J	CHIP R	22	J	1/16W	
R363-368			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R369			RK73HB1J474J	CHIP R	470K	J	1/16W	
R370			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R371			RK73HH1J104D	CHIP R	100K	D	1/16W	
R372			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R374			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R375			RK73HB1J104J	CHIP R	100K	J	1/16W	
R376			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R377			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R378			RK73HH1J103D	CHIP R	10K	D	1/16W	
R379			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R380-382			RK73HB1J104J	CHIP R	100K	J	1/16W	
R384-390			RK73HB1J104J	CHIP R	100K	J	1/16W	
R391			RK73HB1J183J	CHIP R	18K	J	1/16W	
R392			RK73HB1J104J	CHIP R	100K	J	1/16W	
R393			RK73HB1J473J	CHIP R	47K	J	1/16W	
R394			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R395			RK73HB1J473J	CHIP R	47K	J	1/16W	
R396			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R397			RK73HB1J473J	CHIP R	47K	J	1/16W	
R398			RK73HB1J104J	CHIP R	100K	J	1/16W	
R400			RK73HB1J104J	CHIP R	100K	J	1/16W	
R401			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R402,403			RK73HB1J104J	CHIP R	100K	J	1/16W	
R404,405			RK73HB1J474J	CHIP R	470K	J	1/16W	
R406			RK73HB1J104J	CHIP R	100K	J	1/16W	
R407			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R408			RK73HB1J104J	CHIP R	100K	J	1/16W	
R409			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R410,411			RK73HB1J104J	CHIP R	100K	J	1/16W	
R412-414			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R415			RK73HB1J471J	CHIP R	470	J	1/16W	
R416,417			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R419			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R501,502			RN73HH1J104D	CHIP R	100K	D	1/16W	
R503			RK73HB1J101J	CHIP R	100	J	1/16W	
R505			RK73HB1J153J	CHIP R	15K	J	1/16W	
R506			RK73HB1J101J	CHIP R	100	J	1/16W	

Ref. No.	Address	New parts	Parts No.	Description				Destination
R507			RK73HB1J124J	CHIP R	120K	J	1/16W	
R508			RK73HB1J823J	CHIP R	82K	J	1/16W	
R509			RK73HB1J100J	CHIP R	10	J	1/16W	
R511			RK73HB1J100J	CHIP R	10	J	1/16W	
R512,513			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R515			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R516			RK73HB1J473J	CHIP R	47K	J	1/16W	
R517-520			RK73HB1J100J	CHIP R	10	J	1/16W	
R521			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R524			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R525			RK73HB1J100J	CHIP R	10	J	1/16W	
R526			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R528			RK73HB1J100J	CHIP R	10	J	1/16W	
R530			RK73HH1J184D	CHIP R	180K	D	1/16W	
R531			RK73HH1J473D	CHIP R	47K	D	1/16W	
R532			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R533			RK73HB1J106J	CHIP R	10M	J	1/16W	
R534			RK73HH1J474D	CHIP R	470K	D	1/16W	
R535			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R536			RK73HB1J473J	CHIP R	47K	J	1/16W	
R537			RK73HB1J683J	CHIP R	68K	J	1/16W	
R538,539			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R540			RK73HB1J121J	CHIP R	120	J	1/16W	
R542			RK73HH1J391D	CHIP R	390	D	1/16W	
R543			RK73HB1J104J	CHIP R	100K	J	1/16W	
R544			RK73HB1J103J	CHIP R	10K	J	1/16W	
R545,546			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R547			RK73HB1J104J	CHIP R	100K	J	1/16W	
R549,550			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R551			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R552			RK73HB1J103J	CHIP R	10K	J	1/16W	
R553			RK73HB1J223J	CHIP R	22K	J	1/16W	
R554			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R555,556			RK73HB1J473J	CHIP R	47K	J	1/16W	
R557,558			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R559			RK73HB1J183J	CHIP R	18K	J	1/16W	
R560			RK73HB1J124J	CHIP R	120K	J	1/16W	
R561			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R562			RK73HB1J561J	CHIP R	560	J	1/16W	
R563			RK73HB1J224J	CHIP R	220K	J	1/16W	
R564			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R565			RK73HB1J470J	CHIP R	47	J	1/16W	
R566			RK73HB1J334J	CHIP R	330K	J	1/16W	
R567			RK73HB1J152J	CHIP R	1.5K	J	1/16W	
R568,569			RK73HB1J100J	CHIP R	10	J	1/16W	
R570			RK73HB1J223J	CHIP R	22K	J	1/16W	
R572			RK73HB1J104J	CHIP R	100K	J	1/16W	
R573			RK73HB1J474J	CHIP R	470K	J	1/16W	
R575			RK73HB1J123J	CHIP R	12K	J	1/16W	
R576			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R579			RK73HH1J331D	CHIP R	330	D	1/16W	
R580			RK73HH1J271D	CHIP R	270	D	1/16W	
R581			RK73HB1J103J	CHIP R	10K	J	1/16W	
R582			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R583			RK73HB1J223J	CHIP R	22K	J	1/16W	
R584,585			RK73HB1J220J	CHIP R	22	J	1/16W	
R586			RK73HB1J103J	CHIP R	10K	J	1/16W	
R587			RK73HB1J474J	CHIP R	470K	J	1/16W	
R588			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R590			RK73HB1J103J	CHIP R	10K	J	1/16W	

PARTS LIST

TX-RX UNIT (X57-7710-10)

Ref. No.	Address	New parts	Parts No.	Description				Destination
R591			RK73HB1J223J	CHIP R	22K	J	1/16W	
R592,593			RK73HB1J473J	CHIP R	47K	J	1/16W	
R594			RK73HB1J183J	CHIP R	18K	J	1/16W	
R595			RK73HB1J154J	CHIP R	150K	J	1/16W	
R596			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R597			RK73HB1J274J	CHIP R	270K	J	1/16W	
R598			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R599			RK73HB1J101J	CHIP R	100	J	1/16W	
R600			RK73HB1J560J	CHIP R	56	J	1/16W	
R601			RK73HB1J331J	CHIP R	330	J	1/16W	
R603			RK73HB1J104J	CHIP R	100K	J	1/16W	
R604			RK73HB1J103J	CHIP R	10K	J	1/16W	
R605			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R606			RK73HB1J223J	CHIP R	22K	J	1/16W	
R607			RK73HB1J563J	CHIP R	56K	J	1/16W	
R608			RK73HB1J332J	CHIP R	3.3K	J	1/16W	
R609			RK73HB1J103J	CHIP R	10K	J	1/16W	
R610			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R611			RK73HB1J103J	CHIP R	10K	J	1/16W	
R613			RK73HB1J183J	CHIP R	18K	J	1/16W	
R614			RK73HB1J271J	CHIP R	270	J	1/16W	
R615			RK73HB1J221J	CHIP R	220	J	1/16W	
R617			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R618			RK73HB1J473J	CHIP R	47K	J	1/16W	
R619			RK73HB1J123J	CHIP R	12K	J	1/16W	
R620			RK73HB1J103J	CHIP R	10K	J	1/16W	
R621			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R622			RK73HB1J564J	CHIP R	560K	J	1/16W	
R623			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R624			RK73HB1J103J	CHIP R	10K	J	1/16W	
R625			RK73HB1J104J	CHIP R	100K	J	1/16W	
R626			RK73HB1J470J	CHIP R	47	J	1/16W	
R628			RK73HB1J221J	CHIP R	220	J	1/16W	
R630			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R631			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R632			RK73HB1J104J	CHIP R	100K	J	1/16W	
R633			RK73HB1J272J	CHIP R	2.7K	J	1/16W	
R634			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R635			RK73HB1J221J	CHIP R	220	J	1/16W	
R637			RK73HB1J182J	CHIP R	1.8K	J	1/16W	
R638			RK73HB1J470J	CHIP R	47	J	1/16W	
R640			RK73HB1J101J	CHIP R	100	J	1/16W	
R641			RK73HB1J103J	CHIP R	10K	J	1/16W	
R642			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R643			RK73HB1J681J	CHIP R	680	J	1/16W	
R644			RK73HB1J151J	CHIP R	150	J	1/16W	
R645			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R646			RK73HB1J331J	CHIP R	330	J	1/16W	
R647			RK73HB1J223J	CHIP R	22K	J	1/16W	
R648,649			RK73HB1J823J	CHIP R	82K	J	1/16W	
R650			RK73HB1J331J	CHIP R	330	J	1/16W	
R651,652			RK73HB1J823J	CHIP R	82K	J	1/16W	
R653			RK73HB1J180J	CHIP R	18	J	1/16W	
R654			RK73HB1J331J	CHIP R	330	J	1/16W	
R655			RK73HB1J223J	CHIP R	22K	J	1/16W	
R656			RK73HB1J473J	CHIP R	47K	J	1/16W	
R657			RK73HB1J470J	CHIP R	47	J	1/16W	
R658			RK73HB1J103J	CHIP R	10K	J	1/16W	
R660			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R661			RK73HB1J273J	CHIP R	27K	J	1/16W	

Ref. No.	Address	New parts	Parts No.	Description				Destination
R662			RK73HB1J331J	CHIP R	330	J	1/16W	
R663			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R664			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R665			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R666			RK73HB1J561J	CHIP R	560	J	1/16W	
R667			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R669			RK73HB1J104J	CHIP R	100K	J	1/16W	
R670			RK73HB1J224J	CHIP R	220K	J	1/16W	
R671			RK73HB1J104J	CHIP R	100K	J	1/16W	
R672			RK73HB1J561J	CHIP R	560	J	1/16W	
R674			RK73HB1J470J	CHIP R	47	J	1/16W	
R675			RK73HB1J223J	CHIP R	22K	J	1/16W	
R677			RK73HB1J473J	CHIP R	47K	J	1/16W	
R678			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R682			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R683			RK73HB1J103J	CHIP R	10K	J	1/16W	
R685			RK73EB2ER39K	CHIP R	0.39	K	1/4W	
R686			RK73HB1J680J	CHIP R	68	J	1/16W	
R687			RK73HB1J221J	CHIP R	220	J	1/16W	
R688			RK73HB1J103J	CHIP R	10K	J	1/16W	
R689,690			RK73EB2ER39K	CHIP R	0.39	K	1/4W	
R691,692			RK73HH1J154D	CHIP R	150K	D	1/16W	
R695			RK73HH1J184D	CHIP R	180K	D	1/16W	
R696			RK73HB1J104J	CHIP R	100K	J	1/16W	
R697			RK73HB1J823J	CHIP R	82K	J	1/16W	
R698			RK73HB1J154J	CHIP R	150K	J	1/16W	
R699			RK73HB1J224J	CHIP R	220K	J	1/16W	
R700			RK73HB1J104J	CHIP R	100K	J	1/16W	
R701			RK73HH1J184D	CHIP R	180K	D	1/16W	
R705			RK73HB1J104J	CHIP R	100K	J	1/16W	
R706,707			RK73HH1J184D	CHIP R	180K	D	1/16W	
R713			RK73HB1J103J	CHIP R	10K	J	1/16W	
R714			RK73HB1J271J	CHIP R	270	J	1/16W	
R715			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R716			RK73HB1J271J	CHIP R	270	J	1/16W	
R717			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R718			RK73HB1J473J	CHIP R	47K	J	1/16W	
R719			RK73HB1J104J	CHIP R	100K	J	1/16W	
R720			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R721			RK73HB1J474J	CHIP R	470K	J	1/16W	
R722			RK73HB1J104J	CHIP R	100K	J	1/16W	
R724			RK73HB1J182J	CHIP R	1.8K	J	1/16W	
R725			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R726,727			RK73HB1J104J	CHIP R	100K	J	1/16W	
R729			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R730			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R731			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R732			RK73EB2E823J	CHIP R	82K	J	1/4W	
R733			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R801-804			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R805			RK73HB1J473J	CHIP R	47K	J	1/16W	
R806			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R807			RK73HB1J473J	CHIP R	47K	J	1/16W	
R808			RK73HB1J563J	CHIP R	56K	J	1/16W	
R809			RK73HB1J223J	CHIP R	22K	J	1/16W	
R810			RK73HB1J153J	CHIP R	15K	J	1/16W	
R811			RK73HB1J682J	CHIP R	6.8K	J	1/16W	
R812			RK73HB1J563J	CHIP R	56K	J	1/16W	
R813			RK73HB1J103J	CHIP R	10K	J	1/16W	
R814			RK73HB1J683J	CHIP R	68K	J	1/16W	

PARTS LIST

TX-RX UNIT (X57-7710-10)

Ref. No.	Address	New parts	Parts No.	Description				Destination
R815			RK73HB1J103J	CHIP R	10K	J	1/16W	
R816			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R817,818			RK73HB1J101J	CHIP R	100	J	1/16W	
R819			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R820			RK73HB1J223J	CHIP R	22K	J	1/16W	
R821			RK73HB1J104J	CHIP R	100K	J	1/16W	
R822			RK73HB1J101J	CHIP R	100	J	1/16W	
R823			RK73HB1J223J	CHIP R	22K	J	1/16W	
R824			RK73HB1J334J	CHIP R	330K	J	1/16W	
R825			RK73HB1J223J	CHIP R	22K	J	1/16W	
R826			RK73HB1J103J	CHIP R	10K	J	1/16W	
R827,828			RK73HB1J223J	CHIP R	22K	J	1/16W	
R829			RK73HB1J564J	CHIP R	560K	J	1/16W	
R830			RK73HB1J103J	CHIP R	10K	J	1/16W	
R831			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R832			RK73HB1J473J	CHIP R	47K	J	1/16W	
R833			RK73HB1J224J	CHIP R	220K	J	1/16W	
R834,835			RK73HB1J334J	CHIP R	330K	J	1/16W	
R836			RK73HB1J183J	CHIP R	18K	J	1/16W	
R837			RK73HB1J473J	CHIP R	47K	J	1/16W	
R838-840			RK73HB1J104J	CHIP R	100K	J	1/16W	
R841			RK73HB1J183J	CHIP R	18K	J	1/16W	
R842			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R843			RK73HB1J124J	CHIP R	120K	J	1/16W	
R844			RK73HB1J104J	CHIP R	100K	J	1/16W	
R845			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R846			RK73HB1J473J	CHIP R	47K	J	1/16W	
R847			RK73HB1J154J	CHIP R	150K	J	1/16W	
R848			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R849			RK73HB1J333J	CHIP R	33K	J	1/16W	
R850			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R851,852			RK73HB1J474J	CHIP R	470K	J	1/16W	
R853			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R854			RK73HB1J473J	CHIP R	47K	J	1/16W	
R855			RK73HB1J823J	CHIP R	82K	J	1/16W	
R856			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R857			RK73HB1J564J	CHIP R	560K	J	1/16W	
R858			RK73HB1J473J	CHIP R	47K	J	1/16W	
R859			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R860			RK73HB1J473J	CHIP R	47K	J	1/16W	
R861,862			RK73HB1J823J	CHIP R	82K	J	1/16W	
R863			RK73HB1J474J	CHIP R	470K	J	1/16W	
R864			RK73HB1J103J	CHIP R	10K	J	1/16W	
R865			RK73HB1J562J	CHIP R	5.6K	J	1/16W	
R866			RK73HB1J333J	CHIP R	33K	J	1/16W	
R867			RK73HB1J103J	CHIP R	10K	J	1/16W	
R868			RK73HB1J273J	CHIP R	27K	J	1/16W	
R869			RK73HB1J104J	CHIP R	100K	J	1/16W	
R871			RK73HB1J683J	CHIP R	68K	J	1/16W	
R872			RK73HB1J104J	CHIP R	100K	J	1/16W	
R873			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R874-876			RK73HB1J103J	CHIP R	10K	J	1/16W	
R877			RK73HB1J104J	CHIP R	100K	J	1/16W	
R878,879			RK73HB1J683J	CHIP R	68K	J	1/16W	
R880			RK73HB1J153J	CHIP R	15K	J	1/16W	
R883			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R885			RK73HB1J393J	CHIP R	39K	J	1/16W	
R886			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R887			RK73HB1J333J	CHIP R	33K	J	1/16W	
R888			RK73HB1J682J	CHIP R	6.8K	J	1/16W	
R889			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R890			RK73HB1J474J	CHIP R	470K	J	1/16W	
R891			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R892			RK73HB1J684J	CHIP R	680K	J	1/16W	
R893			RK73HB1J473J	CHIP R	47K	J	1/16W	
R894			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R896			RK73HB1J274J	CHIP R	270K	J	1/16W	
R897			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R898			RK73HB1J153J	CHIP R	15K	J	1/16W	
R899			RK73HB1J104J	CHIP R	100K	J	1/16W	
R900			RK73HB1J153J	CHIP R	15K	J	1/16W	
R901			RK73HB1J104J	CHIP R	100K	J	1/16W	
R902			RK73HB1J474J	CHIP R	470K	J	1/16W	
R903			RK73HB1J473J	CHIP R	47K	J	1/16W	
R904			RK73HB1J683J	CHIP R	68K	J	1/16W	
R905			RK73HB1J564J	CHIP R	560K	J	1/16W	
R906			RK73HB1J123J	CHIP R	12K	J	1/16W	
R907			RK73HB1J333J	CHIP R	33K	J	1/16W	
R908			RK73HB1J334J	CHIP R	330K	J	1/16W	
R909,910			RK73HB1J104J	CHIP R	100K	J	1/16W	
R911			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R912			RK73HB1J564J	CHIP R	560K	J	1/16W	
R913			RK73HB1J103J	CHIP R	10K	J	1/16W	
R914			RK73HB1J104J	CHIP R	100K	J	1/16W	
R915			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R916			RK73HB1J104J	CHIP R	100K	J	1/16W	
R917			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R918			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R919			RK73HB1J471J	CHIP R	470	J	1/16W	
R920			RK73HB1J334J	CHIP R	330K	J	1/16W	
R921			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R922			RK73HB1J332J	CHIP R	3.3K	J	1/16W	
R923			RK73HB1J104J	CHIP R	100K	J	1/16W	
R924			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R925			RK73HB1J104J	CHIP R	100K	J	1/16W	
R926			RK73HB1J471J	CHIP R	470	J	1/16W	
R927			RK73HB1J182J	CHIP R	1.8K	J	1/16W	
R928			RK73HB1J103J	CHIP R	10K	J	1/16W	
R929			RK73HB1J333J	CHIP R	33K	J	1/16W	
R930,931			RK73HB1J104J	CHIP R	100K	J	1/16W	
R932			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R933			RK73HH1J223D	CHIP R	22K	D	1/16W	
R934			RK73HB1J393J	CHIP R	39K	J	1/16W	
R935			RK73HH1J223D	CHIP R	22K	D	1/16W	
R936			RK73HB1J334J	CHIP R	330K	J	1/16W	
R937			RK73HB1J184J	CHIP R	180K	J	1/16W	
R938,939			RK73HH1J104D	CHIP R	100K	D	1/16W	
R940			RK73HB1J223J	CHIP R	22K	J	1/16W	
R941			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R942			RK73HB1J822J	CHIP R	8.2K	J	1/16W	
R943			RK73HB1J471J	CHIP R	470	J	1/16W	
R944,945			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R946			RK73HB1J473J	CHIP R	47K	J	1/16W	
R947			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R948			RK73HB1J104J	CHIP R	100K	J	1/16W	
R949,950			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R951			RK73HB1J473J	CHIP R	47K	J	1/16W	
R952,953			RK73HB1J103J	CHIP R	10K	J	1/16W	
R954,955			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R956			RK73HB1J101J	CHIP R	100	J	1/16W	

PARTS LIST

TX-RX UNIT (X57-7710-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination
R957			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R958-961			RK73HB1J101J	CHIP R 100 J 1/16W	
R962			RK73HB1J000J	CHIP R 0.0 J 1/16W	
S201			S70-0483-05	TACT SWITCH	
D101,102			HZC6.8-E	ZENER DIODE	
D107,108			MA2S111-F	DIODE	
D113			MA2S111-F	DIODE	
D201			1SR154-400	DIODE	
D202-204			1SS388F	DIODE	
D205			1SS301F	DIODE	
D206			HRB0502A	DIODE	
D207			MA2S111-F	DIODE	
D208			HSC119	DIODE	
D209			1SS301F	DIODE	
D210			1SS388F	DIODE	
D211			1SS416	DIODE	
D212			1SS301F	DIODE	
D213			1SS388F	DIODE	
D301			1SS416	DIODE	
D501			HSC119	DIODE	
D502			DA221	DIODE	
D503			HVC376B	VARIABLE CAPACITANCE DIODE	
D504			1SV325F	VARIABLE CAPACITANCE DIODE	
D505			HVC131	DIODE	
D508-513			1SV282-F	VARIABLE CAPACITANCE DIODE	
D514			HSC119	DIODE	
D515			HVC131	DIODE	
D516			1SV278F	VARIABLE CAPACITANCE DIODE	
D517,518			HVC131	DIODE	
D519,520			HSC277	DIODE	
D523			HZU2ALL	ZENER DIODE	
D524,525			1SV305F	VARIABLE CAPACITANCE DIODE	
D526			HZU5CLL	ZENER DIODE	
D527			HVC131	DIODE	
D528			1SV305F	VARIABLE CAPACITANCE DIODE	
D529-532			HVC131	DIODE	
D533			1SV305F	VARIABLE CAPACITANCE DIODE	
D801-803			RB706F-40	DIODE	
D804			DA221	DIODE	
D805,806			MA2S111-F	DIODE	
D807			RB706F-40	DIODE	
D808-814			1SS416	DIODE	
D815			EMZ6.8N	ZENER DIODE	
D816			NNCD6.8G-A	ZENER DIODE	
D817			DA221	DIODE	
D818			NNCD6.8G-A	ZENER DIODE	
D819			DA221	DIODE	
D820			EMZ6.8N	ZENER DIODE	
IC101			TC74LCX245FK	MOS-IC	
IC103			TPA6201A1DRBR	ANALOGUE IC	
IC104			TC7WZ245FK-F	MOS-IC	
IC201			XC6204B332D	MOS-IC	
IC202			XC9235A15CM1	MOS-IC	
IC203			XC6204B332D	MOS-IC	
IC204			TK11250CUCB	MOS-IC	
IC205			XC6204B502PR	MOS-IC	
IC206			LT1616ES6-PBF	ANALOGUE IC	
IC207			TK71733S	BI-POLAR IC	

Ref. No.	Address	New parts	Parts No.	Description	Destination
IC208			TC75S51FE (F)	MOS-IC	
IC209			XC61CC5602NR	MOS-IC	
IC210			S-812C31BPI-G	ANALOGUE IC	
IC211			XC9101D09AKR	ANALOGUE IC	
IC301			**Note 1**	ROM IC	
IC302			**Note 1**	MICROPROCESSOR IC	
IC303			**Note 1**	SRAM IC	
IC304			TC7SH08FU-F	MOS-IC	
IC305			XC6109C29ANN	ANALOGUE IC	
IC306			RV5C386A	MOS-IC	
IC307			SM5023CNDH-G	MOS-IC	
IC308			**Note 1**	MOS-IC	
IC309			PCA9535BS	MOS-IC	
IC310			TC7SH08FU-F	MOS-IC	
IC501			LM73CIMKX-0	MOS-IC	
IC502			TLV2381IDBV	MOS-IC	
IC503			SKY72300-362	MOS-IC	
IC504			LMC7101BIM5	MOS-IC	
IC505			TC75W51FK (F)	MOS-IC	
IC506			MCP6021-E/OT	MOS-IC	
IC507			TK10931VTL-G	ANALOGUE IC	
IC508			TC75W51FK (F)	MOS-IC	
IC509,510			TLV2381IDBV	MOS-IC	
IC511			TA75W01FUF	MOS-IC	
IC801		✻	AK2330	MOS-IC	
IC802			TC75S51FE (F)	MOS-IC	
IC803			TC75W51FK (F)	MOS-IC	
IC804			TC75S51FE (F)	MOS-IC	
IC805,806			TC7W53FK (F)	MOS-IC	
IC807			TC75W51FK (F)	MOS-IC	
IC808			TC7S66FUF	MOS-IC	
IC809			TC75W51FK (F)	MOS-IC	
IC810			TC7W53FK (F)	MOS-IC	
IC811			TC75W51FK (F)	MOS-IC	
IC812			TC75S51FE (F)	MOS-IC	
IC813			TC75W51FK (F)	MOS-IC	
IC814			TC75S51FE (F)	MOS-IC	
IC815			TC75W51FK (F)	MOS-IC	
IC816			TC7W66FK-F	MOS-IC	
IC817			TPA6201A1DRBR	ANALOGUE IC	
IC818			NJM2880U105ZB	ANALOGUE IC	
IC819			TC7SET08FU-F	MOS-IC	
IC820			TC7WH126FK	MOS-IC	
IC821			TC7WT125FUF	MOS-IC	
Q101			2SA1832 (GR)F	TRANSISTOR	
Q102			2SA1362-F (GR)	TRANSISTOR	
Q103,104			2SC4617 (S)	TRANSISTOR	
Q105			SSM3K15TE (F)	FET	
Q201			2SJ648-A	FET	
Q202			SSM3K15TE (F)	FET	
Q203,204			SSM6N16FE-F	FET	
Q205			SSM6L05FU-F	FET	
Q206			2SA1955A-F	TRANSISTOR	
Q207			EMD12	TRANSISTOR	
Q208			2SA1955A-F	TRANSISTOR	
Q209,210			SSM3K15TE (F)	FET	
Q211			2SA1955A-F	TRANSISTOR	
Q212			SSM5H01TU-F	FET	
Q213			EMD12	TRANSISTOR	

Note 1: This part cannot be replaced. Therefore, this part is not supplied as a service part.

PARTS LIST

TX-RX UNIT (X57-7710-10)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
Q214			UMG9N	TRANSISTOR	
Q215			EMD12	TRANSISTOR	
Q501			2SC5383-T111	TRANSISTOR	
Q502			2SK879-F (Y)	FET	
Q503			DTA114YEB	DIGITAL TRANSISTOR	
Q504			SSM3K15TE (F)	FET	
Q505			EMD9	TRANSISTOR	
Q506			2SC5108 (Y)F	TRANSISTOR	
Q507			2SC5383-T111	TRANSISTOR	
Q508,509			2SK508NV (K52)	FET	
Q510			SSM6L05FU-F	FET	
Q511			2SJ347F	FET	
Q512-514			2SC5636	TRANSISTOR	
Q515			2SC4215-F (Y)	TRANSISTOR	
Q516			2SK3077F	FET	
Q517			3SK318	FET	
Q518			RD01MUS1-T113	FET	
Q519			2SC5383-T111	TRANSISTOR	
Q520			RD07MVS1BT122	FET	
Q521			SSM3K15TE (F)	FET	
Q522			3SK294-FP	FET	
Q523			DTC144EEB	DIGITAL TRANSISTOR	
Q525			2SK1824-A	FET	
Q526			EMD5	TRANSISTOR	
Q801			SSM3K15TE (F)	FET	
Q802			2SA1832 (GR)F	TRANSISTOR	
Q803			2SC4738 (GR)F	TRANSISTOR	
Q804			2SA1832 (GR)F	TRANSISTOR	
Q805			SSM3K15TE (F)	FET	
Q806			SSM6N16FE-F	FET	
Q807			2SJ243-A	FET	
Q808			2SC4617 (S)	TRANSISTOR	
Q809			UMG3N	TRANSISTOR	
Q810			2SB1132 (Q,R)	TRANSISTOR	
Q811			SSM3K15TE (F)	FET	
Q812			2SJ347F	FET	
Q813			SSM6N16FE-F	FET	
TH504			ERTJ0EV104H	THERMISTOR	
TH801			ERTJ0EV104H	THERMISTOR	
-		✻	X57-7710-11	SERVICE TX-RX UNIT	

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation