



EXPLODED VIEW

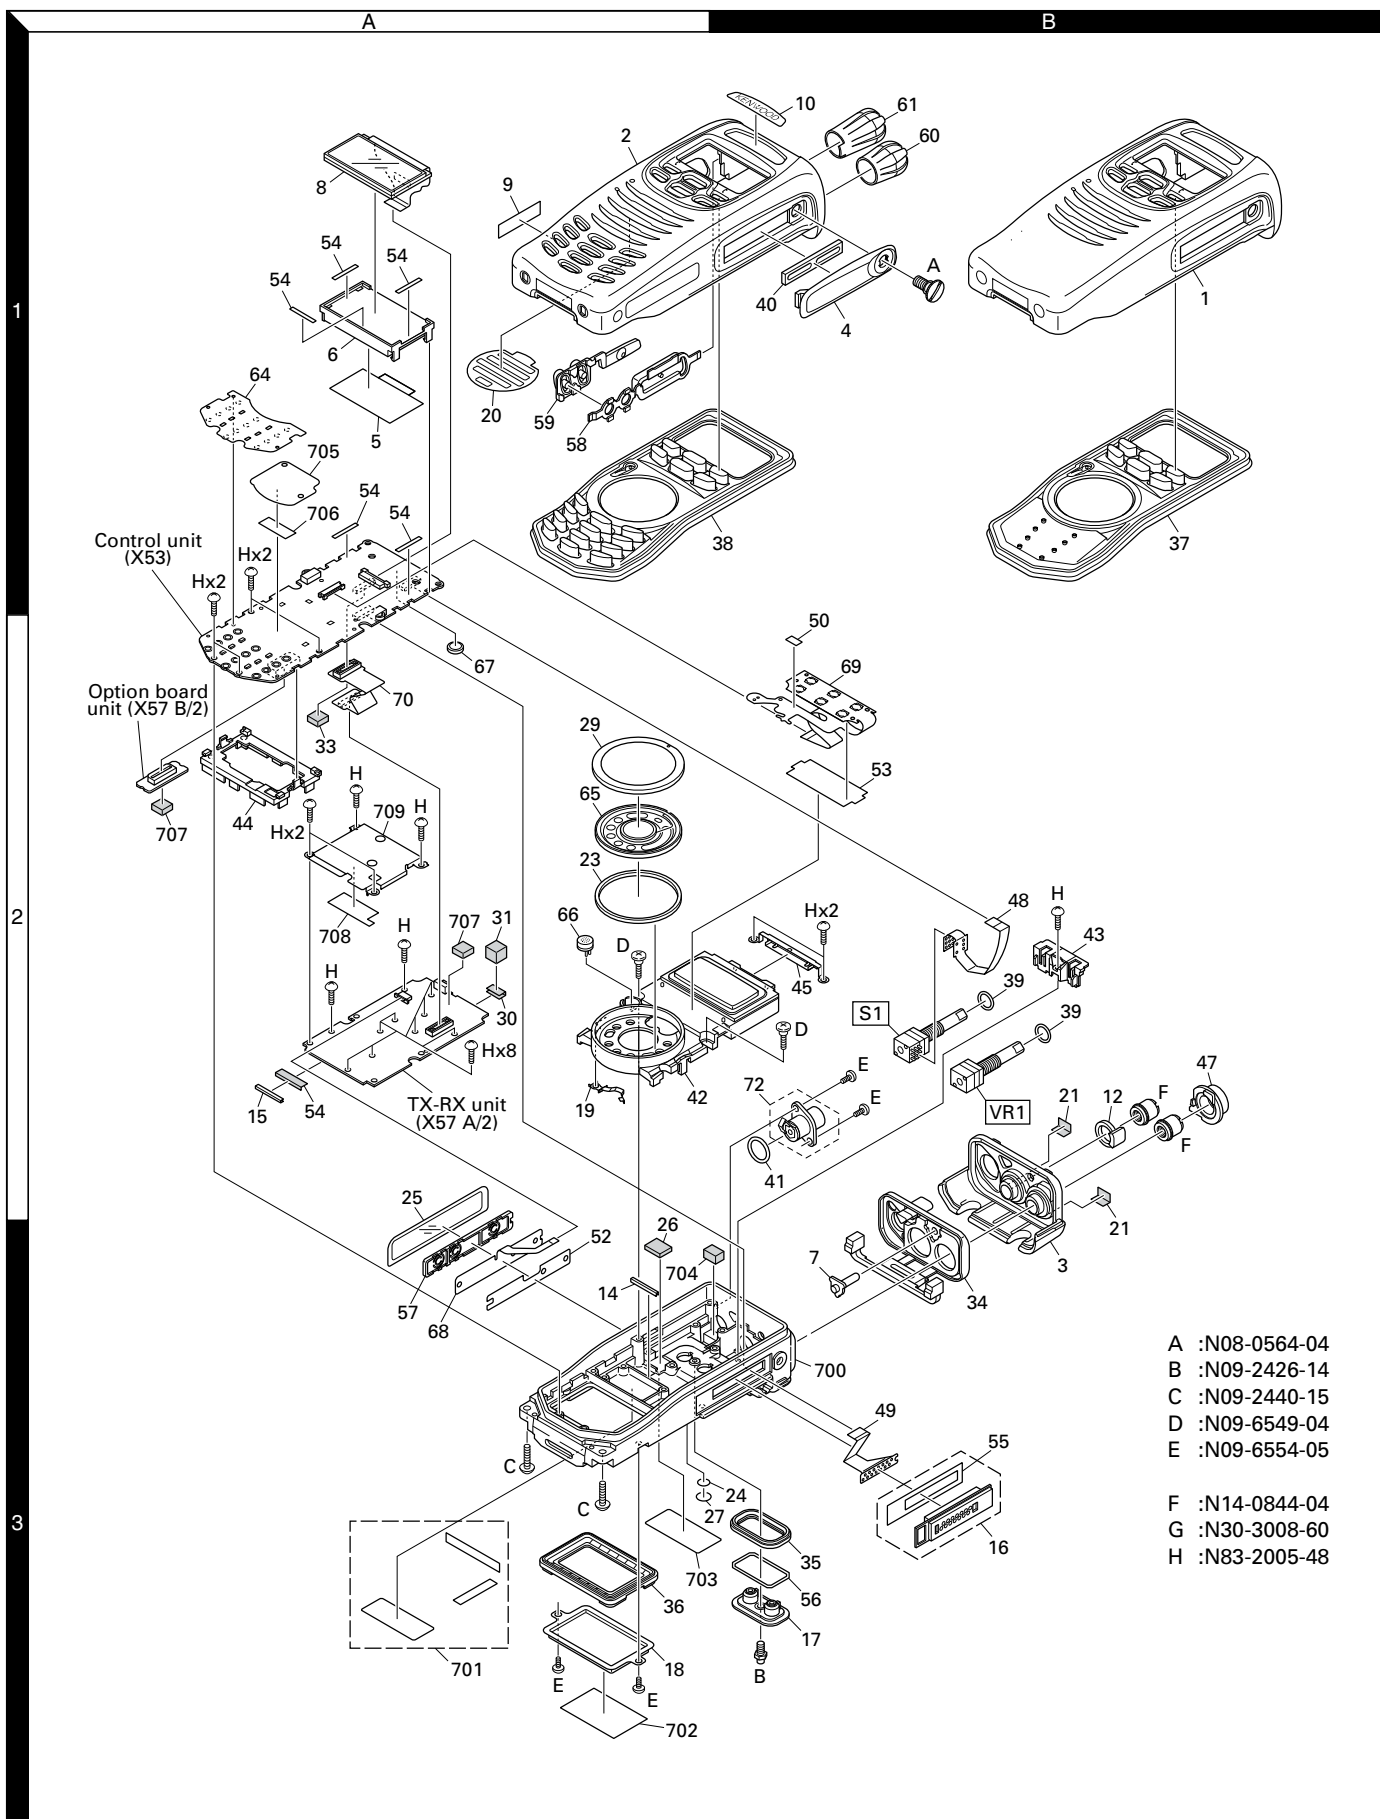

PACKING

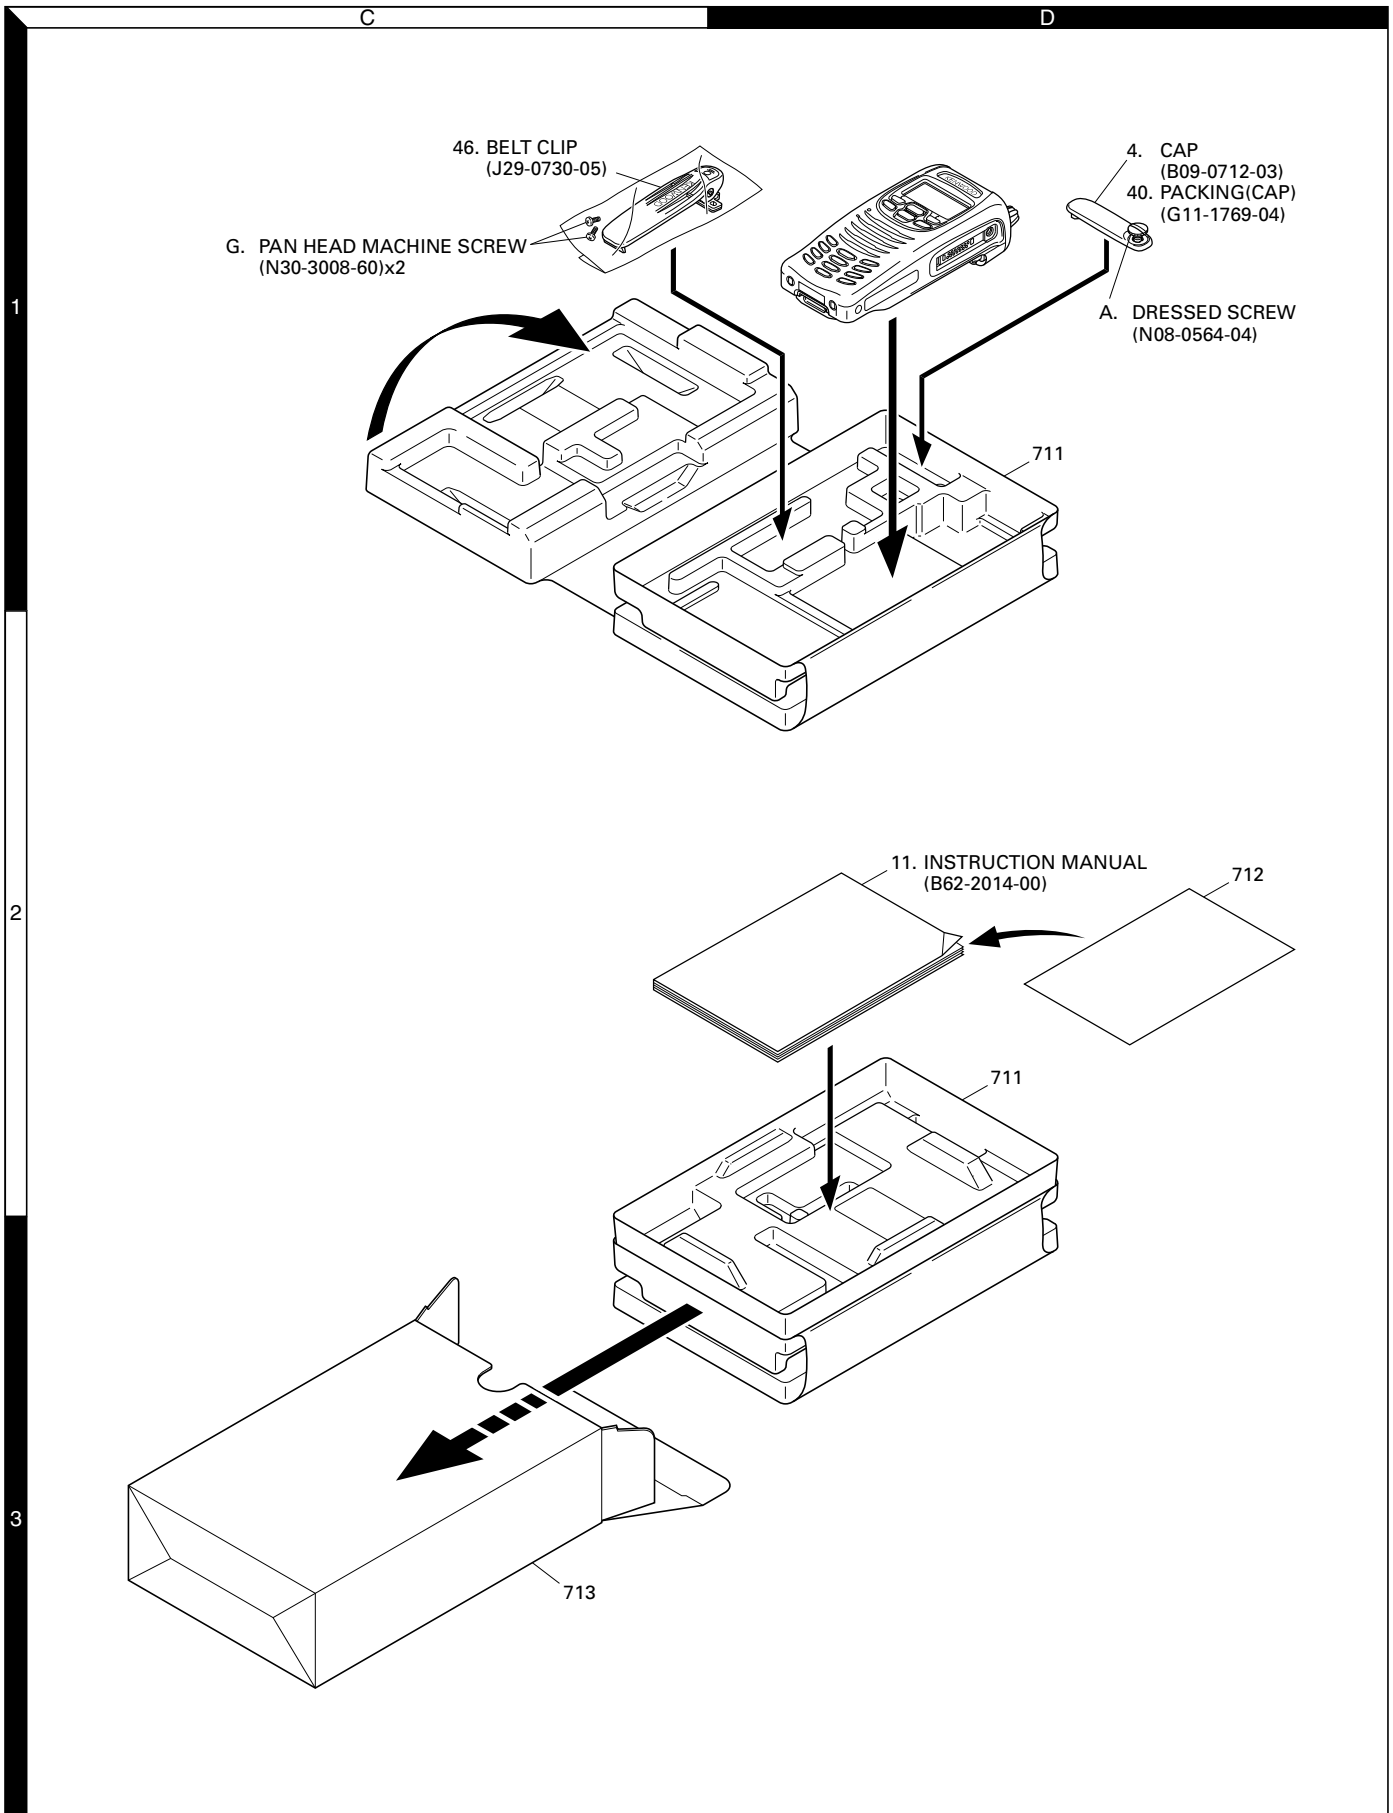

PARTS LIST

* New Parts.  indicates safety critical components.
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

L: Scandinavia K: USA P: Canada
Y: PX (Far East, Hawaii) T: England E: Europe
Y: AAFES (Europe) X: Australia M: Other Areas

NX-300 (Y50-6120-XX) CONTROL UNIT (X53-4260-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
NX-300					
1	1B	*	A02-4002-13	PLASTIC CABINET(6KEY)	K
2	1A	*	A02-4003-13	PLASTIC CABINET(18KEY)	K3
3	2B	*	A62-1156-02	PANEL(TOP)	
4	1B	*	B09-0712-03	CAP ACCESSORY	
5	1A	*	B11-1853-24	FILTER(LCD)	
6	1A	*	B11-1854-02	ILLUMINATION GUIDE(LCD)	
7	3B	*	B11-1855-04	ILLUMINATION GUIDE(TX/BUSY)	
8	1A	*	B38-0923-05	LCD ASSY	
9	1A	*	B42-7296-04	STICKER	
10	1B	*	B43-1606-04	BADGE	
11	2D	*	B62-2014-00	INSTRUCTION MANUAL	
12	2B	*	D32-0446-14	STOPPER(16CH)	
14	3A	*	E29-1221-04	RELAY HARDWARE(VCO-CHASSIS)	
15	2A	*	E29-1220-04	RELAY HARDWARE(VCO-PCB)	
16	3B	*	E58-0532-05	RECTANGULAR RECEPTACLE(SP/MIC)	
17	3B	*	E72-0425-03	TERMINAL BLOCK	
18	3A	*	F07-1931-04	COVER(OP BOARD)	
19	2A	*	G02-1836-13	EARTH SPRING(SP)	
20	1A	*	G10-1373-04	FIBROUS SHEET(SP)	
21	2B	*	G10-1384-04	FIBROUS SHEET(TOP PANEL)	
23	2A		G11-4272-14	RUBBER CUSHION(SP)	
24	3A		G11-4331-04	SHEET(AIR)	
25	3A	*	G11-4428-04	SHEET(PTT)	
26	3A	*	G11-4429-04	RUBBER SHEET(FET)	
27	3A	*	G11-4440-04	SHEET(AIR)	
29	2A	*	G11-4458-14	SHEET(SP)	
30	2A	*	G11-4459-04	SHEET(TX-RX PCB)	
31	2A		G13-2129-14	CUSHION(TX-RX PCB)	
33	2A	*	G13-2258-04	CUSHION(50PIN FPC)	
34	3B	*	G53-1762-02	PACKING(TOP)	
35	3B	*	G53-1763-03	PACKING(TERMINAL BLOCK)	
36	3A	*	G53-1764-03	PACKING(OP BOARD)	
37	1B	*	G53-1765-11	PACKING(6KEY)	
38	1A	*	G53-1766-11	PACKING(18KEY)	K
39	2B	*	G53-1768-04	PACKING(VOL,CH O-RING)	K3
40	1B	*	G53-1769-04	PACKING(CAP)	
41	2B		G53-1792-04	PACKING(SMA O-RING)	
42	2A	*	J19-5505-11	HOLDER(FG-SP)	
43	2B	*	J19-5506-03	HOLDER(VOL,CH)	
44	2A	*	J19-5507-02	HOLDER(OP BOARD)	
45	2B	*	J21-8579-04	MOUNTING HARDWARE(FG-SP HOLDER)	
46	1C		J29-0730-05	BELT CLIP ACCESSORY	
47	2B	*	J30-1296-04	SPACER(VOL)	
48	2B	*	J87-0006-05	FPC(LEAD FREE,VOL,CH)	
49	3B	*	J87-0007-05	FPC(LEAD FREE/UNIVERSAL)	
50	2B		J99-0390-04	ADHESIVE SHEET(6KEY FPC)	
52	3A	*	J99-0711-04	ADHESIVE SHEET(PTT FPC)	
53	2B	*	J99-0712-14	ADHESIVE SHEET(6KEY FPC)	
54	1A	*	J99-0714-04	ADHESIVE SHEET(LCD)	
55	3B	*	J99-0715-08	ADHESIVE SHEET(UNIVERSAL)	
56	3B	*	J99-0725-04	ADHESIVE SHEET(TERMINAL BLOCK)	
57	3A	*	K25-2001-03	PUSH KNOB(PTT)	
58	1A	*	K29-9405-03	KNOB(PTT)	
CONTROL UNIT (X53-4260-XX) -10 :K -11 :K3					
59	1A	*	K29-9406-03	BUTTON KNOB(SIDE KEY)	
60	1B	*	K29-9407-03	KNOB(VOL)	
61	1B	*	K29-9408-13	KNOB(CH)	
A	1B,1D	*	N08-0564-04	DRESSED SCREW ACCESSORY	
B	3B		N09-2426-14	HEXAGON HEAD SCREW(BATT -)	
C	3A		N09-2440-15	SPECIAL SCREW(CASE)	
D	2A,2B	*	N09-6549-04	STEPPED SCREW(FG-SP HOLDER)	
E	2B,3A	*	N09-6554-05	PAN HEAD SCREW(ANT/OP BOARD)	
F	2B	*	N14-0844-04	CIRCULAR NUT(VOL,CH)	
G	1C		N30-3008-60	PAN HEAD MACHINE SCREW(BELT CLIP)	
H	1A,2A,2B		N83-2005-48	PAN HEAD TAPTITE SCREW(PCB)	
64	1A	*	S79-0472-05	KEYBOARD ASSY(12KEY)	K3
65	2A		T07-0755-15	SPEAKER	
66	2A		T91-0575-05	MIC ELEMENT	
67	2A		W09-0971-05	LITHIUM CELL	
68	3A	*	X41-3710-10	SWITCH UNIT(PTT FPC)	
69	2B	*	X41-3720-10	SWITCH UNIT(6KEY FPC)	
70	2A	*	X42-3340-10	CORD ASSY(50PIN FPC)	
72	2B	*	X60-3860-10	TERMINAL ASSY(SMA)	
D1 -10			B30-2215-05	LED	K3
D3 ,4			B30-2215-05	LED	K
D7 ,8			B30-2215-05	LED	K
C1			CK73HB1A104K	CHIP C 0.10UF	K
C2 -6			CK73GB1E105K	CHIP C 1.0UF	K
C7 ,8			CK73HB1A104K	CHIP C 0.10UF	K
C10			CK73HB1A104K	CHIP C 0.10UF	K
C11			CK73HBOJ105K	CHIP C 1.0UF	K
C12 -15			CK73HB1H471K	CHIP C 470PF	K
C16 ,17			CC73HCH1H101J	CHIP C 100PF	J
C23 -27			CK73HB1H102K	CHIP C 1000PF	K
C28 -34			CC73HCH1H101J	CHIP C 100PF	J
C35			CK73HB1H102K	CHIP C 1000PF	K
C36			CK73HB1E682K	CHIP C 6800PF	K
C37			CK73HB1H102K	CHIP C 1000PF	K
C38			CC73HCH1H101J	CHIP C 100PF	J
C40			CC73HCH1H221J	CHIP C 220PF	J
C41			CC73HCH1H101J	CHIP C 100PF	J
C101-104			CK73HB1A104K	CHIP C 0.10UF	K
C105			CK73HBOJ105K	CHIP C 1.0UF	K
C106			CK73HB1E103K	CHIP C 0.010UF	K
C107			CK73HB1A104K	CHIP C 0.10UF	K
C107,108			CK73HB1A104K	CHIP C 0.10UF	K
C109,110			CK73HB1H102K	CHIP C 1000PF	K
C111-113			CK73HB1A104K	CHIP C 0.10UF	K
C114			CK73HBOJ105K	CHIP C 1.0UF	K
C115			CK73HB1H471K	CHIP C 470PF	K
C116,117			CK73HB1A104K	CHIP C 0.10UF	K
C118,119			CK73HBOJ105K	CHIP C 1.0UF	K
C120,121			CK73HB1A104K	CHIP C 0.10UF	K
C122-124			CK73HB1E103K	CHIP C 0.010UF	K
C130			CK73HB1E103K	CHIP C 0.010UF	K

PARTS LIST

CONTROL UNIT (X53-4260-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C131			CK73HB1A104K	CHIP C 0.10UF K		C466			CK73HB1E682K	CHIP C 6800PF K	
C133			CS77CP0J100M	CHIP TNTL 10UF 6.3WV		C467,468			CK73HB1E103K	CHIP C 0.010UF K	
C134			CK73HB1E103K	CHIP C 0.010UF K		C469,470			CK73HB1H102K	CHIP C 1000PF K	
C135			CK73HB1H102K	CHIP C 1000PF K		C701			CK73HB1A104K	CHIP C 0.10UF K	
C136			CK73HB1E103K	CHIP C 0.010UF K		C703			CK73GB0J475K	CHIP C 4.7UF K	
C137			CK73GB1E105K	CHIP C 1.0UF K		C704,705			CK73HB1A104K	CHIP C 0.10UF K	
C138-140			CK73HB1A104K	CHIP C 0.10UF K		C706			CC73HCH1H680J	CHIP C 68PF J	
C141			CC73HCH1H101J	CHIP C 100PF J		C707			CC73HCH1H270J	CHIP C 27PF J	
C142			CS77CP0J100M	CHIP TNTL 10UF 6.3WV		C708			CK73HB1A104K	CHIP C 0.10UF K	
C143			CK73HB1E103K	CHIP C 0.010UF K		C709			CK73HB0J105K	CHIP C 1.0UF K	
C144			CK73GB1E105K	CHIP C 1.0UF K		C710			CK73HB1E103K	CHIP C 0.010UF K	
C145-148			CK73HB1A104K	CHIP C 0.10UF K		C711			CK73HB1A104K	CHIP C 0.10UF K	
C149			CK73HB1E103K	CHIP C 0.010UF K		C712			CK73HB1E103K	CHIP C 0.010UF K	
C150			CK73GB1E105K	CHIP C 1.0UF K		C713			CK73HB1H332K	CHIP C 3300PF K	
C151-155			CK73HB1A104K	CHIP C 0.10UF K		C714			CK73HB1H122K	CHIP C 1200PF K	
C156,157			CK73HB1H102K	CHIP C 1000PF K		C715			CK73HB1A104K	CHIP C 0.10UF K	
C158			CK73HB1E103K	CHIP C 0.010UF K		C716			CK73HB1H681K	CHIP C 680PF K	
C159			CK73HB1A104K	CHIP C 0.10UF K		C717			CK73HB1E103K	CHIP C 0.010UF K	
C160,161			CK73HB1E682K	CHIP C 6800PF K		C718			CK73HB1H152K	CHIP C 1500PF K	
C401,402			CK73HB1A104K	CHIP C 0.10UF K		C719			CK73HB1A104K	CHIP C 0.10UF K	
C403-405			CS77AP1C2R2M	CHIP TNTL 2.2UF 16WV		C720			CK73HB1E103K	CHIP C 0.010UF K	
C406			CK73HB0J105K	CHIP C 1.0UF K		C721			CK73HB1A104K	CHIP C 0.10UF K	
C407,408			CK73HB1H102K	CHIP C 1000PF K		C722			CK73HB1E103K	CHIP C 0.010UF K	
C409-412			CK73HB0J105K	CHIP C 1.0UF K		C723			CK73HB1A104K	CHIP C 0.10UF K	
C413		*	CK73FB1A106K	CHIP C 10UF K		C724			CK73HB1E103K	CHIP C 0.010UF K	
C414			CK73HB0J105K	CHIP C 1.0UF K		C725			CC73HCH1E181J	CHIP C 180PF J	
C415			CS77AP1A100M	CHIP TNTL 10UF 10WV		C726,727			CK73HB1A104K	CHIP C 0.10UF K	
C416		*	CK73FB1A106K	CHIP C 10UF K		C728			CK73HB1H331K	CHIP C 330PF K	
C417			CC73HCH1H221J	CHIP C 220PF J		C730			CK73HB1H331K	CHIP C 330PF K	
C418			CK73HB1E103K	CHIP C 0.010UF K		C731,732			CK73HB1E103K	CHIP C 0.010UF K	
C419		*	CK73FB1E475K	CHIP C 4.7UF K		C734			CK73HB1H102K	CHIP C 1000PF K	
C420			CK73HB1E103K	CHIP C 0.010UF K		C735			CK73HB1H122K	CHIP C 1200PF K	
C421			CK73HB1E682K	CHIP C 6800PF K		C736,737			CK73HB1A104K	CHIP C 0.10UF K	
C422			CC73HCH1H100C	CHIP C 10PF C		C738			CK73HB1H102K	CHIP C 1000PF K	
C424,425			CK73HB1A104K	CHIP C 0.10UF K		C739			CK73HB1E682K	CHIP C 6800PF K	
C427			CK73HB1E103K	CHIP C 0.010UF K		C740			CK73HB1H102K	CHIP C 1000PF K	
C428			CC73HCH1H030C	CHIP C 3.0PF C		C742			CK73GB1E105K	CHIP C 1.0UF K	
C429,430			CK73HB1A104K	CHIP C 0.10UF K		C743			CK73HB0J105K	CHIP C 1.0UF K	
C431		*	CK73FB1A106K	CHIP C 10UF K		C744-746			CK73HB1E103K	CHIP C 0.010UF K	
C432			CK73HB1E103K	CHIP C 0.010UF K		C747,748			CK73HB1A104K	CHIP C 0.10UF K	
C433		*	CK73FB1A106K	CHIP C 10UF K		C749,750			CC73HCH1H470J	CHIP C 47PF J	
C434			CK73HB1E103K	CHIP C 0.010UF K		C751			CK73GB1E105K	CHIP C 1.0UF K	
C435-438			CK73HB1A224K	CHIP C 0.22UF K		C752,753			CC73HCH1H101J	CHIP C 100PF J	
C439,440			CK73HB1A104K	CHIP C 0.10UF K		C755			CC73HCH1H470J	CHIP C 47PF J	
C441			CK73GB1E105K	CHIP C 1.0UF K		C756			CK73HB1A104K	CHIP C 0.10UF K	
C442			CK73HB1H471K	CHIP C 470PF K		C757,758			CK73GB0J475K	CHIP C 4.7UF K	
C443,444			CK73HB1E103K	CHIP C 0.010UF K		C759,760			CK73HB1E103K	CHIP C 0.010UF K	
C445			CK73HB1H102K	CHIP C 1000PF K		C761			CC73HCH1H100D	CHIP C 10PF D	
C446			CK73GB1E105K	CHIP C 1.0UF K		C762			CK73HB1A104K	CHIP C 0.10UF K	
C447			CK73HB1H102K	CHIP C 1000PF K		C763			CK73HB1E103K	CHIP C 0.010UF K	
C448-450			CK73HB0J105K	CHIP C 1.0UF K		C764			CK73HB1H102K	CHIP C 1000PF K	
C451-453			CK73HB1E103K	CHIP C 0.010UF K		C765-767			CK73HB1A104K	CHIP C 0.10UF K	
C454			CK73GB1E105K	CHIP C 1.0UF K		C768			CK73HB1H102K	CHIP C 1000PF K	
C455-457			CK73HB1H471K	CHIP C 470PF K		C771			CK73HB1A224K	CHIP C 0.22UF K	
C459			CK73HB1H471K	CHIP C 470PF K		C772			CK73HB1E103K	CHIP C 0.010UF K	
C460			CK73HB1E682K	CHIP C 6800PF K		C775			CC73HCH1H470J	CHIP C 47PF J	
C461-463			CK73HB1H471K	CHIP C 470PF K		C777			CK73HB1H102K	CHIP C 1000PF K	
C464			CK73HB1E103K	CHIP C 0.010UF K		C778			CK73HB0J105K	CHIP C 1.0UF K	
C465			CK73HB1H102K	CHIP C 1000PF K		C779			CK73HB1E103K	CHIP C 0.010UF K	

PARTS LIST

CONTROL UNIT (X53-4260-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C780			CK73HB1A224K	CHIP C 0.22UF K		R16			RK73HB1J331J	CHIP R 330 J 1/16W	
C781,782			CK73HB0J105K	CHIP C 1.0UF K		R17			RK73HB1J000J	CHIP R 0.0 J 1/16W	
C785			CK73HB1A224K	CHIP C 0.22UF K		R18			RK73HB1J822J	CHIP R 8.2K J 1/16W	
C786			CK73HB1E103K	CHIP C 0.010UF K		R19			RK73HB1J471J	CHIP R 470 J 1/16W	
C787			CK73HB0J105K	CHIP C 1.0UF K		R20			RK73HB1J102J	CHIP R 1.0K J 1/16W	
C788			CC73HCH1H150J	CHIP C 15PF J		R21			RK73HB1J122J	CHIP R 1.2K J 1/16W	
C789			CC73HCH1H680J	CHIP C 68PF J		R22 -24			RK73HB1J102J	CHIP R 1.0K J 1/16W	
C790			CK73HB1A104K	CHIP C 0.10UF K		R25			RK73HB1J122J	CHIP R 1.2K J 1/16W	
C791			CK73HB1A393K	CHIP C 0.039UF K		R26			RK73HB1J102J	CHIP R 1.0K J 1/16W	
C792			CK73HB0J105K	CHIP C 1.0UF K		R27			RK73HB1J104J	CHIP R 100K J 1/16W	
C793,794			CK73HB1A104K	CHIP C 0.10UF K		R28 ,29			RK73HB1J102J	CHIP R 1.0K J 1/16W	
C795			CK73HB1E103K	CHIP C 0.010UF K		R30			RK73HB1J101J	CHIP R 100 J 1/16W	
C796			CK73HB1A104K	CHIP C 0.10UF K		R31			RK73HB1J102J	CHIP R 1.0K J 1/16W	
C797			CK73HB0J105K	CHIP C 1.0UF K		R32 -35			RK73HB1J101J	CHIP R 100 J 1/16W	
C798			CS77AP1A100M	CHIP TNL 10UF 10WV		R40			RK73HB1J000J	CHIP R 0.0 J 1/16W	
C799			CK73HB1A104K	CHIP C 0.10UF K		R101,102			RK73HB1J474J	CHIP R 470K J 1/16W	
C800			CK73HB1H152K	CHIP C 1500PF K		R103			RK73HB1J102J	CHIP R 1.0K J 1/16W	
C801			CK73HB1C223K	CHIP C 0.022UF K		R105			RK73HB1J104J	CHIP R 100K J 1/16W	
C802			CK73HB1E103K	CHIP C 0.010UF K		R106			RK73HB1J472J	CHIP R 4.7K J 1/16W	K3
C803			CK73HB1H102K	CHIP C 1000PF K		R107			RK73HB1J104J	CHIP R 100K J 1/16W	K3
C804			CC73HCH1H470J	CHIP C 47PF J		R108			RK73HB1J474J	CHIP R 470K J 1/16W	
CN1		*	E40-6755-05	FLAT CABLE CONNECTOR		R110,111			RK73HB1J104J	CHIP R 100K J 1/16W	K3
CN22		*	E23-1325-05	TERMINAL		R112			RK73HB1J000J	CHIP R 0.0 J 1/16W	
CN23		*	E40-6758-05	PIN ASSY		R113			RK73HB1J104J	CHIP R 100K J 1/16W	K3
CN24		*	E23-1325-05	TERMINAL		R114			RK73HB1J331J	CHIP R 330 J 1/16W	
CN403		*	E40-6813-05	PIN ASSY		R115			RK73HB1J104J	CHIP R 100K J 1/16W	K3
CN404		*	E40-6421-15	PIN ASSY		R116			RK73HB1J473J	CHIP R 47K J 1/16W	
CN405		*	E40-6754-05	FLAT CABLE CONNECTOR		R117			RK73HB1J000J	CHIP R 0.0 J 1/16W	K3
CN701		*	E40-6586-05	SOCKET FOR PIN ASSY		R118			RK73HB1J473J	CHIP R 47K J 1/16W	
CN710		*	E40-6757-05	PIN ASSY		R119			RK73HB1J104J	CHIP R 100K J 1/16W	K3
F701			F53-0360-05	FUSE(0.25A)		R120			RK73HB1J474J	CHIP R 470K J 1/16W	
CN401			J19-5386-05	HOLDER(LITHIUM CELL)		R121-123			RK73HB1J104J	CHIP R 100K J 1/16W	K3
L1 ,2			L92-0408-05	CHIP FERRITE		R126			RK73HB1J101J	CHIP R 100 J 1/16W	
L3			L92-0140-05	CHIP FERRITE		R127,128			RK73HB1J000J	CHIP R 0.0 J 1/16W	K3
L4 -7			L92-0408-05	CHIP FERRITE		R129-131			RK73HB1J101J	CHIP R 100 J 1/16W	
L8			L92-0140-05	CHIP FERRITE		R132,133			RK73HB1J104J	CHIP R 100K J 1/16W	K3
L101,102			L92-0408-05	CHIP FERRITE		R135-137			RK73HB1J104J	CHIP R 100K J 1/16W	
L401		*	L33-1496-05	SMALL FIXED INDUCTOR		R138			RK73HB1J473J	CHIP R 47K J 1/16W	K3
L402		*	L92-0467-05	CHIP FERRITE		R139			RK73HB1J104J	CHIP R 100K J 1/16W	
L403		*	L92-0466-05	CHIP FERRITE		R140			RK73HB1J000J	CHIP R 0.0 J 1/16W	K3
L409,410		*	L92-0467-05	CHIP FERRITE		R141-143			RK73HB1J104J	CHIP R 100K J 1/16W	
L701			L92-0140-05	CHIP FERRITE		R144			RK73HB1J471J	CHIP R 470 J 1/16W	K3
L702			L92-0162-05	BEADS CORE		R145-147			RK73HB1J104J	CHIP R 100K J 1/16W	
L704-709			L92-0162-05	BEADS CORE		R148			RK73HB1J151J	CHIP R 150 J 1/16W	K3
L710-712			L92-0444-05	CHIP FERRITE		R149			RK73HB1J000J	CHIP R 0.0 J 1/16W	
L713			L92-0163-05	BEADS CORE		R150			RK73HB1J102J	CHIP R 1.0K J 1/16W	K3
L714-717			L92-0444-05	CHIP FERRITE		R153,154			RK73HB1J104J	CHIP R 100K J 1/16W	
X101			L77-1802-05	CRYSTAL RESONATOR(32768HZ)		R155			RK73HB1J473J	CHIP R 47K J 1/16W	K3
X102		*	L77-3015-05	TCXO(18.432MHZ)		R156,157			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R1			RK73HB1J105J	CHIP R 1.0M J 1/16W		R158,159			RK73HB1J220J	CHIP R 22 J 1/16W	K3
R2			RK73HB1J104J	CHIP R 100K J 1/16W		R160,161			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R3			RK73HB1J123J	CHIP R 12K J 1/16W		R162			RK73HB1J474J	CHIP R 470K J 1/16W	K3
R4 -10			RK73HB1J103J	CHIP R 10K J 1/16W		R163			RK73HH1J104D	CHIP R 100K D 1/16W	
R11			RK73HB1J104J	CHIP R 100K J 1/16W		R165			RK73HB1J102J	CHIP R 1.0K J 1/16W	K3
R12			RK73HB1J103J	CHIP R 10K J 1/16W		R166			RK73HB1J104J	CHIP R 100K J 1/16W	
R14			RK73HB1J472J	CHIP R 4.7K J 1/16W		R167			RK73HB1J102J	CHIP R 1.0K J 1/16W	K3
R15			RK73HB1J000J	CHIP R 0.0 J 1/16W		R168			RK73HB1J000J	CHIP R 0.0 J 1/16W	
						R170			RK73HH1J103D	CHIP R 10K D 1/16W	K3
						R171-173			RK73HB1J000J	CHIP R 0.0 J 1/16W	

PARTS LIST

CONTROL UNIT (X53-4260-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R174-178 R180,181 R182			RK73HB1J104J RK73HB1J104J RK73HB1J474J	CHIP R 100K J 1/16W CHIP R 100K J 1/16W CHIP R 470K J 1/16W		R471 R472 R473			RK73HB1J000J RK73HB1J223J RK73HB1J332J	CHIP R 0.0 J 1/16W CHIP R 22K J 1/16W CHIP R 3.3K J 1/16W	
R183 R184 R185 R186 R187			RK73HB1J104J RK73HB1J473J RK73HB1J105J RK73HB1J473J RK73HB1J102J	CHIP R 100K J 1/16W CHIP R 47K J 1/16W CHIP R 1.0M J 1/16W CHIP R 47K J 1/16W CHIP R 1.0K J 1/16W		R474,475 R477,478 R479 R480 R481			RK73HB1J333J RK73HB1J000J RK73HB1J102J RK73HB1J273J RK73HB1J474J	CHIP R 33K J 1/16W CHIP R 0.0 J 1/16W CHIP R 1.0K J 1/16W CHIP R 27K J 1/16W CHIP R 470K J 1/16W	
R188 R189 R190 R191 R192			RK73HB1J473J RK73HB1J104J RK73HB1J102J RK73HB1J474J RK73HB1J102J	CHIP R 47K J 1/16W CHIP R 100K J 1/16W CHIP R 1.0K J 1/16W CHIP R 470K J 1/16W CHIP R 1.0K J 1/16W		R482 R483 R484 R485 R486			RK73HB1J103J RK73HB1J473J RK73HB1J223J RK73HB1J103J RK73HB1J100J	CHIP R 10K J 1/16W CHIP R 47K J 1/16W CHIP R 22K J 1/16W CHIP R 10K J 1/16W CHIP R 10 J 1/16W	
R193,194 R401 R402 R403 R404			RK73HB1J104J RK73HB1J152J RK73HB1J151J RK73HB1J152J RK73HB1J151J	CHIP R 100K J 1/16W CHIP R 1.5K J 1/16W CHIP R 150 J 1/16W CHIP R 1.5K J 1/16W CHIP R 150 J 1/16W	K3 K3	R487-490 R491 R492 R493 R494-497			RK73HH1J223D RK73HB1J104J RK73HB1J474J RK73HB1J000J RK73HH1J104D	CHIP R 22K D 1/16W CHIP R 100K J 1/16W CHIP R 470K J 1/16W CHIP R 0.0 J 1/16W CHIP R 100K D 1/16W	
R405 R406 R407,408 R409 R410-416			RK73HB1J152J RK73HB1J000J RK73HB1J103J RK73HB1J470J RK73HB1J471J	CHIP R 1.5K J 1/16W CHIP R 0.0 J 1/16W CHIP R 10K J 1/16W CHIP R 47 J 1/16W CHIP R 470 J 1/16W	K3	R498 R499 R500 R501 R502,503			RK73HB1J333J RK73HB1J223J RK73HB1J473J RK73HB1J222J RK73HB1J103J	CHIP R 33K J 1/16W CHIP R 22K J 1/16W CHIP R 47K J 1/16W CHIP R 2.2K J 1/16W CHIP R 10K J 1/16W	
R417 R418 R419,420 R424 R425			RK73HB1J000J RK73HB1J471J RK73HB1J000J RK73HH1J683D RK73HH1J333D	CHIP R 0.0 J 1/16W CHIP R 470 J 1/16W CHIP R 0.0 J 1/16W CHIP R 68K D 1/16W CHIP R 33K D 1/16W		R504 R506 R507-511 R512 R513-515			RK73HB1J102J RK73HB1J222J RK73HB1J102J RK73HB1J101J RK73HB1J102J	CHIP R 1.0K J 1/16W CHIP R 2.2K J 1/16W CHIP R 1.0K J 1/16W CHIP R 100 J 1/16W CHIP R 1.0K J 1/16W	
R426-429 R431 R432,433 R434 R435,436			RK73HB1J000J RK73HB1J474J RK73HB1J000J RK73HB1J393J RK73HB1J104J	CHIP R 0.0 J 1/16W CHIP R 470K J 1/16W CHIP R 0.0 J 1/16W CHIP R 39K J 1/16W CHIP R 100K J 1/16W		R516 R517 R518 R519-528 R529-531			RK73HB1J101J RK73HB1J102J RK73HB1J101J RK73HB1J102J RK73HB1J101J	CHIP R 100 J 1/16W CHIP R 1.0K J 1/16W CHIP R 100 J 1/16W CHIP R 1.0K J 1/16W CHIP R 100 J 1/16W	
R437 R438,439 R440 R441 R442			RK73HB1J471J RK73HB1J104J RK73HB1J000J RK73HB1J153J RK73HB1J102J	CHIP R 470 J 1/16W CHIP R 100K J 1/16W CHIP R 0.0 J 1/16W CHIP R 15K J 1/16W CHIP R 1.0K J 1/16W		R532 R533-535 R536-540 R541 R542			RK73HB1J102J RK73HB1J101J RK73HB1J102J RK73HB1J101J RK73HB1J102J	CHIP R 1.0K J 1/16W CHIP R 100 J 1/16W CHIP R 1.0K J 1/16W CHIP R 100 J 1/16W CHIP R 1.0K J 1/16W	
R443 R444 R445 R446 R447			RK73HB1J474J RK73HB1J564J RK73HB1J154J RK73HB1J274J RK73HB1J104J	CHIP R 470K J 1/16W CHIP R 560K J 1/16W CHIP R 150K J 1/16W CHIP R 270K J 1/16W CHIP R 100K J 1/16W		R543 R544 R545 R546,547 R548,549			RK73HB1J101J RK73HB1J102J RK73HB1J101J RK73HB1J102J RK73HB1J473J	CHIP R 100 J 1/16W CHIP R 1.0K J 1/16W CHIP R 100 J 1/16W CHIP R 1.0K J 1/16W CHIP R 47K J 1/16W	
R448 R449-452 R453 R454 R455			RK73HB1J103J RK73HB1J474J RK73HB1J104J RK73HB1J474J RK73HB1J102J	CHIP R 10K J 1/16W CHIP R 470K J 1/16W CHIP R 100K J 1/16W CHIP R 470K J 1/16W CHIP R 1.0K J 1/16W		R701-707 R709-715 R716 R717-722 R723			RK73HB1J000J RK73HB1J000J RK73GB2A000J RK73HB1J104J RK73HB1J105J	CHIP R 0.0 J 1/16W CHIP R 0.0 J 1/16W CHIP R 0.0 J 1/10W CHIP R 100K J 1/16W CHIP R 1.0M J 1/16W	
R456 R457,458 R459,460 R461 R462			RK73HB1J474J RK73HB1J104J RK73HB1J102J RK73HB1J103J RK73HB1J102J	CHIP R 470K J 1/16W CHIP R 100K J 1/16W CHIP R 1.0K J 1/16W CHIP R 10K J 1/16W CHIP R 1.0K J 1/16W		R724 R725 R726 R727-729 R730			RK73HB1J104J RK73HB1J100J RK73HB1J104J RK73HB1J105J RK73HB1J471J	CHIP R 100K J 1/16W CHIP R 10 J 1/16W CHIP R 100K J 1/16W CHIP R 1.0M J 1/16W CHIP R 470 J 1/16W	
R463 R464 R465,466 R467 R468 R469 R470			RK73HB1J104J RK73HB1J474J RK73HB1J103J RK73HB1J104J RK73HB1J000J RK73HB1J474J RK73HB1J683J	CHIP R 100K J 1/16W CHIP R 470K J 1/16W CHIP R 10K J 1/16W CHIP R 100K J 1/16W CHIP R 0.0 J 1/16W CHIP R 470K J 1/16W CHIP R 68K J 1/16W		R731,732 R733 R735 R736 R737 R738 R739			RK73HB1J105J RK73HB1J473J RK73HB1J473J RK73HB1J823J RK73HB1J153J RK73HB1J563J RK73HB1J823J	CHIP R 1.0M J 1/16W CHIP R 47K J 1/16W CHIP R 47K J 1/16W CHIP R 82K J 1/16W CHIP R 15K J 1/16W CHIP R 56K J 1/16W CHIP R 82K J 1/16W	

PARTS LIST

CONTROL UNIT (X53-4260-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R740			RK73HB1J000J	CHIP R 0.0 J 1/16W		R813			RK73HB1J273J	CHIP R 27K J 1/16W	
R741			RK73HB1J474J	CHIP R 470K J 1/16W		R814			RK73HB1J564J	CHIP R 560K J 1/16W	
R742,743			RK73HB1J103J	CHIP R 10K J 1/16W		R815			RK73HB1J104J	CHIP R 100K J 1/16W	
R744			RK73HB1J223J	CHIP R 22K J 1/16W		R816			RK73HB1J683J	CHIP R 68K J 1/16W	
R745			RK73HB1J682J	CHIP R 6.8K J 1/16W		R818			RK73HB1J104J	CHIP R 100K J 1/16W	
R746			RK73HB1J563J	CHIP R 56K J 1/16W		R819,820			RK73HB1J103J	CHIP R 10K J 1/16W	
R747			RK73HB1J333J	CHIP R 33K J 1/16W		R821			RK73HB1J104J	CHIP R 100K J 1/16W	
R748			RK73HB1J103J	CHIP R 10K J 1/16W		R822,823			RK73HB1J103J	CHIP R 10K J 1/16W	
R749			RK73HB1J472J	CHIP R 4.7K J 1/16W		R824			RK73HB1J393J	CHIP R 39K J 1/16W	
R750			RK73HB1J103J	CHIP R 10K J 1/16W		R825			RK73HB1J104J	CHIP R 100K J 1/16W	
R751			RK73HB1J000J	CHIP R 0.0 J 1/16W		R826			RK73HB1J334J	CHIP R 330K J 1/16W	
R752			RK73HB1J101J	CHIP R 100 J 1/16W		R827			RK73HB1J184J	CHIP R 180K J 1/16W	
R753			RK73HB1J683J	CHIP R 68K J 1/16W		R828,829			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R754			RK73HB1J564J	CHIP R 560K J 1/16W		R830			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R755			RK73HB1J104J	CHIP R 100K J 1/16W		R831			RK73HB1J474J	CHIP R 470K J 1/16W	
R756			RK73HB1J101J	CHIP R 100 J 1/16W		R832			RK73HB1J473J	CHIP R 47K J 1/16W	
R757			RK73HB1J223J	CHIP R 22K J 1/16W		R833			RK73HB1J684J	CHIP R 680K J 1/16W	
R758			RK73HB1J103J	CHIP R 10K J 1/16W		R834			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R759			RK73HB1J101J	CHIP R 100 J 1/16W		R835			RK73HB1J153J	CHIP R 15K J 1/16W	
R761-764			RK73HB1J223J	CHIP R 22K J 1/16W		R836			RK73HB1J473J	CHIP R 47K J 1/16W	
R765			RK73HB1J334J	CHIP R 330K J 1/16W		R837			RK73HB1J683J	CHIP R 68K J 1/16W	
R766			RK73HB1J000J	CHIP R 0.0 J 1/16W		R838			RK73HB1J564J	CHIP R 560K J 1/16W	
R767			RK73HB1J103J	CHIP R 10K J 1/16W		R839			RK73HB1J333J	CHIP R 33K J 1/16W	
R768			RK73HB1J224J	CHIP R 220K J 1/16W		R840			RK73HB1J123J	CHIP R 12K J 1/16W	
R769,770			RK73HB1J334J	CHIP R 330K J 1/16W		R841			RK73HB1J564J	CHIP R 560K J 1/16W	
R771			RK73HB1J153J	CHIP R 15K J 1/16W		R842			RK73HB1J104J	CHIP R 100K J 1/16W	
R775			RK73HB1J183J	CHIP R 18K J 1/16W		R843			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R777			RK73HB1J473J	CHIP R 47K J 1/16W		R844			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R778			RK73HB1J333J	CHIP R 33K J 1/16W		R845			RK73HB1J104J	CHIP R 100K J 1/16W	
R779			RK73HB1J473J	CHIP R 47K J 1/16W		R846			RK73HB1J471J	CHIP R 470 J 1/16W	
R780			RK73HB1J104J	CHIP R 100K J 1/16W		R847			RK73HB1J182J	CHIP R 1.8K J 1/16W	
R782			RK73HB1J104J	CHIP R 100K J 1/16W		R848			RK73HB1J000J	CHIP R 0.0 J 1/16W	K
R783			RK73HB1J183J	CHIP R 18K J 1/16W		R849,850			RK73HB1J000J	CHIP R 0.0 J 1/16W	K3
R784			RK73HB1J104J	CHIP R 100K J 1/16W		R850			RK73HB1J000J	CHIP R 0.0 J 1/16W	K
R785			RK73HB1J682J	CHIP R 6.8K J 1/16W		R851,852			RK73HB1J683J	CHIP R 68K J 1/16W	
R786			RK73HB1J000J	CHIP R 0.0 J 1/16W							
R787			RK73HB1J124J	CHIP R 120K J 1/16W		VR1	2B	*	R31-0666-05	VARIABLE RESISTOR(VOL)	
R788			RK73HB1J473J	CHIP R 47K J 1/16W		S1	2B	*	S60-0437-05	ROTARY SWITCH(CH)	
R789			RK73HB1J154J	CHIP R 150K J 1/16W		D11			MA2S111-F	DIODE	
R790			RK73HB1J102J	CHIP R 1.0K J 1/16W		D12 -16		*	1SS416	DIODE	
R791			RK73HB1J474J	CHIP R 470K J 1/16W		D17			EMZ6.8N	ZENER DIODE	
R793			RK73HB1J102J	CHIP R 1.0K J 1/16W		D18, 19		*	HZC6.8-E	ZENER DIODE	
R794			RK73HB1J104J	CHIP R 100K J 1/16W		D20, 21			NNCD6.8G-A	ZENER DIODE	
R795			RK73HB1J000J	CHIP R 0.0 J 1/16W		D22, 23			DA221	DIODE	
R796			RK73HB1J333J	CHIP R 33K J 1/16W		D101			MA2S111-F	DIODE	
R797			RK73HB1J102J	CHIP R 1.0K J 1/16W		D102		*	1SS416	DIODE	
R798			RK73HB1J104J	CHIP R 100K J 1/16W		D401-405			1SS388F	DIODE	
R799			RK73HB1J334J	CHIP R 330K J 1/16W		D406			HRB0502A	DIODE	
R800			RK73HB1J474J	CHIP R 470K J 1/16W		D407			MA2S111-F	DIODE	
R801			RK73HB1J473J	CHIP R 47K J 1/16W		D408			1SS301F	DIODE	
R802			RK73HB1J474J	CHIP R 470K J 1/16W		D409,410			MA2S111-F	DIODE	
R803			RK73HB1J103J	CHIP R 10K J 1/16W		D411		*	1SS416	DIODE	
R804			RK73HB1J000J	CHIP R 0.0 J 1/16W		D412			1SS301F	DIODE	
R805,806			RK73HB1J473J	CHIP R 47K J 1/16W		D413			1SS388F	DIODE	
R807			RK73HB1J102J	CHIP R 1.0K J 1/16W		D414,415		*	1SS416	DIODE	
R808			RK73HB1J471J	CHIP R 470 J 1/16W		D416,417			1SS388F	DIODE	
R809			RK73HB1J334J	CHIP R 330K J 1/16W		D701			1SS301F	DIODE	
R810			RK73HB1J332J	CHIP R 3.3K J 1/16W		D702			MA2S111-F	DIODE	
R811			RK73HB1J823J	CHIP R 82K J 1/16W							
R812			RK73HB1J562J	CHIP R 5.6K J 1/16W		D703-706			RB706F-40	DIODE	

If a part reference number is listed in a shaded box, that part does not come with the PCB.

PARTS LIST

CONTROL UNIT (X53-4260-XX)
TX-RX UNIT (X57-7370-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
D707 IC1 IC101 IC102 IC103 IC104			DA221 LMC7101BIM5 Note 1 Note 1 Note 1 TC7SH08FU-F	DIODE MOS-IC ROM IC MICROPROCESSOR IC SRAM IC MOS-IC		Q411 Q412 Q413 Q414,415		*	SSM6N16FE-F SSM3K15TE(F) 2SA1955A-F EMD12	FET FET TRANSISTOR TRANSISTOR	
IC105 IC106 IC107 IC108 IC109		*	XC6109C29ANN RV5C386A SM5023CNDH-G Note 1 TC7SH08FU-F	ANALOGUE IC MOS-IC MOS-IC MOS-IC MOS-IC		Q701 Q702,703 Q704 Q705 Q706			2SA1832(GR)F SSM3K15TE(F) 2SC4617(S) 2SC4738(GR)F 2SA1832(GR)F	TRANSISTOR FET TRANSISTOR TRANSISTOR TRANSISTOR	
IC401 IC402 IC403 IC404 IC405		*	TC74LCX245FK TC7VWZ245FK-F LM2682MMX XC6204B332M XC6205B152PRN	MOS-IC MOS-IC MOS-IC MOS-IC ANALOGUE IC		Q707 TH1 TH701			2SJ243-A ERTJ0EV104H ERTJ0EV104H	FET THERMISTOR THERMISTOR	
IC406 IC407 IC408 IC409 IC410		*	XC6204B332M LT1616ES6-PBF TC75S51FE(F) TC7W66FK-F MCP6021-E/OT	MOS-IC ANALOGUE IC MOS-IC MOS-IC MOS-IC		TX-RX UNIT (X57-7370-10)					
IC411 IC412,413 IC414 IC415 IC416		*	NJM2880U105ZB TPA6201A1DRBR XC61CC5602NR TC7SET08FU-F S-812C318PI-G	ANALOGUE IC ANALOGUE IC MOS-IC MOS-IC ANALOGUE IC		D900			B30-2278-05	LED(RED/YELLOW)	
IC417 IC418 IC701 IC702 IC703		*	TC7WH126FK TC7WT125FUF Note 1 TC75W51FK(F) M62364FP-F	MOS-IC MOS-IC MOS-IC MOS-IC MOS-IC		C500 C501 C502 C503 C504			CK73HB1A104K CC73HCH1H101J CK73HB1H471K CK73HB1A104K CK73HB1C103K	CHIP C CHIP C CHIP C CHIP C CHIP C	0.10UF K 100PF J 470PF K 0.10UF K 0.010UF K
IC704 IC705 IC706 IC707 IC708			TC75S51FE(F) TC75W51FK(F) TC75S51FE(F) TC7W53FK(F) XC6204B502PR	MOS-IC MOS-IC MOS-IC MOS-IC MOS-IC		C505 C506 C508 C509 C511			CC73HCH1H101J CC73HCH1H100C CK73HB1C103K CC73HCH1H100C CK73FBOJ106K	CHIP C CHIP C CHIP C CHIP C CHIP C	100PF J 10PF C 0.010UF K 10PF C 10UF K
IC709 IC710,711 IC712 IC713 IC714			TC7W53FK(F) TC75W51FK(F) TC7S66FUF TC75W51FK(F) TC7W53FK(F)	MOS-IC MOS-IC MOS-IC MOS-IC MOS-IC		C512 C513 C514-516 C517-519 C520			CK73HB1C103K CC73HCH1H101J CK73HB1C103K CC73HCH1H101J CK73GB1E105K	CHIP C CHIP C CHIP C CHIP C CHIP C	0.010UF K 100PF J 0.010UF K 100PF J 1.0UF K
IC715 IC716			TC75S51FE(F) TC75W51FK(F)	MOS-IC MOS-IC		C521 C522 C523,524 C525 C526			CC73HCH1H101J CK73HB1A104K CC73HCH1H101J CC73HCH1H470J CK73HB1A104K	CHIP C CHIP C CHIP C CHIP C CHIP C	100PF J 0.10UF K 100PF J 47PF J 0.10UF K
Q1 Q2 Q3 ,4 Q5 Q101			2SA1362-F(GR) 2SC4617(S) SSM3K15TE(F) 2SJ347F 2SA1832(GR)F	TRANSISTOR TRANSISTOR FET FET TRANSISTOR	K3	C527-529 C533 C534 C535 C536			CC73HCH1H101J CK73HB1H471K CC73HCH1H101J CS77AA1VR15M CC73HCH1H470J	CHIP C CHIP C CHIP C CHIP TNTL CHIP C	100PF J 470PF K 100PF J 0.15UF 35WV 47PF J
Q102 Q103 Q401,402 Q403 Q404		*	2SC4617(S) SSM3K15TE(F) SSM6N16FE-F 2SA1955A-F SSM3K15TE(F)	TRANSISTOR FET FET TRANSISTOR FET	K3 K3	C537 C539 C541 C542 C543		*	CC73HCH1H050B CS77BA1D100M C92-0863-05 C93-0787-05 CC73HCH1H030B	CHIP C CHIP TNTL CHIP TNTL CERAMIC CHIP C	5.0PF B 10UF 20WV 0.047UF 35WV 0.1UF 50WV 3.0PF B
Q405 Q406 Q407 Q408 Q409		*	SSM6N16FE-F 2SB1132(Q,R) UMG3N EMD12 2SA1955A-F	FET TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR		C546 C547,548 C550 C553 C554			CK73HB1H472K CC73HCH1H101J CC73HCH1H050B CC73HCH1H100B CC73HCH1H470J	CHIP C CHIP C CHIP C CHIP C CHIP C	4700PF K 100PF J 5.0PF B 10PF B 47PF J
Q410			SSM3K15TE(F)	FET		C555 C556-559 C562 C565 C566			CK73HBOJ105K CK73HB1H471K CK73HBOJ105K CC73HCH1H270J CC73HCH1H560J	CHIP C CHIP C CHIP C CHIP C CHIP C	1.0UF K 470PF K 1.0UF K 27PF J 56PF J
						C567,568 C570 C571			CC73HCH1H0R5B CC73HCH1HR75B CC73HCH1H040B	CHIP C CHIP C CHIP C	0.5PF B 0.75PF B 4.0PF B

Note 1 : This part cannot be replaced. Therefore, this part is not supplied as a service part.

PARTS LIST

TX-RX UNIT (X57-7370-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C572			CK73FB0J106K	CHIP C 10UF K		C668			CC73GCH1H080B	CHIP C 8.0PF B	
C573			CC73HCH1H050B	CHIP C 5.0PF B		C669			CC73GCH1H040B	CHIP C 4.0PF B	
C574			CC73HCH1H020B	CHIP C 2.0PF B		C670			CK73HB1H471K	CHIP C 470PF K	
C575,576			CC73HCH1H050B	CHIP C 5.0PF B		C671			CC73HCH1H070B	CHIP C 7.0PF B	
C577			CK73HB1H471K	CHIP C 470PF K		C672			CK73HB1H471K	CHIP C 470PF K	
C578			CK73GB0J475K	CHIP C 4.7UF K		C689-691			CK73HB1A104K	CHIP C 0.10UF K	
C579			CC73HCH1H040B	CHIP C 4.0PF B		C700			CC73HCH1H070B	CHIP C 7.0PF B	
C580			CK73HB1H471K	CHIP C 470PF K		C701			CK73HB1C103K	CHIP C 0.010UF K	
C581			CC73HCH1H0R5B	CHIP C 0.5PF B		C703			CK73HB1A104K	CHIP C 0.10UF K	
C582			CK73HB1H471K	CHIP C 470PF K		C704			CC73HCH1H470J	CHIP C 47PF J	
C583			CC73HCH1H0R5B	CHIP C 0.5PF B		C706			CC73HCH1H100B	CHIP C 10PF B	
C584,585			CK73HB1H471K	CHIP C 470PF K		C707			CC73HCH1H680J	CHIP C 68PF J	
C586			CC73HCH1H070B	CHIP C 7.0PF B		C708			CC73HCH1H101J	CHIP C 100PF J	
C587			CK73HB1H471K	CHIP C 470PF K		C709-711			CK73HB1A104K	CHIP C 0.10UF K	
C588			CC73HCH1H100B	CHIP C 10PF B		C712			CC73HCH1H680J	CHIP C 68PF J	
C600			CK73HB1A104K	CHIP C 0.10UF K		C713	*		CK73FB1A106K	CHIP C 10UF K	
C601			CC73HCH1H101J	CHIP C 100PF J		C715			CK73HB1C103K	CHIP C 0.010UF K	
C602			CK73HB1A104K	CHIP C 0.10UF K		C717			CK73HB1C103K	CHIP C 0.010UF K	
C603			CC73HCH1H100B	CHIP C 10PF B		C718			CK73HB1A104K	CHIP C 0.10UF K	
C604,605			CK73HB1H471K	CHIP C 470PF K		C719	*		CK73FB1A106K	CHIP C 10UF K	
C607			CC73HCH1H070B	CHIP C 7.0PF B		C720			CC73HCH1H100B	CHIP C 10PF B	
C610-612			CK73HB1H471K	CHIP C 470PF K		C721			CK73HB1A104K	CHIP C 0.10UF K	
C613			CC73HCH1H070B	CHIP C 7.0PF B		C722			CC73HCH1H470G	CHIP C 47PF G	
C614,615			CK73HB1H471K	CHIP C 470PF K		C723,724			CK73HB1A104K	CHIP C 0.10UF K	
C617,618			CK73HB1H471K	CHIP C 470PF K		C725			CK73HB1C103K	CHIP C 0.010UF K	
C619			CK73HB1A104K	CHIP C 0.10UF K		C727,728			CK73HB1A104K	CHIP C 0.10UF K	
C621			CC73HCH1H150J	CHIP C 15PF J		C729			CK73FB1E474K	CHIP C 0.47UF K	
C622			CK73HB1H471K	CHIP C 470PF K		C730			CK73HB1C103K	CHIP C 0.010UF K	
C623			CC73HCH1H150J	CHIP C 15PF J		C732			CK73HB1H471K	CHIP C 470PF K	
C625			CK73HB1H471K	CHIP C 470PF K		C733,734			CK73HB1C103K	CHIP C 0.010UF K	
C626			CK73HB1A104K	CHIP C 0.10UF K		C735			CC73HCH1H470G	CHIP C 47PF G	
C627			CC73HCH1H100B	CHIP C 10PF B		C736			CK73HB1C103K	CHIP C 0.010UF K	
C628			CC73HCH1H100C	CHIP C 10PF C		C737			CC73HCH1H020B	CHIP C 2.0PF B	
C629			CK73HB1H471K	CHIP C 470PF K		C738			CC73HCH1H220G	CHIP C 22PF G	
C630			CK73GB1E105K	CHIP C 1.0UF K		C739			CC73HCH1H060B	CHIP C 6.0PF B	
C631			CS77AA1A6R8M	CHIP TNTL 6.8UF 10WV		C740,741			CK73HB1C103K	CHIP C 0.010UF K	
C632			CK73HB1H471K	CHIP C 470PF K		C742			CK73FB1A475K	CHIP C 4.7UF K	
C634-637			CK73HB1H471K	CHIP C 470PF K		C743			CK73HB1C103K	CHIP C 0.010UF K	
C639			CC73HCH1H390J	CHIP C 39PF J		C744,745			CK73HB1H471K	CHIP C 470PF K	
C640			CC73HCH1H470J	CHIP C 47PF J		C746			CC73HCH1H090B	CHIP C 9.0PF B	
C641			CC73HCH1H100C	CHIP C 10PF C		C747			CC73HCH1H100B	CHIP C 10PF B	
C642,643			CC73HCH1H151J	CHIP C 150PF J		C748			CK73HB1H471K	CHIP C 470PF K	
C645			CK73GB1C104K	CHIP C 0.10UF K		C749			CC73HCH1H020B	CHIP C 2.0PF B	
C646			CK73GB1E105K	CHIP C 1.0UF K		C750			CK73HB1C103K	CHIP C 0.010UF K	
C647			C93-0941-05	CERAMIC 18PF 50WV		C751			CC73HCH1H100B	CHIP C 10PF B	
C648,649			CK73HB1C103K	CHIP C 0.010UF K		C752			CK73HB1H471K	CHIP C 470PF K	
C650			C93-0937-05	CERAMIC 12PF 50WV		C753			CC73HCH1H020B	CHIP C 2.0PF B	
C651			CK73HB1H471K	CHIP C 470PF K		C754			CC73HCH1H030B	CHIP C 3.0PF B	
C652			C93-0951-05	CERAMIC 47PF 50WV		C755			CC73HCH1H040B	CHIP C 4.0PF B	
C653			CK73HB1H471K	CHIP C 470PF K		C756			CC73HCH1H090B	CHIP C 9.0PF B	
C654	*		C93-0987-05	CERAMIC 7.5PF 50WV		C758			CK73HB1H471K	CHIP C 470PF K	
C660			CC73GCH1H101J	CHIP C 100PF J		C759,760			CK73HB1A104K	CHIP C 0.10UF K	
C661			CK73HB1H471K	CHIP C 470PF K		C761			CK73GB1E105K	CHIP C 1.0UF K	
C662			CC73GCH1H010B	CHIP C 1.0PF B		C764			CC73HCH1H1R5B	CHIP C 1.5PF B	
C663			CC73GCH1H101J	CHIP C 100PF J		C765			CK73HB1H471K	CHIP C 470PF K	
C664			CC73GCH1H040B	CHIP C 4.0PF B		C766			CK73GB1H104K	CHIP C 0.10UF K	
C665			CC73GCH1H020B	CHIP C 2.0PF B		C767			CC73HCH1H090B	CHIP C 9.0PF B	
C666			CC73GCH1H050B	CHIP C 5.0PF B		C768			CC73HCH1H010B	CHIP C 1.0PF B	
C667			CC73GCH1H1R5B	CHIP C 1.5PF B		C769			CK73HB1H471K	CHIP C 470PF K	

PARTS LIST

TX-RX UNIT (X57-7370-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C770			CC73HCH1H040B	CHIP C 4.0PF B		C970,971			CK73HB1H102K	CHIP C 1000PF K	
C771			CK73HB1H471K	CHIP C 470PF K		C972-974			CK73GB1E105K	CHIP C 1.0UF K	
C772			CC73HCH1H090B	CHIP C 9.0PF B		C975		*	C93-0987-05	CERAMIC 7.5PF 50WV	
C773			CC73HCH1H010B	CHIP C 1.0PF B		C976			CC73HCH1H470J	CHIP C 47PF J	
						C977		*	CK73HB1A474K	CHIP C 0.47UF K	
C774			CC73HCH1H030B	CHIP C 3.0PF B		CN600		*	E23-1326-05	TERMINAL	
C775			CK73HB1H471K	CHIP C 470PF K		CN737			E40-6358-05	SOCKET FOR PIN ASSY	
C776			CC73HCH1H090B	CHIP C 9.0PF B		CN900		*	E40-6422-15	SOCKET FOR PIN ASSY	
C777,778			CK73HB1H471K	CHIP C 470PF K		CN901		*	E40-6752-05	FLAT CABLE CONNECTOR	
C779			CK73HB1C103K	CHIP C 0.010UF K		CN902		*	E23-1326-05	TERMINAL	
C780			CK73GB1H104K	CHIP C 0.10UF K		F900			F53-0324-05	FUSE	
C782			CC73HCH1H0R5B	CHIP C 0.5PF B							
C783			CK73GB1E105K	CHIP C 1.0UF K		CF700			L72-1017-05	CERAMIC FILTER	
C784-786			CK73HB1H471K	CHIP C 470PF K		CF701		*	L72-1020-05	CERAMIC FILTER	
C788			CK73GB1H104K	CHIP C 0.10UF K							
C789			CK73HB1H471K	CHIP C 470PF K		L500			L41-4795-39	SMALL FIXED INDUCTOR(4.7U/2520	
C790			CK73HB1A104K	CHIP C 0.10UF K		L503			L92-0163-05	BEADS CORE	
C791			CK73HB1H471K	CHIP C 470PF K		L504			L40-1275-92	SMALL FIXED INDUCTOR(12NH/1608	
C792			CK73HB1A104K	CHIP C 0.10UF K		L508,509			L40-2285-92	SMALL FIXED INDUCTOR(220NH/160	
C794,795			CK73HB1H471K	CHIP C 470PF K		L513			L40-1878-92	SMALL FIXED INDUCTOR(18NH/1608	
C796			CC73HCH1H090B	CHIP C 9.0PF B		L514-519			L40-2285-92	SMALL FIXED INDUCTOR(220NH/160	
C798			CC73HCH1H1R5B	CHIP C 1.5PF B		L520			L40-1878-67	SMALL FIXED INDUCTOR(18NH/8)	
C799			CK73HB1H471K	CHIP C 470PF K		L521			L40-2278-67	SMALL FIXED INDUCTOR(22NH/8)	
C800			CC73HCH1H020B	CHIP C 2.0PF B		L522			L40-2285-92	SMALL FIXED INDUCTOR(220NH/160	
C801			CK73HB1H471K	CHIP C 470PF K		L523			L92-0446-05	BEADS CORE	
C802,803			CC73HCH1H040B	CHIP C 4.0PF B		L524-526			L40-2285-92	SMALL FIXED INDUCTOR(220NH/160	
C804			CC73HCH1H090B	CHIP C 9.0PF B		L527			L92-0446-05	BEADS CORE	
C807			CC73HCH1H050B	CHIP C 5.0PF B		L528			L40-2775-71	SMALL FIXED INDUCTOR(27NH/1005	
C809			CC73GCH1H180J	CHIP C 18PF J		L598,599			L92-0163-05	BEADS CORE	
C810			CC73HCH1H020B	CHIP C 2.0PF B		L600			L40-2275-92	SMALL FIXED INDUCTOR(22NH/1608	
C811			CC73HCH1H090B	CHIP C 9.0PF B		L602			L40-1875-92	SMALL FIXED INDUCTOR(18NH/1608	
C849			CK73HB1H471K	CHIP C 470PF K		L603			L40-1575-92	SMALL FIXED INDUCTOR(15NH/1608	
C850			CC73HCH1H101J	CHIP C 100PF J		L604			L92-0138-05	CHIP FERRITE	
C900			CK73GB1H102K	CHIP C 1000PF K		L605			L40-6865-92	SMALL FIXED INDUCTOR(6.8NH/160	
C901,902			CK73HB1H471K	CHIP C 470PF K		L606			L41-1875-43	SMALL FIXED INDUCTOR(18NH/2015	
C903			CK73GB1H471K	CHIP C 470PF K		L607			L92-0149-05	CHIP FERRITE	
C904-908			CC73HCH1H470J	CHIP C 47PF J		L609			L34-4575-05	AIR-CORE COIL	
C910			CC73HCH1H470J	CHIP C 47PF J		L610			L92-0149-05	CHIP FERRITE	
C912-920			CC73HCH1H470J	CHIP C 47PF J		L611			L41-2285-43	SMALL FIXED INDUCTOR(220NH/201	
C922,923			CC73HCH1H470J	CHIP C 47PF J		L612-614			L34-4564-05	AIR-CORE COIL	
C925-943			CC73HCH1H470J	CHIP C 47PF J		L615			L40-1575-57	SMALL FIXED INDUCTOR(15.0N/5%/	
C944			CK73HB1H471K	CHIP C 470PF K		L701		*	L40-5681-86	SMALL FIXED INDUCTOR(0.56UH/16	
C945,946			CC73HCH1H470J	CHIP C 47PF J		L703			L41-4778-45	SMALL FIXED INDUCTOR(47NH/1608	
C947			CK73HB1H471K	CHIP C 470PF K		L704			L40-1891-86	SMALL FIXED INDUCTOR(1.8U/1608	
C948,949			CK73GB1E105K	CHIP C 1.0UF K		L705,706			L92-0138-05	CHIP FERRITE	
C950			C92-0765-05	CHIP-TAN 4.7UF 16WV		L707			L41-2785-39	SMALL FIXED INDUCTOR(0.27U/252	
C951		*	CK73GB1C224K	CHIP C 0.22UF K		L708			L41-5685-39	SMALL FIXED INDUCTOR(0.56U/252	
C952			CK73HB1H102K	CHIP C 1000PF K		L709,710			L40-1875-92	SMALL FIXED INDUCTOR(18NH/1608	
C953			CK73HB1A104K	CHIP C 0.10UF K		L711			L40-2275-92	SMALL FIXED INDUCTOR(22NH/1608	
C954		*	CK73GB1C224K	CHIP C 0.22UF K		L713-715			L41-8268-14	SMALL FIXED INDUCTOR(8.2NH/201	
C955,956			CK73HB1H102K	CHIP C 1000PF K		L716			L92-0138-05	CHIP FERRITE	
C957,958			CK73GB1E105K	CHIP C 1.0UF K		L717			L41-2285-14	SMALL FIXED INDUCTOR(220NH/201	
C961			CK73HB1H471K	CHIP C 470PF K		L720			L40-1075-92	SMALL FIXED INDUCTOR(10NH/1608	
C962			CC73HCH1E181J	CHIP C 180PF J		L721,722			L41-8268-14	SMALL FIXED INDUCTOR(8.2NH/201	
C963			CK73GB1E105K	CHIP C 1.0UF K		L723			L34-4564-05	AIR-CORE COIL	
C964,965			CK73GB1C224K	CHIP C 0.22UF K		L725			L40-8265-92	SMALL FIXED INDUCTOR(8.2NH/160	
C966			CC73HCH1H220J	CHIP C 22PF J		L726			L41-3378-03	SMALL FIXED INDUCTOR(33N/2P/16	
C967			CK73HB1H471K	CHIP C 470PF K		L780			L40-1085-57	SMALL FIXED INDUCTOR(100N/5%/1	
C968		*	CK73GB1C224K	CHIP C 0.22UF K		L900			L92-0149-05	CHIP FERRITE	
C969			CK73GB1E105K	CHIP C 1.0UF K		L901			L33-1462-05	SMALL FIXED INDUCTOR	

PARTS LIST

TX-RX UNIT (X57-7370-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
X500		*	L77-3016-05	TCXO (19.2M/4P/12)		R606			RK73HB1J331J	CHIP R 330 J 1/16W	
XF700		*	L71-0640-05	MCF (58.05MHZ/16)		R607			RK73HB1J222J	CHIP R 2.2K J 1/16W	
						R608			RK73HB1J470J	CHIP R 47 J 1/16W	
R430			RK73GB2A000J	CHIP R 0.0 J 1/10W		R609			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R431,432			RK73HB1J000J	CHIP R 0.0 J 1/16W		R610			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R500,501			RN73HH1J104D	CHIP R 100K D 1/16W		R612			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R502			RK73HB1J124J	CHIP R 120K J 1/16W		R616			RK73HB1J181J	CHIP R 180 J 1/16W	
R503			RK73HB1J100J	CHIP R 10 J 1/16W		R617			RK73HB1J331J	CHIP R 330 J 1/16W	
R504			RK73HB1J104J	CHIP R 100K J 1/16W		R618			RK73HB1J220J	CHIP R 22 J 1/16W	
R505			RK73HB1J000J	CHIP R 0.0 J 1/16W		R620			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R506			RK73HB1J473J	CHIP R 47K J 1/16W		R622			RK73HB1J101J	CHIP R 100 J 1/16W	
R511-514			RK73HB1J100J	CHIP R 10 J 1/16W		R623			RK73HB1J103J	CHIP R 10K J 1/16W	
R515			RK73HB1J472J	CHIP R 4.7K J 1/16W		R624			RK73HB1J473J	CHIP R 47K J 1/16W	
R519			RK73HB1J100J	CHIP R 10 J 1/16W		R626			RK73HB1J121J	CHIP R 120 J 1/16W	
R520			RK73HB1J102J	CHIP R 1.0K J 1/16W		R627,628			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R521,522			RK73HB1J100J	CHIP R 10 J 1/16W		R629			RK73HB1J273J	CHIP R 27K J 1/16W	
R523			RK73HB1J102J	CHIP R 1.0K J 1/16W		R630			RK73HB1J333J	CHIP R 33K J 1/16W	
R527			RK73HB1J000J	CHIP R 0.0 J 1/16W		R631			RK73HB1J470J	CHIP R 47 J 1/16W	
R529			RK73HB1J102J	CHIP R 1.0K J 1/16W		R632			RK73HB1J103J	CHIP R 10K J 1/16W	
R530			RK73HB1J473J	CHIP R 47K J 1/16W		R633			RK73HB1J101J	CHIP R 100 J 1/16W	
R531			RK73HB1J683J	CHIP R 68K J 1/16W		R634			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R532			RK73HB1J000J	CHIP R 0.0 J 1/16W		R635			RK73HB1J561J	CHIP R 560 J 1/16W	
R533			RK73HH1J184D	CHIP R 180K D 1/16W		R636			RK73HB1J221J	CHIP R 220 J 1/16W	
R534			RK73HH1J473D	CHIP R 47K D 1/16W		R639			RK73HB1J103J	CHIP R 10K J 1/16W	
R535			RK73HB1J151J	CHIP R 150 J 1/16W		R641			RK73HB1J103J	CHIP R 10K J 1/16W	
R536			RK73HB1J000J	CHIP R 0.0 J 1/16W		R642			RK73EB2ER39K	CHIP R 0.39 K 1/4W	
R537			RK73HB1J102J	CHIP R 1.0K J 1/16W		R644			RK73HB1J470J	CHIP R 47 J 1/16W	
R538		*	RK73HH1J391D	CHIP R 390 D 1/16W		R645			RK73EB2ER39K	CHIP R 0.39 K 1/4W	
R539			RK73HB1J106J	CHIP R 10M J 1/16W		R646			RK73HB1J333J	CHIP R 33K J 1/16W	
R541			RK73HB1J103J	CHIP R 10K J 1/16W		R647			RK73EB2ER39K	CHIP R 0.39 K 1/4W	
R542-545			RK73HB1J000J	CHIP R 0.0 J 1/16W		R648,649			RK73HH1J154D	CHIP R 150K D 1/16W	
R546			RK73HB1J104J	CHIP R 100K J 1/16W		R650			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R547			RK73HB1J000J	CHIP R 0.0 J 1/16W		R651-654			RK73HH1J274D	CHIP R 270K D 1/16W	
R548			RK73HB1J104J	CHIP R 100K J 1/16W		R655			RK73HB1J103J	CHIP R 10K J 1/16W	
R549			RK73HB1J271J	CHIP R 270 J 1/16W		R656			RK73HB1J563J	CHIP R 56K J 1/16W	
R550			RK73HB1J154J	CHIP R 150K J 1/16W		R657			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R552			RK73HB1J274J	CHIP R 270K J 1/16W		R658			RK73HB1J182J	CHIP R 1.8K J 1/16W	
R554,555			RK73HB1J473J	CHIP R 47K J 1/16W		R659			RK73HB1J474J	CHIP R 470K J 1/16W	
R557			RK73HB1J152J	CHIP R 1.5K J 1/16W		R660			RK73HB1J473J	CHIP R 47K J 1/16W	
R558			RK73HB1J474J	CHIP R 470K J 1/16W		R661			RK73HB1J104J	CHIP R 100K J 1/16W	
R559		*	RK73HH1J181D	CHIP R 180 D 1/16W		R663			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R560			RK73HB1J220J	CHIP R 22 J 1/16W		R664			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R561		*	RK73HH1J181D	CHIP R 180 D 1/16W		R665,666			RK73HB1J271J	CHIP R 270 J 1/16W	
R562			RK73HB1J102J	CHIP R 1.0K J 1/16W		R667			RK73EB2E823J	CHIP R 82K J 1/4W	
R563			RK73HB1J473J	CHIP R 47K J 1/16W		R669			RK73HB1J471J	CHIP R 470 J 1/16W	
R564			RK73HB1J154J	CHIP R 150K J 1/16W		R670			RK73HB1J224J	CHIP R 220K J 1/16W	
R565			RK73HB1J101J	CHIP R 100 J 1/16W		R701			RK73HB1J561J	CHIP R 560 J 1/16W	
R566			RK73HH1J474D	CHIP R 470K D 1/16W		R702			RK73HB1J334J	CHIP R 330K J 1/16W	
R567			RK73HB1J472J	CHIP R 4.7K J 1/16W		R703			RK73HB1J100J	CHIP R 10 J 1/16W	
R568			RK73HB1J474J	CHIP R 470K J 1/16W		R704			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R570,571			RK73HB1J000J	CHIP R 0.0 J 1/16W		R705			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R572			RK73HB1J100J	CHIP R 10 J 1/16W		R709			RK73HB1J103J	CHIP R 10K J 1/16W	
R574-576			RK73HB1J000J	CHIP R 0.0 J 1/16W		R710			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R599			RK73HB1J104J	CHIP R 100K J 1/16W		R712			RK73HB1J103J	CHIP R 10K J 1/16W	
R600			RK73HB1J102J	CHIP R 1.0K J 1/16W		R714			RK73HB1J100J	CHIP R 10 J 1/16W	
R601			RK73HB1J183J	CHIP R 18K J 1/16W		R717			RK73HB1J473J	CHIP R 47K J 1/16W	
R602			RK73HB1J124J	CHIP R 120K J 1/16W		R718			RK73HB1J183J	CHIP R 18K J 1/16W	
R603			RK73HB1J222J	CHIP R 2.2K J 1/16W		R719			RK73HB1J274J	CHIP R 270K J 1/16W	
R604			RK73HB1J682J	CHIP R 6.8K J 1/16W		R720			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R605			RK73HB1J103J	CHIP R 10K J 1/16W							

PARTS LIST

TX-RX UNIT (X57-7370-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R721			RK73HB1J103J	CHIP R 10K J 1/16W		R799			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R722			RK73HB1J472J	CHIP R 4.7K J 1/16W		R900			RK73HB1J391J	CHIP R 390 J 1/16W	
R724			RK73HB1J104J	CHIP R 100K J 1/16W		R901			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R725			RK73HB1J223J	CHIP R 22K J 1/16W		R902			RK73HB1J100J	CHIP R 10 J 1/16W	
						R903			RK73HB1J821J	CHIP R 820 J 1/16W	
R726			RK73HB1J183J	CHIP R 18K J 1/16W							
R727			RK73HB1J222J	CHIP R 2.2K J 1/16W		R904			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R728			RK73HB1J221J	CHIP R 220 J 1/16W		R905			RK73HB1J330J	CHIP R 33 J 1/16W	
R730			RK73HB1J000J	CHIP R 0.0 J 1/16W		R906			RK73HB1J474J	CHIP R 470K J 1/16W	
R731			RK73HB1J103J	CHIP R 10K J 1/16W		R907			RK73GB2A100J	CHIP R 10 J 1/10W	
						R908			RK73HB1J473J	CHIP R 47K J 1/16W	
R733			RK73HB1J564J	CHIP R 560K J 1/16W							
R735			RK73HB1J101J	CHIP R 100 J 1/16W		R909			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R736			RK73HB1J104J	CHIP R 100K J 1/16W		R910-912			RK73HB1J474J	CHIP R 470K J 1/16W	
R737			RK73HB1J221J	CHIP R 220 J 1/16W		R913			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R738			RK73HB1J272J	CHIP R 2.7K J 1/16W		R914			RK73HB1J154J	CHIP R 150K J 1/16W	
						R915-917			RK73HB1J474J	CHIP R 470K J 1/16W	
R739			RK73HB1J221J	CHIP R 220 J 1/16W							
R740			RK73HB1J470J	CHIP R 47 J 1/16W		R918,919			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R742			RK73HB1J472J	CHIP R 4.7K J 1/16W		R920,921			RK73HB1J473J	CHIP R 47K J 1/16W	
R743			RK73HB1J681J	CHIP R 680 J 1/16W		R922			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R744			RK73HB1J221J	CHIP R 220 J 1/16W		R923			RK73HB1J123J	CHIP R 12K J 1/16W	
						R925			RK73HH1J334D	CHIP R 330K D 1/16W	
R745			RK73HB1J102J	CHIP R 1.0K J 1/16W							
R746			RK73HB1J104J	CHIP R 100K J 1/16W		R926			RK73HH1J223D	CHIP R 22K D 1/16W	
R747			RK73HB1J154J	CHIP R 150K J 1/16W		R927			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R748			RK73HB1J104J	CHIP R 100K J 1/16W		R928			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R749			RK73HB1J184J	CHIP R 180K J 1/16W		R929			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R750			RK73GB2A000J	CHIP R 0.0 J 1/10W		S1			S70-0483-05	TACT SWITCH	
R752,753			RK73HB1J000J	CHIP R 0.0 J 1/16W							
R755			RK73HB1J472J	CHIP R 4.7K J 1/16W		D501			HSC119	DIODE	
R757			RK73HB1J104J	CHIP R 100K J 1/16W		D505			DA221	DIODE	
R758			RK73HB1J103J	CHIP R 10K J 1/16W		D506,507			1SV325F	VARIABLE CAPACITANCE DIODE	
						D510,511			1SV282-F	VARIABLE CAPACITANCE DIODE	
R759,760			RK73HB1J104J	CHIP R 100K J 1/16W		D514-517			1SV282-F	VARIABLE CAPACITANCE DIODE	
R761			RK73HB1J101J	CHIP R 100 J 1/16W							
R762			RK73HB1J103J	CHIP R 10K J 1/16W		D518			HSC119	DIODE	
R763			RK73HB1J824J	CHIP R 820K J 1/16W		D519			1SV278F	VARIABLE CAPACITANCE DIODE	
R764			RK73HB1J104J	CHIP R 100K J 1/16W		D600,601			HSC277	DIODE	
						D604			HZU2ALL	ZENER DIODE	
R765			RK73HB1J000J	CHIP R 0.0 J 1/16W		D605			HZU5CLL	ZENER DIODE	
R768			RK73HB1J000J	CHIP R 0.0 J 1/16W							
R769			RK73HB1J103J	CHIP R 10K J 1/16W		D606,607			HVC131	DIODE	
R770			RK73HB1J680J	CHIP R 68 J 1/16W		D608			HSC119	DIODE	
R771			RK73HB1J181J	CHIP R 180 J 1/16W		D700			HSC119	DIODE	
						D702-704			1SV286F	VARIABLE CAPACITANCE DIODE	
R772			RK73HB1J000J	CHIP R 0.0 J 1/16W		D705			HSC119	DIODE	
R773			RK73HB1J824J	CHIP R 820K J 1/16W							
R774,775			RK73HB1J104J	CHIP R 100K J 1/16W		D706			1SV286F	VARIABLE CAPACITANCE DIODE	
R777			RK73HB1J103J	CHIP R 10K J 1/16W		D708			1SV286F	VARIABLE CAPACITANCE DIODE	
R778			RK73HB1J104J	CHIP R 100K J 1/16W		D709			HVC131	DIODE	
						D710			1SV286F	VARIABLE CAPACITANCE DIODE	
R779			RK73HB1J683J	CHIP R 68K J 1/16W		D711			HVC131	DIODE	
R780			RK73HB1J000J	CHIP R 0.0 J 1/16W							
R781			RK73HB1J182J	CHIP R 1.8K J 1/16W		D901			1SR154-400	DIODE	
R783			RK73HB1J224J	CHIP R 220K J 1/16W		D902			HSC119	DIODE	
R784			RK73HB1J474J	CHIP R 470K J 1/16W							
R785			RK73HB1J104J	CHIP R 100K J 1/16W		IC404			TC75W51FUF	MOS-IC	
R786			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC500		*	LM73CIMKX-0	MOS-IC	
R788			RK73HB1J104J	CHIP R 100K J 1/16W		IC501			LMC7101BIM5	MOS-IC	
R790			RK73HB1J104J	CHIP R 100K J 1/16W		IC502			Note 1	MOS-IC	
R791			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC503			LMC7101BIM5	MOS-IC	
R792			RK73HB1J104J	CHIP R 100K J 1/16W		IC504			TC75W51FUF	MOS-IC	
R794,795			RK73HB1J103J	CHIP R 10K J 1/16W		IC600			TA75W01FUF	MOS-IC	
R796			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC700		*	MCP6021-E/OT	MOS-IC	
R797			RK73HB1J473J	CHIP R 47K J 1/16W		IC701			TK10931VTL-G	ANALOGUE IC	
R798			RK73HB1J470J	CHIP R 47 J 1/16W		IC702,703			LMC7101BIM5	MOS-IC	
						IC900			TC75S51FE(F)	MOS-IC	

Note 1 : This part cannot be replaced. Therefore, this part is not supplied as a service part.

PARTS LIST

TX-RX UNIT (X57-7370-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
IC901			XC9101D09AKR	ANALOGUE IC							
IC902			TK11250CUCB	MOS-IC							
IC903		*	TK71733S	BI-POLAR IC							
Q503			2SC5383-T111	TRANSISTOR							
Q504		*	2SK879-F(Y)	FET							
Q505			2SC5636	TRANSISTOR							
Q507			2SC5383-T111	TRANSISTOR							
Q508,509			2SK508NV(K52)	FET							
Q510			SSM6L05FU-F	FET							
Q511			2SJ347F	FET							
Q512			2SC5636	TRANSISTOR							
Q600,601			2SC5636	TRANSISTOR							
Q602			2SK3077F	FET							
Q603			RD01MUS1-T113	FET							
Q604			2SC5383-T111	TRANSISTOR							
Q605			SSM3K15TE(F)	FET							
Q606			RD07MVS1BT122	FET							
Q607			DTC144EE	DIGITAL TRANSISTOR							
Q608			2SK1824-A	FET							
Q610		*	EMD5	TRANSISTOR							
Q700			2SC5108(Y)F	TRANSISTOR							
Q701			2SC4215-F(Y)	TRANSISTOR							
Q703			3SK318	FET							
Q704			2SC5383-T111	TRANSISTOR							
Q705			3SK318	FET							
Q706			2SK1830F	FET							
Q900			UMG9N	TRANSISTOR							
Q901-903			SSM6L05FU-F	FET							
Q904		*	SSM5H01TU-F	FET							
Q905			2SA1955A-F	TRANSISTOR							
TH600			ERTJ0EV104H	THERMISTOR							