2. EXPLODED VIEWS AND PARTS LIST


*NOTES : • Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*

• The ⚠ mark found on some component parts indicatesthe importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

• Screw adjacent to▽mark on the product are used for disassembly.

• For the applying amount of lobricants or glue, follow the instructions in this manual. (In the case of no amount instructions,apply as you think it appropriate.)

2.1 PACKING

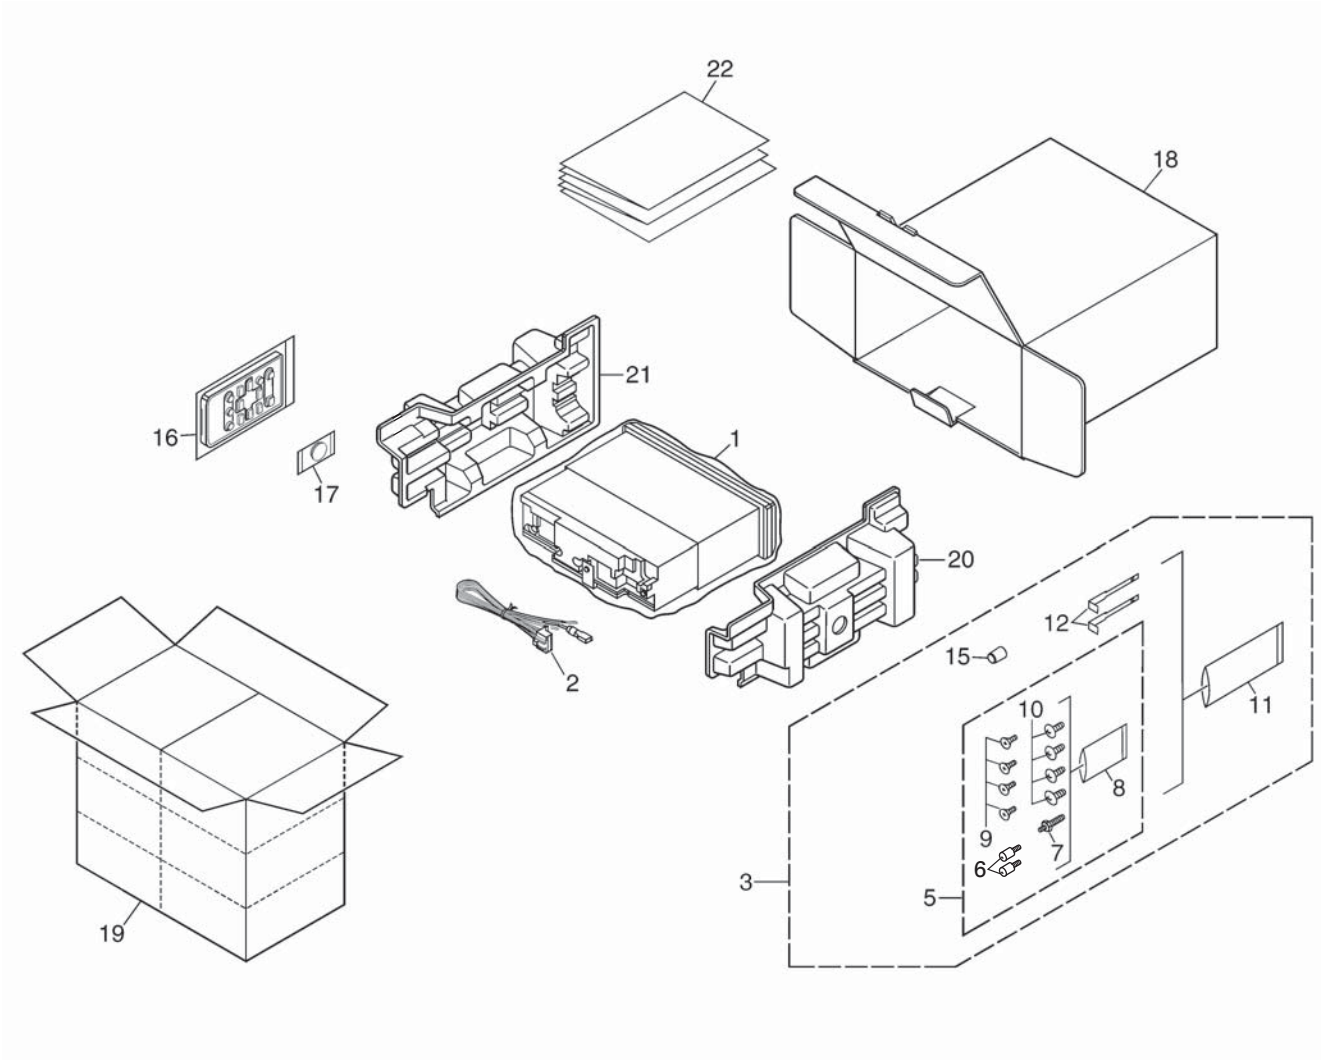


PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Polyethylene Bag	CEG1173
	2	Cord Assy	XDE7008
	3	Accessory Assy	CEA4610
	4	•••••	
	5	Screw Assy	CEA4611
	6	Fixing Screw(M2x4)	CBA1488
	7	Screw	CBA1650
*	8	Polyethylene Bag	CEG-127
	9	Screw	CRZ50P090FTC
	10	Screw	TRZ50P080FTC
*	11	Polyethylene Bag	CEG-158
	12	Handle	CNC5395
	13	•••••	
	14	•••••	
	15	Bush	CNV3930
	16	Remote Control Unit	CXC3173
*	17	Battery	CEX1065
	18	Carton	CHG5430
	19	Contain Box	CHL5430
	20	Protector	XHP7003
	21	Protector	XHP7004
	22-1	Owner's Manual	CRD3953
	22-2	Installation Manual	CRD3954
	22-3	Caution Card	CRP1294
*	22-4	Card	ARY1048
	22-5	Caution Card	CRP1310

Owner's Manual,Installation Manual

Part No.	Language
CRD3953	English, French, Spanish
CRD3954	English, French, Spanish


2.2 EXTERIOR

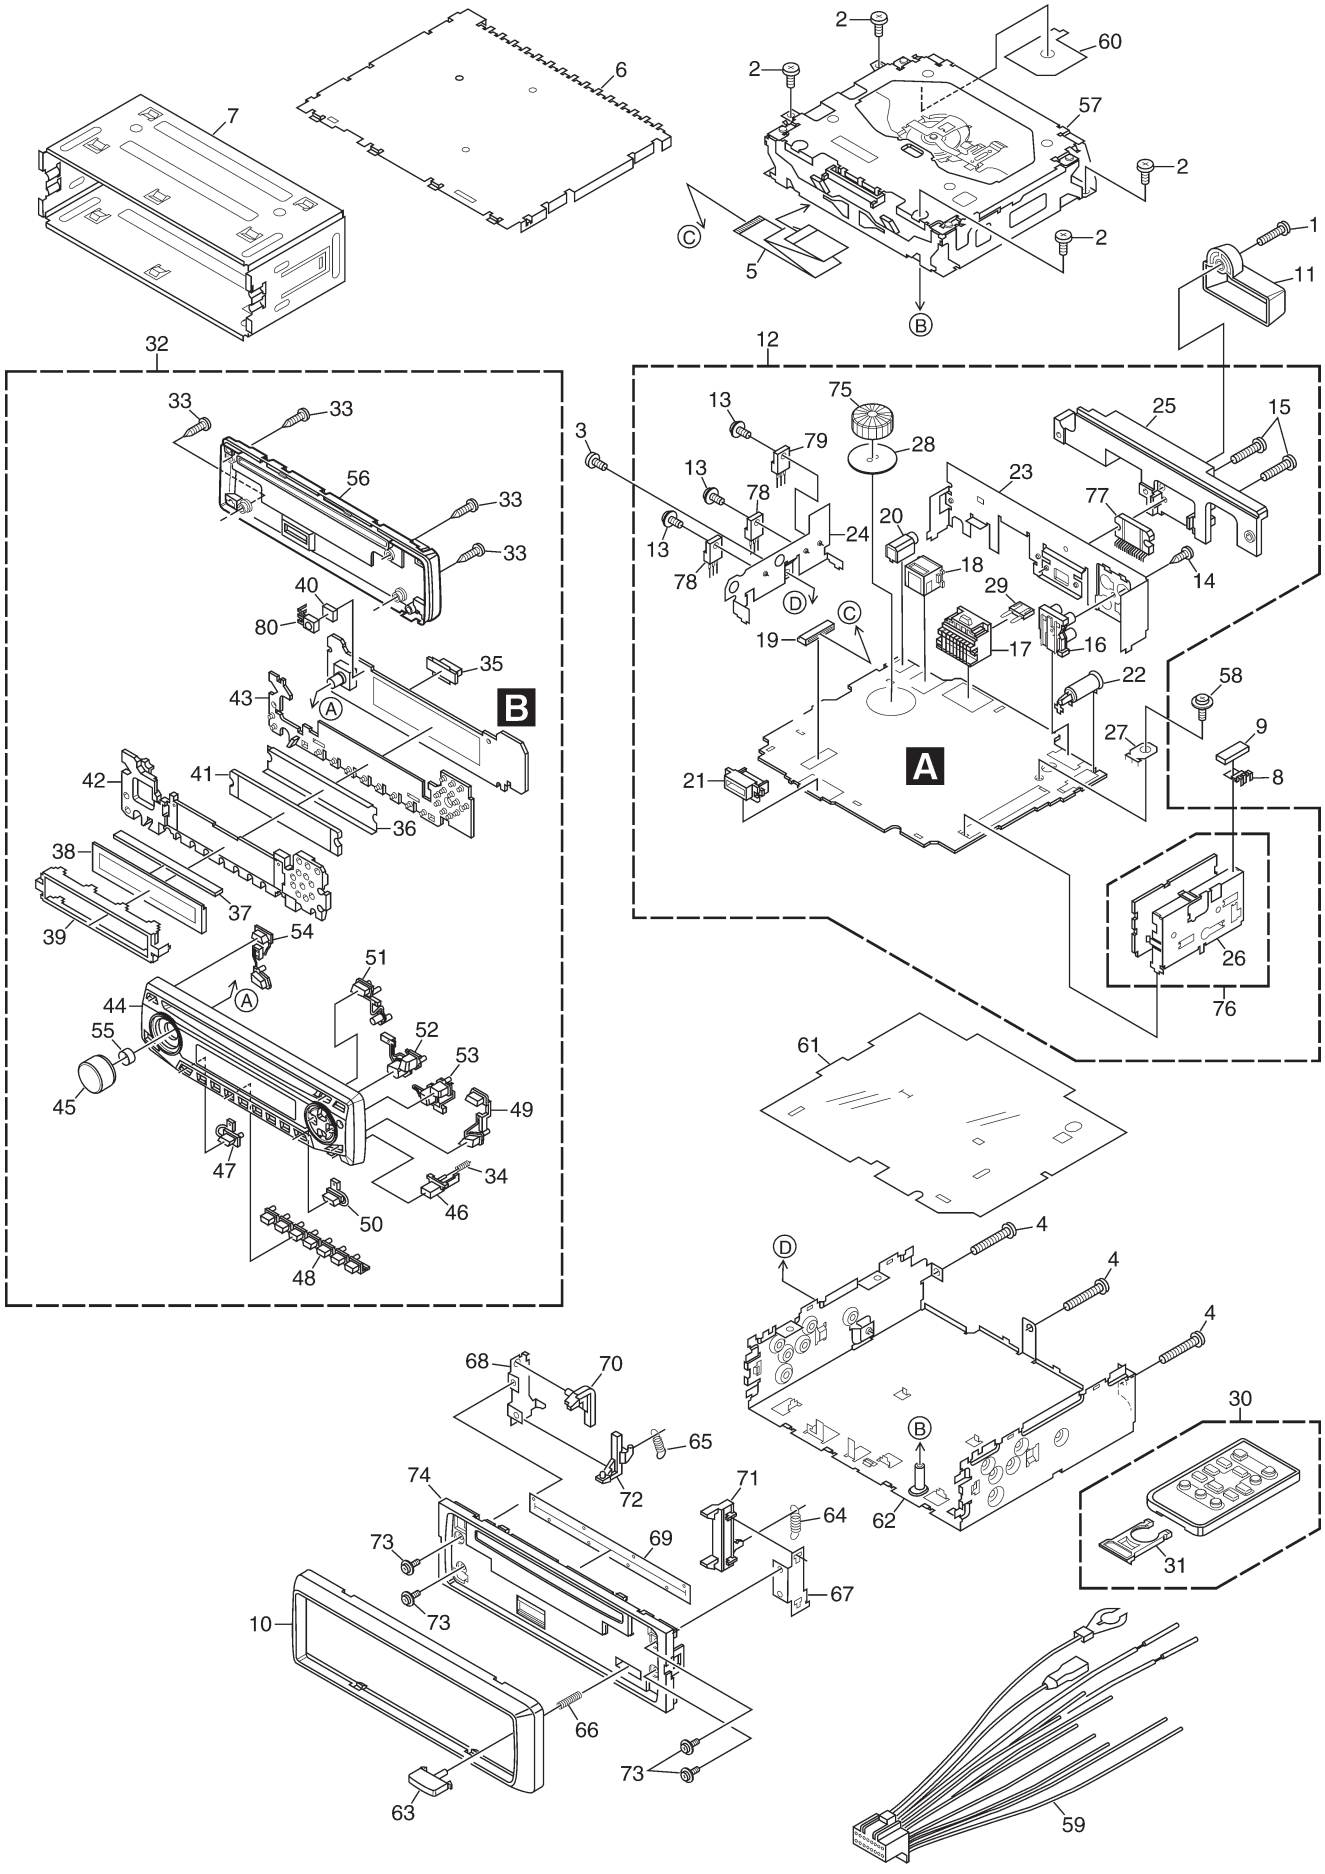
A
B
C
D
E
F
1
2
3
4
32
33
56
40
80
35
43
42
41
36
38
37
39
54
51
44
55
52
53
45
49
47
34
46
50
48
12
13
75
79
28
25
15
3
23
78
24
20
77
18
29
14
19
17
16
22
58
27
9
21
8
26
76
61
68
70
65
72
74
71
64
73
69
67
10
66
63
62
30
31
59
60
57
5
11

EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	BMZ40P140FTC
	2	Screw	BSZ26P060FTC
	3	Screw	BSZ30P060FTC
	4	Screw	BSZ30P200FTC
	5	Cable	CDE7189
	6	Case	CNB2793
	7	Holder	CNC8659
	8	Earth Plate	CNC8915
	9	Cushion	CNM8890
	10	Panel	CNS8046
	11	Holder	CNV7619
	12	Tuner Amp Unit	CWM9786
	13	Screw	ASZ26P060FTC
	14	Screw	BPZ26P080FTC
	15	Screw	BSZ26P160FTC
	16	Pin Jack(CN351)	CKB1054
	17	Plug(CN981)	CKM1376
	18	Connector(CN101)	CKS3408
	19	Connector(CN721)	CKS3837
	20	Connector(CN671)	CKS4124
	21	Connector(CN832)	CKS4944
	22	Antenna Jack(CN401)	CKX1056
	23	Holder	CND1325
	24	Holder	CND1328
	25	Heat Sink	CNR1668
	26	Holder	CND1054
	27	Terminal(CN402)	VNF1084
	28	Insulator	XNM7031
⚠	29	Fuse(10A)	YEK5001
	30	Remote Control Unit	CXC3173
	31	Cover	CNS7068
	32	Detach Grille Assy	CXC3894
	33	Screw	BPZ20P100FZK
	34	Spring	CBH2210
	35	Connector(CN1801)	CKS4943
	36	Sheet	CNM7932
	37	Connector	CNV7369
	38	LCD(LCD1801)	YAW5015
	39	Holder	YNC5005
	40	Cushion	YNM5004
	41	Lighting Conductor	YNV5004
	42	Lighting Conductor	YNV5005
	43	Rubber	YNV5006
	44	Grille Unit	CXC3909
	45	Knob(VOLUME)	YAA5001
	46	Button(DETACH)	YAC5027
	47	Button(SOURCE)	YAC5030
	48	Button(1-6, DISPLAY)	YAC5031
	49	Button(AUDIO, LOUDNESS)	YAC5032
	50	Button(BAND)	YAC5033
	51	Button(EJECT, FUNCTION)	YAC5034
	52	Button(UP, LEFT)	YAC5035
	53	Button(DOWM, RIGHT)	YAC5036
	54	Button(CLOCK, EQ)	YAC5039
	55	Spring	YBL5001
	56	Cover	YNS5038
	57	CD Mechanism Module(S10.1AACA)	CXK5668
	58	Screw	ISS26P055FTC
	59	Cord Assy	XDE7008
	60	Insulator	XNM7106
	61	Insulator	YNM5012
	62	Chassis Unit	YXA5080
	63	Button(DETACH)	CAC4836
	64	Spring	CBH1835
	65	Spring	CBH2208
	66	Spring	CBH2367
	67	Bracket	CNC6791
	68	Holder	CNC8042
	69	Cover	CNM6276
	70	Arm	CNV4692
	71	Arm	CNV4728
	72	Arm	CNV5576
	73	Screw	IMS20P030FZK
	74	Panel	YNS5046
	75	Choke Coil(L981)	CTH1291
	76	FM/AM Tuner Unit(Y401)	CWE1646
	77	IC(IC301)	PAL007A
	78	Transistor(Q751, 901)	2SD2396
	79	IC(IC911)	NJM2388F84
	80	IC(IC1802)	TSOP4840SB1

2.3 CD MECHANISM MODULE

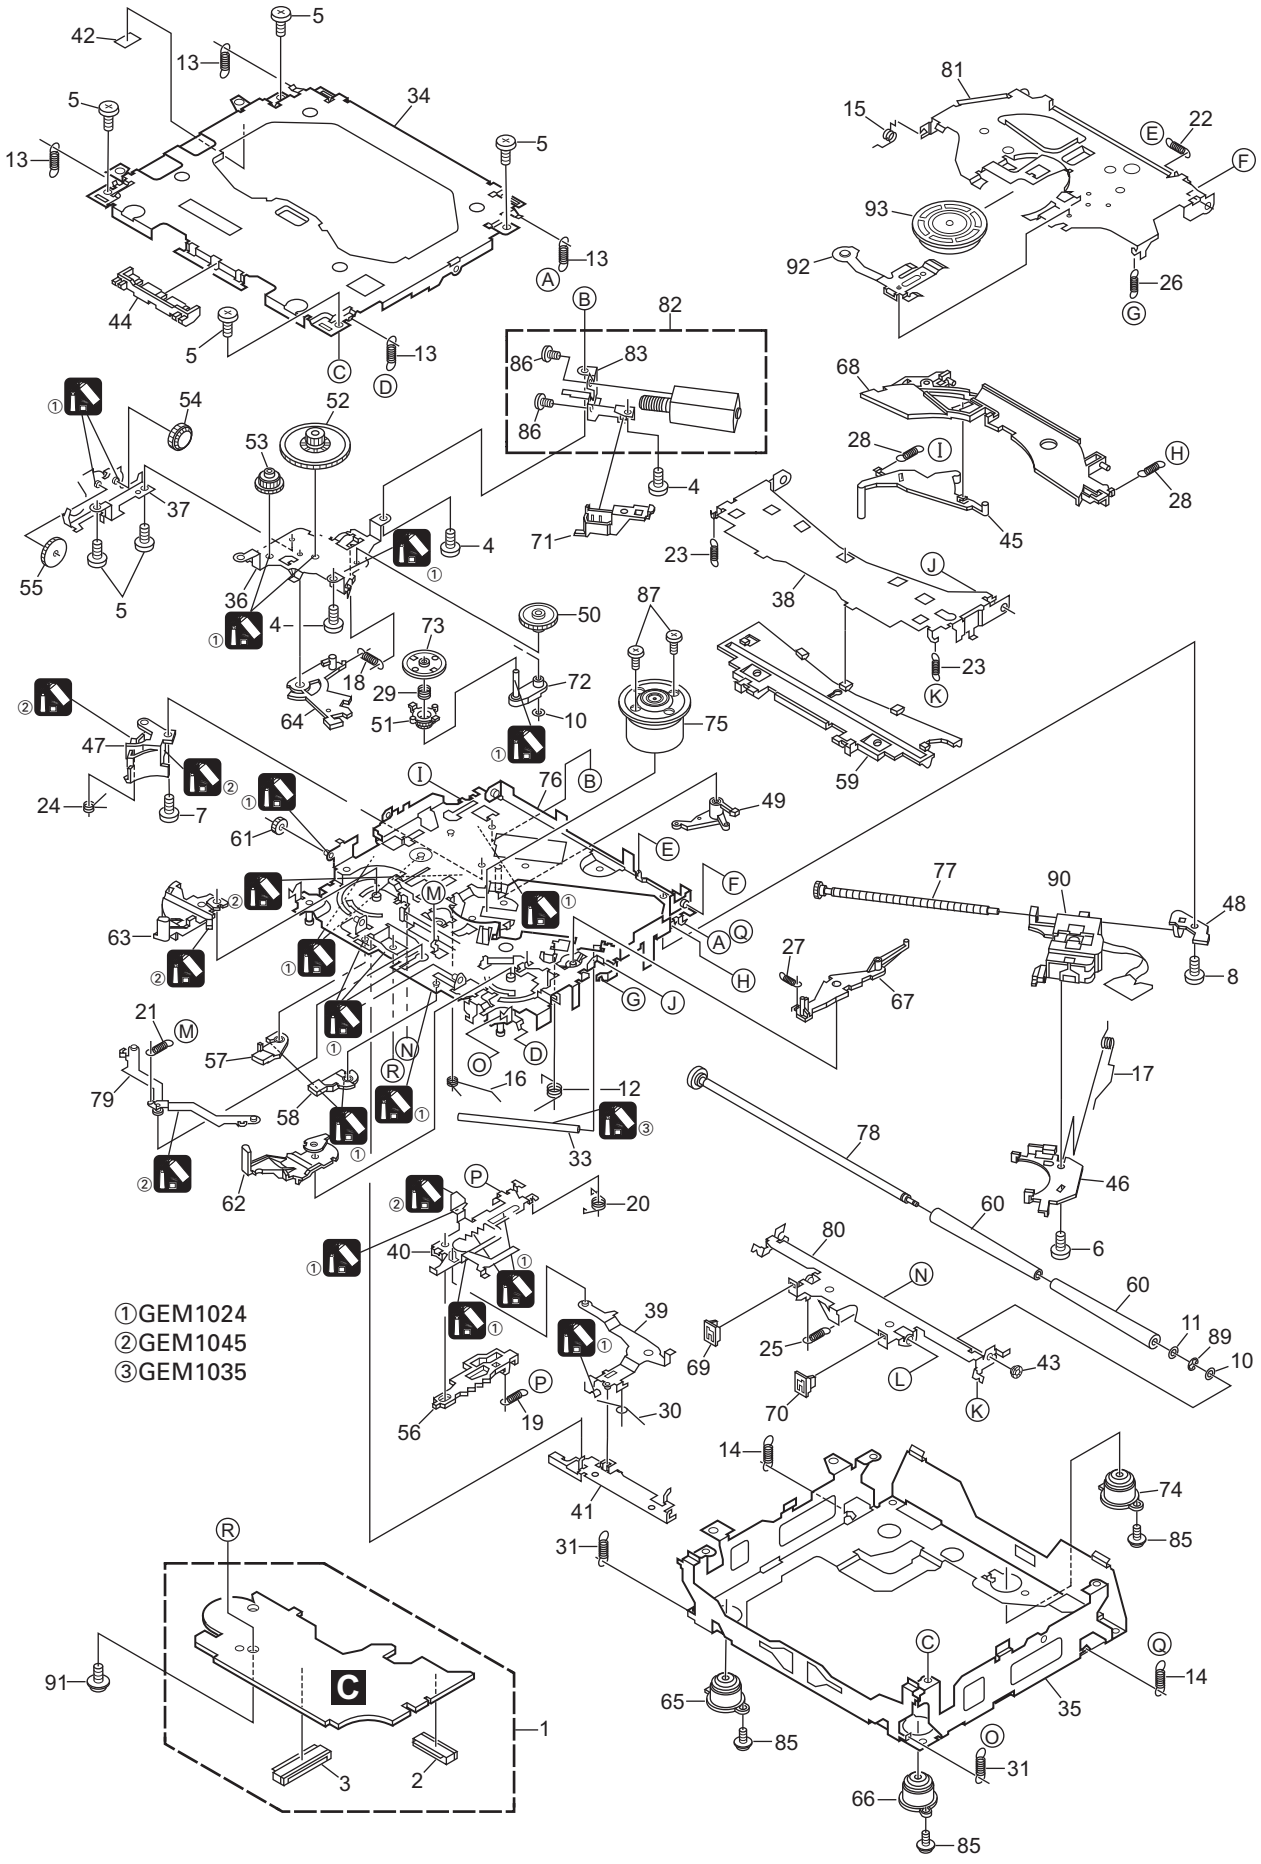

CD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	CD Core Unit(S10.1)	CWX3096
	2	Connector(CN101)	CKS4182
	3	Connector(CN901)	CKS4017
	4	Screw	BMZ20P035FTC
	5	Screw	BSZ20P040FTC
	6	Screw(M2x4)	CBA1362
	7	Screw(M2x3)	CBA1824
	8	Screw(M2x3)	CBA1825
	9	•••••	
	10	Washer	CBF1038
	11	Washer	CBF1060
	12	Spring	CBH2390
	13	Spring	CBH2606
	14	Spring	CBH2607
	15	Spring	CBH2608
	16	Spring	CBH2609
	17	Spring	CBH2610
	18	Spring	CBH2735
	19	Spring	CBH2612
	20	Spring	CBH2613
	21	Spring	CBH2614
	22	Spring	CBH2615
	23	Spring	CBH2616
	24	Spring	CBH2617
	25	Spring	CBH2620
	26	Spring	CBH2621
	27	Spring	CBH2641
	28	Spring	CBH2642
	29	Spring	CBH2643
	30	Spring	CBH2659
	31	Spring	CBH2688
	32	•••••	
	33	Shaft	CLA4441
	34	Frame	CND2443
	35	Frame	CNC9963
	36	Bracket	CND2712
	37	Bracket	CND1895
	38	Arm	CNC9968
	39	Arm	CND1909
	40	Lever	CND2032
	41	Lever	CNC9984
	42	Sheet	CNM8134
	43	Collar	CNV8447
	44	Guide	CNV8448
	45	Arm	CNV8403
	46	Rack	CNV8374
	47	Holder	CNV8376
	48	Holder	CNV8377
	49	Arm	CNV8378
	50	Gear	CNV8379
	51	Gear	CNV8380
	52	Gear	CNV8381
	53	Gear	CNV8382
	54	Gear	CNV8383
	55	Gear	CNV8384
	56	Rack	CNV8385
	57	Arm	CNV8386
	58	Arm	CNV8387
	59	Guide	CNV8388
	60	Roller	CNV8189
	61	Gear	CNV8389
	62	Arm	CNV8391
	63	Arm	CNV8390
	64	Arm	CNV8392
	65	Damper	CNV7313
	66	Damper	CNV7314
	67	Arm	CNV8394
	68	Arm	CNV8395
	69	Guide	CNV8396
	70	Guide	CNV8397
	71	Holder	CNV8398
	72	Arm	CNV8402
	73	Gear	CNV8400
	74	Damper	CNV7618
	75	Motor Unit(M1)	CXC4440
	76	Chassis Unit	CXC2318
	77	Screw Unit	CXB8729
	78	Gear Unit	CXC2397
	79	Arm Unit	CXC2316
	80	Arm	CND1896
	81	Arm	CND1894
	82	Motor Unit(M2)	CXB8933
	83	Bracket	CNC9985
	84	•••••	
	85	Screw(M2x5)	EBA1028
	86	Screw	JFZ20P020FTC
	87	Screw	JGZ17P022FTC
	88	•••••	
	89	Washer	YE20FTC
	90	Pickup Unit(P10)(Service)	CXX1647
	91	Screw	IMS26P030FTC
	92	Spring	CBL1635
	93	Clamper	CNV8372

5. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

  Chip Resistor

  RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J

  Chip Capacitor (except for CQS.....)

  CKS....., CCS....., CSZS.....
- *The ⚠ mark found on some component parts indicatesthe importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Meaning of the figures and others in the parentheses in the parts list.*

  Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

  IC 301 (A, 91, 111) IC NJM2068V

A

Unit Number:CWM9786
Unit Name:Tuner Amp Unit

MISCELLANEOUS

Circuit Symbol and No.		Part No.
IC 101	(A,55,60) IC	HA12240FP
IC 231	(B,83,83) IC	PML003AM
IC 301	(A,101,136) IC	PAL007A
IC 431	(A,144,39) IC	NJM4558MD
IC 601	(A,94,42) IC	PE5467A
IC 651	(A,51,70) IC	BD4834G
IC 911	(A,3,117) IC	NJM2388F84
IC 921	(B,156,24) IC	NJM2391DL1-33
Q 101	(A,42,81) Transistor	2SA1576
Q 102	(A,44,79) Transistor	DTC124EU
Q 301	(A,126,118) Transistor	DTC124EU
Q 351	(A,138,125) Transistor	UMH3N
Q 352	(A,154,123) Transistor	UMH3N
Q 371	(B,134,112) Transistor	UMD2N
Q 391	(A,116,107) Transistor	2SC4081
Q 751	(A,3,66) Transistor	2SD2396
Q 753	(B,24,51) Transistor	UMD2N
Q 761	(B,25,29) Transistor	2SA1577
Q 762	(B,20,29) Transistor	DTC114EU
Q 851	(B,62,31) Transistor	2SA1576
Q 852	(B,60,27) Transistor	DTC114EU
Q 871	(A,37,18) Transistor	2SB1238
Q 872	(A,34,9) Transistor	DTC114EU
Q 901	(A,3,101) Transistor	2SD2396
Q 902	(B,28,65) Transistor	UMD2N
Q 931	(A,57,113) Transistor	UMX1N
D 391	(A,14,83) Diode	HZS7L(B2)
D 392	(A,124,112) Diode	DAN202U
D 441	(A,152,37) Diode	UDZS5R6(B)
D 751	(A,13,62) Diode	HZS9L(A1)
D 801	(B,117,26) Diode	UMZ6R8EN
D 803	(B,63,23) Diode	UDZS10(B)
D 811	(B,77,16) Diode	UMZ6R8N
D 901	(A,27,75) Diode	HZS6L(B1)
D 902	(A,30,71) Diode	MPG06G-6415G50
D 921	(A,142,21) Diode	MPG06G-6415G50
D 931	(A,51,111) Diode	HZU7L(C3)
D 932	(A,58,109) Diode	HZU7L(A1)
D 971	(A,119,125) Diode	MPG06G-6415G50
D 972	(A,122,118) Diode	MPG06G-6415G50
D 981	(A,66,110) Diode	MPG06G-6415G50
D 982	(A,69,108) Diode	MPG06G-6415G50
ZNR401	(B,156,110) Surge Protector	RCCA-201Q31UA-PI
L 101	(A,75,62) Inductor	LAU2R2K
L 211	(A,58,83) Inductor	LAU2R2K
L 401	(A,152,93) Ferri-Inductor	LAU4R7K
L 402	(A,148,85) Inductor	LAU1R0K
L 403	(A,148,63) Inductor	LAU1R0K
L 601	(A,98,64) Inductor	LAU2R2K
L 701	(A,48,51) Inductor	LAU2R2K
L 851	(A,68,26) Inductor	LAU2R2K
L 981	(A,29,104) Choke Coil 600µH	CTH1291
X 601	(A,97,57) Radiator 12.58291MHz	CSS1402
⚠FU351	(B,125,131) Fuse 3A	CEK1286
⚠FU811	(B,58,19) Fuse 375mA	CEK1277
Y 401	(A,159,98) FM/AM Tuner Unit	CWE1646
⚠	Fuse 10A	YEK5001

RESISTORS

R 101	(B,34,130)	RS1/16S150J
R 102	(B,34,132)	RS1/16S470J
R 103	(B,34,120)	RS1/16S101J
R 104	(B,34,134)	RS1/16S101J
R 105	(B,24,131)	RS1/16S181J
R 106	(B,28,118)	RS1/16S181J
R 107	(B,22,131)	RS1/16S223J
R 108	(B,26,118)	RS1/16S223J
R 109	(B,23,119)	RS1/16S102J
R 110	(B,25,118)	RS1/16S102J
R 111	(B,32,118)	RS1/16S222J
R 113	(A,39,80)	RS1/16S332J
R 114	(A,40,77)	RS1/16S562J
R 211	(A,101,72)	RAB4C102J
R 271	(A,107,92)	RS1/16S101J

Circuit Symbol and No.		Part No.
R 272	(A,103,92)	RS1/16S101J
R 273	(A,109,92)	RS1/16S101J
R 274	(A,105,92)	RS1/16S101J
R 277	(A,110,96)	RS1/16S0R0J
R 278	(A,114,96)	RS1/16S0R0J
R 301	(B,115,122)	RS1/16S153J
R 302	(A,126,129)	RS1/16S103J
R 303	(A,126,131)	RS1/16S103J
R 304	(A,124,131)	RS1/16S331J
R 331	(A,104,107)	RSK1/16S471J
R 332	(A,99,107)	RSK1/16S471J
R 333	(A,106,107)	RSK1/16S471J
R 334	(A,101,107)	RSK1/16S471J
R 351	(B,128,124)	RS1/16S821J
R 352	(B,139,125)	RS1/16S821J
R 353	(B,139,120)	RS1/16S821J
R 354	(B,155,124)	RS1/16S821J
R 355	(B,126,126)	RS1/16S223J
R 356	(B,137,125)	RS1/16S223J
R 357	(B,141,120)	RS1/16S223J
R 368	(B,153,123)	RS1/16S223J
R 371	(B,140,105)	RS1/16S102J
R 372	(A,128,112)	RS1/16S0R0J
R 391	(A,119,107)	RS1/16S104J
R 392	(A,115,105)	RS1/16S104J
R 393	(A,127,126)	RS1/16S222J
R 401	(B,155,60)	RS1/16S681J
R 402	(B,154,78)	RS1/16S681J
R 403	(B,154,80)	RS1/16S681J
R 404	(B,154,82)	RS1/16S681J
R 405	(B,154,84)	RS1/16S681J
R 407	(B,154,87)	RS1/16S681J
R 408	(B,156,65)	RS1/16S0R0J
R 431	(B,150,39)	RS1/16S103J
R 432	(B,150,37)	RS1/16S103J
R 433	(A,150,40)	RS1/16S103J
R 434	(A,150,39)	RS1/16S103J
R 435	(B,151,43)	RS1/16S103J
R 436	(B,149,41)	RS1/16S103J
R 437	(B,143,44)	RS1/16S103J
R 438	(A,140,40)	RS1/16S103J
R 441	(A,152,41)	RS1/16S681J
R 603	(B,95,50)	RS1/16S104J
R 605	(B,100,53)	RS1/16S102J
R 606	(B,88,50)	RS1/16S473J
R 607	(A,69,57)	RS1/16S104J
R 610	(A,80,29)	RS1/16S103J
R 611	(A,80,31)	RS1/16S473J
R 612	(A,78,36)	RS1/16S104J
R 613	(A,101,29)	RS1/16S103J
R 616	(B,112,41)	RS1/16S472J
R 617	(A,113,39)	RS1/16S102J
R 618	(A,110,42)	RS1/16S104J
R 619	(A,112,42)	RS1/16S104J
R 620	(B,105,40)	RS1/16S104J
R 621	(B,116,41)	RS1/16S104J
R 622	(B,119,41)	RS1/16S104J
R 623	(B,121,41)	RS1/16S104J
R 624	(A,108,46)	RS1/16S681J
R 625	(A,108,47)	RS1/16S681J
R 626	(A,108,49)	RS1/16S681J
R 627	(A,93,30)	RAB4C471J
R 640	(A,107,30)	RS1/16S0R0J
R 651	(A,57,68)	RS1/16S183J
R 652	(A,56,70)	RS1/16S102J
R 671	(B,4,130)	RS1/16S102J
R 672	(B,3,130)	RS1/16S102J
R 701	(A,58,41)	RS1/16S221J
R 702	(A,58,31)	RS1/16S221J
R 703	(A,58,33)	RS1/16S102J
R 704	(A,58,44)	RS1/16S102J
R 705	(A,58,42)	RS1/16S221J
R 706	(A,58,34)	RS1/16S221J
R 707	(A,41,42)	RS1/16S221J
R 708	(A,58,38)	RAB4C682J
R 712	(B,46,47)	RS1/16S473J
R 731	(A,64,49)	RS1/16S6800D
R 732	(A,55,51)	RS1/16S6800D
R 733	(A,65,53)	RS1/16S4700D
R 734	(A,58,53)	RS1/16S4700D
R 751	(A,13,54)	RD1/4PU102J
R 761	(B,27,33)	RS1/16S103J
R 762	(B,23,27)	RS1/16S152J
R 801	(A,124,24)	RS1/16S222J
R 802	(A,122,24)	RS1/16S222J
R 803	(A,75,24)	RS1/16S222J
R 804	(A,73,24)	RS1/16S222J
R 805	(A,71,24)	RS1/16S222J
R 817	(A,87,25)	RS1/16S104J
R 841	(A,84,24)	RS1/16S222J
R 851	(B,59,30)	RS1/16S473J
R 852	(B,57,28)	RS1/16S472J
R 853	(B,57,23)	RS1/16S222J
R 871	(A,33,15)	RS1/16S223J
R 872	(A,33,13)	RS1/16S182J
R 873	(A,33,12)	RS1/16S182J
R 901	(B,9,74)	RS1/16S333J
R 902	(B,11,72)	RS1/16S103J
R 911	(B,3,107)	RS1/16S103J
R 912	(A,13,94)	RS1/16S102J
R 931	(A,54,112)	RS1/16S104J
R 932	(A,53,112)	RS1/16S473J
R 933	(A,61,112)	RS1/16S103J
R 934	(A,61,109)	RS1/16S473J
R 935	(A,59,112)	RS1/16S472J
R 981	(A,65,101)	RD1/4PU102J

CAPACITORS

C 101	(B,26,134)	CKSRYB104K25
C 103	(A,56,65)	CKSRYB102K50
C 104	(A,58,65)	CKSRYB102K50
C 105	(B,35,123)	CCSRCH101J50
C 106	(B,28,134)	CCSRCH101J50
C 107	(A,48,60)	CKSRYB472K50
C 108	(B,42,61)	CCSRCH680J50
C 201	(B,118,76)	CKSRYB105K10
C 202	(B,118,71)	CKSRYB105K10
C 203	(A,63,76)	CEJQ1R0M50

Circuit Symbol and No.		Part No.
C 204	(A,64,88)	CEJQ1R0M50
C 205	(A,70,82)	CEJQ2R2M50
C 206	(A,70,88)	CEJQ2R2M50
C 207	(A,70,76)	CEJQ2R2M50
C 208	(A,69,93)	CEJQ2R2M50
C 211	(A,64,82)	CEJQ470M10
C 212	(B,69,85)	CKSRYB104K25
C 213	(A,100,86)	CEJQ100M16
C 231	(B,95,83)	CKSRYB105K10
C 232	(B,74,78)	CKSRYB105K10
C 233	(B,98,77)	CKSRYB153K50
C 234	(B,70,79)	CKSRYB153K50
C 301	(A,45,121) 3300µF/16V	CCH1486
C 302	(B,102,141)	CKSQYB105K16
C 303	(A,115,118)	CEHAR100M16
C 304	(A,110,127)	CKSQYB225K10
C 305	(A,114,112)	CEHAR330M10
C 306	(A,106,127)	CKSQYB225K10
C 331	(A,106,99)	CKSRYB474K10
C 332	(A,100,99)	CKSRYB474K10
C 333	(A,108,99)	CKSRYB474K10
C 334	(A,102,99)	CKSRYB474K10
C 335	(A,105,103)	CKSQYB474K16
C 336	(A,99,103)	CKSQYB474K16
C 337	(A,108,103)	CKSQYB474K16
C 338	(A,102,103)	CKSQYB474K16
C 351	(A,131,123)	CEJQ100M16
C 352	(A,131,116)	CEJQ100M16
C 353	(A,138,116)	CEJQ100M16
C 354	(A,141,110)	CEJQ100M16
C 361	(B,158,135)	CKSRYB104K25
C 401	(B,162,56)	CKSRYB103K50
C 402	(A,150,56)	CEJQ470M6R3
C 403	(B,162,60)	CKSRYB103K50
C 404	(B,162,93)	CKSRYB103K50
C 405	(A,145,95)	CEJQ101M16
C 407	(B,156,56)	CKSYB475K10
C 431	(B,153,39)	CKSRYB474K10
C 432	(B,153,37)	CKSRYB474K10
C 433	(A,150,42)	CCSRCH470J50
C 434	(A,150,37)	CCSRCH470J50
C 435	(B,154,43)	CKSRYB474K10
C 436	(B,153,41)	CKSRYB474K10
C 437	(B,143,42)	CCSRCH470J50
C 438	(A,139,40)	CCSRCH470J50
C 441	(A,141,43)	CKSRYB105K10
C 442	(A,150,36)	CKSRYB105K10
C 602	(B,89,64)	CKSRYB105K10
C 603	(A,87,61)	CEJQ4R7M35
C 604	(B,98,55)	CCSRCH200J50
C 605	(B,95,55)	CCSRCH200J50
C 606	(B,88,52)	CKSRYB105K10
C 607	(A,79,42)	CKSRYB104K25
C 609	(A,112,54)	CCSRCH470J50
C 611	(B,82,48)	CCSRCH680J50
C 651	(A,61,68)	CKSRYB105K10
C 712	(B,35,27)	CCSRCH101J50
C 731	(A,64,51)	CCSQCH222J50
C 732	(A,59,51)	CCSQCH222J50
C 733	(A,64,55)	CCSQCH102J50
C 734	(A,59,55)	CCSQCH102J50
C 751	(B,18,60)	CKSRYB224K10
C 752	(B,12,50)	CKSRYB102K50
C 753	(A,12,48)	CEJQ101M16
C 761	(B,26,38)	CKSRYB473K16
C 762	(A,26,41)	CEAT471M16
C 801	(B,84,18)	CCSRCH220J50
C 802	(B,86,18)	CCSRCH220J50
C 803	(B,88,18)	CCSRCH220J50
C 804	(B,91,18)	CCSRCH220J50
C 811	(B,77,13)	CCSRCH220J50
C 812	(B,77,19)	CCSRCH220J50
C 901	(A,13,67)	CEJQ470M10
C 902	(B,18,65)	CKSRYB103K50
C 903	(B,31,78)	CKSRYB472K50
C 904	(A,22,66) 470µF/16V	CCH1331
C 911	(A,14,76)	CEJQ221M10
C 912	(B,7,112)	CKSRYB103K50
C 913	(A,12,114)	CEJQ101M16
C 921	(A,147,29)	CEJQ220M10
C 922	(B,152,29)	CKSRYB103K50
C 923	(B,149,17)	CKSYB475K10
C 931	(A,59,109)	CKSRYB104K25
C 981	(B,55,118)	CKSRYB104K25

B

Unit Number:
Unit Name:Keyboard Unit

MISCELLANEOUS

IC 1801	(B,29,96) IC	PD6340A
IC 1802	(A,15,27) IC	TSOP4840SB1
D 1801	(B,19,40) Diode	MA152WK
D 1802	(B,24,40) Diode	MA152WA
D 1803	(A,25,38) LED	CL-490S-WF-SD
D 1804	(A,25,128) LED	CL-490S-WF-SD
D 1805	(A,13,22) LED	SML-310PT
D 1806	(A,26,9) LED	SML-310PT
D 1807	(A,30,27) LED	SML-310PT
D 1808	(A,39,50) LED	SML-310PT
D 1809	(A,5,10) LED	SML-310PT
D 1810	(A,34,9) LED	SML-310PT
D 1811	(A,39,84) LED	SML-310PT
D 1812	(A,39,73) LED	SML-310PT
D 1813	(A,39,61) LED	SML-310PT
D 1814	(A,39,96) LED	SML-310PT
D 1815	(A,39,107) LED	SML-310PT
D 1816	(A,39,119) LED	SML-310PT
D 1817	(A,39,35) LED	CL-190UB2-X
D 1818	(A,39,131) LED	CL-190UB2-X
X 1801	(B,37,83) Ceramic Resonator 5.00MHz	CSS1547
S 1827	(A,23,19) Encoder(VOLUME)	YSD5002
IL 1801	(B,23,147) Lamp 40mA,14V	CEL1651
LCD1801	(A,16,45) LCD	YAW5015

RESISTORS

R 1801	(B,23,43)	RS1/16S222J
R 1802	(B,20,43)	RS1/16S222J
R 1803	(B,22,33)	RS1/16S151J
R 1804	(B,22,31)	RS1/16S181J

Circuit Symbol and No.		Part No.
R 1805	(B,19,34)	RS1/16S181J
R 1806	(B,29,142)	RS1/16S181J
R 1807	(B,26,142)	RS1/16S181J
R 1808	(B,13,31)	RS1/16S181J
R 1809	(B,24,33)	RS1/16S151J
R 1810	(B,25,30)	RS1/16S181J
R 1811	(B,21,35)	RS1/16S181J
R 1812	(B,29,140)	RS1/16S181J
R 1813	(B,26,140)	RS1/16S181J
R 1814	(B,15,31)	RS1/16S181J
R 1815	(B,25,33)	RS1/16S151J
R 1816	(B,25,29)	RS1/16S151J
R 1817	(B,22,35)	RS1/16S151J
R 1818	(B,29,137)	RS1/16S151J
R 1819	(B,26,137)	RS1/16S151J
R 1820	(B,17,31)	RS1/16S0R0J
R 1821	(B,27,25)	RS1/16S151J
R 1831	(B,33,23)	RS1/16S472J
R 1832	(B,35,23)	RS1/16S472J
R 1833	(B,12,21)	RS1/16S2R2J
R 1835	(B,20,20)	RS1/16S121J

CAPACITORS

C 1801	(B,18,20)	CKSRYB474K10
C 1802	(B,27,52)	CKSRYB104K25
C 1811	(A,25,32)	CKSRYF104Z25
C 1812	(A,20,129)	CKSRYF104Z25
C 1813	(A,39,33)	CKSRYF104Z25
C 1814	(A,39,133)	CKSRYF104Z25

C

Unit Number:CWX3096
Unit Name:CD Core Unit(S10.1)

MISCELLANEOUS

IC 201	(A,39,24)	IC	UPD63763GJ
IC 203	(B,45,78)	IC	NJM2885DL1-33
IC 301	(A,49,88)	IC	BA5835FP
IC 701	(A,48,51)	IC	PE5454A
IC 703	(A,30,44)	IC	S-812C33AUA-C2N
Q 101	(A,20,22)	Transistor	2SA1577
Q 701	(B,62,59)	Transistor	UN2111
L 203	(A,53,32)	Inductor	CTF1389
L 207	(A,53,31)	Inductor	CTF1389
L 209	(A,26,20)	Inductor	CTF1389
L 703	(A,64,49)	Inductor	CTF1389
X 201	(A,51,35)	Ceramic Resonator 16.934MHz	CSS1603
X 701	(A,59,53)	Ceramic Resonator 4.00MHz	CSS1652
S 901	(A,15,43)	Switch(HOME)	CSN1067
S 903	(B,53,100)	Switch(DSCSNS)	CSN1068
S 904	(B,35,108)	Switch(12EJ)	CSN1067
S 905	(B,48,109)	Switch(8EJ)	CSN1067

RESISTORS

R 101	(A,22,24)	RS1/10SR2R4J
R 102	(A,22,26)	RS1/10SR2R4J
R 103	(A,25,25)	RS1/10SR2R7J
R 201	(A,53,16)	RS1/16SS102J
R 202	(A,55,21)	RS1/16SS333J
R 221	(B,31,18)	RS1/16SS103J
R 222	(B,26,18)	RS1/16SS103J
R 225	(A,27,8)	RS1/16SS103J
R 226	(A,27,7)	RS1/16SS393J
R 227	(B,33,10)	RS1/16SS562J
R 228	(B,36,8)	RS1/16SS122J
R 229	(B,34,8)	RS1/16SS472J
R 232	(B,35,10)	RS1/16SS122J
R 241	(B,42,28)	RS1/16SS333J
R 243	(B,44,28)	RS1/16SS333J
R 245	(A,39,38)	RS1/16SS333J
R 301	(A,48,78)	RS1/16SS183J
R 302	(A,42,78)	RS1/16SS822J
R 304	(A,50,78)	RS1/16SS183J
R 305	(A,42,77)	RS1/16SS822J
R 307	(A,36,85)	RS1/16SS183J
R 308	(A,32,83)	RS1/16SS183J
R 309	(A,38,89)	RS1/16SS183J
R 310	(A,35,88)	RS1/16SS183J
R 601	(B,43,59)	RS1/16S101J
R 602	(B,41,62)	RS1/16S101J
R 606	(B,44,67)	RS1/16S0R0J
R 607	(B,43,56)	RS1/16SS0R0J
R 608	(B,36,67)	RS1/16SS0R0J
R 705	(B,50,59)	RS1/16SS221J
R 706	(B,57,61)	RS1/16SS221J
R 707	(A,62,47)	RS1/16SS473J
R 708	(B,50,57)	RS1/16SS221J
R 710	(A,28,77)	RS1/16SS102J
R 711	(B,44,53)	RS1/16SS221J
R 714	(B,51,53)	RS1/16SS473J
R 716	(A,63,56)	RS1/16SS472J
R 719	(B,49,45)	RS1/16SS221J
R 720	(B,46,52)	RS1/16SS471J
R 724	(A,62,42)	RS1/16S473J
R 725	(B,57,43)	RS1/16SS222J
R 726	(A,52,41)	RS1/16SS103J
R 727	(B,50,54)	RS1/16SS473J
R 729	(A,57,40)	RS1/16SS223J
R 730	(A,65,41)	RS1/16SS473J
R 731	(A,53,41)	RS1/16SS104J
R 737	(A,41,42)	RS1/16SS104J
R 740	(A,35,46)	RS1/16SS473J
R 742	(A,50,41)	RS1/16SS104J
R 746	(B,60,56)	RS1/16SS104J
R 750	(A,39,59)	RS1/16SS473J
R 754	(B,48,60)	RS1/16SS102J
R 755	(A,43,61)	RS1/16SS102J
R 765	(B,51,40)	RAB4CQ221J
R 769	(B,48,40)	RAB4CQ221J
R 773	(B,39,37)	RAB4CQ221J
R 777	(B,48,51)	RS1/16SS221J
R 778	(B,48,52)	RS1/16SS221J
R 779	(B,45,54)	RS1/16SS221J
R 901	(B,52,65)	RAB4CQ221J
R 905	(B,54,60)	RS1/16SS221J
R 906	(B,56,68)	RS1/16SS221J
R 908	(B,45,69)	RS1/16SS0R0J
R 910	(B,44,69)	RS1/16SS0R0J

Circuit Symbol and No.		Part No.
R 911	(B,40,73)	RS1/16SS102J

CAPACITORS

C 103	(B,14,8) 100µF/16V	CCH1504
C 105	(A,19,15)	CKSSYB104K10
C 108	(B,39,16)	CKSSYB104K10
C 110	(A,18,6)	CKSSYB104K10
C 201	(A,51,14)	CKSSYB102K50
C 202	(B,50,17)	CKSSYB104K10
C 203	(A,55,23)	CKSSYB104K10
C 204	(B,28,22)	CEVW220M6R3
C 205	(A,53,25)	CKSSYB104K10
C 208	(B,44,25)	CKSSYB104K10
C 209	(A,54,29)	CKSSYB104K10
C 212	(A,45,37)	CKSRYB105K10
C 216	(A,25,8)	CKSSYB332K50
C 217	(A,28,12)	CKSSYB104K10
C 218	(A,25,7)	CKSSYB473K10
C 219	(A,34,7)	CKSSYB104K10
C 220	(A,33,11)	CKSSYB182K50
C 221	(B,35,6)	CKSSYB104K10
C 222	(B,35,8)	CCSSCH560J50
C 223	(B,33,8)	CCSSCH4R0C50
C 224	(B,40,16)	CKSSYB104K10
C 225	(B,45,14)	CKSSYB103K16
C 226	(B,43,12)	CCSSCH680J50
C 227	(A,45,10)	CCSSCH470J50
C 228	(A,49,9)	CKSSYB103K16
C 234	(B,36,81)	CEVW221M4
C 237	(B,38,29)	CKSSYB104K10
C 239	(B,34,10)	CCSSCH220J50
C 242	(B,58,32)	CKSSYB104K10
C 243	(B,39,76)	CKSSYB104K10
C 244	(B,49,70)	CKSSYB104K10
C 246	(A,23,19)	CKSSYB104K10
C 251	(B,28,31)	CKSRYB102K50
C 260	(A,54,25)	CKSSYB104K10
C 301	(A,43,78)	CKSSYB221K50
C 302	(A,50,79)	CKSSYB221K50
C 303	(A,37,85)	CKSSYB472K25
C 304	(A,39,89)	CKSSYB103K16
C 305	(B,34,92)	CEVW101M16
C 307	(B,56,90)	CKSSYB104K10
C 601	(B,46,60)	CCSRCH102J50
C 602	(B,41,65)	CCSRCH102J50
C 701	(A,64,46)	CKSSYB104K10
C 703	(B,50,61)	CKSSYB103K16
C 706	(B,50,62)	CKSSYB104K10
C 707	(A,36,45)	CKSSYB104K10
C 712	(A,22,42)	CKSRYB224K16
C 714	(B,60,45)	CKSSYB104K10
C 716	(A,61,40)	CKSSYB103K16
C 722	(B,52,48)	CKSQYB475K6R3
C 723	(A,26,41)	CKSRYB105K10
C 903	(B,56,70)	CKSSYB471K50
C 906	(A,40,77)	CKSRYB224K16
C 907	(A,47,76)	CKSSYB103K16
C 910	(B,60,71)	CKSQYB225K10

Circuit Symbol and No.		Part No.
	Pickup Unit(P10)(Service)	CXX1647
M 1	Motor Unit(SPINDLE)	CXC4440
M 2	Motor Unit(LOADING/CARRIAGE)	CXB8933

Miscellaneous Parts List