
2. EXPLODED VIEWS AND PARTS LIST

2.1 PACKING

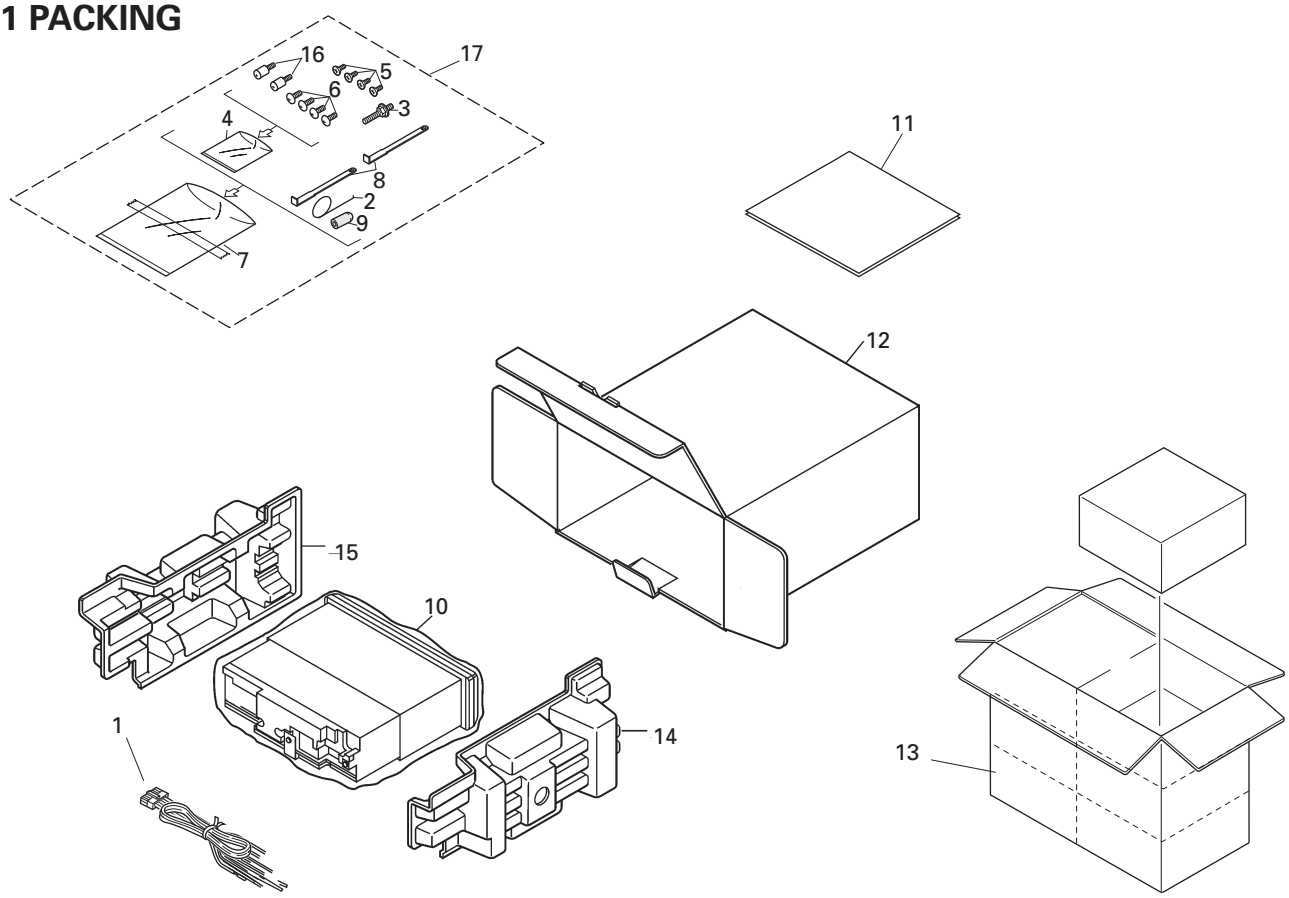

NOTE:

- Parts marked by "*" are generally unavailable because they are not in our Master Spare Parts List.
- Screws adjacent to ∇ mark on the product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
  (In the case of no amount instructions, apply as you think it appropriate.)

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Cord Assy	CDE7060
	2	Spring	CBH1650
	3	Screw	CBA1002
*	4	Polyethylene Bag	CEG-127
	5	Screw	CRZ50P090FTC
	6	Screw	TRZ50P080FTC
*	7	Polyethylene Bag	CEG-158
	8	Handle	CNC5395
	9	Bush	CNV3930
	10	Polyethylene Bag	CEG1173

Mark	No.	Description	Part No.
	11-1	Owner's Manual	See Contrast table(2)
	11-2	Installation Manual	See Contrast table(2)
*	11-3	Card	ARY1048
	11-4	Caution Card	See Contrast table(2)
	12	Carton	See Contrast table(2)
	13	Contain Box	See Contrast table(2)
	14	Protector	CHP2663
	15	Protector	CHP2664
	16	Fixing Screw(M2x4)	See Contrast table(2)
	17	Accessory Assy	CEA3438

(2) CONTRAST TABLE


DEH-5/XU/UC , DEH-15/XU/UC and DEH-1500/XU/UC are constructed the same except for the following:

Mark No.	Symbol and Description	Part No.		
		DEH-5/XU/UC	DEH-15/XU/UC	DEH-1500/XU/UC
11-1	Owner's Manual	CRD3666	CRD3664	CRD3664
11-2	Installation Manual	CRD3667	CRD3665	CRD3665
11-4	Caution Card	Not used	CRP1294	Not used
12	Catron	CHG4989	CHG4988	CHG4987
13	Contain Box	CHL4989	CHL4988	CHL4987
16	Fixing Screw(M2x4)	Not used	CBA1488	CBA1488

● Owner's Manual, Installation Manual

Model	Part No.	Language
DEH-5/XU/UC	CRD3666	English,French,Spanish
	CRD3667	
DEH-15/XU/UC	CRD3664	English,French,Spanish
DEH-1500/XU/UC	CRD3665	


2.2 EXTERIOR(DEH-5/XU/UC)

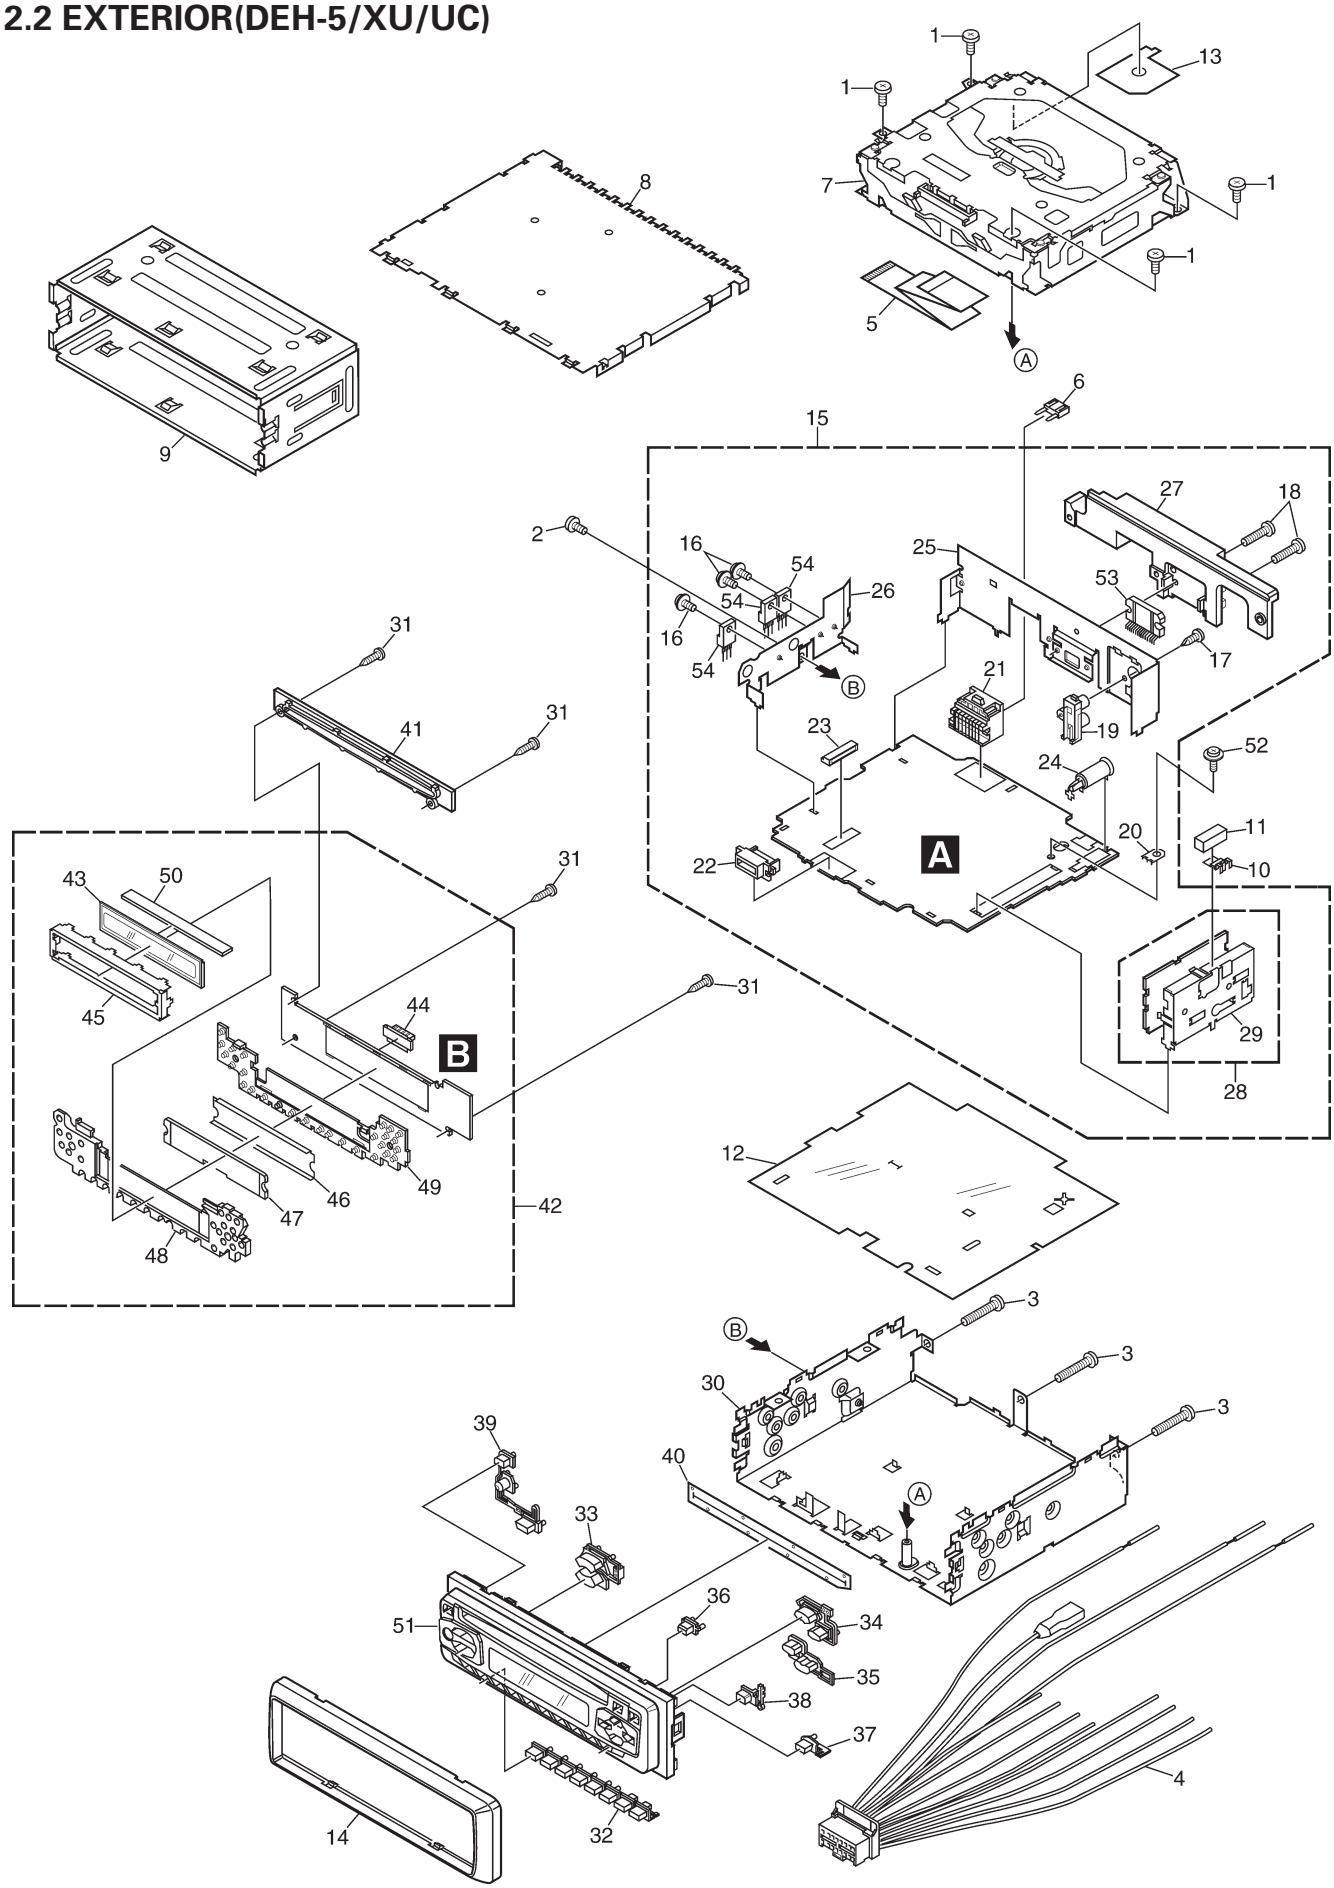

● EXTERIOR(DEH-5/XU/UC) SECTION PARTS LIST

Mark No.	Description	Part No.
1	Screw	BSZ26P060FTC
2	Screw	BSZ30P060FTC
3	Screw	BSZ30P200FTC
4	Cord Assy	CDE7060
5	Cable	CDE7113
6	Fuse(10A)	CEK1208
7	CD Mechanism Module(S10)	CXK5600
8	Case	CNB2793
9	Holder	CNC8659
10	Earth Plate	CNC8915
11	Cushion	CNM8275
12	Insulator	CNM8059
13	Insulator	CNM8174
14	Panel	CNS7239
15	Tuner Amp Unit	CWM8569
16	Screw	ASZ26P060FTC
17	Screw	BPZ26P080FTC
18	Screw	BSZ26P160FTC
19	Pin Jack(CN352)	CKB1028
20	Terminal(CN402)	CKF1059
21	Plug(CN901)	CKM1376
22	Connector(CN831)	CKS3581
23	Connector(CN651)	CKS3835
24	Antenna Jack(CN401)	CKX1056
25	Holder	CND1241
26	Holder	CND1328
27	Heat Sink	CNR1668
28	FM/AM Tuner Unit	CWE1646
29	Holder	CND1054
30	Chassis Unit	CXB9542
31	Screw	BPZ20P080FTC
32	Button(1-6)	CAC7739
33	Button(Volume)	CAC7740
34	Button(Up)	CAC7741
35	Button(Down)	CAC7742
36	Button(Eject)	CAC7743
37	Button(Audio)	CAC7745
38	Button(Band)	CAC7746
39	Button(SRC-EQ)	CAC7841
40	Cover	CNM7500
41	Holder	CNV6867
42	Keyboard Unit	CWM8577
43	LCD(LCD1801)	CAW1756
44	Connector(CN1801)	CKS3580
45	Holder	CNC9617
46	Sheet	CNM7932
47	Lens	CNV7060
48	Lighting Conductor	CNV7367
49	Rubber	CNV7368
50	Connector	CNV7369
51	Grille Unit	CXB9805
52	Screw	ISS26P055FTC
53	IC(IC302)	TDA7384
54	Transistor(Q911,921,991)	2SD2375


2.3 EXTERIOR(DEH-15/XU/UC,1500/XU/UC)

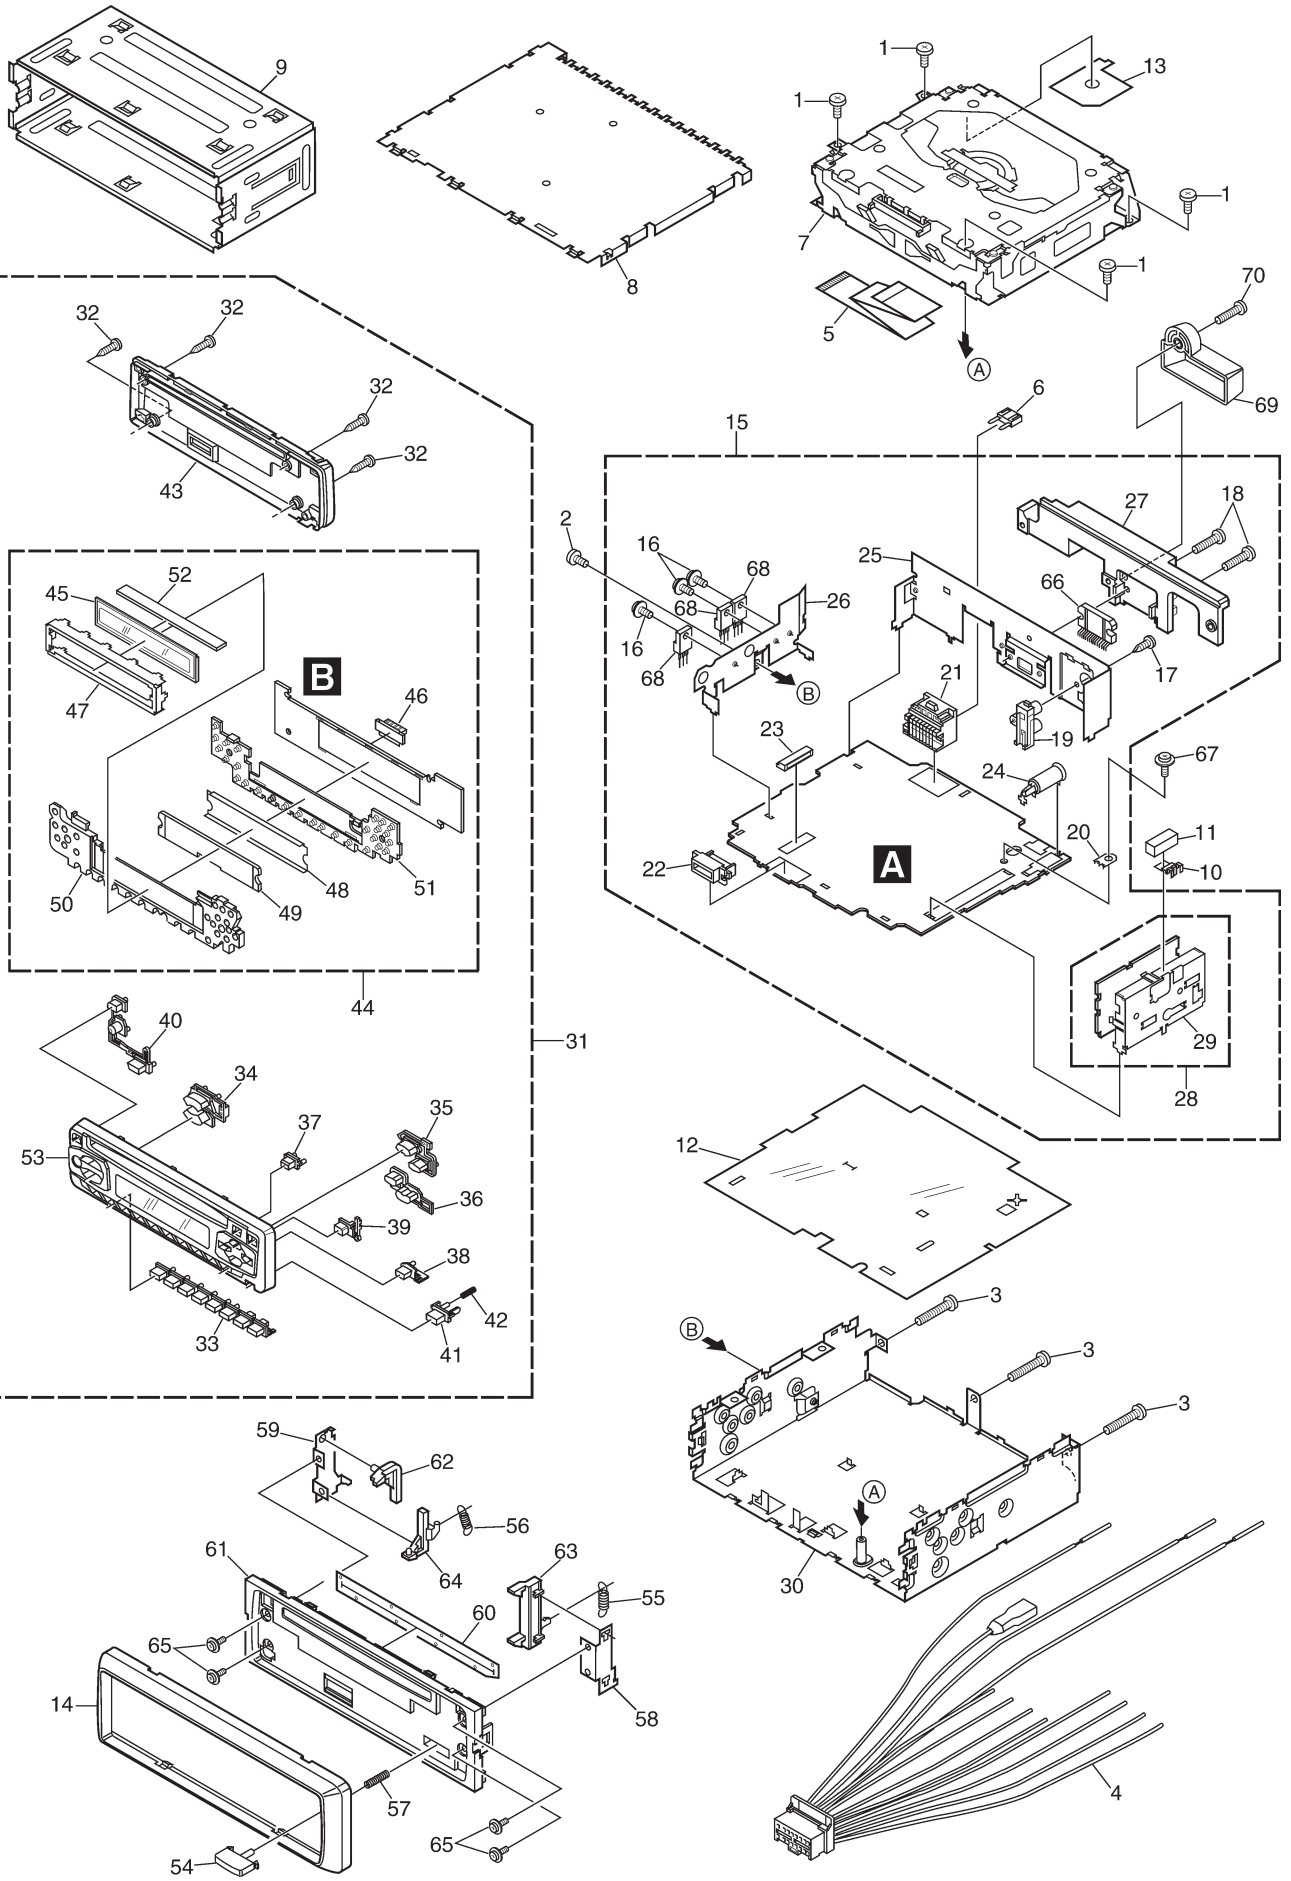

● EXTERIOR(DEH-15/XU/UC, 1500/XU/UC) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	BSZ26P060FTC
	2	Screw	BSZ30P060FTC
	3	Screw	BSZ30P200FTC
	4	Cord Assy	CDE7060
	5	Cable	CDE7113
	6	Fuse(10A)	CEK1208
	7	CD Mechanism Module(S10)	CXK5600
	8	Case	CNB2793
	9	Holder	CNC8659
	10	Earth Plate	CNC8915
	11	Cushion	CNM8275
	12	Insulator	CNM8059
	13	Insulator	CNM8174
	14	Panel	CNS7239
	15	Tuner Amp Unit(DEH-15)	CWM8568
		Tuner Amp Unit(DEH-1500)	CWM8794
	16	Screw	ASZ26P060FTC
	17	Screw	BPZ26P080FTC
	18	Screw	BSZ26P160FTC
	19	Pin Jack(CN352)	CKB1028
	20	Terminal(CN402)	CKF1059
	21	Plug(CN901)	CKM1376
	22	Connector(CN831)	CKS3581
	23	Connector(CN651)	CKS3835
	24	Antenna Jack(CN401)	CKX1056
	25	Holder	CND1241
	26	Holder	CND1328
	27	Heat Sink	CNR1668
	28	FM/AM Tuner Unit	CWE1646
	29	Holder	CND1054
	30	Chassis Unit	CXB9542
	31	Detach Grille Assy(DEH-15)	CXB9571
		Detach Grille Assy(DEH-1500)	CXC1127
	32	Screw	BPZ20P100FZK
	33	Button(1-6)	CAC7739
	34	Button(Volume)	CAC7740
	35	Button(Up)	CAC7741
	36	Button(Down)	CAC7742
	37	Button(Eject)	CAC7743
	38	Button(Band)	CAC7745
	39	Button(Audio)	CAC7746
	40	Button(SRC-EQ)	CAC7749
	41	Button(Detach)	CAC7753
	42	Spring	CBH2210
	43	Cover	CNS7232
	44	Keyboard Unit(DEH-15)	CWM8576
		Keyboard Unit(DEH-1500)	CWM8795
	45	LCD(LCD1801)(DEH-15)	CAW1765
		LCD(LCD1801)(DEH-1500)	CAW1733
	46	Connector(CN1801)	CKS3580
	47	Holder	CNC9617
	48	Sheet	CNM7932
	49	Lens	CNV7060
	50	Lighting Conductor	CNV7367
	51	Rubber	CNV7368
	52	Connector	CNV7369
	53	Grille Unit(DEH-15)	CXB9870
		Grille Unit(DEH-1500)	CXB9869
	54	Button	CAC4836
	55	Spring	CBH1835
	56	Spring	CBH2208
	57	Spring	CBH2367
	58	Bracket	CNC6791
	59	Holder	CNC8042
	60	Cover	CNM6276
	61	Panel	CNS7238
	62	Arm	CNV4692
	63	Arm	CNV4728
	64	Arm	CNV5576
	65	Screw	IMS20P030FZK
	66	IC(IC302)	PAL007A
	67	Screw	ISS26P055FTC
	68	Transistor(Q911,921,991)	2SD1275
	69	Holder(DEH-15)	CNV7619
	70	Screw(DEH-15)	BMZ40P140FTC

2.4 CD MECHANISM MODULE

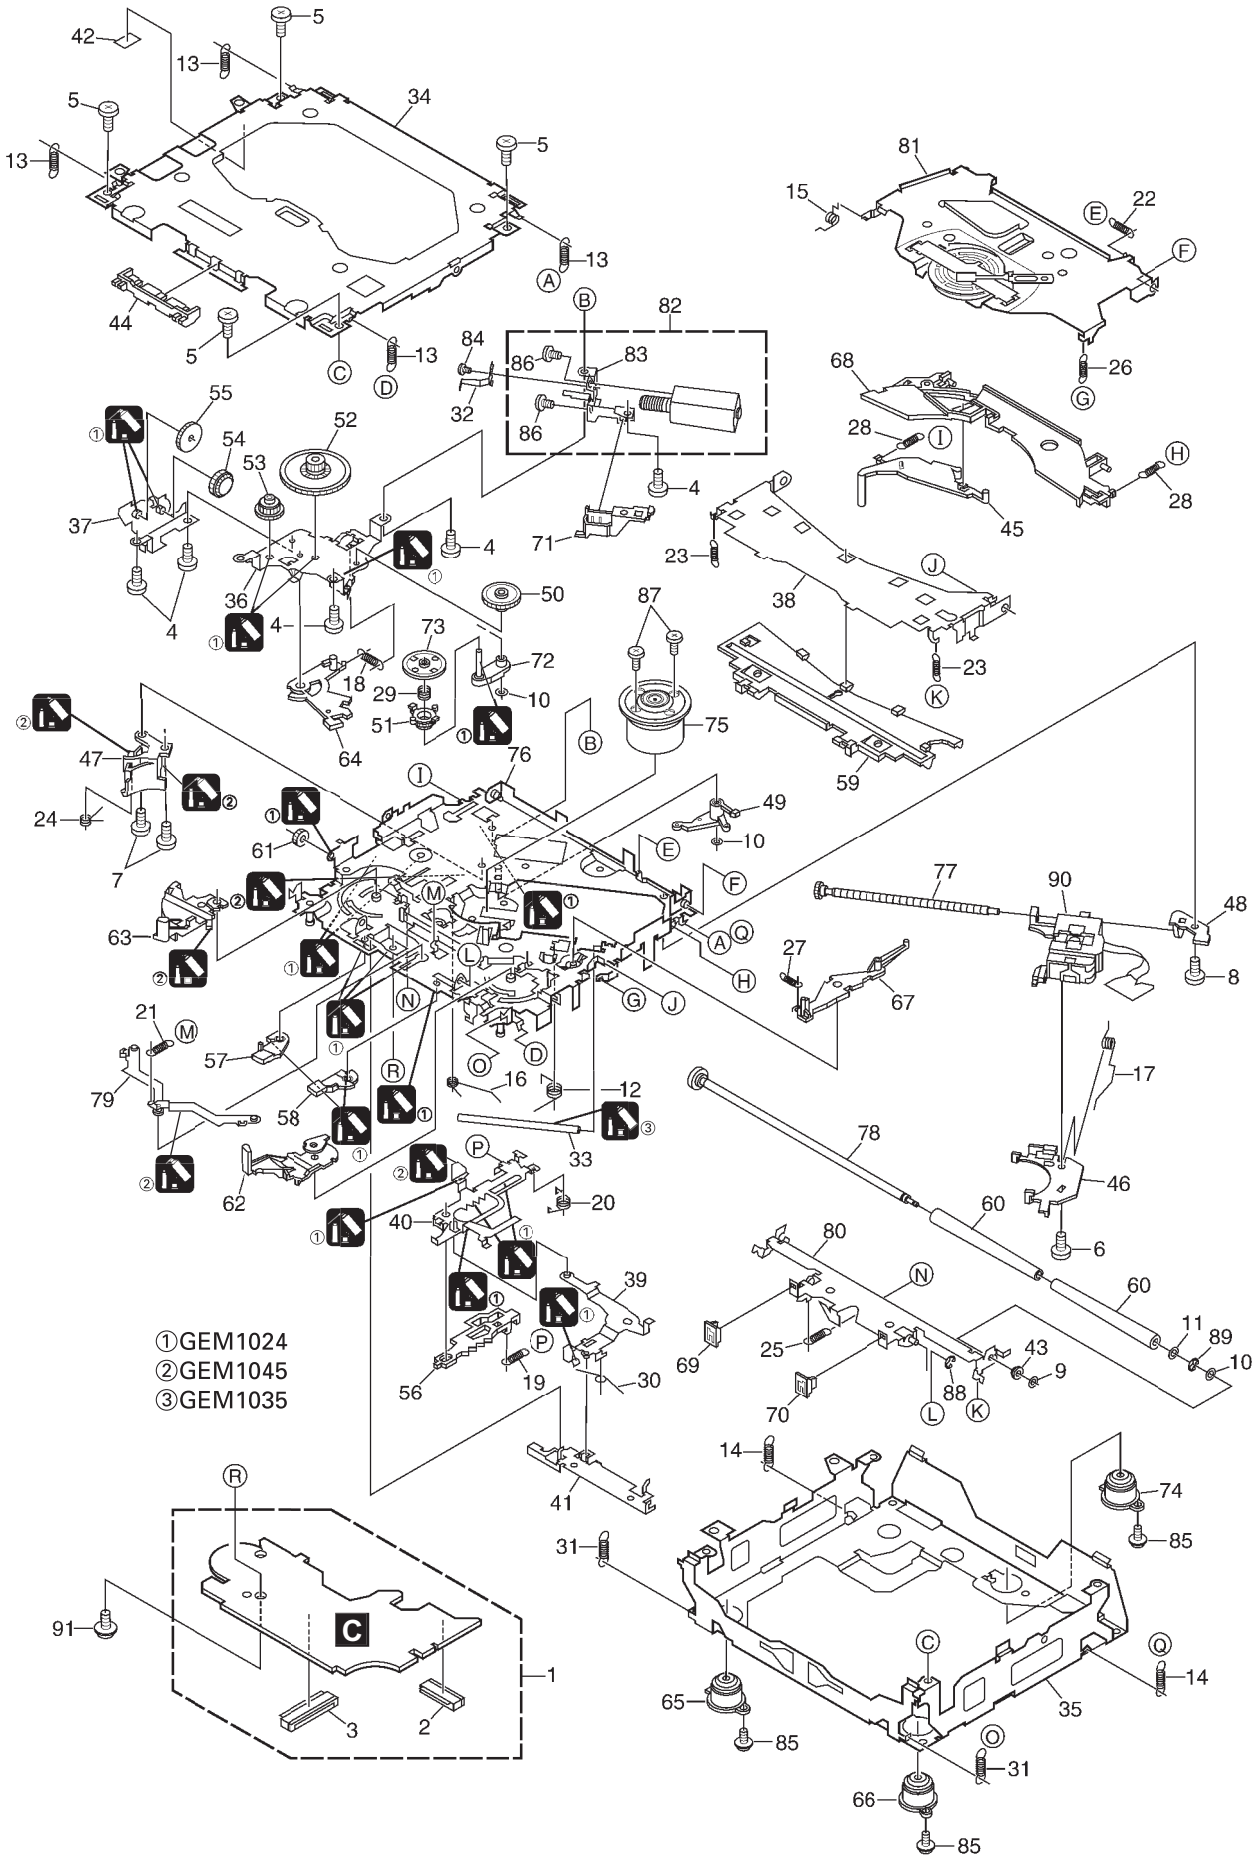

● CD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	CD Core Unit(S10)	CWX2708
	2	Connector(CN101)	CKS4182
	3	Connector(CN701)	CKS4188
	4	Screw	BMZ20P035FTC
	5	Screw	BSZ20P040FTC
	6	Screw(M2x4)	CBA1362
	7	Screw(M2x3)	CBA1511
	8	Screw(M2x3)	CBA1527
	9	Washer	CBF1037
	10	Washer	CBF1038
	11	Washer	CBF1060
	12	Spring	CBH2390
	13	Spring	CBH2606
	14	Spring	CBH2607
	15	Spring	CBH2608
	16	Spring	CBH2609
	17	Spring	CBH2610
	18	Spring	CBH2611
	19	Spring	CBH2612
	20	Spring	CBH2613
	21	Spring	CBH2614
	22	Spring	CBH2615
	23	Spring	CBH2616
	24	Spring	CBH2617
	25	Spring	CBH2620
	26	Spring	CBH2621
	27	Spring	CBH2641
	28	Spring	CBH2642
	29	Spring	CBH2643
	30	Spring	CBH2659
	31	Spring	CBH2688
*	32	Spring	CBL1614
	33	Shaft	CLA3845
	34	Frame	CNC9962
	35	Frame	CNC9963
	36	Bracket	CNC9966
	37	Bracket	CNC9967
	38	Arm	CNC9968
	39	Arm	CNC9973
	40	Lever	CNC9983
	41	Lever	CNC9984
	42	Sheet	CNM8134
	43	Collar	CNV6906
	44	Guide	CNV6925
	45	Arm	CNV7198
	46	Rack	CNV7199
	47	Holder	CNV7201
	48	Holder	CNV7202
	49	Arm	CNV7203
	50	Gear	CNV7207
	51	Gear	CNV7208
	52	Gear	CNV7209
	53	Gear	CNV7210
	54	Gear	CNV7211
	55	Gear	CNV7212
	56	Rack	CNV7214
	57	Arm	CNV7215
	58	Arm	CNV7216
	59	Guide	CNV7217
	60	Roller	CNV7218
	61	Gear	CNV7219
	62	Arm	CNV7221
	63	Arm	CNV7220
	64	Arm	CNV7222
	65	Damper	CNV7313
	66	Damper	CNV7314
	67	Arm	CNV7341
	68	Arm	CNV7342
	69	Guide	CNV7360
	70	Guide	CNV7361
	71	Holder	CNV7437
	72	Arm	CNV7444
	73	Gear	CNV7595
	74	Damper	CNV7618
	75	Motor Unit(M1)	CXB6007
	76	Chassis Unit	CXB8728
	77	Screw Unit	CXB8729
	78	Gear Unit	CXB8731
	79	Arm Unit	CXB8732
	80	Arm Unit	CXB8735
	81	Arm Unit	CXB8852
	82	Motor Unit(M2)	CXB8933
	83	Bracket	CNC9985
	84	Screw	JFZ20P020FTC
	85	Screw(M2x5)	EBA1028
	86	Screw	JFZ20P020FTC
	87	Screw	JGZ17P022FTC
	88	Washer	YE15FTC
	89	Washer	YE20FTC
	90	Pickup Unit(Service)(P10)	CXX1641
	91	Screw	IMS26P030FMC

5. ELECTRICAL PARTS LIST

NOTES:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○J,RS1/○○S○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

A Unit Number : CWM8569(DEH-5)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

IC	151	IC	PML010A
IC	302	IC	TDA7384
IC	551	IC	TPD1018F
IC	601	IC	PE5331A
IC	652	IC	TC7SET08FU
IC	901	IC	BA033SFP
IC	961	IC	S-80834CNY
Q	352	Transistor	IMH3A
Q	452	Transistor	DTC124EU
Q	453	Transistor	DTA124EU
Q	801	Transistor	2SA1036K
Q	821	Transistor	2SA1036K
Q	822	Transistor	DTC114EU
Q	911	Transistor	2SD2375
Q	912	Transistor	IMD2A
Q	921	Transistor	2SD2375
Q	922	Transistor	2SB1243
Q	923	Transistor	DTC114EU
Q	931	Transistor	IMX1
Q	991	Transistor	2SD2375
Q	992	Transistor	IMD2A
D	452	Diode	DAN202U
D	551	Diode	S5688G
D	552	Diode	S5688G
D	901	Diode	S5688G
D	902	Diode	S5688G
D	911	Diode	S5688G
D	912	Diode	HZS6L(B2)
D	921	Diode	HZS9L(B3)
D	931	Diode	HZS7L(C3)
D	932	Diode	HZS7L(A1)
D	991	Diode	HZS9L(B1)
L	151	Inductor	LAU2R2K
L	401	Inductor	LAU1R0K
L	402	Inductor	LAU1R0K
L	404	Ferri-Inductor	LAU4R7K
L	601	Inductor	LAU1R0K
L	801	Inductor	LAU2R2K
L	901	Choke Coil 600µH	CTH1280
X	601	Radiator 12.58291MHz	CSS1402
		FM/AM Tuner Unit	CWE1646
AR	401	Arrester	DSP-201M

RESISTORS

R	153		RS1/16S101J
R	154		RS1/16S101J
R	155		RS1/16S101J
R	156		RS1/16S101J
R	157		RAB4C102J
R	301		RD1/4PU153J
R	353		RS1/16S821J
R	354		RS1/16S821J
R	357		RS1/16S223J
R	358		RS1/16S223J
R	405		RS1/16S681J
R	407		RS1/16S681J
R	408		RS1/16S681J
R	409		RS1/16S681J
R	410		RS1/16S681J
R	414		RS1/16S0R0J
R	420		RS1/16S681J
R	421		RS1/16S473J
R	454		RS1/16S103J
R	455		RS1/16S153J
R	456		RS1/16S221J
R	457		RD1/4PU681J
R	601		RS1/16S473J
R	603		RS1/16S103J
R	604		RS1/16S103J
R	605		RS1/16S221J
R	606		RS1/16S104J
R	607		RD1/4PU222J
R	608		RS1/16S0R0J
R	609		RD1/4PU473J
R	610		RD1/4PU681J
R	611		RS1/16S473J
R	653		RS1/16S104J
R	654		RS1/16S102J
R	661		RS1/16S221J
R	801		RS1/16S153J
R	802		RS1/16S153J
R	803		RS1/16S222J
R	821		RD1/4PU332J
R	823		RS1/16S103J
R	833		RD1/4PU222J
R	834		RD1/4PU222J
R	841		RS1/16S1R0J
R	848		RD1/4PU102J
R	851		RD1/4PU102J
R	911		RS1/16S223J
R	912		RD1/4PU152J
R	921		RS1/16S0R0J
R	923		RD1/4PU821J
R	924		RD1/4PU122J
R	925		RS1/16S103J
R	931		RS1/16S473J
R	932		RS1/16S104J
R	933		RD1/4PU102J
R	934		RS1/16S472J
R	935		RS1/16S473J
R	936		RS1/16S223J
R	940		RS1/16S104J

=====Circuit Symbol and No.		===Part Name	Part No.
R	941		RS1/16S104J
R	955		RS1/16S473J
R	961		RD1/4PU102J
R	962		RS1/16S822J
R	971		RS1/16S0R0J
R	991		RD1/4PU221J
R	992		RD1/4PU221J
R	993		RS1/16S222J
R	994		RS1/16S472J

CAPACITORS

C	151		CKSRYB224K16
C	152		CKSRYB224K16
C	153		CKSRYB105K10
C	154		CKSRYB105K10
C	155		CEJQ4R7M35
C	156		CEJQ4R7M35
C	161		CCSRCH100D50
C	162		CCSRCH100D50
C	163		CCSRCH100D50
C	164		CCSRCH100D50
C	165		CKSRYB104K16
C	166		CEJQ470M10
C	167		CEJQ100M16
C	301		CFTNA224J50
C	302		CFTNA224J50
C	303		CFTNA224J50
C	304		CFTNA224J50
C	309		CKSQYB225K10
C	310		CKSQYB225K10
C	311		CEJQ2R2M50
C	312		CEJQ100M16
C	313		CKSRYB104K16
C	353		CEJQ2R2M50
C	354		CEJQ2R2M50
C	360		CKSQYB103K50
C	401		CKSRYB103K50
C	402		CKSRYB103K50
C	403		CEJQ470M6R3
C	404		CEJQ101M10
C	405		CKSRYB103K50
C	420		CCSRCH470J50
C	451		CEJQ330M10
C	551		CKSQYB103K50
C	552		CKSQYB103K50
C	601		CKSRYB103K50
C	604		CCSRCH200J50
C	605		CCSRCH200J50
C	610		CEJQ4R7M35
C	611		CKSRYB224K16
C	654		CKSRYB104K16
C	801		CKSRYB104K16
C	901	3300µF/16V	CCH1494
C	911		CEJQ470M10
C	912		CKSRYB103K50
C	913	470µF/16V	CCH1331
C	921	330µF/16V	CCH1326
C	922		CEJQ101M16
C	923		CKSRYB103K50
C	961		CKSRYB473K50
C	963		CEJQ100M16
C	981		CKSRYB334K10
C	982		CKSRYB103K50
C	983		CEJQ220M16
C	991		CKSRYB473K50
C	992		CEJQ101M10

=====Circuit Symbol and No.		===Part Name	Part No.

A Unit Number : CWM8568(DEH-15)
Unit Number : CWM8794(DEH-1500)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

IC	151	IC	PML003AM
IC	302	IC	PAL007A
IC	601	IC	PE5330A
IC	652	IC	TC7SET08FU
IC	901	IC	BA033SFP
IC	961	IC	S-80834CNY
Q	352	Transistor	IMH3A
Q	452	Transistor	DTC124EU
Q	453	Transistor	DTA124EU
Q	801	Transistor	2SA1036K
Q	821	Transistor	2SA1036K
Q	822	Transistor	DTC114EU
Q	911	Transistor	2SD2375
Q	912	Transistor	IMD2A
Q	921	Transistor	2SD2375
Q	922	Transistor	2SB1243
Q	923	Transistor	DTC114EU
Q	931	Transistor	IMX1
Q	991	Transistor	2SD2375
Q	992	Transistor	IMD2A
D	452	Diode	DAN202U
D	831	Diode	1SS133
D	832	Diode	1SS133
D	833	Diode	1SS133
D	834	Diode	1SS133
D	835	Diode	1SS133
D	836	Diode	1SS133
D	901	Diode	S5688G
D	902	Diode	S5688G
D	911	Diode	S5688G
D	912	Diode	HZS6L(B2)
D	921	Diode	HZS9L(B3)
D	931	Diode	HZS7L(C3)
D	932	Diode	HZS7L(A1)
D	971	Diode	S5688G
D	972	Diode	S5688G
D	991	Diode	HZS9L(B1)
L	151	Inductor	LAU2R2K
L	401	Inductor	LAU1R0K
L	402	Inductor	LAU1R0K
L	404	Ferri-Inductor	LAU4R7K
L	601	Inductor	LAU1R0K
L	801	Inductor	LAU2R2K
L	901	Choke Coil 600µH	CTH1280
X	601	Radiator 12.58291MHz	CSS1402
AR	401	Arrester	DSP-201M
		FM/AM Tuner Unit	CWE1646

RESISTORS

R	153	RS1/16S101J
R	154	RS1/16S101J
R	155	RS1/16S101J
R	156	RS1/16S101J
R	157	RAB4C102J
R	301	RD1/4PU153J
R	353	RS1/16S821J
R	354	RS1/16S821J
R	357	RS1/16S223J
R	358	RS1/16S223J
R	405	RS1/16S681J
R	407	RS1/16S681J

	Circuit Symbol and No.	Part Name	Part No.
R	408		RS1/16S681J
R	409		RS1/16S681J
R	410		RS1/16S681J
R	414		RS1/16S0R0J
R	420		RS1/16S681J
R	421		RS1/16S473J
R	454		RS1/16S103J
R	455		RS1/16S153J
R	456		RS1/16S221J
R	457		RD1/4PU681J
R	602		RS1/16S473J
R	603		RS1/16S103J
R	604		RS1/16S103J
R	605		RS1/16S221J
R	606		RS1/16S104J
R	607		RD1/4PU222J
R	608		RS1/16S0R0J
R	609		RD1/4PU473J
R	610		RD1/4PU681J
R	611		RS1/16S473J
R	653		RS1/16S104J
R	654		RS1/16S102J
R	661		RS1/16S221J
R	801		RS1/16S153J
R	802		RS1/16S153J
R	803		RS1/16S222J
R	821		RD1/4PU332J
R	823		RS1/16S103J
R	833		RD1/4PU222J
R	834		RD1/4PU222J
R	836		RD1/4PU104J
R	837		RD1/4PU103J
R	838		RD1/4PU102J
R	841		RS1/16S1R0J
R	848		RD1/4PU102J
R	851		RD1/4PU102J
R	911		RS1/16S223J
R	912		RD1/4PU152J
R	921		RS1/16S0R0J
R	923		RD1/4PU821J
R	924		RD1/4PU122J
R	925		RS1/16S103J
R	931		RS1/16S473J
R	932		RS1/16S104J
R	933		RD1/4PU102J
R	934		RS1/16S472J
R	935		RS1/16S473J
R	936		RS1/16S223J
R	940		RS1/16S104J
R	941		RS1/16S104J
R	955		RS1/16S473J
R	961		RD1/4PU102J
R	962		RS1/16S822J
R	991		RD1/4PU221J
R	992		RD1/4PU221J
R	993		RS1/16S222J
R	994		RS1/16S472J

CAPACITORS

	Circuit Symbol and No.	Part Name	Part No.
C	151		CKSRYB224K16
C	152		CKSRYB224K16
C	153		CKSRYB105K10
C	154		CKSRYB105K10
C	155		CEJQ4R7M35
C	156		CEJQ4R7M35
C	157		CKSRYB153K50
C	158		CKSRYB153K50
C	161		CCSRCH100D50
C	162		CCSRCH100D50
C	163		CCSRCH100D50
C	164		CCSRCH100D50
C	165		CKSRYB104K16
C	166		CEJQ470M10
C	167		CEJQ100M16
C	301		CFTNA224J50
C	302		CFTNA224J50
C	303		CFTNA224J50
C	304		CFTNA224J50
C	309		CKSQYB225K10
C	310		CKSQYB225K10
C	312		CEJQ100M16
C	313		CKSRYB104K16
C	353		CEJQ2R2M50
C	354		CEJQ2R2M50
C	360		CKSQYB103K50
C	401		CKSRYB103K50
C	402		CKSRYB103K50
C	403		CEJQ470M6R3
C	404		CEJQ101M10
C	405		CKSRYB103K50
C	420		CCSRCH470J50
C	451		CEJQ330M10
C	601		CKSRYB103K50
C	604		CCSRCH200J50
C	605		CCSRCH200J50
C	610		CEJQ4R7M35
C	611		CKSRYB224K16
C	654		CKSRYB104K16
C	801		CKSRYB104K16
C	901	3300µF/16V	CCH1494
C	911		CEJQ470M10
C	912		CKSRYB103K50
C	913	470µF/16V	CCH1331
C	921	330µF/16V	CCH1326
C	922		CEJQ101M16
C	923		CKSRYB103K50
C	961		CKSRYB473K50
C	963		CEJQ100M16
C	981		CKSRYB334K10
C	982		CKSRYB103K50
C	983		CEJQ220M16
C	991		CKSRYB473K50
C	992		CEJQ101M10

B

Unit Number : CWM8577(DEH-5)
Unit Number : CWM8576(DEH-15)
Unit Number : CWM8795(DEH-1500)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC	1801	IC	PD6340A
D	1801	Diode(DEH-15,1500)	MA152WK
D	1802	Diode(DEH-15,1500)	MA152WK
D1803-1810		LED (DEH-5)	SML-310DT
D1803-1810		LED (DEH-15)	SML-310VT
D1803-1810		LED (DEH-1500)	SML-310PT
D	1811	LED	NSSW440-9159
D	1812	LED	NSSW440-9159
X	1801	Ceramic Resonator 5.00MHz	CSS1547
IL	1801	Lamp 14V 40mA(DEH-5,15)	CEL1638
IL	1801	Lamp 14V 40mA(DEH-1500)	CEL1651
IL	1802	Lamp 14V 40mA(DEH-5,15)	CEL1638
IL	1802	Lamp 14V 40mA(DEH-1500)	CEL1651
LCD1801		LCD(DEH-5)	CAW1756

=====Circuit Symbol and No.	Part Name	Part No.
LCD1801	LCD(DEH-15)	CAW1765
LCD1801	LCD(DEH-1500)	CAW1733

RESISTORS

R	1801		RS1/16S222J
R	1802		RS1/16S222J
R	1803		RS1/16S471J
R	1804		RS1/16S471J
R	1805		RS1/16S471J
R	1806		RS1/16S471J
R	1807		RS1/16S151J
R	1808		RS1/16S181J
R	1809		RS1/16S181J
R	1810		RS1/16S181J
R	1811		RS1/16S151J
R	1812		RS1/16S181J
R	1813		RS1/16S181J
R	1814		RS1/16S181J
R	1815		RS1/16S151J
R	1816	(DEH-5,15)	RS1/16S181J
R	1816	(DEH-1500)	RS1/16S151J
R	1817	(DEH-5,15)	RS1/16S181J
R	1817	(DEH-1500)	RS1/16S151J
R	1818	(DEH-5,15)	RS1/16S181J
R	1818	(DEH-1500)	RS1/16S151J
R	1819		RS1/16S131J

CAPACITORS

C	1801		CKSRYB103K50
C	1811		CKSRYF104Z25
C	1812		CKSRYF104Z25

C Unit Number : CWX2708
Unit Name : CD Core Unit(S10)

MISCELLANEOUS

IC	201	IC	UPD63712GC
IC	301	IC	BA5996FP
IC	701	IC	NJM2391DL1-33
Q	101	Transistor	2SB1132
D	101	Diode	1SS355
D	701	Diode	1SR154-400
X	201	Ceramic Resonator 16.934MHz	CSS1603
S	901	Spring Switch(HOME)	CSN1051
S	902	Spring Switch(CLAMP)	CSN1051
S	903	Spring Switch(DSCSNS)	CSN1052
S	904	Spring Switch(12EJ)	CSN1051
S	905	Spring Switch(8EJ)	CSN1051

RESISTORS

R	101		RS1/10S1R5J
R	102		RS1/10S1R5J
R	103		RS1/10S1R5J
R	104		RS1/10S1R5J
R	105		RS1/10S1R5J
R	201		RS1/16S102J
R	202		RS1/16S1002D
R	203		RS1/16S1002D
R	204		RS1/16S1002D
R	205		RS1/16S1002D
R	206		RS1/16S1002D
R	207		RS1/16S1002D
R	208		RS1/16S1002D
R	209		RS1/16S1002D
R	214		RS1/16S103J
R	215		RS1/16S393J
R	216		RS1/16S122J
R	217		RS1/16S562J
R	218		RS1/16S472J
R	234		RS1/16S0R0J
R	235		RS1/16S103J
R	236		RS1/16S103J
R	301		RS1/16S183J
R	302		RS1/16S822J
R	303		RS1/16S183J
R	304		RS1/16S822J
R	305		RS1/16S183J
R	306		RS1/16S183J
R	307		RS1/16S183J
R	308		RS1/16S183J
R	501		RS1/16S102J
R	503		RS1/16S102J
R	505		RS1/16S102J
R	506		RS1/16S221J
R	507		RS1/16S221J
R	508		RS1/16S221J
R	509		RS1/16S221J
R	601		RS1/16S101J
R	602		RS1/16S101J
R	603		RS1/16S0R0J
R	901		RS1/16S104J
R	902		RS1/16S473J
R	903		RS1/16S273J

CAPACITORS

C	101		CKSRYB104K16
C	102		CKSRYB104K16
C	103	100µF/16V	CCH1504
C	104	47µF/6.3V	CCH1506
C	106		CCSRCH101J50
C	108		CKSRYB224K16
C	109		CKSRYB224K16
C	201		CKSRYB104K16
C	202		CKSRYB471K50
C	203		CKSRYB104K16
C	205	22µF/6.3V	CCH1507
C	206		CKSRYB103K25
C	207		CKSRYB104K16
C	208	100µF/6.3V	CCH1505
C	209		CKSRYB104K16
C	210		CKSRYB104K16
C	211		CKSRYB104K16
C	212		CKSRYB104K16
C	213		CKSRYB332K50
C	214		CKSRYB473K25
C	215		CKSRYB104K16
C	216		CKSRYB103K25
C	217		CCSRCH560J50
C	218		CCSRCH5R0C50
C	219		CKSRYB104K16
C	220		CKSRYB104K16
C	221		CKSRYB104K16
C	222		CKSRYB103K25
C	223		CCSRCH680J50
C	224		CCSRCH470J50
C	225		CKSRYB682K50
C	231		CKSRYB102K50
C	232		CKSRYB102K50
C	301	100µF/16V	CCH1504
C	302		CCSRCH221J50
C	303		CCSRCH221J50
C	304		CKSRYB472K50

=====Circuit Symbol and No.		===Part Name	Part No.
C	305		CKSRYB103K25
C	306		CKSRYB104K16
C	501		CKSRYB103K25
C	502		CKSRYB103K25
C	702	100µF/16V	CCH1504
C	703		CKSRYB224K16
C	704		CKSRYB104K16
C	705	10µF/6.3V	CCH1470

Miscellaneous Parts List

		Pickup Unit(Service)(P10)	CXX1641
M	1	Motor Unit(SPINDLE)	CXB6007
M	2	Motor Unit(LOADING/CARRIAGE)	CXB8933