


9. EXPLODED VIEWS AND PARTS LIST

- NOTES :
- Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.
 - The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screw adjacent to ▽ mark on the product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING

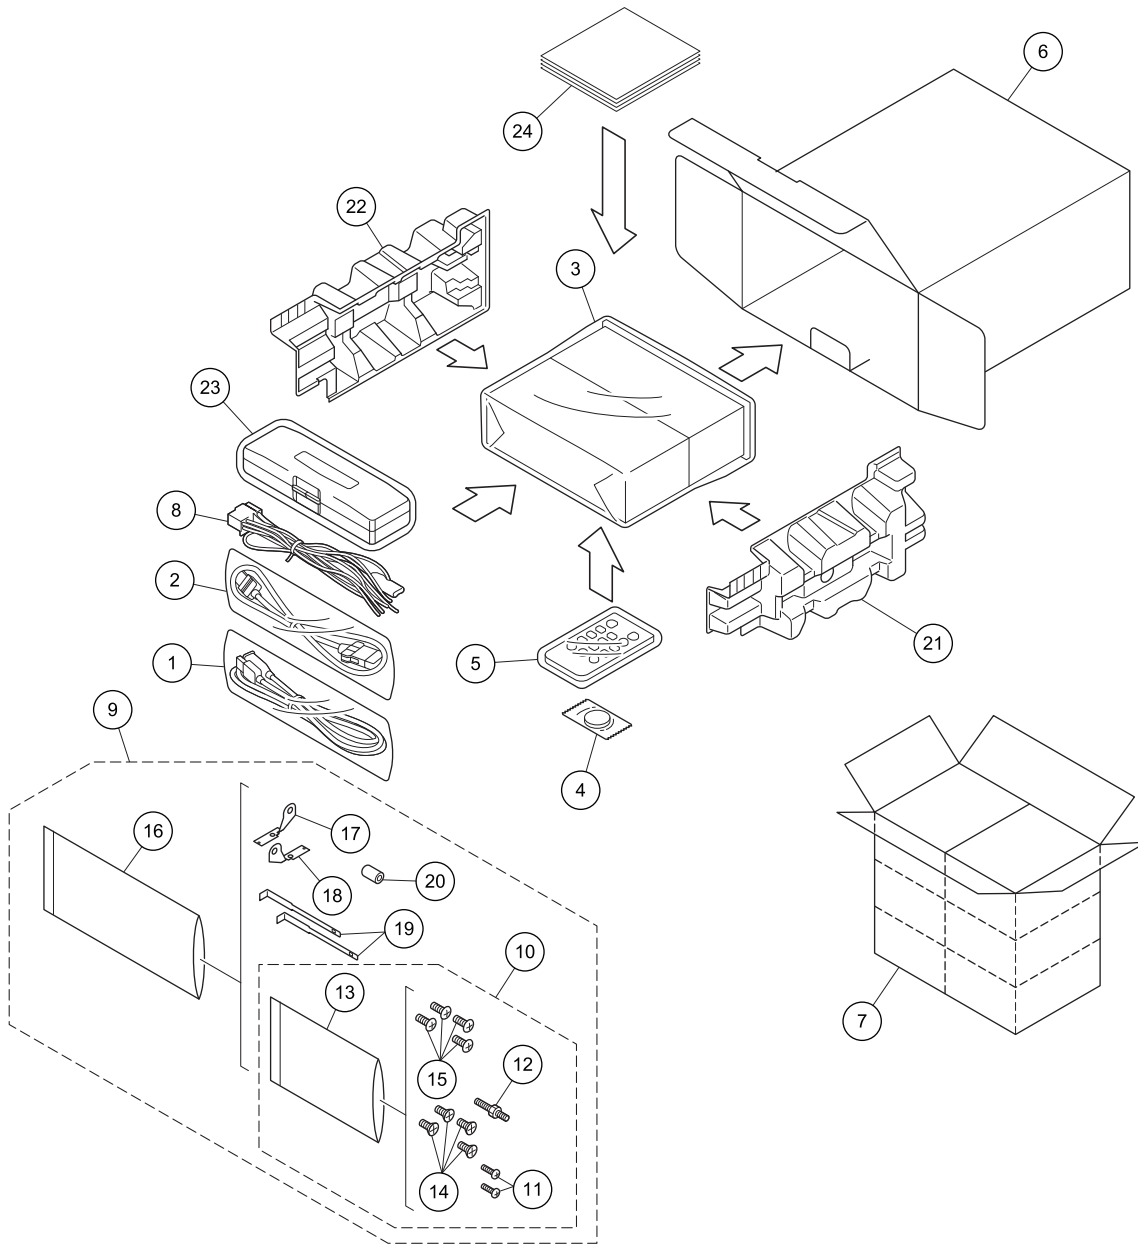

<u>Mark</u>	<u>No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark</u>	<u>No.</u>	<u>Description</u>	<u>Part No.</u>
	1	Cord Assy	CDP1040		16	Polyethylene Bag	CEG1160
	2	Cord Assy	See Contrast table(2)		17	Holder(L)	CND1249
	3	Polyethylene Bag	CEG1368		18	Holder(R)	CND1250
*	4	Battery	CEX1065		19	Handle	CND3707
	5	Remote Control Assy	CXC8885		20	Bush	CNV3930
	6	Unit Box	See Contrast table(2)		21	Protector	XHP7016
	7	Contain Box	See Contrast table(2)		22	Protector	XHP7017
	8	Cord Assy	XDP7004		23	Case Assy	See Contrast table(2)
	9	Accessory Assy	XEA7011		24-1	Caution Card	CRP1310
	10	Screw Assy	CEA5317	*	24-2	Caution Card	QRP3002
	11	Screw	BPZ20P060FTB	*	24-3	Warranty Card	See Contrast table(2)
	12	Screw	CBA1650		24-4	Owner's Manual	See Contrast table(2)
*	13	Polyethylene Bag	CEG-127		24-5	Installation Manual	See Contrast table(2)
	14	Screw	CRZ50P090FTC	*	24-6	Caution Card	See Contrast table(2)
	15	Screw	TRZ50P080FTC	*	24-7	Caution Card	YRP5011

(2) CONTRAST TABLE
 DEH-P500UB/XN/UC and DEH-P5000UB/XN/UC are constructed the same except for the following:

Mark	No.	Description	DEH-P500UB/XN/UC	DEH-P5000UB/XN/UC
*	2	Cord Assy	CDP1041	Not used
	6	Unit Box	QHG3004	QHG3003
	7	Contain Box	QHL3004	QHL3003
	23	Case Assy	QXA3049	Not used
	24-3	Warranty Card	CRY1070	CRY1246
*	24-4	Owner's Manual	QRD3008	QRD3006
	24-5	Installation Manual	QRD3009	QRD3007
	24-6	Caution Card	Not used	CRP1294

Owner's Manual,Installation Manual

Part No.	Language
QRD3006	English, French
QRD3007	English, French
QRD3008	English, French
QRD3009	English, French

9.2 EXTERIOR(1)

A


B

C

D

E

F

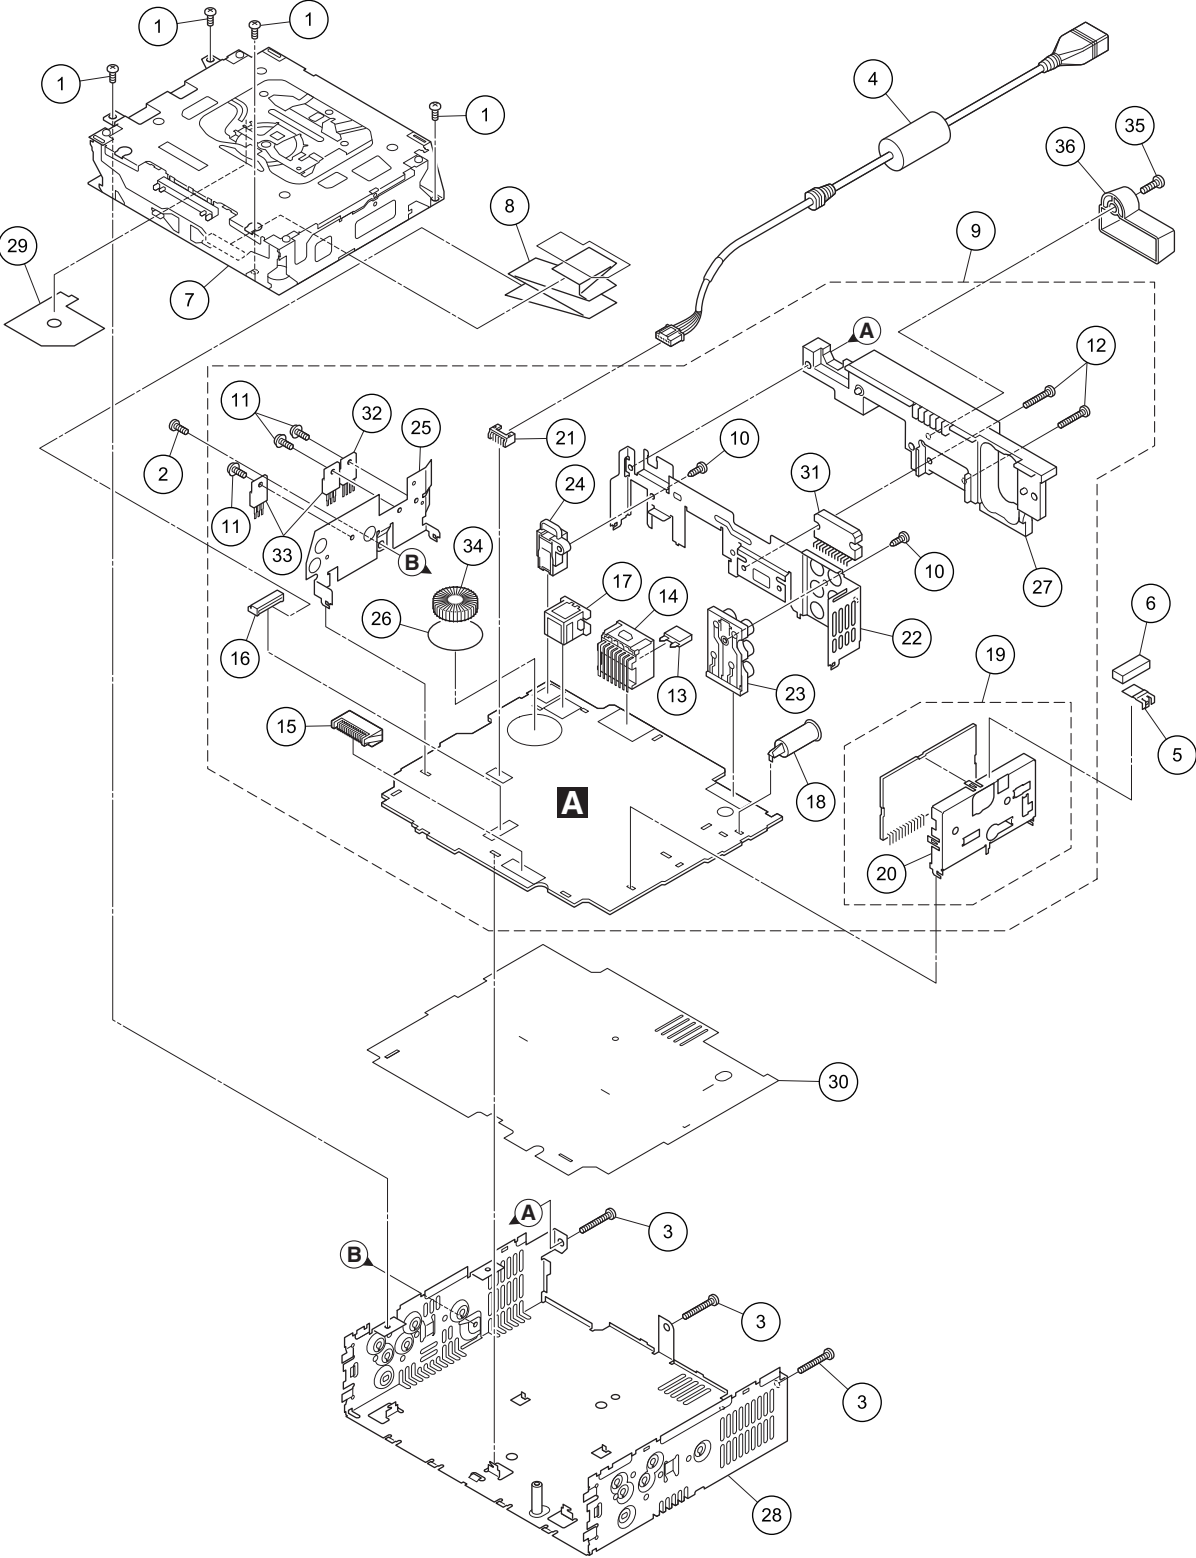


Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	Screw	BSZ26P060FTC	20	Holder	CND4324	
2	Screw	BSZ30P060FTC				
3	Screw	BSZ30P200FTC	21	Plug(CN521)	KM200NA5L	A
4	Cord Assy	CDE8351	22	Holder	QNC3001	
5	Earth Plate	CNC8915	23	Pin Jack(CN301)	XKB7001	
			24	Jack(CN151)	XKS7005	
6	Cushion	CNM8890	25	Holder	XNC7030	
7	CD Mechanism Module(S10.5)	CXK5770				
8	Cable	QDE3001	26	Insulator	XNM7031	
9	Tuner Amp Unit	See Contrast table(2)	27	Heat Sink	YNR5031	
10	Screw	BPZ26P070FTC	28	Chassis Unit	QXA3013	
			29	Insulator	XNM7106	
11	Screw	BSZ26P060FTC	30	Insulator	CNN2339	B
12	Screw	BSZ26P200FTC				
⚠ 13	Fuse(10 A)	YEK5001	31	IC(IC351)	PAL007C	
14	Plug(CN981)	CKM1376	32	IC(IC911)	NJM2388F84	
15	Plug(CN801)	CKS3537	33	Transistor(Q751,Q901)	2SD2396	
			34	Choke Coil(L981)	CTH1280	
16	Connector(CN701)	CKS3833	35	Screw	See Contrast table(2)	
17	Connector(CN101)	CKS5271				
18	Antenna Jack(ANT401)	CKX1056	36	Holder	See Contrast table(2)	
19	FM/AM Tuner Unit	CWE2098				

(2) CONTRAST TABLE

DEH-P500UB/XN/UC and DEH-P5000UB/XN/UC are constructed the same except for the following:

Mark	No.	Description	DEH-P500UB/XN/UC	DEH-P5000UB/XN/UC
	9	Tuner Amp Unit	QWM3011	QWM3012
	35	Screw	Not used	BMZ40P140FTC
	36	Holder	Not used	CNV7619

9.3 EXTERIOR(2)

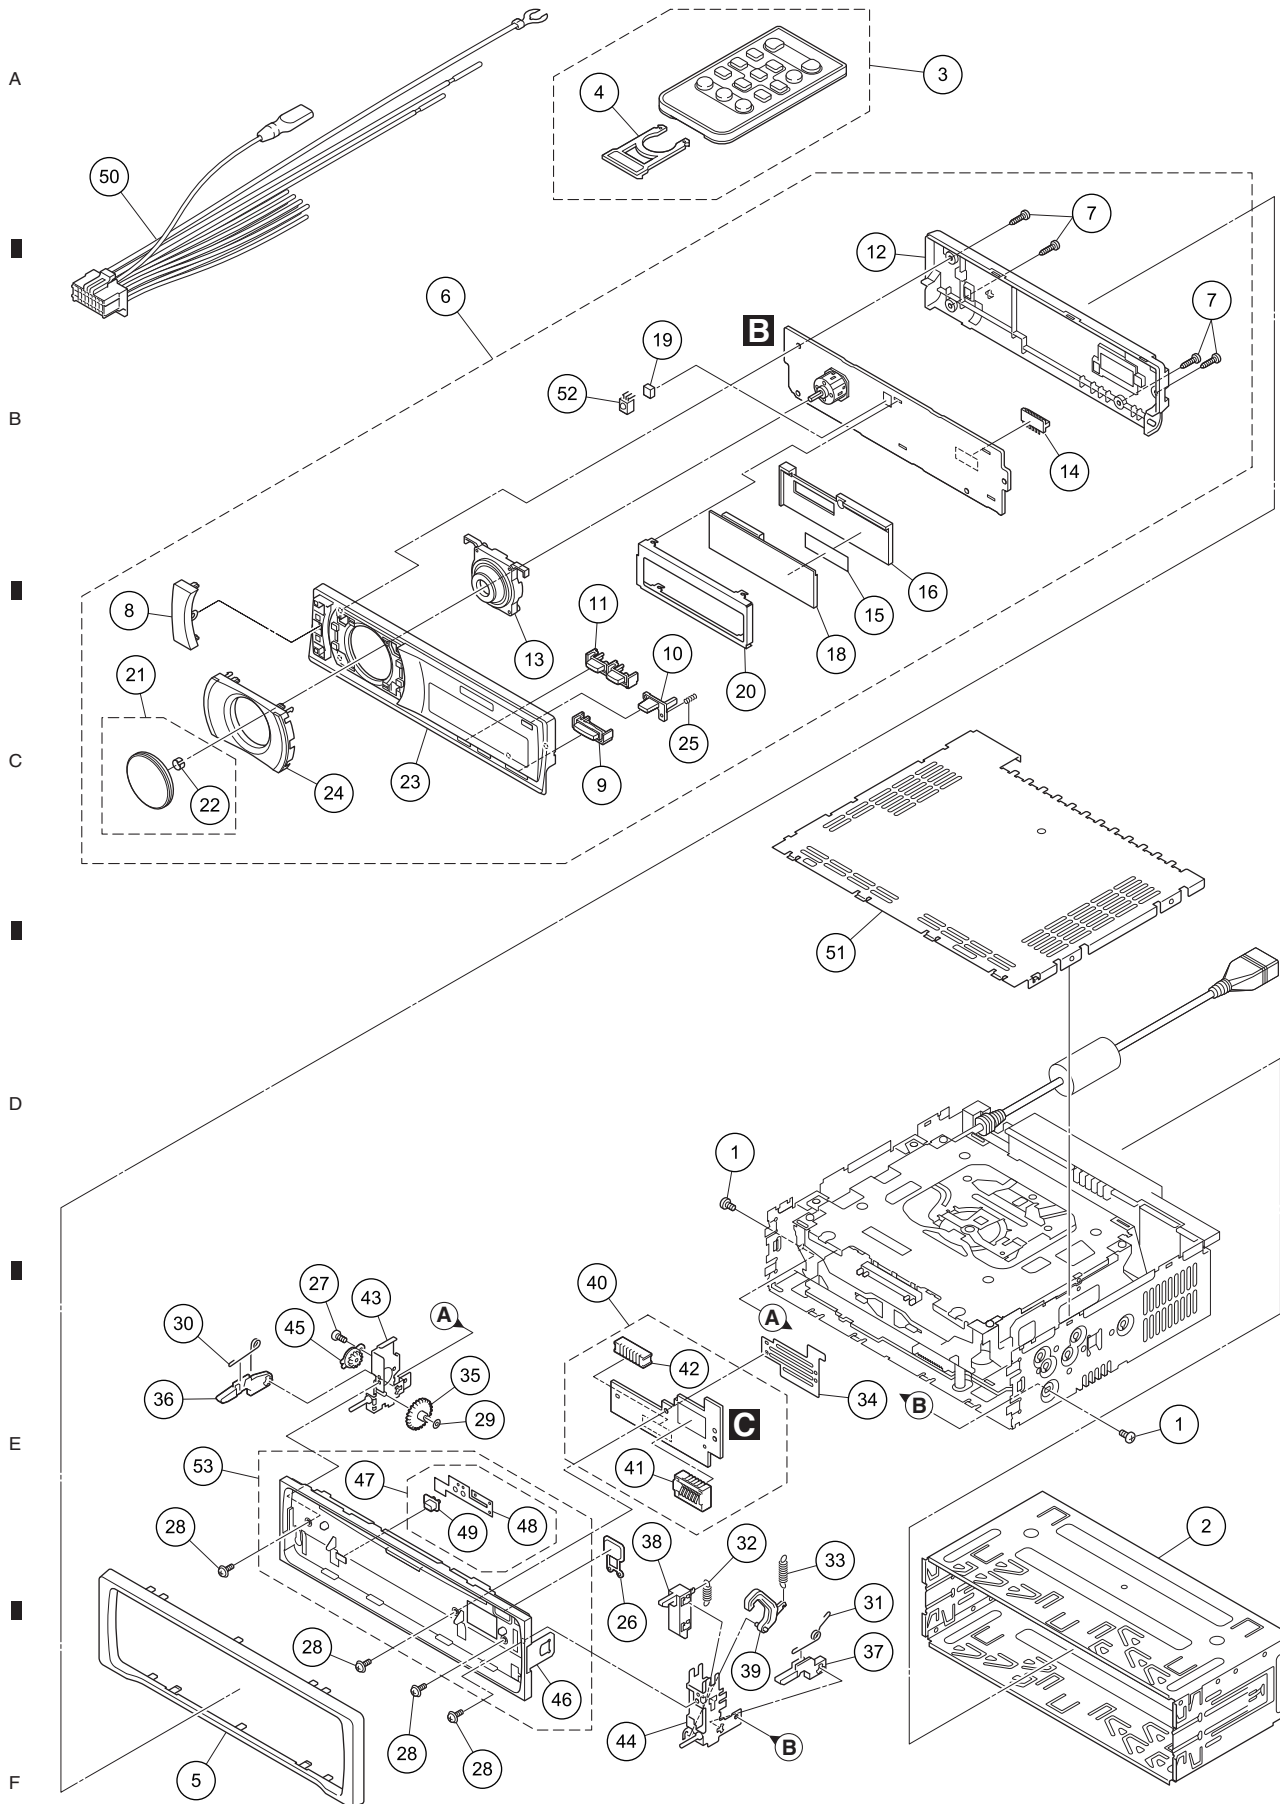


Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Screw	BMZ30P040FTB	28	Screw(M2 x 4.5)	CBA1925
2	Holder	CND3598	29	Washer	CBF1038
3	Remote Control Assy	CXC8885	30	Spring	CBH2650
4	Cover	CNS7068			
5	Panel	See Contrast table(2)	31	Spring	CBH2651
			32	Spring	CBH2652
6	Detach Grille Assy	See Contrast table(2)	33	Spring	CBH2653
7	Screw	BPZ20P080FTB	34	Holder	CND1254
8	Button(SRC, BAND)	QAC3004	35	Gear	CNV5997
9	Button(LIST)	QAC3005			
10	Button(OPEN)	QAC3007	36	Arm	CNV7400
			37	Arm	CNV7401
11	Button(SW, CLOCK)	See Contrast table(2)	38	Arm	CNV7402
12	Cover	QNS3002	39	Arm	CNV7403
13	Lighting Conductor	QNV3001	40	Panel Unit	CWM8758
14	Connector(CN1901)	CKS5207			
15	Double Side Tape	CNN1878	41	Connector(CN1951)	CKS4806
			42	Connector(CN1950)	CKS5192
16	Holder	CNV9735	43	Holder Unit	CXB9501
17	*****		44	Holder Unit	CXB9502
18	OLED	MXS8249	45	Damper Unit	CXB9503
19	Spacer	QNM3006			
20	Holder	XNC7028	46	Panel Unit	QXA3036
			47	Sub Spring Assy	XXA7363
21	Knob Unit	See Contrast table(2)	48	Spring	CBL1512
22	Spring	XBL7005	49	Pin	CNV6486
23	Grille Unit	See Contrast table(2)	50	Cord Assy	XDP7004
24	Button Unit(DISP, RDM, S.Rtrv, RPT)	See Contrast table(2)			
25	Spring	XBH7001	51	Case	YNB5014
			52	IC(IC1901)	GP1UX51RK
26	Button(EJECT)	CAC7752	53	Sub Panel Assy	QXA3025
27	Screw(M2 x 4)	CBA1649			

(2) CONTRAST TABLE

DEH-P500UB/XN/UC and DEH-P5000UB/XN/UC are constructed the same except for the following:

Mark	No.	Description	DEH-P500UB/XN/UC	DEH-P5000UB/XN/UC
	5	Panel	QNS3010	QNS3004
	6	Detach Grille Assy	QXA3019	QXA3003
	11	Button(SW, CLOCK)	QAC3008	QAC3014
	21	Knob Unit	QXA3006	QXA3012
	23	Grille Unit	QXA3008	QXA3028
	24	Button Unit (DISP, RDM, S.Rtrv, RPT)	QXA3027	QAC3001(Button)

9.4 CD MECHANISM MODULE

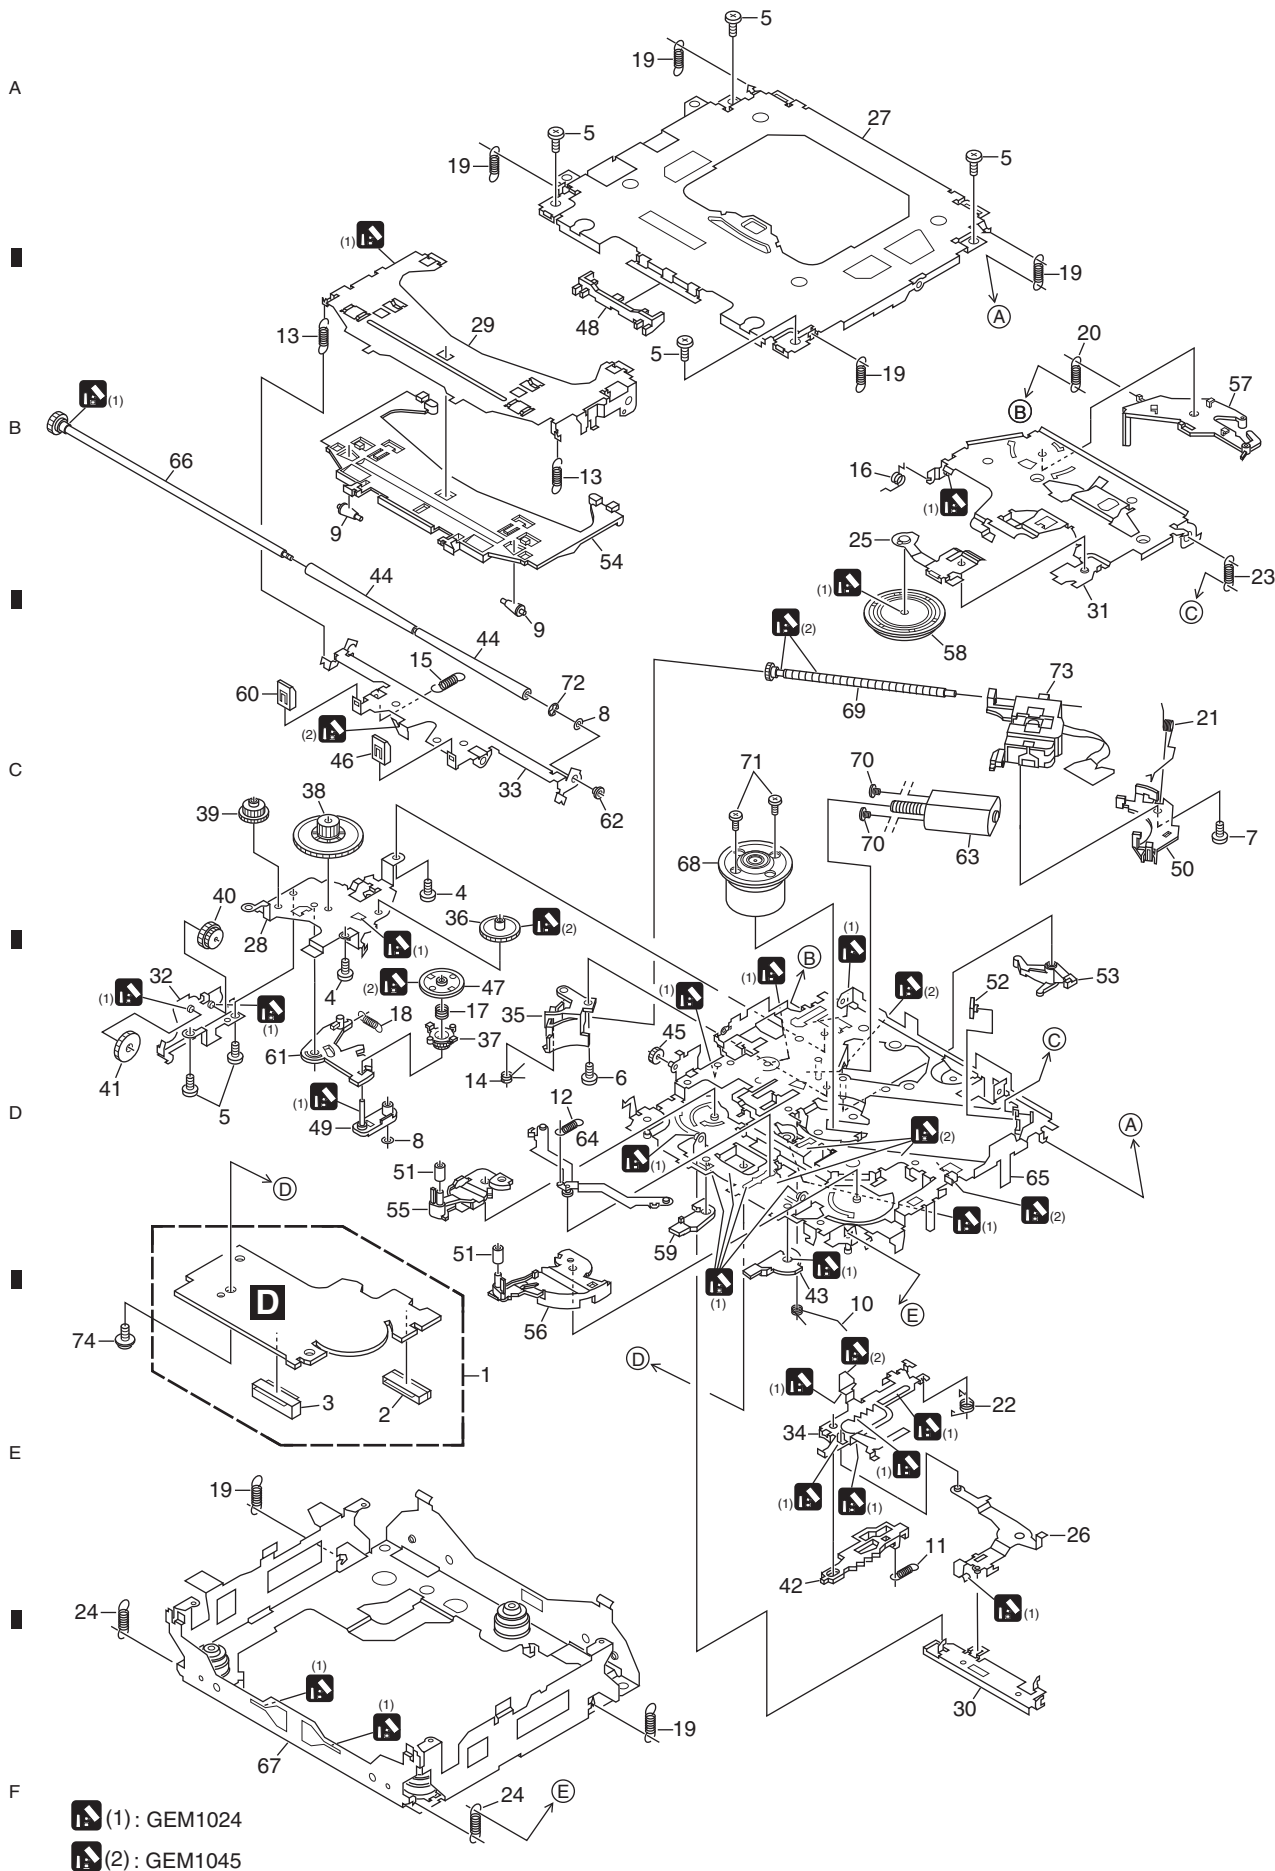

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	CD Core Unit(S10.5COMP2-iPod)	CWX3526	50	Rack	CNV8342	
2	Connector(CN101)	CKS4182				
3	Connector(CN701)	CKS4186	51	Roller	CNV8343	A
4	Screw	BMZ20P025FTC	52	Holder	CNV8344	
5	Screw	BSZ20P040FTC	53	Arm	CNV8345	
			54	Guide	CNV9498	
6	Screw(M2 x 3)	CBA1511	55	Arm	CNV8348	
7	Screw(M2 x 4)	CBA1835				
8	Washer	CBF1038	56	Arm	CNV8349	
9	Roller	CNV9499	57	Arm	CNV8350	
10	Spring	CBH2609	58	Clamper	CNV8365	
			59	Arm	CNV8386	
11	Spring	CBH2612	60	Guide	CNV8396	B
12	Spring	CBH2614				
13	Spring	CBH2616	61	Arm	CNV8413	
14	Spring	CBH2617	62	Collar	CNV8938	
15	Spring	CBH2620	63	Motor Unit(M2)	CXC4026	
			64	Arm Unit	CXC4027	
16	Spring	CBH2855	65	Chassis Unit	CXC4028	
17	Spring	CBH2937				
18	Spring	CBH2735	66	Gear Unit	CXC4029	
19	Spring	CBH2854	67	Frame Unit	CXC4031	
20	Spring	CBH2642	68	Motor Unit(M1)	CXC7134	
			69	Screw Unit	CXC6359	C
21	Spring	CBH2856	70	Screw	JFZ20P020FTC	
22	Spring	CBH2857				
23	Spring	CBH2860	71	Screw	JGZ17P022FTC	
24	Spring	CBH2861	72	Washer	YE20FTC	
25	Spring	CBL1686	73	Pickup Unit(P10.5)(Service)	CXX1942	
			74	Screw	IMS26P030FTC	
26	Arm	CND1909				
27	Frame	CND2582				
28	Bracket	CND2583				
29	Arm	CND3831				
30	Lever	CND2585				D
31	Arm	CND2586				
32	Bracket	CND2587				
33	Arm	CND2588				
34	Lever	CND2589				
35	Holder	CNV7201				
36	Gear	CNV7207				
37	Gear	CNV7208				
38	Gear	CNV7209				
39	Gear	CNV7210				E
40	Gear	CNV7211				
41	Gear	CNV7212				
42	Rack	CNV7214				
43	Arm	CNV7216				
44	Roller	CNV7218				
45	Gear	CNV7219				
46	Guide	CNV7361				
47	Gear	CNV7595				F
48	Guide	CNV7799				
49	Arm	CNV7805				

12. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J,RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

Circuit Symbol and No. Part No.
Unit Number : QWM3011(P500UB)
Unit Number : QWM3012(P5000UB)
Unit Name : Tuner Amp Unit
Unit Number : QWM3018
Unit Name :
Unit Number : CWM8758
Unit Name : Panel Unit
Unit Number : CWX3526
Unit Name : CD Core Unit(S10.5COMP2-IP0D)

A

Unit Number : QWM3011(P500UB)
Unit Number : QWM3012(P5000UB)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

IC 101	(A,43,89) IC	HA12241FP
IC 201	(B,107,90) IC	PML018A
IC 261	(A,69,115) IC(P500UB)	TPD1018F
IC 351	(A,105,140) IC	PAL007C
IC 431	(A,152,27) IC	NJM2885DL1-33
IC 501	(A,68,61) Regulator IC	BD9781HFP
IC 521	(B,51,57) IC	R5523N001B
IC 561	(B,39,19) IC	NJM2360M
IC 601	(A,117,55) IC	PEG403A
IC 651	(A,93,52) IC	S-80835CNMC-B8U
IC 780	(A,54,29) IC	NJM2885DL1-33
IC 911	(A,6,121) IC	NJM2388F84
Q 101	(B,44,106) Transistor	2SA1576A
Q 102	(A,35,88) Chip Transistor	DTC114EUA
Q 301	(A,133,128) Transistor	RT3C99M
Q 302	(B,138,127) Transistor	RT3C99M
Q 303	(B,162,129) Transistor	RT3C99M
Q 351	(A,143,93) Chip Transistor	DTC124EUA

	Circuit Symbol and No.	Part No.
Q 381	(A,139,100) Transistor	RT3T22M
Q 391	(B,25,92) Transistor	2SC4081
Q 451	(A,34,45) Transistor	2SC4081
Q 452	(A,40,46) Transistor	RT3T22M
Q 561	(A,16,33) Transistor	2SD1858
Q 562	(B,30,33) Transistor	RT3T22M
Q 751	(A,7,71) Transistor	2SD2396
Q 752	(B,23,58) Transistor	RT3T22M
Q 801	(A,104,26) Transistor	RT1N431M
Q 821	(A,33,36) Transistor	2SD1767
Q 822	(B,74,13) Chip Transistor	DTC114EUA
Q 823	(B,33,39) Transistor	RT3T22M
Q 831	(A,112,24) Transistor	2SA1576A
Q 832	(A,115,27) Chip Transistor	DTC114EUA
Q 891	(B,97,28) Transistor	2SA1576A
Q 892	(B,93,21) Chip Transistor	DTC114EUA
Q 901	(A,7,105) Transistor	2SD2396
Q 902	(B,29,80) Transistor	RT3T22M
Q 921	(B,51,99) Transistor	RT3CLLM
Q 931	(B,133,77) Chip Transistor	DTC114EUA
Q 951	(A,51,96) Transistor	2SA1576A
D 153	(A,11,128) Diode	MALS068X
D 154	(A,8,128) Diode	MALS068X
D 155	(A,17,128) Diode	MALS068X
D 351	(A,93,102) Diode	1SR139-400
D 352	(A,90,102) Diode	1SR139-400
D 381	(A,140,77) Diode	1SS133
D 391	(A,135,70) Diode	MC2848-11
D 392	(A,17,91) Diode	HZS9L(A2)
D 451	(A,37,63) Diode	HZS12L(B1)
D 501	(B,64,44) Diode	RB060L-40
D 502	(A,49,49) Diode	1SR139-400
D 521	(A,55,59) Diode	MALS068X
D 522	(A,47,59) Diode	MALS068X
D 561	(B,49,17) Diode	RB551V-30
D 562	(A,110,31) Diode	MC2848-11
D 563	(A,24,29) Diode	MTZJA10(B)
D 751	(A,15,69) Diode	MTZJA8R2(B)
D 801	(B,111,31) Diode	MC2850-11
D 804	(B,125,28) Diode	MC2848-11
D 805	(B,130,28) Diode	MC2846-11

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

D 821	(A,40,30) Diode	MTZJA10(B)
D 822	(A,40,33) Diode	HZS7L(A3)
D 901	(A,17,83) Diode	HZS6L(B1)
D 902	(A,17,87) Diode	1SR139-400
D 921	(A,55,110) Diode	HZS7L(A1)
D 922	(A,58,104) Diode	HZS7L(C3)
D 931	(A,140,74) Diode	1SS133
D 951	(A,48,98) Diode	MC2848-11
D 981	(A,75,109) Diode	1SR139-400
D 982	(A,78,109) Diode	1SR139-400
ZNR401	(B,164,114) Surge Protector	IMSA-6801-01Y901
L 101	(A,17,79) Inductor	LAU2R2K
L 201	(A,67,92) Ferri-Inductor	LAU100K
L 202	(A,67,80) Ferri-Inductor	LAU100K
L 401	(B,156,98) Chip Coil	LCTAW4R7J2520
L 402	(A,148,90) Inductor	LAU1R0K
L 403	(A,152,48) Inductor	LAU1R0K
L 451	(A,40,27) Ferri-Inductor	LAU100K
L 501	(A,63,40) Inductor	CTH1385
L 521	(A,51,56) Inductor	CTF1713
L 561	(A,40,16) Inductor	CTF1660
L 602	(A,85,60) Ferri-Inductor	LAU100K
L 891	(A,100,23) Ferri-Inductor	LAU100K
L 951	(A,55,104) Inductor	LAU2R2K
L 981	(A,32,108) Choke Coil 600 μ H	CTH1280
X 601	(A,101,54) Crystal Resonator 15.000 MHz	CSS1653
S 801	(A,25,10) Switch(DETACH)	CSN1039
⚠️FU301	(B,127,135) Fuse 3 A	CEK1286
BZ601	(A,137,24) Buzzer	CPV1062
ANT401	(A,169,127) Antenna Jack	CKX1056
⚠️	Fuse 10 A	YEK5001

RESISTORS

R 101	(A,51,88)	RS1/16S472J
R 102	(A,51,90)	RS1/16S472J
R 103	(A,41,82)	RS1/16S102J
R 104	(B,38,136)	RS1/16S101J
R 105	(B,38,134)	RS1/16S620J
R 106	(B,38,129)	RS1/16S101J
R 107	(B,43,108)	RS1/16S223J
R 108	(B,39,107)	RS1/16S472J
R 109	(B,25,120)	RS1/16S102J
R 110	(B,27,121)	RS1/16S223J
R 111	(B,29,122)	RS1/16S181J
R 112	(B,40,106)	RS1/16S222J
R 113	(B,28,136)	RS1/16S181J
R 114	(B,25,131)	RS1/16S223J
R 115	(B,30,138)	RS1/16S102J
R 151	(A,49,102)	RS1/16S102J
R 152	(A,41,123)	RS1/16S102J
R 153	(A,63,78)	RS1/16S103J
R 154	(A,61,81)	RS1/16S103J
R 159	(B,123,79)	RS1/16S101J
R 160	(B,85,84)	RS1/16S101J
R 161	(A,67,100)	RS1/16S223J
R 162	(A,71,100)	RS1/16S223J
R 165	(B,78,83)	RS1/16S102J
R 201	(B,119,89)	RS1/16S102J
R 202	(B,124,90)	RS1/16S102J

R 203	(B,118,92)	RS1/16S102J
R 205	(B,119,97)	RS1/16S0R0J
R 206	(B,103,106)	RS1/16S0R0J
R 207	(B,124,95)	RS1/16S0R0J
R 208	(B,89,95)	RS1/16S0R0J
R 209	(B,118,94)	RS1/16S0R0J
R 210	(B,91,91)	RS1/16S0R0J
R 262	(A,77,114) (P500UB)	RS1/16S103J
R 301	(A,138,125)	RS1/16S390J
R 302	(A,132,126)	RS1/16S390J
R 303	(A,140,124)	RS1/16S390J
R 304	(B,131,127)	RS1/16S390J
R 305	(A,157,123)	RS1/16S390J
R 306	(B,149,115)	RS1/16S390J
R 307	(A,136,124)	RS1/16S472J
R 308	(A,129,126)	RS1/16S472J
R 309	(B,139,120)	RS1/16S472J
R 310	(B,133,128)	RS1/16S472J
R 311	(B,167,128)	RS1/16S472J
R 312	(B,165,124)	RS1/16S472J
R 313	(A,142,121)	RS1/16S223J
R 314	(A,139,129)	RS1/16S223J
R 315	(A,142,124)	RS1/16S223J
R 316	(B,128,132)	RS1/16S223J
R 317	(A,157,126)	RS1/16S223J
R 318	(B,162,134)	RS1/16S223J
R 319	(B,144,123)	RS1/16S0R0J
R 322	(B,137,130)	RS1/16S0R0J
R 351	(B,117,110)	RS1/16S682J
R 352	(B,119,111)	RS1/16S682J
R 353	(B,122,111)	RS1/16S682J
R 354	(B,114,110)	RS1/16S682J
R 355	(B,114,115)	RS1/16S123J
R 356	(B,121,117)	RS1/16S123J
R 357	(B,123,118)	RS1/16S123J
R 358	(B,112,115)	RS1/16S123J
R 359	(A,146,85)	RS1/16S103J
R 360	(A,139,95)	RS1/16S103J
R 361	(A,139,88)	RS1/16S153J
R 362	(A,139,93)	RS1/16S331J
R 363	(B,107,113) (P5000UB)	RS1/16S0R0J
R 381	(A,143,102)	RS1/16S102J
R 391	(B,25,87)	RS1/16S223J
R 392	(B,22,92)	RS1/16S683J
R 393	(B,25,94)	RS1/16S683J
R 401	(B,159,71)	RS1/16S681J
R 403	(B,156,81)	RS1/16S681J
R 404	(B,156,84)	RS1/16S681J
R 405	(B,156,86)	RS1/16S681J
R 406	(B,157,88)	RS1/16S681J
R 407	(B,157,90)	RS1/16S681J
R 410	(B,152,65)	RS1/16S0R0J
R 411	(B,143,45)	RS1/16S681J
R 412	(B,128,49)	RS1/16S681J
R 413	(B,133,51)	RS1/16S681J
R 451	(A,41,43)	RS1/16S391J
R 502	(A,73,52)	RS1/16S3302F
R 503	(B,75,51)	RS1/16S333J
R 505	(A,69,52)	RS1/16S8201F
R 506	(B,73,58)	RS1/16S683J

1

2

3

4

5		6		7		8	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
R 508	(A,67,47)	RS1/16S8202D		R 912	(A,34,84)	RS1/16S103J	
R 509	(A,70,47)	RS1/16S6801F		R 921	(B,46,97)	RS1/16S104J	
R 511	(A,56,55)	RS1/10SR471J		R 922	(B,49,93)	RS1/16S104J	A
R 525	(A,76,62)	RS1/16S103J		R 923	(B,45,101)	RS1/16S104J	
R 562	(A,40,24)	RD1/4PU472J		R 924	(B,68,100)	RS1/16S103J	
				R 925	(B,68,102)	RS1/16S473J	
R 563	(B,31,16)	RS1/16S102J					
R 564	(B,29,17)	RS1/16S821J		R 926	(B,58,99)	RS1/16S473J	
R 566	(B,33,22)	RS1/10SR821J		R 927	(B,48,106)	RS1/16S472J	
R 567	(A,31,17)	RS1/16S1R0J		R 928	(A,55,113)	RD1/4PU102J	
R 568	(A,25,36)	RD1/4PU681J		R 931	(B,131,81)	RS1/16S104J	
				R 932	(B,135,82)	RS1/16S103J	
R 601	(B,117,67) (P5000UB)	RS1/16S683J					
R 602	(B,122,64) (P500UB)	RS1/16S473J		R 933	(A,64,104)	RD1/4PU102J	
	(B,122,64) (P5000UB)	RS1/16S273J		R 951	(A,53,92)	RS1/16S102J	
R 603	(A,96,59)	RS1/16S0R0J		R 952	(A,50,93)	RS1/16S472J	B
R 604	(B,100,60)	RS1/16S0R0J		R 954	(A,61,104)	RD1/4PU153J	
R 605	(B,123,57)	RS1/16S104J					
R 606	(B,108,62)	RS1/16S473J					
				<u>CAPACITORS</u>			
R 607	(B,63,60)	RS1/16S681J		C 101	(A,43,85)	CCSRCH101J50	
R 608	(B,137,29)	RS1/16S102J		C 102	(A,44,93)	CCSRCH101J50	
R 610	(A,65,72)	RS1/16S104J		C 103	(B,33,138)	CKSRYB104K16	
R 611	(A,97,49)	RS1/16S104J		C 104	(A,43,83)	CKSRYB104K16	
R 612	(A,109,42)	RS1/16S222J		C 152	(A,56,116)	CKSRYB104K16	
R 641	(A,129,43)	RS1/16S104J		C 154	(A,67,102)	CKSRYB472K50	
R 652	(A,91,57)	RS1/16S822J		C 155	(A,71,102)	CKSRYB472K50	
R 653	(A,94,57)	RS1/16S102J		C 160	(B,16,140)	CKSRYB103K50	C
R 710	(B,85,32)	RS1/16S102J		C 161	(B,12,140)	CKSRYB103K50	
R 716	(B,85,30)	RS1/16S102J		C 201	(B,118,81)	CKSRYB105K10	
R 721	(A,74,37)	RS1/16S104J		C 202	(B,123,83)	CKSRYB105K10	
R 722	(B,86,41)	RS1/16S472J		C 203	(B,118,84)	CKSRYB105K10	
R 723	(A,72,41)	RS1/16S104J		C 204	(B,123,85)	CKSRYB224K16	
R 724	(B,84,42)	RS1/16S472J		C 205	(B,118,86)	CKSRYB105K10	
R 725	(B,83,43)	RS1/16S104J		C 206	(B,96,81)	CKSRYB105K10	
R 726	(A,96,36)	RS1/16S221J		C 207	(B,90,83)	CKSRYB105K10	
R 728	(A,96,42)	RS1/16S221J		C 208	(B,96,84)	CKSRYB105K10	
R 729	(A,96,37)	RS1/16S221J		C 209	(B,90,85)	CKSRYB105K10	
R 730	(B,90,40)	RS1/16S221J		C 210	(B,96,86)	CKSRYB224K16	D
R 731	(B,71,34)	RS1/16S221J		C 211	(B,90,88)	CKSRYB105K10	
R 733	(A,74,35)	RS1/16S104J		C 212	(A,77,90)	CEJQ100M25	
R 751	(A,15,61)	RD1/4PU561J		C 213	(B,81,92)	CKSRYB104K16	
R 801	(B,124,24)	RS1/16S222J		C 214	(A,84,97)	CEJQ470M16	
R 804	(B,127,23)	RS1/16S222J		C 215	(A,106,102)	CEJQ100M25	
R 805	(B,114,25)	RS1/16S222J		C 216	(B,72,95)	CKSRYB104K16	
R 806	(A,40,36)	RD1/4PU391J		C 217	(A,77,97)	CEJQ470M16	
R 807	(B,106,25)	RS1/16S222J		C 261	(A,64,114) (P500UB)	CKSRYB104K16	
R 808	(B,111,25)	RS1/16S473J		C 262	(A,70,111) (P500UB)	CKSRYB473K25	
R 811	(B,125,33)	RS1/16S102J		C 301	(A,140,110)	CEJQ100M25	
R 813	(B,108,25)	RS1/16S222J		C 302	(A,134,105)	CEJQ100M25	E
R 815	(B,111,28)	RS1/16S473J		C 303	(A,145,117)	CEJQ100M25	
R 816	(A,65,12)	RS1/16S102J		C 304	(A,140,117)	CEJQ100M25	
R 817	(A,63,14)	RS1/16S104J		C 305	(A,153,119)	CEJQ100M25	
R 821	(A,83,17)	RS1/16S472J		C 306	(A,145,110)	CEJQ100M25	
R 822	(A,78,16)	RS1/16S1R0J		C 351	(B,117,116)	CKSRYB474K10	
R 823	(A,40,39)	RD1/4PU471J		C 352	(B,119,117)	CKSRYB474K10	
R 832	(A,110,27)	RS1/16S682J		C 353	(B,121,127)	CKSRYB474K10	
R 833	(A,108,24)	RS1/16S473J		C 354	(B,110,114)	CKSRYB474K10	
R 891	(B,101,21)	RS1/16S222J		C 355	(B,117,121)	CKSQYB474K25	
R 892	(B,96,25)	RS1/16S102J		C 356	(B,120,122)	CKSQYB474K25	F
R 893	(B,94,28)	RS1/16S473J		C 357	(B,121,131)	CKSQYB474K25	
R 902	(B,12,83)	RS1/16S822J		C 358	(B,114,120)	CKSQYB474K25	
R 903	(B,34,80)	RS1/16S222J					
R 911	(A,34,82)	RS1/16S102J					

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

C 360	(B,125,127)	CKSQYB225K10
C 361	(B,106,146)	CKSRYB104K16
C 362	(A,134,111)	CEJQ100M25

C 921	(B,48,109)	CKSRYB104K16
C 931	(A,140,70)	CEJQ1R0M50
C 981	(A,50,125) 3 300 µF/16 V	CCH1486

A

C 363	(A,134,117)	CEJQ330M10
C 364	(B,124,131)	CKSQYB225K10
C 381	(A,141,81)	CEJQ220M16
C 404	(B,152,52)	CKSRYB103K50
C 405	(B,153,67)	CKSRYB103K50

B**Unit Number :****Unit Name : Keyboard Unit****MISCELLANEOUS**

C 406	(B,147,94)	CKSRYB103K50
C 407	(A,154,55)	CEJQ470M6R3
C 410	(A,148,98)	CEJQ101M16
C 417	(B,127,54)	CCSRCH470J50
C 432	(A,150,38)	CEJQ470M6R3

IC 1901	(A,77,35) Remote IC	GP1UX51RK
IC 1902	(B,103,22) IC	PEG411A
Q 1902	(B,79,22) Transistor	2SC4081
D 1901	(A,8,37) LED	CL-197HB1-D(CDE)
D 1902	(A,8,15) LED	CL-197HB1-D(CDE)

B

C 434	(A,141,36)	CEJQ1R0M50
C 451	(A,34,67)	CKSRYB104K16
C 452	(A,39,58)	CEJQ470M16
C 453	(B,40,61)	CKSRYB473K50
C 501	(A,59,49) 150 µF/6.3 V	CCH1781

D 1903	(A,112,7) LED	CL-197HB1-D(CDE)
D 1904	(A,126,7) LED	CL-197HB1-D(CDE)
D 1905	(A,149,7) LED	CL-197HB1-D(CDE)
D 1906	(A,22,36) LED	CL-197HB1-D(CDE)
D 1907	(A,22,16) LED	CL-197HB1-D(CDE)

C 502	(A,52,38)	CEJQ221M16
C 503	(B,74,47)	CCSRCH221J50
C 504	(A,62,55)	CKSRYB105K16
C 506	(B,69,57)	CKSRYB103K50
C 507	(A,68,49)	CKSRYB104K16

D 1908	(A,61,36) LED	CL-197HB1-D(CDE)
D 1909	(A,61,16) LED	CL-197HB1-D(CDE)
D 1913	(B,107,12) Diode	1SS355
L 1901	(B,88,29) Inductor	CTF1617
X 1901	(B,103,15) Radiator 10.0 MHz	CSS1577

C

C 521	(B,54,53)	CKSRYB104K16
C 522	(B,55,58)	CKSRYB104K16
C 523	(B,60,60)	CKSRYB103K50
C 562	(A,53,13)	CEJQ470M25
C 564	(B,40,23)	CKSRYB223K50

S 1901	(A,24,12) Push Switch	CSG1155
S 1902	(A,9,12) Push Switch	CSG1155
S 1903	(A,156,7) Push Switch	CSG1155
S 1904	(A,9,40) Push Switch	CSG1155
S 1905	(A,129,7) Push Switch	CSG1155

C 565	(B,45,15)	CCSRCH331J50
C 566	(B,30,25)	CKSRYB104K16
C 567	(A,30,28)	CEJQ101M16
C 568	(A,26,21)	CEJQ470M16
C 569	(B,21,29)	CKSRYB104K16

S 1906	(A,40,25) Switch(MULTI-CONTROL)	CSX1120
S 1907	(A,24,40) Push Switch	CSG1155
S 1908	(A,115,7) Push Switch	CSG1155
S 1909	(A,59,40) Push Switch	CSG1155
S 1910	(A,59,12) Push Switch	CSG1155

D

C 601	(B,115,63)	CCSRCH101J50
C 603	(B,97,57)	CCSRCH220J50
C 604	(B,101,48)	CCSRCH180J50
C 605	(A,88,53)	CEJQ4R7M35
C 607	(B,90,53)	CKSRYB105K10

RESISTORS

R 1901	(B,137,40)	RS1/16S222J
R 1902	(B,137,38)	RS1/16S222J
R 1903	(B,121,12)	RS1/16S473J
R 1904	(B,24,10)	RS1/16S181J
R 1905	(B,152,24)	RS1/16S181J

C 609	(B,76,64)	CKSRYB105K10
C 651	(A,80,67)	CEJQ2R2M50
C 702	(B,85,35)	CKSRYB152K50
C 705	(B,86,28)	CKSRYB152K50
C 720	(B,42,67)	CKSRYB105K16

R 1906	(B,28,10)	RS1/16S181J
R 1907	(B,34,10)	RS1/16S181J
R 1908	(B,152,22)	RS1/16S391J
R 1909	(B,26,10)	RS1/16S221J
R 1910	(B,155,24)	RS1/16S221J

E

C 751	(B,45,69)	CKSRYB104K16
C 752	(A,36,51)	CEJQ101M16
C 753	(B,14,66)	CKSRYB473K50
C 781	(B,58,24)	CKSRYB103K50
C 782	(A,55,21)	CEJQ470M6R3

R 1911	(B,30,10)	RS1/16S221J
R 1912	(B,32,10)	RS1/16S221J
R 1913	(B,155,22)	RS1/16S391J
R 1914	(B,66,19)	RS1/16S102J
R 1916	(B,16,22)	RS1/16S333J

C 783	(A,82,55)	CEJQ4R7M35
C 784	(B,84,52)	CKSRYB105K10
C 822	(B,35,29)	CKSRYB472K50
C 893	(B,100,25)	CKSRYB105K10
C 901	(A,37,74)	CEJQ470M16

R 1917	(B,34,14)	RS1/16S333J
R 1918	(B,13,22)	RS1/16S822J
R 1919	(B,143,10)	RS1/16S822J
R 1920	(B,69,21)	RS1/16S103J
R 1921	(B,34,16)	RS1/16S822J

F

C 902	(B,15,76)	CKSRYB103K50
C 903	(B,23,83)	CKSRYB472K50
C 904	(A,26,74)	CEAT102M16
C 911	(A,27,87)	CEJQ221M16
C 912	(B,20,102)	CKSRYB103K50

C 913	(A,16,97)	CEJQ101M16
C 914	(B,11,121)	CKSRYB103K50

R 1922	(B,13,24)	RS1/16S332J
R 1923	(B,117,10)	RS1/16S332J

1

2

3

4

5		6
<u>Circuit Symbol and No.</u>		<u>Part No.</u>
R 1924 (B,48,15)		RS1/16S332J
R 1925 (B,16,24)		RS1/16S222J
R 1926 (B,66,10)		RS1/16S222J
R 1927 (B,69,20)		RS1/16S103J
R 1928 (B,51,15)		RS1/16S222J
R 1929 (B,69,23)		RS1/16S103J
R 1930 (B,69,17)		RS1/16S103J
R 1931 (B,79,17)		RS1/16S682J
R 1932 (B,79,19)		RS1/16S3902F
R 1933 (B,76,20)		RS1/16S6802F
R 1934 (B,82,30)		RS1/16S392J
R 1935 (B,69,24)		RS1/16S101J
R 1936 (B,64,32)		RS1/16S103J
R 1937 (B,68,31)		RS1/16S2R2J
R 1938 (B,104,37)		RS1/16S103J
R 1940 (B,94,21)		RS1/16S473J
R 1941 (B,87,24)		RS1/16S2202D
R 1942 (B,87,23)		RS1/16S3002D
R 1944 (B,99,16)		RS1/16S473J
R 1945 (B,102,28)		RS1/16S101J
R 1946 (B,112,31)		RS1/16S102J
R 1947 (B,91,21)		RS1/16S101J
R 1948 (B,107,15)		RS1/16S473J
R 1949 (B,111,15)		RAB4C101J
R 1950 (B,107,13)		RS1/16S154J
R 1952 (B,59,21)		RS1/16S102J
R 1953 (B,63,15)		RS1/16S102J
R 1957 (B,69,18)		RS1/16S103J

CAPACITORS

C 1902 (A,8,35)	CKSRYB104K16
C 1903 (A,9,17)	CKSRYB104K16
C 1904 (A,111,7)	CKSRYB104K16
C 1905 (A,125,7)	CKSRYB104K16
C 1906 (A,149,5)	CKSRYB104K16
C 1907 (A,22,35)	CKSRYB104K16
C 1908 (A,22,17)	CKSRYB104K16
C 1909 (A,61,35)	CKSRYB104K16
C 1910 (A,61,17)	CKSRYB104K16
C 1913 (B,69,35)	CKSYF106Z10
C 1914 (B,99,14)	CKSRYB103K50
C 1915 (B,83,23)	CKSRYB104K16
C 1916 (B,82,29)	CKSRYB104K16
C 1917 (B,101,33)	CKSRYB224K16
C 1918 (B,117,31)	CKSRYB105K10
C 1919 (B,113,12)	CKSRYB104K16
C 1920 (B,83,26)	CKSRYB103K50



Unit Number : CWM8758
Unit Name : Panel Unit

MISCELLANEOUS

D 1970 LED	CL220PGC
S 1970 Push Switch(EJECT)	CSG1112

RESISTORS

R 1970	RS1/16S101J
--------	-------------

7		8
<u>Circuit Symbol and No.</u>		<u>Part No.</u>
R 1971		RS1/16S101J
R 1972		RS1/16S0R0J
<u>CAPACITORS</u>		
C 1970		CKSRYB104K16
<u>D</u>		
Unit Number : CWX3526		
Unit Name : CD Core Unit(S10.5COMP2-iPod)		
<u>MISCELLANEOUS</u>		
IC 201 (A,36,46)	IC	PE5611B
IC 205 (B,25,47)	IC	341S2094
IC 301 (A,29,15)	IC	BA5839FP
Q 101 (B,58,70)	Transistor	2SA1577
Q 102 (B,49,58)	Chip Transistor	2SB1689
Q 201 (B,27,54)	Transistor	2SA1577
X 201 (A,23,38)	Ceramic Resonator	16.934 MHz CSS1603
X 204 (B,17,45)	Oscillator 32.768 kHz	CSS1735
X 205 (B,34,63)	Oscillator 48.000 MHz	CSS1753
S 901 (A,55,37)	Switch(HOME)	CSN1067
S 903 (B,20,59)	Switch(DSCSNS)	CSN1067
S 904 (B,41,68)	Switch(12EJ)	CSN1068
S 905 (B,25,70)	Switch(8EJ)	CSN1068

RESISTORS

R 101 (B,61,74)	RS1/10SR2R4J
R 102 (B,61,72)	RS1/10SR2R4J
R 103 (B,61,71)	RS1/10SR2R7J
R 104 (B,54,67)	RS1/16SS222J
R 105 (B,45,58)	RS1/16SS102J
R 107 (B,52,60)	RS1/16SS105J
R 202 (A,27,33)	RS1/16SS473J
R 203 (A,51,44)	RS1/16S473J
R 204 (A,24,58)	RS1/16SS221J
R 206 (B,10,27)	RS1/16SS104J
R 210 (B,10,23)	RS1/16SS102J
R 214 (B,50,50)	RS1/16SS472J
R 216 (B,49,49)	RS1/16SS472J
R 221 (A,51,48)	RS1/16SS103J
R 222 (A,51,46)	RS1/16SS103J
R 223 (B,14,43)	RS1/16SS473J
R 225 (A,51,50)	RS1/16SS103J
R 226 (A,51,51)	RS1/16SS393J
R 227 (B,48,52)	RS1/16SS562J
R 228 (B,45,52)	RS1/16SS122J
R 229 (B,47,54)	RS1/16SS472J
R 230 (B,22,25)	RS1/16SS0R0J
R 232 (B,46,52)	RS1/16SS122J
R 233 (B,26,59)	RS1/16SS103J
R 234 (B,23,26)	RS1/16SS473J
R 235 (A,26,59)	RS1/16SS473J
R 237 (A,24,35)	RS1/16SS151J
R 240 (B,14,26)	RS1/16S473J
R 241 (B,14,25)	RS1/16SS103J
R 244 (B,22,55)	RS1/16SS473J
R 250 (B,25,52)	RS1/16SS101J
R 251 (B,22,51)	RS1/16SS101J

1

Circuit Symbol and No.

2

Part No.

3

Circuit Symbol and No.

4

Part No.

R 252 (B,21,48)
R 254 (A,26,64)
R 255 (A,26,63)

RS1/16SS101J
RS1/16SS104J
RS1/16SS104J

C 224 (A,45,56)
C 226 (A,42,59)
C 227 (A,42,61)
C 228 (B,41,62)
C 229 (B,48,60)

CKSSYB104K10
CCSSCH680J50
CCSSCH470J50
CKSSYB103K16
CKSSYB104K10

A

R 256 (A,26,62)
R 259 (A,28,66)
R 261 (A,26,65)
R 262 (A,30,60)
R 263 (A,28,63)

RS1/16SS104J
RS1/16SS0R0J
RS1/16SS104J
RS1/16SS0R0J
RS1/16SS0R0J

C 236 (A,50,58)
C 239 (B,47,52)
C 240 (A,38,61)
C 243 (B,22,41)
C 250 (A,52,48)

CKSSYB104K10
CCSSCH220J50
CKSSYB104K10
CKSQYB475K6R3
CKSSYB102K50

R 273 (B,19,48)
R 274 (B,18,51)
R 275 (B,19,51)
R 276 (B,20,51)
R 277 (B,24,52)

RS1/16SS103J
RS1/16SS104J
RS1/16SS104J
RS1/16SS104J
RS1/16SS103J

C 251 (A,52,46)
C 260 (A,28,61)
C 261 (B,34,67)
C 262 (B,32,66)
C 290 (B,22,43)

CKSSYB102K50
CKSSYB104K10
CCSSCH8R0D50
CCSSCH8R0D50
CKSSYB104K10

B

R 278 (B,27,51)
R 279 (B,23,52)
R 282 (A,30,61)
R 283 (A,29,61)
R 284 (B,30,63)

RS1/16SS1003D
RS1/16SS104J
RS1/16SS240J
RS1/16SS240J
RS1/16SS153J

C 291 (B,17,42)
C 292 (B,17,48)
C 293 (B,44,61)
C 294 (B,25,41)
C 295 (B,56,61)

CCSSCH5R0C50
CCSSCH5R0C50
CKSSYB102K50
CKSSYB103K16
CKSQYB106K6R3

R 285 (B,28,63)
R 289 (B,19,45)
R 291 (B,43,62)
R 292 (B,25,43)
R 293 (B,27,52)

RS1/16SS153J
RS1/16SS0R0J
RS1/16SS272J
RS1/16SS221J
RS1/16SS472J

C 296 (B,56,63)
C 303 (A,36,19)
C 304 (A,36,21)
C 307 (A,22,11)
C 308 (B,11,18)

CKSQYB106K6R3
CKSSYB472K25
CKSSYB223K16
CKSRYB104K16
CKSRYB105K10

C

R 294 (A,32,63)
R 295 (B,55,64)
R 307 (A,35,19)
R 308 (A,38,19)
R 309 (A,35,21)

RS1/16SS471J
RS1/16SS103J
RS1/16SS183J
RS1/16SS183J
RS1/16SS183J

C 703 (B,15,35)
C 704 (B,12,36)
C 711 (A,31,25)

CCSSCH101J50
CKSSYB102K50
CKSSYB104K10

R 310 (A,38,22)
R 601 (B,30,31)
R 602 (B,27,31)
R 606 (B,28,23)
R 701 (B,12,37)

RS1/16SS183J
RS1/16SS0R0J
RS1/16SS0R0J
RS1/16S0R0J
RS1/16SS221J

M 1
M 2

Pickup Unit(P10.5)(Service) CXX1942
Motor Unit(SPINDLE) CXC7134
Motor Unit(LOADING/CARRIAGE) CXC4026

D

R 702 (A,24,56)
R 708 (B,15,37)
R 712 (B,15,54)
R 713 (B,15,53)

RS1/16SS221J
RS1/16S0R0J
RS1/16SS0R0J
RS1/16SS0R0J

CAPACITORS

C 106 (B,57,67)
C 202 (A,28,57)
C 204 (A,24,59)
C 205 (B,27,41)
C 206 (A,23,41)

CKSQYB475K6R3
CKSSYB104K10
CKSSYB103K16
CKSQYB475K6R3
CKSSYB104K10

E

C 207 (A,25,38)
C 209 (B,36,35)
C 210 (B,29,37)
C 211 (A,28,35)
C 212 (A,29,30)

CKSRYB104K16
CEVW220M6R3
CKSSYB104K10
CKSSYB104K10
CKSRYB104K16

C 213 (A,46,39)
C 214 (A,29,34)
C 216 (A,51,52)
C 217 (A,48,52)
C 218 (A,50,52)

CKSSYB104K10
CKSSYB104K10
CKSSYB332K50
CKSSYB104K10
CKSSYB473K10

F

C 219 (A,47,54)
C 220 (A,48,54)
C 221 (A,46,54)
C 222 (B,46,54)
C 223 (B,48,54)

CKSSYB104K10
CKSSYB182K50
CKSSYB104K10
CCSSCH560J50
CCSSCH4R0C50

Miscellaneous Parts List