


2. EXPLODED VIEWS AND PARTS LIST

2.1 PACKING(DEH-P550MP/XN/UC, DEH-P5500MP/XN/UC)

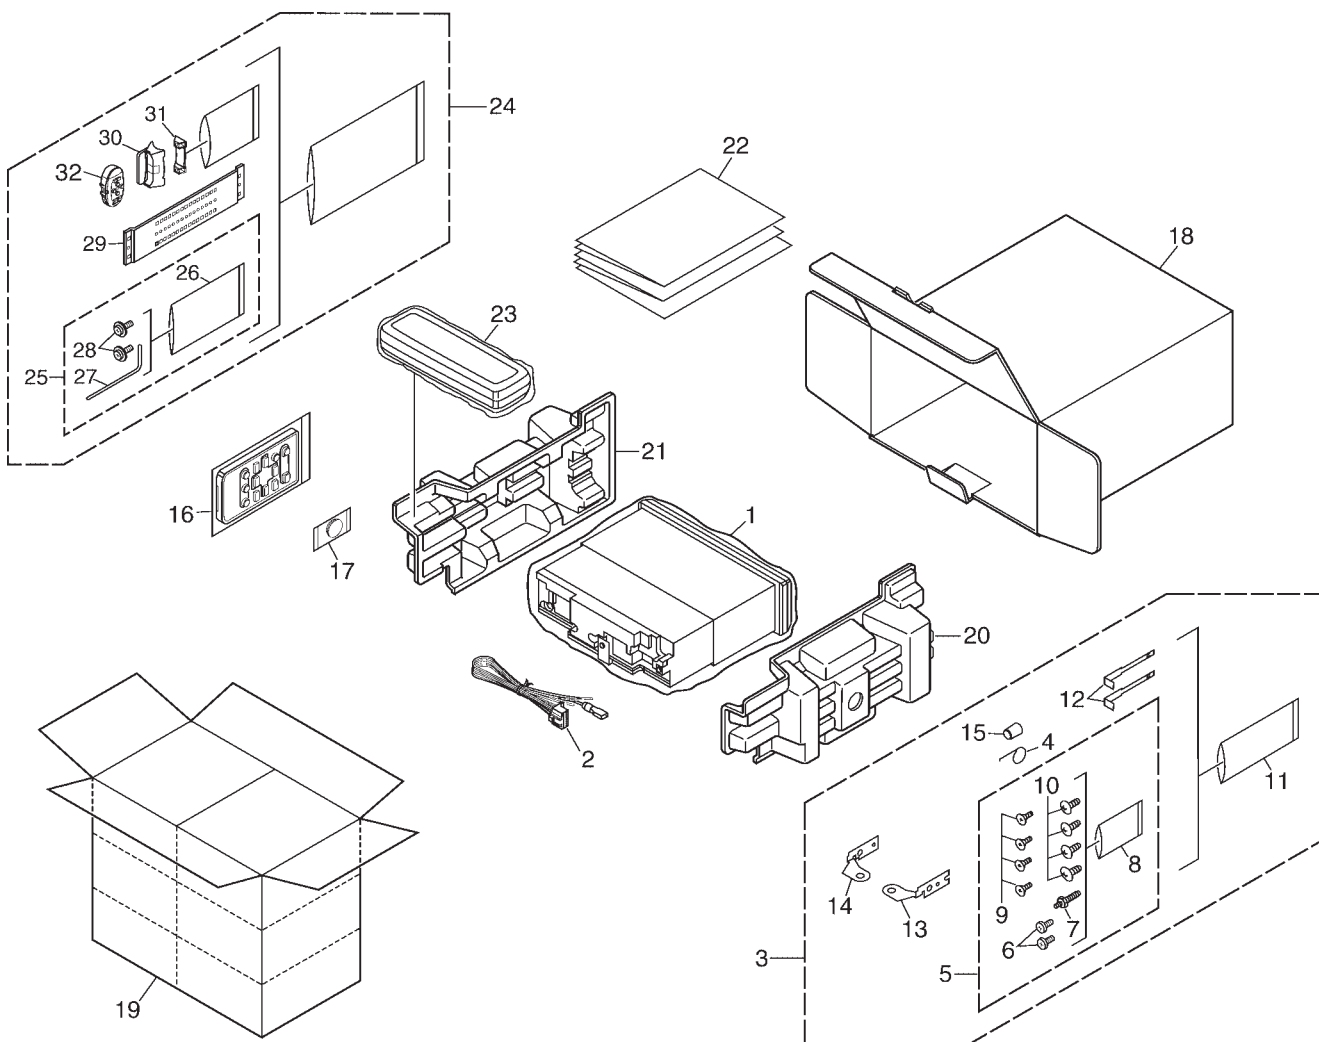

NOTE:

- Parts marked by "*" are generally unavailable because they are not in our Master Spare Parts List.
- Screws adjacent to ∇ mark on the product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

(1) PACKING(DEH-P550MP/XN/UC, DEH-P5500MP/XN/UC) SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Polyethylene Bag	CEG1173	21	Protector	CHP2664
2	Cord Assy	CDE7154	22-1	Owner's Manual	See Contrast table(2)
3	Accessory Assy	CEA3376	22-2	Installation Manual	See Contrast table(2)
4	Spring	CBH1650	* 22-3	Warranty Card	See Contrast table(2)
5	Screw Assy	CEA3848	* 22-4	Card	See Contrast table(2)
6	Fixing Screw	BPZ20P060FZK	23	Case Assy	CXB3520
7	Screw	CBA1650	24	Remote Control Assy	See Contrast table(2)
* 8	Polyethylene Bag	CEG-127	25	Screw Assy	See Contrast table(2)
9	Screw	CRZ50P090FTC	* 26	Polyethylene Bag	See Contrast table(2)
10	Screw	TRZ50P080FTC	* 27	Hexagonal Wrench	See Contrast table(2)
* 11	Polyethylene Bag	CEG-158	* 28	Screw	See Contrast table(2)
12	Handle	CNC5395	29	Belt	See Contrast table(2)
13	Holder	CND1249	30	Holder Assy	See Contrast table(2)
14	Holder	CND1250	31	Holder Assy	See Contrast table(2)
15	Bush	CNV3930	32	Remote Control Assy	See Contrast table(2)
16	Remote Control Unit	See Contrast table(2)			
* 17	Battery	See Contrast table(2)			
18	Carton	See Contrast table(2)			
19	Contain Box	See Contrast table(2)			
20	Protector	CHP2663			

(2) CONTRAST TABLE


DEH-P550MP/XN/UC and DEH-P5500MP/XN/UC are constructed the same except for the following:

Mark No.	Symbol and Description	Part No.	
		DEH-P550MP/XN/UC	DEH-P5500MP/XN/UC
* 16	Remote Control Unit	Not used	CXC1265
* 17	Battery	CEX1030	CEX1065
18	Carton	CHG4942	CHG4943
19	Contain Box	CHL4942	CHL4943
22-1	Owner's Manual	CRD3720	CRD3722
22-2	Installation Manual	CRD3721	CRD3723
* 22-3	Warranty Card	CRY1070	Not used
* 22-4	Card	Not used	ARY1048
24	Remote Control Assy	CXB9202	Not used
25	Screw Assy	CZE3169	Not used
* 26	Polyethylene Bag	CEG-127	Not used
* 27	Hexagonal Wrench	CZE3176	Not used
* 28	Screw	RMZ30H060FBK	Not used
29	Belt	CZN7661	Not used
30	Holder Assy	CZX3172	Not used
31	Holder Assy	CZX3173	Not used
32	Remote Control Assy	CZX3257	Not used

● Owner's Manual, Installation Manual

Model	Part No.	Language
DEH-P550MP/XN/UC	CRD3720	English, French, Spanish
	CRD3721	
DEH-P5500MP/XN/UC	CRD3722	English, French, Spanish
	CRD3723	

2.2 PACKING(DEH-P5550MP/XN/ES)

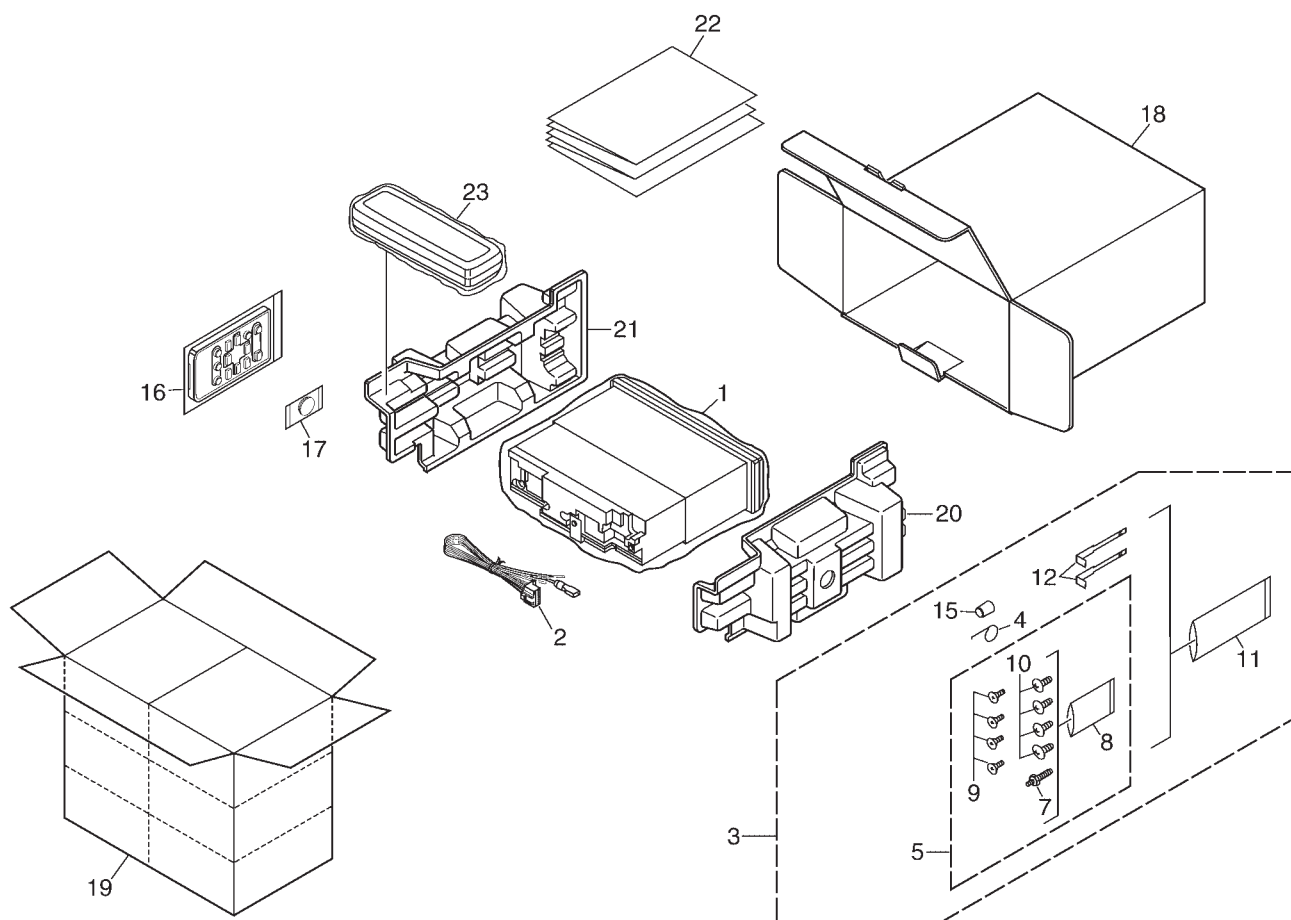


● PACKING(DEH-P5550MP/XN/ES) SECTION PARTS LIST

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	Polyethylene Bag	CEG-162		16	Remote Control Unit	CXC1265
	2	Cord Assy	CDE7154	*	17	Battery	CEX1065
	3	Accessory Assy	CEA3439		18	Carton	CHG4944
	4	Spring	CBH1650		19	Contain Box	CHL4944
	5	Screw Assy	CEA3849		20	Protector	CHP2663
	6				21	Protector	CHP2664
	7	Screw	CBA1650		22-1	Owner's Manual	CRD3724
*	8	Polyethylene Bag	CEG-127		22-2	Owner's Manual	CRD3725
	9	Screw	CRZ50P090FTC		22-3	Installation Manual	CRD3726
	10	Screw	TRZ50P080FTC		23	Case Assy	CXB3520
*	11	Polyethylene Bag	CEG-158				
	12	Handle	CNC5395				
	13						
	14						
	15	Bush	CNV3930				

● Owner's Manual, Installation Manual

Model	Part No.	Language
DEH-P5550MP/XN/ES	CRD3724	English, Spanish, Portuguese(B)
	CRD3725	Traditional Chinese, Arabic
	CRD3726	English, Spanish, Portuguese(B) Traditional Chinese, Arabic

2.3 EXTERIOR

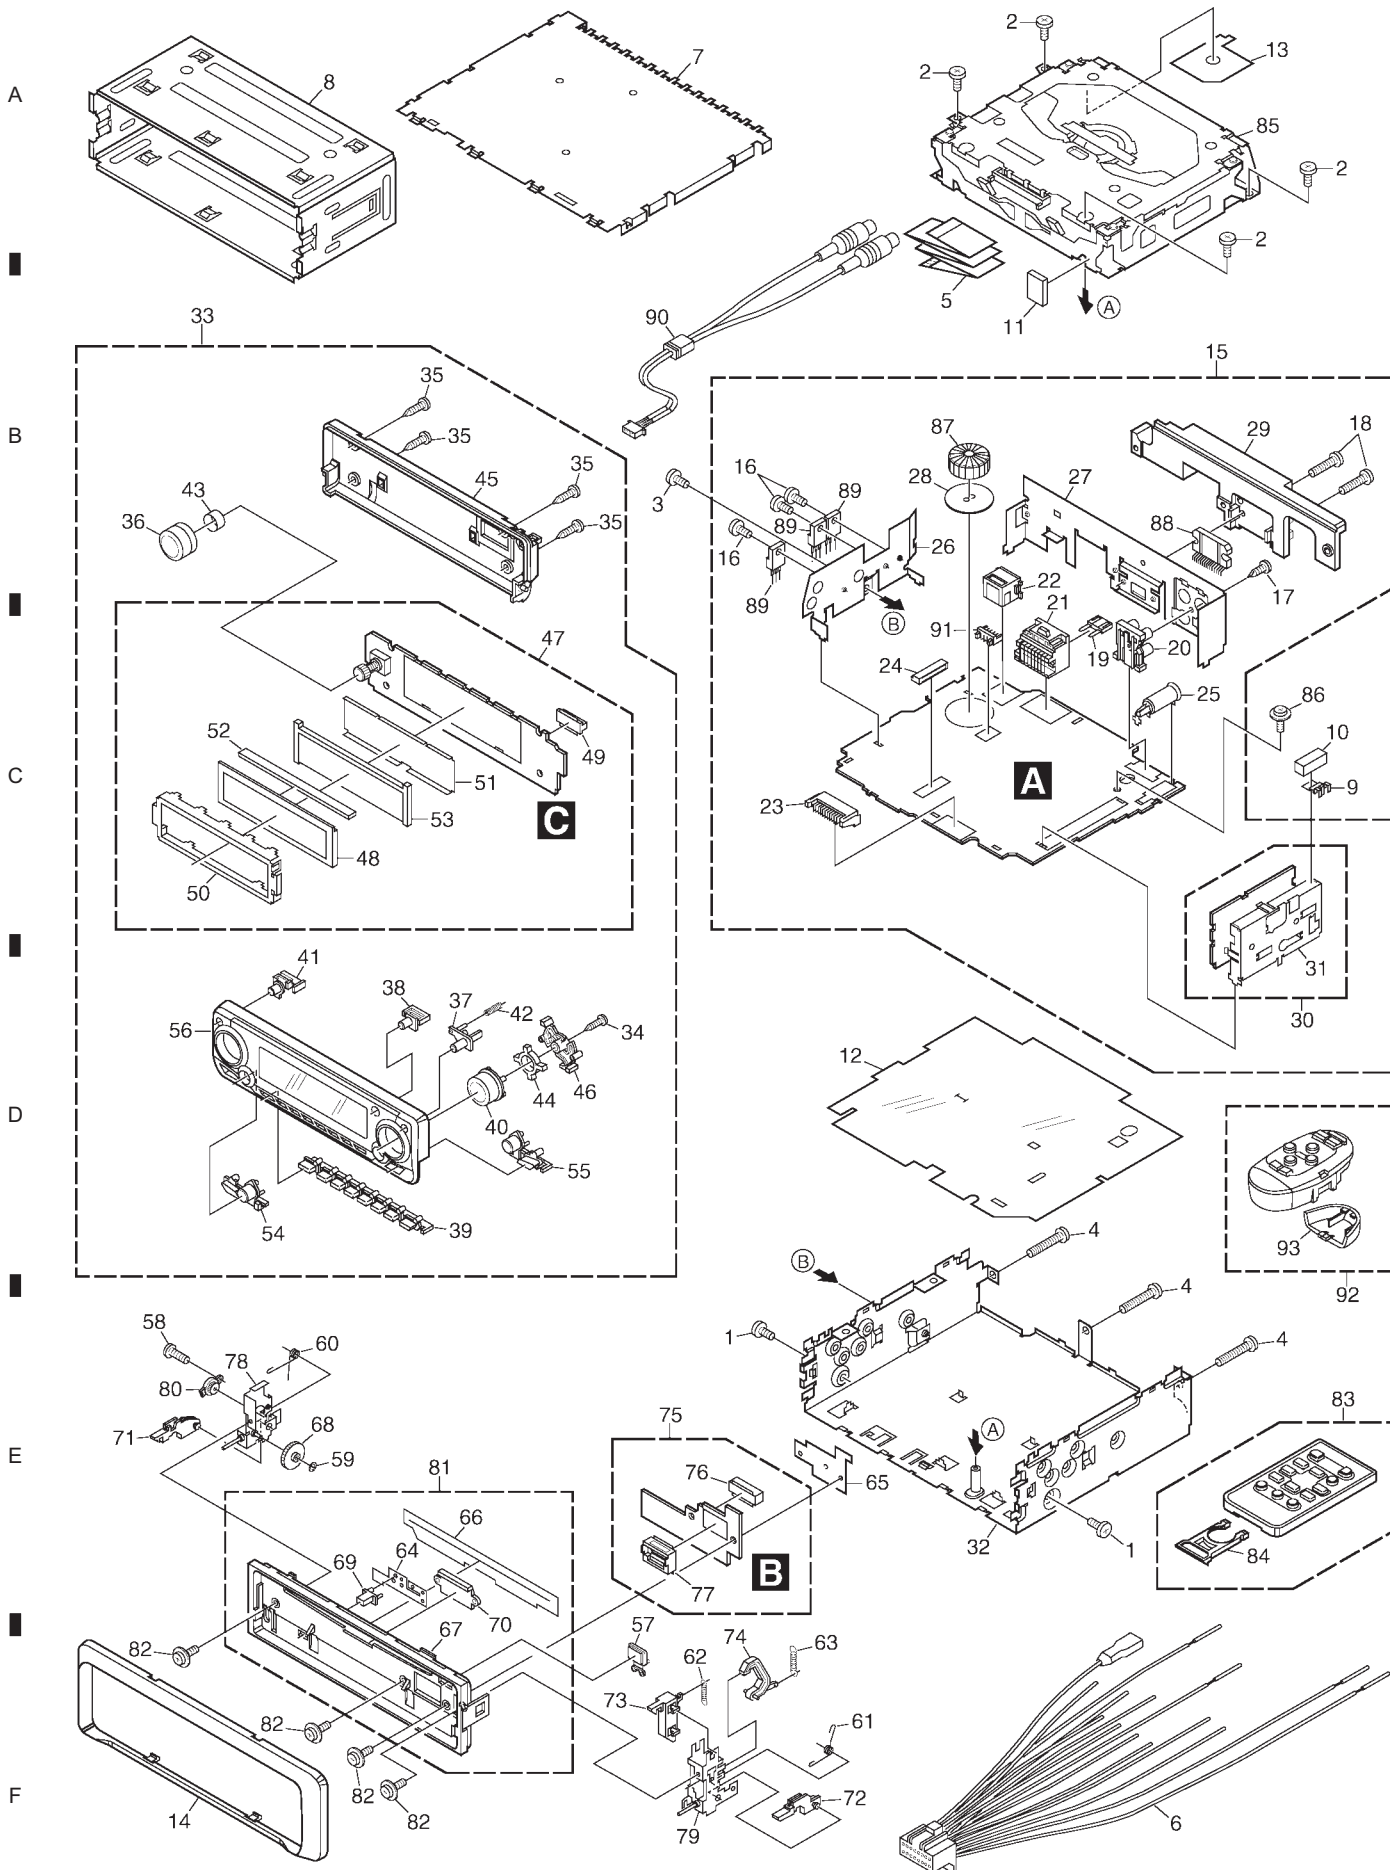

(1) EXTERIOR SECTION PARTS LIST


Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	Screw	BMZ30P040FZK	46	Holder	CNV7405	A
2	Screw	BSZ26P060FTC	47	Keyboard Unit	CWM8605	
3	Screw	BSZ30P060FTC	48	LCD	CAW1755	
4	Screw	BSZ30P200FTC	49	Connector(CN1901)	CKS4524	
5	Cable	CDE7065	50	Holder	CND1215	
6	Cord Assy	CDE7154	51	Sheet	CNM7921	
7	Case	CNB2870	52	Connector	CNV7365	
8	Holder	CNC8659	53	Lighting Conductor	CNV7406	
9	Earth Plate	CNC8915	54	Button Unit(SRC, EQ)	CXB9924	B
10	Cushion	CNM4870	55	Button Unit(BAND, EQ-EX)	CXB9925	
11	Insulator	CNM7682	56	Sub Grille Assy	See Contrast table(2)	
12	Insulator	CNM7935	57	Button(EJECT)	CAC7752	
13	Insulator	CNM8174	58	Screw(M2x4)	CBA1649	
14	Panel	See Contrast table(2)	59	Washer	CBF1038	
15	Tuner Amp Unit	See Contrast table(2)	60	Spring	CBH2650	
16	Screw	ASZ26P060FTC	61	Spring	CBH2651	
17	Screw	BPZ26P080FTC	62	Spring	CBH2652	
18	Screw	BSZ26P160FTC	63	Spring	CBH2653	
19	Fuse(10A)	CEK1208	64	Spring	CBL1512	C
20	Pin Jack(CN352)	CKB1051	65	Holder	CND1254	
21	Plug(CN901)	CKM1376	66	Cover	CNM6854	
22	Connector(CN101)	CKS3408	67	Panel	CNS7245	
23	Plug(CN801)	CKS3537	68	Gear	CNV5997	
24	Connector(CN651)	CKS3837	69	Pin	CNV6486	
25	Antenna Jack(CN401)	CKX1056	70	Lighting Conductor	CNV6487	
26	Holder	CND1352	71	Arm	CNV7400	
27	Holder	See Contrast table(2)	72	Arm	CNV7401	
28	Insulator	CNM8245	73	Arm	CNV7402	
29	Heat Sink	CNR1668	74	Arm	CNV7403	D
30	FM/AM Tuner Unit	CWE1646	75	Panel Unit	CWM8758	
31	Holder	CND1054	76	Socket(CN1950)	CKS3550	
32	Chassis Unit	CXB9528	77	Connector(CN1951)	CKS4462	
33	Detach Grille Assy	See Contrast table(2)	78	Holder Unit	CXB9501	
34	Screw	BPZ20P060FTC	79	Holder Unit	CXB9502	
35	Screw	BPZ20P100FZK	80	Damper Unit	CXB9503	
36	Knob	See Contrast table(2)	81	Service Panel Unit	CXX1691	
37	Button(OPEN)	CAC7728	82	Screw	IMS20P045FZK	
38	Button(AUDIO)	CAC7729	83	Remote Control Unit	See Contrast table(2)	E
39	Button(DISP, 1-6, FUNC)	CAC7730	84	Cover	See Contrast table(2)	
40	Button(SELECT)	See Contrast table(2)	85	CD Mechanism Module(S10MP3)	CXK5661	
41	Button(CLK)	CAC7751	86	Screw	ISS26P055FTC	
42	Spring	CBH2654	87	Choke Coil(L301)	CTH1280	
43	Spring	CBL1470	88	IC(IC301)	PAL007A	
44	Cushion	CNM8291	89	Transistor(Q651, 911, 921)	2SD2396	
45	Cover	CNS7247	90	Cord Assy	See Contrast table(2)	
			91	Plug(CN351)	See Contrast table(2)	
			92	Remote Control Assy	See Contrast table(2)	
			93	Cover	See Contrast table(2)	F

(2) CONTRAST TABLE

DEH-P550MP/XN/UC, DEH-P5500MP/XN/UC and DEH-P5550MP/XN/ES are constructed the same except for the following:

Mark No.	Symbol and Description	Part No.		
		DEH-P550MP/XN/UC	DEH-P5500MP/XN/UC	DEH-P5550MP/XN/ES
14	Panel	CNS6935	CNS6934	CNS6935
15	Tuner Amp Unit	CWM8588	CWM8589	CWM8590
27	Holder	CND1239	CND1477	CND1477
33	Detach Grille Assy	CXB9672	CXB9673	CXB9674
36	Knob	CAA2755	CAA2753	CAA2755
40	Button(SELECT)	CAC7733	CAC7731	CAC7733
56	Sub Grille Assy	CXB9971	CXB9972	CXB9973
83	Remote Control Unit	Not used	CXC1265	CXC1265
84	Cover	Not used	CNS7068	CNS7068
90	Cord Assy	CDE7129	Not used	Not used
91	Plug(CN351)	CKS1238	Not used	Not used
92	Remote Control Assy	CZX3257	Not used	Not used
93	Cover	CZN7655	Not used	Not used

2.4 CD MECHANISM MODULE

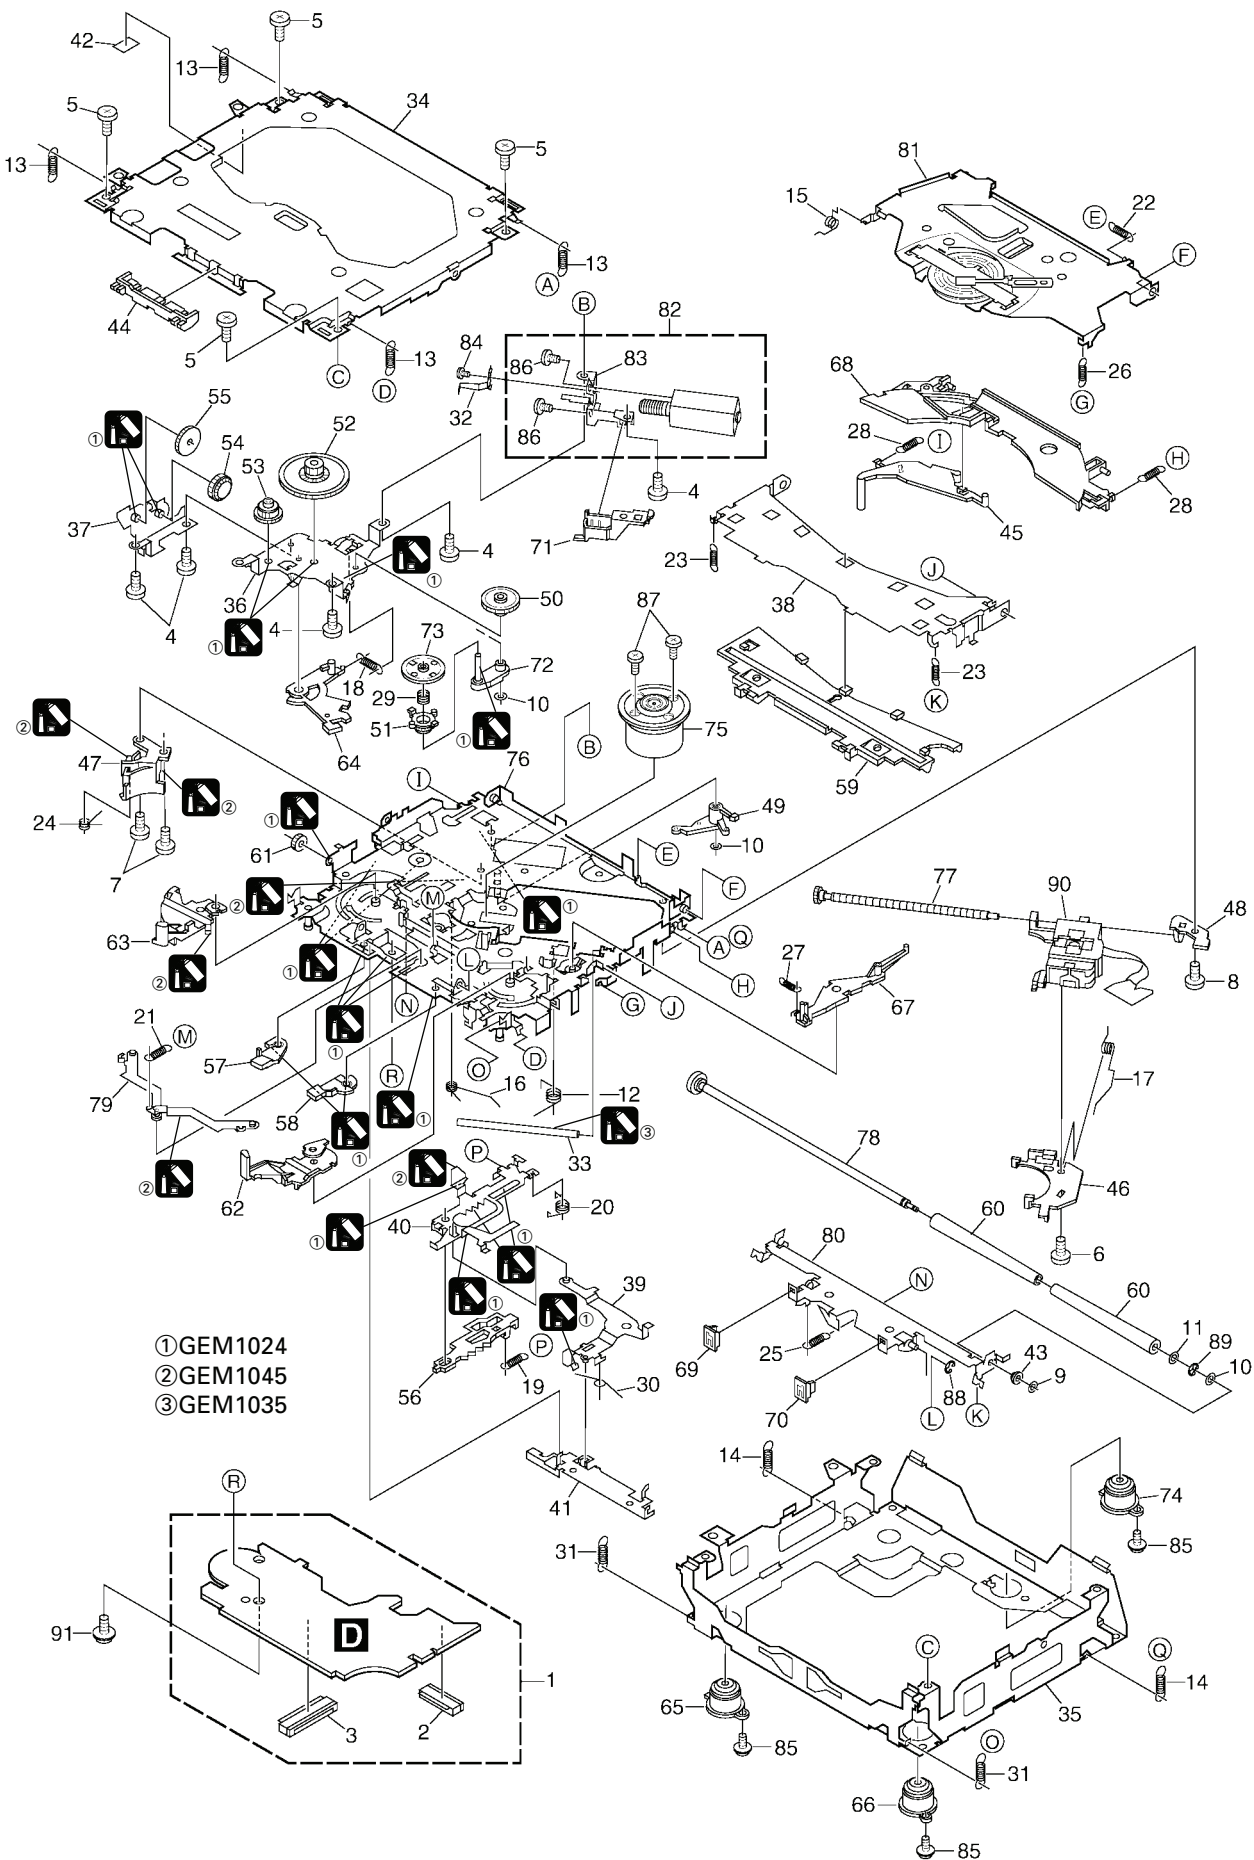

● CD MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	CD Core Unit(S10MP3)	CWX2743	46	Rack	CNV7199	
2	Connector(CN101)	CKS4182	47	Holder	CNV7201	
3	Connector(CN901)	CKS4017	48	Holder	CNV7202	
4	Screw	BMZ20P035FTC	49	Arm	CNV7203	
5	Screw	BSZ20P040FTC	50	Gear	CNV7207	
6	Screw(M2x4)	CBA1362	51	Gear	CNV7208	
7	Screw(M2x3)	CBA1511	52	Gear	CNV7209	
8	Screw(M2x3)	CBA1527	53	Gear	CNV7210	
9	Washer	CBF1037	54	Gear	CNV7211	
10	Washer	CBF1038	55	Gear	CNV7212	
11	Washer	CBF1060	56	Rack	CNV7214	
12	Spring	CBH2390	57	Arm	CNV7215	
13	Spring	CBH2606	58	Arm	CNV7216	
14	Spring	CBH2607	59	Guide	CNV7217	
15	Spring	CBH2608	60	Roller	CNV7218	
16	Spring	CBH2609	61	Gear	CNV7219	
17	Spring	CBH2610	62	Arm	CNV7221	
18	Spring	CBH2611	63	Arm	CNV7220	
19	Spring	CBH2612	64	Arm	CNV7222	
20	Spring	CBH2613	65	Damper	CNV7313	
21	Spring	CBH2614	66	Damper	CNV7314	
22	Spring	CBH2615	67	Arm	CNV7341	
23	Spring	CBH2616	68	Arm	CNV7342	
24	Spring	CBH2617	69	Guide	CNV7360	
25	Spring	CBH2620	70	Guide	CNV7361	
26	Spring	CBH2621	71	Holder	CNV7437	
27	Spring	CBH2641	72	Arm	CNV7444	
28	Spring	CBH2642	73	Gear	CNV7595	
29	Spring	CBH2643	74	Damper	CNV7618	
30	Spring	CBH2659	75	Motor Unit(M1)	CXB6007	
31	Spring	CBH2688	76	Chassis Unit	CXB8728	
* 32	Spring	CBL1614	77	Screw Unit	CXB8729	
33	Shaft	CLA3845	78	Gear Unit	CXB8731	
34	Frame	CNC9962	79	Arm Unit	CXB8732	
35	Frame	CNC9963	80	Arm Unit	CXB8735	
36	Bracket	CNC9966	81	Arm Unit	CXB8852	
37	Bracket	CNC9967	82	Motor Unit(M2)	CXB8933	
38	Arm	CNC9968	83	Bracket	CNC9985	
39	Arm	CNC9973	84	Screw	JFZ20P020FTC	
40	Lever	CNC9983	85	Screw(M2x5)	EBA1028	
41	Lever	CNC9984	86	Screw	JFZ20P020FTC	
42	Sheet	CNM8134	87	Screw	JGZ17P022FTC	
43	Collar	CNV6906	88	Washer	YE15FTC	
44	Guide	CNV6925	89	Washer	YE20FTC	
45	Arm	CNV7198	90	Pickup Unit(Service)(P10)	CXX1641	
			91	Screw	IMS26P030FMC	

5. ELECTRICAL PARTS LIST

NOTES:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○J,RS1/○○S○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

====Circuit Symbol and No.===	Part Name	Part No.	====Circuit Symbol and No.===	Part Name	Part No.
A	Unit Number : CWM8588(DEH-P550MP/XN/UC) Unit Name : Tuner Amp Unit		D 808	Diode	HZS11L(A1)
			D 911	Diode	S5688G
			D 912	Diode	HZS6L(B2)
			D 921	Diode	HZS9L(B3)
			D 931	Diode	HZS7L(A1)
MISCELLANEOUS					
IC 101	IC	HA12187FP			
IC 131	IC	NJM4558MD	D 932	Diode	HZS7L(C3)
IC 201	IC	PML009A	D 937	Diode	MA110
IC 301	IC	PAL007A	D 951	Diode	DAN202U
IC 401	IC	NJM2391DL1-33	D 981	Diode	DAN202U
			D 982	Diode	HZS9L(A2)
IC 601	IC	PD5800A	L 101	Inductor	LAU2R2K
IC 602	IC	S-80835ANUP-EDZ	L 201	Ferri-Inductor	LAU4R7K
Q 101	Transistor	2SA1037K	L 301	Choke Coil 600μH	CTH1280
Q 102	Transistor	DTC114EU	L 401	Ferri-Inductor	LAU4R7K
Q 301	Transistor	DTC124EU	L 403	Inductor	LAU1R0K
Q 351	Transistor	IMH3A	L 404	Inductor	LAU1R0K
Q 352	Transistor	IMH3A	L 406	Inductor	CTF1385
Q 353	Transistor	IMH3A	L 601	Ferri-Inductor	LAU100K
Q 650	Transistor	2SD1760F5	L 683	Ferri-Inductor	LAU4R7K
Q 651	Transistor	2SD2396	L 801	Inductor	LAU2R2K
Q 652	Transistor	IMD2A	L 951	Inductor	LAU2R2K
Q 803	Transistor	2SD1767	X 601	Radiator 10.00MHz	CSS1599
Q 804	Transistor	IMD2A	S 802	Switch(DSENSE)	CSN1039
Q 805	Transistor	DTC143EU		FM/AM Tuner Unit	CWE1646
Q 806	Transistor	IMD14		Fuse 10A	CEK1208
Q 807	Transistor	2SA1037K	BZ 641	Buzzer	CPV1062
Q 808	Transistor	DTC114EU	AR 401	Surge Protector	DSP-201M-S00B
Q 911	Transistor	2SD2396			
Q 913	Transistor	IMD2A	RESISTORS		
Q 921	Transistor	2SD2396	R 101		RS1/16S101J
			R 102		RS1/16S620J
Q 922	Transistor	DTC114EU	R 103		RS1/16S101J
Q 923	Transistor	2SB1243	R 104		RS1/16S222J
Q 931	Transistor	IMX1	R 105		RS1/16S103J
Q 932	Transistor	DTC114EU			
Q 951	Transistor	2SA1037K	R 106		RS1/16S472J
			R 107		RS1/16S223J
Q 981	Transistor	2SC2412K	R 108		RS1/16S472J
Q 982	Transistor	IMD2A	R 109		RS1/16S821J
D 131	Diode Network	DA204U	R 110		RS1/16S821J
D 132	Diode Network	DA204U			
D 133	Diode	DAN202U	R 111		RS1/16S223J
			R 112		RS1/16S223J
D 134	Diode	DAP202U	R 113		RS1/16S102J
D 301	Diode	S5688G	R 114		RS1/16S102J
D 302	Diode	S5688G	R 133		RS1/16S563J
D 303	Diode	S5688G			
D 304	Diode	S5688G	R 134		RS1/16S104J
			R 139		RS1/16S563J
D 401	Diode	S5688G	R 140		RS1/16S104J
D 402	Diode	S5688G	R 147		RS1/16S474J
D 403	Diode	S5688G	R 148		RS1/16S474J
D 650	Diode	HZS6L(C1)			
D 651	Diode	HZS9L(B1)	R 201		RAB4C102J
			R 241		RS1/16S102J
D 803	Diode Network	DA204U	R 242		RS1/16S102J
D 804	Diode	DAN202U	R 247		RS1/16S101J
D 805	Diode	DAP202U	R 248		RS1/16S101J
D 806	Diode	DAN202U			
D 807	Diode	DAP202U			

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.	
R 249	RS1/16S101J	R 803	RS1/16S472J	A
R 250	RS1/16S101J	R 804	RS1/16S1R0J	
R 301	RS1/16S103J	R 805	RS1/16S391J	
R 302	RS1/16S103J	R 806	RS1/16S391J	
R 303	RS1/16S153J	R 807	RS1/16S473J	
R 304	RS1/16S331J	R 808	RS1/16S473J	
R 351	RS1/16S821J	R 809	RS1/16S102J	
R 352	RS1/16S821J	R 810	RS1/16S222J	
R 353	RS1/16S821J	R 811	RS1/16S222J	
R 354	RS1/16S821J	R 812	RS1/16S222J	
R 355	RS1/16S821J	R 813	RS1/16S222J	B
R 356	RS1/16S821J	R 814	RS1/16S222J	
R 357	RS1/16S223J	R 815	RS1/16S473J	
R 358	RS1/16S223J	R 816	RS1/16S104J	
R 359	RS1/16S223J	R 817	RD1/4PU391J	
R 360	RS1/16S223J	R 818	RS1/16S104J	
R 361	RS1/16S223J	R 819	RS1/16S222J	
R 362	RS1/16S223J	R 820	RS1/16S222J	
R 403	RS1/16S681J	R 821	RS1/16S472J	
R 404	RS1/16S0R0J	R 822	RS1/16S0R0J	
R 405	RS1/16S681J	R 823	RS1/16S102J	
R 406	RS1/16S681J	R 824	RS1/16S473J	
R 407	RS1/16S681J	R 825	RS1/16S102J	
R 408	RS1/16S681J	R 826	RS1/16S102J	
R 410	RS1/16S681J	R 827	RS1/16S102J	
R 413	RS1/16S0R0J	R 828	RS1/16S102J	C
R 416	RS1/16S681J	R 903	RS1/16S223J	
R 417	RS1/16S681J	R 912	RS1/16S222J	
R 419	RS1/16S681J	R 913	RS1/16S223J	
R 421	RS1/16S681J	R 914	RS1/16S104J	
R 423	RD1/4PU0R0J	R 915	RS1/16S104J	
R 602	RS1/16S104J	R 916	RS1/16S104J	
R 605	RS1/16S0R0J	R 923	RS1/16S103J	
R 606	RS1/16S104J	R 924	RD1/4PU122J	
R 607	RS1/16S822J	R 925	RS1/16S182J	
R 608	RS1/16S221J	R 931	RS1/16S472J	D
R 609	RS1/16S221J	R 932	RS1/16S473J	
R 610	RS1/16S682J	R 933	RS1/16S103J	
R 611	RS1/16S682J	R 934	RS1/16S473J	
R 612	RS1/16S104J	R 935	RS1/16S104J	
R 613	RS1/16S102J	R 936	RS1/16S103J	
R 615	RS1/16S0R0J	R 938	RD1/4PU102J	
R 616	RS1/16S473J	R 939	RD1/4PU102J	
R 617	RS1/16S102J	R 951	RD1/4PU153J	
R 618	RS1/16S104J	R 952	RS1/16S472J	
R 630	RS1/16S104J	R 953	RS1/16S472J	
R 632	RS1/16S104J	R 954	RS1/16S102J	
R 641	RS1/16S102J	R 983	RS1/16S223J	
R 645	RS1/16S271J	R 984	RS1/16S473J	
R 651	RD1/4PU221J	R 985	RS1/16S102J	
R 652	RD1/4PU221J	CAPACITORS		E
R 656	RS1/16S102J	C 101	CKSRYB104K16	
R 657	RS1/16S102J	C 102	CKSRYB473K25	
R 665	RD1/4PU0R0J	C 131	CKSRYB104K16	
R 666	RS1/16S0R0J	C 132	CKSRYB104K16	
R 669	RS1/16S0R0J	C 141	CKSRYB104K16	
R 671	RS1/16S0R0J			
R 672	RS1/16S0R0J	C 142	CKSRYB103K50	
R 676	RS1/16S102J	C 143	CKSRYB474K10	
R 677	RS1/16S104J	C 144	CKSRYB474K10	
R 678	RS1/16S102J	C 145	CCSRCH101J50	F
R 680	RS1/16S222J	C 146	CCSRCH101J50	
R 681	RS1/16S104J	C 147	CKSRYB104K16	
R 689	RS1/16S0R0J	C 201	CEJQ1R0M50	
R 802	RS1/16S222J	C 202	CEJQ1R0M50	
		C 203	CKSRYB104K16	
		C 204	CKSRYB104K16	

A Unit Number : CWM8589(DEH-P5500MP/XN/UC)
CWM8590(DEH-P5550MP/XN/ES)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

IC	101	IC	HA12187FP
IC	131	IC	NJM4558MD
IC	201	IC	PML009A
IC	301	IC	PAL007A
IC	401	IC	NJM2391DL1-33
IC	601	IC	PD5800A
IC	602	IC	S-80835ANUP-EDZ
Q	101	Transistor	2SA1037K
Q	102	Transistor	DTC114EU
Q	301	Transistor	DTC124EU
Q	352	Transistor	IMH3A
Q	353	Transistor	IMH3A
Q	650	Transistor	2SD1760F5
Q	651	Transistor	2SD2396
Q	652	Transistor	IMD2A
Q	803	Transistor	2SD1767
Q	804	Transistor	IMD2A
Q	805	Transistor	DTC143EU
Q	806	Transistor	IMD14
Q	807	Transistor	2SA1037K
Q	808	Transistor	DTC114EU
Q	911	Transistor	2SD2396
Q	913	Transistor	IMD2A
Q	921	Transistor	2SD2396
Q	922	Transistor	DTC114EU
Q	923	Transistor	2SB1243
Q	931	Transistor	IMX1
Q	932	Transistor	DTC114EU
Q	951	Transistor	2SA1037K
Q	981	Transistor	2SC2412K
Q	982	Transistor	IMD2A
D	131	Diode Network	DA204U
D	132	Diode Network	DA204U
D	133	Diode	DAN202U
D	134	Diode	DAP202U
D	301	Diode	S5688G
D	302	Diode	S5688G
D	303	Diode	S5688G
D	304	Diode	S5688G
D	401	Diode	S5688G
D	402	Diode	S5688G
D	403	Diode	S5688G
D	650	Diode	HZS6L(C1)
D	651	Diode	HZS9L(B1)
D	803	Diode Network	DA204U

====Circuit Symbol and No.==Part Name			Part No.	====Circuit Symbol and No.==Part Name			Part No.	A
D	804	Diode	DAN202U	R	359		RS1/16S223J	
D	805	Diode	DAP202U	R	360		RS1/16S223J	
D	806	Diode	DAN202U	R	361		RS1/16S223J	
D	807	Diode	DAP202U	R	362		RS1/16S223J	
D	808	Diode	HZS11L(A1)	R	403		RS1/16S681J	
D	911	Diode	S5688G	R	404		RS1/16S0R0J	
D	912	Diode	HZS6L(B2)	R	405		RS1/16S681J	
D	921	Diode	HZS9L(B3)	R	406		RS1/16S681J	
D	931	Diode	HZS7L(A1)	R	407		RS1/16S681J	
D	932	Diode	HZS7L(C3)	R	408		RS1/16S681J	
D	937	Diode	MA110	R	410		RS1/16S681J	
D	951	Diode	DAN202U	R	413		RS1/16S0R0J	
D	981	Diode	DAN202U	R	416		RS1/16S681J	
D	982	Diode	HZS9L(A2)	R	417		RS1/16S681J	
L	101	Inductor	LAU2R2K	R	419		RS1/16S681J	
L	201	Ferri-Inductor	LAU4R7K	R	421		RS1/16S681J	
L	301	Choke Coil 600μH	CTH1280	R	423		RD1/4PU0R0J	
L	401	Ferri-Inductor	LAU4R7K	R	601	(DEH-P5550MP/XN/ES)	RS1/16S104J	
L	403	Inductor	LAU1R0K	R	602	(DEH-P5500MP/XN/UC)	RS1/16S104J	
L	404	Inductor	LAU1R0K	R	605		RS1/16S0R0J	
L	406	Inductor	CTF1385	R	606		RS1/16S104J	
L	601	Ferri-Inductor	LAU100K	R	607		RS1/16S822J	
L	683	Ferri-Inductor	LAU4R7K	R	608		RS1/16S221J	
L	801	Inductor	LAU2R2K	R	609		RS1/16S221J	
L	951	Inductor	LAU2R2K	R	610		RS1/16S682J	
X	601	Radiator 10.00MHz	CSS1599	R	611		RS1/16S682J	
S	802	Switch(DSENSE)	CSN1039	R	612		RS1/16S104J	
		Fuse 10A	CEK1208	R	613		RS1/16S102J	
		FM/AM Tuner Unit	CWE1646	R	615		RS1/16S0R0J	
BZ	641	Buzzer	CPV1062	R	616		RS1/16S473J	
AR	401	Surge Protector	DSP-201M-S00B	R	617		RS1/16S102J	
RESISTORS				R	618		RS1/16S104J	
				R	630		RS1/16S104J	
R	101		RS1/16S101J	R	632		RS1/16S104J	
R	102		RS1/16S620J	R	641		RS1/16S102J	
R	103		RS1/16S101J	R	645		RS1/16S271J	
R	104		RS1/16S222J	R	651		RD1/4PU221J	
R	105		RS1/16S103J	R	652		RD1/4PU221J	
				R	656		RS1/16S102J	
R	106		RS1/16S472J	R	657		RS1/16S102J	
R	107		RS1/16S223J					
R	108		RS1/16S472J	R	665		RD1/4PU0R0J	
R	109		RS1/16S821J	R	666		RS1/16S0R0J	
R	110		RS1/16S821J	R	669		RS1/16S0R0J	
				R	671		RS1/16S0R0J	
R	111		RS1/16S223J	R	672		RS1/16S0R0J	
R	112		RS1/16S223J					
R	113		RS1/16S102J	R	676		RS1/16S102J	
R	114		RS1/16S102J	R	677		RS1/16S104J	
R	133		RS1/16S563J	R	678		RS1/16S102J	
				R	680		RS1/16S222J	
R	134		RS1/16S104J	R	681		RS1/16S104J	
R	139		RS1/16S563J					
R	140		RS1/16S104J	R	689		RS1/16S0R0J	
R	147		RS1/16S474J	R	802		RS1/16S222J	
R	148		RS1/16S474J	R	803		RS1/16S472J	
				R	804		RS1/16S1R0J	
R	201		RAB4C102J	R	805		RS1/16S391J	
R	241		RS1/16S102J					
R	242		RS1/16S102J	R	806		RS1/16S391J	
R	247		RS1/16S101J	R	807		RS1/16S473J	
R	248		RS1/16S101J	R	808		RS1/16S473J	
				R	809		RS1/16S102J	
R	249		RS1/16S101J	R	810		RS1/16S222J	
R	250		RS1/16S101J					
R	301		RS1/16S103J	R	811		RS1/16S222J	
R	302		RS1/16S103J	R	812		RS1/16S222J	
R	303		RS1/16S153J	R	813		RS1/16S222J	
				R	814		RS1/16S222J	
R	304		RS1/16S331J	R	815		RS1/16S473J	
R	353		RS1/16S821J					
R	354		RS1/16S821J					
R	355		RS1/16S821J					
R	356		RS1/16S821J					

A	====Circuit Symbol and No.==Part Name		Part No.	====Circuit Symbol and No.==Part Name		Part No.
	R	816	RS1/16S104J	C	220	CCSRCH120J50
	R	817	RD1/4PU391J	C	221	CCSRCH120J50
	R	818	RS1/16S104J	C	222	CCSRCH120J50
	R	819	RS1/16S222J	C	225	CEJQ100M16
	R	820	RS1/16S222J	C	241	CKSRYB152K50
	R	821	RS1/16S472J	C	242	CKSRYB152K50
	R	822	RS1/16S0R0J	C	301	CKSRYB104K16
	R	823	RS1/16S102J	C	306	CEJQ330M10
	R	824	RS1/16S473J	C	307	CCH1486
	R	825	RS1/16S102J	C	309	CKSRYB104K16
B	R	826	RS1/16S102J	C	310	CEJQ100M16
	R	827	RS1/16S102J	C	311	CKSYB475K16
	R	828	RS1/16S102J	C	312	CKSYB475K16
	R	903	RS1/16S223J	C	317	CKSRYB474K10
	R	912	RS1/16S222J	C	318	CKSRYB474K10
	R	913	RS1/16S223J	C	319	CKSRYB474K10
	R	914	RS1/16S104J	C	320	CKSRYB474K10
	R	915	RS1/16S104J	C	321	CKSRYB474K10
	R	916	RS1/16S104J	C	322	CKSRYB474K10
	R	923	RS1/16S103J	C	323	CKSRYB474K10
	R	924	RD1/4PU122J	C	324	CKSRYB474K10
	R	925	RS1/16S182J	C	325	CKSQYB225K10
	R	931	RS1/16S472J	C	326	CKSQYB225K10
	R	932	RS1/16S473J	C	353	CEJQ4R7M35
	R	933	RS1/16S103J	C	354	CEJQ4R7M35
C	R	934	RS1/16S473J	C	355	CEJQ4R7M35
	R	935	RS1/16S104J	C	356	CEJQ4R7M35
	R	936	RS1/16S103J	C	401	CKSRYB103K50
	R	938	RD1/4PU102J	C	402	CEJQ101M10
	R	939	RD1/4PU102J	C	403	CKSQYB105K16
	R	951	RD1/4PU153J	C	404	CKSYB475K10
	R	952	RS1/16S472J	C	406	CEJQ470M10
	R	953	RS1/16S472J	C	408	CKSYB475K10
	R	954	RS1/16S102J	C	409	CEJQ1R0M50
	R	983	RS1/16S223J	C	411	CCSRCH101J50
	R	984	RS1/16S473J	C	412	CCSRCH470J50
	R	985	RS1/16S102J	C	601	CEJQ4R7M35
				C	602	CKSQYB105K16
				C	603	CEJQ2R2M50
				C	604	CCSRCH200J50
CAPACITORS						
D	C	101	CKSRYB104K16	C	605	CCSRCH200J50
	C	102	CKSRYB473K25	C	609	CCSRCH101J50
	C	131	CKSRYB104K16	C	644	CEJQ101M10
	C	132	CKSRYB104K16	C	645	CKSRYB473K25
	C	141	CKSRYB104K16	C	646	CCSRCH470J50
	C	142	CKSRYB103K50	C	651	CEJQ101M10
	C	143	CKSRYB474K10	C	652	CKSRYB473K25
	C	144	CKSRYB474K10	C	654	CKSRYB152K50
	C	145	CCSRCH101J50	C	655	CKSRYB152K50
	C	146	CCSRCH101J50	C	657	CCSRCH470J50
	C	147	CKSRYB104K16	C	658	CCH1183
	C	201	CEJQ1R0M50	C	662	CCSRCH471J50
	C	202	CEJQ1R0M50	C	755	CKSRYB104K16
	C	203	CKSRYB104K16	C	806	CKSRYB473K25
	C	204	CKSRYB104K16	C	807	CKSRYB473K25
E	C	205	CKSRYB104K16	C	811	CKSQYB105K16
	C	206	CEJQ470M16	C	854	CKSRYB473K25
	C	207	CEJQ1R0M50	C	911	CCH1331
	C	208	CEJQ1R0M50	C	912	CKSRYB472K50
	C	209	CEJQ1R0M50	C	913	CKSRYB103K50
	C	210	CEJQ1R0M50	C	914	CEJQ470M10
	C	211	CEJQ4R7M35	C	921	CEJQ221M10
	C	212	CEJQ4R7M35	C	922	CKSRYB103K50
	C	213	CEJQ4R7M35	C	923	CEJQ101M16
	C	214	CEJQ4R7M35	C	931	CEJQ1R0M50
F	C	215	CEJQ4R7M35			
	C	216	CEJQ4R7M35			
	C	217	CEJQ4R7M35			
	C	218	CEJQ4R7M35			
	C	219	CCSRCH120J50			

====Circuit Symbol and No.==Part Name

Part No.

Unit Number : CWM8605
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1900	IC	PD6294A
IC 1901	HIC Module	RS-140
Q 1910	Transistor	DTC114EU
D 1902	Diode Network	DA204U
D 1910	LED	NSSW440-9159
D 1912	LED	NSSW440-9159
D 1914	LED	NSSW440-9159
D 1930	LED	CL-195PG-CD
D 1931	LED	CL-195PG-CD
D 1932	LED	CL-195PG-CD
D 1935	LED	CL-195PG-CD
D 1942	LED	CL190UBX
D 1943	LED	CL190UBX
D 1946	LED	CL-195PG-CD
D 1947	LED	CL-195PG-CD
X 1900	Ceramic Resonator 5.00MHz	CSS1547
S 1901	Push Switch	CSG1112
S 1902	Push Switch	CSG1112
S 1903	Switch	CSG1107
S 1904	Switch	CSG1107
S 1905	Switch	CSG1107
S 1906	Switch	CSG1107
S 1907	Switch	CSG1107
S 1908	Switch	CSG1107
S 1909	Switch	CSG1107
S 1910	Switch	CSG1107
S 1911	Push Switch	CSG1112
S 1912	Push Switch	CSG1160
S 1913	Push Switch	CSG1112
S 1914	Push Switch	CSG1160
S 1915	Push Switch	CSG1112
S 1916	Push Switch	CSG1112
S 1917	Push Switch	CSG1111
S 1918	Push Switch	CSG1111
S 1950	Encoder	CSD1059
	LCD	CAW1755

RESISTORS

R 1900	RS1/16S222J
R 1901	RS1/16S222J
R 1902	RS1/16S121J
R 1903	RS1/16S2R2J
R 1910	RS1/16S101J
R 1912	RS1/16S680J
R 1914	RS1/16S181J
R 1915	RS1/16S181J
R 1919	RS1/16S101J
R 1930	RS1/16S560J
R 1932	RS1/16S560J
R 1934	RS1/16S560J
R 1936	RS1/16S560J
R 1938	RS1/16S330J
R 1939	RS1/16S680J
R 1940	RS1/16S560J
R 1941	RS1/16S151J
R 1942	RS1/16S0R0J
R 1943	RS1/16S151J
R 1950	RS1/16S472J
R 1960	RS1/16S473J

====Circuit Symbol and No.==Part Name

Part No.

CAPACITORS

C 1900	CKSRYB104K16
C 1901	CKSYF106Z10
C 1902	CKSRYB104K16
C 1903	CKSRYB104K16
C 1904	CKSRYB104K16
C 1910	CKSRYF104Z25
C 1911	CKSRYF104Z25
C 1913	CKSRYF104Z25
C 1942	CKSRYF104Z25
C 1943	CKSRYF104Z25

Unit Number : CWM8758
Unit Name : Panel Unit

MISCELLANEOUS

D 1970	LED	CL220PGC
S 1970	Push Switch(EJECT)	CSG1112

RESISTORS

R 1970	RS1/16S101J
R 1971	RS1/16S101J
R 1972	RS1/16S0R0J

CAPACITORS

C 1970	CKSRYB104K16
--------	--------------

Unit Number : CWX2743
Unit Name : CD Core Unit(S10MP3)

MISCELLANEOUS

IC 201	IC	UPD63760GJ
IC 202	IC	MSM51V4265EP-70TS
IC 203	IC	BA033SFP
IC 301	IC	BA5996FM
IC 501	IC	UPD61002GC
IC 502	IC	BA25BC0WFP
IC 701	IC	PE5352B
IC 702	IC	TC74VHC08AFT
IC 703	IC	S-818A33AUC-BGN
Q 101	Transistor	2SB1132
Q 601	Transistor	DTC323TK
Q 602	Transistor	DTC323TK
Q 603	Transistor	2SB709A
Q 701	Transistor	UN2111
D 101	Diode	1SS355
D 201	Diode	1SR154-400
D 501	Diode	1SR154-400
D 601	Diode	MA152WA
L 201	Inductor	CTF1386
L 202	Inductor	CTF1386
L 204	Inductor	CTF1386
L 205	Inductor	CTF1386
L 206	Inductor	CTF1386
L 207	Inductor	CTF1386
L 208	Inductor	CTF1386
L 209	Inductor	CTF1386
L 211	Inductor	CTF1386
L 212	Inductor	CTF1386
L 501	Inductor	CTF1386
L 502	Inductor	CTF1386
L 503	Inductor	CTF1386
L 701	Inductor	CTF1386
L 702	Inductor	LCYBR22J1608
L 703	Inductor	CTF1386
L 704	Inductor	CTF1386

A	====Circuit Symbol and No.==Part Name			Part No.	====Circuit Symbol and No.==Part Name			Part No.
	TH	701	Thermistor	CCX1037	R	508		RS1/16SS223J
	X	201	Ceramic Resonator 16.934MHz	CSS1603	R	509		RS1/16SS102J
	X	202	Ceramic Resonator 24.57MHz	CSS1615	R	510		RS1/16SS223J
	X	701	Ceramic Resonator 16.00MHz	CSS1616	R	511		RS1/16SS223J
	S	901	Switch(HOME)	CSN1051	R	512		RS1/16SS223J
	S	902	Switch(CLAMP)	CSN1051	R	601		RS1/16S101J
	S	903	Spring Switch(DSCSNS)	CSN1052	R	602		RS1/16S101J
	S	904	Switch(12EJ)	CSN1051	R	603		RS1/16S223J
	S	905	Switch(8EJ)	CSN1051	R	604		RS1/16S223J
					R	605		RS1/16SS103J
	RESISTORS				R	707		RS1/16SS0R0J
	R	101		RS1/10S1R5J	R	708		RS1/16SS102J
	R	102		RS1/10S1R5J	R	709		RS1/16SS102J
	R	103		RS1/10S1R5J	R	710		RS1/16SS102J
	R	104		RS1/10S1R5J	R	711		RS1/16SS102J
	R	105		RS1/10S1R5J				
	R	201		RS1/16SS102J	R	712		RS1/16SS102J
	R	202		RS1/16SS333J	R	713		RS1/16SS102J
	R	203		RS1/16SS333J	R	714		RS1/16SS473J
	R	204		RS1/16SS333J	R	715		RAB4CQ221J
	R	206		RS1/16SS0R0J	R	716		RAB4CQ221J
	R	208		RS1/16SS0R0J	R	717		RAB4CQ221J
	R	210		RS1/16SS0R0J	R	718		RAB4CQ221J
	R	212		RS1/16SS221J	R	719		RAB4CQ221J
	R	213		RS1/16SS1002D	R	720		RS1/16SS471J
	R	214		RS1/16SS1002D	R	721		RS1/16SS471J
	R	215		RS1/16SS6801D	R	722		RAB4CQ221J
	R	216		RS1/16SS6801D	R	723		RS1/16SS102J
	R	217		RS1/16SS1002D	R	724		RN1/16SE1302D
	R	218		RS1/16SS1002D	R	725		RS1/16SS222J
	R	219		RS1/16SS1002D	R	726		RS1/16SS103J
	R	220		RS1/16SS1002D	R	727		RS1/16SS473J
	R	221		RS1/16SS103J	R	728		RS1/16SS473J
	R	222		RS1/16SS103J	R	729		RS1/16SS223J
	R	223		RS1/16SS103J	R	730		RS1/16SS473J
	R	224		RS1/16SS103J	R	731		RS1/16SS104J
	R	225		RS1/16SS103J	R	732		RS1/16SS104J
	R	226		RS1/16SS393J	R	733		RS1/16SS104J
	R	227		RS1/16SS103J	R	737		RAB4CQ473J
	R	228		RS1/16SS182J	R	739		RAB4CQ473J
	R	229		RS1/16SS103J	R	740		RS1/16SS473J
	R	231		RS1/16SS0R0J	R	741		RS1/16SS104J
	R	232		RS1/16SS182J	R	742		RS1/16SS104J
	R	233		RS1/16SS0R0J	R	745		RS1/16SS473J
	R	237		RS1/16SS104J	R	746		RS1/16SS104J
	R	238		RS1/16SS473J	R	747		RS1/16SS104J
	R	240		RS1/16SS0R0J	R	748		RS1/16SS104J
	R	241		RS1/16SS221J	R	754		RS1/16SS102J
	R	301		RS1/16SS183J	R	755		RS1/16SS102J
	R	302		RS1/16SS822J	R	756		RS1/16SS104J
	R	303		RS1/16SS0R0J	R	801		RS1/16SS104J
	R	304		RS1/16SS183J	R	802		RS1/16SS473J
	R	305		RS1/16SS822J	R	803		RS1/16SS273J
	R	306		RS1/16SS0R0J	R	901		RS1/16SS221J
	R	307		RS1/16SS183J	R	902		RS1/16SS221J
	R	308		RS1/16SS822J	R	903		RS1/16SS221J
	R	309		RS1/16SS183J	R	904		RS1/16SS221J
	R	310		RS1/16SS822J	R	905		RS1/16SS221J
	R	311		RS1/16SS0R0J	R	906		RS1/16SS221J
	R	501		RS1/16SS221J	CAPACITORS			
	R	502		RS1/16SS221J	C	101		CKSSYB104K10
	R	503		RS1/16SS221J	C	102		CKSSYB104K10
	R	504		RAB4CQ223J	C	103		CEV101M16
	R	505		RAB4CQ223J	C	104		CEV101M4
	R	506		RAB4CQ223J	C	105		CKSSYB104K10
	R	507		RS1/16SS223J				

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.	
C 106	CCSRCH101J50	C 707	CKSSYB104K10	A
C 108	CKSSYB104K10	C 708	CKSSYB104K10	
C 109	CEV100M16	C 709	CKSSYB103K16	
C 201	CKSSYB471K50	C 710	CKSSYB104K10	
C 202	CKSSYB104K10	C 711	10μF/10V CCH1349	
C 203	CKSSYB104K10	C 712	CKSRYB224K16	
C 204	CEV220M6R3	C 713	CKSSYB104K10	
C 205	CKSSYB103K16	C 714	CKSSYB104K10	
C 206	CKSSYB103K16	C 715	CKSSYB103K16	
C 207	CEV221M4	C 716	CKSSYB103K16	
C 208	CKSSYB104K10	C 901	CKSSYB104K10	
C 209	CKSSYB104K10	C 903	CCSRCH101J50	
C 210	CKSSYB104K10			
C 211	CKSSYB104K10	Miscellaneous Parts List		B
C 216	CKSSYB332K50			
C 217	CKSSYB104K10	M 1	Pickup Unit(Service)(P10) CXX1641	
C 218	CKSSYB223K16	M 2	Motor Unit(SPINDLE) CXB6007	
C 219	CKSSYB104K10		Motor Unit(LOADING/CARRIAGE) CXB8933	
C 220	CKSSYB103K16			
C 221	CKSSYB104K10			
C 222	CCSSCH270J50			
C 223	CCSSCJ3R0C50			
C 224	CKSSYB104K10			
C 225	CKSSYB103K16			
C 226	CCSSCH680J50			
C 227	CCSSCH470J50			C
C 228	CKSSYB682K25			
C 230	CKSSYB104K10			
C 232	CKSSYB104K10			
C 233	47μF/6.3V CCH1436			
C 234	CEV221M4			
C 235	CKSRYB224K16			
C 237	CKSSYB104K10			
C 238	CKSSYB104K10			
C 239	CCSSCH9R0D50			
C 242	CKSSYB104K10			
C 243	CKSSYB104K10			
C 245	CKSSYB104K10			
C 246	CKSSYB104K10			
C 301	CKSSYB331K50			D
C 302	CKSSYB331K50			
C 303	CKSSYB472K25			
C 304	CKSSYB472K25			
C 305	CEV101M16			
C 306	CKSRYB224K16			
C 501	CKSSYB104K10			
C 502	CKSSYB471K50			
C 503	CKSSYB104K10			
C 504	47μF/6.3V CCH1436			
C 505	CKSRYB224K16			
C 506	CKSSYB104K10			
C 508	CKSSYB104K10			
C 509	CKSSYB104K10			E
C 510	CKSSYB104K10			
C 511	CKSSYB104K10			
C 601	CCSRCH102J50			
C 602	CCSRCH102J50			
C 603	4.7μF/25V CCH1508			
C 604	4.7μF/25V CCH1508			
C 701	CKSSYB104K10			
C 702	CKSSYB471K50			
C 703	CKSSYB103K16			
C 704	CEV1R0M50			
C 705	CKSSYB104K10			
C 706	CKSSYB471K50			F