
2. EXPLODED VIEWS AND PARTS LIST

*NOTES : • Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
• The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
• Screw adjacent to▽mark on the product are used for disassembly.
• For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions,apply as you think it appropriate.)

2.1 PACKING

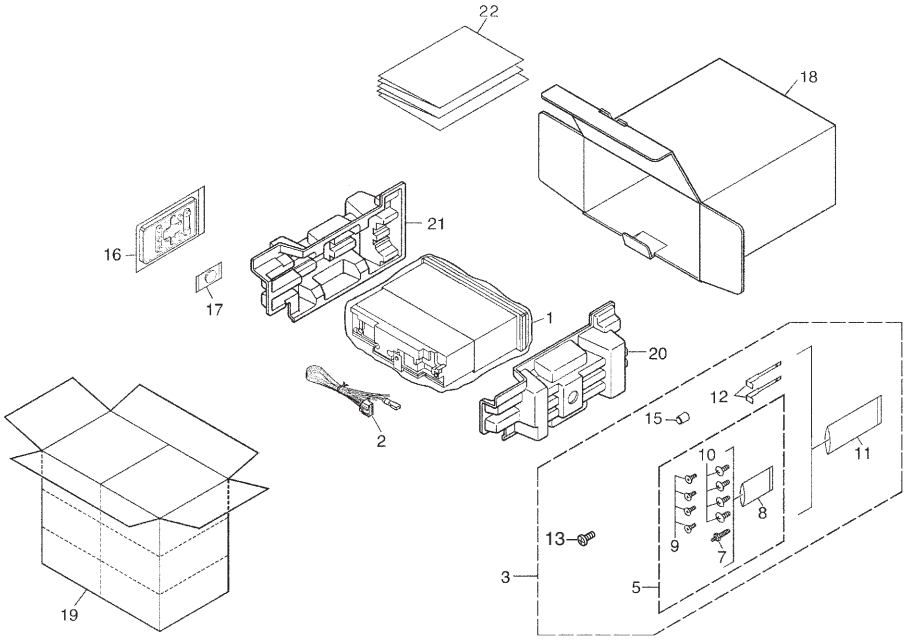

PACKING SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	Polyethylene Bag	CEG1173
	2	Cord Assy	CDP1017
	3	Accessory Assy	YEA5012
	4	•••••	
	5	Screw Assy	CEA3849
	6	•••••	
	7	Screw	CBA1650
*	8	Polyethylene Bag	CEG-127
	9	Screw	CRZ50P090FTC
	10	Screw	TRZ50P080FTC
*	11	Polyethylene Bag	CEG-158
	12	Handle	CND3707
	13	Screw	BPZ20P080FTC
	14	•••••	
	15	Bush	CNV3930
	16	Remote Control Assy	CXC5719

Mark	No.	Description	Part No.
*	17	Battery	CEX1065
	18	Carton(P390MP)	YHG5112
		Carton(P3900MP)	YHG5109
	19	Contain Box(P390MP)	YHL5100
		Contain Box(P3900MP)	YHL5097
	20	Protector	YHP5008
	21	Protector	YHP5009
	22-1	Owner's Manual(P390MP)	YRD5075
		Owner's Manual(P3900MP)	YRD5073
	22-2	Installation Manual(P390MP)	YRD5076
		Installation Manual(P3900MP)	YRD5074
	22-3	Caution Card	CRP1310
*	22-4	Warranty Card(P390MP)	CRY1070
*		Warranty Card(P3900MP)	CRY1246
	22-5	Caution Card(P3900MP)	CRP1294

Owner's Manual,Installation Manual

Part No.	Language
YRD5075,YRD5076, YRD5073,YRD5074	English, French, Spanish

2.2 EXTERIOR

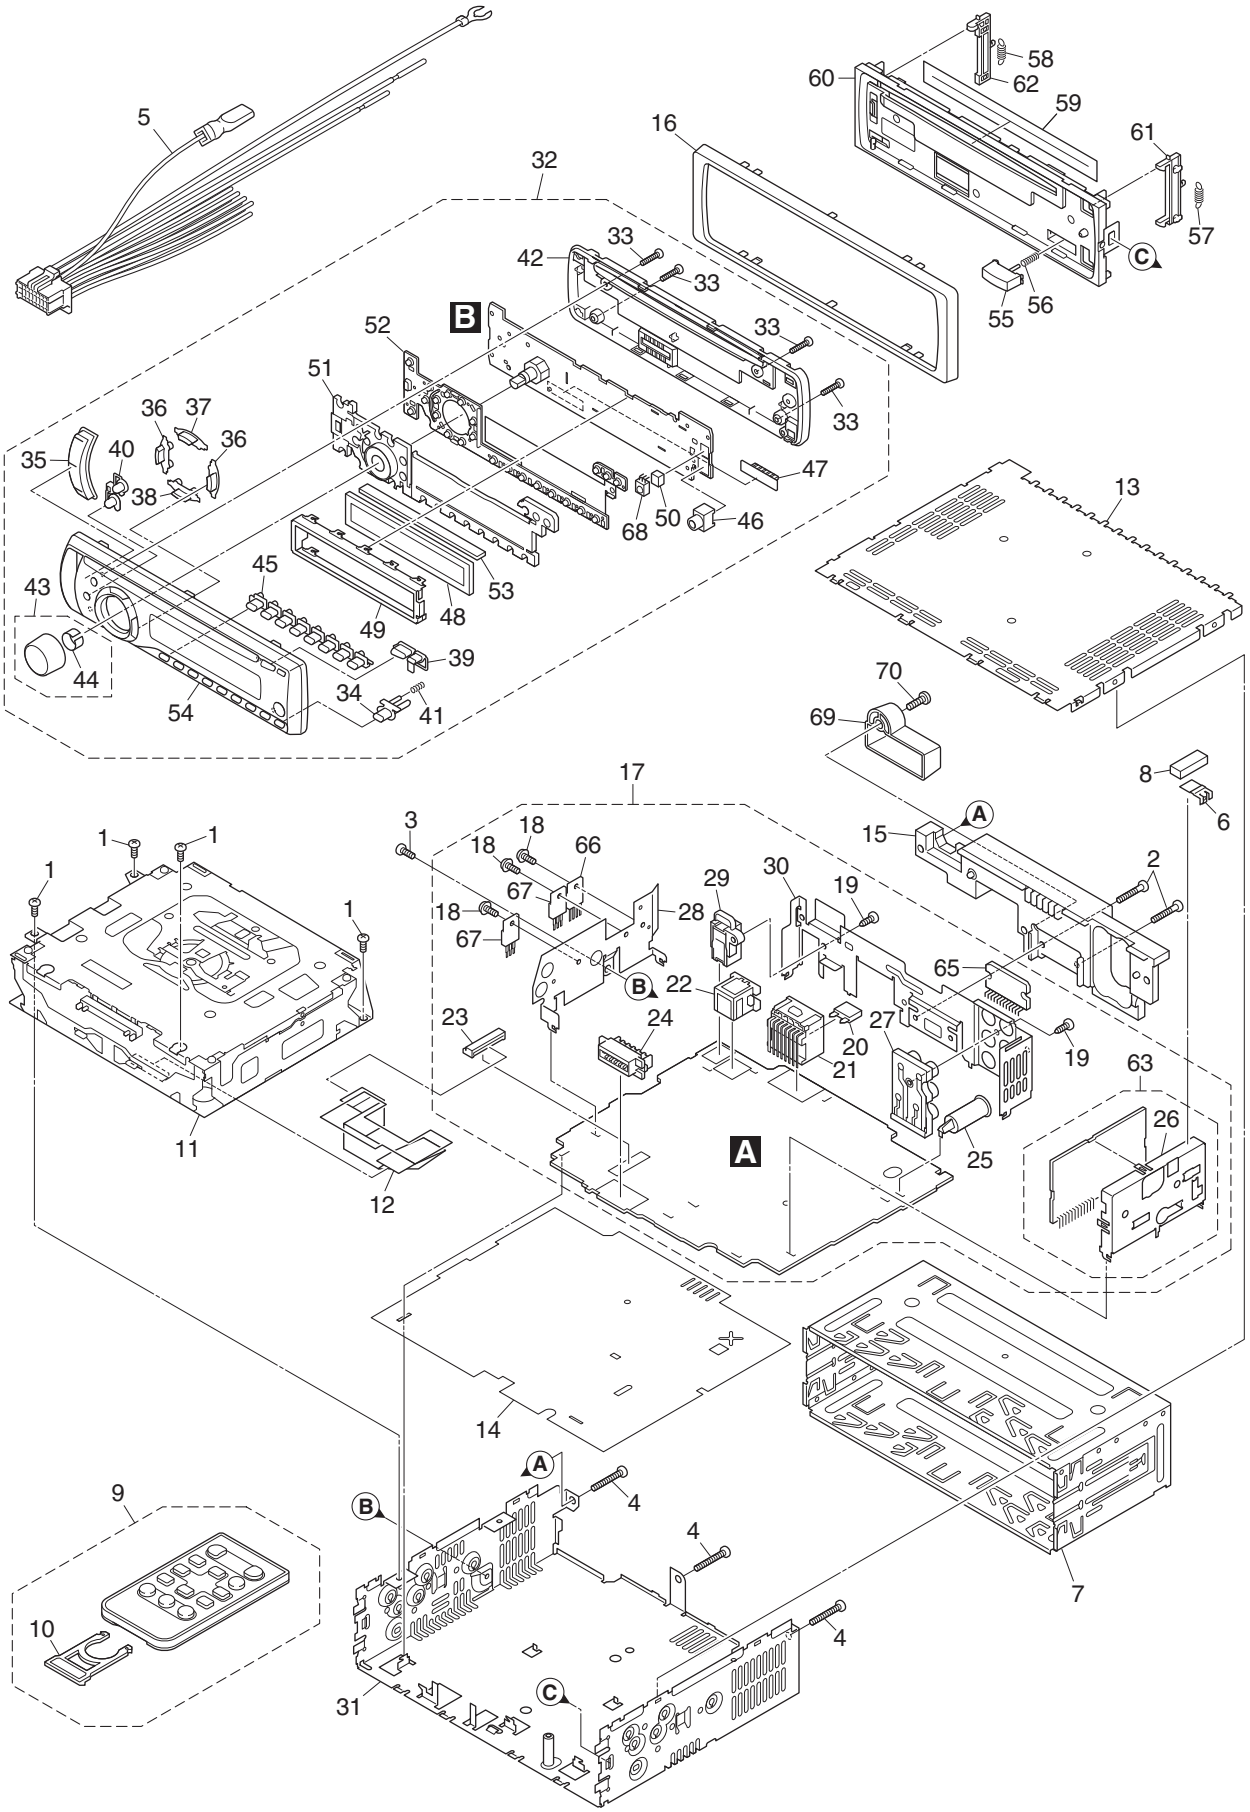
1
2
3
4
A
B
C
D
E
F
5
60
58
62
59
61
57
16
32
42
33
52
51
36
37
35
40
38
47
68
50
46
53
48
49
45
43
44
54
34
41
39
13
70
69
17
8
6
15
2
18
66
67
29
30
19
28
22
65
23
24
27
20
21
63
26
25
11
12
14
9
10
31
7

(1) EXTERIOR SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	Screw	BSZ26P060FTC
	2	Screw	BSZ26P200FTC
	3	Screw	BSZ30P060FTC
	4	Screw	BSZ30P200FTC
	5	Cord Assy	CDP1017
	6	Earth Plate	CNC8915
	7	Holder	CND3598
	8	Cushion	CNM8890
	9	Remote Control Assy	CXC5719
	10	Cover	CNS7068
	11	CD Mechanism Module(S10.5)	CXK5760
	12	Cable	YDE5025
	13	Case	YNB5014
	14	Insulator	YNM5062
	15	Heat Sink	YNR5031
	16	Panel	See Contrast table(2)
	17	Tuner Amp Unit	See Contrast table(2)
	18	Screw	BSZ26P060FTC
	19	Screw	BPZ26P080FTC
⚠	20	Fuse(10 A)	CEK1208
	21	Plug(CN901)	CKM1376
	22	Connector(CN101)	CKS3408
	23	Connector(CN701)	CKS3829
	24	Connector(CN803)	CKS5664
	25	Antenna Jack(CN401)	CKX1056
	26	Holder	CND1054
	27	Pin Jack(CN351)	XKB7001
	28	Holder	XNC7030
	29	Jack(CN621)	YKS5002
	30	Holder	YNC5039
	31	Chassis Unit	YXA5196
	32	Detachable Assy	See Contrast table(2)
	33	Screw	BPZ20P100FTB
	34	Button(Detach)	CAC9941
	35	Button(AUDIO/FUNC)	CAC9942
	36	Button(L/R)	CAC9946
	37	Button(UP)	CAC9947
	38	Button(DOWN)	CAC9948
	39	Button(EJECT)	CAC9949
	40	Button(EQ/BAND)	CAC9950
	41	Spring	CBH2210
	42	Cover	CNS8758
	43	Knob Unit(SOURCE,VOLUME)	CXC7054
	44	Spring	CBL1761
	45	Button(1-6)	See Contrast table(2)
	46	Jack	CKN1047
	47	Connector(CN1801)	CKS5663
	48	LCD(LCD1801)	YAW5080
	49	Holder	YNC5025
	50	Cushion	YNM5029
	51	Lighting Conductor	YNV5066
	52	Rubber	YNV5067
	53	Connector	YNV5068
	54	Grille Unit	See Contrast table(2)
	55	Button(DETACH)	CAC4836
	56	Spring	CBH2367
	57	Spring	CBH2961
	58	Spring	CBH2962
	59	Cover	CNN1665
	60	Panel	CNS8760
	61	Arm	CNV9311
	62	Arm	CNV9312
	63	FM/AM Tuner Unit	CWE1952
	64	•••••	
	65	IC(IC301)	PAL007C
	66	IC(IC921)	NJM2388F84
	67	Transistor (Q702,Q911)	2SD2396
	68	IC(IC1802)	GP1UX51RK
	69	Holder	See Contrast table(2)
	70	Screw	See Contrast table(2)

(2) CONTRAST TABLE

DEH-P390MP/XU/UC and DEH-P3900MP/XU/UC are constructed the same except for the following:

Mark	No.	Description	DEH-P390MP/XU/UC	DEH-P3900MP/XU/UC
	16	Panel	YNS5191	YNS5190
	17	Tuner Amp Unit	YWM5137	YWM5139
	32	Detachable Assy	YXA5205	YXA5206
	45	Button(1-6)	YAC5118	CAC9943
	54	Grille Unit	YXA5232	YXA5197
	69	Holder	Not used	CNV7619
	70	Screw	Not used	BMZ40P140FTC

2.3 CD MECHANISM MODULE

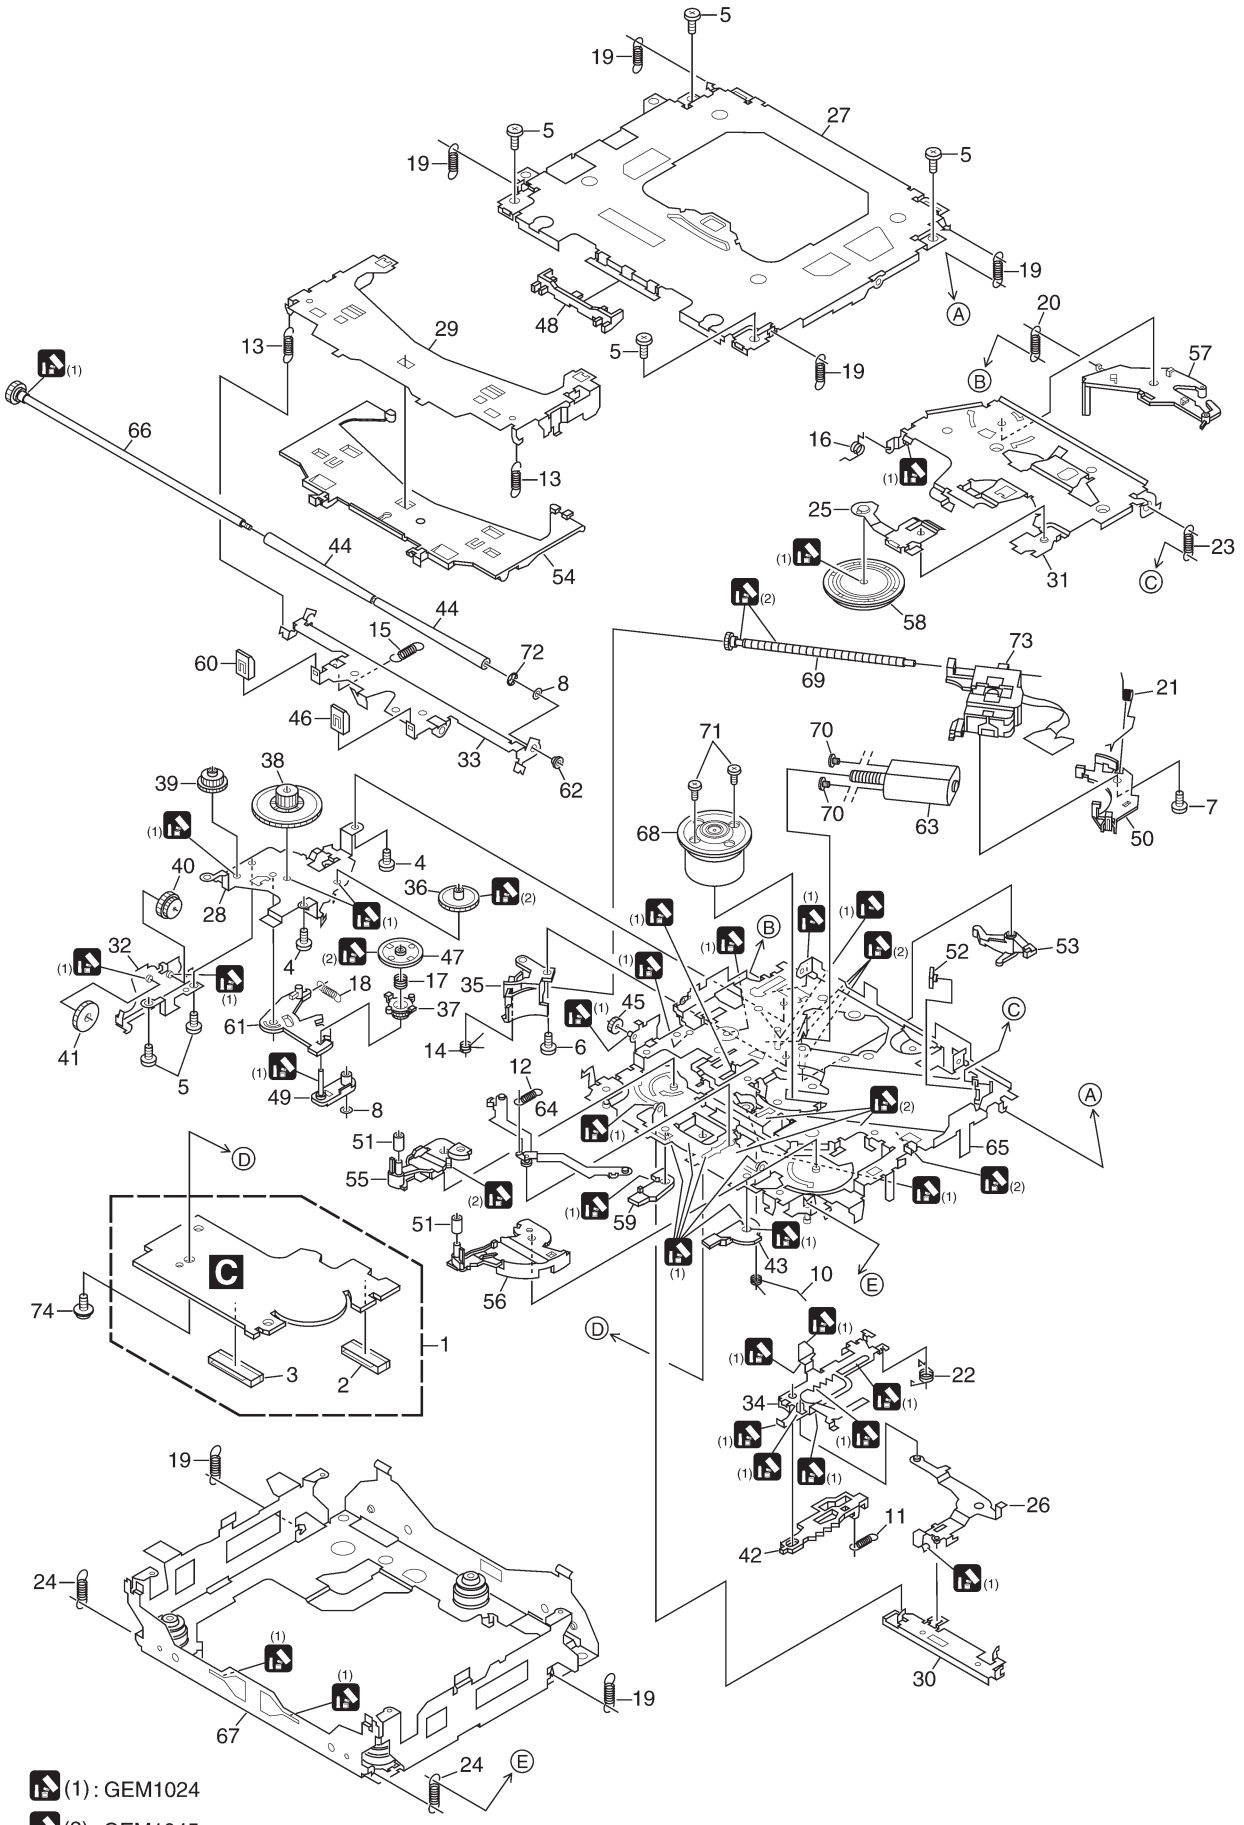

CD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	CD Core Unit(S10.5COMP2)	CWX3350
	2	Connector(CN101)	CKS4911
	3	Connector(CN701)	CKS4808
	4	Screw	BMZ20P025FTC
	5	Screw	BSZ20P040FTC
	6	Screw(M2 x 3)	CBA1511
	7	Screw(M2 x 4)	CBA1835
	8	Washer	CBF1038
	9	•••••	
	10	Spring	CBH2609
	11	Spring	CBH2612
	12	Spring	CBH2614
	13	Spring	CBH2616
	14	Spring	CBH2617
	15	Spring	CBH2620
	16	Spring	CBH2855
	17	Spring	CBH2937
	18	Spring	CBH2735
	19	Spring	CBH2854
	20	Spring	CBH2642
	21	Spring	CBH2856
	22	Spring	CBH2857
	23	Spring	CBH2860
	24	Spring	CBH2861
	25	Spring	CBL1686
	26	Arm	CND1909
	27	Frame	CND2582
	28	Bracket	CND2583
	29	Arm	CND2584
	30	Lever	CND2585
	31	Arm	CND2586
	32	Bracket	CND2587
	33	Arm	CND2588
	34	Lever	CND2589
	35	Holder	CNV7201
	36	Gear	CNV7207
	37	Gear	CNV7208
	38	Gear	CNV7209
	39	Gear	CNV7210
	40	Gear	CNV7211
	41	Gear	CNV7212
	42	Rack	CNV7214
	43	Arm	CNV7216
	44	Roller	CNV8189
	45	Gear	CNV7219
	46	Guide	CNV7361
	47	Gear	CNV7595
	48	Guide	CNV8448
	49	Arm	CNV7805
	50	Rack	CNV8342
	51	Roller	CNV8343
	52	Holder	CNV8344
	53	Arm	CNV8345
	54	Guide	CNV8347
	55	Arm	CNV8348
	56	Arm	CNV8349
	57	Arm	CNV8350
	58	Clamper	CNV8365
	59	Arm	CNV8386
	60	Guide	CNV8396
	61	Arm	CNV8413
	62	Collar	CNV8447
	63	Motor Unit(M2)	CXC4026
	64	Arm Unit	CXC4027
	65	Chassis Unit	CXC4028
	66	Gear Unit	CXC4029
	67	Frame Unit	CXC4031
	68	Motor Unit(M1)	CXC7134
	69	Screw Unit	CXC6359
	70	Screw	JFZ20P020FTC
	71	Screw	JGZ17P022FTC
	72	Washer	YE20FTC
	73	Pickup Unit(P10.5)(Service)	CXX1942
	74	Screw	IMS26P030FTC

5. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

  Chip Resistor

  RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J

  Chip Capacitor (except for CQS.....)

  CKS....., CCS....., CSZS.....
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Meaning of the figures and others in the parentheses in the parts list.*

  Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

  IC 301 (A, 91, 111) IC NJM2068V

Circuit Symbol and No. **Part No.**

Unit Number : YWM5137(P390MP)
Unit Number : YWM5139(P3900MP)
Unit Name : Tuner Amp Unit
Unit Number :
Unit Name : Keyboard Unit
Unit Number : CWX3350
Unit Name : CD Core
Unit(S10.5COMP2)

A

Unit Number : YWM5137(P390MP)
Unit Number : YWM5139(P3900MP)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

IC 101	(B,60,62) IC	HA12241FP
IC 151	(B,134,84) IC	PML015B
IC 301	(A,92,133) IC	PAL007C
IC 401	(B,137,31) IC	NJM2885DL1-33
IC 601	(B,84,58) IC	PEG286A
IC 702	(B,39,69) IC	NJM2885DL1-33
IC 751	(B,114,78) IC	NJM2794V
IC 921	(A,6,121) IC	NJM2388F84
IC 961	(B,63,36) IC	S-80835CNMC-B8U
Q 101	(B,37,96) Transistor	2SA1576A
Q 102	(B,31,112) Transistor	DTC114EUA
Q 351	(B,164,124) Transistor	UMH3N
Q 352	(B,139,121) Transistor	UMH3N
Q 353	(B,134,125) Transistor	UMH3N
Q 451	(B,122,112) Transistor	DTC124EUA
Q 453	(B,121,118) Transistor	UMD2N
Q 701	(B,24,52) Transistor	UMD2N
Q 702	(A,6,67) Transistor	2SD2396
Q 841	(B,119,24) Transistor	2SA1036K
Q 842	(B,122,32) Transistor	DTC114EUA
Q 851	(B,36,13) Transistor	2SA1036K
Q 852	(B,30,10) Transistor	DTC114EUA
Q 911	(A,6,102) Transistor	2SD2396
Q 912	(B,18,71) Transistor	UMD2N
Q 931	(B,60,88) Transistor	UMX1N
D 454	(A,108,110) Diode	1SS133
D 701	(A,19,52) Diode	HZS7L(C3)
D 751	(B,114,72) Diode	FTZ6R8E
D 752	(B,113,84) Diode	FTZ6R8E
D 801	(B,31,19) Diode	DAN202U
D 802	(B,35,19) Diode	DAP202U
D 803	(B,108,19) Diode	DAN202U
D 804	(B,104,19) Diode	DAP202U
D 805	(B,24,21) Diode	DAN202U
D 806	(B,22,25) Diode	DAP202U
D 901	(A,73,111) Diode	S5688G
D 902	(A,77,107) Diode	S5688G
D 903	(A,66,97) Diode	S5688G
D 904	(A,63,97) Diode	S5688G
D 911	(A,18,83) Diode	S5688G
D 912	(A,19,74) Diode	HZS6L(B2)
D 931	(A,56,91) Diode	HZS7L(C3)
D 932	(A,53,87) Diode	HZS7L(A1)
L 101	(A,52,69) Inductor	LAU2R2K
L 161	(A,112,89) Inductor	LAU2R2K
L 401	(A,155,94) Inductor	LAU1R0K
L 402	(B,159,99) Inductor	LCTAW220J2520
L 403	(A,156,54) Inductor	LAU1R0K
L 602	(A,95,41) Inductor	LAU2R2K
L 852	(A,46,11) Inductor	LAU2R2K
L 901	(A,36,103) Choke Coil 600 µH	CTH1280
X 601	(A,73,40) Resonator 15.000 MHz	YSS5002
⚠FU353	(B,131,133) Fuse 3 A	CEK1286
Z 401	(A,163,101) FM/AM Tuner Unit	CWE1952
AR401	(B,164,114) Surge Protector	IMSA-6801-01Y901
⚠	Fuse 10 A	CEK1208

RESISTORS

R 101	(B,32,123)	RS1/16S181J
R 102	(B,33,101)	RS1/16S222J

Circuit Symbol and No.		Part No.
R 103	(B,25,130)	RS1/16S181J
R 104	(B,36,135)	RS1/16S101J
R 105	(B,33,136)	RS1/16S101J
R 106	(B,29,121)	RS1/16S223J
R 107	(B,25,125)	RS1/16S223J
R 108	(B,27,125)	RS1/16S102J
R 109	(B,28,121)	RS1/16S102J
R 110	(B,34,96)	RS1/16S332J
R 111	(B,32,107)	RS1/16S562J
R 112	(A,65,68)	RD1/4PU102J
R 113	(B,67,59)	RS1/16S472J
R 114	(B,65,59)	RS1/16S472J
R 116	(B,31,136)	RS1/16S470J
R 117	(B,29,136)	RS1/16S150J
R 118	(B,56,67)	RS1/16S0R0J
R 151	(B,97,79)	RS1/16S102J
R 152	(B,97,81)	RS1/16S102J
R 153	(B,97,82)	RS1/16S102J
R 180	(B,125,91)	RS1/16S0R0J
R 301	(B,127,108)	RS1/16S471J
R 303	(B,125,108)	RS1/16S471J
R 304	(B,138,108)	RS1/16S471J
R 306	(B,141,107)	RS1/16S471J
R 309	(A,85,78)	RD1/4PU153J
R 351	(B,148,112)	RS1/16S821J
R 352	(B,155,119)	RS1/16S0R0J
R 353	(B,131,108)	RS1/16S821J
R 354	(B,133,108)	RS1/16S821J
R 355	(B,135,121)	RS1/16S821J
R 356	(B,134,103)	RS1/16S821J
R 358	(B,131,129)	RS1/16S821J
R 359	(B,163,133)	RS1/16S223J
R 360	(B,160,132)	RS1/16S223J
R 361	(B,147,116)	RS1/16S223J
R 362	(B,158,136)	RS1/16S223J
R 363	(B,134,129)	RS1/16S223J
R 364	(B,137,129)	RS1/16S223J
R 381	(B,136,129)	RS1/16S0R0J
R 382	(B,139,126)	RS1/16S0R0J
R 383	(B,138,123)	RS1/16S0R0J
R 384	(B,145,119)	RS1/16S0R0J
R 385	(B,145,118)	RS1/16S0R0J
R 386	(B,144,122)	RS1/16S0R0J
R 391	(B,143,125)	RS1/16S0R0J
R 392	(B,144,130)	RS1/16S0R0J
R 401	(A,156,59)	RD1/4PU681J
R 403	(B,157,83)	RS1/16S681J
R 404	(B,157,84)	RS1/16S681J
R 405	(B,157,86)	RS1/16S681J
R 406	(B,157,89)	RS1/16S681J
R 407	(B,156,91)	RS1/16S0R0J
R 414	(A,133,42)	RD1/4PU1R8J
R 421	(B,154,82)	RS1/16S0R0J
R 451	(B,122,109)	RS1/16S103J
R 452	(B,122,121)	RS1/16S221J
R 453	(B,121,116)	RS1/16S153J
R 454	(A,117,115)	RD1/4PU102J
R 602	(B,69,44)	RS1/16S103J
R 603	(B,98,84)	RS1/16S103J
R 604	(B,120,61)	RS1/16S681J

Circuit Symbol and No.		Part No.
R 605	(B,153,61)	RS1/16S681J
R 606	(B,114,48)	RS1/16S103J
R 607	(B,144,58)	RS1/16S681J
R 608	(B,98,44) (P3900MP)	RS1/16S473J
R 609	(B,96,44)	RS1/16S104J
R 610	(B,106,52)	RS1/16S473J
R 613	(B,97,77)	RS1/16S104J
R 615	(B,68,64)	RS1/16S0R0J
R 616	(B,35,51)	RS1/16S473J
R 620	(B,94,68)	RS1/16S0R0J
R 621	(B,15,140)	RS1/16S102J
R 622	(B,13,137)	RS1/16S102J
R 701	(A,14,49)	RD1/4PU271J
R 703	(B,47,53)	RS1/16S472J
R 704	(B,47,38)	RS1/16S104J
R 705	(B,50,45)	RS1/16S472J
R 706	(B,52,45)	RS1/16S104J
R 707	(B,36,47)	RS1/16S104J
R 708	(B,55,44)	RS1/16S221J
R 709	(A,56,38)	RD1/4PU102J
R 710	(B,49,45)	RS1/16S221J
R 711	(A,56,41)	RD1/4PU221J
R 712	(B,48,53)	RS1/16S221J
R 713	(B,35,49)	RS1/16S102J
R 714	(B,25,47)	RS1/16S104J
R 751	(B,108,85)	RS1/16S0R0J
R 753	(B,107,72)	RS1/16S0R0J
R 755	(B,105,85)	RS1/16S0R0J
R 757	(B,106,77)	RS1/16S223J
R 759	(B,106,79)	RS1/16S223J
R 803	(B,28,19)	RS1/16S473J
R 804	(B,104,23)	RS1/16S222J
R 805	(B,100,21)	RS1/16S222J
R 806	(A,61,19)	RD1/4PU222J
R 807	(B,46,18)	RS1/16S222J
R 808	(B,29,17)	RS1/16S104J
R 809	(B,51,13)	RS1/16S222J
R 810	(B,29,15)	RS1/16S103J
R 811	(B,87,31)	RS1/16S473J
R 813	(B,96,21)	RS1/16S104J
R 814	(A,110,29)	RD1/4PU102J
R 815	(B,98,21)	RS1/16S102J
R 816	(B,112,24)	RS1/16S1R0J
R 822	(B,27,68)	RS1/16S102J
R 823	(B,25,68)	RS1/16S102J
R 824	(B,114,50)	RS1/16S102J
R 825	(B,26,16)	RS1/16S102J
R 826	(B,112,26)	RS1/16S0R0J
R 841	(B,121,28)	RS1/16S103J
R 842	(B,121,30)	RS1/16S472J
R 851	(B,23,12)	RS1/16S153J
R 852	(B,25,10)	RS1/16S472J
R 853	(B,100,16)	RS1/16S222J
R 911	(B,18,66)	RS1/16S223J
R 912	(A,18,77)	RD1/4PU152J
R 922	(B,10,113)	RS1/16S473J
R 931	(B,60,57)	RS1/16S104J
R 932	(B,54,59)	RS1/16S104J
R 933	(B,60,90)	RS1/16S104J
R 934	(B,60,92)	RS1/16S473J

Circuit Symbol and No.		Part No.
R 935	(B,56,87)	RS1/16S473J
R 936	(B,60,93)	RS1/16S473J
R 937	(B,62,118)	RS1/16S473J
R 938	(B,60,123)	RS1/4SA102J
R 961	(B,70,36)	RS1/16S102J
R 962	(B,61,40)	RS1/16S822J

CAPACITORS

C 101	(B,28,136)	CKSRYB104K25
C 104	(B,50,71)	CKSRYB103K50
C 151	(B,143,81)	CKSRYB105K10
C 152	(B,144,80)	CKSRYB105K10
C 153	(B,160,74)	CKSRYB224K10
C 154	(B,119,76)	CKSRYB105K10
C 155	(B,162,72)	CKSRYB224K10
C 156	(B,123,81)	CKSRYB105K10
C 157	(B,123,82)	CKSRYB105K10
C 158	(B,123,84)	CKSRYB105K10
C 159	(B,120,90)	CKSRYB153K50
C 160	(A,115,93)	CEJQ100M16
C 161	(B,135,98)	CKSRYB153K50
C 162	(A,115,102)	CEJQ470M10
C 163	(B,119,88)	CKSRYB104K25
C 165	(A,131,95)	CEJQ100M16
C 305	(B,128,112)	CKSQYB474K16
C 306	(B,137,112)	CKSQYB474K16
C 307	(B,130,112)	CKSQYB474K16
C 308	(B,134,112)	CKSQYB474K16
C 309	(B,125,135)	CKSQYB225K10
C 310	(B,127,132)	CKSQYB225K10
C 311	(A,104,124)	CEJQ100M16
C 313	(A,51,121) 3 300 µF/16 V	CCH1494
C 315	(B,128,116)	CKSRYB474K10
C 316	(B,136,116)	CKSRYB474K10
C 317	(B,130,116)	CKSRYB474K10
C 318	(B,134,116)	CKSRYB474K10
C 351	(A,124,94)	CEJQ2R2M50
C 352	(A,139,95)	CEJQ2R2M50
C 353	(A,130,101)	CEJQ2R2M50
C 354	(A,138,102)	CEJQ2R2M50
C 355	(A,123,101)	CEJQ2R2M50
C 356	(A,145,101)	CEJQ2R2M50
C 357	(B,163,132)	CKSRYB222K50
C 358	(B,158,132)	CKSRYB222K50
C 401	(A,151,53)	CEJQ470M6R3
C 402	(B,153,52)	CKSRYB103K50
C 403	(B,148,35)	CKSRYB103K50
C 405	(A,152,90)	CEJQ101M10
C 406	(B,166,94)	CKSRYB104K25
C 407	(B,163,68)	CKSRYB103K50
C 408	(A,146,29)	CEJQ220M10
C 410	(B,140,41)	CKSRYB474K10
C 411	(B,166,92)	CCSRCH470J50
C 412	(B,160,40)	CKSRYB105K10
C 451	(A,119,123)	CEJQ330M10
C 601	(B,73,44)	CCSRCH180J50
C 602	(B,77,44)	CCSRCH180J50
C 604	(B,93,44)	CKSRYB105K10
C 605	(A,100,43)	CEJQ100M16
C 606	(B,81,34)	CKSRYB104K25
C 607	(A,73,32)	CEJQ100M16
C 609	(B,144,51)	CCSRCH470J50
C 701	(B,23,47)	CKSRYB473K25
C 703	(A,30,29)	CEJQ101M10
C 704	(B,143,76)	CKSRYB105K10
C 705	(B,125,77)	CKSRYB105K10
C 708	(A,38,76)	CEJQ220M10
C 709	(B,37,74)	CKSRYB105K10
C 710	(B,43,64)	CKSRYB474K10
C 751	(B,112,82)	CKSRYB104K25
C 753	(B,110,72)	CKSRYB472K50
C 754	(B,106,76)	CKSRYB105K10
C 755	(B,107,85)	CKSRYB472K50
C 756	(B,109,76)	CKSRYB105K10
C 758	(B,109,80)	CKSRYB105K10
C 760	(B,106,80)	CKSRYB105K10
C 761	(A,119,67)	CEJQ220M10
C 762	(A,122,75)	CEJQ100M16
C 851	(B,39,10)	CKSRYB104K25
C 901	(B,54,117)	CKSRYB104K25
C 911	(A,26,55)	CEJQ470M10
C 912	(B,22,70)	CKSRYB103K50
C 913	(A,22,63)	CEAT102M16
C 921	(B,15,104)	CKSRYB103K50
C 922	(A,17,100)	CEJQ221M10
C 923	(A,14,116)	CEJQ101M16
C 924	(B,15,112)	CKSRYB103K50
C 961	(B,67,37)	CKSRYB473K25
C 962	(A,64,40)	CEJQ100M16

B

Unit Number :
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1801	(B,28,110) IC	PD6538A
IC 1802	(A,12,161) IC	GP1UX51RK
D 1801	(B,18,63) Diode	DAN202U
D 1802	(B,18,67) Diode	DAP202U
D 1803	(A,23,151) Diode	NESW505C-5273
D 1805	(A,39,84) LED	SML-310PT
D 1806	(A,39,73) LED	SML-310PT
D 1807	(A,32,9) LED	SML-310PT
D 1808	(A,11,9) LED	SML-310PT
D 1809	(A,20,19) LED	SML-310PT
D 1810	(A,11,23) LED	SML-310PT
D 1811	(A,39,95) LED	SML-310PT
D 1812	(A,39,105) LED	SML-310PT
D 1813	(A,39,116) LED	SML-310PT
D 1814	(A,5,155) LED	SML-310PT
D 1815	(A,5,148) LED	SML-310PT
D 1818	(A,38,41) LED	CL-197HB1-D(CDE)
D 1819	(A,25,27) LED	CL-197HB1-D(CDE)
D 1820	(A,25,55) LED	CL-197HB1-D(CDE)
D 1821	(A,12,41) LED	CL-197HB1-D(CDE)
D 1822	(A,39,148) LED	SML-310PT
D 1823	(A,39,137) LED	SML-310PT

Circuit Symbol and No.			Part No.
D 1824	(A,39,126)	LED	SML-310PT
X 1801	(B,36,122)	Ceramic Resonator 5.00 MHz	CSS1547
S 1827	(A,25,41)	Switch(SOURCE VOLUME)	YSD5013
LCD1801	(A,13,63)	LCD	YAW5080

RESISTORS

R 1801	(B,24,63)	RS1/16S222J
R 1802	(B,23,63)	RS1/16S222J
R 1803	(B,28,145)	RS1/4SA561J
R 1804	(B,37,80)	RS1/4SA471J
R 1805	(B,15,23)	RS1/4SA471J
R 1806	(B,37,92)	RS1/4SA471J
R 1807	(B,6,151)	RS1/4SA681J
R 1809	(B,18,23)	RS1/4SA681J
R 1810	(B,20,26)	RS1/4SA681J
R 1811	(B,28,142)	RS1/4SA471J
R 1831	(B,29,28)	RS1/16S472J
R 1833	(B,24,145)	RS1/16S2R2J
R 1835	(B,15,148)	RS1/16S121J

CAPACITORS

C 1801	(B,15,150)	CKSRYB474K10
C 1802	(B,29,136)	CKSRYF104Z25
C 1803	(B,28,136)	CKSRYF104Z25
C 1804	(B,26,136)	CKSRYF104Z25
C 1815	(A,35,31)	CKSRYF104Z25
C 1816	(A,25,26)	CKSRYF104Z25
C 1817	(A,25,56)	CKSRYF104Z25
C 1818	(A,13,53)	CKSRYF104Z25

C

Unit Number : CWX3350
Unit Name : CD Core
Unit(S10.5COMP2)

MISCELLANEOUS

IC 201	(A,34,46)	IC	PE5547A
IC 202	(A,32,67)	IC	S-93C56BD0I-J8
IC 301	(A,27,14)	IC	BA5839FP
Q 101	(B,56,72)	Transistor	2SA1577
Q 102	(B,47,57)	Transistor	2SB1689
X 201	(A,23,35)	Ceramic Resonator 16.934 MHz	CSS1603
S 901	(A,53,37)	Switch(HOME)	CSN1067
S 903	(B,19,58)	Switch(DSCSNS)	CSN1067
S 904	(B,38,67)	Switch(12EJ)	CSN1068
S 905	(B,24,68)	Switch(8EJ)	CSN1068

RESISTORS

R 101	(B,60,73)	RS1/10SR2R4J
R 102	(B,59,71)	RS1/10SR2R4J
R 103	(B,60,71)	RS1/10SR2R7J
R 104	(B,52,69)	RS1/16SS222J
R 105	(B,41,57)	RS1/16SS102J
R 107	(B,41,59)	RS1/16SS105J
R 201	(A,32,62)	RS1/16S472J
R 202	(B,32,62)	RS1/16SS473J
R 203	(B,42,45)	RS1/16S473J
R 204	(A,25,61)	RS1/16SS221J

Circuit Symbol and No.		Part No.
R 206	(B,26,53)	RS1/16SS104J
R 210	(B,13,32)	RS1/16SS102J
R 214	(B,36,34)	RS1/16SS472J
R 216	(B,47,49)	RS1/16SS472J
R 221	(B,36,32)	RS1/16SS103J
R 222	(B,35,32)	RS1/16SS103J
R 225	(A,49,49)	RS1/16SS103J
R 226	(A,49,50)	RS1/16SS393J
R 227	(B,45,51)	RS1/16SS562J
R 228	(B,42,53)	RS1/16SS122J
R 229	(B,44,53)	RS1/16SS472J
R 230	(B,21,28)	RS1/16SS0R0J
R 232	(B,43,51)	RS1/16SS122J
R 233	(B,29,52)	RS1/16SS103J
R 234	(B,30,61)	RS1/16SS473J
R 235	(A,25,63)	RS1/16SS473J
R 239	(B,26,48)	RS1/16SS473J
R 240	(B,10,31)	RS1/16SS473J
R 241	(B,9,32)	RS1/16SS103J
R 243	(A,35,69)	RS1/16S0R0J
R 244	(A,20,52)	RS1/16SS473J
R 255	(A,27,63)	RAB4CQ104J
R 307	(A,34,19)	RS1/16SS183J
R 308	(A,38,20)	RS1/16SS183J
R 309	(A,35,21)	RS1/16SS183J
R 310	(A,38,21)	RS1/16SS183J
R 601	(B,28,38)	RS1/16SS0R0J
R 602	(B,27,41)	RS1/16SS0R0J
R 606	(B,23,41)	RS1/16SS0R0J
R 701	(B,16,35)	RS1/16SS221J
R 702	(A,23,55)	RS1/16SS221J

CAPACITORS

C 106	(B,56,69)	CKSQYB475K6R3
C 201	(A,28,67)	CKSRYB104K16
C 202	(A,27,57)	CKSSYB104K10
C 204	(A,24,63)	CKSSYB103K16
C 205	(B,23,43)	CKSQYB475K6R3
C 206	(A,22,39)	CKSSYB104K10
C 207	(A,24,37)	CKSRYB104K16
C 209	(B,33,40)	CEVW220M6R3
C 210	(B,29,42)	CKSSYB104K10
C 211	(A,27,34)	CKSSYB104K10
C 212	(B,29,32)	CKSRYB104K16
C 213	(A,44,37)	CKSSYB104K10
C 214	(A,28,33)	CKSSYB104K10
C 216	(A,50,51)	CKSSYB332K50
C 217	(A,46,51)	CKSSYB104K10
C 218	(A,49,51)	CKSSYB473K10
C 219	(A,45,53)	CKSSYB104K10
C 220	(A,46,53)	CKSSYB182K50
C 221	(A,44,53)	CKSSYB104K10
C 222	(B,43,53)	CCSSCH560J50
C 223	(B,45,53)	CCSSCH4R0C50
C 224	(A,43,55)	CKSSYB104K10
C 226	(A,40,58)	CCSSCH680J50
C 227	(A,40,60)	CCSSCH470J50
C 228	(A,39,62)	CKSSYB103K16

Circuit Symbol and No.		Part No.
C 229	(B,49,59)	CKSSYB104K10
C 236	(A,42,61)	CKSSYB104K10
C 239	(B,44,51)	CCSSCH220J50
C 240	(A,35,61)	CKSSYB104K10
C 250	(B,36,30)	CKSSYB102K50
C 251	(B,33,29)	CKSSYB102K50
C 303	(A,35,19)	CKSSYB472K25
C 304	(A,34,21)	CKSSYB223K16
C 307	(B,25,9)	CKSRYB104K16
C 308	(B,10,27)	CKSRYB105K10
C 703	(B,11,37)	CCSSCH101J50
C 704	(B,8,36)	CKSSYB102K50
C 711	(A,25,26)	CKSSYB104K10

Miscellaneous Parts List

	Pickup Unit(P10.5)(Service)	CXX1942
M 1	Motor Unit(SPINDLE)	CXC7134
M 2	Motor Unit(LOADING/CARRIAGE)	CXC4026