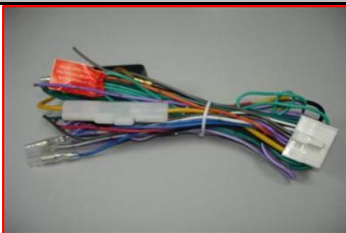
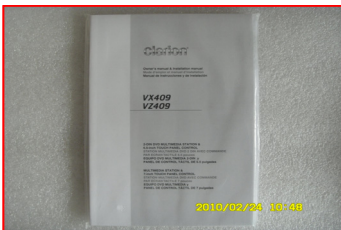
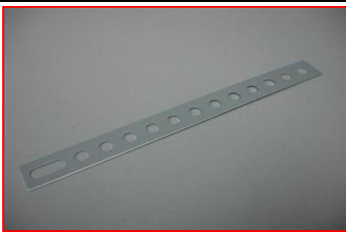
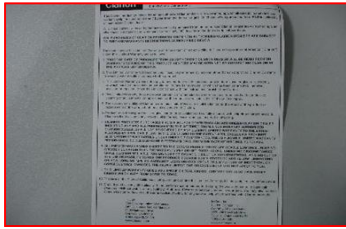



09 Clarion 2DIN AV Model(VX409) Accessory List:

No.	Part Name	QTY	Picture	Part No.	Remark
1	SMK wiring harness	1		3-WZA3-1700-84-00	
2	Remote Control	1		3-ZREM-1700-27-R2	
3	User Manual	1		7-2820-8024-00-00	
4	Back Strap	1		1-2651-2023-00-00	
5	4 flush mount bolts 4 cap bolts Rear radio stud and stopper	1		7-2651-8024-00-0A	
6	Cleaning cloth	1		7-2651-8015-00-00	


7	Warranty Card	1		7-2820-8007-00-00	
8	Trim ring	1		1-2651-3051-00-01	
9	Trim ring	1		1-2651-3031-00-01	

39	1-2820-3011-00-02	RIGHT-BOTTOM-3	1
38	1-2820-3010-00-06	RIGHT-MID-KEY-3	1
37	1-2820-3010-00-05	RIGHT-MID-KEY-2	1
36	1-2820-3010-00-04	RIGHTMID-KEY-1	1
35	1-2820-3009-00-02	RIGHT-BOTTOM-1	1
34	1-2820-3014-00-01	INNER-KNOB	1
33	1-2820-3002-00-02	KNOB	1
32	1-2820-9001-00-00	RUBBER-RING	1
31	1-2820-3008-00-02	LEFT-BOTTOM-3	1
30	1-2820-3007-00-04	LEFT-MID-KEY-3	1
29	1-2820-3007-00-05	LEFT-MID-KEY-2	1
28	1-2820-3007-00-04	LEFT-MID-KEY-1	1
27	1-2820-3006-00-02	LEFT-BOTTOM-1	1
26	1-2820-3005-00-00	GUIDE-LIGHT	1
25	1-2820-3012-00-00	LEFT-SPRING-BKT	1
24	3-WFX-6516-16-01	FPC LINE	1
23	1-2820-8001-00-00	FIXER-EVA	2
22	1-2820-2004-00-00	TFT-BKT	1
21	1-2942-6003-01-00	SCREW	5
20	1-2651-8042-00-00	WASHER_2	2
19	1-2651-6002-00-01	SCREW	2
18	1-2820-6002-00-00	WASHER	2
17	1-2820-6001-01-00	SCREW	2
16	1-2942-3006-00-00	SLIDE-ROLLER	2
15	1-2651-8022-00-00	FIXER-EVA-1	1
14	3-B322-0081-R1-00	PCB	1
13	1-2651-6007-00-02	SCREW	6
12	1-2820-2003-00-00	PANEL-BOTTOM	1
11	P-2820-0305-XX-XX	TFT	1
10	1-2820-8002-00-00	INSULATION-SHEET	1
9	1-2942-8007-00-00	EVA MAT	2
8	3-PTPW-065X-S1-00	SCREEN	1
7	3-PITO-0652-R2-00	TOUCH-SCREEN	1
6	P-2820-0306-XX-XX	KEY-PLATE	1
5	1-2820-3013-00-00	RIGH-SPRING-BKT	1
4	1-2820-3004-00-02	EJECT-BUTTON	1
3	1-2820-3003-00-00	IR-WINDOWS	1
2	1-2651-6003-01-02	SCREW	4
1	1-2820-3001-00-03	PANEL	1
NO.	PART NUMBER	DESCRIPTION	QTY


39	1-2820-3011-00-02	RIGHT-BOTTOM-3	1
38	1-2820-3010-00-06	RIGHT-MID-KEY-3	1
37	1-2820-3010-00-05	RIGHT-MID-KEY-2	1
36	1-2820-3010-00-04	RIGHTMID-KEY-1	1
35	1-2820-3009-00-02	RIGHT-BOTTOM-1	1
34	1-2820-3014-00-01	INNER-KNOB	1
33	1-2820-3002-00-02	KNOB	1
32	1-2820-9001-00-00	RUBBER-RING	1
31	1-2820-3008-00-02	LEFT-BOTTOM-3	1
30	1-2820-3007-00-04	LEFT-MID-KEY-3	1
29	1-2820-3007-00-05	LEFT-MID-KEY-2	1
28	1-2820-3007-00-04	LEFT-MID-KEY-1	1
27	1-2820-3006-00-02	LEFT-BOTTOM-1	1
26	1-2820-3005-00-00	GUIDE-LIGHT	1
25	1-2820-3012-00-00	LEFT-SPRING-BKT	1
24	3-WFXK-6516-16-01	FPC LINE	1
23	1-2820-8001-00-00	FIXER-EVA	2
22	1-2820-2004-00-00	TFT-BKT	1
21	1-2942-6003-01-00	SCREW	5
20	1-2651-8042-00-00	WASHER_2	2
19	1-2651-6002-00-01	SCREW	2
18	1-2820-6002-00-00	WASHER	2
17	1-2820-6001-01-00	SCREW	2
16	1-2942-3006-00-00	SLIDE-ROLLER	2
15	1-2651-8022-00-00	FIXER-EVA-1	1
14	3-B322-0081-R1-00	PCB	1
13	1-2651-6007-00-02	SCREW	6
12	1-2820-2003-00-00	PANEL-BOTTOM	1
11	P-2820-0305-XX-XX	TFT	1
10	1-2820-8002-00-00	INSULATION-SHEET	1
9	1-2942-8007-00-00	EVA MAT	2
8	3-PTPW-065X-S1-00	SCREEN	1
7	3-PITO-0652-R2-00	TOUCH-SCREEN	1
6	P-2820-0306-XX-XX	KEY-PLATE	1
5	1-2820-3013-00-00	RIGHT-SPRING-BKT	1
4	1-2820-3004-00-02	EJECT-BUTTON	1
3	1-2820-3003-00-00	IR-WINDOWS	1
2	1-2651-6003-01-02	SCREW	4
1	1-2820-3001-00-03	PANEL	1
NO.	PART NUMBER	DESCRIPTION	QTY

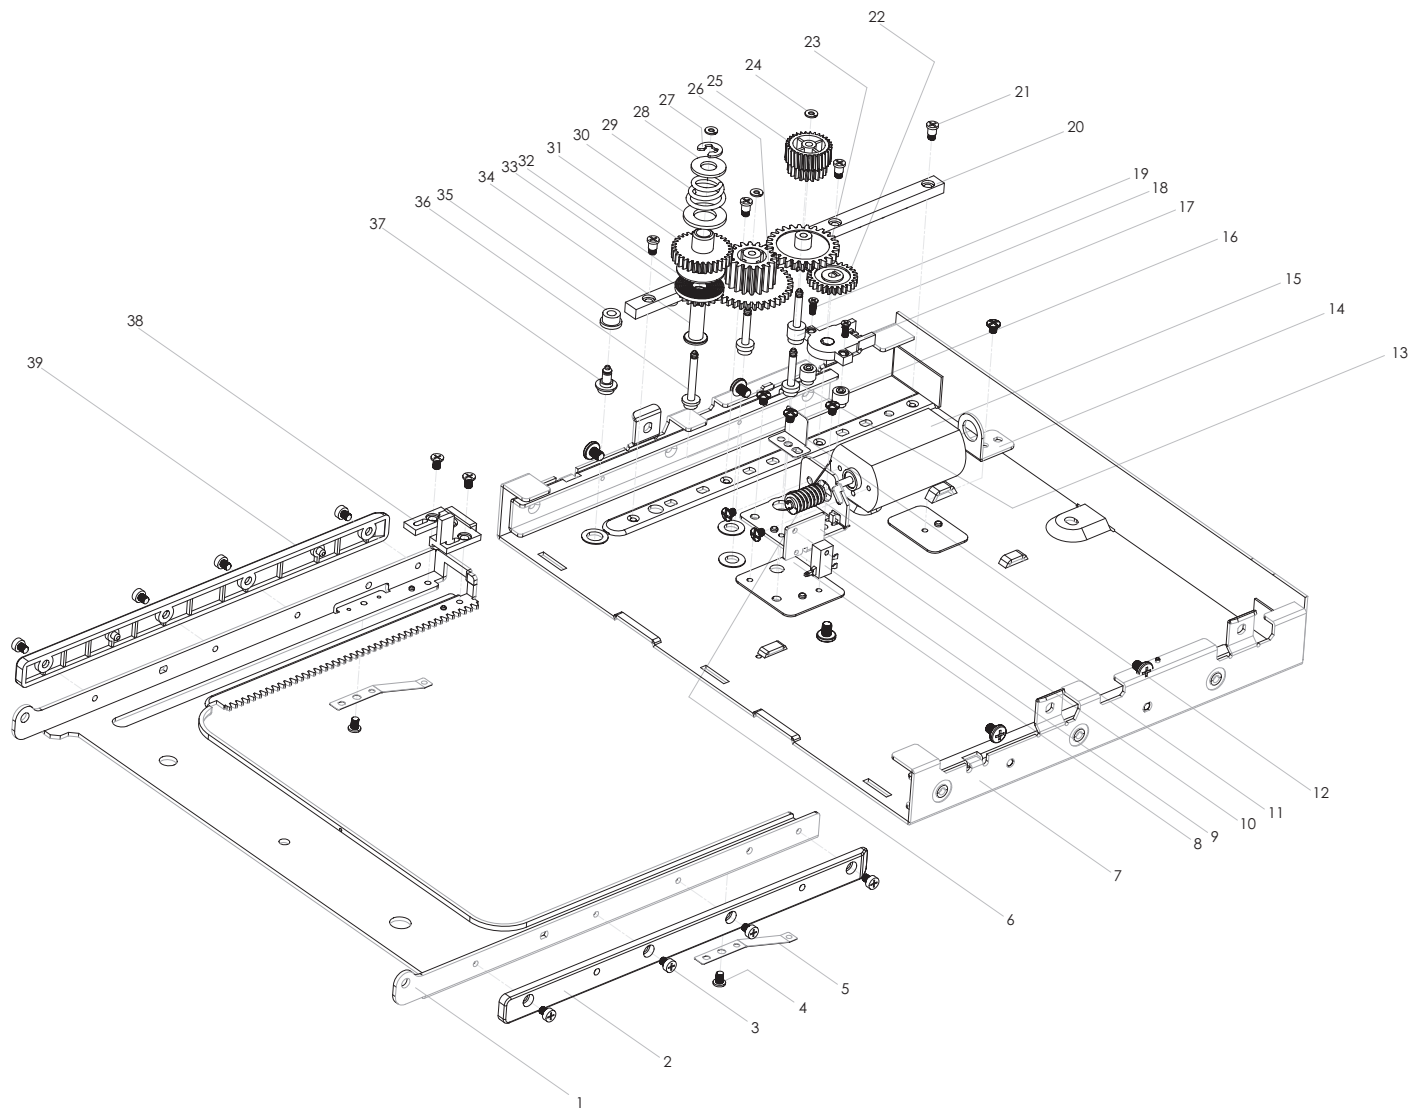

39	1-2651-3010-00-00	SLIDE-BLK-R	1
38	1-2651-3012-00-00	WARD-BLOCK	1
37	1-2651-4004-00-01	SHAFT-SLIDER	1
36	1-2651-4002-00-01	SHAFT-GEAR-2	1
35	1-2651-3011-00-00	SLIDE-ROLLER	1
34	1-2651-4005-00-01	SHAFT-GEAR-AXIS	1
33	1-2651-3004-00-00	GEAR-RUB-BOTTOM	1
32	1-2651-8002-00-00	FELT-RUB	1
31	1-2651-3003-00-00	GEAR-RUB-UP	1
30	1-2651-6014-00-01	GEAR-WESHER-2	1
29	1-2651-5002-00-00	GEAR-SPRING	1
28	1-2651-6013-00-01	GEAR-WESHER-1	1
27	1-2651-6015-00-00	E-RING	1
26	1-2651-3005-00-00	GEAR-BIG	1
25	1-2651-3002-00-00	GEAR-WORM	1
24	1-2651-8041-00-00	WASHER_1	4
23	1-2651-3006-00-00	GEAR-TRANSIT	1
22	1-2651-3007-00-00	GEAR-SENSOR	1
21	1-2701-6011-00-02	SCREW	2
20	1-2651-3008-00-00	LEADER-BLOCK	1
19	1-2651-6004-00-02	SCREW	2
18	1-2651-4003-00-01	SHAFT-GEAR-3	1
17	3-VR23-103L-00-05	VR SENSOR	1
16	1-2651-4006-00-01	SHAFT-SENSOR	2
15	3-M718-0SH2-50-00	BIG-MOTOR	1
14	1-2651-2005-00-00	MOTOR-BKT-REAR	1
13	1-2651-4001-00-01	SHAFT-GEAR-1	2
12	1-2651-2007-01-00	WORM-WARD	1
11	1-2651-3001-00-00	WORM	1
10	1-2651-2006-01-00	MOTOR-BKT	1
9	3-KDPB-1202-00-SS	Defector SW	1
8	1-2701-6007-00-03	SCREW	4
7	B-2810-1002-00-00	BOTTOM-ASS	1
6	1-2651-5003-00-01	MOTOR-BKT-SPRING	1
5	1-2651-2004-00-00	SLIDE-BKT-SPRING	2
4	1-2651-6007-00-02	SCREW	6
3	1-2820-6003-00-00	SCREW	8
2	1-2651-3009-00-00	SLIDE-BLK-L	1
1	1-2651-2001-04-01	LIIDE-BKT	1
NO.	PART NUMBER	DESCRIPTION	QTY

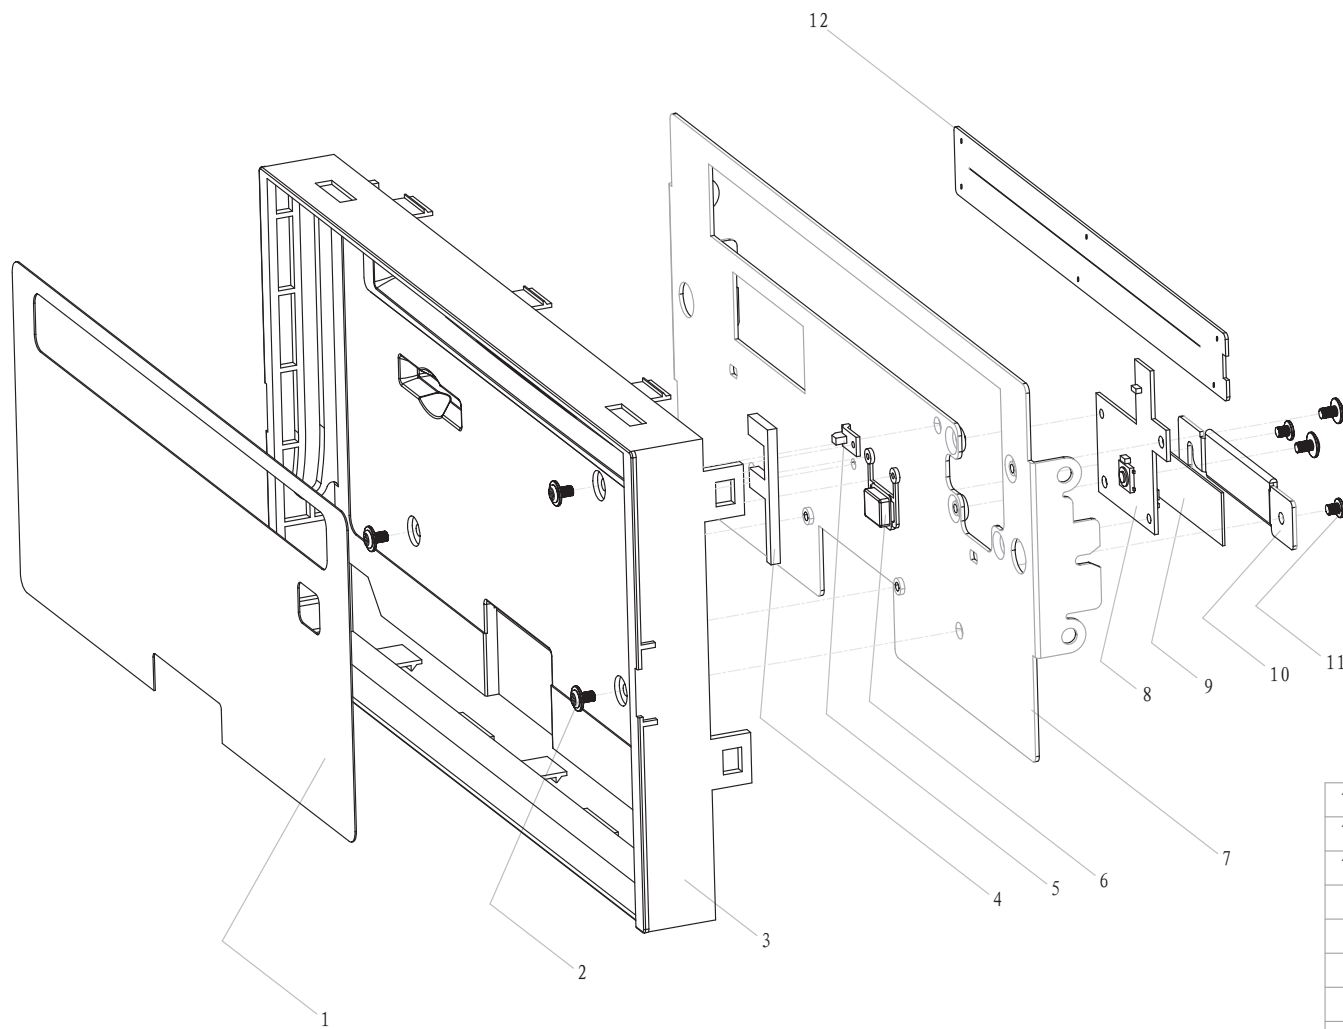

12	1-2651-8003-00-00	DUST-PROOF	1
11	1-2701-6007-00-03	SCREW	2
10	1-2651-2018-00-00	FPC FIXER	1
9	1-2651-8022-00-00	FIXER-EVA_1	1
8	P-2680-0137-XX-XX	EJECT-PCB	1
7	1-2651-2013-03-00	BASE-BKT	1
6	1-2651-3014-00-01	KEY-EJECT	1
5	1-2651-3013-00-01	LEDS-DISK	1
4	1-2651-8029-00-00	EVA-SHIELD_3	1
3	1-2651-3015-02-01	BASE	1
2	1-2651-6008-00-03	SCREW	5
1	1-2652-8005-00-07	DECORATE-PLATE	1
NO.	PART NUMBER	DESCRIPTION	QTY

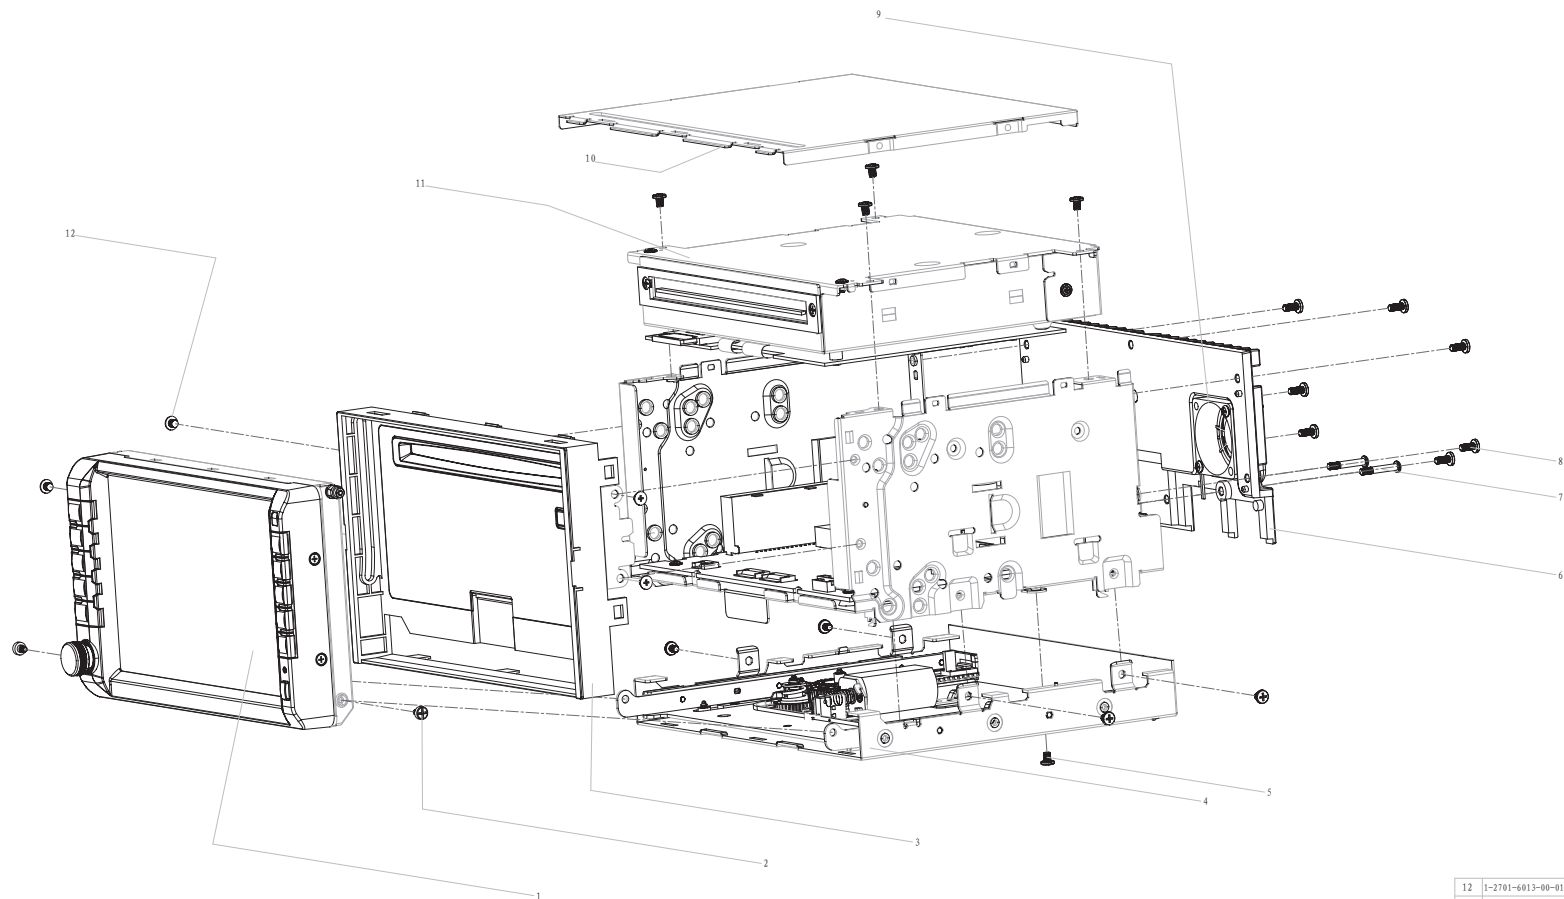

12	1-2701-6013-00-01	SCREW	4
11	C-5175-000A-00-00	CORE	1
10	1-2651-2014-00-00	TOP-COVER	1
9	3-MF40-J12A-00-00	FAN	1
8	1-2651-6010-01-01	SCREW	7
7	1-2701-6019-00-01	SCREW	3
6	1-2820-7001-00-00	HEAT-SINK	1
5	1-2701-6012-00-04	SCREW	9
4	B-2820-1002-00-00	DRIVER-ASS	1
3	B-2820-1003-00-00	BASE-ASS	1
2	1-2651-6002-00-01	SHAFT-SCREW	2
1	B-2820-1001-00-00	PANEL-ASS	1
NO.	PART NUMBER	DESCRIPTION	QTY

■ ELECTRICAL PARTS LIST

NO.	PART NO.	DESCRIPTION	REFERENCE	QTY
1	3-QMBT-3904-0N-6S	TRAN	Q5002-5003	2
2	3-CC35-0104-6Y-0S	CHIP CAP	C5020	1
3	3-KT10-5252-1W-SS	TACT SW	SW5001	1
4	3-DED0-BLUE-01-0S	LED	D5016 D5017	2
5	3-DED0-0RED-0S-0S	LED	D5018	1
6	3-J106-0125-07-30	SOCKET	J5001	1
7	3-RS31-0000-J0-0S	CHIP RES	R5070	1
8	3-RS31-010K-J0-0S	CHIP RES	R5019 R5067	2
9	3-RS31-001K-J0-0S	CHIP RES	R5020 R5047 R5068 R5066	4
10	3-RS31-020K-J0-0S	CHIP RES	R5065	1
12	3-QIRL-6402-PM-6S	MOSFET	Q1 Q7103	2
13	3-DC1S-V214-00-0S	VC DIODE	VD1	1
14	3-U078-D050-00-0S	REG	IC1	1
15	3-UADS-7843-00-AS	T/PIC	IC7202	1
16	3-U0BA-7071-00-9S	SYNC SEPARATE	IC15	1
17	3-U0BU-4S81-00-0S	Y-GATE	IC5 IC7102	2
18	3-CC35-0103-4X-0S	CHIP CAP	C32 C44 C73 C81-82 C84-85 C93 C95 C97 C7418 C7420 C7509 C7512 C7517	15
19	3-CC35-0473-4X-0S	CHIP CAP	C65	1
20	3-CC35-0104-4X-0S	CHIP CAP	C30 C38 C40 C47 C49 C55 C7106 C7203 C7325 C7411-7417 C33 C7302 C7505 C7507-7508 C7520 C7504	23
21	3-CC33-0474-4X-0S	CHIP CAP	C103	1
22	3-RS31-0000-J0-0S	CHIP RES	C7410	1
23	3-CC35-0102-4X-0S	CHIP CAP	C50	1
24	3-CC35-0101-30-0S	CHIP CAP	C7408-7409	2
25	3-CC37-0105-4X-0S	CHIP CAP	C25-28 C7510 C7513 C7514-7516 C31 C39 C56 C62-64 C75 C77-79 C87 C7102 C7105 C7107 C98 C100	25
26	3-CC67-0106-6Y-0S	CHIP CAP	C7108 C29	2
27	3-CC35-0100-30-0S	CHIP CAP	C72	1
28	3-CC43-0106-6Y-0S	CHIP CAP	C57 C7401 C7403 C46	4
29	3-CC35-0150-30-0S	CHIP CAP	C7212	1

NO.	PART NO.	DESCRIPTION	REFERENCE	QTY
30	3-CC35-0181-30-0S	CHIP CAP	C7101	1
31	3-CC35-0222-4X-0S	CHIP CAP	C102	1
32	3-CC45-0225-6Y-1S	CHIP CAP	C76	1
33	3-CC47-0225-6Y-0S	CHIP CAP	C51 C7318	2
34	3-CC67-0225-4X-0S	CHIP CAP	C7519	1
35	3-CC65-0226-6Y-0S	CHIP CAP	C7104 C37 C7301	3
36	3-CC67-0226-6Y-0S	CHIP CAP	C7213-7214 C7506	3
37	3-CC35-0330-30-0S	CHIP CAP	C13	1
38	3-CC35-0030-80-0S	CHIP CAP	C54	1
39	3-CC43-0475-4X-0S	CHIP CAP	C61 C66-68	4
40	3-CC35-0471-30-0S	CHIP CAP	C7103	1
41	3-CC35-0471-30-0S	CHIP CAP	C15	1
42	3-CC35-0472-4X-0S	CHIP CAP	C7503	1
43	3-CC35-0681-4X-0S	CHIP CAP	C48 C99 C7518	3
44	3-CCSK-0100-30-0S	CHIP CAP	C7502	1
45	3-CCSK-0680-30-0S	CHIP CAP	C7501	1
46	3-L7XX-0902-UI-0S	DC/DC TRANSFORMER	T7501	1
47	3-JF16-00R5-02-30	FFC CON.	CON1	1
48	3-JF30-00R5-02-30	FFC CON.	CON7101-7102 CON7106	3
49	3-J103-0400-00-30	SOCKET	CON2	1
50	3-CTA5-0474-54-0S	CHIP TAN CAP	C52 C58 C74	3
51	3-CES5-0107-52-0S	SMT E-CAP	TC1 TC5 TC20 TC22 TC7511	5
52	3-CES2-0227-52-0S	SMT E-CAP	TC3-4 TC6 TC7101 TC7302 TC7305-7306 TC24	8
53	3-CES5-0476-52-0S	SMT E-CAP	TC2	1
54	3-CES2-0476-52-0S	SMT E-CAP	TC7402 TC7404	2
55	3-CES7-0476-52-0S	SMT E-CAP	TC7201	1
56	3-CTA2-0476-54-0S	CHIP TAN CAP	C80 C83 C90 C94 C96 TC38	6
57	3-LA30-182R-00-1S	CHIP BEAD	FB7121	1
58	3-LA30-601R-Y0-0S	CHIP BEAD	FB1 FB1111-1114 FB1116 FB7101-7102 FB7108-7110 FB7117 FB7130-7133 FB7138 L2-5 L8-10 L16-17 L22	27

NO.	PART NO.	DESCRIPTION	REFERENCE	QTY
59	3-JF04-0010-04-30	FFC CON.	CON7201	1
60	3-L4S0-0101-CD-43	POWER INDUCTANCE	L15 L7304 L7306	3
61	3-L4S0-0101-CD-32	POWER INDUCTANCE	L7401	1
62	3-L8SX-0101-K0-0S	WIRE WIND IND.	L7201	1
63	3-L4S0-0100-CD-32	POWER INDUCTANCE	L12 L7303	2
64	3-L8SX-0100-K0-0S	WIRE WIND IND.	L11	1
65	3-L4S0-0150-CD-43	POWER INDUCTANCE	L14	1
66	3-L8SX-0150-K0-0S	WIRE WIND IND.	L7 L20 L7101 L1 L18-19 L7402	7
67	3-L4S0-0471-CD-75	POWER INDUCTANCE	L7501	1
68	3-U0LD-1117-33-0S	REGULATOR	IC7301	1
69	3-U0MP-1015-00-BS	DC/AC REG	IC7501	1
70	3-UMTV-018N-24-9S	OSD IC	U7401	1
71	3-UNJM-2107-00-9S	OP	IC4	1
72	3-UNJM-3414-00-9S	DUAL OP	IC3	1
73	3-UPVI-1004-00-80	TIMING CONTROL	IC7101	1
74	3-RS31-0000-J0-0S	CHIP RES	R1 R3 R5 R27 R66 R104 R108 R110 R120 R7110 R7219 FB7134-7135	13
75	3-RS31-100K-J0-0S	CHIP RES	R58 R105 R7104 R7502 R7509 R7512	6
76	3-RS31-100R-J0-0S	CHIP RES	R84-85 R93-94 R7201-7202 R7224-7226 R7401-7402	11
77	3-RS31-010K-J0-0S	CHIP RES	R24 R56 R63 R88 R100 R7102 R7203 R7217-7218 R7220-7221 R7404-7408 R7412-7414 R7421-7422	21
78	3-RS31-010R-J0-0S	CHIP RES	R7204-7207	4
79	3-RS31-120R-F0-0S	CHIP RES	R7513	1
80	3-RS31-180K-J0-0S	CHIP RES	R7	1
81	3-RS31-018K-J0-0S	CHIP RES	R136	1
82	3-RS31-001K-J0-0S	CHIP RES	R11 R14 R25 R86 R7106 R7409-7411 R7418-7420 R7444 R7511	13
83	3-RS52-001K-J0-0S	CHIP RES	R7505	1
84	3-RS31-001M-J0-0S	CHIP RES	R32 R7426	2
85	3-RS31-020K-J0-0S	CHIP RES	R87 R95 R7222-7223	4
86	3-RS31-220K-J0-0S	CHIP RES	R83 R106	2

NO.	PART NO.	DESCRIPTION	REFERENCE	QTY
87	3-RS31-220R-J0-0S	CHIP RES	R7439-7440	2
88	3-RS31-022K-J0-0S	CHIP RES	R23 R26	2
89	3-RS31-027K-F0-0S	CHIP RES	R4	1
90	3-RS31-002K-J0-0S	CHIP RES	R7503 R7508	2
91	3-RS31-300K-J0-0S	CHIP RES	R7501	1
92	3-RS31-030K-J0-0S	CHIP RES	R57	1
93	3-RS31-330K-J0-0S	CHIP RES	R45	1
94	3-RS31-033K-J0-0S	CHIP RES	R22 R82	2
95	3-RS31-039K-J0-0S	CHIP RES	R13 R60	2
96	3-RS31-039R-J0-0S	CHIP RES	R7107 R7119-7121 FB7120	5
97	3-RS31-470R-J0-0S	CHIP RES	R72 R99 R101	3
98	3-RS31-047K-J0-0S	CHIP RES	R12 R7504	2
99	3-RS31-047R-J0-0S	CHIP RES	R9 R21 R74 R78-80 R116	7
100	3-RS31-04K3-J0-0S	CHIP RES	R7510	1
101	3-RS31-04K7-J0-0S	CHIP RES	R6 R41 R46 R7103 R7415-7417	7
102	3-RS31-056K-J0-0S	CHIP RES	R40	1
103	3-RS31-056R-J0-0S	CHIP RES	R7108-7109 R7111-7118 FB7118-7119 FB7123-7128	18
104	3-RS31-05K6-J0-0S	CHIP RES	R7423 R7425	2
105	3-RS31-068K-F0-0S	CHIP RES	R2	1
106	3-RS31-06K8-J0-0S	CHIP RES	R59 R7216	2
107	3-RS31-075R-J0-0S	CHIP RES	R92 R109 R112	3
108	3-U0TB-1318-00-80	VIDED DSP	IC2	1
109	3-QMBT-3904-0N-6S	TRAN	Q2 Q8 Q7101	3
110	3-QMBT-3906-0P-6S	TRAN	Q7501	1
111	3-VR23-1030-01-0S	VR	R64 R7101	2
112	3-XQ05-004M-43-3S	CRYSTAL	Y1	1
113	3-DZA3-0010-00-0S	ZENER	ZD7301	1
114	3-DZA3-05V1-00-0S	ZENER	ZD7201-7204	4
115	3-U0TL-431A-00-0S	BASE SOURCE	ZR2	1

NO.	PART NO.	DESCRIPTION	REFERENCE	QTY
116	3-CC32-0225-4X-0S	CHIP CAP	C74 C75	2
117	3-CC35-0100-30-0S	CHIP CAP	C30 C31 C43 C80 C81 C82 C86 C87 C88 C89 C90 C91 C92 C93 C94 C97 C98 C99 C130	19
118	3-CC35-0101-30-0S	CHIP CAP	C173 C176 C177	3
119	3-CC35-0102-4X-0S	CHIP CAP	C256 C257 C388 R3	4
120	3-CC35-0103-4X-0S	CHIP CAP	C1 C2 C10 C19 C20 C21 C32 C34 C38 C41 C51 C52 C100 C154 C155 C156 C157 C165 C168 C169 C174 C175 C192 C194 C198 C199 C213 C216 C217 C221 C236 C264 C349 C361 C362 C369 C382 C5207 C5208 C5209 C5210 C7327	42
121	3-CC35-0104-4X-0S	CHIP CAP	C11 C26 C29 C37 C56 C84 C95 C107 C108 C110 C113 C114 C119 C120 C124 C153 C184 C188 C190 C196 C224 C393 C396 C5101 C5204 C5206	26
122	3-CC35-0121-30-0S	CHIP CAP	C149 C150 C151 C152	4
123	3-CC35-0150-30-0S	CHIP CAP	C13 C181 C200	3
124	3-CC35-0152-4X-0S	CHIP CAP	C58 C59 C66 C67	4
125	3-CC35-0220-80-0S	CHIP CAP	C182 C183 C222 C223	4
126	3-CC35-0151-30-0S	CHIP CAP	C6	1
127	3-CC35-0222-4X-0S	CHIP CAP	C105	1
128	3-CC35-0224-6Y-0S	CHIP CAP	C219 C227	2
129	3-CC35-0273-4X-0S	CHIP CAP	C73 C76	2
130	3-CC35-0330-30-0S	CHIP CAP	C116	1
131	3-CC35-0474-6Y-0S	CHIP CAP	C104 C106	2
132	3-CC35-0561-30-0S	CHIP CAP	C220	1
133	3-CC35-0680-30-0S	CHIP CAP	C57 C60 C65 C68	4
134	3-CC35-0681-30-0S	CHIP CAP	C102	1
135	3-CC35-0822-4X-0S	CHIP CAP	C8 C9	2
136	3-CC35-0333-4X-0S	CHIP CAP	C61	1
137	3-CC38-0105-4X-0S	CHIP CAP	C3 C4 C5 C12 C22 C23 C24 C33 C35 C36 C39 C40 C42 C44 C47 C55 C63 C71 C79 C96 C101 C103 C115 C123 C128 C132 C158 C178 C179 C201 C208 C211 C212 C214 C226 C228 C234 C235 C262 C377 C415 TC51 TC52 TC53 TC54	45
138	3-CC43-0106-6Y-0S	CHIP CAP	C25 C27 C28 C50 C64 C72 C111 C112 C122 C126 C127 C195 C254 C394 C395	15

NO.	PART NO.	DESCRIPTION	REFERENCE	QTY
139	3-CC57-04U7-5X-0S	Chip-Cap	C185 C186	2
140	3-CC59-0105-4X-0S	CHIP CAP	C7322	1
141	3-CC67-0226-6Y-0S	CHIP CAP	C109 C187 C197 C203 C210 C233 C250 C7323 C7326	9
142	3-CES2-0476-52-0S	SMT E-CAP	TC13 TC14 TC16 TC17 TC36 TC44 TC64 TC94	8
143	3-CES5-0107-52-0S	SMT E-CAP	TC15	1
144	3-CES5-0227-52-0S	SMT E-CAP	TC42	1
145	3-DKA0-4148-00-0S	SW DIODE	D3 D4 D5 D6 D7 D8 D9 D12 D13 D17 D19 D20 D22 D25 D26 D27 D28 D30 D31 D32 D33 D35 D36 D37 D39 D40 D42 D43 D5201 D7301	30
146	3-DRB0-4001-00-0S	REC DIODE	D1	1
147	3-DRB0-4004-00-0S	REC DIODE	D5202 D5203 D5204 D5205	4
148	3-DRX0-5404-00-0S	REC DIODE	D15 D23	2
149	3-DRX0-SK34-00-0S	SOCK. DIODE	D21	1
150	3-DSX0-SK34-00-0S	SOCK. DIODE	D7302 D7303	2
151	3-DXX0-6801-00-0S	DIODE	D24	1
152	3-DZA3-0010-00-0S	ZENER	ZD1 ZD2 ZD3 ZD18 ZD19 ZD20 ZD23 ZD24 ZD22 ZD25 ZD26 ZD28	12
153	3-DZA3-0012-00-0S	ZENER	ZD5202	1
154	3-DZA3-0018-00-0S	ZENER	ZD10	1
155	3-DZA3-05V1-00-0S	ZENER	ZD5 ZD8 ZD13	3
156	3-DZA3-05V6-00-0S	ZENER	ZD4 ZD6 ZD9	3
157	3-DZA3-07V5-00-0S	ZENER	ZD12	1
158	3-F300-00A2-02-0S	FUSE	FU6	1
159	3-F300-0A75-03-0S	FUSE	FU1 FU2 FU3 FU5 FU7 FU8 FU9 FU16	8
160	3-J104-0125-07-30	SOCKET	CON6 CON8	2
161	3-J106-0125-07-30	SOCKET	CON16	1
162	3-J107-0125-07-30	SOCKET	CON4	1
163	3-J109-0125-07-30	SOCKET	CON13	1
164	3-J110-0125-07-30	SOCKET	CON3	1
165	3-J112-0125-07-30	SOCKET	CON11	1
166	3-J115-0125-07-30	SOCKET	CON9	1
167	3-JF07-00R5-02-30	FFC CON.	CON17	1
168	3-JF30-00R5-02-30	FFC CON.	CON1 CON7	2

NO.	PART NO.	DESCRIPTION	REFERENCE	QTY
169	3-JF34-00R5-02-30	FFC CON.	CON2 CON5	2
170	3-L4S0-0150-H1-29	CHIP INDUCTANCE	L6	1
171	3-L4S0-0220-3B-16	POWER IND	L7311	1
172	3-L4S0-0220-8B-28	POWER INDUCTANCE	L14	1
173	3-L4S0-0471-CD-43	POWER INDUCTANCE	L7	1
174	3-L7XX-1420-EE-0S	CMRR COIL	L5202	1
175	3-L8SX-0100-K0-0S	WIRE WIND IND.	L9	1
176	3-L8SX-0101-K0-0S	WIRE WIND IND.	L2 L3 L5 L21 L23	5
177	3-L8SX-0150-K0-0S	WIRE WIND IND.	L4 L8 L45	3
178	3-LA30-222R-00-1S	CHIP BEAD	FB80 FB81	2
179	3-LA30-601R-G0-0S	CHIP BEAD	FB1 FB2 FB3 FB4 FB5 FB6 FB7 FB8 FB10 FB11 FB12 FB13 FB14 FB15 FB16 FB17 FB18 FB19 FB22 FB23 FB39 FB40 FB41 FB42 FB43 FB44 FB45 FB46 FB47 FB48 FB49 FB50 FB51 FB55 FB60 FB69 FB70 FB71 FB72 FB73 FB82 FB83 R50	43
180	3-Q0KR-A304-0P-6S	TRAN	Q8 Q10 Q12 Q14 Q16 Q18	6
181	3-Q0KR-C402-0N-6S	TRAN	Q31 Q32 Q42	3
182	3-Q2SA-1718-0P-6S	TRAN	Q5207 Q5212	2
183	3-Q2SC-2020-0N-6S	TRAN	Q37	1
184	3-Q2SC-4375-0N-6S	TRAN	Q5203	1
185	3-Q2SK-3018-NM-6S	MOSFET	Q2 Q38	2
186	3-QIRF-7205-PM-6S	MOSFET	Q5102 IC3 IC42	3
187	3-QKTC-3265-0N-6S	TRAN	Q7 Q9 Q11 Q13 Q15 Q17 Q19 Q36 Q43 Q44 Q45 Q46	12
188	3-QMBT-3904-0N-6S	TRAN	Q1 Q3 Q5 Q6 Q20 Q21 Q22 Q24 Q25 Q26 Q27 Q30 Q33 Q34 Q35 Q39 Q40 Q48 Q49 Q54 Q55 Q56 Q57 Q64 Q72 Q5101 Q5205 Q5208	28
189	3-QMBT-3906-0P-6S	TRAN	Q28 Q29 Q41 Q63 Q68 Q73 Q5204 Q5206	8
190	3-QSTA-1663-0P-6S	TRAN	Q4	1
191	3-RS31-0000-J0-0S	CHIP RES	R24 R33 R47 R51 R63 R69 R121 R123 R149 R154 R155 R166 R169 R177 R201 R209 R227 R228 R234 R239 R246 R247 R250 R264 R269 R291 R292 R293 R294 R295 R300 R301 R324 R330 R331 R389 C125 C263 D10 D14 D38 D41	42
192	3-RS31-001K-F0-0S	CHIP RES	R82 R129 R130 R551 R552 R75	6

NO.	PART NO.	DESCRIPTION	REFERENCE	QTY
193	3-RS31-001K-J0-0S	CHIP RES	R5 R21 R23 R29 R31 R34 R44 R45 R52 R53 R54 R60 R64 R66 R117 R137 R203 R204 R212 R214 R240 R241 R242 R244 R280 R289 R290 R306 R307 R393 R394 R395 R516 R517 R5217	35
194	3-RS31-001M-J0-0S	CHIP RES	R62 R142 R143 R147 R151 R176 R233	7
195	3-RS31-002K-F0-0S	CHIP RES	R68 R73 R7325	3
196	3-RS31-010K-F0-0S	CHIP RES	R86 R90 R96 R100 R181	5
197	3-RS31-010K-J0-0S	CHIP RES	R7 R8 R10 R11 R20 R28 R41 R55 R80 R116 R134 R136 R173 R174 R195 R198 R199 R208 R210 R220 R229 R235 R262 R265 R268 R271 R275 R282 R284 R288 R299 R302 R303 R305 R308 R318 R320 R333 R334 R335 R339 R345 R384 R397 R398 R401 R402 R427 R428 R459 R460 R473 R478 R500 R501 R5192 R5193 R5194 R5195 R5196 R5197 R5198 R5199	63
198	3-RS31-010R-J0-0S	CHIP RES	R456 R457	2
199	3-RS31-012K-F0-0S	CHIP RES	R12 R13 R14 R15 R19	5
200	3-RS31-012K-J0-0S	CHIP RES	R207	1
201	3-RS31-015K-J0-0S	CHIP RES	R205 R287 R312 R349	4
202	3-RS31-018K-J0-0S	CHIP RES	R144	1
203	3-RS31-01K2-J0-0S	CHIP RES	R106 R110	2
204	3-RS31-01K5-F0-0S	CHIP RES	R16	1
205	3-RS31-020K-F0-0S	CHIP RES	R2 R4 R59 R74 R85 R125 R126 R127 R547 R548 R549 R550	12
206	3-RS31-020K-J0-0S	CHIP RES	R70 R89 R93 R99 R103 R107 R109 R111 R113 R192 R211 R238 R260 R261 R263 R266 R267 R277 R453 R502	20
207	3-RS31-022K-F0-0S	CHIP RES	R5216	1
208	3-RS31-024K-J0-0S	CHIP RES	R128	1
209	3-RS31-027K-F0-0S	CHIP RES	R465	1
210	3-RS31-027K-J0-0S	CHIP RES	R118 R272	2
211	3-RS31-02K2-F0-0S	CHIP RES	R7329	1
212	3-RS31-02K2-J0-0S	CHIP RES	R253	1
213	3-RS31-02K7-F0-0S	CHIP RES	R206	1
214	3-RS31-030K-F0-0S	CHIP RES	R7324	1
215	3-RS31-030K-J0-0S	CHIP RES	R87 R91 R97 R101 R165 R455	6
216	3-RS31-036K-J0-0S	CHIP RES	R56	1

NO.	PART NO.	DESCRIPTION	REFERENCE	QTY
217	3-RS31-039K-J0-0S	CHIP RES	R38 R311	2
218	3-RS31-03K3-J0-0S	CHIP RES	R26 R27 R94 R95 R104 R105 R114 R115 R156 R161 R164 R168	12
219	3-RS31-047K-J0-0S	CHIP RES	R48 R193 R216 R222 R231 R252 R258 R273 R279 R281 R347 R503	12
220	3-RS31-04K7-J0-0S	CHIP RES	R138 R139 R140 R190 R194 R225 R226 R256 R257 R278 R296 R297 R298 R332 R337 R338 R375 R392 R400 R420 R454 R461 R504 R5101 R5222	25
221	3-RS31-051K-F0-0S	CHIP RES	R18 R186 R187 R188 R189	5
222	3-RS31-056K-J0-0S	CHIP RES	R213 R348	2
223	3-RS31-05K1-F0-0S	CHIP RES	R61	1
224	3-RS31-05K6-J0-0S	CHIP RES	R171	1
225	3-RS31-06K2-J0-0S	CHIP RES	R259	1
226	3-RS31-06K8-F0-0S	CHIP RES	R172	1
227	3-RS31-075R-J0-0S	CHIP RES	R83 R132 R553 FB9	4
228	3-RS31-08K2-F0-0S	CHIP RES	R179 R7327	2
229	3-RS31-100K-F0-0S	CHIP RES	R39 R182 R183 R184 R185	5
230	3-RS31-100K-J0-0S	CHIP RES	R37 R42 R43 R84 R215 R217 R237 R243 R254 R270 R328 R340 R341 R346 R421 R422 R518 R519	18
231	3-RS31-100R-J0-0S	CHIP RES	R22 R32 R35 R40 R57 R58 R76 R120 R197	9
232	3-RS31-150R-J0-0S	CHIP RES	R232	1
233	3-RS31-180K-J0-0S	CHIP RES	R191 R399 R5102 R5221	4
234	3-RS31-200K-F0-0S	CHIP RES	R72	1
235	3-RS31-200R-J0-0S	CHIP RES	R25 R157 R160 R163 R167 R170 R218	7
236	3-RS31-220K-J0-0S	CHIP RES	R135	1
237	3-RS31-220R-J0-0S	CHIP RES	R6 R9 R133	3
238	3-RS31-300R-J0-0S	CHIP RES	R88 R92 R98 R102 R108 R112 R5215	7
239	3-RS31-330K-J0-0S	CHIP RES	R178	1
240	3-RS31-470R-J0-0S	CHIP RES	R30 R71 R119 R145 R146 R152 R153 R223 R224 R350	10
241	3-RS52-010R-J0-0S	CHIP RES	R325	1
242	3-RS63-0000-J0-0S	CHIP RES	R403 R202	2
243	3-RS63-001K-J0-0S	CHIP RES	R180 R274 R276 R5218	4
244	3-RS63-002R-J0-0S	CHIP RES	R219 R221	2

NO.	PART NO.	DESCRIPTION	REFERENCE	QTY
245	3-RS63-010K-J0-0S	CHIP RES	R251	1
246	3-RS63-04K7-J0-0S	CHIP RES	R5224 R5225	2
247	3-RS63-04R7-J0-0S	CHIP RES	R46 R65 R342 R515	4
248	3-RS63-100K-F0-0S	CHIP RES	R17	1
249	3-RS63-470R-J0-0S	CHIP RES	R310	1
250	3-RS95-0000-J0-0S	CHIP RES	R5103	1
251	3-RS95-001K-J0-0S	CHIP RES	R67 R7328	2
252	3-U002-4C04-AF-9S	EEPROM	IC27	1
253	3-U0AD-8092-00-9S	AMPLIFIER	IC9 IC39 U1	3
254	3-U0BA-3121-F0-9S	INSULATE OP	IC6 IC8 IC37	3
255	3-U0BA-6951-FS-AS	MOTOR DRIVER	IC24	1
256	3-U0BA-7071-00-9S	SYNC SEPARATE	IC15	1
257	3-U0LP-2950-00-9S	IC	U2	1
258	3-U0MP-4461-00-XS	DC/DC REG	U4	1
259	3-U0TL-431A-00-0S	BASE SOURCE	ZR1 ZR2 ZD11 ZD14	4
260	3-U4HC-4052-PW-BS	ELEC SW	IC44 IC47	2
261	3-U4HC-4094-PW-BS	SHIFT REG	IC2 IC4 IC29	3
262	3-UAIC-1896-00-X0	DC-DC	U3	1
263	3-UNJM-2235-00-9S	VIDEO SW	IC7,IC17	2
264	3-UST7-FAUD-10-80	MCU	IC25	1
265	3-UTDA-7418-00-9S	ASP IC	U6	1
266	3-UUTC-4558-00-9S	OP AMP.	IC10 IC11 IC12	3
267	3-XQ05-008M-00-3S	CRYSTAL	Y1	1
268	3-CE12-0108-52-00	Insert E-cap	TC5124	1
269	3-CE12-0227-52-00	INSERT E-CAP	TC59 TC71 TC76	3
270	3-CE12-0477-52-00	INSERT E-CAP	TC50 TC60 TC73 TC77 TC92	5
271	3-CE15-0106-52-00	INSERT E-CAP	TC1 TC8 TC10 TC12 TC20 TC21 TC22 TC23 TC26 TC27 TC28 TC29 TC32 TC33 TC34 TC35 TC41 TC45 TC58 TC61 TC75 TC110 TC112	23
272	3-CE15-0107-52-00	INSERT E-CAP	TC3 TC30 TC62 TC81 TC83 TC84 TC91 TC5201 TC5202	9
273	3-CE15-0108-52-00	Insert E-cap	TC82 TC5101 TC5105	3
274	3-CE15-0226-52-00	INSERT E-CAP	TC48 TC11 TC111	3

NO.	PART NO.	DESCRIPTION	REFERENCE	QTY
275	3-CE15-0227-52-00	INSERT E-CAP	TC38 TC49 TC68 TC80 TC7310	5
276	3-CE15-0476-52-00	INSERT E-CAP	TC56 TC79 TC93	3
277	3-CE16-0688-52-00	INSERT E-CAP	TC57 TC78	2
278	3-CE17-0107-52-00	INSERT E-CAP	TC2 TC7312	2
279	3-CE17-0228-52-00	INSERT E-CAP	TC5206	1
280	3-CE19-0105-52-01	INSERT E-CAP	TC5204	1
281	3-CE19-0225-52-00	INSERT E-CAP	TC63	1
282	3-CE19-0335-52-00	INSERT E-CAP	TC5205	1
283	3-CE19-0474-52-00	INSERT E-CAP	TC55	1
284	3-J216-5016-11-00	Plug	CON12	1
285	3-L416-0101-K0-55	PIN POWER INDCUTOR	L7310	1
286	3-L817-0101-J0-00	INSERET WIND IND.	L1 L16 L22 L5103 L5104 L5105	6
287	3-M300-1255-00-10	BUZZER	BEEP-DIP	1
288	3-U0LB-1641-00-50	MOTOR DRIVER	IC1	1
289	3-UTDA-7388-00-70	POWER AMP	IC23	1
290	3-Z2TC-TL26-CR-R0	Tuner	FM/AM_TUNER	1

NO.	PART NO.	DESCRIPTION	REFERENCE	QTY
291	3-CC35-0102-4X-0S	CHIP CAP	C1201	1
292	3-CC35-0104-4X-0S	CHIP CAP	C1202 C1204 C1205 C1231 C1299	5
293	3-CC43-0106-6Y-0S	CHIP CAP	C1203	1
294	3-JF16-00R5-06-30	FFC CON.	CON1001	1
295	3-DED0-WHIT-01-0S	LED	D1201 D1202 D1203 D1204 D1205 D1206 D1207 D1208 D1211 D1212 D1213 D1214 D1215 D1216 D6	15
296	3-DED0-ORED-0S-0S	LED	D5	1
297	3-DKA0-4148-00-0S	SW DIODE	D4	1
298	3-KEEC-11EC-07-10	ENCODER SW	EN1201	1
299	3-L89X-0100-J0-0S	WIRE WIND IND.	L1201	1
300	3-RS31-001K-J0-0S	CHIP RES	R1250 R1251 R1252 R1253 R1254 R1255 R1260 R1261 R1262 R1263 R1264 R1265 R1285 R1289 R1290 R1294 R1297 R1301 R1302	19
301	3-RS31-0000-J0-0S	CHIP RES	R1200 R1201 R1202 R1210 R1223 R1245	6
302	3-RS31-010K-F0-0S	CHIP RES	R1230 R1286 R1298 R1299	4
303	3-RS31-01K2-F0-0S	CHIP RES	R1203 R1246	2
304	3-RS31-01K5-F0-0S	CHIP RES	R1204 R1214 R1234 R1235	4
305	3-RS31-002K-F0-0S	CHIP RES	R1303 R1213 R1233	3
306	3-RS31-003K-F0-0S	CHIP RES	R1215 R1247	2
307	3-RS31-03K9-F0-0S	CHIP RES	R1216 R1236	2
308	3-RS31-047K-F0-0S	CHIP RES	R1300	1
309	3-RS31-04K7-F0-0S	CHIP RES	R1205 R1248	2
310	3-URPM-6938-00-20	IR RECEIVER	U1201	1
311	3-QMBT-3904-0N-6S	TRAN	Q1	1
312	3-KTTS-03MB-S0-SS	TACT SW	SW1218 SW1220	2
313	3-KTTS-1107-GS-SS	TACT SW	SW1201 SW1202 SW1203 SW1204 SW1205 SW1210 SW1214 SW1215 SW1216 SW1217	10