
2. EXPLODED VIEWS AND PARTS LIST

NOTES:
- *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Screws adjacent to ▼ mark on product are used for disassembly.*
- *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)*

2.1 PACKING SECTION

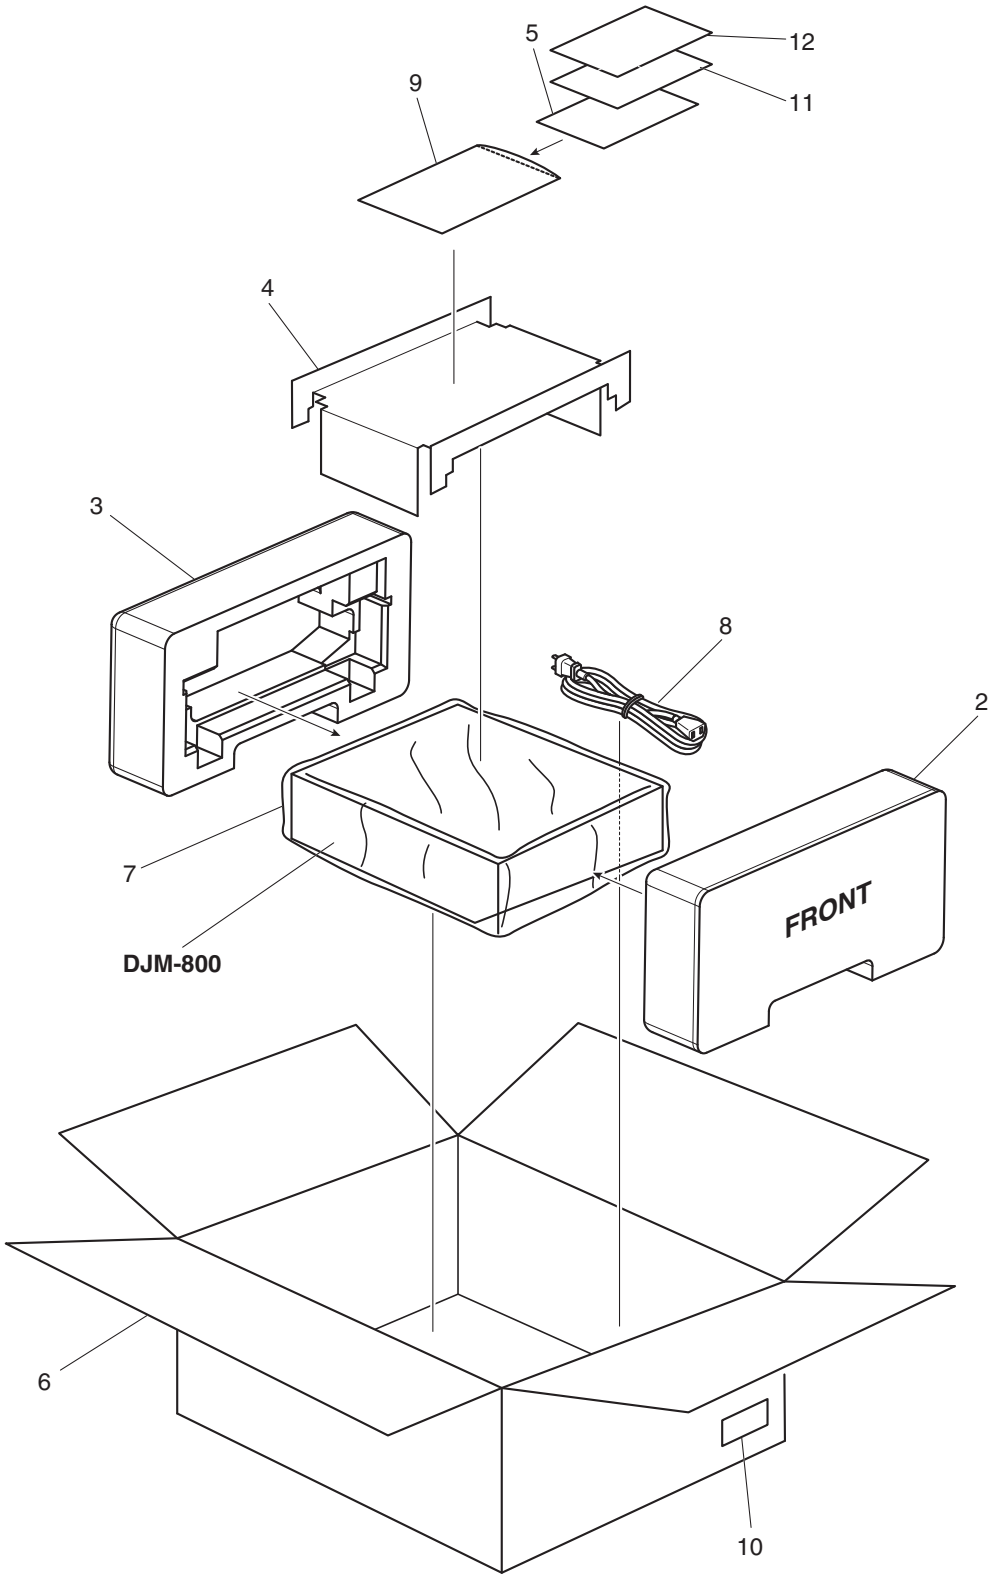

DJM-800

(1) PACKING SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	• • • •	
	2	Pad Front	DHA1698
	3	Pad Rear	DHA1699
	4	Pad Top	DHA1705
	5	Instruction Manual(M800)	See Contrast table (2)
	6	Packing Case	See Contrast table (2)
	7	Sheet	RHX1006
⚠	8	Power Cord	See Contrast table (2)
NSP	9	Polyethylene Bag	AHG7117
NSP	10	Label	See Contrast table (2)
NSP	11	Warranty Card	See Contrast table (2)
NSP	12	User Registration Sheet	DRM1262

(2) CONTRAST TABLE

DJM-800/WYXJ5, DJM-800/TLXJ and DJM-800/KUCXJ are constructed the same except for the fHollowing

Mark	No.	Symbol and Description	DJM-800 /KUCXJ	DJM-800 /WYXJ5	DJM-800 /TLXJ
	5	Instruction Manual (English)	DRB1393	Not used	Not used
	5	Instruction Manual (English, French German, Italian, Dutch, Spanish)	Not used	DRB1392	Not used
	5	Instruction Manual (English, Spanish, Chinese)	Not used	Not used	DRB1394
	6	Packing Case	DHG2559	DHG2558	DHG2560
⚠	8	Power Cord	DDG1028	ADG7062	ADG7062
NSP	10	Label	DRW2311	VRW1629	VRW1629
NSP	11	Warranty Card	ARY7043	Not used	Not used

2.2 EXTERIOR SECTION

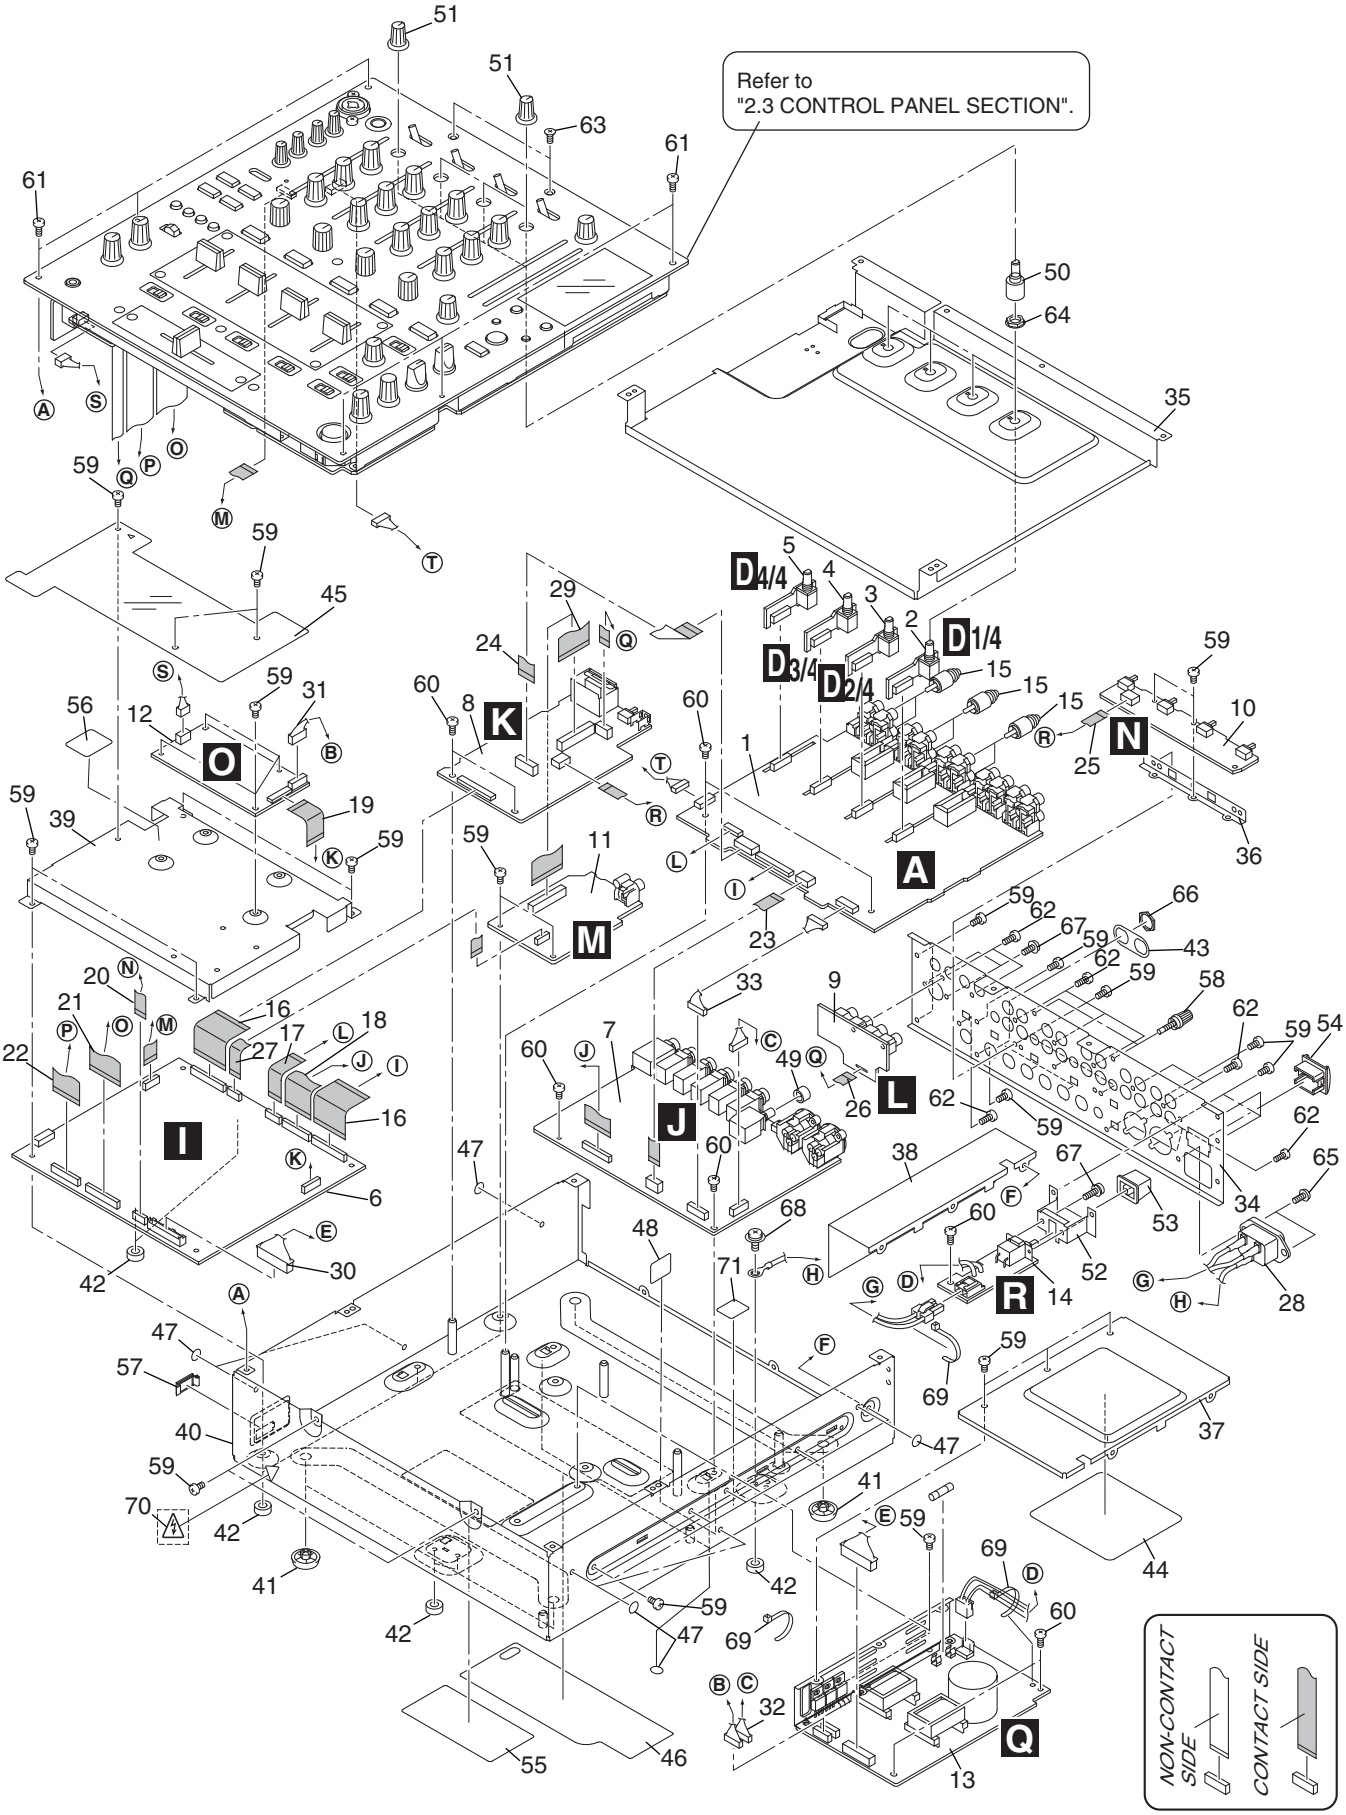

EXTERIOR SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	INPUT Assy	DWX2535
	2	TRIM 4 Assy	DWX2551
	3	TRIM 3 Assy	DWX2550
	4	TRIM 2 Assy	DWX2549
	5	TRIM 1 Assy	DWX2548
	6	DSP Assy	DWX2534
	7	OUTPUT Assy	DWX2544
	8	DIGIC Assy	DWX2547
	9	DIGIA Assy	DWX2555
	10	SLSW Assy	DWX2536
	11	DIGIB Assy	DWX2546
	12	HPAMP Assy	DWX2556
⚠	13	POWER SUPPLY Unit	DWR1433
	14	ACSW Assy	DWX2545
	15	Short Pin Plug	AKM7008
	16	Flexible Cable (31P)	DDD1316
	17	Flexible Cable (12P)	DDD1317
	18	Flexible Cable (25P)	DDD1318
	19	Flexible Cable (16P)	DDD1319
	20	Flexible Cable (10P)	DDD1321
	21	Flexible Cable (30P)	DDD1322
	22	Flexible Cable (25P)	DDD1323
	23	Flexible Cable (7P)	DDD1326
	24	Flexible Cable (12P)	DDD1327
	25	Flexible Cable (6P)	DDD1328
	26	Flexible Cable (7P)	DDD1329
	27	Flexible Cable (10P)	DDD1333
⚠	28	AC Inlet Assy	See Contrast table (2)
	29	Flexible Cable (24P)	DDD1330
	30	Connector Assy(10P-12P)	DKP3763
	31	Connector Assy	PF05EE-S22
	32	Connector Assy	PF05EE4S32
	33	Connector Assy	PF06EE-D12
NSP	34	Rear Panel	See Contrast table (2)
	35	Bracket TRIM	DNF1728
	36	Bracket SSW	DNF1729
	37	Shield Case	DNH2697
	38	Shield Case AC	DNH2698
	39	Shield Case DSP	DNH2699
	40	Chassis Assy	DXB1881
	41	Leg Assy	REC-434
NSP	42	Spacer	AEB7092
	43	PHONE Spacer	DEC2914
	44	Barrier A	DEC2915
	45	Styling Sheet	DEC2917
	46	Bottom Cover	DEC2918
	47	Blind Label	DEC2928
	48	Barrier B	DEC2944
	49	Select Knob (S)	DAA1166
	50	Extension Shaft	DNK4691
	51	Rotary SW Knob S	DAA1204
	52	Bracket PSW	DNF1730
	53	POWER Knob	DAC2306
	54	POWER Knob Guard	DNK4534
NSP	55	LABEL	See Contrast table (2)
	56	CAUTION Label	DRW2312
	57	Blind Cap	DNK4218
	58	Terminal Screw	AKE-031-0
	59	Screw	BBZ30P060FTB
	60	Screw	BBZ30P080FTC
	61	Screw	BCZ30P080FTB
	62	Screw	BPZ30P080FTB
	63	Screw	CCZ30P060FTB
	64	Flange Nut M7	DBN1011
	65	Screw	IBZ30P080FTB
	66	Nut	NKX2FTC
	67	Screw	PMH30P100FTB
	68	Screw	PMH40P080FTC
	69	Binder (SKB-90BK)	ZCA-SKB90BK
NSP	70	Caution LABEL	See Contrast table (2)
NSP	71	Earth LABEL	See Contrast table (2)

(2) CONTRAST TABLE

DJM-800/WYXJ5, /TLXJ and DJM-800/KUCXJ are constructed the same except for the fHollowing :

Mark	No.	Symbol and Description	DJM-800 /KUCXJ	DJM-800 /WYXJ5	DJM-800 /TLXJ
⚠	28	AC Inlet Assy	DKP3761	DKP3762	DKP3762
NSP	34	Rear Panel	DNC1800	DNC1789	DNC1791
NSP	55	LABEL	DRW2294	DRW2293	DRW2319
NSP	70	Caution LABEL	DRW1975	Not used	Not used
NSP	71	Earth LABEL	DRW2276	Not used	Not used

2.3 CONTROL PANEL SECTION

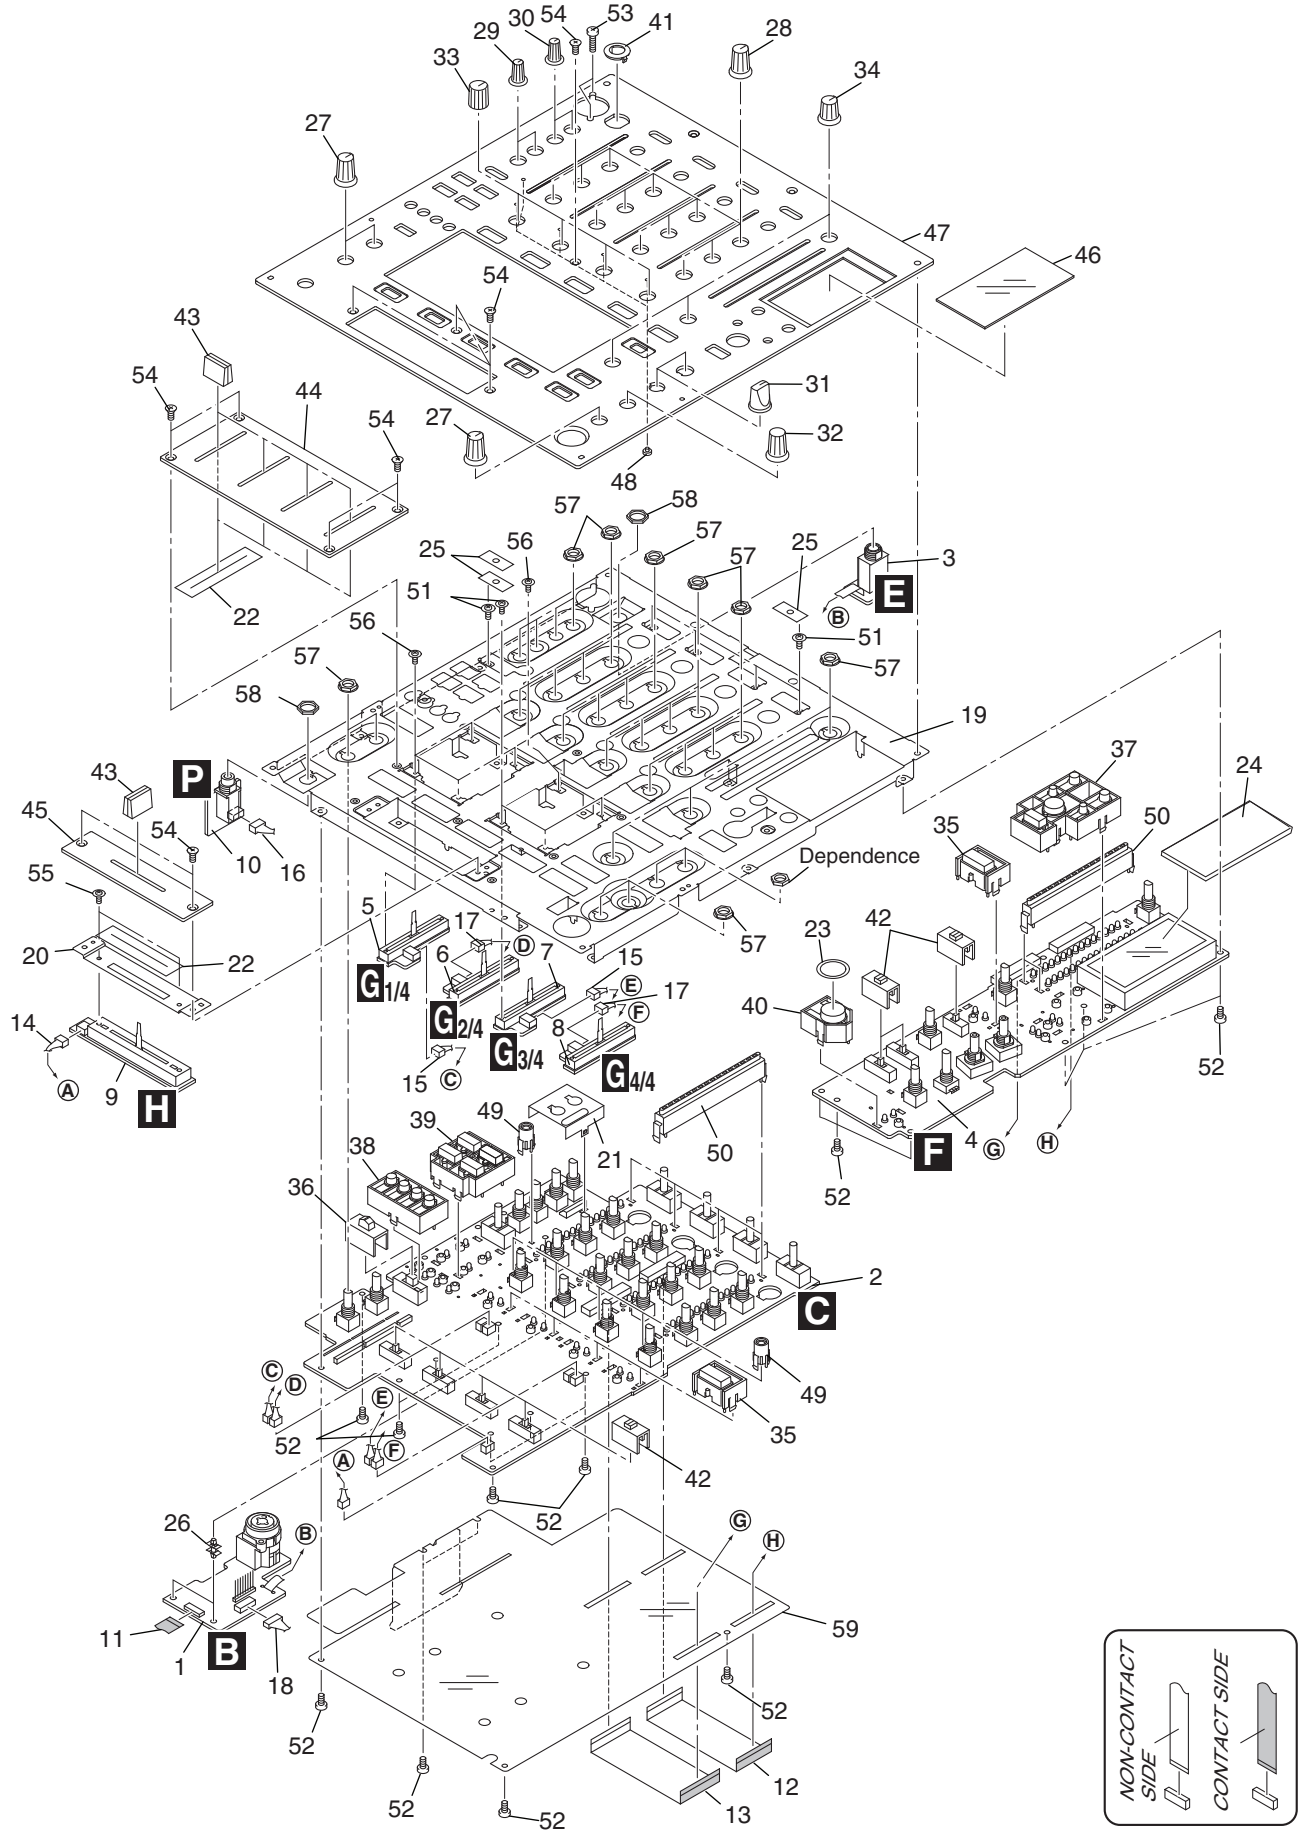

CONTROL PANEL SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	MIC 1 Assy	DWX2542
	2	PANEL 1 Assy	DWX2552
	3	MIC 2 Assy	DWX2543
	4	PANEL 2 Assy	DWX2554
	5	CHFD 1 Assy	DWX2537
	6	CHFD 2 Assy	DWX2538
	7	CHFD 3 Assy	DWX2539
	8	CHFD 4 Assy	DWX2540
	9	CRSFD Assy	DWX2541
	10	HP JACK Assy	DWX2553
	11	Flexible Cable (12P)	DDD1320
	12	Flexible Cable (27P)	DDD1324
	13	Flexible Cable (30P)	DDD1325
	14	Housing Wire Assy	PF03PP-D12
	15	Housing Wire Assy	PF04PP-D05
	16	Housing Wire Assy	PF04PP-D20
	17	Housing Wire Assy	PF04PP4D05
	18	Housing Wire Assy	PF05FF-D25
NSP	19	Panel Stay	DND1254
	20	CRF Stay	DNF1726
	21	MIC Stay	DNF1727
	22	Fader Packing	DEC2903
	23	SW Packing	DEC2929
	24	Barrier (FL)	DEC2943
	25	SW Packing	DED1177
NSP	26	PC Support	VEC1508
	27	Rotary SW Knob (A)	DAA1175
	28	Rotary SW Knob (B)	DAA1176
	29	Rotary SW Knob S (A)	DAA1177
	30	Rotary SW Knob S (B)	DAA1178
	31	Select Knob	DAA1205
	32	Rotary SW Knob (C)	DAA1180
	33	Rotary SW Knob (HM)	DAA1197
	34	Rotary SW Knob (MA)	DAA1198
	35	CUE Knob	DAC2215
	36	Slide SW Cap (A)	DAC2219
	37	SET Knob (TAP)	DAC2300
	38	SET Knob (FS)	DAC2301
	39	SET Knob (HM)	DAC2302
	40	EFFECT Knob	DAC2304
	41	MIC Cap	DAC2309
	42	Slide SW Cap	DAC2310
	43	Slider Knob (L2)	DAC2371
	44	CHF Panel	DAH2426
	45	CRF Panel	DAH2427
	46	Disply Panel	DAH2428
	47	Control Panel	DNB1144
	48	LENS	DNK4532
	49	LENS Holder	DNK4533
	50	LEVEL Meter Assy	DXB1882
	51	Screw	AMZ26P040FTC
	52	Screw	BBZ30P060FTB
	53	Screw	BPZ30P120FTB
	54	Screw	CCZ30P060FTB
	55	Screw	DBA1262
	56	Screw	DBA1298
	57	Flange Nut M9	DBN1008
	58	Nut	NKX2FTC

5. PCB PARTS LIST

NOTES: ● *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
● *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
● *When ordering resistors, first convert resistance values into code form as shown in the following examples.*
Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560 Ω	→ *56 x 10[1]* →	*561*	*RD1/4PU 5 6 1 J*
47k Ω	→ *47 x 10[3]* →	*473*	*RD1/4PU 4 7 3 J*
0.5 Ω	→	*R50*	*RN2H R 5 0 K*
1 Ω	→	*1R0*	*RS1P 1 R 0 K*

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω	→ *562 x 10[1]* →	*5621*	*RN1/4PC 5 6 2 1 F*

LIST OF ASSEMBLIES

Mark	No.	Description	Part No.
NSP	1	INFD ASSY	DWM2239
	2	INPUT ASSY	DWX2535
	2	MIC 1 ASSY	DWX2542
	2	MIC 2 ASSY	DWX2543
	2	SLSW ASSY	DWX2536
	2	CHFD 1 ASSY	DWX2537
	2	CHFD 2 ASSY	DWX2538
	2	CHFD 3 ASSY	DWX2539
	2	CHFD 4 ASSY	DWX2540
	2	CRSFD ASSY	DWX2541
NSP	1	OUDIG ASSY	DWM2240
	2	OUTPUT ASSY	DWX2544
	2	AC SW ASSY	DWX2545
	2	DIGIB ASSY	DWX2546
	2	DIGIC ASSY	DWX2547
	2	TRIM 1 ASSY	DWX2548
	2	TRIM 2 ASSY	DWX2549
	2	TRIM 3 ASSY	DWX2550
	2	TRIM 4 ASSY	DWX2551
NSP	1	PANEL-A ASSY	DWM2241
	2	PANEL 1 ASSY	DWX2552
	2	HPJACK ASSY	DWX2553
NSP	1	PANEL-B ASSY	DWM2242
	2	PANEL 2 ASSY	DWX2554
	2	DIGI A ASSY	DWX2555
	1	DSP ASSY	DWX2534
	1	HPAMP ASSY	DWX2556
⚠	1	POWER SUPPLY UNIT	DWR1433

Mark	No.	Description	Part No.
A		**INPUT ASSY**	
		SEMICONDUCTORS	
		IC409, IC509, IC609, IC709	CS5361-KS
⚠		IC809, IC810	DEK1096
		IC405, IC505, IC605, IC705	LM4040EIM3-2.5
		IC501, IC601, IC701	NE5532AD
		IC401–IC404, IC406, IC502–IC504	NJM4580MD
		IC506, IC602–IC604, IC606	NJM4580MD
		IC702–IC704, IC706, IC801, IC802	NJM4580MD
		IC804	NJM4580MD
		IC803	PCM1742KE
		IC805	TA78L12F
		IC451–IC456, IC806, IC807	TC7SH08FUS1
		IC408, IC508, IC608, IC708	TC7WH157FU
		Q801–Q808	2SC3326
		Q504–Q507, Q604–Q607	2SK371D1
		Q704–Q707	2SK371D1
		Q401, Q501, Q601, Q701	DTC124EUA
		D410, D411, D510, D511	1SS355
		D610, D611, D710, D711	1SS355
		D401–D404, D501–D504	RB706D-40
		D601–D604, D701–D704	RB706D-40
		D409, D509, D609, D709	UDZS5R6(B)
		COILS AND FILTERS	
		L803	LCKAW221J2520
		F489–F492, F589–F592	VTF1093
		F689–F692, F789–F792	VTF1093
		SWITCHES AND RELAYS	
		RY401, RY501, RY601, RY701	VSR1008
		CAPACITORS	
		C403–C406, C421–C424, C435	CCSRCH101J50
		C440, C444, C445, C449, C450	CCSRCH101J50
		C521–C524, C535, C540	CCSRCH101J50
		C544, C545, C549, C550	CCSRCH101J50
		C621–C624, C635, C640	CCSRCH101J50
		C644, C645, C649, C650	CCSRCH101J50
		C721–C724, C735, C740	CCSRCH101J50
		C744, C745, C749, C750	CCSRCH101J50
		C571, C572, C671, C672	CCSRCH181J50
		C771, C772	CCSRCH181J50
		C503, C504, C603, C604	CCSRCH221J50
		C703, C704	CCSRCH221J50
		C509, C510, C609, C610	CCSRCH331J50
		C709, C710	CCSRCH331J50
		C573, C574, C673, C674	CCSRCH471J50
		C773, C774	CCSRCH471J50
		C465, C565, C665, C765	CEHAR100M16
		C419, C420, C429, C430, C464	CEHAR100M35
		C488–C490, C497, C519, C520	CEHAR100M35
		C529, C530, C564, C566, C567	CEHAR100M35
		C588, C589, C619, C620	CEHAR100M35
		C629, C630, C664, C666, C667	CEHAR100M35
		C688, C689, C699, C719, C720	CEHAR100M35
		C729, C730, C764, C766, C767	CEHAR100M35
		C788, C789, C809–C812	CEHAR100M35
		C817–C820, C823, C826, C836	CEHAR100M35

Mark No.	Description	Part No.
C838		CEHAR100M35
C462, C562, C662, C762		CEHAR101M10
C507, C508, C607, C608		CEHAT471M25
C707, C708		CEHAT471M25
C829, C841		CEJQ100M25
C866, C867, C870, C871		CEJQ101M25
C843		CEJQ221M10
C463, C563, C663, C763		CEJQ221M6R3
C830, C833		CEJQ470M10
C853, C861, C865		CEJQ470M25
C432–C434, C437–C439		CFTNA334J50
C532–C534, C537–C539		CFTNA334J50
C632–C634, C637–C639		CFTNA334J50
C732–C734, C737–C739		CFTNA334J50
C402, C446, C451, C453–C455		CKSRYB103K50
C459, C502, C546, C551		CKSRYB103K50
C553–C555, C559, C602, C646		CKSRYB103K50
C651, C653–C655, C659, C702		CKSRYB103K50
C746, C751, C753–C755, C759		CKSRYB103K50
C831, C832, C842		CKSRYB103K50
C868, C869, C876		CKSRYB104K16
C401, C417, C418, C427, C428		CKSRYB104K25
C436, C441–C443, C447, C448		CKSRYB104K25
C458, C468, C469, C491–C496		CKSRYB104K25
C501, C517, C518, C527, C528		CKSRYB104K25
C536, C541–C543, C547, C548		CKSRYB104K25
C558, C568, C569, C600		CKSRYB104K25
C617, C618, C627, C628, C636		CKSRYB104K25
C641–C643, C647, C648, C658		CKSRYB104K25
C668, C669, C701, C717, C718		CKSRYB104K25
C727, C728, C736, C741–C743		CKSRYB104K25
C747, C748, C758, C768, C769		CKSRYB104K25
C821, C825, C834, C837		CKSRYB104K25
C844, C845, C852, C860		CKSRYB104K25
C862–C864, C872, C873		CKSRYB104K25
C877, C878		CKSRYB104K25
C457, C557, C657, C757		CKSRYB104K50
C470, C475, C570, C575, C670		CKSRYB272K50
C675, C770, C775		CKSRYB272K50
C452, C552, C652, C752		CKSRYB473K50
C511, C512, C611, C612		CQMA124J50
C711, C712		CQMA124J50
C514, C515, C614, C615		CQMA222J50
C714, C715, C801–C804		CQMA222J50
C505, C506, C605, C606		CQMA223J50
C705, C706		CQMA223J50
C828, C840		CQMA272J50
C513, C516, C613, C616, C713		CQMA333J50
C716		CQMA333J50
C805–C808, C827, C839		CQMA392J50
C813–C816		CQMA682J50

RESISTORS

R401, R402, R419, R420	RN1/16SE1001D
R519, R520, R619, R620	RN1/16SE1001D
R719, R720	RN1/16SE1001D
R403, R404, R421, R422	RN1/16SE1102D
R521, R522, R621, R622	RN1/16SE1102D
R721, R722	RN1/16SE1102D
R446, R449, R464, R467, R546	RN1/16SE1201D
R549, R564, R567, R646, R649	RN1/16SE1201D
R664, R667, R746, R749, R764	RN1/16SE1201D
R767	RN1/16SE1201D
R407, R408, R423, R424	RN1/16SE1502D
R523, R524, R623, R624	RN1/16SE1502D
R723, R724	RN1/16SE1502D
R430, R434, R530, R534, R630	RN1/16SE1503D
R634, R730, R734	RN1/16SE1503D
R428, R432, R528, R532, R628	RN1/16SE2202D
R632, R728, R732	RN1/16SE2202D
R441, R443, R459, R461, R541	RN1/16SE2401D
R543, R559, R561, R641, R643	RN1/16SE2401D
R659, R661, R741, R743, R759	RN1/16SE2401D
R761	RN1/16SE2401D
R801–R804, R817–R820	RN1/16SE2700D
R436–R439, R444, R445	RN1/16SE3301D
R454–R457, R462, R463	RN1/16SE3301D
R474, R475, R536–R539	RN1/16SE3301D
R544, R545, R554–R557	RN1/16SE3301D
R562, R563, R596, R597	RN1/16SE3301D
R636–R639, R644, R645	RN1/16SE3301D
R654–R657, R662, R663	RN1/16SE3301D
R674, R675, R696, R697	RN1/16SE3301D
R736–R739, R744, R745	RN1/16SE3301D
R754–R757, R762, R763	RN1/16SE3301D
R774, R775, R796, R797	RN1/16SE3301D
R447, R448, R465, R466	RN1/16SE3601D
R547, R548, R565, R566	RN1/16SE3601D
R647, R648, R665, R666	RN1/16SE3601D
R747, R748, R765, R766	RN1/16SE3601D
R809–R812	RN1/16SE4300D
R503–R506, R603–R606	RN1/16SE8200D
R703–R706	RN1/16SE8200D
R429, R433, R529, R533, R629	RN1/16SE1202D
R633, R729, R733	RN1/16SE1202D
R898	RS1/8S0R0J
R511, R512, R611, R612	RSK1/16S222J
R711, R712	RSK1/16S222J
R509, R510, R609, R610	RSK1/16S273J
R709, R710	RSK1/16S273J
R507, R508, R607, R608	RSK1/16S510J
R707, R708	RSK1/16S510J
Other Resistors	RS1/16S###J

OTHERS

CN454 7P FFC CONNECTOR	52044-0745
CN453 12P FFC CONNECTOR	52044-1245
CN451 12P FFC CONNECTOR	DKN1450
CN452 31P FFC CONNECTOR	DKN1451
SHIELD CASE S	DNH2717
JA402 REMOTE CONTROL JACK	RKN1004
JA502 REMOTE CONTROL JACK	RKN1004
JA602 REMOTE CONTROL JACK	RKN1004
JA702 REMOTE CONTROL JACK	RKN1004
CN455 6P SIDE POST	S6B-EH
JA401, JA501, JA601, JA701, JA801 4P JACK	VKB1132
KN1, KN2 WRAPPING TERMINAL	VNF1084
CN401, CN501, CN601, CN701 11P PLUG	XKP3065

Mark	No.	Description	Part No.

B MIC1 ASSY

SEMICONDUCTORS

	IC1501	AK5381VT
	IC1502, IC1503	NJM4580MD
	Q1501–Q1504	2SC4081
	D1510–D1515	1SS355
	D1518–D1521	RB501V-40

COILS AND FILTERS

	F1547–F1549	DTF1069
	F1541, F1543, F1545	VTF1093
	L1542, L1544, L1546	VTL1105

CAPACITORS

	C1505, C1516, C1518, C1525	CCSRCH101J50
	C1501–C1503, C1509–C1514, C1524	CCSRCH102J50
	C1504, C1517	CCSRCH331J50
	C1508, C1521, C1532, C1534, C1535	CEAL100M16
	C1537	CEAL100M16
	C1538	CEAL101M10
	C1543, C1544	CEAL101M25
	C1540	CEAL470M10
	C1539, C1541, C1542	CEAL470M16
	C1530, C1531	CEALNP220M16
	C1550, C1552	CFTLA103J50
	C1529	CKSRYB103K50
	C1506, C1507, C1519, C1520	CKSRYB104K25
	C1546–C1549, C1551	CKSRYB104K25
	C1526–C1528	CKSRYB104K50
	C1545	CKSRYB472K50

RESISTORS

	R1503, R1514, R1515, R1529	RN1/16SE1000D
	R1504, R1505, R1519, R1520	RN1/16SE1501D
	R1508, R1523	RN1/16SE3300D
	R1506, R1509, R1510, R1521	RN1/16SE3901D
	R1524, R1525	RN1/16SE3901D
	R1516, R1517, R1530, R1531	RN1/16SE4701D
	Other Resistors	RS1/16S###J

OTHERS

	0 4P CABLE HOLDER	51048-0400
	JA1502 CANON CONNECTOR	DKB1068
	CN1503 CONNECTOR	DKN1408
	CN1502 12P FFC CONNECTOR	DKN1450
	J1502 4P JUMPER WIRE	DKP3767
	CN1501 5P SIDE POST	S5B-EH

C PANEL1 ASSY

SEMICONDUCTORS

	IC1706–IC1708	TC74HC238AF
	IC1711–IC1713	TC74HC273AF
	IC1701–IC1705	TC74HC4051AF
	IC1714	TC74HCT08AF
	IC1709, IC1710	TD62083APG
	Q1705–Q1708, Q1721-Q1724	2SB1188
	Q1701–Q1704, Q1709-Q1720	DTC143EUA
	D1701–D1710, D1796-D1829	1SS355
	D1735, D1788-D1795	SLI-343URCW(RST)
	D1723–D1734, D1772–D1787	SLI-343YCW(RST)
	D1719–D1722	SLR-343BBT(HJKL)
	D1711–D1714	SPR-325MVW
	D1736–D1771	TLGE68TG(NP)

SWITCHES AND RELAYS

	S1707–S1718	DSG1079
	S1702	DSH1057
	S1719–S1722	DSH1058
	S1701	DSK1026
	S1703–S1706	DSK1033

CAPACITORS

	C1741–C1743	CEHAT101M16
	C1737, C1739, C1740	CKSRYB103K50
	C1701–C1736, C1747–C1755	CKSRYB104K25

RESISTORS

	VR1703–VR1707, VR1709–VR1711	DCS1065
	VR1713–VR1715, VR1717–VR1719, VR1721	DCS1065
	VR1701, VR1702	DCS1072
	VR1722	DCS1086
	VR1708, VR1712, VR1716, VR1720	DCS1095
	Other Resistors	RS1/16S###J

OTHERS

	CN1710 FFC BOTTOM CONNECTOR 27P	52492-2720
	CN1711 FFC CONNECTOR 30P	52492-3020
	CN1709 KR CONNECTOR 3P	B3B-PH-K
	CN1705, CN1707 KR CONNECTOR	B4B-PH-K
	CN1706, CN1708 KR CONNECTOR	B4B-PH-K-Y
	CN1701 10P FFC CONNECTOR	DKN1454
	CN1702 30P FFC CONNECTOR	DKN1455
	CN1703 25P FFC CONNECTOR	DKN1456
	CN1704 CONNECTOR	DKP3684

D 4/4 TRIM1 ASSY

CAPACITORS

	C491	CKSRYB104K50

RESISTORS

	VR491	DCS1089

OTHERS

	CN491 11P SOCKET	XKP3076

D 3/4 TRIM2 ASSY

CAPACITORS

	C591	CKSRYB104K50

RESISTORS

	VR591	DCS1089

Mark	No.	Description	Part No.
OTHERS			
	CN591	11P SOCKET	XKP3076

D 2/4 TRIM3 ASSY

Mark	No.	Description	Part No.
CAPACITORS			
	C691		CKSRYB104K50
RESISTORS			
	VR691		DCS1089
OTHERS			
	CN691	11P SOCKET	XKP3076

D 1/4 TRIM4 ASSY

Mark	No.	Description	Part No.
CAPACITORS			
	C791		CKSRYB104K50
RESISTORS			
	VR791		DCS1089
OTHERS			
	CN791	11P SOCKET	XKP3076

E MIC2 ASSY

Mark	No.	Description	Part No.
SEMICONDUCTORS			
	D1		UDZS5R6(B)
CAPACITORS			
	C2		CKSRYB103K50
	C1		CKSRYB472K50
OTHERS			
	0	4P CABLE HOLDER	51048-0400
	JA1501	MIC JACK	DKB1076
	EARTH PLATE (MIC)		DNH2735

F PANEL2 ASSY

Mark	No.	Description	Part No.
SEMICONDUCTORS			
	IC2102		NJM2903M
	IC2101		TC74HC4051AF
	Q2105–Q2108		2SB1188
	Q2101–Q2104		DTC143EUA
	D2141–D2163		1SS355
	D2115, D2116, D2130, D2131		SLI-343URCW(RST)
	D2111–D2114, D2126-D2129		SLI-343YCW(RST)
	D2133–D2138		SLI-343YCW(RST)
	D2132, D2139		SLR-343EBT(KLMN)
	D2102–D2110, D2117–D2125		TLGE68TG(NP)
	D2101		UDZS2R0(B)
SWITCHES AND RELAYS			
	S2101–S2104, S2106–S2109		DSG1079
	S2113, S2114		DSH1058
	S2105		DSH1066
	S2110		DSX1064
	S2111, S2112		DSX1068
CAPACITORS			
	C2112, C2113, C2115, C2116		CEHAT101M10
	C2114		CEHAT470M50
	C2104, C2123, C2124, C2127, C2128		CKSRYB103K50
	C2132		CKSRYB103K50
	C2101–C2103, C2105–C2107		CKSRYB104K25
	C2117, C2118, C2125, C2126		CKSRYB104K25
	C2129–C2131		CKSRYB104K25
RESISTORS			
	R2108, R2109		RS1/8S100J
	VR2101, VR2104		DCS1065
	VR2102, VR2103		DCS1086
	Other Resistors		RS1/16S###J
OTHERS			
	CN2101	FFC BOTTOM CONNECTOR	52492-2720
	CN2102	FFC CONNECTOR 30P	52492-3020
	V2101	FL INDICATOR TUBE	DEL1061
	0	FL HOLDER	DNF1732

G 1/4 CHFD1 ASSY

Mark	No.	Description	Part No.
RESISTORS			
	VR206		DCV1020
OTHERS			
	CN2601	KR CONNECTOR	S4B-PH-K

G 2/4 CHFD2 ASSY

Mark	No.	Description	Part No.
RESISTORS			
	VR205		DCV1020
OTHERS			
	CN2602	KR CONNECTOR	S4B-PH-K-Y

G 3/4 CHFD3 ASSY

Mark	No.	Description	Part No.
RESISTORS			
	VR203		DCV1020
OTHERS			
	CN2603	KR CONNECTOR	S4B-PH-K

G 4/4 CHFD4 ASSY

Mark	No.	Description	Part No.
RESISTORS			
	VR204		DCV1020
OTHERS			
	CN2604	KR CONNECTOR	S4B-PH-K-Y

H CRSFD ASSY

Mark	No.	Description	Part No.
RESISTORS			
	VR202		DCV1006

Mark	No.	Description	Part No.
		OTHERS	
	CN2608	KR CONNECTOR	S3B-PH-K

I DSP ASSY

SEMICONDUCTORS

	IC22	D610A003BPYPA225
⚠	IC40	DEK1086
⚠	IC41	DEK1094
⚠	IC42, IC44, IC48	DEK1096
⚠	IC43	DEK1098
	IC12	DYW1754
	IC11	K4S641632H-TC75
	IC16	NJM2374AM
	IC1	DYW1757
	IC14	R1224N102H
	IC15	S-1200B25-M5
	IC8	TC74HC32AF
	IC39	TC74HC4051AF
	IC24	TC74HC541AF
	IC2, IC3	TC74VHC163FT
	IC6, IC7	TC74VHC541FTS1
	IC4, IC5	TC74VHCU04FT
	IC25, IC45–IC47	TC7S08FU
	IC30, IC31	TC7SH08FUS1
	IC13	XC3S50-4TQG144C
	IC0	MBM29LV400TC-70PFTN
	Q2	2SA1576A
	Q16, Q3	2SC2412K
	Q4	2SC4081
	Q1	CPH6314
	Q13	DTA143EUA
	Q14	DTC114EUA
	Q10–Q12, Q15, Q5–Q9	DTC124EUA
	D1, D19–D34, D36	1SS355
	D2, D3	RB160L-40
	D5	SML-310DT

COILS AND FILTERS

L1	ATH7011
L2	CTH1254
L3	DTL1123
L4	RTF1189
L5	CTF1346
L10, L6- L9	CTF1357
F7, F9	VTF1093

CAPACITORS

C2	CCSRCH150J50
C1	CCSRCH180J50
C117	CCSRCH331J50
C248, C249	CEVW100M16
C118, C153, C174, C179, C182	CEVW100M50
C194, C202, C7, C84, C9	CEVW100M50
C103, C106, C111, C112	CEVW101M10
C115, C116, C135–C144, C196	CEVW101M10
C14	CEVW101M16
C10, C12, C120, C127, C13	CKSRYB103K50
C150–C152, C158–C161	CKSRYB103K50
C165–C168, C19, C220	CKSRYB103K50
C186–C189, C190, C191, C252	CKSRYB103K50
C100–C102, C107, C113, C114	CKSRYB104K16
C197–C199, C203, C247	CKSRYB104K16
C85–C99	CKSRYB104K16
C11, C121–C126, C128–C134	CKSRYB104K25
C148, C149, C15, C154–C157	CKSRYB104K25
C16, C17, C175–C178, C18	CKSRYB104K25
C180, C181, C183, C192, C193	CKSRYB104K25
C195, C20, C200, C201	CKSRYB104K25
C204–C209, C21, C210–C218	CKSRYB104K25
C22, C221, C23, C234–C239	CKSRYB104K25
C24, C240–C246, C26–C29	CKSRYB104K25
C3, C30–C39, C4	CKSRYB104K25
C40–C49, C5, C50–C79	CKSRYB104K25
C8, C80–C83	CKSRYB104K25
C108	CKSRYB105K10
C109	CKSRYB332K50
C169–C173	CKSRYB471K50
C104, C105, C110	CKSYB106K10

RESISTORS

R186	RS1/10S0R0J
R64	RS1/16S1502F
R70	RS1/16S2202F
R69	RS1/16S5603F
R65	RS1/16S7502F
R254, R255	RS1/4SA681J
R271, R365–R368	RS1/8S0R0J
Other Resistors	RS1/16S###J

OTHERS

CN14 PH CONNECTOR 6P(SMT)	AKM1292
X1 CRYSTAL RESONATOR	ASS7025
CN8	DKN1449
CN15, CN4 10P FFC CONNECTOR	VKN1414
CN11, CN3 12P FFC CONNECTOR	VKN1416
CN12 16P FFC CONNECTOR	VKN1420
CN6, CN7 25P FFC CONNECTOR	VKN1429
CN5 30P FFC CONNECTOR	VKN1434
CN1, CN2 31P FFC CONNECTOR	VKN1435
KN1–KN4 EARTH METAL FITTING	VNF1109

J OUTPUT ASSY

SEMICONDUCTORS

	IC904	AK4393VF
	IC918	AK5381VT
⚠	IC1167–IC1169	DEK1096
	IC908, IC909	NJM2114D
	IC905–IC907, IC911, IC912	NJM4580MD
	IC916, IC917	NJM4580MD
	IC913, IC914	NJM5532DD
	IC910, IC915	PCM1742KE
	IC901–IC903	TC7SH08FUS1
	Q901, Q902	2SA1576A
	Q903, Q922, Q923	2SC2412K
	Q906–Q921	2SC3326
	Q924	DTA143EUA
	Q904, Q905	DTC124EUA

Mark No.	Description	Part No.
D901–D912, D918, D919		1SS355
D914–D917		RB501V-40

COILS AND FILTERS

F101–F104	VTF1093

SWITCHES AND RELAYS

S902	DSG1083
S901	VSH1025
RY901, RY902	VSR1008

CAPACITORS

C1033, C1035	CCSRCH101J50
C1036, C1056	CCSRCH102J50
C974, C976, C978, C979, C991	CCSRCH151J50
C993, C994, C997	CCSRCH151J50
C934, C936, C938, C939	CCSRCH220J50
C917, C918, C921, C924, C925	CCSRCH221J50
C927, C930, C958	CCSRCH221J50
C940, C942–C944, C946, C947	CCSRCH820J50
C949, C950	CCSRCH820J50
C1015, C1022, C1034, C1037	CEANP100M16
C1008, C1028, C1040, C1043	CEANP100M25
C1013, C1024	CEAT100M50
C913	CEAT101M16
C1012, C1026, C1046, C1051, C1052	CEAT101M25
C1073-C1076, C969, C988	CEAT101M25
C1004, C1007, C1049	CEAT470M10
C1029, C1044, C1061	CEAT471M10
C964, C965, C970, C990	CEHANP220M16
C954	CEHANP220M25
C975, C980, C992, C996	CEHANP470M25
C1019, C904	CEHAT100M50
C1069–C1072	CEHAT101M25
C912	CEHAT221M10
C1057, C961	CEHAT470M16
C963	CEHAT471M16
C1005, C1006, C1050, C1062, C901	CKSRYB103K50
C1003, C1038, C1039, C1060, C903	CKSRYB104K25
C906, C908, C910, C914, C915	CKSRYB104K25
C919, C923, C928, C933	CKSRYB104K25
C972, C973	CKSRYB104K25
C1011, C1025, C1030, C1045	CKSRYB104K50
C1047, C1048, C1053, C1054, C935	CKSRYB104K50
C937, C941, C945, C948, C951	CKSRYB104K50
C959, C960, C962, C968, C977	CKSRYB104K50
C981, C989, C995, C998	CKSRYB104K50
C1017, C1020	CKSRYB222K50
C1016, C1021	CKSRYB392K50
C1077–C1080	CKSRYB473K50
C1014, C1023	CKSRYB682K50
C916, C926, C931, C957	CKSRYB821K50
C1001, C1002, C952, C953	CQMA103J50
C955, C956, C984, C985	CQMA103J50
C1058, C966	CQMA272J50
C1009, C1055, C967, C987	CQMA392J50
C1010, C1027	CQMA472J50
C1000, C982, C983, C999	CQMA682J50

Mark No.	Description	Part No.
C920, C922, C929, C932		DCH1255

RESISTORS

R1058, R1059, R1087, R1088	RD1/2VM101J
R979, R986, R993, R998	RD1/2VM181J
R1053, R1057, R1082, R1143	RN1/16SC68R0D
R1040, R1041, R1046, R1047, R1070	RN1/16SE1002D
R1072, R1078, R1079, R976, R983	RN1/16SE1002D
R992, R997	RN1/16SE1002D
R981, R988, R995, R999	RN1/16SE1101D
R919, R923, R928, R932, R935	RN1/16SE1102D
R938, R944, R948	RN1/16SE1102D
R1109, R1110	RN1/16SE2200D
R1038, R1042, R1043, R1045, R1048	RN1/16SE2202D
R1068, R1071, R1073, R1075, R1077	RN1/16SE2202D
R1044, R1049, R1074, R1076, R1104	RN1/16SE2700D
R1114	RN1/16SE2700D
R1107, R1112	RN1/16SE3300D
R1039, R1069, R1125, R1127	RN1/16SE3602D
R1002, R1003, R977, R978	RN1/16SE3901D
R984, R985, R990, R991	RN1/16SE3901D
R1000, R982, R989, R996	RN1/16SE4701D
R1021, R1022, R918, R920–R922	RN1/16SE5601D
R927, R929, R934, R936, R937	RN1/16SE5601D
R939, R943, R945–R947	RN1/16SE5601D
R1001, R980, R987, R994	RN1/16SE9101D
Other Resistors	RS1/16S###J

OTHERS

CN902 7P FFC CONNECTOR	52045-0745
CN903 5P TOP POST	B5B-EH-Y
CN904 6P TOP POST	B6B-EH
JA901, JA902 CANON CONNECTOR	DKB1077
JA907 HEADPHONE JACK	DKB1078
JA903, JA904 HEADPHONE JACK	DKN1249
JA905, JA906 HEADPHONE JACK	DKN1452
JA908 HEADPHONE JACK	DKN1452
ROTARY SW STAY	DNH2646
CN901 25P FFC CONNECTOR	VKN1429
KN901, KN902 WRAPPING TERMINAL	VNF1084

K DIGIC ASSY

SEMICONDUCTORS

IC1203, IC1209, IC1215, IC1218	AD1895AYRS
IC1202, IC1208, IC1214, IC1217	AK4117VF
IC1219	TC7S04FU
IC1221, IC1223, IC1225	TC7SH08FUS1
IC1201, IC1207, IC1213, IC1216	TC7WU04FU
Q1201	DTC124EUA
D1206, D1207	1SS355
D1205	NNCD6.2MF

SWITCHES AND RELAYS

S1201	VSH1025

CAPACITORS

C1204, C1222, C1240, C1255	CCSRCH220J50

Mark	No.	Description	Part No.
	C1202, C1220, C1238, C1253		CCSRCH221J50
	C1206, C1224, C1242, C1257		CCSRCH470J50
	C1210, C1211, C1216, C1218		CEJQ100M50
A	C1228, C1229, C1234, C1236		CEJQ100M50
	C1246, C1247, C1249, C1251		CEJQ100M50
	C1261, C1262, C1264, C1266		CEJQ100M50
	C1269, C1270		CEJQ100M50
	C1203, C1221, C1239, C1254, C1267		CKSRYB103K50
	C1271–C1278		CKSRYB103K50
	C1205, C1208, C1209, C1215, C1217		CKSRYB104K25
	C1223, C1226, C1227, C1233, C1235		CKSRYB104K25
	C1241, C1244, C1245, C1248, C1250		CKSRYB104K25
	C1256, C1259, C1260, C1263, C1265		CKSRYB104K25
	C1268, C1282, C1286, C1290-C1294		CKSRYB104K25
B	C1213		CKSRYB104K50
	C1201, C1219, C1237, C1252		CQMA221J50
	RESISTORS		
	R1239, R1240		RD1/2VM221J
	R1204, R1213, R1222, R1231		RD1/2VM820J
	R1263–R1265		RS1/10S0R0J
	Other Resistors		RS1/16S###J
	OTHERS		
C	CN1204	6P FFc CONNECTOR	52044-0645
	CN1201	7P FFC CONNECTOR	52045-0745
	CN1203	12P FFC CONNECTOR	52045-1245
	CN1202	24P FFC CONNECTOR	52045-2445
	JA1201	DIN CONNECTOR 5P	DKN1188
	CN1205	31P FFC CONNECTOR	DKN1451
	SHIELD CASE (MIDI)		DNH2736
	KN1203	SCREW PLATE	VNE1948
	KN1201	WRAPPING TERMINAL	VNF1084
	KN1202	WRAPPING TERMINAL	VNF1084
D	**L DIGIA ASSY**		
	OTHERS		
	CN1401	FFC BOTTOM CONNECTOR 7P	52492-0720
	JA1401, JA1402	2P PIN JACK	DKB1079
	M DIGIB ASSY		
	SEMICONDUCTORS		
	IC1307		AD1895AYRS
E	IC1308		AK4114VQ
	IC1303		TC74HCU04AF
	IC1312		TC7SET08FUS1
	IC1309–IC1311, IC1313		TC7SH08FUS1
	COILS AND FILTERS		
	F1301–F1304		DTF1069
	L1304		PTL1003
	F1305, F1306		VTF1091
	CAPACITORS		
F	C1330, C1332, C1334, C1347		CEAT100M50
	C1314		CEAT101M16
	C1318		CEAT470M16
	C1311, C1312		CKSRYB103K50

Mark	No.	Description	Part No.
	C1313, C1329, C1331, C1333, C1335		CKSRYB104K25
	C1340, C1342, C1344-C1346, C1348		CKSRYB104K25
	C1350		CKSRYB104K25
	C1304		CKSRYB474K10
	RESISTORS		
	R1301		RN1/16SE1802D
	Other Resistors		RS1/16S###J
	OTHERS		
	CN1301	24P FFC CONNECTOR	52045-2445
	CN1302	10P FF CONNECTOR	DKN1454
	JA1303	1P JACK BOARD	PKB1033
	KN1301	WRAPPING TERMINAL	VNF1084
	KN1302	WRAPPING TERMINAL	VNF1084
	N SLSW ASSY		
	SWITCHES AND RELAYS		
	S2401-S2404		VSH1025
	CAPACITORS		
	C2401-C2404		CKSRYB103K50
	RESISTORS		
	Other Resistors		RS1/16S###J
	OTHERS		
	CN2401	6P FFC CONNECTOR	52044-0645
	O HPAMP ASSY		
	SEMICONDUCTORS		
	⚠IC2505, IC2506		DEK1086
	⚠IC2504		DEK1094
	IC2503		NJM2068M
	IC2502		NJM4558MD
	IC2501		PCM1742KE
	IC2507		TA78L12F
	Q2503, Q2504		2SB1238X
	Q2509		2SC2412K
	Q2505, Q2507		2SD1859X
	D2501–D2504, D2506–D2512		1SS355
	D2513		UDZS3R3(B)
	SWITCHES AND RELAYS		
	RY2501		VSR1008
	CAPACITORS		
	C2510, C2515		CCSRCH220J50
	C2540, C2541		CCSRCH471J50
	C2501, C2514		CCSRCH820J50
	C2519–C2522, C2526, C2534, C2535		CEAT100M50
	C2531, C2533, C2536, C2537		CEAT101M25
	C2524, C2528, C2542		CEAT221M25
	C2518, C2523		CEAT2R2M50

Mark No.	Description	Part No.
	C2532	CEAT470M25
	C2502–C2505, C2508, C2538, C2539	CKSRYB104K25
	C2506, C2507, C2509	CKSRYB104K50

RESISTORS

	R2501, R2513, R2515, R2532	RD1/2VM122J
	R2518, R2523	RD1/2VM221J
	R2504, R2524	RN1/16SE1001D
	R2509, R2528	RN1/16SE1802D
	R2516, R2519, R2533, R2535	RS2LMF270J
	Other Resistors	RS1/16S###J

OTHERS

	CN2501 KR CONNECTOR	B4B-PH-K
	CN2502 5P TOP POST	B5B-EH
	CN2503 16P FFC CONNECTOR	DKN1453

P HPJACK ASSY

COILS AND FILTERS

	F802–F804	VTF1093

CAPACITORS

	C809, C810	CKSRYB104K25

RESISTORS

	Other Resistors	RS1/16S###J

OTHERS

	CN9 KR CONNECTOR	B4B-PH-K
	JA10 HEADPHONE JACK	DKN1281

R ACSW ASSY

SWITCHES AND RELAYS

⚠	S1	DSA1031

CAPACITORS

⚠	C1	ACG7030

OTHERS

⚠	CN91 AMP U-P CONNECTOR 2P	2-178496-4
⚠	J0 CONNECTOR ASSY	DKP3768

6. ADJUSTMENT

• There is no information to be shown in this chapter.