

EXPLODED VIEW

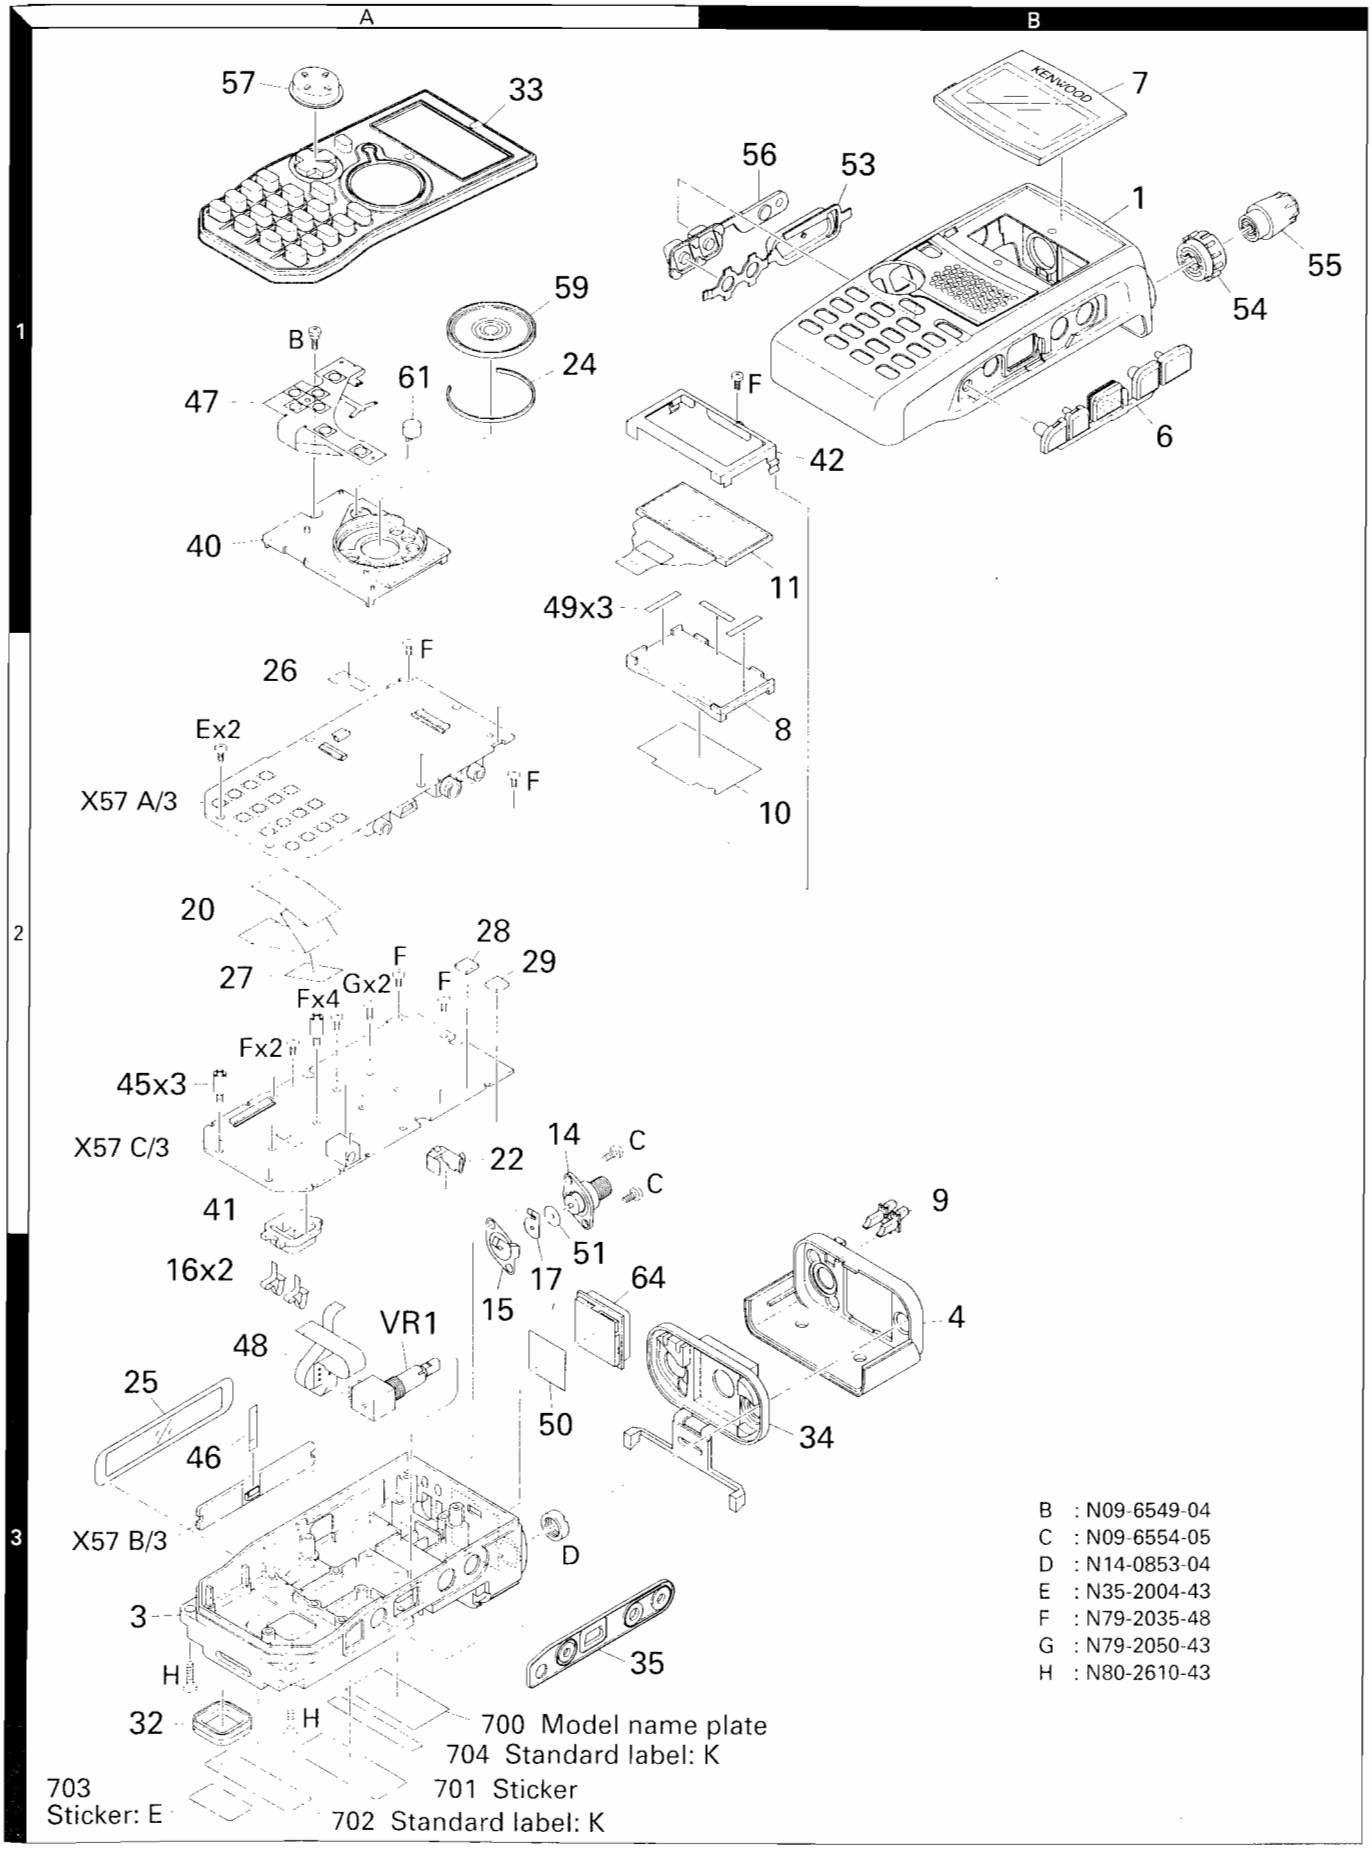

B : N09-6549-04
C : N09-6554-05
D : N14-0853-04
E : N35-2004-43
F : N79-2035-48
G : N79-2050-43
H : N80-2610-43

Parts with the exploded numbers larger than 700 are not supplied.

PACKING

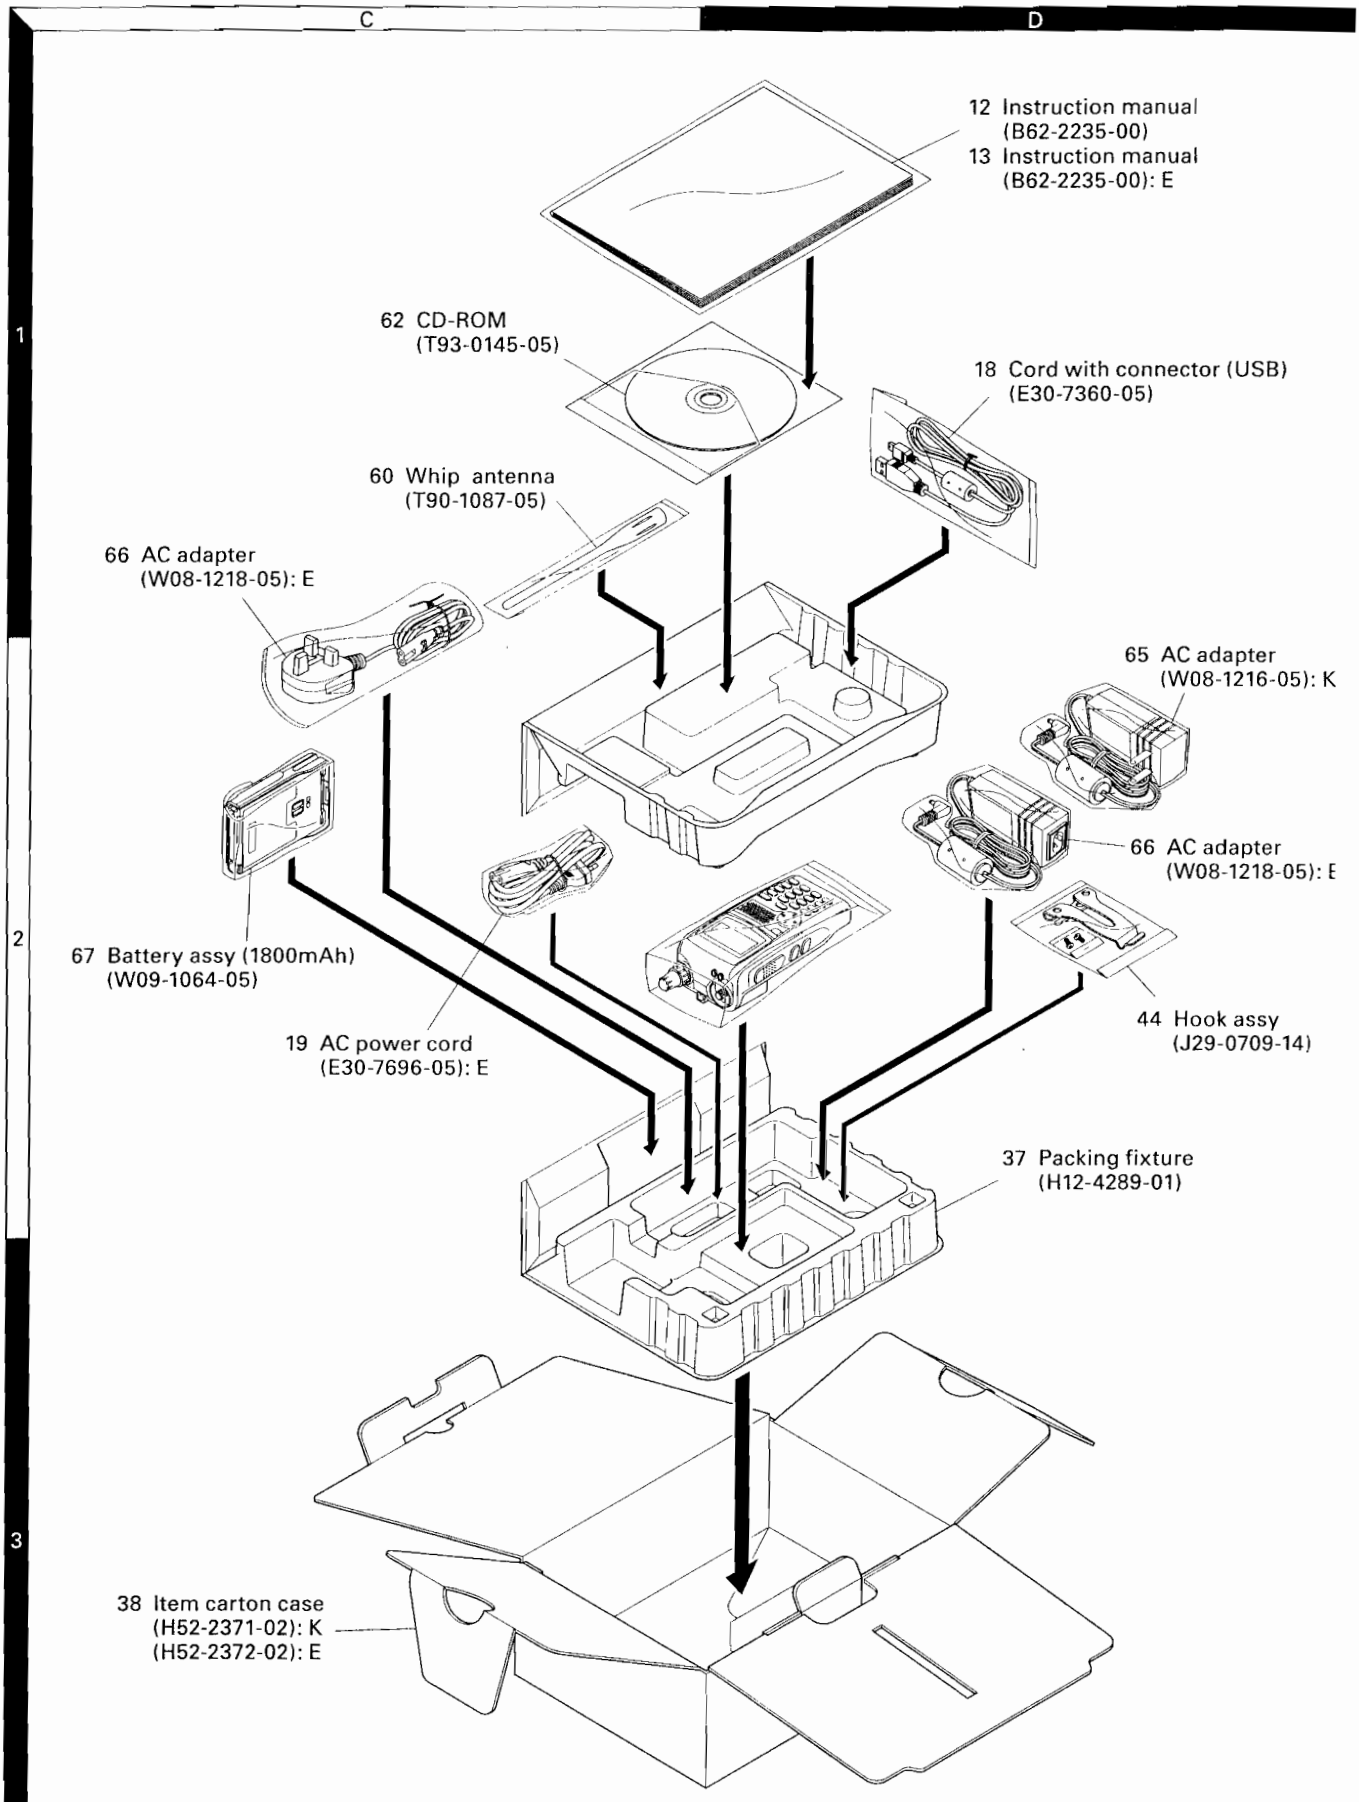

Parts with the exploded numbers larger than 700 are not supp

PARTS LIST

* New Parts. ⚠indicates safety critical components.
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

L : Scandinavia **K** : USA **P** : Canada
Y : PX (Far East, Hawaii) **T** : England **E** : Europe
C : China **X** : Australia **M** : Other Areas

TH-D72A/D72E
TX-RX UNIT (X57-784X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
TH-D72A/D72E					
1	1B		A02-4092-13	PLASTIC CABINET ASSY	
3	3A		A10-4137-01	CHASSIS	
4	3B		A62-1175-02	PANEL (TOP/REAR)	
6	1B		B09-0736-03	CAP (SP/MIC)	
7	1B	*	B10-2797-12	FRONT GLASS	
8	2B		B11-1872-02	ILLUMINATION GUIDE (LCD)	
9	2B		B11-1873-04	ILLUMINATION GUIDE (TX/BUSY)	
10	2B		B11-1884-04	FILTER (LCD)	
11	1B		B38-0923-05	LCD ASSY (LCD)	
12	1D		B62-2235-00	INSTRUCTION MANUAL	
12	1D		B62-2236-00	INSTRUCTION MANUAL	E
14	2A		E04-0482-05	RF COAXIAL RECEPTACLE (SMA)	
15	3A		E23-1343-04	GROUND TERMINAL	
16	3A		E29-1227-04	TERMINAL (BATTERY)	
17	2A		E29-1228-04	TERMINAL (ANT)	
18	1D		E30-7360-05	CORD WITH CONNECTOR (USB)	
19	2C		E30-7696-05	AC POWER CORD	E
20	2A		E37-1477-05	FLAT CABLE (26PIN)	
22	2A		G02-1863-04	EARTH SPRING (DC IN)	
24	1A		G11-4503-04	RUBBER CUSHION (SP)	
25	3A		G11-4504-04	SHEET (PTT)	
26	2A		G11-4547-04	SHEET (LED)	
27	2A	*	G11-4551-04	SHEET (FFC 26P)	
28	2A		G13-1933-04	CUSHION (SP/MIC)	
32	3A		G53-1842-04	PACKING (TERMINAL)	
33	1A		G53-1843-01	PACKING (CHASSIS)	
34	3B		G53-1844-02	PACKING (TOP)	
35	3A		G53-1848-03	PACKING (SP/MIC/USB)	
37	2D	*	H12-4289-01	PACKING FIXTURE	
38	3C	*	H52-2371-02	ITEM CARTON CASE	K
38	3C	*	H52-2372-02	ITEM CARTON CASE	E
40	1A		J19-5535-02	HOLDER (SP)	
41	2A		J19-5536-03	HOLDER (TERMINAL)	
42	1B		J21-8618-03	MOUNTING HARDWARE (LCD)	
44	2D		J29-0709-14	BELT CLIP ASSY ACCESSORY	
45	2A	*	J32-0954-14	CYLINDRICAL BOSS	
46	3A		J87-0027-05	FPC (LEAD FREE) (PTT)	
47	1A	*	J87-0035-05	FPC (LEAD FREE) (SP/MIC)	
48	3A	*	J87-0036-15	FPC (LEAD FREE) (GPS/VOL)	
49	1A,1B		J99-0714-04	ADHESIVE SHEET (LCD)	
50	3A		J99-0749-04	ADHESIVE SHEET (GPS UNIT)	
51	2A		J99-0761-04	ADHESIVE SHEET (SMA)	
53	1B		K29-9457-03	KNOB (PTT)	
54	1B		K29-9458-03	KNOB (VOL)	
55	1B		K29-9459-13	KNOB (ENC)	
56	1B		K29-9460-03	BUTTON KNOB (PTT/MON/LAMP)	
57	1A		K29-9464-03	BUTTON KNOB (CROSS)	
B	1A		N09-6549-04	STEPPED SCREW (SP HOLDER)	
C	2A		N09-6554-05	PAN HEAD SCREW (SMA)	
D	3A		N14-0853-04	CIRCULAR NUT (VOL/ENC)	
E	2A		N35-2004-43	BINDING HEAD MACHINE SCREW	
F	2A,1B		N79-2035-48	PAN HEAD TAPTITE SCREW (PCB)	
G	2A		N79-2050-43	PAN HEAD TAPTITE SCREW (FET)	
H	3A		N80-2610-43	PAN HEAD TAPTITE (SCREW CASE)	
VR1	3A		R39-0604-05	VARIABLE RESISTOR (VOL/ENC)	
59	1A		T07-0266-25	SPEAKER	
60	1C		T90-1087-05	WHIP ANTENNA ACCESSORY	
61	1A		T91-0579-05	MIC ELEMENT	
62	1C		T93-0145-05	CD-ROM ACCESSORY	
64	3A		W02-3747-05	GPS MODULE	
65	2D		W08-1216-05	AC ADAPTER ACCESSORY	K
66	2C,2D		W08-1218-05	AC ADAPTER ACCESSORY	E
BA1			W09-0971-05	LITHIUM CELL	
67	2C		W09-1064-05	BATTERY ASSY (1800mAh)	
TX-RX UNIT (X57-784X-XX) 0-11: K, 2-71: E					
D709			B30-2278-05	LED (RED/YELLOW)	
D710-715			B30-2215-05	LED (YELLOW)	
D717			B30-2278-05	LED (RED/YELLOW)	
D718-723			B30-2215-05	LED (YELLOW)	
C1-4			CK73HB1A104K	CHIP C 0.10UF K	
C8			CK73HB1H471K	CHIP C 470PF K	
C15			CK73HB1H102K	CHIP C 1000PF K	
C17			CK73HB1H102K	CHIP C 1000PF K	
C19			CK73HB1A104K	CHIP C 0.10UF K	
C21			CC73HCH1H030B	CHIP C 3.0PF B	
C24			CK73HB1H102K	CHIP C 1000PF K	
C25			CC73HCH1H020B	CHIP C 2.0PF B	
C28			CK73HB1A104K	CHIP C 0.10UF K	
C29			CC73HCH1H020B	CHIP C 2.0PF B	
C30			CC73HCH1H030B	CHIP C 3.0PF B	
C31			CC73HCH1H471J	CHIP C 470PF J	
C33			CK73HB1A104K	CHIP C 0.10UF K	
C34			CC73HCH1H020B	CHIP C 2.0PF B	
C35			CK73HB1H471K	CHIP C 470PF K	
C37			CK73HB1A104K	CHIP C 0.10UF K	
C38			CK73HB1H471K	CHIP C 470PF K	
C39			CK73HB1H102K	CHIP C 1000PF K	
C40			CK73HB1H471K	CHIP C 470PF K	
C41			CC73HCH1H050B	CHIP C 5.0PF B	
C42			CK73HB1A104K	CHIP C 0.10UF K	
C44			CK73HB1A104K	CHIP C 0.10UF K	
C46,47			CC73HCH1H030B	CHIP C 3.0PF B	
C48			CC73HCH1H020B	CHIP C 2.0PF B	
C49,50			CK73HB1H102K	CHIP C 1000PF K	
C53,54			CK73HB1H102K	CHIP C 1000PF K	
C55			CC73HCH1H471J	CHIP C 470PF J	
C58,59			CC73HCH1H020B	CHIP C 2.0PF B	
C60			CK73HB1H102K	CHIP C 1000PF K	
C62			CC73HCH1H0R5B	CHIP C 0.5PF B	
C63			CK73HB1H102K	CHIP C 1000PF K	
C64			CC73HCH1H120G	CHIP C 12PF G	
C65			CC73HCH1H1R5B	CHIP C 1.5PF B	
C66,67			CK73HB1H471K	CHIP C 470PF K	
C68,69			CK73HB1H102K	CHIP C 1000PF K	

K : TH-D72A
E : TH-D72E

PARTS LIST

TX-RX UNIT (X57-784X-XX)

Ref. No.	Address	New parts	Parts No.	Description			Destination
C70,71			CC73HCH1H020B	CHIP C	2.0PF	B	
C74,75			CC73HCH1H010B	CHIP C	1.0PF	B	
C76,77			CC73HCH1H050B	CHIP C	5.0PF	B	
C78-80			CK73HB1E103K	CHIP C	0.010UF	K	
C81-84			CK73HB1H471K	CHIP C	470PF	K	
C85			CK73HB1E103K	CHIP C	0.010UF	K	
C86,87			CC73HCH1H070B	CHIP C	7.0PF	B	
C88,89			CK73HB1H102K	CHIP C	1000PF	K	
C90,91			CK73HB1H471K	CHIP C	470PF	K	
C92			CC73HCH1H020B	CHIP C	2.0PF	B	
C93-95			CK73HB1H102K	CHIP C	1000PF	K	
C96			CC73HCH1H050B	CHIP C	5.0PF	B	
C97			CK73HB1H102K	CHIP C	1000PF	K	
C98-101			CK73HB1H471K	CHIP C	470PF	K	
C102,103			CK73HB1H102K	CHIP C	1000PF	K	
C104,105			CK73HB1H471K	CHIP C	470PF	K	
C107			CK73HB1H471K	CHIP C	470PF	K	
C108,109			CK73HB1H102K	CHIP C	1000PF	K	
C111-113			CK73HB1H102K	CHIP C	1000PF	K	
C114-117			CK73HB1H471K	CHIP C	470PF	K	
C118,119			CK73HB1H102K	CHIP C	1000PF	K	
C120,121			CC73HCH1H020B	CHIP C	2.0PF	B	
C122,123			CC73HCH1H050B	CHIP C	5.0PF	B	
C126			CK73HB1H471K	CHIP C	470PF	K	
C127			CC73HCH1H070B	CHIP C	7.0PF	B	
C129			CK73HB1H471K	CHIP C	470PF	K	
C130			CC73HCH1H070B	CHIP C	7.0PF	B	
C131,132			CK73HB1H471K	CHIP C	470PF	K	
C136,137			CK73HB1H102K	CHIP C	1000PF	K	
C138			CK73HB1H471K	CHIP C	470PF	K	
C140			CK73HB1H471K	CHIP C	470PF	K	
C141,142			CK73HB1H102K	CHIP C	1000PF	K	
C144			CK73HB1H102K	CHIP C	1000PF	K	
C145-148			CK73HB1H471K	CHIP C	470PF	K	
C149-151			CK73HB1H102K	CHIP C	1000PF	K	
C152,153			CK73HB1H471K	CHIP C	470PF	K	
C154,155			CK73HB1H102K	CHIP C	1000PF	K	
C157,158			CK73HB1H102K	CHIP C	1000PF	K	
C159,160			CK73HB1H471K	CHIP C	470PF	K	
C161			CC73HCH1H560J	CHIP C	56PF	J	
C162,163			CK73HB1H102K	CHIP C	1000PF	K	
C164			CC73HCH1H020B	CHIP C	2.0PF	B	
C165			CC73HCH1H820J	CHIP C	82PF	J	
C166			CC73HCH1H030B	CHIP C	3.0PF	B	
C167			CC73HCH1H150G	CHIP C	15PF	G	
C168			CC73HCH1H181J	CHIP C	180PF	J	
C169			CC73HCH1H270G	CHIP C	27PF	G	
C170			CK73HB1H471K	CHIP C	470PF	K	
C171			CC73HCH1H1R5B	CHIP C	1.5PF	B	
C201			CC73HCH1H1R5B	CHIP C	1.5PF	B	
C202			CC73HCH1H100D	CHIP C	10PF	D	
C204			CC73HCH1H330J	CHIP C	33PF	J	
C205			CK73HB1H471K	CHIP C	470PF	K	
C206,207			CK73HB1H102K	CHIP C	1000PF	K	
C210			CC73HCH1H120G	CHIP C	12PF	G	
C212			CC73HCH1H100D	CHIP C	10PF	D	
C214			CC73HCH1H220G	CHIP C	22PF	G	
C216			CC73HCH1H100D	CHIP C	10PF	D	
C217			CC73HCH1H080B	CHIP C	8.0PF	B	
C218			CC73HCH1H180G	CHIP C	18PF	G	

Ref. No.	Address	New parts	Parts No.	Description			
C219			CK73HB1H102K	CHIP C	1000PF	K	E
C221-223			CK73HB1H102K	CHIP C	1000PF	K	
C224,225			CK73HB1H471K	CHIP C	470PF	K	
C226			CK73HB1E103K	CHIP C	0.010UF	K	
C227,228			CK73HB1H471K	CHIP C	470PF	K	
C229			CK73HB1H102K	CHIP C	1000PF	K	
C230			CC73HCH1H100D	CHIP C	10PF	D	
C231			CK73HB1H102K	CHIP C	1000PF	K	
C232,233			CK73HB1H471K	CHIP C	470PF	K	
C235,236			CK73HB1H471K	CHIP C	470PF	K	
C237			CK73HB1H102K	CHIP C	1000PF	K	
C238			CK73HB1A154K	CHIP C	0.15UF	K	
C239			CC73HCH1H150J	CHIP C	15PF	J	
C240			CK73HB1H471K	CHIP C	470PF	K	
C241,242			CK73HB1H102K	CHIP C	1000PF	K	
C243			CC73HCH1H471J	CHIP C	470PF	J	
C244,245			CK73HB1H471K	CHIP C	470PF	K	
C246			CK73HB1H102K	CHIP C	1000PF	K	
C247			CK73HB1H471K	CHIP C	470PF	K	
C248			CC73HCH1H101J	CHIP C	100PF	J	
C249			CK73HB1H102K	CHIP C	1000PF	K	
C250			CK73HB1E103K	CHIP C	0.010UF	K	
C251			CK73HB1H102K	CHIP C	1000PF	K	
C253			CS77CP1A100M	CHIP TNTL	10UF	10WV	
C254			CK73HB1H471K	CHIP C	470PF	K	
C255			CK73HB1E103K	CHIP C	0.010UF	K	
C256			CC73HCH1H101J	CHIP C	100PF	J	
C257			CK73HB1H471K	CHIP C	470PF	K	
C258			CC73HCH1H100B	CHIP C	10PF	B	
C259			CK73HB1E103K	CHIP C	0.010UF	K	
C260			CC73HCH1H471J	CHIP C	470PF	J	
C261			CS77CP1A100M	CHIP TNTL	10UF	10WV	
C262			CC73HCH1H101J	CHIP C	100PF	J	
C263			CK73HB1E103K	CHIP C	0.010UF	K	
C264,265			CC73HCH1H471J	CHIP C	470PF	J	
C266			CK73HB1H102K	CHIP C	1000PF	K	
C267			CK73HB1H471K	CHIP C	470PF	K	
C268			CK73HB1E103K	CHIP C	0.010UF	K	
C269			CK73HB1H102K	CHIP C	1000PF	K	
C270			CK73HB1E103K	CHIP C	0.010UF	K	
C271			CK73HB1H471K	CHIP C	470PF	K	
C272,273			CC73HCH1H471J	CHIP C	470PF	J	
C274			CC73GCH1H270J	CHIP C	27PF	J	
C275			CC73GCH1H330J	CHIP C	33PF	J	
C276			CC73GCH1H060B	CHIP C	6.0PF	B	
C277			CC73GCH1H390J	CHIP C	39PF	J	
C278			CC73GCH1H390G	CHIP C	39PF	G	
C279			CC73GCH1H390J	CHIP C	39PF	J	
C280,281			CK73HB1H471K	CHIP C	470PF	K	
C282			CK73HB1A104K	CHIP C	0.10UF	K	
C283			CC73GCH1H330J	CHIP C	33PF	J	
C284			CC73GCH1H560J	CHIP C	56PF	J	
C285			CC73GCH1H101J	CHIP C	100PF	J	
C286			CC73GCH1H270G	CHIP C	27PF	G	
C287			CK73GB1E105K	CHIP C	1.0UF	K	
C288			CC73GCH1H560J	CHIP C	56PF	J	
C289			CC73GCH1H070B	CHIP C	7.0PF	B	
C290			CC73GCH1H470J	CHIP C	47PF	J	
C291			CC73HCH1H470J	CHIP C	47PF	J	
C292			CK73HB1H102K	CHIP C	1000PF	K	

K :
E :

PARTS LIST

TX-RX UNIT (X57-784X-XX)

Ref. No.	Address	New parts	Parts No.	Description			Destination
C293			CC73GCH1H270J	CHIP C	27PF	J	
C294			CK73HB1H102K	CHIP C	1000PF	K	
C295			CC73GCH1H101J	CHIP C	100PF	J	
C296			CK73HB1E103K	CHIP C	0.010UF	K	
C297			CC73GCH1H102J	CHIP C	1000PF	J	
C299			CC73HCH1H470J	CHIP C	47PF	J	
C300			CK73GB1H102K	CHIP C	1000PF	K	
C301,302			CC73GCH1H471J	CHIP C	470PF	J	
C303			CC73GCH1H102J	CHIP C	1000PF	J	
C304			CC73GCH1H220J	CHIP C	22PF	J	
C305			CC73GCH1H390J	CHIP C	39PF	J	
C307			CC73GCH1H102J	CHIP C	1000PF	J	
C308			CC73GCH1H020B	CHIP C	2.0PF	B	
C309			CC73GCH1H270J	CHIP C	27PF	J	
C310			CC73GCH1H220J	CHIP C	22PF	J	
C311			CC73GCH1H070B	CHIP C	7.0PF	B	
C312			CC73HCH1H471J	CHIP C	470PF	J	
C313			CC73HCH1H180J	CHIP C	18PF	J	
C314			CC73GCH1H020B	CHIP C	2.0PF	B	
C315			CC73GCH1H220J	CHIP C	22PF	J	
C316			CC73GCH1H560G	CHIP C	56PF	G	
C317			CC73GCH1H220J	CHIP C	22PF	J	
C318			CC73GCH1H080B	CHIP C	8.0PF	B	
C319			CC73HCH1H180J	CHIP C	18PF	J	
C320			CC73GCH1H120G	CHIP C	12PF	G	
C321			CC73GCH1H220J	CHIP C	22PF	J	
C323			CC73GCH1H220G	CHIP C	22PF	G	
C325			CC73GCH1H040B	CHIP C	4.0PF	B	
C326			CC73GCH1H020B	CHIP C	2.0PF	B	
C327			CC73GCH1H080B	CHIP C	8.0PF	B	
C328,329			CC73GCH1H020B	CHIP C	2.0PF	B	
C331			C93-0758-05	CHIP C	27PF	J	
C332			CC73GCH1H1R5B	CHIP C	1.5PF	B	
C333			CC73GCH1H020B	CHIP C	2.0PF	B	
C334			CC73GCH1H030B	CHIP C	3.0PF	B	
C336			CC73GCH1H040B	CHIP C	4.0PF	B	
C351			CK73HB1A104K	CHIP C	0.10UF	K	
C352			CK73HB1E104K	CHIP C	0.10UF	K	
C353			CK73HB1A104K	CHIP C	0.10UF	K	
C355			CK73HB1A104K	CHIP C	0.10UF	K	
C356			CK73HB1H102K	CHIP C	1000PF	K	
C357			CK73HB1A104K	CHIP C	0.10UF	K	
C358			CK73HB1H102K	CHIP C	1000PF	K	
C360			CK73HB1A105K	CHIP C	1.0UF	K	
C361			CC73HCH1H560J	CHIP C	56PF	J	
C362			CK73HB1H102K	CHIP C	1000PF	K	
C363			CK73HB1E103K	CHIP C	0.010UF	K	
C364			CK73HB1A104K	CHIP C	0.10UF	K	
C366,367			CK73HB1A104K	CHIP C	0.10UF	K	
C368			CK73HB1A105K	CHIP C	1.0UF	K	
C369,370			CK73HB1A104K	CHIP C	0.10UF	K	
C371			CK73HB1A105K	CHIP C	1.0UF	K	
C372			CK73HB1A104K	CHIP C	0.10UF	K	
C373			CC73HCH1H101J	CHIP C	100PF	J	
C374			CK73HB1H102K	CHIP C	1000PF	K	
C375			CK73HB1E103K	CHIP C	0.010UF	K	
C376,377			CC73HCH1H181J	CHIP C	180PF	J	
C378			CC73HCH1H101J	CHIP C	100PF	J	
C379			CK73HB1H102K	CHIP C	1000PF	K	
C380,381			CC73HCH1H181J	CHIP C	180PF	J	

Ref. No.	Address	New parts	Parts No.	Description			Destination
C382,383			CK73HB1A104K	CHIP C	0.10UF	K	
C384			CC73HCH1H101J	CHIP C	100PF	J	
C385			CC73HCH1H220G	CHIP C	22PF	G	
C386			CK73HB1A104K	CHIP C	0.10UF	K	
C387			CK73GB1E105K	CHIP C	1.0UF	K	
C388			CC73HCH1H050C	CHIP C	5.0PF	C	
C389,390			CK73HB1A104K	CHIP C	0.10UF	K	
C391			CC73HCH1H101J	CHIP C	100PF	J	
C392,393			CK73HB1A104K	CHIP C	0.10UF	K	
C394			CC73HCH1H220G	CHIP C	22PF	G	
C395			CK73HB1A104K	CHIP C	0.10UF	K	
C396			CK73GB1E105K	CHIP C	1.0UF	K	
C397,398			CK73HB1A104K	CHIP C	0.10UF	K	
C399			CC73HCH1H090D	CHIP C	9.0PF	D	
C400,401			CK73HB1A104K	CHIP C	0.10UF	K	
C402			CC73HCH1H180J	CHIP C	18PF	J	
C403			CK73HB1H102K	CHIP C	1000PF	K	
C404			CC73HCH1H090D	CHIP C	9.0PF	D	
C405			CK73HB1A104K	CHIP C	0.10UF	K	
C406			CS77CP1A100M	CHIP TNTL	10UF	10WV	
C407,408			CK73HB1A104K	CHIP C	0.10UF	K	
C409			CK73HB1H102K	CHIP C	1000PF	K	
C411			CS77CP1A100M	CHIP TNTL	10UF	10WV	
C412			CK73HB1A104K	CHIP C	0.10UF	K	
C414,415			CK73HB1A104K	CHIP C	0.10UF	K	
C416,417			CC73HCH1H120G	CHIP C	12PF	G	
C418,419			CK73HB1A104K	CHIP C	0.10UF	K	
C423,424			CC73HCH1H0R5B	CHIP C	0.5PF	B	
C425			CC73HCH1H1R5B	CHIP C	1.5PF	B	
C431			CK73HB1H471K	CHIP C	470PF	K	
C432			CK73HB1A104K	CHIP C	0.10UF	K	
C433			CK73HB1E103K	CHIP C	0.010UF	K	
C434			CC73HCH1H030B	CHIP C	3.0PF	B	
C435			CC73HCH1H060B	CHIP C	6.0PF	B	
C436			CK73HB1E103K	CHIP C	0.010UF	K	
C437			C93-1803-05	CHIP C	10UF	M	
C438			CK73HB1H471K	CHIP C	470PF	K	
C439			CS77CP1A100M	CHIP TNTL	10UF	10WV	
C440			CK73HB1H102K	CHIP C	1000PF	K	
C442			CK73HB1H102K	CHIP C	1000PF	K	
C444			CK73HB1H102K	CHIP C	1000PF	K	
C445			CS77CA1VR22M	CHIP TNTL	0.22UF	35WV	
C446			CK73HB1H102K	CHIP C	1000PF	K	
C447			CC73HCH1H070B	CHIP C	7.0PF	B	
C448			CS77CP1A4R7M	CHIP TNTL	4.7UF	10WV	
C449			CC73HCH1H010B	CHIP C	1.0PF	B	
C450			CS77CA1VR22M	CHIP TNTL	0.22UF	35WV	
C451			CC73HCH1H050B	CHIP C	5.0PF	B	
C452			CC73HCH1H220G	CHIP C	22PF	G	
C453			CS77CA1VR22M	CHIP TNTL	0.22UF	35WV	
C454			CC73HCH1H030B	CHIP C	3.0PF	B	
C455			CK73HB1H102K	CHIP C	1000PF	K	
C456			CC73HCH1H050B	CHIP C	5.0PF	B	
C457			CC73HCH1H070B	CHIP C	7.0PF	B	
C458			CC73HCH1H090B	CHIP C	9.0PF	B	
C459			CK73HB1H102K	CHIP C	1000PF	K	
C460			CC73HCH1H270G	CHIP C	27PF	G	
C461			CC73HCH1H100D	CHIP C	10PF	D	
C462			CK73HB1H471K	CHIP C	470PF	K	
C463			CC73HCH1H101J	CHIP C	100PF	J	

K : TH-D72A
E : TH-D72E

PARTS LIST

TX-RX UNIT (X57-784X-XX)

Ref. No.	Address	New parts	Parts No.	Description			Destination
C464			CC73HCH1H820J	CHIP C	82PF	J	
C465			CC73HCH1H120J	CHIP C	12PF	J	
C466			CS77CA1A220M	CHIP TNTL	22UF	10WV	
C467			CC73HCH1H010B	CHIP C	1.0PF	B	
C469,470			CK73HB1H102K	CHIP C	1000PF	K	
C471,472			CC73HCH1H150G	CHIP C	15PF	G	
C473			CC73HCH1H050C	CHIP C	5.0PF	C	
C475			CK73HB1H102K	CHIP C	1000PF	K	
C476			CC73HCH1H0R5B	CHIP C	0.5PF	B	
C477			CK73HB1H102K	CHIP C	1000PF	K	
C479			CK73HB1H102K	CHIP C	1000PF	K	
C480			CK73HB1A104K	CHIP C	0.10UF	K	
C481			CC73HCH1H220J	CHIP C	22PF	J	
C482			CK73HB1H102K	CHIP C	1000PF	K	
C483			CK73HB1H221K	CHIP C	220PF	K	
C484			CC73HCH1H050B	CHIP C	5.0PF	B	
C485			CC73HCH1H220G	CHIP C	22PF	G	
C486			CK73HB1E103K	CHIP C	0.010UF	K	
C487			CK73HB1H471K	CHIP C	470PF	K	
C488			CK73HB1A104K	CHIP C	0.10UF	K	
C489			CC73HCH1H100C	CHIP C	10PF	C	
C490			CK73HB1H471K	CHIP C	470PF	K	
C491			CK73HB1E103K	CHIP C	0.010UF	K	
C492			CK73HB1H102K	CHIP C	1000PF	K	
C493,494			CK73HB1H471K	CHIP C	470PF	K	
C495			CC73HCH1H100C	CHIP C	10PF	C	
C496			CC73HCH1H080B	CHIP C	8.0PF	B	
C497			CC73HCH1H100D	CHIP C	10PF	D	
C498			CC73HCH1H030B	CHIP C	3.0PF	B	
C499			CC73HCH1H220J	CHIP C	22PF	J	
C511-514			CS77CP1A100M	CHIP TNTL	10UF	10WV	
C515			CK73HB1H471K	CHIP C	470PF	K	
C517			CK73HB1H471K	CHIP C	470PF	K	
C520			CK73HB1H102K	CHIP C	1000PF	K	
C521			CK73HB1A104K	CHIP C	0.10UF	K	
C522			CK73HB1H102K	CHIP C	1000PF	K	
C523			CK73HB1E103K	CHIP C	0.010UF	K	
C524			CS77CP1A100M	CHIP TNTL	10UF	10WV	
C526			CS77CP1A100M	CHIP TNTL	10UF	10WV	
C527			CC73HCH1H030B	CHIP C	3.0PF	B	
C528			CS77CA1A220M	CHIP TNTL	22UF	10WV	
C529			C93-1803-05	CHIP C	10UF	M	
C530			CK73HB1H471K	CHIP C	470PF	K	
C531			CC73HCH1H060B	CHIP C	6.0PF	B	
C532			CK73HB1H102K	CHIP C	1000PF	K	
C533,534			CK73HB1E103K	CHIP C	0.010UF	K	
C535			CK73HB1H102K	CHIP C	1000PF	K	
C536			CK73GB1E105K	CHIP C	1.0UF	K	
C539			CK73HB1H102K	CHIP C	1000PF	K	
C540			CC73HCH1H101J	CHIP C	100PF	J	
C541			CS77CP1A100M	CHIP TNTL	10UF	10WV	
C542			CK73HB1H102K	CHIP C	1000PF	K	
C544			CS77CA1VR22M	CHIP TNTL	0.22UF	35WV	
C545,546			CK73HB1H102K	CHIP C	1000PF	K	
C547			CS77CA1VR22M	CHIP TNTL	0.22UF	35WV	
C548,549			CK73HB1H102K	CHIP C	1000PF	K	
C550			CS77CP1A4R7M	CHIP TNTL	4.7UF	10WV	
C551			CK73HB1H102K	CHIP C	1000PF	K	
C552			CC73HCH1H080B	CHIP C	8.0PF	B	
C553			CS77CA1VR22M	CHIP TNTL	0.22UF	35WV	

Ref. No.	Address	New parts	Parts No.	Description			
C554			CC73HCH1H150G	CHIP C	15PF	G	
C556			CK73HB1H102K	CHIP C	1000PF	K	
C557			CC73HCH1H030B	CHIP C	3.0PF	B	
C558			CC73HCH1H180G	CHIP C	18PF	G	
C559			CK73HB1H102K	CHIP C	1000PF	K	
C561			CK73HB1H471K	CHIP C	470PF	K	
C562			CC73HCH1H220G	CHIP C	22PF	G	
C563			CC73HCH1H100B	CHIP C	10PF	B	
C564			CK73HB1H102K	CHIP C	1000PF	K	
C565			CK73HB1E103K	CHIP C	0.010UF	K	
C566			CK73HB1H471K	CHIP C	470PF	K	
C567			CC73HCH1H220G	CHIP C	22PF	G	
C569			CC73HCH1H680G	CHIP C	68PF	G	
C571			CC73HCH1H010B	CHIP C	1.0PF	B	
C572			CC73HCH1H050B	CHIP C	5.0PF	B	
C573			CK73HB1C223K	CHIP C	0.022UF	K	
C574			CC73HCH1H020C	CHIP C	2.0PF	C	
C575			CC73HCH1H0R5B	CHIP C	0.5PF	B	
C576			CC73HCH1H390G	CHIP C	39PF	G	
C577			CK73HB1A474K	CHIP C	0.47UF	K	
C578			CK73HB1C223K	CHIP C	0.022UF	K	
C579			CC73HCH1H030B	CHIP C	3.0PF	B	
C580			CC73HCH1H0R5B	CHIP C	0.5PF	B	
C581			CK73HB1H471K	CHIP C	470PF	K	
C582			CC73HCH1H070B	CHIP C	7.0PF	B	
C583			CC73HCH1H120G	CHIP C	12PF	G	
C584			CC73HCH1H090B	CHIP C	9.0PF	B	
C585			CC73HCH1H030B	CHIP C	3.0PF	B	
C587			CC73HCH1H0R5B	CHIP C	0.5PF	B	
C588			CK73HB1H102K	CHIP C	1000PF	K	
C589			CC73HCH1H0R5B	CHIP C	0.5PF	B	
C590			CK73HB1H102K	CHIP C	1000PF	K	
C594			CC73HCH1H220J	CHIP C	22PF	J	
C595			CK73HB1H102K	CHIP C	1000PF	K	
C611,612			CK73HB1H102K	CHIP C	1000PF	K	
C614,615			CK73HB1H102K	CHIP C	1000PF	K	
C616			CK73HB1H471K	CHIP C	470PF	K	
C617			CK73HB1H102K	CHIP C	1000PF	K	
C618			CK73HB1A105K	CHIP C	1.0UF	K	
C619			CK73HB1E103K	CHIP C	0.010UF	K	
C620			CK73GB0J106K	CHIP C	10UF	K	
C621-631			CK73HB1H102K	CHIP C	1000PF	K	
C621-633			CK73HB1H102K	CHIP C	1000PF	K	
C633			CK73HB1H102K	CHIP C	1000PF	K	
C634			CK73FB1C106K	CHIP C	10UF	K	
C635,636			CK73HB1H471K	CHIP C	470PF	K	
C637		*	CK73EB1C226M	CHIP C	22UF	M	
C638			CC73HCH1H220J	CHIP C	22PF	J	
C641			CK73HB1H102K	CHIP C	1000PF	K	
C642			CC73HCH1H101J	CHIP C	100PF	J	
C643-648			CK73HB1H102K	CHIP C	1000PF	K	
C649			CK73HB1E103K	CHIP C	0.010UF	K	
C650			CK73GB1H104K	CHIP C	0.10UF	K	
C651		*	CK73EB1C226M	CHIP C	22UF	M	
C652			CK73HB1A105K	CHIP C	1.0UF	K	
C653			CK73EB1E106K	CHIP C	10UF	K	
C654			CK73HB1A105K	CHIP C	1.0UF	K	
C655			CK73HB1H471K	CHIP C	470PF	K	
C656			CK73EB1E106K	CHIP C	10UF	K	
C657			CK73GB1H104K	CHIP C	0.10UF	K	

K :
E :

PARTS LIST

TX-RX UNIT (X57-784X-XX)

Ref. No.	Address	New parts	Parts No.	Description			Destination
C658			CK73EB1E106K	CHIP C	10UF	K	
C659			CK73GB1E105K	CHIP C	1.0UF	K	
C660			CK73GB1H104K	CHIP C	0.10UF	K	
C661			CC73HCH1H151J	CHIP C	150PF	J	
C662			CK73FB1C106K	CHIP C	10UF	K	
C663,664			CK73GB1H104K	CHIP C	0.10UF	K	
C665			CK73FB1C106K	CHIP C	10UF	K	
C666			CK73HB1H102K	CHIP C	1000PF	K	
C667			CK73FB1C106K	CHIP C	10UF	K	
C668			CK73HB1H102K	CHIP C	1000PF	K	
C669			CK73GB1H104K	CHIP C	0.10UF	K	
C670			CK73FB1C106K	CHIP C	10UF	K	
C671,672			CK73HB1H102K	CHIP C	1000PF	K	
C673			CK73GB1H104K	CHIP C	0.10UF	K	
C674			CK73HB1A105K	CHIP C	1.0UF	K	
C675			CK73HB1H102K	CHIP C	1000PF	K	
C676			CS77CP0J4R7M	CHIP TNTL	4.7UF	6.3WV	
C677-679			CK73HB1H102K	CHIP C	1000PF	K	
C681			CK73HB1H102K	CHIP C	1000PF	K	
C682			CS77CP0J4R7M	CHIP TNTL	4.7UF	6.3WV	
C683,684			CK73HB1A104K	CHIP C	0.10UF	K	
C685-687			CK73HB1H102K	CHIP C	1000PF	K	
C689			CK73HB1H102K	CHIP C	1000PF	K	
C691			CK73HB1H102K	CHIP C	1000PF	K	
C693,694			CK73HB1H102K	CHIP C	1000PF	K	
C695			CC73HCH1H090B	CHIP C	9.0PF	B	
C698			CC73HCH1H101J	CHIP C	100PF	J	
C701			CS77CC0J101M	CHIP TNTL	100UF	6.3WV	
C702			CK73HB1H102K	CHIP C	1000PF	K	
C703			CK73HB1H471K	CHIP C	470PF	K	
C704			CK73EB1E106K	CHIP C	10UF	K	
C705			CK73HB1E103K	CHIP C	0.010UF	K	
C706			CK73HB1A224K	CHIP C	0.22UF	K	
C707			CK73HB1E103K	CHIP C	0.010UF	K	
C708,709			CK73HB1A104K	CHIP C	0.10UF	K	
C710			CK73HB1H471K	CHIP C	470PF	K	
C711,712			CC73HCH1H101J	CHIP C	100PF	J	
C713			CK73GB1H104K	CHIP C	0.10UF	K	
C714			CK73HB1A104K	CHIP C	0.10UF	K	
C715			CK73HB1A105K	CHIP C	1.0UF	K	
C716			CK73HB1A104K	CHIP C	0.10UF	K	
C717,718			CK73GB1E105K	CHIP C	1.0UF	K	
C719			CK73HB1A104K	CHIP C	0.10UF	K	
C720			CC73HCH1H101J	CHIP C	100PF	J	
C721			CK73HB1H471K	CHIP C	470PF	K	
C722			CK73HB1A104K	CHIP C	0.10UF	K	
C723			CC73HCH1H101J	CHIP C	100PF	J	
C724			CK73HB1A104K	CHIP C	0.10UF	K	
C725-727			CK73GB1E105K	CHIP C	1.0UF	K	
C728			CK73HB1H471K	CHIP C	470PF	K	
C729			CC73HCH1H221J	CHIP C	220PF	J	
C730,731			CK73HB1A104K	CHIP C	0.10UF	K	
C732			CK73HB1H102K	CHIP C	1000PF	K	
C734			CK73HB1A104K	CHIP C	0.10UF	K	
C735			CK73HB1H102K	CHIP C	1000PF	K	E
C736,737			CK73GB1H104K	CHIP C	0.10UF	K	
C738			CK73HB1H471K	CHIP C	470PF	K	
C739			CK73GB1H104K	CHIP C	0.10UF	K	
C740			CK73HB1H471K	CHIP C	470PF	K	K
C740,741			CK73HB1H471K	CHIP C	470PF	K	E

Ref. No.	Address	New parts	Parts No.	Description			Destination
C742			CK73HB1H102K	CHIP C	1000PF	K	E
C743			CK73HB1A105K	CHIP C	1.0UF	K	
C744-746			CS77CP1C2R2M	CHIP TNTL	2.2UF	16WV	
C747			CK73HB1H102K	CHIP C	1000PF	K	
C748			CK73HB1A104K	CHIP C	0.10UF	K	
C749			CK73GB1E105K	CHIP C	1.0UF	K	
C750			CK73HB1H471K	CHIP C	470PF	K	
C751,752			CK73HB1A105K	CHIP C	1.0UF	K	
C753			CK73GB0J225K	CHIP C	2.2UF	K	
C754,755			CK73HB1H102K	CHIP C	1000PF	K	E
C756			CK73HB1A105K	CHIP C	1.0UF	K	
C757			CK73GB1E105K	CHIP C	1.0UF	K	
C758,759			CK73HB1A104K	CHIP C	0.10UF	K	
C760			CK73HB1H471K	CHIP C	470PF	K	
C761-763			CK73HB1A105K	CHIP C	1.0UF	K	
C764			CK73HB1H102K	CHIP C	1000PF	K	
C765			CK73HB1A104K	CHIP C	0.10UF	K	
C766-768			CK73HB1H471K	CHIP C	470PF	K	
C769			CK73HB1H102K	CHIP C	1000PF	K	
C771			C93-1803-05	CHIP C	10UF	M	
C772-774			CK73HB1E562K	CHIP C	5600PF	K	
C775			CK73HB1E103K	CHIP C	0.010UF	K	
C776			CK73HB1H102K	CHIP C	1000PF	K	
C777			CK73HB1H471K	CHIP C	470PF	K	
C778			CK73HB1A105K	CHIP C	1.0UF	K	
C779			CK73HB1H471K	CHIP C	470PF	K	
C781			CK73GB0J225K	CHIP C	2.2UF	K	
C782			CK73HB1C153K	CHIP C	0.015UF	K	
C783			CC73HCH1H390J	CHIP C	39PF	J	
C784			CK73HB1E562K	CHIP C	5600PF	K	
C785			CK73HB1C153K	CHIP C	0.015UF	K	
C786-789			CK73HB1H471K	CHIP C	470PF	K	
C790			CK73HB1H222K	CHIP C	2200PF	K	
C791			CK73HB1H471K	CHIP C	470PF	K	
C792-794			CK73HB1A104K	CHIP C	0.10UF	K	
C795			CK73HB1A105K	CHIP C	1.0UF	K	
C796			CK73HB1A224K	CHIP C	0.22UF	K	
C797,798			CK73HB1H102K	CHIP C	1000PF	K	
C799			CK73HB1H471K	CHIP C	470PF	K	
C800			CK73GB1H104K	CHIP C	0.10UF	K	
C801			CK73HB1A104K	CHIP C	0.10UF	K	
C802			CK73HB1C223K	CHIP C	0.022UF	K	
C804,805			CK73HB1H471K	CHIP C	470PF	K	
C806,807			CK73HB1A105K	CHIP C	1.0UF	K	
C808			CK73HB1C473K	CHIP C	0.047UF	K	
C809			CK73HB1E562K	CHIP C	5600PF	K	
C810			CK73HB1A393K	CHIP C	0.039UF	K	
C811			CK73HB1A154K	CHIP C	0.15UF	K	
C812,813			CK73HB1E103K	CHIP C	0.010UF	K	
C814			CK73HB1H471K	CHIP C	470PF	K	
C815,816			CC73HCH1H040C	CHIP C	4.0PF	C	
C817			CK73HB1A104K	CHIP C	0.10UF	K	
C818			CK73HB1H471K	CHIP C	470PF	K	
C819			CK73GB1H104K	CHIP C	0.10UF	K	
C820			CK73HB1A105K	CHIP C	1.0UF	K	
C821			CK73HB1H471K	CHIP C	470PF	K	
C822			CK73HB1H102K	CHIP C	1000PF	K	
C823			CK73FB1E475K	CHIP C	4.7UF	K	
C824			CK73HB1H561K	CHIP C	560PF	K	
C825			CK73HB1H472K	CHIP C	4700PF	K	

K : TH-D72A
E : TH-D72E

PARTS LIST

TX-RX UNIT (X57-784X-XX)

Ref. No.	Address	New parts	Parts No.	Description			Destination
C826			CC73HCH1H181J	CHIP C	180PF	J	
C827			CK73HB1C473K	CHIP C	0.047UF	K	
C829			CK73HB1H471K	CHIP C	470PF	K	
C830			CS77CA1VR33M	CHIP TNTL	0.33UF	35WV	
C831			C93-1803-05	CHIP C	10UF	M	
C832			CK73HB1H471K	CHIP C	470PF	K	
C833			CK73HB1H472K	CHIP C	4700PF	K	
C834			CK73HB1H102K	CHIP C	1000PF	K	
C835			CK73HB1H472K	CHIP C	4700PF	K	
C836			CK73HB1A473K	CHIP C	0.047UF	K	
C837			CK73HB1E103K	CHIP C	0.010UF	K	
C838			CK73HB1H332K	CHIP C	3300PF	K	
C839			CK73HB1H182K	CHIP C	1800PF	K	
C840			CK73HB1A104K	CHIP C	0.10UF	K	
C841			CK73HB1H102K	CHIP C	1000PF	K	
C843			CK73HB1H561K	CHIP C	560PF	K	
C844,845			C93-1803-05	CHIP C	10UF	M	
C846			CK73HB1H471K	CHIP C	470PF	K	
C847			CK73HB1H472K	CHIP C	4700PF	K	
C848,849			CK73HB1H471K	CHIP C	470PF	K	
C850			CK73GB1E105K	CHIP C	1.0UF	K	
C851			CK73HB1H471K	CHIP C	470PF	K	
C852			CK73HB1H102K	CHIP C	1000PF	K	
C853			CK73HB1C123K	CHIP C	0.012UF	K	
C854,855			CK73HB1H471K	CHIP C	470PF	K	
C856			CK73HB1A104K	CHIP C	0.10UF	K	
C857			CS77CP1A100M	CHIP TNTL	10UF	10WV	
C858,859			CK73HB1A104K	CHIP C	0.10UF	K	
C860			CK73HB1A105K	CHIP C	1.0UF	K	
C861			CK73HB1H471K	CHIP C	470PF	K	
C862-864			CK73HB1H102K	CHIP C	1000PF	K	
C865,866			CK73GB0J475K	CHIP C	4.7UF	K	
C867-869			CK73HB1H471K	CHIP C	470PF	K	
C870			C93-1803-05	CHIP C	10UF	M	
C872			CK73HB1H221K	CHIP C	220PF	K	
C873			CK73GB0J475K	CHIP C	4.7UF	K	
C874			CK73HB1A104K	CHIP C	0.10UF	K	
C875			CK73HB1H102K	CHIP C	1000PF	K	
C876			CK73GB0J475K	CHIP C	4.7UF	K	
C877,878			CK73HB1E103K	CHIP C	0.010UF	K	
C880			CK73HB1H102K	CHIP C	1000PF	K	
C881			CK73HB1H471K	CHIP C	470PF	K	
C882			CK73HB1A104K	CHIP C	0.10UF	K	
C883			CK73HB1H102K	CHIP C	1000PF	K	
C884			CK73HB1H221K	CHIP C	220PF	K	
C886			CC73HCH1H470G	CHIP C	47PF	G	
C887			CK73HB1H472K	CHIP C	4700PF	K	
C888			CK73HB1H102K	CHIP C	1000PF	K	
C889			CK73GB0J475K	CHIP C	4.7UF	K	
C890-893			CC73HCH1H101J	CHIP C	100PF	J	
C894			CK73HB1H102K	CHIP C	1000PF	K	
C895			CC73HCH1H101J	CHIP C	100PF	J	
C897			CK73GB0J475K	CHIP C	4.7UF	K	
C898			CK73HB1C223K	CHIP C	0.022UF	K	
C899			C93-1803-05	CHIP C	10UF	M	
C900			CC73HCH1H050C	CHIP C	5.0PF	C	
C901-904			CK73HB1H102K	CHIP C	1000PF	K	
C905			CK73HB1E103K	CHIP C	0.010UF	K	
C906,907			CK73HB1H102K	CHIP C	1000PF	K	
C908,909			CC73HCH1H100D	CHIP C	10PF	D	

Ref. No.	Address	New parts	Parts No.	Description			
C910			CC73HCH1H010B	CHIP C	1.0PF	B	
C911			CC73HCH1H070B	CHIP C	7.0PF	B	
C912			CK73HB1A104K	CHIP C	0.10UF	K	
C913			CK73HB1H102K	CHIP C	1000PF	K	
C914			CC73HCH1H390G	CHIP C	39PF	G	
C915			CK73HB1A104K	CHIP C	0.10UF	K	
C916,917			CK73HB1H471K	CHIP C	470PF	K	
C918			CK73HB1A104K	CHIP C	0.10UF	K	
C919			CK73HB1H102K	CHIP C	1000PF	K	
C920,921			CK73HB1A104K	CHIP C	0.10UF	K	
C922,923			CK73HB1H102K	CHIP C	1000PF	K	
C924,925			CK73HB1H332K	CHIP C	3300PF	K	
C926			CS77CP1A100M	CHIP TNTL	10UF	10WV	
C927			CK73HB1A104K	CHIP C	0.10UF	K	
C928			CK73HB1H471K	CHIP C	470PF	K	
C929			CK73HB1A104K	CHIP C	0.10UF	K	
C930			CK73HB1E562K	CHIP C	5600PF	K	
C932			CK73HB1E103K	CHIP C	0.010UF	K	
C933			CK73HB1H102K	CHIP C	1000PF	K	
C934			CK73HB1A104K	CHIP C	0.10UF	K	
C935,936			CS77CD0G221M	CHIP TANL	220UF	4WV	
C937			CK73HB1A104K	CHIP C	0.10UF	K	
C938			CK73HB1E103K	CHIP C	0.010UF	K	
C939			CK73HB1A104K	CHIP C	0.10UF	K	
C940			CK73HB1E103K	CHIP C	0.010UF	K	
C941			CK73HB1C682K	CHIP C	6800PF	K	
C942			CK73HB1C223K	CHIP C	0.022UF	K	
C944			CK73HB1H102K	CHIP C	1000PF	K	
C945,946			CK73HB1A104K	CHIP C	0.10UF	K	
C947			CK73HB1H102K	CHIP C	1000PF	K	
C948			CK73HB1C682K	CHIP C	6800PF	K	
C949,950			CK73HB1C223K	CHIP C	0.022UF	K	
C951			CK73HB1H102K	CHIP C	1000PF	K	
C952			CK73GB1E105K	CHIP C	1.0UF	K	
C953			CK73HB1H102K	CHIP C	1000PF	K	
C954			CK73HB1H472K	CHIP C	4700PF	K	
C955			CK73HB1H471K	CHIP C	470PF	K	
C956			CK73HB1A105K	CHIP C	1.0UF	K	
C957			CK73HB1E103K	CHIP C	0.010UF	K	
C958			CK73HB1A104K	CHIP C	0.10UF	K	
C959			CK73HB1E103K	CHIP C	0.010UF	K	
C960			CK73HB1H222K	CHIP C	2200PF	K	
C961			CK73HB1H221K	CHIP C	220PF	K	
C962			CK73HB1H102K	CHIP C	1000PF	K	
C963			CK73HB1A105K	CHIP C	1.0UF	K	
C964			CC73HCH1H101J	CHIP C	100PF	J	
C965,966			CK73HB1H102K	CHIP C	1000PF	K	
C967			CK73HB1C682K	CHIP C	6800PF	K	
C968,969			CK73HB1A105K	CHIP C	1.0UF	K	
C970			CK73HB1A473K	CHIP C	0.047UF	K	
C971			C93-1803-05	CHIP C	10UF	M	
C972			CK73HB1A104K	CHIP C	0.10UF	K	
C973			C93-1803-05	CHIP C	10UF	M	
C975			CK73HB1A105K	CHIP C	1.0UF	K	
C976			C93-1803-05	CHIP C	10UF	M	
C986			CK73HB1H471K	CHIP C	470PF	K	
C987			CK73HB1H102K	CHIP C	1000PF	K	
C989			CK73HB1A104K	CHIP C	0.10UF	K	
C990			C93-1803-05	CHIP C	10UF	M	

K :
E :

PARTS LIST

TX-RX UNIT (X57-784X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
CN205-210			E23-1278-05	TERMINAL (2P)	
CN611			E40-6880-05	FLAT CABLE CONNECTOR (26P)	
CN701			E40-6754-05	FLAT CABLE CONNECTOR (14P)	
CN703			E40-6755-05	FLAT CABLE CONNECTOR (20P)	
CN715			E40-6844-05	FLAT CABLE CONNECTOR (15P)	
CN718,719			E40-6883-05	FLAT CABLE CONNECTOR (6P)	
CN731			E40-6880-05	FLAT CABLE CONNECTOR (26P)	
J641			E03-0190-05	DC JACK	
J701			E11-0703-05	PHONE JACK (SP/MIC)	
J702			E11-0709-05	2.5D PHONE JACK	
J703			E58-0079-05	RECTANGULAR RECEPTACLE	
F201			F01-1032-15	RADIATION PLATE	
F641			F53-0327-15	FUSE (4.0A)	
F642			F53-0360-05	FUSE (0.25A)	
F643			F53-0327-15	FUSE (4.0A)	
F701			F53-0363-05	FUSE (0.5A)	
F702			F53-0367-05	FUSE (1.0A)	
CN712			J19-5386-05	BATTERY HOLDER (BA1)	
CD351			L79-1848-05	TUNING COIL (450KHZ)	
CD352			L79-1834-05	TUNING COIL (455KHZ)	
CF351			L72-1044-05	CERAMIC FILTER (455KHZ)	
CF352			L72-1016-05	CERAMIC FILTER (450KHZ)	
L5			L40-8281-86	SMALL FIXED INDUCTOR (0.82UH)	
L12			L40-8281-86	SMALL FIXED INDUCTOR (0.82UH)	
L13			L40-8275-71	SMALL FIXED INDUCTOR (82NH)	
L14			L40-2275-71	SMALL FIXED INDUCTOR (22NH)	
L16			L40-8275-71	SMALL FIXED INDUCTOR (82NH)	
L17			L40-2275-71	SMALL FIXED INDUCTOR (22NH)	
L19,20			L40-1085-71	SMALL FIXED INDUCTOR (100NH)	
L21,22			L41-1578-03	SMALL FIXED INDUCTOR (15NH)	
L23,24			L41-2288-03	SMALL FIXED INDUCTOR (220NH)	
L25			L41-1278-03	SMALL FIXED INDUCTOR (12NH)	
L26			L41-1878-03	SMALL FIXED INDUCTOR (18NH)	
L27			L41-5678-03	SMALL FIXED INDUCTOR (56NH)	
L28			L41-1278-03	SMALL FIXED INDUCTOR (12NH)	
L29			L41-1878-03	SMALL FIXED INDUCTOR (18NH)	
L30			L41-3988-14	SMALL FIXED INDUCTOR (390NH)	
L31			L41-5678-03	SMALL FIXED INDUCTOR (56NH)	
L32			L41-3988-14	SMALL FIXED INDUCTOR (390NH)	
L33,34			L41-2788-03	SMALL FIXED INDUCTOR (270NH)	
L38			L41-1578-03	SMALL FIXED INDUCTOR (15NH)	
L40			L41-1578-03	SMALL FIXED INDUCTOR (15NH)	
L42			L41-1578-03	SMALL FIXED INDUCTOR (15NH)	
L44			L41-1578-03	SMALL FIXED INDUCTOR (15NH)	
L46			L41-5678-03	SMALL FIXED INDUCTOR (56NH)	
L48			L41-5678-03	SMALL FIXED INDUCTOR (56NH)	
L49,50			L41-1278-03	SMALL FIXED INDUCTOR (12NH)	
L51			L41-1878-03	SMALL FIXED INDUCTOR (18NH)	
L52			L41-5678-03	SMALL FIXED INDUCTOR (56NH)	
L53			L41-1878-03	SMALL FIXED INDUCTOR (18NH)	
L54			L41-3988-14	SMALL FIXED INDUCTOR (390NH)	
L56			L41-5678-03	SMALL FIXED INDUCTOR (56NH)	
L58			L41-3988-14	SMALL FIXED INDUCTOR (390NH)	
L59,60			L41-1578-03	SMALL FIXED INDUCTOR (15NH)	
L62			L41-1578-03	SMALL FIXED INDUCTOR (15NH)	
L64			L41-1578-03	SMALL FIXED INDUCTOR (15NH)	
L66			L41-2288-03	SMALL FIXED INDUCTOR (220NH)	
L68			L41-2288-03	SMALL FIXED INDUCTOR (220NH)	
L70			L41-6878-03	SMALL FIXED INDUCTOR (68NH)	
L72			L41-6878-03	SMALL FIXED INDUCTOR (68NH)	
L73			L41-3378-03	SMALL FIXED INDUCTOR (33NH)	
L74			L41-3978-03	SMALL FIXED INDUCTOR (39NH)	
L75,76			L41-2788-03	SMALL FIXED INDUCTOR (270NH)	
L77			L41-1878-03	SMALL FIXED INDUCTOR (18NH)	
L78			L41-1578-03	SMALL FIXED INDUCTOR (15NH)	
L79			L41-5678-03	SMALL FIXED INDUCTOR (56NH)	
L80			L41-3988-14	SMALL FIXED INDUCTOR (390NH)	
L81			L41-1578-03	SMALL FIXED INDUCTOR (15NH)	
L82			L41-5678-03	SMALL FIXED INDUCTOR (56NH)	
L83			L41-3385-14	SMALL FIXED INDUCTOR (330NH)	
L201			L40-8275-71	SMALL FIXED INDUCTOR (82NH)	
L202			L40-2275-71	SMALL FIXED INDUCTOR (22NH)	
L204			L40-2275-71	SMALL FIXED INDUCTOR (22NH)	
L206			L41-1285-03	SMALL FIXED INDUCTOR (120NH)	
L207			L40-1575-71	SMALL FIXED INDUCTOR (15NH)	
L209,210			L41-1085-03	SMALL FIXED INDUCTOR (100NH)	
L211			L41-3978-03	SMALL FIXED INDUCTOR (39NH)	
L212			L41-1078-03	SMALL FIXED INDUCTOR (10NH)	
L213			L41-3985-03	SMALL FIXED INDUCTOR (390NH)	
L214			L41-2285-03	SMALL FIXED INDUCTOR (220NH)	
L215			L41-3985-03	SMALL FIXED INDUCTOR (390NH)	
L216			L41-2285-03	SMALL FIXED INDUCTOR (220NH)	
L217			L41-1578-03	SMALL FIXED INDUCTOR (15NH)	
L218			L41-1078-03	SMALL FIXED INDUCTOR (10NH)	
L219			L41-6875-03	SMALL FIXED INDUCTOR (68NH)	
L220			L41-1561-03	SMALL FIXED INDUCTOR (1.5NH)	
L221			L41-6875-03	SMALL FIXED INDUCTOR (68NH)	
L223			L41-2275-03	SMALL FIXED INDUCTOR (22NH)	
L226			L40-1275-71	SMALL FIXED INDUCTOR (12NH)	
L227			L41-2285-03	SMALL FIXED INDUCTOR (220NH)	
L228			L41-3985-39	SMALL FIXED INDUCTOR (0.39UH)	
L229			L41-2285-39	SMALL FIXED INDUCTOR (0.22UH)	
L230			L41-3678-55	SMALL FIXED INDUCTOR (36NH)	
L231			L41-2285-03	SMALL FIXED INDUCTOR (220NH)	
L232			L41-1005-39	SMALL FIXED INDUCTOR (10UH)	
L233			L34-4577-05	AIR-CORE COIL (9T)	
L234			L34-4604-15	AIR-CORE COIL (3T)	
L235			L34-4603-15	AIR-CORE COIL (2T)	
L236			L34-4577-05	AIR-CORE COIL (9T)	
L237,238			L34-4689-05	AIR-CORE COIL (3T)	
L239			L34-4577-05	AIR-CORE COIL (9T)	
L240,241			L34-4604-15	AIR-CORE COIL (3T)	
L242			L34-4577-05	AIR-CORE COIL (9T)	
L243			L34-4573-05	AIR-CORE COIL (5T)	
L244			L34-4577-05	AIR-CORE COIL (9T)	
L245			L34-4576-05	AIR-CORE COIL (8T)	
L246			L34-4577-05	AIR-CORE COIL (9T)	
L248			L34-4572-05	AIR-CORE COIL (4T)	
L249			L34-4576-05	AIR-CORE COIL (8T)	
L250			L34-4577-05	AIR-CORE COIL (9T)	
L251,252			L34-4572-05	AIR-CORE COIL (4T)	
L253			L41-1278-03	SMALL FIXED INDUCTOR (12NH)	
L254			L34-4572-05	AIR-CORE COIL	
L351,352			L41-3388-03	SMALL FIXED INDUCTOR (330NH)	
L420,421			L40-1291-86	SMALL FIXED INDUCTOR (1.2UH)	
L431			L41-3988-14	SMALL FIXED INDUCTOR (390NH)	
L432			L40-1875-71	SMALL FIXED INDUCTOR (18NH)	
L433			L40-1085-71	SMALL FIXED INDUCTOR (100NH)	

PARTS LIST

TX-RX UNIT (X57-784X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
L434			L40-1275-71	SMALL FIXED INDUCTOR (12NH)	
L435			L40-1001-86	SMALL FIXED INDUCTOR (10UH)	
L436			L40-2775-71	SMALL FIXED INDUCTOR (27NH)	
L437			L40-1001-86	SMALL FIXED INDUCTOR (10UH)	
L438			L40-3975-71	SMALL FIXED INDUCTOR (39NH)	
L439			L40-6865-71	SMALL FIXED INDUCTOR (6.8NH)	
L440			L41-2278-08	SMALL FIXED INDUCTOR (22NH)	
L441,442			L40-1001-86	SMALL FIXED INDUCTOR (10UH)	
L443			L40-8275-71	SMALL FIXED INDUCTOR (82NH)	
L444			L40-1075-71	SMALL FIXED INDUCTOR (10NH)	
L445			L40-4775-71	SMALL FIXED INDUCTOR (47NH)	
L446			L41-2775-03	SMALL FIXED INDUCTOR (27NH)	
L447			L41-2275-01	SMALL FIXED INDUCTOR (22NH)	
L448			L41-2775-01	SMALL FIXED INDUCTOR (27NH)	
L511			L41-3988-14	SMALL FIXED INDUCTOR (390NH)	
L512			L40-1575-71	SMALL FIXED INDUCTOR (15NH)	
L513			L40-1275-71	SMALL FIXED INDUCTOR (12NH)	
L514,515			L40-1001-86	SMALL FIXED INDUCTOR (10UH)	
L516			L41-1278-14	SMALL FIXED INDUCTOR (12NH)	
L517			L40-1285-71	SMALL FIXED INDUCTOR (120NH)	
L518,519			L40-2285-92	SMALL FIXED INDUCTOR (220NH)	
L520			L41-1878-14	SMALL FIXED INDUCTOR (18NH)	
L521			L40-2285-92	SMALL FIXED INDUCTOR (220NH)	
L522			L41-3378-08	SMALL FIXED INDUCTOR (33NH)	
L523			L41-2278-14	SMALL FIXED INDUCTOR (22NH)	
L524,525			L40-1001-86	SMALL FIXED INDUCTOR (10UH)	
L526			L40-2285-92	SMALL FIXED INDUCTOR (220NH)	
L527			L40-8275-71	SMALL FIXED INDUCTOR (82NH)	
L641-643			L33-1543-05	SMALL FIXED INDUCTOR (4.7UH)	
L644			L92-0149-05	CHIP FERRITE	
L645,646			L92-0140-05	CHIP FERRITE	
L701-703			L92-0446-05	BEADS CORE	
L704			L92-0140-05	CHIP FERRITE	
L705,706			L92-0365-05	CHIP FERRITE	
L708			L92-0446-05	BEADS CORE	
L709-711			L92-0140-05	CHIP FERRITE	
L714			L92-0446-05	BEADS CORE	
L716,717			L92-0446-05	BEADS CORE	
L718			L92-0639-05	CHIP FERRITE	
L720			L92-0639-05	CHIP FERRITE	
X351			L77-3021-05	CRYSTAL RESONATOR (45.505MHZ)	
X431			L77-3057-05	TCXO (16.8MHZ)	
X511			L77-3057-05	TCXO (16.8MHZ)	
X611			L78-1426-05	RESONATOR (11.0592MHZ)	
X701			L77-1802-05	CRYSTAL RESONATOR (32.768KHZ)	
X702			L77-3022-05	CRYSTAL RESONATOR (11.0592MHZ)	
X703			L77-3031-05	CRYSTAL RESONATOR (15.9744MHZ)	
XF351			L71-0641-15	MCF (49.95MHZ)	
XF352			L71-0642-15	MCF (45.05MHZ)	
CP1			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
CP2			RK74HA1J473J	CHIP-COM 47K J 1/16W	
CP3,4			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
CP5			RK75HA1J102J	CHIP-COM 1.0K J 1/16W	
CP6			RK74HB1J103J	CHIP-COM 10K J 1/16W	
CP7			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
CP8			RK75HA1J101J	CHIP-COM 100 J 1/16W	
CP9			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
CP10			RK74HA1J473J	CHIP-COM 47K J 1/16W	
CP11-14			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	

Ref. No.	Address	New parts	Parts No.	Description
CP31,32			RK74HB1J103J	CHIP-COM 10K J 1/16W
CP33-38			RK75HA1J102J	CHIP-COM 1.0K J 1/16W
CP40			RK74HB1J102J	CHIP-COM 1.0K J 1/16W
CP42,43			RK75HA1J102J	CHIP-COM 1.0K J 1/16W
CP44-47			RK74HB1J102J	CHIP-COM 1.0K J 1/16W
CP48-50			RK74HB1J473J	CHIP-COM 47K J 1/16W
CP51			RK75HA1J102J	CHIP-COM 1.0K J 1/16W
CP52-54			RK74HB1J102J	CHIP-COM 1.0K J 1/16W
CP55			RK75HA1J102J	CHIP-COM 1.0K J 1/16W
CP56-67			RK74HB1J102J	CHIP-COM 1.0K J 1/16W
CP68			RK75HA1J473J	CHIP-COM 47K J 1/16W
CP69-73			RK75HA1J102J	CHIP-COM 1.0K J 1/16W
CP74			RK74HB1J473J	CHIP-COM 47K J 1/16W
CP75			RK75HA1J473J	CHIP-COM 47K J 1/16W
CP76			RK75HA1J102J	CHIP-COM 1.0K J 1/16W
CP77,78			RK75HA1J101J	CHIP-COM 100 J 1/16W
R1			RK73HB1J222J	CHIP R 2.2K J 1/16W
R3,4			RK73HB1J000J	CHIP R 0.0 J 1/16W
R5			RK73HB1J472J	CHIP R 4.7K J 1/16W
R6			RK73HB1J000J	CHIP R 0.0 J 1/16W
R8			RK73HB1J103J	CHIP R 10K J 1/16W
R9			RK73HB1J000J	CHIP R 0.0 J 1/16W
R10-12			RK73HB1J103J	CHIP R 10K J 1/16W
R13,14			RK73HB1J823J	CHIP R 82K J 1/16W
R15-17			RK73HB1J222J	CHIP R 2.2K J 1/16W
R18			RK73HB1J000J	CHIP R 0.0 J 1/16W
R19			RK73HB1J332J	CHIP R 3.3K J 1/16W
R20			RK73HB1J000J	CHIP R 0.0 J 1/16W
R21			RK73HB1J101J	CHIP R 100 J 1/16W
R22			RK73HB1J151J	CHIP R 150 J 1/16W
R23			RK73HB1J222J	CHIP R 2.2K J 1/16W
R24			RK73HB1J151J	CHIP R 150 J 1/16W
R25			RK73HB1J393J	CHIP R 39K J 1/16W
R26			RK73HB1J223J	CHIP R 22K J 1/16W
R27			RK73HB1J101J	CHIP R 100 J 1/16W
R28			RK73HB1J393J	CHIP R 39K J 1/16W
R29-31			RK73HB1J223J	CHIP R 22K J 1/16W
R32			RK73HB1J683J	CHIP R 68K J 1/16W
R33			RK73HB1J333J	CHIP R 33K J 1/16W
R34,35			RK73HB1J223J	CHIP R 22K J 1/16W
R36			RK73HB1J683J	CHIP R 68K J 1/16W
R37			RK73HB1J333J	CHIP R 33K J 1/16W
R38-41			RK73HB1J223J	CHIP R 22K J 1/16W
R42,43			RK73HB1J104J	CHIP R 100K J 1/16W
R45			RK73HB1J104J	CHIP R 100K J 1/16W
R47-52			RK73HB1J104J	CHIP R 100K J 1/16W
R53			RK73HB1J102J	CHIP R 1.0K J 1/16W
R54			RK73HB1J471J	CHIP R 470 J 1/16W
R55			RK73HB1J104J	CHIP R 100K J 1/16W
R56			RK73HB1J471J	CHIP R 470 J 1/16W
R57			RK73HB1J101J	CHIP R 100 J 1/16W
R58			RK73HB1J181J	CHIP R 180 J 1/16W
R59			RK73HB1J560J	CHIP R 56 J 1/16W
R60			RK73HB1J471J	CHIP R 470 J 1/16W
R61			RK73HB1J563J	CHIP R 56K J 1/16W
R62			RK73HB1J564J	CHIP R 560K J 1/16W
R63			RK73HB1J104J	CHIP R 100K J 1/16W
R65			RK73HB1J101J	CHIP R 100 J 1/16W
R66			RK73HB1J560J	CHIP R 56 J 1/16W
R67			RK73HB1J334J	CHIP R 330K J 1/16W

PARTS LIST

TX-RX UNIT (X57-784X-XX)

Ref. No.	Address	New parts	Parts No.	Description				Destination
R68			RK73HB1J564J	CHIP R	560K	J	1/16W	
R69			RK73HB1J820J	CHIP R	82	J	1/16W	
R70			RK73HB1J104J	CHIP R	100K	J	1/16W	
R71			RK73HB1J563J	CHIP R	56K	J	1/16W	
R72			RK73HB1J823J	CHIP R	82K	J	1/16W	
R73			RK73HB1J683J	CHIP R	68K	J	1/16W	
R74			RK73HB1J104J	CHIP R	100K	J	1/16W	
R75			RK73HB1J564J	CHIP R	560K	J	1/16W	
R76			RK73HB1J184J	CHIP R	180K	J	1/16W	
R77			RK73HB1J124J	CHIP R	120K	J	1/16W	
R80			RK73HB1J184J	CHIP R	180K	J	1/16W	
R81			RK73HB1J124J	CHIP R	120K	J	1/16W	
R82,83			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R84-86			RK73HB1J104J	CHIP R	100K	J	1/16W	
R89-92			RK73HB1J104J	CHIP R	100K	J	1/16W	
R93			RK73HB1J820J	CHIP R	82	J	1/16W	
R94			RK73HB1J152J	CHIP R	1.5K	J	1/16W	
R95			RK73HB1J121J	CHIP R	120	J	1/16W	
R96			RK73HB1J152J	CHIP R	1.5K	J	1/16W	
R97			RK73HB1J104J	CHIP R	100K	J	1/16W	
R98			RK73HB1J681J	CHIP R	680	J	1/16W	
R99			RK73HB1J331J	CHIP R	330	J	1/16W	
R100			RK73HB1J561J	CHIP R	560	J	1/16W	
R101			RK73HB1J331J	CHIP R	330	J	1/16W	
R103			RK73HB1J104J	CHIP R	100K	J	1/16W	
R104			RK73HB1J184J	CHIP R	180K	J	1/16W	
R105,106			RK73HB1J104J	CHIP R	100K	J	1/16W	
R108			RK73HB1J104J	CHIP R	100K	J	1/16W	
R109			RK73HB1J184J	CHIP R	180K	J	1/16W	
R110			RK73HB1J333J	CHIP R	33K	J	1/16W	
R111			RK73HB1J223J	CHIP R	22K	J	1/16W	
R112			RK73HB1J823J	CHIP R	82K	J	1/16W	
R113			RK73HB1J683J	CHIP R	68K	J	1/16W	
R114			RK73HB1J104J	CHIP R	100K	J	1/16W	
R115			RK73HB1J394J	CHIP R	390K	J	1/16W	
R116			RK73HB1J823J	CHIP R	82K	J	1/16W	
R117			RK73HB1J154J	CHIP R	150K	J	1/16W	
R118			RK73HB1J124J	CHIP R	120K	J	1/16W	
R119			RK73HB1J154J	CHIP R	150K	J	1/16W	
R120-127			RK73HB1J100J	CHIP R	10	J	1/16W	
R128			RK73HB1J4R7J	CHIP R	4.7	J	1/16W	
R129,130			RK73HB1J100J	CHIP R	10	J	1/16W	
R133-135			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R201			RK73HB1J223J	CHIP R	22K	J	1/16W	
R202			RK73HB1J103J	CHIP R	10K	J	1/16W	
R203			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R204			RK73HB1J101J	CHIP R	100	J	1/16W	
R205			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R207			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R211,212			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R215			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R216,217			R92-3512-05	CHIP R	0.1	F	1/2W	
R218			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R219			RK73HB1J151J	CHIP R	150	J	1/16W	
R220			RK73HB1J101J	CHIP R	100	J	1/16W	
R221			RK73HB1J104J	CHIP R	100K	J	1/16W	
R222			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R224			RK73HB1J101J	CHIP R	100	J	1/16W	
R227			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R229			RK73HB1J473J	CHIP R	47K	J	1/16W	

Ref. No.	Address	New parts	Parts No.	Description				Destination
R230			RK73HB1J272J	CHIP R	2.7K	J	1/16W	
R231			RK73HB1J273J	CHIP R	27K	J	1/16W	
R232			RK73HB1J271J	CHIP R	270	J	1/16W	
R233			RK73HB1J180J	CHIP R	18	J	1/16W	
R234			RK73HB1J474J	CHIP R	470K	J	1/16W	
R235			RK73HB1J473J	CHIP R	47K	J	1/16W	
R236			RK73HB1J271J	CHIP R	270	J	1/16W	
R237			RK73HB1J104J	CHIP R	100K	J	1/16W	
R238			RK73HB1J683J	CHIP R	68K	J	1/16W	
R242			RK73HB1J473J	CHIP R	47K	J	1/16W	
R243			RK73HB1J224J	CHIP R	220K	J	1/16W	
R245			RK73HB1J103J	CHIP R	10K	J	1/16W	
R247			RK73GB2A470J	CHIP R	47	J	1/10W	
R248			RK73HB1J103J	CHIP R	10K	J	1/16W	
R250			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R251			RK73GB2A471J	CHIP R	470	J	1/10W	
R252			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R253			RK73GB2A331J	CHIP R	330	J	1/10W	
R254			RK73GB2A821J	CHIP R	820	J	1/10W	
R255			RN73HH1J102D	CHIP R	1.0K	D	1/16W	
R256,257			RK73GB2A120J	CHIP R	12	J	1/10W	
R258			RK73GB2A821J	CHIP R	820	J	1/10W	
R259-262			RK73HB1J471J	CHIP R	470	J	1/16W	
R263			RK73HB1J103J	CHIP R	10K	J	1/16W	
R264			RK73FB2B470J	CHIP R	47	J	1/8W	
R265			RK73HB1J103J	CHIP R	10K	J	1/16W	
R266			RK73HB1J391J	CHIP R	390	J	1/16W	
R268-270			RK73GB2A221J	CHIP R	220	J	1/10W	
R276			RK73HB1J391J	CHIP R	390	J	1/16W	
R351			RK73HB1J183J	CHIP R	18K	J	1/16W	
R352			RK73HB1J153J	CHIP R	15K	J	1/16W	
R353			RK73HB1J104J	CHIP R	100K	J	1/16W	
R356,357			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R358			RK73HB1J104J	CHIP R	100K	J	1/16W	
R359			RK73HB1J473J	CHIP R	47K	J	1/16W	
R360			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R361,362			RK73HB1J104J	CHIP R	100K	J	1/16W	
R363			RK73HB1J221J	CHIP R	220	J	1/16W	
R364			RK73HB1J330J	CHIP R	33	J	1/16W	
R365			RK73HB1J103J	CHIP R	10K	J	1/16W	
R366			RK73HB1J332J	CHIP R	3.3K	J	1/16W	
R367			RK73HB1J103J	CHIP R	10K	J	1/16W	
R368			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R369			RK73HB1J561J	CHIP R	560	J	1/16W	
R370			RK73HB1J101J	CHIP R	100	J	1/16W	
R371			RK73HB1J334J	CHIP R	330K	J	1/16W	
R372			RK73HB1J103J	CHIP R	10K	J	1/16W	
R373			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R374			RK73HB1J101J	CHIP R	100	J	1/16W	
R375			RK73HB1J334J	CHIP R	330K	J	1/16W	
R376			RK73HB1J561J	CHIP R	560	J	1/16W	
R377			RK73HB1J332J	CHIP R	3.3K	J	1/16W	
R378			RK73HB1J103J	CHIP R	10K	J	1/16W	
R380			RK73HB1J334J	CHIP R	330K	J	1/16W	
R381			RK73HB1J332J	CHIP R	3.3K	J	1/16W	
R382			RK73HB1J562J	CHIP R	5.6K	J	1/16W	
R383			RK73HB1J152J	CHIP R	1.5K	J	1/16W	
R384			RK73HB1J474J	CHIP R	470K	J	1/16W	
R385,386			RK73HB1J334J	CHIP R	330K	J	1/16W	
R387			RK73HB1J472J	CHIP R	4.7K	J	1/16W	

K : TH-D72A
E : TH-D72E

PARTS LIST

TX-RX UNIT (X57-784X-XX)

Ref. No.	Address	New parts	Parts No.	Description			Destination
R388			RK73HB1J101J	CHIP R	100	J 1/16W	
R389			RK73HB1J152J	CHIP R	1.5K	J 1/16W	
R390			RK73HB1J272J	CHIP R	2.7K	J 1/16W	
R391			RK73HB1J334J	CHIP R	330K	J 1/16W	
R392			RK73HB1J272J	CHIP R	2.7K	J 1/16W	
R393			RK73HB1J104J	CHIP R	100K	J 1/16W	
R394			RK73HB1J562J	CHIP R	5.6K	J 1/16W	
R395			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R396			RK73HB1J224J	CHIP R	220K	J 1/16W	
R397			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R398			RK73HB1J220J	CHIP R	22	J 1/16W	
R399			RK73HB1J101J	CHIP R	100	J 1/16W	
R401			RK73HB1J220J	CHIP R	22	J 1/16W	
R402			RK73HB1J274J	CHIP R	240K	J 1/16W	
R403			RK73HB1J101J	CHIP R	100	J 1/16W	
R405			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R406			RK73HB1J274J	CHIP R	270K	J 1/16W	
R409,410			RK73HB1J471J	CHIP R	470	J 1/16W	
R411			RK73HB1J181J	CHIP R	180	J 1/16W	
R412			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R413			RK73HB1J181J	CHIP R	180	J 1/16W	
R414			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R415			RK73HB1J224J	CHIP R	220K	J 1/16W	
R416			RK73HB1J824J	CHIP R	820K	J 1/16W	
R417			RK73HB1J104J	CHIP R	100K	J 1/16W	
R418			RK73HB1J824J	CHIP R	820K	J 1/16W	
R419			RK73HB1J124J	CHIP R	120K	J 1/16W	
R431			RK73HB1J220J	CHIP R	22	J 1/16W	
R432			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R436			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R437,438			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R439			RK73HB1J104J	CHIP R	100K	J 1/16W	
R440			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R441,442			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R443			RK73HB1J560J	CHIP R	56	J 1/16W	
R444			RK73HB1J681J	CHIP R	680	J 1/16W	
R445			RK73HB1J561J	CHIP R	560	J 1/16W	
R446,447			RK73HB1J681J	CHIP R	680	J 1/16W	
R448			RK73HB1J103J	CHIP R	10K	J 1/16W	
R449			RK73HB1J332J	CHIP R	3.3K	J 1/16W	
R451			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R452			RK73HB1J101J	CHIP R	100	J 1/16W	
R453			RK73HB1J153J	CHIP R	15K	J 1/16W	
R454			RK73HB1J822J	CHIP R	8.2K	J 1/16W	
R455			RN73HH1J220D	CHIP R	22	D 1/16W	
R456			RN73HH1J271D	CHIP R	270	D 1/16W	
R457,458			RK73HB1J470J	CHIP R	47	J 1/16W	
R459			RK73HB1J103J	CHIP R	10K	J 1/16W	
R460			RK73HB1J822J	CHIP R	8.2K	J 1/16W	
R461			RK73HB1J101J	CHIP R	100	J 1/16W	
R462			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R463			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R464			RK73HB1J822J	CHIP R	8.2K	J 1/16W	
R465			RK73HB1J103J	CHIP R	10K	J 1/16W	
R466			RK73HB1J101J	CHIP R	100	J 1/16W	
R468			RK73HB1J101J	CHIP R	100	J 1/16W	
R469			RK73HB1J271J	CHIP R	270	J 1/16W	
R470			RK73HB1J101J	CHIP R	100	J 1/16W	
R473			RK73HB1J103J	CHIP R	10K	J 1/16W	
R517			RK73HB1J103J	CHIP R	10K	J 1/16W	

Ref. No.	Address	New parts	Parts No.	Description			
R519			RK73HB1J101J	CHIP R	100	J 1/16W	
R523			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R524			RK73HB1J220J	CHIP R	22	J 1/16W	
R527			RK73HB1J332J	CHIP R	3.3K	J 1/16W	
R528,529			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R532			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R534			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R536			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R537			RK73HB1J104J	CHIP R	100K	J 1/16W	
R538,539			RK73HB1J474J	CHIP R	470K	J 1/16W	
R540			RK73HB1J224J	CHIP R	220K	J 1/16W	
R541-543			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R544			RK73HB1J560J	CHIP R	56	J 1/16W	
R545			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R547			RK73HB1J821J	CHIP R	820	J 1/16W	
R548			RK73HB1J681J	CHIP R	680	J 1/16W	
R550			RK73HB1J222J	CHIP R	2.2K	J 1/16W	
R551			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R552			RK73HB1J222J	CHIP R	2.2K	J 1/16W	
R553			RK73HB1J152J	CHIP R	1.5K	J 1/16W	
R554			RK73HB1J222J	CHIP R	2.2K	J 1/16W	
R555			RK73HB1J681J	CHIP R	680	J 1/16W	
R556			RN73HH1J392D	CHIP R	3.9K	D 1/16W	
R557			RN73HH1J682D	CHIP R	6.8K	D 1/16W	
R558			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R559			RK73HB1J103J	CHIP R	10K	J 1/16W	
R560			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R561			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R562,563			RK73HB1J473J	CHIP R	47K	J 1/16W	
R564			RK73HB1J101J	CHIP R	100	J 1/16W	
R565			RK73HB1J183J	CHIP R	18K	J 1/16W	
R566			RN73HH1J102D	CHIP R	1.0K	D 1/16W	
R567			RN73HH1J222D	CHIP R	2.2K	D 1/16W	
R568			RK73HB1J822J	CHIP R	8.2K	J 1/16W	
R569			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R570			RN73HH1J220D	CHIP R	22	D 1/16W	
R571			RN73HH1J221D	CHIP R	220	D 1/16W	
R572			RN73HH1J101D	CHIP R	100	D 1/16W	
R573			RK73HB1J470J	CHIP R	47	J 1/16W	
R574			RK73HB1J103J	CHIP R	10K	J 1/16W	
R575			RK73HB1J822J	CHIP R	8.2K	J 1/16W	
R576			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R577			RK73HB1J220J	CHIP R	22	J 1/16W	
R578-581			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R610-612			RK73HB1J103J	CHIP R	10K	J 1/16W	
R613			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R614			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R615			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R617			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R619			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R620			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R621			RK73HB1J104J	CHIP R	100K	J 1/16W	
R623			RK73HB1J104J	CHIP R	100K	J 1/16W	
R624-629			RK73HB1J474J	CHIP R	470K	J 1/16W	
R630-633			RK73HB1J104J	CHIP R	100K	J 1/16W	
R636,637			RK73GB2A180J	CHIP R	18	J 1/10W	
R638			RK73HB1J104J	CHIP R	100K	J 1/16W	
R639			RK73FB2B000J	CHIP R	0.0	J 1/8W	
R640			RK73HH1J394D	CHIP R	390K	D 1/16W	
R641			RK73HH1J563D	CHIP R	56K	D 1/16W	

K :
E :

PARTS LIST

TX-RX UNIT (X57-784X-XX)

Ref. No.	Address	New parts	Parts No.	Description			Destination
R642			RK73HB1J104J	CHIP R	100K	J 1/16W	
R643			RK73HB1J223J	CHIP R	22K	J 1/16W	
R644			RK73HH1J274D	CHIP R	270K	D 1/16W	
R645			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R646			RK73HH1J823D	CHIP R	82K	D 1/16W	
R647			RK73HH1J274D	CHIP R	270K	D 1/16W	
R648			RK73HH1J823D	CHIP R	82K	D 1/16W	
R649			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R651			RK73PB2H3R3J	CHIP R	3.3	J 1/2W	
R652			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R653			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R656			RK73HB1J683J	CHIP R	68K	J 1/16W	
R659			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R660,661			RK73HB1J100J	CHIP R	10	J 1/16W	
R662			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R663			RK73HB1J474J	CHIP R	470K	J 1/16W	
R664			RK73HH1J104D	CHIP R	100K	D 1/16W	
R665,666			R92-3512-05	CHIP R	0.1	F 1/2W	
R667			RK73HB1J474J	CHIP R	470K	J 1/16W	
R668			RK73HH1J224D	CHIP R	220K	D 1/16W	
R669			RK73HH1J393D	CHIP R	39K	D 1/16W	
R670			RK73HB1J104J	CHIP R	100K	J 1/16W	
R672			RK73HB1J391J	CHIP R	390	J 1/16W	
R673,674			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R675			RK73HB1J221J	CHIP R	220	J 1/16W	
R676			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R677			RK73HB1J474J	CHIP R	470K	J 1/16W	
R678			RK73HB1J821J	CHIP R	820	J 1/16W	
R679			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R680			RK73HB1J152J	CHIP R	1.5K	J 1/16W	
R681			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R682			RK73HB1J104J	CHIP R	100K	J 1/16W	
R683			RK73HB1J474J	CHIP R	470K	J 1/16W	
R684			RK73HB1J105J	CHIP R	1.0M	J 1/16W	
R685			RK73HB1J334J	CHIP R	330K	J 1/16W	
R686			RK73HB1J474J	CHIP R	470K	J 1/16W	
R687,688			RK73HB1J104J	CHIP R	100K	J 1/16W	
R689			RK73HH1J683D	CHIP R	68K	D 1/16W	
R702,703			RK73HB1J103J	CHIP R	10K	J 1/16W	
R704			RK73HB1J101J	CHIP R	100	J 1/16W	
R705			RK73HB1J471J	CHIP R	470	J 1/16W	
R706			RK73HB1J182J	CHIP R	1.8K	J 1/16W	
R707			RK73HB1J103J	CHIP R	10K	J 1/16W	
R708			RK73HB1J473J	CHIP R	47K	J 1/16W	
R709,710			RK73HB1J101J	CHIP R	100	J 1/16W	
R711,712			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R713			RK73HB1J183J	CHIP R	18K	J 1/16W	
R714			RK73HB1J105J	CHIP R	1.0M	J 1/16W	
R715,716			RK73HB1J104J	CHIP R	100K	J 1/16W	
R717			RK73HB1J103J	CHIP R	10K	J 1/16W	
R718			RK73HB1J104J	CHIP R	100K	J 1/16W	
R719,720			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R721			RK73HB1J103J	CHIP R	10K	J 1/16W	
R722			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R723			RK73HB1J473J	CHIP R	47K	J 1/16W	
R725			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R726			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R727			RK73HB1J474J	CHIP R	470K	J 1/16W	
R728,729			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R730			RK73HB1J471J	CHIP R	470	J 1/16W	

Ref. No.	Address	New parts	Parts No.	Description			Destination
R731			RK73HB1J684J	CHIP R	680K	J 1/16W	
R732			RK73HB1J333J	CHIP R	33K	J 1/16W	
R733			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R734			RK73HB1J470J	CHIP R	47	J 1/16W	
R735			RK73HH1J223D	CHIP R	22K	D 1/16W	
R736			RK73HH1J103D	CHIP R	10K	D 1/16W	
R737			RK73HH1J682D	CHIP R	6.8K	D 1/16W	
R738,739			RK73HB1J103J	CHIP R	10K	J 1/16W	
R740			RK73HH1J473D	CHIP R	47K	D 1/16W	
R741			RK73HB1J473J	CHIP R	47K	J 1/16W	
R742			RK73HB1J103J	CHIP R	10K	J 1/16W	
R743			RK73HB1J223J	CHIP R	22K	J 1/16W	
R744			RK73HB1J103J	CHIP R	10K	J 1/16W	
R745			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R746			RK73HB1J101J	CHIP R	100	J 1/16W	
R747			RK73HB1J473J	CHIP R	47K	J 1/16W	
R748			RK73HB1J562J	CHIP R	5.6K	J 1/16W	
R749			RK73HB1J103J	CHIP R	10K	J 1/16W	
R750			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R753-762			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R763			RK73HB1J100J	CHIP R	10	J 1/16W	
R764			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R765			RK73HB1J123J	CHIP R	12K	J 1/16W	
R766			RK73HB1J183J	CHIP R	18K	J 1/16W	
R767			RK73HB1J105J	CHIP R	1.0M	J 1/16W	
R768			RK73HB1J183J	CHIP R	18K	J 1/16W	
R769			RK73HB1J560J	CHIP R	56	J 1/16W	
R770			RK73HB1J221J	CHIP R	220	J 1/16W	
R771			RK73GB2A221J	CHIP R	220	J 1/10W	
R772			RK73HB1J681J	CHIP R	680	J 1/16W	
R773			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R774			RK73HB1J473J	CHIP R	47K	J 1/16W	
R775			RK73HB1J183J	CHIP R	18K	J 1/16W	
R776			RK73HH1J224D	CHIP R	220K	D 1/16W	
R777			RK73HB1J183J	CHIP R	18K	J 1/16W	
R778			RK73HH1J473D	CHIP R	47K	D 1/16W	
R779			RK73HB1J563J	CHIP R	56K	J 1/16W	
R780			RK73HH1J473D	CHIP R	47K	D 1/16W	
R781			RK73HB1J474J	CHIP R	470K	J 1/16W	
R782			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R783			RK73HB1J183J	CHIP R	18K	J 1/16W	
R784			RK73HB1J560J	CHIP R	56	J 1/16W	
R785			RK73HB1J221J	CHIP R	220	J 1/16W	
R786-788			RK73HB1J681J	CHIP R	680	J 1/16W	
R790			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R791,792			RK73HB1J103J	CHIP R	10K	J 1/16W	
R793,794			RK73HB1J683J	CHIP R	68K	J 1/16W	
R795			RK73HB1J223J	CHIP R	22K	J 1/16W	
R796			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R797			RK73HB1J393J	CHIP R	39K	J 1/16W	
R798			RK73HB1J333J	CHIP R	33K	J 1/16W	
R799			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R800			RK73HB1J154J	CHIP R	150K	J 1/16W	
R801			RK73HB1J471J	CHIP R	470	J 1/16W	
R803			RK73HB1J471J	CHIP R	470	J 1/16W	
R804			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R805			RK73HB1J684J	CHIP R	680K	J 1/16W	
R806			RK73HB1J393J	CHIP R	39K	J 1/16W	
R807			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R808			RK73HB1J330J	CHIP R	33	J 1/16W	

K : TH-D72A
E : TH-D72E

PARTS LIST

TX-RX UNIT (X57-784X-XX)

Ref. No.	Address	New parts	Parts No.	Description				Destination
R809			RK73HH1J103D	CHIP R	10K	D	1/16W	
R810			RK73HB1J103J	CHIP R	10K	J	1/16W	
R811			RK73HH1J473D	CHIP R	47K	D	1/16W	
R814,815			RK73HB1J103J	CHIP R	10K	J	1/16W	
R816,817			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R818			RK73HB1J104J	CHIP R	100K	J	1/16W	
R819			RK73HB1J103J	CHIP R	10K	J	1/16W	
R820			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R821			RK73HB1J824J	CHIP R	820K	J	1/16W	
R823			RK73HH1J103D	CHIP R	10K	D	1/16W	
R824,825			RK73HB1J104J	CHIP R	100K	J	1/16W	
R826			RK73HB1J223J	CHIP R	22K	J	1/16W	
R827			RK73HB1J183J	CHIP R	18K	J	1/16W	
R828			RK73HB1J223J	CHIP R	22K	J	1/16W	
R829,830			RK73HB1J101J	CHIP R	100	J	1/16W	
R831			RK73HB1J473J	CHIP R	47K	J	1/16W	
R832			RK73HB1J273J	CHIP R	27K	J	1/16W	
R833			RK73HB1J104J	CHIP R	100K	J	1/16W	
R834			RK73HB1J473J	CHIP R	47K	J	1/16W	
R835,836			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R837			RK73HB1J682J	CHIP R	6.8K	J	1/16W	
R838			RK73HB1J104J	CHIP R	100K	J	1/16W	
R839			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R840-844			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R845,846			RK73HH1J473D	CHIP R	47K	D	1/16W	
R847			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R848			RK73HB1J474J	CHIP R	470K	J	1/16W	
R849			RK73HB1J332J	CHIP R	3.3K	J	1/16W	
R850			RK73HB1J681J	CHIP R	680	J	1/16W	
R851			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R852			RK73HB1J103J	CHIP R	10K	J	1/16W	
R853			RK73HB1J474J	CHIP R	470K	J	1/16W	
R854,855			RK73HB1J823J	CHIP R	82K	J	1/16W	
R856,857			RK73HH1J103D	CHIP R	10K	D	1/16W	
R859,860			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R861			RK73HB1J473J	CHIP R	47K	J	1/16W	
R862			RK73HB1J474J	CHIP R	470K	J	1/16W	
R863			RK73HB1J104J	CHIP R	100K	J	1/16W	
R864			RK73HB1J474J	CHIP R	470K	J	1/16W	
R865			RK73HB1J103J	CHIP R	10K	J	1/16W	
R866			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R869			RK73HB1J101J	CHIP R	100	J	1/16W	
R870			RK73HB1J224J	CHIP R	220K	J	1/16W	
R871			RK73HB1J103J	CHIP R	10K	J	1/16W	
R872			RK73HB1J823J	CHIP R	82K	J	1/16W	
R873			RK73HB1J103J	CHIP R	10K	J	1/16W	
R874			RK73HB1J823J	CHIP R	82K	J	1/16W	
R875			RK73HB1J103J	CHIP R	10K	J	1/16W	
R876			RK73HB1J104J	CHIP R	100K	J	1/16W	
R877,878			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R879			RK73HB1J104J	CHIP R	100K	J	1/16W	
R880			RK73HB1J821J	CHIP R	820	J	1/16W	
R881			RK73HB1J103J	CHIP R	10K	J	1/16W	
R882			RK73HB1J154J	CHIP R	150K	J	1/16W	
R883			RN73HH1J563D	CHIP R	56K	D	1/16W	
R884			RN73HH1J473D	CHIP R	47K	D	1/16W	
R885			RN73HH1J393D	CHIP R	39K	D	1/16W	
R886			RK73HB1J103J	CHIP R	10K	J	1/16W	
R887			RN73HH1J104D	CHIP R	100K	D	1/16W	
R888			RK73HB1J103J	CHIP R	10K	J	1/16W	

Ref. No.	Address	New parts	Parts No.	Description			
R889			RK73HB1J000J	CHIP R	0.0	J	1/16W
R890			RK73HB1J224J	CHIP R	220K	J	1/16W
R891			RK73HB1J103J	CHIP R	10K	J	1/16W
R892			RK73HB1J000J	CHIP R	0.0	J	1/16W
R893,894			RK73HB1J102J	CHIP R	1.0K	J	1/16W
R895			RK73HH1J105D	CHIP R	1.0M	D	1/16W
R896			RK73HH1J334D	CHIP R	330K	D	1/16W
R897			RK73HB1J101J	CHIP R	100	J	1/16W
R898			RK73HB1J000J	CHIP R	0.0	J	1/16W
R900			RK73HB1J471J	CHIP R	470	J	1/16W
R901			RK73HB1J102J	CHIP R	1.0K	J	1/16W
R902,903			RK73HB1J101J	CHIP R	100	J	1/16W
R904			RK73HB1J000J	CHIP R	0.0	J	1/16W
R905-907			RK73HB1J103J	CHIP R	10K	J	1/16W
R908			RK73HB1J154J	CHIP R	150K	J	1/16W
R909			RK73HB1J103J	CHIP R	10K	J	1/16W
R910			RK73HB1J272J	CHIP R	2.7K	J	1/16W
R912			RK73HB1J272J	CHIP R	2.7K	J	1/16W
R914			RK73HB1J272J	CHIP R	2.7K	J	1/16W
R915			RK73HB1J103J	CHIP R	10K	J	1/16W
R916,917			RK73HB1J000J	CHIP R	0.0	J	1/16W
R918,919			RK73HB1J473J	CHIP R	47K	J	1/16W
R920			RK73HB1J103J	CHIP R	10K	J	1/16W
R921			RK73HB1J472J	CHIP R	4.7K	J	1/16W
R922			RK73HB1J272J	CHIP R	2.7K	J	1/16W
R923			RK73HB1J103J	CHIP R	10K	J	1/16W
R924			RK73HH1J123D	CHIP R	12K	D	1/16W
R925			RK73HH1J223D	CHIP R	22K	D	1/16W
R926			RK73HB1J332J	CHIP R	3.3K	J	1/16W
R927,928			RK73HB1J123J	CHIP R	12K	J	1/16W
R929			RK73HB1J222J	CHIP R	2.2K	J	1/16W
R930			RK73GB1A101J	CHIP R	100	J	1/10W
R931			RK73HB1J102J	CHIP R	1.0K	J	1/16W
R932,933			RK73HB1J473J	CHIP R	47K	J	1/16W
R934			RK73HB1J102J	CHIP R	1.0K	J	1/16W
R935			RK73HB1J473J	CHIP R	47K	J	1/16W
R936-938			RK73HB1J102J	CHIP R	1.0K	J	1/16W
R939			RK73HB1J103J	CHIP R	10K	J	1/16W
R940,941			RK73HB1J123J	CHIP R	12K	J	1/16W
R942			RK73HB1J153J	CHIP R	15K	J	1/16W
R943-945			RK73HB1J103J	CHIP R	10K	J	1/16W
R946			RK73HB1J473J	CHIP R	47K	J	1/16W
R947			RK73HB1J154J	CHIP R	150K	J	1/16W
R948			RK73HB1J104J	CHIP R	100K	J	1/16W
R949			RK73HB1J103J	CHIP R	10K	J	1/16W
R950,951			RK73HB1J332J	CHIP R	3.3K	J	1/16W
R952			RK73HB1J103J	CHIP R	10K	J	1/16W
R953			RK73HB1J472J	CHIP R	4.7K	J	1/16W
R954,955			RK73HB1J103J	CHIP R	10K	J	1/16W
R956			RK73HB1J393J	CHIP R	39K	J	1/16W
R957			RK73HB1J473J	CHIP R	47K	J	1/16W
R958			RK73HB1J154J	CHIP R	150K	J	1/16W
R959,960			RK73HB1J563J	CHIP R	56K	J	1/16W
R961,962			RK73HB1J103J	CHIP R	10K	J	1/16W
R963			RK73HB1J393J	CHIP R	39K	J	1/16W
R964			RK73HB1J823J	CHIP R	82K	J	1/16W
R965			RK73HB1J334J	CHIP R	330K	J	1/16W
R966			RK73GB2A221J	CHIP R	220	J	1/10W
R967			RK73HB1J000J	CHIP R	0.0	J	1/16W
R968			RK73HB1J100J	CHIP R	10	J	1/16W

PARTS LIST

TX-RX UNIT (X57-784X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
R969			RK73HB1J223J	CHIP R 22K J 1/16W	
R970,971			RK73HB1J682J	CHIP R 6.8K J 1/16W	
R972,973			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R974,975			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R977			RK73HB1J473J	CHIP R 47K J 1/16W	
R979-982			RK73HB1J103J	CHIP R 10K J 1/16W	
R983,984			RK73HB1J104J	CHIP R 100K J 1/16W	
R985			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R986			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R988			RK73HB1J473J	CHIP R 47K J 1/16W	
R989			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R990			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R991-993			RK73HB1J153J	CHIP R 15K J 1/16W	
R995			RK73HB1J000J	CHIP R 0.0 J 1/16W	K
R996			RK73HB1J000J	CHIP R 0.0 J 1/16W	E
R997			RK73HB1J473J	CHIP R 47K J 1/16W	
R998			RK73HB1J683J	CHIP R 68K J 1/16W	
R999			RK73HB1J124J	CHIP R 120K J 1/16W	
S708-719			S70-0509-05	TACT SWITCH	
S720-722			S70-0516-05	TACT SWITCH	
S723-726			S70-0509-05	TACT SWITCH	
D5-7			HSC277	DIODE	
D8-11			BBY65-02V	VARIABLE CAPACITANCE DIODE	
D12-15			1SV325F	VARIABLE CAPACITANCE DIODE	
D16-23			BBY65-02V	VARIABLE CAPACITANCE DIODE	
D24-27			1SV325F	VARIABLE CAPACITANCE DIODE	
D28-31			BBY65-02V	VARIABLE CAPACITANCE DIODE	
D32,33			1SV325F	VARIABLE CAPACITANCE DIODE	
D35,36			1SV325F	VARIABLE CAPACITANCE DIODE	
D38-41			BBY65-02V	VARIABLE CAPACITANCE DIODE	
D42-45			1SV325F	VARIABLE CAPACITANCE DIODE	
D201-205			HSC277	DIODE	
D209			MA2S728	DIODE	
D210			015AZ3.9F	ZENER DIODE	
D211,212			HVC131	DIODE	
D214			HVC131	DIODE	
D215-217			HVU131-E	DIODE	
D219-222			HVC131	DIODE	
D223			1SS387	DIODE	
D225			02DZ15F-X,Y	ZENER DIODE	
D226			02DZ18F-X	ZENER DIODE	
D227			HVC131	DIODE	
D228			1SS387	DIODE	
D351			RB706F-40	DIODE	
D352			HSC277	DIODE	
D432,433			MA2S077G	DIODE	
D434,435			1SV325F	VARIABLE CAPACITANCE DIODE	
D436			MA2S111-F	DIODE	
D437			HSC277	DIODE	
D511			RB751V-40	DIODE	
D513			MA2S111-F	DIODE	
D514,515			MA2S077G	DIODE	
D516-518			HSC277	DIODE	
D519-522			1SV325F	VARIABLE CAPACITANCE DIODE	
D523,524			1SV278F	VARIABLE CAPACITANCE DIODE	
D525			HSC277	DIODE	
D643			015AZ5.1(Y)F	ZENER DIODE	
D644			RB051L-40	DIODE	
D645			HZU3BLL	ZENER DIODE	

Ref. No.	Address	New parts	Parts No.	Description	Destination
D646			RB051L-40	DIODE	
D647			HZU16-E(B2)	ZENER DIODE	
D648			DA221	DIODE	
D649,650			CMS05-Q	DIODE	
D701			HZC6.8-E	ZENER DIODE	
D702			02DZ8.2F-Y	ZENER DIODE	
D703			HZC6.8-E	ZENER DIODE	
D704			RSB12JS2	ZENER DIODE	
D705			HZC6.8-E	ZENER DIODE	
D706			MA2S111-F	DIODE	
D707			1SS388F	DIODE	
D716			RB706F-40	DIODE	
D725,726			RB706F-40	DIODE	
D727			1SS388F	DIODE	
D729,730			MA2S111-F	DIODE	K
D730,731			MA2S111-F	DIODE	E
D732,733			MA2S111-F	DIODE	K
D733			MA2S111-F	DIODE	E
D734-739			1SS388F	DIODE	
D740			EDZ4.3B	ZENER DIODE	
D741			MA2S728	DIODE	
IC201			LMC7101BIM5	MOS-IC	
IC202			UPC3232TB	BI-POLAR IC	
IC203			LMC7101BIM5	MOS-IC	
IC351			TC75W51FK(F)	MOS-IC	
IC352			TC7W53FK(F)	MOS-IC	
IC353,354			NJM2591V	BI-POLAR IC	
IC431			MB15E03SL-E1	MOS-IC	
IC512			TC7660SEOA	MOS-IC	
IC513			MB15E03SL-E1	MOS-IC	
IC514			XC6201P532DR	MOS-IC	
IC611			78F0515AGKDXA	MCU	
IC639			XC6118C10AMR	MOS-IC	
IC641			LM3420-8.4N	MOS-IC	
IC642			NJM2904RB1-ZB	BI-POLAR IC	
IC643			XC6201P152DR	MOS-IC	
IC644			XC9221C09AMR	MOS-IC	
IC645			XC6202P452DR	MOS-IC	
IC646			NJM2872F33	BI-POLAR IC	
IC701			NJM2130F3-ZB	BI-POLAR IC	
IC702			ADM3101E	MOS-IC	
IC703			LM2682MMX	MOS-IC	
IC705			NJM2387A	BI-POLAR IC	
IC708,709			TC7W53FK(F)	MOS-IC	
IC710			CP2102SX0567	MOS-IC	
IC712			NJM2107F-ZB	ANALOGUE IC	
IC713			R3119N042AFE	MOS-IC	
IC714			TC75W51FK(F)	MOS-IC	
IC715			TK11233CU	BI-POLAR IC	
IC716			TC75W51FK(F)	MOS-IC	
IC717			R2023T	MOS-IC	
IC718			TA48S033AF	BI-POLAR IC	
IC719			NJM2872AF47	BI-POLAR IC	
IC720			TC7W53FK(F)	MOS-IC	
IC721			AK2330	MOS-IC	
IC722			NJM2112V-ZB	MOS-IC	
IC724			TC7W74FK	MOS-IC	
IC725			TA75S393F-F	MOS-IC	
IC726			XC6109C28ANN	ANALOGUE IC	
IC727			5F364AMDFB	MCU	

K : TH-D72A
E : TH-D72E

PARTS LIST

TX-RX UNIT (X57-784X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
IC728			TGT0210Q	MOS-IC	
IC730			M95512-RDW6TP	ROM IC	
IC731			M95M01-RMN6TP	ROM IC	
IC732			TA75W393FU-F	MOS-IC	
IC733			TC75W51FK(F)	MOS-IC	
IC734			NJM2070M-ZB	MOS-IC	
IC735			TC7S66FUF	MOS-IC	
IC736		*	NJM2878F4-33	BI-POLAR IC	
IC737			5F3651TDFC	MCU	
Q1			3SK318	FET	
Q2			3SK294-FP	FET	
Q3			3SK318	FET	
Q4			3SK294-FP	FET	
Q5,6			3SK318	FET	
Q7,8			3SK294-FP	FET	
Q9-11			3SK318	FET	
Q12			2SK1830F	FET	
Q13			3SK318	FET	
Q14-16			2SK1830F	FET	
Q201			2SC5488A-H	TRANSISTOR	
Q204			2SC5488A-H	TRANSISTOR	
Q205			2SK1830F	FET	
Q207			2SC4617(R)	TRANSISTOR	
Q208			RN4902-F	TRANSISTOR	
Q209			SSM6L05FU-F	FET	
Q210			SSM3J05FU-F	FET	
Q211			2SK1830F	FET	
Q212			RN4902-F	TRANSISTOR	
Q214			NE5500234	FET	
Q215			2SK3476-F	FET	
Q352			2SC4617(R)	TRANSISTOR	
Q353			2SK1830F	FET	
Q354			2SC4617(R)	TRANSISTOR	
Q355			2SK1830F	FET	
Q356			2SC4617(R)	TRANSISTOR	
Q357			2SC4649(N,P)	TRANSISTOR	
Q358,359			2SC4617(S)	TRANSISTOR	
Q433			2SC4617(R)	TRANSISTOR	
Q434			2SC5488A-H	TRANSISTOR	
Q435			MCH3914(7)-H	FET	
Q436-438			2SC5488A-H	TRANSISTOR	
Q512			2SC4617(R)	TRANSISTOR	
Q518			RT1N141U-T111	TRANSISTOR	
Q521			2SC5488A-H	TRANSISTOR	
Q522,523			MCH3914(7)-H	FET	
Q524			2SC5488A-H	TRANSISTOR	
Q611-614			SSM6L05FU-F	FET	
Q615,616			SSM3J05FU-F	FET	
Q642			2SK3019	FET	
Q643			2SC5706	TRANSISTOR	
Q644			SSM3J05FU-F	FET	
Q645			2SA1832(GR)F	TRANSISTOR	
Q646			RT1P436U-T111	TRANSISTOR	
Q648			2SK1830F	FET	
Q649			TPC6110-F	FET	
Q650			2SJ506-E(S)	FET	
Q651,652			SSM6L05FU-F	FET	
Q653			CPH3417	FET	
Q654			SSM6J08FU(F)	FET	
Q655,656			CPH6122	TRANSISTOR	

Ref. No.	Address	New parts	Parts No.	Description
Q657			SSM6J08FU(F)	FET
Q658,659			UMX2N	TRANSISTOR
Q660			2SJ347F	FET
Q661			SSM6P05FU(F)	FET
Q662			SSM6L05FU-F	FET
Q663			2SK1830F	FET
Q664			RT1N441U-T111	TRANSISTOR
Q701			SSM3J05FU-F	FET
Q702			2SK1830F	FET
Q703			CPH3417	FET
Q704			2SJ347F	FET
Q707			SSM6L05FU-F	FET
Q708			UPA672T-A	FET
Q709			SSM6L05FU-F	FET
Q710			UPA672T-A	FET
Q711			2SK1830F	FET
Q712			2SC4738(GR)F	TRANSISTOR
Q713			2SA1832(GR)F	TRANSISTOR
Q714			2SK1830F	FET
Q715			2SC4617(R)	TRANSISTOR
Q716			2SK1830F	FET
Q717,718			2SC4617(R)	TRANSISTOR
Q719			SSM6L05FU-F	FET
Q720			SSM3J05FU-F	FET
Q721			12A02CH	TRANSISTOR
Q722			2SC4617(R)	TRANSISTOR
Q723,724			RT1N441U-T111	TRANSISTOR
Q725			SSM3J05FU-F	FET
Q726			2SC4617(R)	TRANSISTOR
Q727			2SA1774(R)	TRANSISTOR
Q728,729			2SC4617(R)	TRANSISTOR
Q730			SSM6L05FU-F	FET
TH1,2			NCP18XH103J0S	THERMISTOR
TH201			NCP18XH103J0S	THERMISTOR
TH355,356			ERTJ0EV104H	THERMISTOR
TH701			ERTJ0EV104H	THERMISTOR
TH703			NCP18WB473J0S	THERMISTOR