
9. EXPLODED VIEWS AND PARTS LIST

NOTES : • *Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
• *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
• *Screw adjacent to ▽ mark on the product are used for disassembly.*
• *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions,apply as you think it appropriate.)*

9.1 PACKING

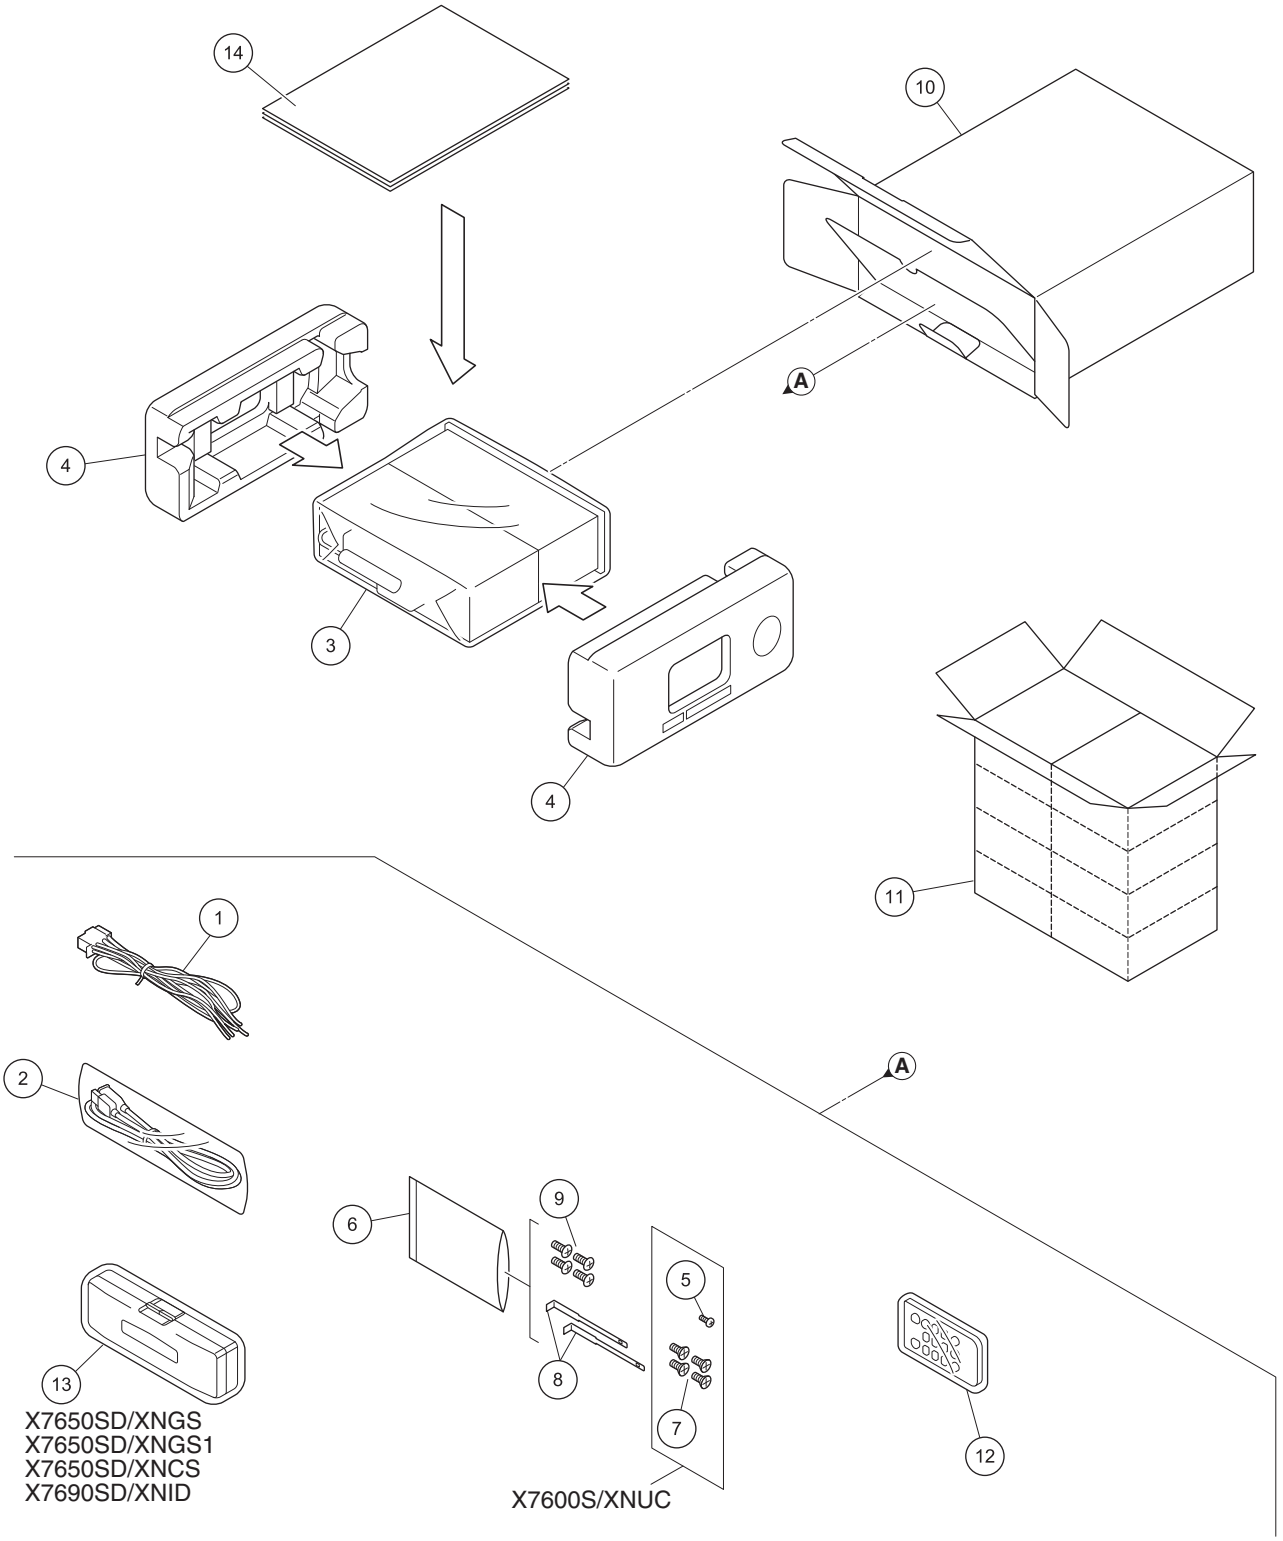

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Cord Assy	CDP1484
	2	USB Extended Cable	CDP1587
	3	Polyethylene Bag	See Contrast table (2)
	4	Protector	CHP4594
	5	Screw	See Contrast table (2)
	6	Polyethylene Bag	CEG1160
	7	Screw	See Contrast table (2)
	8	Handle	QNC3021
	9	Screw	TRZ50P080FTC
	10	Unit Box	See Contrast table (2)
	11	Contain Box	See Contrast table (2)
	12	Card Remote Control Unit	QXE1047
	13	Case Assy	See Contrast table (2)
	14-1	Owner's Manual	See Contrast table (2)
*	14-2	Warranty Card	See Contrast table (2)
*	14-3	Service Network	See Contrast table (2)

(2) CONTRAST TABLE


DEH-X7600S/XNUC, DEH-X7650SD/XNGS, DEH-X7650SD/XNGS1, DEH-X7650SD/XNCS and DEH-X7690SD/XNID are constructed the same except for the following:

Mark	No.	Description	DEH-X7600S/XNUC	DEH-X7650SD/XNGS	DEH-X7650SD/XNGS1	DEH-X7650SD/XNCS	DEH-X7690SD/XNID
	3	Polyethylene Bag	CEG1173	QEG3001	QEG3001	QEG3001	QEG3001
	5	Screw	BPZ20P060FTC	Not used	Not used	Not used	Not used
	7	Screw	CRZ50P090FTC	Not used	Not used	Not used	Not used
	10	Unit Box	QHG3607	QHG3609	QHG3610	QHG3608	QHG3611
	11	Contain Box	QHL3607	QHL3609	QHL3610	QHL3608	QHL3611
	13	Case Assy	Not used	YXA5856	YXA5856	YXA5856	YXA5856
	14-1	Owner's Manual	QRD3228	QRD3230	QRD3230	QRD3229	QRB3386
*	14-2	Warranty Card	QRY3001	Not used	CRY1394	Not used	CRY1304
*	14-3	Service Network	Not used	Not used	CRY1395	Not used	CRY1305

Owner's Manual,Installation Manual

Part No.	Language
QRD3228	English, French, Spanish(Espanol)
QRD3230	English, Traditional Chinese, Arabic, Persian
QRD3229	English, Spanish(Espanol), Portuguese(B)
QRB3386	English

9.2 EXTERIOR

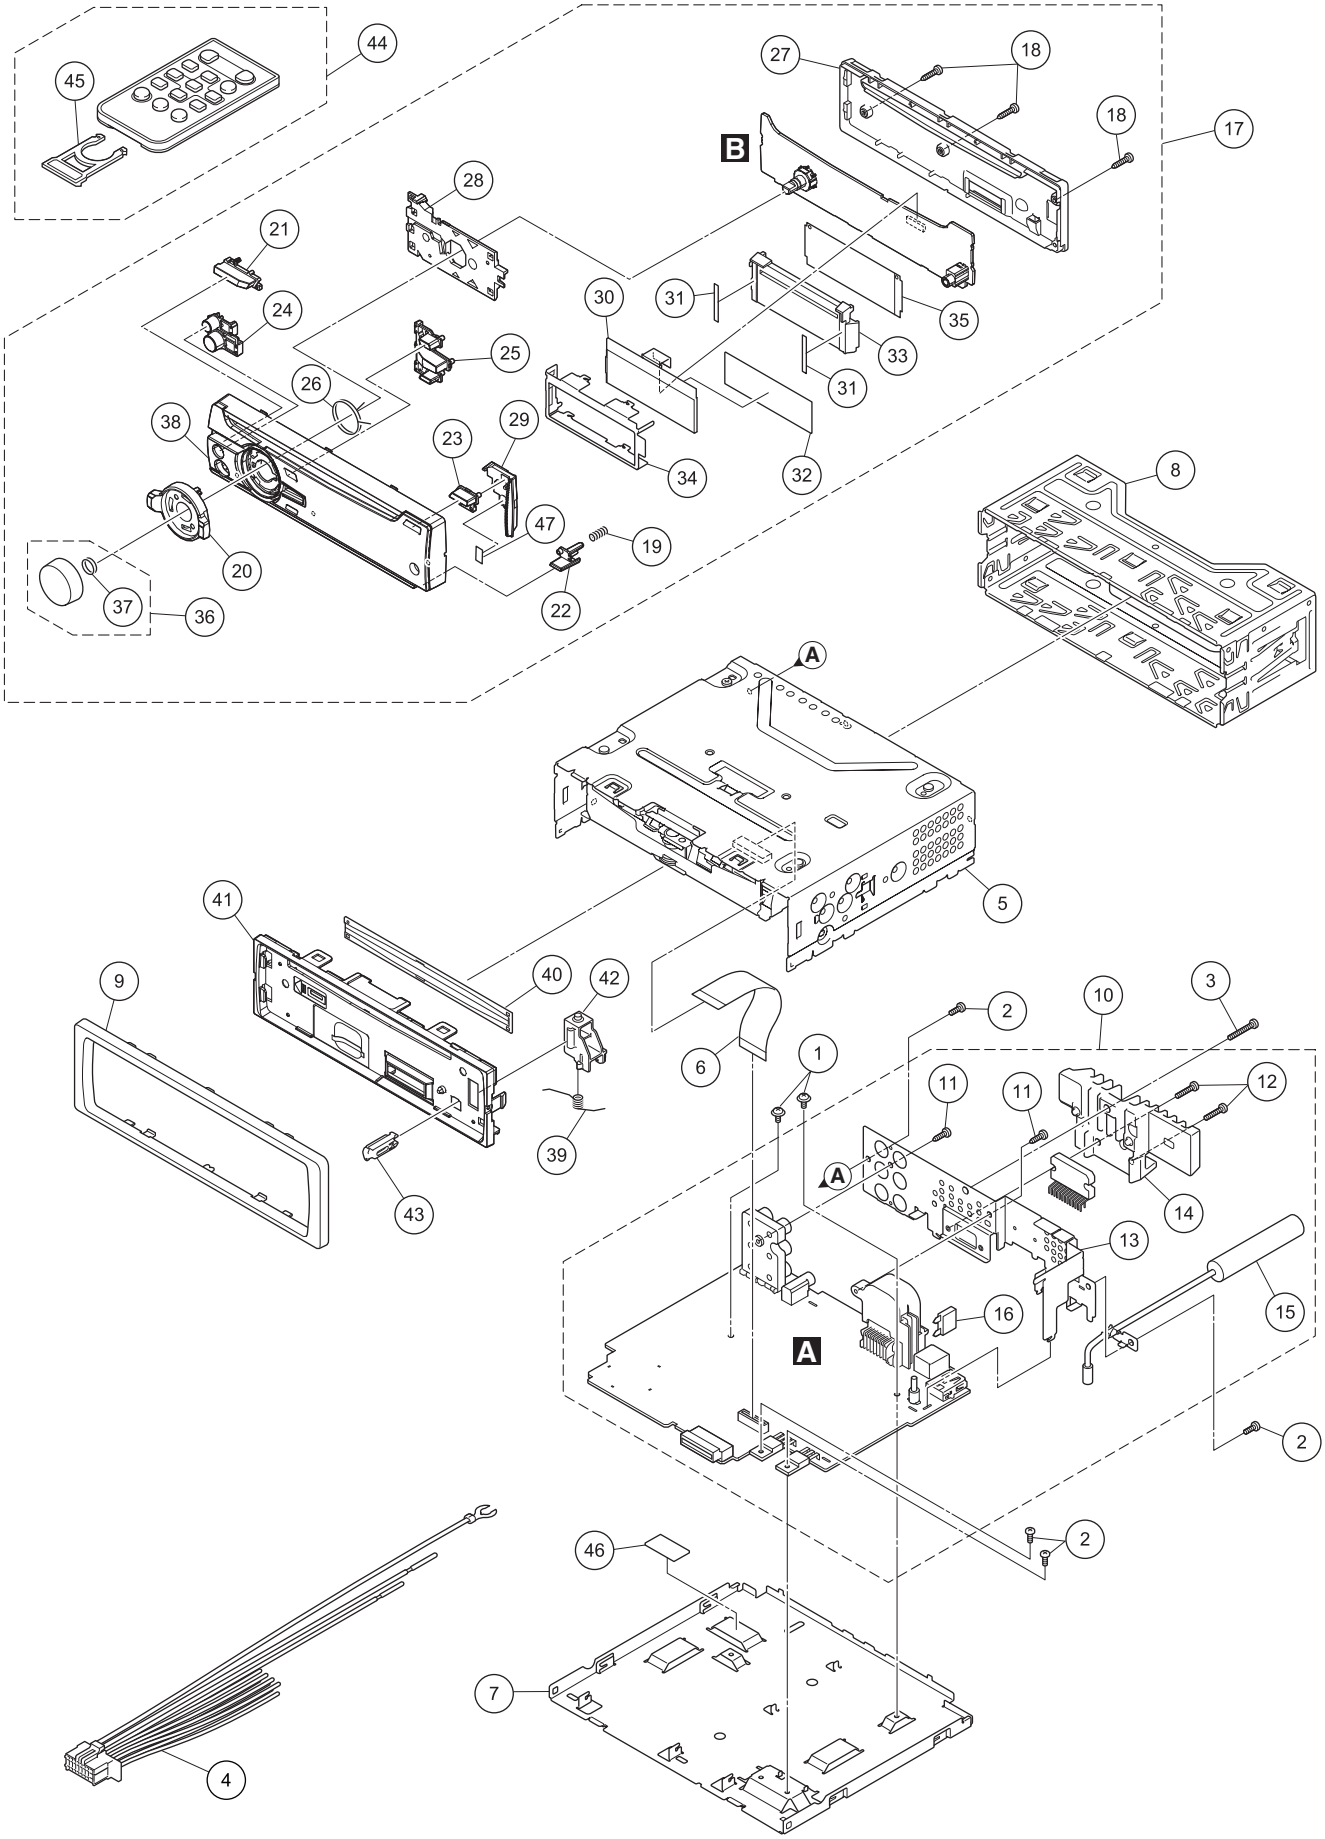
1
2
3
4
A
B
C
D
E
F
44
45
27
18
18
17
B
28
21
24
30
31
35
25
33
26
31
38
29
23
34
32
47
19
20
22
37
36
8
A
5
41
40
42
9
6
1
2
10
3
11
11
12
A
14
13
16
15
A
39
43
2
46
7
4
2

(1) EXTERIOR SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	Screw	ASZ26P050FTC
	2	Screw	BSZ26P060FTC
	3	Screw	BSZ26P120FTC
	4	Cord Assy	CDP1484
	5	CD Mechanism Module (S11.6)	CXK5804
	6	FFC	QDE3029
	7	Case	QNB3018
	8	Holder	QNC3020
	9	Panel	QNS3576
	10	Tuner Amp Assy	See Contrast table (2)
	11	Screw	BPZ26P080FTC
	12	Screw	BSZ26P120FTC
	13	Holder	See Contrast table (2)
	14	Heat Sink	See Contrast table (2)
	15	Antenna Attached Cable	YDH5001
⚠	16	Fuse (10A)	YEK5001
	17	Detachable Grille Assy	See Contrast table (2)
	18	Screw	BPZ20P100FTC
	19	Spring	CBH2210
	20	Lever	QAA3040
	21	Button (APP)	QAC3144
	22	Button (DETACH)	QAC3146
	23	Button (EJECT)	QAC3147
	24	Button (DISP)	QAC3148
	25	Button (MIX)	QAC3149
	26	Spring	QBH3006
	27	Cover	QNS3628
	28	Lighting Conductor	QNV3080
	29	Lighting Conductor	QNV3081
	30	LCD	See Contrast table (2)
	31	Tape	QNM3063
	32	Sheet	QNM3098
	33	Lighting Conductor	QNV3089
	34	Holder	YNC5101
	35	Sheet	YNM5187
	36	Knob Unit	QXA3981
	37	Spring	YBL5010
	38	Grille Unit	See Contrast table (2)
	39	Spring	QBH3001
	40	Cover	QNM3029
	41	Panel	See Contrast table (2)
	42	Arm	QNV3025
	43	Button	QNV3026
	44	Card Remote Control Unit	QXE1047
	45	Cover	CNS7068
	46	Sheet	QNM3105
	47	Sheet	QNM3101

(2) CONTRAST TABLE

DEH-X7600S/XNUC, DEH-X7650SD/XNGS, DEH-X7650SD/XNGS1, DEH-X7650SD/XNCS and DEH-X7690SD/XNID are constructed the same except for the following:

Mark	No.	Description	DEH-X7600S/XNUC	DEH-X7650SD/XNGS	DEH-X7650SD/XNGS1	DEH-X7650SD/XNCS	DEH-X7690SD/XNID
	10	Tuner Amp Assy	QWM3777	QWM3778	QWM3778	QWM3779	QWM3780
	13	Holder	QNC3061	YNC5109	YNC5109	YNC5109	YNC5109
	14	Heat Sink	QNR3010	QNR3002	QNR3002	QNR3010	QNR3002
	17	Detachable Grille Assy	QXA3988	QXA3990	QXA3990	QXA3989	QXA3991
	30	LCD	CAW2043	CAW2040	CAW2040	CAW2040	CAW2040
	38	Grille Unit	QXA4000	QXA4001	QXA4001	QXA4001	QXA4003
	41	Panel	QNS3669	QNS3627	QNS3627	QNS3627	QNS3627

9.3 CD MECHANISM MODULE

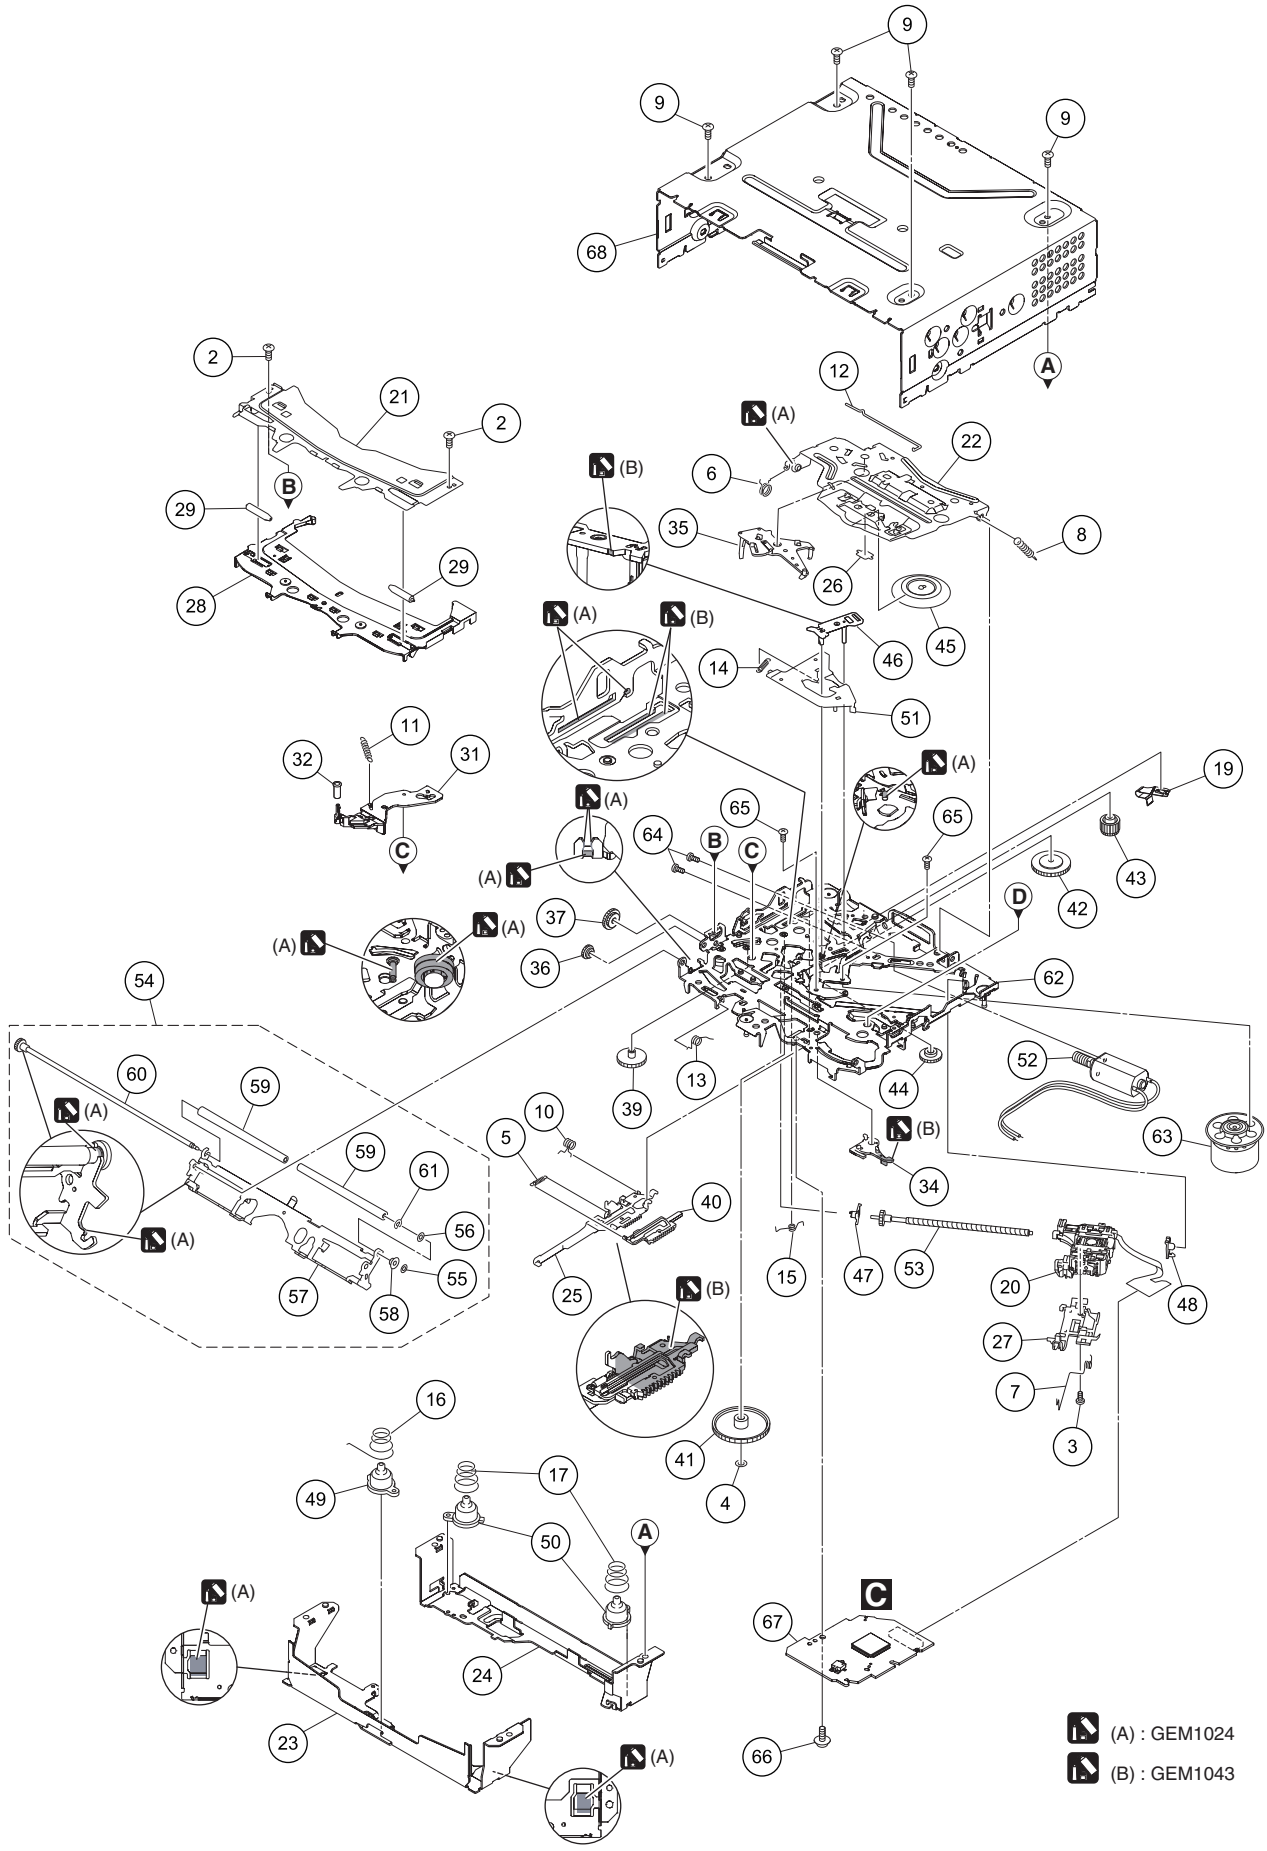

CD MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.
1	.....	
2	Screw	BSZ20P040FTC
3	Screw(M2 x 4)	CBA1835
4	Washer	CBF1038
5	Spring	CBH3010
6	Spring	CBH2855
7	Spring	CBH2856
8	Spring	CBH2860
9	Screw	BSZ26P060FTC
10	Spring	CBH3011
11	Coil Spring	CBH3095
12	Spring	CBH3014
13	Spring	CBH3015
14	Spring	CBH3016
15	Spring	CBH3017
16	Spring	CBH3086
17	Spring	CBH3019
18	.....	
19	Leaf Spring	CBL1824
20	Pickup Unit(P10.6)(Service)	CXX3556
21	Bracket	CND4553
22	Arm	CND6406
23	Bracket	CND6127
24	Bracket	CND5710
25	Lever	CND5398
26	Sheet	CNN3678
27	Rack	CNV8342
28	Guide	CNW2240
29	Roller	CNW1172
30	.....	
31	Arm	CNW2241
32	Roller	CNW1175
33	.....	
34	Arm	CNW1177
35	Arm	CNW1178
36	Gear	CNW1180
37	Gear	CNW1181
38	.....	
39	Gear	CNW1183
40	Rack	CNW1184
41	Gear	CNW1185
42	Gear	CNW1186
43	Gear	CNW1187
44	Gear	CNW2287
45	Clamper	CNW1190
46	Arm	CNW1192
47	Holder	CNW1193
48	Holder	CNW1194
49	Damper	CNW1197
50	Damper	CNW1198
51	Arm	CNW1726
52	Motor Unit(M2)(LOAD/CRG)	CXC4026
53	Screw Unit	CXC8894
54	Arm Assy	CXE6232
55	Washer	CBF1037
56	Washer	CBF1038
57	Arm	CND6242
58	Collar	CNW2444
59	Roller	CNW2500
60	Gear Unit	CXE6225
61	Washer	YE15FTC
62	Chassis Unit	CXE4528
63	Motor Unit(M1)(SPDL)	CXE2273
64	Screw	JFZ20P025FTC
65	Screw	JGZ17P022FTC
66	Screw	EBA1028
67	CD Core Unit (S11.6STD)	CWX4023
68	Chassis	CNA3181

12. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

  Chip Resistor

  RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J

  Chip Capacitor (except for CQS.....)

  CKS....., CCS....., CSZS.....
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Meaning of the figures and others in the parentheses in the parts list.*

  Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

  IC 301 (A, 91, 111) IC NJM2068V
- *The expression of the unit in this manual is shown by u instead of μ. Please do not make a mistake.*

A:DEH-X7600S/XNUC

B:DEH-X7650SD/XNGS

C:DEH-X7650SD/XNGS1

D:DEH-X7650SD/XNCS

E:DEH-X7690SD/XNID

Unit Number : QWM3777(A)

Unit Number : QWM3778(B,C)

Unit Number : QWM3779(D)

Unit Number : QWM3780(E)

Unit Name : Tuner Amp Assy

Unit Number :

Unit Name : Keyboard Unit

Unit Number : CWX4023

Unit Name : CD Core Unit (S11.6STD)

A

Unit Number : QWM3777(A)

Unit Number : QWM3778(B,C)

Unit Number : QWM3779(D)

Unit Number : QWM3780(E)

Unit Name : Tuner Amp Assy

MISCELLANEOUS

Circuit Symbol and No.		Part No.
IC 151	(A,81,115) IC	PM9012A
IC 181	(A,106,108) IC	NJW4132U2-A
IC 201	(A,40,110) IC	AN33014UA
IC 321	(A,81,142) IC	PA2032A
IC 371	(A,62,88) IC	WM8761BGED
IC 391	(A,138,60) Regulator IC	NJM2885DL1-05
IC 401	(A,141,87) IC	TDA7706
IC 601	(A,106,65) IC(A)	PEQ260A8
	(A,106,65) IC(B,C,D,E)	PEQ261A8
IC 603	(A,127,46) IC	S-80827CNMC-B8M
IC 604	(A,101,82) IC(A)	TC7SH126FU
IC 605	(A,97,82) L-MOS And Gate(A)	TC7SET08FUS1
IC 651	(A,70,68) IC	R5S726B0D216FP
IC 701	(A,43,70) RAM IC	M12L64164A-5TG2Y
IC 721	(A,33,92) Regulator IC	S-1155B12-U5
IC 731	(A,72,89) Flash ROM Unit	PEB125A8
IC 741	(A,84,53) IC(A)	MX25L4006EM2I-12G
IC 881	(A,54,93) IC	337S3959
IC 901	(A,13,63) Regulator IC	BD9876EFJ
IC 931	(A,27,57) Regulator IC	S-1172B33-E6
IC 941	(A,140,42) IC	NJM2388F84
Q 301	(A,11,130) Transistor	IMH23
Q 302	(A,20,130) Transistor	IMH23
Q 303	(A,28,130) Transistor	IMH23
Q 351	(A,57,132) Transistor	LSCR523UB
Q 352	(A,63,128) Chip Transistor	RN4983
Q 353	(A,67,128) Transistor	LTC014EEB
Q 701	(A,34,84) Transistor	LSAR523UB
Q 771	(A,155,41) Transistor	KTD2092
Q 772	(A,151,47) Chip Transistor	RN4983
Q 831	(A,114,28) Transistor	2SA1577
Q 832	(A,114,31) Transistor	LTC143EUB
Q 841	(A,107,29) Transistor	LSAR523UB
Q 842	(A,110,31) Transistor	LTC014EEB
Q 851	(A,53,40) Chip Transistor(B,C,D,E)	2SB1689
Q 852	(A,55,40) Transistor(B,C,D,E)	LTC014EEB
Q 853	(A,58,41) Transistor(B,C,D,E)	DTA123EU
Q 881	(A,50,87) Transistor	LSAR523UB
Q 921	(A,20,54) Transistor	2SD2153
Q 922	(A,21,59) Chip Transistor	RN4983
Q 951	(A,143,130) Chip Transistor	HN1C01FU
Q 961	(A,93,121) Transistor	LTC014EEB
D 182	(A,103,104) Diode	RB551VM-30
D 201	(A,45,109) Diode	RB060M-30
D 202	(B,59,119) Diode	RB056L-40
D 351	(A,57,130) Diode	DA2J101
D 352	(A,61,131) Diode	DZ2J082M0
D 353	(A,63,131) Diode	DAN202UM

Circuit Symbol and No.		Part No.
D 401	(A,149,102) Diode	RN731VN
D 402	(A,148,95) Diode	RN731VN
D 771	(A,154,45) Diode	DZ2J082M0
D 801	(B,106,22) Diode	DZ2S068C
D 802	(B,108,22) Diode	DZ2S068C
D 803	(B,110,22) Diode	DZ2S068C
D 901	(A,12,68) Diode	RB056L-40
D 902	(B,8,72) Diode	1SR154-400
D 903	(B,25,54) Diode	CRG03
D 922	(B,20,56) Diode	DZ2J056M0
D 923	(B,12,44) Diode	DA2J101
D 924	(B,14,50) Diode(A)	DB2J31400
D 951	(A,134,126) Diode	DZ2J075M0
D 952	(A,140,131) Diode	DZ2J068M0
D 961	(B,104,125) Diode	CRG03
D 981	(A,135,132) Diode	1SR154-400
D 982	(A,135,128) Diode	1SR154-400
D 991	(B,93,127) Diode	CRG03
L 151	(A,92,115) Inductor	LCTAW6R8J2520
L 181	(A,99,110) Choke Coil 22 uH	CTH1561
L 201	(A,154,125) Inductor	CTF1713
L 202	(A,50,106) Inductor	CTH1524
L 371	(A,58,96) Chip Ferrite Bead	DTL1107
L 402	(A,142,97) Inductor	CTF1786
L 403	(A,139,99) Inductor	CTF1786
L 404	(A,149,98) Chip Coil	LCTAWR15J2520
L 405	(A,146,99) Chip Coil	LCTAWR27J2520
L 406	(A,140,101) Inductor	CTF1389
L 409	(A,133,95) Inductor	LCTC1R5K1608
L 410	(A,151,92) Inductor	CTF1786
L 411	(A,151,91) Inductor	CTF1786
L 412	(A,128,87) Chip Coil	LCTAW470J2520
L 414	(A,132,78) Inductor	CTF1786
L 415	(A,146,78) Inductor	CTF1786
L 651	(A,84,61) Chip Beads	VTL1127
L 652	(A,37,88) Inductor(B,C,D)	CTF1786
L 653	(A,47,52) Chip Ferrite Bead	DTL1107
L 701	(A,31,78) Chip Ferrite Bead	DTL1107
L 731	(B,75,88) Inductor	CTF1389
L 851	(B,55,36) Inductor(B,C,D,E)	CTF1389
L 901	(A,10,75) Inductor	CTH1521
L 981	(A,114,141) Choke Coil 600 uH	CTH1432
X 401	(A,152,85) Resonator 36.480 MHz	CSS1805
X 601	(A,93,66) Resonator 20.000 MHz	CSS1795
X 651	(A,85,66) Resonator 12.000 MHz	YSS5005
X 652	(A,77,84) Resonator 16.93 MHz	CSS1794
P 301	(A,36,128) Poly Switch	FSMD075-24R
P 401	(A,152,112) Surge Absorber	IMSA-6803-01Y900
⚠P471	(A,123,97) Fuse 1.25 A(A)	CEK1382
BZ601	(A,87,29) Buzzer	CPV1062
VA801	(B,102,22) Varistor	EZJZ1V270RM
VA802	(B,113,22) Varistor	EZJZ1V270RM
VA803	(B,119,22) Varistor	EZJZ1V270RM
VA804	(B,117,22) Varistor	EZJZ1V270RM
VA805	(B,115,22) Varistor	EZJZ1V270RM
VA806	(B,121,22) Varistor	EZJZ1V270RM
VA807	(B,122,22) Varistor	EZJZ1V270RM
VA808	(B,120,12) Varistor	EZJZ1V270RM
CN751	(A,116,38) Connector	VKN1192
CN802	(A,111,4) Connector	CKS6452

Circuit Symbol and No.		Part No.
JA101	(A,145,143) Connector(A)	CKS3806
JA121	(A,45,138) Jack	CKS6437
JA201	(A,163,135) USB Jack	CKN1091
JA301	(A,22,138) Pin Jack	XKB7001
JA401	(A,157,116) ANT Pigtail Cable	YDH5001
JA851	(A,66,21) Connector(B,C,D,E)	YKS5040
JA981	(A,116,141) Connector	CKM1613

RESISTORS

R 102	(B,144,132) (A)	RS1/10SR473J
R 103	(A,148,134) (A)	RS1/16SS102J
R 104	(A,148,131) (A)	RS1/16SS102J
R 105	(A,147,131) (A)	RS1/16SS102J
R 106	(A,145,131) (A)	RS1/16SS102J
R 107	(A,149,134) (A)	RS1/16SS181J
R 108	(B,148,134) (A)	RS1/10SR223J
R 109	(B,148,135) (A)	RS1/10SR223J
R 110	(A,150,134) (A)	RS1/16SS181J
R 121	(A,46,129)	RS1/10SR102J
R 122	(A,44,129)	RS1/10SR102J
R 151	(A,72,107)	RS1/16SS223J
R 152	(A,86,107)	RS1/16SS223J
R 153	(A,73,107)	RS1/16SS331J
R 154	(A,73,124)	RS1/16SS102J
R 155	(A,72,124)	RS1/16SS102J
R 156	(A,73,123)	RS1/16SS102J
R 182	(A,111,104)	RS1/16SS0R0J
R 183	(A,110,104)	RS1/16SS4703D
R 184	(A,108,104)	RS1/16SS1802D
R 187	(A,95,113)	RS1/16SS0R0J
R 189	(A,106,104)	RS1/16SS1802D
R 190	(A,109,105)	RS1/16SS330J
R 192	(A,116,112)	RS1/10SR0R0J
R 196	(A,113,105)	RS1/10SR0R0J
R 202	(A,55,103)	RS1/10SR681J
R 203	(A,55,104)	RS1/10SR681J
R 204	(A,47,113) 0.056 ohm	ACN7160
R 206	(A,40,103)	RS1/16SS4702D
R 207	(A,37,103)	RS1/16SS224J
R 208	(A,33,117)	RS1/16SS152J
R 210	(A,34,116)	RS1/16SS3302D
R 211	(A,34,114)	RS1/16SS8201D
R 212	(A,35,116)	RS1/16SS223J
R 301	(A,8,129)	RS1/16SS820J
R 302	(A,14,129)	RS1/16SS820J
R 303	(A,17,129)	RS1/16SS820J
R 304	(A,22,129)	RS1/16SS820J
R 305	(A,25,129)	RS1/16SS820J
R 306	(A,31,129)	RS1/16SS820J
R 307	(A,8,130)	RS1/16SS223J
R 308	(A,14,130)	RS1/16SS223J
R 309	(A,16,130)	RS1/16SS223J
R 310	(A,23,130)	RS1/16SS223J
R 311	(A,25,130)	RS1/16SS223J
R 312	(A,31,130)	RS1/16SS223J
R 321	(A,78,124)	RS1/16SS362J
R 322	(A,79,124)	RS1/16SS362J
R 323	(A,82,124)	RS1/16SS362J
R 324	(A,83,124)	RS1/16SS362J

Circuit Symbol and No.		Part No.
R 325	(A,77,125)	RS1/16SS562J
R 326	(A,79,125)	RS1/16SS562J
R 327	(A,82,125)	RS1/16SS562J
R 328	(A,84,125)	RS1/16SS562J
R 329	(B,75,132)	RS1/10SR562J
R 330	(B,70,131)	RS1/10SR103J
R 331	(B,72,132)	RS1/10SR103J
R 351	(A,64,126)	RS1/16SS473J
R 352	(A,62,134)	RS1/16SS473J
R 353	(B,56,131)	RS1/10SR473J
R 354	(A,59,134)	RS1/16SS104J
R 355	(A,69,129)	RS1/16SS103J
R 356	(A,61,126)	RS1/16SS102J
R 357	(A,68,130)	RS1/16SS103J
R 358	(A,68,131)	RS1/16SS681J
R 360	(A,91,121)	RS1/16SS0R0J
R 371	(A,78,96)	RS1/16SS821J
R 372	(A,78,94)	RS1/16SS821J
R 401	(A,144,103)	RS1/16SS105J
R 402	(A,152,102)	RS1/16SS221J
R 403	(A,151,95)	RS1/16SS751J
R 404	(A,131,95)	RS1/16SS331J
R 405	(A,135,95)	RS1/16SS105J
R 406	(A,130,91)	RS1/16SS471J
R 407	(A,131,90)	RS1/16SS330J
R 408	(A,131,88)	RS1/16SS681J
R 410	(A,128,80)	RS1/4SA8R2J
R 411	(A,126,80)	RS1/4SA8R2J
R 413	(A,137,74)	RS1/16SS102J
R 415	(A,132,79)	RS1/16SS0R0J
R 421	(B,152,100) (A,B,C,D)	RS1/8SQ0R0J
R 422	(B,148,100) (A,B,C,D)	RS1/8SQ0R0J
R 424	(A,129,98)	RS1/8SQ0R0J
R 425	(A,139,106)	RS1/8SQ0R0J
R 474	(A,116,80) (A)	RS1/16SS183J
R 477	(A,108,78) (A)	RS1/16SS183J
R 479	(A,121,97) (A)	RS1/10SR0R0J
R 601	(A,94,33)	RS1/16SS102J
R 602	(B,102,71)	RS1/10SR154J
R 603	(A,98,56)	RS1/16SS222J
R 604	(A,95,65)	RS1/16SS105J
R 607	(A,98,55)	RS1/16SS104J
R 608	(A,99,54)	RS1/16SS104J
R 609	(A,92,71)	RS1/16SS104J
R 610	(A,99,76)	RS1/16SS104J
R 611	(A,93,60)	RS1/16SS104J
R 612	(A,93,58)	RS1/16SS104J
R 613	(A,105,82)	RS1/16SS103J
R 614	(A,96,64)	RS1/16SS104J
R 615	(A,96,66)	RS1/16SS101J
R 616	(A,101,76) (D,E)	RS1/16SS104J
R 617	(A,103,76) (B,C,D)	RS1/16SS104J
R 618	(B,106,52)	RS1/10SR472J
R 619	(A,112,76)	RS1/16SS103J
R 620	(B,106,64)	RS1/10SR104J
R 621	(A,104,54)	RS1/16SS104J
R 622	(B,93,50)	RS1/10SR104J
R 623	(B,95,50)	RS1/10SR104J
R 628	(A,116,68)	RS1/16SS104J
R 631	(A,116,64)	RS1/16SS104J
R 632	(A,116,73)	RS1/16SS472J
R 633	(A,116,72)	RS1/16SS472J
R 636	(A,124,46)	RS1/16SS104J
R 638	(A,123,46)	RS1/16SS152J
R 642	(B,94,64)	RS1/10SR104J
R 643	(B,98,70)	RS1/10SR104J
R 646	(A,119,69)	RS1/16SS104J
R 647	(A,104,82)	RS1/16SS103J
R 648	(B,101,82) (A)	RS1/10SR473J
R 650	(A,91,73) (A)	RS1/16SS0R0J
R 652	(A,80,56) (B,C,D,E)	RS1/16SS473J
R 653	(A,76,50) (B,C,D,E)	RS1/16SS473J
R 657	(A,87,62)	RS1/16SS101J
R 660	(B,84,70)	RS1/10SR221J
R 661	(B,58,86)	RS1/10SR221J
R 662	(A,85,61)	RS1/16SS181J
R 663	(A,83,67)	RS1/16SS332J
R 664	(B,77,71)	RS1/10SR473J
R 667	(B,81,74)	RS1/10SR473J
R 669	(A,69,81)	RS1/16SS101J
R 670	(A,70,83)	RS1/16SS101J
R 671	(A,71,83)	RS1/16SS101J
R 672	(A,72,83)	RS1/16SS101J
R 673	(A,73,81)	RS1/16SS101J
R 674	(A,74,81)	RS1/16SS101J
R 675	(A,65,81)	RS1/16SS221J
R 676	(A,65,82)	RS1/16SS221J
R 677	(A,67,81)	RS1/16SS221J
R 678	(B,69,81)	RS1/10SR221J
R 679	(A,76,81)	RS1/16SS332J
R 680	(A,37,89) (A,E)	RS1/16SS0R0J
R 681	(A,84,81)	RAB4CQ473J
R 682	(A,83,69)	RS1/16SS153J
R 683	(A,83,70)	RS1/16SS153J
R 684	(A,88,71)	RS1/16SS153J
R 685	(A,88,72)	RS1/16SS153J
R 686	(A,83,72)	RS1/16SS473J
R 687	(A,83,73)	RS1/16SS473J
R 688	(A,86,76)	RS1/16SS473J
R 689	(A,85,77)	RS1/16SS473J
R 690	(B,58,72)	RS1/10SR473J
R 691	(B,84,63)	RS1/10SR0R0J
R 692	(B,67,80)	RS1/10SR473J
R 693	(A,56,64) (B,C,D,E)	RS1/16SS221J
R 695	(B,77,67)	RS1/10SR473J
R 701	(B,43,76)	RS1/10SR473J
R 702	(A,43,79)	RS1/16SS472J
R 703	(A,41,79)	RAB4CQ220J
R 704	(A,38,79)	RAB4CQ220J
R 705	(A,34,79)	RAB4CQ220J
R 707	(A,37,83)	RS1/16SS472J
R 708	(A,43,61)	RS1/16SS220J
R 710	(A,37,61)	RAB4CQ220J
R 711	(A,34,61)	RAB4CQ220J
R 731	(A,73,93)	RS1/16SS473J
R 732	(B,71,92)	RS1/10SR473J
R 733	(A,72,93)	RS1/16SS473J
R 734	(A,78,90)	RS1/16SS473J
R 735	(A,78,87)	RS1/16SS473J
R 741	(A,82,56) (A)	RS1/16SS101J
R 742	(A,74,49) (A)	RS1/16SS101J

Circuit Symbol and No.		Part No.
R 743	(A,78,53) (A)	RS1/16SS101J
R 744	(A,78,54) (A)	RS1/16SS101J
R 745	(A,85,57) (A)	RS1/16SS473J
R 751	(B,110,33)	RS1/10SR472J
R 752	(B,106,34)	RS1/10SR473J
R 753	(B,113,33)	RS1/10SR472J
R 754	(A,116,41)	RS1/16SS104J
R 755	(B,115,33)	RS1/10SR472J
R 756	(A,104,39)	RS1/16SS221J
R 757	(A,104,40)	RS1/16SS221J
R 758	(A,104,38)	RS1/16SS101J
R 759	(A,110,41)	RS1/16SS221J
R 760	(A,104,37)	RS1/16SS101J
R 761	(A,115,41)	RS1/16SS102J
R 762	(A,117,34)	RS1/16SS151J
R 763	(A,119,41)	RS1/16SS151J
R 764	(A,119,34)	RS1/16SS151J
R 765	(A,123,41)	RS1/16SS221J
R 766	(A,122,41)	RS1/16SS104J
R 767	(B,105,37)	RS1/10SR104J
R 771	(B,143,41)	RS1/10SR473J
R 772	(B,143,43)	RS1/10SR103J
R 773	(B,155,45)	RS1/4SA391J
R 803	(A,107,22)	RS1/10SR101J
R 804	(A,109,22)	RS1/10SR101J
R 805	(A,105,22)	RS1/10SR222J
R 806	(A,111,22)	RS1/10SR222J
R 807	(A,117,22)	RS1/10SR222J
R 808	(A,116,22)	RS1/10SR222J
R 809	(A,115,22)	RS1/10SR222J
R 810	(A,119,22)	RS1/10SR222J
R 811	(A,120,22)	RS1/10SR222J
R 812	(B,94,20)	RS1/10SR102J
R 813	(B,94,22)	RS1/10SR104J
R 832	(B,109,26)	RS1/10SR473J
R 833	(B,116,29)	RS1/10SR332J
R 834	(A,117,28)	RS1/10SR103J
R 841	(A,105,29)	RS1/10SR472J
R 842	(B,107,30)	RS1/10SR102J
R 843	(B,105,30)	RS1/10SR103J
R 851	(B,58,39) (B,C,D,E)	RS1/10SR221J
R 852	(A,60,38) (B,C,D,E)	RS1/16SS221J
R 854	(A,70,37) (B,C,D,E)	RS1/16SS221J
R 855	(B,67,44) (B,C,D,E)	RS1/10SR221J
R 856	(B,69,44) (B,C,D,E)	RS1/10SR221J
R 857	(A,54,38) (B,C,D,E)	RS1/16SS102J
R 858	(B,53,41) (B,C,D,E)	RS1/10SR821J
R 859	(B,53,44) (B,C,D,E)	RS1/10SR103J
R 860	(A,70,38)	RS1/16SS473J
R 862	(A,69,38) (B,C,D,E)	RS1/16SS221J
R 863	(B,65,44)	RS1/10SR473J
R 864	(B,60,45) (A)	RS1/10SR0R0J
R 865	(B,71,44)	RS1/10SR473J
R 866	(B,60,36)	RS1/10SR473J
R 867	(B,62,36)	RS1/10SR473J
R 869	(B,62,45)	RS1/10SR473J
R 881	(A,47,87)	RS1/10SR103J
R 882	(A,55,96)	RS1/16SS473J
R 883	(A,54,96)	RS1/16SS222J
R 884	(A,53,90)	RS1/16SS222J
R 885	(A,54,89)	RS1/16SS272J
R 886	(A,53,85)	RS1/16SS472J
R 887	(A,53,96)	RS1/16SS101J
R 888	(A,53,89)	RS1/16SS101J
R 889	(A,56,89)	RS1/16SS472J
R 901	(B,26,72)	RS1/10SR102J
R 903	(A,9,62)	RS1/16SS513J
R 904	(A,7,62)	RS1/16SS103J
R 905	(A,7,64)	RS1/16SS103J
R 906	(A,6,63)	RS1/16SS183J
R 907	(A,6,61)	RS1/16SS0R0J
R 908	(A,6,60)	RS1/16SS473J
R 921	(B,21,58)	RS1/10SR223J
R 922	(B,21,60)	RS1/10SR332J
R 931	(A,31,52)	RS1/16SS473J
R 941	(B,130,43)	RS1/10SR473J
R 942	(A,127,53)	RS1/16SS0R0J
R 951	(A,142,133)	RS1/16SS103J
R 952	(A,141,128)	RS1/16SS104J
R 953	(A,142,134)	RS1/16SS473J
R 954	(A,142,130)	RS1/16SS473J
R 955	(B,120,128)	RS1/10SR682J
R 956	(A,119,129)	RS1/4SA102J
R 961	(B,99,126)	RS1/10SR103J
R 962	(A,114,129)	RS1/4SA102J
R 1001	(A,87,76)	RS1/16SS220J
R 1003	(A,90,77)	RS1/16SS220J

CAPACITORS

C 101	(B,146,142) (A)	CKSRYB105K16
C 121	(B,55,148)	CKSRYB102K50
C 122	(B,37,129)	CKSRYB102K50
C 123	(B,39,132)	CKSRYB102K50
C 151	(A,74,113)	CKSRYB105K10
C 152	(A,87,112)	CKSRYB105K10
C 153	(A,74,112)	CKSRYB224K16
C 154	(B,92,105)	CKSRYB224K16
C 155	(B,102,114) (A)	CKSRYB105K10
C 156	(B,102,113) (A)	CKSRYB105K10
C 157	(B,98,114) (A)	CKSRYB105K10
C 158	(B,98,113) (A)	CKSRYB105K10
C 159	(A,74,110)	CKSRYB105K10
C 160	(A,87,109)	CKSRYB105K10
C 161	(A,74,109) 2.2 uF	CCG1205
C 163	(A,75,115)	CKSRYB105K10
C 164	(A,86,114)	CKSRYB105K10
C 165	(A,87,117) 10 uF	CCG1192
C 166	(A,89,115) 10 uF	CCG1192
C 168	(A,86,125)	CKSQYB225K16
C 170	(A,88,122)	CKSQYB225K16
C 181	(A,92,109)	CKSSYB104K16
C 184	(A,110,105)	CCSSCH150J50
C 186	(B,100,105) 10 uF	CCG1236
C 188	(A,112,109) 10 uF	CCG1236
C 190	(B,100,108) 10 uF	CCG1236
C 201	(A,46,118)	CKSSYB104K10
C 202	(A,51,112) 22 uF	CCG1254
C 204	(A,38,103)	CKSSYB102K50
C 205	(A,42,104)	CKSSYB104K16

Circuit Symbol and No.		Part No.
C 206	(A,36,103)	CKSSYB472K25
C 207	(A,41,103)	CKSSYB104K16
C 208	(A,32,116)	CCSSCH151J50
C 209	(A,38,115) 1 uF	DCH1246
C 210	(A,37,116)	CKSSYB472K25
C 211	(A,43,117) 10 uF	DCH1165
C 212	(A,35,115)	CCSSCH270J50
C 213	(A,62,109)	CEVW101M16
C 214	(A,39,116)	CKSSYB104K16
C 215	(A,52,117) Capacitor	CEHVW101M6R3
C 216	(A,47,118) (A,B,C,D)	CKSSYB102K50
C 217	(B,66,112) 22 uF	CCG1254
C 264	(B,55,34)	CKSRYB104K16
C 301	(A,9,127) 10 uF	CCG1192
C 302	(A,13,127) 10 uF	CCG1192
C 303	(A,17,127) 10 uF	CCG1192
C 304	(A,22,127) 10 uF	CCG1192
C 305	(A,26,127) 10 uF	CCG1192
C 306	(A,30,127) 10 uF	CCG1192
C 307	(A,8,131)	CKSSYB103K16
C 308	(A,14,131)	CKSSYB103K16
C 309	(A,16,131)	CKSSYB103K16
C 310	(A,23,131)	CKSSYB103K16
C 311	(A,25,131)	CKSSYB103K16
C 312	(A,31,131)	CKSSYB103K16
C 315	(B,33,142)	CKSRYB102K50
C 325	(B,77,132)	CKSRYB224K16
C 326	(B,79,132)	CKSRYB224K16
C 327	(B,82,132)	CKSRYB224K16
C 328	(B,84,132)	CKSRYB224K16
C 333	(A,62,136)	CKSRYB105K16
C 335	(B,61,137)	CKSRYB102K50
C 337	(B,63,141)	CKSRYB103K50
C 338	(B,63,143) 10 uF	CCG1236
C 339	(B,88,143)	CKSRYB104K16
C 340	(A,128,123) 3 300 uF/16 V	CCH1486
C 344	(B,66,136)	CKSRYB103K50
C 351	(A,51,129) Capacitor	CEVW220M16
C 352	(B,63,131) 2.2 uF	CCG1205
C 375	(A,67,90) 4.7 uF	CCG1212
C 376	(A,58,93)	CKSSYB103K16
C 377	(A,59,95) 4.7 uF	CCG1212
C 378	(B,65,96)	CKSRYB104K16
C 379	(A,80,96)	CKSSYB182K50
C 380	(A,80,94)	CKSSYB182K50
C 391	(A,142,57) 4.7 uF	CCG1212
C 393	(A,132,55)	CKSQYB474K16
C 401	(A,147,102)	CCSSCH330J50
C 402	(A,143,100)	CKSSYB103K16
C 403	(A,148,100)	CCSSCH6R0D50
C 404	(A,150,100)	CKSSYB103K16
C 405	(A,141,97)	CKSSYB104K10
C 406	(A,137,96)	CKSSYB104K10
C 410	(A,150,97)	CKSSYB103K16
C 411	(A,139,97)	CKSSYB104K10
C 412	(A,152,97)	CKSSYB103K16
C 413	(A,137,97)	CKSSYB103K16
C 414	(A,135,98) 10 uF	CCG1192
C 415	(A,134,98) (A,B,C,D)	CCSSCK2R0C50
C 416	(B,134,85) (A)	CCSRCK2R0C50
	(B,134,85) (B,C,D)	CCSRCH101J50

Circuit Symbol and No.		Part No.
C 418	(A,140,97) (A,B,C,D)	CCSSCK2R0C50
C 419	(A,135,96)	CKSSYB223K16
C 420	(A,139,95)	CKSSYB103K16
C 421	(A,144,95)	CKSSYB104K10
C 422	(A,146,97)	CKSSYB103K16
C 423	(A,143,97)	CKSRYB105K10
C 424	(A,149,93)	CKSRYB224K16
C 426	(A,133,93)	CKSSYB103K16
C 427	(A,148,90)	CKSSYB104K10
C 428	(A,130,92) 10 uF	CCG1192
C 429	(A,150,90)	CKSRYB105K10
C 430	(A,131,91)	CKSSYB104K10
C 431	(A,154,88)	CKSSYB472K25
C 432	(A,154,90)	CKSSYB472K25
C 433	(A,130,90)	CCSSCH101J50
C 434	(A,135,94)	CKSSYB104K10
C 435	(A,128,90)	CKSSYB103K16
C 436	(A,152,87)	CCSSCH100D50
C 437	(A,149,87)	CKSSYB104K10
C 438	(A,132,88)	CCSSCH820J50
C 440	(A,133,86) (B,C,D)	CCSSCH100D50
C 441	(A,130,82)	CKSRYB474K10
C 443	(A,131,80)	CCSRCH471J50
C 444	(A,152,82)	CCSSCH100D50
C 445	(A,153,79)	CKSSYB104K10
C 447	(A,150,79) 2.2 uF	CCG1205
C 449	(A,148,82) (A,B,C,D)	CKSSYB104K10
C 450	(A,145,80)	CKSSYB104K10
C 451	(A,135,79)	CKSSYB102K50
C 452	(A,144,80) 1 uF	DCH1246
C 454	(A,138,79)	CKSSYB104K10
C 456	(A,152,113) (A,B,C,D)	CCSSCJ3R0C50
C 459	(A,128,84) (A,E)	CCSSCH100D50
C 466	(B,139,92) (A,B,C,D)	CCSRCH101J50
C 467	(A,148,110) (A)	CCSSCK2R0C50
C 601	(A,92,68)	CCSSCH100D50
C 602	(A,92,64)	CCSSCH120J50
C 604	(A,92,70)	CKSSYB104K10
C 605	(B,99,65)	CKSRYB105K10
C 608	(B,113,64)	CKSRYB105K10
C 610	(A,103,50)	CKSRYB104K50
C 612	(B,120,47)	CKSRYB105K10
C 615	(B,97,65) 10 uF	DCH1201
C 616	(A,103,82) (A)	CKSSYB104K10
C 617	(A,96,80) (A)	CKSSYB104K10
C 651	(B,68,58)	CKSRYB104K16
C 652	(B,76,61)	CKSRYB104K16
C 653	(B,85,56)	CKSRYB104K16
C 654	(B,61,58)	CKSRYB104K16
C 655	(B,67,62)	CKSRYB104K16
C 656	(B,72,62)	CKSRYB104K16
C 657	(B,78,57)	CKSRYB104K16
C 658	(A,56,65) (B,C,D,E)	CCSSCH100D50
C 659	(B,81,63)	CKSRYB104K16
C 660	(B,85,60)	CCSRCK2R0C50
C 661	(B,59,62)	CKSRYB104K16
C 662	(A,86,64)	CCSSCH120J50
C 663	(B,81,67)	CKSRYB104K16
C 664	(A,57,65) (B,C,D,E)	CCSSCH100D50
C 665	(B,59,66)	CKSRYB104K16

Circuit Symbol and No.		Part No.
C 666	(B,81,65)	CKSRYB104K16
C 667	(A,57,70) (B,C,D,E)	CCSSCH100D50
C 668	(B,59,69)	CKSRYB104K16
C 669	(A,86,69)	CCSSCH120J50
C 670	(B,81,70)	CKSRYB104K16
C 671	(B,60,72)	CKSRYB104K16
C 672	(B,81,76)	CKSRYB104K16
C 673	(B,81,78)	CKSRYB104K16
C 674	(B,65,80)	CKSRYB104K16
C 675	(B,71,75)	CKSRYB104K16
C 676	(B,76,79)	CKSRYB104K16
C 677	(B,63,80)	CKSRYB104K16
C 678	(B,69,79)	CKSRYB104K16
C 682	(A,37,86) 4.7 uF	CCG1212
C 683	(B,49,52)	CKSRYB224K16
C 685	(A,74,83)	CCSSCH120J50
C 686	(A,79,84)	CCSSCH120J50
C 688	(B,44,52) 4.7 uF	CCG1212
C 696	(A,64,81) (A,B,C,D)	CCSSCH220J50
C 701	(B,53,71)	CKSRYB104K16
C 702	(B,51,71)	CKSRYB104K16
C 703	(B,47,71)	CKSRYB104K16
C 704	(B,43,71)	CKSRYB104K16
C 705	(B,34,73)	CKSRYB104K16
C 706	(B,49,65)	CKSRYB104K16
C 707	(B,44,65)	CKSRYB104K16
C 708	(B,31,82) 2.2 uF	CCG1205
C 711	(B,51,37)	CKSRYB104K16
C 712	(B,54,47)	CKSRYB104K16
C 721	(A,35,87) 10 uF	CCG1192
C 722	(A,32,87) 10 uF	CCG1192
C 731	(B,75,92)	CKSRYB104K16
C 741	(A,77,51) (A)	CKSSYB104K10
C 752	(A,120,34)	CCSSCH220J50
C 753	(A,121,41)	CCSSCH100D50
C 754	(A,116,34)	CCSSCH220J50
C 755	(B,106,37)	CKSRYB103K50
C 758	(A,93,38)	CKSSYB102K50
C 760	(A,112,41)	CKSSYB221K50
C 770	(B,123,42)	CKSRYB104K16
C 771	(B,151,41) 10 uF	DCH1201
C 773	(A,155,47)	CKSSYB473K16
C 803	(A,103,21)	CKSRYB104K16
C 805	(B,100,14)	CKSRYB104K16
C 806	(B,104,22)	CKSRYB104K16
C 807	(B,98,11)	CKSRYB104K16
C 809	(B,117,48)	CKSRYB104K16
C 810	(B,82,36)	CKSRYB104K16
C 811	(B,100,19)	CKSRYB105K16
C 812	(A,95,20)	CKSRYB104K16
C 831	(B,112,27)	CKSQYB105K16
C 841	(A,103,29)	CKSRYB104K16
C 851	(A,67,37) (B,C,D,E)	CKSRYB105K10
C 881	(A,57,90)	CKSSYB104K10
C 882	(A,56,90)	CKSSYB104K10
C 891	(A,37,92)	CKSRYB104K16
C 892	(A,50,92)	CKSRYB104K16
C 901	(A,15,79) (A,B,C,D)	CKSSYB102K50
C 902	(A,16,79)	CKSRYB105K16
C 903	(A,22,74)	CEVQW221M6R3

Circuit Symbol and No.		Part No.
C 904	(A,7,65)	CKSSYB102K50
C 905	(A,8,63)	CKSSYB682K25
C 906	(A,18,64)	CKSSYB103K16
C 908	(A,18,66)	CKSRYB105K16
C 909	(A,11,55)	XCEAT102M16
C 910	(A,20,67) 10 uF	CCG1236
C 911	(A,18,79) 10 uF	CCG1192
C 921	(B,17,55)	CKSRYB104K16
C 922	(B,21,53)	CKSRYB103K50
C 931	(A,29,63) 10 uF	CCG1192
C 932	(A,31,55) 10 uF	CCG1192
C 941	(B,136,40)	CKSRYB104K16
C 942	(A,135,49) Capacitor	CEVW221M10
C 943	(A,143,42)	CKSQYB105K16
C 961	(B,104,128)	CKSRYB105K10
C 991	(B,116,140)	CKSRYB104K16

B

Unit Number :
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1621	(A,132,14) IC	BH2228FV
IC 1701	(B,85,21) IC	PEQ271A8
IC 1702	(A,103,22) Flash ROM Unit(A,B,C)	PEH426A8
	(A,103,22) Flash ROM Unit(D,E)	PEH428A8
IC 1731	(A,74,10) IR RC REC Module	PNJ4833M
Q 1631	(B,57,18) Chip Transistor	HN1C01FU
Q 1632	(B,60,10) Chip Transistor	HN1C01FU
Q 1633	(A,138,20) Chip Transistor	HN1C01FU
Q 1634	(B,17,13) Chip Transistor	HN1C01FU
Q 1635	(B,17,26) Chip Transistor	HN1C01FU
Q 1636	(B,53,14) Transistor	LSCR523UB
Q 1637	(B,139,21) Transistor	LSCR523UB
Q 1638	(B,139,26) Transistor	LSCR523UB
Q 1639	(B,53,11) Transistor	LSCR523UB
Q 1640	(B,144,20) Transistor	LSCR523UB
D 1631	(A,12,34) LED	SMLVN6RGB2UK(B)
D 1632	(A,11,14) LED	SMLVN6RGB2UK(B)
D 1633	(A,53,19) LED	SMLVN6RGB2UK(B)
D 1634	(A,160,26) LED	SMLVN6RGB2UK(B)
D 1635	(A,150,14) LED	SMLVN6RGB2UK(B)
D 1701	(B,66,19) Diode	DA2J101
L 1781	(B,151,17) Inductor	CTF1389
L 1782	(B,152,20) Inductor	CTF1389
X 1701	(B,73,20) Ceramic Resonator 16.000 MHz	CSS1616
S 1611	(A,40,18) Encoder(MULTI-CONTROL)	CSD1168
S 1731	(A,161,41) Push Switch	CSG1155
S 1732	(A,8,31) Push Switch	CSG1155
S 1733	(A,23,33) Push Switch	CSG1155
S 1735	(A,5,18) Push Switch	CSG1155
S 1737	(A,66,7) Push Switch	CSG1155
S 1738	(A,6,8) Push Switch	CSG1155
S 1739	(A,6,40) Push Switch	CSG1155
S 1740	(A,25,14) Spring Switch	CSN1080
S 1741	(A,25,23) Spring Switch	CSN1081
S 1742	(A,66,30) Push Switch	CSG1155
S 1743	(A,74,19) Push Switch	CSG1155
CN1601	(B,109,9) Connector	CKS6451

Circuit Symbol and No.			Part No.
CN1751	(B,114,29)	Connector	CKS6597
JA1781	(A,160,16)	Jack	YKN5006

RESISTORS

R 1601	(B,92,7)		RS1/10SR222J
R 1602	(B,92,8)		RS1/10SR222J
R 1611	(B,58,22)		RS1/16SS103J
R 1621	(A,127,17)		RS1/10SR272J
R 1622	(A,127,15)		RS1/10SR272J
R 1623	(A,127,14)		RS1/10SR272J
R 1631	(B,60,15)		RAB4CQ102J
R 1632	(A,136,10)		RAB4CQ102J
R 1633	(B,55,20)		RS1/16SS101J
R 1634	(B,55,19)		RS1/16SS101J
R 1635	(B,27,9)		RS1/16SS101J
R 1636	(B,57,14)		RS1/16SS101J
R 1637	(B,14,22)		RS1/16SS101J
R 1638	(B,14,23)		RS1/16SS101J
R 1639	(A,141,18)		RS1/16SS101J
R 1640	(A,140,20)		RS1/16SS101J
R 1641	(A,138,24)		RS1/16SS101J
R 1642	(B,13,11)		RS1/10SR201J
R 1643	(B,13,13)		RS1/10SR201J
R 1644	(B,13,27)		RS1/10SR201J
R 1645	(B,13,26)		RS1/10SR820J
R 1646	(B,53,18)		RS1/10SR820J
R 1647	(B,54,18)		RS1/10SR820J
R 1648	(B,136,24)		RS1/10SR101J
R 1649	(B,136,22)		RS1/10SR101J
R 1650	(B,135,27)		RS1/10SR101J
R 1701	(B,73,17)		RS1/16SS154J
R 1702	(B,68,21)		RS1/16SS102J
R 1703	(B,68,20)		RS1/16SS154J
R 1704	(A,85,19)		RS1/16SS473J
R 1705	(B,70,23)		RS1/16SS103J
R 1706	(B,68,26)		RAB4CQ102J
R 1707	(A,76,21)		RS1/16SS103J
R 1708	(A,75,24)		RAB4CQ103J
R 1709	(A,68,24)		RS1/16SS103J
R 1710	(A,85,21)		RAB4CQ473J
R 1711	(B,85,31)		RS1/16SS473J
R 1712	(B,87,31)		RS1/16SS473J
R 1713	(A,123,27)		RS1/16SS101J
R 1714	(A,87,27)		RS1/16SS101J
R 1715	(B,96,28)		RAB4CQ101J
R 1716	(A,86,15)		RS1/16SS101J
R 1717	(A,111,13)		RAB4CQ101J
R 1718	(A,108,14)		RAB4CQ101J
R 1719	(B,95,20)		RAB4CQ101J
R 1720	(B,96,17)		RAB4CQ101J
R 1721	(A,89,15)		RAB4CQ101J
R 1722	(A,97,14)		RAB4CQ101J
R 1723	(A,90,21)		RAB4CQ101J
R 1724	(A,89,26)		RAB4CQ101J
R 1725	(B,80,10)		RAB4CQ102J
R 1731	(A,72,10)		RS1/16SS470J
R 1753	(B,123,23)		RAB4CQ473J
R 1755	(A,116,28)		RAB4CQ101J
R 1756	(B,124,25)		RS1/16SS154J

Circuit Symbol and No.			Part No.
R 1783	(B,151,13)		RS1/10SR0R0J

CAPACITORS

C 1621	(A,129,19)		CKSSYB103K16
C 1622	(A,129,20)		CKSRYB105K10
C 1701	(B,102,17)	10 uF	CCG1192
C 1703	(B,70,21)		CKSSYB104K10
C 1704	(A,79,18)		CKSSYB103K16
C 1705	(B,95,22)		CKSSYB103K16
C 1706	(A,90,23)		CKSSYB103K16
C 1731	(A,75,10)	10 uF	CCG1192
C 1751	(B,108,23)		CKSQYB334K50
C 1752	(B,111,20)	4.7 uF	CCG1212
C 1753	(B,111,22)	4.7 uF	CCG1212
C 1754	(B,114,20)	4.7 uF	CCG1212
C 1755	(B,114,22)	4.7 uF	CCG1212
C 1756	(B,116,18)	2.2 uF	CCG1205
C 1760	(B,126,28)		CKSSYB104K10
C 1781	(B,145,17)		CKSRYB472K50
C 1782	(B,141,17)		CKSRYB472K50
C 1783	(B,148,15)		CKSRYB471K50

C

Unit Number : CWX4023
Unit Name : CD Core Unit (S11.6STD)

MISCELLANEOUS

IC 201	(B,23,37)	IC	PE5791A
IC 301	(A,37,11)	IC	BD8223EFV
Q 101	(B,11,53)	Transistor	2SA1577
Q 102	(B,15,54)	Transistor	LTA123JUB
X 201	(B,25,49)	Ceramic Resonator 16.934 MHz	CSS1603
S 901	(A,42,53)	Spring Switch(HOME)	CSN1080
S 903	(B,21,12)	Spring Switch(DSCSNS)	CSN1081
CN101	(A,16,58)	Connector	CKS4808
CN701	(A,25,29)	Connector	CKS6146

RESISTORS

R 101	(B,6,57)		RS1/10SR2R4J
R 102	(B,8,57)		RS1/10SR2R4J
R 103	(B,9,57)		RS1/10SR2R7J
R 108	(B,18,55)		RS1/16SS105J
R 109	(B,12,50)		RS1/16SS222J
R 214	(B,18,28)		RS1/16SS103J
R 215	(B,17,28)		RS1/16SS393J
R 216	(B,12,35)		RS1/16SS122J
R 217	(B,10,32)		RS1/16SS562J
R 218	(B,10,35)		RS1/16SS472J
R 229	(B,12,34)		RS1/16SS471J
R 232	(A,31,54)		RS1/16SS0R0J
R 237	(B,33,45)		RS1/16SS221J
R 240	(B,34,40)		RS1/16SS473J
R 245	(A,34,46)		RS1/16SS104J
R 254	(A,37,56)		RS1/16SS104J
R 260	(B,30,27)		RS1/16SS103J
R 264	(A,22,9)		RS1/16SS102J
R 281	(B,33,38)		RS1/16SS560J

Circuit Symbol and No.		Part No.
R 282	(B,33,39)	RS1/16SS560J
R 291	(B,33,34)	RS1/16SS560J
R 294	(B,27,48)	RS1/16SS471J
R 303	(A,27,11)	RS1/16SS123J
R 304	(A,28,11)	RS1/16SS123J
R 305	(A,26,9)	RS1/16SS102J
R 306	(A,26,11)	RS1/16SS472J
R 307	(A,25,9)	RS1/16SS102J
R 308	(A,25,11)	RS1/16SS472J
R 309	(A,35,6)	RS1/16SS473J
R 310	(B,30,9)	RS1/16SS472J
R 311	(B,30,10)	RS1/16SS472J
R 312	(B,30,11)	RS1/16SS472J
R 313	(B,30,12)	RS1/16SS472J
R 701	(A,21,38)	RS1/16SS101J
R 702	(A,23,38)	RS1/16SS101J
R 706	(A,32,42)	RS1/16SS221J

CAPACITORS

C 104	(B,12,57)	CKSQYB475K6R3
C 203	(B,22,47)	CKSSYB104K10
C 209	(B,28,47)	CKSRYB104K16
C 210	(B,33,43)	CKSSYB104K10
C 211	(B,33,41)	CKSSYB104K10
C 212	(B,22,28)	CKSSYB104K10
C 213	(B,18,26)	CKSSYB332K50
C 214	(B,17,26)	CKSSYB473K16
C 215	(B,19,28)	CKSSYB104K10
C 216	(B,12,33)	CKSSYB182K50
C 217	(B,10,34)	CCSSCH560J50
C 218	(B,10,36)	CCSSCH4R0C50
C 219	(B,14,34)	CKSSYB104K10
C 220	(A,18,38)	CKSSYB104K10
C 221	(B,14,32)	CKSSYB104K10
C 222	(B,13,37)	CKSSYB104K10
C 223	(B,12,42)	CCSSCH680J50
C 224	(B,13,45)	CCSSCH470J50
C 225	(B,13,46)	CKSSYB103K16
C 228	(B,10,33)	CCSSCH270J50
C 229	(B,9,40)	CKSSYB104K10
C 233	(B,32,46)	CKSSYB103K16
C 236	(B,8,40)	CKSSYB104K10
C 238	(A,25,44)	CKSRYB104K16
C 299	(A,26,41)	CKSSYB104K10
C 302	(B,28,12)	CKSSYB102K50
C 303	(B,29,12)	CKSSYB102K50
C 304	(B,27,12)	CKSSYB223K16
C 305	(B,26,12)	CKSSYB104K10
C 306	(A,31,7)	CKSSYB104K10
C 307	(A,41,19)	CKSRYB105K10
C 308	(A,31,15)	CKSRYB105K10
C 710	(A,34,42)	CKSSYB102K50