

# EXPLODED VIEW

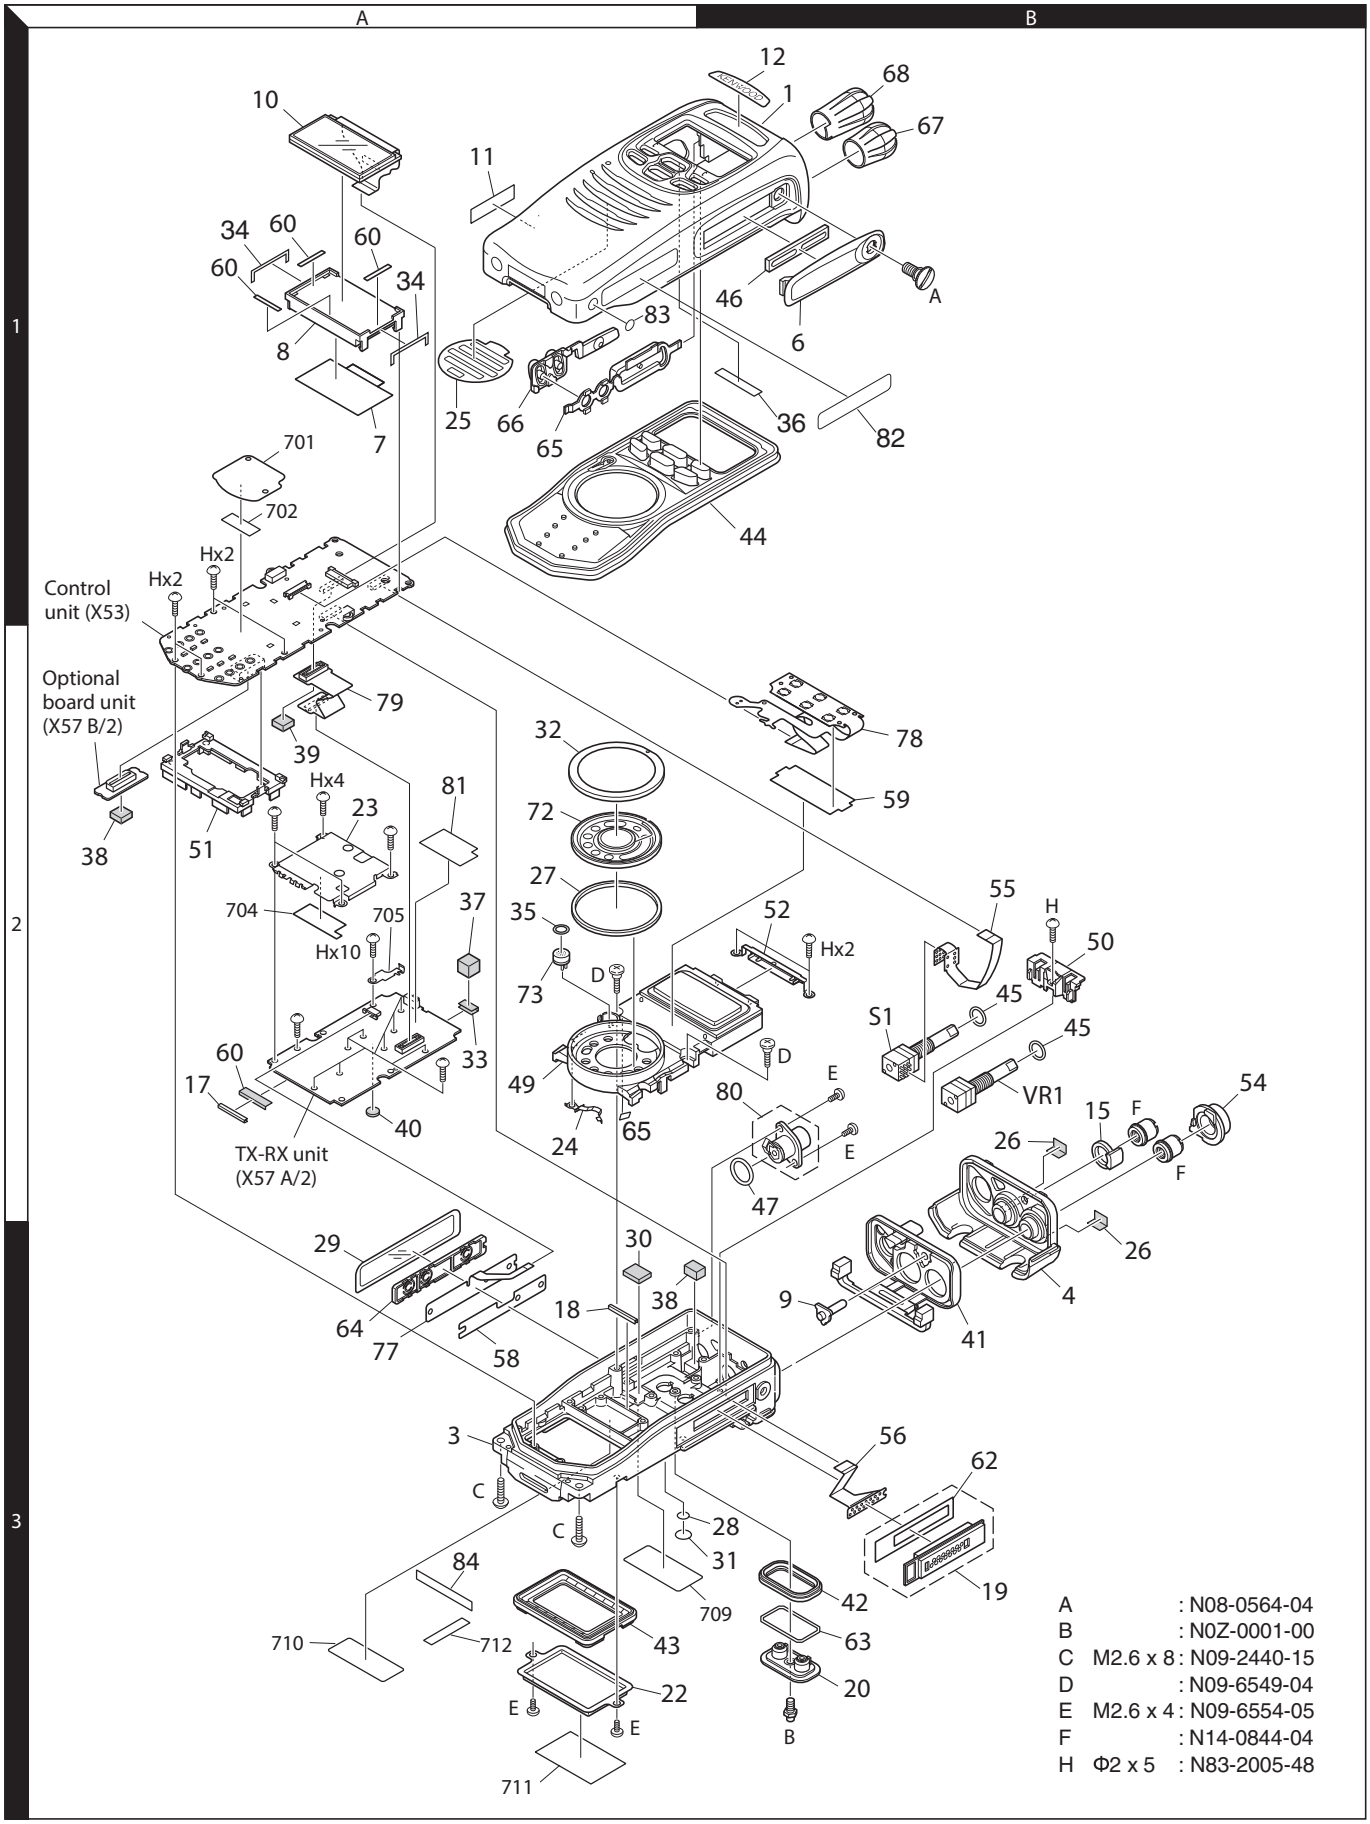


| | | |
|---|---|---|
| A | | : N08-0564-04 |
| B | | : N0Z-0001-00 |
| C | M2.6 x 8 | : N09-2440-15 |
| D | | : N09-6549-04 |
| E | M2.6 x 4 | : N09-6554-05 |
| F | | : N14-0844-04 |
| H | Φ2 x 5 | : N83-2005-48 |

**Parts with the exploded numbers larger than 700 are not supplied.**

# PACKING

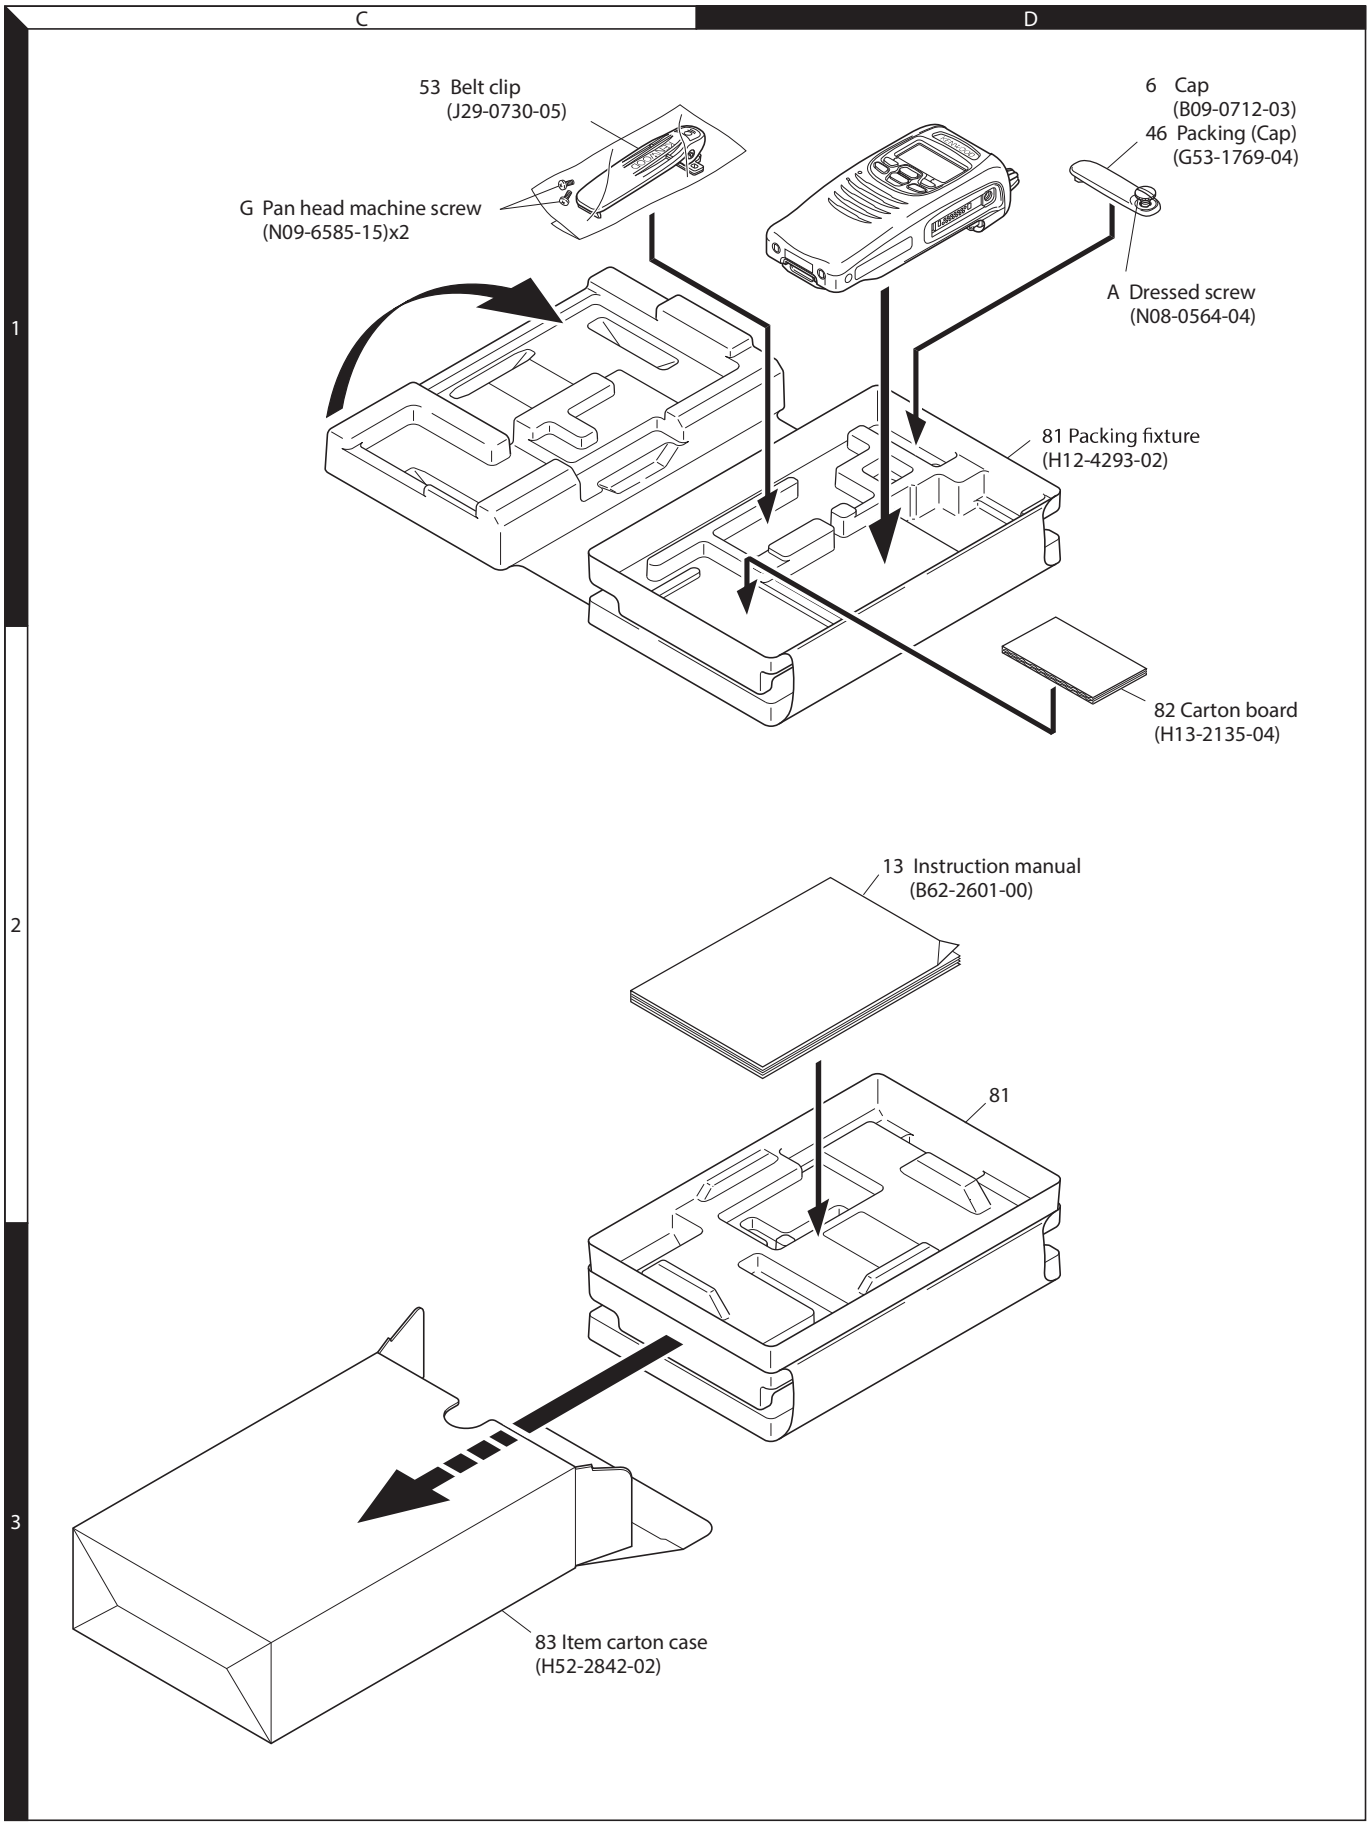


 **Parts with the exploded numbers larger than 700 are not supplied.**

# PARTS LIST

⚠indicates safety critical components.
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

**L** : Scandinavia **K** : USA **P** : Canada
**Y** : PX (Far East, Hawaii) **T** : England **E** : Europe
**C** : China **X** : Australia **M** : Other Areas

**NX-303**
**CONTROL UNIT (X53-4590-14)**

| Ref. No. | Address | Parts No. | Description | Destination |
|---|---|---|---|---|
| **NX-303** | | | | |
| 1 | 1A | A02-4002-23 | PLASTIC CABINET(6KEY) | |
| 3 | 3A | A10-4111-21 | CHASSIS | |
| 4 | 2B | A62-1156-02 | PANEL(TOP) | |
| 6 | 1B,1D | B09-0712-03 | CAP ACCESSORY | |
| 7 | 1A | B11-1853-34 | FILTER(LCD) | |
| 8 | 1A | B11-1854-02 | ILLUMINATION GUIDE(LCD) | |
| 9 | 3B | B11-1855-04 | ILLUMINATION GUIDE(TX/BUSY) | |
| 10 | 1A | B38-0923-05 | LCD ASSY | |
| 11 | 1A | B42-7417-04 | STICKER | |
| 12 | 1B | B43-1606-14 | BADGE | |
| 13 | 2D | B62-2601-00 | INSTRUCTION MANUAL | |
| 15 | 2B | D32-0446-14 | STOPPER(16CH) | |
| 17 | 2A | E29-1241-04 | RELAY HARDWARE(VCO-PCB) | |
| 18 | 3A | E29-1242-04 | RELAY HARDWARE(VCO-CHASS) | |
| 19 | 3B | E58-0532-05 | RECTANGULAR RECEPTACLE(SP/MIC) | |
| 20 | 3B | E72-0425-13 | TERMINAL BLOCK | |
| 22 | 3A | F07-1959-14 | COVER(OP BOARD) | |
| 23 | 2A | F10-3162-13 | SHIELDING CASE ASSY | |
| 24 | 2A | G02-1865-13 | EARTH SPRING(SP) | |
| 25 | 1A | G10-1373-04 | FIBROUS SHEET(SP) | |
| 26 | 2B | G10-1807-04 | FIBROUS SHEET(TOP PANEL) | |
| 27 | 2A | G11-4272-14 | RUBBER CUSHION(SP) | |
| 28 | 3A | G11-4500-04 | SHEET(AIR) | |
| 29 | 2A | G11-4428-04 | SHEET(PTT) | |
| 30 | 3A | G11-4429-04 | RUBBER SHEET(FET) | |
| 31 | 3A | G11-4440-04 | SHEET(AIR) | |
| 32 | 2A | G11-4458-14 | SHEET(SP) | |
| 33 | 2A | G11-4459-04 | SHEET(TX-RX PCB) | |
| 34 | 1A | G11-4497-04 | SHEET(LCD) | |
| 35 | 2A | G11-4501-04 | SHEET(MIC ELEMENT) | |
| 36 | 1B | G11-4540-04 | SHEET(CABINET) | |
| 37 | 2A | G13-2292-04 | CUSHION(TX-RX PCB) | |
| 38 | 2A,3B | G13-2220-04 | CUSHION(ANT/OP BOARD) | |
| 39 | 2A | G13-2293-04 | CUSHION(50PIN FPC) | |
| 40 | 2A | G13-2294-04 | CUSHION(BATT-) | |
| 41 | 3B | G53-1762-02 | PACKING(TOP) | |
| 42 | 3B | G53-1763-03 | PACKING(TERMINAL BLOCK) | |
| 43 | 3A | G53-1764-03 | PACKING(OP BOARD COVER) | |
| 44 | 1A | G53-1765-11 | PACKING(6KEY) | |
| 45 | 2B | G53-1768-04 | PACKING(VOL,SELECTOR O-RING) | |
| 46 | 1B,1D | G53-1769-04 | PACKING(CAP) | |
| 47 | 2B | G53-1792-04 | PACKING(SMA O-RING) | |
| 81 | 1D,2D | H12-4293-02 | PACKING FIXTURE | |
| 82 | 2D | H13-2135-04 | CARTON BOARD | |
| 83 | 3C | H52-2842-02 | ITEM CARTON CASE | |
| 49 | 2A | J19-5505-11 | HOLDER(FG-SP) | |
| 50 | 2B | J19-5506-03 | HOLDER(VOL/ENC) | |
| 51 | 2A | J19-5507-02 | HOLDER(OP BOARD) | |
| 52 | 2B | J21-8638-14 | MOUNTING HARDWARE(HOLDER) | |
| 53 | 1C | J29-0730-05 | BELT CLIP ACCESSORY | |
| 54 | 2B | J30-1296-04 | SPACER(VOL) | |
| 55 | 2B | J87-0028-05 | FPC(VOL,SELECTOR) | |
| 56 | 3B | J87-0007-25 | FPC(UNIVERSAL) | |
| 57 | 2B | J99-0745-04 | ADHESIVE SHEET(6KEY FPC) | |
| 58 | 3A | J99-0711-04 | ADHESIVE SHEET(PTT FPC) | |
| 59 | 2B | J99-0712-14 | ADHESIVE SHEET(6KEY FPC) | |
| 60 | 1A,2A | J99-0714-04 | ADHESIVE SHEET(LCD) | |
| 62 | 3B | J99-0715-08 | ADHESIVE SHEET(UNIVERSAL) | |
| 63 | 3B | J99-0747-04 | ADHESIVE SHEET(TERMINAL BLOCK) | |
| 64 | 3A | K25-2001-03 | PUSH KNOB(PTT) | |
| 65 | 1A | K29-9405-03 | KNOB(PTT) | |
| 66 | 1A | K29-9406-03 | BUTTON KNOB(SIDE KEY) | |
| 67 | 1B | K29-9407-03 | KNOB(VOL) | |
| 68 | 1B | K29-9408-13 | KNOB(SELECTOR) | |
| A | 1B,1D | N08-0564-04 | DRESSED SCREW ACCESSORY | |
| B | 3B | N0Z-0001-00 | HEXAGON HEAD SCREW(BATT-) | |
| C | 3A | N09-2440-15 | SPECIAL SCREW(CASE) | |
| D | 2A,2B | N09-6549-04 | STEPPED SCREW(FG-SP HOLDER) | |
| E | 2B,3A | N09-6554-05 | PAN HEAD SCREW(ANT/OP BOARD) | |
| G | 1C | N09-6585-15 | PAN HEAD MACHINE SCREW ACCESSORY | |
| F | 2B | N14-0844-04 | CIRCULAR NUT(VOL,SELECTOR) | |
| H | 1A,2A,2B | N83-2005-48 | PAN HEAD TAPTITE SCREW(PCB) | |
| S1 | 2B | S60-0437-05 | ROTARY SWITCH | |
| 72 | 2A | T07-0755-25 | SPEAKER | |
| 73 | 2A | T91-0575-05 | MIC ELEMENT | |
| VR1 | 2B | R31-0666-15 | V RESISTOR | |
| 77 | 3A | X41-3830-10 | SWITCH UNIT(PTT FPC) | |
| 78 | 2B | X41-3840-10 | SWITCH UNIT(6KEY FPC) | |
| 79 | 2B | X42-3510-10 | CORD ASSY(50PIN FPC) | |
| - | | X53-4590-15 | SERVICE CONTROL UNIT | |
| - | | X57-8960-13 | TX-RX UNIT | |
| 80 | 2B | X60-4080-10 | TERMINAL ASSY(SMA) | |
| 81 | 2A | G1B-0193-00 | SHEET | |
| 82 | 1B | B42-9686-04 | STICKER(CASE) | |
| 83 | 1A | B42-9687-04 | STICKER(YELLOW) | |
| 84 | 3A | B42-9688-04 | STICKER(CHASSIS) | |
| **CONTROL UNIT (X53-4590-14)** | | | | |
| C1 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C2 | | CK73GB1E105K | CHIP C 1.0UF K | |
| C3 | | CK73GB1E105K | CHIP C 1.0UF K | |
| C4 | | CK73GB1E105K | CHIP C 1.0UF K | |
| C5 | | CK73GB1E105K | CHIP C 1.0UF K | |
| C6 | | CK73GB1E105K | CHIP C 1.0UF K | |
| C7 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C8 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C10 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C11 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C12 | | CK73HBB1H471K | CHIP C 470PF K | |
| C13 | | CK73HBB1H471K | CHIP C 470PF K | |
| C14 | | CK73HBB1H471K | CHIP C 470PF K | |
| C15 | | CK73HBB1H471K | CHIP C 470PF K | |
| C16 | | CC73HCH1H101J | CHIP C 100PF J | |
| C17 | | CC73HCH1H101J | CHIP C 100PF J | |
| C23 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C24 | | CC73HCH1H470J | CHIP C 47PF J | |
| C25 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C26 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C27 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C28 | | CC73HCH1H101J | CHIP C 100PF J | |
| C29 | | CC73HCH1H101J | CHIP C 100PF J | |
| C30 | | CC73HCH1H101J | CHIP C 100PF J | |
| C31 | | CC73HCH1H101J | CHIP C 100PF J | |

# PARTS LIST

**CONTROL UNIT (X53-4590-14)**

| Ref. No. | Address | Parts No. | Description | Destination |
|---|---|---|---|---|
| C32 | | CC73HCH1H101J | CHIP C 100PF J | |
| C33 | | CC73HCH1H101J | CHIP C 100PF J | |
| C34 | | CC73HCH1H101J | CHIP C 100PF J | |
| C35 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C36 | | CK73HB1E682K | CHIP C 6800PF K | |
| C37 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C38 | | CC73HCH1H101J | CHIP C 100PF J | |
| C40 | | CC73HCH1H221J | CHIP C 220PF J | |
| C41 | | CC73HCH1H101J | CHIP C 100PF J | |
| C101 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C102 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C103 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C104 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C105 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C106 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C107 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C109 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C110 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C111 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C112 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C113 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C116 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C117 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C118 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C119 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C120 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C121 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C122 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C123 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C124 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C130 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C131 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C133 | | CS77MP0J100M | CHIP TNTL 10UF 6.3WV | |
| C134 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C135 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C136 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C137 | | CK73GB1E105K | CHIP C 1.0UF K | |
| C138 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C139 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C140 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C141 | | CC73HCH1H101J | CHIP C 100PF J | |
| C142 | | CS77MP0J100M | CHIP TNTL 10UF 6.3WV | |
| C143 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C144 | | CK73GB1E105K | CHIP C 1.0UF K | |
| C145 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C146 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C147 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C148 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C149 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C150 | | CK73GB1E105K | CHIP C 1.0UF K | |
| C151 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C152 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C153 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C154 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C155 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C156 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C157 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C158 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C159 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C160 | | CK73HB1E682K | CHIP C 6800PF K | |

| Ref. No. | Address | Parts No. | Description | Destination |
|---|---|---|---|---|
| C161 | | CK73HB1E682K | CHIP C 6800PF K | |
| C401 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C402 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C403 | | CS77MP1C2R2M | CHIP TNTL 2.2UF 16WV | |
| C404 | | CS77MP1C2R2M | CHIP TNTL 2.2UF 16WV | |
| C405 | | CS77MP1C2R2M | CHIP TNTL 2.2UF 16WV | |
| C406 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C407 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C408 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C409 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C411 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C412 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C414 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C415 | | CS77BP1A100M | CHIP TNTL 10UF 10WV | |
| C416 | | CK73FB1A106K | CHIP C 10UF K | |
| C417 | | CC73HCH1H221J | CHIP C 220PF J | |
| C418 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C419 | | CK73FB1E475K | CHIP C 4.7UF K | |
| C420 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C421 | | CK73HB1E682K | CHIP C 6800PF K | |
| C422 | | CC73HCH1H100C | CHIP C 10PF C | |
| C424 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C425 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C427 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C428 | | CC73HCH1H030C | CHIP C 3.0PF C | |
| C429 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C430 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C431 | | CK73FB1A106K | CHIP C 10UF K | |
| C433 | | CK73FB1A106K | CHIP C 10UF K | |
| C435 | | CK73HB1A563K | CHIP C 0.056UF K | |
| C436 | | CK73HB1A563K | CHIP C 0.056UF K | |
| C437 | | CK73HB1A563K | CHIP C 0.056UF K | |
| C438 | | CK73HB1A563K | CHIP C 0.056UF K | |
| C439 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C440 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C441 | | CK73GB1E105K | CHIP C 1.0UF K | |
| C442 | | CK73HBB1H471K | CHIP C 470PF K | |
| C443 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C445 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C446 | | CK73GB1E105K | CHIP C 1.0UF K | |
| C447 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C448 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C449 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C450 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C452 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C453 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C454 | | CK73GB1E105K | CHIP C 1.0UF K | |
| C455 | | CK73HBB1H471K | CHIP C 470PF K | |
| C456 | | CK73HBB1H471K | CHIP C 470PF K | |
| C457 | | CK73HBB1H471K | CHIP C 470PF K | |
| C459 | | CK73HBB1H471K | CHIP C 470PF K | |
| C460 | | CK73HB1E682K | CHIP C 6800PF K | |
| C461 | | CK73HBB1H471K | CHIP C 470PF K | |
| C462 | | CK73HBB1H471K | CHIP C 470PF K | |
| C463 | | CK73HBB1H471K | CHIP C 470PF K | |
| C464 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C465 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C466 | | CK73HB1E682K | CHIP C 6800PF K | |
| C467 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C468 | | CK73HBB1A104K | CHIP C 0.10UF K | |

# PARTS LIST

**CONTROL UNIT (X53-4590-14)**

| Ref. No. | Address | Parts No. | Description | Destination |
|---|---|---|---|---|
| C469 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C470 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C471 | | CK73HBB1C473K | CHIP C 0.047UF K | |
| C480 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C701 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C703 | | CK73GXR0J475K | CHIP C 4.7UF K | |
| C704 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C705 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C706 | | CC73HCH1H680J | CHIP C 68PF J | |
| C707 | | CC73HCH1H270J | CHIP C 27PF J | |
| C708 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C709 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C710 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C711 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C712 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C713 | | CK73HBB1H332K | CHIP C 3300PF K | |
| C714 | | CK73HB1H122K | CHIP C 1200PF K | |
| C715 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C716 | | CK73HBB1H681K | CHIP C 680PF K | |
| C717 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C718 | | CK73HBB1H152K | CHIP C 1500PF K | |
| C720 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C721 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C722 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C723 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C724 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C725 | | CC73HCH1E181J | CHIP C 180PF J | |
| C726 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C727 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C728 | | CK73HB1H331K | CHIP C 330PF K | |
| C730 | | CK73HB1H331K | CHIP C 330PF K | |
| C731 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C732 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C734 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C735 | | CK73HB1H122K | CHIP C 1200PF K | |
| C736 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C737 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C738 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C739 | | CK73HB1E682K | CHIP C 6800PF K | |
| C740 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C742 | | CK73GB1E105K | CHIP C 1.0UF K | |
| C743 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C744 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C745 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C746 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C747 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C748 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C749 | | CC73HCH1H470J | CHIP C 47PF J | |
| C750 | | CC73HCH1H470J | CHIP C 47PF J | |
| C751 | | CK73GB1E105K | CHIP C 1.0UF K | |
| C752 | | CC73HCH1H101J | CHIP C 100PF J | |
| C753 | | CC73HCH1H101J | CHIP C 100PF J | |
| C755 | | CC73HCH1H470J | CHIP C 47PF J | |
| C756 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C757 | | CK73GXR0J475K | CHIP C 4.7UF K | |
| C758 | | CK73GXR0J475K | CHIP C 4.7UF K | |
| C759 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C760 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C761 | | CC73HCH1H100D | CHIP C 10PF D | |
| C762 | | CK73HBB1A104K | CHIP C 0.10UF K | |

| Ref. No. | Address | Parts No. | Description | Destination |
|---|---|---|---|---|
| C763 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C764 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C765 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C766 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C767 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C768 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C771 | | CK73HB1A224K | CHIP C 0.22UF K | |
| C772 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C775 | | CC73HCH1H470J | CHIP C 47PF J | |
| C777 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C778 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C779 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C780 | | CK73HB1A224K | CHIP C 0.22UF K | |
| C781 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C782 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C785 | | CK73HB1A224K | CHIP C 0.22UF K | |
| C786 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C787 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C788 | | CC73HCH1H150J | CHIP C 15PF J | |
| C789 | | CC73HCH1H680J | CHIP C 68PF J | |
| C790 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C791 | | CK73HB1A393K | CHIP C 0.039UF K | |
| C792 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C793 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C794 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C795 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C796 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C797 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C798 | | CS77BP1A100M | CHIP TNTL 10UF 10WV | |
| C799 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C800 | | CK73HBB1H152K | CHIP C 1500PF K | |
| C801 | | CK73HB1C223K | CHIP C 0.022UF K | |
| C802 | | CK73HBB1E103K | CHIP C 0.010UF K | |
| C803 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C804 | | CC73HCH1H470J | CHIP C 47PF J | |
| C805 | | CK73HBB1H471K | CHIP C 470PF K | |
| C806 | | CK73HBB1H471K | CHIP C 470PF K | |
| C808 | | CK73GXR0J475K | CHIP C 4.7UF K | |
| C809 | | CK73FB1A106K | CHIP C 10UF K | |
| C812 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| CN1 | | E40-6755-05 | FLAT CABLE CONNECTOR | |
| CN22 | | E23-1325-05 | TERMINAL | |
| CN23 | | E40-6758-05 | PIN ASSY | |
| CN24 | | E23-1325-05 | TERMINAL | |
| CN403 | | E40-6813-05 | PIN ASSY | |
| CN404 | | E40-6421-15 | PIN ASSY | |
| CN405 | | E40-6754-05 | FLAT CABLE CONNECTOR | |
| CN701 | | E40-6586-05 | SOCKET FOR PIN ASSY | |
| CN710 | | E40-6757-05 | PIN ASSY | |
| D3 | | B30-2337-05 | LED(YELLOW) | |
| D4 | | B30-2337-05 | LED(YELLOW) | |
| D7 | | B30-2337-05 | LED(YELLOW) | |
| D8 | | B30-2337-05 | LED(YELLOW) | |
| D11 | | DA2S101 | DIODE | |
| D12 | | KDR720F-P | SCHOTTKY BARRIER DIODE | |
| D13 | | KDR720F-P | SCHOTTKY BARRIER DIODE | |
| D14 | | KDR720F-P | SCHOTTKY BARRIER DIODE | |
| D15 | | KDR720F-P | SCHOTTKY BARRIER DIODE | |
| D16 | | KDR720F-P | SCHOTTKY BARRIER DIODE | |
| D17 | | EMZ6.8N | ZENER DIODE | |

# PARTS LIST

**CONTROL UNIT (X53-4590-14)**

| Ref. No. | Address | Parts No. | Description | Desti-nation |
|---|---|---|---|---|
| D18 | | HZC6.8-E | ZENER DIODE | |
| D19 | | HZC6.8-E | ZENER DIODE | |
| D20 | | NNCD6.8G-A | ZENER DIODE | |
| D21 | | NNCD6.8G-A | ZENER DIODE | |
| D22 | | KDS123E-P | DIODE | |
| D23 | | KDS123E-P | DIODE | |
| D102 | | KDR720F-P | SCHOTTKY BARRIER DIODE | |
| D401 | | 1SS388F | SCHOTTKY BARRIER DIODE | |
| D402 | | 1SS388F | SCHOTTKY BARRIER DIODE | |
| D403 | | 1SS388F | SCHOTTKY BARRIER DIODE | |
| D404 | | 1SS388F | SCHOTTKY BARRIER DIODE | |
| D405 | | 1SS388F | SCHOTTKY BARRIER DIODE | |
| D406 | | HRB0502A | DIODE | |
| D407 | | DA2S101 | DIODE | |
| D408 | | KDS121-P | DIODE | |
| D409 | | DA2S101 | DIODE | |
| D410 | | DA2S101 | DIODE | |
| D412 | | KDS121-P | DIODE | |
| D414 | | KDR720F-P | SCHOTTKY BARRIER DIODE | |
| D415 | | KDR720F-P | SCHOTTKY BARRIER DIODE | |
| D416 | | 1SS388F | SCHOTTKY BARRIER DIODE | |
| D417 | | 1SS388F | SCHOTTKY BARRIER DIODE | |
| D701 | | KDS121-P | DIODE | |
| D702 | | DA2S101 | DIODE | |
| D703 | | KDR731 | DIODE | |
| D704 | | KDR731 | DIODE | |
| D705 | | KDR731 | DIODE | |
| D706 | | KDR731 | DIODE | |
| D707 | | KDS123E-P | DIODE | |
| F701 | | F53-0360-05 | FUSE | |
| IC1 | | NJM2130F3-ZB | BI-POLAR IC | |
| IC101 | | **Note 1** | ROM IC | |
| IC102 | | **Note 1** | MPU IC | |
| IC103 | | **Note 1** | SRAM IC | |
| IC104 | | TC7SH08FU-F | MOS-IC | |
| IC105 | | XC6109C29AN-G | MOS-IC | |
| IC106 | | RV5C386A | MOS-IC | |
| IC107 | | SM5023CNDH-G | MOS-IC | |
| IC108 | | **Note 1** | MOS-IC | |
| IC109 | | TC7SH08FU-F | MOS-IC | |
| IC401 | | TC74LCX245FK | MOS-IC | |
| IC402 | | TC7WZ245FK-F | MOS-IC | |
| IC403 | | LM2682MMX | MOS-IC | |
| IC404 | | XC6204B332D-G | MOS-IC | |
| IC406 | | XC6204B332M-G | MOS-IC | |
| IC407 | | LT1616ES6-PBF | ANALOGUE IC | |
| IC408 | | TC75S51FE(F) | MOS-IC | |
| IC409 | | TC7W66FK-F | MOS-IC | |
| IC411 | | NJM2880U105ZB | ANALOGUE IC | |
| IC412 | | TPA6201A1DRBR | ANALOGUE IC | |
| IC413 | | TPA6201A1DRBR | ANALOGUE IC | |
| IC414 | | XC61CC5602N-G | MOS-IC | |
| IC415 | | TC7SET08FU-F | MOS-IC | |
| IC416 | | S-812C31BPI-G | ANALOGUE IC | |
| IC417 | | TC7WH126FK | MOS-IC | |
| IC418 | | TC7WT125FUF | MOS-IC | |
| IC701 | | PCA9535BS | MOS-IC | |
| IC702 | | TC75W51FK(F) | MOS-IC | |
| IC703 | | M62364FP-F | MOS-IC | |
| IC704 | | TC75S51FE(F) | MOS-IC | |

| Ref. No. | Address | Parts No. | Description | Desti-nation |
|---|---|---|---|---|
| IC705 | | TC75W51FK(F) | MOS-IC | |
| IC706 | | TC75S51FE(F) | MOS-IC | |
| IC707 | | TC7W53FKF | MOS-IC | |
| IC708 | | XC6209B502P-G | MOS-IC | |
| IC709 | | TC7W53FKF | MOS-IC | |
| IC710 | | TC75W51FK(F) | MOS-IC | |
| IC711 | | TC75W51FK(F) | MOS-IC | |
| IC712 | | TC7S66FUF | MOS-IC | |
| IC713 | | TC75W51FK(F) | MOS-IC | |
| IC714 | | TC7W53FKF | MOS-IC | |
| IC715 | | TC75S51FE(F) | MOS-IC | |
| IC716 | | TC75W51FK(F) | MOS-IC | |
| IC717 | | XC9235A15CM-G | MOS-IC | |
| L1 | | L92-0408-05 | CHIP FERRITE | |
| L2 | | L92-0408-05 | CHIP FERRITE | |
| L3 | | LB73G0BA-004 | CHIP FERRITE | |
| L4 | | L92-0408-05 | CHIP FERRITE | |
| L5 | | L92-0408-05 | CHIP FERRITE | |
| L6 | | L92-0408-05 | CHIP FERRITE | |
| L7 | | L92-0408-05 | CHIP FERRITE | |
| L8 | | LB73G0BA-004 | CHIP FERRITE | |
| L101 | | L92-0408-05 | CHIP FERRITE | |
| L102 | | L92-0408-05 | CHIP FERRITE | |
| L401 | | L33-1496-05 | SMALL FIXED INDUCTOR(22UH) | |
| L402 | | LB73G0AK-001 | CHIP FERRITE | |
| L403 | | L92-0466-05 | CHIP FERRITE | |
| L409 | | LB73G0AK-001 | CHIP FERRITE | |
| L410 | | LB73G0AK-001 | CHIP FERRITE | |
| L411 | | LB73G0AK-001 | CHIP FERRITE | |
| L701 | | LB73G0BA-004 | CHIP FERRITE | |
| L702 | | LB73H0AV-002 | BEADS CORE | |
| L704 | | LB73H0AV-002 | BEADS CORE | |
| L705 | | LB73H0AV-002 | BEADS CORE | |
| L706 | | LB73H0AV-002 | BEADS CORE | |
| L707 | | LB73H0AV-002 | BEADS CORE | |
| L708 | | LB73H0AV-002 | BEADS CORE | |
| L709 | | LB73H0AV-002 | BEADS CORE | |
| L710 | | LB73G0BJ-002 | CHIP FERRITE | |
| L711 | | LB73G0BJ-002 | CHIP FERRITE | |
| L712 | | LB73G0BJ-002 | CHIP FERRITE | |
| L713 | | LB73H0AV-003 | BEADS CORE | |
| L714 | | LB73G0BJ-002 | CHIP FERRITE | |
| L715 | | LB73G0BJ-002 | CHIP FERRITE | |
| L716 | | LB73G0BJ-002 | CHIP FERRITE | |
| L717 | | LB73G0BJ-002 | CHIP FERRITE | |
| L718 | | L92-0408-05 | CHIP FERRITE | |
| L719 | | L33-1494-05 | SMALL FIXED INDUCTOR(4.7UH) | |
| Q1 | | 2SA1362-F(GR) | TRANSISTOR | |
| Q2 | | KTC4075E(Y,GR) | TRANSISTOR | |
| Q3 | | SSM3K15TE(F) | FET | |
| Q4 | | SSM3K15TE(F) | FET | |
| Q5 | | 2SJ347F | FET | |
| Q401 | | SSM6N16FE-F | FET | |
| Q402 | | SSM6N16FE-F | FET | |
| Q403 | | 2SJ648-A | FET | |
| Q404 | | SSM3K15TE(F) | FET | |
| Q405 | | SSM6N16FE-F | FET | |
| Q406 | | 2SB798AZ(DLDK | TRANSISTOR | |
| Q407 | | KRC660U-P | DIGITAL TRANSISTOR | |
| Q408 | | EMD12 | TRANSISTOR | |

**Note 1: This part cannot be replaced. Therefore, this part is not supplied as a service part.**

# PARTS LIST

CONTROL UNIT (X53-4590-14)

| Ref. No. | Address | Parts No. | Description | Destination |
|---|---|---|---|---|
| Q409 | | 2SA1955A-F | TRANSISTOR | |
| Q410 | | SSM3K15TE(F) | FET | |
| Q411 | | SSM6N16FE-F | FET | |
| Q412 | | SSM3K15TE(F) | FET | |
| Q413 | | 2SA1955A-F | TRANSISTOR | |
| Q414 | | EMD12 | TRANSISTOR | |
| Q415 | | EMD12 | TRANSISTOR | |
| Q702 | | SSM3K15TE(F) | FET | |
| Q703 | | SSM3K15TE(F) | FET | |
| Q704 | | KTC4075E(Y,GR) | TRANSISTOR | |
| Q705 | | 2SC4738(GR)F | TRANSISTOR | |
| Q706 | | 2SA1832(GR)F | TRANSISTOR | |
| Q707 | | 2SJ243-A | FET | |
| R1 | | RK73HB1J105J | CHIP R 1.0M J 1/16W | |
| R2 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R3 | | RK73HB1J123J | CHIP R 12K J 1/16W | |
| R4 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R5 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R6 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R7 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R8 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R9 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R10 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R11 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R12 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R14 | | RK73HB1J472J | CHIP R 4.7K J 1/16W | |
| R15 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R16 | | RK73HB1J331J | CHIP R 330 J 1/16W | |
| R17 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R18 | | RK73HB1J822J | CHIP R 8.2K J 1/16W | |
| R19 | | RK73HB1J471J | CHIP R 470 J 1/16W | |
| R20 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R21 | | RK73HB1J122J | CHIP R 1.2K J 1/16W | |
| R22 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R23 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R24 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R25 | | RK73HB1J122J | CHIP R 1.2K J 1/16W | |
| R26 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R27 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R28 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R29 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R30 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R31 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R32 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R33 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R34 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R35 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R40 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R101 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R102 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R103 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R105 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R107 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R110 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R111 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R113 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R115 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R116 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R118 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R119 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R120 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R121 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R122 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R123 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R126 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R127 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R128 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R129 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R130 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R131 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R132 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R133 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R135 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R136 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R137 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R138 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R139 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R140 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R141 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R142 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R143 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R144 | | RK73HB1J471J | CHIP R 470 J 1/16W | |
| R145 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R146 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R147 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R148 | | RK73HB1J151J | CHIP R 150 J 1/16W | |
| R149 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R150 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R153 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R154 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R155 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R156 | | RK73HB1J472J | CHIP R 4.7K J 1/16W | |
| R157 | | RK73HB1J472J | CHIP R 4.7K J 1/16W | |
| R158 | | RK73HB1J220J | CHIP R 22 J 1/16W | |
| R159 | | RK73HB1J220J | CHIP R 22 J 1/16W | |
| R160 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R161 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R162 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R163 | | RK73HH1J104D | CHIP R 100K D 1/16W | |
| R165 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R166 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R167 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R168 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R170 | | RK73HH1J103D | CHIP R 10K D 1/16W | |
| R171 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R172 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R173 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R174 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R175 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R176 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R177 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R178 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R180 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R181 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R182 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R183 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R184 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R185 | | RK73HB1J105J | CHIP R 1.0M J 1/16W | |
| R186 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R187 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |

# PARTS LIST

**CONTROL UNIT (X53-4590-14)**

| Ref. No. | Address | Parts No. | Description | Destination |
|---|---|---|---|---|
| R188 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R189 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R190 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R191 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R192 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R193 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R194 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R402 | | RK73HB1J151J | CHIP R 150 J 1/16W | |
| R404 | | RK73HB1J151J | CHIP R 150 J 1/16W | |
| R406 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R407 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R408 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R409 | | RK73HB1J470J | CHIP R 47 J 1/16W | |
| R410 | | RK73HB1J471J | CHIP R 470 J 1/16W | |
| R411 | | RK73HB1J471J | CHIP R 470 J 1/16W | |
| R412 | | RK73HB1J471J | CHIP R 470 J 1/16W | |
| R413 | | RK73HB1J471J | CHIP R 470 J 1/16W | |
| R414 | | RK73HB1J471J | CHIP R 470 J 1/16W | |
| R415 | | RK73HB1J471J | CHIP R 470 J 1/16W | |
| R416 | | RK73HB1J471J | CHIP R 470 J 1/16W | |
| R417 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R418 | | RK73HB1J471J | CHIP R 470 J 1/16W | |
| R419 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R420 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R424 | | RK73HH1J683D | CHIP R 68K D 1/16W | |
| R425 | | RK73HH1J333D | CHIP R 33K D 1/16W | |
| R426 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R427 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R428 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R429 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R431 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R432 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R433 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R434 | | RK73HB1J393J | CHIP R 39K J 1/16W | |
| R435 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R436 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R437 | | RK73HB1J471J | CHIP R 470 J 1/16W | |
| R438 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R439 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R440 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R441 | | RK73HB1J153J | CHIP R 15K J 1/16W | |
| R442 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R443 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R444 | | RK73HB1J564J | CHIP R 560K J 1/16W | |
| R445 | | RK73HB1J154J | CHIP R 150K J 1/16W | |
| R446 | | RK73HB1J274J | CHIP R 270K J 1/16W | |
| R447 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R448 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R449 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R450 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R451 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R452 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R453 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R454 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R455 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R456 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R457 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R458 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R459 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R460 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |

| Ref. No. | Address | Parts No. | Description | Destination |
|---|---|---|---|---|
| R461 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R462 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R463 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R465 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R466 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R467 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R468 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R469 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R470 | | RK73HB1J183J | CHIP R 18K J 1/16W | |
| R471 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R472 | | RK73HB1J223J | CHIP R 22K J 1/16W | |
| R473 | | RK73HB1J332J | CHIP R 3.3K J 1/16W | |
| R474 | | RK73HB1J333J | CHIP R 33K J 1/16W | |
| R475 | | RK73HB1J333J | CHIP R 33K J 1/16W | |
| R477 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R478 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R481 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R483 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R484 | | RK73HB1J223J | CHIP R 22K J 1/16W | |
| R485 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R487 | | RK73HH1J223D | CHIP R 22K D 1/16W | |
| R488 | | RK73HH1J223D | CHIP R 22K D 1/16W | |
| R489 | | RK73HH1J223D | CHIP R 22K D 1/16W | |
| R490 | | RK73HH1J223D | CHIP R 22K D 1/16W | |
| R491 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R492 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R493 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R494 | | RK73HH1J104D | CHIP R 100K D 1/16W | |
| R495 | | RK73HH1J104D | CHIP R 100K D 1/16W | |
| R496 | | RK73HH1J104D | CHIP R 100K D 1/16W | |
| R497 | | RK73HH1J104D | CHIP R 100K D 1/16W | |
| R500 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R501 | | RK73HB1J222J | CHIP R 2.2K J 1/16W | |
| R502 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R503 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R504 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R506 | | RK73HB1J222J | CHIP R 2.2K J 1/16W | |
| R507 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R508 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R509 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R510 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R511 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R512 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R513 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R514 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R515 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R516 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R517 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R518 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R519 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R520 | | RK73HB1J560J | CHIP R 56 J 1/16W | |
| R521 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R522 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R523 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R524 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R525 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R526 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R527 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R528 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R529 | | RK73HB1J101J | CHIP R 100 J 1/16W | |

# PARTS LIST

CONTROL UNIT (X53-4590-14)

| Ref. No. | Address | Parts No. | Description | Destination |
|---|---|---|---|---|
| R530 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R531 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R532 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R533 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R534 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R535 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R536 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R537 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R538 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R539 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R540 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R541 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R543 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R544 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R545 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R546 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R547 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R548 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R549 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R550 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R701 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R702 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R703 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R704 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R705 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R706 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R707 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R709 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R710 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R711 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R712 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R713 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R714 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R715 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R716 | | RK73GB2A000J | CHIP R 0.0 J 1/10W | |
| R717 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R718 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R719 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R720 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R721 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R722 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R723 | | RK73HB1J105J | CHIP R 1.0M J 1/16W | |
| R724 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R725 | | RK73HB1J100J | CHIP R 10 J 1/16W | |
| R726 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R727 | | RK73HB1J105J | CHIP R 1.0M J 1/16W | |
| R728 | | RK73HB1J105J | CHIP R 1.0M J 1/16W | |
| R729 | | RK73HB1J105J | CHIP R 1.0M J 1/16W | |
| R730 | | RK73HB1J471J | CHIP R 470 J 1/16W | |
| R731 | | RK73HB1J105J | CHIP R 1.0M J 1/16W | |
| R732 | | RK73HB1J105J | CHIP R 1.0M J 1/16W | |
| R733 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R735 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R736 | | RK73HB1J823J | CHIP R 82K J 1/16W | |
| R737 | | RK73HB1J153J | CHIP R 15K J 1/16W | |
| R738 | | RK73HB1J563J | CHIP R 56K J 1/16W | |
| R739 | | RK73HB1J823J | CHIP R 82K J 1/16W | |
| R740 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R741 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R742 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R743 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R744 | | RK73HB1J223J | CHIP R 22K J 1/16W | |
| R745 | | RK73HB1J682J | CHIP R 6.8K J 1/16W | |
| R746 | | RK73HB1J563J | CHIP R 56K J 1/16W | |
| R748 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R749 | | RK73HB1J472J | CHIP R 4.7K J 1/16W | |
| R750 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R752 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R753 | | RK73HB1J683J | CHIP R 68K J 1/16W | |
| R754 | | RK73HB1J564J | CHIP R 560K J 1/16W | |
| R755 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R756 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R757 | | RK73HB1J223J | CHIP R 22K J 1/16W | |
| R758 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R759 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R761 | | RK73HB1J223J | CHIP R 22K J 1/16W | |
| R762 | | RK73HB1J223J | CHIP R 22K J 1/16W | |
| R763 | | RK73HB1J223J | CHIP R 22K J 1/16W | |
| R764 | | RK73HB1J223J | CHIP R 22K J 1/16W | |
| R765 | | RK73HB1J334J | CHIP R 330K J 1/16W | |
| R766 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R767 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R768 | | RK73HB1J224J | CHIP R 220K J 1/16W | |
| R769 | | RK73HB1J334J | CHIP R 330K J 1/16W | |
| R770 | | RK73HB1J334J | CHIP R 330K J 1/16W | |
| R771 | | RK73HB1J153J | CHIP R 15K J 1/16W | |
| R775 | | RK73HB1J183J | CHIP R 18K J 1/16W | |
| R777 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R778 | | RK73HB1J333J | CHIP R 33K J 1/16W | |
| R779 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R780 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R782 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R783 | | RK73HB1J183J | CHIP R 18K J 1/16W | |
| R784 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R785 | | RK73HB1J682J | CHIP R 6.8K J 1/16W | |
| R786 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R787 | | RK73HB1J124J | CHIP R 120K J 1/16W | |
| R788 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R789 | | RK73HB1J154J | CHIP R 150K J 1/16W | |
| R790 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R791 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R793 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R794 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R795 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R796 | | RK73HB1J333J | CHIP R 33K J 1/16W | |
| R797 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R798 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R799 | | RK73HB1J334J | CHIP R 330K J 1/16W | |
| R800 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R801 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R802 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R803 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R804 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R805 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R806 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R807 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R808 | | RK73HB1J471J | CHIP R 470 J 1/16W | |
| R809 | | RK73HB1J334J | CHIP R 330K J 1/16W | |
| R810 | | RK73HB1J332J | CHIP R 3.3K J 1/16W | |
| R811 | | RK73HB1J823J | CHIP R 82K J 1/16W | |

# PARTS LIST

**CONTROL UNIT (X53-4590-14)**
**TX-RX UNIT (X57-8960-13)**

| Ref. No. | Address | Parts No. | Description | Destination |
|---|---|---|---|---|
| R812 | | RK73HB1J562J | CHIP R 5.6K J 1/16W | |
| R813 | | RK73HB1J273J | CHIP R 27K J 1/16W | |
| R814 | | RK73HB1J564J | CHIP R 560K J 1/16W | |
| R815 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R816 | | RK73HB1J683J | CHIP R 68K J 1/16W | |
| R818 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R819 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R820 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R821 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R822 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R823 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R824 | | RK73HB1J393J | CHIP R 39K J 1/16W | |
| R825 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R826 | | RK73HB1J334J | CHIP R 330K J 1/16W | |
| R827 | | RK73HB1J184J | CHIP R 180K J 1/16W | |
| R828 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R829 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R830 | | RK73HB1J105J | CHIP R 1.0M J 1/16W | |
| R831 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R832 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R833 | | RK73HB1J684J | CHIP R 680K J 1/16W | |
| R834 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R835 | | RK73HB1J153J | CHIP R 15K J 1/16W | |
| R836 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R837 | | RK73HB1J683J | CHIP R 68K J 1/16W | |
| R838 | | RK73HB1J564J | CHIP R 560K J 1/16W | |
| R839 | | RK73HB1J333J | CHIP R 33K J 1/16W | |
| R840 | | RK73HB1J123J | CHIP R 12K J 1/16W | |
| R841 | | RK73HB1J564J | CHIP R 560K J 1/16W | |
| R842 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R843 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R844 | | RK73HB1J472J | CHIP R 4.7K J 1/16W | |
| R845 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R846 | | RK73HB1J471J | CHIP R 470 J 1/16W | |
| R847 | | RK73HB1J182J | CHIP R 1.8K J 1/16W | |
| R850 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R851 | | RK73HB1J683J | CHIP R 68K J 1/16W | |
| R852 | | RK73HB1J683J | CHIP R 68K J 1/16W | |
| TH1 | | ERTJ0V104H | THERMISTOR | |
| TH701 | | ERTJ0V104H | THERMISTOR | |
| X101 | | L77-1802-05 | CRYSTAL RESONATOR(32768HZ) | |
| X102 | | L77-3015-05 | TCXO (18.432M) | |

## TX-RX UNIT (X57-8960-13)

| Ref. No. | Address | Parts No. | Description | Destination |
|---|---|---|---|---|
| C500 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C501 | | CC73HCH1H101J | CHIP C 100PF J | |
| C502 | | CK73HBB1H471K | CHIP C 470PF K | |
| C503 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C504 | | CK73HB1C103K | CHIP C 0.010UF K | |
| C505 | | CC73HCH1H101J | CHIP C 100PF J | |
| C506 | | CC73HCH1H100C | CHIP C 10PF C | |
| C508 | | CK73HB1C103K | CHIP C 0.010UF K | |
| C509 | | CC73HCH1H100C | CHIP C 10PF C | |
| C511 | | CK73FB0J106K | CHIP C 10UF K | |
| C512 | | CK73HB1C103K | CHIP C 0.010UF K | |
| C513 | | CC73HCH1H101J | CHIP C 100PF J | |
| C514 | | CK73HB1C103K | CHIP C 0.010UF K | |
| C515 | | CK73HB1C103K | CHIP C 0.010UF K | |
| C516 | | CK73HB1C103K | CHIP C 0.010UF K | |
| C517 | | CC73HCH1H101J | CHIP C 100PF J | |
| C518 | | CC73HCH1H101J | CHIP C 100PF J | |
| C519 | | CC73HCH1H101J | CHIP C 100PF J | |
| C520 | | CK73GXR1C225K | CHIP C 2.2UF K | |
| C521 | | CC73HCH1H101J | CHIP C 100PF J | |
| C522 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C523 | | CC73HCH1H101J | CHIP C 100PF J | |
| C524 | | CC73HCH1H101J | CHIP C 100PF J | |
| C525 | | CC73HCH1H470J | CHIP C 47PF J | |
| C526 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C527 | | CC73HCH1H101J | CHIP C 100PF J | |
| C528 | | CC73HCH1H101J | CHIP C 100PF J | |
| C529 | | CC73HCH1H101J | CHIP C 100PF J | |
| C533 | | CK73HBB1H471K | CHIP C 470PF K | |
| C534 | | CC73HCH1H101J | CHIP C 100PF J | |
| C535 | | CS77MA1VR15M | CHIP TNTL 0.15UF 35WV | |
| C536 | | CC73HCH1H470J | CHIP C 47PF J | |
| C537 | | CC73HCH1H050B | CHIP C 5.0PF B | |
| C539 | | CS77ABE1D100M | CHIP TNTL 10UF 20WV | |
| C541 | | C93-1906-05 | CERAMIC 0.047UF 35WV | |
| C542 | | CC730AD1H104J | CHIP C 0.1UF J | |
| C543 | | CC73HCH1H030B | CHIP C 3.0PF B | |
| C546 | | CK73HBB1H472K | CHIP C 4700PF K | |
| C547 | | CC73HCH1H101J | CHIP C 100PF J | |
| C548 | | CC73HCH1H101J | CHIP C 100PF J | |
| C550 | | CC73HCH1H050B | CHIP C 5.0PF B | |
| C553 | | CC73HCH1H050B | CHIP C 5.0PF B | |
| C554 | | CC73HCH1H470J | CHIP C 47PF J | |
| C555 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C556 | | CK73HBB1H471K | CHIP C 470PF K | |
| C557 | | CC73HCH1H101J | CHIP C 100PF J | |
| C562 | | CK73HXR0J105K | CHIP C 1.0UF K | |
| C565 | | CC73HCH1H330J | CHIP C 33PF J | |
| C566 | | CC73HCH1H680J | CHIP C 68PF J | |
| C570 | | CC73HCH1HR75B | CHIP C 0.75PF B | |
| C571 | | CC73HCH1H030B | CHIP C 3.0PF B | |
| C572 | | CK73FB0J106K | CHIP C 10UF K | |
| C573 | | CC73HCH1H040B | CHIP C 4.0PF B | |
| C574 | | CC73HCH1H010B | CHIP C 1.0PF B | |
| C575 | | CC73HCH1H030B | CHIP C 3.0PF B | |
| C576 | | CC73HCH1H050B | CHIP C 5.0PF B | |
| C577 | | CK73HBB1H471K | CHIP C 470PF K | |
| C578 | | CK73GXR0J475K | CHIP C 4.7UF K | |
| C579 | | CC73HCH1H050B | CHIP C 5.0PF B | |
| C580 | | CK73HBB1H471K | CHIP C 470PF K | |
| C581 | | CC73HCH1H0R5B | CHIP C 0.5PF B | |
| C582 | | CK73HBB1H471K | CHIP C 470PF K | |
| C583 | | CC73HCH1H0R5B | CHIP C 0.5PF B | |
| C584 | | CK73HBB1H471K | CHIP C 470PF K | |
| C585 | | CK73HBB1H471K | CHIP C 470PF K | |
| C586 | | CC73HCH1H070B | CHIP C 7.0PF B | |
| C587 | | CK73HBB1H471K | CHIP C 470PF K | |
| C588 | | CC73HCH1H100B | CHIP C 10PF B | |
| C600 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C601 | | CC73HCH1H101J | CHIP C 100PF J | |
| C602 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C603 | | CC73HCH1H100B | CHIP C 10PF B | |
| C604 | | CK73HBB1H471K | CHIP C 470PF K | |
| C605 | | CK73HBB1H471K | CHIP C 470PF K | |
| C607 | | CC73HCH1H070B | CHIP C 7.0PF B | |

# PARTS LIST

TX-RX UNIT (X57-8960-13)

| Ref. No. | Address | Parts No. | Description | Destination |
|---|---|---|---|---|
| C610 | | CK73HBB1H471K | CHIP C 470PF K | |
| C611 | | CK73HBB1H471K | CHIP C 470PF K | |
| C612 | | CK73HBB1H471K | CHIP C 470PF K | |
| C613 | | CC73HCH1H070B | CHIP C 7.0PFB | |
| C614 | | CK73HBB1H471K | CHIP C 470PF K | |
| C615 | | CK73HBB1H471K | CHIP C 470PF K | |
| C617 | | CK73HBB1H471K | CHIP C 470PF K | |
| C618 | | CK73HBB1H471K | CHIP C 470PF K | |
| C619 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C621 | | CC73HCH1H150J | CHIP C 15PF J | |
| C622 | | CK73HBB1H471K | CHIP C 470PF K | |
| C623 | | CC73HCH1H150J | CHIP C 15PF J | |
| C625 | | CK73HBB1H471K | CHIP C 470PF K | |
| C626 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C627 | | CC73HCH1H080B | CHIP C 8.0PFB | |
| C628 | | CC73HCH1H100C | CHIP C 10PF C | |
| C629 | | CK73HBB1H471K | CHIP C 470PF K | |
| C630 | | CK73GB1E105K | CHIP C 1.0UF K | |
| C631 | | CS77MA1A6R8M | CHIP TNTL 6.8UF 10WV | |
| C632 | | CK73HBB1H471K | CHIP C 470PF K | |
| C634 | | CK73HBB1H471K | CHIP C 470PF K | |
| C635 | | CK73HBB1H471K | CHIP C 470PF K | |
| C636 | | CK73HBB1H471K | CHIP C 470PF K | |
| C637 | | CK73HBB1H471K | CHIP C 470PF K | |
| C639 | | CC73HCH1H390J | CHIP C 39PF J | |
| C640 | | CC73HCH1H470J | CHIP C 47PF J | |
| C641 | | CC73HCH1H100C | CHIP C 10PF C | |
| C642 | | CC73HCH1H151J | CHIP C 150PF J | |
| C643 | | CC73HCH1H151J | CHIP C 150PF J | |
| C645 | | CK73GBB1C104K | CHIP C 0.10UF K | |
| C646 | | CK73GB1E105K | CHIP C 1.0UF K | |
| C647 | | C93-0943-05 | CHIP C 22PF G | |
| C648 | | CK73HB1C103K | CHIP C 0.010UF K | |
| C649 | | CK73HB1C103K | CHIP C 0.010UF K | |
| C651 | | CK73HBB1H471K | CHIP C 470PF K | |
| C653 | | CK73HBB1H471K | CHIP C 470PF K | |
| C660 | | CC73GCH1H470J | CHIP C 470PF J | |
| C661 | | CK73HBB1H471K | CHIP C 470PF K | |
| C662 | | CC73GCH1H010B | CHIP C 1.0PFB | |
| C663 | | CC73GCH1H220J | CHIP C 22PF J | |
| C664 | | CC73GCH1H040B | CHIP C 4.0PFB | |
| C665 | | CC73GCH1H020B | CHIP C 2.0PFB | |
| C666 | | CC73GCH1H050B | CHIP C 5.0PFB | |
| C667 | | CC73GCH1H020B | CHIP C 2.0PFB | |
| C668 | | CC73GCH1H080B | CHIP C 8.0PFB | |
| C669 | | CC73GCH1H040B | CHIP C 4.0PFB | |
| C670 | | CK73HBB1H471K | CHIP C 470PF K | |
| C671 | | CC73HCH1H070B | CHIP C 7.0PFB | |
| C672 | | CK73HBB1H471K | CHIP C 470PF K | |
| C689 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C690 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C691 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C692 | | C93-0949-05 | CHIP C 35PF G | |
| C693 | | CK73GBB1C224K | CHIP C 0.22UF K | |
| C700 | | CC73HCH1H070B | CHIP C 7.0PFB | |
| C701 | | CK73HB1C103K | CHIP C 0.010UF K | |
| C703 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C704 | | CC73HCH1H470J | CHIP C 47PF J | |
| C705 | | CK73FB1E475K | CHIP C 4.7UF K | |
| C706 | | CC73HCH1H100B | CHIP C 10PF B | |

| Ref. No. | Address | Parts No. | Description | Destination |
|---|---|---|---|---|
| C707 | | CC73HCH1H680J | CHIP C 68PF J | |
| C708 | | CC73HCH1H101J | CHIP C 100PF J | |
| C709 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C710 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C711 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C712 | | CC73HCH1H680J | CHIP C 68PF J | |
| C713 | | CK73FB1A106K | CHIP C 10UF K | |
| C714 | | CK73GBB1H102K | CHIP C 1000PF K | |
| C715 | | CK73HB1C103K | CHIP C 0.010UF K | |
| C716 | | CC73HCH1H820J | CHIP C 82PF J | |
| C717 | | CK73HB1C103K | CHIP C 0.010UF K | |
| C718 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C719 | | CK73FB1A106K | CHIP C 10UF K | |
| C720 | | CC73HCH1H100B | CHIP C 10PF B | |
| C721 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C722 | | CC73HCH1H470G | CHIP C 47PF G | |
| C723 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C724 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C725 | | CK73HB1C103K | CHIP C 0.010UF K | |
| C727 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C728 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C729 | | CK73FBB1E474K | CHIP C 0.47UF K | |
| C730 | | CK73HB1C103K | CHIP C 0.010UF K | |
| C732 | | CK73HBB1H471K | CHIP C 470PF K | |
| C733 | | CK73HB1C103K | CHIP C 0.010UF K | |
| C734 | | CK73HB1C103K | CHIP C 0.010UF K | |
| C735 | | CC73HCH1H470G | CHIP C 47PF G | |
| C736 | | CK73HB1C103K | CHIP C 0.010UF K | |
| C737 | | CC73HCH1H020B | CHIP C 2.0PFB | |
| C738 | | CC73HCH1H220G | CHIP C 22PF G | |
| C739 | | CC73HCH1H060B | CHIP C 6.0PFB | |
| C740 | | CK73HB1C103K | CHIP C 0.010UF K | |
| C741 | | CK73HB1C103K | CHIP C 0.010UF K | |
| C742 | | CK73FB1A475K | CHIP C 4.7UF K | |
| C743 | | CK73HB1C103K | CHIP C 0.010UF K | |
| C744 | | CK73HBB1H471K | CHIP C 470PF K | |
| C745 | | CK73HBB1H471K | CHIP C 470PF K | |
| C746 | | CC73HCH1H090B | CHIP C 9.0PFB | |
| C747 | | CC73HCH1H100B | CHIP C 10PF B | |
| C748 | | CK73HBB1H471K | CHIP C 470PF K | |
| C749 | | CC73HCH1H020B | CHIP C 2.0PFB | |
| C750 | | CK73HB1C103K | CHIP C 0.010UF K | |
| C751 | | CC73HCH1H100B | CHIP C 10PF B | |
| C752 | | CK73HBB1H471K | CHIP C 470PF K | |
| C753 | | CC73HCH1H020B | CHIP C 2.0PFB | |
| C754 | | CC73HCH1H030B | CHIP C 3.0PFB | |
| C755 | | CC73HCH1H040B | CHIP C 4.0PFB | |
| C756 | | CC73HCH1H090B | CHIP C 9.0PFB | |
| C758 | | CK73HBB1H471K | CHIP C 470PF K | |
| C759 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C760 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C761 | | CK73GXR1C225K | CHIP C 2.2UF K | |
| C764 | | CC73HCH1H1R5B | CHIP C 1.5PFB | |
| C765 | | CK73HBB1H471K | CHIP C 470PF K | |
| C766 | | CK73GB1H104K | CHIP C 0.10UF K | |
| C767 | | CC73HCH1H090B | CHIP C 9.0PFB | |
| C768 | | CC73HCH1H010B | CHIP C 1.0PFB | |
| C769 | | CK73HBB1H471K | CHIP C 470PF K | |
| C770 | | CC73HCH1H040B | CHIP C 4.0PFB | |
| C771 | | CK73HBB1H471K | CHIP C 470PF K | |

# PARTS LIST

**TX-RX UNIT (X57-8960-13)**

| Ref. No. | Address | Parts No. | Description | Destination |
|---|---|---|---|---|
| C772 | | CC73HCH1H090B | CHIP C 9.0PFB | |
| C773 | | CC73HCH1H010B | CHIP C 1.0PFB | |
| C774 | | CC73HCH1H030B | CHIP C 3.0PFB | |
| C775 | | CK73HBB1H471K | CHIP C 470PF K | |
| C776 | | CC73HCH1H090B | CHIP C 9.0PFB | |
| C777 | | CK73HBB1H471K | CHIP C 470PF K | |
| C778 | | CK73HBB1H471K | CHIP C 470PF K | |
| C779 | | CK73HB1C103K | CHIP C 0.010UF K | |
| C780 | | CK73GB1H104K | CHIP C 0.10UF K | |
| C782 | | CC73HCH1H0R5B | CHIP C 0.5PFB | |
| C783 | | CK73GB1E105K | CHIP C 1.0UF K | |
| C784 | | CK73HBB1H471K | CHIP C 470PF K | |
| C785 | | CK73HBB1H471K | CHIP C 470PF K | |
| C786 | | CK73HBB1H471K | CHIP C 470PF K | |
| C788 | | CK73GB1H104K | CHIP C 0.10UF K | |
| C789 | | CK73HBB1H471K | CHIP C 470PF K | |
| C790 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C791 | | CK73HBB1H471K | CHIP C 470PF K | |
| C792 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C794 | | CK73HBB1H471K | CHIP C 470PF K | |
| C795 | | CK73HBB1H471K | CHIP C 470PF K | |
| C796 | | CC73HCH1H090B | CHIP C 9.0PFB | |
| C798 | | CC73HCH1H1R5B | CHIP C 1.5PFB | |
| C799 | | CK73HBB1H471K | CHIP C 470PF K | |
| C800 | | CC73HCH1H020B | CHIP C 2.0PFB | |
| C801 | | CK73HBB1H471K | CHIP C 470PF K | |
| C802 | | CC73HCH1H040B | CHIP C 4.0PFB | |
| C803 | | CC73HCH1H040B | CHIP C 4.0PFB | |
| C804 | | CC73HCH1H090B | CHIP C 9.0PFB | |
| C807 | | CC73HCH1H050B | CHIP C 5.0PFB | |
| C809 | | CC73GCH1H180J | CHIP C 18PF J | |
| C810 | | CC73HCH1H020B | CHIP C 2.0PFB | |
| C811 | | CC73HCH1H090B | CHIP C 9.0PFB | |
| C849 | | CK73HBB1H471K | CHIP C 470PF K | |
| C850 | | CC73HCH1H101J | CHIP C 100PF J | |
| C900 | | CK73GBB1H102K | CHIP C 1000PF K | |
| C901 | | CK73HBB1H471K | CHIP C 470PF K | |
| C902 | | CK73HBB1H471K | CHIP C 470PF K | |
| C903 | | CK73GB1H471K | CHIP C 470PF K | |
| C904 | | CC73HCH1H470J | CHIP C 47PF J | |
| C905 | | CC73HCH1H470J | CHIP C 47PF J | |
| C906 | | CC73HCH1H470J | CHIP C 47PF J | |
| C907 | | CC73HCH1H470J | CHIP C 47PF J | |
| C908 | | CC73HCH1H470J | CHIP C 47PF J | |
| C910 | | CC73HCH1H470J | CHIP C 47PF J | |
| C912 | | CC73HCH1H470J | CHIP C 47PF J | |
| C913 | | CC73HCH1H470J | CHIP C 47PF J | |
| C914 | | CC73HCH1H470J | CHIP C 47PF J | |
| C915 | | CC73HCH1H470J | CHIP C 47PF J | |
| C916 | | CC73HCH1H470J | CHIP C 47PF J | |
| C917 | | CC73HCH1H470J | CHIP C 47PF J | |
| C918 | | CC73HCH1H470J | CHIP C 47PF J | |
| C919 | | CC73HCH1H470J | CHIP C 47PF J | |
| C920 | | CC73HCH1H470J | CHIP C 47PF J | |
| C922 | | CC73HCH1H470J | CHIP C 47PF J | |
| C923 | | CC73HCH1H470J | CHIP C 47PF J | |
| C925 | | CC73HCH1H470J | CHIP C 47PF J | |
| C926 | | CC73HCH1H470J | CHIP C 47PF J | |
| C927 | | CC73HCH1H470J | CHIP C 47PF J | |
| C928 | | CC73HCH1H470J | CHIP C 47PF J | |

| Ref. No. | Address | Parts No. | Description | Destination |
|---|---|---|---|---|
| C929 | | CC73HCH1H470J | CHIP C 47PF J | |
| C930 | | CC73HCH1H470J | CHIP C 47PF J | |
| C931 | | CC73HCH1H470J | CHIP C 47PF J | |
| C932 | | CC73HCH1H470J | CHIP C 47PF J | |
| C933 | | CC73HCH1H470J | CHIP C 47PF J | |
| C934 | | CC73HCH1H470J | CHIP C 47PF J | |
| C935 | | CC73HCH1H470J | CHIP C 47PF J | |
| C936 | | CC73HCH1H470J | CHIP C 47PF J | |
| C937 | | CC73HCH1H470J | CHIP C 47PF J | |
| C938 | | CC73HCH1H470J | CHIP C 47PF J | |
| C939 | | CC73HCH1H470J | CHIP C 47PF J | |
| C940 | | CC73HCH1H470J | CHIP C 47PF J | |
| C941 | | CC73HCH1H470J | CHIP C 47PF J | |
| C942 | | CC73HCH1H470J | CHIP C 47PF J | |
| C943 | | CC73HCH1H470J | CHIP C 47PF J | |
| C944 | | CK73HBB1H471K | CHIP C 470PF K | |
| C945 | | CC73HCH1H470J | CHIP C 47PF J | |
| C946 | | CC73HCH1H470J | CHIP C 47PF J | |
| C947 | | CK73HBB1H471K | CHIP C 470PF K | |
| C948 | | CK73GB1E105K | CHIP C 1.0UF K | |
| C949 | | CK73GB1E105K | CHIP C 1.0UF K | |
| C950 | | C92-0765-05 | CHIP TNTL 4.7UF 16WV | |
| C951 | | CK73GBB1C224K | CHIP C 0.22UF K | |
| C952 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C953 | | CK73HBB1A104K | CHIP C 0.10UF K | |
| C954 | | CK73GBB1C224K | CHIP C 0.22UF K | |
| C955 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C956 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C957 | | CK73GB1E105K | CHIP C 1.0UF K | |
| C958 | | CK73GB1E105K | CHIP C 1.0UF K | |
| C961 | | CK73HBB1H471K | CHIP C 470PF K | |
| C962 | | CC73HCH1E181J | CHIP C 180PF J | |
| C963 | | CK73GB1E105K | CHIP C 1.0UF K | |
| C964 | | CK73GBB1C224K | CHIP C 0.22UF K | |
| C965 | | CK73GBB1C224K | CHIP C 0.22UF K | |
| C966 | | CC73HCH1H220J | CHIP C 22PF J | |
| C967 | | CK73HBB1H471K | CHIP C 470PF K | |
| C968 | | CK73GBB1C224K | CHIP C 0.22UF K | |
| C969 | | CK73GB1E105K | CHIP C 1.0UF K | |
| C970 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C971 | | CK73HBB1H102K | CHIP C 1000PF K | |
| C972 | | CK73GB1E105K | CHIP C 1.0UF K | |
| C973 | | CK73GB1E105K | CHIP C 1.0UF K | |
| C974 | | CK73GB1E105K | CHIP C 1.0UF K | |
| C975 | | C93-0983-05 | CHIP C 6.0PFG | |
| C976 | | CC73HCH1H470J | CHIP C 47PF J | |
| C977 | | CK73GB1E105K | CHIP C 1.0UF K | |
| C980 | | CK73GB1E105K | CHIP C 1.0UF K | |
| C981 | | CK73HB1A474K | CHIP C 0.48UF K | |
| C988 | | C93-0939-05 | CHIP C 15PF G | |
| C989 | | C93-0935-05 | CHIP C 10PF G | |
| C992 | | CC73HCH1H050B | CHIP C 5.0PFB | |
| CF700 | | L72-1017-05 | CERAMIC FILTER | |
| CF701 | | L72-1020-05 | CERAMIC FILTER | |
| CN600 | | E23-1326-05 | TERMINAL | |
| CN737 | | E40-6358-05 | SOCKET FOR PIN ASSY | |
| CN900 | | E40-6422-15 | SOCKET FOR PIN ASSY | |
| CN901 | | E40-6752-05 | FLAT CABLE CONNECTOR | |
| CN902 | | E23-1326-05 | TERMINAL | |
| D505 | | KDS123E-P | DIODE | |

# PARTS LIST

**TX-RX UNIT (X57-8960-13)**

| Ref. No. | Address | Parts No. | Description | Destination |
|---|---|---|---|---|
| D506 | | 1SV325F | VARIABLE CAPACITANCE DIODE | |
| D507 | | 1SV325F | VARIABLE CAPACITANCE DIODE | |
| D510 | | 1SV282-F | VARIABLE CAPACITANCE DIODE | |
| D511 | | 1SV282-F | VARIABLE CAPACITANCE DIODE | |
| D514 | | 1SV282-F | VARIABLE CAPACITANCE DIODE | |
| D515 | | 1SV282-F | VARIABLE CAPACITANCE DIODE | |
| D516 | | 1SV282-F | VARIABLE CAPACITANCE DIODE | |
| D517 | | 1SV282-F | VARIABLE CAPACITANCE DIODE | |
| D518 | | HSC119 | DIODE | |
| D519 | | 1SV278F | VARIABLE CAPACITANCE DIODE | |
| D600 | | HSC277 | DIODE | |
| D601 | | HSC277 | DIODE | |
| D604 | | HZU2ALL | ZENER DIODE | |
| D605 | | HZU5CLL | ZENER DIODE | |
| D606 | | HVC131 | DIODE | |
| D607 | | HVC131 | DIODE | |
| D608 | | HSC119 | DIODE | |
| D611 | | HSC119 | DIODE | |
| D702 | | 1SV286F | VARI CAP DIODE | |
| D703 | | 1SV286F | VARI CAP DIODE | |
| D704 | | 1SV286F | VARI CAP DIODE | |
| D705 | | HSC119 | DIODE | |
| D706 | | 1SV286F | VARI CAP DIODE | |
| D708 | | 1SV286F | VARI CAP DIODE | |
| D709 | | HVC131 | DIODE | |
| D710 | | 1SV286F | VARI CAP DIODE | |
| D711 | | HVC131 | DIODE | |
| D900 | | B30-2278-05 | LED(RED/YELLOW) | |
| D901 | | 1SR154-400 | DIODE | |
| D902 | | HSC119 | DIODE | |
| D903 | | 1PMT5929BT1G | ZENER DIODE | |
| D904 | | 1PMT5929BT1G | ZENER DIODE | |
| F900 | | F53-0324-15 | FUSE(2.5A) | |
| F901 | | F53-0479-05 | FUSE(0.15A) | |
| IC404 | | TC75W51FUF | MOS-IC | |
| IC500 | | LM73CIMKX-0 | MOS-IC | |
| IC501 | | TLV2381IDBV | MOS-IC | |
| IC502 | | SKY72310362LF | MOS-IC | |
| IC503 | | TLV2381IDBV | MOS-IC | |
| IC504 | | TC75W51FUF | MOS-IC | |
| IC600 | | TA75W01FUF | BIPOLAR IC | |
| IC700 | | MCP6021-E/OT | MOS-IC | |
| IC701 | | TK10931VTL-G | ANALOGUE IC | |
| IC702 | | TLV2381IDBV | MOS-IC | |
| IC703 | | TLV2381IDBV | MOS-IC | |
| IC900 | | TC75S51FE(F) | MOS-IC | |
| IC901 | | XC9101D09AK-G | MOS-IC | |
| IC902 | | TK11250CUCB | MOS-IC | |
| IC903 | | TK71733S | BI-POLAR IC | |
| L500 | | LR77Z0AE4R7J | SMALL FIXED INDUCTOR(4.7UH) | |
| L503 | | LB73H0AV-003 | BEADS CORE | |
| L504 | | LK73G0AF12NJ | SMALL FIXED INDUCTOR(12NH) | |
| L508 | | LK73G0AFR22J | SMALL FIXED INDUCTOR(220NH) | |
| L509 | | LK73G0AFR22J | SMALL FIXED INDUCTOR(220NH) | |
| L514 | | LK73G0AFR22J | SMALL FIXED INDUCTOR(220NH) | |
| L515 | | LK73G0AFR22J | SMALL FIXED INDUCTOR(220NH) | |
| L516 | | LK73G0AFR22J | SMALL FIXED INDUCTOR(220NH) | |
| L517 | | LK73G0AFR22J | SMALL FIXED INDUCTOR(220NH) | |
| L518 | | LK73G0AFR22J | SMALL FIXED INDUCTOR(220NH) | |
| L519 | | LK73G0AFR22J | SMALL FIXED INDUCTOR(220NH) | |

| Ref. No. | Address | Parts No. | Description | Destination |
|---|---|---|---|---|
| L520 | | L40-1878-67 | CHIP INDUCTOR | |
| L521 | | L40-2278-67 | CHIP INDUCTOR | |
| L522 | | LK73G0AFR22J | SMALL FIXED INDUCTOR(220NH) | |
| L523 | | L92-0446-05 | SMALL FIXED INDUCTOR(220NH) | |
| L524 | | LK73G0AFR22J | SMALL FIXED INDUCTOR(220NH) | |
| L525 | | LK73G0AFR22J | SMALL FIXED INDUCTOR(220NH) | |
| L526 | | LK73G0AFR22J | SMALL FIXED INDUCTOR(220NH) | |
| L527 | | L92-0446-05 | SMALL FIXED INDUCTOR(220NH) | |
| L528 | | LK73H0AM27NJ | SMALL FIXED INDUCTOR(27NH) | |
| L530 | | L40-5675-57 | CHIP INDUCTOR | |
| L598 | | LB73H0AV-003 | BEADS CORE | |
| L599 | | LB73H0AV-003 | BEADS CORE | |
| L600 | | LK73G0AF22NJ | SMALL FIXED INDUCTOR(22NH) | |
| L602 | | LK73G0AF18NJ | SMALL FIXED INDUCTOR(18NH) | |
| L603 | | LK73G0AF12NJ | SMALL FIXED INDUCTOR(12NH) | |
| L604 | | LB73G0BD-005 | CHIP FERRITE | |
| L605 | | L40-6865-92 | CHIP INDUCTOR | |
| L606 | | L41-1875-43 | CHIP INDUCTOR | |
| L607 | | LB73F0AW-002 | CHIP FERRITE | |
| L609 | | L34-4575-05 | AIR CORE COIL | |
| L610 | | LB73F0AW-002 | CHIP FERRITE | |
| L611 | | L41-2285-14 | SMALL FIXED INDUCTOR(220NH) | |
| L612 | | LR79Z0DD16N9J | AIR-CORE COIL | |
| L613 | | LR79Z0DD16N9J | AIR-CORE COIL | |
| L614 | | LR79Z0DD16N9J | AIR-CORE COIL | |
| L615 | | L40-1575-57 | CHIP INDUCTOR | |
| L701 | | L40-5681-86 | SMALL FIXED INDUCTOR(0.56UH) | |
| L703 | | L41-4778-45 | SMALL FIXED INDUCTOR(47NH) | |
| L704 | | L40-1891-86 | SMALL FIXED INDUCTOR(1.8U) | |
| L705 | | LB73G0BD-005 | CHIP FERRITE | |
| L706 | | LB73G0BD-005 | CHIP FERRITE | |
| L707 | | LR77Z0AER27J | SMALL FIXED INDUCTOR(270NH) | |
| L708 | | LR77Z0AER56J | SMALL FIXED INDUCTOR(560NH) | |
| L709 | | LK73G0AF18NJ | SMALL FIXED INDUCTOR(18NH) | |
| L710 | | LK73G0AF18NJ | SMALL FIXED INDUCTOR(18NH) | |
| L711 | | LK73G0AF22NJ | SMALL FIXED INDUCTOR(22NH) | |
| L713 | | L41-8268-14 | CHIP INDUCTOR | |
| L714 | | L41-8268-14 | CHIP INDUCTOR | |
| L715 | | L41-8268-14 | CHIP INDUCTOR | |
| L716 | | LB73G0BD-005 | CHIP FERRITE | |
| L717 | | L41-2285-14 | SMALL FIXED INDUCTOR(220NH) | |
| L720 | | LK73G0AF10NJ | SMALL FIXED INDUCTOR(10NH) | |
| L721 | | L41-8268-14 | CHIP INDUCTOR | |
| L722 | | L41-8268-14 | CHIP INDUCTOR | |
| L723 | | LR79Z0DD16N9J | AIR-CORE COIL | |
| L725 | | L40-8265-92 | CHIP INDUCTOR | |
| L726 | | L41-3378-03 | CHIP INDUCTOR | |
| L780 | | L40-1085-57 | SMALL FIXED INDUCTOR(100NH) | |
| L900 | | LB73F0AW-002 | CHIP FERRITE | |
| L901 | | L33-1462-05 | SMALL FIXED INDUCTOR | |
| L903 | | L41-6869-16 | CHIP INDUCTOR | |
| Q504 | | 2SK879-F(Y) | CHIP INDUCTOR | |
| Q507 | | 2SC5383-T111 | TRANSISTOR | |
| Q508 | | 2SK508NV(K52) | FET | |
| Q509 | | 2SK508NV(K52) | FET | |
| Q510 | | SSM6L05FU-F | FET | |
| Q511 | | 2SJ347F | FET | |
| Q512 | | 2SC5636 | TRANSISTOR | |
| Q600 | | 2SC5636 | TRANSISTOR | |
| Q601 | | 2SC5636 | TRANSISTOR | |

# PARTS LIST

**TX-RX UNIT (X57-8960-13)**

| Ref. No. | Address | Parts No. | Description | Destination |
|---|---|---|---|---|
| Q602 | | 2SK3077F | FET | |
| Q603 | | RD01MUS1-T113 | FET | |
| Q604 | | 2SC5383-T111 | TRANSISTOR | |
| Q605 | | SSM3K15TE(F) | FET | |
| Q606 | | RD07MVS1BT122 | FET | |
| Q607 | | LTC044EEBFS8 | DIGITAL TRANSISTOR | |
| Q608 | | 2SK1824-A | FET | |
| Q610 | | EMD5 | DIGITAL TRANSISTOR ARRAY | |
| Q700 | | 2SC5108F/Y/ | TRANSISTOR | |
| Q701 | | 2SC4215-F(Y) | TRANSISTOR | |
| Q703 | | 3SK318 | FET | |
| Q705 | | 3SK318 | FET | |
| Q706 | | 2SK1830F | FET | |
| Q900 | | UMG9N | DIGITAL TRANSISTOR ARRAY | |
| Q901 | | SSM6L05FU-F | FET | |
| Q902 | | SSM6L05FU-F | FET | |
| Q903 | | SSM6L05FU-F | FET | |
| Q904 | | SSM5H01TU-F | FET | |
| Q905 | | 2SA1955A-F | TRANSISTOR | |
| R430 | | RK73GB2A000J | CHIP R 0.0 J 1/10W | |
| R431 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R432 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R500 | | RN73HH1J104D | CHIP R 100K D 1/16W | |
| R501 | | RN73HH1J104D | CHIP R 100K D 1/16W | |
| R502 | | RK73HB1J124J | CHIP R 120K J 1/16W | |
| R503 | | RK73HB1J100J | CHIP R 10 J 1/16W | |
| R504 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R505 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R506 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R511 | | RK73HB1J100J | CHIP R 10 J 1/16W | |
| R512 | | RK73HB1J100J | CHIP R 10 J 1/16W | |
| R513 | | RK73HB1J100J | CHIP R 10 J 1/16W | |
| R514 | | RK73HB1J100J | CHIP R 10 J 1/16W | |
| R515 | | RK73HB1J470J | CHIP R 47 J 1/16W | |
| R519 | | RK73HB1J100J | CHIP R 10 J 1/16W | |
| R520 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R522 | | RK73HB1J100J | CHIP R 10 J 1/16W | |
| R523 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R527 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R529 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R530 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R531 | | RK73HB1J683J | CHIP R 68K J 1/16W | |
| R532 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R533 | | RK73HH1J184D | CHIP R 180K D 1/16W | |
| R534 | | RK73HH1J473D | CHIP R 47K D 1/16W | |
| R535 | | RK73HB1J151J | CHIP R 150 J 1/16W | |
| R536 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R537 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R538 | | RK73HH1J391D | CHIP R 390 D 1/16W | |
| R539 | | RK73HB1J106J | CHIP R 10M J 1/16W | |
| R541 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R546 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R547 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R548 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R550 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R552 | | RK73HB1J124J | CHIP R 120K J 1/16W | |
| R554 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R555 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R557 | | RK73HB1J152J | CHIP R 1.5K J 1/16W | |
| R558 | | RK73HB1J474J | CHIP R 470K J 1/16W | |

| Ref. No. | Address | Parts No. | Description | Destination |
|---|---|---|---|---|
| R559 | | RK73HH1J181D | CHIP R 180 D 1/16W | |
| R560 | | RK73HB1J220J | CHIP R 22 J 1/16W | |
| R561 | | RK73HH1J181D | CHIP R 180 D 1/16W | |
| R562 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R563 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R564 | | RK73HB1J154J | CHIP R 150K J 1/16W | |
| R565 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R566 | | RK73HH1J474D | CHIP R 470K D 1/16W | |
| R567 | | RK73HB1J472J | CHIP R 4.7K J 1/16W | |
| R570 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R571 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R572 | | RK73HB1J100J | CHIP R 10 J 1/16W | |
| R574 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R575 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R576 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R577 | | RK73GB2A000J | CHIP R 0.0 J 1/10W | |
| R580 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R581 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R586 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R589 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R590 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R591 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R599 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R600 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R601 | | RK73HB1J183J | CHIP R 18K J 1/16W | |
| R602 | | RK73HB1J124J | CHIP R 120K J 1/16W | |
| R603 | | RK73HB1J222J | CHIP R 2.2K J 1/16W | |
| R604 | | RK73HB1J682J | CHIP R 6.8K J 1/16W | |
| R605 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R606 | | RK73HB1J331J | CHIP R 330 J 1/16W | |
| R607 | | RK73HB1J222J | CHIP R 2.2K J 1/16W | |
| R608 | | RK73HB1J470J | CHIP R 47 J 1/16W | |
| R610 | | RK73HB1J472J | CHIP R 4.7K J 1/16W | |
| R612 | | RK73HB1J472J | CHIP R 4.7K J 1/16W | |
| R613 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R616 | | RK73HB1J181J | CHIP R 180 J 1/16W | |
| R617 | | RK73HB1J331J | CHIP R 330 J 1/16W | |
| R618 | | RK73HB1J220J | CHIP R 22 J 1/16W | |
| R620 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R622 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R623 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R624 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R626 | | RK73HB1J331J | CHIP R 330 J 1/16W | |
| R627 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R628 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R629 | | RK73HB1J273J | CHIP R 27K J 1/16W | |
| R630 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R631 | | RK73HB1J470J | CHIP R 47 J 1/16W | |
| R632 | | RK73HB1J562J | CHIP R 5.6K J 1/16W | |
| R633 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R634 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R635 | | RK73HB1J561J | CHIP R 560 J 1/16W | |
| R636 | | RK73HB1J221J | CHIP R 220 J 1/16W | |
| R639 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R641 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R642 | | RK73EB2ER39J | CHIP R 0.39J 1/4W | |
| R644 | | RK73HB1J270J | CHIP R 27 J 1/16W | |
| R645 | | RK73EB2ER39J | CHIP R 0.39J 1/4W | |
| R646 | | RK73HB1J333J | CHIP R 33K J 1/16W | |
| R647 | | RK73EB2ER39J | CHIP R 0.39J 1/4W | |

# PARTS LIST

TX-RX UNIT (X57-8960-13)

| Ref. No. | Address | Parts No. | Description | Destination |
|---|---|---|---|---|
| R648 | | RK73HH1J154D | CHIP R 150K D 1/16W | |
| R649 | | RK73HH1J154D | CHIP R 150K D 1/16W | |
| R650 | | RK73GB2A000J | CHIP R 0.0 J 1/10W | |
| R651 | | RK73HH1J274D | CHIP R 270K D 1/16W | |
| R652 | | RK73HH1J274D | CHIP R 270K D 1/16W | |
| R653 | | RK73HH1J274D | CHIP R 270K D 1/16W | |
| R654 | | RK73HH1J274D | CHIP R 270K D 1/16W | |
| R655 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R656 | | RK73HB1J563J | CHIP R 56K J 1/16W | |
| R657 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R658 | | RK73HB1J182J | CHIP R 1.8K J 1/16W | |
| R659 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R660 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R661 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R664 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R665 | | RK73HB1J271J | CHIP R 270 J 1/16W | |
| R666 | | RK73HB1J271J | CHIP R 270 J 1/16W | |
| R667 | | RK73EB2E823J | CHIP R 82K J 1/4W | |
| R669 | | RK73HB1J471J | CHIP R 470 J 1/16W | |
| R670 | | RK73HB1J224J | CHIP R 220K J 1/16W | |
| R671 | | RK73GB2A000J | CHIP R 0.0 J 1/10W | |
| R701 | | RK73HB1J561J | CHIP R 560 J 1/16W | |
| R702 | | RK73HB1J334J | CHIP R 330K J 1/16W | |
| R703 | | RK73HB1J100J | CHIP R 10 J 1/16W | |
| R704 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R705 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R709 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R710 | | RK73GB2A000J | CHIP R 0.0 J 1/10W | |
| R712 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R714 | | RK73HB1J100J | CHIP R 10 J 1/16W | |
| R717 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R718 | | RK73HB1J183J | CHIP R 18K J 1/16W | |
| R719 | | RK73HB1J274J | CHIP R 270K J 1/16W | |
| R720 | | RK73HB1J222J | CHIP R 2.2K J 1/16W | |
| R721 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R722 | | RK73HB1J472J | CHIP R 4.7K J 1/16W | |
| R724 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R725 | | RK73HB1J223J | CHIP R 22K J 1/16W | |
| R726 | | RK73HB1J183J | CHIP R 18K J 1/16W | |
| R727 | | RK73HB1J222J | CHIP R 2.2K J 1/16W | |
| R728 | | RK73HB1J221J | CHIP R 220 J 1/16W | |
| R730 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R731 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R733 | | RK73HB1J564J | CHIP R 560K J 1/16W | |
| R735 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R736 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R737 | | RK73HB1J221J | CHIP R 220 J 1/16W | |
| R738 | | RK73HB1J272J | CHIP R 2.7K J 1/16W | |
| R739 | | RK73HB1J221J | CHIP R 220 J 1/16W | |
| R740 | | RK73HB1J470J | CHIP R 47 J 1/16W | |
| R742 | | RK73HB1J472J | CHIP R 4.7K J 1/16W | |
| R743 | | RK73HB1J681J | CHIP R 680 J 1/16W | |
| R744 | | RK73HB1J221J | CHIP R 220 J 1/16W | |
| R745 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R746 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R747 | | RK73HB1J154J | CHIP R 150K J 1/16W | |
| R748 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R749 | | RK73HB1J184J | CHIP R 180K J 1/16W | |
| R750 | | RK73GB2A000J | CHIP R 0.0 J 1/10W | |
| R752 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R753 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R755 | | RK73HB1J470J | CHIP R 47 J 1/16W | |
| R757 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R758 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R759 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R760 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R761 | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R762 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R763 | | RK73HB1J824J | CHIP R 820K J 1/16W | |
| R764 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R765 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R768 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R769 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R770 | | RK73HB1J680J | CHIP R 68 J 1/16W | |
| R771 | | RK73HB1J181J | CHIP R 180 J 1/16W | |
| R772 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R773 | | RK73HB1J824J | CHIP R 820K J 1/16W | |
| R774 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R775 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R777 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R778 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R779 | | RK73HB1J683J | CHIP R 68K J 1/16W | |
| R780 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R781 | | RK73HB1J182J | CHIP R 1.8K J 1/16W | |
| R783 | | RK73HB1J224J | CHIP R 220K J 1/16W | |
| R784 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R785 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R786 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R788 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R790 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R791 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R792 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R794 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R795 | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R796 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R797 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R798 | | RK73HB1J470J | CHIP R 47 J 1/16W | |
| R799 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R803 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R900 | | RK73HB1J391J | CHIP R 390 J 1/16W | |
| R901 | | RK73GB2A000J | CHIP R 0.0 J 1/10W | |
| R902 | | RK73HB1J100J | CHIP R 10 J 1/16W | |
| R903 | | RK73HB1J821J | CHIP R 820 J 1/16W | |
| R904 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R905 | | RK73HB1J330J | CHIP R 33 J 1/16W | |
| R906 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R907 | | RK73GB2A100J | CHIP R 10 J 1/10W | |
| R908 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R909 | | RK73GB2A000J | CHIP R 0.0 J 1/10W | |
| R910 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R911 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R912 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R913 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R914 | | RK73HB1J154J | CHIP R 150K J 1/16W | |
| R915 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R916 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R917 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R918 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R920 | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R921 | | RK73HB1J473J | CHIP R 47K J 1/16W | |

# PARTS LIST

**TX-RX UNIT (X57-8960-13)**

| Ref. No. | Address | Parts No. | Description | Desti-nation |
|---|---|---|---|---|
| R922 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R923 | | RK73HB1J123J | CHIP R 12K J 1/16W | |
| R925 | | RK73HH1J274D | CHIP R 270K D 1/16W | |
| R926 | | RK73HH1J223D | CHIP R 22K D 1/16W | |
| R927 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R928 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R929 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R931 | | RK73GB2A000J | CHIP R 0.0 J 1/10W | |
| R933 | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R934 | | RK73HH1J183D | CHIP R 18K D 1/16W | |
| R936 | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R950 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R952 | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R959 | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| S1 | | S70-0483-05 | TACT SWITCH | |
| TH600 | | ERTJ0V104H | THERMISTOR | |
| X500 | | L77-3016-05 | TCXO(19.2M) | |
| XF700 | | L71-0640-05 | MCF(58.05MHZ) | |

| Ref. No. | Address | Parts No. | Description | Desti-nation |
|---|---|---|---|---|