
9. EXPLODED VIEWS AND PARTS LIST

NOTES:
- *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Screws adjacent to ▼ mark on product are used for disassembly.*
- *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)*

9.1 PACKING SECTION

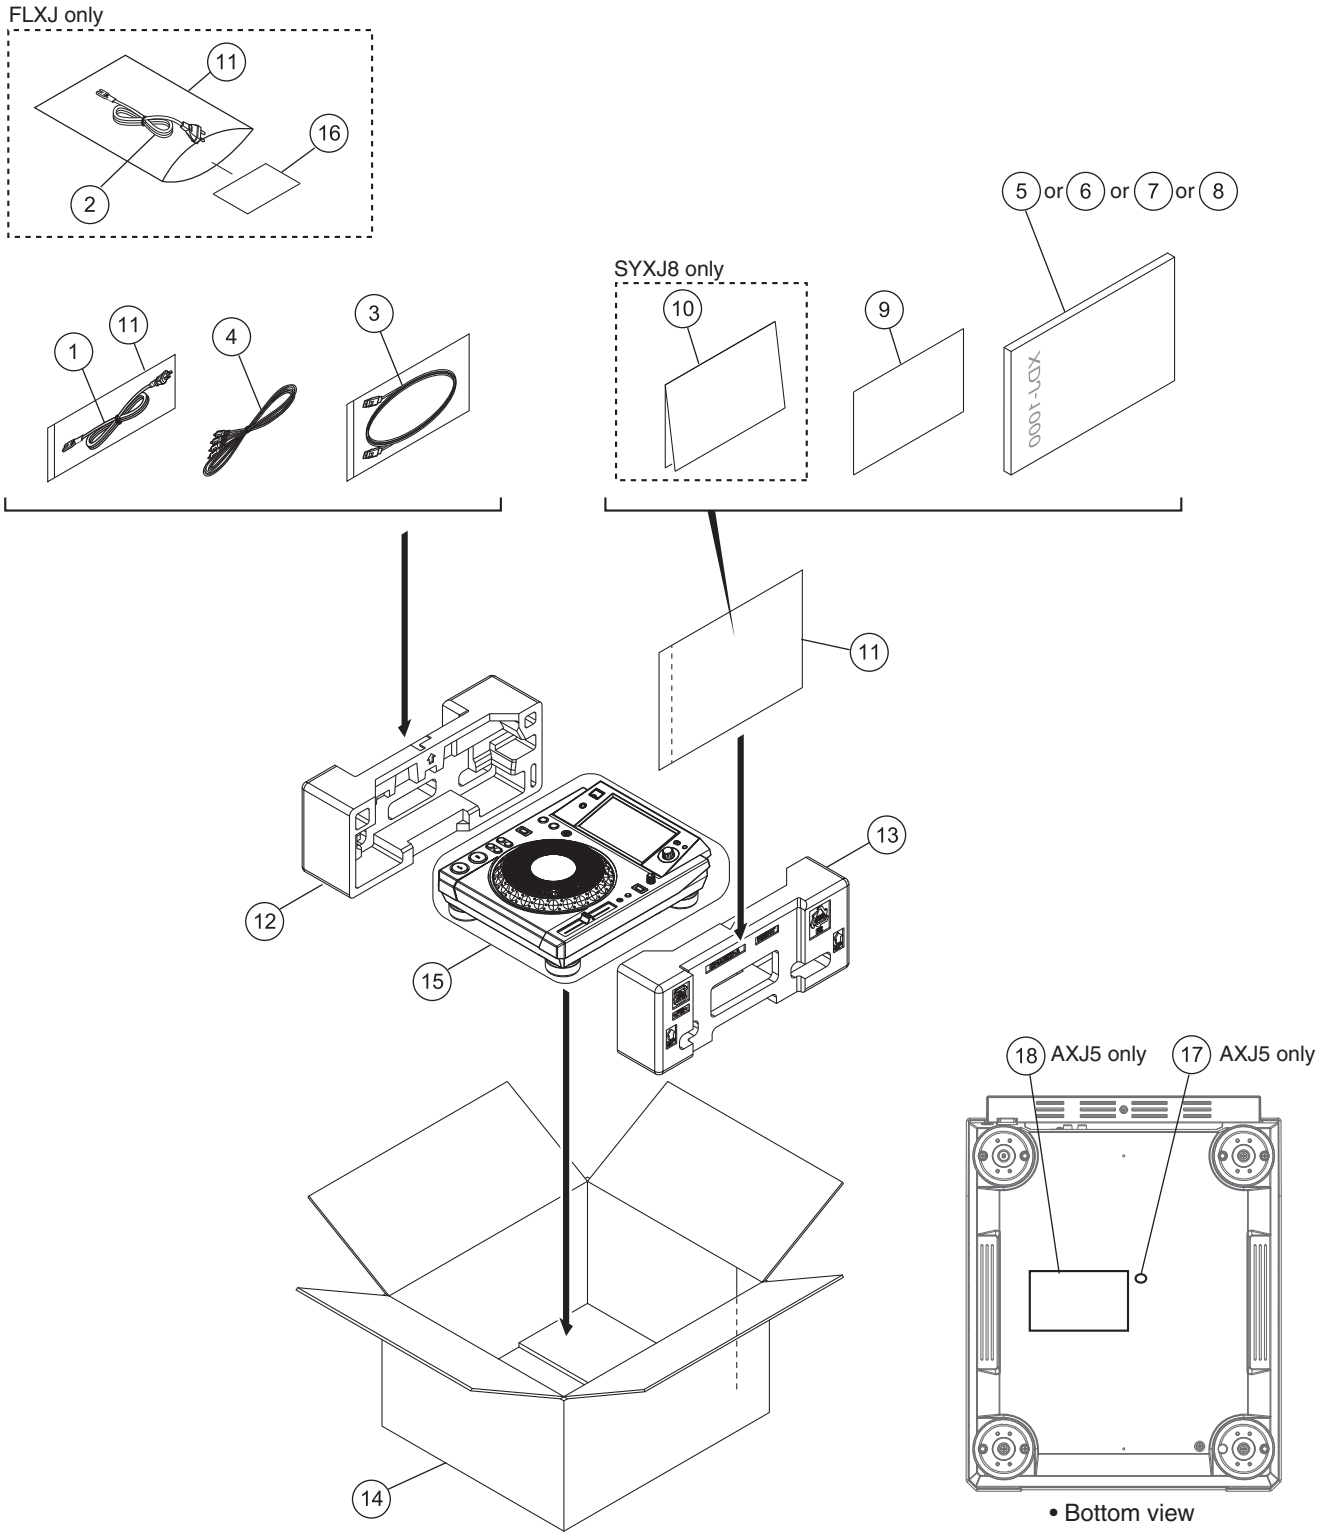

(1) PACKING SECTION PARTS LIST


Mark	No.	Description	Part No.
⚠	1	Power cord	See Contrast table (2)
⚠	2	Power cord	See Contrast table (2)
	3	LAN cable	DDE1141
	5	Audio cable	XDE3045
	5	Operating Instructions (Quick Start Guide)	See Contrast table (2)
	6	Operating Instructions (Quick Start Guide)	See Contrast table (2)
	7	Operating Instructions (Quick Start Guide)	See Contrast table (2)
	8	Operating Instructions (Quick Start Guide)	See Contrast table (2)
NSP	9	Leaflet	See Contrast table (2)
NSP	10	Warranty	See Contrast table (2)
NSP	11	Polyethylene Bag	AHG7117
	12	Pad/L	DHA1920
	13	Pad/R	DHA1921
	14	Packing Case	See Contrast table (2)
	15	Packing Sheet	RHC1023
	16	Caution Card SB	See Contrast table (2)
NSP	17	CCC S Label	See Contrast table (2)
NSP	18	Name Label	See Contrast table (2)

(2) CONTRAST TABLE

XDJ-1000/SYXJ8, UXJCB, FLXJ and AXJ5 are constructed the same except for the following:

Mark	No.	Symbol and Description	XDJ-1000 /SYXJ8	XDJ-1000 /UXJCB	XDJ-1000 /FLXJ	XDJ-1000 /AXJ5
⚠	1	Power cord	ADG1154	ADG7022	ADG1154	ADG7079
⚠	2	Power cord	Not used	Not used	ADG7097	Not used
	5	Operating Instructions (Quick Start Guide) (En, Fr, De, It, NI, Es, Pt, Ru)	DRH1278	Not used	Not used	Not used
	6	Operating Instructions (Quick Start Guide) (En)	Not used	DRH1277	Not used	Not used
	7	Operating Instructions (Quick Start Guide) (En, Es, Zhtw)	Not used	Not used	DRH1279	Not used
	8	Operating Instructions (Quick Start Guide) (Zhcn)	Not used	Not used	Not used	DRH1280
NSP	9	Leaflet	DRH1275	DRH1275	DRH1275	DRH1274
NSP	10	Warranty	ARY7158	Not used	Not used	Not used
	14	Packing Case	DHG3378	DHG3377	DHG3379	DHG3381
	16	Caution Card SB	Not used	Not used	ARM7064	Not used
NSP	17	CCC S Label	Not used	Not used	Not used	DRW2310
NSP	18	Name Label	Not used	Not used	Not used	DAL1271


9.2 EXTERIOR SECTION

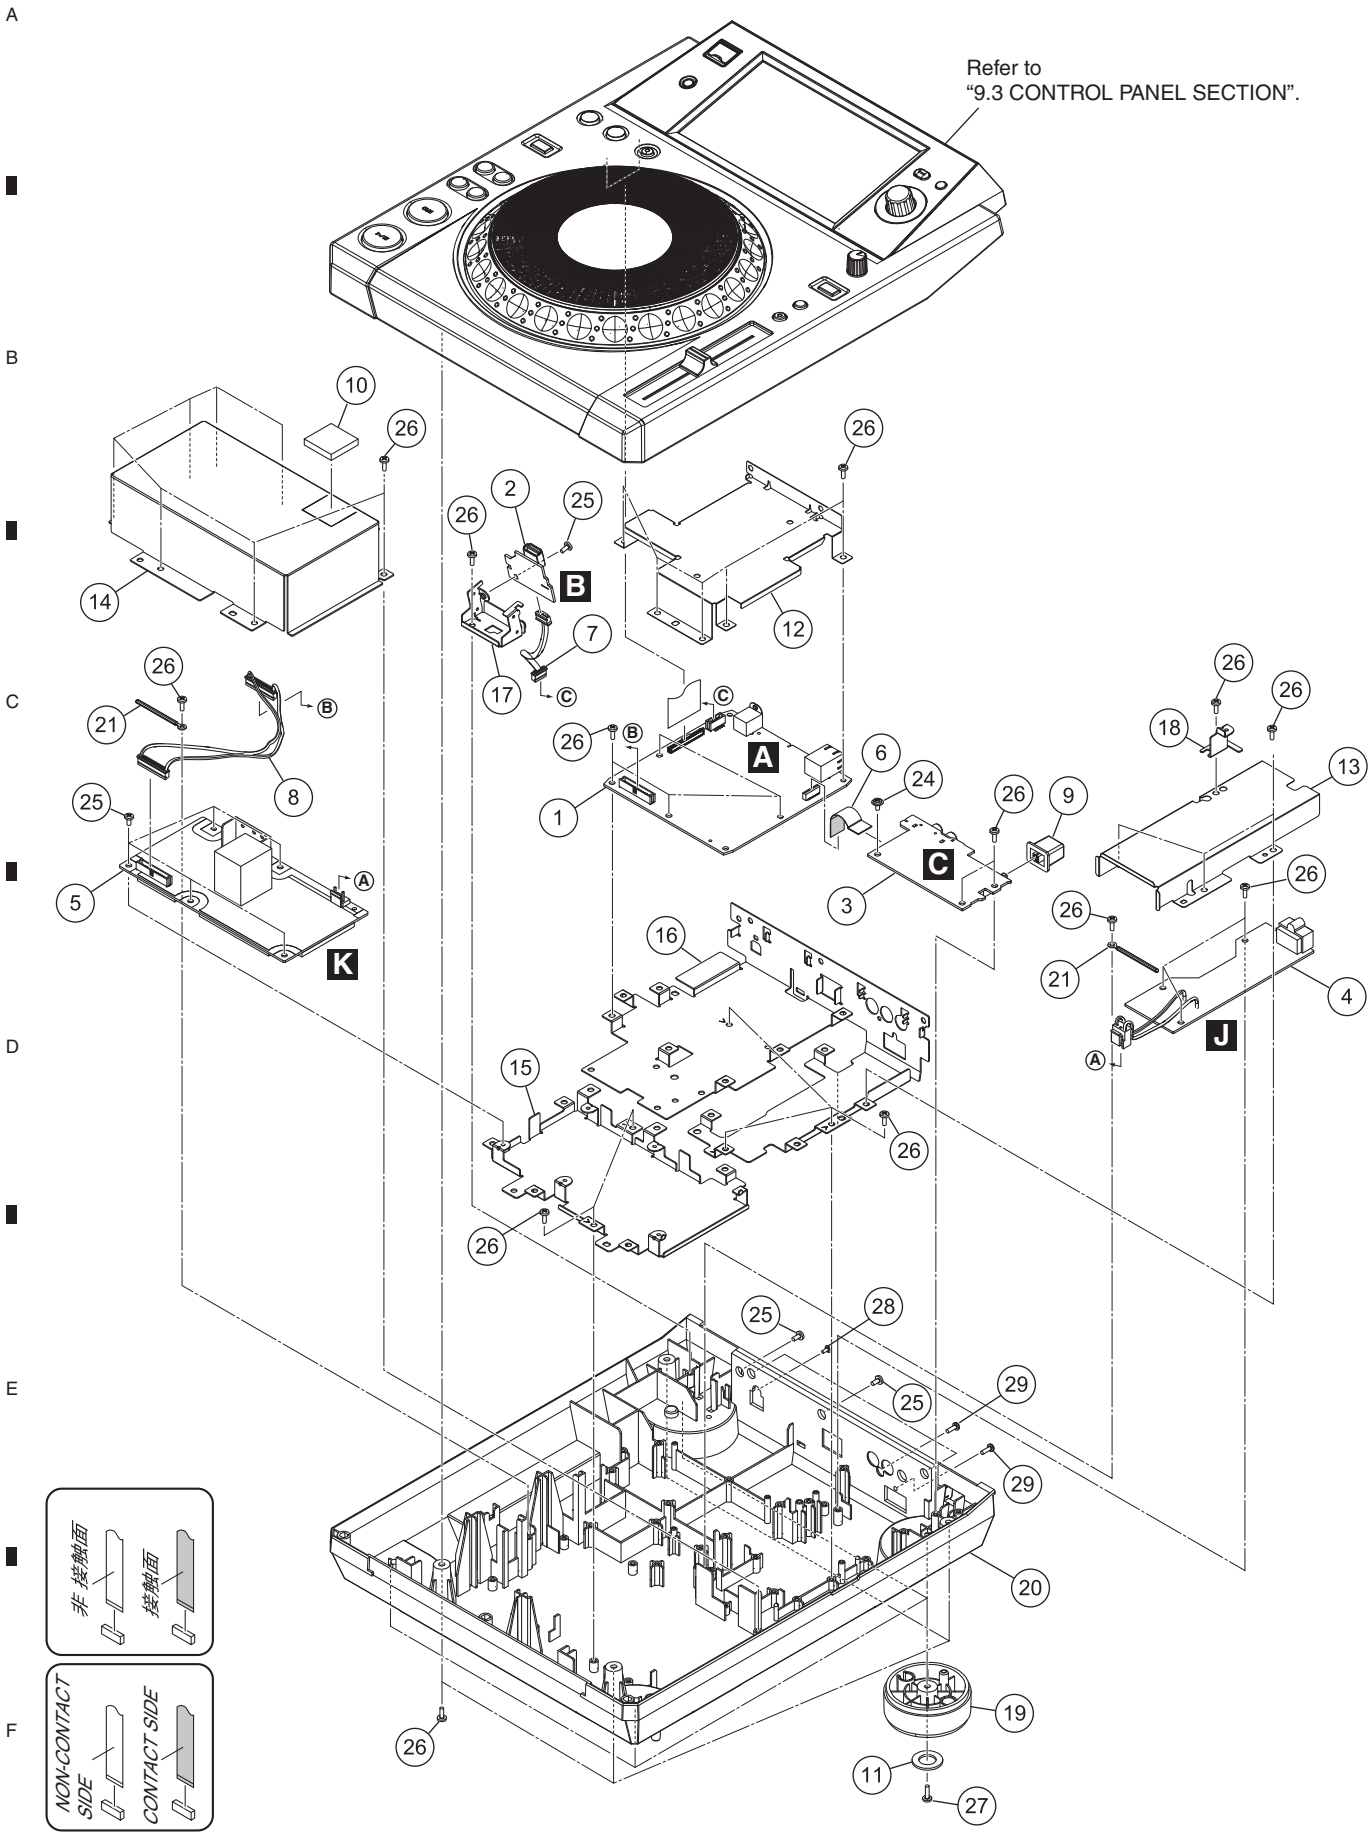

EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	MAIN Assy	DWX3600
	2	USBA Assy	DWX3607
	3	JKSW Assy	DWX3612
	4	ACIN Assy	DWX3609
⚠	5	SW POWER SUPPLY	DWR1545
	6	FFC	DDD1677
	7	Shielded Conn-Cable	DDA1049
	8	Crimp Connector	PF13PP-S20
	9	Power Knob	DAC2306
	10	Cushion/PNL	DEC3535
	11	Leg	DEC3564
	12	Shield Case/MIN	DNH3170
	13	Shield Case/ACI	DNH3171
	14	Shield Case/PSA	DNH3175
	15	Stay/PSA	DNH3176
	16	Stay/PCB	DNH3177
	17	Stay/USB	DNH3178
	18	Plate/JCK	DNH3193
	19	Insulator	DNK6394
⚠	20	Chassis	DNK6378
	21	Cord Clamper (Steel)	RNH-184
	22	•••••	
	23	•••••	
	24	Screw	ABZ30P060FTC
	25	Screw	BBZ30P060FTB
	26	Screw	BPZ30P080FNI
	27	Screw	BPZ30P100FTC
	28	Screw (M3*5)	DBA1340
	29	Screw	PPZ30P080FTB


9.3 CONTROL PANEL SECTION

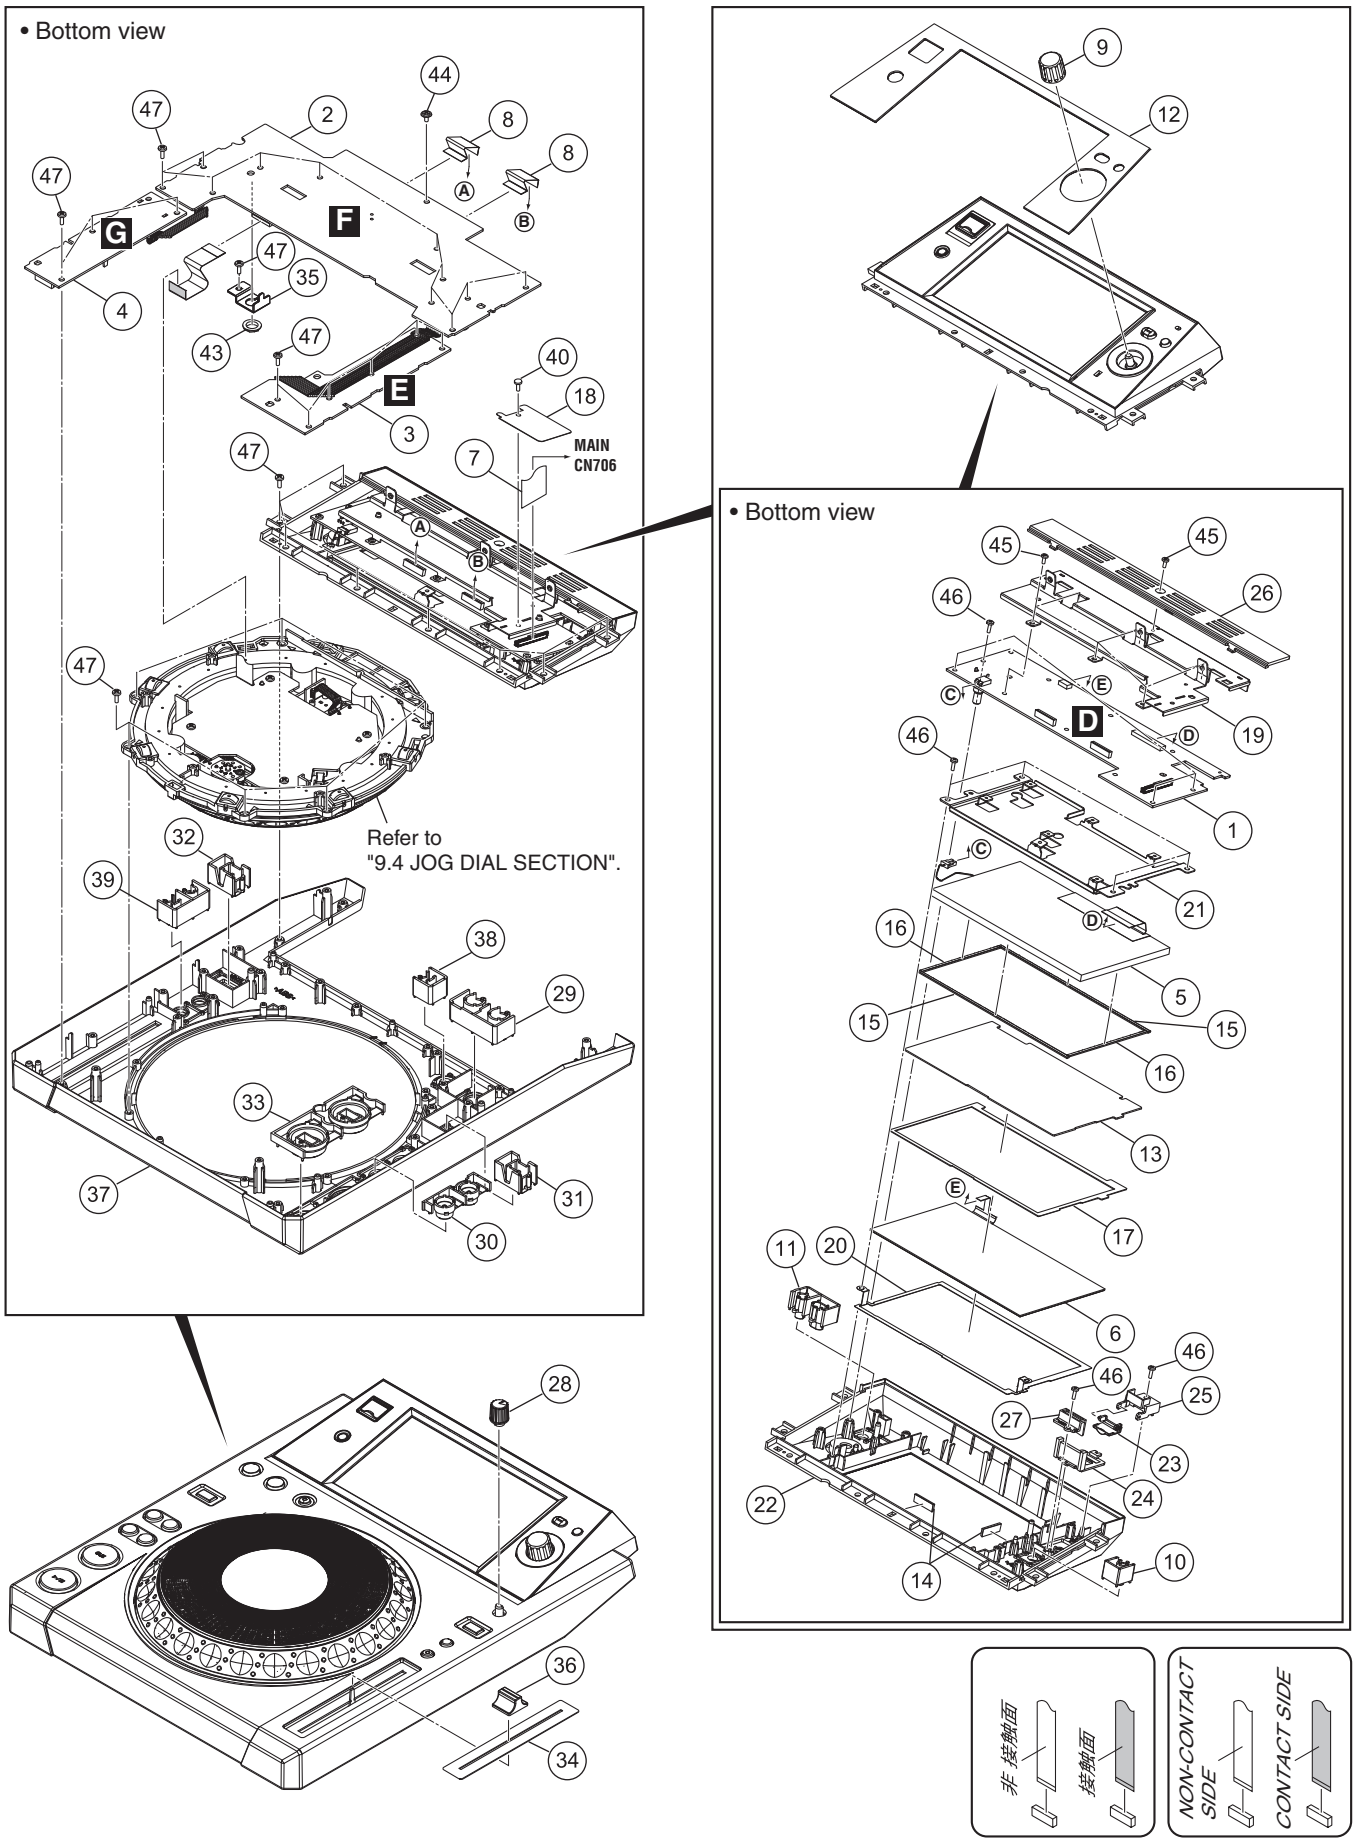

CONTROL PANEL SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	LCDB Assy	DWX3601
	2	PNLB Assy	DWX3603
	3	KSWB Assy	DWX3604
	4	SLDB Assy	DWX3605
	5	TFT LCD	CWX4352
	6	Touch Panel	DSX1128
	7	FFC	DDD1675
	8	FFC	DDD1679
	9	Knob/BRS	DAA1342
	10	Button/USB	DAC3016
	11	Button/BAK	DAC3017
	12	Panel/LCD	DAH3005
	13	Panel/TCP	DAH3006
	14	Packing/LCD	DEC3565
	15	Packing/L	DEC3568
	16	Packing/S	DEC3569
	17	Spacer/LCD	DEC3571
	18	Sheet/FFC	DEC3577
	19	Shield Case/LCD	DNH3172
	20	Plate/GND	DNH3173
	21	Stay/LCD	DNH3179
⚠	22	Control Panel/LCD	DNK6377
	23	Door/USB	DNK6379
	24	Lens/USB	DNK6381
	25	Holder/DOR	DNK6383
	26	Cover/R	DNK6395
	27	Reflector	DNK6400
	28	Knob	DAA1303
	29	Button (LOOP)	DAC2470
	30	Button	DAC3079
	31	Button/REV	DAC2938
	32	Button/VNL	DAC2939
	33	Button/PLY	DAC3004
	34	Slide Sheet 1C	DAH2404
	35	Stay/VR	DNF1928
	36	Knob/SLD	DNK5981
⚠	37	Control Panel	DNK6376
	38	Button Assy/RLP	DXB2162
	39	Button Assy/TMP	DXB2163
	40	Rivet (Plastic)	RBM-003
	41	•••••	
	42	•••••	
	43	Flange Nut M9	DBN1008
	44	Screw	ABZ30P060FTC
	45	Screw	BBZ26P060FTB
	46	Screw	BPZ26P080FTC
	47	Screw	BPZ30P080FNI

9.4 JOG DIAL SECTION

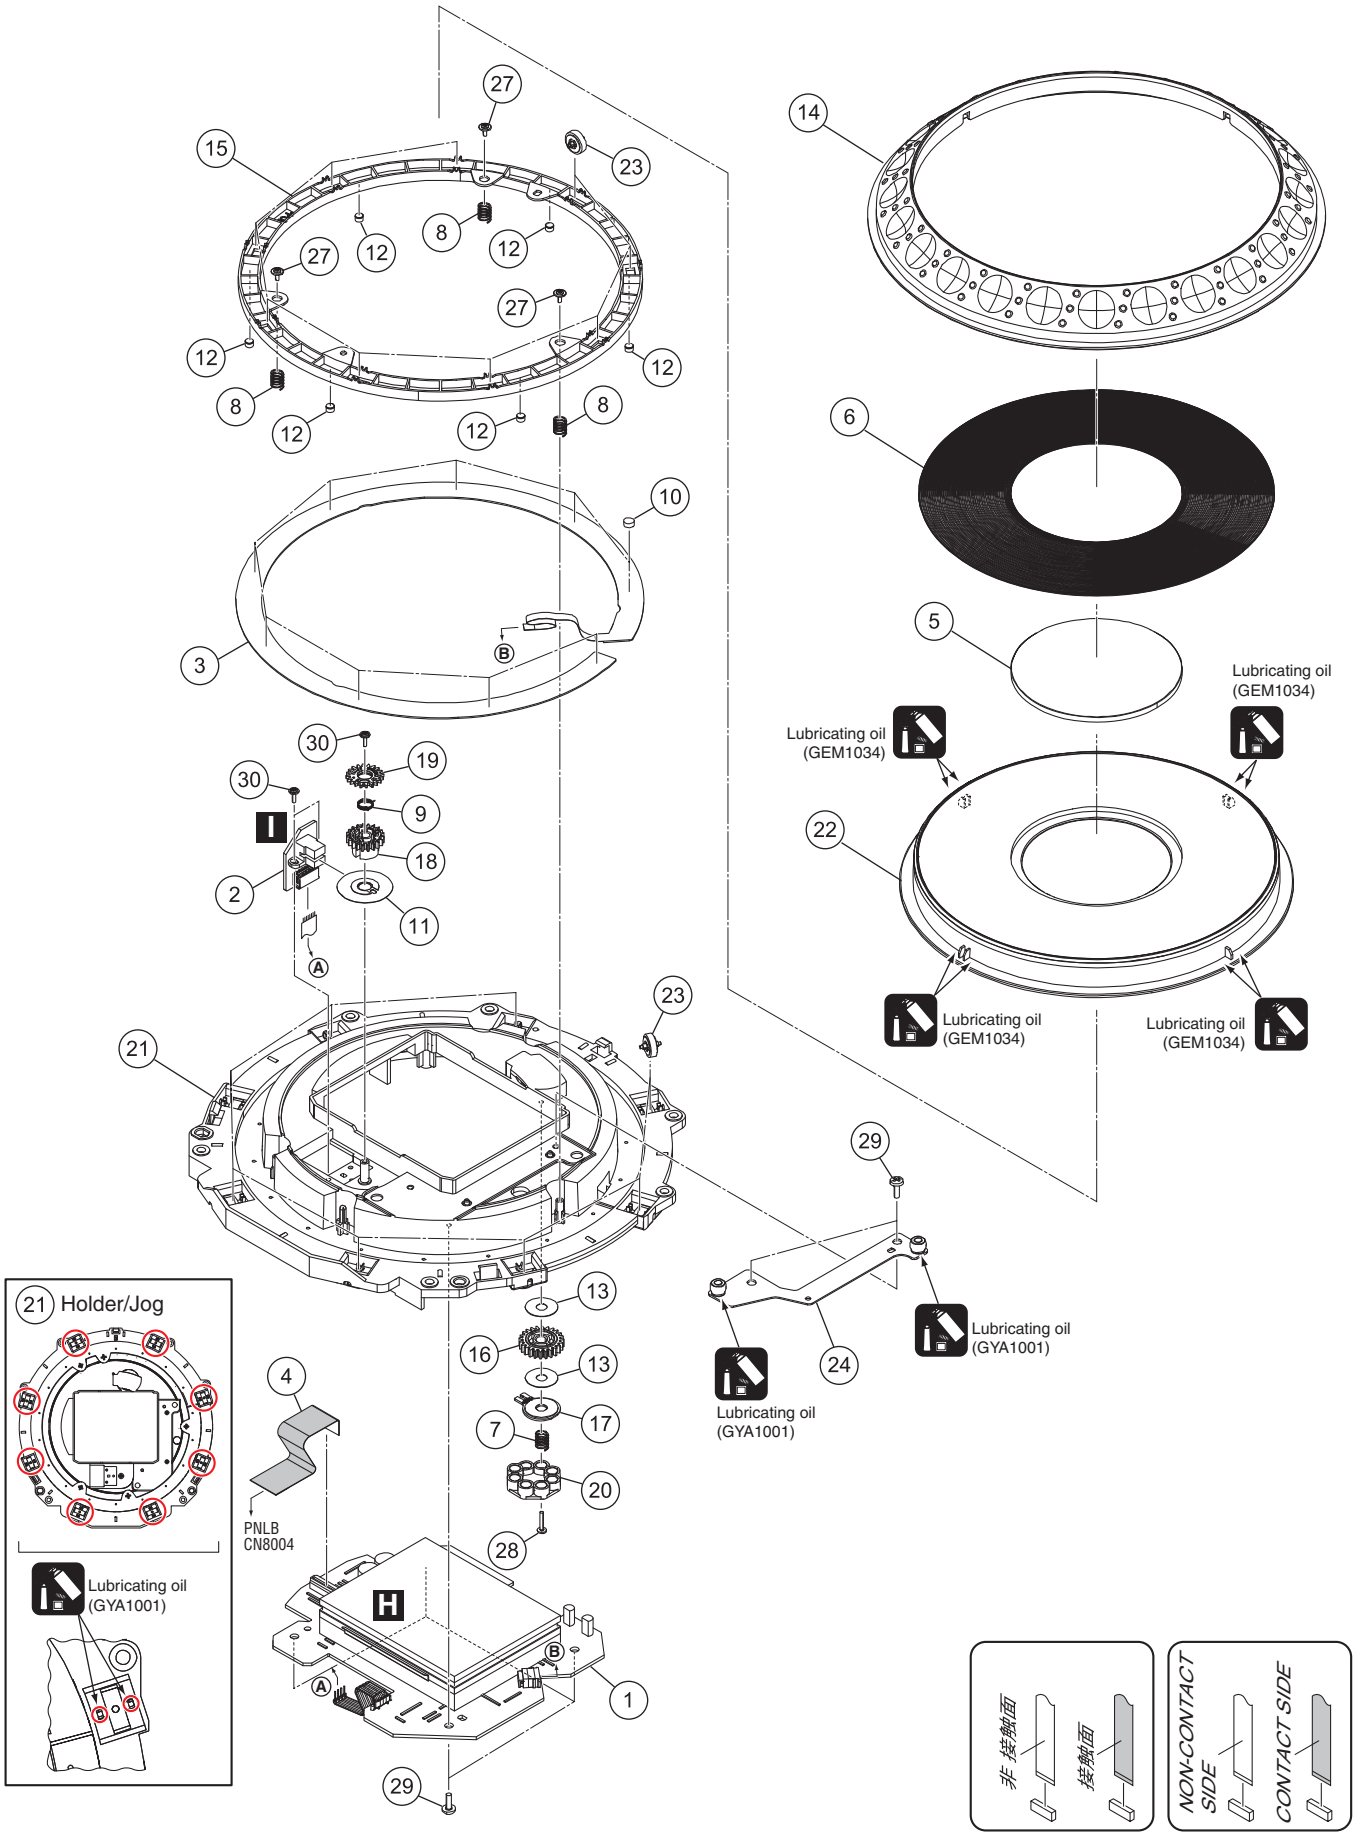

JOG DIAL SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	JFLB Assy	DWX3610
	2	JOGB Assy	DWX3611
	3	Sheet SW	DSX1078
	4	FFC	DDD1681
	5	Jog Panel	DAH2609
	6	Jog Plate	DAH2839
	7	Load Spring	DBH1680
	8	SW Spring	DBH1681
	9	Encoder Spring	DBH1710
	10	SW Cushion HH48/2	DEC2538
	11	Encoder Plate	DEC2889
	12	Cushion/Rng	DEC3466
	13	Washer	DEC3137
	14	Jog B	DNK4068
	15	SW Ring	DNK5233
	16	Load Gear	DNK5236
	17	Smoother	DNK5237
	18	Gear A	DNK5241
	19	Gear B	DNK5242
	20	Adjust Plate	DNK5300
⚠	21	Holder/Jog	DNK6265
	22	Jog Dial A	DNK5357
	23	Roller Assy/A	DXB2118
	24	Stay Assy/Jog	DXB2133
	25	•••••	
	26	•••••	
	27	Screw (FE)	DBA1265
	28	Screw	BPZ20P100FTC
	29	Screw	BPZ30P080FNI
	30	Screw	IPZ20P060FTC

12. PCB PARTS LIST

NOTES: ● *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*

● *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*

● *When ordering resistors, first convert resistance values into code form as shown in the following examples.*

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47 k ohm (tolerance is shown by J = 5%, and K = 10%).

560 Ω → 56 × 10¹ → 561 ..... RD1/4PU 5 6 1 J
47 kΩ → 47 × 10³ → 473 ..... RD1/4PU 4 7 3 J
0.5 Ω → R50 ..... RN2H R 5 0 K
1 Ω → 1R0 ..... RS1P 1 R 0 K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62 kΩ → 562 × 10¹ → 5621 ..... RN1/4PC 5 6 2 1 F

LIST OF ASSEMBLIES

Mark	No.	Description	Part No.
	1	MAIN ASSY	DWX3600
	1	LCDB ASSY	DWX3601
NSP	1	PNLA ASSY	DWM2546
	2	PNLB ASSY	DWX3603
	2	KSWB ASSY	DWX3604
	2	SLDB ASSY	DWX3605
	2	ACIN ASSY	DWX3609
NSP	1	JFLA ASSY	DWM2547
	2	USBA ASSY	DWX3607
	2	JFLB ASSY	DWX3610
	2	JOGB ASSY	DWX3611
	2	JKSW ASSY	DWX3612
⚠		SW POWER SUPPLY	DWR1545

A MAIN ASSY

SEMICONDUCTORS

Mark	No.	Description	Part No.
	IC	1,2	K4T1G164QG-BCE7
NSP	IC	3	DYW1860
	IC	5	TC7SZ08FUS1
	IC	6	TC7SH04FUS1
NSP	IC	7	AK8125AV
	IC	9,506	TC7WHU04FK
NSP	IC	10	R8A77240D500BG2
	IC	11	PST8430N
	IC	14	H337S3959
	IC	15	TC7SH08FUS1
	IC	301	D810K013DZKB400
	IC	302	M12L2561616A-5TG2S
	IC	501	TC7SG08FU
⚠	IC	502	NJM2878F3-33
⚠	IC	701	MM3529A18P
⚠	IC	702,705,706	BD9328EFJ
⚠	IC	703	TPS2557DRB
	IC	704	LAN8720A-CP
	IC	707-709	TC74LCX541FK
	IC	901	WM8728SEDS
	IC	902	NJM4580MD
⚠	IC	903	NJM2872BF05
	Q	1	RTQ045N03
	Q	2,703,707,902	LTC024EEB
	Q	701,709,710,901	LSCR523UB
	Q	702,704,708,907	LTA024EEB
	Q	705	RN1903
	Q	706	RTQ040P02
	Q	903,908	LTC024EEB
	Q	904,905	LSCR523UB
	Q	909,910	INC2002AC1
	D	1,501,701	DA2J101
	D	704,710	DZ2J051M0
	D	901-905	DA2J101

MISCELLANEOUS

Mark	No.	Description	Part No.
	L	1,2 INDUCTOR	CTF1394
	L	6 CHIP BEEDS FILTER	BTX1047
	L	302,305,721 CHIP BEADS	VTL1128
	L	701 INDUCTOR	CTH1253
	L	703 SMD SPL INDUCTOR	CTH1527
	L	704-708,710-720 CHIP BEADS	VTL1126
	L	709 CHOKE COIL	CTH1487
	L	722,728,729 CHIP BEADS	VTL1126
	L	723-725 FERRITE BEAD	CTF1528
	L	730,731 CHOKE COIL	ATH7098
	L	732,733 COIL	ATH7015
	L	901,902 CHIP SOLID INDUCTOR	XTL3010
	F	2,3,6,702 EMI FILTER	CCG1352
	F	701 EMI FILTER	DTL1106
	JA	701 USB CONNECTOR	DKN1237
	JA	702 RJ45 CONNECTOR	AKN7115
	X	1 CRYSTAL OSCILLATOR (48 MHz)	DSS1213
	X	2 CRYSTAL RESONATOR (33.333333 MHz)	CSS1825
	X	501 OSCILLATOR (16.9344 MHz)	CWX3849
	X	701 CRYSTAL OSCILLATOR (50 MHz)	DSS1209
	CN	701 CONNECTOR	AKM1276
	CN	705 CONNECTOR	AKM1284
	CN	706 FFC/FPC CONNECTOR	CKS6543
	CN	901 12P CONNECTOR	VKN1416
NSP		6201 ID LABEL ASSY	AXW7015- -J

RESISTORS

Mark	No.	Description	Part No.
	R	3,20	RS1/16SS82R0F
	R	11,12,18,27	RAB4CQ330J
	R	41,81-88	RAB4CQ220J
	R	99-103,105,107	RAB4CQ220J
	R	104	RS1/16SS4300D
	R	109,111,114,119	RAB4CQ220J

Mark	No.	Description	Part No.
R	116,117		RS1/16SS5601F
R	133,301-304,324		RAB4CQ220J
R	306,740,762,763		RS1/10SR0R0J
R	326,327,330,331		RAB4CQ221J
R	328,329,753,807		RAB4CQ220J
R	702,831,832		RS1/4SA0R0J
R	709,770		RS1/16SS2702F
R	723		RS1/10SR104J
R	725,738,757		RS1/10SR220J
R	730		RS1/16SS1002D
R	731		RS1/16SS1501F
R	732-735		RS1/10SR49R9F
R	741		RS1/10SR1100D
R	742		RS1/10SR4702D
R	743		RS1/10SR1002D
R	748-750,806		RAB4CQ221J
R	754,791		RS1/16SS1002F
R	761		RS1/10SR223J
R	771		RS1/16SS5602F
R	773		RS1/10SR472J
R	774		RS1/10SR331J
R	780,910,931		RS1/10SR0R0J
R	787		RS1/10SR102J
R	789		RS1/16SS3301F
R	790		RS1/16SS5600F
R	812,815,816		RAB4CQ220J
R	834		RS1/10SR182J
R	924		RS1/10SR103J
R	932,933		RN1/16SE3902D
R	934,935		RN1/16SE2200D
R	936,937,940,941		RN1/16SE2201D
R	938,939		RN1/16SE3301D
R	943,944		RN1/16SE2201D
	Other Resistors		RS1/16SS###J

CAPACITORS

C	1,2,5,10		CKSSYB104K10
C	3,6,7,14		CKSSYB102K50
C	4,8,9		CKSSYB103K16
C	11-13,30,36		CKSSYB103K16
C	15,18,20,22		CKSSYB104K10
C	16,17,19,21		CKSSYB102K50
C	23,80,81,83		DCH1201
C	24,31,34,37		CKSSYB102K50
C	25-29,32,33		CKSSYB104K10
C	35,38,40-42		CKSSYB104K10
C	39,46,51,55		CKSSYB102K50
C	43,49,52,54		CKSSYB103K16
C	44,45,47,48		CKSSYB104K10
C	50,53,56-62		CKSSYB104K10
C	63,71,72,144		CKSSYB102K50
C	64-69,74-79		CKSSYB104K10
C	70,73,143,147		CKSSYB103K16
C	82,84,86,93		CKSSYB104K10
C	85,87-92		CCSSCH102J50
C	94,106,110-114		DCH1201
C	97,98		CCSSCH9R0D50
C	99-101,103-105		CKSSYB104K10
C	107,716,802		CKSRYB105K10
C	108,339		CEHVAW221M6R3
C	115,124-126,133		CKSSYB104K10
C	117,755		CKSSYB223K16
C	118-123,127-129		CCSSCH102J50
C	130,140,338,340		DCH1201
C	131,132,502,508		CCSSCH102J50
C	134		CKSSYB222K50
C	135,734,735		CKSRYB104K50
C	136-138,141,142		CKSSYB104K10
C	145,148-151,153		CKSSYB104K10
C	146,167,168		CKSSYB102K50
C	152,701,805,806		CCSSCH220J50
C	157-159,165,166		CKSSYB104K10
C	301-316,343		CKSSYB103K16
C	319,324,342,511		CKSSYB104K10
C	325-337		CKSSYB102K50
C	344,509,513,515		CCSSCH101J50
C	345-349,352,353		CKSSYB103K16
C	501,506,910		CKSSYB104K16
C	503		CKSRYB474K10
C	504,736,949		CKSRYB103K50
C	507,752,753,763		CKSSYB103K16
C	512,514,750,775		CCSSCH102J50
C	547,556,706,710		CKSSYB104K10
C	702,719,737,773		CCG1221
C	703,712		CCSSCH221J50
C	707		CKSSYB333K16
C	708,709,768,915		ACG1142
C	713-715,718,722		CKSSYB104K10
C	717		CKSSYB471K50
C	720		CKSQYB475K6R3
C	721		CKSRYB225K6R3
C	727		CKSRYB223K50
C	728		CKSRYB104K16
C	729,730,740,756		DCH1201
C	731,732,742-745		CKSSYB104K10
C	733,913,917,918		CCSRCH102J50
C	739,749,762,767		CCH1565
C	746,747		CFHXSP104J16
C	748,759		DCH1341
C	758,764,765,905		DCH1201
C	760,761,777,790		CKSSYB104K10
C	766		CEHVAW101M6R3
C	769-772,912,914		CKSRYB104K50
C	774,785		CCG1221
C	778-780,901,908		CKSSYB103K16
C	781,947,952		CCSSCH102J50
C	783		CKSSYB183K16
C	784,904,951		CCSSCH101J50
C	788,791,903,907		CCH1565
C	792,793,944		CCSRCH101J50
C	796,797,906		CFHXSQ472J16
C	798-801		CKSSYB104K10
C	807,808		CCSRCK2R0C50
C	815		CCH2090
C	902,911		CEHVAW470M16
C	909		DCH1201
C	916		ACG1142
C	921,922		CEHVAW101M16
C	925,926		CCSRCH681J50
C	927,928		CCSRCH561J50

Mark	No.	Description	Part No.
	C	929,932	CCH1565
	C	936,938,939,943	CFHXSQ103J16
	C	940	CKSRYB105K16
	C	942	CKSRYB104K50

B USBA ASSY

MISCELLANEOUS

	JA	8801 USB JACK	DKN1658
	CN	8801 L-PLUG (5P)	KM200NA5L

CAPACITORS

	C	8802	CCSRCH4R0C50

C JKSW ASSY

SEMICONDUCTORS

	Q	9401-9404	INC2002AC1
	D	9405,9406,9408	DZ2J062M0
	D	9411	DA2J101
	D	9410	DB2J41100

MISCELLANEOUS

	JA	9401 RCA JACK/2P	DKB1114
	JA	9402 JACK	VKB1243
	S	9451 PUSH SW	ASG1102
	CN	9401 12P CONNECTOR	VKN1272

RESISTORS

	R	9401	RS1/4SA182J
		Other Resistors	RS1/10SR###J

CAPACITORS

	C	9402,9420	CCSRCH102J50
	C	9405,9406	CCH1357
	C	9407,9415	CKSRYB103K50
	C	9408,9416	CKSRYB104K50
	C	9410,9411	DCE1017
	C	9421,9422	CEAT221M10

D LCDB ASSY

SEMICONDUCTORS

⚠	IC	2001	R1290K103A
⚠	IC	2002	BD81A04EFV-M
⚠	IC	2601	BD9328EFJ
⚠	IC	2602	MM1856A33N
⚠	IC	2603	NJM2392M
	Q	2001	2SAR502UB
	Q	2002,2609	LTA024EEB
	Q	2005,2801,2805	LTC024EEB
	Q	2601,2604,2605	LSAR523UB
	Q	2602,2606,2608	LSCR523UB
	Q	2603,2607	LTC014YEB
	Q	2802,2806	LTA023JEB
	Q	2803,2807	LTC023JEB
	D	2001-2003	DB3S308F0
	D	2004	DB2J41100
	D	2005	RB060M-30
	D	2602	RB162M-40
	D	2605,2606	SMLVN6RGB2UK
	D	2611	SML-D12U8W
	D	2805,2806,2808-2811	DA2J101
	D	2813,2814	DA2J101

MISCELLANEOUS

	L	2001,2033,2034 FERRITE BEAD	CTF1528
	L	2005 INDUCTOR	CTF1545
	L	2006 POWER INDUCTOR	ATH7068
	L	2007 CHOKE COIL	CTH1426
	L	2008 INDUCTOR	CTF1635
	L	2009,2010 CHIP INDUCTOR(10U)	DTL1105
	L	2011 CHIP BEEDS FILTER	BTX1042
	L	2012 INDUCTOR	LCTAW101J2520
	L	2036 FERRITE BEAD	CTF1528
	L	2601 INDUCTOR	CTH1253
	L	2603 CHOKE COIL	CTH1209
	S	2606,2608,2613 TACT SWITCH	DSG1134
	S	2612 ENCODER SW	DSX1080
	CN	2001 FFC/FPC CONNECTOR	CKS6646
	CN	2003 CONNECTOR	CKS4428
	CN	2004 FFC/FPC CONNECTOR	CKS6543
	CN	2601,2602 18P CONNECTOR	VKN1422
	CN	2801 FFC/FPC CONNECTOR	CKS6625

RESISTORS

	R	2001,2002	RS1/16SS1300D
	R	2008	RS1/16SS3603D
	R	2009	RS1/16SS6802D
	R	2010	RS1/16SS3901D
	R	2014	RS1/16SS5100F
	R	2018	RS1/16SS3302D
	R	2020	RS1/16SS2202D
	R	2021	RS1/16SS1103D
	R	2022	RS1/16SS1002D
	R	2024,2027	RS1/16SS1502D
	R	2026	RS1/16SS8201D
	R	2032	RS1/16SS1203D
	R	2033	RS1/16SS1602D
	R	2034	RS1/10SR0R0J
	R	2035	RS1/16SS3303D
	R	2036	RS1/16SS5601D
	R	2037	RS1/16SS3902D
	R	2039,2052,2073	RS1/16SS39R0D
	R	2041,2055	RS1/16SS47R0D
	R	2045,2053	RS1/16SS75R0F
	R	2051	RS1/16SS51R0D
	R	2054,2058	RS1/16SS82R0D
	R	2056	RS1/16SS56R0D
	R	2057	RS1/16SS1800D
	R	2602	RS1/10SR220J
	R	2604	RS1/10SR6801D
	R	2605	RS1/10SR3902D
	R	2606	RS1/10SR1002D
	R	2607	RS1/10SR683J
	R	2609,2625	RS1/10SR472J
	R	2612	RS1/4SA0R0J
	R	2614,2620-2622	RS1/4SA2R7J
	R	2616	RS1/10SR2702D
	R	2617	RS1/10SR1501D
	R	2619	RS1/10SR2701D
	R	2624,2821,2822	RS1/8SQ0R0J

Mark	No.	Description	Part No.
	R	2626	RS1/10SR681J
	R	2629-2632,2641	RS1/4SA2R7J
	R	2633,2634,2636,2638	RS1/10SR122J
	R	2639,2640	RS1/10SR821J
	R	2690	RS1/10SR391J
		Other Resistors	RS1/16SS###J
	CAPACITORS		
	C	2001,2012,2021,2025	CCG1254
	C	2002	CKSRYB224K16
	C	2004,2024,2039,2065	CKSSYB102K50
	C	2005	CKSRYB105K16
	C	2006,2018,2094,2657	CKSSYB105K6R3
	C	2007,2010	CKSQYB105K25
	C	2008,2011,2046-2048	CKSSYB104K10
	C	2014,2078,2089,2605	CKSRYB104K50
	C	2015,2016	CKSQYB474K25
	C	2017,2032,2041-2043	CKSSYB104K16
	C	2020	CKSSYB224K6R3
	C	2022,2040	CKSYB475K16
	C	2023	CCG1218
	C	2026	CKSQYB475K6R3
	C	2027,2030	CKSSYB332K50
	C	2028	CKSSYB561K50
	C	2029,2648,2666-2668	CKSSYB103K16
	C	2031,2033,2035	CCG1254
	C	2034,2036,2070,2086	CCG1236
	C	2044,2045	CKSRYB105K10
	C	2049	DCH1246
	C	2062,2075,2076,2091	CKSSYB104K16
	C	2066	CKSQYB225K16
	C	2067	CKSSYB103K25
	C	2071	CCG1201
	C	2073	CCG1234
	C	2074	CKSQYB334K50
	C	2077,2647,2650	CKSSYB104K10
	C	2081,2083,2085,2087	CKSSYB102K50
	C	2088,2612,2620	CCH1565
	C	2092,2601,2602,2608	CCG1221
	C	2093,2603,2627	CKSRYB104K16
	C	2604	CCSRCH102J50
	C	2606,2633	CKSRYB104K50
	C	2607	CKSRYB222K50
	C	2626	DCH1201
	C	2628,2632	CCSSCH102J50
	C	2629	CCSSCH101J50
	C	2630	CCSSCH151J50
	C	2634,2656	CCG1236
	C	2636,2652-2654	CCH2039
	C	2643,2644	CKSYB105K16
	C	2649,2659	CKSSYB104K16
	C	2660,2661	CCH2090
	C	2662-2665	ACG1142
	C	2809,2810	CKSSYB102K50

E KSWB ASSY

Mark	No.	Description	Part No.
	SEMICONDUCTORS		
	Q	8501,8504	LTC123JUB
	D	8501,8502	SLI-343Y8Y
	D	8503,8504	SLI-343M8G
	MISCELLANEOUS		
	S	8501,8502 TACT SWITCH	DSG1117
	S	8504-8507 SWITCH	VSG1024
	CN	8501 7P JUMPER CONNECTOR	52147-0710
	RESISTORS		
	R	8505	RS1/8SQ0R0J
		Other Resistors	RS1/10SR###J

F PNLB ASSY

Mark	No.	Description	Part No.
	SEMICONDUCTORS		
	IC	8001	PST8430N
	IC	8003	DYW1851
	Q	8004,8016,8017,8019	LTC124EUB
	Q	8013,8014	LTC114YUB
	Q	8020,8026-8028	LTC124EUB
	D	8003,8016	SLI-343U8R
	D	8012,8013,8015	SLI-343Y8Y
	D	8017	SLR343BC4T
	MISCELLANEOUS		
	L	8003 INDUCTOR	CTF1379
	VR	8001 VARIABLE RESISTOR	DCS1045
	S	8008,8010-8012 TACT SWITCH	DSG1079
	S	8017 TACT SWITCH	DSG1089
	S	80,218,022 SWITCH	VSG1024
	X	8001 CERAMIC RESONATOR (4 MHz)	DSS1131
	CN	8001,8002 18P CONNECTOR	VKN1278
	CN	8004 16P CONNECTOR	VKN1276
	JH	8003,8701 4P CABLE HOLDER	51048-0400
	JH	8004 7P CABLE HOLDER	51048-0700
	JP	8002 JUMPER WIRE	D20PDY0720E
	JP	8003 4PJUMPER WIRE	D20PDD0410E
	RESISTORS		
	R	8114	RS1/8SQ105J
		Other Resistors	RS1/10SR###J
	CAPACITORS		
	C	8002,8035	CEHAS470M16
	C	8003,8005,8013,8019	CKSRYB104K16
	C	8027,8029,8036,8040	CKSRYB104K16
	C	8075,8084	CKSRYB104K16
	C	8006-8008,8010,8017	CCSRCH102J50
	C	8018,8095,8106,8107	CCSRCH102J50
	C	8009,8046,8047,8057	CKSRYB103K50
	C	8058,8076,8089,8098	CKSRYB103K50
	C	8011,8012	CKSRYB474K10
	C	8014	CEHAS101M10
	C	8060	CCSRCH121J50
	C	8074	CKSRYB273K16

G SLDB ASSY

Mark	No.	Description	Part No.
	MISCELLANEOUS		
	VR	8701 SLIDE VR	DCV1033
	JH	8701 4P CABLE HOLDER	51048-0400
	CAPACITORS		
	C	8702	CEJQ470M16

Mark	No.	Description	Part No.
	C	8703	CKSRYB104K16

H JFLB ASSY

SEMICONDUCTORS

	IC	9201	MM1856A33N
	IC	9202	TC7WH04FU
	Q	9201,9202	KTC3198
	Q	9203	LSAR523UB
	Q	9204	2SC5712
	Q	9205	LSCR523UB
	D	9201	DZ2J062M0
	D	9202,9205	DA2J101
	D	9203	DB2J41100

MISCELLANEOUS

	V	9201 VFD	DEL1074
	CN	9201 16P CONNECTOR	VKN1247
	CN	9202 CONNECTOR	CKS1072
	JH	9201 4P CABLE HOLDER	51048-0400
	JP	9201 JUMPER WIRE	D20PYY0405E

RESISTORS

	R	9201,9202	RS1/4SA102J
	R	9215,9218	RS1/8SQ100J
	R	9216,9219,9253,9254	RS1/8SQ0R0J
	R	9222	RS1/10SR8201D
	R	9223	RS1/10SR3901D
	R	9228,9230,9233,9235	RS1/4SA7R5J
	R	9237,9239,9241,9243	RS1/4SA7R5J
	R	9246,9248	RS1/4SA7R5J
	Other Resistors		RS1/10SR###J

CAPACITORS

	C	9203,9205,9214	CCG1236
	C	9204,9217,9230,9231	CKSRYB104K16
	C	9206,9215	CKSRYB104K50
	C	9207,9238	CKSRYB103K50
	C	9211,9213	CKSRYB105K16
	C	9221	CEHAZL221M35
	C	9225-9228	CCSRCH101J50
	C	9232	CKSRYB105K10
	C	9235,9236	CCG1218
	C	9237,9241	CKSRYB104K16
	C	9239	CCSRCH102J50
	C	9242-9246	CCG1236

I JOGB ASSY

MISCELLANEOUS

	CN	9301 4PJUMPER CONNECTOR	52151-0410
	PC	9301 PHOTO INTERRUPTER	KE-2K18-15

RESISTORS

	R	9301,9302	RS1/10SR101J
	R	9303	RS1/10SR820J

CAPACITORS

	C	9301	CKSRYB225K6R3
	C	9302	CKSRYB103K50

Mark	No.	Description	Part No.

J ACIN ASSY

MISCELLANEOUS

⚠	JA	9101 AC INLET/2P	DKP3943
⚠	JP	9101 CONNECTOR ASSY 2P	DKP3870

K SW POWER SUPPLY

There is no service parts.