



EXPLODED VIEW (DVD MECHANISM)

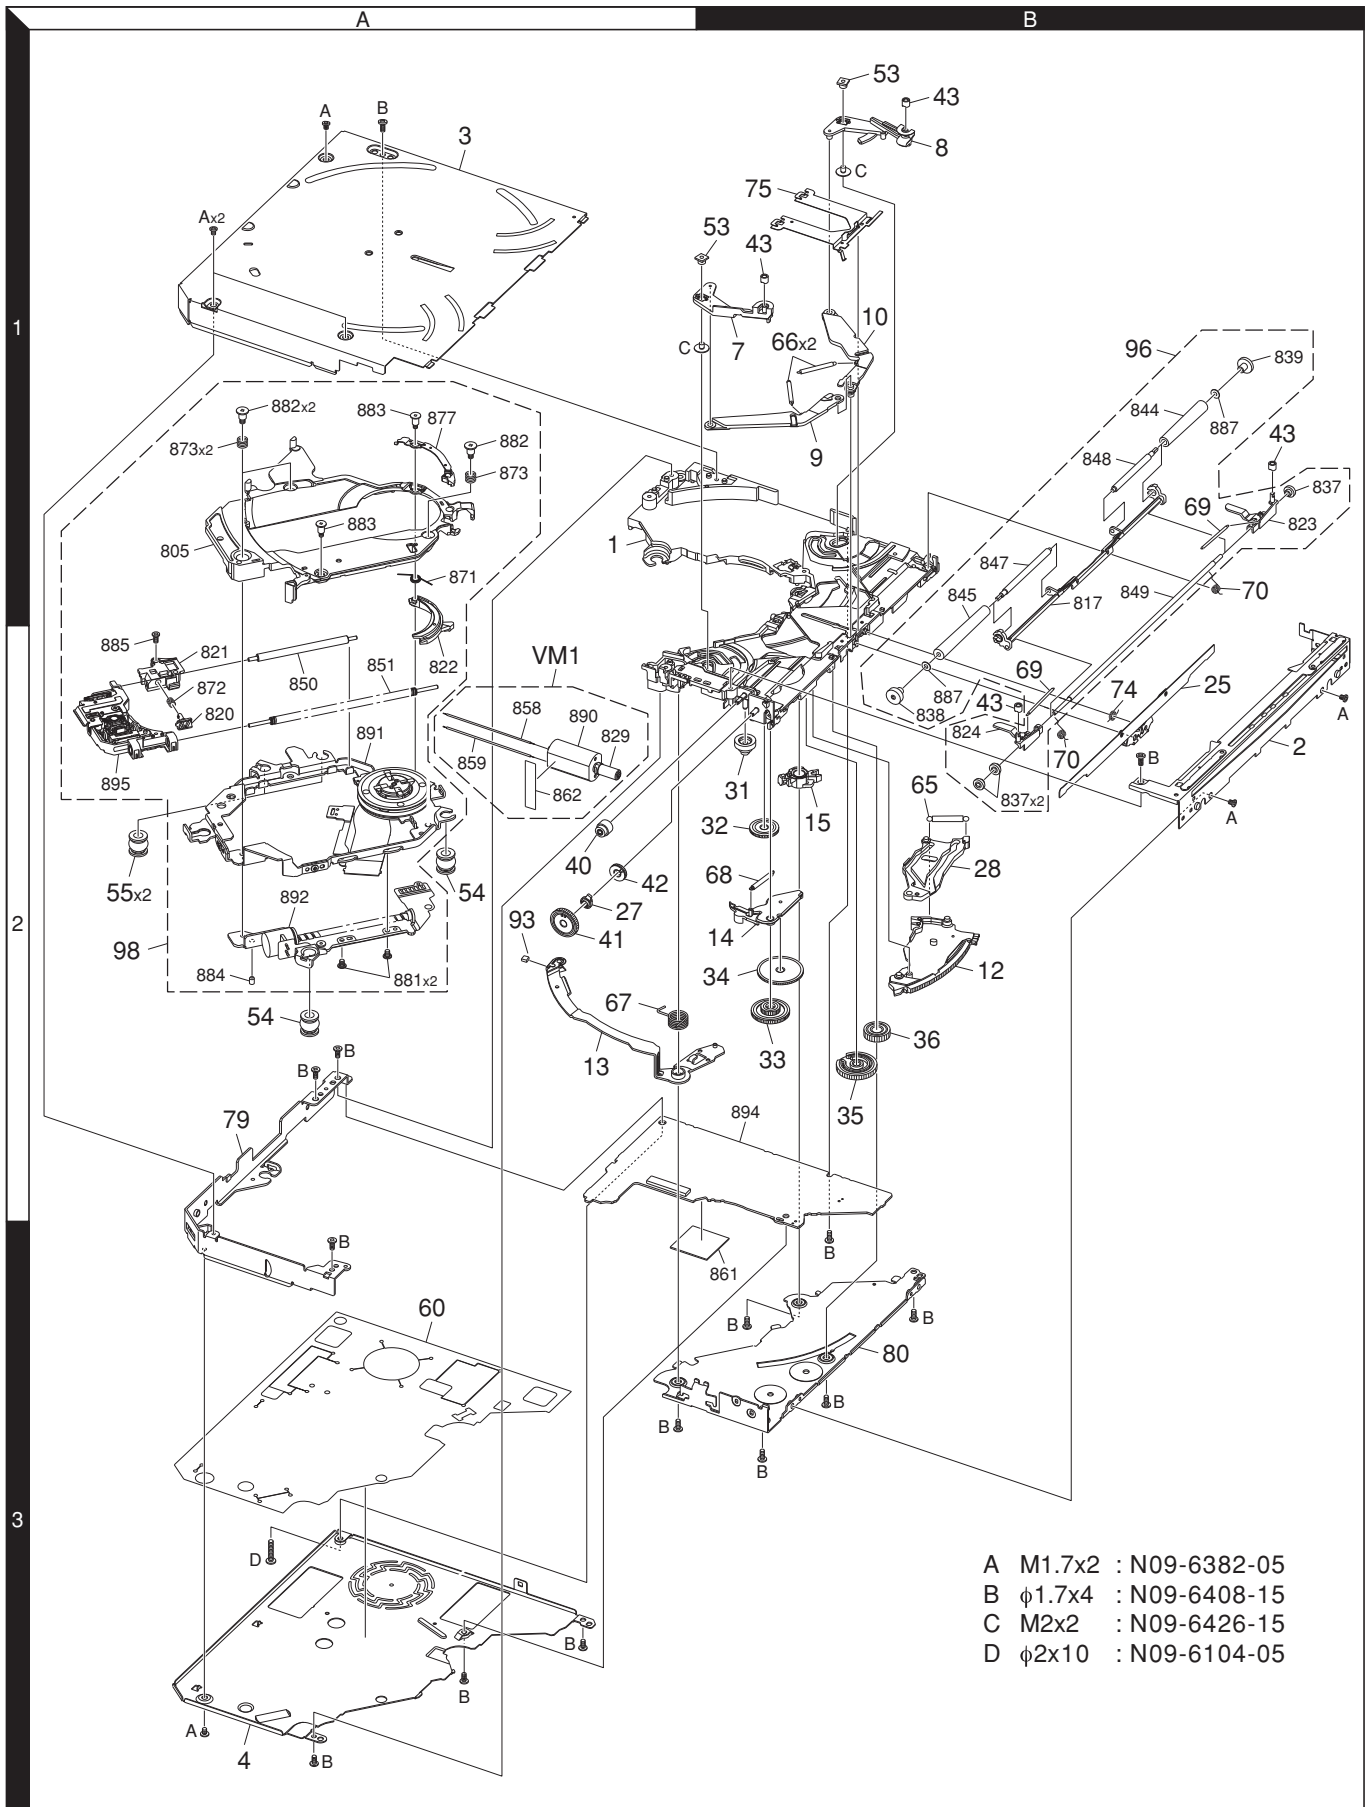

EXPLODED VIEW (UNIT)


- | | | |
|---|---------|---------------|
| A | M3x14 | : N09-6731-05 |
| B | M2.6x4 | : N35-2604-43 |
| C | M2.6x20 | : N35-2620-48 |
| E | φ2.6x5 | : N86-2605-48 |
| F | M2x3 | : N35-2003-48 |
| H | φ2.6x8 | : N82-2608-48 |
| K | φ3x8 | : N09-6727-05 |
| L | φ3x8 | : N82-3008-48 |

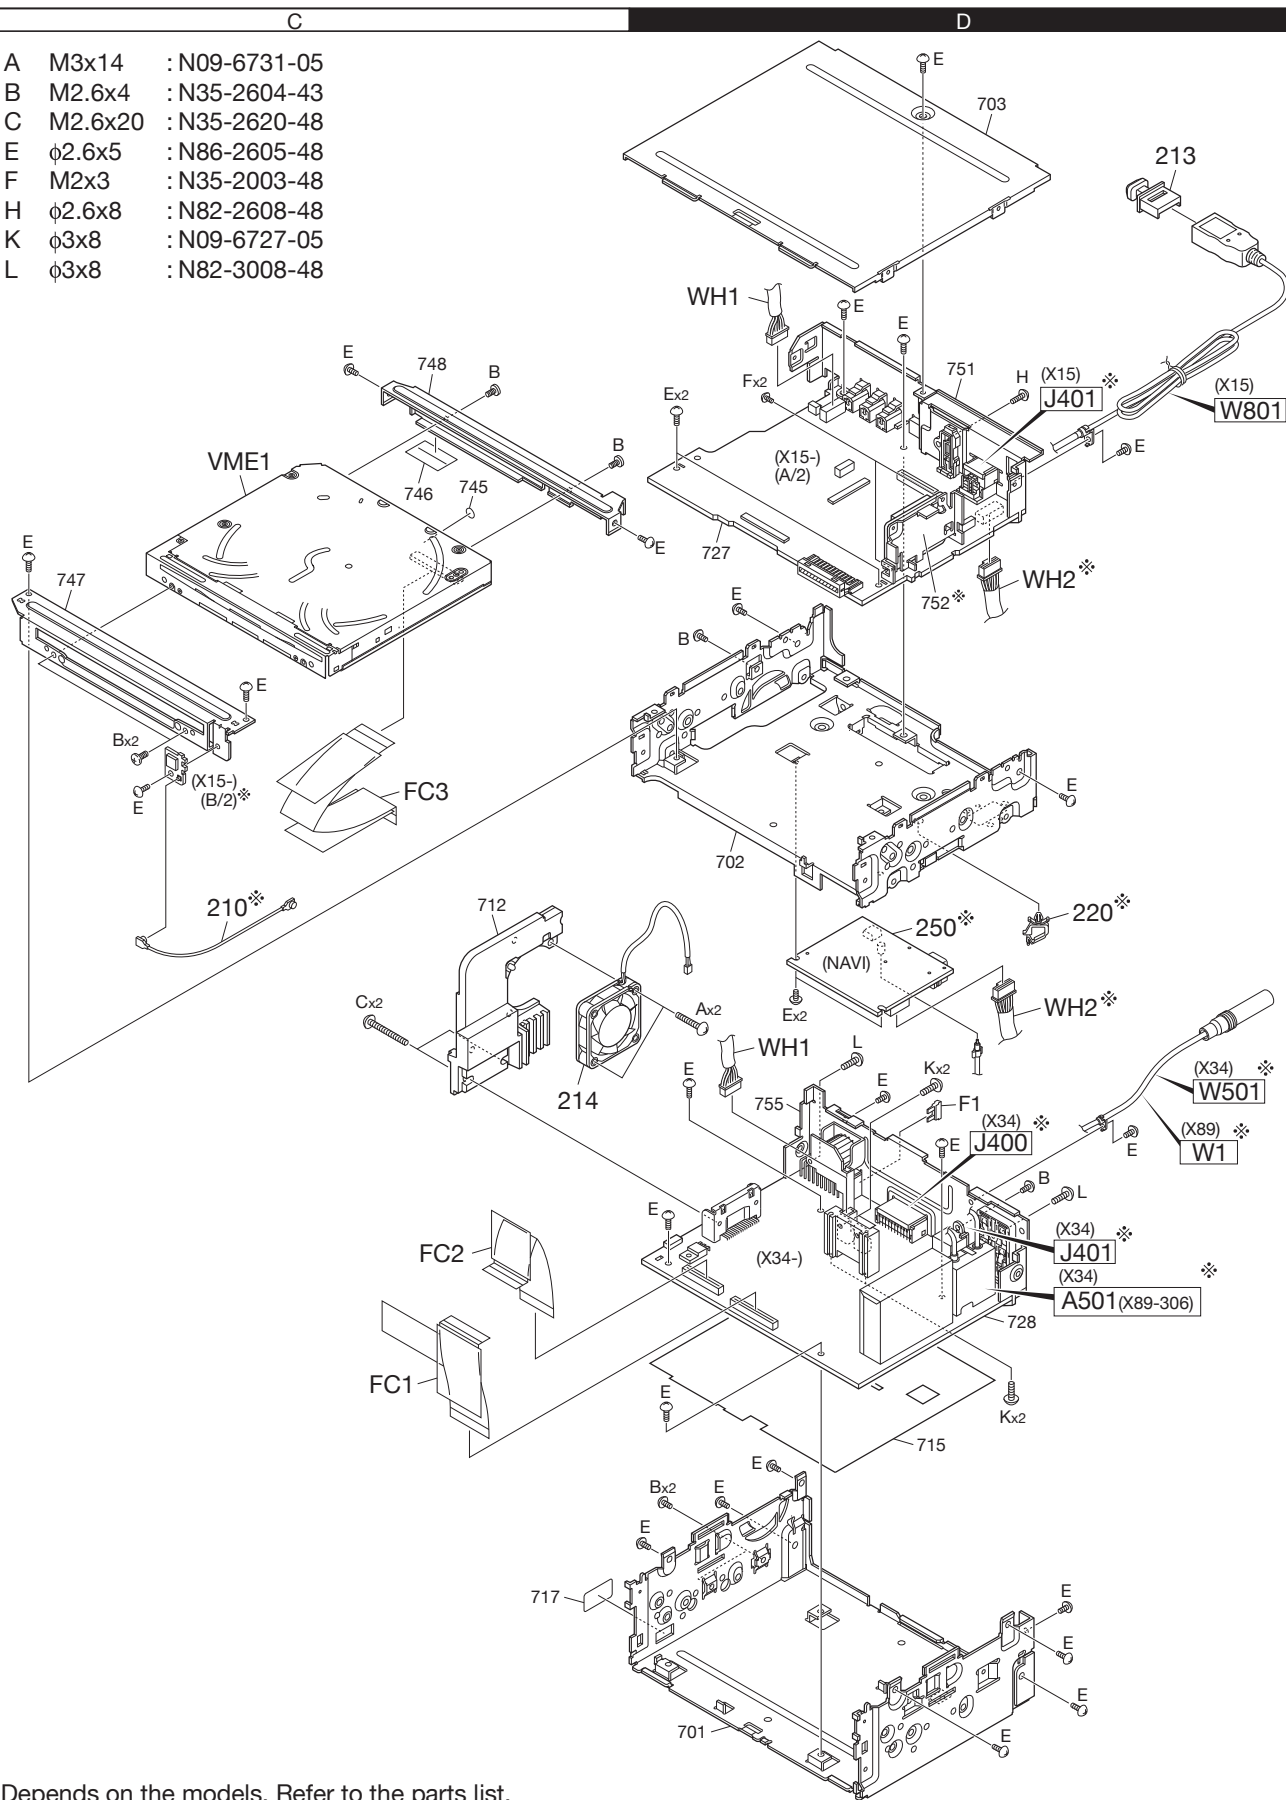

※ Depends on the models. Refer to the parts list.

Parts with the exploded numbers larger than 700 are not supplied.


EXPLODED VIEW (PANEL MECHANISM)

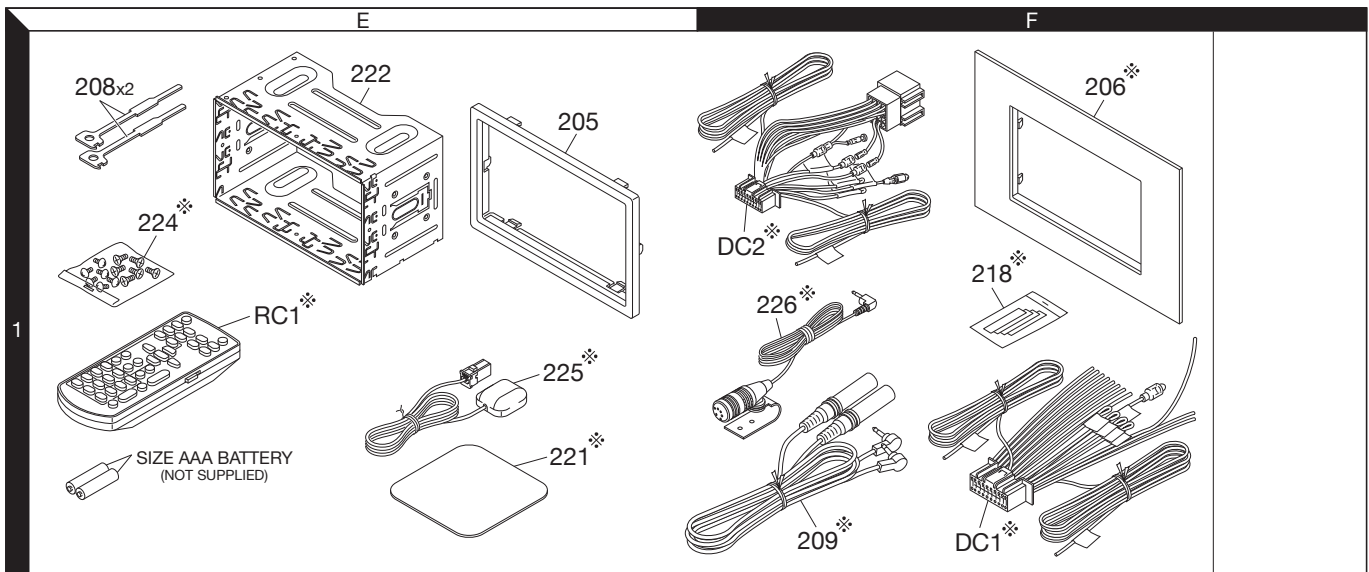

D ϕ 2.6x6 : N78-2660-48

F M2x3 : N35-2003-48

G ϕ 2x8 : N80-2008-43

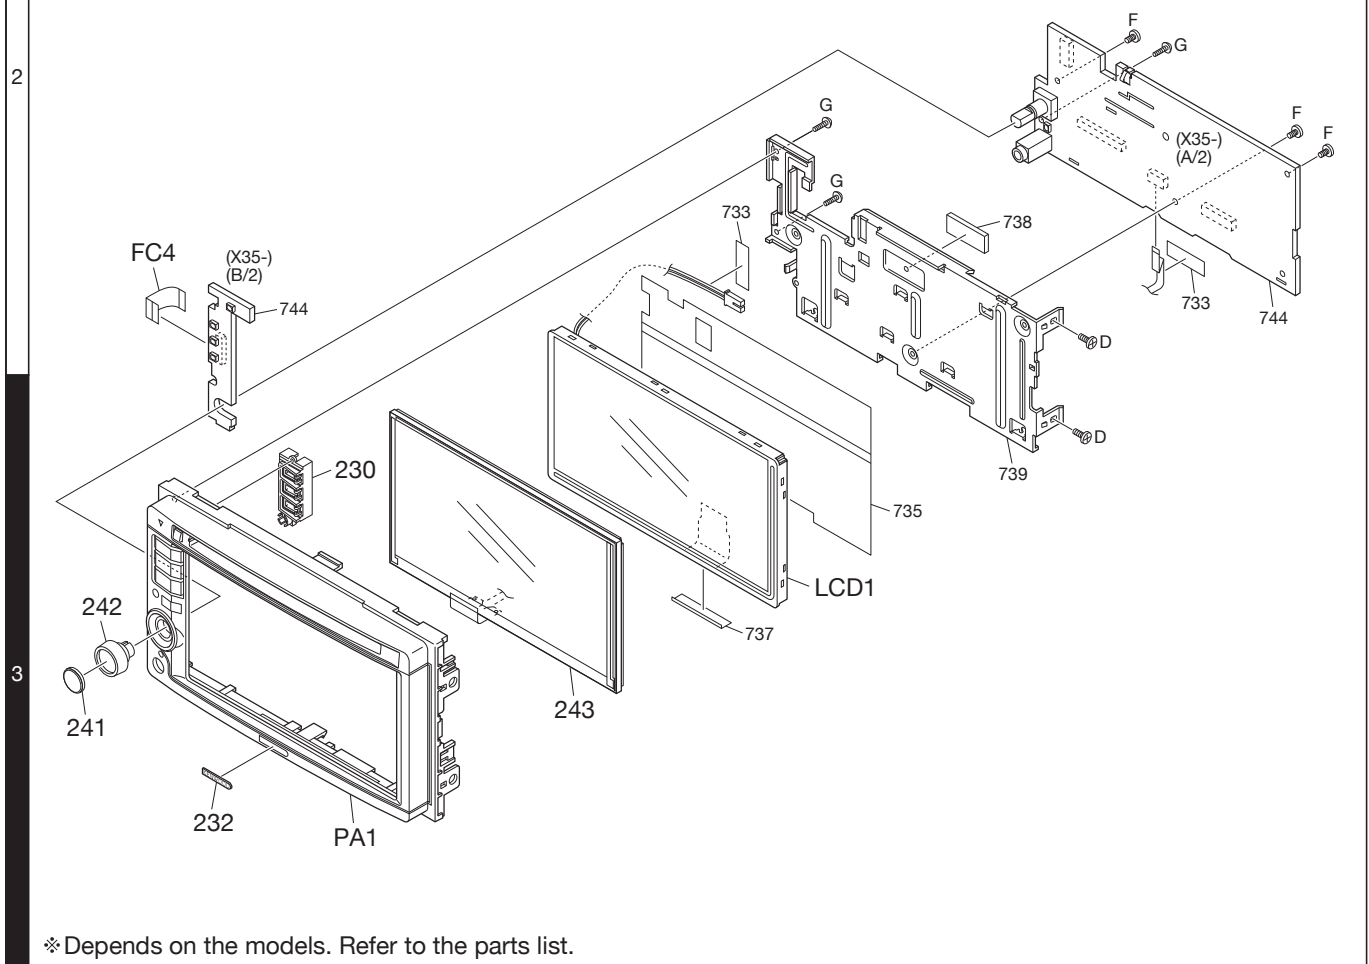

❖ Depends on the models. Refer to the parts list.

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

* New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
DDX5022/5022Y/5032/5032M/512/52RY DNX5120/512EX/5220/5220BT					
RC1	1E		A70-2083-15	REMOTE CONTROLLER ASSY	E2M1M2
RC1	1E		A70-2083-15	REMOTE CONTROLLER ASSY	X1E5
-		*	B54-4618-00	INSTALLATION MANUA (ENG.FRE.SPA	KR1
-		*	B54-4619-00	INSTALLATION MANUAL (PORTUGUESE	R1
-		*	B54-4620-00	INSTALLATION MAN (ENG.S-CHI.KOR	M1M2X1
-		*	B54-4621-00	INSTALLATION MANUAL (ENGLISH)	E1E2E5
-		*	B54-4622-00	INSTALLATION MANUA (F.G.D.I.S.P	E1
-		*	B54-4623-00	INSTALLATION MANUAL (RUSSIAN)	E2E5
-		*	B54-4624-00	INSTALLATION MANUA (ENG.FRE.SPA	K1K2
-		*	B54-4626-00	INSTALLATION MAN (E.F.G.D.I.S.P	E3E4
-		*	B64-3971-00	INSTRUCTION MANUAL (ENGLISH)	KR1K1
-		*	B64-3971-00	INSTRUCTION MANUAL (ENGLISH)	K2
-		*	B64-3972-00	INSTRUCTION MANUAL (FRENCH)	KK1K2
-		*	B64-3973-00	INSTRUCTION MANUAL (SPANISH)	KR1K1
-		*	B64-3973-00	INSTRUCTION MANUAL (SPANISH)	K2
-		*	B64-3974-00	INSTRUCTION MANUAL (PORTUGUESE)	R1
-		*	B64-3975-00	INSTRUCTION MANUAL (ENGLISH)	M1M2X1
-		*	B64-3976-00	INSTRUCTION MANUAL (S-CHINESE)	M1
-		*	B64-3977-00	INSTRUCTION MANUAL (KOREAN)	M1
-		*	B64-3978-00	INSTRUCTION MANUAL (ENGLISH)	E1E2E5
-		*	B64-3978-00	INSTRUCTION MANUAL (ENGLISH)	E3E4
-		*	B64-3979-00	INSTRUCTION MANUAL (FRENCH)	E1E3E4
-		*	B64-3980-00	INSTRUCTION MANUAL (GERMAN)	E1E3E4
-		*	B64-3981-00	INSTRUCTION MANUAL (DUTCH)	E1E3E4
-		*	B64-3982-00	INSTRUCTION MANUAL (ITALIAN)	E1E3E4
-		*	B64-3983-00	INSTRUCTION MANUAL (SPANISH)	E1E3E4
-		*	B64-3984-00	INSTRUCTION MANUAL (PORTUGUESE)	E1E3E4
-		*	B64-3985-00	INSTRUCTION MANUAL (RUSSIAN)	E2E5
-		*	B64-4004-00	INSTRUCTION MANUAL (ENGLISH)	K1K2
-		*	B64-4005-00	INSTRUCTION MANUAL (FRE.SPA.)	K1K2
-		*	B64-4006-00	INSTRUCTION MANUAL (ENGLISH)	E3E4
-		*	B64-4007-00	INSTRUCTION MANUAL (FRE.GER.DUT	E3E4
-		*	B64-4008-00	INSTRUCTION MANUAL (ITA.SPA.POR	E3E4
205	1E		B07-3165-02	ESCUTCHEON	
206	1F		B07-3172-12	ESCUTCHEON	KR1M1
206	1F		B07-3172-12	ESCUTCHEON	K2
206	1F		B07-3172-12	ESCUTCHEON	M2X1K1
208	1E		D10-4589-04	LEVER	
209	1F	*	E30-6785-05	CORD WITH PLUG	KR1K1
209	1F	*	E30-6785-05	CORD WITH PLUG	K2
210	2C	*	E30-6810-05	CORD WITH PLUG	E3
DC1	1F	*	E30-6795-05	DC CORD	KR1M1
DC1	1F	*	E30-6795-05	DC CORD	K2
DC1	1F	*	E30-6795-05	DC CORD	M2X1K1
DC2	1F	*	E30-6796-05	DC CORD	E1E2E5
DC2	1F	*	E30-6796-05	DC CORD	E3E4
FC1	3C	*	E39-0995-15	FLAT CABLE	
FC2	3C	*	E39-0996-15	FLAT CABLE	
FC3	2C	*	E39-0997-15	FLAT CABLE	
WH1	1D	*	E39-0994-15	WIRING HARNESS	
213	1D		F09-2929-04	CAP	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
214	2C	*	F09-2959-05	FAN	
F1	2D		F52-0007-05	FUSE (MINI BLADE TYPE) 15A	
-		*	H54-4274-13	ITEM CARTON CASE	K
-		*	H54-4275-13	ITEM CARTON CASE	R1
-		*	H54-4276-13	ITEM CARTON CASE	E1
-		*	H54-4277-13	ITEM CARTON CASE	E2
-		*	H54-4278-13	ITEM CARTON CASE	M1X1
-		*	H54-4279-13	ITEM CARTON CASE	M2
-		*	H54-4282-13	ITEM CARTON CASE	K1
-		*	H54-4283-03	ITEM CARTON CASE	E3
-		*	H54-4284-03	ITEM CARTON CASE	E4
-		*	H54-4379-03	ITEM CARTON CASE	E5
-		*	H54-4380-03	ITEM CARTON CASE	K2
218	1F		H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	KR1M1
218	1F		H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	K2
218	1F		H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	M2X1K1
220	2D		J11-0660-05	CLAMPER	E4
220	2D		J11-0660-05	CLAMPER	K1K2E3
221	1E		J21-9867-04	MOUNTING HARDWARE	E4
221	1E		J21-9867-04	MOUNTING HARDWARE	K1K2E3
222	1E		J22-0657-03	MOUNTING HARDWARE ASSY	
224	1E		N99-1779-15	SCREW SET	KR1M1
224	1E		N99-1779-15	SCREW SET	K2
224	1E		N99-1779-15	SCREW SET	M2X1K1
A	2D	*	N09-6731-05	MACHINE SCREW (BAINDO M3X14)	
B	3D		N35-2604-43	BINDING HEAD MACHINE SCREW	
C	2C	*	N35-2620-48	BINDING HEAD MACHINE SCREW	
D	3F		N78-2660-48	PAN HEAD TAPTITE SCREW	
E	1D		N86-2605-48	BINDING HEAD TAPTITE SCREW	
225	1E	*	W02-5305-05	ANTENNA MODULE	E4
225	1E	*	W02-5305-05	ANTENNA MODULE	K1K2E3
226	1F	*	W01-1718-05	MICROPHONE	E3
DISPLAY ASSY					
PA1	3E	*	A64-4530-11	PANEL ASSY	K
PA1	3E	*	A64-4532-11	PANEL ASSY	E1E2
PA1	3E	*	A64-4535-11	PANEL ASSY	K1
PA1	3E	*	A64-4536-11	PANEL ASSY	E3
PA1	3E	*	A64-4537-11	PANEL ASSY	E4
PA1	3E	*	A64-4539-01	PANEL ASSY	R1M1M2
PA1	3E	*	A64-4539-01	PANEL ASSY	X1
PA1	3E	*	A64-4540-01	PANEL ASSY	E5
PA1	3E	*	A64-4551-01	PANEL ASSY	K2
230	3E	*	B19-2492-13	LIGHTING BOARD	
232	3E		B43-1518-04	BADGE	
LCD1	3F	*	B38-1202-05	LCD	
FC4	2E	*	E39-0998-15	FLAT CABLE	
241	3E	*	K28-0302-04	KEY TOP (VOL)	
242	3E	*	K28-0304-03	KNOB ASSY (VOL)	
F	2F		N35-2003-48	BINDING HEAD MACHINE SCREW	
G	2F		N80-2008-43	PAN HEAD TAPTITE SCREW	
243	3E	*	S79-0862-05	SWITCH ASSY	

PARTS LIST

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
DVD PLAYER ASSY						C190			CE32AV0J221M	CHIP EL 220UF 6.3WV	
B	3D		N35-2604-43	BINDING HEAD MACHINE SCREW		C191			CK73GB1H103K	CHIP C 0.010UF K	
VME1	1C	*	X92-6160-00	DVD MECHANISM ASSY (DVS-8020V)		C192,193			CK73GB1H104K	CHIP C 0.10UF K	
CONTROL ASSY (NAVI MODULE ASSY)						C194			CK73GB1H103K	CHIP C 0.010UF K	
WH2	2D	*	E39-0993-25	WIRING HARNESS	E4	C195			CE32AV0J221M	CHIP EL 220UF 6.3WV	
WH2	2D	*	E39-0993-25	WIRING HARNESS	K1K2E3	C196			CE32AV0G331M	CHIP EL 330UF 4.0WV	
250	2D	*	W02-5306-05	NAVIGATION MODULE	K1K2	C197			CK73GB1H103K	CHIP C 0.010UF K	
250	2D	*	W02-5308-05	NAVIGATION MODULE	E3E4	C198,199			CK73GB1H104K	CHIP C 0.10UF K	
VIDEO CONTROL UNIT (X15-108x-xx)						C200			CK73GB1H103K	CHIP C 0.010UF K	
C1			C90-5670-05	ELECTRO 2200UF 16WV		C201			CK73GB1H102K	CHIP C 1000PF K	
C4,5			CK73GB1H104K	CHIP C 0.10UF K		C204,205			CK73GB1A474K	CHIP C 0.47UF K	
C8			CK73GB1H104K	CHIP C 0.10UF K		C206			CE32BJ1C470M	CHIP EL 47UF 16WV	
C9			CK73FB1A225K	CHIP C 2.2UF K		C207			CK73GB1A474K	CHIP C 0.47UF K	
C10			CE32BF1E101M	CHIP EL 100UF 25WV		C208			CK73GB1H103K	CHIP C 0.010UF K	
C100,101			CC73GCH1H101J	CHIP C 100PF J		C209			CK73GB1A474K	CHIP C 0.47UF K	
C102			CK73GB1H104K	CHIP C 0.10UF K		C210			CK73GB0J475K	CHIP C 4.7UF K	
C103			CC73GCH1H221J	CHIP C 220PF J		C211			CK73FB0J106K	CHIP C 10UF K	
C104,105			CC73GCH1H470J	CHIP C 47PF J		C212			CK73GB0J475K	CHIP C 4.7UF K	
C106,107			CK73GB1C473K	CHIP C 0.047UF K		C213			CK73GB1H102K	CHIP C 1000PF K	
C108			CC73GCH1H221J	CHIP C 220PF J		C214			CE32AV1A121M	CHIP EL 120UF 10WV	
C109,110			CC73GCH1H470J	CHIP C 47PF J		C215-217			CK73GB1H102K	CHIP C 1000PF K	
C111			CK73GB1C473K	CHIP C 0.047UF K		C218			CK73GB1A105K	CHIP C 1.0UF K	
C112,113			CC73GCH1H221J	CHIP C 220PF J		C219			CK73FB0J106K	CHIP C 10UF K	
C116			CK73GB1H103K	CHIP C 0.010UF K		C220			CE32BJ1C470M	CHIP EL 47UF 16WV	
C117			CK73GB1H223K	CHIP C 0.022UF K		C222			CK73GB1H103K	CHIP C 0.010UF K	E1E2E5
C118,119			CK73GB1H103K	CHIP C 0.010UF K		C225-227			CK73GB1A105K	CHIP C 1.0UF K	
C120			CK73GB1H153K	CHIP C 0.015UF K		C229			CK73GB1H103K	CHIP C 0.010UF K	
C121			CK73GB1H223K	CHIP C 0.022UF K		C232			CK73GB1H104K	CHIP C 0.10UF K	
C124-129			CK73GB1H102K	CHIP C 1000PF K		C233,234			CK73GB1A105K	CHIP C 1.0UF K	
C130,131			CK73FB0J106K	CHIP C 10UF K		C235,236			CE32BJ1C220M	CHIP EL 22UF 16WV	
C132,133			CK73GB1H104K	CHIP C 0.10UF K		C239			CK73GB1H103K	CHIP C 0.010UF K	
C134,135			CK73FB0J106K	CHIP C 10UF K		C240-243			CK73GB1A105K	CHIP C 1.0UF K	
C136-141			CK73GB1H104K	CHIP C 0.10UF K		C244			CK73FB0J106K	CHIP C 10UF K	
C142,143			CK73EB1E225K	CHIP C 2.2UF K		C245			CK73GB1H104K	CHIP C 0.10UF K	
C144-149			CK73GB1H104K	CHIP C 0.10UF K		C246			CK73FB0J106K	CHIP C 10UF K	
C150-157			CK73GB1H103K	CHIP C 0.010UF K		C247			CK73GB1H104K	CHIP C 0.10UF K	
C158-161			CK73GB1H104K	CHIP C 0.10UF K		C248			CE32BQ0J331M	CHIP EL 330UF 6.3WV	
C162-169			CK73GB1H102K	CHIP C 1000PF K		C249			CK73GB1A105K	CHIP C 1.0UF K	
C170			C93-1367-05	CHIP C 10UF K		C250			CK73FB0J106K	CHIP C 10UF K	
C171			CK73GB1H103K	CHIP C 0.010UF K		C251-253			CK73GB1H103K	CHIP C 0.010UF K	
C172			CK73GB1H104K	CHIP C 0.10UF K		C254			CK73FB0J106K	CHIP C 10UF K	
C173,174		*	CE32BQ1E680M	CHIP EL 68UF 25WV		C255-257			CK73GB1A474K	CHIP C 0.47UF K	
C175			CK73GB1H104K	CHIP C 0.10UF K		C265			CK73GB1H102K	CHIP C 1000PF K	
C176			CK73GB1H103K	CHIP C 0.010UF K		C300,301			CK73GB1H104K	CHIP C 0.10UF K	E4K2
C177,178			C93-1367-05	CHIP C 10UF K		C300,301			CK73GB1H104K	CHIP C 0.10UF K	E5R1K1
C179			CK73GB1H103K	CHIP C 0.010UF K		C301			CK73GB1H104K	CHIP C 0.10UF K	KM1M2
C180			CK73GB1H104K	CHIP C 0.10UF K		C302			CK73GB1H103K	CHIP C 0.010UF K	X1E1E2
C181,182		*	CE32BQ1E680M	CHIP EL 68UF 25WV		C303			CK73GB1H104K	CHIP C 0.10UF K	E3
C183			CK73GB1H104K	CHIP C 0.10UF K		C304			CK73GB1H103K	CHIP C 0.010UF K	
C184			CK73GB1H103K	CHIP C 0.010UF K		C307			CK73GB1H104K	CHIP C 0.10UF K	
C185			C93-1367-05	CHIP C 10UF K		C308			CK73GB1H103K	CHIP C 0.010UF K	
C186-189			CK73GB1H102K	CHIP C 1000PF K		C309			CE32BF1E101M	CHIP EL 100UF 25WV	
						C312,313			CK73GB1H102K	CHIP C 1000PF K	

E1: DDX5022 E2: DDX5022Y E3: DNX5220BT E4: DNX5220 E5: DDX52RY (Europe)

△ Indicates safety critical components.

K: DDX512 K1: DNX5120 K2: DNX512EX (North America)

X1: DDX5032 (Australia) R1: DDX5032 (Latin America)

M1: DDX5032 M2: DDX5032M (Other Areas)

PARTS LIST

VIDEO CONTROL UNIT (X15-108x-xx)

Ref. No.	Ad	New	Parts No.	Description	Destination	Ref. No.	Ad	New	Parts No.	Description	Destination
C314 C408 C410 C412 C413			CK73GB1H103K CK73GB1A474K CE32BJ0J470M CK73GB1A474K CE32BF1C221M	CHIP C 0.010UF K CHIP C 0.47UF K CHIP EL 47UF 6.3WV CHIP C 0.47UF K CHIP EL 220UF 16WV	E4	C826 C827,828 C829 C830 C833			CK73GB1A105K CK73GB1H104K CK73GB1A105K CK73GB1H104K CK73GB1A105K	CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 1.0UF K	E4
C413 C414 C414 C501 C502,503			CE32BF1C221M CK73GB1H103K CK73GB1H103K CK73GB1H104K CC73GCH1H100D	CHIP EL 220UF 16WV CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 10PF D	K1K2E3 E4 K1K2E3 E3 E3	C834,835 C836-839 C840 C841 C842			CC73GCH1H100D CK73FB0J106K CK73GB1H104K CE32BF1C221M CK73GB1H104K	CHIP C 10PF D CHIP C 10UF K CHIP C 0.10UF K CHIP EL 220UF 16WV CHIP C 0.10UF K	E4
C504-507 C508 C509 C510,511 C601-603			CK73GB1A105K CK73FB0J106K CC73GCH1H101J CK73GB1H104K CK73GB1H104K	CHIP C 1.0UF K CHIP C 10UF K CHIP C 100PF J CHIP C 0.10UF K CHIP C 0.10UF K	E3 E3 E3 E3	C843 C851 C852 C853,854 C855			CK73FB0J106K CK73FB0J106K CK73GB1H104K CC73GCH1H050C CK73GB1H104K	CHIP C 10UF K CHIP C 10UF K CHIP C 0.10UF K CHIP C 5.0PF C CHIP C 0.10UF K	E4
C604-606 C607 C621-624 C625 C626-630			CK73GB1A105K CK73FB0J106K CK73GB1H104K CK73GB0J475K CK73GB1H104K	CHIP C 1.0UF K CHIP C 10UF K CHIP C 0.10UF K CHIP C 4.7UF K CHIP C 0.10UF K	E3 E3 E3 E3	C864 C865			CK73GB1H104K CK73GB1H102K	CHIP C 0.10UF K CHIP C 1000PF K	E4
C631 C632-638 C651 C652 C653			CK73GB0J475K CK73GB1H104K CK73GB1A105K CK73GB1H104K CK73FB0J106K	CHIP C 4.7UF K CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 10UF K	E4 K1K2E3	CN1 CN2 CN301 CN401 CN401	*		E41-2685-05 E41-2735-05 E41-2237-05 E41-2772-05 E41-2772-05	PIN ASSY PIN ASSY FLAT CABLE CONNECTOR PIN ASSY PIN ASSY	E4 K1K2E3
C654 C655,656 C657,658 C661,662 C663,664			CK73GB1H104K CK73FB0J106K CK73GB1H104K CK73EB1A106K CK73GB1H222K	CHIP C 0.10UF K CHIP C 10UF K CHIP C 0.10UF K CHIP C 10UF K CHIP C 2200PF K	E5R1 KM1M2 X1E1E2 E3 E3	CN701 J201 J202 J203 J301	*		E41-2153-05 E11-0625-05 E11-0656-05 E63-0956-05 E58-1095-05	FLAT CABLE CONNECTOR PHONE JACK (IPOD-A) PHONE JACK (IPOD-V YELLOW) RCA PIN JACK (AV-OUT,V-IN) RECTANGULAR RECEPTACLE	E5R1 KM1M2 X1E1E2 E3 E3
C665,666 C667-670 C672 C673 C691-693			CK73GB1H271K CK73EB1A106K CK73FB0J106K CK73GB1H103K CK73GB1H104K	CHIP C 270PF K CHIP C 10UF K CHIP C 10UF K CHIP C 0.010UF K CHIP C 0.10UF K	E5R1 KM1M2 X1E1E2 E3 E3	J401 J401 J401 J501 J502			E56-0864-05 E56-0864-05 E56-0864-05 E11-0625-05 E04-0324-05	CYLINDRICAL RECEPTACLE CYLINDRICAL RECEPTACLE CYLINDRICAL RECEPTACLE PHONE JACK RF COAXIAL CABLE RECEPTACLE	E5R1 KM1M2 X1E1E2 E3 E3
C701,702 C703 C704 C705-725 C726,727		*	CK73FB0J106K CE32BQ1E680M CK73GB1A105K CK73GB1H104K CC73GCH1H100D	CHIP C 10UF K CHIP EL 68UF 25WV CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 10PF D	Δ	L1 L100-103 L104-107 L108 L201			L33-2358-05 L33-2369-05 L33-2370-05 L92-0373-05 L92-0319-05	CHOKE COIL CHOKE COIL (10U) CHOKE COIL (10U) CHIP FERRITE CHIP FERRITE	E4K2 E5R1K1
C728 C729,730 C731 C732 C741			CK73GB1H104K CC73GCH1H220J CK73FB0J106K CK73GB1H104K CK73GB0J475K	CHIP C 0.10UF K CHIP C 22PF J CHIP C 10UF K CHIP C 0.10UF K CHIP C 4.7UF K	E4K2 E5R1K1	L202 L203 L204 L300 L300			L41-1005-33 L92-0319-05 L41-1005-33 L92-0373-05 L92-0373-05	SMALL FIXED INDUCTOR (10U) CHIP FERRITE SMALL FIXED INDUCTOR (10U) CHIP FERRITE CHIP FERRITE	E4K2 E5R1K1
C742-748 C751 C752-758 C761,762 C763,764			CK73GB1H104K CK73GB0J475K CK73GB1H104K CK73FB0J106K CK73GB1H104K	CHIP C 0.10UF K CHIP C 4.7UF K CHIP C 0.10UF K CHIP C 10UF K CHIP C 0.10UF K	KM1M2 X1E1E2	L300 L300 L302 L303 L401			L92-0373-05 L92-0373-05 L33-2369-05 L92-0329-05 L33-2369-05	CHIP FERRITE CHIP FERRITE CHOKE COIL CHIP FERRITE CHOKE COIL	E4
C801-804 C807 C808,809 C811 C812-825			CK73GB1A105K CK73GB1A105K CK73GB1H104K CK73GB1A105K CK73GB1H104K	CHIP C 1.0UF K CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 0.10UF K	K1K2E3 E3	L401 L501,502 L601,602 L651 L701-706			L33-2369-05 L92-0373-05 L92-0319-05 L41-1005-33 L92-0373-05	CHOKE COIL CHIP FERRITE CHIP FERRITE SMALL FIXED INDUCTOR (10U) CHIP FERRITE	K1K2E3 E3

E1: DDX5022 E2: DDX5022Y E3: DNX5220BT E4: DNX5220 E5: DDX52RY (Europe)

K: DDX512 K1: DNX5120 K2: DNX512EX (North America)

X1: DDX5032 (Australia) R1: DDX5032 (Latin America)

M1: DDX5032 M2: DDX5032M (Other Areas)

ΔIndicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-108x-xx)

Ref. No.	Ad	New	Parts No.	Description	Destination	Ref. No.	Ad	New	Parts No.	Description	Destination
L731 L741 L751 L801 L803			L92-0373-05 L92-0373-05 L92-0373-05 L92-0642-05 L92-0642-05	CHIP FERRITE CHIP FERRITE CHIP FERRITE CHIP FERRITE CHIP FERRITE		R203 R204 R205,206 R207 R208			RK73EB2E100J RK73HB1J223J RK73EB2E100J RK73HB1J223J RK73EB2E100J	CHIP R 10 J 1/4W CHIP R 22K J 1/16W CHIP R 10 J 1/4W CHIP R 22K J 1/16W CHIP R 10 J 1/4W	
L804,805 L806 L806 L806 L806,807		*	L92-0641-05 L92-0651-05 L92-0651-05 L92-0651-05 L92-0651-05	FERRITE CORE CHIP FERRITE CHIP FERRITE CHIP FERRITE CHIP FERRITE	E5R1 KM1M2 X1E1E2 E4	R209 R210 R211 R212 R213			RK73GB2A222J RK73FB2B101J RK73GB2A750J RK73EB2E101J RK73GB2A102J	CHIP R 2.2K J 1/10W CHIP R 100 J 1/8W CHIP R 75 J 1/10W CHIP R 100 J 1/4W CHIP R 1.0K J 1/10W	
L806,807 L808 L808 L811 L851		*	L92-0651-05 L92-0641-05 L92-0641-05 L92-0373-05 L92-0319-05	CHIP FERRITE FERRITE CORE FERRITE CORE CHIP FERRITE CHIP FERRITE	K1K2E3 E4 K1K2E3	R215 R216,217 R219 R228 R229			RK73HB1J100J RK73HB1J000J RK73GB2A000J RK73GH2A471D RK73HB1J332J	CHIP R 10 J 1/16W CHIP R 0.0 J 1/16W CHIP R 0.0 J 1/10W CHIP R 470 D 1/10W CHIP R 3.3K J 1/16W	
X701 X801 X851			L77-2866-05 L77-2943-05 L77-2921-05	CRYSTAL RESONATOR (27MHZ) CRYSTAL RESONATOR (24.000MHZ) CRYSTAL RESONATOR (32.768KHZ)		R235 R236-238 R239 R240 R241			RK73HB1J000J RK73GH2A102D RK73HB1J103J RK73HB1J000J RK73GH2A102D	CHIP R 0.0 J 1/16W CHIP R 1.0K D 1/10W CHIP R 10K J 1/16W CHIP R 0.0 J 1/16W CHIP R 1.0K D 1/10W	
F H	1D 1D		N35-2003-48 N82-2608-48	BINDING HEAD MACHINE SCREW BINDING HEAD TAPTITE SCREW	E3	R243 R244 R245 R246-249 R250			RK73HB1J101J RK73HB1J103J RK73GH2A102D RK73HB1J105J RK73HB1J103J	CHIP R 100 J 1/16W CHIP R 10K J 1/16W CHIP R 1.0K D 1/10W CHIP R 1.0M J 1/16W CHIP R 10K J 1/16W	
CP701-715 CP721-724 CP751,752 CP753,754 R6			RK74HB1J220J RK74HB1J330J RK74HB1J103J RK74HB1J220J RK73GB2A823J	CHIP-COM 22 J 1/16W CHIP-COM 33 J 1/16W CHIP-COM 10K J 1/16W CHIP-COM 22 J 1/16W CHIP R 82K J 1/10W		R251,252 R253 R254 R255,256 R257,258			RK73HB1J000J RK73HB1J332J RK73GH2A102D RK73HB1J105J RK73HB1J101J	CHIP R 0.0 J 1/16W CHIP R 3.3K J 1/16W CHIP R 1.0K D 1/10W CHIP R 1.0M J 1/16W CHIP R 100 J 1/16W	
R7 R8 R9 R10 R100			RK73GB2A103J RK73GB2A224J RK73GB2A333J RK73GB2A224J RK73GB2A000J	CHIP R 10K J 1/10W CHIP R 220K J 1/10W CHIP R 33K J 1/10W CHIP R 220K J 1/10W CHIP R 0.0 J 1/10W		R259 R260,261 R263 R265 R266			RK73HB1J103J RK73HB1J101J RK73HB1J101J RK73GH2A102D RK73EB2E750J	CHIP R 10K J 1/16W CHIP R 100 J 1/16W CHIP R 100 J 1/16W CHIP R 1.0K D 1/10W CHIP R 75 J 1/4W	
R101 R102 R103 R104 R105-108			RK73GH2A681D RK73GH2A221D RK73GH2A681D RK73GH2A561D RK73GB2A683J	CHIP R 680 D 1/10W CHIP R 220 D 1/10W CHIP R 680 D 1/10W CHIP R 560 D 1/10W CHIP R 68K J 1/10W		R267-269 R270 R271 R272 R273-276			RK73HB1J272J RK73GB2A750J RK73EB2E101J RK73HB1J100J RK73HB1J473J	CHIP R 2.7K J 1/16W CHIP R 75 J 1/10W CHIP R 100 J 1/4W CHIP R 10 J 1/16W CHIP R 47K J 1/16W	
R109 R110 R111 R112 R113			RK73GB2A103J RK73GH2A562D RK73GB2A103J RK73GH2A472D RK73GH2A562D	CHIP R 10K J 1/10W CHIP R 5.6K D 1/10W CHIP R 10K J 1/10W CHIP R 4.7K D 1/10W CHIP R 5.6K D 1/10W		R277 R279 R282 R283 R283			RK73GB2A000J RK73GB2A000J RK73HB1J000J RK73HB1J103J RK73HB1J103J	CHIP R 0.0 J 1/10W CHIP R 0.0 J 1/10W CHIP R 0.0 J 1/16W CHIP R 10K J 1/16W CHIP R 10K J 1/16W	E4 K1K2E3
R114 R119-122 R123-134 R135,136 R137,138			RK73GH2A103D RK73GH2A333D RK73GB2A000J RK73GB2A220J RK73GB2A000J	CHIP R 10K D 1/10W CHIP R 33K D 1/10W CHIP R 0.0 J 1/10W CHIP R 22 J 1/10W CHIP R 0.0 J 1/10W		R284 R284 R284 R284-289 R284-289			RK73HB1J000J RK73HB1J000J RK73HB1J000J RK73HB1J102J RK73HB1J102J	CHIP R 0.0 J 1/16W CHIP R 0.0 J 1/16W CHIP R 0.0 J 1/16W CHIP R 1.0K J 1/16W CHIP R 1.0K J 1/16W	E5R1 KM1M2 X1E1E2 E4 K1K2E3
R139 R140,141 R142 R143-152 R153-156			RK73GB2A220J RK73GB2A000J RK73GB2A220J RK73EB2E100J R92-5158-05	CHIP R 22 J 1/10W CHIP R 0.0 J 1/10W CHIP R 22 J 1/10W CHIP R 10 J 1/4W CHIP R 0.022 J 1/4W		R286 R286 R286 R288 R288			RK73HB1J000J RK73HB1J000J RK73HB1J000J RK73HB1J000J RK73HB1J000J	CHIP R 0.0 J 1/16W CHIP R 0.0 J 1/16W CHIP R 0.0 J 1/16W CHIP R 0.0 J 1/16W CHIP R 0.0 J 1/16W	E5R1 KM1M2 X1E1E2 E4 K1K2E3
R158 R159 R161-167 R201,202			R92-5159-05 R92-5158-05 RK73GB2A000J RK73HB1J202J	CHIP R 0.033 J 1/4W CHIP R 0.022 J 1/4W CHIP R 0.0 J 1/10W CHIP R 2.0K J 1/16W							

E1: DDX5022 E2: DDX5022Y E3: DNX5220BT E4: DNX5220 E5: DDX52RY (Europe)

△ Indicates safety critical components.

K: DDX512 K1: DNX5120 K2: DNX512EX (North America)

X1: DDX5032 (Australia) R1: DDX5032 (Latin America)

M1: DDX5032 M2: DDX5032M (Other Areas)

PARTS LIST

VIDEO CONTROL UNIT (X15-108x-xx)

Ref. No.	Ad	New	Parts No.	Description	Desti- nation	Ref. No.	Ad	New	Parts No.	Description	Desti- nation
R288 R290 R302 R304,305 R304,305			RK73HB1J000J RK73HB1J000J RK73GB2A000J RK73HB1J101J RK73HB1J101J	CHIP R 0.0 J 1/16W CHIP R 0.0 J 1/16W CHIP R 0.0 J 1/10W CHIP R 100 J 1/16W CHIP R 100 J 1/16W	X1E1E2 E4K2 E5R1K1	R512,513 R601 R603 R604-606 R613			RK73EB2E101J RK73GB2A000J RK73GH2A471D RK73GH2A102D RK73GH2A331D	CHIP R 100 J 1/4W CHIP R 0.0 J 1/10W CHIP R 470 D 1/10W CHIP R 1.0K D 1/10W CHIP R 330 D 1/10W	E3
R304,305 R304,305 R309 R310 R310			RK73HB1J101J RK73HB1J101J RK73FB2B000J RK73HB1J472J RK73HB1J472J	CHIP R 100 J 1/16W CHIP R 100 J 1/16W CHIP R 0.0 J 1/8W CHIP R 4.7K J 1/16W CHIP R 4.7K J 1/16W	KM1M2 X1E1E2 E4K2 E5R1K1	R614 R615-617 R620-625 R626 R627	*		RK73GH2A150D RK73HB1J000J RK73GH2A750D RK73GH2A240D RK73GH2A151D	CHIP R 15 D 1/10W CHIP R 0.0 J 1/16W CHIP R 75 D 1/10W CHIP R 24 D 1/10W CHIP R 150 D 1/10W	
R310 R310 R311-314 R311-314 R311-314			RK73HB1J472J RK73HB1J472J RK73HB1J103J RK73HB1J103J RK73HB1J103J	CHIP R 4.7K J 1/16W CHIP R 4.7K J 1/16W CHIP R 10K J 1/16W CHIP R 10K J 1/16W CHIP R 10K J 1/16W	KM1M2 X1E1E2 E4K2 E5R1K1 KM1M2	R628 R629 R651-654 R655-657 R658-660			RK73HB1J000J RK73GH2A750D RK73HB1J220J RK73HB1J000J RK73GB2A2R2J	CHIP R 0.0 J 1/16W CHIP R 75 D 1/10W CHIP R 22 J 1/16W CHIP R 0.0 J 1/16W CHIP R 2.2 J 1/10W	
R311-314 R403-405 R406 R407 R407			RK73HB1J103J RK73EB2E102J RK73HB1J101J RK73GB2A000J RK73GB2A000J	CHIP R 10K J 1/16W CHIP R 1.0K J 1/4W CHIP R 100 J 1/16W CHIP R 0.0 J 1/10W CHIP R 0.0 J 1/10W	X1E1E2 E4 K1K2E3	R661,662 R663,664 R665,666 R667,668 R669-672			RK73HB1J103J RK73HB1J102J RK73HB1J752J RK73HB1J471J RK73HB1J473J	CHIP R 10K J 1/16W CHIP R 1.0K J 1/16W CHIP R 7.5K J 1/16W CHIP R 470 J 1/16W CHIP R 47K J 1/16W	
R412-415 R412-415 R412-415 R416 R416			RK73GB2A750J RK73GB2A750J RK73GB2A750J RK73EB2E101J RK73EB2E101J	CHIP R 75 J 1/10W CHIP R 75 J 1/10W CHIP R 75 J 1/10W CHIP R 100 J 1/4W CHIP R 100 J 1/4W	E5R1 KM1M2 X1E1E2 E5R1 KM1M2	R673,674 R681 R683-686 R687 R688			RK73HB1J103J RK73HB1J103J RK73HB1J220J RK73HB1J103J RK73HB1J220J	CHIP R 10K J 1/16W CHIP R 10K J 1/16W CHIP R 22 J 1/16W CHIP R 10K J 1/16W CHIP R 22 J 1/16W	
R416 R417 R417 R417 R417 R418			RK73EB2E101J RK73HB1J100J RK73HB1J100J RK73HB1J100J RK73HB1J100J RK73EB2E101J	CHIP R 100 J 1/4W CHIP R 10 J 1/16W CHIP R 10 J 1/16W CHIP R 10 J 1/16W CHIP R 10 J 1/16W CHIP R 100 J 1/4W	X1E1E2 E5R1 KM1M2 X1E1E2 E5R1	R690 R691 R692 R693 R694,695			RK73HB1J220J RK73HB1J100J RK73GB2A151J RK73EB2E750J RK73GB2A000J	CHIP R 22 J 1/16W CHIP R 10 J 1/16W CHIP R 150 J 1/10W CHIP R 75 J 1/4W CHIP R 0.0 J 1/10W	
R418 R418 R419 R419 R419			RK73EB2E101J RK73EB2E101J RK73HB1J100J RK73HB1J100J RK73HB1J100J	CHIP R 100 J 1/4W CHIP R 100 J 1/4W CHIP R 10 J 1/16W CHIP R 10 J 1/16W CHIP R 10 J 1/16W	KM1M2 X1E1E2 E5R1 KM1M2 X1E1E2	R696 R697,698 R699 R702 R703			RK73HB1J220J RK73HB1J151J RK73HB1J000J RK73GB2A000J RK73HB1J102J	CHIP R 22 J 1/16W CHIP R 150 J 1/16W CHIP R 0.0 J 1/16W CHIP R 0.0 J 1/10W CHIP R 1.0K J 1/16W	
R420 R420 R420 R421 R421			RK73EB2E101J RK73EB2E101J RK73EB2E101J RK73HB1J100J RK73HB1J100J	CHIP R 100 J 1/4W CHIP R 100 J 1/4W CHIP R 100 J 1/4W CHIP R 10 J 1/16W CHIP R 10 J 1/16W	E5R1 KM1M2 X1E1E2 E5R1 KM1M2	R704 R706-708 R709-713 R715-730 R732-738			RK73HB1J101J RK73HB1J000J RK73HB1J220J RK73HB1J000J RK73HB1J220J	CHIP R 100 J 1/16W CHIP R 0.0 J 1/16W CHIP R 22 J 1/16W CHIP R 0.0 J 1/16W CHIP R 22 J 1/16W	
R421 R422 R422 R422 R422 R423			RK73HB1J100J RK73EB2E101J RK73EB2E101J RK73EB2E101J RK73EB2E101J RK73HB1J100J	CHIP R 10 J 1/16W CHIP R 100 J 1/4W CHIP R 100 J 1/4W CHIP R 100 J 1/4W CHIP R 100 J 1/4W CHIP R 10 J 1/16W	X1E1E2 E5R1 KM1M2 X1E1E2 E5R1	R739,740 R742-746 R748-753 R754-756 R758			RK73HB1J101J RK73HB1J101J RK73HB1J220J RK73HB1J101J RK73HB1J105J	CHIP R 100 J 1/16W CHIP R 100 J 1/16W CHIP R 22 J 1/16W CHIP R 100 J 1/16W CHIP R 1.0M J 1/16W	
R423 R423 R424 R425 R428			RK73HB1J100J RK73HB1J100J RK73EB2E100J RK73EB2E4R7J RK73EB2E100J	CHIP R 10 J 1/16W CHIP R 10 J 1/16W CHIP R 10 J 1/4W CHIP R 4.7 J 1/4W CHIP R 10 J 1/4W	KM1M2 X1E1E2 	R759 R760-762 R763,764 R765 R767			RK73GB2A102J RK73HB1J000J RK73HB1J220J RK73HB1J000J RK73HB1J000J	CHIP R 1.0K J 1/10W CHIP R 0.0 J 1/16W CHIP R 22 J 1/16W CHIP R 0.0 J 1/16W CHIP R 0.0 J 1/16W	
R501,502 R503,504 R505,506 R507,508 R509			RK73HB1J104J RK73HB1J223J RK73HB1J104J RK73HB1J223J RK73HB1J473J	CHIP R 100K J 1/16W CHIP R 22K J 1/16W CHIP R 100K J 1/16W CHIP R 22K J 1/16W CHIP R 47K J 1/16W	E3 E3 E3 E3 E3	R769 R770 R771 R771 R771			RK73GH2A153D RK73GH2A123D RK73HB1J103J RK73HB1J103J RK73HB1J103J	CHIP R 15K D 1/10W CHIP R 12K D 1/10W CHIP R 10K J 1/16W CHIP R 10K J 1/16W CHIP R 10K J 1/16W	E5R1E3 KM1M2 X1E1E2

E1: DDX5022 E2: DDX5022Y E3: DNX5220BT E4: DNX5220 E5: DDX52RY (Europe)

△Indicates safety critical components.

K: DDX512 K1: DNX5120 K2: DNX512EX (North America)

X1: DDX5032 (Australia) R1: DDX5032 (Latin America)

M1: DDX5032 M2: DDX5032M (Other Areas)

PARTS LIST

VIDEO CONTROL UNIT (X15-108x-xx)

Ref. No.	Added	New	Parts No.	Description	Destination	Ref. No.	Added	New	Parts No.	Description	Destination
R772,773			RK73HB1J103J	CHIP R 10K J 1/16W	K1E4K2	D100-103			1SS357-F	DIODE	
R773			RK73HB1J103J	CHIP R 10K J 1/16W	E5R1E3	D201			DAP202U	DIODE	
R773			RK73HB1J103J	CHIP R 10K J 1/16W	KM1M2	D202			UDZS4.7B	ZENER DIODE	
R773			RK73HB1J103J	CHIP R 10K J 1/16W	X1E1E2	D203			CVL10C270M300	VARIATOR	
R776			RK73HB1J103J	CHIP R 10K J 1/16W		D204-206			CVS10A120M	VARIATOR	
R777			RK73HB1J102J	CHIP R 1.0K J 1/16W		D207			CVL10C270M300	VARIATOR	
R780			RK73FB2B000J	CHIP R 0.0 J 1/8W		D212,213			CVL10C270M300	VARIATOR	
R781			RK73GB2A000J	CHIP R 0.0 J 1/10W		D301			1SS355	DIODE	E4K2
R805,806			RK73EB2E4R7J	CHIP R 4.7 J 1/4W		D301			1SS355	DIODE	E5R1K1
R808,809			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	E4	D301			1SS355	DIODE	KM1M2
R808,809			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	K1K2E3	D301			1SS355	DIODE	X1E1E2
R810,811			RK73GB2A000J	CHIP R 0.0 J 1/10W		D400-403			UDZS6.2B	ZENER DIODE	E5R1
R812			RK73HB1J103J	CHIP R 10K J 1/16W		D400-403			UDZS6.2B	ZENER DIODE	KM1M2
R814			RK73HB1J103J	CHIP R 10K J 1/16W		D400-403			UDZS6.2B	ZENER DIODE	X1E1E2
R815			RK73GH2A622D	CHIP R 6.2K D 1/10W		D404			STZ6.8N	ZENER DIODE	E5R1
R820			RK73HB1J000J	CHIP R 0.0 J 1/16W		D404			STZ6.8N	ZENER DIODE	KM1M2
R821			RK73GH2A622D	CHIP R 6.2K D 1/10W		D404			STZ6.8N	ZENER DIODE	X1E1E2
R823			RK73HB1J103J	CHIP R 10K J 1/16W		D405-408			CVL10C270M300	VARIATOR	E5R1
R825			RK73HB1J102J	CHIP R 1.0K J 1/16W		D405-408			CVL10C270M300	VARIATOR	KM1M2
R826			RK73HB1J103J	CHIP R 10K J 1/16W		D405-408			CVL10C270M300	VARIATOR	X1E1E2
R831			RK73GB2A000J	CHIP R 0.0 J 1/10W		D501			STZ6.8N	ZENER DIODE	E3
R832			RK73GB2A515J	CHIP R 5.1M J 1/10W		D651			DAP202U	DIODE	
R833-836			RK73HB1J103J	CHIP R 10K J 1/16W		D681			CVL10C270M300	VARIATOR	
R837			RK73HB1J000J	CHIP R 0.0 J 1/16W		D682			DA204U	DIODE	
R838			RK73HB1J220J	CHIP R 22 J 1/16W		D701			DAP202U	DIODE	
R840,841			RK73HB1J103J	CHIP R 10K J 1/16W		D801,802			AVRL1613R3FTA	VARIATOR	
R843			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC100,101			LTC3728LEGN	ANALOGUE IC	
R844			RK73HB1J103J	CHIP R 10K J 1/16W		IC201			NJM2794RB2ZB	ANALOGUE IC	
R845			RK73GH2A104D	CHIP R 100K D 1/10W		IC202			NJM2505AF-ZB	ANALOGUE IC	
R846			RK73HB1J102J	CHIP R 1.0K J 1/16W		IC203			XC6201P502PR	ANALOGUE IC	
R847			RK73HB1J103J	CHIP R 10K J 1/16W		IC205		*	AN15885A-VF	ANALOGUE IC	
R848			RK73HB1J331J	CHIP R 330 J 1/16W		IC206			MM1508XNRE-E	ANALOGUE IC	
R851			RK73HB1J473J	CHIP R 47K J 1/16W		IC207		*	NJM2286V-ZB	ANALOGUE IC	
R853-856			RK73HB1J103J	CHIP R 10K J 1/16W		IC301			74AHCT08PW	MOS-IC	E4K2
R857-860			RK73HB1J152J	CHIP R 1.5K J 1/16W		IC301			74AHCT08PW	MOS-IC	E5R1K1
R861			RK73HB1J472J	CHIP R 4.7K J 1/16W	E4K2	IC301			74AHCT08PW	MOS-IC	KM1M2
R861			RK73HB1J472J	CHIP R 4.7K J 1/16W	E5R1K1	IC301			74AHCT08PW	MOS-IC	X1E1E2
R861			RK73HB1J472J	CHIP R 4.7K J 1/16W	KM1M2	IC501			NJM4565V-ZB	ANALOGUE IC	E3
R861			RK73HB1J472J	CHIP R 4.7K J 1/16W	X1E1E2	IC502			TC7WH126FU-F	MOS-IC	E3
R861,862			RK73HB1J472J	CHIP R 4.7K J 1/16W	E3	IC601			MM1671XNRE	ANALOGUE IC	
R863-880			RK73HB1J103J	CHIP R 10K J 1/16W		IC602			NJM2573V-ZB	ANALOGUE IC	
R881			RK73HB1J202J	CHIP R 2.0K J 1/16W		IC651			PCM1754DB	MOS-IC	
R883			RK73HB1J103J	CHIP R 10K J 1/16W		IC652			NJM4565V-ZB	ANALOGUE IC	
R884,885			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC653			XC6201P502PR	ANALOGUE IC	
R886			RK73HB1J473J	CHIP R 47K J 1/16W		IC654			NJM4565V-ZB	ANALOGUE IC	
R887			RK73HB1J103J	CHIP R 10K J 1/16W		IC691		*	74AHC1G04GW	MOS-IC	
R900			RK73HB1J220J	CHIP R 22 J 1/16W		IC692			74AHC1G08GW	MOS-IC	
R905,906			RK73HB1J220J	CHIP R 22 J 1/16W		IC701		*	MS8312A-CMG	MICROPROCESSOR IC	
R907			RK73HB1J103J	CHIP R 10K J 1/16W		IC702			S29GL64A9I4Z4	ROM IC	
R913,914			RK73HB1J105J	CHIP R 1.0M J 1/16W		IC703,704		*	A2V28S40CTPG6	DRAM IC	
R915			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC705			SI-3010KD	ANALOGUE IC	
R919			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC801		*	S1R72C05F15	MOS-IC	
						IC804		*	MIC2005-08YM6	MOS-IC	
						IC805			XC6219B332PR	ANALOGUE IC	
L503	*		T90-0587-05	CHIP ANTENNA	E3	IC806			XC6219B182PR	ANALOGUE IC	

E1: DDX5022 E2: DDX5022Y E3: DNX5220BT E4: DNX5220 E5: DDX52RY (Europe)

△ Indicates safety critical components.

K: DDX512 K1: DNX5120 K2: DNX512EX (North America)

X1: DDX5032 (Australia) R1: DDX5032 (Latin America)

M1: DDX5032 M2: DDX5032M (Other Areas)

PARTS LIST

VIDEO CONTROL UNIT (X15-108x-xx)

Ref. No.	Ad	New	Parts No.	Description	Desti- nation
IC851 IC853 Q1 Q2,3 Q4		*	341S2094 74AHC573PW DTC143ZUA 2SA1576A TPC8110-F	MICROPROCESSOR IC MOS-IC DIGITAL TRANSISTOR TRANSISTOR FET	
Q100-103 Q104-107 Q202-204 Q205-207 Q301,302			DTC124XUA HAT2218R-E 2SA1576A 2SC4081 2SC4081	DIGITAL TRANSISTOR DUAL FET TRANSISTOR TRANSISTOR TRANSISTOR	E4K2
Q301,302 Q301,302 Q301,302 Q303 Q303			2SC4081 2SC4081 2SC4081 UMG2N UMG2N	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	E5R1K1 KM1M2 X1E1E2 E4K2 E5R1K1
Q303 Q303 Q651,652 Q653 Q654			UMG2N UMG2N DTC643TU DTA114EUA DTC143ZUA	TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	KM1M2 X1E1E2
Q681			2SA1576A	TRANSISTOR	
A501		*	W02-5292-05	ELECTRIC CIRCUIT MODULE (BLUET)	E3
ELECTRIC UNIT (X34-575x-xx)					
C1 C2 C4 C6 C8			CK73FB1E474K CK73GB1H222K C90-6851-05 CK73GB1H222K CK73GB1H103K	CHIP C 0.47UF K CHIP C 2200PF K ELECTRO 220UF 25WV CHIP C 2200PF K CHIP C 0.010UF K	
C9,10 C14 C15 C16 C17			CK73GB1H222K CK73FB1A335K CK73GB1A105K CK73GB1H103K CK73GB1A105K	CHIP C 2200PF K CHIP C 3.3UF K CHIP C 1.0UF K CHIP C 0.010UF K CHIP C 1.0UF K	
C18,19 C20 C20 C21 C24,25			CK73GB1H222K CK73GB1H103K CK73GB1H103K CK73FB0J106K CK73GB1H222K	CHIP C 2200PF K CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 10UF K CHIP C 2200PF K	E4 K1K2E3
C26 C29 C30 C31 C32			CK73GB1H104K CD04AS0J101M CK73FB1C105K CK73GB1A105K CK73GB1H103K	CHIP C 0.10UF K ELECTRO 100UF 6.3WV CHIP C 1.0UF K CHIP C 1.0UF K CHIP C 0.010UF K	
C33 C34 C35 C36 C36			CK73GB1A105K CD04AR1C221M CK73GB1A105K CC73GCH1H101J CC73GCH1H101J	CHIP C 1.0UF K ELECTRO 220UF 16WV CHIP C 1.0UF K CHIP C 100PF J CHIP C 100PF J	E1E2E5 E3E4
C37 C38 C38 C41 C43-45			CK73GB1H103K C93-1470-05 C93-1470-05 CK73GB1A105K CK73GB1H103K	CHIP C 0.010UF K CHIP C 15000PF F CHIP C 15000PF F CHIP C 1.0UF K CHIP C 0.010UF K	E1E2E5 E3E4

Ref. No.	Ad	New	Parts No.	Description	Desti- nation
C46 C47 C100 C101 C102			CK73FB1E474K C90-5612-05 CK73GB1H104K CK73GB1H103K CK73GB1H104K	CHIP C 0.47UF K ELECTRO 3900UF 16WV CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.10UF K	
C104 C105,106 C105,106 C106 C106			CK73GB1H104K CK73GB1H103K CK73GB1H103K CK73GB1H103K CK73GB1H103K	CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 0.010UF K	E4 K1K2E3 E5R1 KM1M2
C106 C108 C109 C110 C111			CK73GB1H103K CC73GCH1H220J CC73GCH1H180J CK73FB0J106K CK73GB1H473K	CHIP C 0.010UF K CHIP C 22PF J CHIP C 18PF J CHIP C 10UF K CHIP C 0.047UF K	X1E1E2
C112 C113 C114 C115,116 C117			CK73GB1H102K CK73GB1H103K CD04AS0J101M CK73GB1H103K CK73GB1H104K	CHIP C 1000PF K CHIP C 0.010UF K ELECTRO 100UF 6.3WV CHIP C 0.010UF K CHIP C 0.10UF K	
C119 C120 C121 C122,123 C124			CK73GB1H104K CK73GB1H102K CK73GB1H104K CK73GB1H103K CK73GB1H104K	CHIP C 0.10UF K CHIP C 1000PF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.10UF K	
C125 C126-129 C132,133 C302 C303,304			CK73GB1H102K CK73GB1H104K CC73GCH1H070D CD04AS1C470M CK73GB1A474K	CHIP C 1000PF K CHIP C 0.10UF K CHIP C 7.0PF D ELECTRO 47UF 16WV CHIP C 0.47UF K	
C305,306 C307,308 C316 C318 C321			CE32BJ1H2R2M CK73GB1A474K CK73GB1A105K CE32BJ1C100M CK73GB1H103K	CHIP EL 2.2UF 50WV CHIP C 0.47UF K CHIP C 1.0UF K CHIP EL 10UF 16WV CHIP C 0.010UF K	
C322 C323,324 C325 C326 C327			CE32BJ1C100M CK73GB1H103K CK73FB1A335K CK73GB1A105K CK73FB1A335K	CHIP EL 10UF 16WV CHIP C 0.010UF K CHIP C 3.3UF K CHIP C 1.0UF K CHIP C 3.3UF K	
C328,329 C330-332 C334 C335 C336			CK73GB1A105K CE32BJ1H010M CK73FB1E474K CE32BJ0J470M CK73FB1E474K	CHIP C 1.0UF K CHIP EL 1.0UF 50WV CHIP C 0.47UF K CHIP EL 47UF 6.3WV CHIP C 0.47UF K	
C400 C400 C400 C401 C401			CD04AS1C220M CD04AS1C220M CD04AS1C220M CK73GB1H103K CK73GB1H103K	ELECTRO 22UF 16WV ELECTRO 22UF 16WV ELECTRO 22UF 16WV CHIP C 0.010UF K CHIP C 0.010UF K	E1E2M1 E3E4 M2X1E5 E1E2M1 E3E4
C401 C402-405 C402-405 C402-405 C417-420			CK73GB1H103K CK73GB1A474K CK73GB1A474K CK73GB1A474K CK73GB1A474K	CHIP C 0.010UF K CHIP C 0.47UF K CHIP C 0.47UF K CHIP C 0.47UF K CHIP C 0.47UF K	M2X1E5 E1E2M1 E3E4 M2X1E5 E4K2

E1: DDX5022 **E2:** DDX5022Y **E3:** DNX5220BT **E4:** DNX5220 **E5:** DDX52RY (Europe) △Indicates safety critical components.
K: DDX512 **K1:** DNX5120 **K2:** DNX512EX (North America)
X1: DDX5032 (Australia) **R1:** DDX5032 (Latin America)
M1: DDX5032 **M2:** DDX5032M (Other Areas)

PARTS LIST

ELECTRIC UNIT (X34-575x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
C417-420			CK73GB1A474K	CHIP C 0.47UF K	E5R1K1	C620,621			C90-6780-05	ELECTRO 1UF 16WV	
C417-420			CK73GB1A474K	CHIP C 0.47UF K	KM1M2	C623,624			C90-6779-05	ELECTRO 0.47UF 16WV	
C417-420			CK73GB1A474K	CHIP C 0.47UF K	X1E1E2	C626			CK73GB1A105K	CHIP C 1.0UF K	
C424			CK73GB1H104K	CHIP C 0.10UF K	E4K2	C627			CC73GCH1H050C	CHIP C 5.0PF C	
C424			CK73GB1H104K	CHIP C 0.10UF K	E5R1K1	C700			CE32BJ1C100M	CHIP EL 10UF 16WV	
C424			CK73GB1H104K	CHIP C 0.10UF K	KM1M2	C701,702			CK73GB1H102K	CHIP C 1000PF K	
C424			CK73GB1H104K	CHIP C 0.10UF K	X1E1E2	C703,704			CE32BJ1C100M	CHIP EL 10UF 16WV	
C425			CD04AS1C220M	ELECTRO 22UF 16WV	E4K2	C705,706			CK73GB1H102K	CHIP C 1000PF K	
C425			CD04AS1C220M	ELECTRO 22UF 16WV	E5R1K1	C707			CE32BJ1C100M	CHIP EL 10UF 16WV	
C425			CD04AS1C220M	ELECTRO 22UF 16WV	KM1M2	C711			CE32BJ1C100M	CHIP EL 10UF 16WV	
C425			CD04AS1C220M	ELECTRO 22UF 16WV	X1E1E2	C712,713			CK73GB1H102K	CHIP C 1000PF K	
C426,427			CK73GB1H103K	CHIP C 0.010UF K	E4K2	C714			CE32BJ1C100M	CHIP EL 10UF 16WV	
C426,427			CK73GB1H103K	CHIP C 0.010UF K	E5R1K1	C715			CK73GB1H104K	CHIP C 0.10UF K	
C426,427			CK73GB1H103K	CHIP C 0.010UF K	KM1M2	C800,801			CK73GB1H103K	CHIP C 0.010UF K	
C426,427			CK73GB1H103K	CHIP C 0.010UF K	X1E1E2	C807,808			CK73GB1H222K	CHIP C 2200PF K	
C430			CK73GB1H103K	CHIP C 0.010UF K	E1E2M1	C809			CK73FB1C105K	CHIP C 1.0UF K	
C430			CK73GB1H103K	CHIP C 0.010UF K	E3E4	C810			CD04AS1C101M	ELECTRO 100UF 16WV	
C430			CK73GB1H103K	CHIP C 0.010UF K	M2X1E5	C811			CK73GB1H103K	CHIP C 0.010UF K	
C500			CK73GB1A105K	CHIP C 1.0UF K		CN1		*	E41-2685-05	PIN ASSY	
C501			CC73GCH1H100D	CHIP C 10PF D	E2M1M2	CN100		*	E41-2248-05	PIN ASSY	
C501			CC73GCH1H100D	CHIP C 10PF D	E3E4	CN800		*	E41-2979-05	FLAT CABLE CONNECTOR	
C501			CC73GCH1H100D	CHIP C 10PF D	E5K1K2	CN801		*	E41-2980-05	FLAT CABLE CONNECTOR	
C502			CD04AS1C101M	ELECTRO 100UF 16WV	KR1E1	J1			E58-1043-05	RECTANGULAR RECEPTACLE (POWER)	
C512-514			CK73GB1H103K	CHIP C 0.010UF K		J400			E58-1034-05	RECTANGULAR RECEPTACLE (TV-TU)	E1E2M1
C515			CK73GB1H102K	CHIP C 1000PF K	E3E4	J400			E58-1034-05	RECTANGULAR RECEPTACLE (TV-TU)	E3E4
C520			CC73GCH1H100D	CHIP C 10PF D	E2M1M2	J400			E58-1034-05	RECTANGULAR RECEPTACLE (TV-TU)	M2X1E5
C520			CC73GCH1H100D	CHIP C 10PF D	E3E4	J401		*	E58-1097-05	RECTANGULAR RECEPTACLE (EXT-IF)	E4K2
C520			CC73GCH1H100D	CHIP C 10PF D	E5K1K2	J401		*	E58-1097-05	RECTANGULAR RECEPTACLE (EXT-IF)	E5R1K1
C520			CC73GCH1H100D	CHIP C 10PF D	KR1E1	J401		*	E58-1097-05	RECTANGULAR RECEPTACLE (EXT-IF)	KM1M2
C521			CK73GB1H103K	CHIP C 0.010UF K	E2M1M2	J401		*	E58-1097-05	RECTANGULAR RECEPTACLE (EXT-IF)	X1E1E2
C521			CK73GB1H103K	CHIP C 0.010UF K	E3E4	J700			E63-0953-05	RCA PIN JACK (L/R)	
C521			CK73GB1H103K	CHIP C 0.010UF K	E5K1K2	W501		*	E30-6809-05	CORD WITH PLUG (ANT)	E5R1K1
C521			CK73GB1H103K	CHIP C 0.010UF K	KR1E1	W501		*	E30-6809-05	CORD WITH PLUG (ANT)	KM1M2
C522			CD04AS1V100M	ELECTRO 10UF 35WV	E2M1M2	W501		*	E30-6809-05	CORD WITH PLUG (ANT)	K2
C522			CD04AS1V100M	ELECTRO 10UF 35WV	E3E4	W501		*	E30-6809-05	CORD WITH PLUG (ANT)	X1E1E2
C522			CD04AS1V100M	ELECTRO 10UF 35WV	E5K1K2	257		*	F12-0962-04	SHIELDING TUBE (IN F/E CASE)	
C523			CC73GCH1H331J	CHIP C 330PF J	KR1E1	F1			F53-0297-05	FUSE (UL,CSA) 1.6A	
C523			CC73GCH1H331J	CHIP C 330PF J	E2M1M2	F2			F53-0306-05	FUSE (UL,CSA) 5A	E4K2
C523			CC73GCH1H331J	CHIP C 330PF J	E3E4	F2			F53-0306-05	FUSE (UL,CSA) 5A	E5R1K1
C523			CC73GCH1H331J	CHIP C 330PF J	E5K1K2	F2			F53-0306-05	FUSE (UL,CSA) 5A	KM1M2
C523			CC73GCH1H331J	CHIP C 330PF J	KR1E1	F2			F53-0306-05	FUSE (UL,CSA) 5A	X1E1E2
C524			CD04AS1V100M	ELECTRO 10UF 35WV	E2M1M2	L1			L33-2319-05	CHOKE COIL ASSY	
C524			CD04AS1V100M	ELECTRO 10UF 35WV	E3E4	L100			L92-0319-05	CHIP FERRITE	
C524			CD04AS1V100M	ELECTRO 10UF 35WV	E5K1K2	L101			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)	
C524			CD04AS1V100M	ELECTRO 10UF 35WV	KR1E1	L501-504			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)	
C526,527			CK73GB1H103K	CHIP C 0.010UF K	E2M1M2	L508			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)	E2M1M2
C526,527			CK73GB1H103K	CHIP C 0.010UF K	E3E4	L508			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)	E3E4
C526,527			CK73GB1H103K	CHIP C 0.010UF K	E5K1K2	L508			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)	E5K1K2
C526,527			CK73GB1H103K	CHIP C 0.010UF K	KR1E1	L508			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)	KR1E1
C527			CK73GB1H103K	CHIP C 0.010UF K	X1	L509			L92-0329-05	CHIP FERRITE	E3E4
C600			C90-6779-05	ELECTRO 0.47UF 16WV		X100		*	L77-2974-05	CRYSTAL RESONATOR (11.0592MHZ)	
C602			C90-6779-05	ELECTRO 0.47UF 16WV		X101			L77-2921-05	CRYSTAL RESONATOR (32.768KHZ)	
C616			CK73GB1A105K	CHIP C 1.0UF K		X500			L77-2002-05	CRYSTAL RESONATOR	E2M1M2
C619			CD04BM1E330M	ELECTRO 33UF 25WV							

E1: DDX5022 E2: DDX5022Y E3: DNX5220BT E4: DNX5220 E5: DDX52RY (Europe)

K: DDX512 K1: DNX5120 K2: DNX512EX (North America)

X1: DDX5032 (Australia) R1: DDX5032 (Latin America)

M1: DDX5032 M2: DDX5032M (Other Areas)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-575x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
X500			L77-2002-05	CRYSTAL RESONATOR	E3E4	R44			RK73GB2A683J	CHIP R 68K J 1/10W	
X500			L77-2002-05	CRYSTAL RESONATOR	E5K1K2	R46			RK73EB2E103J	CHIP R 10K J 1/4W	
X500			L77-2002-05	CRYSTAL RESONATOR	KR1E1	R48			RK73GB2A473J	CHIP R 47K J 1/10W	
B	2D		N35-2604-43	BINDING HEAD MACHINE SCREW	E4K2	R49,50			RK73GB2A104J	CHIP R 100K J 1/10W	
B	2D		N35-2604-43	BINDING HEAD MACHINE SCREW	E5R1K1	R51			RK73GB2A473J	CHIP R 47K J 1/10W	
B	2D		N35-2604-43	BINDING HEAD MACHINE SCREW	KM1M2						
B	2D		N35-2604-43	BINDING HEAD MACHINE SCREW	X1E1E2	R52			RK73GB2A472J	CHIP R 4.7K J 1/10W	
K	3D	*	N09-6727-05	TAPTITE SCREW		R53			RK73GB2A473J	CHIP R 47K J 1/10W	
						R54			RK73GB2A153J	CHIP R 15K J 1/10W	
						R55			RK73GB2A561J	CHIP R 560 J 1/10W	
L	2D		N82-3008-48	BINDING HEAD TAPTITE SCREW		R56			RK73EB2E622J	CHIP R 6.2K J 1/4W	
R2			RK73FB2B221J	CHIP R 220 J 1/8W		R57			RK73GB2A912J	CHIP R 9.1K J 1/10W	
R3			RK73GB2A103J	CHIP R 10K J 1/10W		R58			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R5			RK73FB2B223J	CHIP R 22K J 1/8W		R59			RK73EB2E622J	CHIP R 6.2K J 1/4W	
R6			RK73EB2E272J	CHIP R 2.7K J 1/4W		R100			RK73GB2A101J	CHIP R 100 J 1/10W	
R7			RK73GB2A101J	CHIP R 100 J 1/10W		R101			RK73GB2A104J	CHIP R 100K J 1/10W	E4
R8			RK73GB2A102J	CHIP R 1.0K J 1/10W		R101			RK73GB2A104J	CHIP R 100K J 1/10W	K1K2E3
R9			RK73GB2A101J	CHIP R 100 J 1/10W		R102			RK73GB2A473J	CHIP R 47K J 1/10W	
R10			RK73GB2A473J	CHIP R 47K J 1/10W		R106			RK73GB2A473J	CHIP R 47K J 1/10W	
R11			RK73GB2A100J	CHIP R 10 J 1/10W	E4	R107			RK73GB2A101J	CHIP R 100 J 1/10W	E4
R11			RK73GB2A100J	CHIP R 10 J 1/10W	K1K2E3	R107			RK73GB2A101J	CHIP R 100 J 1/10W	K1K2E3
R12			RK73FB2B472J	CHIP R 4.7K J 1/8W		R109			RK73GB2A473J	CHIP R 47K J 1/10W	E1E2M1
R13			RK73GB2A223J	CHIP R 22K J 1/10W		R109			RK73GB2A473J	CHIP R 47K J 1/10W	E3E4
R14			RK73PB2H102J	CHIP R 1.0K J 1/2W		R109			RK73GB2A473J	CHIP R 47K J 1/10W	M2X1E5
R15			RK73GB2A473J	CHIP R 47K J 1/10W		R110			RK73GB2A104J	CHIP R 100K J 1/10W	E4
R16			RK73PB2H102J	CHIP R 1.0K J 1/2W		R110			RK73GB2A104J	CHIP R 100K J 1/10W	K1K2E3
R17			RK73GB2A103J	CHIP R 10K J 1/10W		R112			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R18			RK73EB2E103J	CHIP R 10K J 1/4W		R113			RK73GB2A473J	CHIP R 47K J 1/10W	
R19			RK73GB2A000J	CHIP R 0.0 J 1/10W	E1E2E5	R114			RK73GB2A101J	CHIP R 100 J 1/10W	E1E2M1
R19			RK73GB2A000J	CHIP R 0.0 J 1/10W	E3E4	R114			RK73GB2A101J	CHIP R 100 J 1/10W	E3E4
R20			RK73GB2A100J	CHIP R 10 J 1/10W		R114			RK73GB2A101J	CHIP R 100 J 1/10W	M2X1E5
R21			RK73GB2A223J	CHIP R 22K J 1/10W		R115			RK73GB2A100J	CHIP R 10 J 1/10W	E4
R22			RK73EB2E272J	CHIP R 2.7K J 1/4W		R115			RK73GB2A100J	CHIP R 10 J 1/10W	K1K2E3
R23			RK73GH2A243D	CHIP R 24K D 1/10W		R118			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R24			RK73GH2A432D	CHIP R 4.3K D 1/10W		R119			RK73GH2A333D	CHIP R 33K D 1/10W	
R25			RK73FB2B222J	CHIP R 2.2K J 1/8W		R120			RK73GH2A222D	CHIP R 2.2K D 1/10W	
R26			RK73GB2A102J	CHIP R 1.0K J 1/10W		R121			RK73GH2A153D	CHIP R 15K D 1/10W	
R27			RK73GB2A103J	CHIP R 10K J 1/10W	KR1M1	R122			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R27			RK73GB2A103J	CHIP R 10K J 1/10W	K2	R125			RK73GB2A473J	CHIP R 47K J 1/10W	E1E2M1
R27			RK73GB2A103J	CHIP R 10K J 1/10W	M2X1K1	R125			RK73GB2A473J	CHIP R 47K J 1/10W	E3E4
R28			RK73GB2A222J	CHIP R 2.2K J 1/10W	KR1M1	R125			RK73GB2A473J	CHIP R 47K J 1/10W	M2X1E5
R28			RK73GB2A222J	CHIP R 2.2K J 1/10W	K2	R126,127			RK73GB2A103J	CHIP R 10K J 1/10W	
R28			RK73GB2A222J	CHIP R 2.2K J 1/10W	M2X1K1	R128			RK73GB2A473J	CHIP R 47K J 1/10W	KR1K1
R29			RK73GB2A105J	CHIP R 1.0M J 1/10W		R128			RK73GB2A473J	CHIP R 47K J 1/10W	K2
R30			RK73EB2E102J	CHIP R 1.0K J 1/4W		R128-131			RK73GB2A473J	CHIP R 47K J 1/10W	E1E2M1
R31			RK73FB2B472J	CHIP R 4.7K J 1/8W		R128-131			RK73GB2A473J	CHIP R 47K J 1/10W	E3E4
R32			RK73GB2A104J	CHIP R 100K J 1/10W		R128-131			RK73GB2A473J	CHIP R 47K J 1/10W	M2X1E5
R33,34			RK73PB2H102J	CHIP R 1.0K J 1/2W	KR1M1	R130,131			RK73GB2A473J	CHIP R 47K J 1/10W	KR1K1
R33,34			RK73PB2H102J	CHIP R 1.0K J 1/2W	K2	R130,131			RK73GB2A473J	CHIP R 47K J 1/10W	K2
R33,34			RK73PB2H102J	CHIP R 1.0K J 1/2W	M2X1K1	R133,134			RK73GB2A473J	CHIP R 47K J 1/10W	
R35			RK73GB2A103J	CHIP R 10K J 1/10W	KR1M1	R135			RK73GB2A101J	CHIP R 100 J 1/10W	
R35			RK73GB2A103J	CHIP R 10K J 1/10W	K2	R136			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R35			RK73GB2A103J	CHIP R 10K J 1/10W	M2X1K1	R137-142			RK73GB2A101J	CHIP R 100 J 1/10W	E1E2M1
R36			RK73GB2A153J	CHIP R 15K J 1/10W		R137-142			RK73GB2A101J	CHIP R 100 J 1/10W	E3E4
R37			RK73GB2A103J	CHIP R 10K J 1/10W		R137-142			RK73GB2A101J	CHIP R 100 J 1/10W	M2X1E5
R38			RK73GB2A822J	CHIP R 8.2K J 1/10W		R139-141			RK73GB2A101J	CHIP R 100 J 1/10W	KR1K1

E1: DDX5022 E2: DDX5022Y E3: DNX5220BT E4: DNX5220 E5: DDX52RY (Europe)

△Indicates safety critical components.

K: DDX512 K1: DNX5120 K2: DNX512EX (North America)

X1: DDX5032 (Australia) R1: DDX5032 (Latin America)

M1: DDX5032 M2: DDX5032M (Other Areas)

PARTS LIST

ELECTRIC UNIT (X34-575x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R139-141			RK73GB2A101J	CHIP R 100 J 1/10W	K2	R188			RK73GB2A222J	CHIP R 2.2K J 1/10W	E3E4
R143			RK73GB2A102J	CHIP R 1.0K J 1/10W		R188			RK73GB2A222J	CHIP R 2.2K J 1/10W	E5K1K2
R144			RK73GB2A472J	CHIP R 4.7K J 1/10W		R188			RK73GB2A222J	CHIP R 2.2K J 1/10W	KR1E1
R145			RK73GB2A473J	CHIP R 47K J 1/10W		R189			RK73GB2A103J	CHIP R 10K J 1/10W	X1
R146,147			RK73GB2A101J	CHIP R 100 J 1/10W		R190			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R148			RK73GB2A102J	CHIP R 1.0K J 1/10W		R191,192			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R149			RK73GB2A101J	CHIP R 100 J 1/10W		R193			RK73GB2A101J	CHIP R 100 J 1/10W	
R150			RK73GB2A302J	CHIP R 3.0K J 1/10W		R194			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R151			RK73GB2A623J	CHIP R 62K J 1/10W		R195			RK73GB2A153J	CHIP R 15K J 1/10W	
R152			RK73GB2A101J	CHIP R 100 J 1/10W		R196			RK73GB2A103J	CHIP R 10K J 1/10W	E4
R153			RK73GB2A222J	CHIP R 2.2K J 1/10W		R196			RK73GB2A103J	CHIP R 10K J 1/10W	R1E1E2
R154			RK73GB2A101J	CHIP R 100 J 1/10W		R196			RK73GB2A103J	CHIP R 10K J 1/10W	X1E5E3
R155			RK73GB2A000J	CHIP R 0.0 J 1/10W		R196,197			RK73GB2A103J	CHIP R 10K J 1/10W	M1M2
R156			RK73GB2A101J	CHIP R 100 J 1/10W		R197			RK73GB2A103J	CHIP R 10K J 1/10W	KK1K2
R157			RK73GB2A473J	CHIP R 47K J 1/10W	KR1K1	R197			RK73GB2A303J	CHIP R 30K J 1/10W	X1
R157			RK73GB2A473J	CHIP R 47K J 1/10W	K2	R197			RK73GB2A332J	CHIP R 3.3K J 1/10W	E1E2E5
R157-159			RK73GB2A473J	CHIP R 47K J 1/10W	E1E2M1	R197			RK73GB2A332J	CHIP R 3.3K J 1/10W	E3E4
R157-159			RK73GB2A473J	CHIP R 47K J 1/10W	E3E4	R198			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R157-159			RK73GB2A473J	CHIP R 47K J 1/10W	M2X1E5	R200			RK73GB2A101J	CHIP R 100 J 1/10W	
R159			RK73GB2A473J	CHIP R 47K J 1/10W	KR1K1	R202			RK73GB2A153J	CHIP R 15K J 1/10W	
R159			RK73GB2A473J	CHIP R 47K J 1/10W	K2	R203			RK73GB2A101J	CHIP R 100 J 1/10W	
R160			RK73GB2A101J	CHIP R 100 J 1/10W		R208			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R161			RK73GB2A222J	CHIP R 2.2K J 1/10W		R209-213			RK73GB2A101J	CHIP R 100 J 1/10W	
R164			RK73GB2A471J	CHIP R 470 J 1/10W		R215			RK73GB2A103J	CHIP R 10K J 1/10W	E4K2
R165			RK73GB2A682J	CHIP R 6.8K J 1/10W		R215			RK73GB2A103J	CHIP R 10K J 1/10W	E5R1K1
R166			RK73GB2A472J	CHIP R 4.7K J 1/10W		R215			RK73GB2A103J	CHIP R 10K J 1/10W	KM1M2
R168			RK73GB2A471J	CHIP R 470 J 1/10W		R215			RK73GB2A103J	CHIP R 10K J 1/10W	X1E1E2
R169			RK73GB2A104J	CHIP R 100K J 1/10W		R216			RK73GB2A103J	CHIP R 10K J 1/10W	E3
R170			RK73GB2A472J	CHIP R 4.7K J 1/10W		R222			RK73GB2A104J	CHIP R 100K J 1/10W	
R172			RK73GB2A101J	CHIP R 100 J 1/10W	E2M1M2	R223			RK73GB2A101J	CHIP R 100 J 1/10W	
R172			RK73GB2A101J	CHIP R 100 J 1/10W	E3E4	R224			RK73GB2A473J	CHIP R 47K J 1/10W	
R172			RK73GB2A101J	CHIP R 100 J 1/10W	E5K1K2	R225,226			RK73GB2A101J	CHIP R 100 J 1/10W	E1E2M1
R172			RK73GB2A101J	CHIP R 100 J 1/10W	KR1E1	R225,226			RK73GB2A101J	CHIP R 100 J 1/10W	E3E4
R173			RK73GB2A682J	CHIP R 6.8K J 1/10W		R225,226			RK73GB2A101J	CHIP R 100 J 1/10W	M2X1E5
R174,175			RK73GB2A473J	CHIP R 47K J 1/10W	E2M1M2	R226			RK73GB2A101J	CHIP R 100 J 1/10W	KR1K1
R174,175			RK73GB2A473J	CHIP R 47K J 1/10W	E3E4	R226			RK73GB2A101J	CHIP R 100 J 1/10W	K2
R174,175			RK73GB2A473J	CHIP R 47K J 1/10W	E5K1K2	R227			RK73GB2A104J	CHIP R 100K J 1/10W	E1E2M1
R174,175			RK73GB2A473J	CHIP R 47K J 1/10W	KR1E1	R227			RK73GB2A104J	CHIP R 100K J 1/10W	E3E4
R175			RK73GB2A473J	CHIP R 47K J 1/10W	X1	R227			RK73GB2A104J	CHIP R 100K J 1/10W	M2X1E5
R177			RK73GB2A473J	CHIP R 47K J 1/10W	E2M1M2	R228-233			RK73GB2A101J	CHIP R 100 J 1/10W	
R177			RK73GB2A473J	CHIP R 47K J 1/10W	E3E4	R234,235			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R177			RK73GB2A473J	CHIP R 47K J 1/10W	E5K1K2	R236			RK73GB2A104J	CHIP R 100K J 1/10W	
R177			RK73GB2A473J	CHIP R 47K J 1/10W	KR1E1	R237			RK73GB2A473J	CHIP R 47K J 1/10W	
R180			RK73GB2A103J	CHIP R 10K J 1/10W		R238-253			RK73GB2A101J	CHIP R 100 J 1/10W	
R181			RK73GB2A104J	CHIP R 100K J 1/10W		R254			RK73GB2A473J	CHIP R 47K J 1/10W	
R182			RK73GB2A103J	CHIP R 10K J 1/10W	E4	R255-258			RK73GB2A104J	CHIP R 100K J 1/10W	
R182			RK73GB2A103J	CHIP R 10K J 1/10W	K1K2E3	R259			RK73GB2A153J	CHIP R 15K J 1/10W	
R183			RK73GB2A473J	CHIP R 47K J 1/10W		R260,261			RK73GB2A104J	CHIP R 100K J 1/10W	
R184			RK73GB2A103J	CHIP R 10K J 1/10W	E5R1	R263			RK73GB2A103J	CHIP R 10K J 1/10W	
R184			RK73GB2A103J	CHIP R 10K J 1/10W	KM1M2	R302			RK73EB2E2R2J	CHIP R 2.2 J 1/4W	
R184			RK73GB2A103J	CHIP R 10K J 1/10W	X1E1E2	R303-306			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R185			RK73GB2A222J	CHIP R 2.2K J 1/10W		R307-310			RK73GB2A101J	CHIP R 100 J 1/10W	
R186			RK73GB2A223J	CHIP R 22K J 1/10W		R311,312			RK73GB2A103J	CHIP R 10K J 1/10W	
R187			RK73GB2A473J	CHIP R 47K J 1/10W		R317			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R188			RK73GB2A222J	CHIP R 2.2K J 1/10W	E2M1M2	R318			RK73GB2A104J	CHIP R 100K J 1/10W	

E1: DDX5022 E2: DDX5022Y E3: DNX5220BT E4: DNX5220 E5: DDX52RY (Europe)

△ Indicates safety critical components.

K: DDX512 K1: DNX5120 K2: DNX512EX (North America)

X1: DDX5032 (Australia) R1: DDX5032 (Latin America)

M1: DDX5032 M2: DDX5032M (Other Areas)

PARTS LIST

ELECTRIC UNIT (X34-575x-xx)

Ref. No.	Ad	New	Parts No.	Description	Desti- nation	Ref. No.	Ad	New	Parts No.	Description	Desti- nation
R319,320 R321,322 R323,324 R325-327 R329			RK73GB2A102J RK73GB2A103J RK73GB2A101J RK73GB2A103J RK73GB2A103J	CHIP R 1.0K J 1/10W CHIP R 10K J 1/10W CHIP R 100 J 1/10W CHIP R 10K J 1/10W CHIP R 10K J 1/10W		R440 R441 R441 R441 R441			RK73EB2E101J RK73EB2E432J RK73EB2E432J RK73EB2E432J RK73EB2E432J	CHIP R 100 J 1/4W CHIP R 4.3K J 1/4W CHIP R 4.3K J 1/4W CHIP R 4.3K J 1/4W CHIP R 4.3K J 1/4W	X1E1E2 E4K2 E5R1K1 KM1M2 X1E1E2
R400,401 R400,401 R400,401 R402 R402			RK73GB2A100J RK73GB2A100J RK73GB2A100J RK73GB2A222J RK73GB2A222J	CHIP R 10 J 1/10W CHIP R 10 J 1/10W CHIP R 10 J 1/10W CHIP R 2.2K J 1/10W CHIP R 2.2K J 1/10W	E1E2M1 E3E4 M2X1E5 E1E2M1 E3E4	R442 R442 R442 R442 R443			RK73EB2E100J RK73EB2E100J RK73EB2E100J RK73EB2E100J RK73EB2E4R7J	CHIP R 10 J 1/4W CHIP R 10 J 1/4W CHIP R 10 J 1/4W CHIP R 10 J 1/4W CHIP R 4.7 J 1/4W	E4K2 E5R1K1 KM1M2 X1E1E2 E4K2
R402 R403 R403 R403 R404,405			RK73GB2A222J RK73GB2A102J RK73GB2A102J RK73GB2A102J RK73GB2A100J	CHIP R 2.2K J 1/10W CHIP R 1.0K J 1/10W CHIP R 1.0K J 1/10W CHIP R 1.0K J 1/10W CHIP R 10 J 1/10W	M2X1E5 E1E2M1 E3E4 M2X1E5 E1E2M1	R443 R443 R443 R443 R444			RK73EB2E4R7J RK73EB2E4R7J RK73EB2E4R7J RK73EB2E100J RK73EB2E100J	CHIP R 4.7 J 1/4W CHIP R 4.7 J 1/4W CHIP R 4.7 J 1/4W CHIP R 10 J 1/4W CHIP R 10 J 1/4W	E5R1K1 KM1M2 X1E1E2 E4K2 E5R1K1
R404,405 R404,405 R406 R406 R406			RK73GB2A100J RK73GB2A100J RK73EB2E100J RK73EB2E100J RK73EB2E100J	CHIP R 10 J 1/10W CHIP R 10 J 1/10W CHIP R 10 J 1/4W CHIP R 10 J 1/4W CHIP R 10 J 1/4W	E3E4 M2X1E5 E1E2M1 E3E4 M2X1E5	R444 R444 R445 R445 R445			RK73EB2E100J RK73EB2E100J RK73GB2A100J RK73GB2A100J RK73GB2A100J	CHIP R 10 J 1/4W CHIP R 10 J 1/4W CHIP R 10 J 1/10W CHIP R 10 J 1/10W CHIP R 10 J 1/10W	KM1M2 X1E1E2 E4K2 E5R1K1 KM1M2
R407 R407 R407 R408 R408			RK73EB2E4R7J RK73EB2E4R7J RK73EB2E4R7J RK73EB2E100J RK73EB2E100J	CHIP R 4.7 J 1/4W CHIP R 4.7 J 1/4W CHIP R 4.7 J 1/4W CHIP R 10 J 1/4W CHIP R 10 J 1/4W	E1E2M1 E3E4 M2X1E5 E1E2M1 E3E4	R445 R446 R446 R446 R446			RK73GB2A100J RK73GB2A473J RK73GB2A473J RK73GB2A473J RK73GB2A473J	CHIP R 10 J 1/10W CHIP R 47K J 1/10W CHIP R 47K J 1/10W CHIP R 47K J 1/10W CHIP R 47K J 1/10W	X1E1E2 E4K2 E5R1K1 KM1M2 X1E1E2
R408 R409-411 R409-411 R409-411 R412-414			RK73EB2E100J RK73EB2E102J RK73EB2E102J RK73EB2E102J RK73EB2E101J	CHIP R 10 J 1/4W CHIP R 1.0K J 1/4W CHIP R 1.0K J 1/4W CHIP R 1.0K J 1/4W CHIP R 100 J 1/4W	M2X1E5 E1E2M1 E3E4 M2X1E5 E1E2M1	R447 R447 R447 R447 R448			RK73GB2A104J RK73GB2A104J RK73GB2A104J RK73GB2A104J RK73GB2A473J	CHIP R 100K J 1/10W CHIP R 100K J 1/10W CHIP R 100K J 1/10W CHIP R 100K J 1/10W CHIP R 47K J 1/10W	E4K2 E5R1K1 KM1M2 X1E1E2 E4K2
R412-414 R412-414 R415,416 R415,416 R415,416			RK73EB2E101J RK73EB2E101J RK73EB2E102J RK73EB2E102J RK73EB2E102J	CHIP R 100 J 1/4W CHIP R 100 J 1/4W CHIP R 1.0K J 1/4W CHIP R 1.0K J 1/4W CHIP R 1.0K J 1/4W	E3E4 M2X1E5 E1E2M1 E3E4 M2X1E5	R448 R448 R448 R451-453 R451-453			RK73GB2A473J RK73GB2A473J RK73GB2A473J RK73GB2A100J RK73GB2A100J	CHIP R 47K J 1/10W CHIP R 47K J 1/10W CHIP R 47K J 1/10W CHIP R 10 J 1/10W CHIP R 10 J 1/10W	E5R1K1 KM1M2 X1E1E2 E4K2 E5R1K1
R417 R417 R417 R418 R418			RK73EB2E101J RK73EB2E101J RK73EB2E101J RK73GB2A100J RK73GB2A100J	CHIP R 100 J 1/4W CHIP R 100 J 1/4W CHIP R 100 J 1/4W CHIP R 10 J 1/10W CHIP R 10 J 1/10W	E1E2M1 E3E4 M2X1E5 E1E2M1 E3E4	R451-453 R451-453 R454 R454 R454			RK73GB2A100J RK73GB2A100J RK73GB2A102J RK73GB2A102J RK73GB2A102J	CHIP R 10 J 1/10W CHIP R 10 J 1/10W CHIP R 1.0K J 1/10W CHIP R 1.0K J 1/10W CHIP R 1.0K J 1/10W	KM1M2 X1E1E2 E4K2 E5R1K1 KM1M2
R418 R419 R419 R419 R438			RK73GB2A100J RK73GB2A750J RK73GB2A750J RK73GB2A750J RK73EB2E432J	CHIP R 10 J 1/10W CHIP R 75 J 1/10W CHIP R 75 J 1/10W CHIP R 75 J 1/10W CHIP R 4.3K J 1/4W	M2X1E5 E1E2M1 E3E4 M2X1E5 E4K2	R454 R455 R455 R455 R455			RK73GB2A102J RK73GB2A222J RK73GB2A222J RK73GB2A222J RK73GB2A222J	CHIP R 1.0K J 1/10W CHIP R 2.2K J 1/10W CHIP R 2.2K J 1/10W CHIP R 2.2K J 1/10W CHIP R 2.2K J 1/10W	X1E1E2 E4K2 E5R1K1 KM1M2 X1E1E2
R438 R438 R438 R439 R439			RK73EB2E432J RK73EB2E432J RK73EB2E432J RK73EB2E472J RK73EB2E472J	CHIP R 4.3K J 1/4W CHIP R 4.3K J 1/4W CHIP R 4.3K J 1/4W CHIP R 4.7K J 1/4W CHIP R 4.7K J 1/4W	E5R1K1 KM1M2 X1E1E2 E4K2 E5R1K1	R456 R456 R456 R456 R458			RK73EB2E103J RK73EB2E103J RK73EB2E103J RK73EB2E103J RK73GB2A104J	CHIP R 10K J 1/4W CHIP R 10K J 1/4W CHIP R 10K J 1/4W CHIP R 10K J 1/4W CHIP R 100K J 1/10W	E4K2 E5R1K1 KM1M2 X1E1E2
R439 R439 R440 R440 R440			RK73EB2E472J RK73EB2E472J RK73EB2E101J RK73EB2E101J RK73EB2E101J	CHIP R 4.7K J 1/4W CHIP R 4.7K J 1/4W CHIP R 100 J 1/4W CHIP R 100 J 1/4W CHIP R 100 J 1/4W	KM1M2 X1E1E2 E4K2 E5R1K1 KM1M2	R500 R501 R502 R503 R505-507			RK73FB2B152J RK73GB2A102J RK73GB2A223J RK73GB2A100J RK73GB2A222J	CHIP R 1.5K J 1/8W CHIP R 1.0K J 1/10W CHIP R 22K J 1/10W CHIP R 10 J 1/10W CHIP R 2.2K J 1/10W	E2M1M2

E1: DDX5022 E2: DDX5022Y E3: DNX5220BT E4: DNX5220 E5: DDX52RY (Europe)

△Indicates safety critical components.

K: DDX512 K1: DNX5120 K2: DNX512EX (North America)

X1: DDX5032 (Australia) R1: DDX5032 (Latin America)

M1: DDX5032 M2: DDX5032M (Other Areas)

PARTS LIST

ELECTRIC UNIT (X34-575x-xx)

Ref. No.	Ad	New	Parts No.	Description	Destination	Ref. No.	Ad	New	Parts No.	Description	Destination
R505-507			RK73GB2A222J	CHIP R 2.2K J 1/10W	E3E4	W310,311			R92-1252-05	CHIP R 0 OHM J 1/16W	E5R1K1
R505-507			RK73GB2A222J	CHIP R 2.2K J 1/10W	E5K1K2	W310,311			R92-1252-05	CHIP R 0 OHM J 1/16W	KM1M2
R505-507			RK73GB2A222J	CHIP R 2.2K J 1/10W	KR1E1	W310,311			R92-1252-05	CHIP R 0 OHM J 1/16W	X1E1E2
R600,601			RK73GB2A470J	CHIP R 47 J 1/10W		W800			R92-1252-05	CHIP R 0 OHM J 1/16W	
R603,604			RK73GB2A470J	CHIP R 47 J 1/10W		W802			R92-1252-05	CHIP R 0 OHM J 1/16W	
R605			RK73GB2A333J	CHIP R 33K J 1/10W		D1			RB160L-40	DIODE	
R606			RK73GB2A331J	CHIP R 330 J 1/10W		D2			UDZS5.6B	ZENER DIODE	
R607			RK73GB2A682J	CHIP R 6.8K J 1/10W		D3			DAP202U	DIODE	
R608			RK73GB2A221J	CHIP R 220 J 1/10W		D4			DAN202U	DIODE	
R609			RK73GB2A223J	CHIP R 22K J 1/10W		D6,7			1SR154-400	DIODE	
R610			RK73GB2A432J	CHIP R 4.3K J 1/10W		D8			DAN202U	DIODE	
R611			RK73GB2A100J	CHIP R 10 J 1/10W		D9			1SR154-400	DIODE	
R700			RK73FB2B101J	CHIP R 100 J 1/8W		D10			DAN202U	DIODE	
R701			RK73GB2A471J	CHIP R 470 J 1/10W		D11			1SR154-400	DIODE	
R702			RK73GB2A223J	CHIP R 22K J 1/10W		D12			UDZS6.2B	ZENER DIODE	
R705			RK73GB2A223J	CHIP R 22K J 1/10W		D13			UDZS6.8B	ZENER DIODE	
R707			RK73FB2B101J	CHIP R 100 J 1/8W		D15			UDZS6.8B	ZENER DIODE	
R708			RK73GB2A471J	CHIP R 470 J 1/10W		D17			RM4ZLF-J1NF	DIODE	
R709			RK73FB2B101J	CHIP R 100 J 1/8W		D18			UDZS4.7B	ZENER DIODE	
R710			RK73GB2A471J	CHIP R 470 J 1/10W		D19			UDZS6.2B	ZENER DIODE	
R712			RK73GB2A223J	CHIP R 22K J 1/10W		D20			DAN202U	DIODE	
R716			RK73GB2A223J	CHIP R 22K J 1/10W		D300,301			DAP202U	DIODE	
R717			RK73FB2B101J	CHIP R 100 J 1/8W		D302,303			UDZS6.8B	ZENER DIODE	
R718			RK73GB2A471J	CHIP R 470 J 1/10W		D304-306			DAP202U	DIODE	
R719			RK73FB2B101J	CHIP R 100 J 1/8W		D307			UDZS6.8B	ZENER DIODE	
R720			RK73GB2A471J	CHIP R 470 J 1/10W		D400			UDZS4.7B	ZENER DIODE	E1E2M1
R721			RK73GB2A223J	CHIP R 22K J 1/10W		D400			UDZS4.7B	ZENER DIODE	E3E4
R724			RK73GB2A223J	CHIP R 22K J 1/10W		D400			UDZS4.7B	ZENER DIODE	M2X1E5
R725			RK73FB2B101J	CHIP R 100 J 1/8W		D401			DAP202U	DIODE	E1E2M1
R726			RK73GB2A471J	CHIP R 470 J 1/10W		D401			DAP202U	DIODE	E3E4
R800,801			RK73GB2A102J	CHIP R 1.0K J 1/10W		D401			DAP202U	DIODE	M2X1E5
R802-811			RK73GB2A101J	CHIP R 100 J 1/10W		D402,403			UDZS6.2B	ZENER DIODE	E1E2M1
R812			RK73GB2A102J	CHIP R 1.0K J 1/10W		D402,403			UDZS6.2B	ZENER DIODE	E3E4
R813			RK73FB2B100J	CHIP R 10 J 1/8W		D402,403			UDZS6.2B	ZENER DIODE	M2X1E5
R814			RK73FB2B4R7J	CHIP R 4.7 J 1/8W		D404,405			UDZS6.8B	ZENER DIODE	E1E2M1
R818			RK73FB2B100J	CHIP R 10 J 1/8W		D404,405			UDZS6.8B	ZENER DIODE	E3E4
R819,820			RK73GB2A103J	CHIP R 10K J 1/10W		D404,405			UDZS6.8B	ZENER DIODE	M2X1E5
R821			RK73GB2A000J	CHIP R 0.0 J 1/10W		D406-413			UDZS6.2B	ZENER DIODE	E1E2M1
R822			RK73FB2B821J	CHIP R 820 J 1/8W		D406-413			UDZS6.2B	ZENER DIODE	E3E4
R823			RK73GB2A100J	CHIP R 10 J 1/10W		D406-413			UDZS6.2B	ZENER DIODE	M2X1E5
W4			R92-1252-05	CHIP R 0 OHM J 1/16W		D417			UDZS6.2B	ZENER DIODE	E1E2M1
W100			R92-1252-05	CHIP R 0 OHM J 1/16W		D417			UDZS6.2B	ZENER DIODE	E3E4
W102-104			R92-1252-05	CHIP R 0 OHM J 1/16W	E5R1	D417			UDZS6.2B	ZENER DIODE	M2X1E5
W102-104			R92-1252-05	CHIP R 0 OHM J 1/16W	KM1M2	D418			DA204U	DIODE	
W102-104			R92-1252-05	CHIP R 0 OHM J 1/16W	X1E1E2	D419-421			UDZS6.2B	ZENER DIODE	E4K2
W102,103			R92-1252-05	CHIP R 0 OHM J 1/16W	E4	D419-421			UDZS6.2B	ZENER DIODE	E5R1K1
W102,103			R92-1252-05	CHIP R 0 OHM J 1/16W	K1K2E3	D419-421			UDZS6.2B	ZENER DIODE	KM1M2
W105			R92-2052-05	CHIP R 0 OHM J 1/10W		D419-421			UDZS6.2B	ZENER DIODE	X1E1E2
W300-303			R92-1252-05	CHIP R 0 OHM J 1/16W	KR1K1	D422,423			UDZS6.8B	ZENER DIODE	E4K2
W300-303			R92-1252-05	CHIP R 0 OHM J 1/16W	K2	D422,423			UDZS6.8B	ZENER DIODE	E5R1K1
W300,301			R92-1252-05	CHIP R 0 OHM J 1/16W	E1E2M1	D422,423			UDZS6.8B	ZENER DIODE	KM1M2
W300,301			R92-1252-05	CHIP R 0 OHM J 1/16W	E3E4	D422,423			UDZS6.8B	ZENER DIODE	X1E1E2
W300,301			R92-1252-05	CHIP R 0 OHM J 1/16W	M2X1E5	D424-426			UDZS6.2B	ZENER DIODE	E4K2
W304-309			R92-1252-05	CHIP R 0 OHM J 1/16W	E3	D424-426			UDZS6.2B	ZENER DIODE	E5R1K1
W310,311			R92-1252-05	CHIP R 0 OHM J 1/16W	E4K2	D424-426			UDZS6.2B	ZENER DIODE	KM1M2

E1: DDX5022 E2: DDX5022Y E3: DNX5220BT E4: DNX5220 E5: DDX52RY (Europe)

△ Indicates safety critical components.

K: DDX512 K1: DNX5120 K2: DNX512EX (North America)

X1: DDX5032 (Australia) R1: DDX5032 (Latin America)

M1: DDX5032 M2: DDX5032M (Other Areas)

PARTS LIST

ELECTRIC UNIT (X34-575x-xx)

Ref. No.	Ad	New	Parts No.	Description	Desti- nation	Ref. No.	Ad	New	Parts No.	Description	Desti- nation
D424-426 D427 D427 D427 D427			UDZS6.2B UDZS4.7B UDZS4.7B UDZS4.7B UDZS4.7B	ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE	X1E1E2 E4K2 E5R1K1 KM1M2 X1E1E2	Q6 Q7 Q8 Q9 Q10			DTC143EUA DTC144EUA 2SC4081 DTA114EUA 2SA1576A	DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	
D430 D430 D430 D430 D431			DAP202U DAP202U DAP202U DAP202U 1SS355	DIODE DIODE DIODE DIODE DIODE	E4K2 E5R1K1 KM1M2 X1E1E2 E4K2	Q11 Q12 Q13 Q14 Q14			DTC143ZUA 2SB1689 DTC124EUA 2SB1188 (R) 2SB1188 (R)	DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR	KR1M1 K2
D431 D431 D431 D500 D600,601			1SS355 1SS355 1SS355 UDZS9.1B DAP202U	DIODE DIODE DIODE ZENER DIODE DIODE	E5R1K1 KM1M2 X1E1E2	Q14 Q15 Q16,17 Q16,17 Q16,17			2SB1188 (R) DTC144EUA 2SC4081 2SC4081 2SC4081	TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	M2X1K1 KR1M1 K2 M2X1K1
D704-707 D710,711 D712 D802-806 D808-812			DAP202U DAP202U DA204U CVS10A120M CVS10A120M	DIODE DIODE DIODE VARISTOR VARISTOR		Q17 Q17 Q20 Q21 Q22			2SC4081 2SC4081 2SC4081 DTC144EUA 2SB1689	TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	E1E2E5 E3E4
D816 IC1 IC2 IC100 IC101			UDZS10B M5237ML-CF0J R1114N331B-TR 74AHC1G08GW S-80835CNNB-G	ZENER DIODE ANALOGUE IC ANALOGUE IC (3.3V LF) MOS-IC MOS-IC		Q23 Q24 Q25 Q100 Q100			2SC4081 DTA124EUA DTC143ZUA DTC144EUA DTC144EUA	TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	E4 K1K2E3
IC103 IC103 IC103 IC103 IC103			W05-1387-00 W05-1388-00 W05-1388-00 W05-1389-00 W05-1390-00	ROM IC ROM IC ROM IC ROM IC ROM IC	KK1K2 E1E2E3 E4E5 M1M2 R1X1	Q101 Q101 Q102 Q102 Q103,104			2SA1576A 2SA1576A DTA114EUA DTA114EUA DTC114TUA	TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	E4 K1K2E3 E4 K1K2E3
IC103 IC104 IC105 IC105 IC302		*	W05-1391-00 30878MJBA21GP 74AHCT1G08GW 74AHCT1G08GW E-TDA7415CB	ROM IC MICROCONTROLLER IC MOS-IC MOS-IC ANALOGUE IC	V E4 K1K2E3	Q105 Q107 Q108 Q110 Q111			DTA114TUA DTA114EUA 2SC4081 DTA114YUA 2SC4081	DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	
IC303,304 IC400 IC400,401 IC400,401 IC400,401			TC4052BFT NJM2794RB2ZB NJM2794RB2ZB NJM2794RB2ZB NJM2794RB2ZB	MOS-IC ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC	E3 E1E2M1 E4 M2X1E5	Q112 Q113-115 Q116 Q117 Q118			DTC143ZUA 2SC4081 2SA1576A 2SC4081 2SA1576A	DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
IC401 IC401 IC402 IC402 IC402			NJM2794RB2ZB NJM2794RB2ZB TC7WHU04FU-F TC7WHU04FU-F TC7WHU04FU-F	ANALOGUE IC ANALOGUE IC MOS-IC MOS-IC MOS-IC	KR1K1 K2 E1E2M1 E3E4 M2X1E5	Q300,301 Q303-305 Q303-305 Q303-305 Q304,305			DTC143ZUA DTC143ZUA DTC143ZUA DTC143ZUA DTC143ZUA	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	E1E2M1 E3E4 M2X1E5 KR1K1
IC500 IC500 IC500 IC500 IC600			E-TDA7478AD E-TDA7478AD E-TDA7478AD E-TDA7478AD E-TDA7850A	ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC	E2M1M2 E3E4 E5K1K2 KR1E1	Q304,305 Q403 Q403 Q403 Q403			DTC143ZUA DTC143ZUA DTC143ZUA DTC143ZUA DTC143ZUA	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	K2 E4K2 E5R1K1 KM1M2 X1E1E2
Q1 Q2 Q3 Q4 Q5			KTA1046-P DTA124EUA 2SB1188 (R) 2SA1576A KTA1046-P	TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR		Q406 Q406 Q406 Q406 Q407			TPC8110-F TPC8110-F TPC8110-F TPC8110-F DTA114YUA	FET FET FET FET DIGITAL TRANSISTOR	E4K2 E5R1K1 KM1M2 X1E1E2 E4K2

E1: DDX5022 E2: DDX5022Y E3: DNX5220BT E4: DNX5220 E5: DDX52RY (Europe)

K: DDX512 K1: DNX5120 K2: DNX512EX (North America)

X1: DDX5032 (Australia) R1: DDX5032 (Latin America)

M1: DDX5032 M2: DDX5032M (Other Areas)

△Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-575x-xx)

Ref. No.	Ad	New	Parts No.	Description	Destination	Ref. No.	Ad	New	Parts No.	Description	Destination
Q407			DTA114YUA	DIGITAL TRANSISTOR	E5R1K1	C105			CK73GB1H103K	CHIP C 0.010UF K	
Q407			DTA114YUA	DIGITAL TRANSISTOR	KM1M2	C107			CK73GB1H104K	CHIP C 0.10UF K	
Q407			DTA114YUA	DIGITAL TRANSISTOR	X1E1E2	C108			CK73DF1E106Z	CHIP C 10UF Z	
Q500			DTC144EUA	DIGITAL TRANSISTOR		C109			CK73GB1H103K	CHIP C 0.010UF K	
Q501			DTA144EUA	DIGITAL TRANSISTOR		C112			CK73FB1E154K	CHIP C 0.15UF K	
Q502			2SB1449 (R)-E	TRANSISTOR		C113			CK73GB1H104K	CHIP C 0.10UF K	
Q503			2SC4081	TRANSISTOR		C114			CC73GCH1H151J	CHIP C 150PF J	
Q504			DTC143ZUA	DIGITAL TRANSISTOR		C115,116			CK73GB1C224K	CHIP C 0.22UF K	
Q505			2SA1577	TRANSISTOR		C117			CC73GCH1H151J	CHIP C 150PF J	
Q700-702			DTC143ZUA	DIGITAL TRANSISTOR		C118			CK73EB1E225K	CHIP C 2.2UF K	
Q703			DTC143TUA	DIGITAL TRANSISTOR		C119			CE32AU1C220M	CHIP EL 22UF 16WV	
Q704			DTA144EUA	DIGITAL TRANSISTOR		C120			CK73GB1H103K	CHIP C 0.010UF K	
Q705,706			DTC143TUA	DIGITAL TRANSISTOR		C121			CK73FB1C105K	CHIP C 1.0UF K	
Q707			DTA144EUA	DIGITAL TRANSISTOR		C122-124			CK73EB1C106K	CHIP C 10UF K	
Q708,709			DTC143TUA	DIGITAL TRANSISTOR		C125			CK73GB1H103K	CHIP C 0.010UF K	
Q710			DTA144EUA	DIGITAL TRANSISTOR		C126,127			CK73GB1H104K	CHIP C 0.10UF K	
Q711			DTC143TUA	DIGITAL TRANSISTOR		C128			CK73EB1C106K	CHIP C 10UF K	
Q800			DTA144EUA	DIGITAL TRANSISTOR		C200			CK73GB1A105K	CHIP C 1.0UF K	
Q801			DTC144EUA	DIGITAL TRANSISTOR		C201			CK73FB0J106K	CHIP C 10UF K	
Q802			KTA1046-P	TRANSISTOR		C202			CK73GB1H104K	CHIP C 0.10UF K	
Q803			2SC4081	TRANSISTOR		C203			CK73GB1A105K	CHIP C 1.0UF K	
Q804			DTA124XUA	DIGITAL TRANSISTOR		C204			CK73FB0J106K	CHIP C 10UF K	
TH600			PRF18BE471QS2	POSITIVE RESISTOR		C205			CK73GB1H104K	CHIP C 0.10UF K	
A500			X86-4030-11	FRONT-END UNIT	KR1X1	C206			CK73EB1E225K	CHIP C 2.2UF K	
A500			X86-4030-11	FRONT-END UNIT	K1K2	C207,208			CC73GCH1H270J	CHIP C 27PF J	
A500			X86-4032-70	FRONT-END UNIT	E1E2M1	C210-218			CK73GB1H104K	CHIP C 0.10UF K	
A500			X86-4032-70	FRONT-END UNIT	E4	C219			CC73GCH1H560J	CHIP C 56PF J	
A500			X86-4032-70	FRONT-END UNIT	M2E5E3	C220			CK73FB0J106K	CHIP C 10UF K	
A501		*	X89-3062-70	DAUGHTER UNIT	E3E4	C221-224			CK73GB1H104K	CHIP C 0.10UF K	
VIDEO UNIT (X35-4890-10)						C225			CK73DF1E106Z	CHIP C 10UF Z	
D712,713		*	B30-3201-05	LED (RGB F3)		C226,227			CK73GB1H103K	CHIP C 0.010UF K	
D721			B30-1566-05	LED (1608,RED)		C228			CK73DF1E106Z	CHIP C 10UF Z	
D722			B30-1713-05	LED (SR,TS)		C229-246			CK73GB1H104K	CHIP C 0.10UF K	
D733			B30-1566-05	LED (1608,RED)		C247			CC73GCH1H101J	CHIP C 100PF J	
C1			CK73DF1E106Z	CHIP C 10UF Z		C248			CK73GB1H103K	CHIP C 0.010UF K	
C2-5			CK73GB1H103K	CHIP C 0.010UF K		C249-251			CK73GB1H104K	CHIP C 0.10UF K	
C6			CK73GB0J225K	CHIP C 2.2UF K		C252			CK73GB1A105K	CHIP C 1.0UF K	
C7			CK73GB1E183K	CHIP C 0.018UF K		C253			CK73GB1H102K	CHIP C 1000PF K	
C8			CK73GB0J225K	CHIP C 2.2UF K		C254			CK73GB1H104K	CHIP C 0.10UF K	
C9			CK73GB1A474K	CHIP C 0.47UF K		C255			CK73GB1A105K	CHIP C 1.0UF K	
C10			CK73GB1H152K	CHIP C 1500PF K		C256,257			CK73GB1H104K	CHIP C 0.10UF K	
C11			CK73GB0J225K	CHIP C 2.2UF K		C260			CC73GCH1H101J	CHIP C 100PF J	
C12			CK73GB1H103K	CHIP C 0.010UF K		C261,262			CK73FB0J106K	CHIP C 10UF K	
C13,14			CK73GB1H473K	CHIP C 0.047UF K		C263			CK73DF1E106Z	CHIP C 10UF Z	
C15			C93-1383-05	CHIP C 220PF F		C264			CK73EB1E225K	CHIP C 2.2UF K	
C16,17			CK73DF1E106Z	CHIP C 10UF Z		C266			CK73GB1H104K	CHIP C 0.10UF K	
C19-21			C93-1283-05	CHIP C 1.0UF K		C267-270			CC73GCH1H101J	CHIP C 100PF J	
C22			C93-1270-05	CHIP C 3300PF K		C271			CK73EB1E106K	CHIP C 10UF K	
C23			C93-1273-05	CHIP C 15PF J		C272-275			CK73GB1H104K	CHIP C 0.10UF K	
C24			C93-1278-05	CHIP C 0.018UF K		C276,277			CK73GB1A105K	CHIP C 1.0UF K	
C25			C93-1283-05	CHIP C 1.0UF K		C278			CK73GB1H104K	CHIP C 0.10UF K	
C102			CK73EB0J226K	CHIP C 22UF K		C279			CK73DF1E106Z	CHIP C 10UF Z	
C103			CK73FB0J106K	CHIP C 10UF K		C405			CC73GCH1H330J	CHIP C 33PF J	
C104			CK73GB1H104K	CHIP C 0.10UF K		C451			CC73GCH1H560J	CHIP C 56PF J	
						C458			CC73GCH1H102J	CHIP C 1000PF J	

E1: DDX5022 E2: DDX5022Y E3: DNX5220BT E4: DNX5220 E5: DDX52RY (Europe)

△ Indicates safety critical components.

K: DDX512 K1: DNX5120 K2: DNX512EX (North America)

X1: DDX5032 (Australia) R1: DDX5032 (Latin America)

M1: DDX5032 M2: DDX5032M (Other Areas)

PARTS LIST

VIDEO UNIT (X35-4890-10)

Ref. No.	Ad	New	Parts No.	Description	Destination	Ref. No.	Ad	New	Parts No.	Description	Destination
C459			CK73EB1C106K	CHIP C 10UF K		R16			RK73GB2A512J	CHIP R 5.1K J 1/10W	
C460			CK73GB1H103K	CHIP C 0.010UF K		R17			RK73GH2A563D	CHIP R 56K D 1/10W	
C462			CK73GB1H103K	CHIP C 0.010UF K		R18			RK73GH2A824D	CHIP R 820K D 1/10W	
C464			CK73GB1H103K	CHIP C 0.010UF K		R19-21			RK73GB2A220J	CHIP R 22 J 1/10W	
C466			CE32BJ1C220M	CHIP EL 22UF 16WV		R22			RK73GB2A512J	CHIP R 5.1K J 1/10W	
C467			CK73GB1H103K	CHIP C 0.010UF K		R23			RK73GB2A220J	CHIP R 22 J 1/10W	
C500			CK73FB0J106K	CHIP C 10UF K		R25			RK73GH2A471D	CHIP R 470 D 1/10W	
C501,502			CK73GB1H103K	CHIP C 0.010UF K		R26,27			RK73GB2A000J	CHIP R 0.0 J 1/10W	
C503			CK73GB1H104K	CHIP C 0.10UF K		R100			RK73GB2A000J	CHIP R 0.0 J 1/10W	
C504			CK73GB1A105K	CHIP C 1.0UF K		R102			RK73GB2A000J	CHIP R 0.0 J 1/10W	
C601			CK73GB1H104K	CHIP C 0.10UF K		R104			RK73GB2A562J	CHIP R 5.6K J 1/10W	
C608			CK73FB0J106K	CHIP C 10UF K		R107			RK73GH2A124D	CHIP R 120K D 1/10W	
C610,611			CK73GB1H102K	CHIP C 1000PF K		R108			RK73GH2A113D	CHIP R 11K D 1/10W	
C701			CK73EB0J226K	CHIP C 22UF K		R109			RK73GH2A104D	CHIP R 100K D 1/10W	
CN1		*	E41-2874-05	PIN ASSY		R110			RK73GH2A113D	CHIP R 11K D 1/10W	
CN3		*	E41-2979-05	FLAT CABLE CONNECTOR		R111			RK73GB2A473J	CHIP R 47K J 1/10W	
CN4			E41-2204-05	FLAT CABLE CONNECTOR		R112			RK73FB2B222J	CHIP R 2.2K J 1/8W	
CN5			E41-2088-05	FLAT CABLE CONNECTOR		R114			RK73GH2A513D	CHIP R 51K D 1/10W	
CN6		*	E41-2953-05	FLAT CABLE CONNECTOR		R115,116			RK73GB2A472J	CHIP R 4.7K J 1/10W	
CN7		*	E41-2301-05	FLAT CABLE CONNECTOR		R117			RK73GH2A113D	CHIP R 11K D 1/10W	
J1			E59-0854-05	RECTANGULAR PLUG		R201			RK73GB2A513J	CHIP R 51K J 1/10W	
J2			E11-1001-05	3.5D PHONE JACK		R203			RK73GB2A563J	CHIP R 56K J 1/10W	
F1			F53-0297-05	FUSE (UL,CSA) 1.6A		R204			RK73GB2A472J	CHIP R 4.7K J 1/10W	
F100			F53-0280-05	FUSE 0.63A		R205-207			RK73GB2A000J	CHIP R 0.0 J 1/10W	
						R208			RK73GH2A432D	CHIP R 4.3K D 1/10W	
L1			L19-0788-05	TRANSFORMER FOR CONVERTER		R210			RK73GB2A105J	CHIP R 1.0M J 1/10W	
L2			L33-2316-05	CHOKE COIL		R211			RK73GH2A222D	CHIP R 2.2K D 1/10W	
L100			L33-2316-05	CHOKE COIL		R212			RK73GH2A153D	CHIP R 15K D 1/10W	
L101			L41-4792-13	SMALL FIXED INDUCTOR (4.7UH)		R213			RK73GB2A000J	CHIP R 0.0 J 1/10W	
L102			L41-1005-33	SMALL FIXED INDUCTOR (10U)		R214,215			RK73GB2A101J	CHIP R 100 J 1/10W	
L103,104			L41-3392-13	SMALL FIXED INDUCTOR (3.3UH)		R216			RK73GB2A000J	CHIP R 0.0 J 1/10W	
L105,106			L41-1005-33	SMALL FIXED INDUCTOR (10U)		R217-221			RK73GB2A101J	CHIP R 100 J 1/10W	
L200,201			L41-1005-33	SMALL FIXED INDUCTOR (10U)		R222			RK73GB2A000J	CHIP R 0.0 J 1/10W	
L202-206			L92-0319-05	CHIP FERRITE		R223-225			RK73GB2A101J	CHIP R 100 J 1/10W	
L207			L41-1005-33	SMALL FIXED INDUCTOR (10U)		R226,227			RK73GB2A000J	CHIP R 0.0 J 1/10W	
L208			L41-8281-15	SMALL FIXED INDUCTOR (0.82U)		R228			RK73GB2A300J	CHIP R 30 J 1/10W	
L209-212			L92-0319-05	CHIP FERRITE		R231			RK73GB2A101J	CHIP R 100 J 1/10W	
L401			L41-2205-33	SMALL FIXED INDUCTOR (22U)		R233,234			RK73GB2A000J	CHIP R 0.0 J 1/10W	
L450			L41-1005-33	SMALL FIXED INDUCTOR (10U)		R235			RK73GB2A101J	CHIP R 100 J 1/10W	
L500			L41-1005-33	SMALL FIXED INDUCTOR (10U)		R237			RK73GB2A000J	CHIP R 0.0 J 1/10W	
L600			L92-0319-05	CHIP FERRITE		R240			RK73GB2A820J	CHIP R 82 J 1/10W	
X200			L77-2965-05	CRYSTAL RESONATOR (12.000MHZ)		R241,242			RK73FB2B470J	CHIP R 47 J 1/8W	
R1			RK73FB2B152J	CHIP R 1.5K J 1/8W		R243			RK73GB2A473J	CHIP R 47K J 1/10W	
R4			RK73GB2A153J	CHIP R 15K J 1/10W		R244-246			RK73GB2A101J	CHIP R 100 J 1/10W	
R5			RK73GB2A220J	CHIP R 22 J 1/10W		R248			RK73GB2A473J	CHIP R 47K J 1/10W	
R6			RK73GB2A222J	CHIP R 2.2K J 1/10W		R251			RK73GB2A103J	CHIP R 10K J 1/10W	
R7			RK73GH2A433D	CHIP R 43K D 1/10W		R253-259			RK73GB2A101J	CHIP R 100 J 1/10W	
R9			RK73GB2A220J	CHIP R 22 J 1/10W		R260			RK73GH2A513D	CHIP R 51K D 1/10W	
R10			RK73GB2A515J	CHIP R 5.1M J 1/10W		R261			RK73GH2A433D	CHIP R 43K D 1/10W	
R11			RK73GH2A513D	CHIP R 51K D 1/10W		R262			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R12			RK73GB2A101J	CHIP R 100 J 1/10W		R263			RK73GB2A103J	CHIP R 10K J 1/10W	
R13			RK73GB2A104J	CHIP R 100K J 1/10W		R264-266			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R14			RK73GH2A204D	CHIP R 200K D 1/10W		R267			RK73GB2A103J	CHIP R 10K J 1/10W	
R15			RK73GB2A105J	CHIP R 1.0M J 1/10W		R268			RK73GB2A102J	CHIP R 1.0K J 1/10W	
						R269			RK73GB2A101J	CHIP R 100 J 1/10W	

E1: DDX5022 E2: DDX5022Y E3: DNX5220BT E4: DNX5220 E5: DDX52RY (Europe)

△Indicates safety critical components.

K: DDX512 K1: DNX5120 K2: DNX512EX (North America)

X1: DDX5032 (Australia) R1: DDX5032 (Latin America)

M1: DDX5032 M2: DDX5032M (Other Areas)

PARTS LIST

VIDEO UNIT (X35-4890-10)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R270			RK73GB2A472J	CHIP R 4.7K J 1/10W		S600			S70-0901-05	TACT SWITCH	
R271,272			RK73GB2A000J	CHIP R 0.0 J 1/10W		S701-704			S70-0901-05	TACT SWITCH	
R273			RK73FB2B472J	CHIP R 4.7K J 1/8W							
R274-277			RK73GB2A473J	CHIP R 47K J 1/10W		S601		*	T99-0482-05	ROTARY ENCODER	
R278,279			RK73GB2A101J	CHIP R 100 J 1/10W							
R280-283			RK73GB2A103J	CHIP R 10K J 1/10W		D1			UDZS5.6B	ZENER DIODE	
R400			RK73GB2A000J	CHIP R 0.0 J 1/10W		D2,3			1SS355	DIODE	
R401			RK73GB2A272J	CHIP R 2.7K J 1/10W		D4			UDZS5.6B	ZENER DIODE	
R402			RK73GB2A101J	CHIP R 100 J 1/10W		D5			MA2S784-F	DIODE	
R406			RK73GB2A203J	CHIP R 20K J 1/10W		D6			UDZS5.6B	ZENER DIODE	
R407			RK73GB2A272J	CHIP R 2.7K J 1/10W		D7,8			DA204U	DIODE	
R408			RK73GB2A102J	CHIP R 1.0K J 1/10W		D9			CVS10A120M	VARIATOR	
R410			RK73GB2A203J	CHIP R 20K J 1/10W		D100			EP05Q06	DIODE	
R458			RK73GH2A202D	CHIP R 2.0K D 1/10W		D101-103			EP05Q04	DIODE	
R459			RK73GH2A182D	CHIP R 1.8K D 1/10W		D201,202			CVL10C270M300	VARIATOR	
R460			RK73GB2A222J	CHIP R 2.2K J 1/10W		D500-503			UDZS6.2B	ZENER DIODE	
R461			RK73GH2A473D	CHIP R 47K D 1/10W		D601-606			CVS10A180M	VARIATOR	
R462			RK73GH2A333D	CHIP R 33K D 1/10W		D608-611			CVS10A180M	VARIATOR	
R464			RK73GB2A103J	CHIP R 10K J 1/10W		D612			DA204U	DIODE	
R470			RK73GB2A103J	CHIP R 10K J 1/10W		D613			CVL10C270M300	VARIATOR	
R476			RK73GB2A103J	CHIP R 10K J 1/10W		D700			UDZS6.2B	ZENER DIODE	
R500,501			RK73GB2A333J	CHIP R 33K J 1/10W		D709-711			CVS10A180M	VARIATOR	
R502-505			RK73EB2E100J	CHIP R 10 J 1/4W		D714-716			CVS10A180M	VARIATOR	
R600,601			RK73GB2A103J	CHIP R 10K J 1/10W		D719			CVS10A180M	VARIATOR	
R602,603			RK73EB2E100J	CHIP R 10 J 1/4W		D725			CVS10A180M	VARIATOR	
R604,605			RK73GB2A103J	CHIP R 10K J 1/10W		D734			CVS10A180M	VARIATOR	
R608			RK73GB2A272J	CHIP R 2.7K J 1/10W		IC1			OZ964ISN-C-SN	ANALOGUE IC	
R609,610			RK73GB2A303J	CHIP R 30K J 1/10W		IC101		*	74AHC1G04GW	MOS-IC	
R611,612			RK73GB2A103J	CHIP R 10K J 1/10W		IC102			LT1947-PBF	ANALOGUE IC	
R613			RK73GB2A750J	CHIP R 75 J 1/10W		IC200			S-1112B25MCG	ANALOGUE IC	
R614			RK73GB2A102J	CHIP R 1.0K J 1/10W		IC201			TA75W558FU-F	ANALOGUE IC	
R615,616			RK73GB2A103J	CHIP R 10K J 1/10W		IC202			TC7WH74FU-F	MOS-IC	
R617			RK73EB2E100J	CHIP R 10 J 1/4W		IC203			MST7988LA-ALF	MOS-IC	
R618			RK73GB2A103J	CHIP R 10K J 1/10W		IC204			74AHC1G32GW	MOS-IC	
R619			RK73EB2E100J	CHIP R 10 J 1/4W		IC205		*	XC6201P532MR	ANALOGUE IC	
R620			RK73GB2A102J	CHIP R 1.0K J 1/10W		IC206		*	74LVC3G34DP	MOS-IC	
R621			RK73EB2E100J	CHIP R 10 J 1/4W		IC207		*	AT25F2048	ROM IC	
R622			RK73GB2A103J	CHIP R 10K J 1/10W		IC208			XC6201P502MR	ANALOGUE IC	
R623-628			RK73EB2E100J	CHIP R 10 J 1/4W		IC501		*	74AHCT1G08GW	MOS-IC	
R629			RK73GB2A682J	CHIP R 6.8K J 1/10W		IC700			PIC95603	ANALOGUE IC	
R630			RK73EB2E100J	CHIP R 10 J 1/4W		Q1,2			2SC4081	TRANSISTOR	
R632			RK73GB2A100J	CHIP R 10 J 1/10W		Q3			DTC143ZUA	DIGITAL TRANSISTOR	
R633			RK73EB2E101J	CHIP R 100 J 1/4W		Q4,5			SI5504DC-E3	DUAL FET	
R700			RK73FB2B101J	CHIP R 100 J 1/8W		Q100			2SC4081	TRANSISTOR	
R701			RK73GB2A221J	CHIP R 220 J 1/10W		Q101			2SA1576A	TRANSISTOR	
R706			RK73GB2A183J	CHIP R 18K J 1/10W		Q201			2SC4097	TRANSISTOR	
R707			RK73GH2A471D	CHIP R 470 D 1/10W		Q202			2SA1577	TRANSISTOR	
R708		*	RK73GH2A511D	CHIP R 510 D 1/10W		Q400,401			2SA1576A	TRANSISTOR	
R709			RK73GH2A361D	CHIP R 360 D 1/10W		Q450			DTC123JUA	DIGITAL TRANSISTOR	
R710			RK73GB2A681J	CHIP R 680 J 1/10W		Q451			UMZ1N	TRANSISTOR	
R711			RK73GH2A201D	CHIP R 200 D 1/10W		Q500,501			DTC123JUA	DIGITAL TRANSISTOR	
R712			RK73GH2A561D	CHIP R 560 D 1/10W		Q502			DTA123JUA	DIGITAL TRANSISTOR	
R713			RK73GH2A201D	CHIP R 200 D 1/10W		Q503			DTC143ZUA	DIGITAL TRANSISTOR	
R716			RK73GB2A151J	CHIP R 150 J 1/10W		Q504			DTA123JUA	DIGITAL TRANSISTOR	
VR200		*	R32-0350-05	SEMI FIXED VARIABLE RESISTOR		Q600-604			2SC4081	TRANSISTOR	

E1: DDX5022 E2: DDX5022Y E3: DNX5220BT E4: DNX5220 E5: DDX52RY (Europe)

K: DDX512 K1: DNX5120 K2: DNX512EX (North America)

X1: DDX5032 (Australia) R1: DDX5032 (Latin America)

M1: DDX5032 M2: DDX5032M (Other Areas)

△ Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-4890-10)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
Q606			DTA144EUA	DIGITAL TRANSISTOR	
DVD UNIT (X37-1100-03)					
C3			CK73HB1A104K	CHIP C 0.10UF K	
C4			CC73HCH1H471J	CHIP C 470PF J	
C5-7			CK73HB1E103K	CHIP C 0.010UF K	
C8			CC73HCH1H471J	CHIP C 470PF J	
C9			CK73HB0J105K	CHIP C 1.0UF K	
C10			CK73GB0J475K	CHIP C 4.7UF K	
C11,12			CK73HB1E103K	CHIP C 0.010UF K	
C13			CK73HB1H472K	CHIP C 4700PF K	
C14			CK73GB0J106M	CHIP C 10UF M	
C15			CK73HB1A104K	CHIP C 0.10UF K	
C16			CK73GB0J106M	CHIP C 10UF M	
C17			CK73GB0J475K	CHIP C 4.7UF K	
C18			CK73FB0J226M	CHIP C 22UF M	
C21			CK73GB0J106M	CHIP C 10UF M	
C22,23			CK73GB0J475K	CHIP C 4.7UF K	
C50			CK73HB1E103K	CHIP C 0.010UF K	
C51			CK73HB1A104K	CHIP C 0.10UF K	
C52			CK73HB1E223K	CHIP C 0.022UF K	
C53			CC73HCH1H470J	CHIP C 47PF J	
C54			CC73HCH1H102J	CHIP C 1000PF J	
C55			CC73HCH1H100D	CHIP C 10PF D	
C56			CC73HCH1H102J	CHIP C 1000PF J	
C57			CC73HCH1E681J	CHIP C 680PF J	
C58			CK73HB1H682K	CHIP C 6800PF K	
C60,61			CK73HB1A104K	CHIP C 0.10UF K	
C62			CC73HCH1H102J	CHIP C 1000PF J	
C63			CC73HCH1H331J	CHIP C 330PF J	
C64			CK73HB1H222K	CHIP C 2200PF K	
C65			CC73HCH1E681J	CHIP C 680PF J	
C66			CK73HB1H152K	CHIP C 1500PF K	
C67,68			CC73HCH1H102J	CHIP C 1000PF J	
C69-72			CC73HCH1H151J	CHIP C 150PF J	
C73-82			CK73HB1A104K	CHIP C 0.10UF K	
C83			C93-1228-05	CHIP C 1UF M	
C84			CK73HB0J105K	CHIP C 1.0UF K	
C85			CK73HB1A104K	CHIP C 0.10UF K	
C86			C93-1228-05	CHIP C 1UF M	
C90			CK73HB1E103K	CHIP C 0.010UF K	
C92			C93-1228-05	CHIP C 1UF M	
C93-95			CK73HB1A104K	CHIP C 0.10UF K	
C97			CK73HB1A104K	CHIP C 0.10UF K	
C99			CK73HB1A104K	CHIP C 0.10UF K	
C100			CK73FB0J226M	CHIP C 22UF M	
C101			CK73GB0J475K	CHIP C 4.7UF K	
C103,104			CK73FB0J226M	CHIP C 22UF M	
C120,121			CK73HB1E223K	CHIP C 0.022UF K	
C143,144			CC73HCH1H120J	CHIP C 12PF J	
C202			CK73FB0J226M	CHIP C 22UF M	
C207,208			CK73HB1A104K	CHIP C 0.10UF K	
C210			CK73HB1A104K	CHIP C 0.10UF K	
C212			CK73HB1A104K	CHIP C 0.10UF K	
C213			CK73HB1H332K	CHIP C 3300PF K	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C214,215			CK73HB1A104K	CHIP C 0.10UF K	
C216			CC73HCH1H471J	CHIP C 470PF J	
C217			CK73HB1A104K	CHIP C 0.10UF K	
C218			CK73HB1C473K	CHIP C 0.047UF K	
C219-224			CK73HB1A104K	CHIP C 0.10UF K	
C225			CK73GB0J475K	CHIP C 4.7UF K	
C227			CK73FB0J226M	CHIP C 22UF M	
C434			CK73GB0J106M	CHIP C 10UF M	
C435			CK73HB1E103K	CHIP C 0.010UF K	
C436,437			CK73HB1A104K	CHIP C 0.10UF K	
C440-442			CK73FB0J226M	CHIP C 22UF M	
C444			CC73HCH1H102J	CHIP C 1000PF J	
C445			CK73HB1E103K	CHIP C 0.010UF K	
C446			CC73HCH1H101J	CHIP C 100PF J	
C447,448			CC73HCH1H102J	CHIP C 1000PF J	
C449,450			CK73HB1H472K	CHIP C 4700PF K	
C451			CC73HCH1H102J	CHIP C 1000PF J	
CN1			E41-2594-05	FLAT CABLE CONNECTOR	
CN2			E41-2603-05	FLAT CABLE CONNECTOR	
CN3			E41-2596-05	FLAT CABLE CONNECTOR	
P2			E23-0766-05	TERMINAL	
P8			E23-0766-05	TERMINAL	
L1			L92-0365-05	CHIP FERRITE	
L5			L92-0365-05	CHIP FERRITE	
L6			L92-0617-05	CHIP FERRITE	
X1			L77-2870-05	CRYSTAL RESONATOR	
CP2-4			RK74HB1J103J	CHIP-COM 10K J 1/16W	
CP5-9			RK74HB1J330J	CHIP-COM 33 J 1/16W	
CP10			RK74HB1J820J	CHIP-COM 82 J 1/16W	
CP11			RK74HB1J103J	CHIP-COM 10K J 1/16W	
R1			RK73HB1J103J	CHIP R 10K J 1/16W	
R3,4			RK73HB1J103J	CHIP R 10K J 1/16W	
R5,6			RK73HH1J123D	CHIP R 12K D 1/16W	
R7			RK73HH1J333D	CHIP R 33K D 1/16W	
R8,9			RK73HB1J103J	CHIP R 10K J 1/16W	
R10			RK73HB1J163J	CHIP R 16K J 1/16W	
R11			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R13			RK73HB1J103J	CHIP R 10K J 1/16W	
R16			RK73HB1J103J	CHIP R 10K J 1/16W	
R17			RK73HB1J271J	CHIP R 270 J 1/16W	
R18			RK73HH1J270D	CHIP R 27 D 1/16W	
R19			RK73HB1J301J	CHIP R 300 J 1/16W	
R21,22			RK73HH1J103D	CHIP R 10K D 1/16W	
R26,27			R92-5146-05	CHIP R 1.0 D 1/4W	
R28,29			R92-5147-05	CHIP R 1.2 D 1/4W	
R31			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R50,51			RK73HB1J510J	CHIP R 51 J 1/16W	
R52			RK73HH1J153D	CHIP R 15K D 1/16W	
R53			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R54			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R55			RK73HB1J103J	CHIP R 10K J 1/16W	
R56			RK73HH1J472D	CHIP R 4.7K D 1/16W	
R57,58			RK73HB1J202J	CHIP R 2.0K J 1/16W	
R59,60			RK73HB1J103J	CHIP R 10K J 1/16W	

E1: DDX5022 E2: DDX5022Y E3: DNX5220BT E4: DNX5220 E5: DDX52RY (Europe)

△Indicates safety critical components.

K: DDX512 K1: DNX5120 K2: DNX512EX (North America)

X1: DDX5032 (Australia) R1: DDX5032 (Latin America)

M1: DDX5032 M2: DDX5032M (Other Areas)

PARTS LIST

DVD UNIT (X37-1100-03)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R63 R64,65 R81 R83,84 R85			RK73HB1J103J RK73HB1J472J RK73HB1J103J RK73HB1J473J RK73HB1J223J	CHIP R 10K J 1/16W CHIP R 4.7K J 1/16W CHIP R 10K J 1/16W CHIP R 47K J 1/16W CHIP R 22K J 1/16W	
R86 R87 R88 R89,90 R91			RK73HB1J103J RK73HB1J105J RK73HB1J152J RK73HB1J123J RK73HB1J472J	CHIP R 10K J 1/16W CHIP R 1.0M J 1/16W CHIP R 1.5K J 1/16W CHIP R 12K J 1/16W CHIP R 4.7K J 1/16W	
R92 R96 R98 R101 R102			RK73HB1J273J RK73HB1J103J RK73HB1J202J RK73HH1J273D RK73GB2A470J	CHIP R 27K J 1/16W CHIP R 10K J 1/16W CHIP R 2.0K J 1/16W CHIP R 27K D 1/16W CHIP R 47 J 1/10W	
R105 R113 R120 R121 R122			RK73HB1J103J RK73HB1J153J RK73HB1J103J RK73HB1J820J RK73HB1J103J	CHIP R 10K J 1/16W CHIP R 15K J 1/16W CHIP R 10K J 1/16W CHIP R 82 J 1/16W CHIP R 10K J 1/16W	
R123 R124-126 R150,151 R152,153 R154,155			RK73HB1J330J RK73HB1J820J RK73HB1J102J RK73HB1J104J RK73HB1J103J	CHIP R 33 J 1/16W CHIP R 82 J 1/16W CHIP R 1.0K J 1/16W CHIP R 100K J 1/16W CHIP R 10K J 1/16W	
R158,159 R160 R162,163 R164,165 R166			RK73HB1J1R0J R92-3350-05 RK73HB1J104J RK73HH1J101D RK73HB1J225J	CHIP R 1.0 J 1/16W CHIP R 2.2 F 1/10W CHIP R 100K J 1/16W CHIP R 100 D 1/16W CHIP R 2.2M J 1/16W	
R167 R168 R169 R255 R256			RK73HH1J113D RK73HH1J273D RK73HB1J125J R92-5112-05 RK73HH1J111D	CHIP R 11K D 1/16W CHIP R 27K D 1/16W CHIP R 1.2M J 1/16W CHIP R 4.7 F 1/10W CHIP R 110 D 1/16W	
R257 R258,259 R260 R261 R262			RK73HH1J202D RK73HB1J103J RK73HH1J132D RK73HH1J203D RK73HB1J821J	CHIP R 2.0K D 1/16W CHIP R 10K J 1/16W CHIP R 1.3K D 1/16W CHIP R 20K D 1/16W CHIP R 820 J 1/16W	
R263 R265-268 R270 R271 R272			RK73HB1J242J RK73HB1J000J RK73HB1J000J RK73HB1J471J RK73HH1J682D	CHIP R 2.4K J 1/16W CHIP R 0.0 J 1/16W CHIP R 0.0 J 1/16W CHIP R 470 J 1/16W CHIP R 6.8K D 1/16W	
R273 R274 R275 R278 R279			RK73HH1J122D RK73HH1J682D RK73HH1J122D R92-5112-05 RK73HH1J102D	CHIP R 1.2K D 1/16W CHIP R 6.8K D 1/16W CHIP R 1.2K D 1/16W CHIP R 4.7 F 1/10W CHIP R 1.0K D 1/16W	
R280 R284 R285-287			RK73HB1J4R7J RK73HB1J000J RK73GB2A000J	CHIP R 4.7 J 1/16W CHIP R 0.0 J 1/16W CHIP R 0.0 J 1/10W	
S1			S68-0911-15	PUSH SWITCH	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
S2			S68-0914-05	PUSH SWITCH	
D1 D5,6 D8 IC1 IC3			1SS402-F 015AZ5.1-F (Y) 1SS387-F AN22022ABV -	DIODE ZENER DIODE DIODE ANALOGUE IC ROM IC	
IC4 IC5 IC7 IC8 IC9			MN103S71F S1000N2814T1G TA48S033AF-Q S-80812CNP-F TA48S015AF-Q	MOS-IC ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC	
IC10 IC11 IC12 Q1-4 Q5,6			AN41250A-VB - NJU7042 DTA143XE 2SK3019	ANALOGUE IC ROM IC ANALOGUE IC TRANSISTOR FET	
Q12,13 Q14 Q15 Q18 Q19			2SB1709 SSM3J15FU-F DTA143ZE DTA143ZE DTC114EE	TRANSISTOR FET TRANSISTOR TRANSISTOR TRANSISTOR	
DAUGHTER UNIT (X89-3062-70)					
C1 C2 C3 C4 C5			CC73GCH1H180J CC73GCH1H070D CC73GCH1H150J CC73GCH1H180J CC73GCH1H390J	CHIP C 18PF J CHIP C 7.0PF D CHIP C 15PF J CHIP C 18PF J CHIP C 39PF J	E3E4 E3E4 E3E4 E3E4 E3E4
C6 C7 C8 C10-12 C13			CC73GCH1H020C CC73GCH1H120J CK73FB1C105K CC73GCH1H102J CC73GCH1H221J	CHIP C 2.0PF C CHIP C 12PF J CHIP C 1.0UF K CHIP C 1000PF J CHIP C 220PF J	E3E4 E3E4 E3E4 E3E4 E3E4
C14 C15,16 C17			CC73GCH1H030C CC73GCH1H560J CC73GCH1H102J	CHIP C 3.0PF C CHIP C 56PF J CHIP C 1000PF J	E3E4 E3E4 E3E4
CN1 W1 W2		*	E41-3008-05 E30-6808-05 E30-6807-05	PIN ASSY CORD WITH PLUG (ANT) CORD WITH PLUG	E3E4 E3E4 E3E4
L1 L2 L3 L4,5 L6			L41-2705-33 L41-1588-18 L41-1805-33 L41-1588-18 L19-0825-05	SMALL FIXED INDUCTOR (27U) SMALL FIXED INDUCTOR SMALL FIXED INDUCTOR (18U) SMALL FIXED INDUCTOR BALUN TRANSFORMER	E3E4 E3E4 E3E4 E3E4 E3E4
L8			L41-1888-18	SMALL FIXED INDUCTOR (0.18U)	E3E4
R1 R3 R4 R5 R6			RK73GB2A104J RK73GB2A562J RK73GB2A332J RK73GB2A331J RK73GB2A391J	CHIP R 100K J 1/10W CHIP R 5.6K J 1/10W CHIP R 3.3K J 1/10W CHIP R 330 J 1/10W CHIP R 390 J 1/10W	E3E4 E3E4 E3E4 E3E4 E3E4
R7,8 R10 R11 R12			RK73GB2A330J RK73GB2A431J RK73GB2A270J RK73GB2A431J	CHIP R 33 J 1/10W CHIP R 430 J 1/10W CHIP R 27 J 1/10W CHIP R 430 J 1/10W	E3E4 E3E4 E3E4 E3E4

E1: DDX5022 **E2:** DDX5022Y **E3:** DNX5220BT **E4:** DNX5220 **E5:** DDX52RY (Europe)
K: DDX512 **K1:** DNX5120 **K2:** DNX512EX (North America)
X1: DDX5032 (Australia) **R1:** DDX5032 (Latin America)
M1: DDX5032 **M2:** DDX5032M (Other Areas)

The IC3, and IC11 in the DVD unit (X37-1100-03) are not replaceable components. When these ICs are defective, replace the whole DVD mechanism assembly (X92-6160-00).

PARTS LIST

DAUGHTER UNIT (X89-3062-70)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R13			RK73GB2A151J	CHIP R 150 J 1/10W	E3E4
R14			RK73GB2A431J	CHIP R 430 J 1/10W	E3E4
R15			RK73GB2A270J	CHIP R 27 J 1/10W	E3E4
R17			RK73GB2A431J	CHIP R 430 J 1/10W	E3E4
D1			IMSA-6801-E	SURGE ABSORBER	E3E4
Q1			2SC3357-A	TRANSISTOR	E3E4
DVD MECHANISM ASSY (X92-6160-00) (DVS-8020V)					
1	1A		A10-5331-51	CHASSIS	
2	2B		A10-5332-51	CHASSIS	
3	1A		A10-5333-31	CHASSIS	
4	3A	*	A10-5460-02	CHASSIS	
7	1B		D10-4918-22	ARM	
8	1B		D10-4919-22	ARM	
9	1B		D10-4920-02	LEVER	
10	1B		D10-4921-02	LEVER	
12	2B		D10-4922-12	SLIDER	
13	2A	*	D10-7011-02	ARM	
14	2B		D10-4924-13	ARM	
15	2B		D10-4925-12	ARM	
25	2B	*	D10-4973-04	SLIDER ASSY	
27	2A		D10-4945-04	LEVER	
28	2B		D12-0639-02	CAM	
31	2B		D13-2402-04	GEAR	
32	2B		D13-2403-04	GEAR	
33	2B		D13-2404-04	GEAR	
34	2B		D13-2405-04	GEAR	
35	2B		D13-2406-04	GEAR	
36	2B		D13-2407-04	GEAR	
40	2A		D13-2413-04	GEAR	
41	2A		D13-2415-04	GEAR	
42	2A		D13-2416-04	GEAR	
43	1B		D14-1013-14	ROLLER	
53	1B		D21-2487-24	SHAFT	
54	2A	*	D39-0275-05	DAMPER	
55	2A	*	D39-0276-05	DAMPER	
60	3A		F09-2825-23	SHEET	
65	2B		G01-3298-04	EXTENSION SPRING	
66	1B		G01-3299-04	EXTENSION SPRING	
67	2A		G01-3300-14	TORSION COIL SPRING	
68	2B		G01-4601-04	EXTENSION SPRING	
69	1B		G01-4602-04	EXTENSION SPRING	
70	1B		G01-4604-04	TORSION COIL SPRING	
74	2B		G01-4609-14	TORSION COIL SPRING	
75	1B	*	G02-1564-03	FLAT SPRING	
79	2A	*	J22-0475-21	MOUNTING HARDWARE	
80	3B	*	J22-0636-01	MOUNTING HARDWARE	
A	1A		N09-6382-05	MACHINE SCREW (M1.7X2.0)	
B	3B		N09-6408-15	TAPTITE SCREW (1.7X4 P-TITE)	
C	1B		N09-6426-15	MACHINE SCREW (LOAD ARM SCREW	
D	3A		N09-6104-05	MACHINE SCREW (2X10 S-TITE)	
93	2A		T99-0471-05	MAGNET	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
96	1B		X94-2080-00	ROLLER ASSY	
98	2A		X94-2060-00	TRAVERSE ASSY (PICKUP,SPINDLE)	
VM1	2A		X94-2070-00	MOTOR ASSY (LOADING)	

E1: DDX5022 E2: DDX5022Y E3: DNX5220BT E4: DNX5220 E5: DDX52RY (Europe) ΔIndicates safety critical compo nents.
K: DDX512 K1: DNX5120 K2: DNX512EX (North America)
X1: DDX5032 (Australia) R1: DDX5032 (Latin America)
M1: DDX5032 M2: DDX5032M (Other Areas)