
2. EXPLODED VIEWS AND PARTS LIST

*NOTES : • Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
• The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
• Screw adjacent to▽mark on the product are used for disassembly.
• For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions,apply as you think it appropriate.)

2.1 PACKING

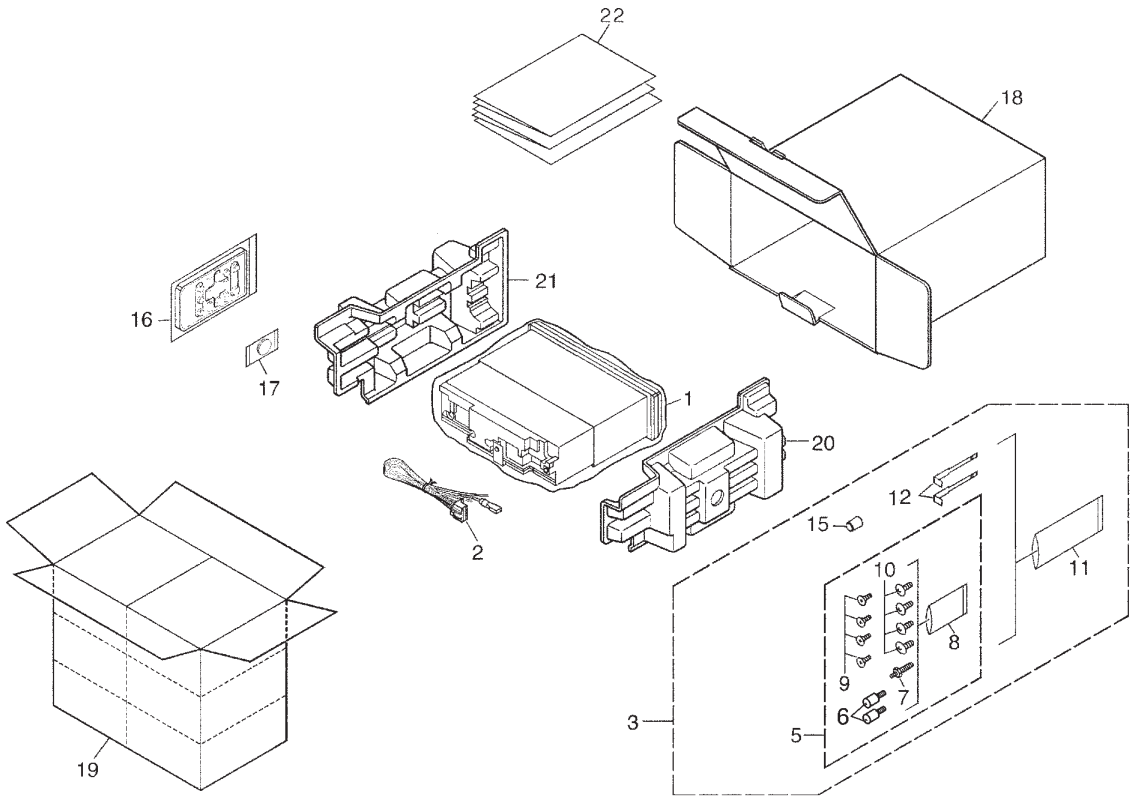


PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Polyethylene Bag	CEG1173
	2	Cord Assy	XDE7008
	3	Accessory Assy	CEA4610
	5	Screw Assy	CEA6002
	6	Fixing Screw(M2 x 4)	CBA1994
	7	Screw	CBA1650
*	8	Polyethylene Bag	CEG-127
	9	Screw	CRZ50P090FTC
	10	Screw	TRZ50P080FTC
*	11	Polyethylene Bag	CEG-158
	12	Handle	CNC5395
	13	•••••	
	14	•••••	
	15	Bush	CNV3930
	16	Remote Control Assy	CXC5719
*	17	Battery	CEX1065
	18	Carton	YHG5049
	19	Contain Box	YHL5049
	20	Protector	YHP5008
	21	Protector	YHP5009
	22-1	Owner's Manual	YRD5050
	22-2	Installation Manual	YRD5051
	22-3	Caution Card	CRP1294
	22-4	Caution Card	CRP1310
*	22-5	Warranty Card	CRY1246

Owner's Manual,Installation Manual

Part No.	Language
YRD5050,YRD5051	English, French, Spanish


2.2 EXTERIOR

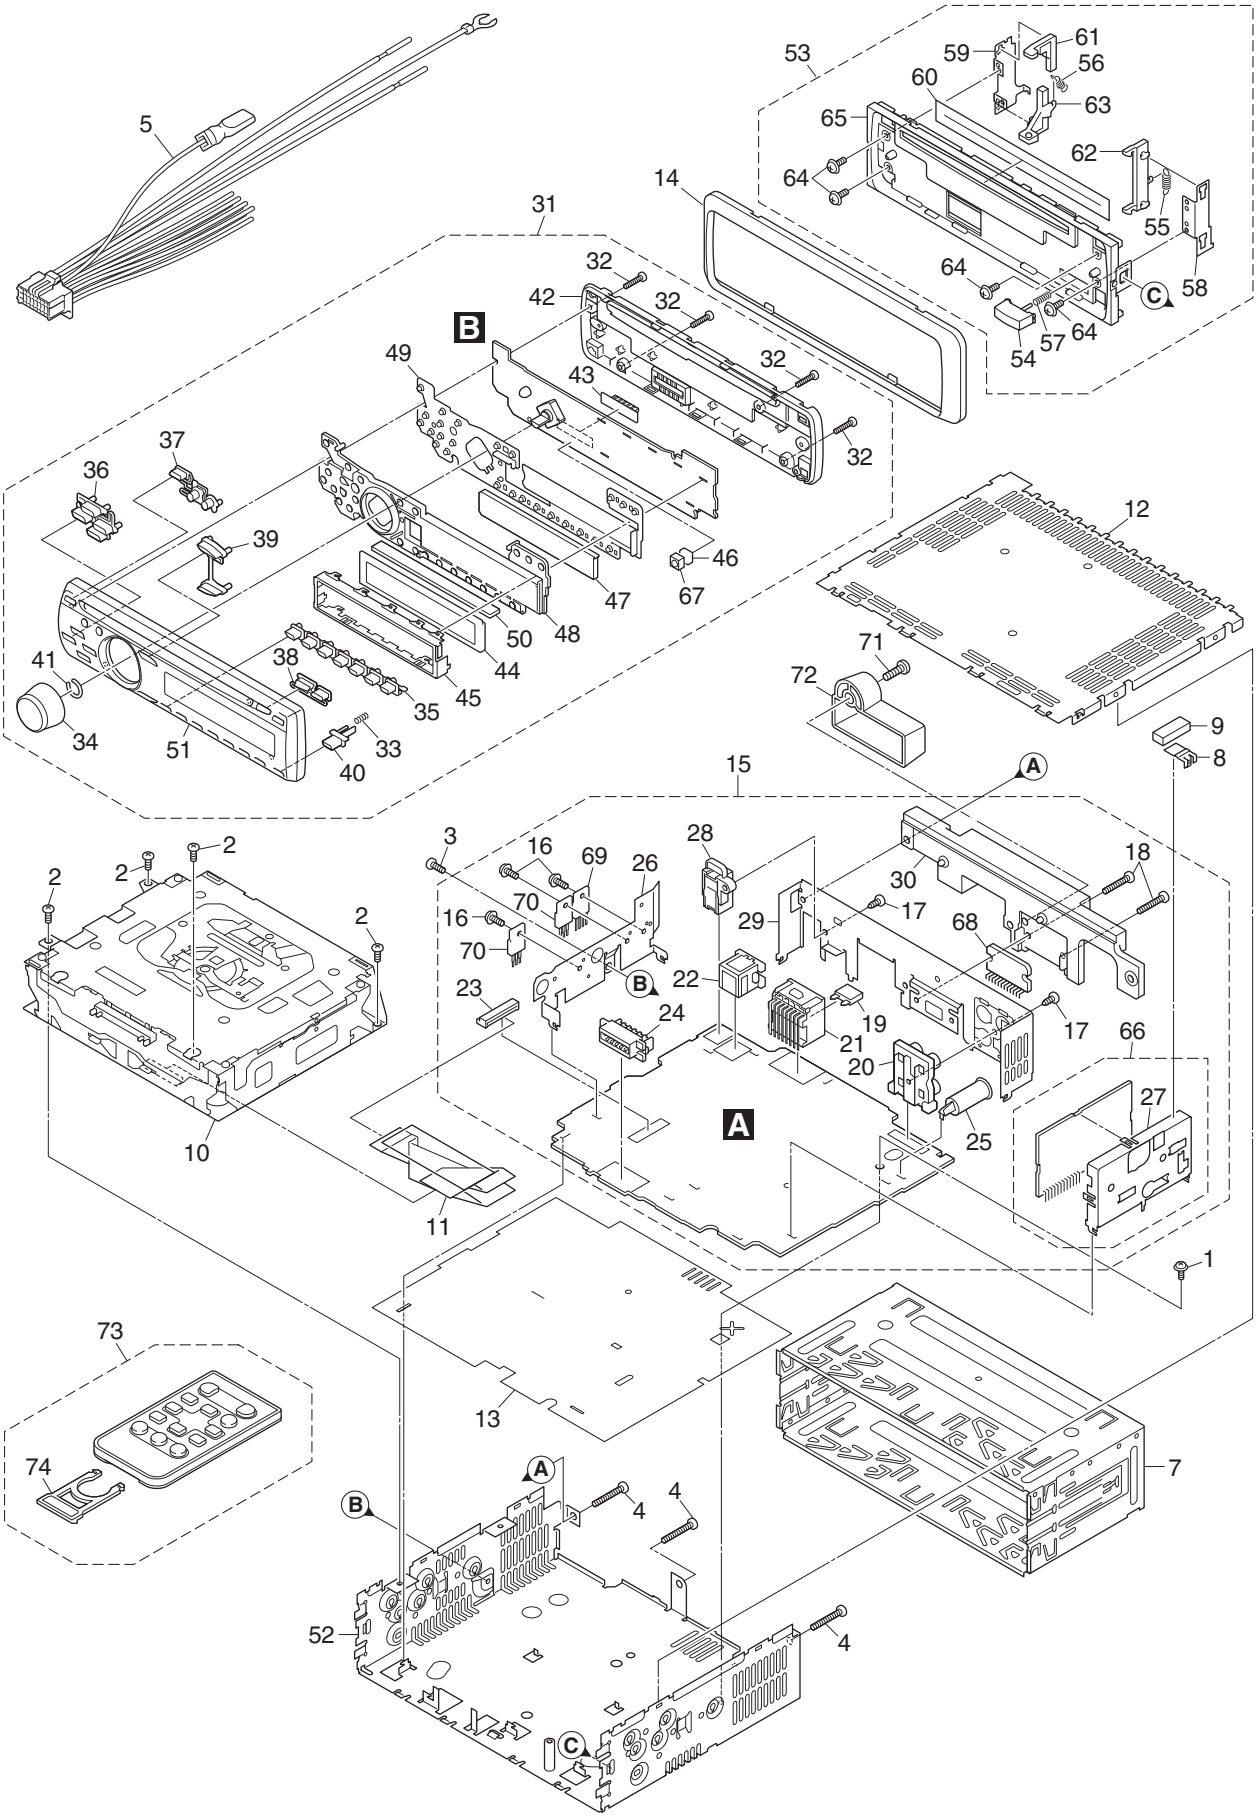
1
2
3
4
A
B
C
D
E
F
5
53
59
61
56
60
63
65
62
64
55
58
54
57
14
31
32
42
49
43
37
36
39
46
67
47
50
48
44
45
41
38
35
34
51
33
40
12
71
72
9
8
15
3
16
69
26
28
30
18
70
29
17
68
22
23
24
21
19
20
66
27
25
10
11
13
73
74
7
52

EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	ASZ26P050FTC
	2	Screw	BSZ26P060FTC
	3	Screw	BSZ30P060FTC
	4	Screw	BSZ30P200FTC
	5	Cord Assy	XDE7008
	6	•••••	
	7	Holder	CNC8659
	8	Earth Plate	CNC8915
	9	Cushion	CNM8890
	10	CD Mechanism Module(S10.5)	CXK5750
	11	Cable	YDE5013
	12	Case	YNB5008
	13	Insulator	YNM5012
	14	Panel	YNS5104
	15	Tuner Amp Unit	YWM5103
	16	Screw	ASZ26P060FTC
	17	Screw	BPZ26P080FTC
	18	Screw	BSZ26P160FTC
⚠	19	Fuse(10 A)	CEK1208
	20	Pin Jack(CN353)	CKB1051
	21	Plug(CN901)	CKM1376
	22	Connector(CN101)	CKS3408
	23	Connector(CN701)	CKS3834
	24	Connector(CN803)	CKS4944
	25	Antenna Jack(CN401)	CKX1056
	26	Holder	CND1328
	27	Holder	CND1054
	28	Jack(CN621)	YKS5002
	29	Holder	YNC5018
	30	Heat Sink	YNR5004
	31	Detachable Assy	YXA5112
	32	Screw	BPZ20P100FTB
	33	Spring	CBH2210
	34	Knob(SOURCE,VOLUME)	YAA5005
	35	Button(1-6,SW)	YAC5059
	36	Button(UP,DOWN,LEFT,RIGHT)	YAC5060
	37	Button(CLOCK,AUDIO,FUNCTION)	YAC5061
	38	Button(EJECT,DISPLAY)	YAC5062
	39	Button(EQ,BAND)	YAC5063
	40	Button(DETACH)	YAC5071
	41	Spring	YBH5003
	42	Cover	YNS5103
	43	Connector(CN1801)	CKS4943
	44	LCD(LCD1801)	YAW5054
	45	Holder	YNC5012
	46	Cushion	YNM5029
	47	Lighting Conductor	YNV5024
	48	Lighting Conductor	YNV5025
	49	Rubber	YNV5026
	50	Connector	YNV5033
	51	Grille Unit	YXA5132
	52	Chassis Unit	YXA5128
	53	Panel Unit	YXA5154
	54	Button(DETACH)	CAC4836
	55	Spring	CBH1835
	56	Spring	CBH2208
	57	Spring	CBH2367
	58	Bracket	CNC6791
*	59	Holder	CNC8042
	60	Cover	CNM6276
	61	Arm	CNV4692
	62	Arm	CNV4728
*	63	Arm	CNV5576
	64	Screw	IMS20P030FTB
*	65	Panel	YNS5046
	66	FM/AM Tuner Unit	CWE1952
	67	IC(IC1802)	TSOP4840SB1
	68	IC(IC301)	PAL007B
	69	IC(IC921)	NJM2388F84
	70	Transistor(Q911, 702)	2SD2396
	71	Screw	BMZ40P140FTC
	72	Holder	CNV7619
	73	Remote Control Assy	CXC5719
	74	Cover	CNS7068

2.3 CD MECHANISM MODULE

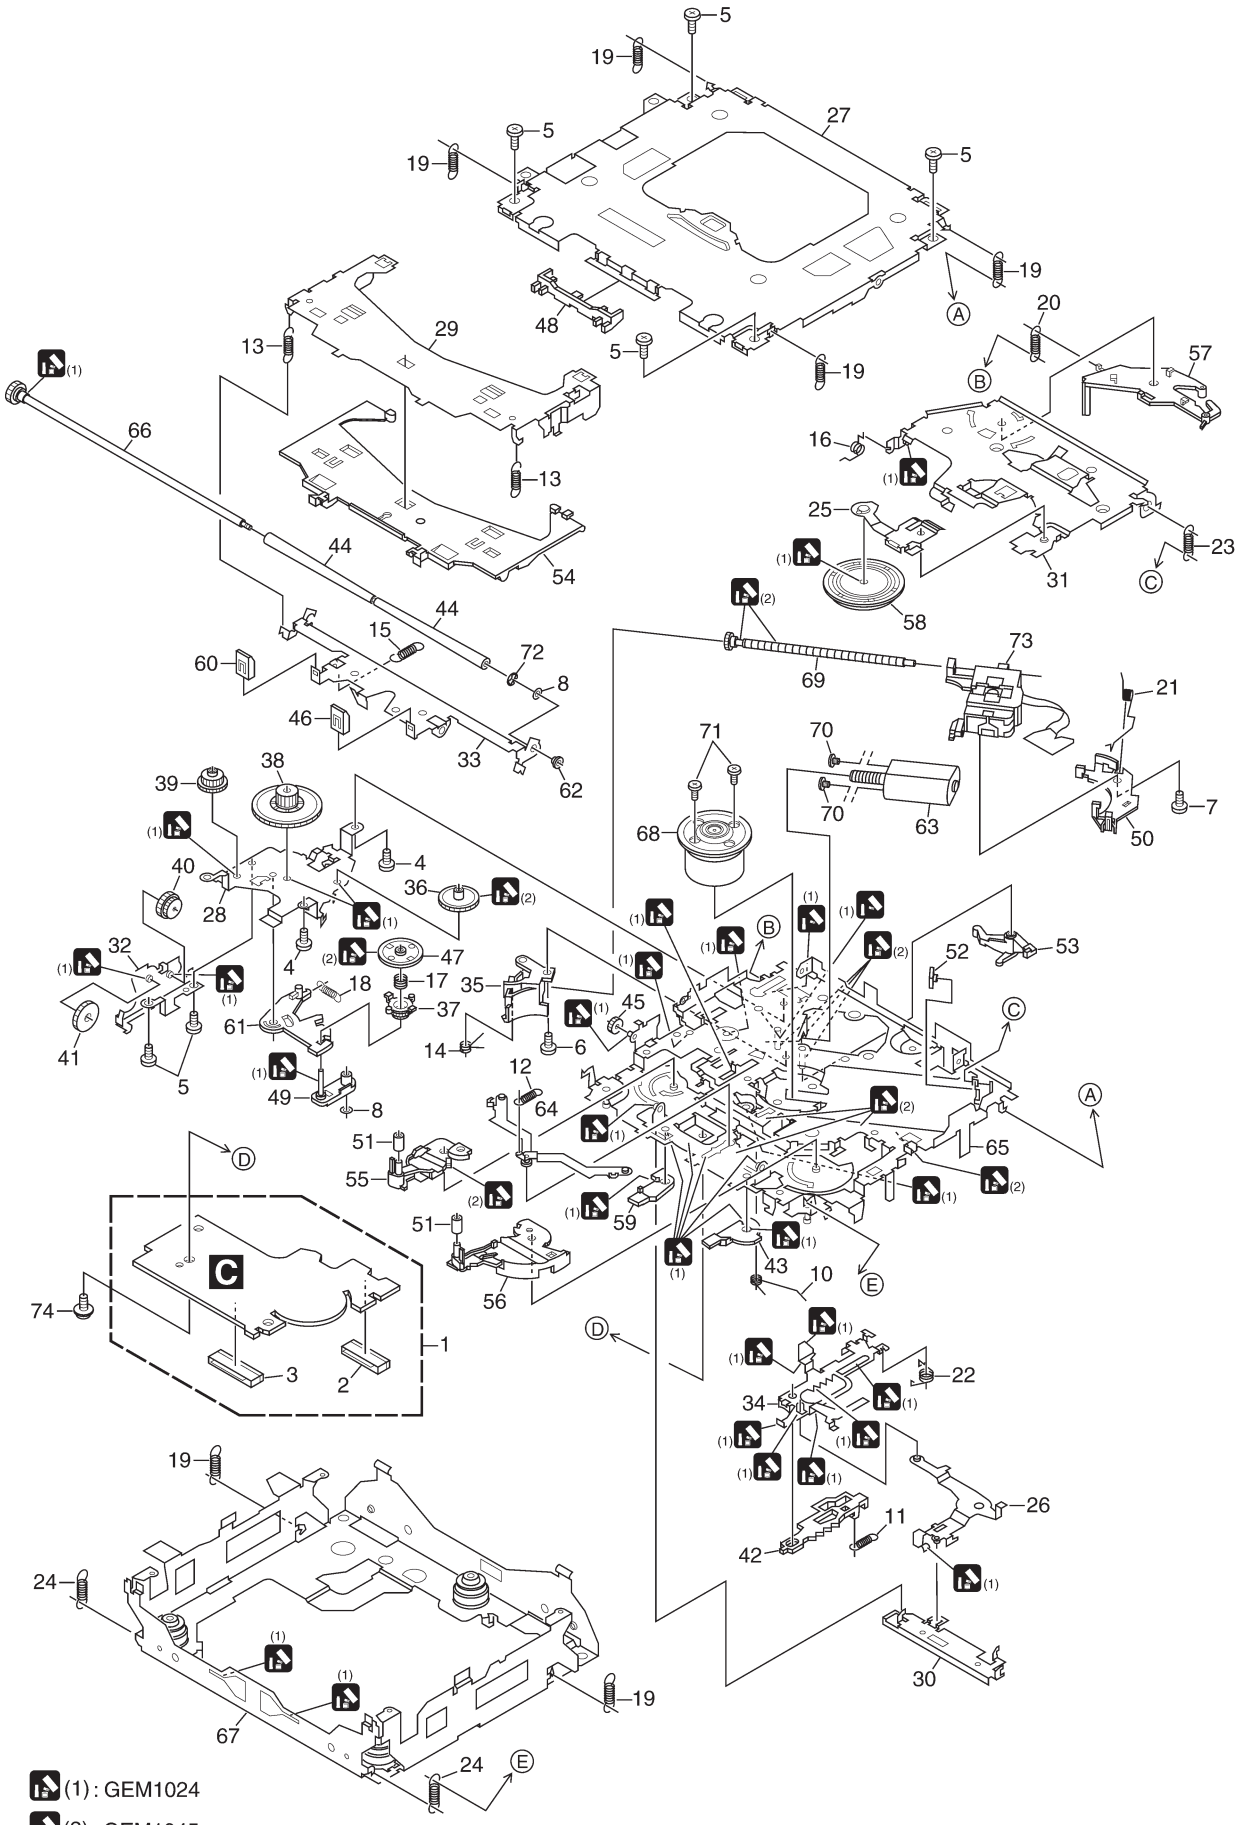

CD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	CD Core Unit(S10.5COMP1)	CWX3176
	2	Connector(CN101)	CKS4808
	3	Connector(CN901)	CKS5284
	4	Screw	BMZ20P025FTC
	5	Screw	BSZ20P040FTC
	6	Screw(M2 x 3)	CBA1511
	7	Screw(M2 x 4)	CBA1835
	8	Washer	CBF1038
	9	•••••	
	10	Spring	CBH2609
	11	Spring	CBH2612
	12	Spring	CBH2614
	13	Spring	CBH2616
	14	Spring	CBH2617
	15	Spring	CBH2620
	16	Spring	CBH2855
	17	Spring	CBH2937
	18	Spring	CBH2735
	19	Spring	CBH2854
	20	Spring	CBH2642
	21	Spring	CBH2856
	22	Spring	CBH2857
	23	Spring	CBH2860
	24	Spring	CBH2861
	25	Spring	CBL1686
	26	Arm	CND1909
	27	Frame	CND2582
	28	Bracket	CND2583
	29	Arm	CND2584
	30	Lever	CND2585
	31	Arm	CND2586
	32	Bracket	CND2587
	33	Arm	CND2588
	34	Lever	CND2589
	35	Holder	CNV7201
	36	Gear	CNV7207
	37	Gear	CNV7208
	38	Gear	CNV7209
	39	Gear	CNV7210
	40	Gear	CNV7211
	41	Gear	CNV7212
	42	Rack	CNV7214
	43	Arm	CNV7216
	44	Roller	CNV8189
	45	Gear	CNV7219
	46	Guide	CNV7361
	47	Gear	CNV7595
	48	Guide	CNV8448
	49	Arm	CNV7805
	50	Rack	CNV8342
	51	Roller	CNV8343
	52	Holder	CNV8344
	53	Arm	CNV8345
	54	Guide	CNV8347
	55	Arm	CNV8348
	56	Arm	CNV8349
	57	Arm	CNV8350
	58	Clamper	CNV8365
	59	Arm	CNV8386
	60	Guide	CNV8396
	61	Arm	CNV8413
	62	Collar	CNV8447
	63	Motor Unit(M2)	CXC4026
	64	Arm Unit	CXC4027
	65	Chassis Unit	CXC4028
	66	Gear Unit	CXC4029
	67	Frame Unit	CXC4031
	68	Motor Unit(M1)	CXC6742
	69	Screw Unit	CXC6359
	70	Screw	JFZ20P020FTC
	71	Screw	JGZ17P022FTC
	72	Washer	YE20FTC
	73	Pickup Unit(P10.5)(Service)	CXX1942
	74	Screw	IMS26P030FTC

5. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

  Chip Resistor

  RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J

  Chip Capacitor (except for CQS.....)

  CKS....., CCS....., CSZS.....
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Meaning of the figures and others in the parentheses in the parts list.*

  Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

  IC 301 (A, 91, 111) IC NJM2068V

Circuit Symbol and No. **Part No.**

Unit Number : YWM5103

Unit Name : Tuner Amp Unit

Unit Number :

Unit Name : Keyboard Unit

Unit Number : CWX3176

Unit Name : CD Core

Unit(S10.5COMP1)

A

Unit Number : YWM5103

Unit Name : Tuner Amp Unit

MISCELLANEOUS

IC 101	(B,63,61) IC	HA12241FP
IC 151	(B,136,85) IC	PML015A
IC 301	(A,96,137) IC	PAL007B
IC 401	(B,153,28) IC	NJM2885DL1-33
IC 601	(B,88,57) IC	PEG155B
IC 921	(A,10,124) IC	NJM2388F84
IC 961	(B,67,35) IC	BD4843G
Q 101	(B,42,99) Transistor	2SA1576
Q 102	(B,34,116) Transistor	DTC114EU
Q 351	(B,163,134) Transistor	UMH3N
Q 353	(B,141,129) Transistor	UMH3N
Q 451	(B,124,116) Transistor	DTC124EU
Q 453	(B,124,122) Transistor	UMD2N
Q 701	(B,30,54) Transistor	UMD2N
Q 702	(A,9,71) Transistor	2SD2396
Q 841	(B,129,33) Transistor	2SA1036K
Q 842	(B,125,35) Transistor	DTC114EU
Q 851	(B,41,17) Transistor	2SA1036K
Q 852	(B,51,12) Transistor	DTC114EU
Q 911	(A,9,106) Transistor	2SD2396
Q 912	(B,21,74) Transistor	UMD2N
Q 931	(B,64,92) Transistor	UMX1N

Circuit Symbol and No.		Part No.
D 701	(A,25,57) Diode	HZS7L(C3)
D 801	(B,35,20) Diode	DAN202U
D 802	(B,39,23) Diode	DAP202U
D 803	(B,116,30) Diode	DAN202U
D 804	(B,115,26) Diode	DAP202U
D 805	(B,115,43) Diode	DAN202U
D 806	(B,110,44) Diode	DAP202U
D 810	(A,30,23) Diode	1SS133
D 813	(A,27,28) Diode	1SS133
D 901	(A,77,115) Diode	S5688G
D 902	(A,80,111) Diode	S5688G
D 903	(A,70,100) Diode	S5688G
D 904	(A,66,100) Diode	S5688G
D 911	(A,24,84) Diode	S5688G
D 912	(A,24,78) Diode	HZS6L(B2)
D 931	(A,60,95) Diode	HZS7L(C3)
D 932	(A,56,91) Diode	HZS7L(A1)
L 101	(A,54,73) Inductor	LAU2R2K
L 161	(A,116,85) Inductor	LAU2R2K
L 401	(A,159,91) Inductor	LAU1R0K
L 402	(B,159,96) Inductor	LCTAW220J2520
L 403	(A,158,54) Inductor	LAU1R0K
L 602	(A,99,37) Inductor	LAU2R2K
L 701	(A,64,70) Ferri-Inductor	LAU100K
L 852	(A,50,16) Inductor	LAU2R2K
L 901	(A,39,107) Choke Coil 600μH	CTH1280
X 601	(A,76,38) Crystal Resonator 15.000MHz	CSS1653
⚠FU353	(B,134,137) Fuse 3A	CEK1286
⚠	Fuse 10A	CEK1208
Z 401	(A,166,99) FM/AM Tuner Unit	CWE1952
AR401	(A,175,107) Surge Protector	DSP-201M-S00B

RESISTORS

R 101	(B,35,126)	RS1/16S181J
R 102	(B,36,104)	RS1/16S222J
R 103	(B,27,132)	RS1/16S181J
R 104	(B,38,139)	RS1/16S101J
R 105	(B,29,138)	RS1/16S101J
R 106	(B,33,125)	RS1/16S223J
R 107	(B,29,130)	RS1/16S223J
R 108	(B,30,129)	RS1/16S102J

Circuit Symbol and No.		Part No.
R 109	(B,31,125)	RS1/16S102J
R 110	(B,38,100)	RS1/16S332J
R 111	(B,36,111)	RS1/16S562J
R 112	(A,69,70)	RD1/4PU102J
R 113	(B,71,57)	RS1/16S472J
R 114	(B,69,57)	RS1/16S472J
R 116	(B,32,140)	RS1/16S470J
R 117	(B,31,140)	RS1/16S150J
R 118	(B,59,66)	RS1/16S0R0J
R 151	(B,94,74)	RS1/16S102J
R 152	(B,94,76)	RS1/16S102J
R 153	(B,94,77)	RS1/16S102J
R 180	(B,119,98)	RS1/16S0R0J
R 301	(B,130,111)	RS1/16S471J
R 303	(B,129,111)	RS1/16S471J
R 304	(B,145,111)	RS1/16S471J
R 306	(B,147,111)	RS1/16S471J
R 309	(A,88,79)	RD1/4PU153J
R 351	(B,152,97)	RS1/16S821J
R 352	(B,159,133)	RS1/16S0R0J
R 355	(B,141,126)	RS1/16S821J
R 356	(B,137,103)	RS1/16S821J
R 358	(B,135,133)	RS1/16S821J
R 359	(B,146,133)	RS1/16S223J
R 360	(B,166,139)	RS1/16S223J
R 363	(B,138,133)	RS1/16S223J
R 364	(B,140,133)	RS1/16S223J
R 381	(B,137,129)	RS1/16S0R0J
R 382	(B,145,129)	RS1/16S0R0J
R 386	(B,166,136)	RS1/16S0R0J
R 401	(B,160,60)	RS1/16S681J
R 403	(B,160,78)	RS1/16S681J
R 404	(B,160,81)	RS1/16S681J
R 405	(B,160,83)	RS1/16S681J
R 406	(B,160,85)	RS1/16S681J
R 407	(B,160,87)	RS1/16S0R0J
R 414	(A,138,38)	RD1/4PU1R8J
R 421	(B,157,77)	RS1/16S0R0J
R 451	(B,125,113)	RS1/16S103J
R 452	(B,125,125)	RS1/16S221J
R 453	(B,124,119)	RS1/16S153J
R 454	(A,120,119)	RD1/4PU102J
R 602	(B,72,41)	RS1/16S103J
R 603	(B,94,80)	RS1/16S103J
R 604	(B,100,63)	RS1/16S681J
R 605	(B,158,60)	RS1/16S681J
R 606	(B,107,43)	RS1/16S103J
R 607	(B,147,55)	RS1/16S681J
R 608	(B,104,46)	RS1/16S473J
R 610	(B,104,54)	RS1/16S473J
R 612	(B,101,74)	RS1/16S103J
R 613	(B,100,76)	RS1/16S103J
R 615	(B,70,64)	RS1/16S0R0J
R 616	(B,61,36)	RS1/16S473J
R 620	(B,96,66)	RS1/16S0R0J
R 621	(B,18,145)	RS1/16S102J
R 622	(B,16,142)	RS1/16S102J
R 701	(A,20,54)	RD1/4PU271J
R 702	(A,20,61)	RD1/4PU121J
R 703	(B,57,54)	RS1/16S682J
R 704	(B,54,42)	RS1/16S682J
R 705	(B,57,51)	RS1/16S682J
R 706	(B,57,48)	RS1/16S682J
R 707	(B,45,52)	RS1/16S104J
R 708	(B,57,47)	RS1/16S221J
R 709	(B,48,47)	RS1/16S221J
R 710	(B,57,50)	RS1/16S221J
R 711	(B,52,42)	RS1/16S221J
R 712	(B,57,53)	RS1/16S221J
R 713	(B,61,34)	RS1/16S102J
R 715	(B,45,56)	RS1/16S0R0J
R 803	(B,117,45)	RS1/16S473J
R 804	(B,116,24)	RS1/16S222J
R 805	(B,106,25)	RS1/16S222J
R 806	(A,91,16)	RD1/4PU222J
R 807	(B,86,15)	RS1/16S222J
R 808	(B,34,24)	RS1/16S104J
R 809	(B,142,39)	RS1/16S222J
R 810	(B,34,22)	RS1/16S103J
R 811	(B,93,31)	RS1/16S473J
R 812	(B,109,41)	RS1/16S473J
R 813	(B,111,28)	RS1/16S104J
R 814	(B,96,31)	RS1/16S102J
R 815	(B,108,27)	RS1/16S102J
R 816	(B,123,26)	RS1/16S1R0J
R 817	(B,115,47)	RS1/16S473J
R 821	(B,93,40)	RS1/16S222J
R 822	(B,46,70)	RS1/16S102J
R 823	(B,46,71)	RS1/16S102J
R 824	(B,115,50)	RS1/16S102J
R 825	(B,29,21)	RS1/16S102J
R 826	(B,121,25)	RS1/16S0R0J
R 841	(B,130,29)	RS1/16S103J
R 842	(B,128,28)	RS1/16S222J
R 851	(B,34,17)	RS1/16S153J
R 852	(B,43,14)	RS1/16S153J
R 853	(B,119,17)	RS1/16S222J
R 911	(B,21,71)	RS1/16S223J
R 912	(A,24,81)	RD1/4PU152J
R 922	(B,14,117)	RS1/16S473J
R 931	(B,63,56)	RS1/16S104J
R 932	(B,57,57)	RS1/16S104J
R 933	(B,64,94)	RS1/16S104J
R 934	(B,64,96)	RS1/16S473J
R 935	(B,60,91)	RS1/16S473J
R 936	(B,64,97)	RS1/16S473J
R 937	(B,65,122)	RS1/16S473J
R 938	(B,63,127)	RS1/4SA102J
R 961	(B,73,35)	RS1/16S102J
R 962	(B,64,38)	RS1/16S822J

CAPACITORS

C 101	(B,29,142)	CKSRYB104K16
C 104	(B,52,69)	CKSRYB103K50
C 151	(B,146,82)	CKSRYB105K10
C 152	(B,146,80)	CKSRYB105K10
C 153	(B,163,71)	CKSRYB224K16
C 155	(B,160,69)	CKSRYB224K16
C 157	(B,126,80)	CKSRYB105K10

Circuit Symbol and No.		Part No.
C 158	(B,126,82)	CKSRYB105K10
C 159	(B,126,89)	CKSRYB153K50
C 160	(A,122,89)	CEJQ100M16
C 161	(B,139,97)	CKSRYB153K50
C 162	(A,116,95)	CEJQ470M10
C 163	(B,125,87)	CKSRYB104K25
C 165	(A,136,97)	CEJQ100M16
C 305	(A,128,119)	CFTNA224J50
C 306	(A,143,119)	CFTNA224J50
C 307	(A,133,119)	CFTNA224J50
C 308	(A,138,119)	CFTNA224J50
C 309	(B,127,146)	CKSQYB225K10
C 310	(B,132,137)	CKSQYB225K10
C 311	(A,107,128)	CEJQ100M16
C 313	(A,54,125) 3300μF/16V	CCH1494
C 351	(A,129,96)	CEJQ2R2M50
C 352	(A,142,96)	CEJQ2R2M50
C 355	(A,127,104)	CEJQ2R2M50
C 356	(A,148,104)	CEJQ2R2M50
C 357	(B,147,133)	CKSRYB222K50
C 358	(B,164,139)	CKSRYB222K50
C 401	(A,152,53)	CEJQ470M6R3
C 402	(B,155,51)	CKSRYB103K50
C 403	(B,151,34)	CKSRYB103K50
C 405	(A,154,87)	CEJQ101M10
C 406	(B,170,91)	CKSRYB104K25
C 407	(B,166,66)	CKSRYB103K50
C 408	(A,142,32)	CEJQ220M16
C 410	(B,141,28)	CKSRYB474K10
C 411	(B,170,90)	CCSRCH470J50
C 451	(A,124,127)	CEJQ330M10
C 601	(B,76,43)	CCSRCH180J50
C 602	(B,81,43)	CCSRCH200J50
C 604	(B,97,42)	CKSRYB104K16
C 605	(A,100,42)	CEJQ100M16
C 606	(B,74,32)	CKSRYB104K16
C 607	(A,76,30)	CEJQ100M16
C 609	(B,147,52)	CCSRCH470J50
C 701	(B,31,51)	CKSRYB473K25
C 703	(A,34,35) 470μF/16V	CCH1331
C 704	(B,145,77)	CKSRYB105K10
C 705	(B,134,70)	CKSRYB105K10
C 851	(B,48,14)	CKSRYB104K16
C 901	(B,57,121)	CKSRYB104K50
C 911	(A,32,59)	CEJQ470M10
C 912	(B,25,75)	CKSRYB103K50
C 913	(A,25,68) 470μF/16V	CCH1331
C 921	(B,19,108)	CKSRYB103K50
C 922	(A,20,104)	CEJQ221M10
C 923	(A,18,120)	CEJQ101M16
C 924	(B,19,116)	CKSRYB103K50
C 961	(B,70,34)	CKSRYB473K25
C 962	(A,67,39)	CEJQ100M16

B

Unit Number :

Unit Name : Keyboard Unit

MISCELLANEOUS

Circuit Symbol and No.		Part No.
IC 1801	(B,30,121) IC	PD6538A
IC 1802	(A,25,71) IC	TSOP4840SB1
D 1801	(B,38,96) Diode	DAN202U
D 1802	(B,38,100) Diode	DAP202U
D 1803	(A,26,77) LED	NESW505C-5273
D 1805	(A,12,143) LED	SML-310PT
D 1806	(A,6,150) LED	SML-310PT
D 1807	(A,6,160) LED	SML-310PT
D 1808	(A,40,86) LED	SML-310PT
D 1809	(A,40,96) LED	SML-310PT
D 1810	(A,40,106) LED	SML-310PT
D 1811	(A,40,128) LED	SML-310PT
D 1812	(A,40,117) LED	SML-310PT
D 1813	(A,40,138) LED	SML-310PT
D 1814	(A,40,149) LED	SML-310PT
D 1815	(A,14,68) LED	SML-310PT
D 1816	(A,40,68) LED	SML-310PT
X 1801	(B,39,134) Ceramic Resonator 5.00MHz	CSS1547
S 1827	(A,27,50) Encoder(SOURCE,VOLUME)	YSD5005
IL 1801	(B,22,31) Lamp 40mA,14V	CEL1651
LCD1801	(A,16,81) LCD	YAW5054

RESISTORS

R 1801	(B,39,84)	RS1/16S222J
R 1802	(B,40,93)	RS1/16S222J
R 1803	(B,17,69)	RS1/4SA561J
R 1804	(B,22,162)	RS1/4SA471J
R 1805	(B,18,75)	RS1/4SA471J
R 1806	(B,27,162)	RS1/4SA681J
R 1807	(B,39,145)	RS1/4SA681J
R 1808	(B,19,65)	RS1/4SA681J
R 1831	(B,16,58)	RS1/16S472J
R 1832	(B,26,50)	RS1/16S472J
R 1833	(B,27,78)	RS1/16S2R2J
R 1835	(B,23,78)	RS1/16S121J

CAPACITORS

C 1801	(B,22,78)	CKSRYB474K10
C 1802	(B,31,158)	CKSRYF104Z25
C 1803	(B,30,154)	CKSRYF104Z25
C 1804	(B,31,156)	CKSRYF104Z25

C

Unit Number : CWX3176

Unit Name : CD Core Unit(S10.5COMP1)

MISCELLANEOUS

IC 201	(B,39,70) IC	UPD63763CGJ
IC 203	(A,12,16) IC	NJM2886DL3-33
IC 301	(A,28,18) IC	BA5835FP
IC 701	(A,32,48) IC	PE5505A
Q 101	(B,60,89) Transistor	2SA1577
Q 701	(B,24,41) Transistor	UN2111
X 201	(B,28,57) Ceramic Resonator 16.934MHz	CSS1603
X 701	(A,24,37) Ceramic Resonator 4.000MHz	CSS1652
S 901	(A,57,57) Switch(HOME)	CSN1067
S 903	(B,23,78) Switch(DSCSNS)	CSN1067

Circuit Symbol and No.			Part No.
S 904	(B,42,87)	Switch(12EJ)	CSN1068
S 905	(B,28,88)	Switch(8EJ)	CSN1068

RESISTORS

R 101	(B,61,92)	RS1/10SR2R4J
R 102	(B,63,92)	RS1/10SR2R4J
R 103	(B,63,89)	RS1/10SR2R7J
R 104	(A,52,73)	RS1/16SS102J
R 201	(B,44,57)	RS1/16SS102J
R 202	(A,38,62)	RS1/16SS473J
R 203	(A,37,62)	RS1/16SS473J
R 214	(A,46,79)	RS1/16SS472J
R 216	(A,46,81)	RS1/16SS472J
R 221	(A,44,81)	RS1/16SS103J
R 222	(A,45,81)	RS1/16SS103J
R 225	(B,52,78)	RS1/16SS103J
R 226	(B,52,77)	RS1/16SS393J
R 227	(A,44,75)	RS1/16SS562J
R 228	(A,46,72)	RS1/16SS122J
R 229	(A,44,72)	RS1/16SS472J
R 232	(A,46,75)	RS1/16SS122J
R 241	(B,26,63)	RS1/16SS333J
R 243	(B,26,62)	RS1/16SS333J
R 245	(B,26,69)	RS1/16SS333J
R 248	(B,55,74)	RS1/16SS105J
R 307	(A,19,20)	RS1/16SS183J
R 308	(A,17,20)	RS1/16SS183J
R 309	(A,18,18)	RS1/16SS183J
R 310	(A,17,16)	RS1/16SS183J
R 601	(B,30,47)	RS1/16S101J
R 602	(B,28,50)	RS1/16S101J
R 606	(B,20,54)	RS1/16S0R0J
R 701	(B,26,44)	RS1/16SS221J
R 707	(B,32,45)	RS1/16SS473J
R 709	(A,36,35)	RS1/16SS222J
R 710	(B,41,46)	RS1/16SS102J
R 712	(A,45,57)	RS1/16SS222J
R 713	(B,40,57)	RS1/16SS222J
R 716	(B,29,37)	RS1/16SS472J
R 724	(B,31,36)	RS1/16S473J
R 726	(B,23,47)	RS1/16SS103J
R 727	(B,31,42)	RS1/16SS473J
R 729	(B,20,48)	RS1/16SS223J
R 730	(B,20,46)	RS1/16SS473J
R 740	(A,38,59)	RS1/16SS222J
R 746	(A,13,38)	RS1/16SS104J
R 750	(A,40,66)	RS1/16SS473J
R 902	(A,20,36)	RS1/16SS221J
R 905	(A,21,36)	RS1/16SS221J
R 906	(B,20,36)	RS1/16SS221J
R 907	(B,16,62)	RS1/16SS0R0J
R 908	(B,16,64)	RS1/16SS0R0J
R 911	(B,20,32)	RS1/16SS0R0J

CAPACITORS

C 103	(B,57,83)	CEVW101M16
C 108	(A,47,66)	CKSSYB104K10
C 201	(B,46,56)	CKSSYB102K50
C 202	(B,47,58)	CKSSYB104K10
C 204	(B,35,48)	CEVW220M6R3
C 205	(A,34,63)	CKSSYB104K10
C 208	(B,34,54)	CKSSYB104K10
C 209	(B,31,57)	CKSSYB104K10
C 210	(A,31,66)	CKSRYB105K10
C 216	(B,53,77)	CKSSYB332K50
C 217	(B,52,79)	CKSSYB104K10
C 218	(B,52,76)	CKSSYB473K10
C 219	(B,52,74)	CKSSYB104K10
C 220	(A,46,77)	CKSSYB182K50
C 221	(B,51,74)	CKSSYB104K10
C 222	(A,46,73)	CCSSCH560J50
C 223	(A,44,74)	CCSSCH4R0C50
C 224	(B,52,68)	CKSSYB104K10
C 225	(A,47,67)	CKSSYB103K16
C 226	(A,49,67)	CCSSCH680J50
C 227	(A,48,65)	CCSSCH470J50
C 228	(A,46,62)	CKSSYB103K16
C 232	(A,12,31)	CKSRYB105K10
C 237	(A,31,67)	CKSSYB104K10
C 239	(A,46,74)	CCSSCH220J50
C 246	(A,42,80)	CKSSYB104K10
C 250	(A,42,81)	CKSRYB102K50
C 251	(A,41,83)	CKSRYB102K50
C 303	(A,18,20)	CKSSYB472K25
C 304	(A,17,17)	CKSSYB103K16
C 307	(A,34,15)	CKSSYB104K10
C 308	(A,17,30)	CKSRYB105K10
C 601	(B,25,50)	CCSRCH102J50
C 602	(B,26,51)	CCSRCH102J50
C 701	(B,25,47)	CKSSYB104K10
C 703	(B,28,42)	CKSSYB103K16
C 706	(B,34,43)	CKSSYB104K10
C 707	(A,36,57)	CKSSYB104K10
C 714	(A,24,41)	CKSSYB104K10
C 722	(B,29,45)	CKSQYB475K6R3
C 903	(B,14,54)	CKSSYB471K50
C 907	(B,14,62)	CKSSYB103K16

Miscellaneous Parts List

	Pickup Unit(P10.5)(Service)	CXX1942
M 1	Motor Unit(SPINDLE)	CXC6742
M 2	Motor Unit(LOADING/CARRIAGE)	CXC4026