



EXPLODED VIEW

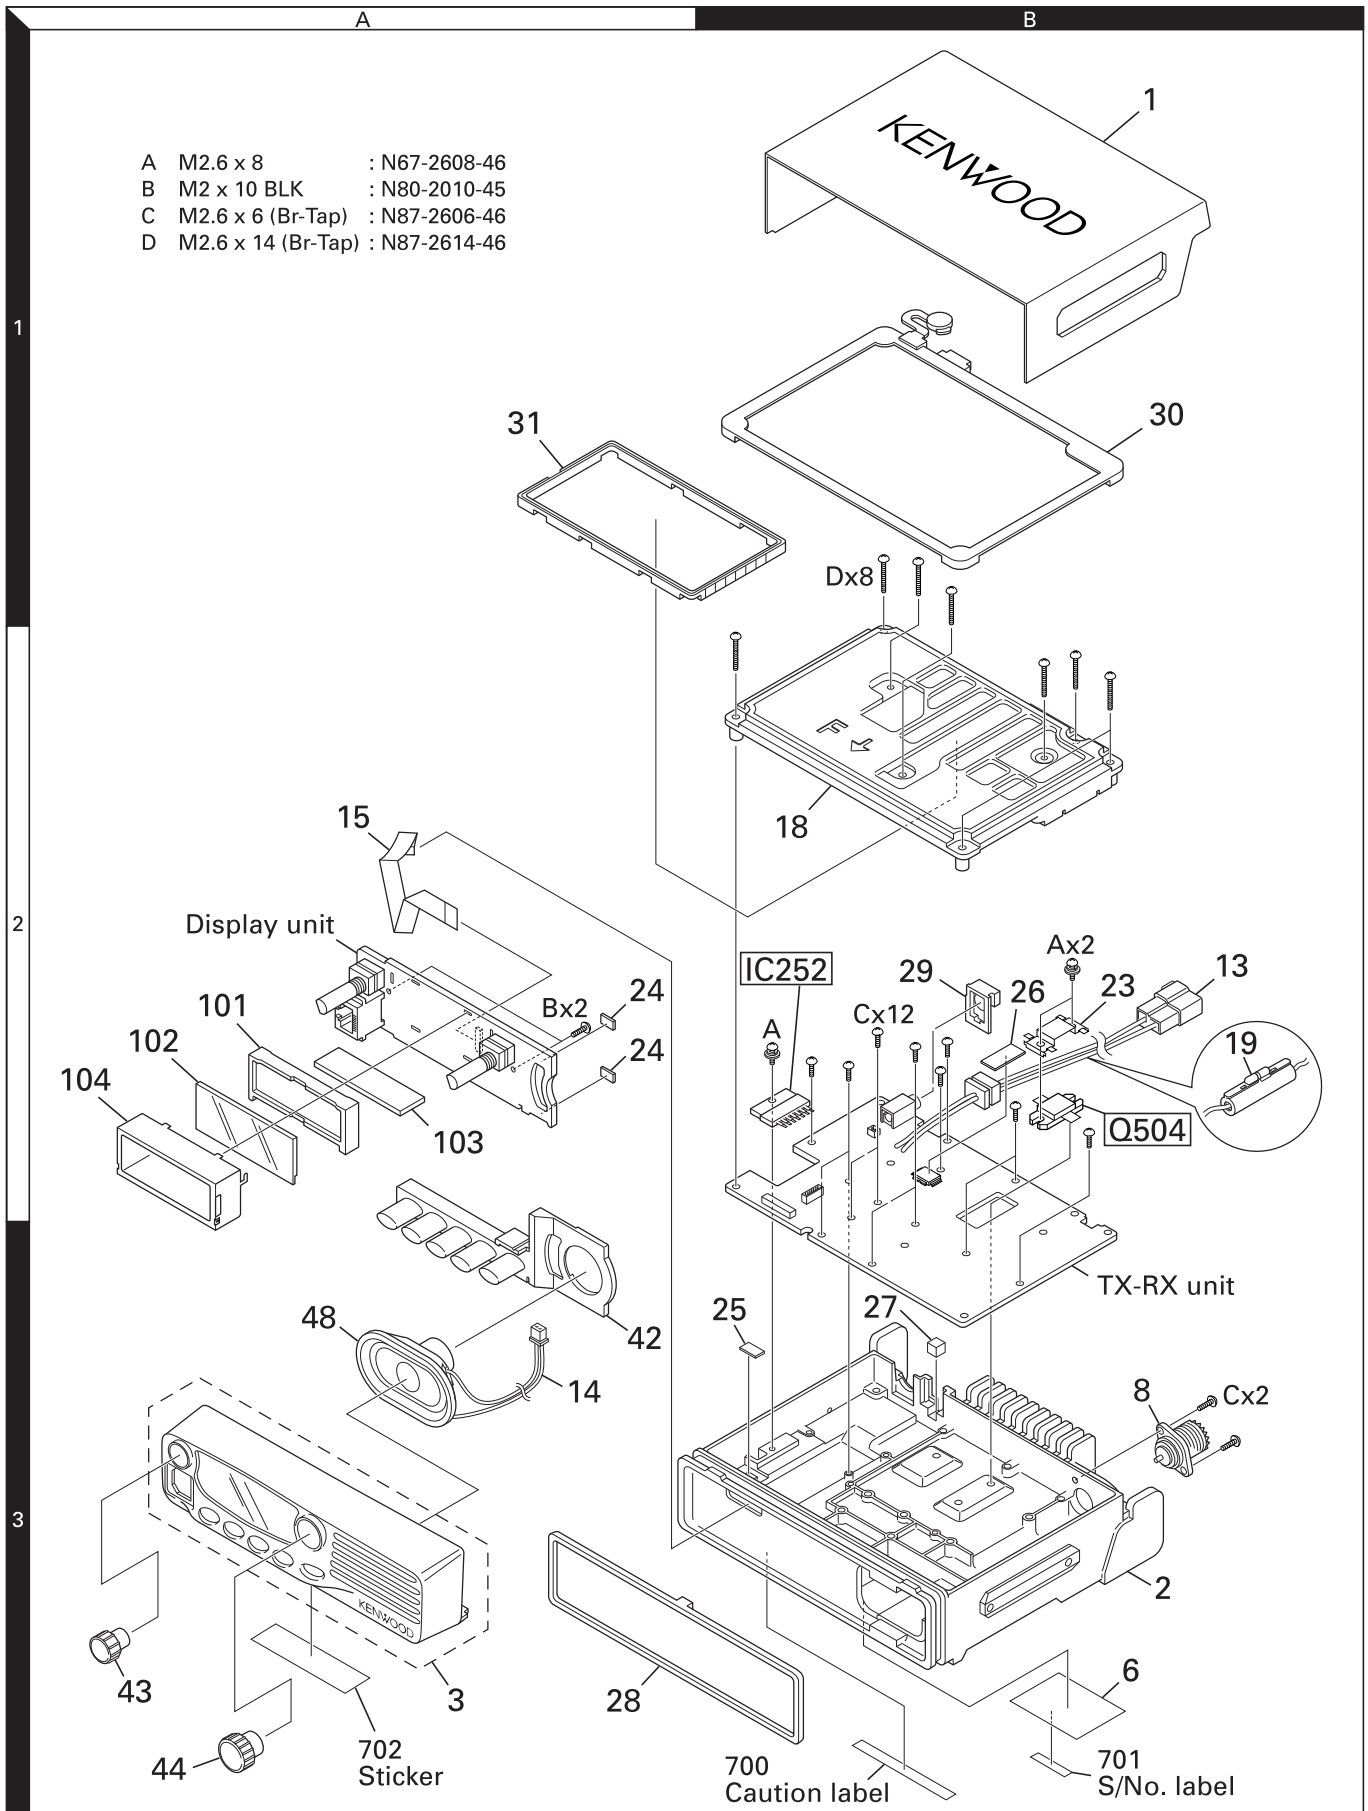

PACKING

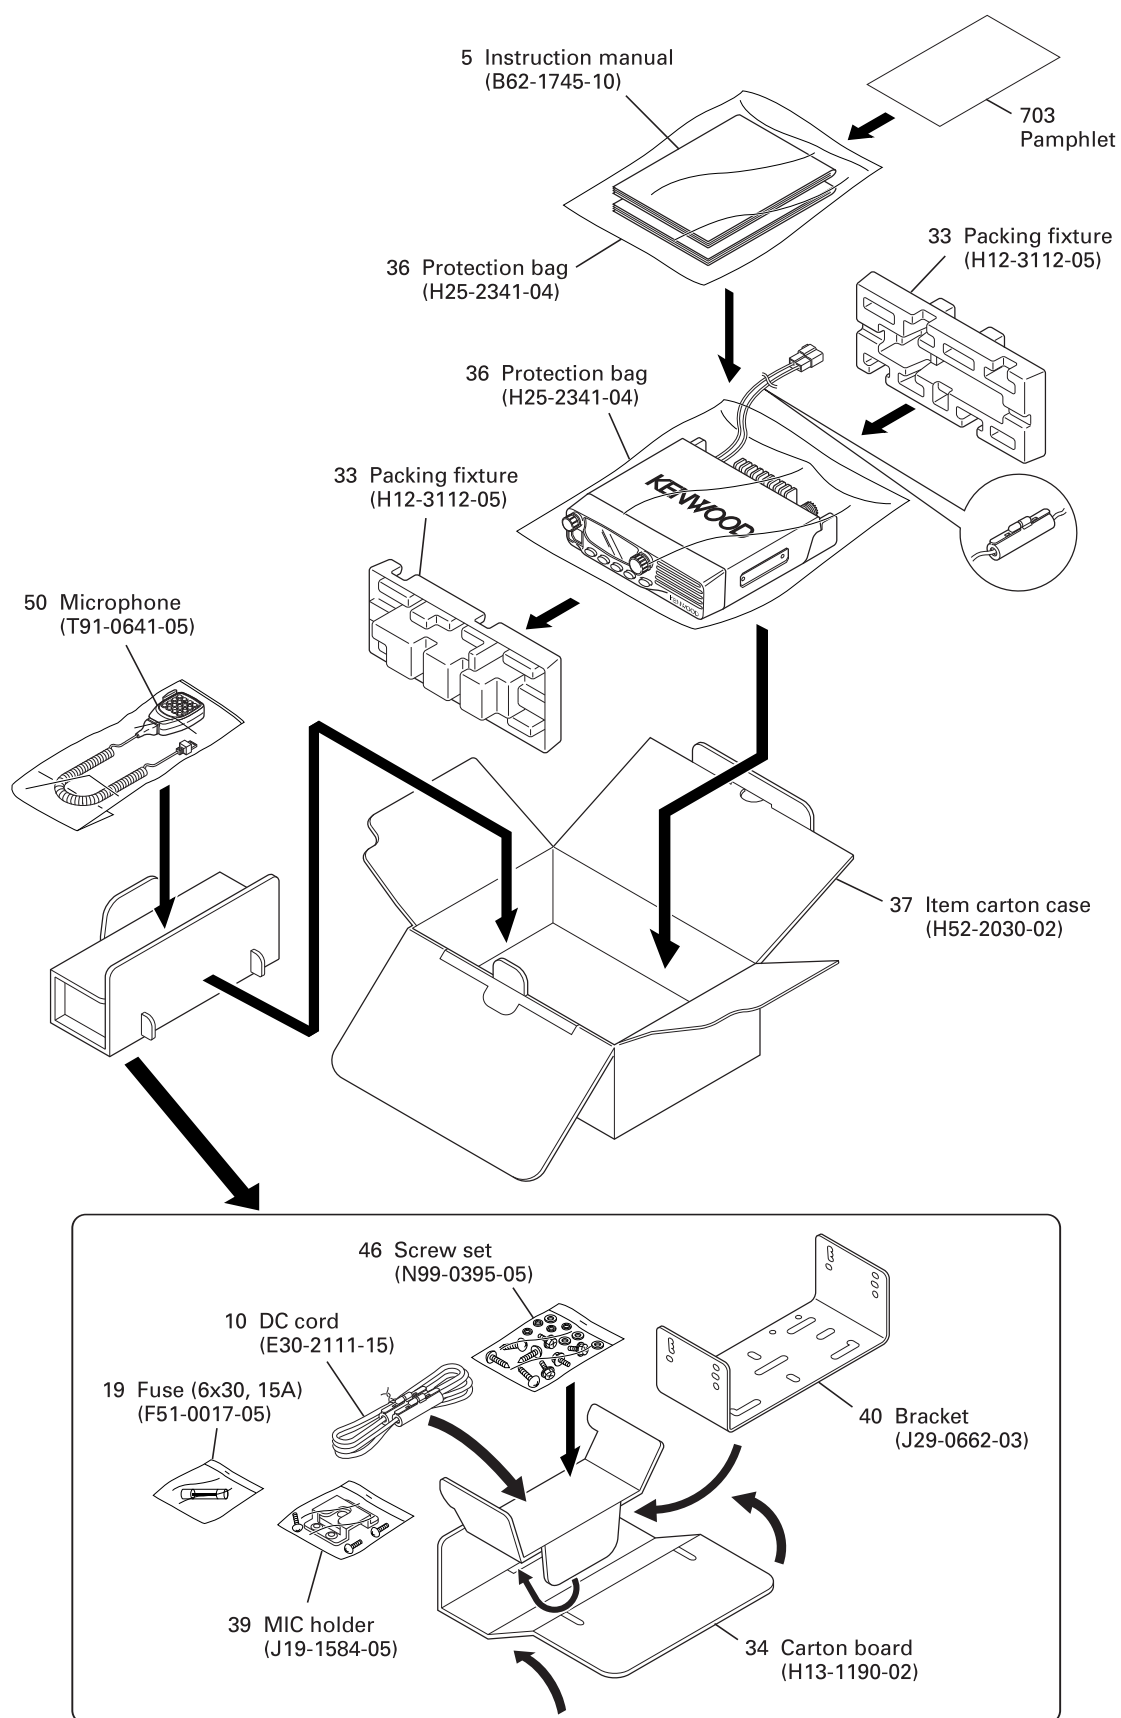

PARTS LIST

* New Parts. ⚠ indicates safety critical components.
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

L : Scandinavia **K** : USA **P** : Canada
Y : PX (Far East, Hawaii) **T** : England **E** : Europe
Y : AAFES (Europe) **X** : Australia **M** : Other Areas

TM-471A, DISPLAY UNIT (X54-3450-10)
TX-RX UNIT (X57-686X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
TM-471A					
1	1B	*	A01-2193-01	CABINET	C C2
2	3B		A10-4048-21	CHASSIS	
3	3A	*	A62-1102-03	PANEL ASSY	
5	1D	*	B62-1745-10	INSTRUCTION MANUAL	
6	3B	*	B72-2176-04	MODEL NAME PLATE	
6	3B	*	B72-2177-04	MODEL NAME PLATE	
8	3B		E04-0167-05	RF COAXIAL PECEPTACLE (M)	
10	3C		E30-2111-15	DC CORD ACCESSORY	
13	3B	*	E30-7512-05	DC CORD (RADIO)	
14	3A		E37-1082-05	SPEAKER WIRE	
15	2A	*	E37-1097-05	FLAT CABLE	
18	2B		F10-2449-01	SHIELDING COVER	
19	2B,3C		F51-0017-05	FUSE (6*30) (15A)	
23	2B		G02-0894-04	EARTH SPRING (FINAL FET)	
24	2A	*	G10-1324-04	FIBROUS SHEET (DISPLAY UNIT)	
25	3B		G11-4127-14	RUBBER SHEET (CHASSIS)	
26	2B		G11-4240-04	RUBBER SHEET (DRIVE FET)	
27	3B		G13-1468-04	CUSHION (CHASSIS)	
28	3A		G53-1525-03	PACKING (PANEL)	
29	2B		G53-1542-03	PACKING (PHONE JACK)	
30	1B		G53-1544-01	PACKING (SHIELDING COVER)	
31	1A		G53-1548-02	GASKET	
33	2C,1D		H12-3112-05	PACKING FIXTURE	
34	3D		H13-1190-02	CARTON BOARD	
36	1D		H25-2341-04	PROTECTION BAG	
37	2D	*	H52-2030-02	ITEM CARTON CASE	
39	3C		J19-1584-05	MIC HOLDER ACCESSORY	
40	3D		J29-0662-03	BRACKET ACCESSORY	
42	3A	*	K29-9291-01	KEY TOP	
43	3A	*	K29-9292-03	KNOB (VOLUME)	
44	3A	*	K29-9293-03	KNOB (CNCODER)	
A	2B		N67-2608-46	PAN HEAD SEMS SCREW W	
B	2A		N80-2010-45	PAN HEAD TAPTITE SCREW	
C	2B,3B		N87-2606-46	BRAZIER HEAD TAPTITE SCREW	
D	1B,2B		N87-2614-46	BRAZIER HEAD TAPTITE SCREW	
46	3D		N99-0395-05	SCREW SET ACCESSORY	
48	3A		T07-0739-05	SPEAKER	
50	2C	*	T91-0641-05	MICROPHONE ACCESSORY	
DISPLAY UNIT (X54-3450-10)					
101	2A	*	B11-1809-03	ILLUMINATION GUIDE (LCD)	
102	2A	*	B38-0885-05	LCD	
D2-4			B30-2205-05	LED (YG)	
D19-30			B30-2205-05	LED (YG)	
C4			CC73GCH1H101J	CHIP C 100PF J	
C15,16			CC73GCH1H101J	CHIP C 100PF J	
C19			CK73GB1H681K	CHIP C 680PF K	
C22			CK73GB1H102K	CHIP C 1000PF K	
C24			CK73GB1C104K	CHIP C 0.10UF K	

Ref. No.	Address	New parts	Parts No.	Description			Desti- nation			
C25			CK73GB1H102K	CHIP C	1000PF	K				
C27			CK73GB1H102K	CHIP C	1000PF	K				
C30			CK73GB1C104K	CHIP C	0.10UF	K				
C31-33			CK73GB1H102K	CHIP C	1000PF	K				
C34,35			CK73GB1H472K	CHIP C	4700PF	K				
C36			CK73GB0J105K	CHIP C	1.0UF	K				
C38			CK73GB1H471K	CHIP C	470PF	K				
C39,40			CK73GB1C104K	CHIP C	0.10UF	K				
103			2A	*	E29-1201-04	INTER CONNECTOR (LCD)				
CN1				*	E40-6005-05	FLAT CABLE CONNECTOR				
J1	E08-0877-05	MODULAR JACK								
104	J21-8463-03	HARDWARE FIXTURE (LCD)								
L1	L92-0138-05	FERRITE CHIP								
CP1	R90-0724-05	MULTI-COMP			1K X4					
R8	RK73GB1J102J	CHIP R			1.0K	J	1/16W			
R10	RK73GB1J122J	CHIP R			1.2K	J	1/16W			
R21-23	RK73GB1J103J	CHIP R			10K	J	1/16W			
R25	RK73GB1J563J	CHIP R			56K	J	1/16W			
R26					RK73GB1J392J	CHIP R	3.9K	J	1/16W	
R41			RK73FB2A560J	CHIP R	56	J	1/10W			
R42			RK73GB1J272J	CHIP R	2.7K	J	1/16W			
R43			RK73GB1J821J	CHIP R	820	J	1/16W			
R44			RK73GB1J183J	CHIP R	18K	J	1/16W			
R45			RK73GB1J333J	CHIP R	33K	J	1/16W			
R46			RK73GB1J101J	CHIP R	100	J	1/16W			
R47,48			RK73GB1J473J	CHIP R	47K	J	1/16W			
R49,50			RK73FB2A560J	CHIP R	56	J	1/10W			
R51-53			R92-1252-05	CHIP R	0 OHM	J	1/16W			
R55		*	R92-1252-05	CHIP R	0 OHM	J	1/16W			
R54			RK73FB2A560J	CHIP R	56	J	1/10W			
VR1			R31-0646-05	VARIABLE RESISTOR						
D31			1SS355	DIODE						
IC3			LC75854W	MOS IC						
IC3			PT6554LQ	MOS IC						
Q6			KRC102S	DIGITAL TRANSISTOR						
Q9			2SB1132(Q,R)	TRANSISTOR						
Q10			KRA225S	DIGITAL TRANSISTOR						
Q12			UMG3N	TRANSISTOR						
S1	W02-3665-05	ENCODER								
TX-RX UNIT (X57-686X-XX) 3-00 : C 3-01 : C2										
C10			CK73GB1H102K	CHIP C	1000PF	K				
C13-20			CK73GB1H471K	CHIP C	470PF	K				
C28			CK73GB1H221K	CHIP C	220PF	K				
C29			CK73GB1H471K	CHIP C	470PF	K				
C30			CK73GB1H102K	CHIP C	1000PF	K				
C32			CK73GB1H102K	CHIP C	1000PF	K				
C33			CK73GB1H471K	CHIP C	470PF	K				
C34			CE04EQ1E331M	ELECTRO	330UF	25WV				
C35-38			CK73GB1H471K	CHIP C	470PF	K				
C39,40			CK73GB1C104K	CHIP C	0.10UF	K				

PARTS LIST

TX-RX UNIT (X57-686X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C41			C92-0795-05	CHIP-TAN 22UF 10WV		C256			CK73GB1E183K	CHIP C 0.018UF K	
C42			CK73GB1H103K	CHIP C 0.010UF K		C257			CK73GB1C393K	CHIP C 0.039UF K	
C43-45			C92-0795-05	CHIP-TAN 22UF 10WV		C258-261			CK73GB1H103J	CHIP C 0.010UF J	
C48-50			CK73GB1H103K	CHIP C 0.010UF K		C262			CK73GB1H471K	CHIP C 470PF K	
C51			C92-0589-05	CHIP-TAN 47UF 6.3WV		C263,264			CK73GB1C333K	CHIP C 0.033UF K	
C52,53			CK73GB1H471K	CHIP C 470PF K		C265			CK73GB1C104K	CHIP C 0.10UF K	
C54,55			CK73GB1C104K	CHIP C 0.10UF K		C266			CK73GB1A105K	CHIP C 1.0UF K	
C56			CK73GB1H471K	CHIP C 470PF K		C267			CK73GB1A474K	CHIP C 0.47UF K	
C61			CK73GB1H471K	CHIP C 470PF K		C268			CK73GB1A105K	CHIP C 1.0UF K	
C66			CK73GB1H471K	CHIP C 470PF K		C270			C92-0507-05	CHIP-TAN 4.7UF 6.3WV	
C82			CK73GB1H471K	CHIP C 470PF K		C271			CK73GB1H122K	CHIP C 1200PF K	
C83			CK73GB1C104K	CHIP C 0.10UF K		C272			CK73GB1H102K	CHIP C 1000PF K	
C87			CC73GCH1H030C	CHIP C 3.0PF C		C273			CK73GB1A105K	CHIP C 1.0UF K	
C88,89			CC73GCH1H040C	CHIP C 4.0PF C		C274			CK73FB1C224K	CHIP C 0.22UF K	
C90			CC73GCH1H030C	CHIP C 3.0PF C		C275			CK73GB1A105K	CHIP C 1.0UF K	
C97,98			CK73GB1H471K	CHIP C 470PF K		C276,277			CK73GB1H471K	CHIP C 470PF K	
C101			CK73GB1H471K	CHIP C 470PF K		C278			CK73GB1C104K	CHIP C 0.10UF K	
C102			CK73GB1C104K	CHIP C 0.10UF K		C279			C92-0516-05	CHIP-TAN 4.7UF 16WV	
C104			CK73GB1C104K	CHIP C 0.10UF K		C280			C92-0040-05	CHIP-ELE 47UF 16WV	
C128			CK73GB1H102K	CHIP C 1000PF K		C281			CK73GB1H471K	CHIP C 470PF K	
C151			CK73GB1H182K	CHIP C 1800PF K		C282		*	CE04EQ1E331M	ELECTRO 330UF 25WV	
C152			CK73GB1H392K	CHIP C 3900PF K		C283			CK73GB1H102K	CHIP C 1000PF K	
C161			CK73GB1H102K	CHIP C 1000PF K		C301			C92-0507-05	CHIP-TAN 4.7UF 6.3WV	
C162			C92-0507-05	CHIP-TAN 4.7UF 6.3WV		C302			CK73GB1H102K	CHIP C 1000PF K	
C163			CK73GB1H471K	CHIP C 470PF K		C303			CK73GB1H472K	CHIP C 4700PF K	
C164			C92-0560-05	CHIP-TAN 10UF 6.3WV		C304,305			CC73GCH1H221J	CHIP C 220PF J	
C165			CK73GB1A105K	CHIP C 1.0UF K		C306			CK73GB1H102K	CHIP C 1000PF K	
C201			CK73GB1C104K	CHIP C 0.10UF K		C307			CK73GB1E223K	CHIP C 0.022UF K	
C202			CK73GB1H471K	CHIP C 470PF K		C308			CK73GB1H102K	CHIP C 1000PF K	
C203			CK73GB1C273K	CHIP C 0.027UF K		C309			CK73GB1E223K	CHIP C 0.022UF K	
C204			C92-0514-05	CHIP-TAN 2.2UF 10WV		C310			CK73FB1C334K	CHIP C 0.33UF K	
C205			CK73GB1C104K	CHIP C 0.10UF K		C311,312			CK73GB1C104K	CHIP C 0.10UF K	
C206			CK73GB1H102K	CHIP C 1000PF K		C313			C92-0662-05	CHIP-TAN 15UF 6.3WV	
C207			CK73GB1C223K	CHIP C 0.022UF K		C314			CK73GB1H103K	CHIP C 0.010UF K	
C208			CK73GB1H103K	CHIP C 0.010UF K		C315-318			CK73GB1C104K	CHIP C 0.10UF K	
C209			CC73GCH1H680J	CHIP C 68PF J		C319			CK73GB1H102K	CHIP C 1000PF K	
C210			CK73GB1C104K	CHIP C 0.10UF K		C321			CC73GCH1H680J	CHIP C 68PF J	
C211			CK73GB1H821K	CHIP C 820PF K		C322			CC73GCH1H560J	CHIP C 56PF J	
C212			CK73GB1H122K	CHIP C 1200PF K		C323			CC73GCH1H271J	CHIP C 270PF J	
C213			CK73GB1H332K	CHIP C 3300PF K		C324			CK73GB1H103K	CHIP C 0.010UF K	
C214			CC73GCH1H151J	CHIP C 150PF J		C326			CK73GB1H103K	CHIP C 0.010UF K	
C215			CK73GB1C104K	CHIP C 0.10UF K		C350			CK73GB1H471K	CHIP C 470PF K	
C216			CC73GCH1H390J	CHIP C 39PF J		C351			CC73GCH1H330J	CHIP C 33PF J	
C217,218			C92-0560-05	CHIP-TAN 10UF 6.3WV		C353			CK73GB1H103K	CHIP C 0.010UF K	
C220			C92-0507-05	CHIP-TAN 4.7UF 6.3WV		C354			CC73GCH1H060B	CHIP C 6.0PF B	
C222			CK73GB1C104K	CHIP C 0.10UF K		C355			CC73GCH1H180J	CHIP C 18PF J	
C225			C92-0004-05	CHIP-TAN 1.0UF 16WV		C356			CC73GCH1H020B	CHIP C 2.0PF B	
C226			CK73GB1H472K	CHIP C 4700PF K		C357			CK73GB1H103K	CHIP C 0.010UF K	
C227			CK73GB1E103K	CHIP C 0.010UF K		C358			CK73GB1H471K	CHIP C 470PF K	
C228			C92-0560-05	CHIP-TAN 10UF 6.3WV		C359			CC73GCH1H120J	CHIP C 12PF J	
C230			CK73GB1C104K	CHIP C 0.10UF K		C360			CC73GCH1H080B	CHIP C 8.0PF B	
C231,232			CK73GB1H471K	CHIP C 470PF K		C361,362			CK73GB1H471K	CHIP C 470PF K	
C233			C92-0507-05	CHIP-TAN 4.7UF 6.3WV		C363			CK73GB1H103K	CHIP C 0.010UF K	
C235			CK73GB1A105K	CHIP C 1.0UF K		C364			CK73GB1H471K	CHIP C 470PF K	
C249			C92-0507-05	CHIP-TAN 4.7UF 6.3WV		C366			CK73GB1C104K	CHIP C 0.10UF K	
C250			CK73GB1C104K	CHIP C 0.10UF K		C367			CK73GB1H471K	CHIP C 470PF K	
C251			C92-0714-05	CHIP-TAN 4.7UF 6.3WV		C368			CC73GCH1H070B	CHIP C 7.0PF B	C
C252			CC73GCH1H390J	CHIP C 39PF J		C368			CC73GCH1H100C	CHIP C 10PF C	C2
C253,254			CK73GB1A224K	CHIP C 0.22UF K		C369			CC73GCH1HR75B	CHIP C 0.75PF B	C2
C255			CK73GB1H822K	CHIP C 8200PF K		C370			CK73GB1H471K	CHIP C 470PF K	

PARTS LIST

TX-RX UNIT (X57-686X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C371			CC73GCH1HR75B	CHIP C 0.75PF B	C2	C438			CC73GCH1H010B	CHIP C 1.0PF B	C2
C371			CC73GCH1H0R5B	CHIP C 0.5PF B	C	C438,439			CC73GCH1H020B	CHIP C 2.0PF B	C
C372			CC73GCH1H150J	CHIP C 15PF J	C	C439			CC73GCH1H030B	CHIP C 3.0PF B	C2
C372			CC73GCH1H200J	CHIP C 20PF J	C2	C440			CC73GCH1H030B	CHIP C 3.0PF B	C
C373			CC73GCH1H080B	CHIP C 8.0PF B	C	C440			CC73GCH1H040B	CHIP C 4.0PF B	C2
C373			CC73GCH1H100C	CHIP C 10PF C	C2	C441			CC73GCH1H0R3B	CHIP C 0.3PF B	
C374			CC73GCH1H070B	CHIP C 7.0PF B		C442			C92-0560-05	CHIP-TAN 10UF 6.3WV	
C375-380			CK73GB1H471K	CHIP C 470PF K		C444			CK73GB1H471K	CHIP C 470PF K	
C381			CC73GCH1H050B	CHIP C 5.0PF B	C2	C448,449			CK73GB1H471K	CHIP C 470PF K	
C381			CC73GCH1H070B	CHIP C 7.0PF B	C	C450			C92-0795-05	CHIP-TAN 22UF 10WV	
C382			CK73GB1H471K	CHIP C 470PF K		C451,452			CK73GB1H471K	CHIP C 470PF K	
C383			CC73GCH1H0R5B	CHIP C 0.5PF B		C454			CC73GCH1H040B	CHIP C 4.0PF B	C
C384			CC73GCH1H070B	CHIP C 7.0PF B	C	C454			CC73GCH1H060B	CHIP C 6.0PF B	C2
C384			CC73GCH1H080B	CHIP C 8.0PF B	C2	C455			CC73GCH1H020B	CHIP C 2.0PF B	
C385			CK73GB1H471K	CHIP C 470PF K		C456			CC73GCH1H030B	CHIP C 3.0PF B	C2
C386			CC73GCH1HR75B	CHIP C 0.75PF B		C456			CC73GCH1H040B	CHIP C 4.0PF B	C
C387			CC73GCH1H010B	CHIP C 1.0PF B	C2	C461			CK73GB1H471K	CHIP C 470PF K	
C388			CC73GCH1H060B	CHIP C 6.0PF B		C463,464			CK73GB1H471K	CHIP C 470PF K	
C389			CK73GB1H103K	CHIP C 0.010UF K		C466			CC73GCH1H050B	CHIP C 5.0PF B	
C390			CC73GCH1H080B	CHIP C 8.0PF B	C	C467			CK73GB1H471K	CHIP C 470PF K	
C390			CC73GCH1H100C	CHIP C 10PF C	C2	C472			CC73GCH1H030B	CHIP C 3.0PF B	C
C391			CK73GB1H471K	CHIP C 470PF K		C472			CC73GCH1H2R5B	CHIP C 2.5PF B	C2
C392			CC73GCH1H030B	CHIP C 3.0PF B	C	C473			CK73GB1H102K	CHIP C 1000PF K	
C392			CC73GCH1H060B	CHIP C 6.0PF B	C2	C475,476			CK73GB1H102K	CHIP C 1000PF K	
C393			CC73GCH1HR75B	CHIP C 0.75PF B	C2	C501			CK73GB1H471K	CHIP C 470PF K	
C393			CC73GCH1H2R5B	CHIP C 2.5PF B	C	C502			CC73GCH1H030B	CHIP C 3.0PF B	C2
C400			CK73GB1C104K	CHIP C 0.10UF K		C502			CC73GCH1H050B	CHIP C 5.0PF B	C
C401-403			CC73GCH1H101J	CHIP C 100PF J		C504,505			CK73GB1H471K	CHIP C 470PF K	
C404			C92-0662-05	CHIP-TAN 15UF 6.3WV		C507			CK73GB1H471K	CHIP C 470PF K	
C406			CK73GB1H102K	CHIP C 1000PF K		C509			CC73GCH1H040B	CHIP C 4.0PF B	
C408			CC73GCH1H220J	CHIP C 22PF J		C510-515			CK73GB1H471K	CHIP C 470PF K	
C409			CK73GB1C104K	CHIP C 0.10UF K		C516			CC73GCH1H030B	CHIP C 3.0PF B	
C410			C92-0560-05	CHIP-TAN 10UF 6.3WV		C517			CK73GB1H471K	CHIP C 470PF K	
C411			CK73GB1C104K	CHIP C 0.10UF K		C518			C92-0040-05	CHIP-ELE 47UF 16WV	
C412			C92-0560-05	CHIP-TAN 10UF 6.3WV		C520,521			CK73GB1H471K	CHIP C 470PF K	
C413			CK73GB1H103K	CHIP C 0.010UF K		C522			CK73GB1C104K	CHIP C 0.10UF K	
C414			CK73GB1C104K	CHIP C 0.10UF K		C523			CC73FCH1H270J	CHIP C 27PF J	C
C416,417			CK73GB1H471K	CHIP C 470PF K		C523			CC73FCH1H470J	CHIP C 47PF J	C2
C418			CK73GB1H102K	CHIP C 1000PF K		C524			CC73FCH1H080D	CHIP C 8.0PF D	C2
C421,422			CK73GB1H471K	CHIP C 470PF K		C524			CC73FCH1H100D	CHIP C 10PF D	C
C423			C92-0555-05	CHIP-TAN 0.047UF 35WV		C526			CC73FCH1H090D	CHIP C 9.0PF D	
C424			C92-0543-05	CHIP-TAN 3.3UF 10WV		C527			CC73FCH1H120J	CHIP C 12PF J	C2
C425			C92-0001-05	CHIP C 0.1UF 35WV		C527			CC73FCH1H150J	CHIP C 15PF J	C
C426			CC73GCH1H080B	CHIP C 8.0PF B	C	C528			CC73FCH1H470J	CHIP C 47PF J	
C426			CC73GCH1H180J	CHIP C 18PF J	C2	C532			CK73GB1H471K	CHIP C 470PF K	
C427			CC73GCH1H070B	CHIP C 7.0PF B	C	C534			CK73FB1H471K	CHIP C 470PF K	
C427			CC73GCH1H120G	CHIP C 12PF G	C2	C535			CK73GB1H221K	CHIP C 220PF K	
C428			CK73GB1H471K	CHIP C 470PF K		C536			CK73GB1H471K	CHIP C 470PF K	
C429			CC73GCH1H1R5B	CHIP C 1.5PF B	C2	C537			C92-0719-05	CHIP-TAN 47UF 25WV	
C429,430			CC73GCH1H020B	CHIP C 2.0PF B	C	C538			CK73FB1C474K	CHIP C 0.47UF K	
C430			CC73GCH1H060B	CHIP C 6.0PF B	C2	C539			CK73FB1H471K	CHIP C 470PF K	
C431			CC73GCH1H030B	CHIP C 3.0PF B	C	C540			C93-0558-05	CHIP C 8.0PF D	C
C431			CC73GCH1H050B	CHIP C 5.0PF B	C2	C540			C93-0568-05	CHIP C 47PF J	C2
C432			CC73GCH1H0R5B	CHIP C 0.5PF B		C541			C93-0563-05	CHIP C 18PF J	C
C433			CK73GB1H471K	CHIP C 470PF K		C541			C93-0566-05	CHIP C 33PF J	C2
C434			CC73GCH1H050B	CHIP C 5.0PF B	C	C543			C93-0599-05	CHIP C 470PF K	
C434			CC73GCH1H090B	CHIP C 9.0PF B	C2	C545			C93-0560-05	CHIP C 10PF D	C2
C435			CC73GCH1H060B	CHIP C 6.0PF B		C548,549			C93-0566-05	CHIP C 33PF J	C2
C436			CC73GCH1H0R5B	CHIP C 0.5PF B		C548,549			C93-0567-05	CHIP C 39PF J	C
C437			CK73GB1H471K	CHIP C 470PF K		C550,551			CM73F2H300J	CHIP C 30PF J	

PARTS LIST

TX-RX UNIT (X57-686X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C555			CK73FB1C474K	CHIP C 0.47UF K		L360			L34-4603-05	AIR-CORE COIL	C2
C556			C93-0599-05	CHIP C 470PF K		L360,361			L34-4604-05	AIR-CORE COIL	C
C559			CK73GB1H103K	CHIP C 0.010UF K		L361			L34-4604-05	AIR-CORE COIL	C2
C560			CK73GB1H471K	CHIP C 470PF K		L401			L92-0443-05	FERRITE CHIP	
C564			CM73F2H150J	CHIP C 15PF J	C2	L403			L41-1005-08	SMALL FIXED INDUCTOR	
C564			CM73F2H200J	CHIP C 20PF J	C	L404			L92-0442-05	FERRITE CHIP	
C567			CM73F2H100D	CHIP C 10PF D	C	L405			L92-0443-05	FERRITE CHIP	
C570			C93-0599-05	CHIP C 470PF K		L406,407			L40-2785-92	SMALL FIXED INDUCTOR (270NH)	C
C571			CK73GB1H471K	CHIP C 470PF K		L406,407			L40-4791-86	SMALL FIXED INDUCTOR (4.7UH)	C2
C572,573			CK73GB1H103K	CHIP C 0.010UF K		L408			L40-2778-67	SMALL FIXED INDUCTOR (27NH)	C2
C574			CK73GB1H102K	CHIP C 1000PF K		L408			L40-5678-67	SMALL FIXED INDUCTOR (56NH)	C
C575			CK73GB1H471K	CHIP C 470PF K		L409-412			L40-2785-92	SMALL FIXED INDUCTOR (270NH)	C
C576			CK73GB1H221K	CHIP C 220PF K		L409,410			L40-4791-86	SMALL FIXED INDUCTOR (4.7UH)	C2
C579			CM73F2H090D	CHIP C 9.0PF D	C2	L411,412			L40-2702-86	SMALL FIXED INDUCTOR (27UH)	C2
C580			C93-0554-05	CHIP C 4.0PF C	C2	L413			L40-2778-67	SMALL FIXED INDUCTOR (27NH)	C2
C601			CC73GCH1H050B	CHIP C 5.0PF B	C	L413			L40-4778-67	SMALL FIXED INDUCTOR (47NH/8)	C
C602			C93-0560-05	CHIP C 10PF D	C	L414			L40-1885-92	SMALL FIXED INDUCTOR (180NH)	C
C602			C93-0599-05	CHIP C 470PF K	C2	L414,415			L40-2702-86	SMALL FIXED INDUCTOR (27UH)	C2
C603			CC73GCH1H0R5B	CHIP C 0.5PF B		L415			L40-2785-92	SMALL FIXED INDUCTOR (270NH)	C
C604			CC73GCH1H010B	CHIP C 1.0PF B	C2	L416,417			L92-0443-05	FERRITE CHIP	
C604			CC73GCH1H020B	CHIP C 2.0PF B	C	L418			L41-2775-06	SMALL FIXED INDUCTOR	
C605			C93-0554-05	CHIP C 4.0PF C	C2	L420			L41-2775-06	SMALL FIXED INDUCTOR	
C605			C93-0556-05	CHIP C 6.0PF D	C	L470			L40-2275-92	SMALL FIXED INDUCTOR (22NH)	C2
C607			CC73GCH1H0R5B	CHIP C 0.5PF B		L470			L40-2775-92	SMALL FIXED INDUCTOR (27NH)	C
C608			CC73GCH1H020B	CHIP C 2.0PF B	C	L501			L41-1575-06	SMALL FIXED INDUCTOR	
C608			CC73GCH1H030B	CHIP C 3.0PF B	C2	L502			L41-2275-08	SMALL FIXED INDUCTOR	
C610			C93-0556-05	CHIP C 6.0PF D	C2	L503			L41-3363-08	SMALL FIXED INDUCTOR	
C610			C93-0560-05	CHIP C 10PF D	C	L504			L41-1075-08	SMALL FIXED INDUCTOR	
C611			C93-0553-05	CHIP C 3.0PF C	C	L505			L34-4603-05	AIR-CORE COIL	
C611			C93-0554-05	CHIP C 4.0PF C	C2	L506			L34-4607-05	AIR-CORE COIL	
C613,614			CK73GB1H471K	CHIP C 470PF K		L507			L34-4602-05	AIR-CORE COIL	C2
C620			C93-0550-05	CHIP C 1.0PF C	C2	L507			L34-4603-05	AIR-CORE COIL	C
TC401			C05-0245-05	CERAMIC TRIMMER CAP (10PF)	C	L508			L34-4694-05	AIR-CORE COIL	
TC401,402			C05-0245-05	CERAMIC TRIMMER CAP (10PF)	C2	L509			L34-4667-05	AIR-CORE COIL	
TC402			C05-0399-05	CERAMIC TRIMMER CAP (6PF)	C	L601			L34-4669-05	AIR-CORE COIL	
-			E11-0425-05	3.5D PHONE JACK (3P)		L602,603			L34-4694-05	AIR-CORE COIL	
-			E37-1127-05	PROCESSED LEAD WIRE		L604			L34-4667-05	AIR-CORE COIL	
CN1			E40-6268-05	FLAT CABLE CONNECTOR		X86		*	L78-1409-05	RESONATOR (8.00MHZ)	
CN2			E40-5705-05	PIN ASSY		X401		*	L77-1944-05	TCXO (16.8MHZ)	
CN5			E40-3246-05	PIN ASSY		XF351		*	L71-0620-05	MCF (49.95MHZ)	
F1			F53-0246-05	FUSE(4.0A/32V)		R1			R92-1252-05	CHIP R 0 OHM J 1/16W	
F501			F53-0108-05	FUSE(1.8A/50V)		R2,3			RK73GB1J101J	CHIP R 100 J 1/16W	
CF301			L72-0993-05	CERAMIC FILTER		R4-8			RK73GB1J102J	CHIP R 1.0K J 1/16W	
CF302			L72-0999-05	CERAMIC FILTER		R31			RK73GB1J472J	CHIP R 4.7K J 1/16W	
L101			L92-0443-05	FERRITE CHIP		R32			R92-1215-05	CHIP R 470 J 1/2W	
L201			L92-0443-05	FERRITE CHIP		R33			RK73GB1J473J	CHIP R 47K J 1/16W	
L301			L34-4554-05	COIL		R34			RK73GB1J472J	CHIP R 4.7K J 1/16W	
L302			L41-3385-08	SMALL FIXED INDUCTOR		R35			RK73GB1J473J	CHIP R 47K J 1/16W	
L303,304			L40-3381-86	SMALL FIXED INDUCTOR (0.33UH)		R36			RK73GB1J152J	CHIP R 1.5K J 1/16W	
L351,352			L40-4785-85	SMALL FIXED INDUCTOR (0.47UH)		R37			RK73GB1J103J	CHIP R 10K J 1/16W	
L354,355			L34-4604-05	AIR-CORE COIL	C2	R38			RK73GB1J334J	CHIP R 330K J 1/16W	
L354,355			L34-4605-05	AIR-CORE COIL	C	R39			RK73GB1J474J	CHIP R 470K J 1/16W	
L356			L40-1875-92	SMALL FIXED INDUCTOR (18NH)	C2	R40			RK73GB1J394J	CHIP R 390K J 1/16W	
L356			L40-2275-92	SMALL FIXED INDUCTOR (22NH)	C	R41			RK73GB1J334J	CHIP R 330K J 1/16W	
L357			L40-3375-92	SMALL FIXED INDUCTOR (33NH)	C2	R61			RK73GB1J471J	CHIP R 470 J 1/16W	
L357			L40-3975-92	SMALL FIXED INDUCTOR (39NH)	C	R62,63			R92-1252-05	CHIP R 0 OHM J 1/16W	
L358			L34-4605-05	AIR-CORE COIL	C2	R70			RK73GB1J473J	CHIP R 47K J 1/16W	
L358,359			L34-4605-05	AIR-CORE COIL	C	R81			RK73GB1J473J	CHIP R 47K J 1/16W	
L359			L34-4604-05	AIR-CORE COIL	C2	R82			R92-1252-05	CHIP R 0 OHM J 1/16W	
						R86			R92-1252-05	CHIP R 0 OHM J 1/16W	

PARTS LIST

TX-RX UNIT (X57-686X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R87			RK73GB1J102J	CHIP R 1.0K J 1/16W		R255,256			RK73GB1J562J	CHIP R 5.6K J 1/16W	
R91,92			RK73GB1J102J	CHIP R 1.0K J 1/16W		R257			RK73GB1J105J	CHIP R 1.0M J 1/16W	
R93			RK73GB1J682J	CHIP R 6.8K J 1/16W	C	R258			RK73GB1J272J	CHIP R 2.7K J 1/16W	
R93,94			RK73GB1J822J	CHIP R 8.2K J 1/16W	C2	R259			RK73GB1J123J	CHIP R 12K J 1/16W	
R94			RK73GB1J822J	CHIP R 8.2K J 1/16W	C	R260			RK73GB1J224J	CHIP R 220K J 1/16W	
R101,102			RK73GB1J473J	CHIP R 47K J 1/16W		R261			RK73GB1J124J	CHIP R 120K J 1/16W	
R103-106			RK73GB1J102J	CHIP R 1.0K J 1/16W		R262			RK73GB1J183J	CHIP R 18K J 1/16W	
R109			RK73GB1J152J	CHIP R 1.5K J 1/16W		R263			RK73GH1J913D	CHIP R 91K D 1/16W	
R110			RK73GB1J473J	CHIP R 47K J 1/16W		R264			RK73GH1J124D	CHIP R 120K D 1/16W	
R111			RK73GB1J102J	CHIP R 1.0K J 1/16W		R265			RK73GH1J562D	CHIP R 5.6K D 1/16W	
R114			RK73GB1J473J	CHIP R 47K J 1/16W		R266			RK73GB1J562J	CHIP R 5.6K J 1/16W	
R118			R92-1252-05	CHIP R 0 OHM J 1/16W		R268			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R119			R92-0670-05	CHIP R 0 OHM	C	R269			RK73GB1J393J	CHIP R 39K J 1/16W	
R123			R92-1252-05	CHIP R 0 OHM J 1/16W		R271			RK73GB1J332J	CHIP R 3.3K J 1/16W	
R124-127			RK73GB1J473J	CHIP R 47K J 1/16W		R272			RK73GB1J392J	CHIP R 3.9K J 1/16W	
R151			RK73GB1J103J	CHIP R 10K J 1/16W		R273			RK73GB1J123J	CHIP R 12K J 1/16W	
R152			RK73GB1J472J	CHIP R 4.7K J 1/16W		R274,275			RK73GB1J153J	CHIP R 15K J 1/16W	
R161			RK73GB1J122J	CHIP R 1.2K J 1/16W		R276			RK73GB1J473J	CHIP R 47K J 1/16W	
R162			RK73GB1J152J	CHIP R 1.5K J 1/16W		R277			RK73GB1J683J	CHIP R 68K J 1/16W	
R164-166			RK73GB1J102J	CHIP R 1.0K J 1/16W		R278			RK73GB1J123J	CHIP R 12K J 1/16W	
R200			RK73GB1J681J	CHIP R 680 J 1/16W		R279			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R203			RK73GB1J104J	CHIP R 100K J 1/16W		R280			RK73GB1J391J	CHIP R 390 J 1/16W	
R204			RK73GB1J183J	CHIP R 18K J 1/16W		R281			R92-0670-05	CHIP R 0 OHM	
R205			RK73GB1J821J	CHIP R 820 J 1/16W		R301,302			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R206			RK73GB1J101J	CHIP R 100 J 1/16W		R303			RK73GB1J223J	CHIP R 22K J 1/16W	
R207			RK73GB1J754J	CHIP R 750K J 1/16W		R304			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R208			RK73GB1J152J	CHIP R 1.5K J 1/16W		R305			RK73GB1J182J	CHIP R 1.8K J 1/16W	
R209			RK73GB1J244J	CHIP R 240K J 1/16W		R306			RK73GB1J274J	CHIP R 270K J 1/16W	
R210			RK73GB1J183J	CHIP R 18K J 1/16W		R308			RK73GB1J334J	CHIP R 330K J 1/16W	
R211,212			RK73GB1J823J	CHIP R 82K J 1/16W		R309			RK73GB1J332J	CHIP R 3.3K J 1/16W	
R213			RK73GB1J334J	CHIP R 330K J 1/16W		R310			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R214,215			RK73GB1J683J	CHIP R 68K J 1/16W		R311			RK73GB1J333J	CHIP R 33K J 1/16W	
R216			RK73GB1J274J	CHIP R 270K J 1/16W		R312			RK73GB1J473J	CHIP R 47K J 1/16W	
R217			RK73GB1J224J	CHIP R 220K J 1/16W		R313			RK73GB1J104J	CHIP R 100K J 1/16W	
R218			RK73GB1J823J	CHIP R 82K J 1/16W		R314			RK73GB1J222J	CHIP R 2.2K J 1/16W	
R219			RK73GB1J393J	CHIP R 39K J 1/16W		R315			RK73GB1J183J	CHIP R 18K J 1/16W	
R220,221			RK73GH1J153D	CHIP R 15K D 1/16W		R316			RK73GB1J223J	CHIP R 22K J 1/16W	
R222			RK73GB1J103J	CHIP R 10K J 1/16W		R317-320			RK73GB1J103J	CHIP R 10K J 1/16W	
R224			RK73GB1J561J	CHIP R 560 J 1/16W		R321			RK73GB1J223J	CHIP R 22K J 1/16W	
R225			RK73GB1J154J	CHIP R 150K J 1/16W		R322			RK73GB1J101J	CHIP R 100 J 1/16W	
R226			RK73GB1J104J	CHIP R 100K J 1/16W		R323			RK73GB1J124J	CHIP R 120K J 1/16W	
R227			RK73GB1J223J	CHIP R 22K J 1/16W		R324			R92-1252-05	CHIP R 0 OHM J 1/16W	
R228			RK73GB1J103J	CHIP R 10K J 1/16W		R325			RK73GB1J333J	CHIP R 33K J 1/16W	
R229			RK73GB1J684J	CHIP R 680K J 1/16W		R349			RK73GB1J473J	CHIP R 47K J 1/16W	C2
R230			RK73GB1J224J	CHIP R 220K J 1/16W		R350			RK73GB1J273J	CHIP R 27K J 1/16W	C1
R231			RK73GB1J124J	CHIP R 120K J 1/16W		R351			RK73GB1J471J	CHIP R 470 J 1/16W	
R232			RK73GB1J912J	CHIP R 9.1K J 1/16W		R352			RK73GB1J101J	CHIP R 100 J 1/16W	
R233			RK73GB1J682J	CHIP R 6.8K J 1/16W		R353			RK73GB1J104J	CHIP R 100K J 1/16W	
R234			R92-1252-05	CHIP R 0 OHM J 1/16W		R354			RK73GB1J561J	CHIP R 560 J 1/16W	
R236			RK73GB1J103J	CHIP R 10K J 1/16W		R355			RK73GB1J681J	CHIP R 680 J 1/16W	
R237			R92-1252-05	CHIP R 0 OHM J 1/16W		R358			RK73GB1J390J	CHIP R 39 J 1/16W	C2
R246			RK73GB1J154J	CHIP R 150K J 1/16W		R358			RK73GB1J470J	CHIP R 47 J 1/16W	C
R247			RK73GB1J124J	CHIP R 120K J 1/16W		R359			RK73GB1J823J	CHIP R 82K J 1/16W	
R248			RK73GB1J562J	CHIP R 5.6K J 1/16W		R360			RK73GB1J474J	CHIP R 470K J 1/16W	
R249			RK73GB1J153J	CHIP R 15K J 1/16W		R361			RK73GB1J270J	CHIP R 27 J 1/16W	
R250			RK73GB1J123J	CHIP R 12K J 1/16W		R362			RK73GB1J474J	CHIP R 470K J 1/16W	
R251			RK73GB1J473J	CHIP R 47K J 1/16W		R363			RK73GB1J224J	CHIP R 220K J 1/16W	
R252			RK73GB1J474J	CHIP R 470K J 1/16W		R364			R92-1252-05	CHIP R 0 OHM J 1/16W	
R253			R92-1252-05	CHIP R 0 OHM J 1/16W		R365,366			RK73GB1J104J	CHIP R 100K J 1/16W	
R254			RK73GB1J272J	CHIP R 2.7K J 1/16W		R367			RK73GB1J101J	CHIP R 100 J 1/16W	

PARTS LIST

TX-RX UNIT (X57-686X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R369			RK73GB1J151J	CHIP R 150 J 1/16W		R514			RK73FB2A470J	CHIP R 47 J 1/10W	C2
R370			RK73GB1J473J	CHIP R 47K J 1/16W		R514			RK73FB2A560J	CHIP R 56 J 1/10W	C
R371			RK73GB1J393J	CHIP R 39K J 1/16W		R515			RK73GB1J100J	CHIP R 10 J 1/16W	C2
R372			RK73GB1J683J	CHIP R 68K J 1/16W		R515			RK73GB1J330J	CHIP R 33 J 1/16W	C
R373			RK73GB1J153J	CHIP R 15K J 1/16W	C2	R516			RK73GB1J332J	CHIP R 3.3K J 1/16W	
R373			RK73GB1J183J	CHIP R 18K J 1/16W	C	R517			RK73GB1J100J	CHIP R 10 J 1/16W	
R374			RK73GB1J104J	CHIP R 100K J 1/16W		R518			RK73GB1J153J	CHIP R 15K J 1/16W	
R375			R92-1252-05	CHIP R 0 OHM J 1/16W		R519			RK73FB2A220J	CHIP R 22 J 1/10W	
R376			RK73GB1J104J	CHIP R 100K J 1/16W		R520			RK73GB1J333J	CHIP R 33K J 1/16W	
R377			R92-1252-05	CHIP R 0 OHM J 1/16W		R521			RK73GB1J101J	CHIP R 100 J 1/16W	
R378			RK73GB1J104J	CHIP R 100K J 1/16W		R522			R92-1217-05	CHIP R 0 OHM	
R380			RK73GB1J104J	CHIP R 100K J 1/16W		R524			RK73FB2A821J	CHIP R 820 J 1/10W	C2
R381			R92-1252-05	CHIP R 0 OHM J 1/16W		R525			RK73EB2B5R6J	CHIP R 5.6 J 1/8W	C2
R401-403			RK73GB1J102J	CHIP R 1.0K J 1/16W		R525			R92-0679-05	CHIP R 0 OHM	C
R404			RK73GB1J103J	CHIP R 10K J 1/16W		R526			RK73FB2A821J	CHIP R 820 J 1/10W	C2
R406			RK73GB1J103J	CHIP R 10K J 1/16W		R527			RK73GB1J474J	CHIP R 470K J 1/16W	
R407			RK73GB1J152J	CHIP R 1.5K J 1/16W		R528,529			RK73GB1J471J	CHIP R 470 J 1/16W	
R408			RK73GB1J100J	CHIP R 10 J 1/16W		R530			RK73GB1J821J	CHIP R 820 J 1/16W	
R409			RK73GB1J104J	CHIP R 100K J 1/16W		R531			RK73GB1J473J	CHIP R 47K J 1/16W	
R410,411			RK73GB1J103J	CHIP R 10K J 1/16W		R532,533			R92-1252-05	CHIP R 0 OHM J 1/16W	
R412			RK73GB1J123J	CHIP R 12K J 1/16W		R534			RK73GB1J473J	CHIP R 47K J 1/16W	
R413			RK73GB1J103J	CHIP R 10K J 1/16W		R535			RK73GB1J563J	CHIP R 56K J 1/16W	
R414,415			R92-1252-05	CHIP R 0 OHM J 1/16W		R536			RK73EB2B100J	CHIP R 10 J 1/8W	
R416			RK73GB1J471J	CHIP R 470 J 1/16W		R537			RK73GB1J823J	CHIP R 82K J 1/16W	
R417			RK73GB1J224J	CHIP R 220K J 1/16W		R538			RK73GB1J473J	CHIP R 47K J 1/16W	C
R418,419			RK73GB1J102J	CHIP R 1.0K J 1/16W		R538			RK73GB1J563J	CHIP R 56K J 1/16W	C2
R420			RK73GB1J222J	CHIP R 2.2K J 1/16W		R539			R92-1213-05	CHIP R 100 J 1/2W	
R421			RK73GB1J152J	CHIP R 1.5K J 1/16W		R601,602			RK73GB1J223J	CHIP R 22K J 1/16W	
R422			RK73GB1J103J	CHIP R 10K J 1/16W		R605			RK73GB1J153J	CHIP R 15K J 1/16W	
R423			RK73GB1J221J	CHIP R 220 J 1/16W	C2	R606			RK73GB1J221J	CHIP R 220 J 1/16W	
R423			RK73GB1J331J	CHIP R 330 J 1/16W	C	R607			RK73GB1J331J	CHIP R 330 J 1/16W	
R424			RK73GB1J151J	CHIP R 150 J 1/16W	C2	R800			R92-1061-05	JUMPER	
R424			RK73GB1J271J	CHIP R 270 J 1/16W	C	R822			R92-1215-05	CHIP R 470 J 1/2W	
R425,426			RK73GB1J473J	CHIP R 47K J 1/16W		VR601			R12-6427-05	TRIMMING POT. (47K/12)	
R427			RK73GB1J104J	CHIP R 100K J 1/16W		D1-6			DA221	DIODE	
R428			RK73GB1J473J	CHIP R 47K J 1/16W		D31			ZSH5MA27	SURGE ABSORBER	
R429,430			RK73GB1J221J	CHIP R 220 J 1/16W		D32			1812L110PR	VARIATOR	
R431			RK73GB1J104J	CHIP R 100K J 1/16W		D61			02DZ18(X,Y)	ZENER DIODE	
R432			RK73GB1J102J	CHIP R 1.0K J 1/16W		D62			MA2S077	DIODE	
R433			RK73GB1J472J	CHIP R 4.7K J 1/16W		D201			DAN222	DIODE	
R434			R92-1252-05	CHIP R 0 OHM J 1/16W		D202			1SS372	DIODE	
R435			RK73GB1J101J	CHIP R 100 J 1/16W		D251			MA742	DIODE	
R436			RK73GB1J124J	CHIP R 120K J 1/16W	C	D301			MA742	DIODE	
R436			RK73GB1J823J	CHIP R 82K J 1/16W	C2	D302,303			DAN222	DIODE	
R439			RK73GB1J124J	CHIP R 120K J 1/16W	C	D351-355			HVC350B	VARIABLE CAPACITANCE DIODE	C2
R439			RK73GB1J823J	CHIP R 82K J 1/16W	C2	D351,352			HVC350B	VARIABLE CAPACITANCE DIODE	C
R440			RK73GB1J101J	CHIP R 100 J 1/16W		D353			HVC355B	VARIABLE CAPACITANCE DIODE	C
R441			RK73GB1J102J	CHIP R 1.0K J 1/16W		D354,355			HVC350B	VARIABLE CAPACITANCE DIODE	C
R442			RK73GB1J101J	CHIP R 100 J 1/16W		D401			MA2S111	DIODE	
R443			RK73GB1J222J	CHIP R 2.2K J 1/16W		D402			HZU5ALL	DIODE	
R444			RK73GB1J102J	CHIP R 1.0K J 1/16W		D403-406			MA2S304	VARIABLE CAPACITANCE DIODE	
R445			R92-1252-05	CHIP R 0 OHM J 1/16W		D407			1SV278	VARIABLE CAPACITANCE DIODE	
R501			RK73GB1J102J	CHIP R 1.0K J 1/16W		D408			MA2S111	DIODE	
R502			RK73GB1J472J	CHIP R 4.7K J 1/16W		D409			DAN235E	DIODE	
R506			RK73GB1J103J	CHIP R 10K J 1/16W		D502			DA221	DIODE	
R507			RK73GB1J470J	CHIP R 47 J 1/16W		D503			02DZ5.1(Y)	ZENER DIODE	
R509			RK73GB1J100J	CHIP R 10 J 1/16W		D601,602			MA4PH633	DIODE	
R511			RK73GB1J471J	CHIP R 470 J 1/16W		D603,604			XB15A709	DIODE	C2
R512			RK73GB1J332J	CHIP R 3.3K J 1/16W		D604,605			XB15A709	DIODE	C
R513			RK73GB1J682J	CHIP R 6.8K J 1/16W							

PARTS LIST

TX-RX UNIT (X57-686X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation	Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
D606,607 D608 IC31 IC32,33 IC34			MA742 1SS355 KIA7808AF NJM78L05UA BD4732G	DIODE DIODE ANALOG IC BI-POLAR IC MOS IC							
IC35 IC66 IC66 IC101 IC161		*	BD4740G AT24C64A10SI18 CAT24WC64JI 30622MAA-B85GP M62363FP	MOS IC ROM IC ROM IC MPU MOS IC							
IC201 IC202 IC203 IC204,205 IC251		*	NJM2100V BA10358FV BA10324AFV BU4S66 BA10324AFV	MOS IC MOS IC MOS IC MOS IC MOS IC							
IC252 IC301 IC401 IC501 Q31	2B		LA4600 TK14489V MB15A02 TA75W01FU 2SA1641(S,T)	BI-POLAR IC BI-POLAR IC MOS IC MOS IC TRANSISTOR							
Q32 Q33 Q34 Q35 Q36			KRC102S 2SA1745(6,7) KRC102S KTA1664(Y) KRC102S	DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR							
Q61 Q86,87 Q201 Q251 Q252,253			KRC404RTK 2SK1830 2SC4919 2SC2412K 2SK3019	DIGITAL TRANSISTOR FET TRANSISTOR TRANSISTOR FET							
Q254 Q255 Q301,302 Q351 Q352,353			DTC363EU KRC102S 2SC2412K 2SC5108(Y) 3SK255	DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR FET							
Q354 Q402 Q403 Q404 Q405,406			2SK1830 2SA1832(GR) 2SC4738(GR) 2SC4649(N,P) 2SK508NV(K52)	FET TRANSISTOR TRANSISTOR TRANSISTOR FET	C2						
Q407 Q408 Q410,411 Q440 Q500			2SJ347 KRX102U 2SC5108(Y) 2SC2412K 2SC5110(O)	FET TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR							
Q501 Q502 Q503 Q504 TH97,98			2SC3356(R24) 2SK2596 PD55008TR RD60HUF1-01 NCP18WF104J03	TRANSISTOR FET DRIVE FET FINAL FET THERMISTOR							
TH301 TH351 TH352 TH401	2B	*	NCP18WF104J03 NCP18XW332J03 NCP18XQ102J03 NCP18XH103K03	THERMISTOR THERMISTOR THERMISTOR THERMISTOR	C2						