
2. EXPLODED VIEWS AND PARTS LIST

2.1 PACKING (DEH-P740MP/XN/UC, DEH-P7400MP/XN/UC)

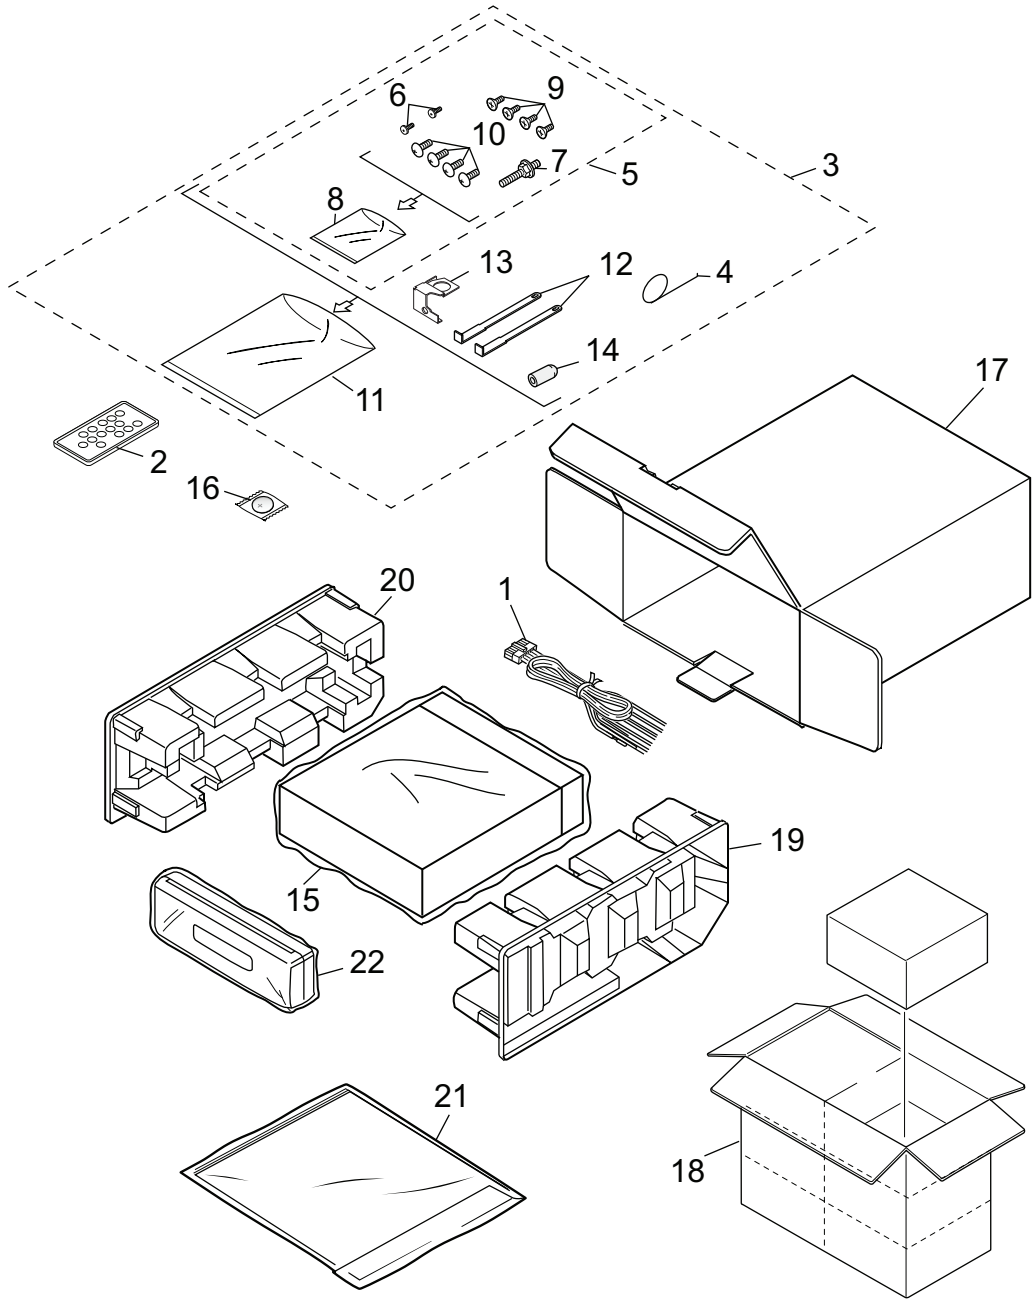

NOTE:

- Parts marked by "*" are generally unavailable because they are not in our Master Spare Parts List.
- Screws adjacent to ∇ mark on the product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
  (In the case of no amount instructions, apply as you think it appropriate.)

(1) PACKING SECTION PARTS LIST (DEH-P740MP/XN/UC, DEH-P7400MP/XN/UC)

Mark	No.	Description	Part No.
	1	Cord Assy	CDE6438
	2	Remote Control Unit	CXB8743
	3	Accessory Assy	CEA2773
	4	Spring	CBH1650
	5	Screw Assy	CEA2796
	6	Screw	BPZ20P060FZK
	7	Screw	CBA1002
*	8	Polyethylene Bag	CEG-127
	9	Screw	CRZ50P090FMC
	10	Screw	TRZ50P080FMC
*	11	Polyethylene Bag	CEG-158
	12	Handle	CNC5395
	13	Earth Plate	CNC9450
	14	Bush	CNV3930
	15	Polyethylene Bag	CEG1173
*	16	Battery	CEX1065
	17	Carton	See Contrast table(2)
	18	Contain Box	See Contrast table(2)
	19	Protector	CHP2251
	20	Protector	CHP2252
	21-1	Owner's Manual	See Contrast table(2)
	21-2	Installation Manual	See Contrast table(2)
*	21-3	Caution Card	CRP1207
*	21-4	Warranty Card	See Contrast table(2)
*	21-5	Card	See Contrast table(2)
	21-6	Polyethylene Bag	CEG1116
	22	Case Assy	CXB3520

(2) CONTRAST TABLE


DEH-P740MP/XN/UC and DEH-P7400MP/XN/UC are constructed the same except for the following:

Mark No.	Symbol and Description	Part No.	
		DEH-P740MP/XN/UC	DEH-P7400MP/XN/UC
17	Carton	CHG4612	CHG4611
18	Contain Box	CHL4612	CHL4611
21-1	Owner's Manual	CRD3509	CRD3510
21-2	Installation Manual	CRD3526	CRD3527
* 21-4	Warranty Card	CRY1070	Not used
* 21-5	Card	Not used	ARY1048

● **Owner's Manual, Installation Manual**

Model	Part No.	Language
DEH-P740MP/XN/UC	CRD3509	English, French
	CRD3526	English, French
DEH-P7400MP/XN/UC	CRD3510	English, French
	CRD3527	English, French

2.2 PACKING (DEH-P7450MP/XN/ES)

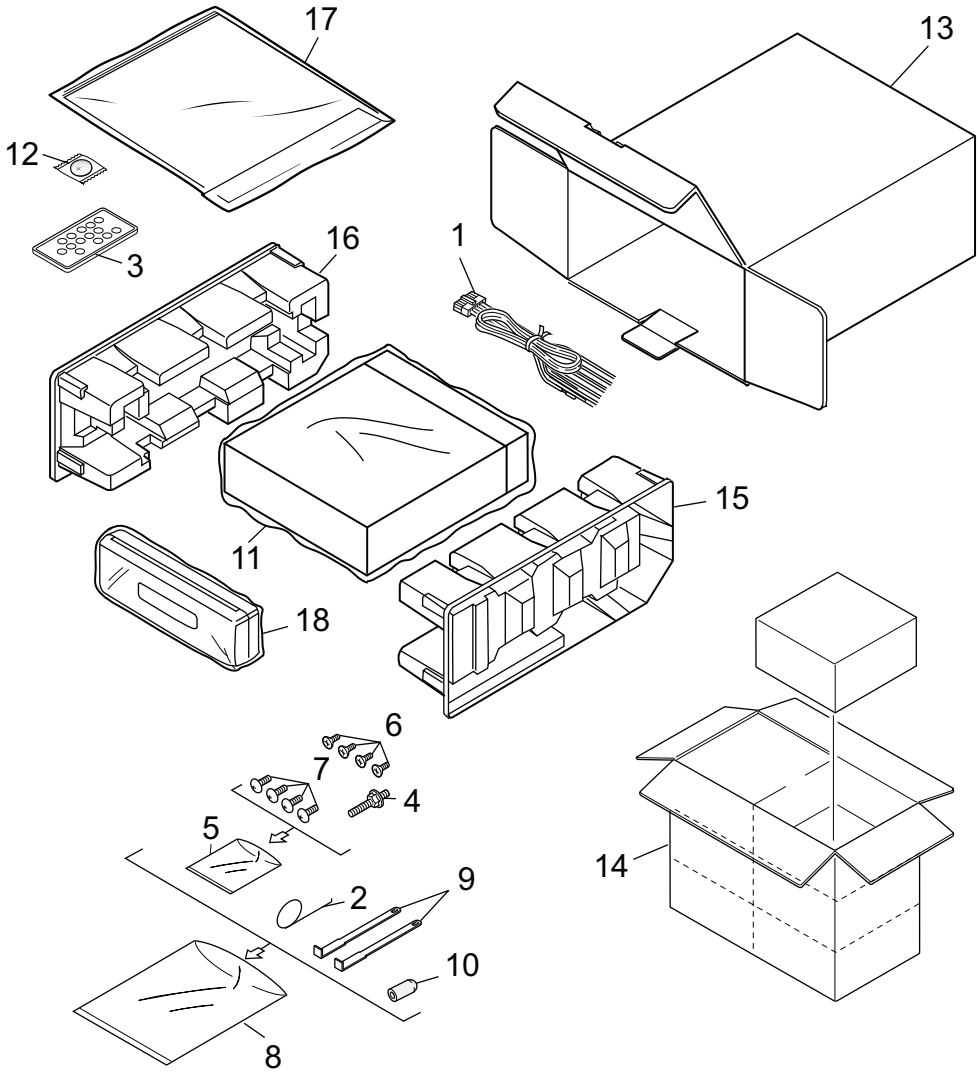


● PACKING SECTION PARTS LIST (DEH-P7450MP/XN/ES)

Mark	No.	Description	Part No.
	1	Cord Assy	CDE6438
	2	Spring	CBH1650
	3	Remote Control Unit	CXB8743
	4	Screw	CBA1002
*	5	Polyethylene Bag	CEG-127
	6	Screw	CRZ50P090FMC
	7	Screw	TRZ50P080FMC
*	8	Polyethylene Bag	CEG-158
	9	Handle	CNC5395
	10	Bush	CNV3930
	11	Polyethylene Bag	CEG-162
*	12	Battery	CEX1065
	13	Carton	CHG4610
	14	Contain Box	CHL4610
	15	Protector	CHP2251
	16	Protector	CHP2252
	17-1	Owner's Manual	CRD3511
	17-2	Owner's Manual	CRD3512
	17-3	Installation Manual	CRD3528
*	17-4	Caution Card	CRP1207
	17-5	Polyethylene Bag	CEG1116
	18	Case Assy	CXB3520

● Owner's Manual, Installation Manual

Part No.	Language
CRD3511	English, Spanish
CRD3512	Portuguese(B), Arabic
CRD3528	English, Spanish, Portuguese(B), Arabic


2.3 EXTERIOR (DEH-P740MP/XN/UC)

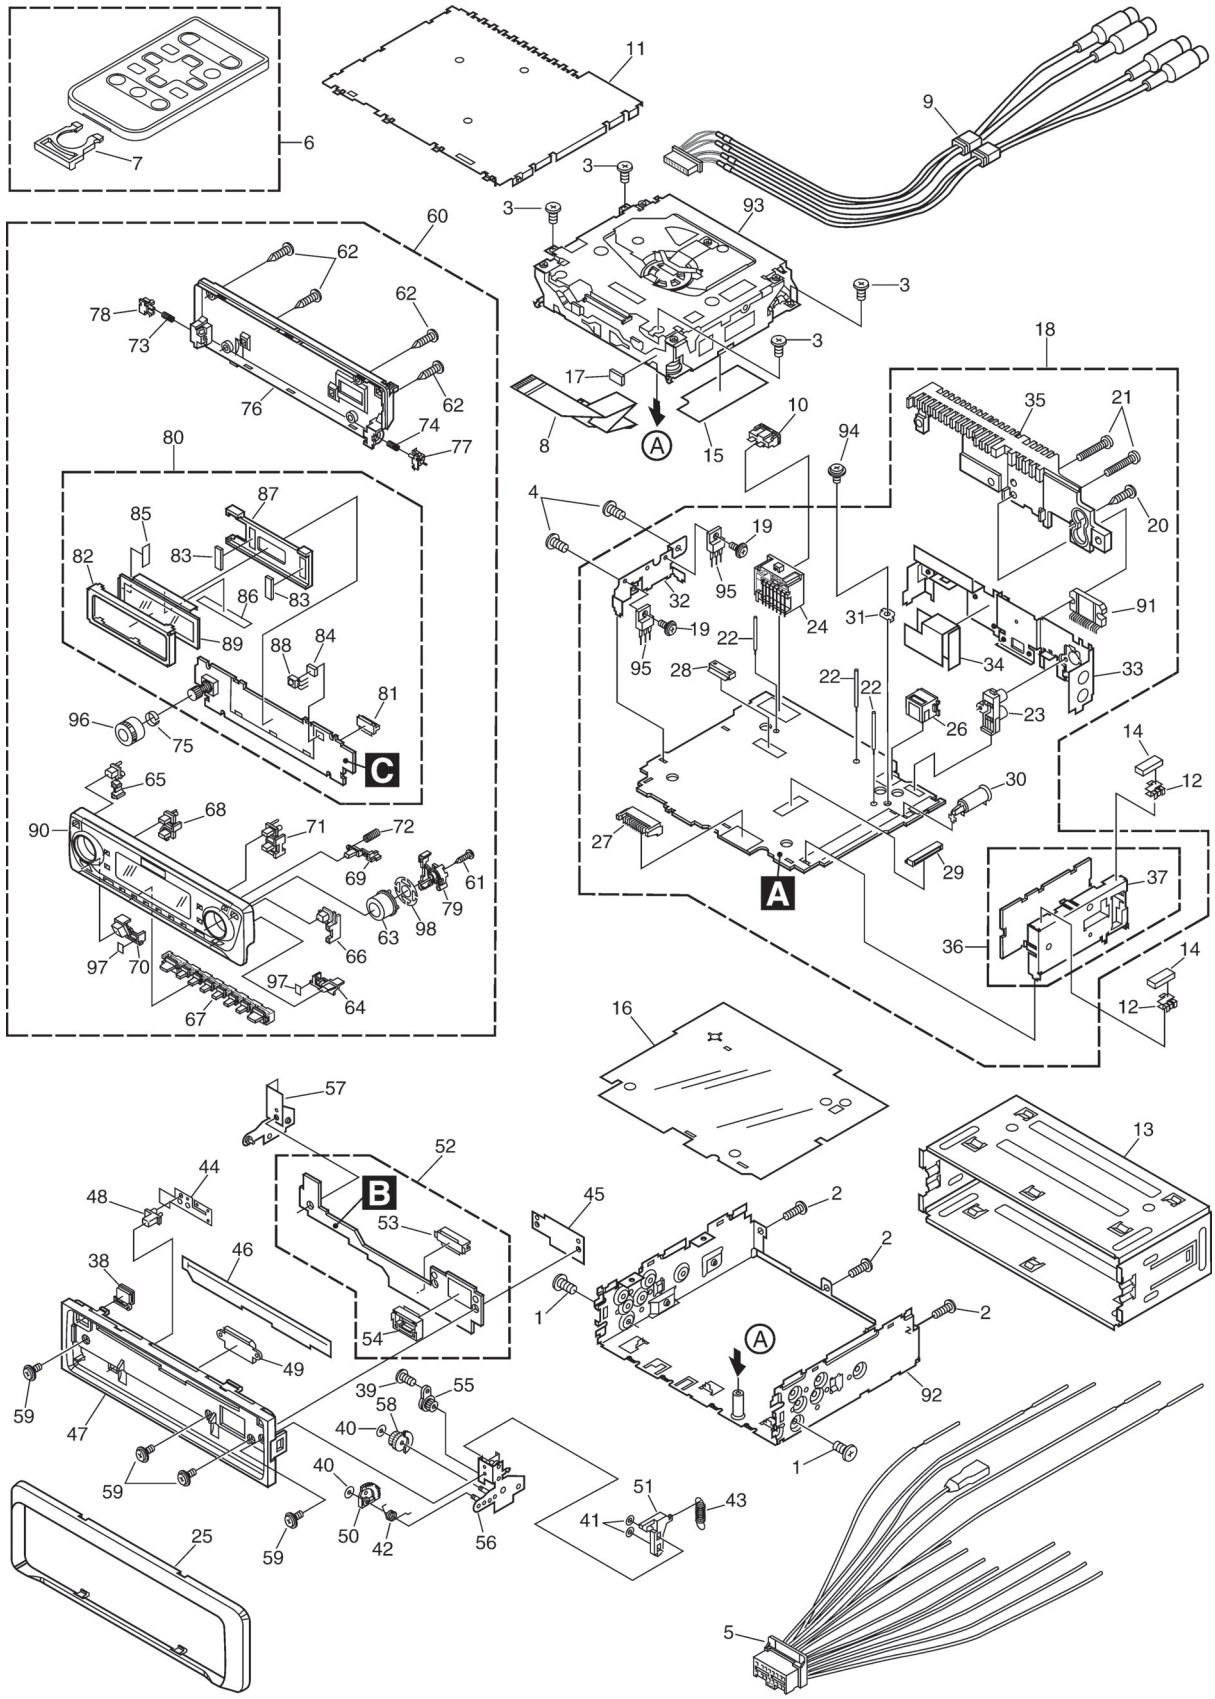

● EXTERIOR SECTION PARTS LIST (DEH-P740MP/XN/UC)

Mark	No.	Description	Part No.
	1	Screw	BMZ30P040FZK
	2	Screw	BMZ30P100FMC
	3	Screw	BSZ26P060FMC
	4	Screw	BSZ30P040FMC
	5	Cord Assy	CDE6438
	6	Remote Control Unit	CXB8743
	7	Cover	CNS7068
	8	Cable	CDE6718
	9	Cord Assy	CDE6747
	10	Fuse(10A)	CEK1136
	11	Case	CNB2686
	12	Holder	CNC5704
	13	Holder	CNC8659
	14	Cushion	CNM4870
	15	Insulator	CNM7214
	16	Insulator	CNM7629
	17	Insulator	CNM7682
	18	Tuner Amp Unit	CWM7983
	19	Screw	ASZ26P060FMC
	20	Screw	BPZ26P120FMC
	21	Screw	BSZ26P160FMC
	22	Clamper	CEF1007
	23	Pin Jack(CN351)	CKB1035
	24	Plug(CN901)	CKM1330
	25	Panel	CNS6935
	26	Connector(CN101)	CKS3408
	27	Plug(CN801)	CKS3537
	28	Connector(CN352)	CKS3602
	29	Connector(CN653)	CKS3833
	30	Antenna Jack(CN401)	CKX1056
	31	Holder	CNC5399
	32	Holder	CNC8615
	33	Holder	CNC9469
	34	Insulator	CNM6949
	35	Heat Sink	CNR1583
	36	FM/AM Tuner Unit	CWE1563
	37	Holder	CNC8815
	38	Button(EJECT)	CAC6839
	39	Screw(M2x2)	CBA1176
	40	Washer	CBF1038
	41	Washer	CBF1039
	42	Spring	CBH2428
	43	Spring	CBH2429
	44	Spring	CBL1512
	45	Holder	CNC9096
	46	Cover	CNM6854
	47	Panel	CNS6278
	48	Pin	CNV6486
	49	Lighting Conductor	CNV6487
	50	Gear	CNV6507
	51	Arm	CNV6508
	52	Panel Unit	CWM7986
	53	Socket(CN1850)	CKS3550
	54	Connector(CN1851)	CKS4462
	55	Damper Unit	CXB5070
	56	Holder Unit	CXB6356
	57	Holder Unit	CXB6357
	58	Clutch Unit	CXB6358
	59	Screw	IMS20P045FZK
	60	Detach Grille Assy	CXB7913
	61	Screw	BPZ20P080FMC
	62	Screw	BPZ20P100FZK
	63	Button(SELECT)	CAC7220
	64	Button(SFEQ)	CAC7221
	65	Button(ENT)	CAC7253
	66	Button(AUDIO)	CAC7254
	67	Button(1-6)	CAC7225
	68	Button(DISP)	CAC7226
	69	Button(OPEN)	CAC7227
	70	Button(EQ)	CAC7231
	71	Button(FUNC)	CAC7489
	72	Spring	CBH2630
	73	Spring	CBH2431
	74	Spring	CBH2430
	75	Spring	CBL1470
	76	Cover	CNS6740
	77	Holder	CNV6505
	78	Holder	CNV6506
	79	Holder	CNV6909
	80	Keyboard Unit	CWM7989
	81	Connector(CN1901)	CKS4524
	82	Holder	CNC9642
	83	Cushion	CNM6633
	84	Cushion	CNM7469
	85	Spacer	CNM7697
	86	Spacer	CNM7698
	87	Holder	CNV6910
	88	IC(IC1903)	TSOP1840SB3V
	89	OEL Unit	MXS8017
	90	Sub Grille Assy	CXB8942
	91	IC(IC301)	PAL007A
	92	Chassis Unit	CXB6100
	93	CD Mechanism Module(S9MP3)	CXK5555
	94	Screw	ISS26P055FUC
	95	Transistor(Q921,999)	2SD2396
*	96	Knob	CAA2697
	97	Spacer	CNM7807
	98	Cushion	CNM7808

2.4 EXTERIOR (DEH-P7400MP/XN/UC, DEH-P7450MP/XN/ES)

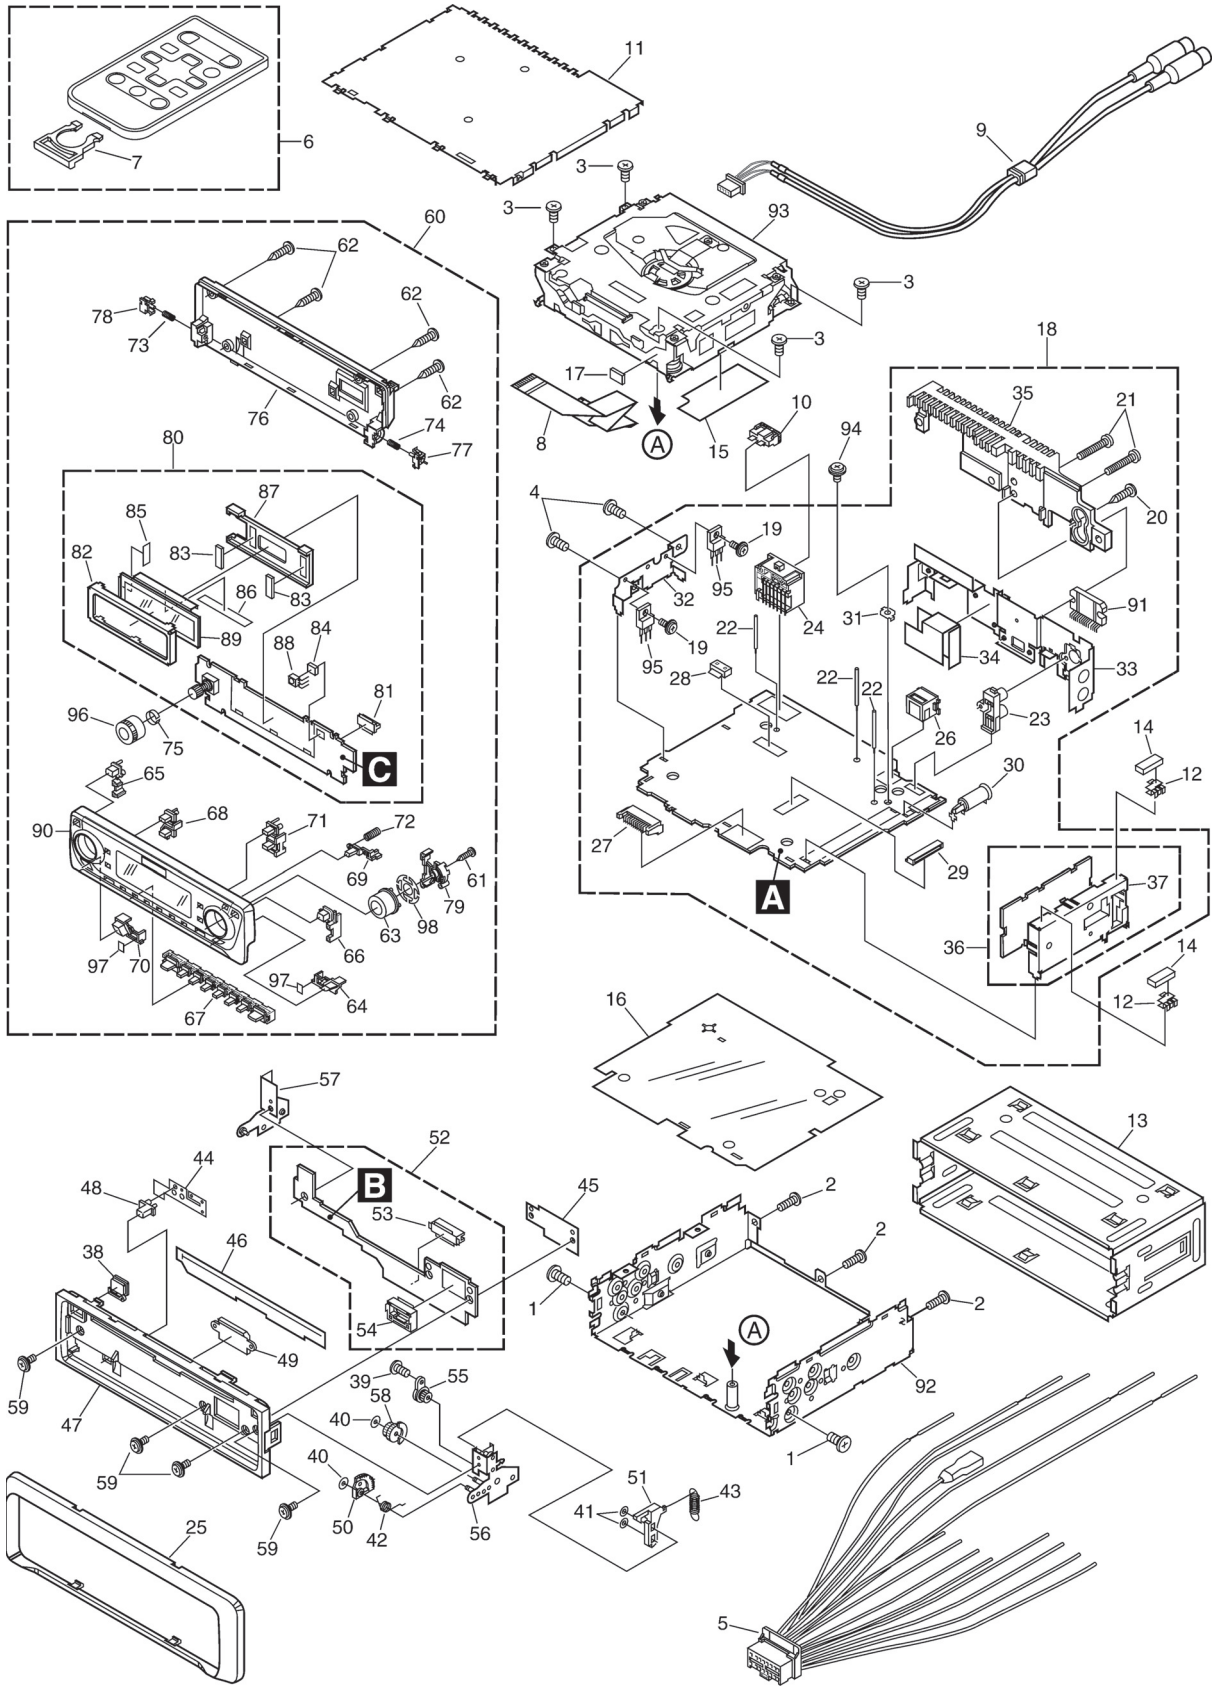

(1) EXTERIOR SECTION PARTS LIST (DEH-P7400MP/XN/UC, DEH-P7450MP/XN/ES)


Mark	No.	Description	Part No.
	1	Screw	BMZ30P040FZK
	2	Screw	BMZ30P100FMC
	3	Screw	BSZ26P060FMC
	4	Screw	BSZ30P040FMC
	5	Cord Assy	CDE6438
	6	Remote Control Unit	CXB8743
	7	Cover	CNS7068
	8	Cable	CDE6718
	9	Cord Assy	CDE6454
	10	Fuse(10A)	CEK1136
	11	Case	CNB2686
	12	Holder	CNC5704
	13	Holder	CNC8659
	14	Cushion	CNM4870
	15	Insulator	CNM7214
	16	Insulator	CNM7629
	17	Insulator	CNM7682
	18	Tuner Amp Unit	See Contrast table(2)
	19	Screw	ASZ26P060FMC
	20	Screw	BPZ26P120FMC
	21	Screw	BSZ26P160FMC
	22	Clamper	CEF1007
	23	Pin Jack(CN351)	CKB1035
	24	Plug(CN901)	CKM1330
	25	Panel	See Contrast table(2)
	26	Connector(CN101)	CKS3408
	27	Plug(CN801)	CKS3537
	28	Connector(CN352)	CKS3598
	29	Connector(CN653)	CKS3833
	30	Antenna Jack(CN401)	CKX1056
	31	Holder	CNC5399
	32	Holder	CNC8615
	33	Holder	CNC9470
	34	Insulator	CNM6949
	35	Heat Sink	CNR1583
	36	FM/AM Tuner Unit	CWE1563
	37	Holder	CNC8815
	38	Button(EJECT)	CAC6839
	39	Screw(M2x2)	CBA1176
	40	Washer	CBF1038
	41	Washer	CBF1039
	42	Spring	CBH2428
	43	Spring	CBH2429
	44	Spring	CBL1512
	45	Holder	CNC9096
	46	Cover	CNM6854
	47	Panel	CNS6278
	48	Pin	CNV6486
	49	Lighting Conductor	CNV6487
	50	Gear	CNV6507
	51	Arm	CNV6508
	52	Panel Unit	CWM7986
	53	Socket(CN1850)	CKS3550
	54	Connector(CN1851)	CKS4462
	55	Damper Unit	CXB5070
	56	Holder Unit	CXB6356
	57	Holder Unit	CXB6357
	58	Clutch Unit	CXB6358
	59	Screw	IMS20P045FZK
	60	Detach Grille Assy	See Contrast table(2)
	61	Screw	BPZ20P080FMC
	62	Screw	BPZ20P100FZK
	63	Button(SELECT)	CAC7220
	64	Button(SFEQ)	CAC7221
	65	Button(ENT)	See Contrast table(2)
	66	Button(AUDIO)	See Contrast table(2)
	67	Button(1-6)	CAC7225
	68	Button(DISP)	CAC7226
	69	Button(OPEN)	CAC7227
	70	Button(EQ)	CAC7231
	71	Button(FUNC)	CAC7489
	72	Spring	CBH2630
	73	Spring	CBH2431
	74	Spring	CBH2430
	75	Spring	CBL1470
	76	Cover	CNS6740
	77	Holder	CNV6505
	78	Holder	CNV6506
	79	Holder	CNV6909
	80	Keyboard Unit	CWM8237
	81	Connector(CN1901)	CKS4524
	82	Holder	CNC9642
	83	Cushion	CNM6633
	84	Cushion	CNM7469
	85	Spacer	CNM7697
	86	Spacer	CNM7698
	87	Holder	CNV6910
	88	IC(IC1903)	TSOP1840SB3V
	89	OEL Unit	MXS8017
	90	Sub Grille Assy	See Contrast table(2)
	91	IC(IC301)	PAL007A
	92	Chassis Unit	CXB6100
	93	CD Mechanism Module(S9MP3)	CXK5555
	94	Screw	ISS26P055FUC
	95	Transistor(Q921,999)	2SD2396
*	96	Knob	CAA2697
	97	Spacer	CNM7807
	98	Cushion	CNM7808

(2) CONTRAST TABLE

DEH-P7400MP/XN/UC and DEH-P7450MP/XN/ES are constructed the same except for the following:

Mark No.	Symbol and Description	Part No.	
		DEH-P7400MP/XN/UC	DEH-P7450MP/XN/ES
18	Tuner Amp Unit	CWM8315	CWM8148
25	Panel	CNS6934	CNS6935
60	Detach Grille Assy	CXB8493	CXB8426
65	Button(ENT)	CAC7303	CAC7253
66	Button(AUDIO)	CAC7224	CAC7254
90	Sub Grille Assy	CXB8943	CXB8944

2.5 CD MECHANISM MODULE

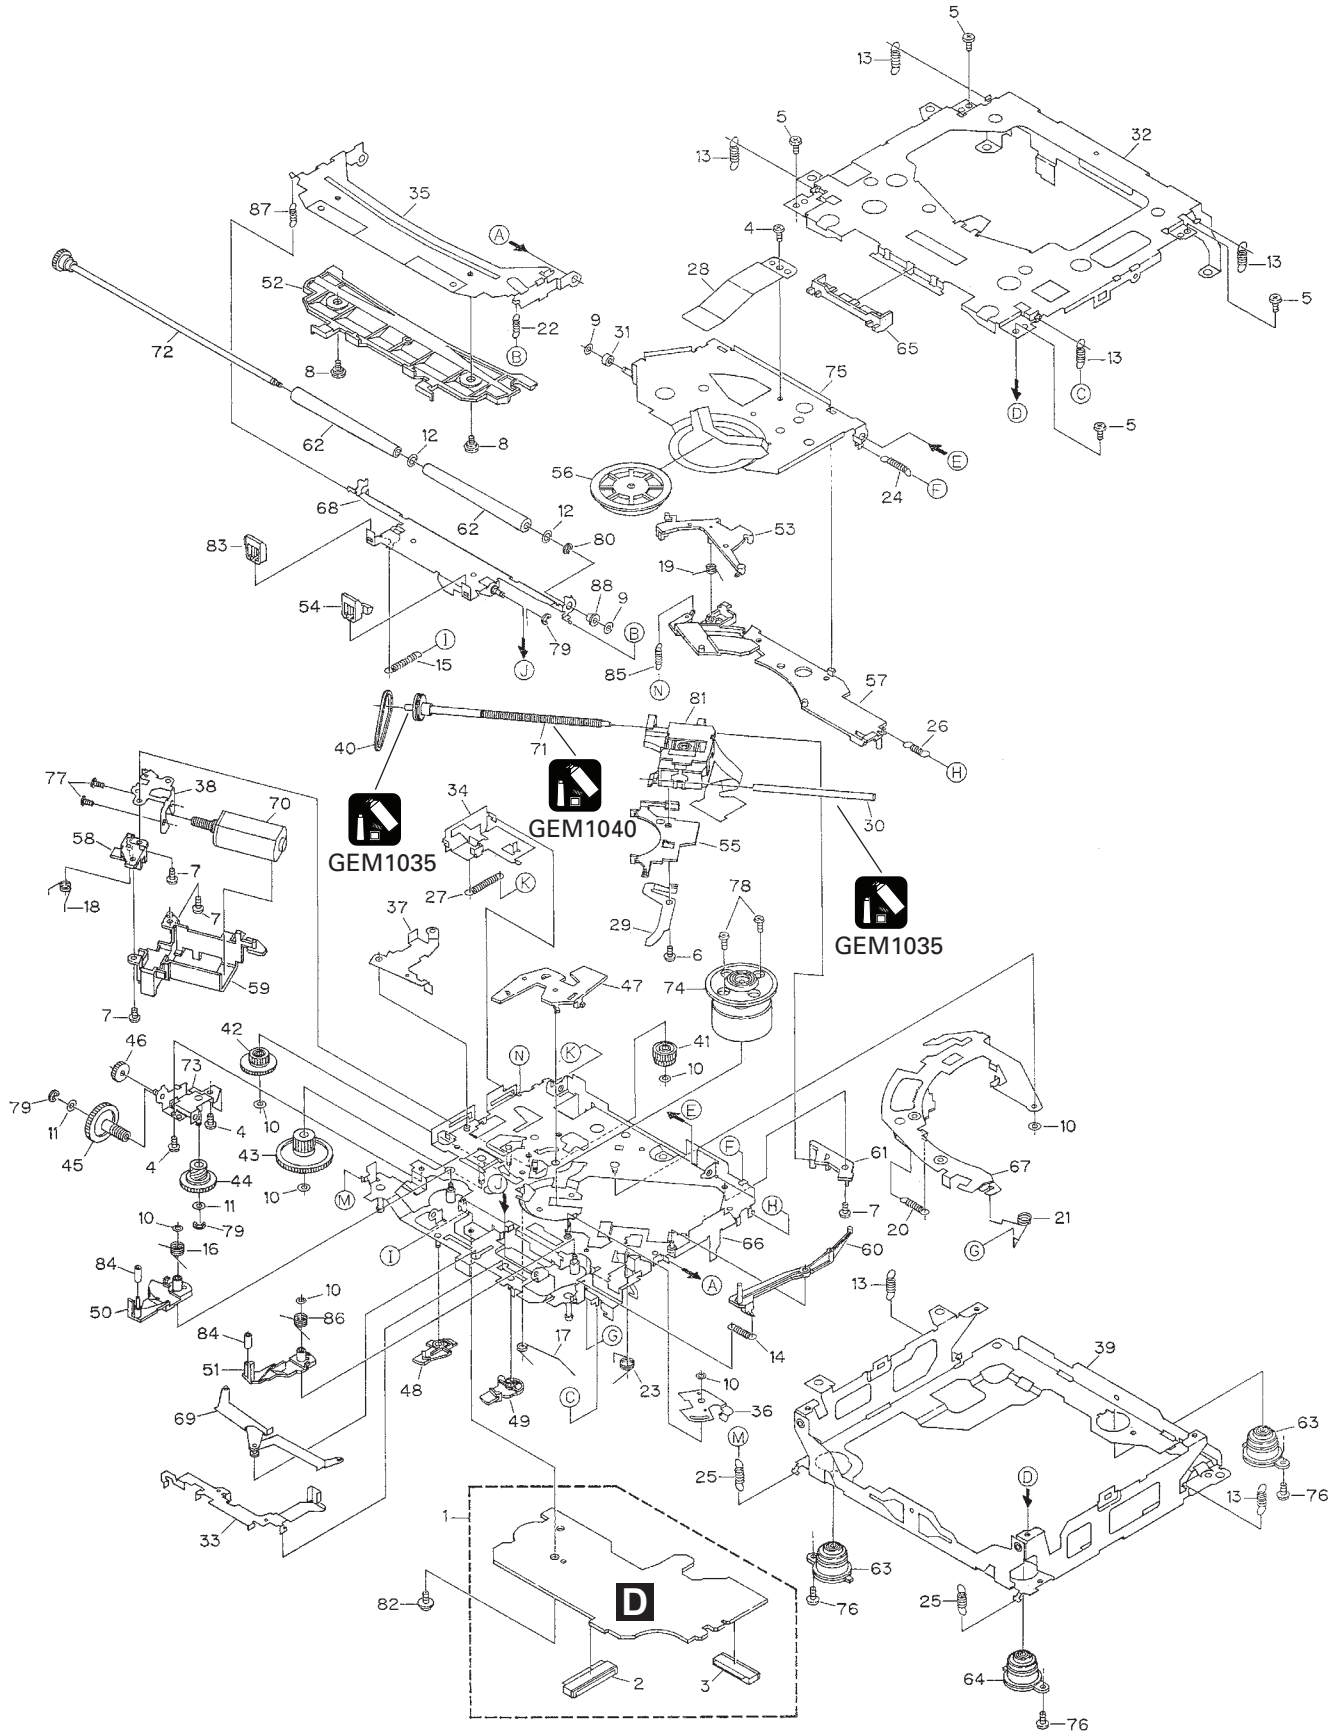

● CD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	CD Core Unit(S9MP3)	CWX2617
	2	Connector(CN901)	CKS4186
	3	Connector(CN101)	CKS3486
	4	Screw	BMZ20P025FMC
	5	Screw	BSZ20P040FMC
	6	Screw(M2x4)	CBA1362
	7	Screw(M2x3)	CBA1527
	8	Screw	CBA1545
	9	Washer	CBF1037
	10	Washer	CBF1038
	11	Washer	CBF1039
	12	Washer	CBF1060
	13	Spring	CBH2378
	14	Spring	CBH2379
	15	Spring	CBH2514
	16	Spring	CBH2533
	17	Spring	CBH2382
	18	Spring	CBH2383
	19	Spring	CBH2384
	20	Spring	CBH2527
	21	Spring	CBH2386
	22	Spring	CBH2537
	23	Spring	CBH2390
	24	Spring	CBH2391
	25	Spring	CBH2523
	26	Spring	CBH2426
	27	Spring	CBH2444
	28	Spring	CBL1561
	29	Spring	CBL1553
	30	Shaft	CLA3845
	31	Roller	CLA3910
	32	Frame	CNC9654
	33	Lever	CNC9664
	34	Lever	CNC8949
	35	Arm	CNC9661
	36	Arm	CNC9016
	37	Arm	CNC9017
	38	Bracket	CNC9123
	39	Frame	CNC9656
	40	Belt	CNT1086
	41	Gear	CNV6886
	42	Gear	CNV6316
	43	Gear	CNV6317
	44	Gear	CNV6318
	45	Gear	CNV6319
	46	Gear	CNV6320
	47	Arm	CNV6322
	48	Arm	CNV6323
	49	Arm	CNV6324
	50	Arm	CNV6888
	51	Arm	CNV6889
	52	Guide	CNV6327
	53	Arm	CNV6924
	54	Guide	CNV6921
	55	Rack	CNV6923
	56	Clamper	CNV6331
	57	Arm	CNV6332
	58	Guide	CNV6333
	59	Cover	CNV6334
	60	Arm	CNV6335
	61	Guide	CNV6336
	62	Roller	CNV6338
	63	Damper	CNV6175
	64	Damper	CNV6662
	65	Guide	CNV6925
	66	Chassis Unit	CXB7980
*	67	Arm Unit	CXB7983
	68	Arm Unit	CXB7984
	69	Arm Unit	CXB7985
	70	Motor Unit(M2)	CXB5903
	71	Screw Unit	CXB5904
	72	Gear Unit	CXB8076
	73	Bracket Unit	CXB7982
	74	Motor Unit(M1)	CXB6007
	75	Arm Unit	CXB8504
	76	Screw(M2x5)	EBA1028
	77	Screw	JFZ20P020FMC
	78	Screw	JGZ17P020FZK
	79	Washer	YE15FUC
	80	Washer	YE20FUC
	81	Pickup Unit(Service)(P9MP3)	CXX1550
	82	Screw	IMS26P030FMC
	83	Guide	CNV6922
	84	Roller	CNV6887
	85	Spring	CBH2509
	86	Spring	CBH2512
	87	Spring	CBH2536
	88	Collar	CNV6906

5. ELECTRICAL PARTS LIST

NOTES:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○J,RS1/○○S○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

A Unit Number : CWM7983(DEH-P740MP/XN/UC)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

=====Circuit Symbol and No.		===Part Name	Part No.
IC	101	IC	HA12187FP
IC	132	IC	NJM4558MD
IC	203	IC	PML009A
IC	271	IC	PA2028A
IC	301	IC	PAL007A
IC	601	IC	PD5701A
IC	801	IC	TC7SET08FU
IC	851	IC	NJM2360M
IC	961	IC	S-80735ANDZI
Q	101	Transistor	2SA1037K
Q	102	Transistor	DTC124EK
Q	301	Transistor	DTC124EK
Q	351	Transistor	IMH3A
Q	352	Transistor	IMH3A
Q	353	Transistor	IMH3A
Q	401	Transistor	2SC2412K
Q	801	Transistor	IMD2A
Q	802	Transistor	2SD1760F5
Q	803	Transistor	2SD1767
Q	804	Transistor	IMD2A
Q	805	Transistor	DTC143EK
Q	851	Transistor	2SD1760F5
Q	852	Transistor	IMD2A
Q	911	Transistor	2SD1760F5
Q	913	Transistor	IMD2A
Q	921	Transistor	2SD2396
Q	922	Transistor	DTC114EK
Q	923	Transistor	2SB1238
Q	931	Transistor	IMX1
Q	932	Transistor	2SC2412K
Q	951	Transistor	2SA1037K
Q	981	Transistor	2SC2412K
Q	982	Transistor	IMD2A
Q	991	Transistor	IMD2A
Q	999	Transistor	2SD2396
D	131	Diode Network	DA204U
D	132	Diode Network	DA204U
D	133	Diode	DAN202U
D	134	Diode	DAP202U
D	801	Diode	HZS6L(B1)
D	803	Diode Network	DA204U
D	804	Diode	DAN202U
D	805	Diode	DAP202U
D	806	Diode	DAN202U
D	807	Diode	DAP202U
D	808	Diode	HZS11L(A1)
D	851	Diode	HZS9L(C3)
D	852	Diode	RB411D
D	901	Diode	1SR139-400
D	902	Diode	1SR139-400

=====Circuit Symbol and No.		===Part Name	Part No.
D	903	Diode	1SR139-400
D	904	Diode	1SR139-400
D	911	Diode	1SR139-400
D	912	Diode	HZS6L(B1)
D	921	Diode	HZS9L(C1)
D	931	Diode	HZS7L(A1)
D	932	Diode	HZS7L(C3)
D	951	Diode	DAN202U
D	981	Diode	DAN202U
D	982	Diode	HZS9L(A2)
D	991	Diode	HZS9L(B1)
ZNR	451	Surge Protector	DSP-201M-A21F
L	171	Inductor	CTF1530
L	271	Ferri-Inductor	LAU101K
L	401	Ferri-Inductor	LAU2R2K
L	402	Ferri-Inductor	LAU4R7K
L	403	Inductor	LAU1R0K
L	601	Ferri-Inductor	LAU2R2K
L	602	Inductor	LCTA2R2J2520
L	801	Inductor	LAU100K
L	802	Ferri-Inductor	LAU2R2K
L	852	Inductor	CTF1510
L	853	Inductor	CTF1489
L	901	Choke Coil 600µH	CTH1221
L	951	Ferri-Inductor	LAU2R2K
X	601	Radiator 10.00MHz	CSS1475
S	801	Switch(DSENS)	CSN1039
		FM/AM Tuner Unit	CWE1563
BZ	641	Buzzer	CPV1050

RESISTORS

R	101	RS1/16S101J
R	102	RS1/16S470J
R	103	RS1/16S101J
R	104	RS1/16S222J
R	105	RS1/16S103J
R	106	RS1/16S562J
R	107	RS1/16S332J
R	108	RS1/16S150J
R	109	RS1/16S181J
R	110	RS1/16S181J
R	111	RS1/16S223J
R	112	RS1/16S223J
R	113	RS1/16S102J
R	114	RS1/16S102J
R	143	RS1/16S104J
R	144	RS1/16S104J
R	145	RS1/16S563J
R	146	RS1/16S563J
R	147	RS1/16S474J
R	148	RS1/16S474J

=====Circuit Symbol and No.===Part Name			Part No.	=====Circuit Symbol and No.===Part Name			Part No.
R	151		RS1/16S0R0J	R	614		RS1/16S222J
R	152		RS1/16S0R0J	R	615		RS1/16S104J
R	161		RS1/16S272J	R	616		RS1/16S473J
R	162		RS1/16S272J	R	617		RS1/16S0R0J
R	163		RS1/16S162J	R	619		RS1/16S473J
R	164		RS1/16S162J	R	620		RS1/16S472J
R	171		RS1/16S102J	R	621		RS1/16S473J
R	172		RS1/16S102J	R	623		RS1/16S473J
R	241		RS1/16S102J	R	624		RS1/16S0R0J
R	242		RS1/16S102J	R	625		RS1/16S682J
R	245		RS1/16S101J	R	626		RS1/16S682J
R	246		RS1/16S101J	R	627		RS1/16S104J
R	247		RS1/16S101J	R	628		RS1/16S104J
R	248		RS1/16S101J	R	629		RS1/16S104J
R	249		RS1/16S101J	R	630		RS1/16S104J
R	250		RS1/16S101J	R	636		RS1/16S221J
R	283		RS1/16S223J	R	637		RS1/16S221J
R	301		RS1/16S103J	R	639		RS1/16S0R0J
R	302		RS1/16S103J	R	641		RS1/16S102J
R	304		RS1/16S331J	R	644		RS1/16S0R0J
R	351		RS1/16S820J	R	645		RS1/16S0R0J
R	352		RS1/16S820J	R	654		RS1/16S104J
R	353		RS1/16S820J	R	801		RS1/16S332J
R	354		RS1/16S820J	R	804		RS1/16S1R0J
R	355		RS1/16S820J	R	805		RS1/16S221J
R	356		RS1/16S820J	R	806		RS1/16S221J
R	357		RS1/16S223J	R	807		RS1/16S473J
R	358		RS1/16S223J	R	808		RS1/16S473J
R	359		RS1/16S223J	R	809		RS1/16S102J
R	360		RS1/16S223J	R	810		RS1/16S222J
R	361		RS1/16S223J	R	811		RS1/16S222J
R	362		RS1/16S223J	R	812		RS1/16S222J
R	363		RS1/16S0R0J	R	813		RS1/16S222J
R	366		RS1/16S0R0J	R	814		RS1/16S222J
R	368		RS1/16S0R0J	R	815		RS1/16S473J
R	369		RS1/16S471J	R	816		RS1/16S104J
R	370		RS1/16S471J	R	817		RD1/4PU391J
R	371		RS1/16S471J	R	819		RS1/16S222J
R	372		RS1/16S471J	R	820		RS1/16S222J
R	373		RS1/16S471J	R	851		RS1/16S331J
R	374		RS1/16S471J	R	852		RD1/4PU302J
R	401		RS1/16S473J	R	853		RD1/4PU302J
R	402		RS1/16S473J	R	854		RS1/16S121J
R	403		RS1/16S681J	R	855		RS1/16S391J
R	404		RS1/16S681J	R	856		RS1/16S1R0J
R	409		RS1/16S681J	R	857		RS1/16S331J
R	410		RS1/16S103J	R	912		RS1/16S102J
R	411		RS1/16S681J	R	913		RS1/16S223J
R	412		RS1/16S681J	R	914		RS1/16S102J
R	413		RS1/16S681J	R	921		RS1/10S1R0J
R	414		RS1/16S473J	R	922		RD1/4PU221J
R	415		RS1/16S472J	R	923		RS1/16S103J
R	416		RS1/16S473J	R	924		RD1/4PU222J
R	417		RS1/16S473J	R	925		RS1/16S122J
R	418		RS1/16S473J	R	931		RS1/16S472J
R	419		RS1/16S222J	R	932		RS1/16S473J
R	420		RS1/16S222J	R	933		RS1/16S103J
R	424		RS1/16S393J	R	934		RS1/16S473J
R	601		RS1/16S473J	R	935		RS1/16S104J
R	604		RS1/16S473J	R	936		RS1/16S103J
R	605		RS1/16S0R0J	R	937		RS1/16S473J
R	608		RS1/16S104J	R	938		RD1/4PU102J
R	610		RS1/16S102J	R	939		RD1/4PU102J
R	611		RS1/16S102J	R	951		RD1/4PU153J
R	612		RS1/16S102J	R	952		RS1/16S472J

=====Circuit Symbol and No.		===Part Name	Part No.
R	953		RS1/16S472J
R	954		RS1/16S102J
R	962		RS1/16S102J
R	964		RS1/16S822J
R	982		RS1/16S223J
R	983		RS1/16S223J
R	984		RS1/16S473J
R	985		RD1/4PU102J
R	991		RD1/4PU221J
R	992		RD1/4PU221J
R	997		RAB4C102J
R	999		RS1/16S0R0J

CAPACITORS

C	101		CKSRYB104K16
C	102		CKSRYB104K16
C	139		CKSRYB104K16
C	140		CKSRYB104K16
C	141		CKSRYB104K16
C	142		CKSRYB104K16
C	143		CKSRYB474K10
C	144		CKSRYB474K10
C	145		CCSRCH101J50
C	146		CCSRCH101J50
C	147		CKSRYB103K50
C	161		CKSRYB183K25
C	162		CKSRYB183K25
C	171		CEJQ470M10
C	172		CKSRYB104K16
C	173		CEJQ100M16
C	177		CCSRCH100D50
C	178		CCSRCH100D50
C	179		CCSRCH100D50
C	180		CCSRCH100D50
C	181		CKLSRB152K50
C	182		CKLSRB152K50
C	191		CEJQ1R0M50
C	192		CEJQ1R0M50
C	205		CEJQR22M50
C	206		CEJQR22M50
C	207		CEJQ1R0M50
C	208		CEJQ1R0M50
C	209		CEJQ1R0M50
C	210		CEJQ1R0M50
C	211		CEJQNP4R7M16
C	212		CEJQNP4R7M16
C	213		CEJQNP4R7M16
C	214		CEJQNP4R7M16
C	215		CEJQNP4R7M16
C	216		CEJQNP4R7M16
C	217		CEJQNP4R7M16
C	218		CEJQNP4R7M16
C	241		CCSQCH152J50
C	242		CCSQCH152J50
C	271		CEJQNP1R0M50
C	272		CEJQNP1R0M50
C	273		CEJQNP1R0M50
C	274		CEJQNP1R0M50
C	275		CEJQNP1R0M50
C	276		CEJQNP1R0M50
C	277		CEJQ4R7M35
C	278		CEJQ101M16
C	279		CEJQ100M16
C	280		CEJQ100M16

=====Circuit Symbol and No.		===Part Name	Part No.
C	281		CKSRYB105K10
C	282		CKSYB684K25
C	283		CASAQ4R7M16
C	284		CEJQ330M25
C	285		CEJQ330M25
C	306		CEHAR330M10
C	307	4700µF/16V	CCH1367
C	309		CKSRYB104K16
C	310		CEHAR100M16
C	311		CKSQYB225K10
C	313		CKSRYB474K10
C	314		CKSRYB474K10
C	315		CKSRYB474K10
C	316		CKSRYB474K10
C	321		CKSRYB474K10
C	322		CKSRYB474K10
C	323		CKSRYB474K10
C	324		CKSRYB474K10
C	325		CKSQYB225K10
C	351		CEJQ100M16
C	352		CEJQ100M16
C	353		CEJQ100M16
C	354		CEJQ100M16
C	355		CEJQ100M16
C	356		CEJQ100M16
C	357		CKSRYB222K50
C	358		CKSRYB222K50
C	359		CKSRYB222K50
C	360		CKSRYB222K50
C	361		CKSRYB222K50
C	362		CKSRYB222K50
C	403		CKSRYB473K25
C	404		CEJQ101M6R3
C	405		CKSRYB103K50
C	406		CEJQ220M10
C	408		CKSRYB223K50
C	409		CKSRYB223K50
C	411		CKSRYB472K50
C	440		CKSRYB103K50
C	601		CEJQ4R7M35
C	602		CKSRYB102K50
C	604		CCSRCH180J50
C	605		CCSRCH220J50
C	606		CKSRYB102K50
C	654	470µF/10V	CCH1438
C	755		CKSRYB104K16
C	801		CKSRYB103K50
C	802		CEJQ470M10
C	803		CKSRYB104K16
C	805		CKSRYB103K25
C	806		CKSRYB473K25
C	812		CKSYB105K25
C	851		CEJQ470M16
C	853	4.7µF	CCG1111
C	855		CEJQ100M25
C	856		CCSRCH331J50
C	857		CEJQ330M25
C	858		CKSRYB104K16
C	859		CEJQ101M10
C	860		CKSRYB104K16
C	861		CKSRYB103K50
C	912		CKSRYB472K50
C	913		CKSRYB103K50
C	914		CEJQ470M10
C	921	330µF/10V	CCH1181

Circuit Symbol and No.		Part Name	Part No.
C	922		CKSRYB103K50
C	923		CEJQ101M16
C	931		CEJQ100M16
C	932		CKSRYB104K16
C	963		CEJQ2R2M50
C	991		CKSRYB473K25
C	992		CKSRYB102K50
C	993		CEJQ101M10
C	999	470µF/16V	CCH1183

A Unit Number : CWM8315(DEH-P7400MP/XN/UC)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

IC	101	IC	HA12187FP
IC	132	IC	NJM4558MD
IC	203	IC	PML009A
IC	301	IC	PAL007A
IC	601	IC	PD5701A
IC	801	IC	TC7SET08FU
IC	851	IC	NJM2360M
IC	961	IC	S-80735ANDZI
Q	101	Transistor	2SA1037K
Q	102	Transistor	DTC124EK
Q	301	Transistor	DTC124EK
Q	351	Transistor	IMH3A
Q	353	Transistor	IMH3A
Q	401	Transistor	2SC2412K
Q	801	Transistor	IMD2A
Q	802	Transistor	2SD1760F5
Q	803	Transistor	2SD1767
Q	804	Transistor	IMD2A
Q	805	Transistor	DTC143EK
Q	851	Transistor	2SD1760F5
Q	852	Transistor	IMD2A
Q	911	Transistor	2SD1760F5
Q	913	Transistor	IMD2A
Q	921	Transistor	2SD2396
Q	922	Transistor	DTC114EK
Q	923	Transistor	2SB1238
Q	931	Transistor	IMX1
Q	932	Transistor	2SC2412K
Q	951	Transistor	2SA1037K
Q	981	Transistor	2SC2412K
Q	982	Transistor	IMD2A
Q	991	Transistor	IMD2A
Q	999	Transistor	2SD2396
D	131	Diode Network	DA204U
D	132	Diode Network	DA204U
D	133	Diode	DAN202U
D	134	Diode	DAP202U
D	801	Diode	HZS6L(B1)
D	803	Diode Network	DA204U
D	804	Diode	DAN202U
D	805	Diode	DAP202U
D	806	Diode	DAN202U
D	807	Diode	DAP202U
D	808	Diode	HZS11L(A1)
D	851	Diode	HZS9L(C3)
D	852	Diode	RB411D
D	901	Diode	1SR139-400
D	902	Diode	1SR139-400
D	903	Diode	1SR139-400
D	904	Diode	1SR139-400
D	911	Diode	1SR139-400
D	912	Diode	HZS6L(B1)
D	921	Diode	HZS9L(C1)
D	931	Diode	HZS7L(A1)
D	932	Diode	HZS7L(C3)

Circuit Symbol and No.		Part Name	Part No.
D	951	Diode	DAN202U
D	981	Diode	DAN202U
D	982	Diode	HZS9L(A2)
D	991	Diode	HZS9L(B1)
ZNR	451	Surge Protector	DSP-201M-A21F
L	171	Inductor	CTF1530
L	401	Ferri-Inductor	LAU2R2K
L	402	Ferri-Inductor	LAU4R7K
L	403	Inductor	LAU1R0K
L	601	Ferri-Inductor	LAU2R2K
L	602	Inductor	LCTA2R2J2520
L	801	Inductor	LAU100K
L	802	Ferri-Inductor	LAU2R2K
L	852	Inductor	CTF1510
L	853	Inductor	CTF1489
L	901	Choke Coil 600µH	CTH1221
L	951	Ferri-Inductor	LAU2R2K
X	601	Radiator 10.00MHz	CSS1475
S	801	Switch(DSENS)	CSN1039
		FM/AM Tuner Unit	CWE1563
BZ	641	Buzzer	CPV1050

RESISTORS

R	101		RS1/16S101J
R	102		RS1/16S470J
R	103		RS1/16S101J
R	104		RS1/16S222J
R	105		RS1/16S103J
R	106		RS1/16S562J
R	107		RS1/16S332J
R	108		RS1/16S150J
R	109		RS1/16S181J
R	110		RS1/16S181J
R	111		RS1/16S223J
R	112		RS1/16S223J
R	113		RS1/16S102J
R	114		RS1/16S102J
R	143		RS1/16S104J
R	144		RS1/16S104J
R	145		RS1/16S563J
R	146		RS1/16S563J
R	147		RS1/16S474J
R	148		RS1/16S474J
R	151		RS1/16S0R0J
R	152		RS1/16S0R0J
R	161		RS1/16S272J
R	162		RS1/16S272J
R	163		RS1/16S162J
R	164		RS1/16S162J
R	171		RS1/16S102J
R	172		RS1/16S102J
R	241		RS1/16S102J
R	242		RS1/16S102J
R	245		RS1/16S101J
R	246		RS1/16S101J
R	247		RS1/16S101J
R	248		RS1/16S101J
R	249		RS1/16S101J
R	250		RS1/16S101J
R	287		RS1/16S0R0J
R	288		RS1/16S0R0J
R	291		RS1/16S0R0J
R	292		RS1/16S0R0J
R	301		RS1/16S103J
R	302		RS1/16S103J
R	304		RS1/16S331J
R	351		RS1/16S821J
R	352		RS1/16S821J

Circuit Symbol and No.	Part Name	Part No.
R 355		RS1/16S821J
R 356		RS1/16S821J
R 357		RS1/16S223J
R 358		RS1/16S223J
R 361		RS1/16S223J
R 362		RS1/16S223J
R 363		RS1/16S0R0J
R 368		RS1/16S0R0J
R 401		RS1/16S473J
R 402		RS1/16S473J
R 403		RS1/16S681J
R 404		RS1/16S681J
R 409		RS1/16S681J
R 410		RS1/16S103J
R 411		RS1/16S681J
R 412		RS1/16S681J
R 413		RS1/16S681J
R 414		RS1/16S473J
R 415		RS1/16S472J
R 416		RS1/16S473J
R 417		RS1/16S473J
R 418		RS1/16S473J
R 419		RS1/16S222J
R 420		RS1/16S222J
R 424		RS1/16S393J
R 601		RS1/16S473J
R 603		RS1/16S473J
R 605		RS1/16S0R0J
R 608		RS1/16S104J
R 610		RS1/16S102J
R 611		RS1/16S102J
R 612		RS1/16S102J
R 614		RS1/16S222J
R 615		RS1/16S104J
R 616		RS1/16S473J
R 617		RS1/16S0R0J
R 619		RS1/16S473J
R 620		RS1/16S472J
R 621		RS1/16S473J
R 623		RS1/16S473J
R 624		RS1/16S0R0J
R 625		RS1/16S682J
R 626		RS1/16S682J
R 627		RS1/16S104J
R 628		RS1/16S104J
R 629		RS1/16S104J
R 630		RS1/16S104J
R 636		RS1/16S221J
R 637		RS1/16S221J
R 639		RS1/16S0R0J
R 641		RS1/16S102J
R 644		RS1/16S0R0J
R 645		RS1/16S0R0J
R 654		RS1/16S104J
R 801		RS1/16S332J
R 804		RS1/16S1R0J
R 805		RS1/16S221J
R 806		RS1/16S221J
R 807		RS1/16S473J
R 808		RS1/16S473J
R 809		RS1/16S102J
R 810		RS1/16S222J
R 811		RS1/16S222J
R 812		RS1/16S222J
R 813		RS1/16S222J
R 814		RS1/16S222J
R 815		RS1/16S473J
R 816		RS1/16S104J
R 817		RD1/4PU391J
R 819		RS1/16S222J
R 820		RS1/16S222J
R 851		RS1/16S331J
R 852		RD1/4PU302J
R 853		RD1/4PU302J
R 854		RS1/16S121J
R 855		RS1/16S391J
R 856		RS1/16S1R0J
R 857		RS1/16S331J
R 912		RS1/16S102J
R 913		RS1/16S223J
R 914		RS1/16S102J
R 921		RS1/10S1R0J
R 922		RD1/4PU221J
R 923		RS1/16S103J
R 924		RD1/4PU222J
R 925		RS1/16S122J
R 931		RS1/16S472J
R 932		RS1/16S473J
R 933		RS1/16S103J
R 934		RS1/16S473J
R 935		RS1/16S104J
R 936		RS1/16S103J
R 937		RS1/16S473J
R 938		RD1/4PU102J
R 939		RD1/4PU102J
R 951		RD1/4PU153J
R 952		RS1/16S472J
R 953		RS1/16S472J
R 954		RS1/16S102J
R 962		RS1/16S102J
R 964		RS1/16S822J
R 982		RS1/16S223J
R 983		RS1/16S223J
R 984		RS1/16S473J
R 985		RD1/4PU102J
R 991		RD1/4PU221J
R 992		RD1/4PU221J
R 997		RAB4C102J
R 999		RS1/16S0R0J

CAPACITORS

Circuit Symbol and No.	Part Name	Part No.
C 101		CKSRYB104K16
C 102		CKSRYB104K16
C 139		CKSRYB104K16
C 140		CKSRYB104K16
C 141		CKSRYB104K16
C 142		CKSRYB104K16
C 143		CKSRYB474K10
C 144		CKSRYB474K10
C 145		CCSRCH101J50
C 146		CCSRCH101J50
C 147		CKSRYB103K50
C 161		CKSRYB183K25
C 162		CKSRYB183K25
C 171		CEJQ470M10
C 172		CKSRYB104K16
C 173		CEJQ100M16
C 177		CCSRCH100D50
C 178		CCSRCH100D50
C 179		CCSRCH100D50
C 180		CCSRCH100D50

=====Circuit Symbol and No.		===Part Name	Part No.
C	181		CKLSRB152K50
C	182		CKLSRB152K50
C	191		CEJQ1R0M50
C	192		CEJQ1R0M50
C	205		CEJQR22M50
C	206		CEJQR22M50
C	207		CEJQ1R0M50
C	208		CEJQ1R0M50
C	209		CEJQ1R0M50
C	210		CEJQ1R0M50
C	211		CEJQNP4R7M16
C	212		CEJQNP4R7M16
C	213		CEJQNP4R7M16
C	214		CEJQNP4R7M16
C	215		CEJQNP4R7M16
C	216		CEJQNP4R7M16
C	217		CEJQNP4R7M16
C	218		CEJQNP4R7M16
C	241		CCSQCH152J50
C	242		CCSQCH152J50
C	306		CEHAR330M10
C	307	4700µF/16V	CCH1367
C	309		CKSRYB104K16
C	310		CEHAR100M16
C	311		CKSQYB225K10
C	313		CKSRYB474K10
C	314		CKSRYB474K10
C	315		CKSRYB474K10
C	316		CKSRYB474K10
C	321		CKSRYB474K10
C	322		CKSRYB474K10
C	323		CKSRYB474K10
C	324		CKSRYB474K10
C	325		CKSQYB225K10
C	351		CEJQ100M16
C	352		CEJQ100M16
C	355		CEJQ100M16
C	356		CEJQ100M16
C	403		CKSRYB473K25
C	404		CEJQ101M6R3
C	405		CKSRYB103K50
C	406		CEJQ220M10
C	408		CKSRYB223K50
C	409		CKSRYB223K50
C	411		CKSRYB472K50
C	440		CKSRYB103K50
C	601		CEJQ4R7M35
C	602		CKSRYB102K50
C	604		CCSRCH180J50
C	605		CCSRCH220J50
C	606		CKSRYB102K50
C	654	470µF/10V	CCH1438
C	755		CKSRYB104K16
C	801		CKSRYB103K50
C	802		CEJQ470M10
C	803		CKSRYB104K16
C	805		CKSRYB103K25
C	806		CKSRYB473K25
C	812		CKSYB105K25
C	851		CEJQ470M16
C	853	4.7µF	CCG1111
C	855		CEJQ100M25
C	856		CCSRCH331J50
C	857		CEJQ330M25
C	858		CKSRYB104K16

=====Circuit Symbol and No.		===Part Name	Part No.
C	859		CEJQ101M10
C	860		CKSRYB104K16
C	861		CKSRYB103K50
C	912		CKSRYB472K50
C	913		CKSRYB103K50
C	914		CEJQ470M10
C	921	330µF/10V	CCH1181
C	922		CKSRYB103K50
C	923		CEJQ101M16
C	931		CEJQ100M16
C	932		CKSRYB104K16
C	963		CEJQ2R2M50
C	991		CKSRYB473K25
C	992		CKSRYB102K50
C	993		CEJQ101M10
C	999	470µF/16V	CCH1183

A Unit Number : CWM8148(DEH-P7450MP/XN/ES)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

IC	101	IC	HA12187FP
IC	132	IC	NJM4558MD
IC	203	IC	PML009A
IC	301	IC	PAL007A
IC	601	IC	PD5701A
IC	801	IC	TC7SET08FU
IC	851	IC	NJM2360M
IC	961	IC	S-80735ANDZI
Q	101	Transistor	2SA1037K
Q	102	Transistor	DTC124EK
Q	301	Transistor	DTC124EK
Q	351	Transistor	IMH3A
Q	353	Transistor	IMH3A
Q	401	Transistor	2SC2412K
Q	801	Transistor	IMD2A
Q	802	Transistor	2SD1760F5
Q	803	Transistor	2SD1767
Q	804	Transistor	IMD2A
Q	805	Transistor	DTC143EK
Q	851	Transistor	2SD1760F5
Q	852	Transistor	IMD2A
Q	911	Transistor	2SD1760F5
Q	913	Transistor	IMD2A
Q	921	Transistor	2SD2396
Q	922	Transistor	DTC114EK
Q	923	Transistor	2SB1238
Q	931	Transistor	IMX1
Q	932	Transistor	2SC2412K
Q	951	Transistor	2SA1037K
Q	981	Transistor	2SC2412K
Q	982	Transistor	IMD2A
Q	991	Transistor	IMD2A
Q	999	Transistor	2SD2396
D	131	Diode Network	DA204U
D	132	Diode Network	DA204U
D	133	Diode	DAN202U
D	134	Diode	DAP202U
D	801	Diode	HZS6L(B1)
D	803	Diode Network	DA204U
D	804	Diode	DAN202U
D	805	Diode	DAP202U
D	806	Diode	DAN202U
D	807	Diode	DAP202U
D	808	Diode	HZS11L(A1)
D	851	Diode	HZS9L(C3)

Circuit Symbol and No.		Part Name	Part No.
D	852	Diode	RB411D
D	901	Diode	1SR139-400
D	902	Diode	1SR139-400
D	903	Diode	1SR139-400
D	904	Diode	1SR139-400
D	911	Diode	1SR139-400
D	912	Diode	HZS6L(B1)
D	921	Diode	HZS9L(C1)
D	931	Diode	HZS7L(A1)
D	932	Diode	HZS7L(C3)
D	951	Diode	DAN202U
D	981	Diode	DAN202U
D	982	Diode	HZS9L(A2)
D	991	Diode	HZS9L(B1)
ZNR	451		DSP-201M-A21F
L	171	Inductor	CTF1530
L	401	Ferri-Inductor	LAU2R2K
L	402	Ferri-Inductor	LAU4R7K
L	403	Inductor	LAU1R0K
L	601	Ferri-Inductor	LAU2R2K
L	602	Inductor	LCTA2R2J2520
L	801	Inductor	LAU100K
L	802	Ferri-Inductor	LAU2R2K
L	852	Inductor	CTF1510
L	853	Inductor	CTF1489
L	901	Choke Coil 600µH	CTH1221
L	951	Ferri-Inductor	LAU2R2K
X	601	Radiator 10.00MHz	CSS1475
S	801	Switch(DSENS)	CSN1039
		FM/AM Tuner Unit	CWE1563
BZ	641	Buzzer	CPV1050

RESISTORS

Circuit Symbol and No.		Part No.
R	101	RS1/16S101J
R	102	RS1/16S470J
R	103	RS1/16S101J
R	104	RS1/16S222J
R	105	RS1/16S103J
R	106	RS1/16S562J
R	107	RS1/16S332J
R	108	RS1/16S150J
R	109	RS1/16S181J
R	110	RS1/16S181J
R	111	RS1/16S223J
R	112	RS1/16S223J
R	113	RS1/16S102J
R	114	RS1/16S102J
R	143	RS1/16S104J
R	144	RS1/16S104J
R	145	RS1/16S563J
R	146	RS1/16S563J
R	147	RS1/16S474J
R	148	RS1/16S474J
R	151	RS1/16S0R0J
R	152	RS1/16S0R0J
R	161	RS1/16S272J
R	162	RS1/16S272J
R	163	RS1/16S162J
R	164	RS1/16S162J
R	171	RS1/16S102J
R	172	RS1/16S102J
R	241	RS1/16S102J
R	242	RS1/16S102J
R	245	RS1/16S101J
R	246	RS1/16S101J
R	247	RS1/16S101J
R	248	RS1/16S101J
R	249	RS1/16S101J
R	250	RS1/16S101J
R	287	RS1/16S0R0J
R	288	RS1/16S0R0J
R	291	RS1/16S0R0J
R	292	RS1/16S0R0J
R	301	RS1/16S103J
R	302	RS1/16S103J
R	304	RS1/16S331J
R	351	RS1/16S821J
R	352	RS1/16S821J
R	355	RS1/16S821J
R	356	RS1/16S821J
R	357	RS1/16S223J
R	358	RS1/16S223J
R	361	RS1/16S223J
R	362	RS1/16S223J
R	363	RS1/16S0R0J
R	368	RS1/16S0R0J
R	401	RS1/16S473J
R	402	RS1/16S473J
R	403	RS1/16S681J
R	404	RS1/16S681J
R	409	RS1/16S681J
R	410	RS1/16S103J
R	411	RS1/16S681J
R	412	RS1/16S681J
R	413	RS1/16S681J
R	414	RS1/16S473J
R	415	RS1/16S472J
R	416	RS1/16S473J
R	417	RS1/16S473J
R	418	RS1/16S473J
R	419	RS1/16S222J
R	420	RS1/16S222J
R	424	RS1/16S393J
R	602	RS1/16S473J
R	603	RS1/16S473J
R	605	RS1/16S0R0J
R	608	RS1/16S104J
R	610	RS1/16S102J
R	611	RS1/16S102J
R	612	RS1/16S102J
R	614	RS1/16S222J
R	615	RS1/16S104J
R	616	RS1/16S473J
R	617	RS1/16S0R0J
R	619	RS1/16S473J
R	620	RS1/16S472J
R	621	RS1/16S473J
R	623	RS1/16S473J
R	624	RS1/16S0R0J
R	625	RS1/16S682J
R	626	RS1/16S682J
R	627	RS1/16S104J
R	628	RS1/16S104J
R	629	RS1/16S104J
R	630	RS1/16S104J
R	636	RS1/16S221J
R	637	RS1/16S221J
R	639	RS1/16S0R0J
R	641	RS1/16S102J
R	644	RS1/16S0R0J
R	645	RS1/16S0R0J
R	654	RS1/16S104J
R	801	RS1/16S332J

=====Circuit Symbol and No.	===Part Name	Part No.
R 804		RS1/16S1R0J
R 805		RS1/16S221J
R 806		RS1/16S221J
R 807		RS1/16S473J
R 808		RS1/16S473J
R 809		RS1/16S102J
R 810		RS1/16S222J
R 811		RS1/16S222J
R 812		RS1/16S222J
R 813		RS1/16S222J
R 814		RS1/16S222J
R 815		RS1/16S473J
R 816		RS1/16S104J
R 817		RD1/4PU391J
R 819		RS1/16S222J
R 820		RS1/16S222J
R 851		RS1/16S331J
R 852		RD1/4PU302J
R 853		RD1/4PU302J
R 854		RS1/16S121J
R 855		RS1/16S391J
R 856		RS1/16S1R0J
R 857		RS1/16S331J
R 912		RS1/16S102J
R 913		RS1/16S223J
R 914		RS1/16S102J
R 921		RS1/10S1R0J
R 922		RD1/4PU221J
R 923		RS1/16S103J
R 924		RD1/4PU222J
R 925		RS1/16S122J
R 931		RS1/16S472J
R 932		RS1/16S473J
R 933		RS1/16S103J
R 934		RS1/16S473J
R 935		RS1/16S104J
R 936		RS1/16S103J
R 937		RS1/16S473J
R 938		RD1/4PU102J
R 939		RD1/4PU102J
R 951		RD1/4PU153J
R 952		RS1/16S472J
R 953		RS1/16S472J
R 954		RS1/16S102J
R 962		RS1/16S102J
R 964		RS1/16S822J
R 982		RS1/16S223J
R 983		RS1/16S223J
R 984		RS1/16S473J
R 985		RD1/4PU102J
R 991		RD1/4PU221J
R 992		RD1/4PU221J
R 997		RAB4C102J
R 999		RS1/16S0R0J

CAPACITORS

C 101		CKSRYB104K16
C 102		CKSRYB104K16
C 139		CKSRYB104K16
C 140		CKSRYB104K16
C 141		CKSRYB104K16
C 142		CKSRYB104K16
C 143		CKSRYB474K10
C 144		CKSRYB474K10
C 145		CCSRCH101J50
C 146		CCSRCH101J50
C 147		CKSRYB103K50
C 161		CKSRYB183K25
C 162		CKSRYB183K25
C 171		CEJQ470M10
C 172		CKSRYB104K16
C 173		CEJQ100M16
C 177		CCSRCH100D50
C 178		CCSRCH100D50
C 179		CCSRCH100D50
C 180		CCSRCH100D50
C 181		CKLSRB152K50
C 182		CKLSRB152K50
C 191		CEJQ1R0M50
C 192		CEJQ1R0M50
C 205		CEJQR22M50
C 206		CEJQR22M50
C 207		CEJQ1R0M50
C 208		CEJQ1R0M50
C 209		CEJQ1R0M50
C 210		CEJQ1R0M50
C 211		CEJQNP4R7M16
C 212		CEJQNP4R7M16
C 213		CEJQNP4R7M16
C 214		CEJQNP4R7M16
C 215		CEJQNP4R7M16
C 216		CEJQNP4R7M16
C 217		CEJQNP4R7M16
C 218		CEJQNP4R7M16
C 241		CCSQCH152J50
C 242		CCSQCH152J50
C 306		CEHAR330M10
C 307	4700µF/16V	CCH1367
C 309		CKSRYB104K16
C 310		CEHAR100M16
C 311		CKSQYB225K10
C 313		CKSRYB474K10
C 314		CKSRYB474K10
C 315		CKSRYB474K10
C 316		CKSRYB474K10
C 321		CKSRYB474K10
C 322		CKSRYB474K10
C 323		CKSRYB474K10
C 324		CKSRYB474K10
C 325		CKSQYB225K10
C 351		CEJQ100M16
C 352		CEJQ100M16
C 355		CEJQ100M16
C 356		CEJQ100M16
C 403		CKSRYB473K25
C 404		CEJQ101M6R3
C 405		CKSRYB103K50
C 406		CEJQ220M10
C 408		CKSRYB223K50
C 409		CKSRYB223K50
C 411		CKSRYB472K50
C 440		CKSRYB103K50
C 601		CEJQ4R7M35
C 602		CKSRYB102K50
C 604		CCSRCH180J50
C 605		CCSRCH220J50
C 606		CKSRYB102K50
C 654	470µF/10V	CCH1438
C 755		CKSRYB104K16
C 801		CKSRYB103K50
C 802		CEJQ470M10

=====Circuit Symbol and No.		===Part Name	Part No.
C	803		CKSRYB104K16
C	805		CKSRYB103K25
C	806		CKSRYB473K25
C	812		CKSYB105K25
C	851		CEJQ470M16
C	853	4.7µF	CCG1111
C	855		CEJQ100M25
C	856		CCSRCH331J50
C	857		CEJQ330M25
C	858		CKSRYB104K16
C	859		CEJQ101M10
C	860		CKSRYB104K16
C	861		CKSRYB103K50
C	912		CKSRYB472K50
C	913		CKSRYB103K50
C	914		CEJQ470M10
C	921	330µF/10V	CCH1181
C	922		CKSRYB103K50
C	923		CEJQ101M16
C	931		CEJQ100M16
C	932		CKSRYB104K16
C	963		CEJQ2R2M50
C	991		CKSRYB473K25
C	992		CKSRYB102K50
C	993		CEJQ101M10
C	999	470µF/16V	CCH1183

C Unit Number : CWM7989(DEH-P740MP/XN/UC)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC	1901	IC	PD5706A
IC	1902	IC	PD8089A
IC	1903	IC	TSOP1840SB3V
IC	1904	IC	S-818A33AUC-BGN
Q	1941	Transistor	2SD1664
Q	1942	Transistor	2SC4617
D	1901	Diode	DAP202U
D	1902	Diode	DAN202U
D	1906	Diode	1SS355
D	1979	LED	CL170PGCD
D	1980	LED	CL170PGCD
D	1981	LED	CL170PGCD
D	1983	LED	CL170UBX
D	1984	LED	CL170UBX
D	1993	LED	CL170PGCD
D	1996	LED	CL170PGCD
L	1901	Inductor	CTF1530
L	1902	Inductor	CTF1530
L	1922	Inductor-Array	CTF1421
L	1923	Inductor-Array	CTF1421
L	1924	Inductor-Array	CTF1421
L	1990	Inductor-Array	CTF1421
TH	1941	Thermistor	CCX1037
X	1901	Radiator 10.0MHz	CSS1577
S	1901	Switch	CSG1107
S	1903	Push Switch	CSG1111
S	1906	Switch	CSG1107
S	1907	Switch	CSG1107
S	1908	Push Switch	CSG1111
S	1909	Switch	CSG1107
S	1910	Switch	CSG1107
S	1911	Switch	CSG1107
S	1912	Switch	CSG1107
S	1913	Switch	CSG1107
S	1914	Switch	CSG1107

=====Circuit Symbol and No.		===Part Name	Part No.
S	1915	Switch	CSG1107
S	1916	Switch	CSG1107
S	1917	Switch	CSG1107
S	1918	Switch	CSG1107
S	1919	Switch	CSG1107
S	1920	Switch	CSG1107
S	1922	Switch	CSG1107
S	1923	Switch	CSG1107
S	1924	Switch	CSG1107
S	1930	Encoder(VOLUME)	CSD1059
VR	1941	Semi-fixed 20kΩ(B)	CCP1231
		OEL Unit	MXS8017

RESISTORS

R	1901		RS1/16S222J
R	1902		RS1/16S222J
R	1903		RS1/16S473J
R	1904		RS1/16S103J
R	1905		RS1/16S682J
R	1906		RS1/16S121J
R	1907		RS1/16S2R2J
R	1908		RS1/16S222J
R	1909		RS1/16S154J
R	1910		RS1/16S473J
R	1911		RAB4C101J
R	1912		RS1/16S473J
R	1913		RS1/16S473J
R	1914		RS1/16S103J
R	1915		RAB4C101J
R	1916		RS1/16S101J
R	1917		RAB4C101J
R	1918		RAB4C101J
R	1919		RAB4C101J
R	1920		RAB4C101J
R	1925		RAB4C101J
R	1926		RS1/16S101J
R	1931		RS1/16S0R0J
R	1941		RS1/16S333J
R	1942		RS1/16S683J
R	1943		RS1/16S392J
R	1944		RS1/16S393J
R	1945		RAB4C102J
R	1946		RS1/16S222J
R	1947		RS1/16S103J
R	1949		RS1/16S102J
R	1950		RS1/16S102J
R	1966		RS1/16S101J
R	1967		RS1/16S101J
R	1968		RS1/16S101J
R	1969		RS1/16S101J
R	1970		RS1/16S270J
R	1971		RS1/16S270J
R	1972		RS1/16S270J
R	1973		RS1/16S270J
R	1974		RS1/16S270J
R	1975		RS1/16S270J
R	1976		RS1/16S101J
R	1977		RS1/16S101J
R	1978		RS1/16S121J
R	1979		RS1/16S121J
R	1980		RS1/16S0R0J
R	1985		RS1/16S0R0J
R	1986		RS1/16S181J
R	1987		RS1/16S181J

=====Circuit Symbol and No.	===Part Name	Part No.
CAPACITORS		
C 1901		CKSYB105K25
C 1902		CKSRYB104K16
C 1903		CKSRYB474K10
C 1905		CKSRYB103K25
C 1909		CKSRYB473K16
C 1910		CSZSR4R7M10
C 1911		CKSRYB103K25
C 1912		CSZSR4R7M10
C 1913		CKSRYB103K50
C 1914		CSZSR4R7M10
C 1941		CKSRYB104K25
C 1942		CKSRYB104K16
C 1943		CKSRYB104K25
C 1944		CKSRYB104K25
C 1945		CKSRYB104K25
C 1946		CKSRYB104K16
C 1947		CKSRYB104K25
C 1961		CKSRYB104K25
C 1962		CKSRYB104K25
C 1972		CKSRYB103K25

C Unit Number : CWM8237 (DEH-P7400MP/XN/UC, DEH-P7450MP/XN/ES)

Unit Name : Keyboard Unit

MISCELLANEOUS			
IC	1901	IC	PD5706A
IC	1902	IC	PD8088A
IC	1903	IC	TSOP1840SB3V
IC	1904	IC	S-818A33AUC-BGN
Q	1941	Transistor	2SD1664
Q	1942	Transistor	2SC4617
D	1901	Diode	DAP202U
D	1902	Diode	DAN202U
D	1906	Diode	1SS355
D	1979	LED	CL170PGCD
D	1980	LED	CL170PGCD
D	1981	LED	CL170PGCD
D	1983	LED	CL170UBX
D	1984	LED	CL170UBX
D	1993	LED	CL170PGCD
D	1996	LED	CL170PGCD
L	1901	Inductor	CTF1530
L	1902	Inductor	CTF1530
L	1922	Inductor-Array	CTF1421
L	1923	Inductor-Array	CTF1421
L	1924	Inductor-Array	CTF1421
L	1990	Inductor-Array	CTF1421
TH	1941	Thermistor	CCX1037
X	1901	Radiator 10.0MHz	CSS1577
S	1901	Switch	CSG1107
S	1903	Push Switch	CSG1111
S	1906	Switch	CSG1107
S	1907	Switch	CSG1107
S	1908	Push Switch	CSG1111
S	1909	Switch	CSG1107
S	1910	Switch	CSG1107
S	1911	Switch	CSG1107
S	1912	Switch	CSG1107
S	1913	Switch	CSG1107
S	1914	Switch	CSG1107
S	1915	Switch	CSG1107
S	1916	Switch	CSG1107
S	1917	Switch	CSG1107
S	1918	Switch	CSG1107
S	1919	Switch	CSG1107

=====Circuit Symbol and No.	===Part Name	Part No.
S 1920	Switch	CSG1107
S 1922	Switch	CSG1107
S 1923	Switch	CSG1107
S 1924	Switch	CSG1107
S 1930	Encoder(VOLUME)	CSD1059
VR 1941	Semi-fixed 20kΩ(B)	CCP1231
	OEL Unit	MXS8017
RESISTORS		
R 1901		RS1/16S222J
R 1902		RS1/16S222J
R 1903		RS1/16S473J
R 1904		RS1/16S103J
R 1905		RS1/16S682J
R 1906		RS1/16S121J
R 1907		RS1/16S2R2J
R 1908		RS1/16S222J
R 1909		RS1/16S154J
R 1910		RS1/16S473J
R 1911		RAB4C101J
R 1912		RS1/16S473J
R 1913		RS1/16S473J
R 1914		RS1/16S103J
R 1915		RAB4C101J
R 1916		RS1/16S101J
R 1917		RAB4C101J
R 1918		RAB4C101J
R 1919		RAB4C101J
R 1920		RAB4C101J
R 1925		RAB4C101J
R 1926		RS1/16S101J
R 1931		RS1/16S0R0J
R 1941		RS1/16S333J
R 1942		RS1/16S683J
R 1943		RS1/16S392J
R 1944		RS1/16S393J
R 1945		RAB4C102J
R 1946		RS1/16S222J
R 1947		RS1/16S103J
R 1949		RS1/16S102J
R 1950		RS1/16S102J
R 1966		RS1/16S101J
R 1967		RS1/16S101J
R 1968		RS1/16S101J
R 1969		RS1/16S101J
R 1970		RS1/16S270J
R 1971		RS1/16S270J
R 1972		RS1/16S270J
R 1973		RS1/16S270J
R 1974		RS1/16S270J
R 1975		RS1/16S270J
R 1976		RS1/16S101J
R 1977		RS1/16S101J
R 1978		RS1/16S121J
R 1979		RS1/16S121J
R 1980		RS1/16S0R0J
R 1985		RS1/16S0R0J
R 1986		RS1/16S181J
R 1987		RS1/16S181J
CAPACITORS		
C 1901		CKSYB105K25
C 1902		CKSRYB104K16
C 1903		CKSRYB474K10
C 1905		CKSRYB103K25
C 1909		CKSRYB473K16

=====Circuit Symbol and No.		===Part Name	Part No.
C	1910		CSZSR4R7M10
C	1911		CKSRYB103K25
C	1912		CSZSR4R7M10
C	1913		CKSRYB103K50
C	1914		CSZSR4R7M10
C	1941		CKSRYB104K25
C	1942		CKSRYB104K16
C	1943		CKSRYB104K25
C	1944		CKSRYB104K25
C	1945		CKSRYB104K25
C	1946		CKSRYB104K16
C	1947		CKSRYB104K25
C	1961		CKSRYB104K25
C	1962		CKSRYB104K25
C	1972		CKSRYB103K25

B Unit Number : CWM7986
Unit Name : Panel Unit

D	1850	LED	CL220PGC
S	1850	Push Switch(EJECT)	CSG1112
R	1852		RS1/16S101J
R	1853		RS1/16S101J
C	1863		CKSRYB223K50

D Unit Number : CWX2617
Unit Name : CD Core Unit(S9MP3)

MISCELLANEOUS

IC	201	IC	UPD63760GJ
IC	202	IC	MSM51V4265EP-70TS
IC	203	IC	BA033SFP
IC	301	IC	BA5996FM
IC	701	IC	PE5268A
IC	702	IC	TC74VHCT08AFT
IC	703	IC	S-818A33AUC-BGN
IC	704	IC	PDH043A
Q	101	Transistor	2SB1132
Q	601	Transistor	DTC323TK
Q	602	Transistor	DTC323TK
Q	603	Transistor	2SB709A
Q	701	Transistor	UN2111
D	101	Diode	1SS355
D	201	Diode	1SR154-400
D	202	Diode	1SR154-400
D	203	Diode	1SR154-400
D	601	Chip Diode	MA151WA
L	201	Inductor	CTF1546
L	202	Inductor	CTF1546
L	204	Inductor	CTF1546
L	701	Inductor	CTF1546
L	702	Inductor	LCYBR22J1608
TH	701	Thermistor	CCX1037
X	201	Ceramic Resonator 16.93MHz	CSS1569
X	202	Ceramic Resonator 24.57MHz	CSS1570
X	701	Ceramic Resonator 16.00MHz	CSS1576
S	901	Spring Switch(HOME)	CSN1051
S	902	Spring Switch(CLAMP)	CSN1052
S	903	Spring Switch(DSCSNS)	CSN1051
S	904	Spring Switch(12EJ)	CSN1052
S	905	Spring Switch(8EJ)	CSN1051

RESISTORS

R	101		RS1/10S1R5J
R	102		RS1/10S1R5J
R	103		RS1/10S1R5J
R	104		RS1/10S1R5J
R	105		RS1/10S1R5J

=====Circuit Symbol and No.		===Part Name	Part No.
R	201		RS1/16SS102J
R	202		RS1/16SS333J
R	203		RS1/16SS333J
R	204		RS1/16SS333J
R	205		RS1/16SS0R0J
R	207		RS1/16SS0R0J
R	209		RS1/16SS0R0J
R	212		RS1/16SS221J
R	213		RS1/16SS1002D
R	214		RS1/16SS1002D
R	215		RS1/16SS1002D
R	216		RS1/16SS1002D
R	217		RS1/16SS1002D
R	218		RS1/16SS1002D
R	219		RS1/16SS1002D
R	220		RS1/16SS1002D
R	221		RS1/16SS103J
R	222		RS1/16SS103J
R	223		RS1/16SS103J
R	224		RS1/16SS103J
R	225		RS1/16SS103J
R	226		RS1/16SS393J
R	227		RS1/16SS103J
R	228		RS1/16SS182J
R	229		RS1/16SS103J
R	233		RS1/16SS183J
R	237		RS1/16SS104J
R	238		RS1/16SS473J
R	301		RS1/16SS183J
R	302		RS1/16SS822J
R	303		RS1/16SS0R0J
R	304		RS1/16SS183J
R	305		RS1/16SS822J
R	306		RS1/16SS0R0J
R	307		RS1/16SS183J
R	308		RS1/16SS822J
R	309		RS1/16SS183J
R	310		RS1/16SS822J
R	311		RS1/16SS0R0J
R	601		RS1/16S101J
R	602		RS1/16S101J
R	603		RS1/16S223J
R	604		RS1/16S223J
R	605		RS1/16SS103J
R	701		RS1/16SS0R0J
R	707		RS1/16SS0R0J
R	708		RS1/16SS102J
R	709		RS1/16SS102J
R	710		RS1/16SS102J
R	711		RS1/16SS102J
R	712		RS1/16SS102J
R	713		RS1/16SS102J
R	714		RS1/16SS473J
R	715		RAB4CQ221J
R	716		RAB4CQ221J
R	717		RAB4CQ221J
R	718		RAB4CQ221J
R	719		RAB4CQ221J
R	720		RS1/16SS471J
R	721		RS1/16SS471J
R	722		RAB4CQ221J
R	723		RS1/16SS102J
R	724		RN1/16SE1302D
R	725		RS1/16SS222J
R	726		RS1/16SS103J

=====Circuit Symbol and No.		===Part Name	Part No.
R	727		RS1/16SS473J
R	728		RS1/16SS473J
R	729		RS1/16SS223J
R	730		RS1/16SS473J
R	731		RS1/16SS104J
R	732		RS1/16SS104J
R	733		RS1/16SS104J
R	734		RS1/16SS472J
R	735		RS1/16SS473J
R	737		RAB4CQ473J
R	739		RAB4CQ473J
R	740		RS1/16SS473J
R	742		RS1/16SS104J
R	744		RS1/16SS104J
R	745		RS1/16SS473J
R	746		RS1/16SS104J
R	747		RS1/16SS104J
R	748		RS1/16SS104J
R	790		RD1/4PU473J
R	801		RS1/16SS104J
R	802		RS1/16SS473J
R	803		RS1/16SS273J
R	901		RS1/16SS221J
R	902		RS1/16SS221J
R	903		RS1/16SS221J
R	904		RS1/16SS221J
R	905		RS1/16SS221J
R	906		RS1/16SS221J

CAPACITORS

C	101		CKSSYB104K10
C	102		CKSSYB104K10
C	103		CEV101M16
C	104		CEV101M4
C	105		CKSSYB104K10
C	106		CKSRYB102K50
C	108		CKSSYB104K10
C	109		CEV100M16
C	201		CKSSYB471K50
C	202		CKSSYB104K10
C	203		CKSSYB104K10
C	204		CEV220M6R3
C	205		CKSSYB103K16
C	206		CKSSYB103K16
C	207		CEV221M4
C	208		CKSSYB104K10
C	209		CKSSYB104K10
C	210		CKSSYB104K10
C	211		CKSSYB104K10
C	216		CKSSYB103K16
C	217		CKSSYB104K10
C	218		CKSSYB104K10
C	219		CKSSYB104K10
C	220		CKSSYB103K16
C	221		CKSSYB104K10
C	222		CCSSCH270J50
C	223		CCSSCJ3R0C50
C	224		CKSSYB104K10
C	225		CKSSYB103K16
C	226		CCSSCH680J50
C	227		CCSSCH470J50
C	228		CKSSYB682K25
C	230		CKSSYB104K10
C	232		CKSSYB104K10
C	233	47µF/6.3V	CCH1436

=====Circuit Symbol and No.		===Part Name	Part No.
C	234		CEV221M4
C	235		CKSRYB224K16
C	237		CKSSYB104K10
C	238		CKSSYB104K10
C	301		CKSSYB331K50
C	302		CKSSYB331K50
C	303		CKSSYB472K25
C	304		CKSSYB472K25
C	305		CEV101M16
C	306		CKSRYB224K16
C	601		CCSRCH102J50
C	602		CCSRCH102J50
C	603		CSZS4R7M10
C	604		CSZS4R7M10
C	701		CKSSYB104K10
C	702		CKSSYB471K50
C	703		CKSSYB103K16
C	704		CEV1R0M50
C	705		CKSSYB104K10
C	706		CKSSYB471K50
C	707		CKSSYB104K10
C	708		CKSSYB104K10
C	709		CKSSYB103K16
C	710		CKSSYB104K10
C	711	10µF/10V	CCH1349
C	712		CKSRYB224K16
C	713		CKSSYB104K10
C	714		CKSSYB104K10
C	715		CKSSYB103K16
C	716		CKSSYB103K16
C	901		CKSSYB104K10
C	903		CCSRCH101J50

Miscellaneous Parts List

		Pickup Unit(Service)(P9MP3)	CXX1550
M	1	Motor Unit(SPINDLE)	CXB6007
M	2	Motor Unit(LOADING/CARRIAGE)	CXB5903