


2. EXPLODED VIEWS AND PARTS LIST

2.1 PACKING

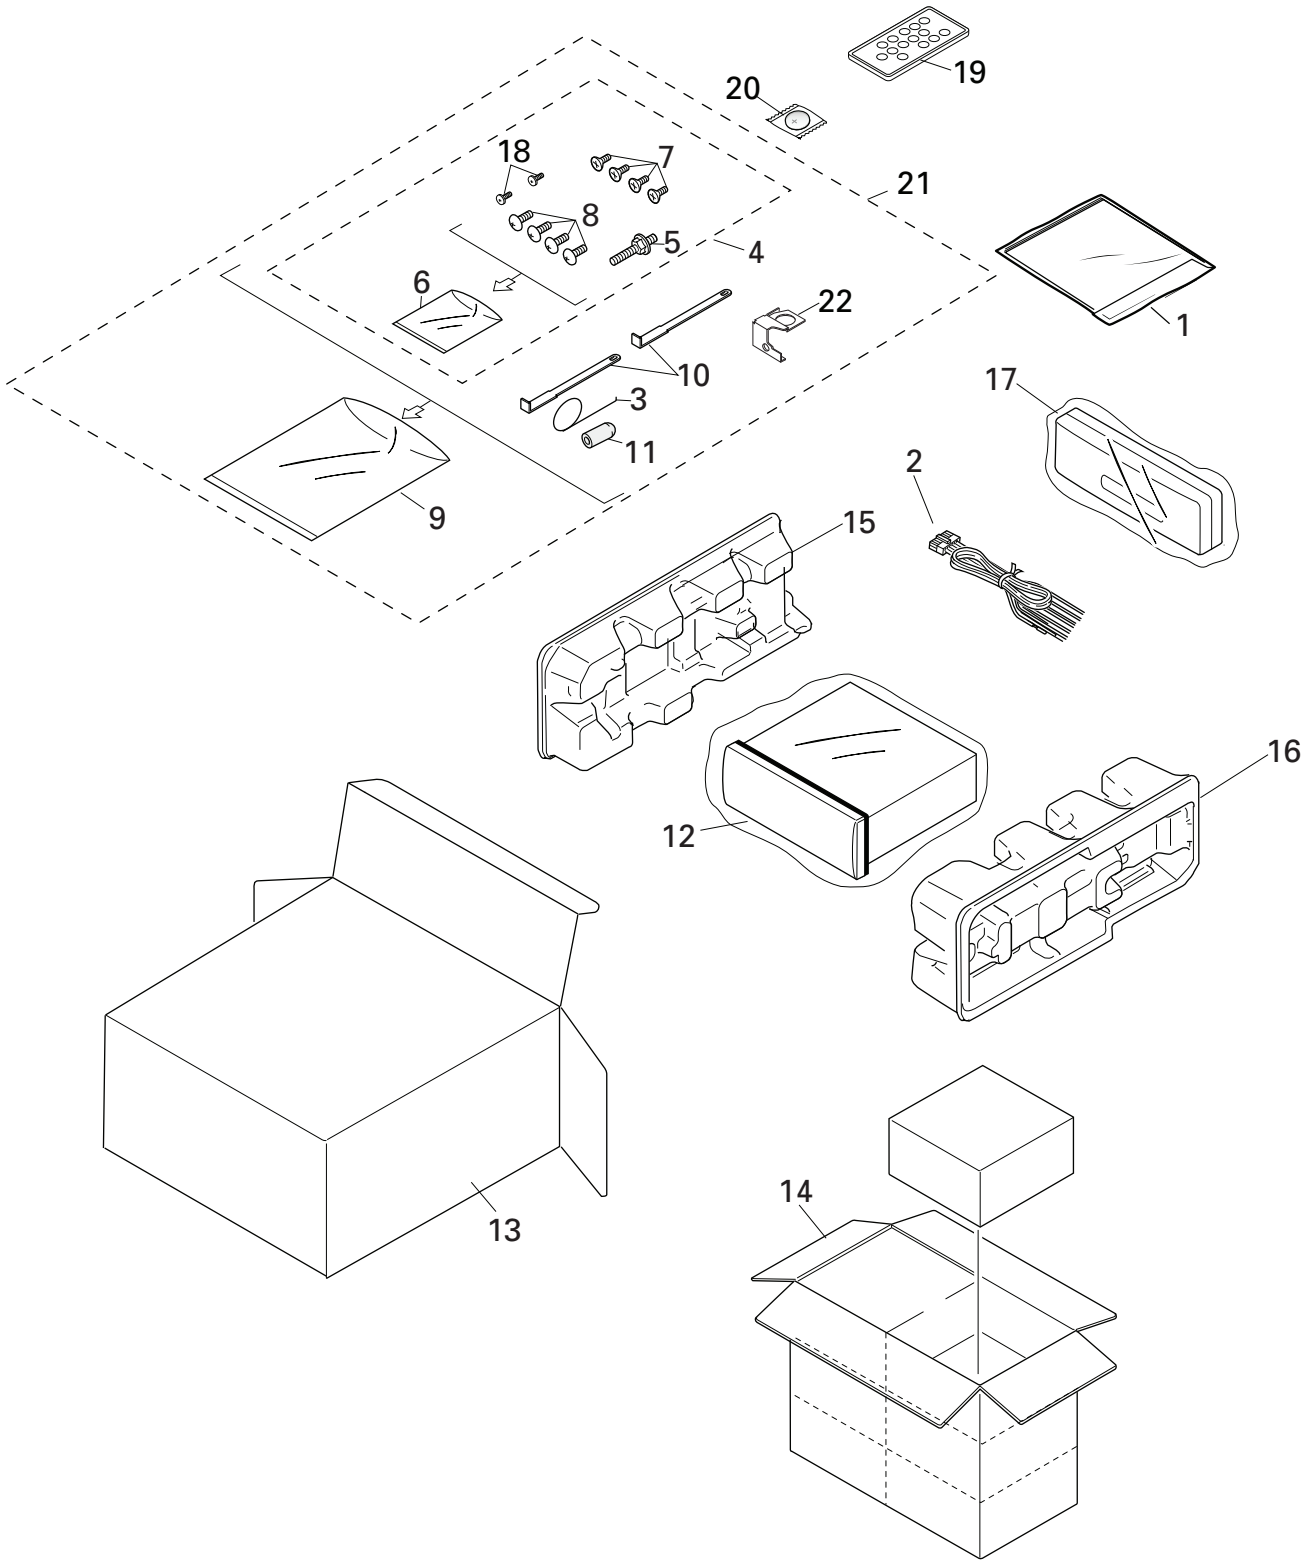

NOTE:

- Parts marked by "*" are generally unavailable because they are not in our Master Spare Parts List.
- Screws adjacent to ∇ mark on the product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

(1) PACKING SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
	1-1 Owner's Manual	See Contrast table(2)	12	Polyethylene Bag	CEG1173
	1-2 Installation Manual	See Contrast table(2)	13	Carton	See Contrast table(2)
*	1-3 Card	See Contrast table(2)	14	Contain Box	See Contrast table(2)
*	1-4 Warranty Card	See Contrast table(2)	15	Protector	CHP2251
	1-5 Polyethylene Bag	CEG1116	16	Protector	CHP2252
	2 Cord Assy	CDE6468	17	Case Assy	See Contrast table(2)
	3 Spring	CBH1650	18	Screw	BPZ20P060FZK
	4 Screw Assy	CEA2796	19	Remote Control Unit	CXB8743
	5 Screw	CBA1002	*	20 Battery	CEX1065
*	6 Polyethylene Bag	CEG-127	21	Accessory Assy	CEA2773
	7 Screw	CRZ50P090FMC	22	Earth Plate	CNC9450
	8 Screw	TRZ50P080FMC			
*	9 Polyethylene Bag	CEG-158			
	10 Handle	CNC5395			
	11 Bush	CNV3930			

(2) CONTRAST TABLE


DEH-340/XN/UC, DEH-3400/XN/UC and DEH-34/XN/UC are constructed the same except for the following:

Mark No.	Symbol and Description	Part No.		
		DEH-340/XN/UC	DEH-3400/XN/UC	DEH-34/XN/UC
	1-1 Owner's Manual	CRD3497	CRD3498	CRD3498
	1-2 Installation Manual	CRD3501	CRD3502	CRD3502
*	1-3 Card	Not used	ARY1048	ARY1048
*	1-4 Warranty Card	CRY1070	Not used	Not used
	13 Carton	CHG4550	CHG4547	CHG4549
	14 Contain Box	CHL4550	CHL4547	CHL4549
	17 Case Assy	CXB3520	CXB3520	Not used

● Owner's Manual, Installation Manual

Model	Part No.	Language
DEH-340/XN/UC	CRD3497	English, French, Spanish
	CRD3501	
DEH-3400/XN/UC	CRD3498	English, French, Spanish
DEH-34/XN/UC	CRD3502	


2.2 EXTERIOR(DEH-340/XN/UC)

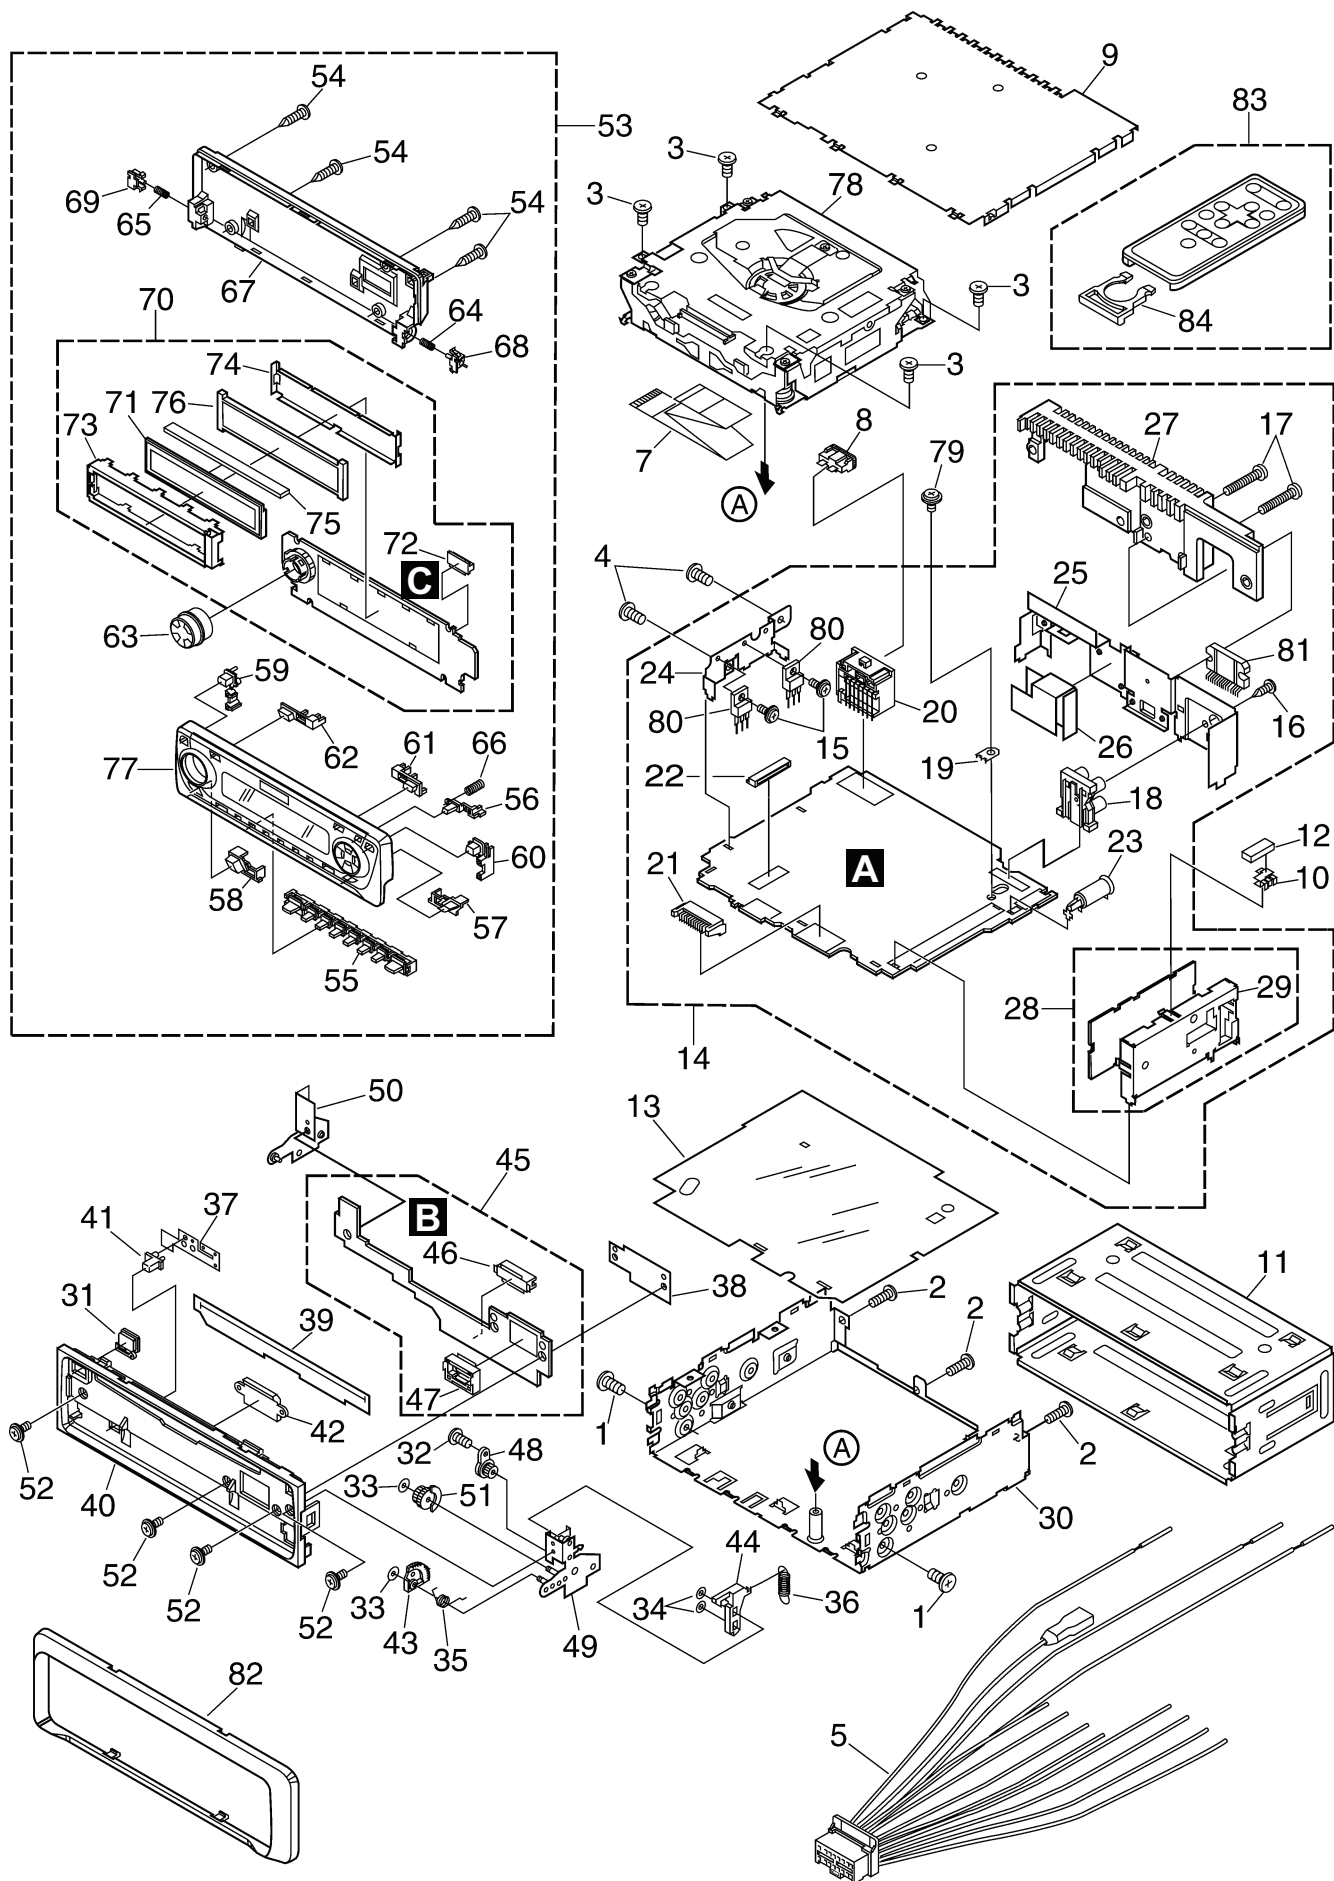

● EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Screw	BMZ30P040FZK	41	Pin	CNV6486
2	Screw	BMZ30P100FMC	42	Lighting Conductor	CNV6487
3	Screw	BSZ26P060FMC	43	Gear	CNV6507
4	Screw	BSZ30P060FMC	44	Arm	CNV6508
5	Cord Assy	CDE6468	45	Panel Unit	CWM7375
6			46	Socket(CN1950)	CKS3550
7	Cable	CDE6610	47	Connector(CN1951)	CKS4206
8	Fuse(10A)	CEK1136	48	Damper Unit	CXB5070
9	Case	CNB2686	49	Holder Unit	CXB6356
10	Holder	CNC5704	50	Holder Unit	CXB6357
11	Holder	CNC8659	51	Clutch Unit	CXB6358
12	Cushion	CNM4870	52	Screw	IMS20P045FZK
13	Insulator	CNM6948	53	Detach Grille Assy	CXB8403
14	Tuner Amp Unit	CWM7960	54	Screw	BPZ20P100FZK
15	Screw	ASZ26P060FMC	55	Button(1-6)	CAC7225
16	Screw	BPZ26P080FMC	56	Button(OPEN)	CAC7227
17	Screw	BSZ26P160FMC	57	Button(LOUD)	CAC7229
18	Pin Jack(CN351)	CKB1051	58	Button(EQ)	CAC7231
19	Terminal(CN404)	CKF1059	59	Button(CLOCK)	CAC7233
20	Plug(CN901)	CKM1330	60	Button(AUDIO)	CAC7234
21	Plug(CN750)	CKS3537	61	Button(LOCAL)	CAC7235
22	Connector(CN501)	CKS3835	62	Button(BSM)	CAC7236
23	Antenna Jack(CN402)	CKX1056	63	Knob	CAC7528
24	Holder	CNC8615	64	Spring	CBH2430
25	Holder	CNC9618	65	Spring	CBH2431
26	Insulator	CNM6949	66	Spring	CBH2630
27	Heat Sink	CNR1614	67	Cover	CNS6740
28	FM/AM Tuner Unit	CWE1563	68	Holder	CNV6505
29	Holder	CNC8815	69	Holder	CNV6506
30	Chassis Unit	CXB6100	70	Keyboard Unit	CWM7961
31	Button(EJECT)	CAC6839	71	LCD	CAW1699
32	Screw(M2x2)	CBA1176	72	Connector(CN1901)	CKS4524
33	Washer	CBF1038	73	Holder	CNC9757
34	Washer	CBF1039	74	Sheet	CNM7647
35	Spring	CBH2428	75	Connector	CNV6440
36	Spring	CBH2429	76	Lighting Conductor	CNV7244
37	Spring	CBL1512	77	Sub Grille Assy	CXB8420
38	Holder	CNC9096	78	CD Mechanism Module(S9ANA)	CXK5501
39	Cover	CNM6854	79	Screw	ISS26P055FUC
40	Panel	CNS6278	80	Transistor(Q510,910)	2SD2396
			81	IC(IC361)	PAL007A
			82	Panel	CNS6935
			83	Remote Control Unit	CXB8743
			84	Cover	CNS7068

2.3 EXTERIOR(DEH-3400/XN/UC, DEH-34/XN/UC)

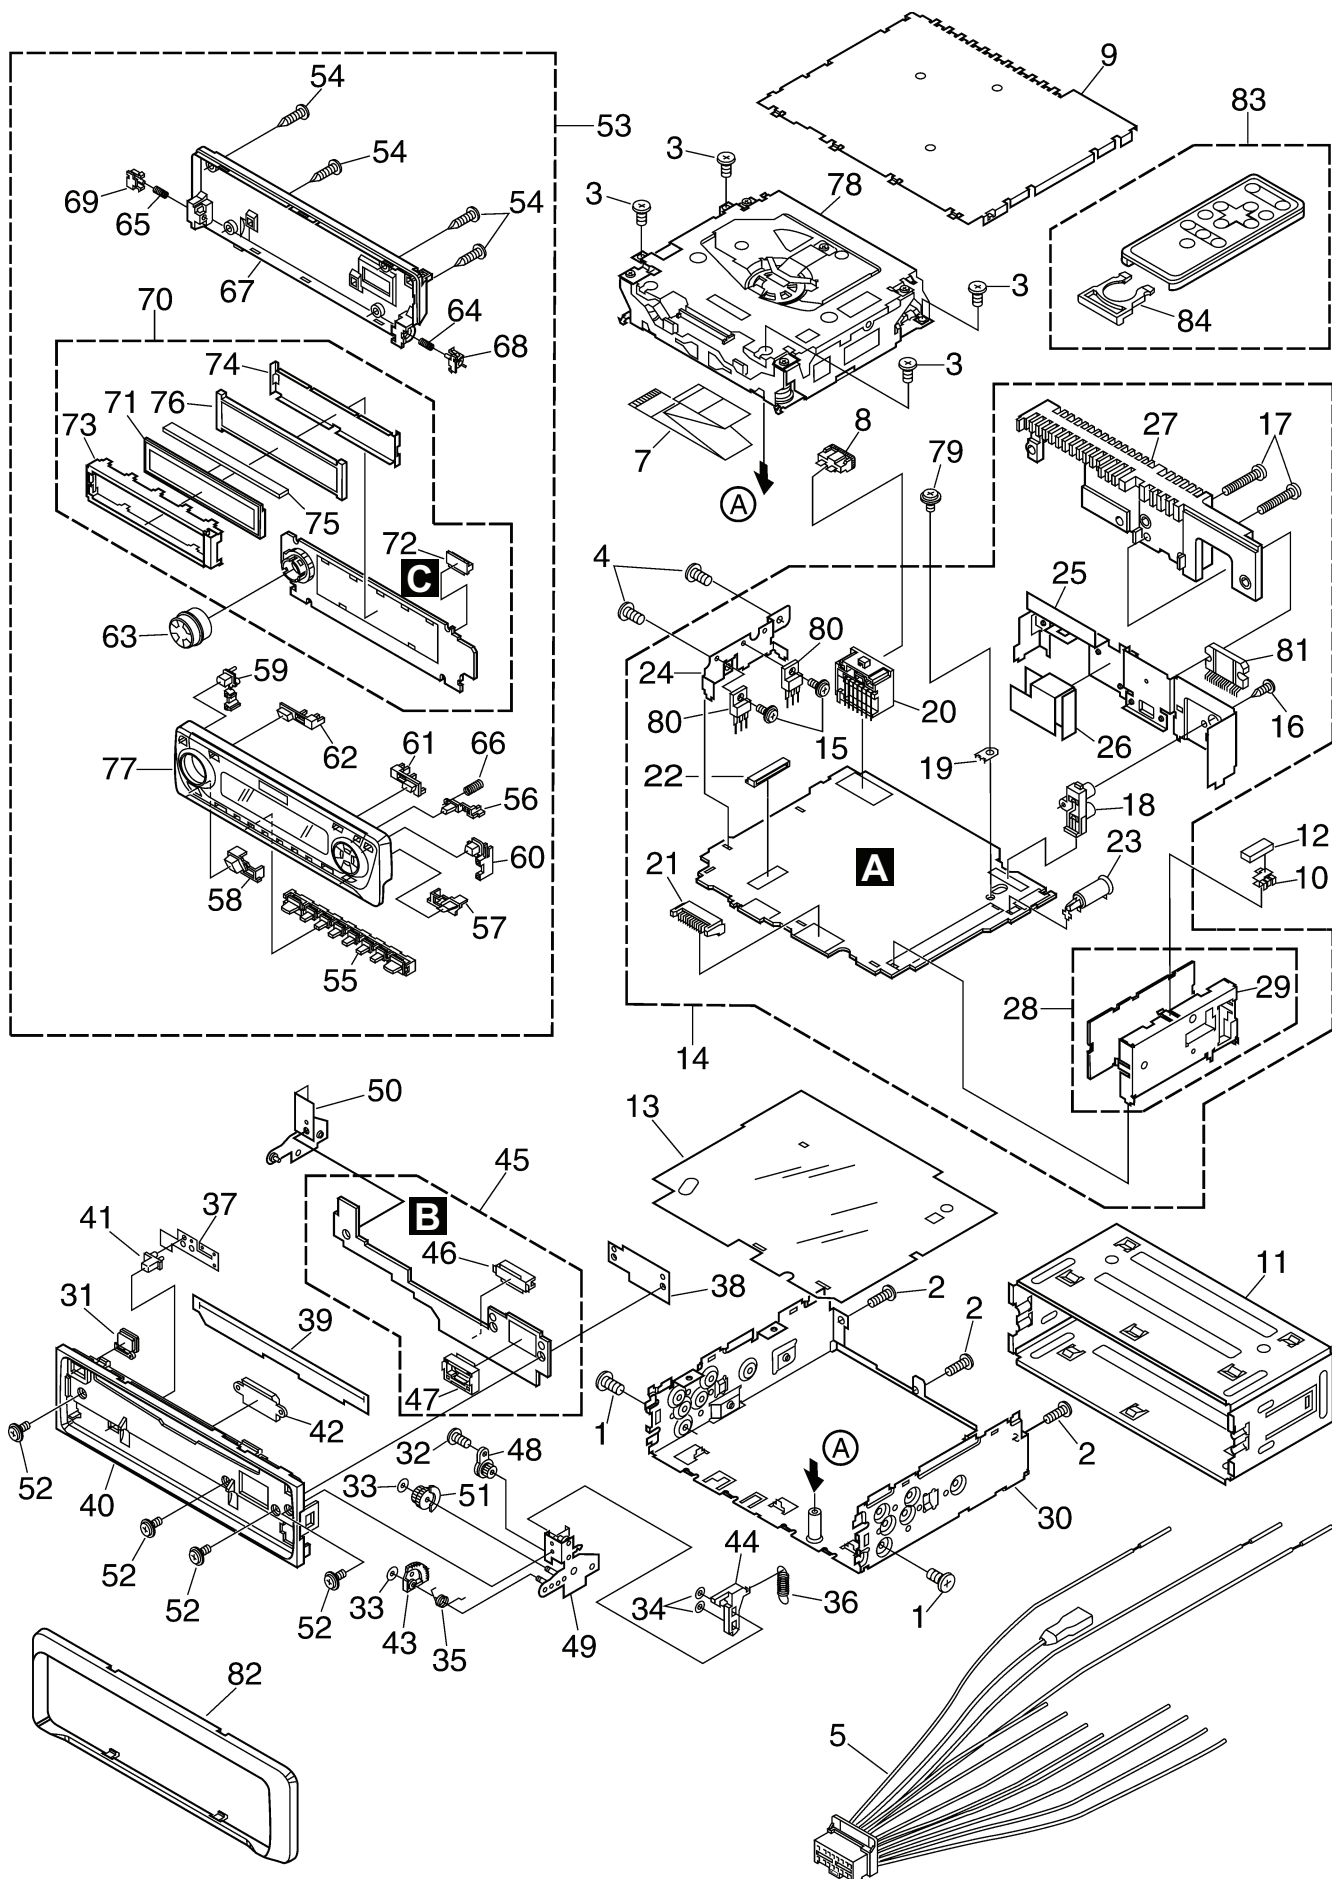

(1) EXTERIOR SECTION PARTS LIST


Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Screw	BMZ30P040FZK	41	Pin	CNV6486
2	Screw	BMZ30P100FMC	42	Lighting Conductor	CNV6487
3	Screw	BSZ26P060FMC	43	Gear	CNV6507
4	Screw	BSZ30P060FMC	44	Arm	CNV6508
5	Cord Assy	CDE6468	45	Panel Unit	CWM7375
6			46	Socket(CN1950)	CKS3550
7	Cable	CDE6610	47	Connector(CN1951)	CKS4206
8	Fuse(10A)	CEK1136	48	Damper Unit	CXB5070
9	Case	CNB2686	49	Holder Unit	CXB6356
10	Holder	CNC5704	50	Holder Unit	CXB6357
11	Holder	CNC8659	51	Clutch Unit	CXB6358
12	Cushion	CNM4870	52	Screw	IMS20P045FZK
13	Insulator	CNM6948	53	Detach Grille Assy	See Contrast table(2)
14	Tuner Amp Unit	CWM7974	54	Screw	BPZ20P100FZK
15	Screw	ASZ26P060FMC	55	Button(1-6)	CAC7225
16	Screw	BPZ26P080FMC	56	Button(OPEN)	CAC7227
17	Screw	BSZ26P160FMC	57	Button(LOUD)	CAC7229
18	Pin Jack(CN351)	CKB1028	58	Button(EQ)	CAC7231
19	Terminal(CN404)	CKF1059	59	Button(CLOCK)	CAC7233
20	Plug(CN901)	CKM1330	60	Button(AUDIO)	CAC7234
21	Plug(CN750)	CKS3537	61	Button(LOCAL)	CAC7235
22	Connector(CN501)	CKS3835	62	Button(BSM)	CAC7236
23	Antenna Jack(CN402)	CKX1056	63	Knob	CAC7527
24	Holder	CNC8615	64	Spring	CBH2430
25	Holder	CNC9619	65	Spring	CBH2431
26	Insulator	CNM6949	66	Spring	CBH2630
27	Heat Sink	CNR1614	67	Cover	CNS6740
28	FM/AM Tuner Unit	CWE1563	68	Holder	CNV6505
29	Holder	CNC8815	69	Holder	CNV6506
30	Chassis Unit	CXB6100	70	Keyboard Unit	See Contrast table(2)
31	Button(EJECT)	CAC6839	71	LCD	CAW1707
32	Screw(M2x2)	CBA1176	72	Connector(CN1901)	CKS4524
33	Washer	CBF1038	73	Holder	CNC9757
34	Washer	CBF1039	74	Sheet	CNM7647
35	Spring	CBH2428	75	Connector	CNV6440
36	Spring	CBH2429	76	Lighting Conductor	CNV7244
37	Spring	CBL1512	77	Sub Grille Assy	See Contrast table(2)
38	Holder	CNC9096	78	CD Mechanism Module(S9ANA)	CXK5501
39	Cover	CNM6854	79	Screw	ISS26P055FUC
40	Panel	CNS6278	80	Transistor(Q510,910)	2SD2396
			81	IC(IC361)	PAL007A
			82	Panel	CNS7070
			83	Remote Control Unit	CXB8743
			84	Cover	CNS7068

(2) CONTRAST TABLE

DEH-3400/XN/UC and DEH-34/XN/EW are constructed the same except for the following:

Mark No.	Symbol and Description	Part No.	
		DEH-3400/XN/UC	DEH-34/XN/UC
53	Detach Grille Assy	CXB8400	CXB8402
70	Keyboard Unit	CWM7979	CWM7980
77	Sub Grille Assy	CXB8417	CXB8419

2.4 CD MECHANISM MODULE

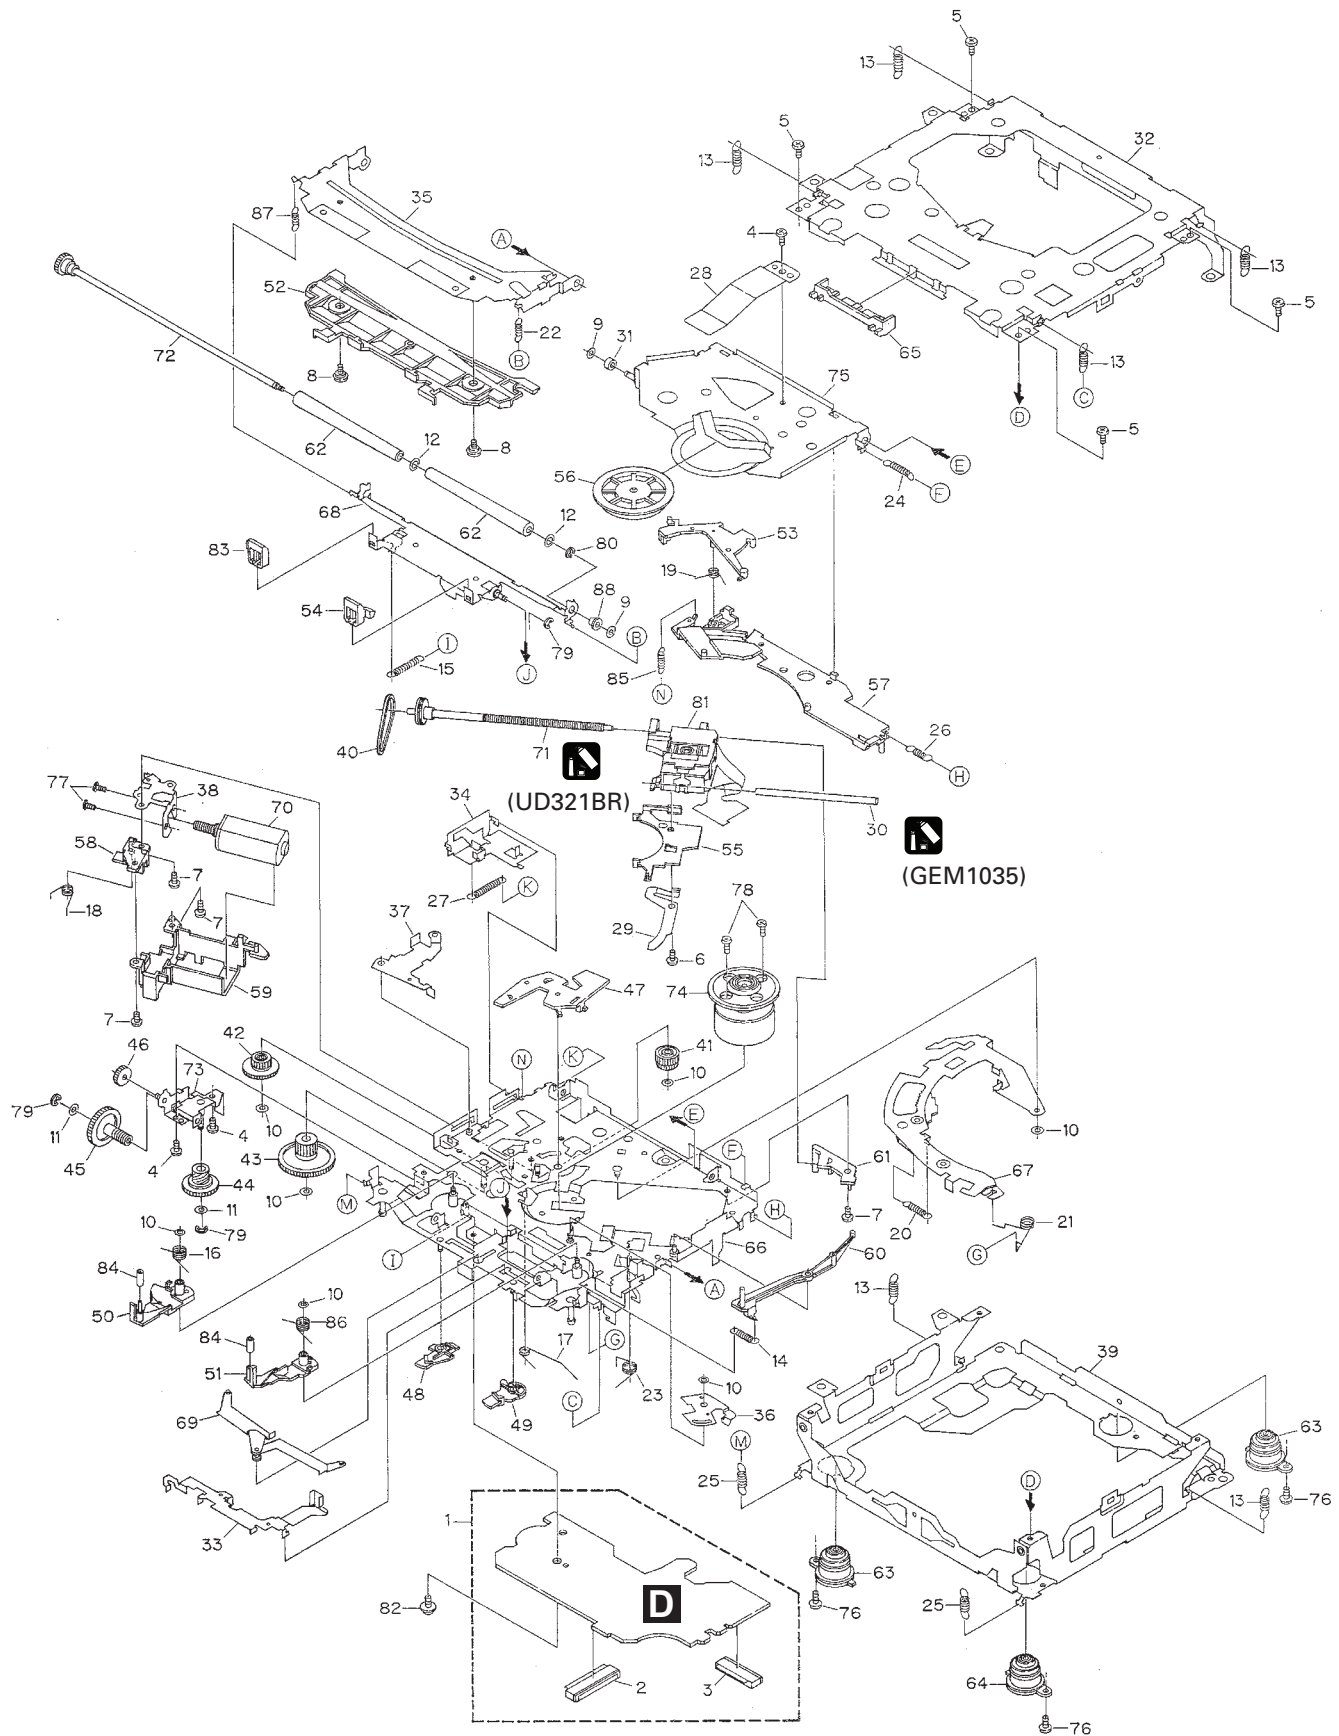

● CD MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Control Unit	CWX2481	46	Gear	CNV6320
2	Connector(CN701)	CKS1959	47	Arm	CNV6322
3	Connector(CN101)	CKS3486	48	Arm	CNV6323
4	Screw	BMZ20P025FMC	49	Arm	CNV6324
5	Screw	BSZ20P040FMC	50	Arm	CNV6888
6	Screw(M2x4)	CBA1362	51	Arm	CNV6889
7	Screw(M2x3)	CBA1527	52	Guide	CNV6327
8	Screw	CBA1545	53	Arm	CNV6924
9	Washer	CBF1037	54	Guide	CNV6921
10	Washer	CBF1038	55	Rack	CNV6923
11	Washer	CBF1039	56	Clamper	CNV6331
12	Washer	CBF1060	57	Arm	CNV6332
13	Spring	CBH2378	58	Guide	CNV6333
14	Spring	CBH2379	59	Cover	CNV6334
15	Spring	CBH2514	60	Arm	CNV6335
16	Spring	CBH2533	61	Guide	CNV6336
17	Spring	CBH2382	62	Roller	CNV6338
18	Spring	CBH2383	63	Damper	CNV6339
19	Spring	CBH2384	64	Damper	CNV6340
20	Spring	CBH2527	65	Guide	CNV6925
21	Spring	CBH2386	66	Chassis Unit	CXB7980
22	Spring	CBH2537	* 67	Arm Unit	CXB7983
23	Spring	CBH2390	68	Arm Unit	CXB7984
24	Spring	CBH2391	69	Arm Unit	CXB7985
25	Spring	CBH2523	70	Motor Unit(M2)	CXB5903
26	Spring	CBH2426	71	Screw Unit	CXB5904
27	Spring	CBH2444	72	Gear Unit	CXB8076
28	Spring	CBL1561	73	Bracket Unit	CXB7982
29	Spring	CBL1553	74	Motor Unit(M1)	CXB6007
30	Shaft	CLA3845	75	Arm Unit	CXB8504
31	Roller	CLA3910	76	Screw(M2x5)	EBA1028
32	Frame	CNC9654	77	Screw	JFZ20P020FMC
33	Lever	CNC9664	78	Screw	JGZ17P020FZK
34	Lever	CNC8949	79	Washer	YE15FUC
35	Arm	CNC9661	80	Washer	YE20FUC
36	Arm	CNC9016	81	Pickup Unit(Service)(P9)	CXX1480
37	Arm	CNC9017	82	Screw	IMS26P030FMC
38	Bracket	CNC9123	83	Guide	CNV6922
39	Frame	CNC9656	84	Roller	CNV6887
40	Belt	CNT1086	85	Spring	CBH2509
41	Gear	CNV6886	86	Spring	CBH2512
42	Gear	CNV6316	87	Spring	CBH2536
43	Gear	CNV6317	88	Collar	CNV6906
44	Gear	CNV6318			
45	Gear	CNV6319			

5. ELECTRICAL PARTS LIST

NOTES:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J, RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

====Circuit Symbol and No.==Part Name Part No.

A Unit Number : CWM7960(DEH-340/XN/UC)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

IC	301	IC	PML003AM
IC	361	IC	PAL007A
IC	603	IC	S-80834ANY
IC	610	IC	PE5262A
Q	341	Transistor	IMH3A
Q	351	Transistor	IMH3A
Q	359	Transistor	DTA124EK
Q	361	Transistor	DTC124EK
Q	410	Transistor	2SC2412K
Q	510	Transistor	2SD2396
Q	511	Transistor	RN46A1
Q	750	Transistor	2SA1037K
Q	751	Transistor	2SA1036K
Q	752	Transistor	DTC114EK
Q	753	Transistor	DTC114EK
Q	909	Transistor	RN46A1
Q	910	Transistor	2SD2396
Q	911	Transistor	2SB1243
Q	912	Transistor	DTC114EK
Q	913	Transistor	2SD1859
Q	920	Transistor	IMX1
Q	921	Transistor	DTA124EK
D	361	Diode	S5688G
D	362	Diode	S5688G
D	510	Diode	HZS9L(B1)
D	750	Diode	1SS270
D	751	Diode	1SS270
D	752	Diode	1SS270
D	753	Diode	1SS270
D	754	Diode	1SS270
D	755	Diode	1SS270
D	756	Diode	1SS270
D	757	Diode Network	DA204U
D	758	Diode	1SS270
D	759	Diode	MA152WA
D	767	Diode	1SS270
D	768	Diode	1SS270
D	910	Diode	HZS9L(B3)
D	911	Diode	HZS6L(B2)
D	912	Diode	S5688G
D	913	Diode	HZS7L(C2)
D	914	Diode	HZS7L(A1)
D	919	Diode	S5688G
D	920	Diode	S5688G
D	921	Diode	DAN202U
L	310	Inductor	LAU1R0K
L	361	Choke Coil 600μH	CTH1221
L	410	Ferri-Inductor	LAU4R7K
L	411	Ferri-Inductor	LAU2R2K
L	412	Ferri-Inductor	LAU2R2K

====Circuit Symbol and No.==Part Name Part No.

L	617	Ferri-Inductor	LAU101K
L	618	Ferri-Inductor	LAU2R2K
L	750	Ferri-Inductor	LAU2R2K
X	610	Crystal Resonator 4.194304MHz	CSS1023
S	750	Switch(DSENS)	CSN1039

AR	410	FM/AM Tuner Unit Surge Protector	CWE1563 DSP-201M-S00B
----	-----	-------------------------------------	--------------------------

RESISTORS

R	310	RS1/16S101J
R	311	RS1/16S101J
R	314	RS1/16S101J
R	315	RS1/16S101J
R	341	RS1/16S223J
R	342	RS1/16S821J
R	343	RS1/16S821J
R	344	RS1/16S223J
R	345	RS1/16S0R0J
R	351	RD1/4PU821J
R	352	RS1/16S821J
R	353	RS1/16S223J
R	354	RS1/16S223J
R	355	RS1/16S0R0J
R	361	RS1/16S103J
R	362	RS1/16S103J
R	363	RS1/16S331J
R	364	RD1/4PU153J
R	410	RS1/16S222J
R	411	RS1/16S222J
R	413	RS1/16S473J
R	414	RS1/16S473J
R	415	RS1/16S393J
R	417	RS1/16S681J
R	418	RS1/16S681J
R	419	RS1/16S681J
R	420	RS1/16S103J
R	421	RS1/16S681J
R	422	RD1/4PU473J
R	423	RD1/4PU472J
R	424	RD1/4PU473J
R	429	RS1/16S681J
R	430	RS1/16S681J
R	431	RS1/16S473J
R	432	RS1/16S473J
R	437	RS1/16S0R0J
R	438	RS1/16S0R0J
R	445	RS1/16S272J
R	446	RS1/16S272J
R	447	RS1/16S162J
R	448	RS1/16S162J
R	490	RS1/16S0R0J
R	510	RD1/4PU221J
R	511	RD1/4PU221J
R	512	RD1/4PU472J

====Circuit Symbol and No.====Part Name	Part No.	====Circuit Symbol and No.====Part Name	Part No.
R 513	RD1/4PU222J	R 918	RS1/16S104J
R 516	RS1/16S104J	R 919	RS1/16S104J
R 517	RD1/4PU222J	R 920	RS1/16S473J
R 519	RD1/4PU102J	R 921	RS1/16S103J
R 520	RS1/16S0R0J	R 922	RS1/16S473J
R 521	RS1/16S0R0J	R 923	RD1/4PU102J
R 522	RS1/16S0R0J	R 924	RS1/16S472J
R 523	RS1/16S0R0J	R 927	RS1/16S102J
R 525	RS1/16S0R0J	R 928	RS1/16S473J
R 527	RS1/16S0R0J	R 937	RS1/16S152J
R 531	RD1/4PU222J	R 939	RS1/16S0R0J
R 532	RD1/4PU222J	CAPACITORS	
R 536	RD1/4PU102J	C 307	CEJQ470M10
R 537	RS1/16S104J	C 308	CEJQ100M16
R 538	RS1/16S0R0J	C 309	CKSRYB104K25
R 612	RS1/16S0R0J	C 310	CKSRYB105K6R3
R 613	RD1/4PU102J	C 311	CKSRYB104K25
R 614	RS1/16S821J	C 312	CKSRYB104K25
R 615	RS1/16S473J	C 313	CKSRYB105K6R3
R 616	RS1/16S682J	C 314	CEJQ4R7M35
R 617	RS1/16S473J	C 315	CEJQ4R7M35
R 618	RS1/16S223J	C 316	CKSRYB153K25
R 622	RD1/4PU393J	C 321	CKSRYB153K25
R 623	RD1/4PU104J	C 324	CCSRCH100D50
R 625	RS1/16S0R0J	C 326	CCSRCH100D50
R 712	RD1/4PU104J	C 327	CCSRCH100D50
R 750	RD1/4PU104J	C 329	CCSRCH100D50
R 751	RS1/16S103J	C 342	CEJQ2R2M50
R 752	RS1/16S153J	C 343	CEJQ2R2M50
R 753	RS1/16S153J	C 351	CEJQ2R2M50
R 754	RS1/16S222J	C 352	CEJQ2R2M50
R 756	RS1/16S473J	C 361	CCH1368
R 757	RS1/16S104J	3300μF/16V	
R 758	RS1/16S102J	C 362	CKSRYB104K25
R 760	RD1/4PU222J	C 363	CKSQYB474K16
R 761	RD1/4PU472J	C 364	CKSQYB474K16
R 762	RD1/4PU222J	C 365	CKSQYB474K16
R 763	RD1/4PU222J	C 366	CKSQYB474K16
R 765	RS1/16S1R0J	C 367	CKSQYB474K16
R 766	RD1/4PU102J	C 368	CKSQYB474K16
R 767	RS1/16S103J	C 369	CKSQYB474K16
R 768	RD1/4PU102J	C 370	CKSQYB474K16
R 769	RS1/16S102J	C 371	CEJQ330M10
R 771	RS1/16S104J	C 373	CKSQYB225K10
R 772	RD1/4PU222J	C 374	CKSQYB225K10
R 773	RD1/4PU222J	C 375	CEJQ100M16
R 774	RS1/16S0R0J	C 410	CKSQYB103K25
R 775	RS1/16S1R0J	C 412	CKSRYB223K50
R 777	RS1/16S152J	C 413	CKSRYB102K50
R 778	RS1/16S152J	C 414	CEJQ220M10
R 779	RD1/4PU103J	C 415	CKSRYB223K50
R 781	RS1/16S104J	C 417	CKSRYB472K50
R 783	RD1/4PU391J	C 418	CEJQ101M6R3
R 784	RD1/4PU222J	C 419	CKSRYB473K50
R 786	RS1/16S102J	C 424	CKSRYB183K25
R 787	RD1/4PU222J	C 425	CKSRYB183K25
R 791	RS1/16S0R0J	C 510	CKSRYB473K50
R 910	RS1/16S1R0J	C 511	CKSRYB102K50
R 911	RD1/4PU220J	C 512	CEJQ101M10
R 912	RD1/4PU132J	C 515	CKSRYB102K50
R 913	RD1/4PU122J	C 516	CKSRYB102K50
R 914	RS1/16S103J	C 614	CKSRYB473K50
R 915	RS1/16S222J	C 615	CEJQ2R2M50
R 916	RD1/4PU153J		
R 917	RS1/16S104J		

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
C 616	CKSRBY104K25	L 361	Choke Coil 600μH
C 617	CCSRCH101J50	L 410	Ferri-Inductor
C 618	CEJQ4R7M35	L 411	Ferri-Inductor
C 619	CKSRBYB473K50	L 412	Ferri-Inductor
C 620	CCSRCH150J50	L 617	Ferri-Inductor
C 621	CCSRCH150J50	L 618	Ferri-Inductor
C 750	CKSRBY103K50	L 750	Ferri-Inductor
C 751	CKSRBYB104K25	X 610	Crystal Resonator 4.194304MHz
C 910 330μF/16V	CCH1326	S 750	Switch(DSENS)
C 911	CKSRBY103K50		FM/AM Tuner Unit
C 912	CEJQ101M16	AR 410	Surge Protector
C 913	CEJQ101M10		
C 914	CKSRBYB473K50		
C 915	CKSRBY103K50		
C 916 470μF/16V	CCH1331		

A Unit Number : CWM7974(DEH-3400/XN/UC,
DEH-34/XN/UC)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

IC 301	IC	PML003AM
IC 361	IC	PAL007A
IC 603	IC	S-80834ANY
IC 610	IC	PE5262A
Q 351	Transistor	IMH3A
Q 359	Transistor	DTA124EK
Q 361	Transistor	DTC124EK
Q 410	Transistor	2SC2412K
Q 510	Transistor	2SD2396
Q 511	Transistor	RN46A1
Q 750	Transistor	2SA1037K
Q 751	Transistor	2SA1036K
Q 752	Transistor	DTC114EK
Q 753	Transistor	DTC114EK
Q 909	Transistor	RN46A1
Q 910	Transistor	2SD2396
Q 911	Transistor	2SB1243
Q 912	Transistor	DTC114EK
Q 913	Transistor	2SD1859
Q 920	Transistor	IMX1
Q 921	Transistor	DTA124EK
D 361	Diode	S5688G
D 362	Diode	S5688G
D 510	Diode	HZS9L(B1)
D 750	Diode	1SS270
D 751	Diode	1SS270
D 752	Diode	1SS270
D 753	Diode	1SS270
D 754	Diode	1SS270
D 755	Diode	1SS270
D 756	Diode	1SS270
D 757	Diode Network	DA204U
D 758	Diode	1SS270
D 759	Diode	MA152WA
D 767	Diode	1SS270
D 768	Diode	1SS270
D 910	Diode	HZS9L(B3)
D 911	Diode	HZS6L(B2)
D 912	Diode	S5688G
D 913	Diode	HZS7L(C2)
D 914	Diode	HZS7L(A1)
D 919	Diode	S5688G
D 920	Diode	S5688G
D 921	Diode	DAN202U
L 310	Inductor	LAU1R0K

RESISTORS

R 310	RS1/16S101J
R 311	RS1/16S101J
R 314	RS1/16S101J
R 315	RS1/16S101J
R 351	RD1/4PU821J
R 352	RS1/16S821J
R 353	RS1/16S223J
R 354	RS1/16S223J
R 355	RS1/16S0R0J
R 361	RS1/16S103J
R 362	RS1/16S103J
R 363	RS1/16S331J
R 364	RD1/4PU153J
R 410	RS1/16S222J
R 411	RS1/16S222J
R 413	RS1/16S473J
R 414	RS1/16S473J
R 415	RS1/16S393J
R 417	RS1/16S681J
R 418	RS1/16S681J
R 419	RS1/16S681J
R 420	RS1/16S103J
R 421	RS1/16S681J
R 422	RD1/4PU473J
R 423	RD1/4PU472J
R 424	RD1/4PU473J
R 429	RS1/16S681J
R 430	RS1/16S681J
R 431	RS1/16S473J
R 432	RS1/16S473J
R 437	RS1/16S0R0J
R 438	RS1/16S0R0J
R 445	RS1/16S272J
R 446	RS1/16S272J
R 447	RS1/16S162J
R 448	RS1/16S162J
R 490	RS1/16S0R0J
R 510	RD1/4PU221J
R 511	RD1/4PU221J
R 512	RD1/4PU472J
R 513	RD1/4PU222J
R 516	RS1/16S104J
R 517	RD1/4PU222J
R 519	RD1/4PU102J
R 520	RS1/16S0R0J
R 521	RS1/16S0R0J
R 522	RS1/16S0R0J
R 523	RS1/16S0R0J
R 525	RS1/16S0R0J
R 527	RS1/16S0R0J

====Circuit Symbol and No.====Part Name	Part No.	====Circuit Symbol and No.====Part Name	Part No.
R 531	RD1/4PU222J	R 939	RS1/16S0R0J
R 532	RD1/4PU222J		
R 536	RD1/4PU102J		
R 537	RS1/16S104J		
R 538	RS1/16S0R0J		
		CAPACITORS	
R 612	RS1/16S0R0J	C 307	CEJQ470M10
R 613	RD1/4PU102J	C 308	CEJQ100M16
R 614	RS1/16S821J	C 309	CKSRYB104K25
R 615	RS1/16S473J	C 310	CKSRYB105K6R3
R 616	RS1/16S682J	C 311	CKSRYB104K25
		C 312	CKSRYB104K25
R 617	RS1/16S473J	C 313	CKSRYB105K6R3
R 618	RS1/16S223J	C 314	CEJQ4R7M35
R 622	RD1/4PU393J	C 315	CEJQ4R7M35
R 623	RD1/4PU104J	C 316	CKSRYB153K25
R 625	RS1/16S0R0J		
		C 321	CKSRYB153K25
R 712	RD1/4PU104J	C 324	CCSRCH100D50
R 750	RD1/4PU104J	C 326	CCSRCH100D50
R 751	RS1/16S103J	C 327	CCSRCH100D50
R 752	RS1/16S153J	C 329	CCSRCH100D50
R 753	RS1/16S153J		
		C 351	CEJQ2R2M50
R 754	RS1/16S222J	C 352	CEJQ2R2M50
R 756	RS1/16S473J	C 361	CCH1368
R 757	RS1/16S104J	C 362	CKSRYB104K25
R 758	RS1/16S102J	C 363	CKSQYB474K16
R 760	RD1/4PU222J		
		C 364	CKSQYB474K16
R 761	RD1/4PU472J	C 365	CKSQYB474K16
R 762	RD1/4PU222J	C 366	CKSQYB474K16
R 763	RD1/4PU222J	C 367	CKSQYB474K16
R 765	RS1/16S1R0J	C 368	CKSQYB474K16
R 766	RD1/4PU102J		
		C 369	CKSQYB474K16
R 767	RS1/16S103J	C 370	CKSQYB474K16
R 768	RD1/4PU102J	C 371	CEJQ330M10
R 769	RS1/16S102J	C 373	CKSQYB225K10
R 771	RS1/16S104J	C 374	CKSQYB225K10
R 772	RD1/4PU222J		
		C 375	CEJQ100M16
R 773	RD1/4PU222J	C 410	CKSQYB103K25
R 774	RS1/16S0R0J	C 412	CKSRYB223K50
R 775	RS1/16S1R0J	C 413	CKSRYB102K50
R 777	RS1/16S152J	C 414	CEJQ220M10
R 778	RS1/16S152J		
		C 415	CKSRYB223K50
R 779	RD1/4PU103J	C 417	CKSRYB472K50
R 781	RS1/16S104J	C 418	CEJQ101M6R3
R 783	RD1/4PU391J	C 419	CKSRYB473K50
R 784	RD1/4PU222J	C 424	CKSRYB183K25
R 786	RS1/16S102J		
		C 425	CKSRYB183K25
R 787	RD1/4PU222J	C 510	CKSRYB473K50
R 791	RS1/16S0R0J	C 511	CKSRYB102K50
R 910	RS1/16S1R0J	C 512	CEJQ101M10
R 911	RD1/4PU220J	C 515	CKSRYB102K50
R 912	RD1/4PU132J		
		C 516	CKSRYB102K50
R 913	RD1/4PU122J	C 614	CKSRYB473K50
R 914	RS1/16S103J	C 615	CEJQ2R2M50
R 915	RS1/16S222J	C 616	CKSRYB104K25
R 916	RD1/4PU153J	C 617	CCSRCH101J50
R 917	RS1/16S104J		
		C 618	CEJQ4R7M35
R 918	RS1/16S104J	C 619	CKSRYB473K50
R 919	RS1/16S104J	C 620	CCSRCH150J50
R 920	RS1/16S473J	C 621	CCSRCH150J50
R 921	RS1/16S103J	C 750	CKSRYB103K50
R 922	RS1/16S473J		
		C 751	CKSRYB104K25
R 923	RD1/4PU102J	C 910	CCH1326
R 924	RS1/16S472J	C 911	CKSRYB103K50
R 927	RS1/16S102J	C 912	CEJQ101M16
R 928	RS1/16S473J	C 913	CEJQ101M10
R 937	RS1/16S152J		

====Circuit Symbol and No.====Part Name	Part No.
C 914	CKSRYB473K50
C 915	CKSRYB103K50
C 916 470μF/16V	CCH1331

C Unit Number : CWM7961(DEH-340/XN/UC)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1900	IC	PD6340A
IC 1902	IC	RS-140
D 1901	Diode	MA152WK
D 1902	Diode	MA152WA
D 1917	LED	NSSW440-9159
D 1918	LED	NSSW440-9159
D 1919	LED	SML-310PT
D 1920	LED	SML-310PT
X 1900	Ceramic Resonator 4.97MHz	CSS1573
S 1900	Switch	CSG1107
S 1901	Switch	CSG1107
S 1902	Switch	CSG1107
S 1903	Switch	CSG1107
S 1904	Switch	CSG1107
S 1905	Switch	CSG1107
S 1906	Switch	CSG1107
S 1907	Push Switch	CSG1111
S 1908	Switch	CSG1107
S 1909	Switch	CSG1107
S 1910	Switch	CSG1107
S 1911	Switch	CSG1107
S 1912	Switch	CSG1107
S 1913	Switch	CSG1107
S 1914	Switch	CSG1107
S 1915	Switch	CSG1107
S 1916	Switch	CSG1107
S 1917	Push Switch	CSG1111
S 1922	Switch(VOLUME) LCD	CSD1077 CAW1699

RESISTORS

R 1901	RS1/16S222J
R 1902	RS1/16S222J
R 1903	RS1/16S470J
R 1904	RS1/16S470J
R 1905	RS1/16S121J
R 1910	RS1/16S151J
R 1911	RS1/16S181J
R 1912	RS1/16S151J
R 1913	RS1/16S181J
R 1914	RS1/16S181J
R 1915	RS1/16S181J
R 1917	RS1/16S121J
R 1919	RS1/16S121J
R 1920	RS1/16S121J
R 1927	RS1/16S472J
R 1935	RS1/16S104J
R 1936	RS1/16S151J
R 1939	RS1/16S151J
R 1941	RS1/16S121J
R 1942	RS1/16S151J
R 1943	RS1/16S151J
R 1950	RS1/16S104J
R 1954	RS1/16S151J
R 1955	RS1/16S181J
R 1956	RS1/16S181J
R 1957	RS1/16S181J
R 1958	RS1/16S151J
R 1959	RS1/16S181J
R 1960	RS1/16S151J
R 1961	RS1/16S181J

====Circuit Symbol and No.====Part Name	Part No.
R 1962	RS1/16S181J
R 1963	RS1/16S121J
R 1964	RS1/16S121J
R 1965	RS1/16S2R2J
R 1970	RS1/16S181J
R 1971	RS1/16S151J
R 1972	RS1/16S181J

CAPACITORS

C 1901	CSZS100M6R3
C 1902	CKSRYB104K25
C 1923	CKSQYF104Z50
C 1930	CKSQYF104Z50

C Unit Number : CWM7979(DEH-3400/XN/UC)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1900	IC	PD6340A
IC 1902	IC	RS-140
D 1901	Diode	MA152WK
D 1902	Diode	MA152WA
D 1917	LED	NSSW440-9159
D 1918	LED	NSSW440-9159
D 1919	LED	SML-310PT
D 1920	LED	SML-310PT
X 1900	Ceramic Resonator 4.97MHz	CSS1573
S 1900	Switch	CSG1107
S 1901	Switch	CSG1107
S 1902	Switch	CSG1107
S 1903	Switch	CSG1107
S 1904	Switch	CSG1107
S 1905	Switch	CSG1107
S 1906	Switch	CSG1107
S 1907	Push Switch	CSG1111
S 1908	Switch	CSG1107
S 1909	Switch	CSG1107
S 1910	Switch	CSG1107
S 1911	Switch	CSG1107
S 1912	Switch	CSG1107
S 1913	Switch	CSG1107
S 1914	Switch	CSG1107
S 1915	Switch	CSG1107
S 1916	Switch	CSG1107
S 1917	Push Switch	CSG1111
S 1922	Switch(VOLUME) LCD	CSD1077 CAW1707

RESISTORS

R 1901	RS1/16S222J
R 1902	RS1/16S222J
R 1903	RS1/16S470J
R 1904	RS1/16S470J
R 1905	RS1/16S121J
R 1910	RS1/16S151J
R 1911	RS1/16S181J
R 1912	RS1/16S151J
R 1913	RS1/16S181J
R 1914	RS1/16S181J
R 1915	RS1/16S181J
R 1917	RS1/16S121J
R 1919	RS1/16S121J
R 1920	RS1/16S121J
R 1927	RS1/16S472J
R 1935	RS1/16S104J
R 1936	RS1/16S151J
R 1939	RS1/16S151J
R 1941	RS1/16S121J
R 1942	RS1/16S151J

====Circuit Symbol and No.==Part Name

Part No.

R	1943	RS1/16S151J
R	1950	RS1/16S104J
R	1954	RS1/16S151J
R	1955	RS1/16S181J
R	1956	RS1/16S181J

R	1957	RS1/16S181J
R	1958	RS1/16S151J
R	1959	RS1/16S181J
R	1960	RS1/16S151J
R	1961	RS1/16S181J

R	1962	RS1/16S181J
R	1963	RS1/16S121J
R	1964	RS1/16S121J
R	1965	RS1/16S2R2J
R	1970	RS1/16S181J

R	1971	RS1/16S151J
R	1972	RS1/16S181J

CAPACITORS

C	1901	CSZS100M6R3
C	1902	CKSRYB104K25
C	1923	CKSQYF104Z50
C	1930	CKSQYF104Z50

C Unit Number : CWM7980(DEH-34/XN/UC)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC	1900	IC	PD6340A
IC	1902	IC	RS-140
D	1901	Diode	MA152WK
D	1902	Diode	MA152WA
D	1917	LED	NSSW440-9159

D	1918	LED	NSSW440-9159
D	1919	LED	SML-310DT
D	1920	LED	SML-310DT
X	1900	Ceramic Resonator 4.97MHz	CS51573
S	1900	Push Switch	CSG1133

S	1901	Push Switch	CSG1117
S	1902	Push Switch	CSG1117
S	1903	Push Switch	CSG1117
S	1904	Push Switch	CSG1117
S	1905	Push Switch	CSG1117

S	1906	Push Switch	CSG1117
S	1907	Push Switch	CSG1111
S	1908	Push Switch	CSG1117
S	1909	Push Switch	CSG1117
S	1910	Push Switch	CSG1117

S	1911	Push Switch	CSG1117
S	1912	Push Switch	CSG1117
S	1913	Push Switch	CSG1117
S	1914	Push Switch	CSG1117
S	1915	Push Switch	CSG1117

S	1916	Push Switch	CSG1117
S	1917	Push Switch	CSG1111
S	1922	Switch(VOLUME) LCD	CSD1077 CAW1707

RESISTORS

R	1901	RS1/16S222J
R	1902	RS1/16S222J
R	1903	RS1/16S470J
R	1904	RS1/16S470J
R	1905	RS1/16S121J

R	1910	RS1/16S151J
R	1911	RS1/16S181J
R	1912	RS1/16S151J
R	1913	RS1/16S181J
R	1914	RS1/16S181J

====Circuit Symbol and No.==Part Name

Part No.

R	1915	RS1/16S181J
R	1917	RS1/16S121J
R	1919	RS1/16S121J
R	1920	RS1/16S121J
R	1927	RS1/16S472J

R	1935	RS1/16S104J
R	1936	RS1/16S151J
R	1939	RS1/16S151J
R	1941	RS1/16S121J
R	1942	RS1/16S151J

R	1943	RS1/16S151J
R	1950	RS1/16S104J
R	1954	RS1/16S151J
R	1955	RS1/16S181J
R	1956	RS1/16S181J

R	1957	RS1/16S181J
R	1958	RS1/16S151J
R	1959	RS1/16S181J
R	1960	RS1/16S151J
R	1961	RS1/16S181J

R	1962	RS1/16S181J
R	1963	RS1/16S121J
R	1964	RS1/16S121J
R	1965	RS1/16S2R2J
R	1970	RS1/16S181J

R	1971	RS1/16S151J
R	1972	RS1/16S181J

CAPACITORS

C	1901	CSZS100M6R3
C	1902	CKSRYB104K25
C	1923	CKSQYF104Z50
C	1930	CKSQYF104Z50

B Unit Number : CWM7375
Unit Name : Panel Unit

D	1950	LED	CL220PGC
S	1950	Push Switch(EJECT)	CSG1112
R	1952		RS1/16S101J
R	1953		RS1/16S101J

D Unit Number : CWX2481
Unit Name : Control Unit

MISCELLANEOUS

IC	101	IC	TA2153FN
IC	201	IC	TC9495F2
IC	401	IC	BA5996FM
IC	701	IC	BA05SFP
Q	101	Transistor	2SD1664

Q	102	Transistor	UMD2N
L	201	Inductor	CTF1546
L	202	Inductor	CTF1546
X	301	Ceramic Resonator 16.934MHz	CSS1525
S	901	Spring Switch(HOME)	CSN1051

S	902	Spring Switch(CLAMP)	CSN1052
S	903	Spring Switch(DSCSNS)	CSN1051
S	904	Spring Switch(12EJ)	CSN1052
S	905	Spring Switch(8EJ)	CSN1051

RESISTORS

R	101	RS1/16S222J
R	102	RS1/8S120J
R	103	RS1/8S100J
R	201	RS1/16S513J
R	202	RS1/16S513J

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
R 203	RS1/16S823J	C 304	CKSRYB103K50
R 204	RS1/16S823J	C 305	CKSRYB104K16
R 206	RS1/16S823J	C 306	CKSRYB104K16
R 208	RS1/16S124J	C 307	CKSRYB333K16
R 209	RS1/16S183J	C 308	CKSRYB104K16
R 210	RS1/16S153J	C 309	CKSRYB473K16
R 211	RS1/16S103J	C 310	CKSRYB473K16
R 212	RS1/16S103J	C 311	CKSRYB104K16
R 213	RS1/16S124J	C 312	CKSRYB104K16
R 215	RS1/16S0R0J	C 315	CEV220M6R3
R 216	RS1/16S471J	C 317	CKSRYB104K16
R 301	RS1/16S333J	C 318	CKSRYB104K16
R 302	RS1/16S332J	C 319	CKSRYB104K16
R 303	RS1/16S332J	C 320	CCSRCH470J50
R 304	RS1/16S514J	C 325	CKSRYB471K50
R 306	RS1/16S102J	C 328	CKSRYB472K50
R 307	RS1/16S102J	C 329	CKSRYB104K16
R 312	RS1/16S103J	C 330	CKSRYB104K16
R 313	RS1/16S473J	C 331	CKSRYB104K16
R 315	RS1/16S334J	C 401	CKSRYB221K50
R 321	RS1/16S331J	C 402	CKSRYB221K50
R 322	RS1/16S0R0J	C 403	CKSRYB153K25
R 323	RS1/16S332J	C 404	CKSRYB103K50
R 401	RS1/16S684J	C 405	CEV101M10
R 402	RS1/16S103J	C 702	CKSRYB104K16
R 403	RS1/16S103J	C 703	CKSRYB104K16
R 404	RS1/16S183J	C 801	10μF/10V CCH1349
R 405	RS1/16S123J	C 802	CEV101M10
R 407	RS1/16S622J	C 803	CKSRYB224K16
R 408	RS1/16S622J		
R 409	RS1/16S113J		
R 410	RS1/16S752J		
R 701	RS1/16S102J	M 1	Pickup Unit(Service)(P9) CXX1480
R 702	RS1/16S221J	M 2	Motor Unit(SPINDLE) CXB6007
R 703	RS1/16S221J		Motor Unit(LOADING/CARRIAGE) CXB5903
R 704	RS1/16S221J		
R 705	RS1/16S221J		
R 706	RS1/16S221J		
R 707	RS1/16S221J		
R 708	RS1/16S102J		
R 709	RS1/16S102J		
R 710	RS1/16S102J		
R 901	RS1/16S104J		
R 902	RS1/16S473J		
R 903	RS1/16S273J		

CAPACITORS

C 101	CEV470M6R3
C 102	CKSRYB102K50
C 103	CKSRYB104K16
C 104	CKSRYB224K16
C 105	CEV470M6R3
C 106	CKSRYB104K16
C 107	CKSRYB105K6R3
C 201	CKSRYB104K16
C 202	CCSRCH560J50
C 204	CKSRYB224K16
C 205	CKSRYB224K16
C 206	CKSRYB273K25
C 207	CKSRYB273K25
C 208	CKSRYB104K16
C 209	CKSRYB104K16
C 210	CCSRCK2R0C50
C 211	CCSRCH220J50
C 301	CKSRYB153K25
C 302	CKSRYB104K16
C 303	CKSRYB103K50