
EXPLODED VIEW

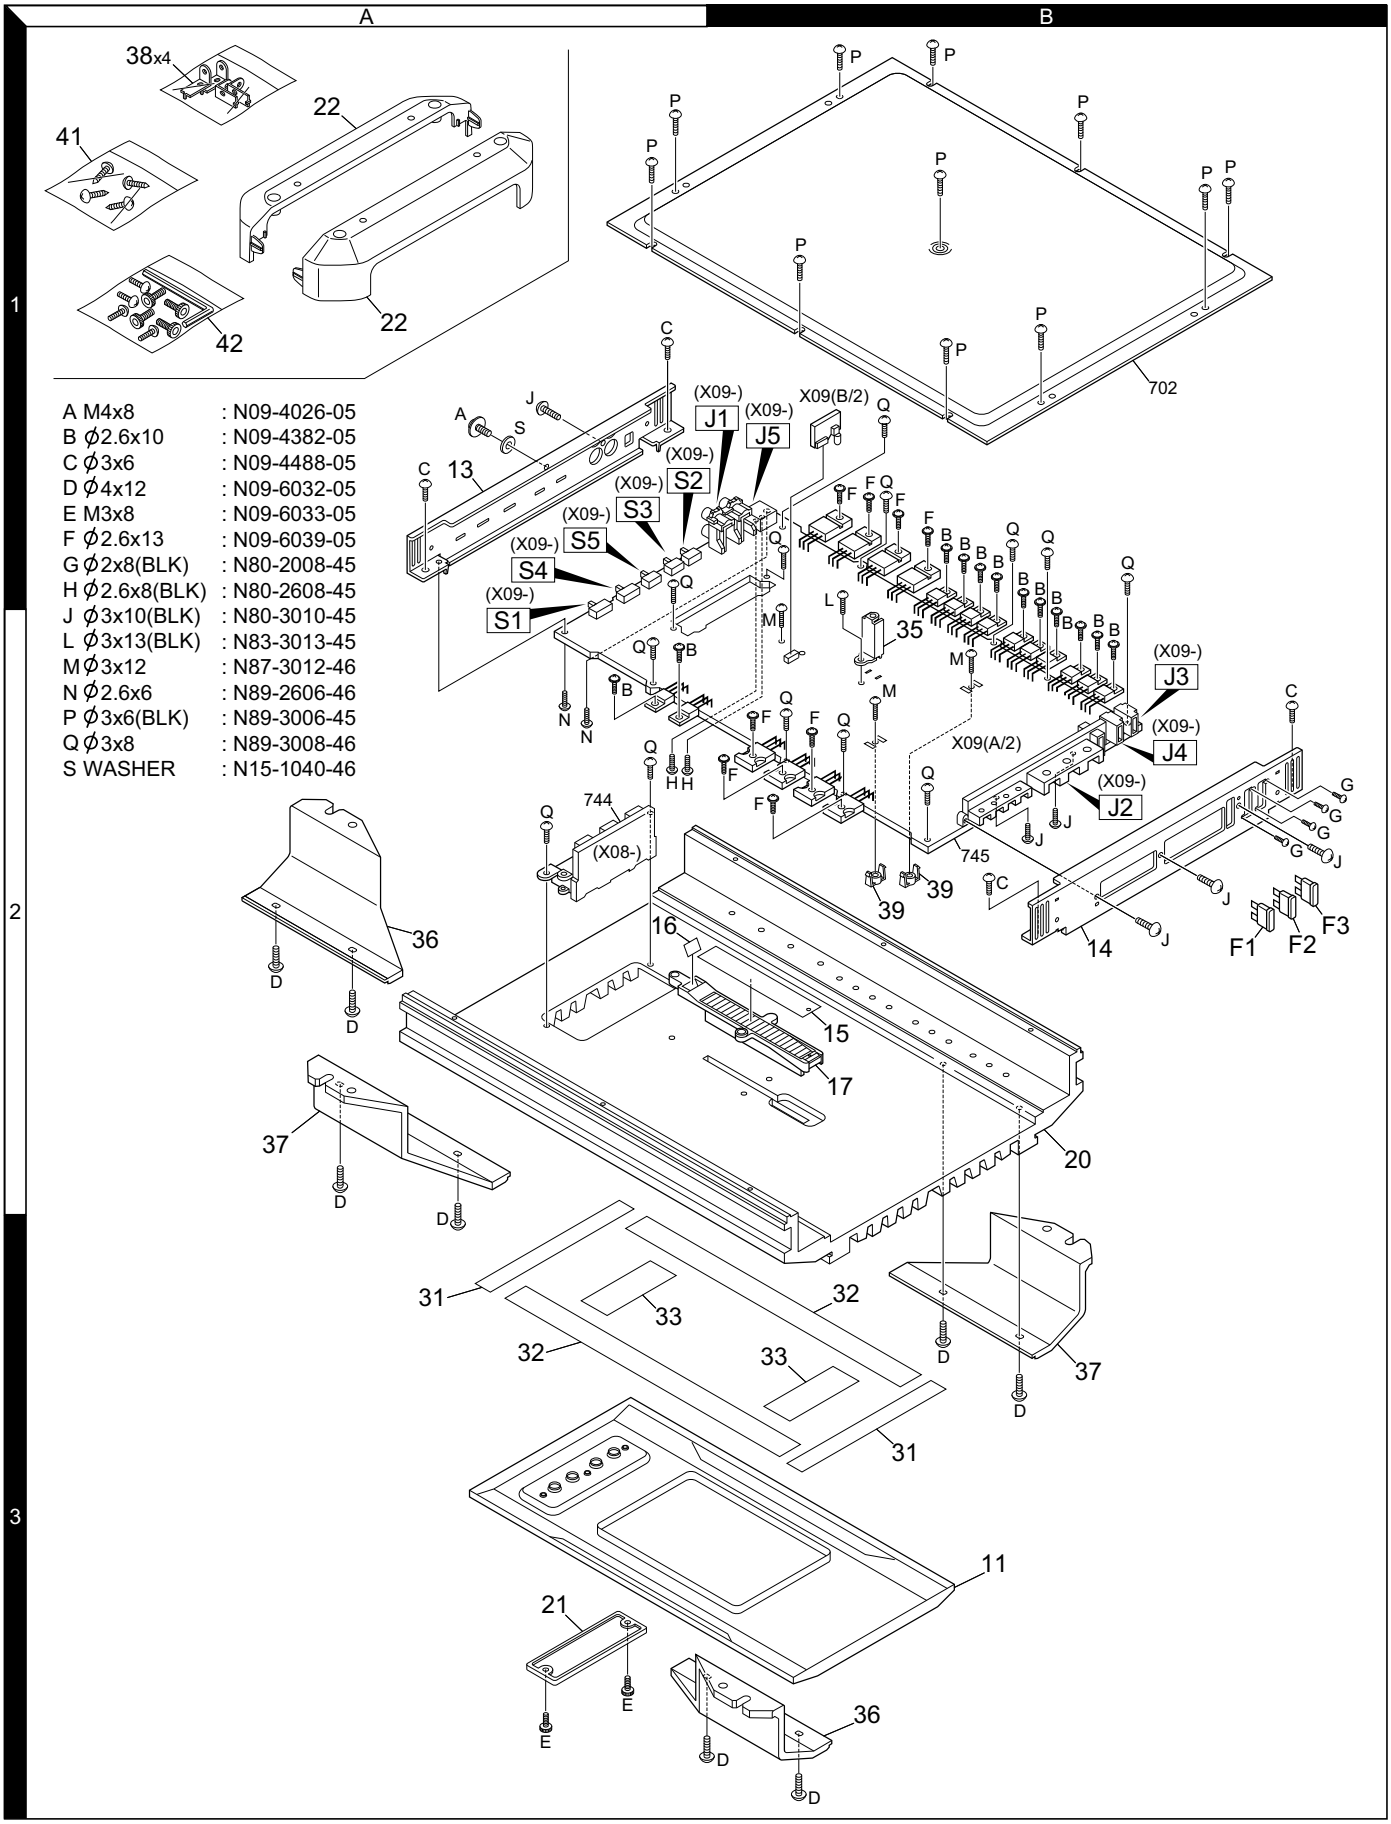

A M4x8 : N09-4026-05
B ϕ2.6x10 : N09-4382-05
C ϕ3x6 : N09-4488-05
D ϕ4x12 : N09-6032-05
E M3x8 : N09-6033-05
F ϕ2.6x13 : N09-6039-05
G ϕ2x8(BLK) : N80-2008-45
H ϕ2.6x8(BLK) : N80-2608-45
J ϕ3x10(BLK) : N80-3010-45
L ϕ3x13(BLK) : N83-3013-45
M ϕ3x12 : N87-3012-46
N ϕ2.6x6 : N89-2606-46
P ϕ3x6(BLK) : N89-3006-45
Q ϕ3x8 : N89-3008-46
S WASHER : N15-1040-46

Parts with exploded numbers larger than 700 are not suppied.

KAC-X810D/PS810D

PARTS LIST

∗ New Parts
Parts without Parts No. are not supplied.
Les articles non mentionnes dans le Parts No. ne sont pas fournis.
Teile ohane Parts No. werden nicht geliefert.

The language of an instruction manual.

E : ENG **F** : FRE **P** : POR **H** : HUN **O** : POL
T : CHI **G** : GER **D** : DUT **C** : CRO **Z** : CZE
A : ARA **S** : SPA **I** : ITA **R** : RUS **L** : SLO

Ref.No.	Add	New	Parts No.	Description	Destination
KAC-X810D/PS810D					
11	3B	∗	A21-4190-02	DRESSING PANEL	K,M1
11	3B	∗	A21-4191-02	DRESSING PANEL	E1
13	1A	∗	A64-2697-02	PANEL	
14	2B	∗	A84-0310-02	REAR PANEL	
15	2B	∗	B11-1378-04	REFLECTION SHEET	
16	2A	∗	B11-1379-04	REFLECTION SHEET	
17	2B	∗	B19-2143-03	LIGHTING BOARD	
-			B46-0100-50	WARRANTY CARD	
-			B46-0648-03	USER CARD	K
-		∗	B64-2274-00	INSTRUCTION MANUAL E.F.S	K,E1
-		∗	B64-2275-00	INSTRUCTION MANUAL G.D.I.P	E1
-		∗	B64-2276-00	INSTRUCTION MANUAL E,T	M1
20	2B	∗	F01-1684-01	HEAT SINK	
21	3A	∗	F07-1109-04	COVER	
22	1A	∗	F07-1110-01	COVER	
⚠ F1-3	2B		F52-0014-05	FUSE (BLADE TYPE)	
31	3A	∗	H30-0555-04	ADHESIVE DOUBLE-COATED TAPE	
32	3A	∗	H30-0556-04	ADHESIVE DOUBLE-COATED TAPE	
33	3A	∗	H30-0557-04	ADHESIVE DOUBLE-COATED TAPE	
-			H10-4805-02	POLYSTYRENE FOAMED FIXTURE	
-			H11-1529-04	POLYSTYRENE FOAMED BOARD	
-			H13-2022-04	CARTON BOARD	
-			H21-1117-04	PROTECTION SHEET	
-			H21-1141-04	PROTECTION SHEET	
-			H25-0336-04	PROTECTION BAG (170X250X0.03)	
-			H25-1179-04	PROTECTION BAG	
-		∗	H30-0558-04	ADHESIVE DOUBLE-COATED TAPE	
-		∗	H54-2520-04	ITEM CARTON CASE	K,M1
-		∗	H54-2521-04	ITEM CARTON CASE	E1
35	2B		J21-9706-04	MOUNTING HARDWARE	
36	2A	∗	J21-9853-03	MOUNTING HARDWARE	
37	2A	∗	J21-9854-03	MOUNTING HARDWARE	
38	1A	∗	J21-9864-04	MOUNTING HARDWARE	
39	2B		J30-1066-04	SPACER	
41	1A		N99-1577-15	SCREW SET	
A	1A		N09-4026-05	TAPPING SCREW (4X8,TP,S)	
B	1B		N09-4382-05	TAPTITE SCREW (2.6X10)	
C	1A		N09-4488-05	TAPTITE SCREW (3X6)	
D	3A		N09-6032-05	DRESSED SCREW (TORX,4X12)	
E	3A		N09-6033-05	DRESSED SCREW (M3X8)	
F	2A		N09-6039-05	TAPTITE SCREW (2.6X13)	
G	2B		N80-2008-45	PAN HEAD TAPTITE SCREW	
J	1A		N80-3010-45	PAN HEAD TAPTITE SCREW	
L	1B		N83-3013-45	PAN HEAD TAPTITE SCREW	
M	2B		N87-3012-46	BRAZIER HEAD TAPTITE SCREW	
N	2A		N89-2606-46	BINDING HEAD TAPTITE SCREW	
P	1A		N89-3006-45	BINDING HEAD TAPTITE SCREW	
Q	1A		N89-3008-46	BINDING HEAD TAPTITE SCREW	
S	1A		N15-1040-46	FLAT WASHER (4φ)	
42	1A		W01-1586-05	ACCESSORY	

Ref.No.	Add	New	Parts No.	Description		Destination
PREAMPLIFIER UNIT (X08-4090-10)						
CN1-3		∗	E41-0294-05	PIN ASSY		
VR1			R31-0235-05	VARIABLE RESISTOR		
VR2-4			R31-0236-05	VARIABLE RESISTOR		
S1			S68-0806-05	PUSH SWITCH		
AUDIO UNIT (X09-5440-10)						
D1			B30-1582-05	LED		
C1-3			C91-0769-05	CERAMIC	0.010UF K	
C4,5			CF92FV1H102J	MF-C	1000PF J	
C8			CF92FV1H683J	MF-C	0.068UF J	
C9			CE04DW1H010M	ELECTRO	1.0UF 50WV	
C10			CF92FV1H154J	MF-C	0.15UF J	
C11			CK73GB1H103K	CHIP C	0.010UF K	
C12			CE04DW1A101M	ELECTRO	100UF 10WV	
C13			CF92FV1H223J	MF-C	0.022UF J	
C14			CC73GCH1H330J	CHIP C	33PF J	
C15			CK73GB1H104K	CHIP C	0.10UF K	
C16			CC73GCH1H101J	CHIP C	100PF J	
C17			CK73GB1H103K	CHIP C	0.010UF K	
C18			CK73GB1H104K	CHIP C	0.10UF K	
C19			CF92FV1H683J	MF-C	0.068UF J	
C20			CK45FB1H102K	CERAMIC	1000PF K	
C21			CK73GB1H104K	CHIP C	0.10UF K	
C22			CK73GB1H103K	CHIP C	0.010UF K	
C23			CF92FV1H154J	MF-C	0.15UF J	
C24			CC73GCH1H101J	CHIP C	100PF J	
C25			CK73GB1H103K	CHIP C	0.010UF K	
C27			CK73GB1H103K	CHIP C	0.010UF K	
C28			CC73GCH1H330J	CHIP C	33PF J	
C29			CF92FV1H333J	MF-C	0.033UF J	
C30			CC73GCH1H101J	CHIP C	100PF J	
C31,32			CE04DW1V100M	ELECTRO	10UF 35WV	
C33			CF92FV1H224J	MF-C	0.22UF J	
C34			CE04DW1H2R2M	ELECTRO	2.2UF 50WV	
C35			CF92FV1H224J	MF-C	0.22UF J	
C36			CE04DW1A470M	ELECTRO	47UF 10WV	
C41			CE04DW1A470M	ELECTRO	47UF 10WV	
C42			CE04DW1H010M	ELECTRO	1.0UF 50WV	
C43			CK73GB1H103K	CHIP C	0.010UF K	
C44			CE04DW1H010M	ELECTRO	1.0UF 50WV	
C45,46			CE04DW1E470M	ELECTRO	47UF 25WV	
C47			CK73GB1H104K	CHIP C	0.10UF K	
C48			CF92FV1H224J	MF-C	0.22UF J	
C49			CE04DW1A470M	ELECTRO	47UF 10WV	
C50,51			CE04DW1E470M	ELECTRO	47UF 25WV	
C52			CK73GB1H103K	CHIP C	0.010UF K	
C53			CF92FV1H224J	MF-C	0.22UF J	
C54,55			CC45FCH1H390J	CERAMIC	39PF J	
C56			CF92FV1H182J	MF-C	1800PF J	
C57			CC73GCH1H470J	CHIP C	47PF J	
C58			CF92FV1H392J	MF-C	3900PF J	
C59,60			CK73GB1H103K	CHIP C	0.010UF K	

K, M1: KAC-X810D
E1 : KAC-PS810D

⚠ indicates safety critical components.

PARTS LIST

* New Parts
Parts without Parts No. are not supplied.
Les articles non mentionnes dans le Parts No. ne sont pas fournis.
Teile ohane Parts No. werden nicht geliefert.

AUDIO UNIT (X09-5440-10)

Ref.No.	Add	New	Parts No.	Description	Destination
C61			CE04DW1V100M	ELECTRO 10UF 35WV	
C62			CK73GB1H103K	CHIP C 0.010UF K	
C63			CE04DW1E470M	ELECTRO 47UF 25WV	
C64-67			C90-5427-05	ALMINIUM ELECTROLYTIC C.	
C68			CK73GB1H103K	CHIP C 0.010UF K	
C69			CE04DW1V470M	ELECTRO 47UF 35WV	
C70			CE04DW1V100M	ELECTRO 10UF 35WV	
C71			CC73GCH1H220J	CHIP C 22PF J	
C72,73			CK45FB1H471K	CERAMIC 470PF K	
C74			CK73GB1H103K	CHIP C 0.010UF K	
C75			CK45FB1H222K	CERAMIC 2200PF K	
C76			CK73GB1H103K	CHIP C 0.010UF K	
C77			CC45FSL1H331J	CERAMIC 330PF J	
C78,79			C90-2921-05	ELECTRO 3900UF 16WV	
C81			CK73GB1H103K	CHIP C 0.010UF K	
C82			CE04DW1V100M	ELECTRO 10UF 35WV	
C84,85			C90-2921-05	ELECTRO 3900UF 16WV	
C87			CF92FV1H474J	MF-C 0.47UF J	
C90,91			CK73GB1H103K	CHIP C 0.010UF K	
C93			CE04HW1H2R2M	NP-ELEC 2.2UF 50WV	
C94			CE04HW1H3R3M	NP-ELEC 3.3UF 50WV	
C97,98			C90-5449-05	FILM CAPACITOR	
C99			CK73GB1H103K	CHIP C 0.010UF K	
C100,101			CF92FV1H392J	MF-C 3900PF J	
C102			CE04DW1E470M	ELECTRO 47UF 25WV	
C103			CF92FV1H102J	MF-C 1000PF J	
C104			CK73GB1H103K	CHIP C 0.010UF K	
C105			CE04DW1V100M	ELECTRO 10UF 35WV	
C108			CC73GCH1H101J	CHIP C 100PF J	
C109			CE04DW1A101M	ELECTRO 100UF 10WV	
C112,113			CK73GB1H103K	CHIP C 0.010UF K	
C115			CK73GB1H103K	CHIP C 0.010UF K	
C116			CE04DW1H4R7M	ELECTRO 4.7UF 50WV	
C117			CE04DW1A470M	ELECTRO 47UF 10WV	
C119			CE04DW1V100M	ELECTRO 10UF 35WV	
C120			CF92FV1H224J	MF-C 0.22UF J	
C121			CE04DW1V100M	ELECTRO 10UF 35WV	
C122			CK73GB1H103K	CHIP C 0.010UF K	
C123,124			CE04DW1V100M	ELECTRO 10UF 35WV	
C125-127			C91-2267-05	METALIZED POLYESTER FILM C.	
C128			CE04DW1A470M	ELECTRO 47UF 10WV	
C129			CK73GB1H104K	CHIP C 0.10UF K	
C133-136			CK73GB1H103K	CHIP C 0.010UF K	
C137			CK73GB1H104K	CHIP C 0.10UF K	
C138-140			CE04DW1V100M	ELECTRO 10UF 35WV	
C141			CK45FB1H331K	CERAMIC 330PF K	
C142			CF92FV1H152J	MF-C 1500PF J	
CN1			E40-9092-05	SOCKET FOR PIN ASSY	
CN2			E40-9073-05	PIN ASSY	
E1,2			E23-0149-05	TERMINAL	
J1			E63-0880-05	PIN JACK	
⚠ J2			E70-0832-05	SCREW TERMINAL BOARD	
J5			E70-0836-05	LOCK TERMINAL BOARD	
WH1-3			E39-0445-15	WIRING HARNESS	

Ref.No.	Add	New	Parts No.	Description	Destination
⚠ J3,4			J13-0602-05	FUSE HOLDER	
L3,4		*	L19-0722-15	TRANSFORMER FOR CONVERTER	
L5,6		*	L33-1872-15	CHOKE COIL	
L7,8			L33-1818-05	CHOKE COIL	
X1			L78-0867-05	RESONATOR	
H	2A		N80-2608-45	PAN HEAD TAPTITE SCREW	
J	2B		N80-3010-45	PAN HEAD TAPTITE SCREW	
R3,4			RK73GB2A103J	CHIP R 10K J 1/10W	
R5			RK73GB2A473J	CHIP R 47K J 1/10W	
R6			RK73GB2A103J	CHIP R 10K J 1/10W	
R7			RK73GB2A153J	CHIP R 15K J 1/10W	
R8			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R9-11			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R12			RK73GB2A103J	CHIP R 10K J 1/10W	
R14			RK73GB2A153J	CHIP R 15K J 1/10W	
R15			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R16			RK73GB2A473J	CHIP R 47K J 1/10W	
R18			RK73GB2A473J	CHIP R 47K J 1/10W	
R23			RK73GB2A473J	CHIP R 47K J 1/10W	
R28			RK73GB2A153J	CHIP R 15K J 1/10W	
R30			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R32,33			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R35			RK73GB2A123J	CHIP R 12K J 1/10W	
R38			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R39			RK73GB2A153J	CHIP R 15K J 1/10W	
R40			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R45,46			RK73GB2A103J	CHIP R 10K J 1/10W	
R47			RK73GB2A223J	CHIP R 22K J 1/10W	
R49			RK73GB2A103J	CHIP R 10K J 1/10W	
R50			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R53			RK73GB2A473J	CHIP R 47K J 1/10W	
R54			RK73GB2A153J	CHIP R 15K J 1/10W	
R56			RK73GB2A473J	CHIP R 47K J 1/10W	
R58			RK73GB2A333J	CHIP R 33K J 1/10W	
R59			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R60			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R62			RK73GB2A473J	CHIP R 47K J 1/10W	
R63			RK73GB2A223J	CHIP R 22K J 1/10W	
R65			RK73GB2A134J	CHIP R 130K J 1/10W	
R66			RK73GB2A511J	CHIP R 510 J 1/10W	
R67			RK73GB2A623J	CHIP R 62K J 1/10W	
R69			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R70			RK73GB2A103J	CHIP R 10K J 1/10W	
R71			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R73			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R75			RK73GB2A823J	CHIP R 82K J 1/10W	
R77			RK73GB2A821J	CHIP R 820 J 1/10W	
R78			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R82			RK73GB2A393J	CHIP R 39K J 1/10W	
R83			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R84,85			RK73GB2A103J	CHIP R 10K J 1/10W	
R86			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R87			RK73GB2A393J	CHIP R 39K J 1/10W	

K, M1: KAC-X810D
E1 : KAC-PS810D

⚠ indicates safety critical components.

PARTS LIST

* New Parts
Parts without Parts No. are not supplied.
Les articles non mentionnes dans le Parts No. ne sont pas fournis.
Teile ohane Parts No. werden nicht geliefert.

AUDIO UNIT (X09-5440-10)

Ref.No.	Add	New	Parts No.	Description			Destination
R88			RK73GB2A473J	CHIP R	47K	J 1/10W	
R94			RK73GB2A563J	CHIP R	56K	J 1/10W	
R100			RK73GB2A684J	CHIP R	680K	J 1/10W	
R101			RK73GB2A683J	CHIP R	68K	J 1/10W	
R105			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R106			RK73GB2A103J	CHIP R	10K	J 1/10W	
R108			RK73GB2A152J	CHIP R	1.5K	J 1/10W	
R111			RK73GB2A473J	CHIP R	47K	J 1/10W	
R115			RK73GB2A103J	CHIP R	10K	J 1/10W	
R116			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R118,119			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R122			RK73GB2A123J	CHIP R	12K	J 1/10W	
R123			RD14DB2H511J	SMALL-RD	510	J 1/2W	
R124			RD14DB2H751J	SMALL-RD	750	J 1/2W	
R125			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R126			RK73GB2A562J	CHIP R	5.6K	J 1/10W	
R127			RK73GB2A332J	CHIP R	3.3K	J 1/10W	
R128			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R129			RD14DB2H511J	SMALL-RD	510	J 1/2W	
R130			RD14DB2H751J	SMALL-RD	750	J 1/2W	
R132			RK73GB2A682J	CHIP R	6.8K	J 1/10W	
R134			RD14DB2H510J	SMALL-RD	51	J 1/2W	
R135			RK73GB2A332J	CHIP R	3.3K	J 1/10W	
R137			RD14DB2H271J	SMALL-RD	270	J 1/2W	
R139,140			RD14DB2H220J	SMALL-RD	22	J 1/2W	
R142			RK73GB2A100J	CHIP R	10	J 1/10W	
R143			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R144,145			RD14DB2H100J	SMALL-RD	10	J 1/2W	
R146,147			RD14DB2H102J	SMALL-RD	1.0K	J 1/2W	
R148			RD14DB2H100J	SMALL-RD	10	J 1/2W	
R150			RD14DB2H102J	SMALL-RD	1.0K	J 1/2W	
R151			RK73GB2A103J	CHIP R	10K	J 1/10W	
R153			RD14DB2H331J	SMALL-RD	330	J 1/2W	
R155			RD14DB2H512J	SMALL-RD	5.1K	J 1/2W	
R157			RD14DB2H102J	SMALL-RD	1.0K	J 1/2W	
R158,159			RK73GB2A103J	CHIP R	10K	J 1/10W	
R161			RK73GB2A914J	CHIP R	910K	J 1/10W	
R162			RD14DB2H152J	SMALL-RD	1.5K	J 1/2W	
R163			RK73GB2A103J	CHIP R	10K	J 1/10W	
R164			RD14DB2H102J	SMALL-RD	1.0K	J 1/2W	
R167			RD14DB2H331J	SMALL-RD	330	J 1/2W	
R168			RD14DB2H122J	SMALL-RD	1.2K	J 1/2W	
R170,171			RD14DB2H101J	SMALL-RD	100	J 1/2W	
R172,173			RK73GB2A473J	CHIP R	47K	J 1/10W	
R175			RK73GB2A113J	CHIP R	11K	J 1/10W	
R176,177			RD14DB2H101J	SMALL-RD	100	J 1/2W	
R180,181			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R186			RK73GB2A121J	CHIP R	120	J 1/10W	
R187,188			RK73GB2A4R7J	CHIP R	4.7	J 1/10W	
R189			RK73GB2A121J	CHIP R	120	J 1/10W	
R190,191			RK73GB2A122J	CHIP R	1.2K	J 1/10W	
R192			RK73GB2A221J	CHIP R	220	J 1/10W	
R193			R92-0205-05	METAL-PLATE	0.1	K 2W	
R196-201			R92-0205-05	METAL-PLATE	0.1	K 2W	
R204-206			R92-0205-05	METAL-PLATE	0.1	K 2W	

Ref.No.	Add	New	Parts No.	Description			Destination
R207			RK73GB2A914J	CHIP R	910K	J 1/10W	
R208,209			R92-0205-05	METAL-PLATE	0.1	K 2W	
R210,211			RK73GB2A152J	CHIP R	1.5K	J 1/10W	
R212			RS14KB3D4R7J	FL-PROOF RS	4.7	J 2W	
R213			RK73GB2A471J	CHIP R	470	J 1/10W	
R214			RK73GB2A202J	CHIP R	2.0K	J 1/10W	
R215			RS14KB3D4R7J	FL-PROOF RS	4.7	J 2W	
R216			RK73GB2A471J	CHIP R	470	J 1/10W	
R217			RK73GB2A163J	CHIP R	16K	J 1/10W	
R218,219			RK73GB2A332J	CHIP R	3.3K	J 1/10W	
R220			RK73GB2A432J	CHIP R	4.3K	J 1/10W	
R221			RK73GB2A150J	CHIP R	15	J 1/10W	
R222			RK73GB2A684J	CHIP R	680K	J 1/10W	
R223			RK73GB2A103J	CHIP R	10K	J 1/10W	
R224			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R225			RK73GB2A103J	CHIP R	10K	J 1/10W	
R226			RK73GB2A101J	CHIP R	100	J 1/10W	
R227			RK73GB2A332J	CHIP R	3.3K	J 1/10W	
R228			RK73GB2A272J	CHIP R	2.7K	J 1/10W	
R229			RK73GB2A101J	CHIP R	100	J 1/10W	
R230			RK73GB2A473J	CHIP R	47K	J 1/10W	
R231			RK73GB2A392J	CHIP R	3.9K	J 1/10W	
R232			RK73GB2A562J	CHIP R	5.6K	J 1/10W	
R233			RK73GB2A203J	CHIP R	20K	J 1/10W	
R234			RK73GB2A103J	CHIP R	10K	J 1/10W	
R235,236			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R237			RK73GB2A823J	CHIP R	82K	J 1/10W	
R238			RK73GB2A103J	CHIP R	10K	J 1/10W	
R239			RK73GB2A473J	CHIP R	47K	J 1/10W	
R240,241			RK73GB2A153J	CHIP R	15K	J 1/10W	
R242,243			RK73GB2A473J	CHIP R	47K	J 1/10W	
R244			RK73GB2A332J	CHIP R	3.3K	J 1/10W	
R245			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R246			RK73GB2A103J	CHIP R	10K	J 1/10W	
R247			RK73GB2A332J	CHIP R	3.3K	J 1/10W	
R249			RK73GB2A332J	CHIP R	3.3K	J 1/10W	
R250,251			RK73GB2A103J	CHIP R	10K	J 1/10W	
R252			RK73GB2A104J	CHIP R	100K	J 1/10W	
R253			RK73GB2A273J	CHIP R	27K	J 1/10W	
R254			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R255			RK73GB2A332J	CHIP R	3.3K	J 1/10W	
R256			RK73GB2A512J	CHIP R	5.1K	J 1/10W	
R257			RK73GB2A471J	CHIP R	470	J 1/10W	
R258			RK73GB2A104J	CHIP R	100K	J 1/10W	
R259			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R260			RK73GB2A104J	CHIP R	100K	J 1/10W	
R261			RK73GB2A473J	CHIP R	47K	J 1/10W	
R263			RK73GB2A103J	CHIP R	10K	J 1/10W	
R264			RK73GB2A153J	CHIP R	15K	J 1/10W	
R265			RK73GB2A821J	CHIP R	820	J 1/10W	
R266			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R267			RK73GB2A100J	CHIP R	10	J 1/10W	
R269			RK73GB2A103J	CHIP R	10K	J 1/10W	
R272-275			RK73EB2E2R2J	CHIP R	2.2	J 1/4W	
R276			RK73GB2A222J	CHIP R	2.2K	J 1/10W	

K, M1: KAC-X810D
E1 : KAC-PS810D

⚠ indicates safety critical components.

PARTS LIST

* New Parts
Parts without Parts No. are not supplied.
Les articles non mentionnes dans le Parts No. ne sont pas fournis.
Teile ohane Parts No. werden nicht geliefert.

AUDIO UNIT (X09-5440-10)

Ref.No.	Add	New	Parts No.	Description	Destination
R277-280			RD14DB2H510J	SMALL-RD 51 J 1/2W	
R281			RK73GB2A103J	CHIP R 10K J 1/10W	
R286			RK73GB2A103J	CHIP R 10K J 1/10W	
R287			RK73GB2A273J	CHIP R 27K J 1/10W	
R288			RK73GB2A103J	CHIP R 10K J 1/10W	
R289			RK73GB2A101J	CHIP R 100 J 1/10W	
S1			S31-2630-05	SLIDE SWITCH	
S2,3			S62-0842-05	SLIDE SWITCH	
S4			S31-2630-05	SLIDE SWITCH	
S5			S62-0842-05	SLIDE SWITCH	
D2-9			1SS133	DIODE	
D10			RD5.1JS(B)	ZENER DIODE	
D11			RD6.2JS(B)	ZENER DIODE	
D12,13			1SS133	DIODE	
D14,15			RD16JS(B)	ZENER DIODE	
D16-19			1SS133	DIODE	
D20			RD15JS(B)	ZENER DIODE	
D21			FMU34S*A	DIODE	
D22			FMU34R*A	DIODE	
D23-26			FR103S	DIODE	
D27			1SS133	DIODE	
D28,29			RD8.2JS(B)	ZENER DIODE	
D30-32			1SS133	DIODE	
D33			RD7.5JS(B)	ZENER DIODE	
D34			RD16JS(B)	ZENER DIODE	
D35,36			6A20-M	DIODE	
D37			RD8.2JS(B)	ZENER DIODE	
D38			6A20-M	DIODE	
D39			RD5.1JS(B)	ZENER DIODE	
D40			FMU34R*A	DIODE	
D41			FMU34S*A	DIODE	
D42			1SS133	DIODE	
D43,44			RD10JS(B)	ZENER DIODE	
D45,46			1SS133	DIODE	
IC1,2			NJM4565M	ANALOGUE IC	
IC3			NJM2058M	IC (OP AMP)	
IC4			NJM4565M	ANALOGUE IC	
IC5			PST9130NR	ANALOGUE IC	
IC6		*	TMP87C847U3JV4	MI-COM IC	
IC7			NJM4565M	ANALOGUE IC	
IC8			NJM5532MD	IC (OP AMP)	
IC9			NJM319D	ANALOGUE IC	
IC10,11			TC74HC00AF	IC (2INPUT NAND GATE)	
IC12			NJM311M	ANALOGUE IC	
IC13			TC4052BF(N)	MOS-IC	
IC14			UPC494GS	ANALOGUE IC	
IC15			TC4W66F	IC	
Q1-3			2SC945(A)(Q,P)	TRANSISTOR	
Q4			DTA114YUA	DIGITAL TRANSISTOR	
Q4			UN5114	DIGITAL TRANSISTOR	
Q5			2SA733(A)(Q,P)	TRANSISTOR	
Q6			2SC945(A)(Q,P)	TRANSISTOR	
Q7			2SC3940A(R,S)	TRANSISTOR	
Q9			2SC945(A)(Q,P)	TRANSISTOR	

Ref.No.	Add	New	Parts No.	Description	Destination
Q10			2SD2375	TRANSISTOR	
Q11			2SB1548(P)	TRANSISTOR	
Q12			2SC945(A)(Q,P)	TRANSISTOR	
Q13			2SA733(A)(Q,P)	TRANSISTOR	
Q14			2SC2631(Q,R)	TRANSISTOR	
Q15			2SC3940A(R,S)	TRANSISTOR	
Q16			2SC2631(Q,R)	TRANSISTOR	
Q17-21			2SA1352(E,F)	TRANSISTOR	
Q22			2SA1376A(L,K)	TRANSISTOR	
Q23			2SA1123(Q,R)	TRANSISTOR	
Q24			2SC3940A(R,S)	TRANSISTOR	
Q25			2SC2631(Q,R)	TRANSISTOR	
Q26-29			IRFIZ48N	FET	
Q30			2SC3478A(L,K)	TRANSISTOR	
Q31			2SA1286-T11	TRANSISTOR	
Q32			2SC2631(Q,R)	TRANSISTOR	
Q33			2SA1286-T11	TRANSISTOR	
Q34-37			IRFIZ48N	FET	
Q38			2SC945(A)(Q,P)	TRANSISTOR	
Q39			2SC3478A(L,K)	TRANSISTOR	
Q40			2SA1286-T11	TRANSISTOR	
Q41			2SC2631(Q,R)	TRANSISTOR	
Q42			2SA1286-T11	TRANSISTOR	
Q43-46			STW34NB20	FET	
Q47			2SC945(A)(Q,P)	TRANSISTOR	
Q48,49			2SA733(A)(Q,P)	TRANSISTOR	
Q50			2SC945(A)(Q,P)	TRANSISTOR	
Q51			2SC3478A(L,K)	TRANSISTOR	
Q52			2SA1376A(L,K)	TRANSISTOR	
Q53			2SC945(A)(Q,P)	TRANSISTOR	
Q54			2SA1123(Q,R)	TRANSISTOR	
Q55			2SC3478A(L,K)	TRANSISTOR	
Q56			2SC945(A)(Q,P)	TRANSISTOR	
Q57			DTC114YUA	DIGITAL TRANSISTOR	
Q57			UN5214	DIGITAL TRANSISTOR	
Q58			2SC945(A)(Q,P)	TRANSISTOR	
Q59			DTC114YUA	DIGITAL TRANSISTOR	
Q59			UN5214	DIGITAL TRANSISTOR	
Q60			DTA114YUA	DIGITAL TRANSISTOR	
Q60			UN5114	DIGITAL TRANSISTOR	
Q61			2SC945(A)(Q,P)	TRANSISTOR	
Q62			DTC114YUA	DIGITAL TRANSISTOR	
Q62			UN5214	DIGITAL TRANSISTOR	
Q63			2SA1534A(R,S)	TRANSISTOR	
Q64-66			2SC945(A)(Q,P)	TRANSISTOR	
Q68,69			IRFIZ48N	FET	
Q70,71			2SA733(A)(Q,P)	TRANSISTOR	
Q73			2SC4081	TRANSISTOR	
Q73			2SD1819A	TRANSISTOR	
TH2,3			PTH9L04BE222TS	POSITIVE RESISTOR	

K, M1: KAC-X810D
E1 : KAC-PS810D

⚠ indicates safety critical components.