
9. EXPLODED VIEWS AND PARTS LIST

NOTES : • *Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
• *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
• *Screw adjacent to▽ mark on the product are used for disassembly.*
• *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions,apply as you think it appropriate.)*

9.1 PACKING

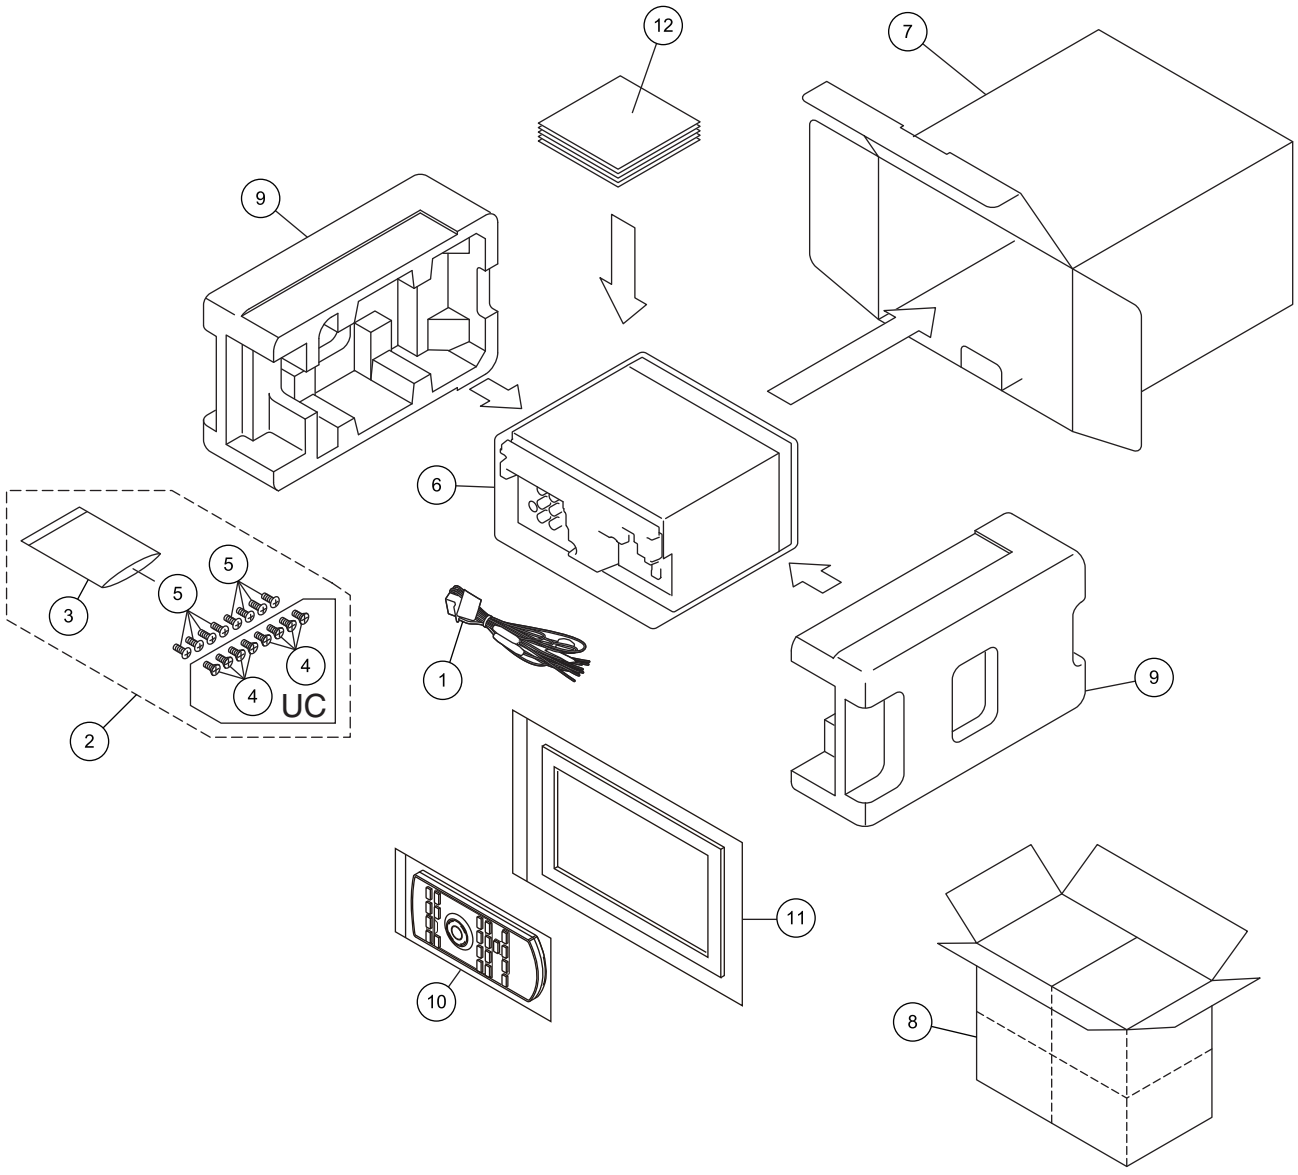

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Cord Assy	CDP1301
	2	Screw Assy	See Contrast table (2)
*	3	Polyethylene Bag	CEG-127
	4	Screw	See Contrast table (2)
	5	Screw	TRZ50P080FTC
	6	Cover	See Contrast table (2)
	7	Unit Box	See Contrast table (2)
	8	Contain Box	See Contrast table (2)
	9	Protector	See Contrast table (2)
	10	Remote Control Unit	CXE3877
	11	Panel	CNS9475
	12-1	Owner's Manual	See Contrast table (2)
	12-2	Owner's Manual	See Contrast table (2)
	12-3	Owner's Manual	See Contrast table (2)
*	12-4	Warranty Card	See Contrast table (2)
*	12-5	Service network Card	See Contrast table (2)

(2) CONTRAST TABLE


AVH-P2300DVD/XNUC, AVH-2350DVD/XNRC, AVH-2350DVD/XNRD, AVH-2350DVD/RI are AVH-2390DVD/XNID constructed the same except for the following:

Mark	No.	Description	AVH-P2300DVD/ XNUC	AVH-2350DVD/ XNRC	AVH-2350DVD/ XNRD	AVH-2350DVD/ XNRI	AVH-2390DVD/ XNID
	2	Screw Assy	CEA3559	CEC3542	CEC3542	CEC3542	CEC3542
	4	Screw	CRZ50P090FTC	Not used	Not used	Not used	Not used
	6	Cover	CEG1359	CEG1356	CEG1356	CEG1356	CEG1356
	7	Unit Box	CHG7503	CHG7504	CHG7505	CHG7554	CHG7507
	8	Contain Box	CHL7503	CHL7504	CHL7505	CHL7554	CHL7507
	9	Protector	CHP3952	CHP3952	CHP3952	CHP3690	CHP3952
	12-1	Owner's Manual	CRB3537	CRB3542	CRB3542	CRB3542	CRB3550
	12-2	Owner's Manual	CRB3538	CRB3543	CRB3546	CRB3548	Not used
	12-3	Owner's Manual	CRB3539	CRB3544	CRB3547	CRB3549	Not used
*	12-4	Warranty Card	CRY1276	Not used	Not used	Not used	CRY1304
*	12-5	Servicenetwork Card	Not used	Not used	Not used	Not used	CRY1305

Owner's Manual,Installation Manual

Part No.	Language
CRB3537	English
CRB3538	French
CRB3539	Spanish(Espanol)
CRB3542	English
CRB3543	Traditional Chinese
CRB3544	Korean
CRB3546	Spanish(Espanol)
CRB3547	Portuguese(B)
CRB3548	Arabic
CRB3549	Persian
CRB3550	English

9.2 EXTERIOR (1)

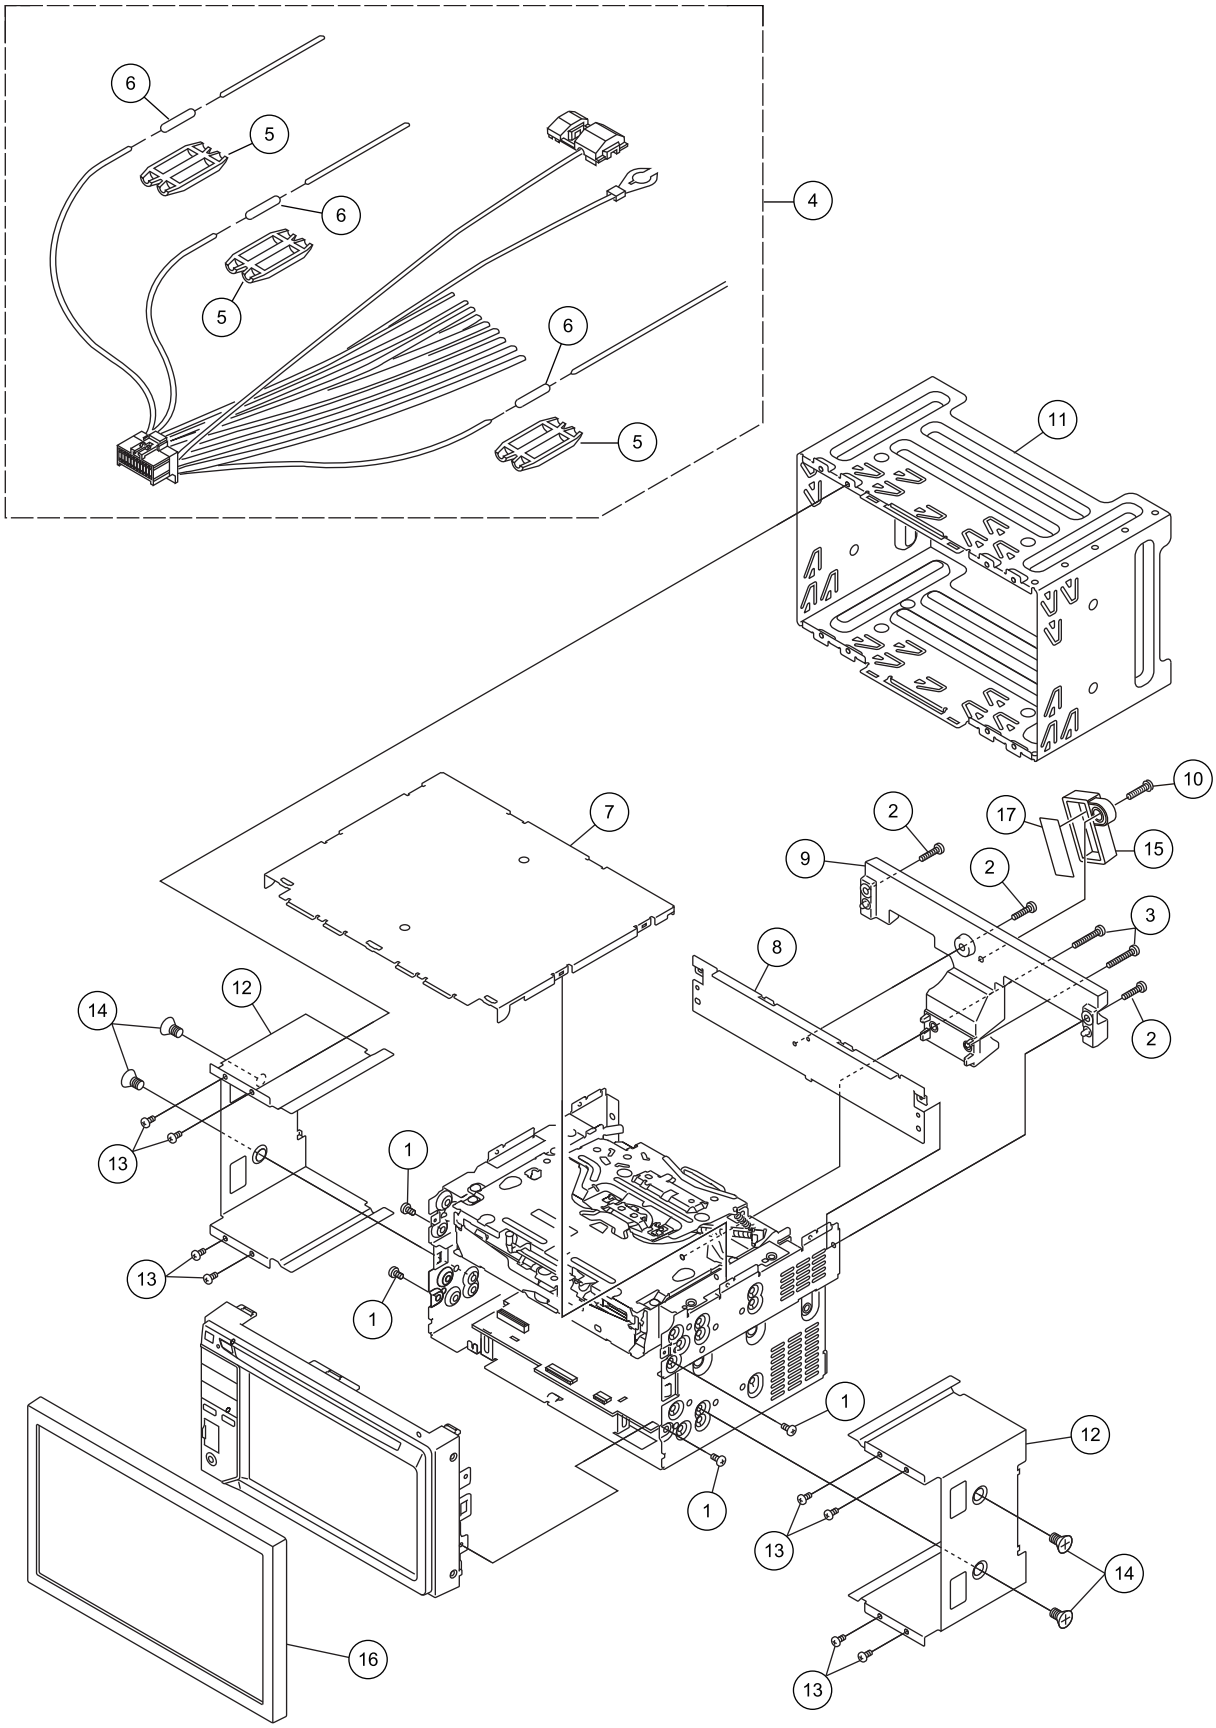

(1) EXTERIOR (1) SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	Screw	BMZ26P040FTC
	2	Screw	BSZ26P100FTC
	3	Screw	BSZ26P160FTC
	4	Cord Assy	CDP1301
	5	Cap	CNS1472
	6	Resistor	RS1/2PMF102J
	7	Case	CNB3544
	8	Holder	CND4809
	9	Heat Sink	CNR2099
	10	Screw	See Contrast table (2)
	11	Holder	See Contrast table (2)
	12	Holder	See Contrast table (2)
	13	Screw	See Contrast table (2)
	14	Screw	See Contrast table (2)
	15	Holder	See Contrast table (2)
	16	Panel	See Contrast table (2)
*	17	Seal	See Contrast table (2)

(2) CONTRAST TABLE

AVH-P2300DVD/XNUC, AVH-2350DVD/XNRC, AVH-2350DVD/XNRD, AVH-2350DVD/RI are AVH-2390DVD/XNID constructed the same except for the following:

Mark	No.	Description	AVH-P2300DVD/XNUC	AVH-2350DVD/XNRC	AVH-2350DVD/XNRD	AVH-2350DVD/XNRI	AVH-2390DVD/XNID
	10	Screw	BMZ40P140FTC	Not used	Not used	Not used	Not used
	11	Holder	Not used	Not used	Not used	CND4337	Not used
	12	Holder	Not used	Not used	Not used	CND4338	Not used
	13	Screw	Not used	Not used	Not used	BMZ30P060FTC	Not used
	14	Screw	Not used	Not used	Not used	CRZ50P090FTC	Not used
	15	Holder	CNV7619	Not used	Not used	Not used	Not used
	16	Panel	Not used	Not used	Not used	CNS9952	Not used
*	17	Seal	CAN3984	Not used	Not used	Not used	Not used

9.3 EXTERIOR (2)

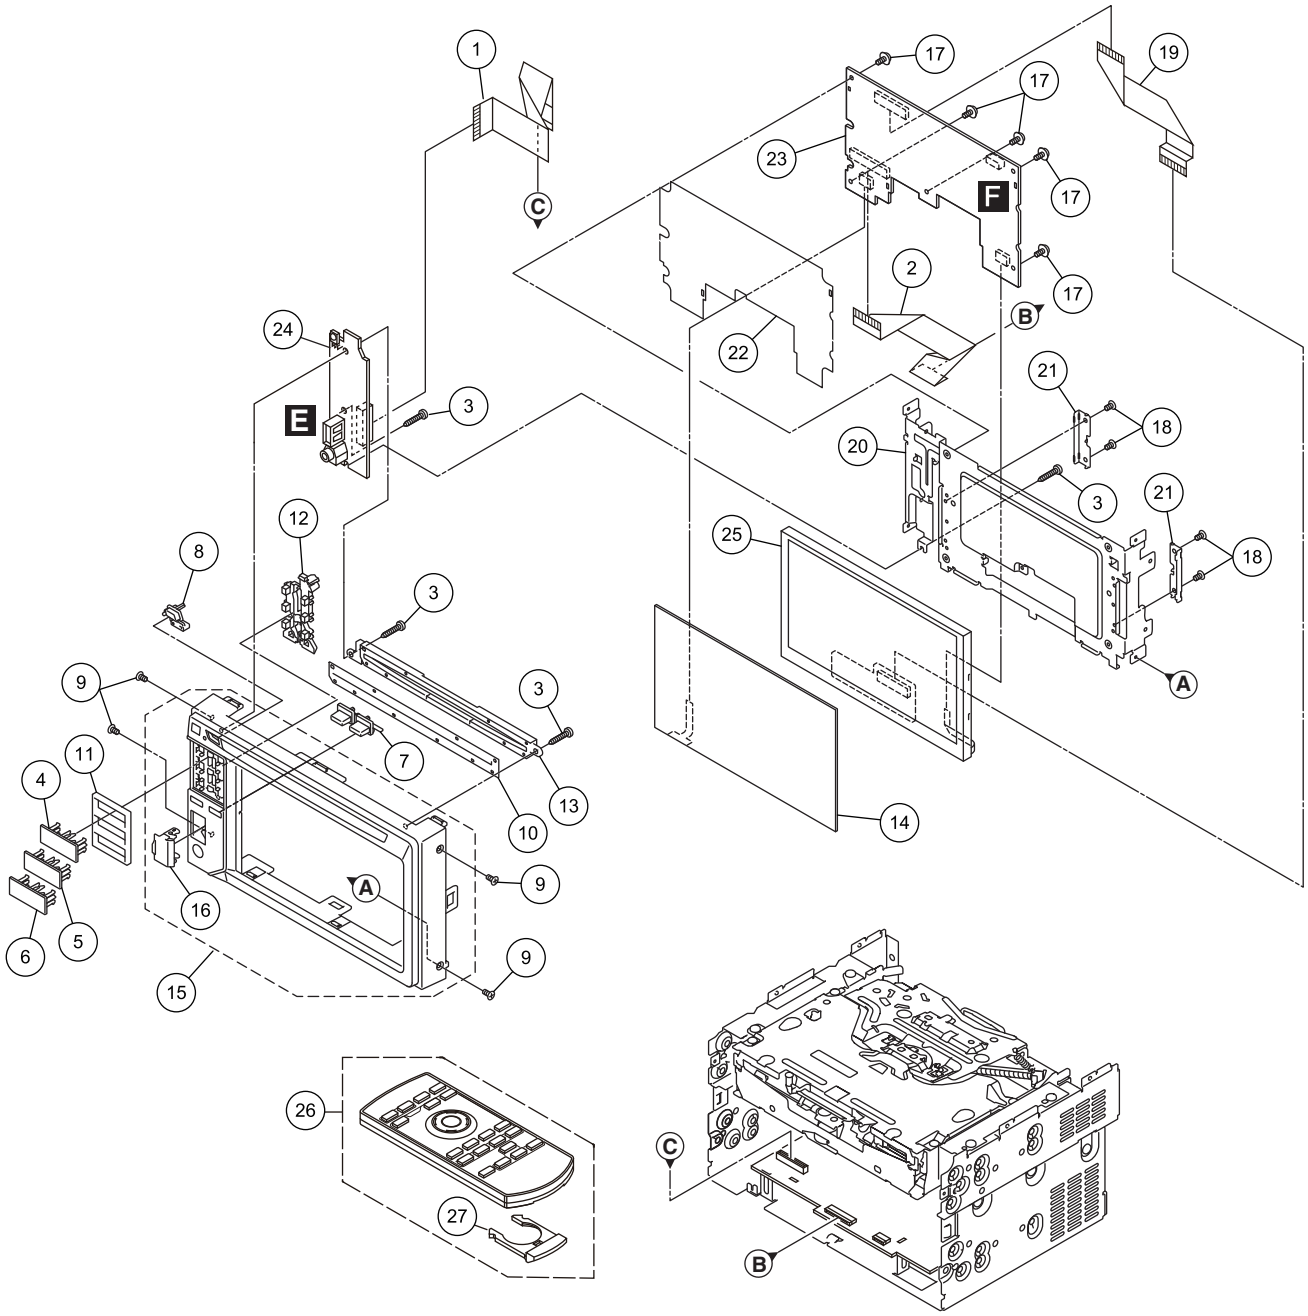

(1) EXTERIOR (2) SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	FFC	CDE9344
	2	FFC	CDE9345
	3	Screw	BPZ20P080FTC
	4	Button(- +)	CAI2717
	5	Button(< >)	CAI2718
	6	Button(SRC, MUTE)	CAI2719
	7	Button(MENU, MODE)	CAI2720
	8	Button(RESET, EJECT)	CAI2721
	9	Screw(M2 x 3)	CBA1877
	10	Cover	CNN2628
	11	Cushion	CNN3208
	12	Lighting Conductor	CNW1773
	13	Holder	CNW1775
	14	Touch Panel	CSX1169
	15	Grille Unit	See Contrast table (2)
	16	Door(USB)	CAT2914
	17	Screw	AMZ20P030FTC
	18	Screw	JJZ20P020FTC
	19	FFC	CDE9472
	20	Holder	CND5462
	21	Holder	CND5463
	22	Insulator	CNN3205
	23	Service Unit(Monitor PCB)	See Contrast table (2)
	24	Service Unit(Keyboard PCB)	See Contrast table (2)
	25	LCD	CWX3868
	26	Remote Control Unit	CXE3877
*	27	Cover	CNU1624

(2) CONTRAST TABLE

AVH-P2300DVD/XNUC, AVH-2350DVD/XNRC, AVH-2350DVD/XNRD, AVH-2350DVD/RI are AVH-2390DVD/XNID constructed the same except for the following:

Mark	No.	Description	AVH-P2300DVD/ XNUC	AVH-2350DVD/ XNRC	AVH-2350DVD/ XNRD	AVH-2350DVD/ XNRI	AVH-2390DVD/ XNID
	15	Grille Unit	CXX3859	CXX3861	CXX3861	CXX3861	CXX3862
	23	Service Unit (Monitor Assy)	CXX3022	CXX3023	CXX3024	CXX3025	CXX3026
	24	Service Unit (Keyboard PCB)	CXX3014	CXX3015	CXX3016	CXX3017	CXX3018

9.4 EXTERIOR (3)

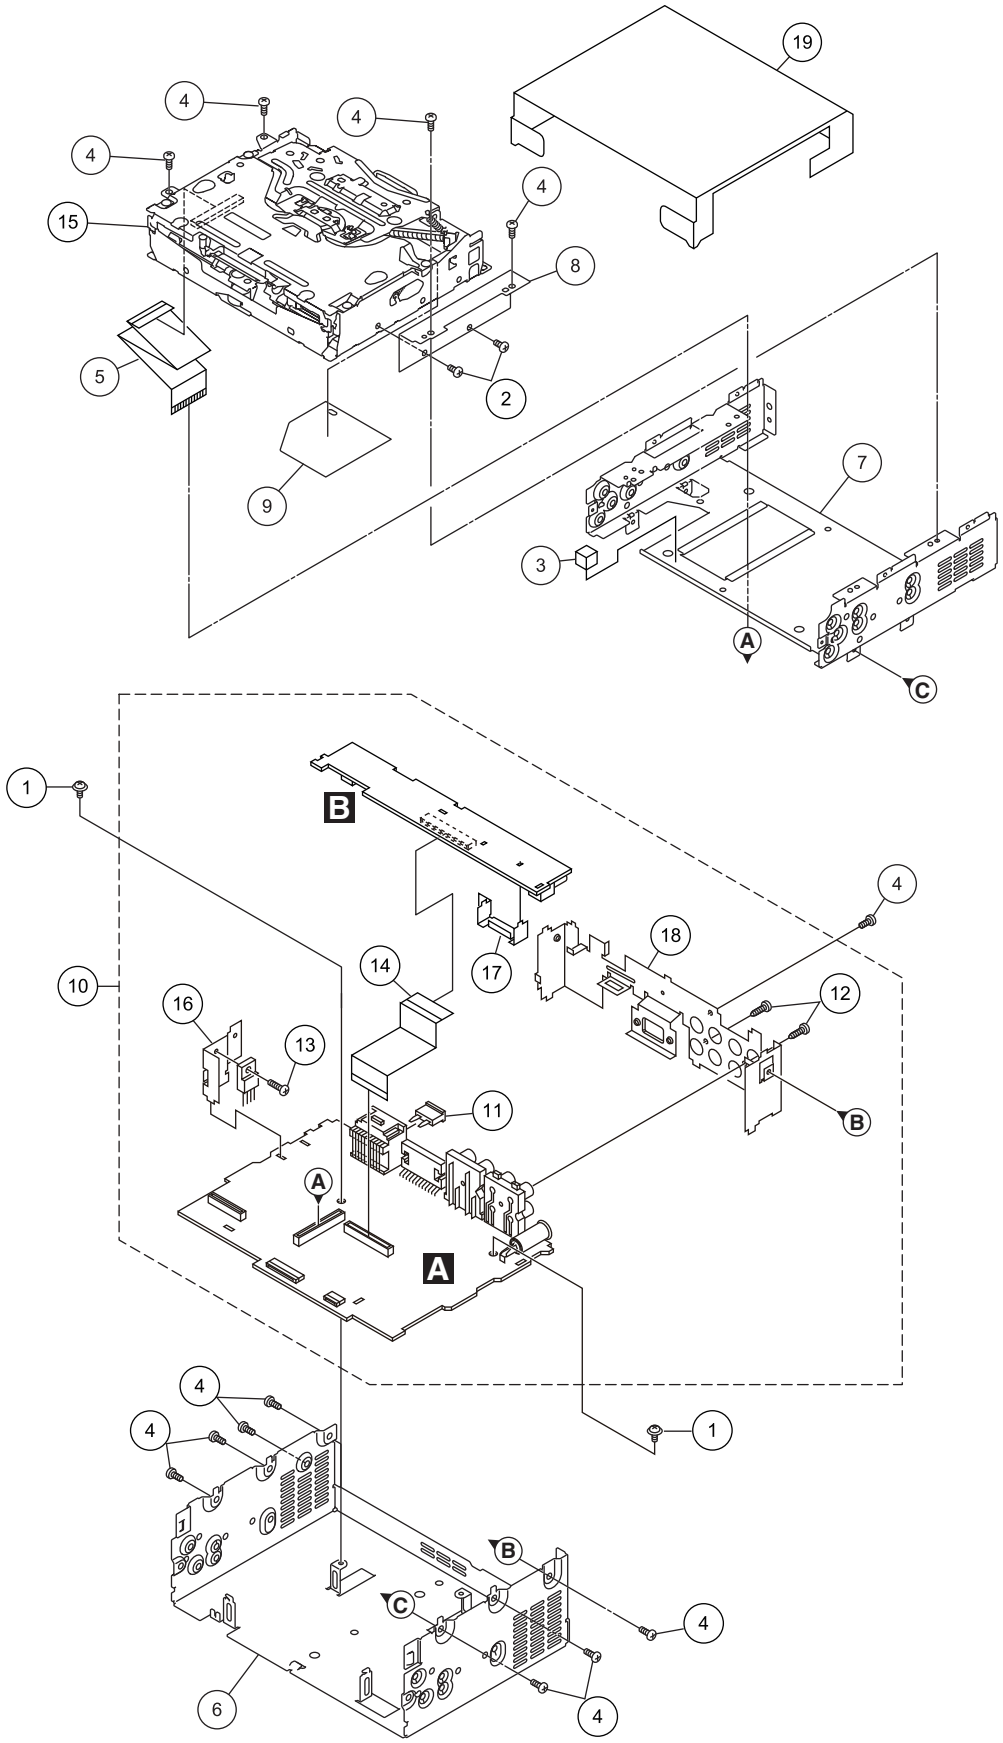

(1) EXTERIOR (3) SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	Screw	ASZ26P050FTC
	2	Screw	BMZ25P040FTB
	3	Gasket	See Contrast table (2)
	4	Screw	BSZ26P060FTC
	5	FFC	CDE9346
	6	Chassis	CNA3218
	7	Chassis	CNA3157
	8	Bracket	CND5470
	9	Insulator	CNN2764
	10	Service Unit(Mother Assy)	See Contrast table (2)
⚠	11	Fuse(10 A)	YEK5001
	12	Screw	BPZ26P080FTC
	13	Screw	BSZ26P060FTC
	14	FFC	CDE9347
	15	DVD Mechanism Module(LS1)	CXK6820
	16	Holder	CND4811
	17	Holder	CND4814
	18	Holder	See Contrast table (2)
	19	Sheet	See Contrast table (2)

(2) CONTRAST TABLE

AVH-P2300DVD/XNUC, AVH-2350DVD/XNRC, AVH-2350DVD/XNRD, AVH-2350DVD/RI are AVH-2390DVD/XNID constructed the same except for the following:

Mark	No.	Description	AVH-P2300DVD/ XNUC	AVH-2350DVD/ XNRC	AVH-2350DVD/ XNRD	AVH-2350DVD/ XNRI	AVH-2390DVD/ XNID
	3	Gasket	CNN3631	CNN3631	CNN3631	Not used	Not used
	10	Service Unit (Mother PCB)	CXX3006	CXX3007	CXX3008	CXX3009	CXX3010
	18	Holder	CND5877	CND5908	CND5908	CND5908	CND5908
	19	Sheet	Not used	Not used	Not used	Not used	CNN3636

9.5 DVD MECHANISM MODULE

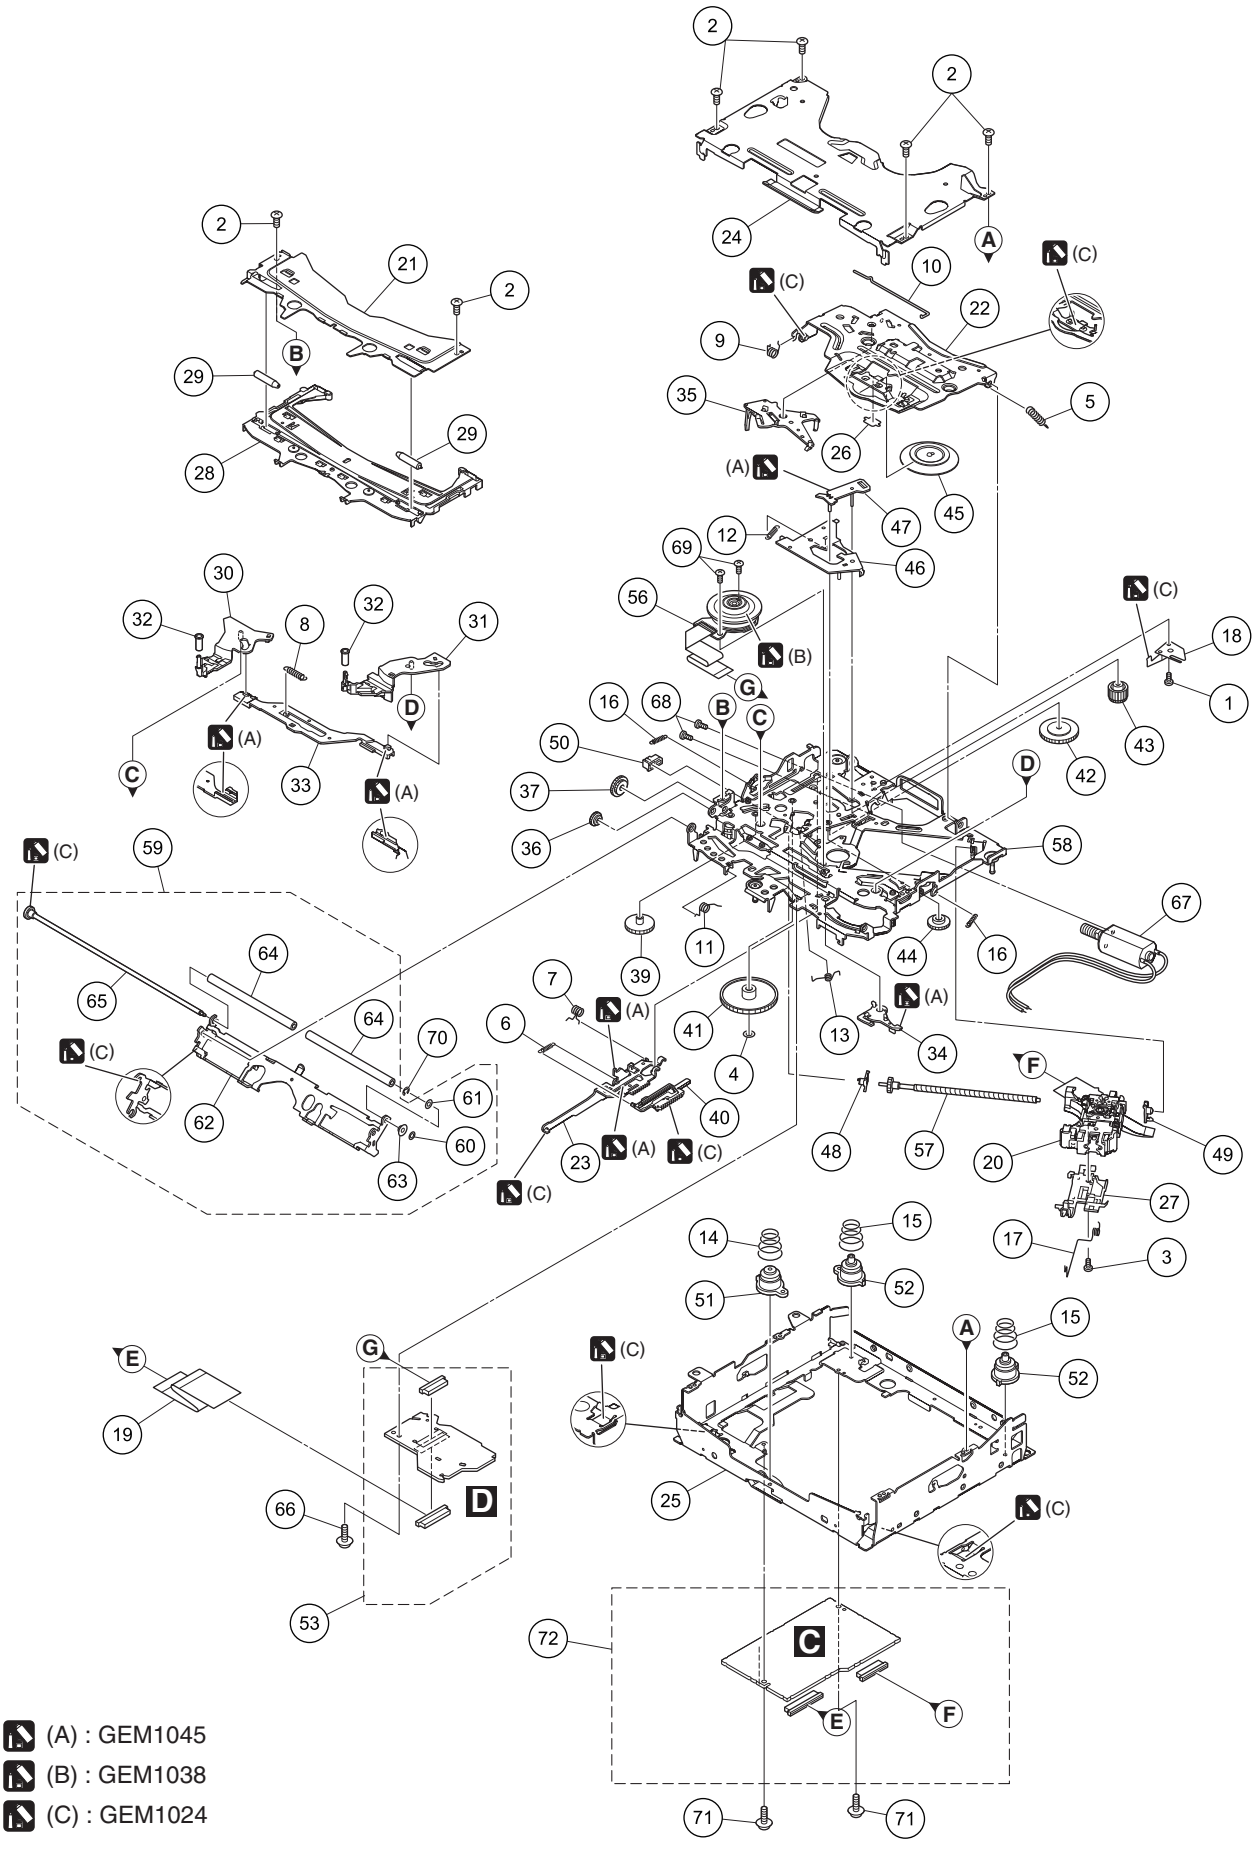


(A) : GEM1045
(B) : GEM1038
(C) : GEM1024

DVD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	BMZ20P020FTC
	2	Screw	BSZ20P040FTC
	3	Screw(M2 x 4)	CBA1835
	4	Washer	CBF1038
	5	Spring	CBH2860
	6	Spring	CBH3010
	7	Spring	CBH3011
	8	Spring	CBH3012
	9	Spring	CBH3013
	10	Spring	CBH3014
	11	Spring	CBH3015
	12	Spring	CBH3016
	13	Spring	CBH3017
	14	Spring	CBH3018
	15	Spring	CBH3019
	16	Spring	CBH3020
	17	Spring	CBH3030
	18	Plate Spring	CBL1822
	19	Cable	CDE8631
	20	Pickup Unit(Service)	CXX2398
	21	Bracket	CND4553
	22	Arm	CND4555
	23	Lever	CND5398
	24	Frame	CND4557
	25	Frame	CND4558
	26	Sheet	CNN2280
	27	Rack	CNW1170
	28	Guide	CNW1171
	29	Roller	CNW1172
	30	Arm	CNW2157
	31	Arm	CNW1174
	32	Roller	CNW1175
	33	Lever	CNW1176
	34	Arm	CNW1177
	35	Arm	CNW1178
	36	Gear	CNW1180
	37	Gear	CNW1181
	38	•••••	
	39	Gear	CNW1183
	40	Rack	CNW1184
	41	Gear	CNW1185
	42	Gear	CNW1186
	43	Gear	CNW1187
	44	Gear	CNW1188
	45	Clamper	CNW1190
	46	Arm	CNW1191
	47	Arm	CNW1192
	48	Holder	CNW1193
	49	Holder	CNW1194
	50	Holder	CNW1195
	51	Damper	CNW1197
	52	Damper	CNW1198
*	53	Connect PCB	CWX3618
	54	•••••	
	55	•••••	
	56	Motor(SPINDLE)(M2)	EXM1050
	57	Screw Unit	CXC8894
	58	Chassis Unit	CXE4562
	59	Arm Assy	CXC8896
	60	Washer	CBF1037
	61	Washer	CBF1038
	62	Arm	CND4554
	63	Collar	CNV6906
	64	Roller	CNW1196
	65	Gear Unit	CXC8893
	66	Screw	IMS20P030FTC
	67	Motor Unit(LOAD/CRG)(M1)	CXC4026
	68	Screw	JFZ20P025FTC
	69	Screw	JGZ17P022FTC
	70	Washer	YE15FTC
	71	Screw	IMS20P030FTC
	72	DVD Core Unit	YWX5019


A

B

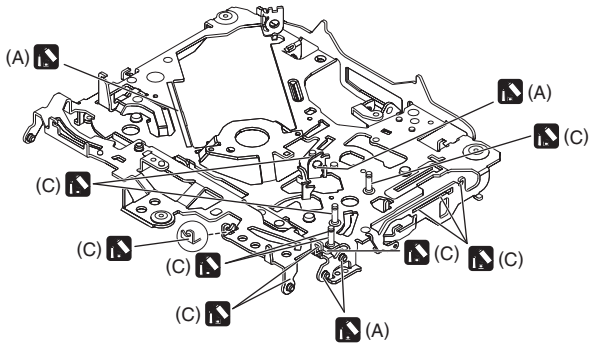

C

D

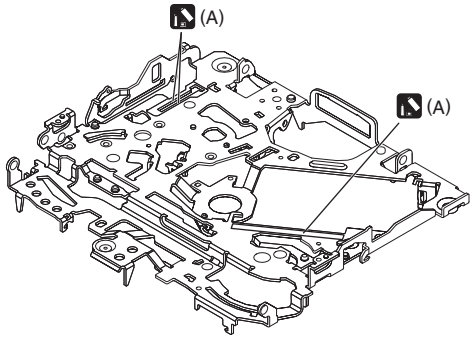

E

F

(A) : GEM1045
(B) : GEM1038
(C) : GEM1024

12. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

  Chip Resistor

  RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J

  Chip Capacitor (except for CQS.....)

  CKS....., CCS....., CSZS.....
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Meaning of the figures and others in the parentheses in the parts list.*

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

A:AVH-P2300DVD/XNUC

B:AVH-2350DVD/XNRC

C:AVH-2350DVD/XNRD

D:AVH-2350DVD/XNRI

E:AVH-2390DVD/XNID

Unit Name : Combined Unit

Unit Number : YWX5019

Unit Name : DVD Core Unit

Unit Number :

Unit Name : Connect PCB

Combined Unit

Consists of

Mother PCB
Interface PCB
Keyboard PCB
Monitor PCB

A B E F

Unit Name : Combined Unit

MISCELLANEOUS

Circuit Symbol and No.		Part No.
IC 181	(A,82,126) IC	PA2030A
IC 201	(B,121,92) IC	PM9012A
IC 301	(B,95,87) IC	BH7649KS2
IC 401	(A,155,78) IC	TDA7706
IC 501	(A,123,71) IC(A)	HA12241FP
IC 601	(A,142,39) IC	PE5761A8
IC 602	(A,111,25) IC	S-80827CNMC-B8M
IC 702	(A,42,23) IC	BD82001FVJ
IC 851	(A,78,75) IC	341S2162
IC 1001	(A,12,78) IC	S-1142B33I-E6
IC 1021	(A,7,89) IC	NJM2388F84
IC 1041	(B,165,53) Regulator IC	NJM2846DL3-05
IC 1061	(A,51,27) Regulator IC	S-1172B34-E6
IC 1201	(B,39,65) IC	AN33012UA
IC 3501	(A,9,91) IR RC REC Module	PNJ4833M
IC 5100	(A,104,42) IC	TC75S57FU
IC 5140	(A,114,45) IC	NJM2138V
IC 5210	(B,106,38) Regulator IC	S-1200B55-M5
IC 5211	(A,122,64) IC	PQ1LA125MSPQ
IC 5320	(A,22,59) Flash ROM Unit(A)	CWW2982
	(A,22,59) Flash ROM Unit(B,E)	CWW2980
	(A,22,59) Flash ROM Unit(C)	CWW2983
	(A,22,59) Flash ROM Unit(D)	CWW2981
IC 5380	(A,77,47) IC	S-93C66BD0I-I8
IC 5381	(A,56,58) IC	MN103SH13
IC 5480	(A,64,77) Logic IC	TC7SHU04FUS1
IC 5700	(A,8,28) L-MOS And Gate	TC7SET08FUS1
IC 5701	(A,15,25) IC	TK61222CQ6
Q 101	(A,146,117) Transistor	RT3C99M
Q 102	(A,139,117) Transistor	RT3C99M
Q 104	(A,104,117) Chip Transistor	RN4983
Q 121	(A,95,113) Transistor	LSC4081UB
Q 151	(A,10,125) Chip Transistor	HN1A01FU
Q 152	(A,18,116) Transistor	LSC4081UB
Q 153	(A,14,116) Chip Transistor	HN1C01FU
Q 154	(A,14,109) Transistor	LTC114EUB
Q 155	(A,9,115) Transistor	LTC114EUB
Q 181	(A,92,107) Chip Transistor	RN4982
Q 182	(B,100,113) Chip Transistor	RN1903
Q 501	(A,73,98) Transistor	UMF23N
Q 601	(A,124,61) Transistor	LSC4081UB
Q 751	(A,113,11) Transistor	IMH24
Q 752	(A,110,15) Transistor	UMF5N
Q 753	(A,119,15) Transistor	UMF5N
Q 851	(A,70,71) Chip Transistor	RN4986
Q 901	(A,85,50) Chip Transistor	RN4982
Q 902	(A,80,50) Chip Transistor	RN1910
Q 1201	(A,36,81) FET	RP1E050RP
Q 1202	(A,34,51) FET	RP1E050RP
Q 3501	(A,15,55) Chip Transistor	HN1C01FU
Q 3502	(A,22,58) Transistor	LSC4081UB
Q 5118	(A,87,33) Transistor	LSA1576UB
Q 5140	(A,114,51) Transistor	LSC4081UB

Circuit Symbol and No.		Part No.
Q 5141	(A,97,39) Transistor	LSC4081UB
Q 5142	(A,103,47) Transistor	LSC4081UB
Q 5210	(A,122,78) Chip Transistor	HN1C01FU
Q 5700	(A,10,31) Transistor	LTC114EUB
Q 5701	(A,6,35) Transistor	LSC4081UB
Q 5702	(A,28,25) Transistor	LSC4081UB
Q 5703	(A,10,48) FET	RSQ025P03
D 101	(A,100,118) Diode	1SS352
D 121	(B,122,116) Diode	DZ2S068C
D 122	(B,110,116) Diode	DZ2S068C
D 123	(B,104,116) Diode	DZ2S068C
D 124	(B,119,116) Diode	DZ2S068C
D 125	(B,104,114) Diode	1SS301
D 126	(A,98,110) Diode	1SS352
D 127	(A,98,119) Diode	RKZ8.2KG(B2)
D 141	(A,39,110) Diode	CRG03
D 142	(A,36,110) Diode	CRG03
D 151	(A,16,124) Diode	1SS301
D 152	(A,16,127) Diode	1SS301
D 153	(A,17,111) Diode	HZU7L(C3)
D 154	(A,19,111) Diode	RKZ20KG(B2)
D 155	(A,15,120) Diode	HZU7L(A1)
D 156	(A,12,115) Diode	RKZ5.6KG(B2)
D 157	(A,8,120) Diode	1SS352
D 181	(A,85,109) Diode	CRG03
D 182	(A,77,108) Diode	CRG03
D 401	(A,164,94) Diode	KP2311E
D 402	(A,164,87) Diode	KP2311E
D 601	(A,117,25) Diode	1SS352
D 602	(B,142,46) Diode	RB751S-40
D 603	(B,140,46) Diode	RB501V-40
D 701	(A,25,22) Diode	DZ2S068C
D 751	(A,119,11) Diode	1SS352
D 1001	(A,13,89) Diode	1SR154-400
D 1041	(B,153,56) Diode	1SR154-400
D 1042	(B,150,56) Diode	1SR154-400
D 1061	(A,58,26) Diode	1SR154-400
D 1201	(A,32,80) Diode	RB056L-40
D 1202	(A,28,51) Diode	RB056L-40
D 1203	(B,28,95) Diode	RSX201L-30
D 1204	(B,25,95) Diode	RSX201L-30
D 2501	(B,151,12) Diode	DZ2S068C
D 2502	(A,37,7) Diode	DZ2S068C
D 2503	(B,151,16) Diode	DZ2S068C
D 2504	(A,40,7) Diode	DZ2S068C
D 2505	(A,36,8) Diode	DZ2S068C
D 2506	(A,33,8) Diode	DZ2S068C
D 3501	(B,23,6) Diode	DZ2S068C
D 3502	(B,20,12) Diode	DZ2S068C
D 3504	(B,23,16) Diode	DZ2S068C
D 3506	(B,17,30) Diode	EMZC6.8N
D 3508	(A,17,61) LED	NSSM025A-A0886
D 3509	(B,19,16) Diode	DZ2S068C
D 5700	(A,9,23) Diode	1SS352
D 5701	(A,25,37) Diode	RB160M-60
L 141	(A,27,107) Choke Coil 600 uH	CTH1221
L 151	(A,22,127) Chip Coil	BTH1101
L 152	(A,22,123) Chip Coil	BTH1101
L 153	(A,11,120) Inductor	CTF1547
L 401	(A,165,90) Chip Coil	LCTAWR15J2520

Circuit Symbol and No.		Part No.
L 402	(A,157,89) Inductor	CTF1786
L 403	(A,152,90) Inductor	CTF1786
L 404	(A,161,91) Chip Coil	LCTAWR27J2520
L 405	(A,148,92) Inductor	CTF1389
L 406	(A,146,90) Inductor	LCTAW220J2520
L 407	(A,159,88) Inductor	CTF1794
L 408	(A,147,87) Inductor(A)	LCYB68NJ1005
L 409	(A,143,81) Chip Coil	LCTAW470J2520
L 411	(A,145,75) Inductor	CTF1786
L 412	(A,153,69) Inductor	CTF1786
L 413	(A,160,67) Inductor	CTF1786
L 416	(A,165,69) Inductor	CTF1786
L 417	(A,168,82) Inductor	CTF1786
L 418	(A,168,83) Inductor	CTF1786
L 601	(A,127,49) Inductor	CTF1787
L 602	(A,157,46) Inductor	CTF1787
L 603	(A,114,40) Inductor	LCTAW2R2J2520
L 701	(A,20,34) Inductor	CTF1713
L 751	(A,105,17) Ferrite Bead	CTF1528
L 1041	(B,147,61) Inductor	LCTAW2R2J3225
L 1081	(A,68,66) Inductor	CTF1629
L 1201	(A,48,79) Choke Coil 15 uH	CTH1487
L 1202	(A,48,53) Choke Coil 15 uH	CTH1487
L 1203	(A,23,76) Choke Coil 10 uH	CTH1486
L 3501	(B,21,15) Inductor	CTF1389
L 3502	(B,24,11) Inductor	CTF1389
L 3503	(B,23,9) Inductor	CTF1389
L 5101	(A,101,41) Inductor	CTF1545
L 5119	(A,89,37) Inductor	CTF1545
L 5140	(A,110,51) Inductor	CTF1545
L 5141	(A,93,39) Inductor	CTF1545
L 5142	(B,108,45) Inductor	CTF1545
L 5143	(A,100,47) Inductor	CTF1545
L 5145	(A,111,48) Inductor	CTF1545
L 5210	(B,110,36) Inductor	CTF1545
L 5320	(A,31,49) Inductor	CTF1545
L 5380	(A,51,38) Inductor	CTF1786
L 5381	(A,74,40) Inductor	CTF1545
L 5382	(A,75,54) Inductor	CTF1748
L 5383	(B,63,55) Inductor	CTF1545
L 5384	(B,64,53) Inductor	CTF1545
L 5385	(B,71,52) Inductor	CTF1545
L 5450	(B,51,52) Inductor	CTF1545
L 5451	(B,51,53) Inductor	CTF1545
L 5452	(A,41,51) Inductor	CTF1545
L 5453	(A,75,76) Inductor	CTF1786
L 5480	(A,37,62) Inductor	CTF1545
L 5481	(B,52,68) Inductor	CTF1545
L 5482	(A,43,67) Inductor	CTF1545
L 5483	(B,49,69) Inductor	CTF1545
L 5484	(A,82,75) Inductor	CTF1786
L 5485	(A,49,77) Inductor	CTF1545
L 5486	(A,36,76) Inductor	CTF1786
L 5540	(B,64,59) Inductor	CTF1545
L 5541	(A,64,71) Inductor	CTF1545
L 5542	(A,63,72) Inductor	CTF1545
L 5600	(A,88,79) Inductor	CTF1786
L 5700	(A,11,28) Inductor	CTF1748
L 5701	(A,5,40) Inductor	CTF1545
L 5702	(A,18,39) Choke Coil 10 uH	CTH1435

Circuit Symbol and No.		Part No.
L 5703	(B,24,37) Inductor	CTF1558
X 401	(A,167,75) Oscillator 36.48 MHz	CSS1805
X 601	(A,123,41) Oscillator 3.932 16 MHz	CSS1790
X 5480	(A,70,74) Oscillator 9.597 MHz	CSS1787
X 5540	(A,77,59) Oscillator 33 MHz	CSS1792
S 3501	(A,16,90) Push Switch	CSG1155
S 3502	(A,22,94) Push Switch	CSG1155
S 3503	(A,28,55) Push Switch	CSG1155
S 3504	(A,28,78) Push Switch	CSG1155
S 3505	(A,7,78) Push Switch	CSG1155
S 3506	(A,7,55) Push Switch	CSG1155
S 3507	(A,28,66) Push Switch	CSG1155
S 3508	(A,7,66) Push Switch	CSG1155
S 3509	(A,23,48) Push Switch	CSG1155
S 3510	(A,12,48) Push Switch	CSG1155
P 101	(A,154,116) Poly Switch	MINISMDC075F/24
P 121	(A,111,113) Poly Switch	MINISMDC075F/24
P 401	(A,161,97) Surge Protector	IMSA-6802-01Y900
P 501	(A,131,68) Poly Switch	MINISMDC075F/24
⚠ P1081	(A,68,36) Fuse 2.5 A	CEK1285
⚠ P1082	(A,66,65) Fuse 1.25 A	CEK1281
⚠ P1151	(A,66,34) Fuse 1.5 A	CEK1282
BZ601	(A,159,15) Buzzer	CPV1062
CN501	(A,101,61) Connector	VKN1620
CN701	(A,24,26) Connector	VKN1612
CN801	(A,90,10) Connector	CKS5708
CN901	(A,73,50) Connector	VKN1620
CN2501	(A,75,10) Connector	CKS6025
CN2502	(A,40,19) Connector	CKS4497
CN3501	(B,26,35) Connector	VKN1612
CN3502	(A,10,28) Connector	YKS5032
CN5280	(A,121,14) Connector	CKS5561
CN5600	(A,101,74) Connector	CKS5708
CN5601	(A,120,28) Connector	CKS5708
CN5700	(A,16,15) Connector	CKS5561
JA101	(A,142,126) Pin Jack	CKB1099
JA121	(A,113,126) Pin Jack	CKB1085
JA141	(A,49,123) Plug	CKM1376
JA401	(A,163,116) Antenna Jack	YKS5041
JA2501	(A,14,11) Pin Jack	CKB1065
JA2502	(A,158,15) Connector	CKS4124
JA2503	(A,130,20) Connector(A)	CKS3414
JA3501	(A,11,13) Jack	CKN1084
⚠	Fuse(10 A)	YEK5001

RESISTORS

R 101	(A,137,119)	RS1/16SS223J
R 102	(A,144,119)	RS1/16SS223J
R 103	(A,141,119)	RS1/16SS223J
R 104	(A,148,119)	RS1/16SS223J
R 105	(A,146,115)	RS1/16SS472J
R 106	(A,144,116)	RS1/16SS472J
R 107	(A,139,115)	RS1/16SS472J
R 108	(A,137,116)	RS1/16SS472J
R 109	(A,136,116)	RS1/16SS821J
R 110	(A,143,116)	RS1/16SS821J
R 111	(A,141,116)	RS1/16SS821J
R 112	(A,149,116)	RS1/16SS821J
R 113	(A,99,120)	RS1/16SS102J
R 121	(B,113,111)	RS1/16SS223J
R 122	(B,110,111)	RS1/16SS223J
R 123	(A,115,111)	RS1/16SS750J
R 124	(A,95,109)	RS1/16SS103J
R 125	(A,98,116)	RS1/16SS104J
R 126	(A,97,115)	RS1/16SS473J
R 151	(A,8,123)	RS1/16SS473J
R 152	(A,12,125)	RS1/16SS473J
R 153	(A,7,125)	RS1/16SS473J
R 154	(A,12,127)	RS1/16SS473J
R 155	(A,13,127)	RS1/10SR472J
R 156	(A,19,125)	RS1/16SS103J
R 157	(A,19,126)	RS1/16SS153J
R 158	(A,16,114)	RS1/16SS104J
R 159	(A,17,114)	RS1/16SS473J
R 160	(A,19,114)	RS1/16SS103J
R 161	(A,18,114)	RS1/16SS103J
R 162	(A,13,119)	RS1/16SS103J
R 163	(A,16,118)	RS1/16SS473J
R 164	(A,18,119)	RS1/16SS472J
R 168	(A,17,107)	RS1/16SS104J
R 169	(A,11,118)	RS1/16SS103J
R 170	(A,10,119)	RS1/16SS103J
R 181	(A,97,106)	RS1/16SS103J
R 182	(A,92,112)	RS1/16SS473J
R 183	(B,103,112)	RS1/16SS683J
R 184	(B,97,110)	RS1/16SS152J
R 185	(A,97,107)	RS1/16SS683J
R 186	(B,97,114)	RS1/16SS101J
R 201	(B,127,85)	RAB4CQ101J
R 205	(B,119,83)	RS1/16SS562J
R 206	(B,118,82)	RS1/16SS272J
R 207	(B,120,82)	RS1/16SS272J
R 301	(B,104,75)	RAB4CQ471J
R 304	(B,100,75)	RAB4CQ471J
R 309	(B,94,100)	RAB4CQ471J
R 311	(B,87,81)	RS1/16SS75R0F
R 312	(B,87,84)	RS1/16SS75R0F
R 313	(B,102,98)	RS1/16SS471J
R 314	(B,102,99)	RS1/16SS471J
R 401	(A,167,94)	RS1/16SS221J
R 402	(A,167,87)	RS1/16SS751J
R 403	(A,146,92)	RS1/16SS152J
R 404	(A,148,87)	RS1/16SS105J
R 405	(A,150,93)	RS1/16SS105J
R 406	(A,144,84)	RS1/16SS471J
R 407	(A,145,83)	RS1/16SS330J
R 408	(A,143,79)	RS1/16SS681J
R 409	(A,145,69)	RS1/4SA5R6J
R 410	(B,149,72)	RS1/16SS102J
R 411	(A,164,77)	RS1/16SS0R0J
R 414	(A,146,87) (B,C,D,E)	RS1/16SS0R0J
R 415	(A,140,73)	RS1/4SA5R6J
R 416	(A,142,73)	RS1/4SA5R6J
R 501	(A,70,97)	RS1/16SS562J
R 502	(A,70,98)	RS1/16SS332J
R 505	(A,117,72) (A)	RS1/16SS101J
R 506	(A,117,74) (A)	RS1/16SS101J
R 507	(A,118,70) (A)	RS1/16SS102J
R 509	(B,100,61)	RS1/16SS471J

Circuit Symbol and No.		Part No.
R 510	(B,99,61)	RS1/16SS471J
R 513	(A,90,66)	RS1/16SS222J
R 601	(A,144,23)	RS1/16SS103J
R 602	(A,147,23)	RS1/16SS103J
R 603	(A,148,25)	RS1/16SS104J
R 604	(A,128,41)	RS1/16SS102J
R 605	(B,138,40)	RS1/16SS182J
R 606	(A,128,39)	RS1/16SS102J
R 607	(B,138,37)	RS1/16SS182J
R 608	(A,128,37)	RS1/16SS221J
R 609	(A,128,38)	RS1/16SS221J
R 612	(B,139,35)	RS1/16SS473J
R 614	(A,139,23)	RS1/16SS472J
R 615	(A,140,23)	RS1/16SS472J
R 616	(A,130,24)	RS1/16SS102J
R 617	(A,132,24)	RS1/16SS104J
R 618	(A,141,26)	RS1/16SS473J
R 619	(A,148,23)	RS1/16SS222J
R 620	(A,145,23)	RS1/16SS222J
R 621	(A,146,23)	RS1/16SS222J
R 622	(A,150,53)	RS1/16SS104J
R 625	(A,144,53) (B,C,E)	RS1/16SS473J
R 626	(A,145,53) (D)	RS1/16SS473J
R 627	(A,147,53) (B,D,E)	RS1/16SS473J
R 628	(A,146,53) (C)	RS1/16SS473J
R 635	(A,116,26)	RS1/16SS104J
R 637	(A,156,32)	RS1/16SS102J
R 638	(B,136,35)	RS1/16SS104J
R 640	(B,136,34)	RS1/16SS104J
R 643	(B,133,32)	RS1/16SS473J
R 644	(B,129,40)	RS1/16SS102J
R 645	(B,138,41)	RS1/16SS473J
R 647	(B,133,53)	RS1/16SS472J
R 648	(B,132,53)	RS1/16SS472J
R 649	(A,132,53)	RS1/16SS471J
R 650	(A,133,53)	RS1/16SS471J
R 651	(B,132,25)	RAB4CQ473J
R 655	(B,131,45)	RS1/16SS104J
R 656	(B,143,31)	RS1/16SS473J
R 657	(B,144,31)	RS1/16SS473J
R 658	(B,132,52)	RS1/16SS104J
R 659	(A,120,60)	RS1/16SS473J
R 660	(A,121,60)	RS1/16SS473J
R 661	(B,102,31)	RS1/16SS473J
R 663	(B,136,33) (A)	RS1/16SS472J
R 664	(B,135,57)	RS1/16SS154J
R 665	(B,136,57)	RS1/16SS154J
R 668	(A,135,53)	RS1/16SS682J
R 669	(A,136,53)	RS1/16SS472J
R 671	(A,143,53)	RS1/16SS473J
R 673	(A,138,53)	RS1/16SS101J
R 674	(A,151,24)	RS1/16SS101J
R 675	(A,137,24)	RS1/16SS221J
R 676	(A,141,21)	RS1/16SS221J
R 677	(A,124,28)	RS1/16SS221J
R 680	(A,149,24)	RS1/16SS751J
R 681	(B,129,47)	RS1/16SS222J
R 682	(A,158,47)	RS1/16SS223J
R 683	(B,143,46)	RS1/16SS103J
R 684	(B,138,46)	RS1/16SS104J

Circuit Symbol and No.		Part No.
R 685	(A,148,53) (B,C,D)	RS1/16SS473J
R 686	(A,149,53) (E)	RS1/16SS473J
R 705	(A,25,32)	RS1/16SS472J
R 708	(B,27,39)	RS1/16SS0R0J
R 709	(B,27,38)	RS1/16SS0R0J
R 751	(B,113,14)	RS1/16SS102J
R 756	(B,111,11)	RS1/16SS102J
R 757	(A,113,15)	RS1/16SS105J
R 758	(A,121,15)	RS1/16SS105J
R 760	(A,108,16)	RS1/16SS103J
R 761	(A,116,16)	RS1/16SS103J
R 762	(A,108,14)	RS1/16SS103J
R 763	(A,116,14)	RS1/16SS103J
R 851	(A,75,71)	RS1/16SS103J
R 852	(B,78,79)	RS1/16SS102J
R 853	(A,77,71)	RS1/16SS101J
R 854	(A,78,71)	RS1/16SS101J
R 858	(A,73,71)	RS1/16SS103J
R 859	(A,74,71)	RS1/16SS103J
R 908	(A,85,48)	RS1/16SS102J
R 909	(A,78,42)	RS1/16SS471J
R 910	(A,78,43)	RS1/16SS102J
R 911	(A,78,44)	RS1/16SS221J
R 912	(A,78,45)	RS1/16SS221J
R 913	(A,78,46)	RS1/16SS221J
R 914	(A,78,47)	RS1/16SS221J
R 915	(A,83,51)	RS1/16SS472J
R 916	(A,83,49)	RS1/16SS472J
R 1041	(B,158,48)	RS1/16SS102J
R 1061	(A,56,25)	RS1/16SS823J
R 1062	(A,45,26)	RS1/16SS823J
R 1201	(B,34,73) 0.012 ohm	CCN1321
R 1203	(B,39,77)	RS1/16SS273J
R 1204	(B,41,77)	RS1/16SS511J
R 1205	(B,43,75)	RS1/16SS4301D
R 1206	(B,44,74)	RS1/16SS3601D
R 1207	(B,42,75)	RS1/16SS3302D
R 1211	(B,32,59) 0.012 ohm	CCN1321
R 1213	(B,38,54)	RS1/16SS333J
R 1214	(B,40,54)	RS1/16SS511J
R 1215	(B,41,56)	RS1/16SS2702D
R 1216	(B,42,56)	RS1/16SS1101D
R 1217	(B,43,56)	RS1/16SS2701D
R 1221	(B,42,73)	RS1/16SS103J
R 1222	(B,44,71)	RS1/16SS204J
R 1223	(B,43,58)	RS1/16SS224J
R 1227	(B,55,67)	RS1/16SS394J
R 2501	(A,143,12)	RS1/16SS102J
R 2502	(B,24,6)	RS1/16SS750J
R 2503	(B,45,10)	RAB4CQ750J
R 2504	(A,143,15)	RS1/16SS102J
R 2505	(B,118,20) (A)	RS1/16SS150J
R 2506	(B,119,21) (A)	RS1/16SS470J
R 2509	(A,38,9)	RS1/16SS102J
R 2510	(A,39,9)	RS1/16SS102J
R 2512	(A,34,10)	RS1/16SS471J
R 2513	(A,35,10)	RS1/16SS471J
R 2516	(B,116,10) (A)	RS1/16SS102J
R 2517	(B,116,12) (A)	RS1/16SS181J
R 2518	(B,116,11) (A)	RS1/16SS223J

Circuit Symbol and No.		Part No.	Circuit Symbol and No.		Part No.
R 2519	(B,114,8) (A)	RS1/16SS102J	R 5223	(A,124,77)	RS1/16SS473J
R 2520	(B,114,7) (A)	RS1/16SS223J	R 5224	(A,121,76)	RS1/16SS104J
R 2521	(B,114,6) (A)	RS1/16SS181J	R 5320	(A,30,47)	RS1/16SS103J
R 3501	(B,26,7)	RS1/16SS223J	R 5321	(B,32,47)	RS1/16SS180J
R 3502	(B,23,13)	RS1/16SS750J	R 5322	(B,31,54)	RS1/16SS180J
R 3503	(B,26,11)	RS1/16SS223J	R 5323	(B,28,48)	RS1/16SS180J
R 3510	(A,17,80)	RS1/16SS470J	R 5324	(B,32,51)	RS1/16SS180J
R 3511	(A,23,89)	RS1/16SS182J	R 5325	(B,30,48)	RS1/16SS180J
R 3512	(A,24,82)	RS1/16SS222J	R 5326	(B,31,51)	RS1/16SS180J
R 3513	(A,22,76)	RS1/16SS472J	R 5327	(B,32,49)	RS1/16SS180J
R 3514	(A,12,72)	RS1/16SS182J	R 5328	(B,31,56)	RS1/16SS180J
R 3515	(A,14,74)	RS1/16SS222J	R 5329	(A,22,71)	RS1/16SS220J
R 3516	(A,12,75)	RS1/16SS472J	R 5330	(B,30,50)	RS1/16SS180J
R 3517	(A,11,74)	RS1/16SS123J	R 5331	(B,25,54)	RS1/16SS180J
R 3518	(A,12,56)	RS1/16SS181J	R 5332	(A,21,71)	RS1/16SS102J
R 3519	(A,12,57)	RS1/16SS151J	R 5333	(B,31,52)	RS1/16SS180J
R 3523	(A,18,55)	RS1/16SS271J	R 5334	(B,20,54)	RS1/16SS180J
R 3524	(A,18,54)	RS1/16SS271J	R 5335	(B,28,53)	RS1/16SS180J
R 3528	(A,22,61)	RS1/16SS151J	R 5336	(B,23,54)	RS1/16SS180J
R 3529	(A,22,62)	RS1/16SS221J	R 5337	(B,28,54)	RS1/16SS180J
R 5100	(A,103,39)	RS1/16SS4702D	R 5338	(B,20,55)	RS1/16SS180J
R 5101	(A,105,40)	RS1/16SS5102D	R 5339	(B,17,55)	RS1/16SS470J
R 5102	(A,103,44)	RS1/16SS104J	R 5340	(B,17,56)	RS1/16SS750J
R 5103	(A,92,42)	RS1/16SS332J	R 5381	(A,76,49)	RS1/16SS473J
R 5104	(A,90,43)	RS1/16SS472J	R 5383	(A,72,48)	RAB4CQ101J
R 5112	(B,102,34)	RS1/16SS0R0J	R 5384	(A,82,55)	RS1/16SS101J
R 5113	(A,104,36)	RS1/16SS0R0J	R 5385	(A,77,54)	RS1/16SS271J
R 5114	(B,99,34)	RS1/16SS0R0J	R 5391	(A,78,50)	RS1/16SS271J
R 5117	(A,106,35)	RS1/16SS75R0F	R 5392	(A,71,50)	RS1/16SS271J
R 5120	(A,90,33)	RS1/16SS561J	R 5393	(A,73,50)	RS1/16SS0R0J
R 5121	(A,89,36)	RS1/16SS472J	R 5395	(A,71,52)	RS1/16SS103J
R 5122	(A,90,36)	RS1/16SS472J	R 5397	(A,58,42)	RS1/16SS1002D
R 5123	(A,87,36)	RS1/16SS471J	R 5399	(A,90,53)	RS1/16SS103J
R 5140	(A,106,48)	RS1/16SS101J	R 5400	(A,90,54)	RS1/16SS103J
R 5141	(A,107,48)	RS1/16SS472J	R 5451	(A,48,42)	RS1/16SS473J
R 5142	(A,108,45)	RS1/16SS472J	R 5452	(A,36,48)	RAB4CQ103J
R 5143	(A,108,46)	RS1/16SS472J	R 5453	(A,40,48)	RAB4CQ103J
R 5144	(A,108,44)	RS1/16SS273J	R 5454	(A,47,48)	RS1/16SS103J
R 5145	(A,108,43)	RS1/16SS472J	R 5480	(A,54,75)	RS1/16SS103J
R 5146	(A,108,49)	RS1/16SS472J	R 5482	(A,66,76)	RS1/16SS105J
R 5147	(A,113,41)	RS1/16SS472J	R 5483	(A,68,77)	RS1/16SS332J
R 5148	(A,108,42)	RS1/16SS273J	R 5484	(A,61,78)	RS1/16SS220J
R 5149	(A,111,40)	RS1/16SS101J	R 5486	(A,54,77)	RS1/16SS102J
R 5150	(A,111,53)	RS1/16SS471J	R 5540	(A,72,61)	RS1/16SS471J
R 5151	(A,93,40)	RS1/16SS471J	R 5542	(A,81,60)	RS1/16SS103J
R 5152	(A,118,41)	RS1/16SS472J	R 5543	(A,80,63)	RS1/16SS271J
R 5153	(A,117,41)	RS1/16SS101J	R 5544	(A,85,61)	RS1/16SS271J
R 5154	(A,119,48)	RS1/16SS472J	R 5546	(A,85,63)	RAB4CQ101J
R 5155	(A,121,42)	RS1/16SS472J	R 5547	(A,76,66)	RAB4CQ101J
R 5157	(A,119,45)	RAB4CQ472J	R 5550	(A,89,65)	RAB4CQ101J
R 5160	(A,121,47)	RS1/16SS472J	R 5551	(A,77,70)	RS1/16SS101J
R 5161	(A,117,49)	RS1/16SS101J	R 5552	(A,75,70)	RS1/16SS101J
R 5163	(A,102,49)	RS1/16SS471J	R 5553	(A,77,72)	RAB4CQ101J
R 5209	(B,109,36)	RS1/16SS472J	R 5700	(A,5,23)	RS1/16SS0R0J
R 5214	(A,117,63)	RS1/16SS472J	R 5701	(A,7,32)	RS1/16SS103J
R 5218	(A,117,78)	RS1/10SR561J	R 5702	(A,6,24)	RS1/16SS273J
R 5219	(A,119,77)	RS1/10SR680J	R 5703	(A,5,38)	RS1/16SS473J
R 5220	(A,123,75)	RS1/16SS330J	R 5704	(A,31,38)	RS1/16SS3301F
R 5221	(A,122,80)	RS1/16SS101J	R 5705	(A,8,32)	RS1/16SS102J
R 5222	(A,129,61)	RS1/16SS562J	R 5706	(A,29,22)	RS1/16SS472J

Circuit Symbol and No.		Part No.
R 5707	(A,12,27)	RS1/16SS152J
R 5708	(A,10,26)	RS1/16SS152J
R 5709	(A,9,52)	RS1/16SS562J
R 5710	(A,8,35)	RS1/16SS562J
R 5711	(A,29,23)	RS1/16SS103J
R 5712	(A,27,23)	RS1/16SS472J
R 5713	(A,28,20)	RS1/16SS332J
R 5714	(A,7,21)	RS1/16SS101J
R 5715	(A,10,21)	RS1/16SS221J
R 5716	(A,9,20)	RS1/10SR1203D
R 5718	(A,15,30)	RS1/16SS223J
R 5719	(A,17,30)	RS1/16SS101J
R 5720	(A,20,23)	RS1/10SR6202D
R 5721	(A,22,22)	RS1/10SR4700D
R 5724	(A,23,26)	RS1/10SR1103D
R 5725	(A,20,25)	RS1/10SR8201D
R 5726	(A,22,34)	RS1/10SR1203D
R 5727	(A,22,32)	RS1/10SR1002F

CAPACITORS

C 101	(A,138,113)	CKSQYB475K6R3
C 102	(A,142,113)	CKSQYB475K6R3
C 103	(A,140,113)	CKSQYB475K6R3
C 104	(A,144,113)	CKSQYB475K6R3
C 107	(A,104,111)	CEVW101M16
C 121	(A,94,111) 10 uF	DCH1201
C 122	(B,125,116)	CKSRYB104K50
C 123	(B,113,115)	CKSRYB104K50
C 124	(B,113,116)	CKSRYB104K50
C 141	(A,47,101)	CEAT332M16(P35)
C 153	(A,22,125)	CKSRYB104K50
C 154	(A,22,121)	CKSRYB104K50
C 156	(A,14,111)	CKSRYB104K50
C 158	(A,9,117)	CKSRYB105K10
C 181	(B,84,111)	CKSRYB474K10
C 182	(B,85,111)	CKSRYB474K10
C 183	(B,89,111)	CKSRYB474K10
C 184	(B,88,111)	CKSRYB474K10
C 185	(B,84,113)	CKSRYB474K10
C 186	(B,85,113)	CKSRYB474K10
C 187	(B,89,113)	CKSRYB474K10
C 188	(B,88,113)	CKSRYB474K10
C 189	(B,94,112) 10 uF	CCG1236
C 190	(B,92,108)	CKSQYB225K10
C 191	(B,92,111)	CKSQYB225K10
C 192	(B,99,110)	CKSQYB475K6R3
C 193	(A,79,109)	CKSQYB104K50
C 194	(A,67,120)	CKSRYB104K50
C 201	(B,115,85) (A)	CKSRYB105K10
C 202	(B,116,98) (A)	CKSRYB105K10
C 203	(B,114,85) (A)	CKSRYB105K10
C 204	(B,114,98) (A)	CKSRYB105K10
C 205	(B,117,85)	CKSRYB105K10
C 206	(B,117,98)	CKSRYB105K10
C 207	(B,125,100) 10 uF	CCG1192
C 209	(A,128,100) 10 uF	CCG1192
C 211	(B,129,100)	CKSQYB225K10
C 212	(B,121,101) 10 uF	CCG1192
C 213	(B,122,85)	CKSRYB105K10
C 214	(B,120,98)	CKSRYB105K10

Circuit Symbol and No.		Part No.
C 221	(B,118,85)	CKSRYB105K10
C 222	(B,120,85)	CKSRYB105K10
C 301	(B,105,89)	CKSRYB105K10
C 302	(B,105,88)	CKSRYB105K10
C 303	(B,105,85)	CKSRYB105K10
C 304	(B,105,82)	CKSRYB105K10
C 305	(B,105,83)	CKSRYB105K10
C 306	(B,100,78)	CKSRYB105K10
C 307	(B,102,78)	CKSRYB105K10
C 308	(B,99,78)	CKSRYB105K10
C 309	(B,97,78)	CKSSYB104K16
C 310	(B,95,78)	CKSSYB104K16
C 311	(B,96,78)	CKSSYB104K16
C 312	(B,105,86)	CKSRYB105K10
C 314	(B,104,80)	CKSSYB104K10
C 315	(B,105,91)	CKSSYB104K10
C 316	(A,102,86) Capacitor	CEHVW220M16
C 319	(B,96,96)	CKSRYB105K10
C 320	(B,94,96)	CKSRYB105K10
C 321	(B,93,96)	CKSRYB105K10
C 322	(B,91,96)	CKSRYB105K10
C 325	(B,90,96)	CKSRYB105K10
C 328	(B,99,96)	CKSRYB105K10
C 329	(B,101,96)	CKSRYB105K10
C 332	(A,102,80) Capacitor	CEHVW220M16
C 334	(A,91,87) Capacitor	CEHVW220M16
C 335	(B,86,90)	CKSSYB104K10
C 336	(B,88,96)	CKSRYB105K10
C 337	(B,87,88)	CKSRYB104K16
C 338	(B,86,85)	CKSRYB104K16
C 401	(A,162,94)	CCSSCH330J50
C 402	(A,163,92)	CCSSCH6R0D50
C 403	(A,166,92)	CKSSYB103K16
C 404	(A,156,88)	CKSSYB104K10
C 405	(A,153,88)	CKSSYB104K10
C 406	(A,166,89)	CKSSYB103K16
C 407	(A,154,88)	CKSSYB104K10
C 408	(A,148,93) (A)	CCSSCJ3R0C50
C 409	(A,167,89)	CKSSYB103K16
C 410	(A,154,86)	CKSSYB103K16
C 411	(A,151,88)	CKSSYB103K16
C 412	(A,150,88) 10 uF	CCG1192
C 413	(A,158,87)	CKSSYB103K16
C 414	(A,158,90)	CKSRYB105K10
C 415	(A,161,96) (A)	CCSSCK2R0C50
C 416	(A,150,92)	CKSSYB103K16
C 417	(A,142,77)	CKSRYB104K16
C 418	(A,148,88)	CKSSYB223K16
C 419	(A,159,87)	CKSSYB223K16
C 421	(A,147,73)	CKSSYB102K50
C 422	(A,144,86) 10 uF	CCG1192
C 423	(A,146,84)	CKSSYB104K10
C 424	(A,143,83)	CCSSCH101J50
C 425	(A,148,85)	CKSSYB104K10
C 426	(A,142,83)	CKSSYB103K16
C 427	(A,143,78)	CCSSCH820J50
C 428	(A,145,73) 2.2 uF	CCG1205
C 431	(A,147,66)	CKSSYB104K10
C 432	(A,149,67)	CKSSYB104K10
C 433	(A,150,67)	CKSSYB104K10

Circuit Symbol and No.		Part No.
C 434	(A,153,71)	CKSSYB104K10
C 435	(A,158,71)	CKSSYB104K10
C 436	(A,158,69) 2.2 uF	CCG1205
C 437	(A,161,69)	CKSSYB104K10
C 439	(A,162,70) 2.2 uF	CCG1205
C 441	(A,167,72)	CCSSCH100D50
C 442	(A,167,77)	CCSSCH100D50
C 443	(A,164,78)	CKSSYB104K10
C 444	(A,167,80)	CKSSYB472K25
C 445	(A,167,79)	CKSSYB472K25
C 446	(A,164,81)	CKSRYB105K10
C 447	(A,165,83)	CKSSYB224K6R3
C 448	(A,165,85)	CKSRYB224K16
C 449	(A,162,84)	CKSSYB223K16
C 450	(A,155,88)	CKSSYB223K16
C 453	(A,147,78)	CKSSYB104K10
C 457	(B,168,80) (A)	CCSSCH100D50
C 458	(B,164,80) (A)	CCSSCH100D50
C 503	(A,117,70) (A)	CKSSYB104K10
C 603	(A,126,41)	CCSSCH150J50
C 604	(A,127,43)	CCSSCH150J50
C 605	(B,131,42)	CKSSYB102K50
C 608	(A,115,24)	CKSRYB105K10
C 609	(A,128,43)	CKSSYB104K10
C 610	(B,130,43)	CKSQYB475K6R3
C 611	(A,128,31)	CKSSYB104K10
C 612	(A,128,47)	CKSSYB104K10
C 613	(A,155,45)	CKSSYB104K10
C 614	(B,134,57)	CKSSYB104K10
C 615	(A,139,53)	CKSSYB103K16
C 616	(A,113,43)	CKSSYB104K10
C 618	(A,137,25)	CCSSCH101J50
C 619	(A,141,20)	CCSSCH101J50
C 620	(A,122,28)	CCSSCH101J50
C 701	(A,21,22)	CKSQYB475K6R3
C 702	(A,21,14)	CEVW101M16
C 706	(A,38,23)	CKSSYB104K10
C 707	(A,37,22)	CKSRYB105K10
C 708	(A,25,21)	CKSRYB105K10
C 711	(A,47,23)	CKSRYB105K10
C 751	(B,114,14)	CKSSYB473K16
C 752	(B,112,11)	CKSSYB473K16
C 753	(A,114,15)	CKSSYB102K50
C 754	(A,122,15)	CKSSYB102K50
C 755	(A,107,16)	CKSSYB104K10
C 811	(A,82,34) Capacitor	CEVW220M16
C 812	(A,88,34) Capacitor	CEVW220M16
C 813	(A,94,34) Capacitor	CEVW220M16
C 851	(A,76,79)	CKSSYB104K10
C 852	(B,78,76)	CKSSYB104K10
C 901	(A,77,40)	CKSSYB104K10
C 1001	(A,106,37) Capacitor	CEVW470M16
C 1002	(A,17,77)	CKSSYB104K10
C 1003	(A,8,77)	CKSRYB104K50
C 1004	(A,12,69)	CEAT102M16(P35)
C 1021	(A,9,107)	CEVW101M16
C 1022	(B,16,91)	CKSYB105K35
C 1044	(A,164,58) Capacitor	CEVW221M10
C 1045	(B,156,54)	CKSQYB225K10
C 1046	(B,157,52)	CKSRYB474K10

Circuit Symbol and No.		Part No.
C 1061	(A,46,29)	CKSQYB475K6R3
C 1062	(A,56,28) 4.7 uF	CCG1201
C 1063	(A,46,26)	CKSRYB105K10
C 1081	(A,68,65)	CKSSYB104K10
C 1151	(B,63,21)	CKSRYB104K16
C 1201	(A,12,56)	CEAT332M16(P35)
C 1202	(A,21,65) 10 uF	CCG1236
C 1203	(A,23,65)	CKSRYB102K50
C 1204	(B,32,65) 10 uF	CCG1236
C 1205	(A,53,70)	CKSSYB102K50
C 1206	(B,32,67) 10 uF	CCG1236
C 1208	(B,32,63) 10 uF	CCG1236
C 1210	(B,31,61)	CKSRYB102K50
C 1211	(A,46,70) 47 uF	CCG1233
C 1212	(A,51,70) 10 uF	CCG1236
C 1213	(A,49,70) 10 uF	CCG1236
C 1214	(A,54,70)	CKSSYB104K16
C 1215	(A,58,76) (B,C,D,E)	CKSSYB473K16
C 1216	(B,38,73)	CKSSYB104K16
C 1217	(B,38,75)	CKSRYB822K50
C 1218	(B,39,75)	CCSRCH150J50
C 1219	(B,41,75)	CCSRCH331J50
C 1220	(B,31,69)	CKSRYB103K50
C 1221	(A,46,62) 47 uF	CCG1256
C 1222	(A,51,62) 10 uF	DCH1165
C 1223	(A,49,62) 10 uF	DCH1165
C 1224	(A,54,63)	CKSSYB104K16
C 1225	(A,53,63)	CKSSYB102K50
C 1226	(B,36,58)	CKSSYB104K16
C 1227	(B,38,56)	CKSRYB822K50
C 1228	(B,38,59)	CCSRCH150J50
C 1229	(B,40,56)	CCSRCH331J50
C 1230	(B,41,73)	CKSSYB104K10
C 1231	(B,41,59)	CKSRYB105K10
C 1232	(B,44,58)	CKSSYB104K10
C 1233	(A,57,82) (A)	CKSSYB473K16
C 2501	(B,22,7)	CKSRYB104K50
C 2502	(B,120,16) (A)	CKSRYB104K50
C 2503	(B,52,23)	CKSRYB104K50
C 2504	(B,64,10) 10 uF	DCH1201
C 2505	(B,64,6) 10 uF	DCH1201
C 2506	(B,71,9) 10 uF	DCH1201
C 2507	(B,75,9) 10 uF	DCH1201
C 2511	(B,73,9) 10 uF	DCH1201
C 2512	(B,149,16)	CKSRYB104K50
C 2513	(B,149,12)	CKSRYB104K50
C 3502	(B,16,91) 10 uF	DCH1201
C 3503	(A,17,68)	CKSRYB104K16
C 3504	(A,16,68)	CKSRYB104K16
C 3505	(A,19,68)	CKSRYB104K16
C 3506	(B,18,19)	CKSRYB104K50
C 3508	(B,27,17) Capacitor	CEVW220M16
C 3512	(B,9,37)	CKSQYB475K6R3
C 5101	(A,104,40)	CKSSYB104K10
C 5102	(A,103,40)	CKSSYB104K10
C 5121	(A,92,34) 10 uF	DCH1201
C 5122	(A,86,36)	CKSSYB104K10
C 5124	(B,81,44) 10 uF	DCH1201
C 5140	(A,109,49)	CCSSCH6R0D50
C 5141	(A,109,42)	CCSSCH6R0D50

Circuit Symbol and No.		Part No.
C 5142	(A,113,48)	CKSSYB104K10
C 5143	(A,111,51)	CKSSYB104K10
C 5144	(A,95,39)	CKSSYB104K10
C 5145	(A,119,41)	CCSSCH6R0D50
C 5146	(A,118,48)	CCSSCH6R0D50
C 5148	(A,101,48)	CKSSYB104K10
C 5149	(B,106,44)	CKSSYB104K10
C 5150	(B,107,44)	CKSSYB105K6R3
C 5170	(A,87,47) 4.7 uF	CCG1201
C 5171	(A,84,38) 4.7 uF	CCG1201
C 5172	(A,86,43) 4.7 uF	CCG1201
C 5210	(B,109,39)	CKSRYB105K10
C 5211	(B,104,41)	CKSRYB105K10
C 5212	(A,127,64)	CKSQYB475K6R3
C 5213	(A,125,63)	CKSSYB104K10
C 5214	(A,122,68) 10 uF	DCH1201
C 5215	(A,118,65)	CKSSYB103K16
C 5216	(A,125,65)	CKSSYB104K10
C 5320	(A,22,45)	CKSQYB475K6R3
C 5321	(A,30,46)	CKSSYB104K10
C 5322	(A,21,47)	CKSSYB104K10
C 5380	(A,78,48)	CKSSYB104K10
C 5381	(A,72,43)	CSZS100M10
C 5382	(A,55,38)	CSZS100M10
C 5383	(A,59,40)	CKSSYB104K10
C 5384	(A,60,40)	CKSSYB104K10
C 5385	(A,63,39)	CKSSYB104K10
C 5386	(A,64,40)	CKSSYB104K10
C 5387	(A,67,40)	CKSSYB104K10
C 5388	(A,68,40)	CKSSYB104K10
C 5389	(A,61,44)	CKSSYB104K10
C 5390	(A,70,45)	CKSSYB104K10
C 5393	(A,55,40)	CKSSYB102K50
C 5394	(A,63,41)	CKSSYB104K10
C 5395	(A,66,44)	CKSSYB104K10
C 5396	(A,60,42)	CKSSYB104K10
C 5398	(B,64,55)	CKSSYB104K10
C 5399	(A,71,54)	CKSSYB104K10
C 5400	(A,68,46)	CKSSYB221K50
C 5401	(A,57,41)	CCSSCH330J50
C 5402	(A,62,43)	CKSSYB104K10
C 5403	(A,68,52)	CKSSYB104K10
C 5404	(A,65,44)	CKSSYB104K10
C 5450	(A,51,44)	CKSSYB104K10
C 5451	(B,51,50)	CKSSYB104K10
C 5452	(A,49,48)	CKSSYB104K10
C 5453	(A,42,51)	CKSSYB104K10
C 5454	(A,34,65)	CSZSR470M10
C 5480	(B,55,67)	CKSRYB105K10
C 5481	(A,39,66)	CKSRYB105K10
C 5482	(A,43,66)	CKSSYB104K10
C 5483	(A,38,64)	CKSSYB103K16
C 5484	(A,80,76)	CKSRYB105K10
C 5485	(A,52,73)	CKSSYB104K10
C 5486	(A,40,58)	CKSSYB104K10
C 5487	(A,40,61)	CKSSYB104K10
C 5488	(A,41,63)	CKSSYB104K10
C 5489	(A,43,64)	CKSSYB104K10
C 5490	(A,46,71)	CKSSYB104K10
C 5491	(A,50,70)	CKSSYB104K10

Circuit Symbol and No.		Part No.
C 5492	(A,36,56)	CSZSR470M10
C 5493	(A,69,72)	CCSSCH180J50
C 5494	(A,40,73)	CSZSR470M10
C 5495	(A,70,77)	CCSSCH180J50
C 5497	(A,63,75)	CKSSYB104K10
C 5540	(A,75,57)	CCSSCH9R0D50
C 5541	(A,75,60)	CCSSCH120J50
C 5542	(A,69,63)	CKSSYB104K10
C 5543	(B,63,61)	CKSSYB104K10
C 5544	(A,69,66)	CKSSYB104K10
C 5545	(A,63,71)	CKSSYB104K10
C 5546	(A,61,72)	CKSSYB104K10
C 5547	(A,61,73)	CKSSYB104K10
C 5548	(A,56,76)	CKSSYB102K50
C 5600	(A,87,74)	CKSSYB104K10
C 5601	(A,87,76) 10 uF	DCH1201
C 5700	(A,8,29)	CKSSYB104K10
C 5701	(A,9,54)	CKSRYB104K16
C 5703	(A,10,24)	CKSSYB104K10
C 5704	(A,6,49) 10 uF	CCG1236
C 5705	(A,9,18)	CKSRYB105K10
C 5706	(A,8,45) 10 uF	CCG1236
C 5707	(A,12,30)	CKSRYB105K10
C 5708	(A,8,43) 10 uF	CCG1236
C 5709	(A,14,30)	CKSRYB105K10
C 5710	(A,9,40) 10 uF	CCG1236
C 5711	(A,13,33)	CKSSYB104K16
C 5712	(A,20,21)	CKSRYB474K10
C 5713	(A,24,30) 10 uF	CCG1236
C 5714	(A,24,27) 10 uF	CCG1236
C 5716	(A,20,31)	CKSSYB104K10

C

Unit Number : YWX5019
Unit Name : DVD Core Unit

MISCELLANEOUS

IC 1002	(B,21,41)	Regulator IC	S-1133B50-U5
IC 1003	(B,35,23)	IC	S-1200B50-M5
IC 1004	(B,25,11)	IC	NJM2885DL1-33
IC 1005	(B,19,21)	IC	R1232D121B
IC 1201	(A,15,29)	IC	BD8231EFV
*IC1401	(B,63,36)	Flash ROM Unit	CWW3500
*IC1402	(B,50,36)	Flash ROM Unit	CWW3501
IC 1480	(B,59,13)	SDRAM(64M)	IS42S16400F-7TL
IC 1501	(A,60,20)	IC	MN2DS0018MA
IC 1801	(B,37,16)	D/A Converter	PCM1753DBQ
IC 1951	(B,76,32)	Logic IC	TC7SZU04FU
Q 1101	(A,35,39)	Transistor	2SC4081
Q 1102	(A,46,42)	Transistor	2SC4081
Q 1103	(A,38,45)	Transistor	2SB1132
Q 1104	(A,45,49)	Transistor	2SB1132
L 1003	(B,22,26)	Inductor	CTF1677
L 1004	(B,14,17)	Inductor	CTF1678
L 1512	(A,57,5)	Inductor	CTF1743
L 1902	(B,5,8)	Inductor	CTF1487
L 1903	(B,12,11)	Inductor	CTF1558
L 1904	(B,46,19)	Inductor	CTF1473

Circuit Symbol and No.		Part No.
X 1501	(B,43,7) Oscillator 27.000 MHz	CSS1768
X 1950	(B,76,35) Oscillator 48.000 MHz	CSS1760
EF1001	(B,5,12) Chip EMI Filter	DTF1106
EF1002	(B,11,13) Chip EMI Filter	DTL1106

RESISTORS

R 1002	(B,18,27)	RS1/16SS101J
R 1004	(A,29,27)	RS1/16SS4702D
R 1007	(A,29,26)	RS1/16SS6801D
R 1019	(B,15,9)	RS1/16SS101J
R 1021	(A,27,15)	RS1/16SS0R0J
R 1025	(B,19,11)	RS1/16SS101J
R 1027	(A,27,19)	RS1/16SS101J
R 1101	(A,35,36)	RS1/16SS104J
R 1102	(A,43,42)	RS1/16SS104J
R 1103	(A,34,41)	RS1/16SS391J
R 1104	(A,36,36)	RS1/16SS511J
R 1105	(A,42,44)	RS1/16SS391J
R 1106	(A,45,39)	RS1/16SS561J
R 1109	(A,34,43)	RS1/16SS3R3J
R 1110	(A,41,43)	RS1/16SS3R3J
R 1111	(A,38,39)	RS1/10SR1R5J
R 1112	(A,38,38)	RS1/10SR1R5J
R 1113	(A,49,46)	RS1/10SR1R5J
R 1114	(A,48,46)	RS1/10SR1R5J
R 1115	(A,41,38)	RS1/10SR1R5J
R 1116	(A,41,39)	RS1/10SR1R5J
R 1117	(A,48,43)	RS1/10SR1R5J
R 1118	(A,49,43)	RS1/10SR1R5J
R 1201	(A,16,36)	RS1/16SS221J
R 1202	(A,17,35)	RS1/16SS221J
R 1203	(A,22,35)	RS1/16SS103J
R 1204	(A,19,35)	RS1/16SS153J
R 1212	(A,7,36)	RS1/16SS271J
R 1213	(B,8,29)	RS1/16SS1R0J
R 1214	(B,8,27)	RS1/16SS1R0J
R 1215	(B,8,28)	RS1/16SS1R0J
R 1216	(B,8,24)	RS1/16SS1R0J
R 1217	(B,8,25)	RS1/16SS1R0J
R 1218	(B,8,26)	RS1/16SS1R0J
R 1222	(B,26,39)	RS1/16SS271J
R 1300	(B,39,24)	RS1/16SS0R0J
R 1401	(B,63,49)	RS1/16SS221J
R 1402	(B,70,27)	RS1/16SS104J
R 1405	(B,56,24)	RS1/16SS104J
R 1406	(B,54,25)	RS1/16SS104J
R 1480	(B,52,21)	RAB4CQ560J
R 1481	(B,56,21)	RAB4CQ560J
R 1482	(B,61,21)	RAB4CQ560J
R 1483	(B,64,21)	RAB4CQ560J
R 1484	(B,67,21)	RAB4CQ560J
R 1485	(B,50,5)	RAB4CQ560J
R 1486	(B,55,5)	RAB4CQ560J
R 1487	(B,64,5)	RAB4CQ560J
R 1488	(B,68,5)	RAB4CQ560J
R 1489	(B,59,5)	RS1/16SS560J
R 1490	(B,50,21)	RS1/16SS560J
R 1501	(B,46,7)	RS1/16SS122J
R 1503	(B,45,8)	RS1/16SS105J
R 1504	(B,45,13)	RS1/16SS120J
R 1505	(A,43,13)	RS1/16SS101J
R 1506	(A,37,14)	RS1/16SS101J
R 1507	(A,44,14)	RS1/16SS101J
R 1508	(A,43,15)	RS1/16SS221J
R 1509	(A,63,35)	RS1/16SS102J
R 1510	(A,64,35)	RS1/16SS102J
R 1511	(B,46,13)	RS1/16S0R0J
R 1512	(A,58,5)	RS1/16SS101J
R 1513	(A,66,35)	RS1/16SS103J
R 1514	(A,68,35)	RS1/16SS183J
R 1516	(A,65,36)	RS1/16SS103J
R 1517	(A,76,16)	RS1/16SS103J
R 1518	(A,74,24)	RS1/16SS103J
R 1519	(A,70,34)	RS1/16SS102J
R 1522	(A,65,38)	RS1/16SS104J
R 1523	(A,66,37)	RS1/16SS221J
R 1524	(A,64,37)	RS1/16SS472J
R 1525	(A,71,34)	RS1/16SS103J
R 1526	(A,67,34)	RS1/16SS103J
R 1527	(B,77,29)	RS1/16SS682J
R 1528	(A,78,20)	RS1/16SS103J
R 1529	(A,76,18)	RS1/16SS103J
R 1530	(A,77,20)	RS1/16SS103J
R 1531	(A,75,24)	RS1/16SS103J
R 1532	(B,70,33)	RS1/16SS101J
R 1534	(A,78,30)	RS1/16SS221J
R 1535	(B,70,34)	RS1/16SS104J
R 1536	(A,78,31)	RS1/16SS104J
R 1537	(A,73,35)	RS1/16SS104J
R 1538	(A,61,4)	RS1/16SS104J
R 1539	(A,77,23)	RS1/16SS104J
R 1540	(A,73,32)	RS1/16SS221J
R 1541	(A,75,32)	RS1/16SS221J
R 1542	(A,77,29)	RS1/16SS103J
R 1543	(B,75,28)	RS1/16SS181J
R 1544	(B,77,28)	RS1/16SS181J
R 1546	(B,75,29)	RS1/16SS682J
R 1601	(A,42,25)	RS1/16SS123J
R 1602	(A,44,25)	RS1/16SS123J
R 1603	(A,43,30)	RN1/16SE1002D
R 1604	(A,50,35)	RS1/16SS105J
R 1605	(A,49,37)	RS1/16SS105J
R 1670	(A,34,21)	RS1/16SS1002D
R 1671	(A,36,21)	RS1/16SS2402D
R 1672	(A,45,19)	RS1/16SS2000D
R 1674	(A,45,20)	RS1/16SS3002D
R 1801	(B,35,6)	RS1/16SS104J
R 1802	(B,33,6)	RS1/16SS104J
R 1803	(B,35,11)	RS1/16SS821J
R 1804	(B,34,11)	RS1/16SS821J
R 1950	(A,42,16)	RS1/16S24R0F
R 1951	(A,42,18)	RS1/16S24R0F
R 1952	(B,78,34)	RS1/16SS105J
R 1953	(B,74,34)	RS1/16SS681J
R 1954	(A,35,17)	RS1/16SS153J
R 1955	(A,40,14)	RS1/16SS153J
R 1956	(A,40,18)	RS1/16SS0R0J
R 1957	(A,40,15)	RS1/16SS0R0J

CAPACITORS

Circuit Symbol and No.			Part No.
C 1001	(B,36,21)		CKSRYB105K10
C 1003	(B,18,44)		CKSSYB104K16
C 1004	(B,24,40)		CKSQYB475K10
C 1005	(B,32,23)		CKSRYB105K16
C 1008	(B,20,31)	10 uF	DCH1201
C 1009	(B,18,31)	10 uF	DCH1201
C 1010	(B,26,18)		CKSQYB225K10
C 1011	(B,22,18)		CKSRYB105K10
C 1013	(B,15,25)	10 uF	DCH1201
C 1014	(B,13,25)	10 uF	DCH1201
C 1015	(B,7,8)		CKSSYB102K50
C 1016	(B,12,10)		CKSSYB102K50
C 1018	(A,28,28)		CKSSYB104K10
C 1019	(A,10,17)		CKSSYB104K10
C 1021	(B,34,4)		CCSRCH681J50
C 1022	(A,23,21)		CCSRCH681J50
C 1101	(B,31,40)	10 uF	DCH1201
C 1104	(A,34,42)		CKSSYB104K10
C 1105	(A,42,45)		CKSSYB104K10
C 1106	(A,37,48)		CKSSYB103K16
C 1107	(A,41,49)		CKSSYB103K16
C 1108	(A,74,42)		CKSSYB103K16
C 1109	(A,56,41)		CKSRYB224K16
C 1110	(A,71,42)		CKSSYB103K16
C 1111	(A,61,39)		CKSRYB224K16
C 1112	(B,40,39)	22 uF	CCG1178
C 1113	(B,36,38)	22 uF	CCG1178
C 1201	(B,12,34)		CEVW101M16
C 1204	(A,8,24)		CKSSYB222K50
C 1205	(A,13,23)		CKSSYB104K16
C 1207	(A,22,25)		CKSSYB104K16
C 1208	(A,15,36)		CKSSYB103K16
C 1209	(B,10,25)		CKSSYB104K16
C 1210	(B,6,23)		CKSSYB104K16
C 1211	(B,9,22)		CKSYB475K16
C 1401	(B,63,48)		CKSSYB103K16
C 1403	(B,69,23)		CKSSYB104K10
C 1404	(B,58,25)		CKSQYB475K6R3
C 1408	(B,47,25)		CKSSYB104K10
C 1409	(B,47,23)		CKSQYB475K6R3
C 1480	(B,47,21)		CKSSYB104K10
C 1481	(B,49,23)		CKSSYB104K10
C 1482	(B,54,21)		CKSSYB104K10
C 1484	(B,59,20)		CKSSYB104K10
C 1485	(B,69,21)		CKSSYB104K10
C 1487	(B,58,4)		CKSSYB104K10
C 1488	(B,52,5)		CKSSYB104K10
C 1489	(B,45,20)		CKSQYB106K6R3
C 1490	(B,45,23)		CKSSYB102K50
C 1501	(B,72,9)		CKSQYB106K6R3
C 1502	(A,35,32)		CKSQYB106K6R3
C 1503	(A,60,4)		CKSSYB104K10
C 1504	(A,51,5)		CKSSYB104K10
C 1505	(A,53,5)		CKSSYB104K10
C 1506	(A,55,5)		CKSSYB104K10
C 1507	(A,62,5)		CKSSYB104K10
C 1508	(A,66,5)		CKSSYB104K10
C 1509	(A,69,5)		CKSSYB104K10
C 1510	(B,46,5)		CCSSCH120J50
C 1511	(A,46,9)		CKSSYB104K10
C 1512	(B,43,10)		CCSSCH100D50
C 1513	(B,74,12)		CKSSYB104K10
C 1514	(A,46,13)		CKSSYB104K10
C 1515	(A,45,15)		CKSSYB104K10
C 1516	(A,75,15)		CKSSYB104K10
C 1517	(A,74,16)		CKSSYB104K10
C 1518	(A,75,22)		CKSSYB104K10
C 1519	(A,74,26)		CKSSYB104K10
C 1520	(A,75,30)		CKSSYB104K10
C 1521	(A,60,37)		CKSSYB104K10
C 1522	(A,65,34)		CKSSYB104K10
C 1523	(A,68,37)		CKSSYB104K10
C 1524	(A,69,37)		CKSSYB473K16
C 1526	(A,68,37)		CKSSYB103K16
C 1528	(A,78,29)		CCSSCH471J50
C 1601	(A,44,29)		CKSSYB103K16
C 1602	(A,42,24)		CCSSCH101J50
C 1603	(A,44,27)		CCSSCH101J50
C 1604	(A,41,27)		CCSSCH680J50
C 1605	(A,43,27)		CCSSCH680J50
C 1606	(A,41,23)		CKSSYB104K10
C 1607	(A,41,35)		CKSQYB106K6R3
C 1608	(A,43,36)		CKSRYB105K10
C 1609	(A,48,35)		CKSSYB104K10
C 1610	(A,50,37)		CKSSYB104K10
C 1611	(A,51,37)		CKSSYB104K10
C 1612	(A,52,34)		CKSSYB104K10
C 1613	(A,52,37)		CKSSYB104K10
C 1614	(A,53,34)		CKSSYB104K10
C 1615	(A,54,34)		CKSSYB104K10
C 1616	(A,54,37)		CKSSYB104K10
C 1617	(A,54,38)		CKSSYB104K10
C 1618	(A,56,34)		CCSSCH101J50
C 1619	(A,57,34)		CKSSYB562K25
C 1620	(A,58,34)		CKSSYB224K6R3
C 1621	(A,57,37)		CKSSYB224K6R3
C 1622	(A,59,35)		CKSSYB333K16
C 1623	(A,45,35)		CKSRYB105K10
C 1624	(A,58,37)		CKSSYB104K10
C 1625	(A,56,37)		CKSSYB104K10
C 1671	(A,44,17)		CKSSYB104K10
C 1672	(A,45,18)		CKSSYB104K10
C 1673	(A,45,22)		CKSSYB104K10
C 1674	(A,43,21)		CKSSYB104K10
C 1676	(A,38,22)		CKSRYB105K10
C 1801	(B,34,8)		CKSQYB475K6R3
C 1802	(B,32,8)		CKSQYB475K6R3
C 1803	(B,36,8)		CCSRCH182J50
C 1804	(B,31,7)		CCSRCH182J50
C 1805	(B,32,19)		CKSSYB104K10
C 1806	(B,39,9)	10 uF	DCH1201
C 1809	(B,43,16)		CKSSYB104K10
C 1934	(B,42,29)		CCSRCH680J50
C 1950	(B,73,33)		CKSSYB104K10
C 1951	(B,74,36)		CCSSCH100D50
C 1952	(B,78,36)		CCSSCH100D50
C 1954	(B,43,49)		CCSRCH470J50

Circuit Symbol and No. **Part No.**

D

Unit Number :

Unit Name : Connect PCB

MISCELLANEOUS

S 101	(B,51,37)	Switch(HOME)	CSN1068
S 102	(B,12,23)	Switch(DSCSNS)	CSN1068
S 103	(B,22,10)	Switch(8SNS)	CSN1068
R 101	(B,52,27)		RS1/16S101J
R 102	(B,15,29)		RS1/16S101J
R 103	(B,16,11)		RS1/16S101J
C 101	(B,51,23)		CKSRYB104K50

Miscellaneous Parts List

	Pickup Unit(Service)	CXX2398
M 1	Motor Unit(LOAD/CRG)	CXC4026
M 2	Motor(SPINDLE)	EXM1050