


9. EXPLODED VIEWS AND PARTS LIST

NOTES : • Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.
• The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
• Screw adjacent to ▽ mark on the product are used for disassembly.
• For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING

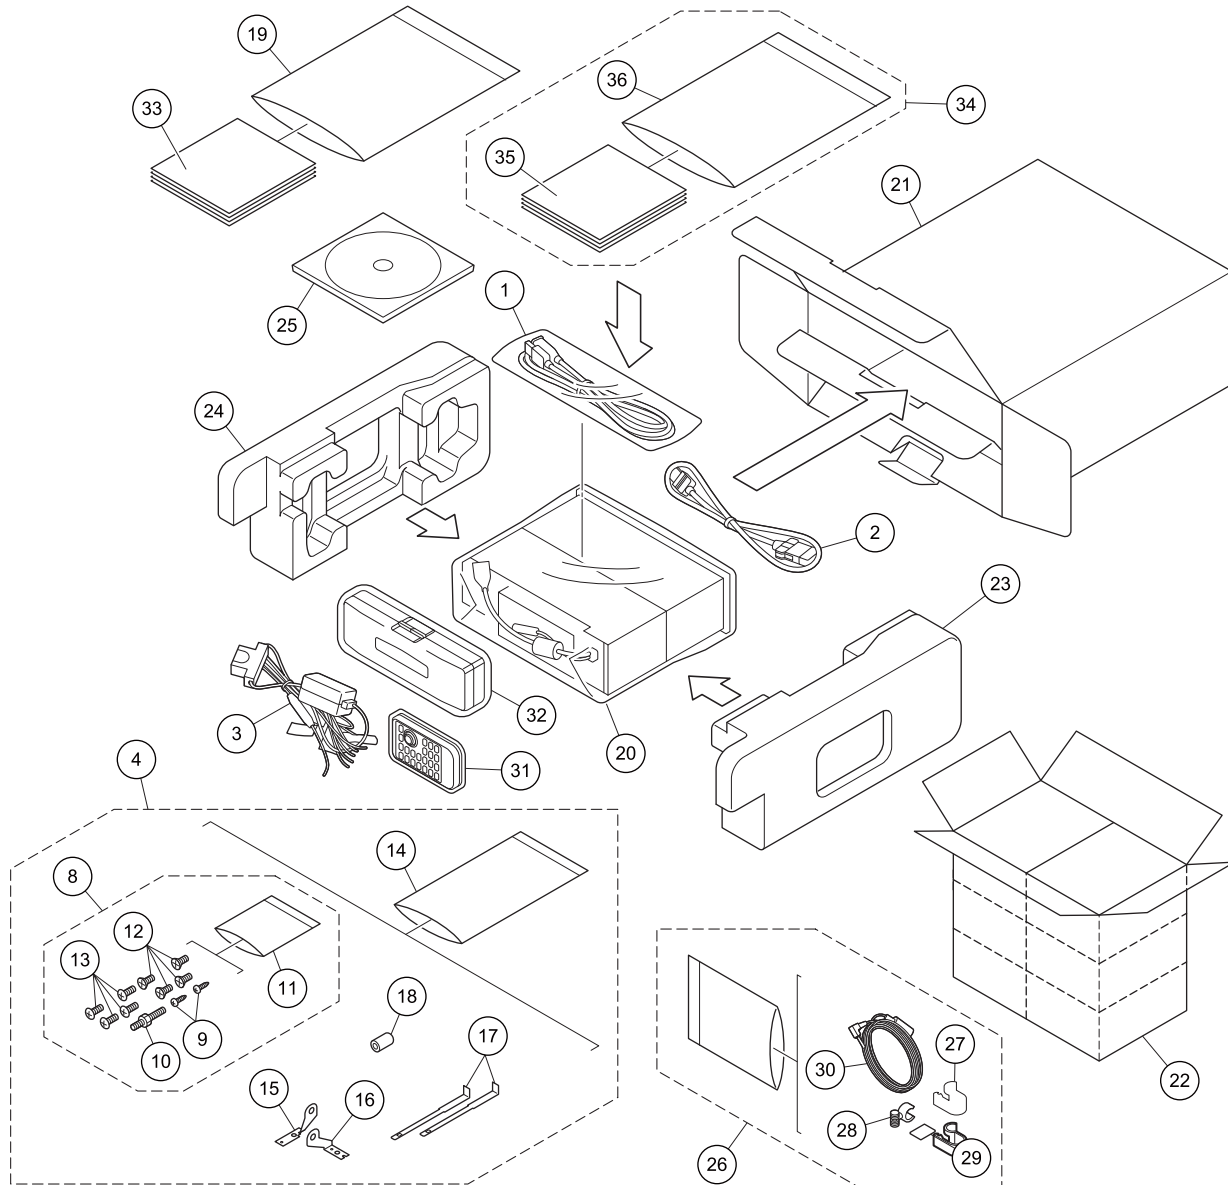

(1)PACKING SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Cord Assy	CDP1040	12	Screw	CRZ50P090FTC
2	Cord Assy	See Contrast table(2)	13	Screw	TRZ50P080FTC
3	Cord Assy	CDP1118	14	Polyethylene Bag	CEG1160
* 4	Accessory Assy	See Contrast table(2)	15	Holder(R)	See Contrast table(2)
5			16	Holder(L)	See Contrast table(2)
6			17	Handle	CND3707
7			18	Bush	CNV3930
8	Screw Assy	See Contrast table(2)	19	Polyethylene Bag	CEG1116
9	Screw	See Contrast table(2)	20	Polyethylene Bag	See Contrast table(2)
10	Screw	CBA1650	21	Unit Box	See Contrast table(2)
* 11	Polyethylene Bag	CEG-127	22	Contain Box	See Contrast table(2)
			23	Protector	CHP3519

5			6			7			8		
Mark	No.	Description	Part No.	Mark	No.	Description	Part No.				
	24	Protector	CHP3520		33-1	Installation Manual	See Contrast table(2)				
	25	CD-ROM(Operation Manual)	See Contrast table(2)		33-2	Caution Card	CRP1310				
				*	33-3	Caution Card	See Contrast table(2)				
	26	Microphone Assy	CPM1064								
	27	Clip Holder	CZN5471	*	33-4	Caution Card	See Contrast table(2)				
	28	Microphone Holder	CZN5472	*	33-5	Caution Card	CRP1366				
	29	Cushion	CZN5473	*	33-6	Warranty Card	See Contrast table(2)				
*	30	Microphone	CZX5059		34	Owner's Manual Assy	See Contrast table(2)				
				*	35	Quick Start Guide	See Language table(3)				
	31	Remote Control Unit	CXC9115								
	32	Case Assy	QXA3049	*	36	Polyethylene Bag	CEG1250				

(2) CONTRAST TABLE

DEH-P700BT/XN/UC, DEH-P7000BT/XN/UC and DEH-P7050BT/XN/ES are constructed the same except for the following:

Mark	No.	Description	DEH-P700BT/XN/UC	DEH-P7000BT/XN/UC	DEH-P7050BT/XN/ES
	2	Cord Assy	CDP1041	Not used	Not used
	4	Accessory Assy	* CEA8695	* CEA8695	CEA6708
	8	Screw Assy	CEA5317	CEA5317	CEA3849
	9	Screw	BPZ20P060FTB	BPZ20P060FTB	Not used
	15	Holder(R)	CND1250	CND1250	Not used
	16	Holder(L)	CND2699	CND2699	Not used
	20	Polyethylene Bag	CEG1173	CEG1173	CEG-162
	21	Unit Box	CHG6466	CHG6465	CHG6467
	22	Contain Box	CHL6466	CHL6465	CHL6467
	25	CD-ROM(Operation Manual)	CPJ1221	CPJ1220	CPJ1219
	33-1	Installation Manual	CRD4301	CRD4303	CRD4305
*	33-3	Caution Card	Not used	Not used	CRP1364
*	33-4	Caution Card	CRP1365	CRP1365	Not used
*	33-6	Warranty Card	CRY1070	CRY1246	Not used
	34	Owner's Manual Assy	CXC9829	CXC9830	CXC9831

(3) Language of Quick Start Guide (Owner's Manual Assy)

Mark	DEH-P700BT/XN/UC (CXC9829)	DEH-P7000BT/XN/UC (CXC9830)	Language
*	CRB2585	CRB2587	English
*	CRB2586	CRB2588	French
*	CRB2793	CRB2795	Spanish(Espanol)
Mark	DEH-P7050BT/XN/ES (CXC9831)		Language
*	CRB2589		English
*	CRB2590		Spanish(Espanol)
*	CRB2591		Portuguese(B)
*	CRB2592		Traditional Chinese
*	CRB2593		Arabic

(4) CONTENTS OF CD-ROM (Operation Manual)


Mark	DEH-P700BT/XN/UC (CPJ1221)	DEH-P7000BT/XN/UC (CPJ1220)	Language
*	CRB2544	CRB2546	English
*	CRB2545	CRB2547	French
*	CRB2792	CRB2794	Spanish(Espanol)
Mark	DEH-P7050BT/XN/ES (CPJ1219)		Language
*	CRB2548		English
*	CRB2549		Spanish(Espanol)
*	CRB2550		Portuguese(B)
*	CRB2551		Traditional Chinese
*	CRB2552		Arabic

All operation manuals are supplied in PDF files by the CD-ROM. No printed papers are available.

(5) Language of Installation Manual

Mark	Part No.		Language
	CRD4301	CRD4303	English, French, Spanish(Espanol)
	CRD4305		English, Spanish(Espanol), Portuguese(B), Traditional Chinese, Arabic

9.2 EXTERIOR(1)

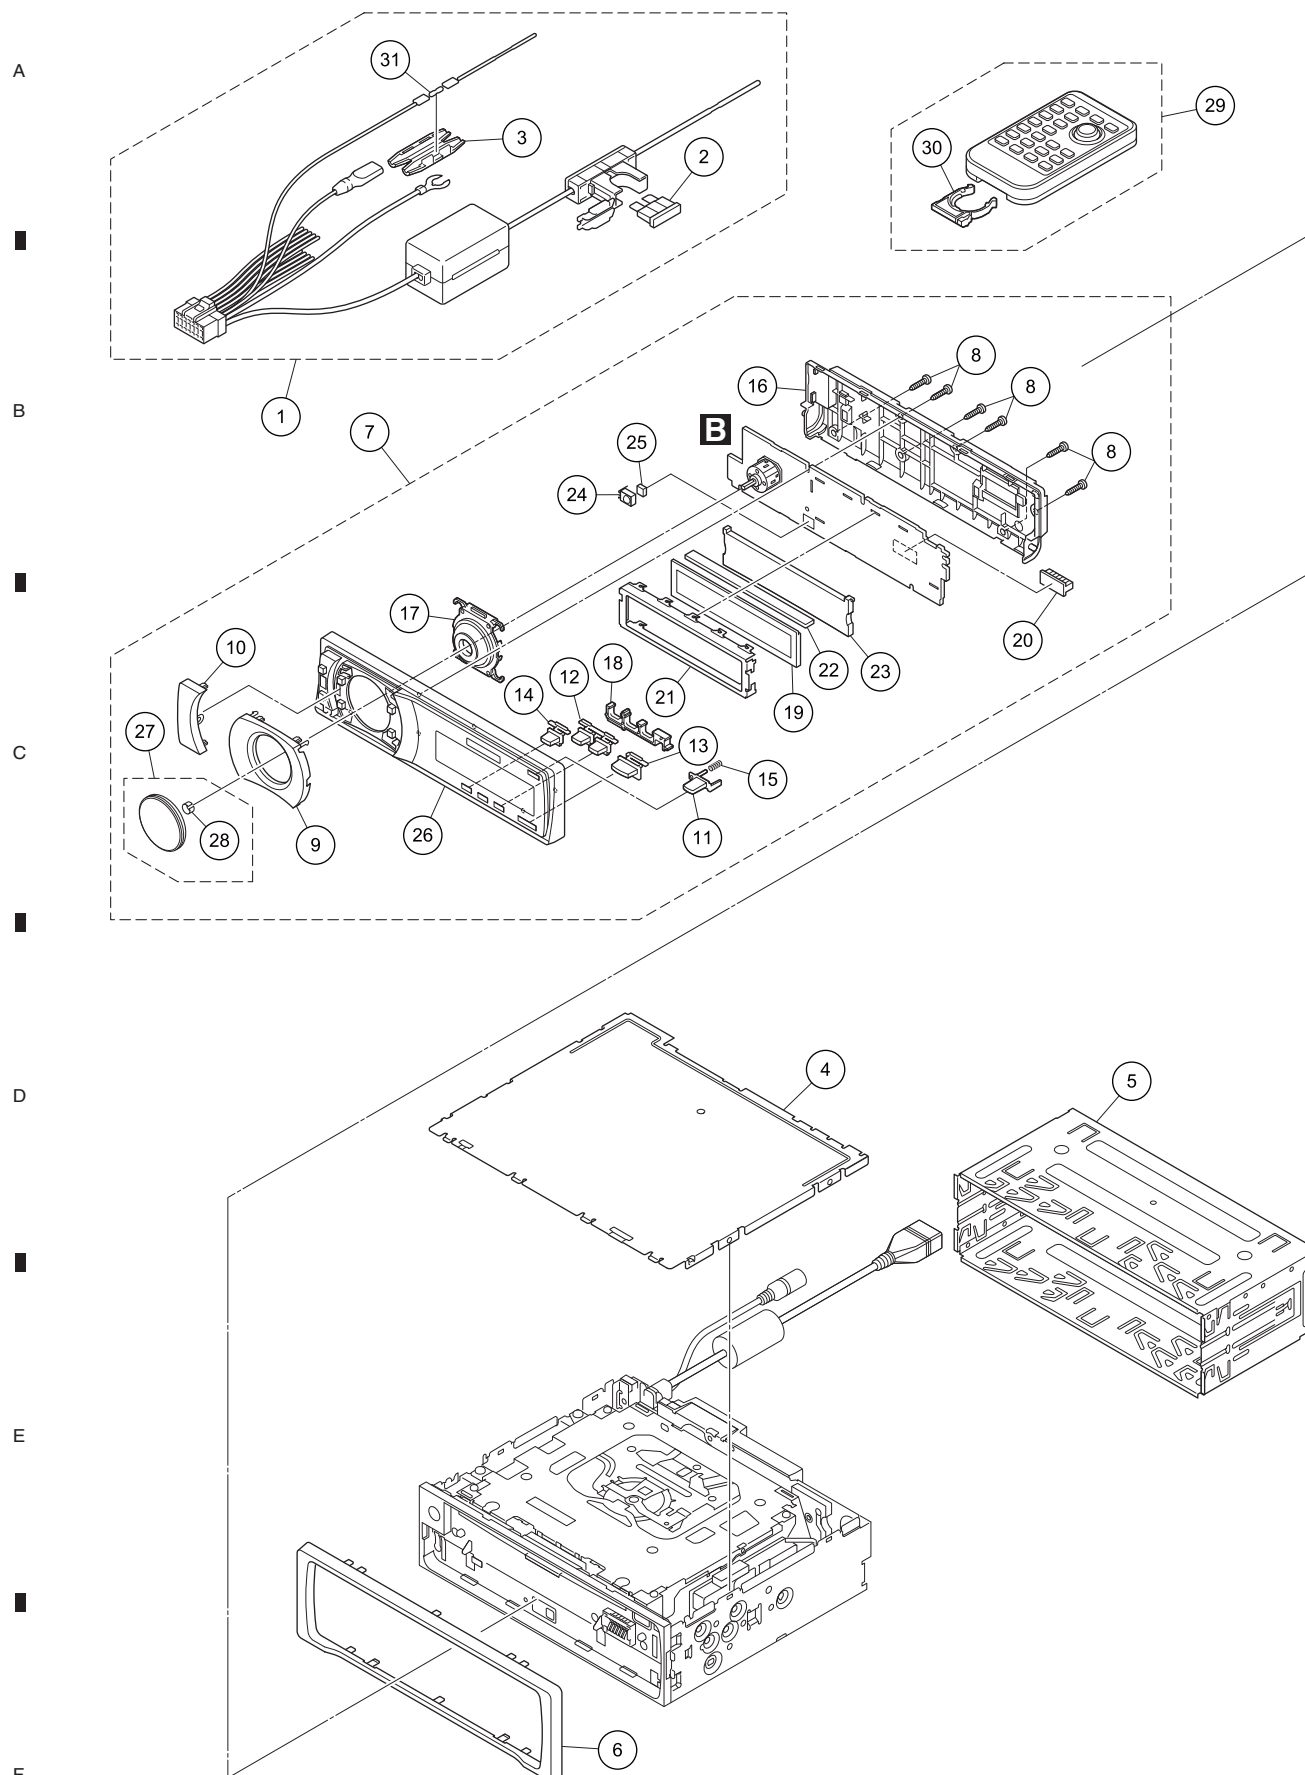


<u>Mark</u>	<u>No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark</u>	<u>No.</u>	<u>Description</u>	<u>Part No.</u>
	1	Cord Assy	CDP1118		17	Lighting Conductor	CNV9900
⚠	2	Fuse(10 A)	CEK1136		18	Holder	CNV9906
	3	Cap	CNS1472		19	LCD	See Contrast table(2)
	4	Case	CNB3377		20	Connector(CN1101)	CKS5207
	5	Holder	CND3598				
	6	Panel	See Contrast table(2)		21	Holder	CND4310
	7	Detach Grille Assy	See Contrast table(2)		22	Connector	CNV9493
	8	Screw	BPZ20P080FTB		23	Lighting Conductor	CNV9899
	9	Button(SRC, DISP, BAND, MUTE)	See Contrast table(2)		24	Remote IC(IC1102)	GP1UX51RK
	10	Button(PHONE)	CAI1689		25	Spacer	CNN2403
	11	Button(OPEN)	CAI1691		26	Grille Unit	See Contrast table(2)
	12	Button(RDM, S.Rtrv)	CAI1697		27	Knob Unit	See Contrast table(2)
	13	Button(LIST)	CAI1890		28	Spring	XBL7005
	14	Button(CLOCK)	CAI1699		29	Remote Control Unit	CXC9115
	15	Spring	CBH2967		30	Cover	CZN5357
	16	Cover	CNS9336		31	Resistor	RS1/2PMF102J

(2) CONTRAST TABLE
DEH-P700BT/XN/UC, DEH-P7000BT/XN/UC and DEH-P7050BT/XN/ES are constructed the same except for the following:

Mark	No.	Description	DEH-P700BT/XN/UC	DEH-P7000BT/XN/UC	DEH-P7050BT/XN/ES
	6	Panel	CNS9472	CNS9473	CNS9473
	7	Detach Grille Assy	CXC9065	CXC9064	CXC8909
	9	Button (SRC, DISP, BAND, MUTE)	CAI1687	CAI1688	CAI1687
	19	LCD	CAW1952	CAW1952	CAW1956
	26	Grille Unit	CXC8957	CXC8956	CXC8958
	27	Knob Unit	QXA3006	QXA3012	QXA3006

9.3 EXTERIOR(2)

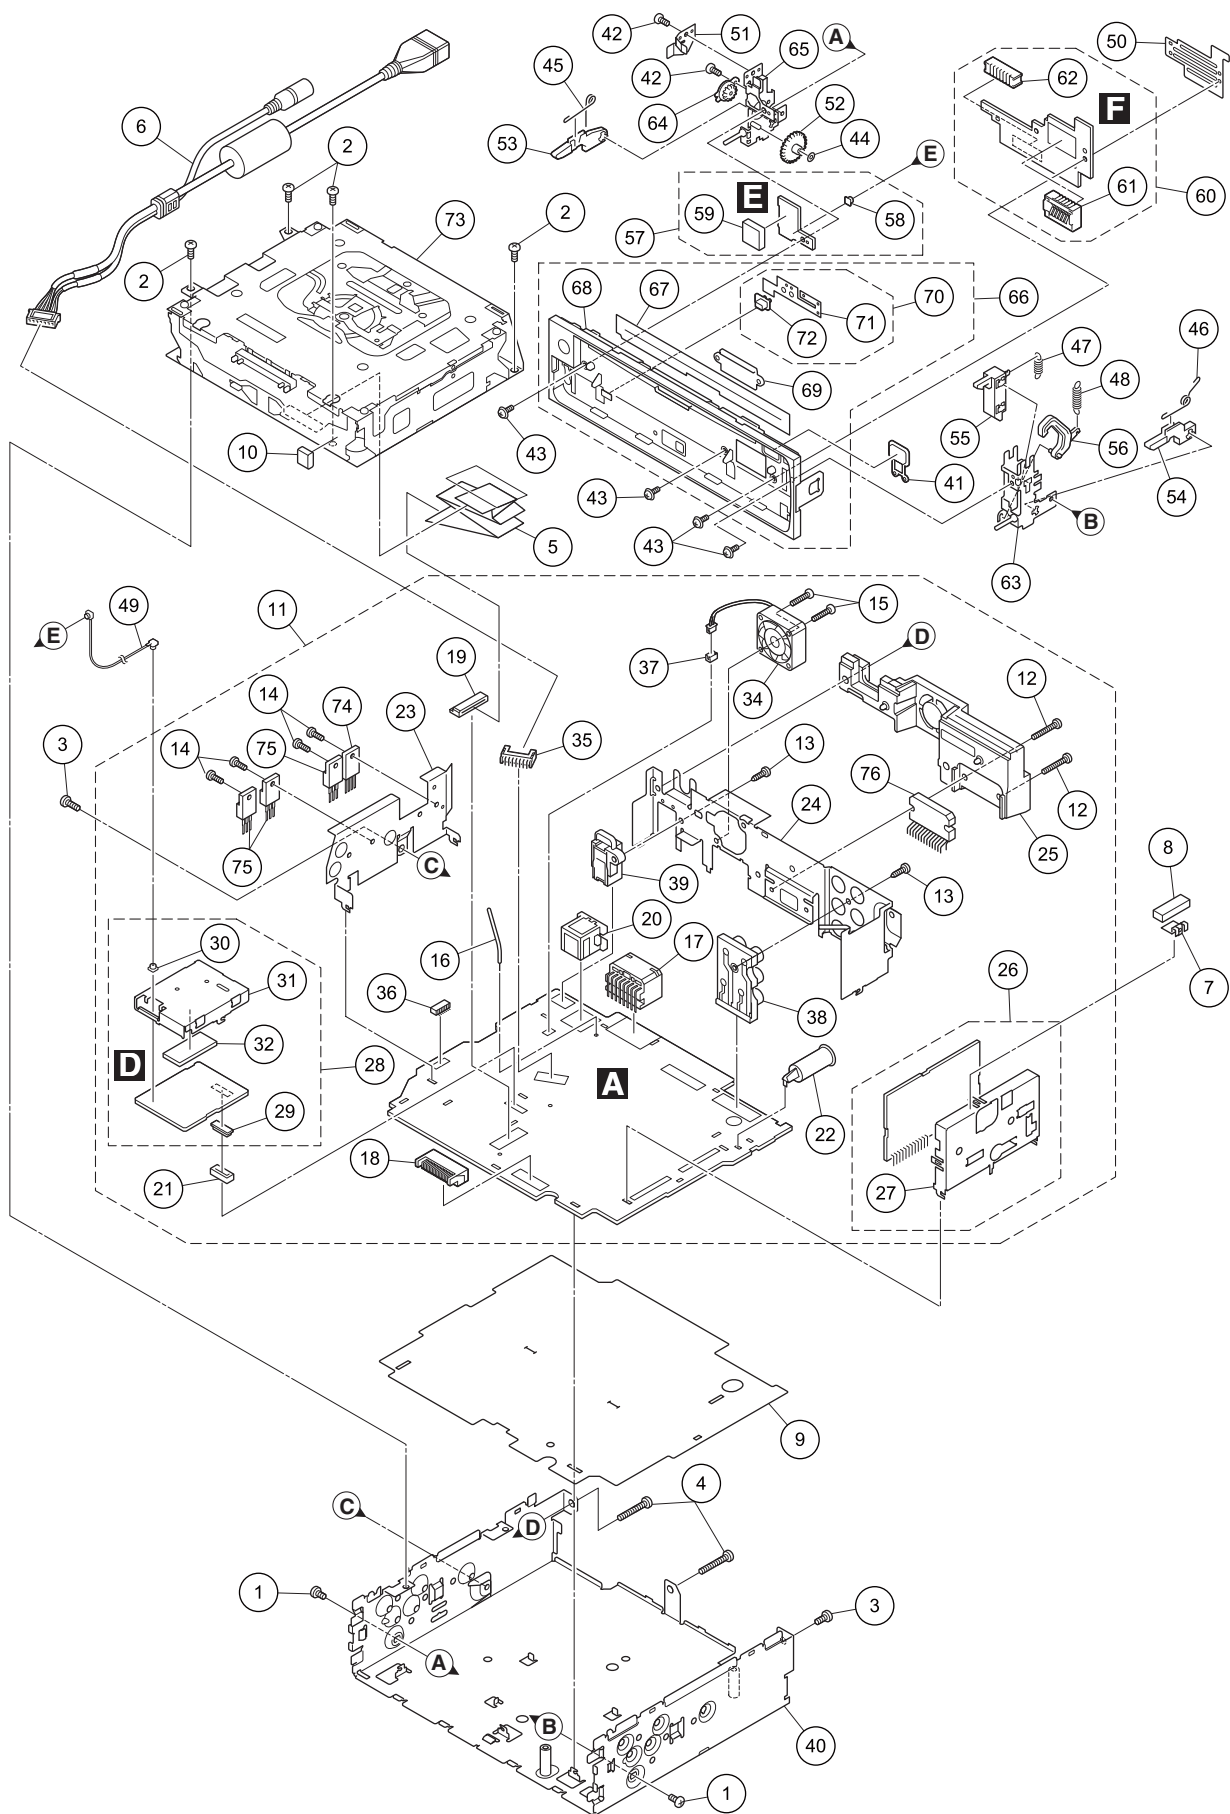


Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	Screw	BMZ30P040FTB	40	Chassis Unit	CXC8964	
2	Screw	BSZ26P060FTC	41	Button	CAC7752	A
3	Screw	BSZ30P060FTC	42	Screw(M2 x 4)	CBA1649	
4	Screw	BSZ30P200FTC	43	Screw(M2 x 4.5)	CBA1925	
5	Cable	CDE8564	44	Washer	CBF1038	
6	Cord Assy	CDE8578	45	Spring	CBH2650	
7	Earth Plate	CNC8915	46	Spring	CBH2651	
8	Cushion	CNM8890	47	Spring	CBH2652	
9	Insulator	CNN1563	48	Spring	CBH2653	
10	Insulator	CNN1653	49	Cord Assy	CDE8467	
11	Tuner Amp Unit	See Contrast table(2)	50	Holder	CND1254	B
12	Screw	BMZ26P200FTC	51	Earth Plate	CND2708	
13	Screw	BPZ26P070FTC	52	Gear	CNV5997	
14	Screw	BSZ26P060FTC	53	Arm	CNV7400	
15	Screw(M2.6 x 14)	CBA1632	54	Arm	CNV7401	
16	Clamper	CEF1048	55	Arm	CNV7402	
17	Plug(CN981)	CKM1278	56	Arm	CNV7403	
18	Plug(CN801)	CKS3537	57	Antenna Unit	CWN2338	
19	Connector(CN701)	CKS3833	58	Connector(ANT1102)	CKS5749	
20	Connector(JA101)	CKS5271	59	BT Antenna(ANT1101)	CWX3132	C
21	Connector(CN552)	CKS5321	60	Panel Unit	CWN3286	
22	Antenna Jack(JA401)	CKX1056	61	Connector(CN1972)	CKS4806	
23	Holder	CND3826	62	Connector(CN1971)	CKS5192	
24	Holder	CND4311	63	Holder Unit	CXB9502	
25	Heat Sink	CNR1903	64	Damper Unit	CXB9503	
26	FM/AM Tuner Unit	CWE2098	65	Holder Unit	CXC5760	
27	Holder	CND4324	66	Sub Panel Unit	CXC9408	
28	Bluetooth Unit	CWN3394	67	Cover	CNM6854	
29	Connector(CN76)	CKS5320	68	Panel	CNS9396	D
30	Connector(CN1)	CKS5749	69	Lighting Conductor	CNV6487	
31	Shield	CND3134	70	Sub Spring Assy	XXA7363	
32	Sheet	CNM9598	71	Spring	CBL1512	
33			72	Pin	CNV6486	
34	Fan Motor	CXM1288	73	CD Mechanism Module(S10.5)	CXK5775	
35	7P Plug(CN741)	KM200NA7L	74	IC(IC911)	NJM2388F84	
36	7P FFC Connector(CN551)	VKN1299	75	Transistor(Q452, Q751, Q901)	2SD2396	
37	ZH Connector(CN891)	VKN1928	76	IC(IC351)	PAL007C	E
38	Pin Jack(JA301)	XKB7001				
39	Jack(JA151)	See Contrast table(2)				

(2) CONTRAST TABLE

DEH-P700BT/XN/UC, DEH-P7000BT/XN/UC and DEH-P7050BT/XN/ES are constructed the same except for the following:

Mark	No.	Description	DEH-P700BT/XN/UC	DEH-P7000BT/XN/UC	DEH-P7050BT/XN/ES
	11	Tuner Amp Unit	CWN3277	CWN3278	CWN3279
	39	Jack(JA151)	YKS5001	YKS5001	YKS5017

9.4 CD MECHANISM MODULE

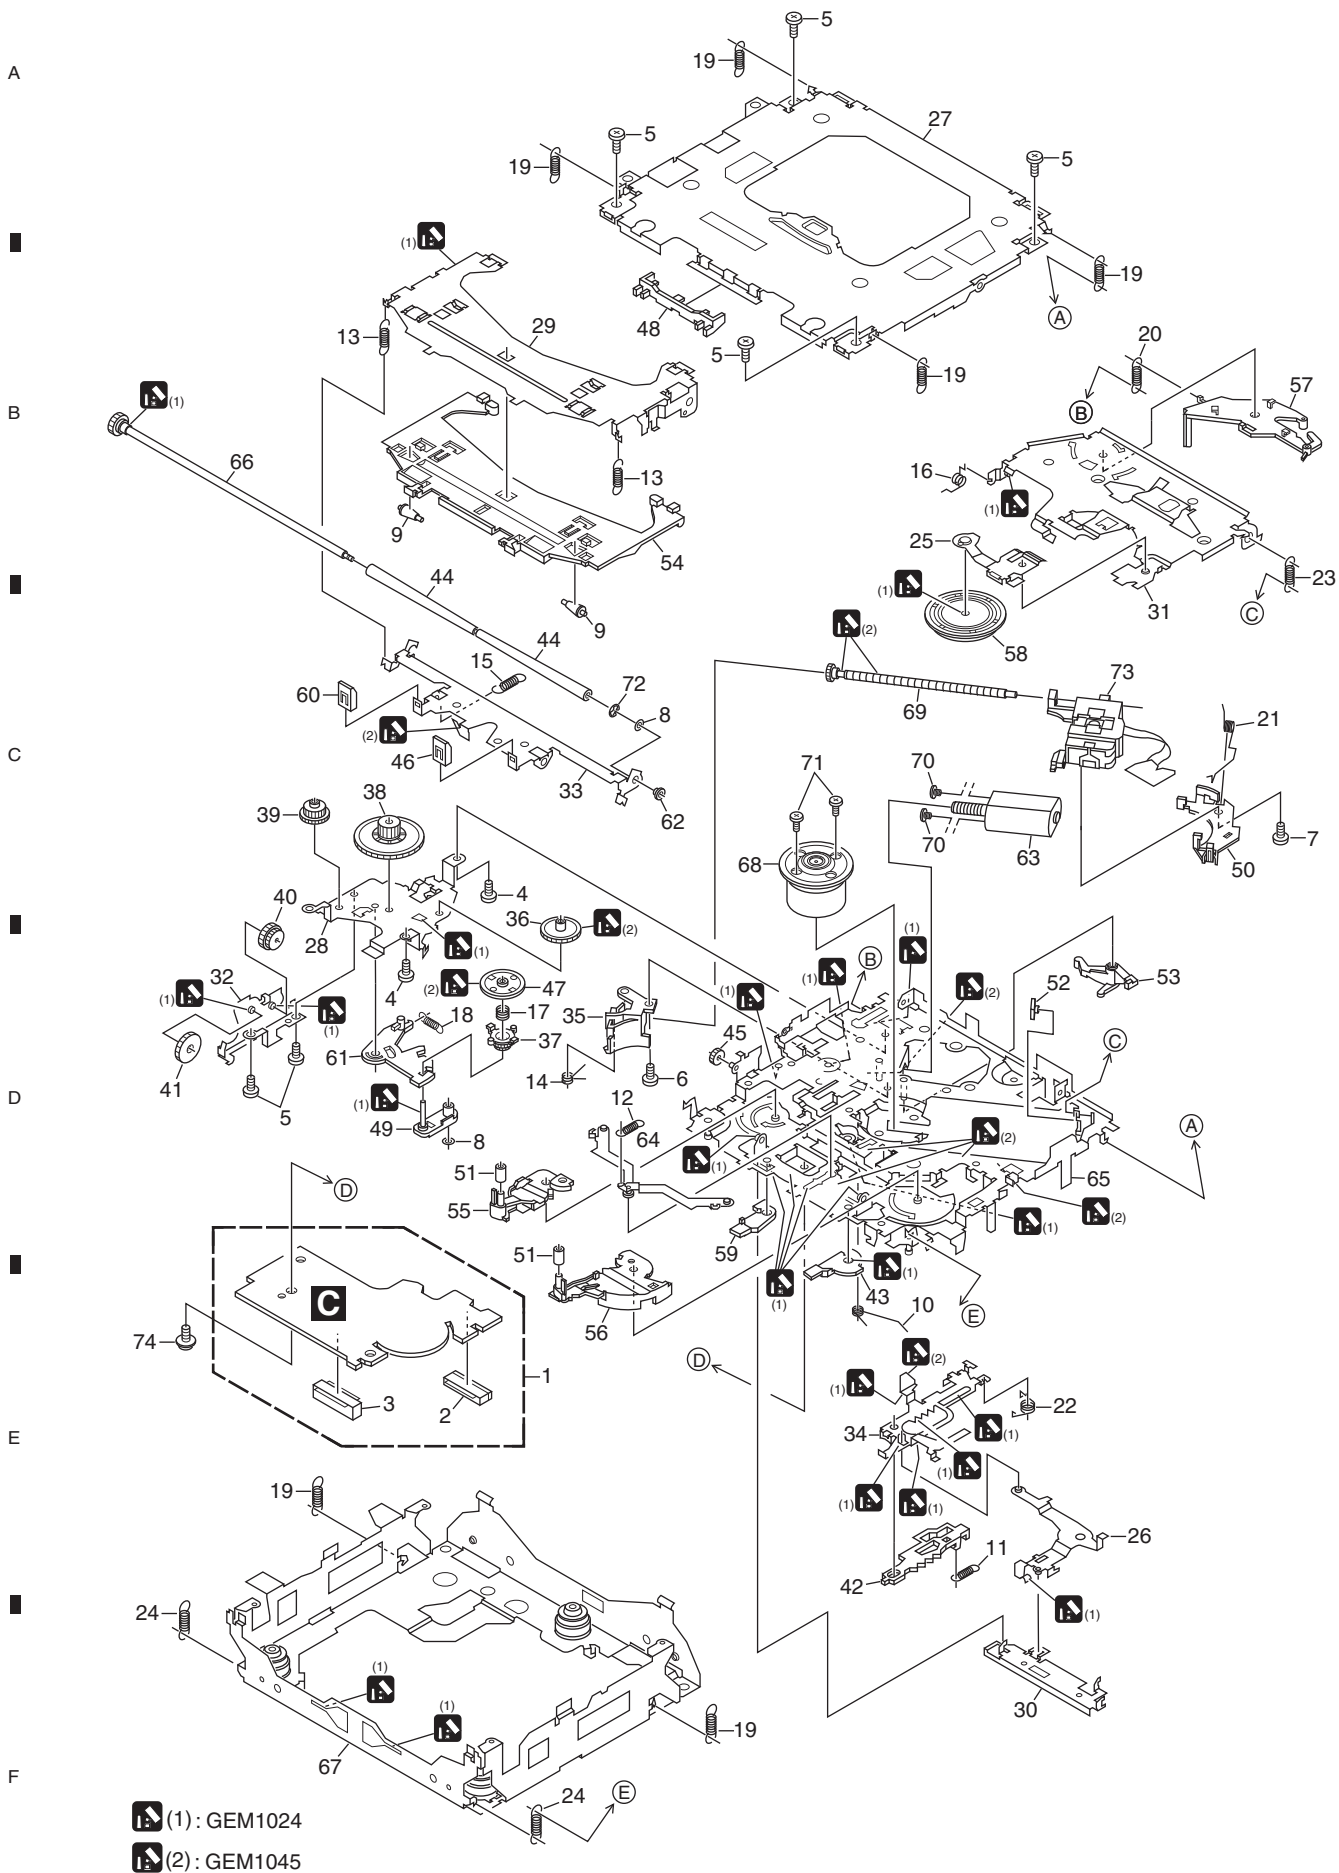

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	CD Core Unit(S10.5COMP2-iPod-C2)	CWX3624	50	Rack	CNV8342	
2	Connector(CN101)	CKS4182	51	Roller	CNV8343	A
3	Connector(CN701)	CKS4186	52	Holder	CNV8344	
4	Screw	BMZ20P025FTC	53	Arm	CNV8345	
5	Screw	BSZ20P040FTC	54	Guide	CNV9498	
6	Screw(M2 x 3)	CBA1511	55	Arm	CNV8348	
7	Screw(M2 x 4)	CBA1835				
8	Washer	CBF1038	56	Arm	CNV8349	
9	Roller	CNV9499	57	Arm	CNV8350	
10	Spring	CBH2609	58	Clamper	CNV8365	
11	Spring	CBH2612	59	Arm	CNV8386	
12	Spring	CBH2614	60	Guide	CNV8396	B
13	Spring	CBH2616				
14	Spring	CBH2617	61	Arm	CNV8413	
15	Spring	CBH2620	62	Collar	CNV8938	
16	Spring	CBH2855	63	Motor Unit(M2)	CXC4026	
17	Spring	CBH2937	64	Arm Unit	CXC4027	
18	Spring	CBH2735	65	Chassis Unit	CXC4028	
19	Spring	CBH2854				
20	Spring	CBH2642	66	Gear Unit	CXC4029	
21	Spring	CBH2856	67	Frame Unit	CXC4031	
22	Spring	CBH2857	68	Motor Unit(M1)	CXC7134	
23	Spring	CBH2860	69	Screw Unit	CXC6359	C
24	Spring	CBH2861	70	Screw	JFZ20P020FTC	
25	Spring	CBL1686				
26	Arm	CND1909	71	Screw	JGZ17P022FTC	
27	Frame	CND2582	72	Washer	YE20FTC	
28	Bracket	CND2583	73	Pickup Unit(P10.5)(Service)	CXX1942	
29	Arm	CND3831	74	Screw	IMS26P030FTC	
30	Lever	CND2585				D
31	Arm	CND2586				
32	Bracket	CND2587				
33	Arm	CND2588				
34	Lever	CND2589				
35	Holder	CNV7201				
36	Gear	CNV7207				
37	Gear	CNV7208				
38	Gear	CNV7209				E
39	Gear	CNV7210				
40	Gear	CNV7211				
41	Gear	CNV7212				
42	Rack	CNV7214				
43	Arm	CNV7216				
44	Roller	CNV7218				
45	Gear	CNV7219				
46	Guide	CNV7361				
47	Gear	CNV7595				F
48	Guide	CNV7799				
49	Arm	CNV7805				

12. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○○○○○J,RS1/○○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

- The expression of the unit in this manual is shown by u instead of μ . Please do not make a mistake.

Circuit Symbol and No.	Part No.	Circuit Symbol and No.	Part No.
Unit Number: CWN3277(P700BT)	IC 431 (B,145,19) IC	NJM2885DL1-33	
Unit Number: CWN3278(P7000BT)	IC 461 (B,27,84) IC	NJM2885DL1-33	
Unit Number: CWN3279(P7050BT)	IC 501 (A,77,58) IC	TC74VHCT08AFTS1	
	IC 521 (A,91,59) IC	TC74VHC08FTS1	
	IC 541 (A,84,57) IC	LE25FW203PATT	
Unit Name : Tuner Amp Unit	IC 561 (A,92,104) IC	NJM4558MD	
Unit Number: (UC)	IC 601 (A,131,59) IC	PEG441B8	
Unit Number: (ES)	IC 651 (A,140,35) IC	S-80835CNMC-B8U	
	IC 701 (B,92,32) IC	NJM2885DL1-33	
	IC 741 (A,70,70) IC	R5523N001B	
Unit Name : Keyboard Unit	IC 761 (A,84,91) Regulator IC	BD9781HFP	
Unit Number: CWX3624	IC 911 (A,6,116) IC	NJM2388F84	
Unit Name : CD Core	IC 941 (A,115,115) IC(P700BT)	TPD1018F	
Unit(S10.5COMP2-iPod-C2)	Q 101 (A,34,119) Transistor	UMF23N	
	Q 202 (A,143,82) Transistor	2SC4081	
Unit Number: CWN3394	Q 251 (B,112,89) Transistor	RT3T22M	
Unit Name : Bluetooth Unit	Q 252 (A,126,78) Chip Transistor	DTC124EUA	
Unit Number: CWN2338	Q 261 (A,16,33) Transistor	2SD1767	
	Q 262 (A,12,30) Transistor	RT3T22M	
	Q 301 (A,136,122) Transistor	IMH23	
Unit Name : Antenna Unit	Q 302 (A,142,120) Transistor	IMH23	
Unit Number: CWN3286	Q 303 (A,159,122) Transistor	IMH23	
Unit Name : Panel Unit	Q 304 (A,134,119) Transistor	RT3T22M	
	Q 381 (B,133,116) Transistor	2SC4081	
	Q 382 (B,132,112) Chip Transistor	DTC124EUA	

A	Q 383 (A,130,118) Chip Transistor	DTC114EUA
Unit Number: CWN3277(P700BT)	Q 451 (B,15,73) Transistor	RT3T22M
Unit Number: CWN3278(P7000BT)	Q 452 (A,6,70) Transistor	2SD2396
Unit Number: CWN3279(P7050BT)	Q 562 (A,106,101) Transistor	DTC314TU
Unit Name : Tuner Amp Unit	Q 563 (A,96,88) Transistor	DTC314TU

MISCELLANEOUS

IC 101 (B,32,115) IC	HA12241FP	Q 832 (B,44,22) Transistor	2SA1576A
IC 201 (B,132,97) IC	PML018A	Q 841 (A,152,19) Transistor	2SA1576A
IC 251 (A,120,88) IC	TC4066BFT	Q 842 (A,144,31) Chip Transistor	DTC114EUA
IC 261 (B,24,26) IC	NJM2360M	Q 891 (A,35,115) Transistor	RT3T22M
IC 351 (A,104,135) IC	PAL007C	Q 892 (A,42,111) Transistor	2SD1767

5		6		7		8	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
Q 901	(A,6,101) Transistor	2SD2396					
Q 902	(A,29,98) Transistor	RT3T22M		BZ601	(A,138,20) Buzzer	CPV1062	
Q 921	(A,49,111) Transistor	UMX1N					
Q 951	(B,63,114) Transistor	2SA1576A					
D 151	(B,12,136) Diode	MALS068X					
D 152	(B,23,129) Diode	MALS068X		R 101	(B,42,115)	RS1/16S181J	
D 153	(B,12,134) Diode(P700BT,P7000BT)	MALS068X		R 102	(B,40,123)	RS1/16S181J	
D 154	(B,23,131) Diode(P700BT,P7000BT)	MALS068X		R 103	(B,40,119)	RS1/16S102J	
D 155	(B,16,136) Diode	MALS068X		R 104	(B,39,127)	RS1/16S102J	
D 201	(A,150,81) Diode	HZS12L(B1)		R 105	(B,39,125)	RS1/16S223J	
D 251	(A,119,82) Diode	DAN202U		R 106	(A,29,119)	RS1/16S222J	
D 261	(B,32,25) Diode	RB551V-30		R 107	(B,34,131)	RS1/16S150J	
D 262	(A,16,25) Diode	HZS11L(A1)		R 108	(B,34,132)	RS1/16S470J	
D 301	(A,126,122) Diode	1SS133		R 109	(B,39,112)	RS1/16S101J	
D 381	(A,129,108) Diode	HZU8R2(B3)		R 110	(B,38,131)	RS1/16S101J	
D 382	(A,134,115) Diode	DAN202U		R 111	(B,30,132)	RS1/16S101J	
D 451	(A,34,69) Diode	MPG06G-6415G50		R 112	(B,39,110)	RS1/16S102J	
D 452	(B,11,76) Diode	UDZS5R6(B)		R 113	(A,38,120)	RS1/16S562J	
D 453	(A,16,56) Diode	DAN202U		R 114	(A,40,119)	RS1/16S332J	
D 551	(A,22,60) Diode	DAN202U		R 115	(B,41,117)	RS1/16S223J	
D 562	(A,110,96) Diode	1SS355		R 151	(A,12,125)	RS1/16S101J	
D 563	(A,97,69) Diode	1SS355		R 152	(A,17,125)	RS1/16S101J	
D 651	(A,139,29) Diode	1SS355		R 153	(A,13,125)	RS1/16S223J	
D 751	(A,13,47) Diode	HZS7L(C3)		R 154	(A,16,125)	RS1/16S223J	
D 761	(A,75,80) Diode	RB060L-40		R 155	(A,8,125) (P700BT,P7000BT)	RS1/16S102J	
D 762	(A,65,94) Diode	1SR154-400		R 156	(A,20,125) (P700BT,P7000BT)	RS1/16S102J	
D 801	(B,108,18) Diode	HZM6R2ZMWA		R 201	(A,144,79)	RS1/16S681J	
D 802	(B,98,20) Diode	MALS068X		R 202	(A,139,74)	RS1/16S102J	
D 803	(B,119,21) Diode	RSB6R8F2		R 203	(A,136,74)	RS1/16S102J	
D 804	(B,126,21) Diode	RSB6R8F2		R 204	(A,138,74)	RS1/16S102J	
D 805	(B,114,18) Diode	RSB6R8F2					
				R 251	(A,115,89)	RS1/16S103J	
D 807	(B,101,17) Diode	HZM6R2ZMWA		R 252	(B,119,90)	RS1/16S472J	
D 821	(A,59,10) Diode	HZS9L(C2)		R 253	(A,130,77)	RS1/16S103J	
D 891	(A,40,115) Diode	UDZS12(B)		R 261	(B,30,20)	RS1/16S472J	
D 901	(A,20,95) Diode	UDZS5R6(B)		R 262	(B,26,19)	RS1/16S102J	
D 902	(A,15,99) Diode	MPG06G-6415G50					
				R 263	(B,26,17)	RS1/16S821J	
D 921	(B,46,119) Diode	UDZS7R5(B)		R 264	(B,20,30)	RS1/10SR821J	
D 922	(B,50,121) Diode	HZU6R8(B2)		R 265	(A,20,30)	RS1/16S1R0J	
D 941	(A,118,124) Diode	MPG06G-6415G50		R 266	(A,12,34)	RS1/16S102J	
D 942	(A,122,124) Diode	MPG06G-6415G50		R 301	(A,134,126)	RS1/16S0R0J	
D 951	(B,59,118) Diode	DAN202U					
				R 303	(A,142,126)	RS1/16S0R0J	
D 981	(A,72,127) Diode	MPG06G-6415G50		R 304	(B,131,120)	RS1/16S390J	
D 982	(A,43,125) Diode	MPG06G-6415G50		R 305	(B,145,117)	RS1/16S390J	
L 101	(A,24,116) Inductor	LCTC1R0K1608		R 306	(B,131,122)	RS1/16S223J	
L 261	(A,28,22) Inductor	CTF1660		R 307	(B,143,119)	RS1/16S223J	
L 401	(B,158,99) Inductor	LCTAW220J2520					
				R 308	(B,141,117)	RS1/16S390J	
L 402	(A,154,81) Inductor	LAU1R0K		R 309	(B,162,119)	RS1/16S390J	
L 403	(A,154,36) Inductor	LAU2R2K		R 310	(B,140,124)	RS1/16S223J	
L 601	(A,136,36) Ferri-Inductor	LAU100K		R 311	(B,162,124)	RS1/16S223J	
L 741	(A,53,66) Inductor	CTF1713		R 312	(B,135,120)	RS1/16S390J	
L 761	(A,79,72) Inductor	CTH1385					
				R 313	(B,158,120)	RS1/16S390J	
L 841	(A,147,19) Chip Coil	LCTAW100J2520		R 314	(B,135,122)	RS1/16S223J	
L 951	(A,57,127) Inductor	LCTAW2R2J2520		R 315	(B,158,122)	RS1/16S223J	
X 601	(A,114,59) Crystal 20 MHz	VSS1167		R 316	(A,130,121)	RS1/16S102J	
S 651	(A,70,5) Switch(RESET)	CSG1020		R 317	(A,125,129)	RS1/16S820J	
S 801	(A,25,5) Switch(DETACH)	CSN1039					
				R 351	(A,115,123)	RS1/16S153J	
VA741	(B,55,82) Varistor	EZJZ1V800AM		R 352	(A,103,116)	RS1/16S182J	
VA742	(B,57,84) Varistor	EZJZ1V800AM		R 353	(A,106,114)	RS1/16S182J	
P 401	(B,164,110) Surge Protector	IMSA-6801-01Y901		R 354	(A,108,114)	RS1/16S182J	
△P451	(B,9,68) Fuse 1 A	CEK1280		R 355	(A,110,116)	RS1/16S182J	
△P301	(A,127,129) Fuse 3 A	CEK1286					

	1	2	3	4
	<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
A	R 356 (B,102,114)	RS1/16S272J	R 605 (B,128,50)	RS1/16S104J
	R 357 (B,105,114)	RS1/16S272J	R 606 (B,104,42)	RS1/16S101J
	R 358 (B,109,114)	RS1/16S272J	R 607 (B,115,45)	RS1/16S472J
	R 359 (B,111,114)	RS1/16S272J	R 608 (A,151,59)	RAB4C681J
	R 381 (A,134,111)	RS1/16S473J	R 609 (B,117,41)	RS1/16S472J
■	R 382 (A,141,74)	RS1/16S473J	R 610 (A,144,57)	RS1/16S104J
	R 383 (A,133,113)	RS1/16S104J	R 611 (A,144,55)	RAB4C681J
	R 384 (B,134,110)	RS1/16S472J	R 612 (A,119,58)	RS1/16S473J
	R 385 (A,133,108)	RS1/16S103J	R 613 (A,144,61)	RAB4C681J
	R 386 (A,135,109)	RS1/16S103J	R 614 (B,118,63)	RS1/16S681J
B	R 387 (A,131,111)	RS1/16S331J	R 615 (A,117,68)	RS1/16S473J
	R 388 (B,123,116)	RS1/16S101J	R 616 (B,121,72)	RS1/16S104J
	R 413 (B,155,64)	RS1/16S681J	R 619 (A,122,72)	RS1/16S104J
	R 415 (B,155,68)	RS1/16S681J	R 620 (A,122,78)	RS1/16S104J
	R 416 (B,155,70)	RS1/16S681J	R 621 (A,122,80)	RS1/16S104J
■	R 417 (B,155,72)	RS1/16S681J	R 622 (A,122,74)	RS1/16S0R0J
	R 418 (B,155,74)	RS1/16S681J	R 623 (B,129,68)	RS1/16S103J
	R 419 (B,155,76)	RS1/16S681J	R 624 (B,136,63)	RS1/16S473J
	R 451 (B,9,73)	RS1/16S392J	R 625 (A,131,74)	RS1/16S223J
	R 452 (A,28,71)	RD1/4PU0R0J	R 626 (B,133,68)	RS1/16S103J
C	R 453 (A,25,58)	RS1/16S0R0J	R 627 (B,106,47)	RS1/16S222J
	R 501 (A,82,64)	RS1/16S681J	R 628 (B,124,60)	RS1/16S103J
	R 502 (A,81,64)	RS1/16S681J	R 629 (A,135,48)	RS1/16S473J
	R 503 (A,76,52)	RAB4C681J	R 631 (B,122,39)	RS1/16S103J
	R 504 (B,60,40)	RS1/16S0R0J	R 633 (B,141,49) (P700BT,P7000BT)	RS1/16S104J
■	R 521 (A,90,65)	RAB4C681J	R 634 (B,132,40) (P7050BT)	RS1/16S104J
	R 522 (B,66,50)	RS1/16S182J	R 635 (B,145,51) (P700BT,P7050BT)	RS1/16S104J
	R 523 (B,100,58)	RS1/16S182J	R 636 (B,132,42) (P7000BT)	RS1/16S104J
	R 524 (B,95,57)	RS1/16S332J	R 641 (A,142,71)	RS1/16S104J
	R 525 (B,61,43)	RS1/16S332J	R 651 (A,139,31)	RS1/16S183J
■	R 526 (A,90,53)	RAB4C681J	R 652 (B,141,37)	RS1/16S102J
	R 527 (B,91,55)	RS1/16S0R0J	R 701 (A,78,42)	RAB4C682J
	R 541 (A,85,63)	RAB4C101J	R 702 (B,73,27)	RS1/16S104J
	R 542 (B,87,55)	RS1/16S0R0J	R 703 (B,69,27)	RS1/16S473J
	R 543 (A,86,52)	RS1/16S101J	R 704 (B,82,49)	RS1/16S221J
D	R 544 (A,86,50)	RS1/16S101J	R 705 (B,88,48)	RS1/16S221J
	R 553 (B,65,59)	RS1/16S101J	R 706 (B,83,35)	RS1/16S221J
	R 554 (B,64,63)	RS1/16S101J	R 707 (B,83,31)	RS1/16S221J
	R 562 (A,87,110)	RS1/16S104J	R 708 (B,83,29)	RS1/16S221J
	R 563 (A,85,107)	RS1/16S473J	R 709 (B,83,25)	RS1/16S102J
■	R 564 (A,88,110)	RS1/16S151J	R 741 (B,52,78)	RS1/16S0R0J
	R 565 (A,99,106)	RS1/16S473J	R 742 (B,54,80)	RS1/16S0R0J
	R 566 (A,102,102)	RS1/16S473J	R 743 (A,54,71)	RS1/16S0R0J
	R 567 (A,99,104)	RS1/16S473J	R 744 (A,52,71)	RS1/16S0R0J
	R 568 (B,98,101)	RS1/16S473J	R 745 (A,76,65)	RS1/16S102J
E	R 569 (A,103,107)	RS1/16S223J	R 751 (A,21,53)	RD1/4PU102J
	R 570 (A,99,107)	RS1/16S102J	R 762 (A,90,80)	RS1/16S333J
	R 571 (A,103,102)	RS1/16S102J	R 763 (A,92,80)	RS1/10S471J
	R 572 (B,105,110)	RS1/16S473J	R 764 (A,87,81)	RS1/16S683J
	R 573 (A,87,103)	RS1/16S823J	R 765 (A,89,82)	RS1/16S3302F
■	R 574 (A,99,96)	RS1/16S103J	R 766 (A,90,79)	RS1/16S8201F
	R 575 (A,99,98)	RS1/16S103J	R 767 (A,82,81)	RS1/16S8202F
	R 576 (A,83,103)	RS1/16S333J	R 768 (A,84,80)	RS1/16S123J
	R 577 (A,87,100)	RS1/16S332J	R 801 (B,99,22)	RS1/16S102J
	R 578 (A,85,106)	RS1/16S153J	R 802 (B,122,23)	RS1/16S222J
F	R 582 (A,84,99)	RS1/16S272J	R 803 (B,125,14)	RS1/16S222J
	R 583 (A,94,95)	RS1/16S220J	R 804 (B,117,24)	RS1/16S222J
	R 584 (A,93,91)	RS1/16S102J	R 805 (B,126,16)	RS1/16S222J
	R 585 (A,93,90)	RS1/16S223J	R 806 (B,112,23)	RS1/16S222J
	R 603 (A,130,23)	RS1/16S102J	R 810 (B,114,28)	RS1/16S102J
			R 811 (B,99,24)	RS1/16S183J

5		6		7		8	
Circuit Symbol and No.		Part No.		Circuit Symbol and No.		Part No.	
R 812	(B,119,29)	RS1/16S104J		C 220	(A,144,87)	CEJQ470M16	
R 813	(B,127,26)	RS1/16S104J		C 251	(A,115,97)	CKSRYB104K16	
R 814	(B,119,27)	RS1/16S104J		C 252	(B,118,88)	CKSRYB105K6R3	
R 815	(B,115,26)	RS1/16S104J		C 253	(B,119,92)	CKSRYB105K6R3	
R 816	(A,76,15)	RS1/16S104J		C 254	(A,115,85)	CKSRYB104K16	
R 817	(B,46,26)	RS1/16S102J		C 262	(B,30,19)	CCSRCH101J50	
				C 263	(A,28,31)	CEJQ470M25	
R 824	(A,61,7)	RS1/16S271J		C 264	(A,23,30) 4.7 uF	CCG1111	
R 825	(A,63,7)	RS1/16S271J					
R 826	(A,55,7)	RS1/16S271J		C 265	(B,32,23)	CCSRCH331J50	
R 828	(A,76,12)	RS1/16S0R0J		C 266	(A,29,39)	CEJQ101M16	
R 829	(B,61,8)	RS1/16S222J		C 267	(B,25,36)	CKSRYB104K16	
				C 269	(A,12,27)	CKSRYB104K16	
R 830	(A,53,4)	RS1/16S1R0J		C 301	(A,140,114)	CEJQ100M25	
R 831	(B,48,19)	RS1/16S103J					
R 832	(B,39,20)	RS1/16S473J		C 302	(A,146,109)	CEJQ100M25	
R 833	(A,27,13)	RD1/4PU391J		C 305	(A,146,114)	CEJQ100M25	
R 841	(A,143,28)	RS1/16S102J		C 306	(A,158,114)	CEJQ100M25	
				C 309	(A,140,109)	CEJQ100M25	
				C 310	(A,152,114)	CEJQ100M25	
R 842	(A,143,27)	RS1/16S473J					
R 843	(A,152,15)	RS1/16S472J		C 313	(A,124,113)	CEJQ220M35	
R 891	(A,38,112)	RS1/16S181J		C 351	(B,105,120)	CKSRYB474K16	
R 892	(A,36,113)	RS1/16S181J		C 352	(B,102,121)	CKSRYB474K16	
R 894	(A,36,112)	RS1/16S1R0J		C 353	(B,109,121)	CKSRYB474K16	
				C 354	(B,111,121)	CKSRYB474K16	
R 901	(A,24,98)	RS1/16S333J					
R 902	(A,26,97)	RS1/16S821J		C 355	(B,105,124)	CKSQYB474K16	
R 903	(A,26,99)	RS1/16S821J		C 356	(B,102,125)	CKSQYB474K16	
R 912	(A,12,109)	RS1/16S473J		C 357	(B,109,125)	CKSQYB474K16	
R 921	(B,48,113)	RS1/16S104J		C 358	(B,111,125)	CKSQYB474K16	
				C 359	(B,123,129)	CKSQYB225K10	
R 922	(B,54,115)	RS1/16S103J					
R 923	(B,50,115)	RS1/16S473J		C 360	(B,119,131)	CKSQYB225K10	
R 924	(B,54,117)	RS1/16S223J		C 362	(A,115,109)	CEJQ100M25	
R 925	(B,50,119)	RS1/16S472J		C 363	(B,112,136)	CKSRYB104K16	
R 941	(B,115,125) (P7000BT,P7050BT)	RS1/16S0R0J		C 364	(A,81,119) 3 300 uF/16 V	CCH1486	
R 942	(A,114,120) (P700BT)	RS1/16S103J		C 382	(A,121,108)	CEJQ330M16	
R 951	(B,84,105)	RS1/16S102J		C 412	(B,144,30)	CKSRYB103K50	
R 952	(B,59,115)	RS1/16S472J		C 413	(B,155,50) (P700BT,P7000BT)	CKSRYB103K50	
R 954	(B,55,122)	RS1/16S153J			(B,155,50) (P7050BT)	CKSRYB102K50	
CAPACITORS				C 414	(A,148,27)	CEJQ470M10	
C 103	(A,43,131)	CKSRYB104K16		C 416	(B,150,94)	CKSRYB103K50	
C 106	(A,24,112)	CKSRYB104K16		C 417	(A,151,91)	CEJQ101M16	
C 151	(B,16,134)	CKSRYB473K50					
C 201	(A,146,80)	CKSRYB104K16		C 419	(B,165,62)	CCSRCH101J50	
C 202	(A,117,97)	CKSRYB105K10		C 431	(A,153,27)	CEJQ470M6R3	
				C 432	(B,154,20)	CKSRYB103K50	
C 203	(B,121,97)	CKSRYB105K10		C 433	(B,153,23)	CKSRYB103K50	
C 204	(B,113,102)	CKSRYB105K10		C 434	(A,159,27)	CEJQ4R7M50	
C 205	(B,111,106)	CKSRYB105K10					
C 206	(B,146,100)	CKSRYB224K16		C 451	(A,17,66)	CEJQ101M16	
C 207	(B,146,103)	CKSRYB224K16		C 452	(B,11,78)	CKSRYB103K50	
				C 453	(A,28,77)	CEJQ101M10	
C 208	(B,112,104)	CKSRYB105K10		C 454	(A,18,76) 470 uF/16 V	CCH1339	
C 209	(B,110,108)	CKSRYB105K10		C 463	(A,35,77)	CEJQ220M35	
C 210	(B,115,94)	CKSRYB105K10					
C 211	(B,115,97)	CKSRYB105K10		C 464	(B,35,79)	CKSRYB103K50	
C 212	(A,133,85)	CEJQ470M16		C 465	(B,38,81)	CKSRYB103K50	
				C 466	(B,38,84)	CKSYB475K16	
C 213	(A,127,86)	CKSRYB105K10		C 501	(B,75,55)	CKSRYB104K16	
C 214	(B,146,83)	CKSRYB104K16		C 521	(B,88,57)	CKSRYB104K16	
C 215	(A,144,98)	CEJQ100M25					
C 216	(A,144,93)	CEJQ4R7M50		C 541	(B,83,57)	CKSRYB104K16	
C 217	(B,120,103)	CKSRYB105K10		C 561	(A,85,110)	CKSRYB104K16	
				C 562	(A,100,102)	CCSRCH470J50	
C 218	(B,120,99)	CKSRYB105K10		C 563	(A,102,104)	CKSRYB104K16	
C 219	(B,120,101)	CKSQYB225K10		C 564	(A,101,107)	CKSRYB104K16	
				C 565	(A,95,97)	CKSRYB104K16	

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

C 566	(A,85,103)	CKSRYB331K50
C 567	(A,83,104)	CKSRYB682K50
C 568	(A,98,100)	CKSQYB225K10
C 571	(A,99,92)	CEJQ330M25
C 572	(A,82,106)	CKSRYB104K16
C 601	(A,149,63)	CCSRCH470J50
C 602	(B,131,61)	CKSQYB475K6R3
C 603	(B,118,57)	CCSRCH100D50
C 605	(B,118,60)	CCSRCH100D50

C 606	(A,139,43)	CEJQ4R7M25
C 607	(A,140,40)	CKSRYB103K50
C 609	(A,126,72)	CKSRYB474K10
C 610	(A,128,72)	CKSRYB474K10
C 611	(B,127,65)	CKSRYB102K50

C 612	(A,115,69)	CKSRYB102K50
C 651	(A,136,29)	CKSRYB105K10
C 702	(B,88,45)	CKSRYB104K16
C 704	(A,93,43)	CEJQ220M16
C 705	(B,88,37)	CKSRYB103K50

C 706	(B,87,23)	CKSRYB474K10
C 709	(B,73,23)	CKSRYB104K16
C 742	(A,68,67)	CKSRYB104K16
C 743	(B,66,74)	CKSRYB104K16
C 744	(B,62,84)	CKSRYB104K16

C 751	(A,20,45)	CEJQ101M10
C 753	(B,19,48)	CKSRYB102K50
C 754	(B,13,53)	CKSRYB473K50
C 761	(A,90,82)	CCSRCH221J50
C 762	(A,86,81)	CKSRYB102K50

C 764	(A,73,91)	CEJQ221M16
C 765	(A,79,85)	CKSRYB105K16
C 766	(A,89,73) 150 uF/6.3 V	CCH1781
C 767	(A,84,83)	CKSRYB104K16
C 807	(A,98,15)	CKSRYB104K16

C 821	(A,81,10)	CEJQ1R0M50
C 823	(B,59,13)	CKSRYB104K16
C 842	(A,148,17)	CKSRYB102K50
C 891	(A,44,116)	CKSRYB224K16
C 892	(A,36,110)	CKSRYB103K50

C 893	(A,37,106)	CEJQ100M50
C 901	(A,34,99)	CEJQ101M16
C 902	(B,44,99)	CKSRYB104K16
C 903	(A,22,95)	CKSRYB103K50
C 904	(A,16,88) 2 200 uF/16 V	CCH1405

C 911	(A,17,104)	CEHAS101M10
C 912	(A,12,112)	CKSRYB103K50
C 913	(A,17,112) 100 uF/25 V	CCH1316
C 921	(B,50,117)	CKSRYB104K25
C 942	(B,116,118) (P700BT,P7050BT)	CKSRYB473K50
C 943	(A,120,117) (P700BT)	CKSRYB104K16

C 944	(B,115,122) (P700BT)	CKSRYB473K50
C 951	(B,55,120)	CKSRYB104K25

IC 1101	(B,97,17) IC	PD6538A
IC 1102	(A,57,8) REMOTE IC	GP1UX51RK
Q 1101	(B,79,7) Chip Transistor	DTC114EUA
Q 1102	(B,73,5) Chip Transistor	DTC114EUA
Q 1103	(B,118,11) Chip Transistor	DTC114EUA

D 1101	(B,123,16) Diode	MALS068X
D 1102	(B,112,15) Diode	MALS068X
D 1103	(A,71,9) LED	CL-197HB1-D(CDE)
D 1104	(A,79,9) LED	CL-197HB1-D(CDE)
D 1105	(A,104,8) LED	CL-197HB1-D(CDE)

D 1106	(A,157,24) White LED	NESW505C-5273
D 1107	(A,5,13) LED	CL-197HB1-D(CDE)
D 1108	(A,16,12) LED	CL-197HB1-D(CDE)
D 1109	(A,51,36) LED	CL-197HB1-D(CDE)
D 1110	(A,16,36) LED	CL-197HB1-D(CDE)

D 1111	(A,127,8) LED	CL-197HB1-D(CDE)
D 1112	(A,148,8) LED	CL-197HB1-D(CDE)
D 1113	(A,116,8) LED	CL-197HB1-D(CDE)
D 1114	(A,51,12) LED	CL-197HB1-D(CDE)
D 1115	(A,63,24) White LED	NESW505C-5273

X 1101	(B,111,12) Ceramic Resonator 5.00 MHz	CSS1731
S 1101	(A,19,40) Push Switch	CSG1155
S 1102	(A,19,9) Push Switch	CSG1155
S 1103	(A,6,8) Push Switch	CSG1155
S 1104	(A,48,40) Push Switch	CSG1155

S 1105	(A,48,9) Push Switch	CSG1155
S 1106	(A,102,5) Push Switch	CSG1155
S 1107	(A,114,5) Push Switch	CSG1155
S 1108	(A,125,5) Push Switch	CSG1155
S 1109	(A,148,5) Push Switch	CSG1155

S 1110	(A,34,24) Switch (MULTI-CONTROL)	CSX1120
	LCD (P700BT,P7000BT)	CAW1952
	LCD (P7050BT)	CAW1956

RESISTORS

R 1101	(A,73,7)	RS1/16S331J
R 1102	(B,112,9)	RS1/16S222J
R 1103	(B,24,34)	RS1/16S473J
R 1104	(B,43,34)	RS1/16S153J
R 1105	(B,52,5)	RS1/16S101J

R 1106	(B,54,15)	RS1/16S2R2J
R 1107	(B,42,14)	RS1/16S682J
R 1108	(B,51,27)	RS1/16S103J
R 1109	(B,153,27)	RS1/16S102J
R 1110	(A,80,7)	RS1/16S331J

R 1111	(B,24,12)	RS1/16S272J
R 1113	(B,128,18)	RS1/16S0R0J
R 1114	(B,155,22)	RS1/16S102J
R 1115	(B,142,16)	RS1/16S102J
R 1116	(B,141,10)	RS1/16S102J

R 1117	(A,107,7)	RS1/16S681J
R 1120	(B,139,17)	RS1/16S223J
R 1121	(A,21,14)	RS1/16S471J
R 1122	(A,20,34)	RS1/16S471J
R 1123	(A,151,9)	RS1/16S471J

R 1124	(A,47,12)	RS1/16S471J
R 1125	(A,57,23)	RS1/16S221J
R 1126	(A,19,16)	RS1/16S0R0J
R 1127	(A,21,36)	RS1/16S0R0J

B**Unit Number : (UC)****Unit Number : (ES)****Unit Name : Keyboard Unit****MISCELLANEOUS**

5		6		7		8	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
R 1128	(A,154,9)	RS1/16S471J		R 234	(B,22,26)	RS1/16SS473J	
R 1129	(A,48,14)	RS1/16S0R0J		R 235	(A,26,59)	RS1/16SS473J	
CAPACITORS				R 237	(A,24,35)	RS1/16SS151J	
C 1101	(B,127,11)	CKSRYB103K50		R 240	(B,14,26)	RS1/16S473J	A
C 1102	(B,124,11)	CKSRYB103K50		R 241	(B,13,25)	RS1/16SS103J	
C 1106	(A,157,32)	CKSRYF104Z50		R 244	(B,22,55)	RS1/16SS473J	
C 1115	(A,59,26)	CKSRYF104Z50		R 249	(B,14,50)	RS1/16SS103J	
C 1116	(B,122,18)	CKSRYB104K16		R 250	(B,19,50)	RS1/16SS101J	
				R 252	(B,18,47)	RS1/16SS101J	
				R 254	(A,25,64)	RS1/16SS104J	
C 1117	(B,49,6)	CKSQYB475K6R3		R 255	(A,26,63)	RS1/16SS104J	
C 1118	(B,133,14)	CKSRYB104K25		R 256	(A,25,62)	RS1/16SS104J	
C				R 259	(A,27,66)	RS1/16SS0R0J	
Unit Number : CWX3624				R 261	(A,26,65)	RS1/16SS104J	
Unit Name : CD Core				R 262	(A,29,59)	RS1/16SS0R0J	B
Unit(S10.5COMP2-iPod-C2)							
MISCELLANEOUS				R 263	(A,27,63)	RS1/16SS0R0J	
IC 201	(A,35,46)	IC PE5647A		R 273	(B,18,48)	RS1/16SS103J	
IC 205	(B,24,49)	IC 341S2159		R 277	(B,18,50)	RS1/16SS103J	
IC 301	(A,28,15)	IC BA5839FP		R 282	(A,30,61)	RS1/16SS240J	
Q 101	(B,58,69)	Transistor 2SA1577		R 283	(A,29,61)	RS1/16SS240J	
Q 102	(B,48,58)	Chip Transistor 2SB1689					
Q 201	(B,27,54)	Transistor 2SA1577		R 284	(B,29,63)	RS1/16SS153J	
X 201	(A,22,37)	Ceramic Resonator 16.934 MHz CSS1603		R 285	(B,28,63)	RS1/16SS153J	
X 205	(B,33,63)	Oscillator 48.000 MHz CSS1753		R 291	(B,42,62)	RS1/16SS272J	
S 901	(A,55,37)	Switch(HOME) CSN1067		R 292	(B,24,43)	RS1/16SS272J	
S 903	(B,19,58)	Switch(DSCSNS) CSN1067		R 293	(B,27,52)	RS1/16SS472J	
S 904	(B,40,68)	Switch(12EJ) CSN1068					C
S 905	(B,25,69)	Switch(8EJ) CSN1068		R 294	(A,31,62)	RS1/16SS471J	
RESISTORS				R 307	(A,35,19)	RS1/16SS183J	
R 101	(B,61,74)	RS1/10SR2R4J		R 308	(A,37,19)	RS1/16SS183J	
R 102	(B,61,72)	RS1/10SR2R4J		R 309	(A,35,21)	RS1/16SS183J	
R 103	(B,61,71)	RS1/10SR2R7J		R 310	(A,37,22)	RS1/16SS183J	
R 104	(B,53,66)	RS1/16SS222J					
R 105	(B,44,57)	RS1/16SS102J		R 601	(B,30,31)	RS1/16SS0R0J	
R 107	(B,52,60)	RS1/16SS105J		R 602	(B,27,31)	RS1/16SS0R0J	
R 202	(A,27,32)	RS1/16SS473J		R 606	(B,28,23)	RS1/16S0R0J	
R 203	(A,51,44)	RS1/16S473J		R 701	(B,11,37)	RS1/16SS221J	
R 204	(A,23,58)	RS1/16SS221J		R 702	(A,23,56)	RS1/16SS221J	
R 206	(B,10,26)	RS1/16SS104J					
R 209	(B,18,52)	RS1/16SS103J		R 708	(B,15,37)	RS1/16S0R0J	D
R 210	(B,10,23)	RS1/16SS102J		R 712	(B,14,54)	RS1/16SS0R0J	
R 214	(B,49,50)	RS1/16SS472J		R 713	(B,14,53)	RS1/16SS0R0J	
R 216	(B,48,49)	RS1/16SS472J		CAPACITORS			
R 221	(A,51,48)	RS1/16SS103J		C 106	(B,56,67)	CKSQYB475K6R3	
R 222	(A,51,46)	RS1/16SS103J		C 202	(A,28,57)	CKSSYB104K10	
R 223	(B,13,43)	RS1/16SS473J		C 204	(A,23,59)	CKSSYB103K16	
R 225	(A,50,50)	RS1/16SS103J		C 205	(B,27,41)	CKSQYB475K6R3	
R 226	(A,50,51)	RS1/16SS393J		C 206	(A,23,40)	CKSSYB104K10	
R 227	(B,47,51)	RS1/16SS562J					
R 228	(B,44,51)	RS1/16SS122J		C 207	(A,24,37)	CKSRYB104K16	
R 229	(B,46,53)	RS1/16SS472J		C 209	(B,35,34)	CEVW220M6R3	E
R 230	(B,21,25)	RS1/16SS0R0J		C 210	(B,29,37)	CKSSYB104K10	
R 232	(B,45,51)	RS1/16SS122J		C 211	(A,28,35)	CKSSYB104K10	
R 233	(B,26,59)	RS1/16SS103J		C 212	(A,28,30)	CKSRYB104K16	
				C 213	(A,46,39)	CKSSYB104K10	
				C 214	(A,29,33)	CKSSYB104K10	
				C 216	(A,51,52)	CKSSYB332K50	
				C 217	(A,48,51)	CKSSYB104K10	
				C 218	(A,50,52)	CKSSYB473K10	
				C 219	(A,47,53)	CKSSYB104K10	
				C 220	(A,48,53)	CKSSYB182K50	F
				C 221	(A,46,54)	CKSSYB104K10	
				C 222	(B,45,53)	CCSSCH560J50	
				C 223	(B,47,53)	CCSSCH4R0C50	

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

C 224 (A,44,55)
C 226 (A,42,59)
C 227 (A,42,61)
C 228 (B,41,61)
C 229 (B,48,60)

CKSSYB104K10
CCSSCH680J50
CCSSCH470J50
CKSSYB103K16
CKSSYB104K10

R 3 (A,34,26)
R 4 (A,27,29)
R 5 (A,20,24)

RS1/16S473J
RS1/16S103J
RS1/16S103J

C 236 (A,49,58)
C 239 (B,46,51)
C 240 (A,38,61)
C 243 (B,22,41)
C 250 (A,52,48)

CKSSYB104K10
CCSSCH220J50
CKSSYB104K10
CKSQYB475K6R3
CKSSYB102K50

R 7 (A,34,23)
R 8 (A,31,23)
R 9 (A,31,20)
R 21 (A,33,39)
R 22 (B,21,38)

RS1/16S103J
RS1/16S101J
RS1/16S103J
RS1/16S101J
RS1/16S473J

C 251 (A,52,46)
C 260 (A,28,61)
C 261 (B,33,66)
C 262 (B,31,66)
C 290 (B,26,45)

CKSSYB102K50
CKSSYB104K10
CCSSCH8R0D50
CCSSCH8R0D50
CKSSYB104K10

R 23 (A,23,37)
R 24 (B,24,40)
R 25 (A,24,40)
R 26 (A,21,41)
R 27 (A,21,43)

RS1/16S473J
RS1/16S101J
RS1/16S101J
RS1/16S332J
RS1/16S105J

C 293 (B,43,61)
C 294 (B,24,41)
C 303 (A,36,19)
C 304 (A,36,21)
C 307 (A,22,11)

CKSSYB102K50
CKSSYB104K10
CKSSYB472K25
CKSSYB223K16
CKSRYB104K16

R 28 (B,20,43)
R 29 (B,20,40)
R 36 (A,15,5)
R 37 (A,14,7)
R 41 (A,7,22)

RS1/16S332J
RS1/16S105J
RS1/16S103J
RS1/16S104J
RS1/16S103J

C 308 (B,11,18)
C 703 (B,14,35)
C 704 (B,11,36)
C 711 (A,31,25)

CKSRYB105K10
CCSSCH101J50
CKSSYB102K50
CKSSYB104K10

R 43 (A,10,21)
R 44 (A,8,20)
R 45 (A,14,21)
R 46 (A,4,18)
R 47 (A,15,15)

RS1/16S393J
RS1/16S393J
RAB4C101J
RS1/16S103J
RS1/16S203J

D
Unit Number : CWN3394
Unit Name : Bluetooth Unit

MISCELLANEOUS

IC 21 (A,29,43) IC
IC 22 (A,23,43) IC
IC 23 (B,22,40) IC
IC 36 (A,10,14) IC
IC 51 (A,16,27) IC

TC74VHC02FTS1
TC7PAU04FU
TC7PAU04FU
AK2301A
AN6123MS

R 48 (A,18,18)
R 49 (A,7,8)
R 50 (A,14,8)
R 51 (A,20,28)
R 52 (A,7,5)

RS1/16S103J
RS1/16S203J
RS1/16S473J
RS1/16S105J
RS1/16S103J

IC 56 (B,9,13) IC
IC 66 (B,12,21) IC
Q 1 (A,30,13) Chip Transistor
Q 2 (A,34,29) Chip Transistor
Q 21 (B,27,40) Transistor

PCM1742KE
NJM4558V
DTC124EUA
DTC124EUA
UMD2N

R 57 (B,15,15)
R 58 (A,30,36)
R 66 (B,18,21)
R 67 (B,16,24)
R 68 (B,12,19)

RAB4C101J
RS1/16S821J
RS1/16S103J
RS1/16S103J
RS1/16S473J

Q 22 (B,31,43) Chip Transistor
Q 23 (B,27,43) Transistor
Q 36 (A,17,8) Chip Transistor
Q 37 (A,16,12) Chip Transistor
L 1 (A,23,24) Inductor

DTC124EUA
UMD2N
DTC124EUA
DTC124EUA
CTF1394

R 69 (B,10,24)
R 70 (B,7,24)
R 71 (B,9,19)
R 72 (B,3,17)
R 73 (B,5,19)

RS1/16S103J
RS1/16S103J
RS1/16S473J
RS1/16S103J
RS1/16S103J

L 21 (A,26,39) Inductor
L 22 (A,23,40) Inductor
L 23 (B,22,44) Inductor
L 36 (A,5,11) Inductor
L 51 (A,11,32) Inductor

CTF1379
CTF1379
CTF1379
LCYC2R2K1608
CTF1379

R 76 (A,4,30)
R 77 (B,5,31)
R 78 (A,6,32)
R 79 (B,11,32)
R 80 (A,3,33)

RS1/16S101J
RS1/16S101J
RS1/16S101J
RS1/16S0R0J
RS1/16S101J

L 56 (B,17,7) Inductor
L 57 (B,12,9) Inductor
X 21 (A,18,41) Oscillator 11.289 6 MHz CSS1670
X 22 (B,17,42) Oscillator 12.288 MHz CSS1698
Y 1 (B,26,21) Bluetooth Module CWX3619

CTF1379
CTF1379

R 81 (B,10,29)
R 82 (B,16,29)
R 83 (B,9,32)
R 84 (B,16,31)
R 85 (B,9,39)

RS1/16S101J
RS1/16S101J
RS1/16S101J
RS1/16S0R0J
RS1/16S101J

RESISTORS

R 1 (A,22,12)
R 2 (A,31,32)

RS1/16S334J
RS1/16S103J

R 86 (B,6,39)
R 87 (B,12,39)

RAB4C101J
RAB4C101J

CAPACITORS

C 1 (A,28,12)
C 4 (A,26,21)
C 5 (A,22,16)
C 7 (A,25,13)
C 8 (A,23,21)

CKSRYB104K16
CSZS100M16
CKSRYB104K16
CSZS1R0M16
CKSRYB104K16

C 9 (A,23,19)
C 10 (A,22,15)

CKSRYB104K16
CCSRCH101J50

5		6
<u>Circuit Symbol and No.</u>		<u>Part No.</u>
C 21	(A,28,40)	CKSRYB104K16
C 22	(A,21,38)	CKSRYB105K10
C 23	(A,19,37)	CCSRCH120J50
C 24	(A,19,45)	CCSRCH120J50
C 25	(B,22,43)	CKSRYB105K10
C 26	(B,14,42)	CCSRCH120J50
C 27	(B,16,38)	CCSRCH120J50
C 28	(A,27,36)	CKSRYB102K50
C 36	(A,3,15)	CKSYB106K6R3
C 37	(A,5,15)	CKSRYB104K16
C 38	(A,10,22)	CKSRYB105K10
C 41	(A,10,19)	CCSRCH101J50
C 42	(A,6,20)	CKSRYB105K10
C 43	(A,4,20)	CKSRYB105K10
C 44	(A,11,8)	CKSRYB334K10
C 45	(A,12,5)	CKSRYB105K10
C 46	(A,16,17)	CCSRCH101J50
C 47	(A,7,7)	CCSRCH101J50
C 48	(A,9,5)	CKSRYB105K10
C 49	(A,9,8)	CKSRYB105K10
C 50	(A,16,20)	CKSRYB105K10
C 51	(A,19,24)	CKSRYB334K10
C 52	(A,16,24)	CCSRCH331J50
C 53	(A,18,29)	CKSYB106K6R3
C 54	(A,15,30)	CKSRYB105K10
C 55	(A,13,29)	CKSRYB104K16
C 56	(B,7,7)	CKSYB106K6R3
C 57	(B,14,12)	CKSRYB102K50
C 58	(B,16,11)	CKSYB106K6R3
C 59	(B,14,9)	CKSRYB102K50
C 60	(B,10,7)	CKSYB106K6R3
C 61	(B,14,6)	CKSRYB102K50
C 66	(B,16,18)	CKSYB475K16
C 67	(B,9,17)	CKSYB475K16
C 68	(B,16,21)	CCSRCH221J50
C 69	(B,16,26)	CCSRCH391J50
C 70	(B,9,26)	CKSYB106K6R3
C 71	(B,6,25)	CKSRYB105K10
C 72	(B,4,19)	CCSRCH391J50
C 73	(B,7,20)	CCSRCH221J50
C 76	(A,13,45)	CKSRYB102K50

E

Unit Number : CWN2338

Unit Name : Antenna Unit

MISCELLANEOUS

ANT1101	BT Antenna	CWX3132
ANT1102	Connector	CKS5749

F

Unit Number : CWN3286

Unit Name : Panel Unit

MISCELLANEOUS

D 1970	(A,5,19) LED	CL220PGC
D 1971	(B,66,7) Diode	UDZS10(B)
D 1972	(B,68,7) Diode	UDZS10(B)

7		8
<u>Circuit Symbol and No.</u>		<u>Part No.</u>
D 1973	(B,46,17) Diode	MALS068X
D 1974	(B,56,6) Diode	MALS068X
D 1975	(B,52,10) Diode	MALS068X
D 1976	(B,47,16) Diode	MALS068X
D 1977	(B,21,14) Diode	MALS068X
S 1970	(A,78,40) Push Switch(EJECT)	CSG1174

RESISTORS

R 1970	(B,63,10)	RS1/16S101J
R 1971	(B,66,10)	RS1/16S101J

CAPACITORS

C 1970	(B,37,18)	CKSRYB104K16
C 1971	(B,60,6)	CKSRYB104K16

Miscellaneous Parts List

	Pickup Unit(P10.5)(Service)	CXX1942
M 1	Motor Unit(SPINDLE)	CXC7134
M 2	Motor Unit(LOADING/CARRIAGE)	CXC4026
⚠	Fuse(10 A)(Cord Assy)	CEK1136
	Resistor(Cord Assy)	RS1/2PMF102J
	FAN MOTOR	CXM1288