
2. EXPLODED VIEWS AND PARTS LIST

2.1 PACKING

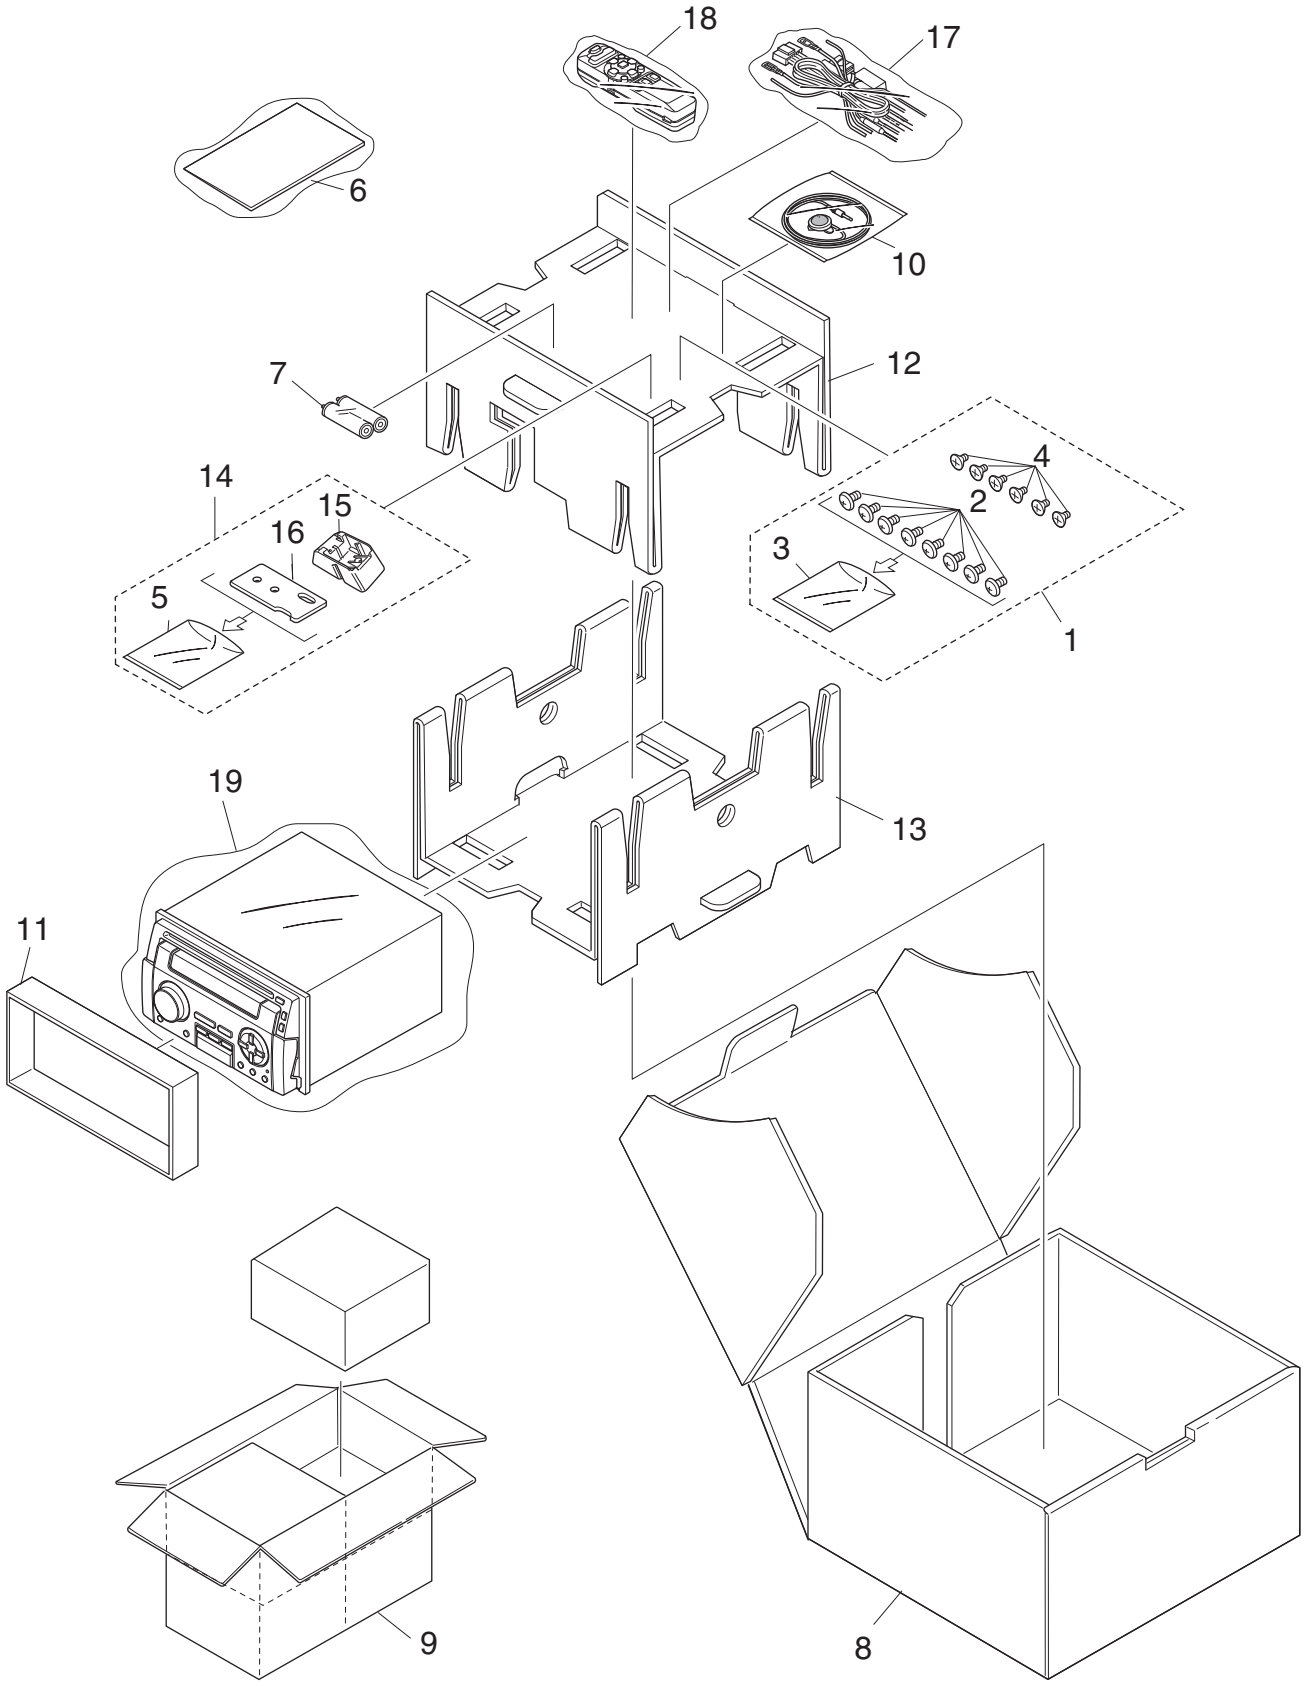

NOTE:

● Parts marked by "*"are generally unavailable because they are not in our Master Spare Parts List.

● Screws adjacent to ∇ mark on the product are used for disassembly.

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw Assy	CEA2189
	2	Screw	BMZ50P060FMC
*	3	Polyethylene Bag	CEG-127
	4	Screw	CMZ50P060FMC
	5	Polyethylene Bag	CZE3188
	6-1	Owner's Manual	See Contrast table(2)
	6-2	Installation Manual	See Contrast table(2)
*	6-3	Card	See Contrast table(2)
	6-4	Polyethylene Bag	CEG1116
	6-5	Panel	See Contrast table(2)
	7	Battery	CEX1006
	8	Carton	See Contrast table(2)
	9	Contain Box	See Contrast table(2)
	10	Microphone Assy	CPM1022
	11	Protector(front)	CHP2229
	12	Protector(upper)	CHP2227
	13	Protector(lower)	CHP2228
	14	Base Assy	CEA2426
*	15	Base	CNS5031
*	16	Sheet	CZA3371
	17	Cord Assy	CDE6179
	18	Remote Control Assy	CXB3877
	19	Cover	See Contrast table(2)

(2) CONTRAST TABLE


FH-P8800/UC and FH-P8800/ES are constructed same except for the following:


			Part No.	
Mark	No.	Symbol and Description	FH-P8800/UC	FH-P8800/ES
	6-1	Owner's Manual	CRD3127	CRD3129
	6-2	Installation Manual	CRD3128	CRD3130
*	6-3	Card	ARY1048	Not used
	6-5	Panel	CAH1543	Not used
	8	Carton	CHG4022	CHG4023
	9	Contain Box	CHL3992	CHL3993
	19	Cover	CEG1177	CEG1074

● **Owner's Manual,Installation Manual**

Model	Part No.	Language
FH-P8800/UC	CRD3127	English,French
	CRD3128	English,French
FH-P8800/ES	CRD3129	English,Korean
	CRD3130	English,Korean

2.2 EXTERIOR

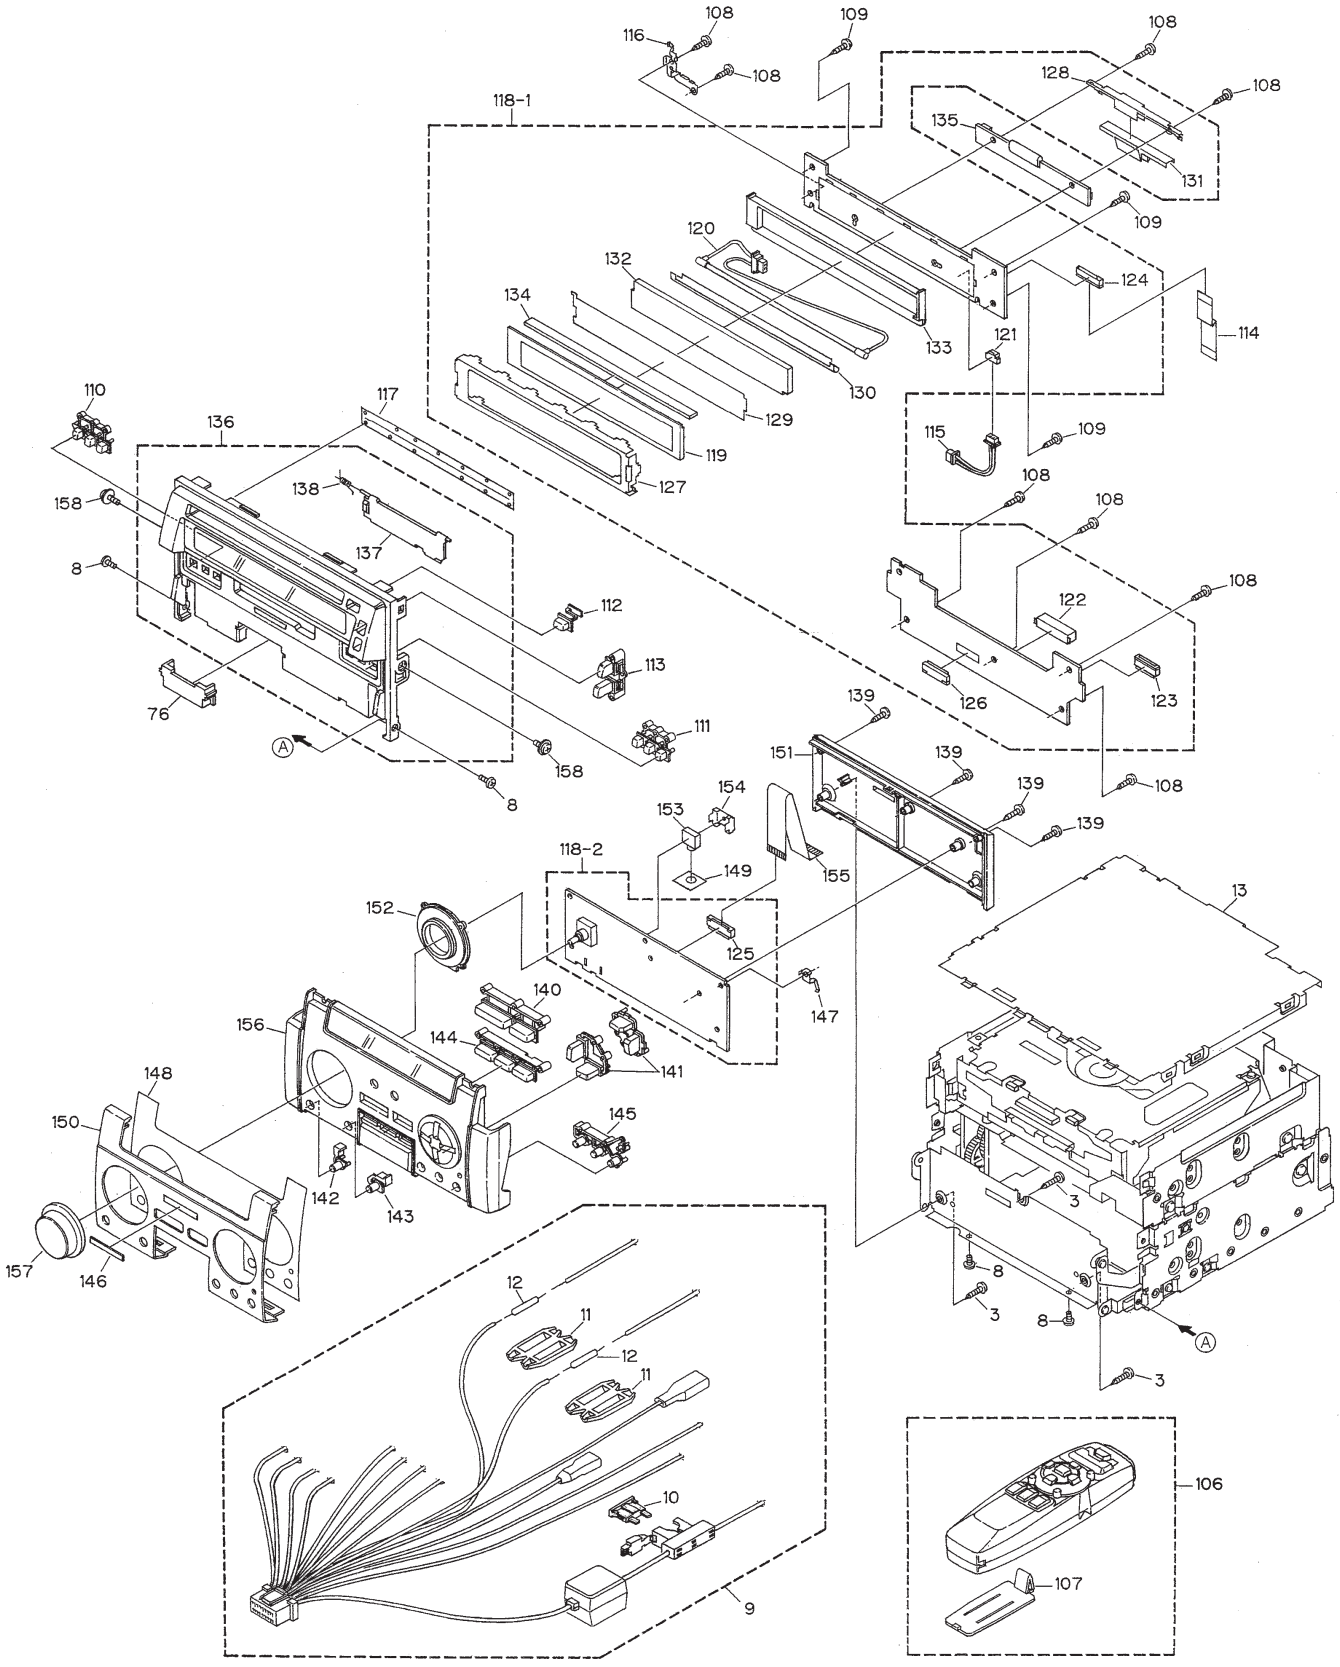
108
116
109
108
128
108
118-1
135
131
109
120
132
124
134
133
121
114
130
129
110
117
136
119
115
109
127
108
158
138
108
8
137
122
108
112
126
123
113
76
139
111
151
139
158
139
154
139
153
108
8
118-2
149
155
152
125
13
140
147
156
144
141
148
145
150
142
143
3
157
146
8
3
8
3
12
11
12
11
10
106
107
9

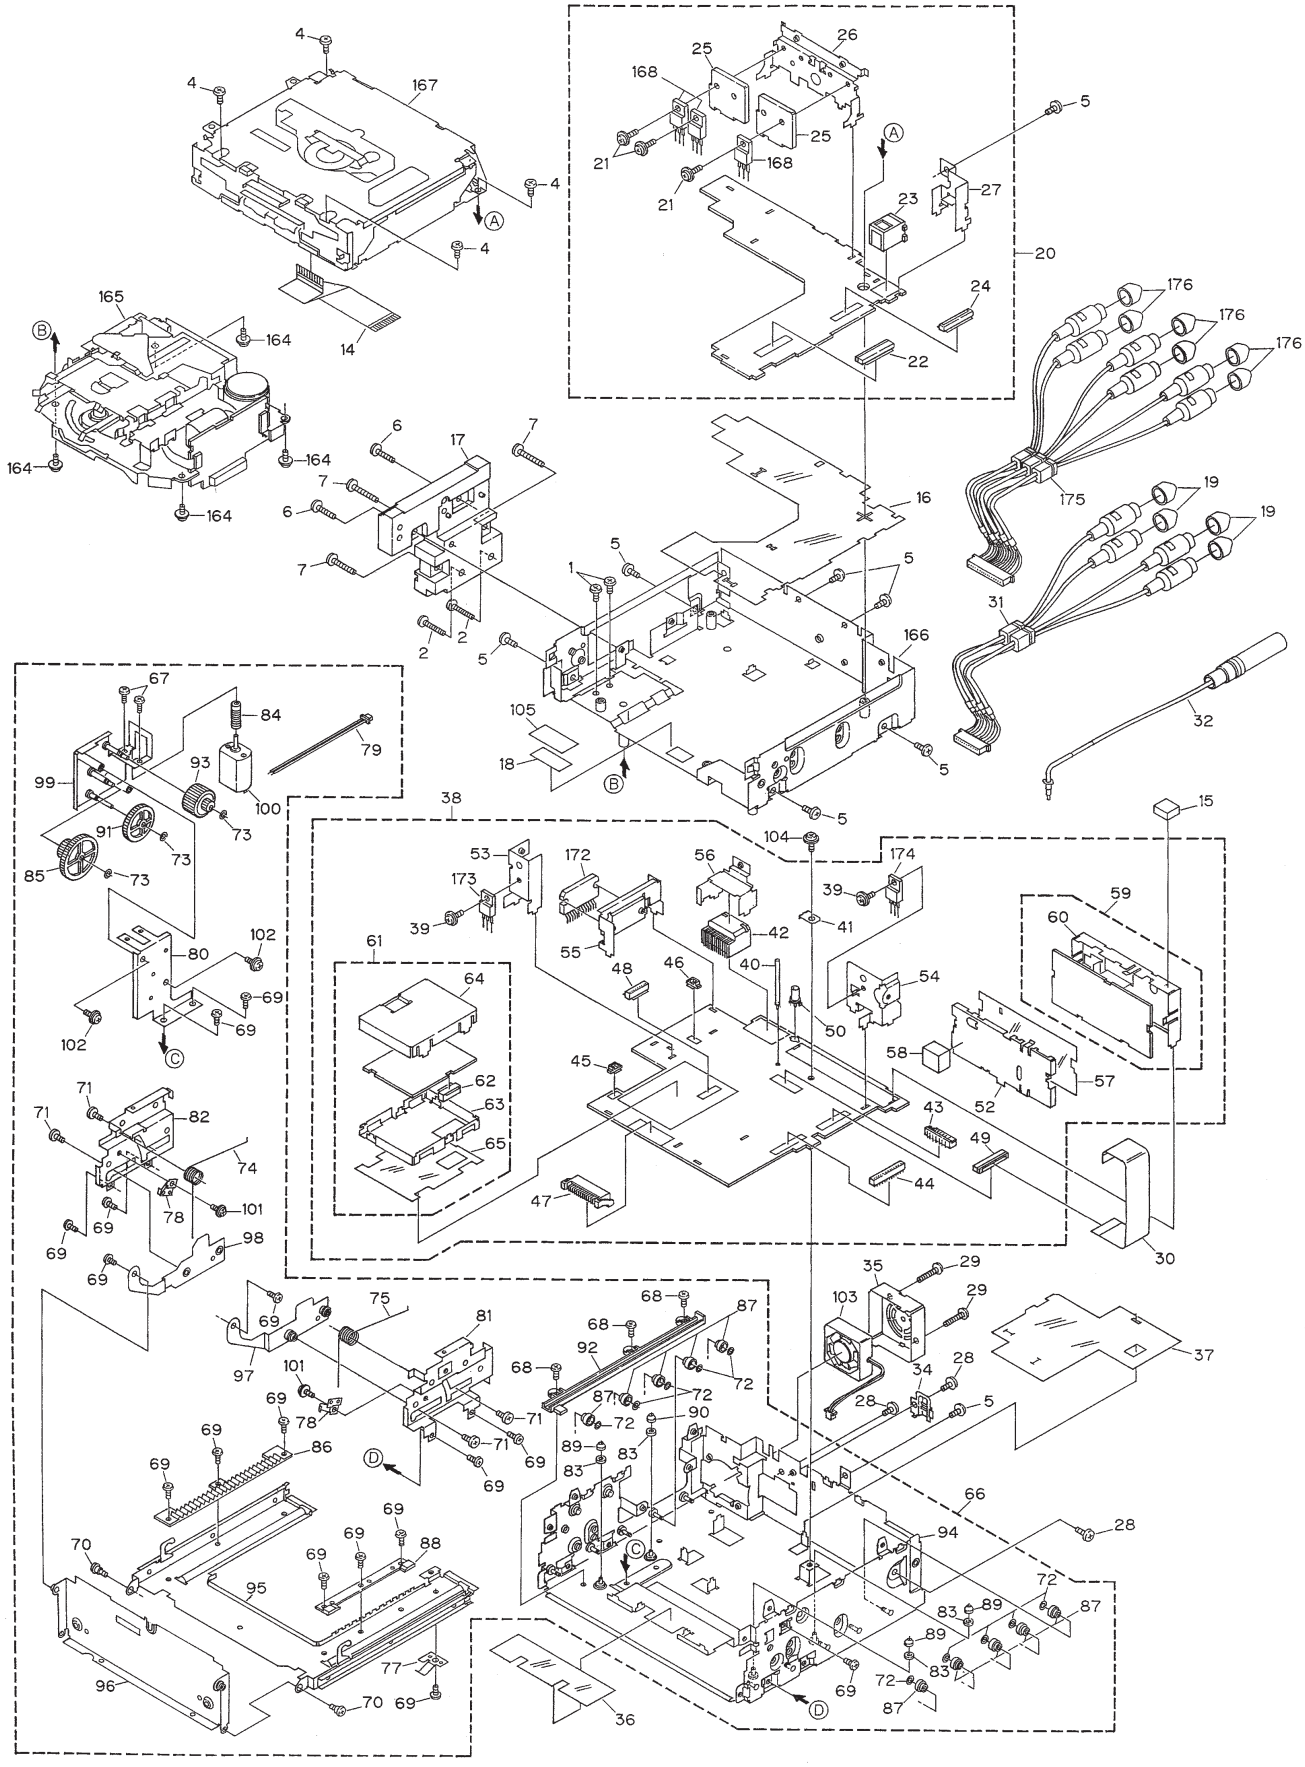

(1) EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.
1	Screw	BMZ20P025FMC
2	Screw	BMZ26P160FMC
3	Screw	BPZ20P140FZK
4	Screw	BSZ26P060FMC
5	Screw	BSZ30P050FMC
6	Screw	BSZ30P100FMC
7	Screw	BSZ30P140FMC
8	Screw(M2x2.5)	CBA1085
9	Cord Assy	CDE6179
10	Fuse(10A)	CEK1136
11	Cap	CNS1472
12	Resistor	RS1/2PMF102J
13	Case	CNB2452
14	Cable	CDE6116
15	Cushion	CNM6564
16	Insulator	CNM6173
17	Heat Sink	CNR1538
18	Tape	CNM6569
19	Cap	See Contrast table(2)
20	CD Power Unit	See Contrast table(2)
21	Screw	ASZ26P100FMC
22	Connector(CN1241)	CKS2420
23	Connector(CN1271)	CKS3410
24	Connector(CN1251)	CKS3770
25	Heat Sink	CNC7579
26	Holder	CNC8235
27	Holder	CNC8236
28	Screw	BSZ30P050FMC
29	Screw	CBA1384
30	Cable	CDE5897
31	Cord	See Contrast table(2)
32	Antenna Cord	CDH1191
33	•••••	
34	Holder	CNC4709
35	Holder	CNC7577
36	Insulator	CNM6172
37	Insulator	CNM6295
38	Audio Amp Unit	See Contrast table(2)
39	Screw	ASZ26P060FMC
40	Clamper	CEF1009
41	Terminal(CN403)	CKF1059
42	Plug(CN1901)	CKM1278
43	Plug(CN351)	See Contrast table(2)
44	Connector(CN201)	CKS2752
45	Connector(CN851)	CKS3124
46	Connector(CN852)	CKS3124
47	Plug(CN801)	CKS3539
48	Connector(CN751)	CKS3781
49	Connector(CN701)	CKS3802
50	Pin Jack(CN401)	CKX1046
51	•••••	
52	Holder	CNC7533
53	Holder	CNC8230
54	Holder	CNC8231
55	Holder	CNC8232
56	Holder	CNC8233
57	Insulator	CNM5967
58	Spacer	CNM6406
59	FM/AM Tuner Unit	CWE1501
60	Holder	CNC7532
61	DSP Unit	See Contrast table(2)
62	Connector(CN3001)	CKS3782
63	Case	CNC8015
64	Case	CNC8237
65	Insulator	CNM5626
66	Drive Mechanism Assy	See Contrast table(2)
67	Screw	BMZ20P025FMC
68	Screw(M2x2.5)	CBA1085
69	Screw(M2x3)	CBA1154
70	Screw(M2x1.5)	CBA1430
71	Screw	CBA1465
72	Washer	CBF1038
73	Washer	CBF1039
74	Spring	CBH2321
75	Spring	CBH2322
76	Cover	CNS5510
77	Spring	CBL1361
78	Spring	CBL1434
79	Cord	CDE5929
80	Holder	CNC7608
81	Holder	CNC8593
82	Holder	CNC8594
83	Spacer	CNM6202
84	Gear	CNV5296
85	Gear	CNV5297
86	Rack	CNV5299
87	Roller	CNV5301
88	Lever	CNV6042
89	Roller	CNV5735
90	Roller	CNV5814

Mark	No.	Description	Part No.
	91	Gear	CNV5815
	92	Guide	CNV6008
	93	Gear	CNV5655
	94	Chassis Unit	See Contrast table(2)
	95	Frame Unit	CXB4820
	96	Case Unit	CXB4817
	97	Arm Unit	CXB4818
	98	Arm Unit	CXB4819
	99	Holder Unit	CXB4098
*	100	Motor	CXM1111
	101	Screw	IMS20P025FMC
	102	Screw	IMS20P040FMC
	103	Fan Motor	CXM1132
	104	Screw	ISS26P055FUC
	105	Ferrite	CTX1076
	106	Remote Control Assy	CXB3877
	107	Battery Cover	CNS5032
	108	Screw	BPZ20P060FMC
	109	Screw	BPZ20P080FZK
	110	Button(1,2,3)	CAC6282
	111	Button(4,5,6)	CAC6283
	112	Button(CD EJECT)	CAC6284
	113	Button(ANGLE)	CAC6285
	114	Cable	CDE6331
	115	Connector	CDE5927
	116	Conductor	CNC8518
*	117	Cover	CNM6786
	118	Grille PCB Unit	See Contrast table(2)
	119	LCD(LCD901)	CAW1552
	120	CFL	CEL1618
	121	Connector(CN905)	CKS2191
	122	Socket(CN901)	CKS3552
	123	Connector(CN902)	CKS3774
	124	Connector(CN904)	CKS3774
	125	Connector(CN906)	CKS4126
	126	Connector(CN903)	CKS4127
	127	Holder	CNC8519
	128	Shield	CNC8526
	129	Sheet	CNM6475
	130	Reflector	CNM6477
	131	Insulator	CNM6488
	132	Lighting Conductor	CNV5959
	133	Housing	CNV5960
	134	Connector	CNV5961
	135	Inverter Unit	CWX2430
	136	Grille Unit	See Contrast table(2)
	137	Door	CAT2088
	138	Spring	CBH1371
	139	Screw	BPZ20P120FMC
	140	Button(SOURCE,TAPE)	CAC6287


Mark	No.	Description	Part No.
	141	Button(CROSS)	CAC6288
	142	Button(ATT)	CAC6289
	143	Button(D)	CAC6291
	144	Button(DISPLAY,SCROLL,BAND)	CAC6292
	145	Button(D,F,A)	CAC6293
*	146	Badge	CAH1703
	147	Conductor	CNC8520
	148	Tape	CNM6478
	149	Sheet	CNM6568
	150	Panel	CNR1553
	151	Cover	CNS5675
	152	Lighting Conductor	CNV6000
	153	Jack(CN907)	CKN1016
	154	Holder	CNC7575
	155	PCB	CNP5589
	156	Grille Unit	CXB4545
	157	Knob Unit	CXB4549
	158	Screw	ISS26P060FMC
	159-163	•••••	
	164	Screw	ASZ26P060FMC
	165	Cassette Mechanism Module	EXK3350
	166	Chassis Unit	CXB3723
	167	CD Mechanism Module(S8)	CXK5251
	168	Transistor(Q1201,1211,1221)	2SD2396
	169-171	•••••	
	172	IC(IC351)	PAL005A
	173	Transistor(Q806)	2SD2396
	174	IC(IC1901)	NJM7805FA
	175	Cord	See Contrast table(2)
	176	Cap	See Contrast table(2)

(2) CONTRAST TABLE

FH-P8800/UC and FH-P8800/ES are constructed same except for the following:

Mark No.	Symbol and Description	Part No.	
		FH-P8800/UC	FH-P8800/ES
19	Cap	Not used	CNV2680
20	CD Power Unit	CWM6725	CWM6726
31	Cord	Not used	CDE6103
38	Audio Amp Unit	CWM6733	CWM6734
43	Plug(CN351)	CKS1246	CKS1242
61	DSP Unit	CWM6755	CWM6756
66	Drive Mechanism Unit	CXB4843	CXB4858
94	Chassis Unit	CXB4821	CXB4857
118	Grille PCB Unit	CWM6747	CWM6748
136	Grille Unit	CXB5735	CXB5734
175	Cord	CDE6104	Not used
176	Cap	CNV2680	Not used


2.3 CD MECHANISM MODULE

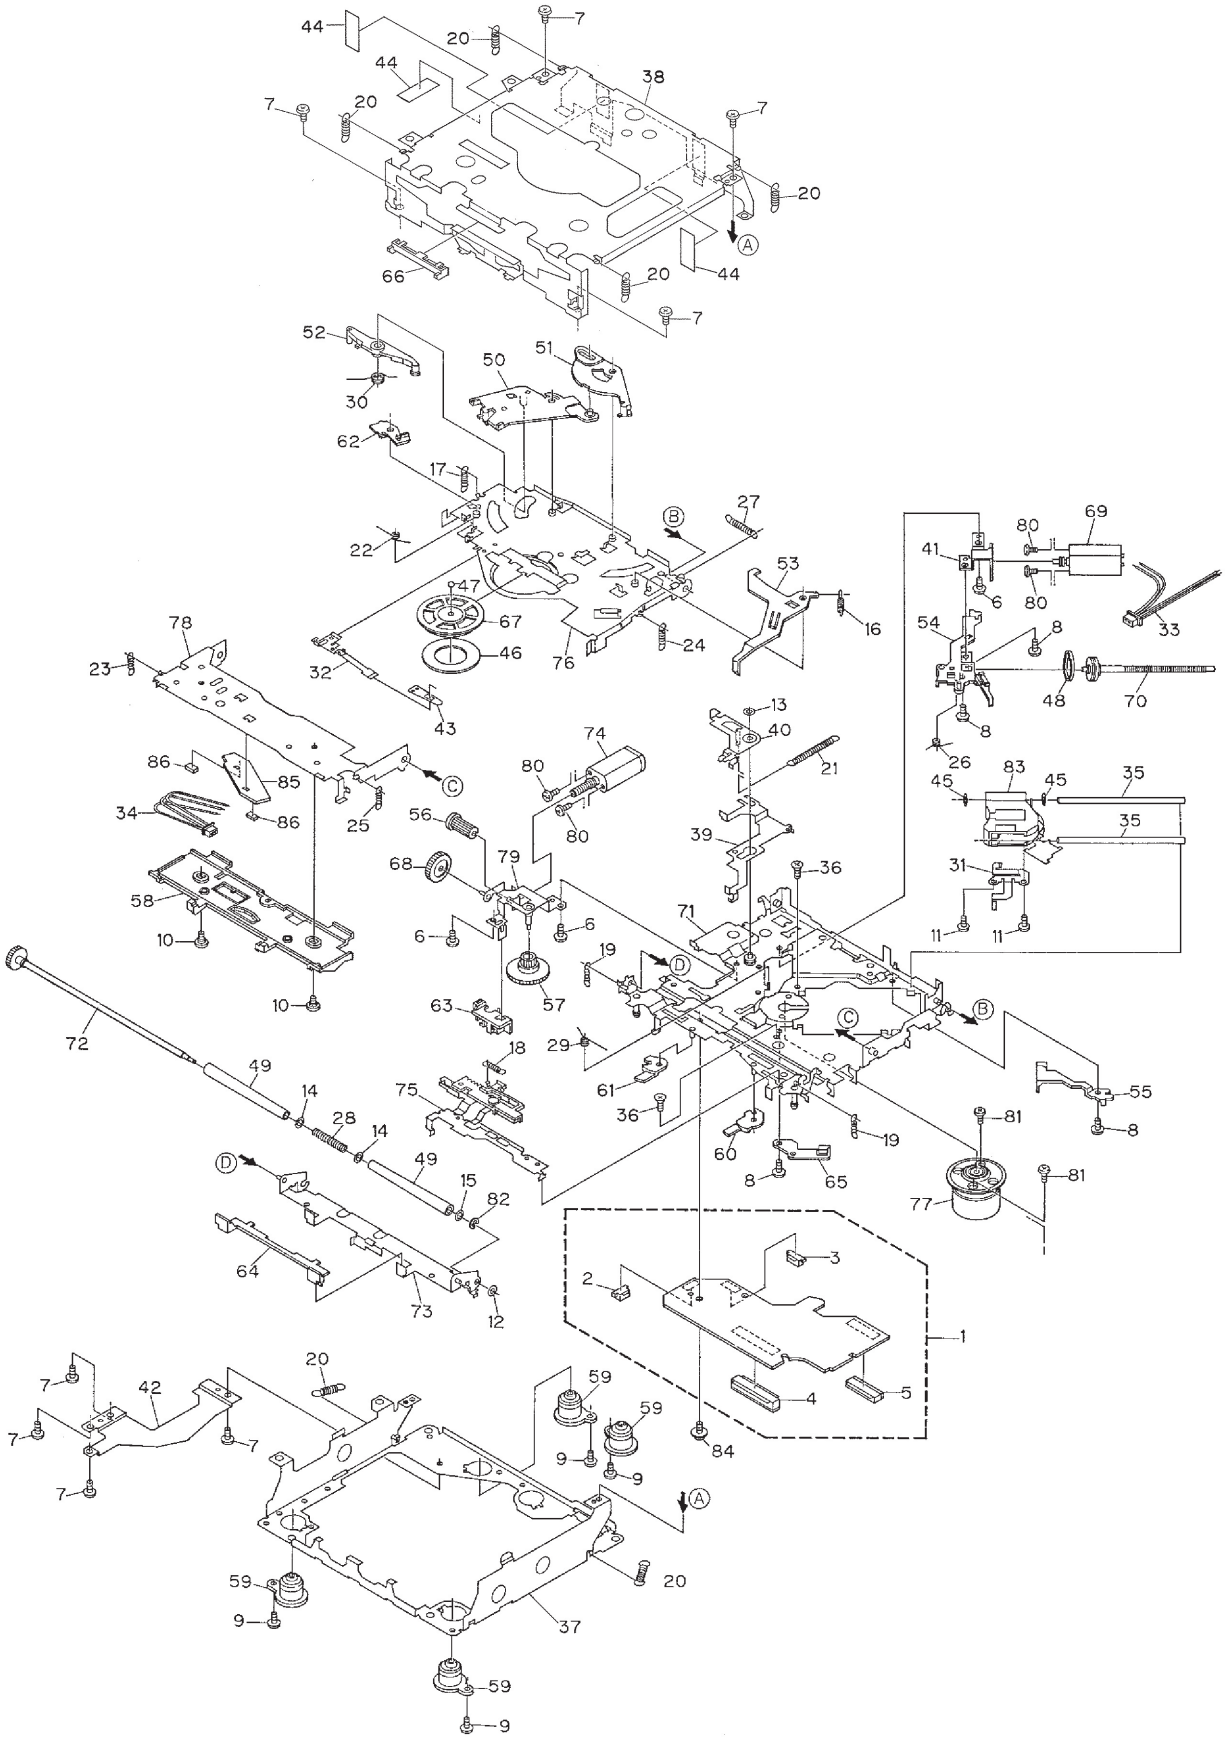

● CD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Control Unit	CWX2358
	2	Connector(CN802)	CKS2192
	3	Connector(CN801)	CKS2193
	4	Connector(CN701)	CKS2771
	5	Connector(CN101)	CKS3486
	6	Screw	BMZ20P030FZK
	7	Screw	BSZ20P040FZK
	8	Screw(M2×3)	CBA1077
	9	Screw(M2×6)	CBA1489
	10	Screw	CBA1243
	11	Screw(M2×4)	CBA1362
	12	Washer	CBF1037
	13	Washer	CBF1038
	14	Washer	CBF1060
*	15	Washer	CBF1075
	16	Spring	CBH2079
	17	Spring	CBH2117
	18	Spring	CBH2278
	19	Spring	CBH2110
	20	Spring	CBH2282
	21	Spring	CBH2114
	22	Spring	CBH2115
	23	Spring	CBH2080
	24	Spring	CBH2118
	25	Spring	CBH2161
	26	Spring	CBH2163
	27	Spring	CBH2189
	28	Spring	CBH2249
	29	Spring	CBH2260
	30	Spring	CBH2262
	31	Spring	CBL1367
	32	Spring	CBL1369
	33	Connector	CDE5531
	34	Connector	CDE5532
	35	Shaft	CLA3304
	36	Screw(M2.6×6)	CBA1458
	37	Frame	CNC7544
	38	Frame	CNC7545
	39	Lever	CNC7546
	40	Arm	CNC7739
	41	Bracket	CNC7798
	42	Plate	CNC8090
	43	Spacer	CNM3315
	44	Sheet	CNM6170
	45	Cushion	CNM6204
	46	Sheet	CNM6215
	47	Ball	CNR1189
	48	Belt	CNT1086
	49	Roller	CNV4509
	50	Arm	CNV5246
	51	Arm	CNV5247
	52	Arm	CNV5248
	53	Arm	CNV5249
	54	Guide	CNV5254
	55	Guide	CNV5255
	56	Gear	CNV5257
	57	Gear	CNV5256
	58	Guide	CNV6176
	59	Damper	CNV5266
	60	Arm	CNV5359
	61	Arm	CNV5360
	62	Arm	CNV5361
	63	Guide	CNV5509
	64	Guide	CNV5510
	65	Holder	CNV5578
	66	Guide	CNV5751
	67	Clamper	CNV5758
	68	Gear	CNV5813
	69	Motor Unit(M1)	CXB2190
	70	Screw Unit	CXB2191
	71	Chassis Unit	CXB2192
	72	Gear Unit	CXB2193
	73	Arm Unit	CXB2194
	74	Motor Unit(M2)	CXB2195
	75	Lever Unit	CXB2553
	76	Arm Unit	CXB2554
	77	Motor Unit(M3)	CXB2562
	78	Arm Unit	CXB2795
	79	Bracket Unit	CXB4071
	80	Screw	JFZ20P025FMC
	81	Screw	JGZ17P025FZK
	82	Washer	YE15FUC
	83	Pickup Unit(Service)(P8)	CXX1285
	84	Screw	IMS26P030FMC
*	85	PCB	CNX2982
	86	Photo-transistor(Q1, 2)	CPT230SX-TU

2.4 CASSETTE MECHANISM MODULE

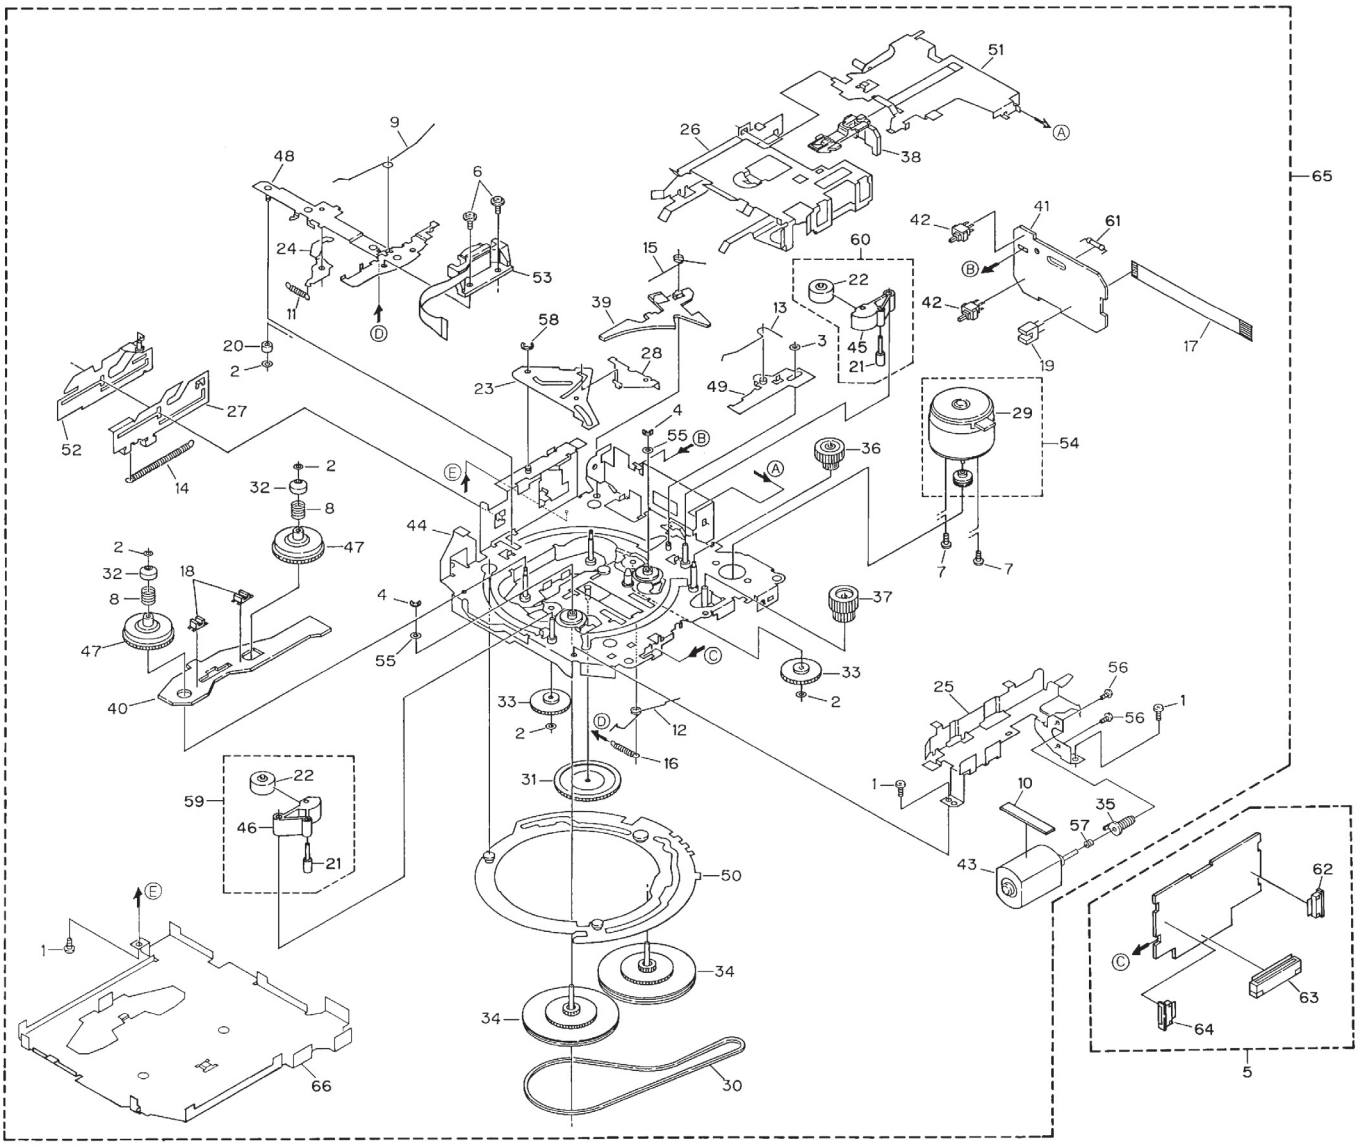

● CASSETTE MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.
1	Screw	BSZ20P040FMC
2	Washer	CBE1037
3	Washer	CBF1038
4	Washer	CBG1003
5	Deck Unit	EWM1007
6	Screw	EBA1028
7	Screw	EBA1037
8	Spring	EBH1531
9	Spring	EBH1575
10	Cushion	ENM1034
11	Spring	EBH1515
12	Spring	EBH1587
13	Spring	EBH1517
14	Spring	EBH1518
15	Spring	EBH1519
16	Spring	EBH1537
17	Cord	EDD1015
18	Photo-interrupter(EGN2,3)	EGN1006
19	Photo-interrupter(EGN1)	EGN1005
20	Roller	ENR1031
21	Shaft	ELA1373
22	Pinch Roller	ENV1518
23	Arm	ENC1396
24	Arm	ENC1397
25	Guide	ENC1398
26	Holder	ENC1417
27	Lever	ENC1448
28	Arm	ENC1401
29	Motor	EXM1027
30	Belt	ENT1027
31	Gear	ENV1347
32	Collar	ENV1508
33	Gear	ENV1350
34	Flywheel	ENV1410
35	Worm Gear	ENV1439

Mark No.	Description	Part No.
36	Worm Wheel	ENV1440
37	Gear	ENR1028
38	Lever	ENV1442
39	Arm	ENV1445
40	Gathering PCB	ENX1037
41	PCB	ENP1152
42	Switch(S1,2)	ESG1004
43	Motor Unit(M2)	EXA1485
44	Chassis Unit	EXA1511
45	Pinch Holder	ENV1485
46	Pinch Holder	ENV1486
47	Reel Unit	EXA1456
48	Head Base Unit	EXA1457
49	Lever Unit	EXA1438
50	Gear Unit	EXA1436
51	Frame Unit	EXA1458
52	Lever Unit	EXA1439
53	Head Assy(HD1)	EXA1452
54	Motor Unit(M1)	EXA1454
55	Washer	HBF-179
56	Screw	BMZ20P022FMC
57	Spring	EBH1545
58	Washer	YE20FUC
59	Pinch Holder Unit	EXA1529
60	Pinch Holder Unit	EXA1528
61	Connector(R1)	RD1/4HM181J
62	Connector(CN253)	CKS2129
63	Connector(CN251)	CKS1711
64	Connector(CN252)	CKS2127
65	Mecha. Unit(Service)	EXA3030
66	Cover	ENC1413

5. ELECTRICAL PARTS LIST

NOTES:

● Parts whose parts numbers are omitted are subject to being not supplied.

● The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○J,RS1/○○S○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

B Unit Number: CWE1501
Unit Name : FM/AM Tuner Unit

MISCELLANEOUS

=====Circuit Symbol and No.		===Part Name	Part No.
IC	1	IC	PML002A
IC	2	IC	PM4008A
IC	3	IC	BR9010FV
Q	1	Transistor	2SC4081
Q	2	Transistor	DTC124EU
Q	3	FET	3SK263
Q	51	Transistor	2SC4081
Q	201	FET	2SK932
Q	202	Transistor	DTC124EU
Q	204	Transistor	2SC4081
D	1	Diode	KV1410(23)
D	2	Diode	1SV248
D	6	Diode	KV1410(23)
D	201	Diode	DAN217U
D	202	Diode	MA147
D	903	Diode	KV1410(23)
D	904	Diode	SVC253
L	1	Coil	CTC1155
L	3	Inductor	LCTB1R5K2125
L	4	Coil	CTC1155
L	201	Inductor	LCTB330K1608
L	202	Inductor	LFEA102J
L	203	Inductor	LCTA121J3225
L	901	Coil	CTC1154
L	902	Inductor	LCTA3R3J3225
L	904	Inductor	LCTBR47K1608
L	905	Inductor	LCTBR47K1608
T	51	Coil	CTE1132
CF	51	Ceramic Filter	CTF1442
CF	52	Ceramic Filter	CTF1442
CF	53	Ceramic Filter	CTF1442
CF	202	Ceramic Filter	CTF1476
X	901	Crystal Resonator 10.250MHz	CSS1432

RESISTORS

=====Circuit Symbol and No.		===Part Name	Part No.
R	1		RS1/16S183J
R	2		RS1/16S103J
R	5		RS1/16S0R0J
R	7		RS1/16S273J
R	8		RS1/16S473J
R	9		RS1/16S223J
R	10		RS1/16S473J
R	11		RS1/16S221J
R	12		RS1/16S103J
R	13		RS1/16S104J
R	16		RS1/16S223J
R	17		RS1/16S221J
R	18		RS1/16S221J
R	19		RS1/16S473J
R	20		RS1/16S470J
R	31		RS1/16S0R0J
R	51		RS1/16S470J
R	52		RS1/16S103J
R	53		RS1/16S103J
R	54		RS1/16S331J
R	55		RS1/16S331J
R	56		RS1/16S560J
R	57		RS1/16S560J
R	58		RS1/16S102J
R	59		RS1/16S225J
R	60		RS1/16S133J
R	61		RS1/16S433J
R	101		RS1/16S333J
R	102		RS1/16S103J
R	103		RS1/16S333J
R	104		RS1/16S562J
R	106		RS1/16S0R0J
R	108		RS1/16S0R0J
R	110		RS1/16S154J
R	111		RS1/16S273J
R	113		RS1/16S222J
R	114		RS1/16S333J
R	115		RS1/16S334J
R	116		RS1/16S473J
R	202		RS1/16S472J
R	203		RS1/16S225J
R	204		RS1/16S102J
R	205		RS1/16S220J
R	206		RS1/16S471J
R	208		RS1/16S104J
R	209		RS1/16S104J
R	210		RS1/16S563J
R	213		RS1/16S223J
R	251		RS1/16S225J
R	902		RS1/16S103J
R	904		RS1/16S473J
R	907		RS1/16S103J
R	908		RS1/16S681J
R	909		RS1/16S473J
R	914		RS1/16S562J

CAPACITORS

=====Circuit Symbol and No.		===Part Name	Part No.
C	1		CCSQCH4R0C50
C	6		CKSQYB105K10
C	8		CKSRYB222K50
C	10		CCSRCH220J50
C	11		CCSRCH150J50
C	12		CCSRCH8R0D50
C	14		CCSRCJ3R0C50
C	15		CKSRYB103K50
C	16		CKSRYB222K50
C	17		CKSRYB222K50

=====Circuit Symbol and No.		===Part Name	Part No.
C	18		CCSRCJ3R0C50
C	19		CKSRYB103K50
C	20		CKSRYB103K50
C	21		CKSRYB103K50
C	24		CKSQYB334K16
C	26		CKSRYB472K50
C	30		CCSRCH220J50
C	32		CCSRCH470J50
C	35		CKSRYB103K50
C	51		CKSRYB103K50
C	52		CKSRYB473K16
C	53		CCSRCK2R0C50
C	54		CKSRYB103K50
C	55		CKSRYB104K16
C	56		CKSRYB104K16
C	58		CKSQYB224K16
C	101		CEALNP100M10
C	102		CCSRCH151J50
C	103		CKSRYB473K16
C	105		CKSRYB682K25
C	106		CEALR68M50
C	107		CKSRYB103K50
C	108		CKSQYB474K16
C	109		CKSQYB474K16
C	110		CKSRYB104K16
C	111		CKSRYB104K16
C	112		CKSRYB104K16
C	113		CKSRYB123K25
C	114		CEAL220M6R3
C	115		CKSRYB473K16
C	116		CEAL2R2M50
C	117		CKSRYB102K50
C	120		CKSRYB183K25
C	121		CKSRYB332K50
C	122		CKSRYB562K25
C	123		CKSRYB681K50
C	125		CKSRYB103K50
C	126		CKSRYB103K50
C	127		CEAL2R2M50
C	128		CKSRYB103K50
C	201		CCSRCH471J50
C	202		CCSRCH100D50
C	203		CKSRYB104K16
C	204		CKSRYB332K50
C	205		CKSRYB103K50
C	206		CKSRYB104K16
C	207		CKSRYB473K16
C	208		CCSRCH560J50
C	209		CEAL470M6R3
C	210		CKSRYB103K50
C	211		CKSRYB103K50
C	212		CCSRCH101J50
C	215		CKSRYB223K25
C	216		CKSQYB334K16
C	217		CKSRYB103K50
C	219		CKSQYB105K10
C	220		CKSRYB104K16
C	221		CKSRYB473K16
C	222		CKSQYB334K16
C	223		CKSQYB474K16
C	224		CKSRYB104K16
C	225		CKSRYB272K50
C	226		CKSRYB682K25
C	902		CCSRCH270J50
C	904		CKSRYB223K25

=====Circuit Symbol and No.		===Part Name	Part No.
C	905		CKSRYB103K50
C	906		CCSRTH100D50
C	907		CCSRTH150J50
C	909		CCSRTH100D50
C	910		CKSRYB332K50
C	912		CKSQYB474K16
C	913		CKSRYB223K25
C	914		CKSRYB682K25
C	915		CKSQYB223K25
C	916		CKSQYB474K16
C	917		CKSYB475K10
C	918		CKSRYB223K25
C	919		CKSQYB225K10
C	920		CCSRCH270J50
C	921		CCSRCH270J50
C	922		CKSYB105K16
C	923		CKSRYB103K50

A Unit Number: CWM6733(FH-P8800/UC)
Unit Name : Audio Amp Unit

MISCELLANEOUS

IC	101	IC	BA3131FS
IC	102	IC	BA3131FS
IC	103	IC	NJM4558MD
IC	104	IC	NJM4558MD
IC	351	IC	PAL005A
IC	402	IC	S-81250SGUP
IC	601	IC	PE5028A
IC	603	IC	S-80734ANDYI
IC	851	IC	BA6288FS
IC	852	IC	TC7W14FU
IC	853	Photo-interrupter	GP1S94J
IC	855	Photo-interrupter	GP1S94J
IC	1901	IC	NJM7805FA
IC	1902	IC	TPD1018F
Q	301	Transistor	DTA124EU
Q	302	Transistor	DTA124EU
Q	303	Transistor	IMD2A
Q	304	Transistor	DTC124EU
Q	305	Transistor	2SC4116
Q	306	Transistor	DTC114TU
Q	307	Transistor	IMD2A
Q	308	Transistor	DTC144EU
Q	309	Transistor	DTC144EU
Q	310	Transistor	IMD2A
Q	351	Transistor	FMG13
Q	352	Transistor	FMG13
Q	353	Transistor	FMG13
Q	354	Transistor	FMG13
Q	355	Transistor	FMG13
Q	356	Transistor	FMG13
Q	401	Transistor	2SC4116
Q	601	Transistor	DTA114EU
Q	602	Transistor	DTC124EK
Q	801	Transistor	2SA1036K
Q	802	Transistor	2SA1162
Q	803	Transistor	DTC124EU
Q	804	Transistor	2SA1036K
Q	805	Transistor	DTC124EU
Q	806	Transistor	2SD2396
Q	807	Transistor	DTC124EK
Q	808	Transistor	IMD3A
Q	851	Transistor	2SD1760F5
Q	852	Transistor	IMD2A
Q	854	Transistor	2SD1859
Q	855	Transistor	IMD3A

Circuit Symbol and No.	Part Name	Part No.
Q 1901	Transistor	2SB1243
Q 1902	Transistor	DTC123EK
Q 1903	Transistor	2SC2412K
Q 1904	Transistor	2SA1586
Q 1905	Transistor	DTC114EK
Q 1906	Transistor	2SC2412K
D 301	Diode	DAN202U
D 302	Diode	DAN202U
D 303	Diode	DAN202U
D 304	Diode	MA8075(H)
D 305	Diode	DAN202U
D 306	Diode	DAN202U
D 351	Diode	ERA15-02VH
D 352	Diode	ERA15-02VH
D 404	Diode	MA719
D 405	Diode	HZS16(1)
D 601	Diode	MA110
D 751	Diode	MA110
D 801	Diode	HZS9L(B2)
D 802	Diode	MA8056(M)
D 803	Diode	MA8039(L)
D 851	Diode	MA110
D 852	Diode	MA110
D 853	Diode	HZS7L(C2)
D 854	Diode	UDZ13(B)
D 1901	Diode	MA8082(L)
D 1902	Diode	DAN202U
D 1903	Diode	ERA15-02VH
D 1904	Diode	ERA15-02VH
D 1906	Diode	ERA15-02VH
D 1907	Diode	ERA15-02VH
D 1908	Diode	MA110
D 1909	Diode	MA8062(H)
L 403	Inductor	LCTB4R7K2125
L 411	Inductor	CTF1420
L 412	Inductor	CTF1420
L 601	Inductor	CTF1420
L 610	Inductor	CTF1399
L 611	Inductor	CTF1410
L 612	Inductor	CTF1410
L 701	Inductor	CTF1410
L 751	Inductor	CTF1420
L 752	Inductor	CTF1420
L 754	Inductor	CTF1410
L 801	Inductor	CTF1399
L 1901	Inductor	LCTB2R2K2125
X 601	Radiator 12.58291MHz	CSS1402
S 851	Spring Switch	CSN1046
S 853	Spring Switch	CSN1046
FU 701	Micro-Fuse 2A	CEK1190
FU 801	Micro-Fuse 1A	CEK1191
FU 802	Micro-Fuse 400mA	CEK1184
FU 803	Micro-Fuse 200mA	CEK1189
FU 851	Micro-Fuse 400mA	CEK1184
	DSP Unit	CWM6755
	FM/AM Tuner Unit	CWE1501
BZ 601	Buzzer	CPV1012
AR 401		DSPS-201M

RESISTORS

Circuit Symbol and No.	Part Name	Part No.
R 101		RS1/16S102J
R 102		RS1/16S102J
R 103		RS1/16S473J
R 104		RS1/16S473J
R 105		RS1/16S183J
R 106		RS1/16S183J
R 107		RS1/16S113J
R 108		RS1/16S113J
R 109		RS1/16S102J
R 110		RS1/16S102J
R 111		RS1/16S473J
R 112		RS1/16S473J
R 113		RS1/16S333J
R 114		RS1/16S333J
R 115		RS1/16S133J
R 116		RS1/16S133J
R 117		RS1/16S102J
R 118		RS1/16S102J
R 119		RS1/16S104J
R 120		RS1/16S104J
R 121		RS1/16S123J
R 122		RS1/16S123J
R 123		RS1/16S474J
R 124		RS1/16S474J
R 127		RS1/16S102J
R 128		RS1/16S102J
R 129		RS1/16S473J
R 130		RS1/16S473J
R 133		RS1/16S0R0J
R 134		RS1/16S0R0J
R 135		RS1/16S102J
R 136		RS1/16S102J
R 137		RS1/16S473J
R 138		RS1/16S473J
R 139		RS1/16S113J
R 140		RS1/16S113J
R 141		RS1/16S114J
R 142		RS1/16S114J
R 143		RS1/16S102J
R 144		RS1/16S102J
R 145		RS1/16S104J
R 146		RS1/16S104J
R 147		RS1/16S183J
R 148		RS1/16S183J
R 149		RS1/16S113J
R 150		RS1/16S113J
R 153		RS1/16S102J
R 154		RS1/16S102J
R 155		RS1/16S103J
R 156		RS1/16S103J
R 157		RS1/16S103J
R 158		RS1/16S103J
R 159		RS1/16S203J
R 160		RS1/16S203J
R 161		RS1/16S133J
R 162		RS1/16S133J
R 163		RS1/16S153J
R 164		RS1/16S153J
R 165		RS1/16S102J
R 166		RS1/16S102J
R 167		RS1/16S472J
R 168		RS1/16S472J
R 169		RS1/16S472J
R 170		RS1/16S472J
R 171		RS1/16S472J
R 172		RS1/16S472J
R 173		RS1/16S331J
R 174		RS1/16S331J
R 175		RS1/16S331J
R 176		RS1/16S331J
R 177		RS1/16S103J
R 178		RS1/16S103J
R 179		RS1/16S103J
R 180		RS1/16S103J
R 181		RS1/16S103J
R 182		RS1/16S103J
R 183		RS1/16S271J
R 184		RS1/16S271J
R 185		RS1/16S223J
R 186		RS1/16S223J

Circuit Symbol and No.	Part Name	Part No.
R 187		RS1/16S102J
R 188		RS1/16S102J
R 201		RA3C473J
R 202		RA3C473J
R 203		RA4C222J
R 204		RA4C222J
R 205		RA4C222J
R 206		RS1/16S681J
R 302		RS1/16S222J
R 303		RS1/16S222J
R 304		RS1/16S473J
R 305		RS1/16S473J
R 306		RS1/16S103J
R 307		RS1/16S103J
R 308		RS1/16S331J
R 310		RS1/16S0R0J
R 311		RS1/10S103J
R 351		RS1/16S391J
R 352		RS1/16S391J
R 353		RS1/16S391J
R 354		RS1/16S391J
R 355		RS1/16S223J
R 356		RS1/16S223J
R 359		RS1/16S391J
R 360		RS1/16S391J
R 361		RS1/16S391J
R 362		RS1/16S391J
R 363		RS1/16S223J
R 364		RS1/16S223J
R 367		RS1/16S391J
R 368		RS1/16S391J
R 369		RS1/16S391J
R 370		RS1/16S391J
R 371		RS1/16S223J
R 372		RS1/16S223J
R 401		RS1/10S681J
R 402		RS1/10S473J
R 403		RS1/10S681J
R 404		RS1/10S473J
R 405		RS1/16S272J
R 406		RS1/16S272J
R 407		RS1/16S162J
R 408		RS1/16S162J
R 409		RS1/16S473J
R 410		RS1/16S472J
R 411		RS1/16S473J
R 412		RA3C681J
R 413		RS1/10S103J
R 417		RS1/10S393J
R 418		RS1/16S473J
R 419		RS1/10S473J
R 420		RS1/10S222J
R 421		RS1/10S222J
R 437		RS1/10S0R0J
R 438		RS1/8S181J
R 439		RS1/16S681J
R 440		RS1/16S0R0J
R 601		RS1/16S102J
R 602		RS1/16S473J
R 603		RS1/16S102J
R 604		RS1/16S473J
R 605		RS1/16S472J
R 606		RA3C473J
R 609		RS1/16S473J
R 613		RA4C221J
R 614		RS1/16S221J
R 615		RS1/16S473J
R 616		RA4C473J
R 617		RS1/16S102J
R 618		RS1/16S124J
R 619		RS1/16S123J
R 620		RS1/10S202J
R 621		RS1/10S152J
R 622		RS1/16S473J
R 624		RS1/16S221J
R 625		RS1/16S473J
R 626		RS1/16S473J
R 627		RS1/16S102J
R 628		RS1/16S473J
R 629		RS1/16S473J
R 630		RS1/16S102J
R 631		RS1/16S102J
R 633		RS1/16S473J
R 634		RS1/16S103J
R 635		RS1/16S103J
R 636		RS1/16S0R0J
R 637		RS1/16S0R0J
R 751		RS1/16S221J
R 752		RS1/16S221J
R 753		RA3C221J
R 801		RS1/10S152J
R 802		RS1/10S223J
R 803		RS1/10S223J
R 804		RS1/10S472J
R 805		RS1/10S223J
R 806		RS1/10S332J
R 807		RS1/2PMF391J
R 812		RS1/16S102J
R 814		RS1/16S561J
R 816		RS1/16S222J
R 822		RS1/16S102J
R 823		RS1/16S471J
R 824		RS1/16S102J
R 825		RS1/16S471J
R 854		RS1/16S102J
R 855		RS1/16S102J
R 857		RS1/10S221J
R 860		RS1/16S473J
R 861		RS1/16S221J
R 862		RS1/16S473J
R 863		RS1/16S221J
R 864		RD1/4PU271J
R 1901		RS1/10S473J
R 1902		RS1/10S102J
R 1903		RD1/4PU102J
R 1904		RS1/10S223J
R 1905		RS1/10S473J
R 1906		RS1/16S102J
R 1907		RS1/16S472J
R 1908		RS1/16S472J
R 1909		RS1/16S183J
R 1910		RS1/10S102J
R 1911		RS1/10S103J
R 1912		RS1/10S223J
R 1913		RS1/10S473J
R 1914		RS1/10S472J

CAPACITORS

Circuit Symbol and No.	Part Name	Part No.
C 101		CCSRCH151J50
C 102		CCSRCH151J50
C 103		CCSRCH151J50
C 104		CCSRCH151J50
C 105		CCSRCH100D50
C 106		CCSRCH100D50
C 107		CEJA100M16
C 108		CEJA101M10
C 109		CEJA101M10
C 111		CEJANP4R7M16

=====Circuit Symbol and No.		===Part Name	Part No.
C	112		CEJANP4R7M16
C	115		CCSRCH220J50
C	116		CCSRCH220J50
C	117		CCSRCH151J50
C	118		CCSRCH151J50
C	119		CEJA100M16
C	120		CEJA101M10
C	121		CEJA101M10
C	123		CEV100M16
C	124		CEV100M16
C	125		CEVNP2R2M35
C	126		CEVNP2R2M35
C	127		CEV2R2M50
C	128		CEV2R2M50
C	129		CKSRYB331K50
C	130		CKSRYB331K50
C	131		CKSRYB331K50
C	132		CKSRYB331K50
C	133		CEJA4R7M35
C	134		CEV4R7M25
C	135		CKSRYB103K50
C	136		CKSRYB103K50
C	137		CEV100M16
C	138		CEV100M16
C	139		CEV100M16
C	140		CEV100M16
C	141		CEWAR101M10
C	142		CEWAR101M10
C	201		CKSRYB103K50
C	202		CEJA101M16
C	203		CEWAS100M16
C	204		CEWAS100M16
C	205		CEJA100M16
C	301		CEJA330M10
C	351		CKSYB474K16
C	352		CKSYB474K16
C	353		CKSYB474K16
C	354		CKSYB474K16
C	355	4700µF/16V	CCH1302
C	356		CKSYB104K50
C	357		CEJA1R0M50
C	358		CKSYB225K16
C	359		CEJA100M16
C	360		CKSYB473K50
C	361		CEWAR100M16
C	362		CEWAR100M16
C	363		CKSRYB102K50
C	364		CKSRYB102K50
C	367		CEWAR100M16
C	368		CEWAR100M16
C	369		CKSRYB102K50
C	370		CKSRYB102K50
C	371		CKSQYB474K16
C	372		CKSQYB474K16
C	373		CEWAR100M16
C	374		CEWAR100M16
C	375		CKSRYB102K50
C	376		CKSRYB102K50
C	377		CKSQYB474K16
C	378		CKSQYB474K16
C	379		CKSYB225K16
C	401		CKSRYB183K25
C	402		CKSRYB183K25
C	403		CCSQCH101J50
C	404		CEJA101M10
C	405		CKSQYB472K50
C	408		CCSQCH101J50
C	409		CCSQCH101J50
C	410		CKSQYB103K50
C	429		CEJA4R7M35

=====Circuit Symbol and No.		===Part Name	Part No.
C	430		CEJA4R7M35
C	432		CKSQYB103K50
C	433	470µF/16V	CCH1183
C	434		CKSQYB225K10
C	435		CKSQYB473K25
C	436		CKSQYB473K25
C	438		CCSQCH101J50
C	439		CKSRYB103K50
C	606		CKSRYB104K16
C	607		CCSRCH200J50
C	608		CCSRCH200J50
C	611		CKSQYB103K50
C	616		CEJA2R2M50
C	618		CKSQYB103K50
C	624		CKSYB102K50
C	626		CKSRYB103K50
C	751		CCSRCH220J50
C	752		CCSRCH220J50
C	753		CCSRCH220J50
C	754		CCSRCH220J50
C	755		CCSRCH220J50
C	756		CKSQYB105K10
C	757		CCSQCH101J50
C	758		CCSQCH101J50
C	759		CKSQYB105K10
C	760		CCSRCH101J50
C	801		CKSQYB103K50
C	802		CKSRYB103K50
C	803		CEJA100M16
C	804		CKSQYB103K50
C	806		CKSRYB221K50
C	807		CKSRYB221K50
C	808		CEJA100M16
C	809		CEJA101M10
C	811		CEVNP4R7M16
C	812		CKSQYB103K50
C	854		CKSQYB103K50
C	855		CKSQYB103K50
C	856		CKSQYB102K50
C	857		CCSQCH101K50
C	858		CEJA470M10
C	859		CKSQYB103K50
C	860		CEJA100M16
C	861		CKSQYB103K50
C	862		CKSQYB103K50
C	1901		CKSRYB103K50
C	1902		CEJA470M6R3
C	1903	470µF/16V	CCH1183
C	1904		CKSYB225K16
C	1905		CKSQYB473K50
C	1906		CKSQYB473K50
C	1907		CKSRYB473K16
C	1908		CEJA1R0M50
C	1909		CKSYB104K50

A Unit Number: CWM6734(FH-P8800/ES)
Unit Name : Audio Amp Unit

MISCELLANEOUS

IC	101	IC	BA3131FS
IC	102	IC	BA3131FS
IC	103	IC	NJM4558MD
IC	104	IC	NJM4558MD
IC	351	IC	PAL005A
IC	402	IC	S-81250SGUP
IC	601	IC	PE5028A
IC	603	IC	S-80734ANDYI
IC	851	IC	BA6288FS
IC	852	IC	TC7W14FU

Circuit Symbol and No.		Part Name	Part No.
IC	853	Photo-interrupter	GP1S94J
IC	855	Photo-interrupter	GP1S94J
IC	1901	IC	NJM7805FA
IC	1902	IC	TPD1018F
Q	301	Transistor	DTA124EU
Q	302	Transistor	DTA124EU
Q	303	Transistor	IMD2A
Q	304	Transistor	DTC124EU
Q	305	Transistor	2SC4116
Q	306	Transistor	DTC114TU
Q	307	Transistor	IMD2A
Q	308	Transistor	DTC144EU
Q	309	Transistor	DTC144EU
Q	310	Transistor	IMD2A
Q	351	Transistor	FMG13
Q	352	Transistor	FMG13
Q	353	Transistor	FMG13
Q	354	Transistor	FMG13
Q	401	Transistor	2SC4116
Q	601	Transistor	DTA114EU
Q	602	Transistor	DTC124EK
Q	801	Transistor	2SA1036K
Q	802	Transistor	2SA1162
Q	803	Transistor	DTC124EU
Q	804	Transistor	2SA1036K
Q	805	Transistor	DTC124EU
Q	806	Transistor	2SD2396
Q	807	Transistor	DTC124EK
Q	808	Transistor	IMD3A
Q	851	Transistor	2SD1760F5
Q	852	Transistor	IMD2A
Q	854	Transistor	2SD1859
Q	855	Transistor	IMD3A
Q	1901	Transistor	2SB1243
Q	1902	Transistor	DTC123EK
Q	1903	Transistor	2SC2412K
Q	1904	Transistor	2SA1586
Q	1905	Transistor	DTC114EK
Q	1906	Transistor	2SC2412K
D	301	Diode	DAN202U
D	302	Diode	DAN202U
D	303	Diode	DAN202U
D	304	Diode	MA8075(H)
D	305	Diode	DAN202U
D	306	Diode	DAN202U
D	351	Diode	ERA15-02VH
D	352	Diode	ERA15-02VH
D	404	Diode	MA719
D	405	Diode	HZS16(1)
D	601	Diode	MA110
D	751	Diode	MA110
D	801	Diode	HZS9L(B2)
D	802	Diode	MA8056(M)
D	803	Diode	MA8039(L)
D	851	Diode	MA110
D	852	Diode	MA110
D	853	Diode	HZS7L(C2)
D	854	Diode	UDZ13(B)
D	1901	Diode	MA8082(L)
D	1902	Diode	DAN202U
D	1903	Diode	ERA15-02VH
D	1904	Diode	ERA15-02VH
D	1906	Diode	ERA15-02VH
D	1907	Diode	ERA15-02VH
D	1908	Diode	MA110
D	1909	Diode	MA8062(H)
L	403	Inductor	LCTB4R7K2125
L	411	Inductor	CTF1420
L	412	Inductor	CTF1420
L	601	Inductor	CTF1420

Circuit Symbol and No.		Part Name	Part No.
L	610	Inductor	CTF1399
L	611	Inductor	CTF1410
L	612	Inductor	CTF1410
L	701	Inductor	CTF1410
L	751	Inductor	CTF1420
L	752	Inductor	CTF1420
L	754	Inductor	CTF1410
L	801	Inductor	CTF1399
L	1901	Inductor	LCTB2R2K2125
X	601	Radiator 12.58291MHz	CSS1402
S	851	Spring Switch	CSN1046
S	853	Spring Switch	CSN1046
FU	701	Micro-Fuse 2A	CEK1190
FU	801	Micro-Fuse 1A	CEK1191
FU	802	Micro-Fuse 400mA	CEK1184
FU	803	Micro-Fuse 200mA	CEK1189
FU	851	Micro-Fuse 400mA	CEK1184
		DSP Unit	CWM6755
		FM/AM Tuner Unit	CWE1501
BZ	601	Buzzer	CPV1012
AR	401		DSPS-201M-S00B

RESISTORS

R	101	RS1/16S102J
R	102	RS1/16S102J
R	103	RS1/16S473J
R	104	RS1/16S473J
R	105	RS1/16S183J
R	106	RS1/16S183J
R	107	RS1/16S113J
R	108	RS1/16S113J
R	109	RS1/16S102J
R	110	RS1/16S102J
R	111	RS1/16S473J
R	112	RS1/16S473J
R	113	RS1/16S333J
R	114	RS1/16S333J
R	115	RS1/16S133J
R	116	RS1/16S133J
R	117	RS1/16S102J
R	118	RS1/16S102J
R	119	RS1/16S104J
R	120	RS1/16S104J
R	121	RS1/16S123J
R	122	RS1/16S123J
R	123	RS1/16S474J
R	124	RS1/16S474J
R	127	RS1/16S102J
R	128	RS1/16S102J
R	129	RS1/16S473J
R	130	RS1/16S473J
R	133	RS1/16S0R0J
R	134	RS1/16S0R0J
R	135	RS1/16S102J
R	136	RS1/16S102J
R	137	RS1/16S473J
R	138	RS1/16S473J
R	139	RS1/16S113J
R	140	RS1/16S113J
R	141	RS1/16S114J
R	142	RS1/16S114J
R	143	RS1/16S102J
R	144	RS1/16S102J
R	145	RS1/16S104J
R	146	RS1/16S104J
R	147	RS1/16S183J
R	148	RS1/16S183J
R	149	RS1/16S113J

=====Circuit Symbol and No.	===Part Name	Part No.
R 150		RS1/16S113J
R 153		RS1/16S102J
R 154		RS1/16S102J
R 155		RS1/16S103J
R 156		RS1/16S103J
R 157		RS1/16S103J
R 158		RS1/16S103J
R 159		RS1/16S203J
R 160		RS1/16S203J
R 161		RS1/16S133J
R 162		RS1/16S133J
R 163		RS1/16S153J
R 164		RS1/16S153J
R 165		RS1/16S102J
R 166		RS1/16S102J
R 167		RS1/16S472J
R 168		RS1/16S472J
R 169		RS1/16S472J
R 170		RS1/16S472J
R 171		RS1/16S472J
R 172		RS1/16S472J
R 173		RS1/16S331J
R 174		RS1/16S331J
R 175		RS1/16S331J
R 176		RS1/16S331J
R 177		RS1/16S103J
R 178		RS1/16S103J
R 179		RS1/16S103J
R 180		RS1/16S103J
R 181		RS1/16S103J
R 182		RS1/16S103J
R 183		RS1/16S271J
R 184		RS1/16S271J
R 185		RS1/16S223J
R 186		RS1/16S223J
R 187		RS1/16S102J
R 188		RS1/16S102J
R 201		RA3C473J
R 202		RA3C473J
R 203		RA4C222J
R 204		RA4C222J
R 205		RA4C222J
R 206		RS1/16S681J
R 302		RS1/16S222J
R 303		RS1/16S222J
R 304		RS1/16S473J
R 305		RS1/16S473J
R 306		RS1/16S103J
R 307		RS1/16S103J
R 308		RS1/16S331J
R 310		RS1/16S0R0J
R 311		RS1/10S103J
R 351		RS1/16S391J
R 352		RS1/16S391J
R 353		RS1/16S391J
R 354		RS1/16S391J
R 355		RS1/16S223J
R 356		RS1/16S223J
R 359		RS1/16S391J
R 360		RS1/16S391J
R 361		RS1/16S391J
R 362		RS1/16S391J
R 363		RS1/16S223J
R 364		RS1/16S223J
R 401		RS1/10S681J
R 402		RS1/10S473J
R 403		RS1/10S681J
R 404		RS1/10S473J
R 405		RS1/16S272J
R 406		RS1/16S272J

=====Circuit Symbol and No.	===Part Name	Part No.
R 407		RS1/16S162J
R 408		RS1/16S162J
R 409		RS1/16S473J
R 410		RS1/16S472J
R 411		RS1/16S473J
R 412		RA3C681J
R 413		RS1/10S103J
R 417		RS1/10S393J
R 418		RS1/16S473J
R 419		RS1/10S473J
R 420		RS1/10S222J
R 421		RS1/10S222J
R 437		RS1/10S0R0J
R 438		RS1/8S181J
R 439		RS1/16S681J
R 440		RS1/16S0R0J
R 601		RS1/16S102J
R 602		RS1/16S473J
R 603		RS1/16S102J
R 604		RS1/16S473J
R 605		RS1/16S472J
R 606		RA3C473J
R 609		RS1/16S473J
R 613		RA4C221J
R 614		RS1/16S221J
R 615		RS1/16S473J
R 616		RA4C473J
R 617		RS1/16S102J
R 618		RS1/16S124J
R 619		RS1/16S123J
R 620		RS1/10S202J
R 621		RS1/10S152J
R 622		RS1/16S473J
R 624		RS1/16S221J
R 625		RS1/16S473J
R 626		RS1/16S473J
R 627		RS1/16S102J
R 628		RS1/16S473J
R 629		RS1/16S473J
R 630		RS1/16S102J
R 631		RS1/16S102J
R 632		RS1/16S473J
R 633		RS1/16S473J
R 634		RS1/16S103J
R 635		RS1/16S103J
R 636		RS1/16S0R0J
R 637		RS1/16S0R0J
R 751		RS1/16S221J
R 752		RS1/16S221J
R 753		RA3C221J
R 801		RS1/10S152J
R 802		RS1/10S223J
R 803		RS1/10S223J
R 804		RS1/10S472J
R 805		RS1/10S223J
R 806		RS1/10S332J
R 807		RS1/2PMF391J
R 812		RS1/16S102J
R 814		RS1/16S561J
R 816		RS1/16S222J
R 822		RS1/16S102J
R 823		RS1/16S471J
R 824		RS1/16S102J
R 825		RS1/16S471J
R 854		RS1/16S102J
R 855		RS1/16S102J
R 857		RS1/10S221J
R 860		RS1/16S473J
R 861		RS1/16S221J
R 862		RS1/16S473J

=====Circuit Symbol and No.		===Part Name	Part No.
R	863		RS1/16S221J
R	864		RD1/4PU271J
R	1901		RS1/10S473J
R	1902		RS1/10S102J
R	1903		RD1/4PU102J
R	1904		RS1/10S223J
R	1905		RS1/10S473J
R	1906		RS1/16S102J
R	1907		RS1/16S472J
R	1908		RS1/16S472J
R	1909		RS1/16S183J
R	1910		RS1/10S102J
R	1911		RS1/10S103J
R	1912		RS1/10S223J
R	1913		RS1/10S473J
R	1914		RS1/10S472J

CAPACITORS

C	101		CCSRCH151J50
C	102		CCSRCH151J50
C	103		CCSRCH151J50
C	104		CCSRCH151J50
C	105		CCSRCH100D50
C	106		CCSRCH100D50
C	107		CEJA100M16
C	108		CEJA101M10
C	109		CEJA101M10
C	111		CEJANP4R7M16
C	112		CEJANP4R7M16
C	115		CCSRCH220J50
C	116		CCSRCH220J50
C	117		CCSRCH151J50
C	118		CCSRCH151J50
C	119		CEJA100M16
C	120		CEJA101M10
C	121		CEJA101M10
C	123		CEV100M16
C	124		CEV100M16
C	125		CEVNP2R2M35
C	126		CEVNP2R2M35
C	127		CEV2R2M50
C	128		CEV2R2M50
C	129		CKSRYB331K50
C	130		CKSRYB331K50
C	131		CKSRYB331K50
C	132		CKSRYB331K50
C	133		CEJA4R7M35
C	134		CEV4R7M25
C	135		CKSRYB103K50
C	136		CKSRYB103K50
C	137		CEV100M16
C	138		CEV100M16
C	139		CEV100M16
C	140		CEV100M16
C	141		CEWAR101M10
C	142		CEWAR101M10
C	201		CKSRYB103K50
C	202		CEJA101M16
C	203		CEWAS100M16
C	204		CEWAS100M16
C	205		CEJA100M16
C	301		CEJA330M10
C	351		CKSYB474K16
C	352		CKSYB474K16
C	353		CKSYB474K16
C	354		CKSYB474K16
C	355	4700µF/16V	CCH1302
C	356		CKSYB104K50
C	357		CEJA1R0M50
C	358		CKSYB225K16
C	359		CEJA100M16
C	360		CKSYB473K50
C	361		CEWAR100M16
C	362		CEWAR100M16
C	363		CKSRYB102K50
C	364		CKSRYB102K50
C	367		CEWAR100M16
C	368		CEWAR100M16
C	369		CKSRYB102K50
C	370		CKSRYB102K50
C	371		CKSQYB474K16
C	372		CKSQYB474K16
C	377		CKSQYB474K16
C	378		CKSQYB474K16
C	379		CKSYB225K16
C	401		CKSRYB183K25
C	402		CKSRYB183K25
C	403		CCSQCH101J50
C	404		CEJA101M10
C	405		CKSQYB472K50
C	408		CCSQCH101J50
C	409		CCSQCH101J50
C	410		CKSQYB103K50
C	429		CEJA4R7M35
C	430		CEJA4R7M35
C	432		CKSQYB103K50
C	433	470µF/16V	CCH1183
C	434		CKSQYB225K10
C	435		CKSQYB473K25
C	436		CKSQYB473K25
C	438		CCSQCH101J50
C	439		CKSRYB103K50
C	606		CKSRYB104K16
C	607		CCSRCH200J50
C	608		CCSRCH200J50
C	611		CKSQYB103K50
C	616		CEJA2R2M50
C	618		CKSQYB103K50
C	624		CKSYB102K50
C	626		CKSRYB103K50
C	751		CCSRCH220J50
C	752		CCSRCH220J50
C	753		CCSRCH220J50
C	754		CCSRCH220J50
C	755		CCSRCH220J50
C	756		CKSQYB105K10
C	757		CCSQCH101J50
C	758		CCSQCH101J50
C	759		CKSQYB105K10
C	760		CCSRCH101J50
C	801		CKSQYB103K50
C	802		CKSRYB103K50
C	803		CEJA100M16
C	804		CKSQYB103K50
C	806		CKSRYB221K50
C	807		CKSRYB221K50
C	808		CEJA100M16
C	809		CEJA101M10
C	811		CEVNP4R7M16
C	812		CKSQYB103K50
C	854		CKSQYB103K50
C	855		CKSQYB103K50
C	856		CKSQYB102K50

=====Circuit Symbol and No.		===Part Name	Part No.
C	857		CCSQCH101K50
C	858		CEJA470M10
C	859		CKSQYB103K50
C	860		CEJA100M16
C	861		CKSQYB103K50
C	862		CKSQYB103K50
C	1901		CKSRYB103K50
C	1902		CEJA470M6R3
C	1903	470µF/16V	CCH1183
C	1904		CKSYB225K16
C	1905		CKSQYB473K50
C	1906		CKSQYB473K50
C	1907		CKSRYB473K16
C	1908		CEJA1R0M50
C	1909		CKSYB104K50

J Unit Number: EWM1007
Unit Name : Deck Unit

MISCELLANEOUS

IC	251	IC	HA12163
IC	351	IC	PA2020A
Q	271	Transistor	2SC4116
Q	351	Transistor	2SB1260
Q	352	Transistor	2SC4102
D	351	Diode	MA141K
VR	301	Semi-fixed 33kΩ(B)	CCP1130
VR	302	Semi-fixed 33kΩ(B)	CCP1130

RESISTORS

R	255	RS1/16S181J
R	256	RS1/16S181J
R	257	RS1/16S183J
R	258	RS1/16S183J
R	259	RS1/16S133J
R	260	RS1/16S133J
R	261	RS1/16S274J
R	262	RS1/16S274J
R	271	RS1/16S183J
R	272	RS1/8S223J
R	273	RS1/8S223J
R	274	RS1/8S103J
R	275	RS1/16S473J
R	276	RS1/16S104J
R	277	RS1/16S224J
R	278	RS1/16S104J
R	281	RS1/8S0R0J
R	282	RS1/8S0R0J
R	283	RS1/8S0R0J
R	284	RS1/8S0R0J
R	285	RS1/16S0R0J
R	286	RS1/16S0R0J
R	288	RS1/16S0R0J
R	289	RS1/16S0R0J
R	322	RS1/8S223J
R	351	RS1/16S102J
R	352	RS1/16S102J
R	353	RS1/16S102J
R	354	RS1/16S102J
R	355	RS1/10S274J
R	356	RS1/10S202J
R	357	RS1/10S472J
R	358	RS1/10S103J
R	359	RS1/10S103J
R	360	RS1/10S102J
R	361	RS1/10S622J
R	373	RS1/8S0R0J
R	374	RS1/8S0R0J
R	375	RS1/8S0R0J
R	401	RS1/16S273J

=====Circuit Symbol and No.		===Part Name	Part No.
R	402		RS1/16S223J
R	403		RS1/16S274J
R	404		RS1/16S823J
R	405		RS1/16S274J

CAPACITORS

C	251	CKSRYB391K50
C	252	CKSRYB391K50
C	253	CKSRYB391K50
C	254	CKSRYB391K50
C	255	CKSRYB103K25
C	256	CKSRYB103K25
C	271	CEV1R0M50
C	272	CKSQYB104K16
C	301	CKSYB474K16
C	302	CKSYB474K16
C	309	CKSQYB104K16
C	310	CKSQYB104K16
C	351	CKSYB224K25
C	352	CKSQYB392K50
C	353	CKSQYB103K50
C	354	CKSQYB103K50
C	355	CKSYB104K50
C	356	CKSQYB103K50
C	401	CKSRYB182K50
C	402	CKSRYB822K50
C	403	CKSRYB333K16
C	404	CKSRYB471K50

Grille PCB Unit
Consists of
- Grille PCB(A)
- Grille PCB(B)
- Flap PCB Unit

D E F Unit Number :
Unit Name : Grille PCB Unit

MISCELLANEOUS

IC	902	IC	SED1526F0A
IC	903	IC	PD6317A
IC	905	IC	S-80734ANDYI
IC	1902	IC	SBX8035-H
Q	971	Transistor	2SC2712
D	901	LED	CL170FGCD
D	902	LED	CL170FGCD
D	903	LED	CL170FGCD
D	910	LED	CL170FGCD
D	911	LED	CL170FGCD
D	912	LED	CL170FGCD
D	913	LED	CL170FGCD
D	914	LED	CL170FGCD
D	926	LED	CL170UBX
D	927	LED	CL170UBX
D	930	LED	CL170UBX
D	931	LED	CL170FGCD
D	932	LED	CL170FGCD
D	933	LED	CL170FGCD
D	934	LED	CL170UBX
D	940	LED	CL170UBX
D	943	LED	CL170UBX
D	991	Diode	MA110
L	905	Inductor	LCTA2R2J4532
L	907	Coil	LCTB150K3216
L	922	Inductor	LCTA4R7J3225
L	923	Inductor	LCTB4R7K3216
X	901	Radiator 3.77MHz	CSS1427
S	901	Spring Switch	CSN1051
S	902	Switch	CSG1127

=====Circuit Symbol and No.		===Part Name	Part No.
S	903	Switch	CSG1127
S	904	Switch	CSG1127
S	905	Switch	CSG1127
S	906	Switch	CSG1127
S	907	Switch	CSG1127
S	910	Switch	CSG1041
S	911	Switch	CSG1041
S	912	Switch	CSG1041
S	913	Switch	CSG1111
S	915	Switch	CSG1127
S	916	Switch	CSG1127
S	917	Switch	CSG1129
S	918	Switch	CSG1129
S	919	Switch	CSG1111
S	921	Switch	CSG1129
S	922	Switch	CSG1129
S	923	Switch	CSG1111
S	924	Switch	CSG1111
S	925	Switch	CSG1111
S	926	Switch	CSG1111
S	927	Switch	CSG1127
S	928	Switch	CSG1111
S	929	Switch	CSG1129
VR	901	Semi-fixed 330kΩ(B)	CCP1028
VR	902	Encoder	CSD1042
LCD	901	LCD	CAW1552

RESISTORS

R	900		RS1/8S331J
R	901		RS1/8S331J
R	902		RS1/8S391J
R	903		RS1/8S331J
R	904		RS1/8S391J
R	905		RS1/8S391J
R	906		RS1/16S472J
R	907		RS1/16S821J
R	908		RS1/16S122J
R	909		RS1/16S182J
R	910		RS1/16S302J
R	911		RS1/16S622J
R	912		RS1/16S223J
R	915		RS1/8S331J
R	916		RS1/8S391J
R	917		RS1/8S391J
R	918		RS1/8S471J
R	920		RS1/16S472J
R	921		RS1/16S821J
R	922		RS1/16S122J
R	923		RS1/16S182J
R	924		RS1/10S101J
R	925		RS1/16S824J
R	926		RS1/16S155J
R	927		RS1/16S102J
R	928		RS1/16S102J
R	929		RS1/16S102J
R	930		RS1/10S102J
R	931		RS1/16S471J
R	940		RS1/10S472J
R	941		RS1/10S821J
R	942		RS1/10S122J
R	943		RS1/10S182J
R	944		RS1/10S302J
R	945		RS1/10S622J
R	947		RS1/10S472J
R	950		RS1/10S392J
R	951		RS1/10S302J
R	952		RS1/10S622J
R	953		RS1/10S472J

=====Circuit Symbol and No.		===Part Name	Part No.
R	954		RS1/10S821J
R	955		RS1/10S122J
R	956		RS1/10S182J
R	957		RS1/10S302J
R	958		RS1/10S622J
R	959		RS1/10S223J
R	960		RS1/8S331J
R	961		RS1/8S331J
R	962		RS1/8S471J
R	963		RS1/8S561J
R	964		RS1/8S391J
R	966		RS1/8S471J
R	967		RS1/16S471J
R	968		RS1/16S471J
R	969		RS1/16S471J
R	970		RS1/16S473J
R	971		RA3C473J
R	972		RA4C102J
R	973		RS1/16S102J
R	974		RS1/16S102J
R	975		RS1/16S471J
R	976		RA4C471J
R	977		RA4C471J
R	978		RS1/16S471J
R	979		RS1/16S471J
R	981		RS1/16S473J
R	983		RS1/16S473J
R	984		RS1/10S103J
R	985		RS1/10S223J
R	986		RS1/10S471J
R	987		RS1/10S104J
R	988		RS1/10S104J
R	989		RS1/8S331J
R	990		RS1/8S391J
R	991		RS1/16S102J
R	992		RS1/16S124J
R	993		RS1/16S123J
R	1000		RS1/8S391J
R	1001		RS1/8S391J
R	1002		RS1/8S471J
R	1003		RS1/16S474J
R	1004		RS1/8S561J
R	1006		RS1/8S471J
R	1007		RS1/8S561J
R	1012		RS1/8S561J
R	1015		RS1/8S561J
R	1016		RS1/8S561J
R	1017		RS1/8S471J
R	1018		RS1/8S471J
R	1021		RS1/8S471J

CAPACITORS

C	904		CKSRYB103K50
C	905		CKSYB225K16
C	908		CKSRYB103K50
C	915		CKSQYB104K25
C	916		CKSYB225K16
C	917		CKSQYB104K25
C	922		CKSYF226Z10
C	923		CKSQYB104K25
C	924		CKSQYB103K50
C	928		CKSQYB104K25
C	929		CKSQYB104K25
C	930		CKSYB225K16
C	931		CKSQYB105K16
C	932		CKSQYB105K16
C	933		CKSQYB105K16

=====Circuit Symbol and No.		===Part Name	Part No.
C	934		CKSQYB105K16
C	935		CKSQYB105K16
C	936		CKSQYB105K16
C	937		CKSQYB105K16
C	939		CKSRYB103K50
C	940		CKSRYB103K50
C	941		CKSRYB221K50
C	957		CKSYB225K16
C	960		CKSQYB103K50
C	961		CKSQYB103K50
C	962		CKSQYB103K50
C	963		CKSQYB474K16
C	964		CKSRYB103K50
C	965		CCSRCH101J50
C	966		CCSRCH101J50
C	967		CSZS4R7M6R3
C	971		CKSQYB471K50
C	972		CKSQYB102K50
C	973		CKSQYB102K50
C	980		CKSQYB104K25
C	982		CKSYB225K16
C	983		CKSQYB104K25
C	984		CKSQYB104K25
C	985		CKSQYB104K25
C	986		CKSQYB104K25
C	987		CKSQYB104K25

C Unit Number: CWM6725
Unit Name : CD Power Unit

MISCELLANEOUS

IC	1261	IC	CA0008AM
IC	1271	IC	TA2050F
Q	1201	Transistor	2SD2396
Q	1202	Transistor	IMD2A
Q	1211	Transistor	2SD2396
Q	1212	Transistor	IMD2A
Q	1221	Transistor	2SD2396
Q	1222	Transistor	2SA1037K
Q	1223	Transistor	DTC124EK
Q	1271	Transistor	2SA1037K
Q	1272	Transistor	DTC124EK
D	1201	Diode	HZS9L(B1)
D	1211	Diode	HZS7L(A2)
D	1212	Diode	ERA15-02VH
D	1213	Diode	1SS133
D	1221	Diode	HZS9L(B2)
D	1241	Diode	1SS133
D	1251	Diode	ERA15-02VH
D	1252	Diode	ERA15-02VH
D	1261	Diode	1SS133
L	1241	Inductor	CTF1420
L	1246	Inductor	CTF1410
L	1261	Ferri-Inductor	LAU4R7K
FU	1252	Micro-Fuse 400mA	CEK1184
FU	1253	Micro-Fuse 400mA	CEK1184
FU	1254	Micro-Fuse 200mA	CEK1189

RESISTORS

R	1201		RD1/4PU221J
R	1202		RD1/4PU221J
R	1211		RD1/4PU100J
R	1212		RS1/10S103J
R	1213		RS1/10S162J
R	1214		RS1/10S103J
R	1221		RS1/10S223J
R	1222		RS1/10S222J
R	1223		RD1/4PU391J
R	1241		RS1/10S473J
R	1242		RS1/10S221J
R	1243		RA4C221J
R	1244		RS1/10S0R0J
R	1245		RS1/16S0R0J
R	1246		RS1/16S0R0J
R	1247		RS1/16S0R0J
R	1261		RS1/10S102J
R	1262		RS1/10S102J
R	1263		RS1/10S473J
R	1264		RS1/10S473J
R	1265		RS1/10S101J
R	1266		RS1/10S101J
R	1267		RS1/10S620J
R	1268		RS1/10S103J
R	1271		RS1/10S181J
R	1272		RS1/10S181J
R	1273		RS1/10S223J
R	1274		RS1/10S223J
R	1275		RS1/10S102J
R	1276		RS1/10S102J
R	1277		RS1/10S222J
R	1278		RS1/10S223J
R	1279		RS1/10S472J

CAPACITORS

C	1201		CKSQYB473K50
C	1202		CKSQYB102K50
C	1203		CEJA101M10
C	1211	2200µF/16V	CCH1001
C	1212		CEJA100M16
C	1213		CKSQYB103K50
C	1214		CEJA470M10
C	1215		CKSQYB103K50
C	1221		CEJA101M16
C	1222		CKSQYB103K50
C	1223		CEAS331M10
C	1224		CKSQYB103K50
C	1241		CEJA101M16
C	1242		CEJA101M16
C	1243		CKSQYB221K50
C	1245		CEWAR100M16
C	1246		CEWAR100M16
C	1247		CKSQYB103K50
C	1249		CKSRYB103K50
C	1251	0.22F/5.5V	CCL1037
C	1252	0.22F/5.5V	CCL1037
C	1261		CKSQYB104K50
C	1271		CEH1R0M50
C	1272		CEH1R0M50
C	1273		CEH1R0M50
C	1274		CEH1R0M50
C	1275		CEJANP100M10
C	1276		CEJANP100M10
C	1277		CKSQYB104K50
C	1278		CEH100M16
C	1279		CEH100M16

G Unit Number: CWM6755
Unit Name : DSP Unit

MISCELLANEOUS

IC	3001	IC	PD5510A
IC	3101	IC	AK7712AVT
IC	3102	IC	TC9331F
IC	3103	IC	M5M51016BTP-70LL
IC	3200	IC	S-80734ANDYI

=====Circuit Symbol and No.		===Part Name	Part No.
IC	3301	IC	PM0009BM
D	3200	Diode	MA152WA
L	3001	Inductor	CTF1410
L	3002	Inductor	CTF1410
L	3003	Inductor	CTF1410
L	3004	Inductor	CTF1410
L	3039	Inductor	CTF1399
L	3040	Inductor	CTF1399
L	3041	Inductor	CTF1410
L	3042	Inductor	CTF1410
L	3043	Inductor	CTF1410
L	3044	Inductor	CTF1410
L	3101	Inductor	CTF1410
L	3102	Inductor	CTF1410
L	3103	Inductor	CTF1410
L	3104	Inductor	CTF1410
L	3301	Inductor	CTF1410
L	3302	Inductor	CTF1410
L	3303	Inductor	CTF1410
L	3304	Inductor	CTF1410
L	3305	Inductor	CTF1410
L	3306	Inductor	CTF1410
X	3001	Radiator 10.00MHz	CSS1428
X	3101	Crystal Resonator 16.9344MHz	CSS1067
X	3102	Crystal Resonator 32.0MHz	CSS1360

RESISTORS

R	3002		RA4C102J
R	3003		RA3C102J
R	3004		RS1/16S681J
R	3005		RS1/16S681J
R	3006		RS1/16S681J
R	3007		RS1/16S681J
R	3008		RS1/16S681J
R	3009		RS1/16S473J
R	3010		RS1/16S102J
R	3011		RS1/16S102J
R	3012		RS1/16S102J
R	3013		RS1/16S105J
R	3016		RA3C102J
R	3017		RA3C473J
R	3018		RS1/16S102J
R	3019		RA3C102J
R	3020		RS1/16S102J
R	3021		RA3C102J
R	3022		RA4C473J
R	3024		RS1/16S102J
R	3027		RS1/16S102J
R	3029		RS1/16S473J
R	3030		RS1/16S102J
R	3031		RS1/16S102J
R	3033		RS1/16S473J
R	3101		RS1/16S473J
R	3102		RS1/16S473J
R	3103		RA4C102J
R	3104		RA4C102J
R	3105		RA4C102J
R	3106		RA4C102J
R	3107		RS1/16S473J
R	3108		RA4C102J
R	3109		RA4C102J
R	3110		RA4C102J
R	3111		RA4C102J
R	3112		RS1/16S105J
R	3113		RS1/16S105J
R	3114		RS1/16S102J
R	3115		RS1/16S102J

=====Circuit Symbol and No.		===Part Name	Part No.
R	3116		RS1/16S331J
R	3117		RS1/16S0R0J
R	3141		RS1/16S473J
R	3151		RS1/10S151J
R	3152		RS1/10S151J
R	3153		RS1/10S151J
R	3154		RS1/10S151J
R	3200		RS1/16S124J
R	3201		RS1/16S102J

CAPACITORS

C	3002		CKSYB106K6R3
C	3004		CCSRCH220J50
C	3005		CCSRCH220J50
C	3006		CCSRCH220J50
C	3007		CCSRCH220J50
C	3008		CCSRCH220J50
C	3102		CKSQYB103K50
C	3104		CCSRCH100D50
C	3105		CCSRCH100D50
C	3106		CKSQYB104K25
C	3107		CKSYB106K6R3
C	3108		CKSQYB104K25
C	3109		CSZSR470M6R3
C	3110		CKSQYB104K25
C	3111		CKSYB106K6R3
C	3112		CKSQYB104K25
C	3113		CKSQYB103K25
C	3114		CKSYB106K6R3
C	3115		CCSQCH5R0C50
C	3116		CCSQCH5R0C50
C	3117		CKSYB106K6R3
C	3119		CKSYB106K6R3
C	3151		CKLSRR103K16
C	3152		CKLSRR103K16
C	3153		CKLSRR103K16
C	3154		CKLSRR103K16
C	3155		CKLSRB152K50
C	3156		CKLSRB152K50
C	3201		CKSQYB104K25
C	3301		CKSYB475K10
C	3302		CKSYB475K10
C	3303		CKSYB475K10
C	3304		CKSYB475K10
C	3307		CKSQYB105K16
C	3308		CKSYB106K6R3
C	3309		CKSQYB104K25
C	3310		CKSQYB473K50
C	3311		CKSQYB562K50
C	3312		CKSQYB104K25

H Unit Number : CWX2358
Unit Name : Control Unit

MISCELLANEOUS

IC	201	IC	UPD63710GC
IC	301	IC	BA5985FM
IC	602	IC	AK4321VF
IC	701	IC	BA05SFP
IC	901	IC	PE5011C
Q	101	Transistor	2SB1132
Q	901	Transistor	UN2111
D	801	LED	CL200IRX
D	802	LED	CL200IRX
TH	901	Thermistor	CCX1037
X	201	Ceramic Oscillator 16.934MHz	CSS1456
X	901	Radiator 8.380MHz	CSS1453
S	801	Spring Switch(HOME)	CSN1051
S	802	Spring Switch(CLAMP)	CSN1052

=====Circuit Symbol and No.		===Part Name	Part No.
RESISTORS			
R	101		RS1/8S120J
R	102		RS1/8S100J
R	103		RS1/16S222J
R	201		RS1/16S104J
R	205		RS1/16S103J
R	206		RS1/16S393J
R	207		RS1/16S182J
R	208		RS1/16S304J
R	210		RS1/16S0R0J
R	212		RS1/16S103J
R	213		RS1/16S103J
R	214		RS1/16S123J
R	215		RS1/16S273J
R	216		RS1/16S273J
R	217		RS1/16S681J
R	218		RS1/16S681J
R	309		RS1/16S473J
R	310		RS1/16S473J
R	501		RS1/16S102J
R	502		RS1/16S681J
R	503		RS1/16S681J
R	504		RS1/16S681J
R	505		RS1/16S681J
R	506		RS1/16S681J
R	511		RS1/16S0R0J
R	601		RS1/16S102J
R	602		RS1/16S102J
R	603		RS1/16S223J
R	604		RS1/16S223J
R	606		RS1/16S0R0J
R	607		RS1/16S0R0J
R	612		RA4C0R0J
R	801		RS1/8S751J
R	802		RS1/8S751J
R	901		RS1/16S222J
R	902		RS1/16S473J
R	903		RS1/16S222J
R	904		RS1/16S473J
R	905		RN1/16SE1502D
R	906		RS1/16S473J
R	908		RS1/16S222J
R	909		RS1/16S104J
R	910		RS1/16S103J
R	911		RS1/16S223J
R	912		RS1/16S473J
R	917		RS1/16S0R0J
CAPACITORS			
C	101		CCSRCH102J25
C	102		CKSQYB104K16
C	103		CEV101M6R3
C	104		CEV470M6R3
C	105		CKSQYB334K16
C	106		CKSQYB334K16
C	107		CKSQYB334K16
C	201		CKSQYB104K16
C	202		CEV101M6R3
C	203		CKSQYB104K16
C	204		CKSRYB332K50
C	205		CKSQYB104K16
C	206		CKSRYB392K50
C	207		CKSQYB224K16
C	208		CCSRCH270J50

=====Circuit Symbol and No.		===Part Name	Part No.
C	209		CCSRCJ3R0C50
C	210		CCSRCH221J50
C	211		CCSRCH101J50
C	212		CKSRYB682K25
C	213		CKSQYB104K16
C	214		CKSRYB104K16
C	215		CKSQYB104K16
C	216		CKSRYB104K16
C	217		CKSRYB104K16
C	218		CKSRYB104K16
C	219		CKSRYB104K16
C	220		CKSRYB104K16
C	223		CKSQYB471K50
C	301		CEV101M10
C	601		CEV4R7M35
C	602		CEV4R7M35
C	603		CCSQSL152J50
C	604		CCSQSL152J50
C	605		CEV470M6R3
C	606		CKSRYB104K16
C	607		CKSRYB104K16
C	608		CKSRYB104K16
C	609		CEV100M16
C	610		CKSRYB104K16
C	612		CKSRYB104K16
C	701		CEV101M6R3
C	702	22µF/6.3V	CCH1300
C	703		CKSQYB334K16
C	801		CKSRYB103K25
C	802		CKSRYB103K25
C	901		CKSRYB472K50
C	902		CKSYB475K10
C	903		CKSRYB103K25

I Unit Number :
Unit Name : Photo Unit

Q	1	Photo-transistor	CPT230SX-TU
Q	2	Photo-transistor	CPT230SX-TU

K Unit Number :
Unit Name : PCB Unit

S	1	Switch(LOAD)	ESG1004
S	2	Switch(70µS)	ESG1004
EGN	1	Photo-Interrupter	EGN1005
R	1		RD1/4PM181J

L Unit Number:
Unit Name : Reel PCB

EGN	2	Photo-Interrupter	EGN1006
EGN	3	Photo-Interrupter	EGN1006

Miscellaneous Parts List

		Pickup Unit(Service)(P8)	CXX1285
M	1	Motor Unit(CARRIAGE)	CXB2190
M	2	Motor Unit(LOADING)	CXB2195
M	3	Motor Unit(SPINDLE)	CXB2562
HD	1	Head Assy	EXA1452
M	1	Motor Unit(MAIN)	EXA1454
M	2	Motor Unit(SUB)	EXA1485