EXPLODED VIEW

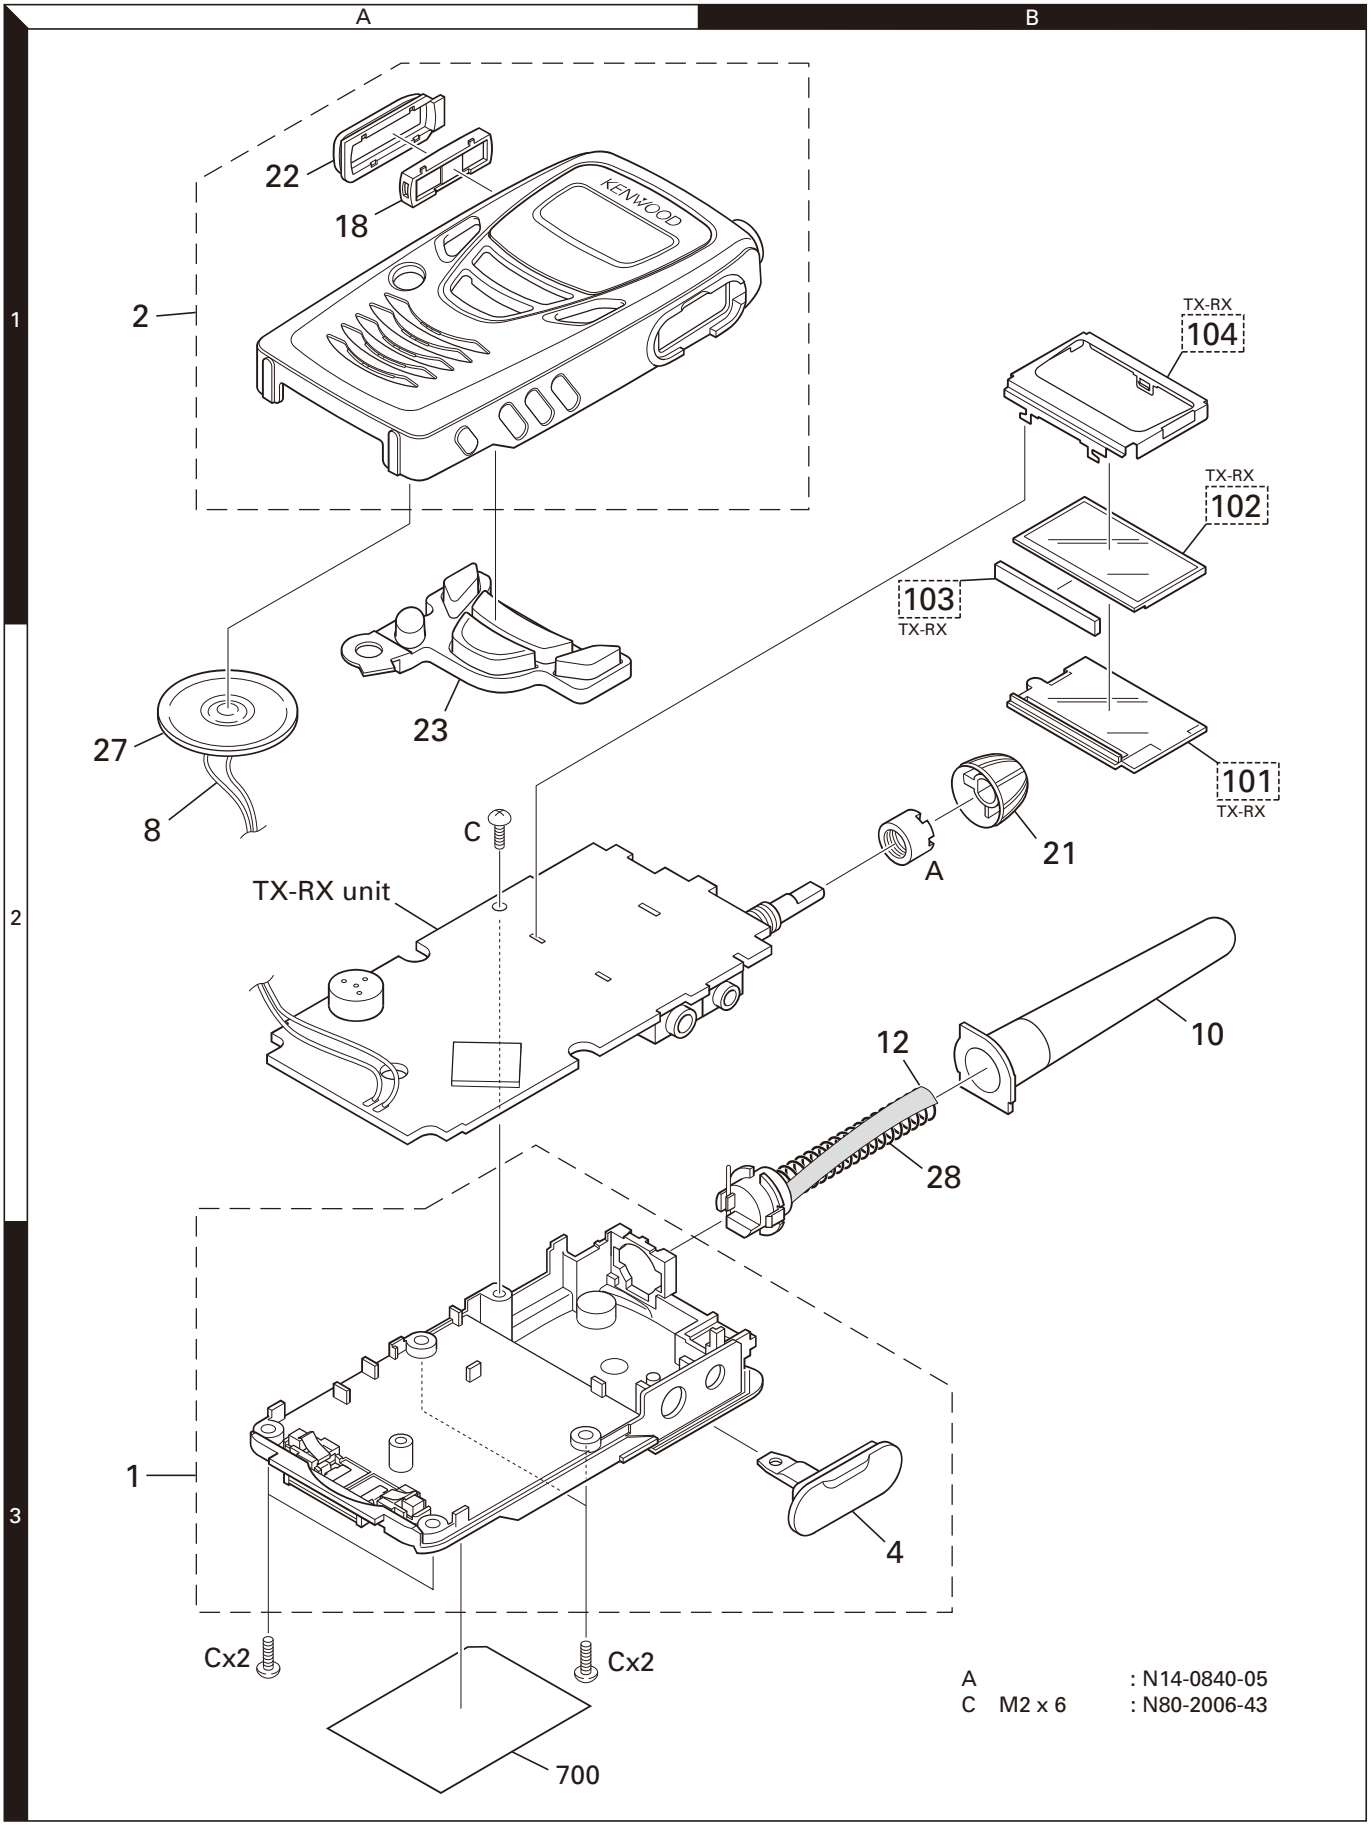

Parts with the exploded numbers larger than 700 are not supplied.

PACKING

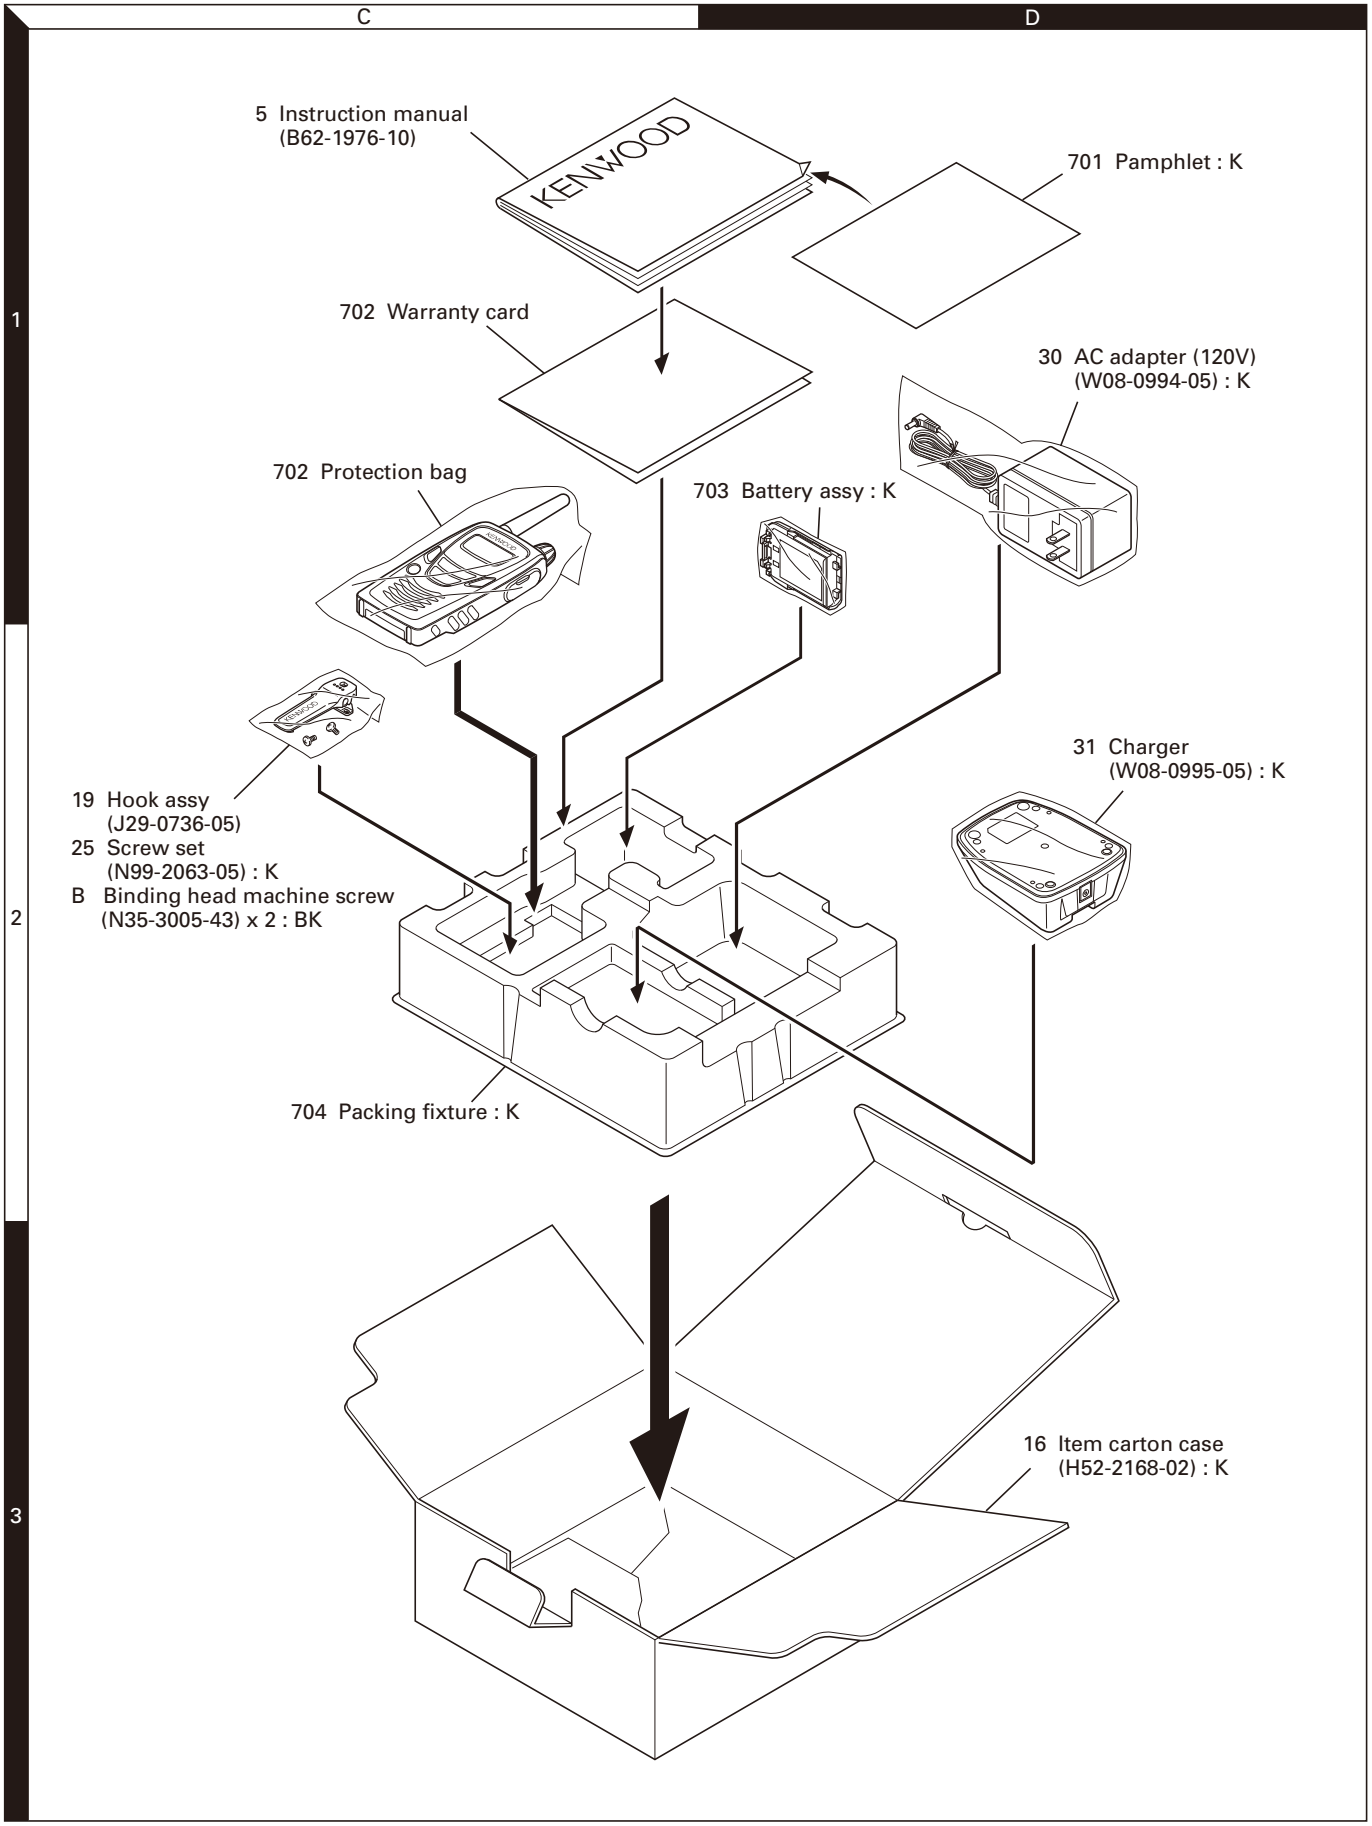

Parts with the exploded numbers larger than 700 are not supplied.

TK-3230

PARTS LIST

✻ New Parts. ⚠indicates safety critical components.
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

L : Scandinavia **K** : USA **P** : Canada
Y : PX (Far East, Hawaii) **T** : England **E** : Europe
Y : AAFES (Europe) **X** : Australia **M** : Other Areas

TK-3230 (Y50-6160-XX)
TX-RX UNIT (X57-7330-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination
TK-3230					
1	3A	✻	A02-3975-13	PLASTIC CABINET ASSY (REAR)	
2	1A	✻	A02-3977-03	PLASTIC CABINET ASSY (FRONT)	
4	3B	✻	B09-0710-03	CAP	
5	1C	✻	B62-1976-10	INSTRUCTION MANUAL	
8	2A	✻	E37-1390-05	PARALLEL CORD	
10	2B	✻	F07-1929-03	COVER (ANTENNA CAP)	
12	2B	✻	G10-1378-04	FIBROUS SHEET	
16	3D	✻	H52-2168-02	ITEM CARTON CASE	K
18	1A	✻	J19-5508-03	HOLDER (PTT)	
19	2C	✻	J29-0736-05	HOOK ASSY ACCESSORY	
21	2B	✻	K29-9397-03	KNOB (VOLUME)	
22	1A	✻	K29-9398-03	BUTTON KNOB (PTT)	
23	2A	✻	K29-9399-02	KEY TOP	
A	2B	✻	N14-0840-05	CIRCULAR NUT	
B	2C	✻	N35-3005-43	BINDING HEAD MACHINE SCREW	BK
C	2A,3A		N80-2006-43	PAN HEAD TAPTITE SCREW	
25	2C	✻	N99-2063-05	SCREW SET ACCESSORY	K
27	2A		T07-0362-25	SPEAKER	
28	2B	✻	T90-1068-05	ANTENNA ELEMENT	
30	1D	✻	W08-0994-05	AC ADAPTER (120V) ACCESSORY	K
31	2D	✻	W08-0995-05	CHARGER ACCESSORY	K
TX-RX UNIT (X57-7330-10)					
101	2B	✻	B11-1849-03	ILLUMINATION GUIDE (LCD)	
102	1B	✻	B38-0925-05	LCD	
D400			B30-2143-05	LED (YG)	
D401			B30-2278-05	LED (RED/YELLOW)	
C1			CC73HCH1H101J	CHIP C 100PF J	
C2			CS77AA1VR33M	CHIP TNTL 0.33UF 35WV	
C3			CK73HB1H471K	CHIP C 470PF K	
C4,5			CC73HCH1H101J	CHIP C 100PF J	
C6			CS77AA1A2R2M	CHIP TNTL 2.2UF 10WV	
C7-9			CC73HCH1H101J	CHIP C 100PF J	
C10			CK73FB0J106K	CHIP C 10UF K	
C11			CS77CA1V0R1M	CHIP TNTL 0.1UF 35WV	
C12			CC73HCH1H470J	CHIP C 47PF J	
C13			CC73HCH1H101J	CHIP C 100PF J	
C14			CC73HCH1H040B	CHIP C 4.0PF B	
C15			CC73HCH1H101J	CHIP C 100PF J	
C16			CC73HCH1H130J	CHIP C 13PF J	
C17			CC73HCH1H101J	CHIP C 100PF J	
C18			CC73HCH1H1R5B	CHIP C 1.5PF B	
C19,20			CK73HB1H471K	CHIP C 470PF K	

Ref. No.	Address	New parts	Parts No.	Description	Destination
C21			CC73HCH1H470J	CHIP C 47PF J	
C22			CK73HB1H471K	CHIP C 470PF K	
C23			CK73HB1C103K	CHIP C 0.010UF K	
C25			CK73HB1H471K	CHIP C 470PF K	
C27			CC73HCH1H130G	CHIP C 13PF G	
C28			CC73HCH1H110G	CHIP C 11PF G	
C29			CC73HCH1H101J	CHIP C 100PF J	
C30			CK73GB1H103K	CHIP C 0.010UF K	
C31,32			CC73HCH1H100D	CHIP C 10PF D	
C33			CC73HCH1H0R5B	CHIP C 0.5PF B	
C34,35			CC73HCH1H100D	CHIP C 10PF D	
C36,37			CC73HCH1H101J	CHIP C 100PF J	
C38			CK73HB1H471K	CHIP C 470PF K	
C39			CC73HCH1H101J	CHIP C 100PF J	
C40			CS77AA0J220M	CHIP TNTL 22UF 6.3WV	
C41			CC73HCH1H050B	CHIP C 5.0PF B	
C43			CC73HCH1H100D	CHIP C 10PF D	
C44			CC73HCH1H050B	CHIP C 5.0PF B	
C45,46			CK73HB1H471K	CHIP C 470PF K	
C47			CK73HB1A104K	CHIP C 0.10UF K	
C48,49			CK73HB1H471K	CHIP C 470PF K	
C50,51			CC73HCH1H030B	CHIP C 3.0PF B	
C52			CC73HCH1H050B	CHIP C 5.0PF B	
C53			CC73HCH1H080B	CHIP C 8.0PF B	
C54			CC73HCH1H050B	CHIP C 5.0PF B	
C55			CC73HCH1H101J	CHIP C 100PF J	
C57,58			CC73HCH1H101J	CHIP C 100PF J	
C60			CC73HCH1H120J	CHIP C 12PF J	
C100			CK73HB1H471K	CHIP C 470PF K	
C101			CC73HCH1H1R5B	CHIP C 1.5PF B	
C103			CK73HB1A104K	CHIP C 0.10UF K	
C111			CK73HB1A104K	CHIP C 0.10UF K	
C112			CK73HB1H471K	CHIP C 470PF K	
C113			CC73HCH1H150J	CHIP C 15PF J	
C114			CC73HCH1H120J	CHIP C 12PF J	
C116			CK73HB1H471K	CHIP C 470PF K	
C117			CC73HCH1H101J	CHIP C 100PF J	
C119,120			CK73HB1H471K	CHIP C 470PF K	
C121			CC73HCH1H270J	CHIP C 27PF J	
C122			CK73HB1A104K	CHIP C 0.10UF K	
C123			CC73HCH1H270J	CHIP C 27PF J	
C124			CK73HB1H471K	CHIP C 470PF K	
C125			CC73GCH1H050B	CHIP C 5.0PF B	
C126			CK73HB1H471K	CHIP C 470PF K	
C127			CK73HB0J105K	CHIP C 1.0UF K	
C128			CC73GCH1H270J	CHIP C 27PF J	
C129			CK73HB1A104K	CHIP C 0.10UF K	
C130			CK73HB1C103K	CHIP C 0.010UF K	
C131			CK73HB1A104K	CHIP C 0.10UF	
C132			CK73HB1H471K	CHIP C 470PF K	
C133			CC73HCH1H090B	CHIP C 9.0PF B	
C134			CC73GCH1H101J	CHIP C 100PF J	
C136			CK73HB1A224K	CHIP C 0.22UF K	
C137			CK73HB1C103K	CHIP C 0.010UF K	
C138			CK73HB1A104K	CHIP C 0.10UF K	

K : TK-3230
BK : TK-3230B

PARTS LIST

TX-RX UNIT (X57-7330-10)

Ref. No.	Address	New parts	Parts No.	Description			Destination
C200			CK73HB1H182K	CHIP C	1800PF	K	
C202			CK73HB1H271K	CHIP C	270PF	K	
C203,204			CK73HB1H102K	CHIP C	1000PF	K	
C205			CK73HB1A104K	CHIP C	0.10UF	K	
C206			CK73HB1H271K	CHIP C	270PF	K	
C207			CK73HB1A104K	CHIP C	0.10UF	K	
C208			CC73HCH1H680J	CHIP C	68PF	J	
C209			CK73HB1H471K	CHIP C	470PF	K	
C210			CK73FB0J106K	CHIP C	10UF	K	
C211			CK73HB1A224K	CHIP C	0.22UF	K	
C212,213			CK73HB1H471K	CHIP C	470PF	K	
C215-217			CK73HB1C103K	CHIP C	0.010UF	K	
C218			CK73HB1H471K	CHIP C	470PF	K	
C219			CK73HB1C103K	CHIP C	0.010UF	K	
C220			CC73HCH1H010B	CHIP C	1.0PF	B	
C221			CK73GB1H183K	CHIP C	0.018UF	K	
C222			CK73HB1H331K	CHIP C	330PF	K	
C223			CK73HB1C103K	CHIP C	0.010UF	K	
C224			CC73HCH1H100D	CHIP C	10PF	D	
C225			CC73HCH1H150J	CHIP C	15PF	J	
C226			CC73HCH1H010B	CHIP C	1.0PF	B	
C228			CK73HB1C103K	CHIP C	0.010UF	K	
C229			CC73HCH1H680J	CHIP C	68PF	J	
C230,231			CK73HB1C103K	CHIP C	0.010UF	K	
C232			CC73HCH1H330J	CHIP C	33PF	J	
C233			CC73HCH1H121J	CHIP C	120PF	J	
C234			CK73HB1H471K	CHIP C	470PF	K	
C235			CC73HCH1H330J	CHIP C	33PF	J	
C236			CC73HCH1H240J	CHIP C	24PF	J	
C237			CC73HCH1H680J	CHIP C	68PF	J	
C239			CC73HCH1H030B	CHIP C	3.0PF	B	
C240			CK73HB1C103K	CHIP C	0.010UF	K	
C241,242			CK73HB1H471K	CHIP C	470PF	K	
C243			CC73HCH1H470J	CHIP C	47PF	J	
C244-246			CK73HB1H471K	CHIP C	470PF	K	
C247			CC73HCH1H040B	CHIP C	4.0PF	B	
C248			CK73HB1C103K	CHIP C	0.010UF	K	
C250,251			CK73HB1H471K	CHIP C	470PF	K	
C252,253			CC73HCH1H470J	CHIP C	47PF	J	
C254			CK73HB1H471K	CHIP C	470PF	K	
C255			CC73HCH1H060B	CHIP C	6.0PF	B	
C257			CC73HCH1H1R5B	CHIP C	1.5PF	B	
C258			CC73HCH1H100D	CHIP C	10PF	D	
C259			CK73HB1H471K	CHIP C	470PF	K	
C261			CC73HCH1H100D	CHIP C	10PF	D	
C262			CC73HCH1H010C	CHIP C	1.0PF	C	
C264			CC73HCH1H010B	CHIP C	1.0PF	B	
C267,268			CK73HB1A104K	CHIP C	0.10UF	K	
C301			CK73HB1E682K	CHIP C	6800PF	K	
C303			CC73HCH1H090B	CHIP C	9.0PF	B	
C304			CK73GB1C563K	CHIP C	0.056UF	K	
C306			CK73HB1H681K	CHIP C	680PF	K	
C307,308			CK73HB0J105K	CHIP C	1.0UF	K	
C309			CC73HCH1H101J	CHIP C	100PF	J	
C310			CK73HB1C473K	CHIP C	0.047UF	K	
C311			CK73FB0J106K	CHIP C	10UF	K	
C312			CK73HB1A473K	CHIP C	0.047UF	K	
C313			CK73FB0J106K	CHIP C	10UF	K	
C314			CK73HB1H392K	CHIP C	3900PF	K	
C315			CK73HB1H471K	CHIP C	470PF	K	

Ref. No.	Address	New parts	Parts No.	Description			Destination
C316			CC73HCH1H221J	CHIP C	220PF	J	
C317			CK73HB1A473K	CHIP C	0.047UF	K	
C318			CK73HB0J105K	CHIP C	1.0UF	K	
C319			CK73HB1H272K	CHIP C	2700PF	K	
C320			CK73FB0J106K	CHIP C	10UF	K	
C321			CK73HB1H471K	CHIP C	470PF	K	
C322,323			CK73HB1A104K	CHIP C	0.10UF	K	
C324			CC73HCH1H180J	CHIP C	18PF	J	
C325			CK73GB0J475K	CHIP C	4.7UF	K	
C326			CK73HB1A104K	CHIP C	0.10UF	K	
C327			CK73HB1A683K	CHIP C	0.068UF	K	
C328			CK73GB0J475K	CHIP C	4.7UF	K	
C329			CC73HCH1H181J	CHIP C	180PF	J	
C330,331			CK73HB1A473K	CHIP C	0.047UF	K	
C332,333			CK73HB1A104K	CHIP C	0.10UF	K	
C336			CK73HB1A104K	CHIP C	0.10UF	K	
C337			CK73FB1A225K	CHIP C	2.2UF	K	
C338			CK73HB1C103K	CHIP C	0.010UF	K	
C339			C92-0864-05	CHIP TNTL	10UF	10WV	
C340			CK73HB0J105K	CHIP C	1.0UF	K	
C341			CK73HB1H471K	CHIP C	470PF	K	
C342			CK73HB0J105K	CHIP C	1.0UF	K	
C343			CK73HB1A333K	CHIP C	0.033UF	K	
C345			CK73HB1H471K	CHIP C	470PF	K	
C346			CK73HB1A104K	CHIP C	0.10UF	K	
C348			CK73HB1A104K	CHIP C	0.10UF	K	
C349			CK73HB1H102K	CHIP C	1000PF	K	
C350			CS77CP0J100M	CHIP TNTL	10UF	6.3WV	
C351			CK73HB1A154K	CHIP C	0.15UF	K	
C353			CK73HB1H102K	CHIP C	1000PF	K	
C354			CS77AB20J101M	CHIP TNTL	100UF	6.3WV	
C358			CC73HCH1H470J	CHIP C	47PF	J	
C359-361			CC73HCH1H101J	CHIP C	100PF	J	
C363			CK73HB0J105K	CHIP C	1.0UF	K	
C364		✻	CC73HCH1H0R3B	CHIP C	0.3PF	B	
C400			CK73HB1H471K	CHIP C	470PF	K	
C401			CK73HB0J105K	CHIP C	1.0UF	K	
C402			CK73HB1H471K	CHIP C	470PF	K	
C404			CK73HB1H471K	CHIP C	470PF	K	
C405			CK73FB1A105K	CHIP C	1.0UF	K	
C408			CK73HB1H471K	CHIP C	470PF	K	
C411			CK73HB1H471K	CHIP C	470PF	K	
C412			CS77AA1A100M	CHIP TNTL	10UF	10WV	
C413-415			CK73HB1A104K	CHIP C	0.10UF	K	
C417			CK73HB1H471K	CHIP C	470PF	K	
C418			CK73HB1A104K	CHIP C	0.10UF	K	
C419			CK73FB0J106K	CHIP C	10UF	K	
C420			CC73HCH1H080B	CHIP C	8.0PF	B	
C421			CK73HB1H471K	CHIP C	470PF	K	
C422			CC73HCH1H330J	CHIP C	33PF	J	
C423			CC73HCH1H080B	CHIP C	8.0PF	B	
C426			CK73HB1H102K	CHIP C	1000PF	K	
C427			CC73HCH1H330J	CHIP C	33PF	J	
C428			CC73HCH1H101J	CHIP C	100PF	J	
C430			CK73GB1A105K	CHIP C	1.0UF	K	
C431			CK73HB1C103K	CHIP C	0.010UF	K	
C432			CK73HB1C223K	CHIP C	0.022UF	K	
C433			CK73HB1A104K	CHIP C	0.10UF	K	
C434			CK73HB1A683K	CHIP C	0.068UF	K	
C437			CK73HB1C103K	CHIP C	0.010UF	K	

PARTS LIST

TX-RX UNIT (X57-7330-10)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
C440			CC73HCH1H101J	CHIP C 100PF J	
C442,443			CC73HCH1H101J	CHIP C 100PF J	
C444			CK73HB1A104K	CHIP C 0.10UF K	
C445			CK73HB1H471K	CHIP C 470PF K	
C446			CK73HB0J105K	CHIP C 1.0UF K	
C448			CC73GCH1H101J	CHIP C 100PF J	
C449			CC73HCH1H101J	CHIP C 100PF J	
C451			CC73HCH1H101J	CHIP C 100PF J	
C454			CC73HCH1H101J	CHIP C 100PF J	
C453			CC73HCH1H020B	CHIP C 2.0PF B	
C455			CK73HB0J105K	CHIP C 1.0UF K	
C456			CK73HB1A104K	CHIP C 0.10UF K	
C459			CC73HCH1H050B	CHIP C 5.0PF B	
C460			CK73HB1A104K	CHIP C 0.10UF K	
C461			CK73HB1H471K	CHIP C 470PF K	
C464			CK73HB1C103K	CHIP C 0.010UF K	
C468			CK73HB1A104K	CHIP C 0.10UF K	
C470			CK73HB1C183K	CHIP C 0.018UF K	
TC1			C05-0245-05	CERAMIC TRIMMER (10PF)	
103	1B	✻	E29-1217-05	INTER CONNECTOR (LCD)	
J300			E11-0703-05	PHONE JACK (2.5/3.5)	
-		✻	F10-3083-04	SHIELDING CASE	
F300			F53-0324-05	FUSE	
104	1B	✻	J21-8570-04	MOUNTING HARDWARE (LCD)	
-			J30-1282-14	SPACER	
CD200			L79-1866-05	TUNING COIL	
CF200			L72-0958-05	CERAMIC FILTER	
L1			L92-0140-05	CHIP FERRITE	
L2			L41-2285-06	SMALL FIXED INDUCTOR (220NH)	
L3			L41-6868-14	SMALL FIXED INDUCTOR (6.8NH)	
L4		✻	L41-3372-43	SMALL FIXED INDUCTOR (33NH)	
L5,6			L41-1091-06	SMALL FIXED INDUCTOR (1.0UH)	
L7			L41-1005-08	SMALL FIXED INDUCTOR (10UH)	
L8			L41-1091-06	SMALL FIXED INDUCTOR (1.0UH)	
L10			L40-2775-57	SMALL FIXED INDUCTOR (27.0NH)	
L12			L40-2775-57	SMALL FIXED INDUCTOR (27.0NH)	
L13,14			L40-1275-57	SMALL FIXED INDUCTOR (12.0NH)	
L15,16			L92-0161-05	BEADS CORE	
L17			L40-1075-57	SMALL FIXED INDUCTOR (10.0NH)	
L101			L40-1575-57	SMALL FIXED INDUCTOR (15.0NH)	
L102			L40-1575-92	SMALL FIXED INDUCTOR (15NH)	
L103			L40-1875-92	SMALL FIXED INDUCTOR (18NH)	
L104			L92-0149-05	CHIP FERRITE	
L105			L40-2763-92	SMALL FIXED INDUCTOR (2.7NH)	
L106			L41-2263-14	SMALL FIXED INDUCTOR (2.2NH)	
L107			L92-0149-05	CHIP FERRITE	
L108			L41-2285-43	SMALL FIXED INDUCTOR (220NH)	
L109			L92-0138-05	CHIP FERRITE	
L111			L34-4568-05	AIR-CORE COIL	
L112			L92-0161-05	BEADS CORE	
L201			L40-1091-37	SMALL FIXED INDUCTOR (1.0UH)	
L205			L40-5681-86	SMALL FIXED INDUCTOR (0.56UH)	
L206		✻	L41-4781-06	SMALL FIXED INDUCTOR (470NH)	
L208			L40-2285-92	SMALL FIXED INDUCTOR (220NH)	
L209		✻	L41-3385-39	SMALL FIXED INDUCTOR (0.33UH)	
L210			L40-2285-92	SMALL FIXED INDUCTOR (220NH)	
L211			L40-2785-92	SMALL FIXED INDUCTOR (270NH)	
L212			L40-1875-57	SMALL FIXED INDUCTOR (18.0NH)	

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
L214			L40-2775-57	SMALL FIXED INDUCTOR (27.0NH)	
L215			L40-3975-57	SMALL FIXED INDUCTOR (39.0NH)	
L217			L41-1092-44	SMALL FIXED INDUCTOR (1UH)	
L218			L79-1807-05	FILTER	
L219-222			L34-4563-05	AIR-CORE COIL	
L300,301			L92-0138-05	CHIP FERRITE	
L400			L92-0140-05	CHIP FERRITE	
L401,402			L92-0138-05	CHIP FERRITE	
L403			L92-0140-05	CHIP FERRITE	
L404-407			L92-0161-05	BEADS CORE	
L408			L40-2781-86	SMALL FIXED INDUCTOR (0.27UH)	
L409			L40-3363-57	SMALL FIXED INDUCTOR (3.3NH)	
L410			L92-0149-05	CHIP FERRITE	
L411			L40-3363-57	SMALL FIXED INDUCTOR (3.3NH)	
L412			L40-2775-57	SMALL FIXED INDUCTOR (27.0NH)	
X1		✻	L77-3019-05	TCXO	
X400		✻	L77-3026-05	CRYSTAL RESONATOR (7.3728MHZ)	
XF200			L71-0586-05	MCF (38.85MHZ)	
CP400-402			RK74HB1J103J	CHIP-COM 10K J 1/16W	
R1			RK73HB1J103J	CHIP R 10K J 1/16W	
R2			RK73HB1J152J	CHIP R 1.5K J 1/16W	
R3			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R4			RK73HB1J100J	CHIP R 10 J 1/16W	
R5			RK73HB1J392J	CHIP R 3.9K J 1/16W	
R6			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R7			RK73HB1J473J	CHIP R 47K J 1/16W	
R8			RK73HB1J101J	CHIP R 100 J 1/16W	
R9			RK73HB1J563J	CHIP R 56K J 1/16W	
R10			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R11			RK73HB1J473J	CHIP R 47K J 1/16W	
R12			RK73HB1J183J	CHIP R 18K J 1/16W	
R13			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R14-16			RK73HB1J101J	CHIP R 100 J 1/16W	
R17			RK73HB1J563J	CHIP R 56K J 1/16W	
R20			RK73HB1J470J	CHIP R 47 J 1/16W	
R21			RK73HB1J152J	CHIP R 1.5K J 1/16W	
R22			RK73HB1J562J	CHIP R 5.6K J 1/16W	
R23			RK73HB1J103J	CHIP R 10K J 1/16W	
R24			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R25			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R26			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R27			RK73GB2A330J	CHIP R 33 J 1/10W	
R29			RK73HB1J333J	CHIP R 33K J 1/16W	
R30			RK73HB1J104J	CHIP R 100K J 1/16W	
R31			RK73HB1J101J	CHIP R 100 J 1/16W	
R32			RK73HB1J104J	CHIP R 100K J 1/16W	
R34			RK73HB1J221J	CHIP R 220 J 1/16W	
R39			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R40			RK73HB1J103J	CHIP R 10K J 1/16W	
R42,43			RK73HB1J103J	CHIP R 10K J 1/16W	
R44			RK73HB1J471J	CHIP R 470 J 1/16W	
R100			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R107			RK73GB2A393J	CHIP R 39K J 1/10W	
R112			RK73HB1J153J	CHIP R 15K J 1/16W	
R115			RK73HB1J100J	CHIP R 10 J 1/16W	
R119			RK73HB1J220J	CHIP R 22 J 1/16W	
R120			RK73HB1J333J	CHIP R 33K J 1/16W	
R122			RK73HB1J683J	CHIP R 68K J 1/16W	
R124			RK73GB2A470J	CHIP R 47 J 1/10W	

L77-3036-05

PARTS LIST

TX-RX UNIT (X57-7330-10)

Ref. No.	Address	New parts	Parts No.	Description				Destination
R125,126			RK73HB1J184J	CHIP R	180K	J	1/16W	
R128			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R129,130			RK73HB1J221J	CHIP R	220	J	1/16W	
R131			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R133			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R200			RK73HB1J122J	CHIP R	1.2K	J	1/16W	
R201			RK73HB1J272J	CHIP R	2.7K	J	1/16W	
R202			RK73HB1J332J	CHIP R	3.3K	J	1/16W	
R204			RK73HB1J124J	CHIP R	120K	J	1/16W	
R205			RK73HB1J332J	CHIP R	3.3K	J	1/16W	
R206			RK73HB1J394J	CHIP R	390K	J	1/16W	
R207			RK73HB1J332J	CHIP R	3.3K	J	1/16W	
R208			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R209			RK73HB1J122J	CHIP R	1.2K	J	1/16W	
R211			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R212			RK73HB1J101J	CHIP R	100	J	1/16W	
R213			RK73HB1J564J	CHIP R	560K	J	1/16W	
R214			RK73HB1J334J	CHIP R	330K	J	1/16W	
R215			RK73HB1J561J	CHIP R	560	J	1/16W	
R216			RK73HB1J101J	CHIP R	100	J	1/16W	
R217			RK73HB1J561J	CHIP R	560	J	1/16W	
R218			RK73HB1J331J	CHIP R	330	J	1/16W	
R219			RK73HB1J224J	CHIP R	220K	J	1/16W	
R220			RK73HB1J683J	CHIP R	68K	J	1/16W	
R221			RK73HB1J473J	CHIP R	47K	J	1/16W	
R222			RK73HB1J224J	CHIP R	220K	J	1/16W	
R223			RK73HB1J271J	CHIP R	270	J	1/16W	
R224			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R226			RK73HB1J560J	CHIP R	56	J	1/16W	
R227			RK73HB1J124J	CHIP R	120K	J	1/16W	
R228			RK73HB1J104J	CHIP R	100K	J	1/16W	
R230			RK73HB1J273J	CHIP R	27K	J	1/16W	
R231			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R232,233			RK73HB1J564J	CHIP R	560K	J	1/16W	
R234			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R300			RK73HB1J153J	CHIP R	15K	J	1/16W	
R302			RK73HB1J562J	CHIP R	5.6K	J	1/16W	
R303			RK73HB1J104J	CHIP R	100K	J	1/16W	
R304			RK73HB1J273J	CHIP R	27K	J	1/16W	
R305			RK73HB1J274J	CHIP R	270K	J	1/16W	
R306			RK73HB1J154J	CHIP R	150K	J	1/16W	
R307			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R308			RK73HB1J101J	CHIP R	100	J	1/16W	
R309,310			RK73HB1J104J	CHIP R	100K	J	1/16W	
R311			RK73HB1J101J	CHIP R	100	J	1/16W	
R313			RK73HB1J473J	CHIP R	47K	J	1/16W	
R314			RK73HB1J563J	CHIP R	56K	J	1/16W	
R315,316			RK73HB1J153J	CHIP R	15K	J	1/16W	
R317			RK73HB1J333J	CHIP R	33K	J	1/16W	
R318			RK73HB1J104J	CHIP R	100K	J	1/16W	
R319			RK73HB1J823J	CHIP R	82K	J	1/16W	
R321			RK73HB1J223J	CHIP R	22K	J	1/16W	
R322			RK73HB1J183J	CHIP R	18K	J	1/16W	
R323			RK73HB1J474J	CHIP R	470K	J	1/16W	
R324			RK73HB1J153J	CHIP R	15K	J	1/16W	
R325			RK73HB1J331J	CHIP R	330	J	1/16W	
R327			RK73HB1J683J	CHIP R	68K	J	1/16W	
R328			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R329,330			RK73HB1J104J	CHIP R	100K	J	1/16W	
R332			RK73HB1J683J	CHIP R	68K	J	1/16W	

Ref. No.	Address	New parts	Parts No.	Description				Destination
R333			RK73HB1J682J	CHIP R	6.8K	J	1/16W	
R334			RK73HB1J473J	CHIP R	47K	J	1/16W	
R335			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R336			RK73HB1J223J	CHIP R	22K	J	1/16W	
R338			RK73HB1J153J	CHIP R	15K	J	1/16W	
R339			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R340			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R342,343			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R344,345			RK73HB1J104J	CHIP R	100K	J	1/16W	
R346			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R347			RK73HB1J560J	CHIP R	56	J	1/16W	
R348			RK73HB1J104J	CHIP R	100K	J	1/16W	
R349			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R350			RK73HB1J182J	CHIP R	1.8K	J	1/16W	
R351			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R352			RK73HB1J471J	CHIP R	470	J	1/16W	
R354			RK73HB1J101J	CHIP R	100	J	1/16W	
R355			RK73HB1J151J	CHIP R	150	J	1/16W	
R356,357			RK73HB1J331J	CHIP R	330	J	1/16W	
R358			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R359			RK73HB1J104J	CHIP R	100K	J	1/16W	
R360,361			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R363			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R365			RK73HB1J560J	CHIP R	56	J	1/16W	
R400			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R401			RK73HB1J181J	CHIP R	180	J	1/16W	
R402,403			RK73HB1J473J	CHIP R	47K	J	1/16W	
R404			RK73HB1J101J	CHIP R	100	J	1/16W	
R405			RK73HB1J473J	CHIP R	47K	J	1/16W	
R406-408			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R409			RK73HB1J473J	CHIP R	47K	J	1/16W	
R410,411			RK73HB1J101J	CHIP R	100	J	1/16W	
R412			RK73HB1J473J	CHIP R	47K	J	1/16W	
R413,414			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R416			RK73HH1J104D	CHIP R	100K	D	1/16W	
R417			RK73HH1J154D	CHIP R	150K	D	1/16W	
R418			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R419-421			RK73HB1J473J	CHIP R	47K	J	1/16W	
R422,423			RK73HB1J393J	CHIP R	39K	J	1/16W	
R424			RK73HB1J101J	CHIP R	100	J	1/16W	
R425			RK73HB1J393J	CHIP R	39K	J	1/16W	
R428			RK73HB1J101J	CHIP R	100	J	1/16W	
R429,430			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R431			RK73HB1J103J	CHIP R	10K	J	1/16W	
R433			RK73HB1J473J	CHIP R	47K	J	1/16W	
R434			RK73HB1J103J	CHIP R	10K	J	1/16W	
R435			RK73HB1J473J	CHIP R	47K	J	1/16W	
R437			RK73HB1J473J	CHIP R	47K	J	1/16W	
R441			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R442			RK73HB1J680J	CHIP R	68	J	1/16W	
R443			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R444			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R445			RK73HB1J152J	CHIP R	1.5K	J	1/16W	
R446-450			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R453			RK73HB1J473J	CHIP R	47K	J	1/16W	
R460			RK73HB1J473J	CHIP R	47K	J	1/16W	
R464			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R466			RK73HB1J104J	CHIP R	100K	J	1/16W	
R468-471			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R472			RK73HB1J105J	CHIP R	1.0M	J	1/16W	

PARTS LIST

TX-RX UNIT (X57-7330-10)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
R473			RK73HB1J184J	CHIP R 180K J 1/16W	
R474			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R475			RK73HB1J104J	CHIP R 100K J 1/16W	
R476			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R479			RK73HB1J182J	CHIP R 1.8K J 1/16W	
R482			RK73HB1J273J	CHIP R 27K J 1/16W	
R483			RK73HB1J121J	CHIP R 120 J 1/16W	
R484			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R486			RK73HB1J823J	CHIP R 82K J 1/16W	
R487			RK73HB1J154J	CHIP R 150K J 1/16W	
R490			RK73HB1J473J	CHIP R 47K J 1/16W	
R491			RK73HB1J104J	CHIP R 100K J 1/16W	
R492			RK73HB1J223J	CHIP R 22K J 1/16W	
VR300			R32-0735-05	SEMI FIXED VARIABLE RESISTOR	
VR301		✻	R31-0667-05	VARIABLE RESISTOR	
S1			S70-0414-05	TACT SWITCH	
MIC300			T91-0651-15	MIC ELEMENT	
D1			RSK151KJ	DIODE	
D2			1SV214-F	VARIABLE CAPACITANCE DIODE	
D3			MA2S111-F	DIODE	
D4			1SV214-F	VARIABLE CAPACITANCE DIODE	
D5			MA2S111-F	DIODE	
D6,7			HSC277	DIODE	
D101			HVC131	DIODE	
D200,201			HSC277	DIODE	
D300			DA221	DIODE	
D301,302			RB706F-40	DIODE	
D303			DAN222	DIODE	
D304		✻	GN1G	DIODE	
D305-308			KDZ3.3V	ZENER DIODE	
IC1			TB31202FNG	MOS-IC	
IC100		✻	BH2219FVM	ANALOGUE IC	
IC200			TA31136FNG	MOS-IC	
IC300			AK2346	MOS-IC	
IC301			NJM2100V-ZB	MOS-IC	
IC302			TK62012F	MOS-IC	
IC303		✻	LM4865M-N	BI-POLAR IC	
IC400		✻	XC61CN2802N	MOS-IC	
IC401			XC61CN2702N	MOS-IC	
IC403		✻	D338327A19WV	MICROCONTROLLER IC	
IC404			BH30FB1WG	MOS-IC	
IC405			TC7W74FU-F	MOS-IC	
IC406		✻	BR24L08FJ-W	ROM IC	
Q1			2SK1824-A	FET	
Q2,3			2SC5488	TRANSISTOR	
Q4			2SC4617(S)	TRANSISTOR	
Q5,6			2SC5066-F(O)	TRANSISTOR	
Q101			2SC5092-F	TRANSISTOR	
Q103			2SK3656-F	FET	
Q104		✻	RQA0002DNS	FET	
Q200		✻	KRA304E	DIGITAL TRANSISTOR	
Q201,202			2SC4082	TRANSISTOR	
Q203			3SK318	FET	
Q204			3SK294-FP	FET	
Q300			2SK1824-A	FET	
Q301,302			2SK1824-A	FET	
Q303			2SC4919	TRANSISTOR	
Q400-402			DTC114EE	DIGITAL TRANSISTOR	

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
Q403			2SC4919	TRANSISTOR	
Q404-406		✻	KRA305E	DIGITAL TRANSISTOR	
Q408			2SC4919	TRANSISTOR	
TH100,101			B57331V2104J	THERMISTOR	
TH302			ERTJ0EV104H	THERMICTOR	