EXPLODED VIEW

A		: N09-2409-05
B	M7	: N10-2070-46
C	M3 x 8	: N67-3008-46
D	M2.6 x 6	: N80-2606-46
E	M2.6 x 6 (Br-Tap)	: N87-2606-46
F	M2.6 x 20 (Br-Tap)	: N87-2620-46
G	M3 x 8 (Br-Tap) BLK	: N87-3008-45

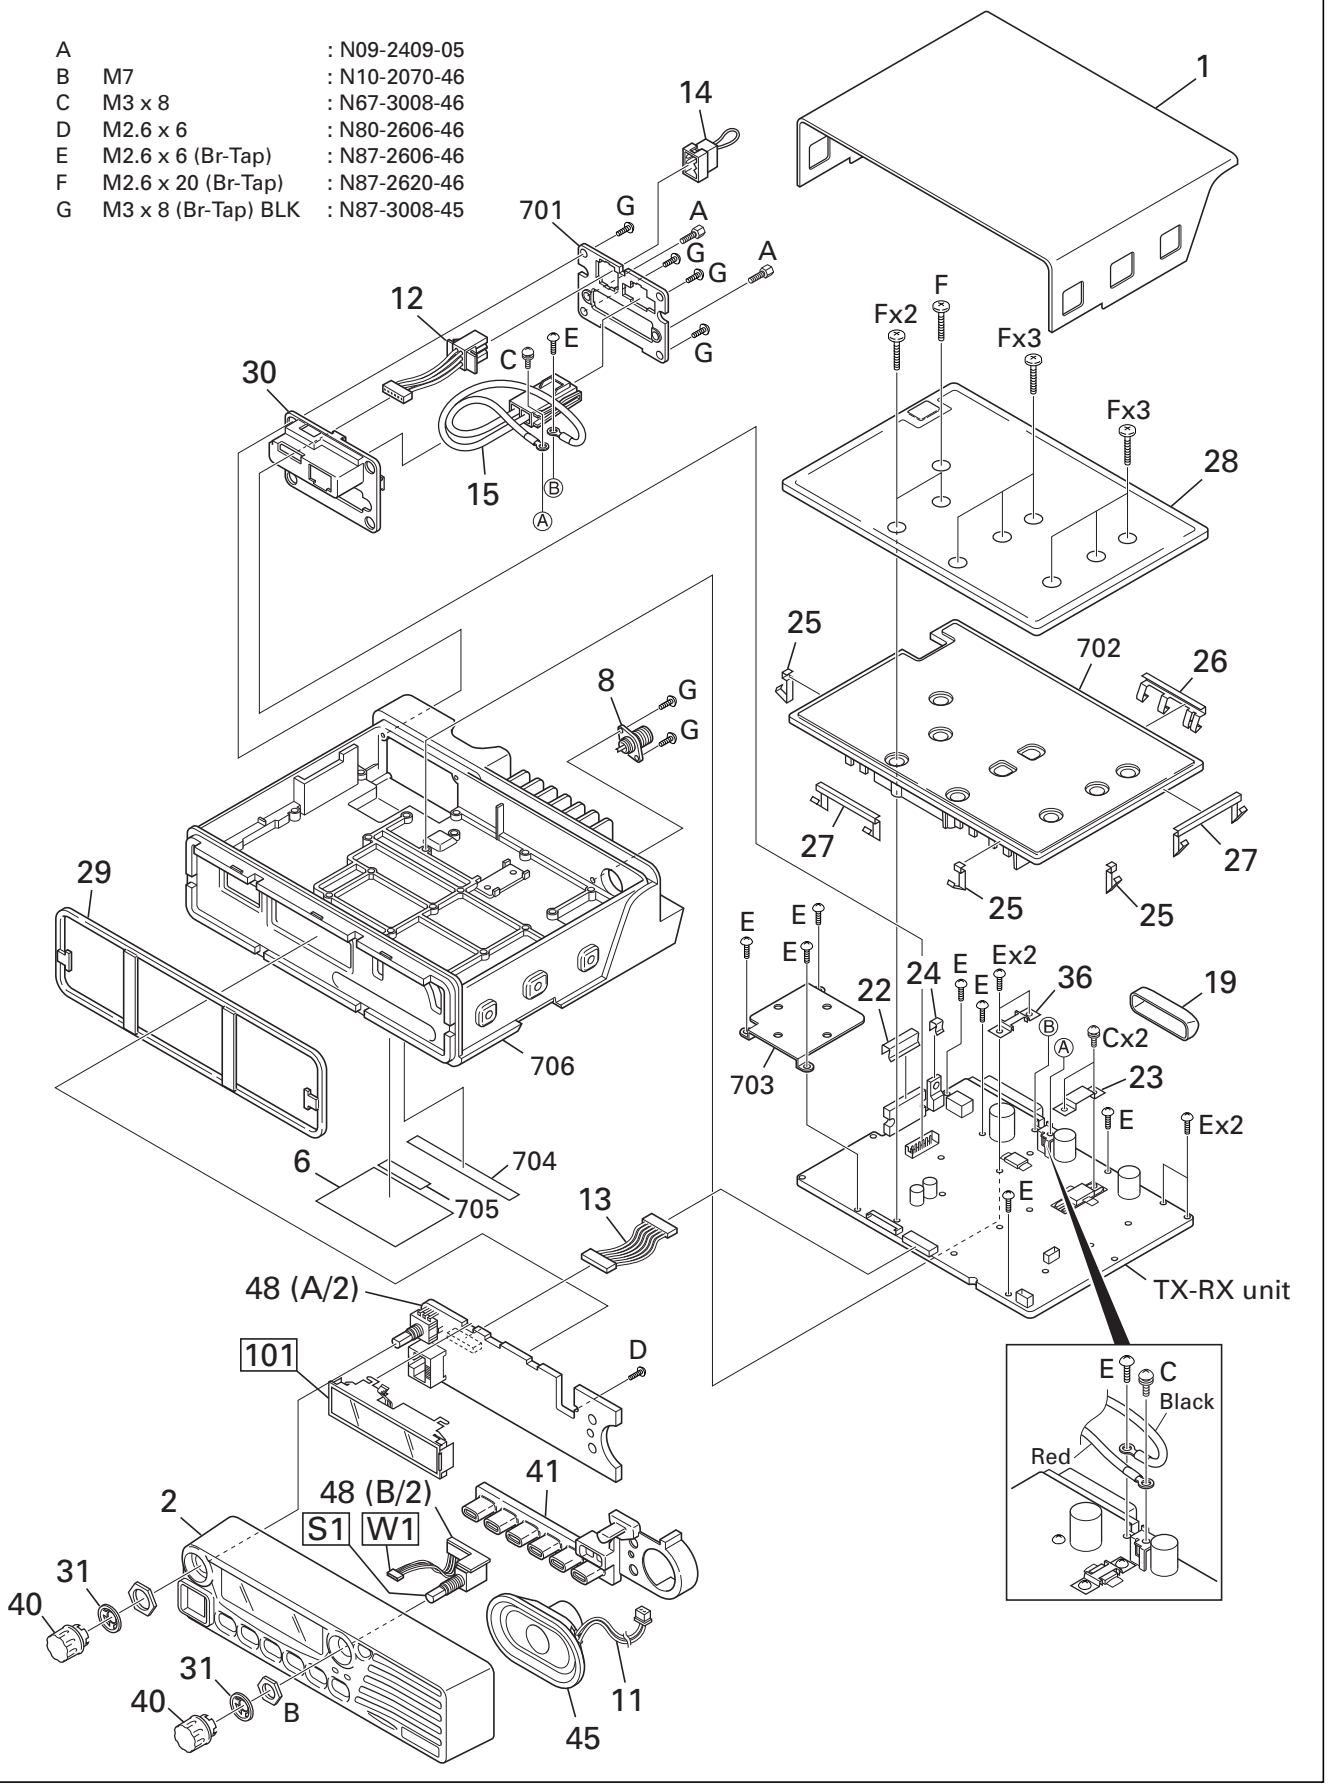

Pats with the exploded numbers larger than 700 are not supplied.

PACKING

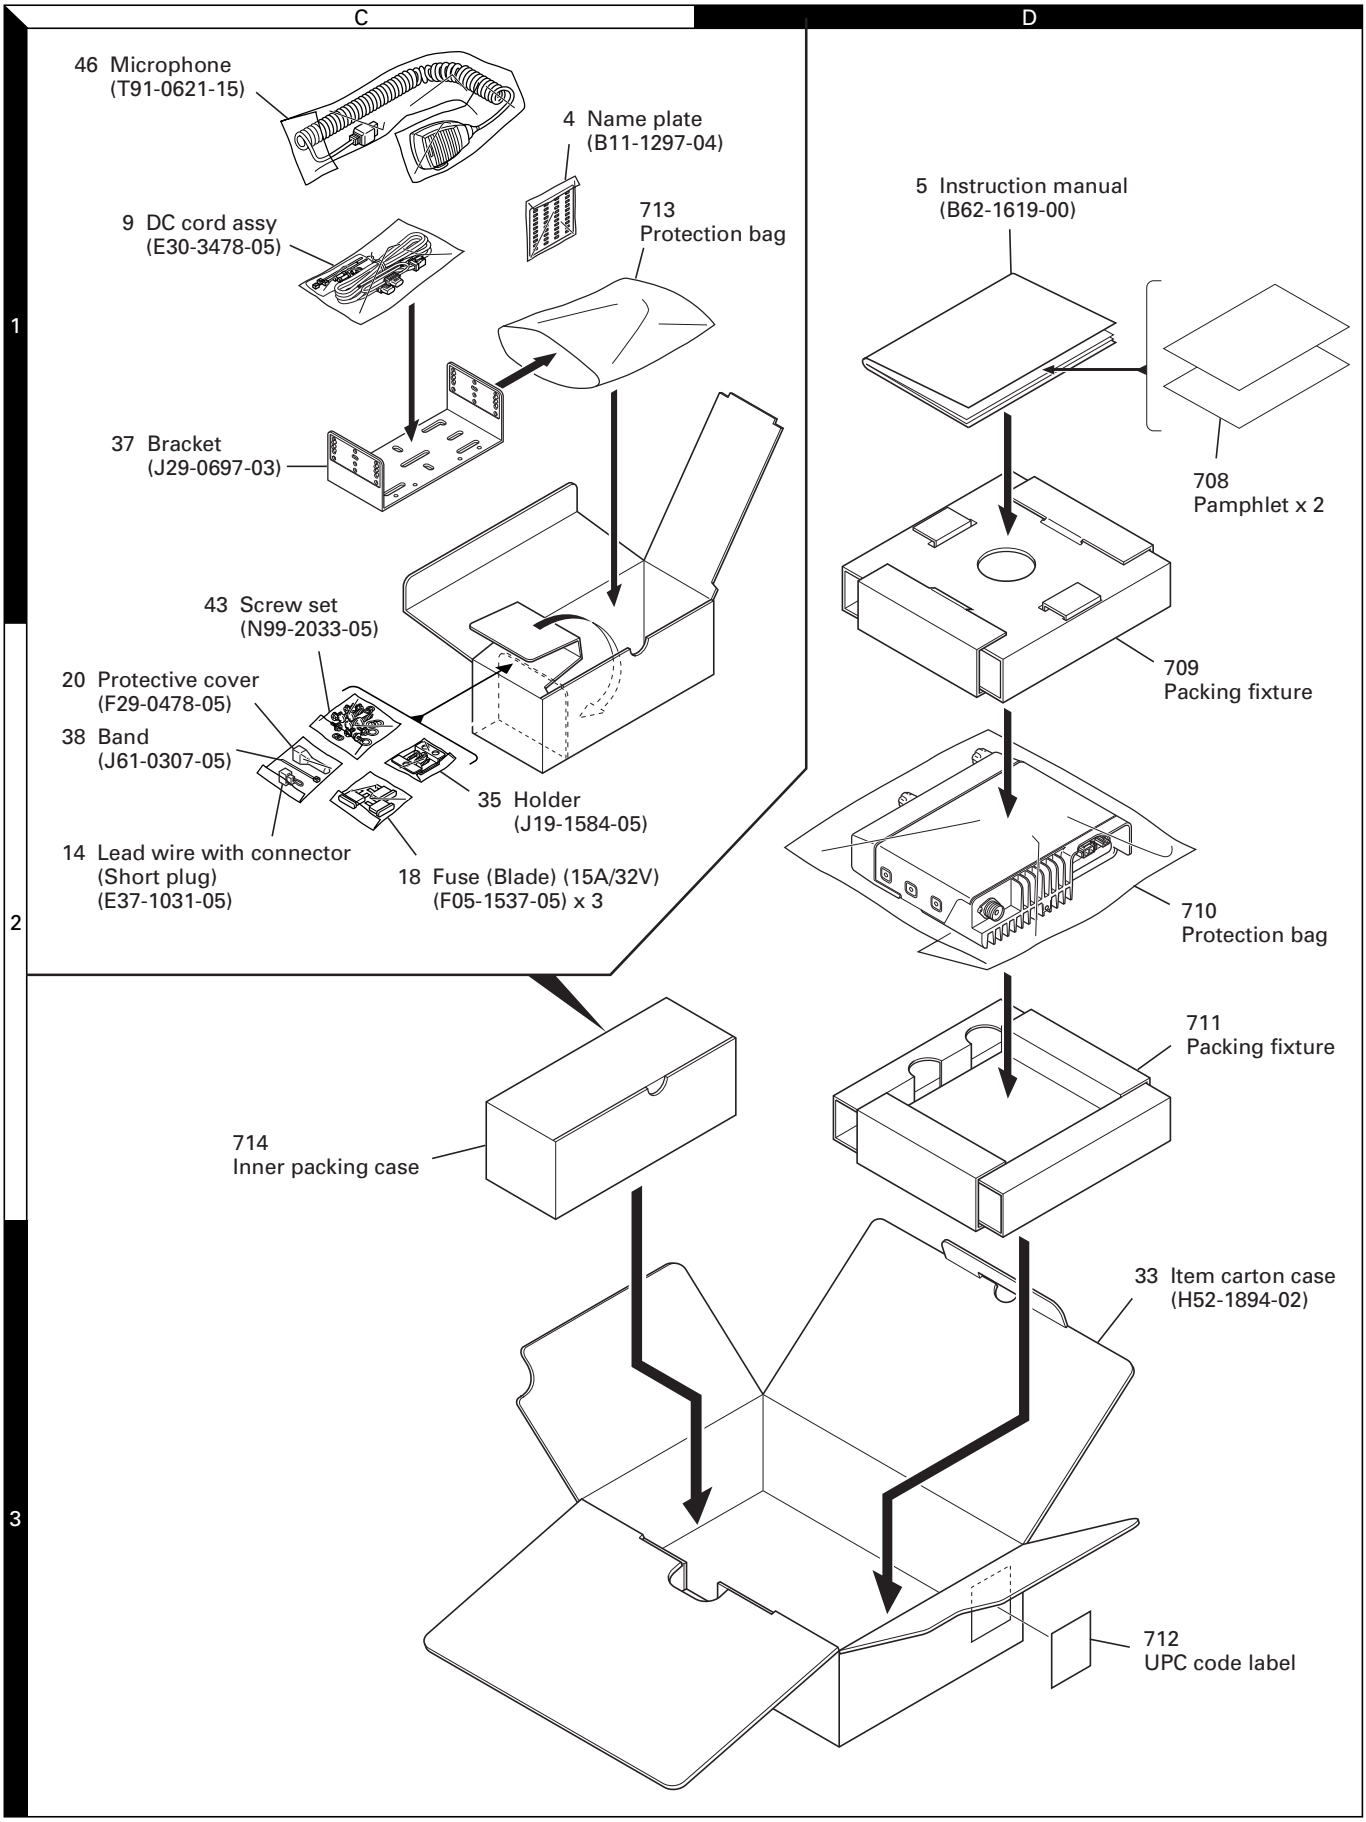

Pats with the exploded numbers larger than 700 are not supplied.

PARTS LIST

✻ New Parts. ⚠ indicates safety critical components.
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

L : Scandinavia **K** : USA **P** : Canada
Y : PX (Far East, Hawaii) **T** : England **E** : Europe
Y : AAFES (Europe) **X** : Australia **M** : Other Areas

TK-7150 (Y51-4910-10)
DISPLAY UNIT (X54-3400-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination
TK-7150					
1	1B	✻	A01-2185-12	CABINET	
2	3A	✻	A62-1037-03	PANEL ASSY	
4	1C	✻	B11-1297-04	NAME PLATE	
5	1D	✻	B62-1619-00	INSTRUCTION MANUAL	
6	3A	✻	B72-2075-04	MODEL NAME PLATE	
8	2A		E04-0167-05	RF COAXIAL PECEPTACLE (M)	
9	1C	✻	E30-3478-05	DC CORD ASSY	
-			E37-0808-05	LEAD WIRE WITH CONNECTOR	
11	3A	✻	E37-1002-15	LEAD WIRE WITH CONNECTOR	
12	1A	✻	E37-1003-05	LEAD WIRE WITH CONNECTOR (6P/ACC)	
13	3A	✻	E37-1004-05	LEAD WIRE WITH CONNECTOR (TXRX-CONT)	
14	1B,2C	✻	E37-1031-05	LEAD WIRE WITH CONNECTOR (SHORT PLUG)	
15	1A	✻	E37-1074-05	LEAD WIRE WITH CONNECTOR (DC)	
-		✻	E37-1075-05	LEAD WIRE WITH CONNECTOR	
18	2C		F05-1537-05	FUSE (BLADE) (15A/32V)	
19	2B		F09-0445-05	CAP (D-SUB)	
20	2C	✻	F29-0478-05	PROTECTIVE COVER	
22	2B		G02-0861-04	FLAT SPRING	
23	2B	✻	G02-0894-04	EARTH SPRING	
24	2B	✻	G02-0896-04	FLAT SPRING	
25	2B	✻	G02-0900-04	EARTH SPRING	
26	2B	✻	G02-1801-03	EARTH SPRING	
27	2B	✻	G02-1802-04	EARTH SPRING	
28	1B	✻	G53-1551-02	PACKING	
29	2A	✻	G53-1552-03	PACKING	
30	1A	✻	G53-1554-03	PACKING	
31	3A	✻	G53-1555-04	PACKING	
33	3D	✻	H52-1894-02	ITEM CARTON CASE	
35	2C		J19-1584-05	HOLDER	
36	2B	✻	J21-8437-14	HARDWARE FIXTURE	
37	1C	✻	J29-0697-03	BRACKET	
38	2C		J61-0307-05	BAND	
40	3A	✻	K29-9221-03	KNOB	
41	3A	✻	K29-9222-02	KEY TOP	
A	1B	✻	N09-2409-05	HEXAGON HEAD SCREW	
B	3A		N10-2070-46	HEXAGON NUT	
C	1A,2B,3B		N67-3008-46	PAN HEAD SEMS SCREW W	
D	3A		N80-2606-46	PAN HEAD TAPTITE SCREW	
E	2B,3B		N87-2606-46	BRAZIER HEAD TAPTITE SCREW	
F	1B	✻	N87-2620-46	BRAZIER HEAD TAPTITE SCREW	
G	1B,2B	✻	N87-3008-45	BRAZIER HEAD TAPTITE SCREW	
43	2C	✻	N99-2033-05	SCREW SET	
45	3A	✻	T07-0738-05	SPEAKER	
46	1C		T91-0621-15	MICROPHONE	
48	3A	✻	X54-3400-10	DISPLAY UNIT	

Ref. No.	Address	New parts	Parts No.	Description	Destination
DISPLAY UNIT (X54-3400-10)					
101	3A	✻	B38-0875-05	LCD ASSY	
D908-911			B30-2254-05	LED	
D912			B30-2193-05	LED (RED)	
D913,914			B30-2254-05	LED	
D915			B30-2194-05	LED (GREEN)	
C901			CC73GCH1H101J	CHIP C 100PF J	
C902			CK73GB1H102K	CHIP C 1000PF K	
C903			CK73GB1H103K	CHIP C 0.010UF K	
C904			CK73GB1H102K	CHIP C 1000PF K	
C905,906			CC73GCH1H101J	CHIP C 100PF J	
C907			CK73GB1H102K	CHIP C 1000PF K	
C909,910			CC73GCH1H101J	CHIP C 100PF J	
C911,912			C92-0628-05	CHIP-TAN 10UF 10WV	
C914			CK73GB1H102K	CHIP C 1000PF K	
C915-917			CC73GCH1H101J	CHIP C 100PF J	
C918,919			CK73GB1H103K	CHIP C 0.010UF K	
C921			CK73GB1H103K	CHIP C 0.010UF K	
C922			CC73GCH1H060B	CHIP C 6.0PF B	
C923			CK73GB1C223K	CHIP C 0.022UF K	
C924			C92-0628-05	CHIP-TAN 10UF 10WV	
C925			CK73GB1H102K	CHIP C 1000PF K	
C926,927			CC73GCH1H270J	CHIP C 27PF J	
C928			CK73GB1H103K	CHIP C 0.010UF K	
C929,930			CK73GB1H102K	CHIP C 1000PF K	
C931			CK73GB1H103K	CHIP C 0.010UF K	
C932			CK73GB1H102K	CHIP C 1000PF K	
C933			CK73GB1H103K	CHIP C 0.010UF K	
C934,935			CK73GB1H102K	CHIP C 1000PF K	
C938,939			CK73GB1H102K	CHIP C 1000PF K	
C941,942			CK73GB1H102K	CHIP C 1000PF K	
C943			CK73GB1H103K	CHIP C 0.010UF K	
C944			CK73GB1H102K	CHIP C 1000PF K	
CN901			E40-5538-05	PIN ASSY	
CN902			E40-6140-05	PIN ASSY	
CN905			E40-5823-05	FLAT CABLE CONNECTOR	
CN906			E40-5752-05	PIN ASSY	
J901			E08-0877-05	MODULAR JACK	
W1	3A	✻	E37-1057-05	LEAD WIRE WITH CONNECTOR	
L901,902			L40-1095-34	SMALL FIXED INDUCTOR (1UH)	
X901			L77-1863-05	CRYSTAL RESONATOR (12.0MHZ)	
R902			RK73GB1J104J	CHIP R 100K J 1/16W	
R904,905			R92-1252-05	CHIP R 0 OHM J 1/16W	
R906,907			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R908			RK73GB1J473J	CHIP R 47K J 1/16W	
R909			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R910			RK73GB1J104J	CHIP R 100K J 1/16W	
R913			RK73GB1J473J	CHIP R 47K J 1/16W	
R914			RK73GB1J561J	CHIP R 560 J 1/16W	
R915			R92-0670-05	CHIP R 0 OHM	
R916-918			RK73GB1J473J	CHIP R 47K J 1/16W	
R919			RK73GB1J333J	CHIP R 33K J 1/16W	
R920			RK73FB2A560J	CHIP R 56 J 1/10W	

PARTS LIST

DISPLAY UNIT (X54-3400-10)
TX-RX UNIT (X57-6570-10)

Ref. No.	Address	New parts	Parts No.	Description				Destination
R922			RK73GB1J333J	CHIP R	33K	J	1/16W	
R923-925			RK73GB1J102J	CHIP R	1.0K	J	1/16W	
R926,927			RK73FB2A151J	CHIP R	150	J	1/10W	
R928			RK73GB1J102J	CHIP R	1.0K	J	1/16W	
R931			RK73FB2A272J	CHIP R	2.7K	J	1/10W	
R932,933			RK73GB1J102J	CHIP R	1.0K	J	1/16W	
R934			RK73FB2A272J	CHIP R	2.7K	J	1/10W	
R935-941			RK73GB1J473J	CHIP R	47K	J	1/16W	
R942			RK73GB1J472J	CHIP R	4.7K	J	1/16W	
R943			RK73GB1J333J	CHIP R	33K	J	1/16W	
R944			RK73GB1J471J	CHIP R	470	J	1/16W	
R945			RK73GB1J6R8J	CHIP R	6.8	J	1/16W	
R946,947			R92-2021-05	CHIP R	2.2	J	1/2W	
R948			RK73GB1J104J	CHIP R	100K	J	1/16W	
R949			RK73GB1J102J	CHIP R	1.0K	J	1/16W	
R950			RK73GB1J224J	CHIP R	220K	J	1/16W	
R951			RK73GB1J102J	CHIP R	1.0K	J	1/16W	
R952-955			RK73GB1J104J	CHIP R	100K	J	1/16W	
R956-959			RK73GB1J102J	CHIP R	1.0K	J	1/16W	
R960			RK73GB1J472J	CHIP R	4.7K	J	1/16W	
VR901			R31-0630-05	VARIABLE RESISTOR				
S1	3A	✻	S60-0423-05	ROTARY SWITCH				
D902-906			DA204U	DIODE				
D907			02CZ9.1(X,Y)	ZENER DIODE				
D916			02DZ18(X,Y)	ZENER DIODE				
D917		✻	MINISMDC020	VARISTOR				
D918			02DZ18(X,Y)	ZENER DIODE				
IC901			TA7805F	MOS IC				
IC902			RH5VL42C	MOS IC				
IC904		✻	30622M4A-443GP	MPU				
Q901			2SJ243	FET				
Q902			2SK1824	FET				
Q903			2SD1760	TRANSISTOR				
Q904-908			DTC114EE	DIGITAL TRANSISTOR				
Q909-911			DTC144EE	DIGITAL TRANSISTOR				

TX-RX UNIT (X57-6570-10)

C1-3			CK73GB1H102K	CHIP C	1000PF	K		
C4			CC73GCH1H100D	CHIP C	10PF	D		
C5-9			CK73GB1H102K	CHIP C	1000PF	K		
C10			CC73GCH1H390J	CHIP C	39PF	J		
C11-14			CK73GB1H102K	CHIP C	1000PF	K		
C15			CC73GCH1H270J	CHIP C	27PF	J		
C16			CK73GB1H102K	CHIP C	1000PF	K		
C17			CC73GCH1H220J	CHIP C	22PF	J		
C18,19			CK73GB1H102K	CHIP C	1000PF	K		
C20			CC73GCH1H330J	CHIP C	33PF	J		
C21			CC73GCH1H820J	CHIP C	82PF	J		
C22			CK73FB1H102K	CHIP C	1000PF	K		
C23,24			C93-0602-05	CHIP C	820PF	K		
C25			CC73FCH1H470J	CHIP C	47PF	J		
C26			CK73GB1H102K	CHIP C	1000PF	K		
C27			CC73FCH1H121J	CHIP C	120PF	J		
C29			CK73FB1H102K	CHIP C	1000PF	K		
C30			CK73GB1H102K	CHIP C	1000PF	K		
C31			C93-0603-05	CHIP C	1000PF	K		
C32,33			CK73GB1H102K	CHIP C	1000PF	K		

Ref. No.	Address	New parts	Parts No.	Description				Destination
C34			CM73F2H241J	CHIP C	240PF	J		
C35		✻	C93-0779-05	CERAMIC CAP	36PF	500WV		
C36			C93-0565-05	CHIP C	27PF	J		
C37,38			C93-0602-05	CHIP C	820PF	K		
C39			C93-0567-05	CHIP C	39PF	J		
C40			C93-0602-05	CHIP C	820PF	K		
C42,43			CC73GCH1H0R5C	CHIP C	0.5PF	C		
C44			CM73F2H390J	CHIP C	39PF	J		
C45			CK73GB1H102K	CHIP C	1000PF	K		
C46			C93-0566-05	CHIP C	33PF	J		
C47,48			CC73GCH1H0R5C	CHIP C	0.5PF	C		
C49			CK73GB1H102K	CHIP C	1000PF	K		
C50			C93-0565-05	CHIP C	27PF	J		
C51			CK73GB1H102K	CHIP C	1000PF	K		
C53			CK73GB1H102K	CHIP C	1000PF	K		
C54			CC73GCH1H040C	CHIP C	4.0PF	C		
C62			CC73FCH1H100D	CHIP C	10PF	D		
C63			CK73FB1E224K	CHIP C	0.22UF	K		
C65			CK73GB1H102K	CHIP C	1000PF	K		
C67			CK73GB1E473J	CHIP C	0.047UF	J		
C74			C93-0564-05	CHIP C	22PF	J		
C75			CC73GCH1H150J	CHIP C	15PF	J		
C77			CM73F2H220J	CHIP C	22PF	J		
C80			CK73GB1H102K	CHIP C	1000PF	K		
C89			CM73F2H300J	CHIP C	30PF	J		
C90			CM73F2H300J	CHIP C	30PF	J		
C92		✻	C90-4085-05	ELECTRO CAP	47UF	20WV		
C93,94			C90-5299-05	ELECTRO CAP	470UF	25WV		
C101			C92-0777-05	ELECTRO CAP	1000UF	25WV		
C102			CK73GB1E473J	CHIP C	0.047UF	J		
C103			CC73GCH1H471J	CHIP C	470PF	J		
C104			CC73GCH1H101J	CHIP C	100PF	J		
C105,106			CK73GB1E473J	CHIP C	0.047UF	J		
C107			CC73GCH1H471J	CHIP C	470PF	J		
C108			C92-0754-05	CHIP-TAN	4.7UF	20WV		
C109,110			CC73GCH1H471J	CHIP C	470PF	J		
C111-113			CK73GB1C104K	CHIP C	0.10UF	K		
C114			CC73GCH1H471J	CHIP C	470PF	J		
C115			CK73GB1E473J	CHIP C	0.047UF	J		
C116			CK73GB1C104K	CHIP C	0.10UF	K		
C117-119			CK73FB1C105K	CHIP C	1.0UF	K		
C120			CK73GB1E473J	CHIP C	0.047UF	J		
C121			CK73GB1H102K	CHIP C	1000PF	K		
C122,123			CK73GB1C104K	CHIP C	0.10UF	K		
C124-126			CC73GCH1H101J	CHIP C	100PF	J		
C127			C92-0585-05	CHIP-TAN	4.7UF	16WV		
C128-131			C92-0628-05	CHIP-TAN	10UF	10WV		
C132			CK73GB1H102K	CHIP C	1000PF	K		
C133			C92-0585-05	CHIP-TAN	4.7UF	16WV		
C134			CK73FB1E224K	CHIP C	0.22UF	K		
C135			C92-0628-05	CHIP-TAN	10UF	10WV		
C200			CK73GB1C104K	CHIP C	0.10UF	K		
C201			CK73FB1E224K	CHIP C	0.22UF	K		
C202			CK73GB1H102K	CHIP C	1000PF	K		
C203			CK73GB1C104K	CHIP C	0.10UF	K		
C204,205			CK73GB1H102K	CHIP C	1000PF	K		
C206			CK73GB1H152K	CHIP C	1500PF	K		
C207			CK73GB1C104K	CHIP C	0.10UF	K		
C208,209			CC73GCH1H271J	CHIP C	270PF	J		
C210			CK73GB1H102K	CHIP C	1000PF	K		

PARTS LIST

TX-RX UNIT (X57-6570-10)

Ref. No.	Address	New parts	Parts No.	Description			Destination
C211			CK73GB1C104K	CHIP C	0.10UF	K	
C212			CK73GB1H103K	CHIP C	0.010UF	K	
C213			CC73GCH1H270J	CHIP C	27PF	J	
C214			CK73GB1C104K	CHIP C	0.10UF	K	
C215			C92-0560-05	CHIP-TAN	10UF	6.3WV	
C216			CK73GB1C333K	CHIP C	0.033UF	K	
C217,218			CK73GB1H103K	CHIP C	0.010UF	K	
C219			C92-0560-05	CHIP-TAN	10UF	6.3WV	
C220			CK73GB1H103K	CHIP C	0.010UF	K	
C221			CC73GCH1H180J	CHIP C	18PF	J	
C222			CC73GCH1H150J	CHIP C	15PF	J	
C223			CK73GB1H102K	CHIP C	1000PF	K	
C224			CK73GB1H103K	CHIP C	0.010UF	K	
C225			CK73GB1C104K	CHIP C	0.10UF	K	
C226			CC73GCH1H080D	CHIP C	8.0PF	D	
C227			CC73GCH1H101J	CHIP C	100PF	J	
C228			CC73GCH1H100D	CHIP C	10PF	D	
C229,230			CK73GB1H103K	CHIP C	0.010UF	K	
C231,232			CC73GCH1H470J	CHIP C	47PF	J	
C233,234			CK73GB1H103K	CHIP C	0.010UF	K	
C235,236			CC73GCH1H010C	CHIP C	1.0PF	C	
C237			CC73GCH1H101J	CHIP C	100PF	J	
C238,239			CC73GCH1H030C	CHIP C	3.0PF	C	
C240			CK73GB1H102K	CHIP C	1000PF	K	
C241,242			CC73GCH1H010C	CHIP C	1.0PF	C	
C243,244			CK73GB1H103K	CHIP C	0.010UF	K	
C245,246			CC73GCH1H470J	CHIP C	47PF	J	
C247			CK73GB1H102K	CHIP C	1000PF	K	
C248			CC73GCH1H151J	CHIP C	150PF	J	
C249			CK73GB1H103K	CHIP C	0.010UF	K	
C251			CC73GCH1H330J	CHIP C	33PF	J	
C252			CC73GCH1H101J	CHIP C	100PF	J	
C253			CK73GB1H103K	CHIP C	0.010UF	K	
C254			CC73GCH1H221J	CHIP C	220PF	J	
C255,256			CK73GB1H102K	CHIP C	1000PF	K	
C257			CC73GCH1H680J	CHIP C	68PF	J	
C258			CC73GCH1H090D	CHIP C	9.0PF	D	
C259			CC73GCH1H150J	CHIP C	15PF	J	
C260			CC73GCH1H270J	CHIP C	27PF	J	
C261			CK73GB1H103K	CHIP C	0.010UF	K	
C262			CC73GCH1H030C	CHIP C	3.0PF	C	
C263			CK73GB1C104K	CHIP C	0.10UF	K	
C264			CC73GCH1H270J	CHIP C	27PF	J	
C265			CC73GCH1H030C	CHIP C	3.0PF	C	
C266			CC73GCH1H150J	CHIP C	15PF	J	
C267-269			CK73GB1H103K	CHIP C	0.010UF	K	
C270			CC73GCH1H050C	CHIP C	5.0PF	C	
C271			CK73GB1H102K	CHIP C	1000PF	K	
C272			CC73GCH1H270J	CHIP C	27PF	J	
C273			CC73GCH1H100D	CHIP C	10PF	D	
C274			CC73GCH1H221J	CHIP C	220PF	J	
C276			CC73GCH1H270J	CHIP C	27PF	J	
C277			CK73GB1H103K	CHIP C	0.010UF	K	
C278			CC73GCH1H151J	CHIP C	150PF	J	
C279			CC73GCH1H270J	CHIP C	27PF	J	
C280			CC73GCH1H100D	CHIP C	10PF	D	
C281,282			CC73GCH1H221J	CHIP C	220PF	J	
C283			CC73GCH1H270J	CHIP C	27PF	J	
C284			CK73GB1H103K	CHIP C	0.010UF	K	
C285			CK73GB1H102K	CHIP C	1000PF	K	

Ref. No.	Address	New parts	Parts No.	Description			Destination
C286			CC73GCH1H120J	CHIP C	12PF	J	
C287			CK73GB1H103K	CHIP C	0.010UF	K	
C288			CK73GB1H102K	CHIP C	1000PF	K	
C289			CC73GCH1H270J	CHIP C	27PF	J	
C290			CC73GCH1H100D	CHIP C	10PF	D	
C291,292			CC73GCH1H221J	CHIP C	220PF	J	
C293			CC73GCH1H270J	CHIP C	27PF	J	
C294			CK73GB1H103K	CHIP C	0.010UF	K	
C295			CK73GB1H102K	CHIP C	1000PF	K	
C305			CK73GB1C104K	CHIP C	0.10UF	K	
C306			C92-0712-05	CHIP-TAN	22UF	6.3WV	
C501			CK73GB1H102K	CHIP C	1000PF	K	
C502			C92-0514-05	CHIP-TAN	2.2UF	10WV	
C503			C92-0560-05	CHIP-TAN	10UF	6.3WV	
C504			CK73FB1E683K	CHIP C	0.068UF	K	
C505,506			CK73GB1H102K	CHIP C	1000PF	K	
C507			C92-0502-05	CHIP-TAN	0.33UF	35WV	
C508			CK73GB1C104K	CHIP C	0.10UF	K	
C509			C92-0585-05	CHIP-TAN	4.7UF	16WV	
C510			CC73GCH1H100D	CHIP C	10PF	D	
C512			CK73GB1H103K	CHIP C	0.010UF	K	
C513			C92-0585-05	CHIP-TAN	4.7UF	16WV	
C514			CK73GB1H102K	CHIP C	1000PF	K	
C515			CK73GB1C104K	CHIP C	0.10UF	K	
C516			CK73GB1H102K	CHIP C	1000PF	K	
C517			CK73GB1C104K	CHIP C	0.10UF	K	
C519			CK73GB1H102K	CHIP C	1000PF	K	
C520			CK73FB1E224K	CHIP C	0.22UF	K	
C521			C92-0003-05	CHIP-TAN	0.47UF	25WV	
C522			CC73GCH1H471J	CHIP C	470PF	J	
C523-525			CK73GB1C104K	CHIP C	0.10UF	K	
C526			CK73GB1H102K	CHIP C	1000PF	K	
C527			C92-0628-05	CHIP-TAN	10UF	10WV	
C528			CC73GCH1H150G	CHIP C	15PF	G	
C529			CC73GCH1H030B	CHIP C	3.0PF	B	
C530			CK73GB1C104K	CHIP C	0.10UF	K	
C531			CC73GCH1H270G	CHIP C	27PF	G	
C532		✻	CC73GCH1H680G	CHIP C	68PF	G	
C533		✻	CC73GCH1H560G	CHIP C	56PF	G	
C534			CC73GCH1H030B	CHIP C	3.0PF	B	
C535			CC73GCH1H150G	CHIP C	15PF	G	
C537			CK73GB1C104K	CHIP C	0.10UF	K	
C538			CC73GCH1H471J	CHIP C	470PF	J	
C539			CC73GCH1H150G	CHIP C	15PF	G	
C540		✻	CC73GCH1H470G	CHIP C	47PF	G	
C541			CC73GCH1H330G	CHIP C	33PF	G	
C542			CK73GB1C104K	CHIP C	0.10UF	K	
C543			CC73GCH1HR75B	CHIP C	0.75PF	B	
C544,545			CK73GB1H102K	CHIP C	1000PF	K	
C546,547			CC73GCH1H090B	CHIP C	9.0PF	B	
C548,549			CC73GCH1H150G	CHIP C	15PF	G	
C550			CK73GB1H102K	CHIP C	1000PF	K	
C551			CC73GCH1H150G	CHIP C	15PF	G	
C552,553			CK73GB1H102K	CHIP C	1000PF	K	
C554			CC73GCH1H010B	CHIP C	1.0PF	B	
C555			CK73GB1H102K	CHIP C	1000PF	K	
C556			CC73GCH1H010B	CHIP C	1.0PF	B	
C557			CK73GB1H103K	CHIP C	0.010UF	K	
C559			CK73GB1H102K	CHIP C	1000PF	K	
C560,561		✻	C90-4085-05	ELECTRO CAP	47UF	20WV	

PARTS LIST

TX-RX UNIT (X57-6570-10)

Ref. No.	Address	New parts	Parts No.	Description			Destination
C562			CK73GB1H102K	CHIP C	1000PF	K	
C563			CK73GB1H103K	CHIP C	0.010UF	K	
C564			CC73GCH1H150J	CHIP C	15PF	J	
C565			CK73GB1H102K	CHIP C	1000PF	K	
C567-573			CK73GB1H102K	CHIP C	1000PF	K	
C574			CK73GB1H103K	CHIP C	0.010UF	K	
C575			CC73GCH1H150J	CHIP C	15PF	J	
C576			C92-0633-05	CHIP-TAN	22UF	10WV	
C577			CC73GCH1H150J	CHIP C	15PF	J	
C578			CK73GB1H102K	CHIP C	1000PF	K	
C579			C92-0696-05	CHIP-TAN	47UF	10WV	
C580			CK73GB1H102K	CHIP C	1000PF	K	
C581			CK73GB1H103K	CHIP C	0.010UF	K	
C584			C92-0606-05	CHIP-TAN	4.7UF	10WV	
C585-587			CK73GB1H102K	CHIP C	1000PF	K	
C593			CK73FB1E683K	CHIP C	0.068UF	K	
C594			CK73GB1H102K	CHIP C	1000PF	K	
C700,701			CK73GB1H103K	CHIP C	0.010UF	K	
C702			CK73GB1C104K	CHIP C	0.10UF	K	
C703			CC73GCH1H030C	CHIP C	3.0PF	C	
C704,705			CC73GCH1H220J	CHIP C	22PF	J	
C706-708			CK73GB1H103K	CHIP C	0.010UF	K	
C709,710			C92-0519-05	CHIP-TAN	1.0UF	25WV	
C711			CK73FB1C105K	CHIP C	1.0UF	K	
C712,713			C92-0519-05	CHIP-TAN	1.0UF	25WV	
C714			CK73GB1C104K	CHIP C	0.10UF	K	
C715			CK73FB1C105K	CHIP C	1.0UF	K	
C716			CK73GB1H103K	CHIP C	0.010UF	K	
C717,718			CK73GB1C104K	CHIP C	0.10UF	K	
C719-721			CK73FB1C105K	CHIP C	1.0UF	K	
C722-724			CK73GB1H103K	CHIP C	0.010UF	K	
C725			CK73FB1C105K	CHIP C	1.0UF	K	
C726			CK73GB1H103K	CHIP C	0.010UF	K	
C727			CK73FB1C105K	CHIP C	1.0UF	K	
C728			CK73GB1H103K	CHIP C	0.010UF	K	
C729			CK73GB1H102K	CHIP C	1000PF	K	
C730,731			CC73GCH1H101J	CHIP C	100PF	J	
C732,733			CK73GB1H102K	CHIP C	1000PF	K	
C734			CC73GCH1H101J	CHIP C	100PF	J	
C735,736			CK73GB1H102K	CHIP C	1000PF	K	
C737			CC73GCH1H101J	CHIP C	100PF	J	
C738			CK73GB1H102K	CHIP C	1000PF	K	
C739			CK73FB1C105K	CHIP C	1.0UF	K	
C740			CK73GB1H102K	CHIP C	1000PF	K	
C741			CK73GB1H103K	CHIP C	0.010UF	K	
C742			CK73GB1H102K	CHIP C	1000PF	K	
C743			CK73GB1C104K	CHIP C	0.10UF	K	
C744			CC73GCH1H101J	CHIP C	100PF	J	
C745			CK73FB1C105K	CHIP C	1.0UF	K	
C746			CC73GCH1H101J	CHIP C	100PF	J	
C747			CK73GB1H103K	CHIP C	0.010UF	K	
C748			CC73GCH1H101J	CHIP C	100PF	J	
C749			CK73GB1H102K	CHIP C	1000PF	K	
C750			CK73FB1C105K	CHIP C	1.0UF	K	
C751-755			CK73GB1H103K	CHIP C	0.010UF	K	
C756-759			CK73FB1C105K	CHIP C	1.0UF	K	
C760			CC73GCH1H471J	CHIP C	470PF	J	
C761			CC73GCH1H220J	CHIP C	22PF	J	
C762			CK73GB1H103K	CHIP C	0.010UF	K	
C764,765			C92-0501-05	CHIP-TAN	1.5UF	10WV	

Ref. No.	Address	New parts	Parts No.	Description			Destination
C766			CC73GCH1H151J	CHIP C	150PF	J	
C767			C92-0628-05	CHIP-TAN	10UF	10WV	
C768,769			CK73GB1C104K	CHIP C	0.10UF	K	
C770			C92-0712-05	CHIP-TAN	22UF	6.3WV	
C771,772			C92-0628-05	CHIP-TAN	10UF	10WV	
C773			CC73GCH1H470J	CHIP C	47PF	J	
C774			CK73GB1C104K	CHIP C	0.10UF	K	
C775,776			CK73GB1H103K	CHIP C	0.010UF	K	
C777			CK73GB1C104K	CHIP C	0.10UF	K	
C778			C92-0628-05	CHIP-TAN	10UF	10WV	
C779,780			CC73GCH1H101J	CHIP C	100PF	J	
C781,782			C92-0712-05	CHIP-TAN	22UF	6.3WV	
C784			CC73GCH1H390J	CHIP C	39PF	J	
C785			C92-0712-05	CHIP-TAN	22UF	6.3WV	
C787			CK73GB1H102K	CHIP C	1000PF	K	
C788			C92-0628-05	CHIP-TAN	10UF	10WV	
C789			CK73GB1H102K	CHIP C	1000PF	K	
C790			CK73GB1H103K	CHIP C	0.010UF	K	
C793			CC73GCH1H330J	CHIP C	33PF	J	
C794			C92-0628-05	CHIP-TAN	10UF	10WV	
C795			C92-0712-05	CHIP-TAN	22UF	6.3WV	
C796			CK73GB1H152K	CHIP C	1500PF	K	
C797-799			CK73GB1H103K	CHIP C	0.010UF	K	
C800,801			C92-0712-05	CHIP-TAN	22UF	6.3WV	
C802			CC73GCH1H680J	CHIP C	68PF	J	
C803			CK73GB1H122K	CHIP C	1200PF	K	
C804			CK73GB1H102K	CHIP C	1000PF	K	
C805			C92-0712-05	CHIP-TAN	22UF	6.3WV	
C806,807			CK73GB1H103K	CHIP C	0.010UF	K	
C808			C92-0628-05	CHIP-TAN	10UF	10WV	
C809			C92-0719-05	ELECTRO CAP	47UF	25WV	
C810			CK73GB1H102K	CHIP C	1000PF	K	
C811			CC73GCH1H101J	CHIP C	100PF	J	
C812			C90-2146-05	ELECTRO	100UF	25WV	
C813			CK73GB1C104K	CHIP C	0.10UF	K	
C814			CK73GB1H103K	CHIP C	0.010UF	K	
C815,816			CK73GB1C104K	CHIP C	0.10UF	K	
C817			CK73GB1H103K	CHIP C	0.010UF	K	
C819			C92-0719-05	ELECTRO CAP	47UF	25WV	
C820			CK73GB1H103K	CHIP C	0.010UF	K	
C822			CK73GB1C104K	CHIP C	0.10UF	K	
C823			CC73GCH1H101J	CHIP C	100PF	J	
C825-830			CK73GB1H102K	CHIP C	1000PF	K	
C831			CK73GB1C104K	CHIP C	0.10UF	K	
C832			CC73GCH1H101J	CHIP C	100PF	J	
C833			CK73GB1C104K	CHIP C	0.10UF	K	
C834			CK73GB1H103K	CHIP C	0.010UF	K	
C835			CC73GCH1H470J	CHIP C	47PF	J	
C836			C92-0628-05	CHIP-TAN	10UF	10WV	
C837,838			CK73GB1C104K	CHIP C	0.10UF	K	
C844			CK73GB1H102K	CHIP C	1000PF	K	
C845			C92-0628-05	CHIP-TAN	10UF	10WV	
C846			CK73GB1H102K	CHIP C	1000PF	K	
TC501,502			C05-0396-05	CERAMIC TRIMMER CAP (8P)			
CN102		✻	E23-1233-04	TERMINAL			
CN201-203			E40-5538-05	PIN ASSY			
CN700,701			E40-9370-05	PIN ASSY			
CN703		✻	E40-5176-05	PIN ASSY			
CN704			E40-3241-05	PIN ASSY			

PARTS LIST

TX-RX UNIT (X57-6570-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination
CN731-756			E23-1081-05	TERMINAL	
J700		✻	E58-0494-05	SUB SOCKET (D)	
F100		✻	F53-0278-05	FUSE	
CF201		✻	L72-1002-05	CERAMIC FILTER	
CF202			L72-0372-05	CERAMIC FILTER	
CF203		✻	L72-1002-05	CERAMIC FILTER	
CF204			L72-0372-05	CERAMIC FILTER	
L2,3			L40-6875-92	SMALL FIXED INDUCTOR (68NH)	
L4		✻	L41-2775-20	SMALL FIXED INDUCTOR	
L5		✻	L41-1875-20	SMALL FIXED INDUCTOR	
L6			L34-4520-05	AIR-CORE COIL	
L7			L34-4602-05	AIR-CORE COIL	
L8			L34-4520-05	AIR-CORE COIL	
L9			L34-4518-05	AIR-CORE COIL	
L10			L34-4523-05	AIR-CORE COIL	
L11-14			L34-4520-05	AIR-CORE COIL	
L15			L34-4523-05	AIR-CORE COIL	
L16,17			L40-5675-92	SMALL FIXED INDUCTOR (56NH)	
L201			L34-4530-05	COIL	
L202,203			L40-1095-34	SMALL FIXED INDUCTOR (1UH)	
L204			L40-1005-34	SMALL FIXED INDUCTOR (10UH)	
L205			L34-4526-05	COIL	
L206			L34-4527-05	COIL	
L207			L34-4526-05	COIL	
L208			L34-4527-05	COIL	
L209			L34-4526-05	COIL	
L210			L34-4527-05	COIL	
L211			L40-1005-34	SMALL FIXED INDUCTOR (10UH)	
L212			L40-3381-37	SMALL FIXED INDUCTOR (0.330UH)	
L213			L40-1281-37	SMALL FIXED INDUCTOR (0.120UH)	
L214			L40-3975-34	SMALL FIXED INDUCTOR (39NH)	
L215			L40-1885-34	SMALL FIXED INDUCTOR (180NH)	
L216,217			L40-3375-34	SMALL FIXED INDUCTOR (33NH)	
L218			L39-1272-05	TOROIDAL COIL	
L219			L40-6895-34	SMALL FIXED INDUCTOR (6.8UH)	
L220			L40-3375-34	SMALL FIXED INDUCTOR (33NH)	
L221,222			L39-1272-05	TOROIDAL COIL	
L223			L40-1005-34	SMALL FIXED INDUCTOR (10UH)	
L224			L40-8271-34	SMALL FIXED INDUCTOR (82NH)	
L225			L40-1085-34	SMALL FIXED INDUCTOR (100NH)	
L501			L92-0138-05	FERRITE CHIP	
L503			L40-5695-34	SMALL FIXED INDUCTOR (5.6UH)	
L504		✻	L41-3398-08	SMALL FIXED INDUCTOR	
L505		✻	L41-2798-08	SMALL FIXED INDUCTOR	
L506			L40-3975-92	SMALL FIXED INDUCTOR (39NH)	
L507		✻	L41-3398-08	SMALL FIXED INDUCTOR	
L508		✻	L41-2798-08	SMALL FIXED INDUCTOR	
L509			L40-3975-92	SMALL FIXED INDUCTOR (39NH)	
L510		✻	L34-4610-05	AIR-CORE COIL	
L511			L34-4612-05	AIR-CORE COIL	
L512,513			L40-1015-34	SMALL FIXED INDUCTOR (100UH)	
L514		✻	L41-2798-08	SMALL FIXED INDUCTOR	
L515		✻	L41-3398-08	SMALL FIXED INDUCTOR	
L516		✻	L41-2798-08	SMALL FIXED INDUCTOR	
L517			L40-1085-92	SMALL FIXED INDUCTOR (100NH)	
L519			L40-8275-92	SMALL FIXED INDUCTOR (82NH)	
L520			L40-1085-92	SMALL FIXED INDUCTOR (100NH)	
L700,701			L92-0138-05	FERRITE CHIP	

Ref. No.	Address	New parts	Parts No.	Description	Destination
L703			L92-0138-05	FERRITE CHIP	
L704-713			L92-0140-05	FERRITE CHIP	
X201			L77-1762-05	CRYSTAL RESONATOR (44.395MHZ)	
X501		✻	L77-1902-05	VCXO (16.8MHZ/2.5PP)	
X700		✻	L77-1896-05	CRYSTAL RESONATOR (12.288MHZ)	
XF201			L71-0512-05	MCF (44.85MHZ WIDE)	
XF202			L71-0513-05	MCF (44.85MHZ NARR)	
CP700-715			R90-0740-05	MULTIPLE RESISTOR	
R1			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R2			RK73GB1J180J	CHIP R 18 J 1/16W	
R4			RK73GB1J100J	CHIP R 10 J 1/16W	
R5			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R6			RK73GB1J471J	CHIP R 470 J 1/16W	
R7			RK73GB1J470J	CHIP R 47 J 1/16W	
R9			RK73GB1J220J	CHIP R 22 J 1/16W	
R10			RK73GB1J222J	CHIP R 2.2K J 1/16W	
R11			RK73GB1J101J	CHIP R 100 J 1/16W	
R12			RK73FB2A100J	CHIP R 10 J 1/10W	
R13			RK73FB2A180J	CHIP R 18 J 1/10W	
R14			R92-1252-05	CHIP R 0 OHM J 1/16W	
R15			RK73FB2A180J	CHIP R 18 J 1/10W	
R16		✻	R92-3513-05	RESISTOR 0.003 1W	
R17,18			RK73GB1J104J	CHIP R 100K J 1/16W	
R19,20			RK73GB1J563J	CHIP R 56K J 1/16W	
R21			RK73FB2A101J	CHIP R 100 J 1/10W	
R22			RK73GB1J154J	CHIP R 150K J 1/16W	
R23			RK73GB1J104J	CHIP R 100K J 1/16W	
R24			RK73GB1J103J	CHIP R 10K J 1/16W	
R26			R92-1252-05	CHIP R 0 OHM J 1/16W	
R27			RK73GB1J474J	CHIP R 470K J 1/16W	
R28			RK73GB1J103J	CHIP R 10K J 1/16W	
R29			R92-1252-05	CHIP R 0 OHM J 1/16W	
R31			RK73GB1J101J	CHIP R 100 J 1/16W	
R32,33			RK73GB1J104J	CHIP R 100K J 1/16W	
R34			RK73EB2B101J	CHIP R 100 J 1/8W	
R36			RK73GB1J334J	CHIP R 330K J 1/16W	
R37			RK73GB1J104J	CHIP R 100K J 1/16W	
R38,39			RK73GB1J103J	CHIP R 10K J 1/16W	
R40,41			R92-1252-05	CHIP R 0 OHM J 1/16W	
R42,43			RK73GB1J104J	CHIP R 100K J 1/16W	
R44			R92-1214-05	CHIP R 120 J 1/2W	
R45-47			RK73GB1J473J	CHIP R 47K J 1/16W	
R48,49			RK73GB1J271J	CHIP R 270 J 1/16W	
R50			RK73GB1J681J	CHIP R 680 J 1/16W	
R51,52			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R53			RK73GB1J471J	CHIP R 470 J 1/16W	
R54,55			RK73FB2A271J	CHIP R 270 J 1/10W	
R56			R92-1252-05	CHIP R 0 OHM J 1/16W	
R58			RK73GB1J104J	CHIP R 100K J 1/16W	
R59			R92-1061-05	JUMPER REST 0 OHM	
R101			RK73GB1J474J	CHIP R 470K J 1/16W	
R102			RK73GB1J394J	CHIP R 390K J 1/16W	
R103			RK73GB1J471J	CHIP R 470 J 1/16W	
R104,105			RK73GB1J334J	CHIP R 330K J 1/16W	
R106			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R107-109			RK73GB1J473J	CHIP R 47K J 1/16W	
R110,111			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R112			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R113			RK73GB1J104J	CHIP R 100K J 1/16W	

PARTS LIST

TX-RX UNIT (X57-6570-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination
R114			RK73GB1J473J	CHIP R 47K J 1/16W	
R115			RK73GB1J104J	CHIP R 100K J 1/16W	
R116			RK73GB1J473J	CHIP R 47K J 1/16W	
R117			RK73GB1J103J	CHIP R 10K J 1/16W	
R118			RK73GB1J104J	CHIP R 100K J 1/16W	
R119			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R120			RK73GB1J103J	CHIP R 10K J 1/16W	
R121			RK73GB1J333J	CHIP R 33K J 1/16W	
R122			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R123			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R124			RK73GB1J333J	CHIP R 33K J 1/16W	
R125			RK73GB1J473J	CHIP R 47K J 1/16W	
R126			R92-1252-05	CHIP R 0 OHM J 1/16W	
R200			RK73GB1J563J	CHIP R 56K J 1/16W	
R202			RK73GB1J393J	CHIP R 39K J 1/16W	
R203			RK73GB1J334J	CHIP R 330K J 1/16W	
R204,205			RK73GB1J332J	CHIP R 3.3K J 1/16W	
R206			RK73GB1J152J	CHIP R 1.5K J 1/16W	
R207			RK73GB1J560J	CHIP R 56 J 1/16W	
R208			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R209			RK73GB1J334J	CHIP R 330K J 1/16W	
R210			RK73GB1J222J	CHIP R 2.2K J 1/16W	
R211			RK73GB1J332J	CHIP R 3.3K J 1/16W	
R212			RK73GB1J274J	CHIP R 270K J 1/16W	
R213			RK73GB1J273J	CHIP R 27K J 1/16W	
R214			RK73GB1J153J	CHIP R 15K J 1/16W	
R215			RK73GB1J682J	CHIP R 6.8K J 1/16W	
R216,217			RK73GB1J223J	CHIP R 22K J 1/16W	
R218			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R219			RK73GB1J682J	CHIP R 6.8K J 1/16W	
R220			RK73GB1J223J	CHIP R 22K J 1/16W	
R221			RK73GB1J153J	CHIP R 15K J 1/16W	
R222			RK73GB1J103J	CHIP R 10K J 1/16W	
R223			RK73GB1J220J	CHIP R 22 J 1/16W	
R224			RK73GB1J101J	CHIP R 100 J 1/16W	
R225			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R226			RK73GB1J473J	CHIP R 47K J 1/16W	
R227-229			RK73GB1J222J	CHIP R 2.2K J 1/16W	
R230			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R231-233			RK73GB1J222J	CHIP R 2.2K J 1/16W	
R234			R92-1252-05	CHIP R 0 OHM J 1/16W	
R235			RK73GB1J560J	CHIP R 56 J 1/16W	
R236			RK73GB1J270J	CHIP R 27 J 1/16W	
R237			RK73GB1J682J	CHIP R 6.8K J 1/16W	
R238			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R239			R92-1252-05	CHIP R 0 OHM J 1/16W	
R240			RK73GB1J182J	CHIP R 1.8K J 1/16W	
R241			RK73GB1J103J	CHIP R 10K J 1/16W	
R242			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R243			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R244			RK73GB1J330J	CHIP R 33 J 1/16W	
R245			RK73GB1J220J	CHIP R 22 J 1/16W	
R246			RK73GB1J470J	CHIP R 47 J 1/16W	
R247			RK73GB1J821J	CHIP R 820 J 1/16W	
R248			RK73GB1J5R6J	CHIP R 5.6 J 1/16W	
R249,250			RK73GB1J821J	CHIP R 820 J 1/16W	
R251			RK73GB1J5R6J	CHIP R 5.6 J 1/16W	
R252			RK73GB1J821J	CHIP R 820 J 1/16W	
R253			RK73GB1J101J	CHIP R 100 J 1/16W	
R254,255			RK73GB1J100J	CHIP R 10 J 1/16W	

Ref. No.	Address	New parts	Parts No.	Description	Destination
R256			RK73GB1J103J	CHIP R 10K J 1/16W	
R257,258			RK73GB1J100J	CHIP R 10 J 1/16W	
R259			RK73GB1J101J	CHIP R 100 J 1/16W	
R260,261			RK73GB1J103J	CHIP R 10K J 1/16W	
R262,263			RK73GB1J271J	CHIP R 270 J 1/16W	
R264			R92-1252-05	CHIP R 0 OHM J 1/16W	
R265			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R266,267			RK73GB1J104J	CHIP R 100K J 1/16W	
R268			RK73GB1J221J	CHIP R 220 J 1/16W	
R269			RK73GB1J470J	CHIP R 47 J 1/16W	
R270			RK73GB1J120J	CHIP R 12 J 1/16W	
R271			RK73GB1J473J	CHIP R 47K J 1/16W	
R272			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R273			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R274			RK73GB1J104J	CHIP R 100K J 1/16W	
R276			R92-1252-05	CHIP R 0 OHM J 1/16W	
R284,285			RK73GB1J221J	CHIP R 220 J 1/16W	
R286			RK73GB1J224J	CHIP R 220K J 1/16W	
R287			RK73GB1J683J	CHIP R 68K J 1/16W	
R288			RK73GB1J154J	CHIP R 150K J 1/16W	
R289			R92-0670-05	CHIP R 0 OHM	
R501			RK73GB1J220J	CHIP R 22 J 1/16W	
R502			RK73GB1J221J	CHIP R 220 J 1/16W	
R503			RK73GB1J561J	CHIP R 560 J 1/16W	
R504			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R505			RK73GB1J100J	CHIP R 10 J 1/16W	
R506			R92-0670-05	CHIP R 0 OHM	
R507-509			RK73GB1J100J	CHIP R 10 J 1/16W	
R510			RK73GB1J104J	CHIP R 100K J 1/16W	
R511			RK73GB1J103J	CHIP R 10K J 1/16W	
R512			RK73GB1J474J	CHIP R 470K J 1/16W	
R513			R92-1252-05	CHIP R 0 OHM J 1/16W	
R514			RK73GB1J470J	CHIP R 47 J 1/16W	
R515			R92-2072-05	CHIP R 1.5K J 1/2W	
R516			RK73GB1J473J	CHIP R 47K J 1/16W	
R517			RK73GB1J100J	CHIP R 10 J 1/16W	
R518			RK73GB1J272J	CHIP R 2.7K J 1/16W	
R519			RK73GB1J100J	CHIP R 10 J 1/16W	
R520			RK73GB1J151J	CHIP R 150 J 1/16W	
R521			RK73GB1J561J	CHIP R 560 J 1/16W	
R522			RK73GB1J220J	CHIP R 22 J 1/16W	
R523			RK73GB1J560J	CHIP R 56 J 1/16W	
R524			R92-1252-05	CHIP R 0 OHM J 1/16W	
R525			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R526			R92-1252-05	CHIP R 0 OHM J 1/16W	
R527			RK73GB1J123J	CHIP R 12K J 1/16W	
R528			RK73GB1J683J	CHIP R 68K J 1/16W	
R529			RK73GB1J123J	CHIP R 12K J 1/16W	
R530			RK73GB1J223J	CHIP R 22K J 1/16W	
R531			RK73GB1J103J	CHIP R 10K J 1/16W	
R532			RK73GB1J104J	CHIP R 100K J 1/16W	
R533			RK73GB1J152J	CHIP R 1.5K J 1/16W	
R534,535			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R536			RK73GB1J391J	CHIP R 390 J 1/16W	
R537			RK73GB1J221J	CHIP R 220 J 1/16W	
R538			RK73GB1J100J	CHIP R 10 J 1/16W	
R539,540			RK73GB1J101J	CHIP R 100 J 1/16W	
R541			RK73GB1J152J	CHIP R 1.5K J 1/16W	
R542,543			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R544			RK73GB1J224J	CHIP R 220K J 1/16W	

PARTS LIST

TX-RX UNIT (X57-6570-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination
R546			RK73GB1J330J	CHIP R 33 J 1/16W	
R547			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R548			RK73GB1J103J	CHIP R 10K J 1/16W	
R549			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R550			R92-1252-05	CHIP R 0 OHM J 1/16W	
R551			RK73GB1J331J	CHIP R 330 J 1/16W	
R553			RK73GB1J101J	CHIP R 100 J 1/16W	
R554			RK73GB1J470J	CHIP R 47 J 1/16W	
R555			RK73GB1J333J	CHIP R 33K J 1/16W	
R556,557			RK73GB1J103J	CHIP R 10K J 1/16W	
R558			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R559			RK73GB1J101J	CHIP R 100 J 1/16W	
R560			RK73GB1J100J	CHIP R 10 J 1/16W	
R561			RK73GB1J152J	CHIP R 1.5K J 1/16W	
R562			RK73GB1J331J	CHIP R 330 J 1/16W	
R563			RK73GB1J221J	CHIP R 220 J 1/16W	
R564			RK73GB1J101J	CHIP R 100 J 1/16W	
R565			RK73GB1J331J	CHIP R 330 J 1/16W	
R566			RK73GB1J330J	CHIP R 33 J 1/16W	
R567			RK73GB1J222J	CHIP R 2.2K J 1/16W	
R568			RK73GB1J104J	CHIP R 100K J 1/16W	
R569			RK73GB1J103J	CHIP R 10K J 1/16W	
R570			RK73GB1J104J	CHIP R 100K J 1/16W	
R571			RK73GB1J103J	CHIP R 10K J 1/16W	
R572			RK73GB1J272J	CHIP R 2.7K J 1/16W	
R573			RK73GB1J103J	CHIP R 10K J 1/16W	
R700			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R701			RK73GB1J473J	CHIP R 47K J 1/16W	
R702			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R703			R92-1252-05	CHIP R 0 OHM J 1/16W	
R704			RK73GB1J473J	CHIP R 47K J 1/16W	
R705,706			RK73GB1J152J	CHIP R 1.5K J 1/16W	
R707,708			RK73GB1J333J	CHIP R 33K J 1/16W	
R709,710			RK73GB1J473J	CHIP R 47K J 1/16W	
R711			RK73HB1J101J	CHIP R 100 J 1/16W	
R713			RK73GB1J473J	CHIP R 47K J 1/16W	
R715			RK73GB1J473J	CHIP R 47K J 1/16W	
R718			RK73GB1J473J	CHIP R 47K J 1/16W	
R726,727			RK73GB1J473J	CHIP R 47K J 1/16W	
R728-731			R92-1252-05	CHIP R 0 OHM J 1/16W	
R749			RK73GB1J473J	CHIP R 47K J 1/16W	
R751			R92-1252-05	CHIP R 0 OHM J 1/16W	
R752,753			RK73GB1J473J	CHIP R 47K J 1/16W	
R754			R92-1252-05	CHIP R 0 OHM J 1/16W	
R755,756			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R757			RK73GB1J473J	CHIP R 47K J 1/16W	
R758			R92-1252-05	CHIP R 0 OHM J 1/16W	
R759			RK73GB1J473J	CHIP R 47K J 1/16W	
R760			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R761			RK73GB1J473J	CHIP R 47K J 1/16W	
R762			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R763,764			RK73GB1J473J	CHIP R 47K J 1/16W	
R765			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R766			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R767,768			RK73GB1J473J	CHIP R 47K J 1/16W	
R769			RK73GB1J101J	CHIP R 100 J 1/16W	
R770			RK73GB1J473J	CHIP R 47K J 1/16W	
R771			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R772			RK73GB1J473J	CHIP R 47K J 1/16W	
R773			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R774			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R775-777			RK73GB1J473J	CHIP R 47K J 1/16W	
R778			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R779,780			RK73GB1J473J	CHIP R 47K J 1/16W	
R781			RK73GB1J223J	CHIP R 22K J 1/16W	
R782			RK73GB1J104J	CHIP R 100K J 1/16W	
R783			RK73GB1J473J	CHIP R 47K J 1/16W	
R784			RK73GB1J681J	CHIP R 680 J 1/16W	
R785			RK73GB1J224J	CHIP R 220K J 1/16W	
R786			RK73GB1J684J	CHIP R 680K J 1/16W	
R787			R92-1252-05	CHIP R 0 OHM J 1/16W	
R788			RK73GB1J683J	CHIP R 68K J 1/16W	
R789			RK73GB1J183J	CHIP R 18K J 1/16W	
R793			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R794			RK73GB1J392J	CHIP R 3.9K J 1/16W	
R795			RK73GB1J124J	CHIP R 120K J 1/16W	
R797			RK73GB1J563J	CHIP R 56K J 1/16W	
R798			R92-0670-05	CHIP R 0 OHM	
R799			RK73GB1J103J	CHIP R 10K J 1/16W	
R800			RK73GB1J224J	CHIP R 220K J 1/16W	
R801,802			RK73GB1J473J	CHIP R 47K J 1/16W	
R803			RK73GB1J274J	CHIP R 270K J 1/16W	
R804			RK73GB1J104J	CHIP R 100K J 1/16W	
R805			RK73GB1J103J	CHIP R 10K J 1/16W	
R806,807			RK73GB1J473J	CHIP R 47K J 1/16W	
R808			RK73GB1J823J	CHIP R 82K J 1/16W	
R810			RK73GB1J154J	CHIP R 150K J 1/16W	
R811,812			RK73GB1J104J	CHIP R 100K J 1/16W	
R813			RK73GB1J153J	CHIP R 15K J 1/16W	
R814			RK73GB1J103J	CHIP R 10K J 1/16W	
R815,816			RK73GB1J473J	CHIP R 47K J 1/16W	
R817,818			RK73GB1J104J	CHIP R 100K J 1/16W	
R819			RK73GB1J563J	CHIP R 56K J 1/16W	
R820			RK73GB1J333J	CHIP R 33K J 1/16W	
R821			RK73GB1J473J	CHIP R 47K J 1/16W	
R822			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R823			RK73GB1J224J	CHIP R 220K J 1/16W	
R824			RK73GB1J153J	CHIP R 15K J 1/16W	
R825			RK73GB1J473J	CHIP R 47K J 1/16W	
R826			RK73GB1J103J	CHIP R 10K J 1/16W	
R827			R92-0670-05	CHIP R 0 OHM	
R828			RK73GB1J103J	CHIP R 10K J 1/16W	
R829			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R831			RK73GB1J104J	CHIP R 100K J 1/16W	
R832			RK73GB1J473J	CHIP R 47K J 1/16W	
R834			RK73GB1J103J	CHIP R 10K J 1/16W	
R835			RK73GB1J104J	CHIP R 100K J 1/16W	
R836			RK73GB1J393J	CHIP R 39K J 1/16W	
R837			RK73GB1J274J	CHIP R 270K J 1/16W	
R838			RK73GB1J474J	CHIP R 470K J 1/16W	
R839			RK73GB1J104J	CHIP R 100K J 1/16W	
R841			RK73GB1J104J	CHIP R 100K J 1/16W	
R842			R92-1252-05	CHIP R 0 OHM J 1/16W	
R843-846			RK73GB1J473J	CHIP R 47K J 1/16W	
R847			RK73GB1J124J	CHIP R 120K J 1/16W	
R848			RK73GB1J334J	CHIP R 330K J 1/16W	
R849			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R850			RK73GB1J103J	CHIP R 10K J 1/16W	
R851,852			R92-1252-05	CHIP R 0 OHM J 1/16W	
R853			RK73GB1J104J	CHIP R 100K J 1/16W	

PARTS LIST

TX-RX UNIT (X57-6570-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination
R854			RK73GB1J474J	CHIP R 470K J 1/16W	
R857			RK73GB1J103J	CHIP R 10K J 1/16W	
R858			RK73GB1J473J	CHIP R 47K J 1/16W	
R859			RK73GB1J333J	CHIP R 33K J 1/16W	
R861,862			RK73GB1J473J	CHIP R 47K J 1/16W	
R863			RK73GB1J683J	CHIP R 68K J 1/16W	
R864,865			RK73GB1J103J	CHIP R 10K J 1/16W	
R866			R92-0670-05	CHIP R 0 OHM	
R867,868			R92-1252-05	CHIP R 0 OHM J 1/16W	
VR1			R12-6427-05	TRIMMING POT. (47K)	
VR700			R32-0643-05	SEMI FIXED VARIABLE RESISTOR	
K700		✻	S76-0434-05	RELAY	
D1			ZSA5A27	ZENER DIODE	
D2			02DZ6.2(Y)	ZENER DIODE	
D3			MA4PH633	DIODE	
D4			XB15A709	DIODE	
D5,6			MA742	DIODE	
D7			1SS226	DIODE	
D11			1SS355	DIODE	
D101			DSA3A1-FK	DIODE	
D102			02DZ18(X,Y)	ZENER DIODE	
D103			02DZ15(X,Y)	ZENER DIODE	
D104-106			1SS355	DIODE	
D108			DA204U	DIODE	
D109		✻	02DZ10(Z)	ZENER DIODE	
D201			1SS355	DIODE	
D202			MA742	DIODE	
D203-206			DAN235E	DIODE	
D207-209			1SV228	VARIABLE CAPACITANCE DIODE	
D501-508			1SV282	VARIABLE CAPACITANCE DIODE	
D509,510			1SS388	DIODE	
D511			1SV278	VARIABLE CAPACITANCE DIODE	
D512		✻	02DZ12(Y)	ZENER DIODE	
D513,514			HVC131	DIODE	
D515			MA2S111	DIODE	
D700			1SS355	DIODE	
D701-703			DA204U	DIODE	
D704			MA2S111	DIODE	
D705-709			DA204U	DIODE	
D710			02DZ18(X,Y)	ZENER DIODE	
D711,712			MA742	DIODE	
D714			1SS388	DIODE	
D715			02DZ18(X,Y)	ZENER DIODE	
D785-790			02DZ5.1(Y)	ZENER DIODE	
D791		✻	MINISMDM075/24	VARISTOR	
D793		✻	MINISMDM110/16	VARISTOR	
IC1,2			TA75W01FU	MOS IC	
IC101			PST9140NR	MOS IC	
IC102			TC4013BF(N)	MOS IC	
IC103			PST9140NR	MOS IC	
IC104			TA7808S	MOS IC	
IC105			TA7805F	MOS IC	
IC106			XC62FP3302P	MOS IC	
IC107			XC62FP1802P	MOS IC	
IC108			XC62FP3302P	MOS IC	
IC201			TA31136FN	MOS IC	
IC202			TC7S66FU	MOS IC	
IC501		✻	ADF4111BRU	MOS IC	

Ref. No.	Address	New parts	Parts No.	Description	Destination
IC700			BU4094BCFV	MOS IC	
IC701		✻	30620M8A-5H1GP	MPU	
IC702			BU4094BCFV	MOS IC	
IC703			ADM202EARN	MOS IC	
IC704		✻	AT24128N10SI27	ROM IC	
IC705		✻	AT29C040A-12TI	ROM IC	
IC706			TC74LVX4245FS	MOS IC	
IC707-709			TC7WH32FK	MOS IC	
IC710			320VC5402PGE	MPU	
IC711			TC7SU04FU	MOS IC	
IC712			TA75W01FU	MOS IC	
IC713			AK4550VT	MOS IC	
IC714			TC75W51FU	MOS IC	
IC715,716			TA75W01FU	MOS IC	
IC717			BU4053BCFV	MOS IC	
IC718			M62364FP	MOS IC	
IC719			TC75W51FU	MOS IC	
IC720			TDA8561Q	BI-POLAR IC	
IC721			LMC7101BIM5	MOS IC	
IC722			TA75S01F	MOS IC	
IC723			NJM78L05UA	BI-POLAR IC	
IC724			TC4W53FU	MOS IC	
IC725			PST9140NR	MOS IC	
Q1			2SC3356(R24)	TRANSISTOR	
Q2			2SC3357	TRANSISTOR	
Q4		✻	PD55003S	FET	
Q5		✻	RD70HVF1-01	FET	
Q101,102			DTC114EE	DIGITAL TRANSISTOR	
Q103			2SJ506(S)	FET	
Q104,105			DTC114EE	DIGITAL TRANSISTOR	
Q106,107			2SB1132(Q,R)	TRANSISTOR	
Q108			DTA114EE	DIGITAL TRANSISTOR	
Q109			DTA114YE	DIGITAL TRANSISTOR	
Q110			DTC114TE	DIGITAL TRANSISTOR	
Q111			DTA114EE	DIGITAL TRANSISTOR	
Q112			DTA114YE	DIGITAL TRANSISTOR	
Q113			DTC114YE	DIGITAL TRANSISTOR	
Q201			DTA114EE	DIGITAL TRANSISTOR	
Q202,203			DTC114EE	DIGITAL TRANSISTOR	
Q204			2SC4617(S)	TRANSISTOR	
Q205			DTA144EE	DIGITAL TRANSISTOR	
Q206			2SC4215(Y)	TRANSISTOR	
Q207,208			2SC3357	TRANSISTOR	
Q209-212			2SK508NV(K52)	FET	
Q213			2SC3357	TRANSISTOR	
Q501			2SC4116(BL)	TRANSISTOR	
Q502			2SK1215(E)	FET	
Q503,504			2SC4116(BL)	TRANSISTOR	
Q505			2SC4738(GR)	TRANSISTOR	
Q506			2SA1832(GR)	TRANSISTOR	
Q507			2SK508NV(K52)	FET	
Q508			2SC4116(GR)	TRANSISTOR	
Q509			2SK508NV(K52)	FET	
Q510-512			2SC4116(GR)	TRANSISTOR	
Q513			2SC5108(Y)	TRANSISTOR	
Q514			DTC114EE	DIGITAL TRANSISTOR	
Q515,516			2SC5108(Y)	TRANSISTOR	
Q517			2SC4116(GR)	TRANSISTOR	
Q518			2SA1832(GR)	TRANSISTOR	
Q519			DTC144EE	DIGITAL TRANSISTOR	

PARTS LIST

TX-RX UNIT (X57-6570-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination
Q520			2SC4116(GR)	TRANSISTOR	
Q521			DTC144EE	DIGITAL TRANSISTOR	
Q700			2SK1824	FET	
Q701			DTC114EE	DIGITAL TRANSISTOR	
Q702			DTC144EE	DIGITAL TRANSISTOR	
Q703-706			DTD114EK	DIGITAL TRANSISTOR	
Q707			2SC4116(Y)	TRANSISTOR	
Q708			2SA1586(Y,GR)	TRANSISTOR	
Q709			DTC144EE	DIGITAL TRANSISTOR	
Q710			DTC114EE	DIGITAL TRANSISTOR	
Q711			2SD1757K	TRANSISTOR	
Q712			2SJ243	FET	
Q713			2SK1824	FET	
Q714			DTC144EE	DIGITAL TRANSISTOR	
Q716			DTC114EE	DIGITAL TRANSISTOR	
Q719,720			DTC114YE	DIGITAL TRANSISTOR	
TH1,2			S1R104J475H	THERMISTOR	
TH201			157-503-53006	THERMISTOR	
TH202			157-104-65001	THERMISTOR	

Ref. No.	Address	New parts	Parts No.	Description	Destination