EXPLODED VIEW

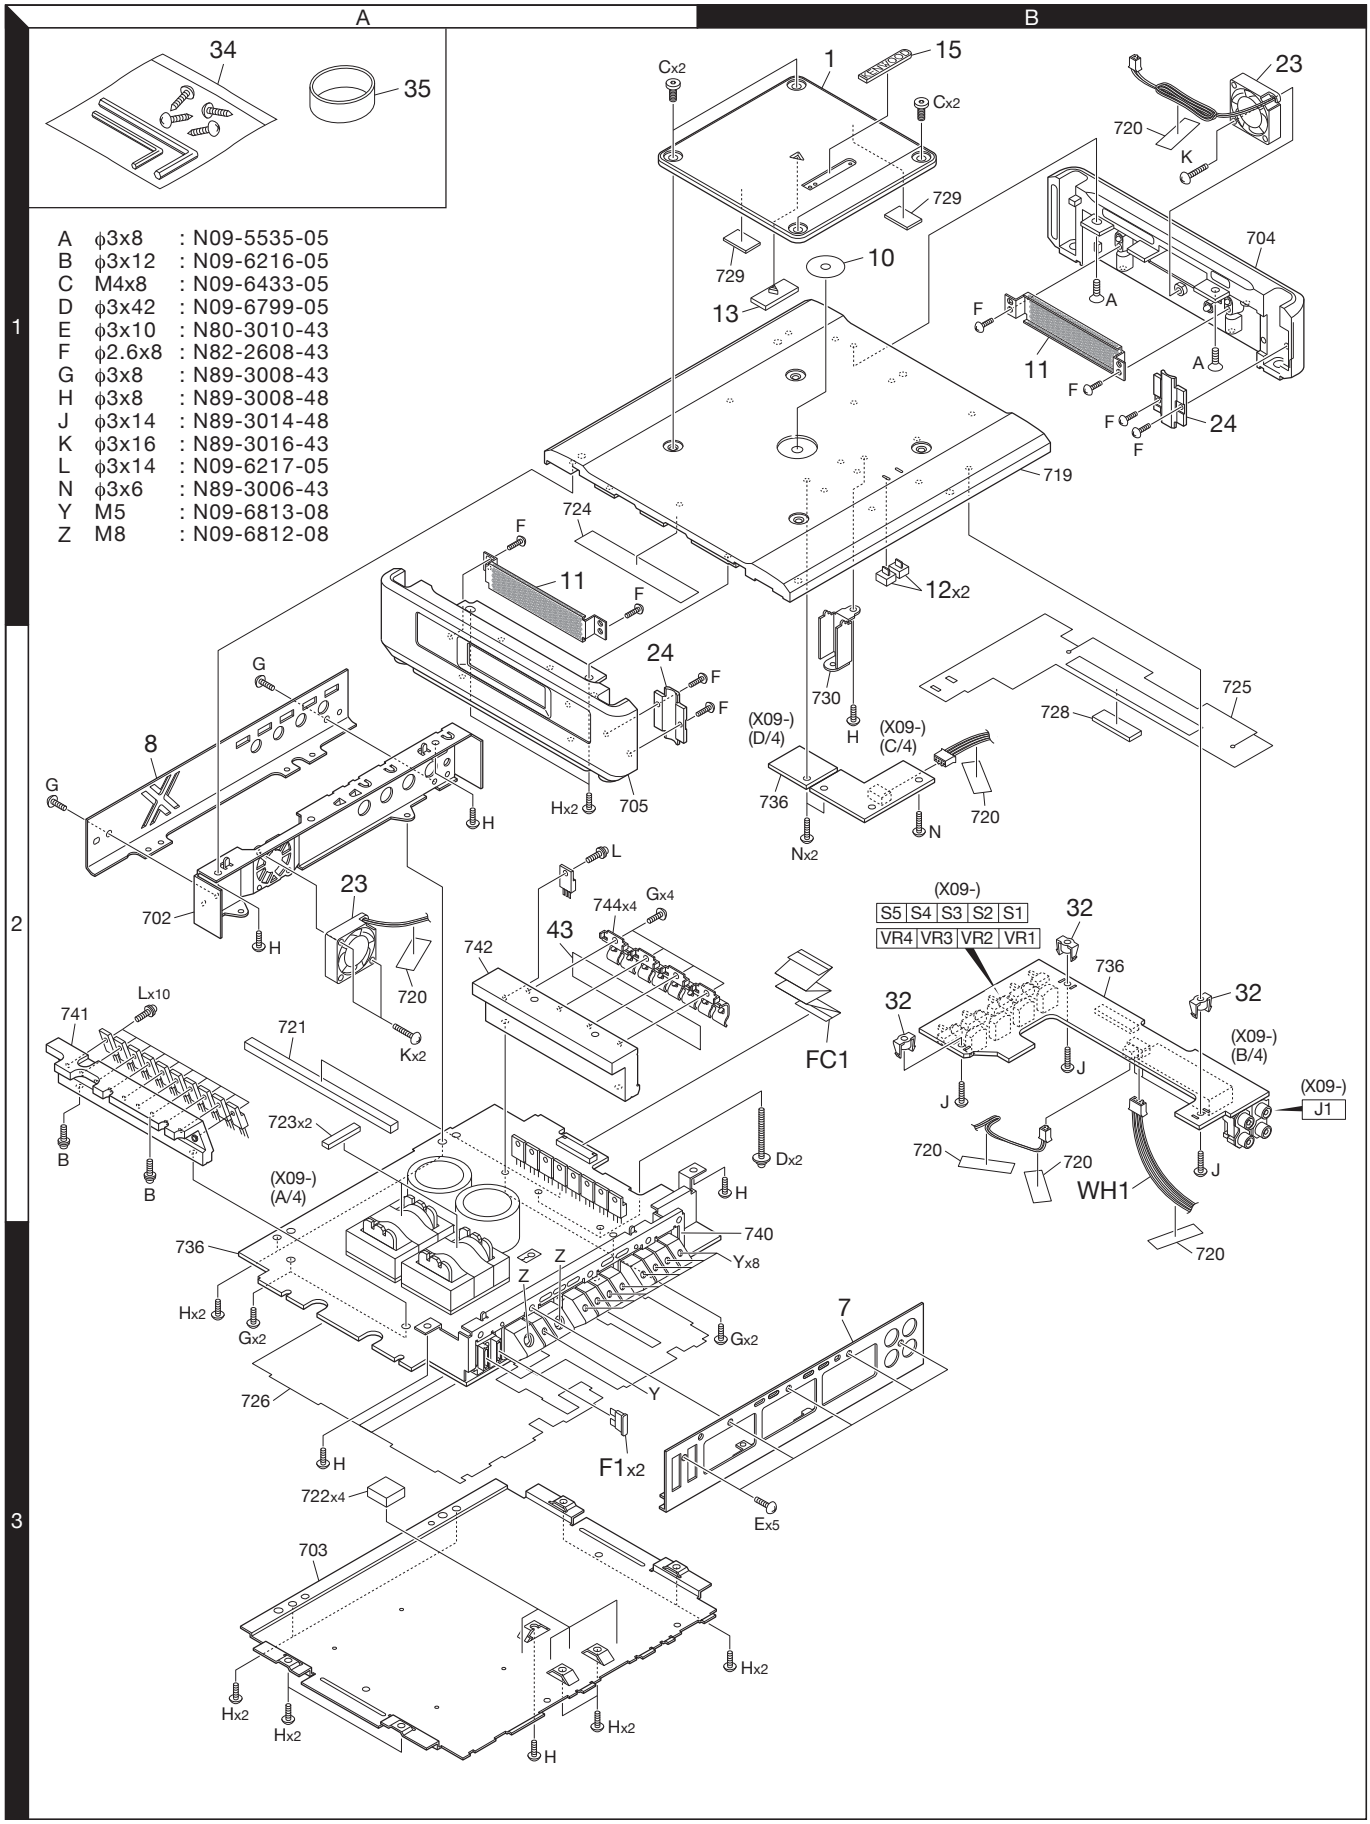

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
KAC-X4D/XR-4S					
1	1B	✻	A21-6706-02	DRESSING PANEL	K
1	1B	✻	A21-6707-02	DRESSING PANEL	E1
7	3B	✻	A64-4746-02	PANEL	
8	2A	✻	A84-0540-02	REAR PANEL	
10	1B		B03-5109-04	DRESSING PLATE	
11	1A		B04-0604-04	PUNCHING METAL	
12	1B		B19-2525-04	LIGHTING BOARD	
13	1B		B19-2526-04	LIGHTING BOARD	
15	1B		B43-0336-04	BADGE	
-		✻	B64-4324-00	INSTRUCTION MANUAL (ENG.FRE.SPA	
-		✻	B64-4325-00	INSTRUCTION MA (GER.DUT.ITA.POR	E1
FC1	2B	✻	E39-1062-05	FLAT CABLE	
WH1	2B	✻	E39-1064-05	WIRING HARNESS	
23	2A		F09-3014-05	FAN	
24	1B		F19-1820-04	BLIND PLATE	
F1	3A		F52-0045-05	FUSE (BLADE TYPE) 30A	
-		✻	H54-4555-03	ITEM CARTON CASE	K
-		✻	H54-4556-23	ITEM CARTON CASE	E1
32	2B		J30-1066-14	SPACER	
34	1A		N99-1833-05	SCREW & WRENCH KEY SET	
A	1B		N09-5535-05	SET SCREW	
B	2A		N09-6216-05	TAPTITE SCREW	
C	1B		N09-6433-05	DRESSED SCREW	
D	2B		N09-6799-05	SEMS (TAPTITE SCREW)	
E	3B		N80-3010-43	PAN HEAD TAPTITE SCREW	
F	1B		N89-2608-43	BINDING HEAD TAPTITE SCREW	
G	2A		N89-3008-43	BINDING HEAD TAPTITE SCREW	
H	3A		N89-3008-48	BINDING HEAD TAPTITE SCREW	
J	2B		N89-3014-48	BINDING HEAD TAPTITE SCREW	
K	2A		N89-3016-43	BINDING HEAD TAPTITE SCREW	
N	2B		N89-3006-43	BINDING HEAD TAPTITE SCREW	
Y	3B		N09-6813-08	SCREW (TERMINAL) M5	
Z	3B		N09-6812-08	SCREW (TERMINAL) M8	
35	1A		W01-1746-05	ACCESSORIES	
AUDIO UNIT (X09-8850-10)					
D723-725			B30-1743-05	LED (RED LED)	
C1		✻	CD04BF1E220M	ELECTRO 22UF 25WV	
C2			CK73GB1H103K	CHIP C 0.010UF K	
C3			CD04BF1V470M	ELECTRO 47UF 35WV	
C4 ,5			CD04BA1C470M	ELECTRO 47UF 16WV	
C6			CK73GB1H103K	CHIP C 0.010UF K	
C7		✻	CD04BA1H100M	ELECTRO 10UF 50WV	
C8 ,9			CD04BF1V470M	ELECTRO 47UF 35WV	
C11			CD04BF1V470M	ELECTRO 47UF 35WV	
C15		✻	CD04BF1E220M	ELECTRO 22UF 25WV	
C16		✻	CD04BF1V100M	ELECTRO 10UF 35WV	
C17			CD04BA1C470M	ELECTRO 47UF 16WV	
C20			CD04BF1V470M	ELECTRO 47UF 35WV	
C21 ,22			C90-5689-05	ELECTRO 4700UF 63WV	
C23			CD04BJ1H471M	ELECTRO 470UF 50WV	
C24			CK73EB1C106K	CHIP C 10UF K	
C25 ,26		✻	C91-2309-05	POL FC 1000PF 200WV	
C27			CK73GB1H103K	CHIP C 0.010UF K	
C28			CK73EB1C106K	CHIP C 10UF K	
C32			CK73GB1H103K	CHIP C 0.010UF K	
C33 -37			CK73EB1E106K	CHIP C 10UF K	
C38			CK73GB1H104K	CHIP C 0.10UF K	
C39 ,40			CC73GCH1H330J	CHIP C 33PF J	
C41 -43			C90-6876-05	ELECTRO 4700UF 16WV	
C45			CK73GB1H104K	CHIP C 0.10UF K	
C46 ,47			CK73GB1H222K	CHIP C 2200PF K	
C49			CE32CL1V220M	CHIP EL 22UF 35WV	
C50 -52			CK73GB1H104K	CHIP C 0.10UF K	
C53 ,54			CD04AJ1C101M	ELECTRO 100UF 16WV	
C55 -58			CK73GB1H103K	CHIP C 0.010UF K	
C80			CK73EB1C106K	CHIP C 10UF K	
C81 ,82			CK73GB1H223K	CHIP C 0.022UF K	
C83			CK73GB1H103K	CHIP C 0.010UF K	
C84			CD04AJ1C101M	ELECTRO 100UF 16WV	
C89			CK73EB1C106K	CHIP C 10UF K	
C90			CD04BA1C470M	ELECTRO 47UF 16WV	
C93			CD04BF1V470M	ELECTRO 47UF 35WV	
C95			CC73GCH1H102J	CHIP C 1000PF J	
C98 ,99			CC73GCH1H101J	CHIP C 100PF J	
C103			CC73GCH1H101J	CHIP C 100PF J	
C111			CK73GB1H103K	CHIP C 0.010UF K	
C112			CD04BA1C100M	ELECTRO 10UF 16WV	
C113			CK73GB1H103K	CHIP C 0.010UF K	
C115			CD04BA1C100M	ELECTRO 10UF 16WV	
C116,117			CC73GCH1H151J	CHIP C 150PF J	
C118			CK73EB1C106K	CHIP C 10UF K	
C119			CK73GB1C225K	CHIP C 2.2UF K	
C120			CC73GCH1H151J	CHIP C 150PF J	
C121		✻	CK73FB1E225K	CHIP C 2.2UF K	
C123,124			CC73GCH1H101J	CHIP C 100PF J	
C125		✻	CK73FB1E225K	CHIP C 2.2UF K	
C127-129			CC73GCH1H391J	CHIP C 390PF J	
C130			CK73GB1H103K	CHIP C 0.010UF K	
C131			CK73EB1C106K	CHIP C 10UF K	
C132,133			CK73GB1H103K	CHIP C 0.010UF K	
C134			CD04BA1C100M	ELECTRO 10UF 16WV	
C140		✻	CD04BF1V100M	ELECTRO 10UF 35WV	
C141			CK73GB1H103K	CHIP C 0.010UF K	
C145,146			C92-2015-05	ELECTRO 22UF 63WV	
C149		✻	C91-2305-05	METAL PF C 0.56UF 100WV	
C151			CC73GCH1H102J	CHIP C 1000PF J	
C154			CK73GB1H222K	CHIP C 2200PF K	
C156			CK73GB1H222K	CHIP C 2200PF K	
C158,159			CK73GB1H103K	CHIP C 0.010UF K	
C160,161			CK73EB1C106K	CHIP C 10UF K	
C162-164			CC73GCH1H121J	CHIP C 120PF J	
C165			CC73GCH1H180J	CHIP C 18PF J	
C166,167			CC73GCH1H121J	CHIP C 120PF J	
C168,169			CC73GCH1H180J	CHIP C 18PF J	

E1 : KAC-X4D (Europe) **K** : XR-4S (North America)

⚠Indicates safety critical components.

PARTS LIST

AUDIO UNIT (X09-8850-10)

Ref. No.	Add	New	Parts No.	Description			Destination
C170,171			CC73GCH1H121J	CHIP C	120PF	J	
C173,174			CK73GB1H103K	CHIP C	0.010UF	K	
C175,176			CC73GCH1H102J	CHIP C	1000PF	J	
C177			CK73GB1H104K	CHIP C	0.10UF	K	
C178			CK73FB1H224K	CHIP C	0.22UF	K	
C179,180			CC73GCH1H102J	CHIP C	1000PF	J	
C181,182			C92-2015-05	ELECTRO	22UF	63WV	
C184			CK73GB1H104K	CHIP C	0.10UF	K	
C185-189			CC73GCH1H102J	CHIP C	1000PF	J	
C190		✻	C91-2305-05	METAL PF C	0.56UF	100WV	
C191			CK73EB1C106K	CHIP C	10UF	K	
C192			CK73GB1H104K	CHIP C	0.10UF	K	
C193			CK73FB1H224K	CHIP C	0.22UF	K	
C194			CK73GB1H222K	CHIP C	2200PF	K	
C195			CK73GB1H104K	CHIP C	0.10UF	K	
C196			CK73GB1H103K	CHIP C	0.010UF	K	
C197			CK73GB1H104K	CHIP C	0.10UF	K	
C198			CK73GB1H103K	CHIP C	0.010UF	K	
C199			CK73GB1H104K	CHIP C	0.10UF	K	
C200			CK73GB1H103K	CHIP C	0.010UF	K	
C201			CK73GB1H104K	CHIP C	0.10UF	K	
C202			CK73GB1H103K	CHIP C	0.010UF	K	
C203			CK73GB1H104K	CHIP C	0.10UF	K	
C204			CK73GB1H103K	CHIP C	0.010UF	K	
C205			CK73GB1H104K	CHIP C	0.10UF	K	
C207			CK73GB1H104K	CHIP C	0.10UF	K	
C208-211			CK73GB1H103K	CHIP C	0.010UF	K	
C213-216			CK73GB1H104K	CHIP C	0.10UF	K	
C217,218			CK73GB1H103K	CHIP C	0.010UF	K	
C219			CE32CL1V100M	CHIP EL	10UF	35WV	
C221			C92-2015-05	ELECTRO	22UF	63WV	
C222,223			CK73GB1H103K	CHIP C	0.010UF	K	
C224			CC73GCH1H101J	CHIP C	100PF	J	
C225			CC73GCH1H151J	CHIP C	150PF	J	
C226			CC73GCH1H391J	CHIP C	390PF	J	
C227			CK73EB1C106K	CHIP C	10UF	K	
C228			C91-1567-05	FILM	0.1UF	J	
C229			CC73GCH1H180J	CHIP C	18PF	J	
C231			CK73FB1H224K	CHIP C	0.22UF	K	
C232			CK73GB1H104K	CHIP C	0.10UF	K	
C233			CC73GCH1H121J	CHIP C	120PF	J	
C238			C92-2015-05	ELECTRO	22UF	63WV	
C239,240		✻	C91-2305-05	METAL PF C	0.56UF	100WV	
C244			CK73EB1C106K	CHIP C	10UF	K	
C245			CK73FB1H224K	CHIP C	0.22UF	K	
C246			CK73GB1H103K	CHIP C	0.010UF	K	
C247			CK73GB1H104K	CHIP C	0.10UF	K	
C248			CC73GCH1H102J	CHIP C	1000PF	J	
C249			CK73GB1H104K	CHIP C	0.10UF	K	
C250-252			CK73GB1H103K	CHIP C	0.010UF	K	
C253-256			CK73FB1H224K	CHIP C	0.22UF	K	
C257			CK73GB1H104K	CHIP C	0.10UF	K	
C258			CK73GB1H332K	CHIP C	3300PF	K	
C259			CK73GB1H104K	CHIP C	0.10UF	K	
C260			CK73GB1H472K	CHIP C	4700PF	K	

Ref. No.	Add	New	Parts No.	Description			Destination
C261			CK73GB1H222K	CHIP C	2200PF	K	
C262,263		✻	C91-2309-05	POL FC	1000PF	200WV	
C264,265			CK73GB1H104K	CHIP C	0.10UF	K	
C266			CK73GB1A105K	CHIP C	1.0UF	K	
C267-270			CK73EB1E106K	CHIP C	10UF	K	
C271-273			CK73GB1H103K	CHIP C	0.010UF	K	
C275		✻	C93-1519-05	CERAMIC C	560PF	J	
C276			CK73GB1H104K	CHIP C	0.10UF	K	
C277-280			CK73GB1H103K	CHIP C	0.010UF	K	
C281,282		✻	C93-1519-05	CERAMIC C	560PF	J	
C283,284			C91-1567-05	FILM	0.1UF	J	
C285		✻	C93-1519-05	CERAMIC C	560PF	J	
C286			CK73EB1E106K	CHIP C	10UF	K	
C287,288		✻	C93-1519-05	CERAMIC C	560PF	J	
C290			CD04BA1C100M	ELECTRO	10UF	16WV	
C291-294			CC73GCH1H471J	CHIP C	470PF	J	
C298		✻	CD04BF1V100M	ELECTRO	10UF	35WV	
C300-303			CK73GB1H223K	CHIP C	0.022UF	K	
C304-307			CC73GCH1H102J	CHIP C	1000PF	J	
C309-311			CK73GB1H104K	CHIP C	0.10UF	K	
C312			CK73GB1H103K	CHIP C	0.010UF	K	
C313			CK73GB1H104K	CHIP C	0.10UF	K	
C314			CK73GB1H103K	CHIP C	0.010UF	K	
C315			CK73GB1H104K	CHIP C	0.10UF	K	
C316			CK73GB1H103K	CHIP C	0.010UF	K	
C317			CK73GB1H104K	CHIP C	0.10UF	K	
C318			CK73GB1H103K	CHIP C	0.010UF	K	
C319			CK73GB1H104K	CHIP C	0.10UF	K	
C320			CK73GB1H103K	CHIP C	0.010UF	K	
C321			CK73GB1H104K	CHIP C	0.10UF	K	
C322			CK73GB1H103K	CHIP C	0.010UF	K	
C323			CK73GB1H104K	CHIP C	0.10UF	K	
C324			CK73GB1H103K	CHIP C	0.010UF	K	
C325			CK73GB1H104K	CHIP C	0.10UF	K	
C326			CK73GB1H103K	CHIP C	0.010UF	K	
C327			CK73GB1H104K	CHIP C	0.10UF	K	
C328			CK73GB1H103K	CHIP C	0.010UF	K	
C330-333			CC73GCH1H102J	CHIP C	1000PF	J	
C334			CK73GB1H222K	CHIP C	2200PF	K	
C335			C91-1567-05	FILM	0.1UF	J	
C336-338			CK73GB1H222K	CHIP C	2200PF	K	
C350			CK73GB1H103K	CHIP C	0.010UF	K	
C351			CK73EB1C106K	CHIP C	10UF	K	
C352			CK73GB1H222K	CHIP C	2200PF	K	
C368,369			CD04BA1C100M	ELECTRO	10UF	16WV	
C371			CK73GB1H103K	CHIP C	0.010UF	K	
C372,373			C92-2015-05	ELECTRO	22UF	63WV	
C374-376			CK73GB1H103K	CHIP C	0.010UF	K	
C377			CK73GB1H222K	CHIP C	2200PF	K	
C378,379		✻	C93-1519-05	CERAMIC C	560PF	J	
C380			CK73GB1H103K	CHIP C	0.010UF	K	
C382-385			CK73FB1H224K	CHIP C	0.22UF	K	
C386-389			CK73GB1H103K	CHIP C	0.010UF	K	
C390			CK73GB1H104K	CHIP C	0.10UF	K	
C391,392			CK73GB1H223K	CHIP C	0.022UF	K	

E1 : KAC-X4D (Europe) **K** : XR-4S (North America)

⚠Indicates safety critical compo nents.

PARTS LIST

AUDIO UNIT (X09-8850-10)

Ref. No.	Add	New	Parts No.	Description			Destination
C393			CK73GB1H103K	CHIP C	0.010UF	K	
C394			CK73FB1H334K	CHIP C	0.33UF	K	
C400			CK73GB1H103K	CHIP C	0.010UF	K	
C401			CK73EB1E105K	CHIP C	1.0UF	K	
C443			CK73GB1H223K	CHIP C	0.022UF	K	
C447			CK73GB1H223K	CHIP C	0.022UF	K	
C451			CK73GB1H223K	CHIP C	0.022UF	K	
C455			CK73GB1H223K	CHIP C	0.022UF	K	
C457			CK73EB1E106K	CHIP C	10UF	K	
C701,702			CC73GCH1H102J	CHIP C	1000PF	J	
C703,704			CD04AS1V100M	ELECTRO	10UF	35WV	
C705,706			CC73GCH1H330J	CHIP C	33PF	J	
C711-714			CC73GCH1H560J	CHIP C	56PF	J	
C715,716			CD04AS1V100M	ELECTRO	10UF	35WV	
C717,718			CK73GB1H103K	CHIP C	0.010UF	K	
C719,720			CC73GCH1H102J	CHIP C	1000PF	J	
C721,722			CD04AS1V100M	ELECTRO	10UF	35WV	
C723,724			CC73GCH1H330J	CHIP C	33PF	J	
C729,730			CC73GCH1H560J	CHIP C	56PF	J	
C731,732			CC73GCH1H330J	CHIP C	33PF	J	
C733,734			CC73GCH1H560J	CHIP C	56PF	J	
C735,736			CD04AS1V100M	ELECTRO	10UF	35WV	
C737,738			CK73GB1H103K	CHIP C	0.010UF	K	
C739,740			CC73GCH1H330J	CHIP C	33PF	J	
C741,742			CD04AS1V100M	ELECTRO	10UF	35WV	
C743,744			CC73GCH1H330J	CHIP C	33PF	J	
C745,746			CC73GCH1H821J	CHIP C	820PF	J	
C747,748			CK73GB1H562K	CHIP C	5600PF	K	
C749,750			CC73GCH1H330J	CHIP C	33PF	J	
C751,752		✻	CK73GB1C274K	CHIP C	0.27UF	K	
C753,754			CK73GB1H393K	CHIP C	0.039UF	K	
C755,756			CK73GB1C225K	CHIP C	2.2UF	K	
C757,758			CD04AS1V100M	ELECTRO	10UF	35WV	
C759			CK73EB1E106K	CHIP C	10UF	K	
C760			CD04AS1V100M	ELECTRO	10UF	35WV	
C761,762			CC73GCH1H330J	CHIP C	33PF	J	
C763-766			CK73GB1H103K	CHIP C	0.010UF	K	
C769,770			CC73GCH1H330J	CHIP C	33PF	J	
C771			CD04AS1V100M	ELECTRO	10UF	35WV	
C772			CK73EB1E106K	CHIP C	10UF	K	
C773,774			CK73GB1H103K	CHIP C	0.010UF	K	
C775,776			CC73GCH1H821J	CHIP C	820PF	J	
C777,778			CK73GB1H562K	CHIP C	5600PF	K	
C779,780		✻	CK73GB1C274K	CHIP C	0.27UF	K	
C781,782			CK73GB1H393K	CHIP C	0.039UF	K	
C783			CD04AS1V100M	ELECTRO	10UF	35WV	
C784			CK73EB1E106K	CHIP C	10UF	K	
C785,786			CK73GB1C225K	CHIP C	2.2UF	K	
C787,788			CC73GCH1H330J	CHIP C	33PF	J	
C789-792			CK73GB1H103K	CHIP C	0.010UF	K	
C793,794			CC73GCH1H821J	CHIP C	820PF	J	
C795,796			CC73GCH1H221J	CHIP C	220PF	J	
C797,798			CC73GCH1H821J	CHIP C	820PF	J	
C799,800			CC73GCH1H221J	CHIP C	220PF	J	
C801-804			CK73GB1H103K	CHIP C	0.010UF	K	

Ref. No.	Add	New	Parts No.	Description			Destination
C805,806			CC73GCH1H101J	CHIP C	100PF	J	
C807,808			CK73GB1H103K	CHIP C	0.010UF	K	
C809			CK73GB1A105K	CHIP C	1.0UF	K	
C810			CK73GB1H103K	CHIP C	0.010UF	K	
C811			CC73GCH1H101J	CHIP C	100PF	J	
C812-817			CK73GB1H103K	CHIP C	0.010UF	K	
C818			CK73GB1H104K	CHIP C	0.10UF	K	
C820-823			CK73GB1H152K	CHIP C	1500PF	K	
C824-827			CC73GCH1H331J	CHIP C	330PF	J	
C828			CK73FB1H334K	CHIP C	0.33UF	K	
C829			CK73GB1H103K	CHIP C	0.010UF	K	
C830			CK73GB1H104K	CHIP C	0.10UF	K	
C831			CK73GB1H103K	CHIP C	0.010UF	K	
C832			CK73GB1H104K	CHIP C	0.10UF	K	
C833			CK73EB1E106K	CHIP C	10UF	K	
C834			CK73EB1E105K	CHIP C	1.0UF	K	
C835			CK73EB1C106K	CHIP C	10UF	K	
C839			CK73GB1H103K	CHIP C	0.010UF	K	
C840			CK73GB1H104K	CHIP C	0.10UF	K	
C841			CK73GB1H103K	CHIP C	0.010UF	K	
C842			CK73GB1H104K	CHIP C	0.10UF	K	
C843			CC73GCH1H102J	CHIP C	1000PF	J	
C844,845			CK73GB1H103K	CHIP C	0.010UF	K	
C847			CK73GB1C224K	CHIP C	0.22UF	K	
C850-853			CK73GB1H222K	CHIP C	2200PF	K	
C901-904			CC73GCH1H330J	CHIP C	33PF	J	
C905-908			CK73GB1H103K	CHIP C	0.010UF	K	
CN1 ,2			E41-2179-05	FLAT CABLE CONNECTOR			
CN5			E41-1684-05	PIN ASSY			
CN6			E41-1701-05	PIN ASSY			
CN7			E41-1682-05	PIN ASSY			
CN9			E41-1682-05	PIN ASSY			
J1			E63-0967-05	PIN JACK			
J3 ,4			E70-0853-05	SCREW TERMINAL BOARD			
J5			E70-0854-05	SCREW TERMINAL BOARD			
WH14		✻	E39-1100-05	WIRING HARNESS			
43	2A		F20-2490-04	INSULATING BOARD			
CN8			J13-0611-05	FUSE HOLDER			
L7		✻	L33-2553-05	CHOKE COIL			
L13 ,14		✻	L33-2553-05	CHOKE COIL			
L16		✻	L19-0833-05	TRANSFORMER FOR CONVERTER			
L19		✻	L19-0833-05	TRANSFORMER FOR CONVERTER			
L21		✻	L33-2553-05	CHOKE COIL			
L22			L33-2480-05	CHOKE COIL			
L23 ,24			L33-2495-05	CHOKE COIL			
G	2A		N89-3008-43	BINDING HEAD TAPTITE SCREW			
L	2A		N09-6217-05	TAPTITE SCREW			
R1 ,2			RK73GB2A223J	CHIP R	22K	J 1/10W	
R3			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R4			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R5			RK73GB2A103J	CHIP R	10K	J 1/10W	
R6			RK73GB2A153J	CHIP R	15K	J 1/10W	

E1 : KAC-X4D (Europe) **K** : XR-4S (North America)

⚠Indicates safety critical components.

PARTS LIST

AUDIO UNIT (X09-8850-10)

Ref. No.	Add	New	Parts No.	Description			Destination
R7			RK73GB2A821J	CHIP R 820	J	1/10W	
R8			RK73GB2A472J	CHIP R 4.7K	J	1/10W	
R11			RK73GB2A821J	CHIP R 820	J	1/10W	
R12			RK73GB2A100J	CHIP R 10	J	1/10W	
R15			RK73GB2A103J	CHIP R 10K	J	1/10W	
R20			RK73GB2A474J	CHIP R 470K	J	1/10W	
R23			RK73GB2A102J	CHIP R 1.0K	J	1/10W	
R24			RK73GB2A392J	CHIP R 3.9K	J	1/10W	
R29			RK73GB2A101J	CHIP R 100	J	1/10W	
R30 ,31			RK73PB2H100J	CHIP R 10	J	1/2W	
R32			RK73GB2A153J	CHIP R 15K	J	1/10W	
R33 ,34			RK73EB2E473J	CHIP R 47K	J	1/4W	
R35 ,36			RK73GB2A103J	CHIP R 10K	J	1/10W	
R37 ,38			RK73PB2H100J	CHIP R 10	J	1/2W	
R40			RK73GB2A473J	CHIP R 47K	J	1/10W	
R41			RK73GB2A103J	CHIP R 10K	J	1/10W	
R49			RK73GB2A223J	CHIP R 22K	J	1/10W	
R54			RK73GB2A103J	CHIP R 10K	J	1/10W	
R59			RK73GB2A103J	CHIP R 10K	J	1/10W	
R62			RK73GB2A103J	CHIP R 10K	J	1/10W	
R64			RK73GB2A104J	CHIP R 100K	J	1/10W	
R65			RK73GB2A393J	CHIP R 39K	J	1/10W	
R68			RK73GB2A103J	CHIP R 10K	J	1/10W	
R69			RK73GB2A821J	CHIP R 820	J	1/10W	
R75 ,76			RK73GB2A470J	CHIP R 47	J	1/10W	
R77			RK73GB2A332J	CHIP R 3.3K	J	1/10W	
R83 ,84			RK73GB2A273J	CHIP R 27K	J	1/10W	
R85			RK73GB2A681J	CHIP R 680	J	1/10W	
R86			RK73GB2A102J	CHIP R 1.0K	J	1/10W	
R92			RK73EB2E4R7J	CHIP R 4.7	J	1/4W	
R98 ,99			RK73GB2A472J	CHIP R 4.7K	J	1/10W	
R100			RK73GB2A683J	CHIP R 68K	J	1/10W	
R101			RK73EB2E203J	CHIP R 20K	J	1/4W	
R102			RK73GB2A683J	CHIP R 68K	J	1/10W	
R103			RK73EB2E203J	CHIP R 20K	J	1/4W	
R104			RK73GB2A683J	CHIP R 68K	J	1/10W	
R105			RK73EB2E203J	CHIP R 20K	J	1/4W	
R106			RK73GB2A683J	CHIP R 68K	J	1/10W	
R107			RK73EB2E203J	CHIP R 20K	J	1/4W	
R108			RK73GB2A103J	CHIP R 10K	J	1/10W	
R109			RK73GB2A512J	CHIP R 5.1K	J	1/10W	
R110			RK73GB2A473J	CHIP R 47K	J	1/10W	
R111			RK73GB2A152J	CHIP R 1.5K	J	1/10W	
R112			RK73GB2A103J	CHIP R 10K	J	1/10W	
R116			RK73GB2A243J	CHIP R 24K	J	1/10W	
R117			RK73GB2A393J	CHIP R 39K	J	1/10W	
R118			RK73GB2A153J	CHIP R 15K	J	1/10W	
R121			RK73GB2A470J	CHIP R 47	J	1/10W	
R122			RK73GB2A223J	CHIP R 22K	J	1/10W	
R123			RK73GB2A470J	CHIP R 47	J	1/10W	
R124			RK73GB2A334J	CHIP R 330K	J	1/10W	
R127			RK73GB2A562J	CHIP R 5.6K	J	1/10W	
R132			RK73GB2A133J	CHIP R 13K	J	1/10W	
R133			RK73GB2A103J	CHIP R 10K	J	1/10W	
R137			RK73GB2A102J	CHIP R 1.0K	J	1/10W	

Ref. No.	Add	New	Parts No.	Description			Destination
R141			RK73GB2A154J	CHIP R 150K	J	1/10W	
R142			RK73GB2A103J	CHIP R 10K	J	1/10W	
R147			RK73GB2A183J	CHIP R 18K	J	1/10W	
R149			RK73GB2A473J	CHIP R 47K	J	1/10W	
R151			RK73GB2A473J	CHIP R 47K	J	1/10W	
R152,153			RK73GB2A392J	CHIP R 3.9K	J	1/10W	
R154,155			RK73GB2A103J	CHIP R 10K	J	1/10W	
R156			RK73GB2A104J	CHIP R 100K	J	1/10W	
R157			RK73GB2A102J	CHIP R 1.0K	J	1/10W	
R158			RK73GB2A104J	CHIP R 100K	J	1/10W	
R159			RK73GB2A392J	CHIP R 3.9K	J	1/10W	
R160,161			RK73GB2A512J	CHIP R 5.1K	J	1/10W	
R162			RK73GB2A183J	CHIP R 18K	J	1/10W	
R163,164			RK73GB2A103J	CHIP R 10K	J	1/10W	
R168			RK73GB2A512J	CHIP R 5.1K	J	1/10W	
R169,170			RK73GB2A104J	CHIP R 100K	J	1/10W	
R171			RK73GB2A182J	CHIP R 1.8K	J	1/10W	
R172			RK73GB2A512J	CHIP R 5.1K	J	1/10W	
R173			RK73GB2A105J	CHIP R 1.0M	J	1/10W	
R174			RK73GB2A202J	CHIP R 2.0K	J	1/10W	
R175,176			RK73GB2A105J	CHIP R 1.0M	J	1/10W	
R177			RK73GB2A182J	CHIP R 1.8K	J	1/10W	
R178,179			RK73EB2E152J	CHIP R 1.5K	J	1/4W	
R180			RK73GB2A152J	CHIP R 1.5K	J	1/10W	
R181			RK73GB2A122J	CHIP R 1.2K	J	1/10W	
R182			RK73GB2A753J	CHIP R 75K	J	1/10W	
R183			RK73GB2A101J	CHIP R 100	J	1/10W	
R184			RK73GB2A273J	CHIP R 27K	J	1/10W	
R185			RK73GB2A222J	CHIP R 2.2K	J	1/10W	
R186			RK73GB2A103J	CHIP R 10K	J	1/10W	
R188			RK73GB2A333J	CHIP R 33K	J	1/10W	
R193			RK73GB2A102J	CHIP R 1.0K	J	1/10W	
R195,196			RK73GB2A242J	CHIP R 2.4K	J	1/10W	
R198			RK73GB2A472J	CHIP R 4.7K	J	1/10W	
R200			RK73GB2A103J	CHIP R 10K	J	1/10W	
R201			RK73GB2A472J	CHIP R 4.7K	J	1/10W	
R202			RK73GB2A242J	CHIP R 2.4K	J	1/10W	
R203			RK73GB2A224J	CHIP R 220K	J	1/10W	
R204-206			RK73GB2A431J	CHIP R 430	J	1/10W	
R207			RK73GB2A182J	CHIP R 1.8K	J	1/10W	
R208			RK73GB2A102J	CHIP R 1.0K	J	1/10W	
R209			RK73GB2A182J	CHIP R 1.8K	J	1/10W	
R210			RK73GB2A102J	CHIP R 1.0K	J	1/10W	
R211			RK73GB2A182J	CHIP R 1.8K	J	1/10W	
R212			RK73GB2A102J	CHIP R 1.0K	J	1/10W	
R213			RK73GB2A182J	CHIP R 1.8K	J	1/10W	
R214			RK73GB2A102J	CHIP R 1.0K	J	1/10W	
R215			RK73GB2A223J	CHIP R 22K	J	1/10W	
R216			RK73GB2A102J	CHIP R 1.0K	J	1/10W	
R217			RK73GB2A392J	CHIP R 3.9K	J	1/10W	
R218			RK73GB2A103J	CHIP R 10K	J	1/10W	
R219			R92-5239-05	METAL R 0.05		5W	
R220			RK73GB2A473J	CHIP R 47K	J	1/10W	
R223,224			RK73GB2A473J	CHIP R 47K	J	1/10W	
R226,227			RK73GB2A431J	CHIP R 430	J	1/10W	

E1 : KAC-X4D (Europe) **K** : XR-4S (North America)

⚠Indicates safety critical compo nents.

PARTS LIST

AUDIO UNIT (X09-8850-10)

Ref. No.	Add	New	Parts No.	Description				Destination
R228,229			RK73GB2A224J	CHIP R	220K	J	1/10W	
R231			RK73GB2A224J	CHIP R	220K	J	1/10W	
R233-235			RK73GB2A151J	CHIP R	150	J	1/10W	
R236			RK73GB2A243J	CHIP R	24K	J	1/10W	
R237			RK73GB2A393J	CHIP R	39K	J	1/10W	
R238,239			RK73GB2A103J	CHIP R	10K	J	1/10W	
R240,241			RK73GB2A223J	CHIP R	22K	J	1/10W	
R242,243			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R244,245			RK73GB2A392J	CHIP R	3.9K	J	1/10W	
R246,247			RK73GB2A103J	CHIP R	10K	J	1/10W	
R248,249			R92-5239-05	METAL R	0.05		5W	
R250			RK73GB2A223J	CHIP R	22K	J	1/10W	
R251			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R252			RK73GB2A392J	CHIP R	3.9K	J	1/10W	
R253			RK73GB2A103J	CHIP R	10K	J	1/10W	
R254			R92-5239-05	METAL R	0.05		5W	
R255			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R256,257			RK73GB2A392J	CHIP R	3.9K	J	1/10W	
R258,259			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R260,261			RK73GB2A392J	CHIP R	3.9K	J	1/10W	
R262			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R263-265			RK73EB2E100J	CHIP R	10	J	1/4W	
R266,267			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R268,269			RK73GB2A151J	CHIP R	150	J	1/10W	
R270-275			RK73EB2E911J	CHIP R	910	J	1/4W	
R276			RK73GB2A151J	CHIP R	150	J	1/10W	
R281			RK73GB2A682J	CHIP R	6.8K	J	1/10W	
R282-284			RK73GB2A473J	CHIP R	47K	J	1/10W	
R285			RK73GB2A151J	CHIP R	150	J	1/10W	
R286			RK73GB2A473J	CHIP R	47K	J	1/10W	
R287,288			RK73EB2E100J	CHIP R	10	J	1/4W	
R292-294			RK73GB2A431J	CHIP R	430	J	1/10W	
R295			RK73EB2E100J	CHIP R	10	J	1/4W	
R297			RK73GB2A473J	CHIP R	47K	J	1/10W	
R298			RK73GB2A151J	CHIP R	150	J	1/10W	
R299			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R300			RK73GB2A105J	CHIP R	1.0M	J	1/10W	
R301			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R302			RK73GB2A242J	CHIP R	2.4K	J	1/10W	
R303,304			RK73GB2A100J	CHIP R	10	J	1/10W	
R306,307			RK73GB2A752J	CHIP R	7.5K	J	1/10W	
R308,309			RK73GB2A100J	CHIP R	10	J	1/10W	
R310			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R311			RK73EB2E911J	CHIP R	910	J	1/4W	
R312,313			RK73EB2E103J	CHIP R	10K	J	1/4W	
R315			RK73EB2E911J	CHIP R	910	J	1/4W	
R316,317			RK73EB2E103J	CHIP R	10K	J	1/4W	
R318,319			RK73GB2A304J	CHIP R	300K	J	1/10W	
R320			RK73EB2E100J	CHIP R	10	J	1/4W	
R321			RK73GB2A133J	CHIP R	13K	J	1/10W	
R322			RK73GB2A104J	CHIP R	100K	J	1/10W	
R323,324			RK73GB2A101J	CHIP R	100	J	1/10W	
R325			RK73EB2E100J	CHIP R	10	J	1/4W	
R326			RK73GB2A512J	CHIP R	5.1K	J	1/10W	
R327			RK73GB2A104J	CHIP R	100K	J	1/10W	

Ref. No.	Add	New	Parts No.	Description				Destination
R329			RK73GB2A272J	CHIP R	2.7K	J	1/10W	
R330			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R331			RK73GB2A182J	CHIP R	1.8K	J	1/10W	
R332,333			RK73GB2A512J	CHIP R	5.1K	J	1/10W	
R334,335			RK73PB2H120J	CHIP R	12	J	1/2W	
R336-339			RK73PB2H100J	CHIP R	10	J	1/2W	
R340-342			RK73PB2H4R7J	CHIP R	4.7	J	1/2W	
R343			RK73PB2H120J	CHIP R	12	J	1/2W	
R344,345			RK73GB2A473J	CHIP R	47K	J	1/10W	
R346			RK73GB2A683J	CHIP R	68K	J	1/10W	
R347			RK73GB2A223J	CHIP R	22K	J	1/10W	
R348			RK73GB2A823J	CHIP R	82K	J	1/10W	
R349			RK73GB2A103J	CHIP R	10K	J	1/10W	
R350			RK73GB2A223J	CHIP R	22K	J	1/10W	
R351			RK73GB2A683J	CHIP R	68K	J	1/10W	
R354			RK73GB2A473J	CHIP R	47K	J	1/10W	
R355			RK73GB2A752J	CHIP R	7.5K	J	1/10W	
R356			RK73GB2A103J	CHIP R	10K	J	1/10W	
R357			RK73GB2A163J	CHIP R	16K	J	1/10W	
R358			RK73GB2A152J	CHIP R	1.5K	J	1/10W	
R359,360			RK73GB2A103J	CHIP R	10K	J	1/10W	
R361			RK73GB2A152J	CHIP R	1.5K	J	1/10W	
R362			RK73GB2A163J	CHIP R	16K	J	1/10W	
R363-365			RK73GB2A103J	CHIP R	10K	J	1/10W	
R366,367			RK73GB2A101J	CHIP R	100	J	1/10W	
R368			RK73GB2A392J	CHIP R	3.9K	J	1/10W	
R369			RK73GB2A122J	CHIP R	1.2K	J	1/10W	
R370			RK73GB2A242J	CHIP R	2.4K	J	1/10W	
R371			RK73GB2A473J	CHIP R	47K	J	1/10W	
R372			RK73GB2A562J	CHIP R	5.6K	J	1/10W	
R373			RK73GB2A473J	CHIP R	47K	J	1/10W	
R374			RK73GB2A562J	CHIP R	5.6K	J	1/10W	
R375,376			RK73GB2A103J	CHIP R	10K	J	1/10W	
R377,378			RK73GB2A101J	CHIP R	100	J	1/10W	
R379			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R380			RK73GB2A183J	CHIP R	18K	J	1/10W	
R381-383			RK73GB2A103J	CHIP R	10K	J	1/10W	
R384			RK73GB2A104J	CHIP R	100K	J	1/10W	
R385			RK73GB2A332J	CHIP R	3.3K	J	1/10W	
R386			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R387			RK73GB2A122J	CHIP R	1.2K	J	1/10W	
R388			RK73GB2A103J	CHIP R	10K	J	1/10W	
R389			RK73GB2A122J	CHIP R	1.2K	J	1/10W	
R390			RK73GB2A103J	CHIP R	10K	J	1/10W	
R391,392			RK73GB2A332J	CHIP R	3.3K	J	1/10W	
R393			RK73GB2A562J	CHIP R	5.6K	J	1/10W	
R394			RK73GB2A104J	CHIP R	100K	J	1/10W	
R395,396			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R397			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R398			RK73GB2A103J	CHIP R	10K	J	1/10W	
R400-402			RK73GB2A273J	CHIP R	27K	J	1/10W	
R403,404			RK73EB2E100J	CHIP R	10	J	1/4W	
R405			RK73GB2A273J	CHIP R	27K	J	1/10W	
R406			RK73GB2A100J	CHIP R	10	J	1/10W	
R407			RK73GB2A103J	CHIP R	10K	J	1/10W	

E1 : KAC-X4D (Europe) **K** : XR-4S (North America)

⚠Indicates safety critical components.

PARTS LIST

AUDIO UNIT (X09-8850-10)

Ref. No.	Add	New	Parts No.	Description			Destination
R408			RK73GB2A471J	CHIP R	470	J 1/10W	
R409			RK73GB2A103J	CHIP R	10K	J 1/10W	
R410			RK73GB2A223J	CHIP R	22K	J 1/10W	
R411			RK73GB2A473J	CHIP R	47K	J 1/10W	
R412			RK73EB2E100J	CHIP R	10	J 1/4W	
R413			RK73GB2A103J	CHIP R	10K	J 1/10W	
R414			RK73GB2A303J	CHIP R	30K	J 1/10W	
R415			RK73GB2A103J	CHIP R	10K	J 1/10W	
R416			RK73GB2A100J	CHIP R	10	J 1/10W	
R417			RK73GB2A223J	CHIP R	22K	J 1/10W	
R418-421			RK73GB2A470J	CHIP R	47	J 1/10W	
R422,423			RK73GB2A391J	CHIP R	390	J 1/10W	
R424			RK73GB2A103J	CHIP R	10K	J 1/10W	
R425-432			RK73GB2A153J	CHIP R	15K	J 1/10W	
R433			RK73GB2A273J	CHIP R	27K	J 1/10W	
R434,435			RK73GB2A104J	CHIP R	100K	J 1/10W	
R436,437			RK73GB2A103J	CHIP R	10K	J 1/10W	
R438			RK73GB2A273J	CHIP R	27K	J 1/10W	
R439,440			RK73GB2A103J	CHIP R	10K	J 1/10W	
R441			RK73GB2A473J	CHIP R	47K	J 1/10W	
R442			RK73GB2A103J	CHIP R	10K	J 1/10W	
R443-445			RK73GB2A473J	CHIP R	47K	J 1/10W	
R446			RK73GB2A103J	CHIP R	10K	J 1/10W	
R447-449			RK73GB2A473J	CHIP R	47K	J 1/10W	
R450			RK73GB2A103J	CHIP R	10K	J 1/10W	
R451-453			RK73GB2A473J	CHIP R	47K	J 1/10W	
R454			RK73GB2A103J	CHIP R	10K	J 1/10W	
R455,456			RK73GB2A473J	CHIP R	47K	J 1/10W	
R457			RK73EB2E332J	CHIP R	3.3K	J 1/4W	
R458-461			RK73GB2A101J	CHIP R	100	J 1/10W	
R462			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R477			RK73EB2E152J	CHIP R	1.5K	J 1/4W	
R478-480			RK73GB2A473J	CHIP R	47K	J 1/10W	
R481			RK73GB2A103J	CHIP R	10K	J 1/10W	
R495			RK73GB2A103J	CHIP R	10K	J 1/10W	
R496-499			RK73EB2E100J	CHIP R	10	J 1/4W	
R500			RK73GB2A273J	CHIP R	27K	J 1/10W	
R501			RK73GB2A332J	CHIP R	3.3K	J 1/10W	
R502			RK73GB2A103J	CHIP R	10K	J 1/10W	
R503			RK73GB2A242J	CHIP R	2.4K	J 1/10W	
R504			RK73GB2A223J	CHIP R	22K	J 1/10W	
R505			RK73GB2A103J	CHIP R	10K	J 1/10W	
R506			RK73PB2H100J	CHIP R	10	J 1/2W	
R508			RK73GB2A392J	CHIP R	3.9K	J 1/10W	
R509			RK73GB2A332J	CHIP R	3.3K	J 1/10W	
R513			RK73GB2A223J	CHIP R	22K	J 1/10W	
R514,515			RK73GB2A103J	CHIP R	10K	J 1/10W	
R516-519		✻	R92-5162-05	METAL R	0.05	5W	
R520-524			RK73EB2E100J	CHIP R	10	J 1/4W	
R525,526			RK73GB2A152J	CHIP R	1.5K	J 1/10W	
R527			RK73GB2A273J	CHIP R	27K	J 1/10W	
R528-531			RK73GB2A203J	CHIP R	20K	J 1/10W	
R532-535			RK73GB2A473J	CHIP R	47K	J 1/10W	
R536			RK73GB2A104J	CHIP R	100K	J 1/10W	
R537			RK73GB2A473J	CHIP R	47K	J 1/10W	
R538			RK73GB2A103J	CHIP R	10K	J 1/10W	
R539			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R540			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R541			RK73GB2A182J	CHIP R	1.8K	J 1/10W	
R542			RK73GB2A223J	CHIP R	22K	J 1/10W	
R543			RK73GB2A103J	CHIP R	10K	J 1/10W	
R544			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R545			RK73GB2A182J	CHIP R	1.8K	J 1/10W	
R546			RK73GB2A223J	CHIP R	22K	J 1/10W	
R547			RK73GB2A103J	CHIP R	10K	J 1/10W	
R548			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R549			RK73GB2A182J	CHIP R	1.8K	J 1/10W	
R550			RK73GB2A223J	CHIP R	22K	J 1/10W	
R551			RK73GB2A103J	CHIP R	10K	J 1/10W	
R552			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R553			RK73GB2A182J	CHIP R	1.8K	J 1/10W	
R554			RK73GB2A223J	CHIP R	22K	J 1/10W	
R555			RK73GB2A103J	CHIP R	10K	J 1/10W	
R560			RK73GB2A223J	CHIP R	22K	J 1/10W	
R569			RK73GB2A682J	CHIP R	6.8K	J 1/10W	
R570			RK73GB2A331J	CHIP R	330	J 1/10W	
R571			RK73GB2A113J	CHIP R	11K	J 1/10W	
R573-576			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R580-584			RK73PB2H4R7J	CHIP R	4.7	J 1/2W	
R586,587			RK73PB2H120J	CHIP R	12	J 1/2W	
R700			RK73EB2E474J	CHIP R	470K	J 1/4W	
R701,702			RK73EB2E102J	CHIP R	1.0K	J 1/4W	
R703,704			RK73GB2A103J	CHIP R	10K	J 1/10W	
R705,706			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R715-718			RK73GH2A103D	CHIP R	10K	D 1/10W	
R719-722			RK73GH2A203D	CHIP R	20K	D 1/10W	
R723,724			RK73GB2A473J	CHIP R	47K	J 1/10W	
R725,726			RK73GB2A431J	CHIP R	430	J 1/10W	
R727,728			RK73EB2E102J	CHIP R	1.0K	J 1/4W	
R729,730			RK73GB2A103J	CHIP R	10K	J 1/10W	
R731,732			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R741-744			RK73GH2A103D	CHIP R	10K	D 1/10W	
R745-748			RK73GH2A203D	CHIP R	20K	D 1/10W	
R749,750			RK73GB2A473J	CHIP R	47K	J 1/10W	
R751,752			RK73GB2A431J	CHIP R	430	J 1/10W	
R753,754			RK73GB2A103J	CHIP R	10K	J 1/10W	
R755,756			RK73GB2A473J	CHIP R	47K	J 1/10W	
R757-764			RK73GB2A103J	CHIP R	10K	J 1/10W	
R765,766			RK73GB2A622J	CHIP R	6.2K	J 1/10W	
R767,768			RK73GB2A272J	CHIP R	2.7K	J 1/10W	
R769,770			RK73GB2A223J	CHIP R	22K	J 1/10W	
R771-776			RK73GB2A473J	CHIP R	47K	J 1/10W	
R777-784			RK73GB2A103J	CHIP R	10K	J 1/10W	
R785,786			RK73GB2A622J	CHIP R	6.2K	J 1/10W	
R787,788			RK73GB2A272J	CHIP R	2.7K	J 1/10W	
R789,790			RK73GB2A223J	CHIP R	22K	J 1/10W	
R791-798			RK73GB2A473J	CHIP R	47K	J 1/10W	
R799,800			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R801-804			RK73GB2A470J	CHIP R	47	J 1/10W	
R805,806			RK73GB2A103J	CHIP R	10K	J 1/10W	

E1 : KAC-X4D (Europe) **K** : XR-4S (North America)

⚠Indicates safety critical compo nents.

PARTS LIST

AUDIO UNIT (X09-8850-10)

Ref. No.	Add	New	Parts No.	Description				Destination
R807,808			RK73GB2A563J	CHIP R	56K	J	1/10W	
R809,810			RK73GB2A103J	CHIP R	10K	J	1/10W	
R811,812			RK73GB2A473J	CHIP R	47K	J	1/10W	
R813,814			RK73GB2A113J	CHIP R	11K	J	1/10W	
R815,816			RK73GB2A473J	CHIP R	47K	J	1/10W	
R817,818			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R819-822			RK73GB2A470J	CHIP R	47	J	1/10W	
R823,824			RK73GB2A103J	CHIP R	10K	J	1/10W	
R825,826			RK73GB2A563J	CHIP R	56K	J	1/10W	
R827,828			RK73GB2A103J	CHIP R	10K	J	1/10W	
R829,830			RK73GB2A473J	CHIP R	47K	J	1/10W	
R831,832			RK73GB2A113J	CHIP R	11K	J	1/10W	
R833			RK73GB2A203J	CHIP R	20K	J	1/10W	
R834			RK73GB2A332J	CHIP R	3.3K	J	1/10W	
R835			RK73GB2A153J	CHIP R	15K	J	1/10W	
R836			RK73GB2A203J	CHIP R	20K	J	1/10W	
R837			RK73GB2A153J	CHIP R	15K	J	1/10W	
R838			RK73GB2A332J	CHIP R	3.3K	J	1/10W	
R839			RK73GB2A103J	CHIP R	10K	J	1/10W	
R840			RK73GB2A471J	CHIP R	470	J	1/10W	
R841			RK73GB2A512J	CHIP R	5.1K	J	1/10W	
R842			RK73GB2A223J	CHIP R	22K	J	1/10W	
R843-845			RK73GB2A103J	CHIP R	10K	J	1/10W	
R846			RK73GB2A682J	CHIP R	6.8K	J	1/10W	
R847			RK73GB2A103J	CHIP R	10K	J	1/10W	
R848			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R849,850			RK73GB2A223J	CHIP R	22K	J	1/10W	
R851			RK73GB2A101J	CHIP R	100	J	1/10W	
R852			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R853-856			RK73GB2A122J	CHIP R	1.2K	J	1/10W	
R857-860			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R861-864			R92-5239-05	METAL R	0.05		5W	
R865			RK73GB2A511J	CHIP R	510	J	1/10W	
R866			RK73GB2A104J	CHIP R	100K	J	1/10W	
R867			RK73GB2A101J	CHIP R	100	J	1/10W	
R868			RK73GB2A104J	CHIP R	100K	J	1/10W	
R869			RK73GB2A100J	CHIP R	10	J	1/10W	
R871,872			RK73GB2A101J	CHIP R	100	J	1/10W	
R873,874			RK73EB2E2R2J	CHIP R	2.2	J	1/4W	
R875			RK73GB2A100J	CHIP R	10	J	1/10W	
R876-880			RK73GB2A103J	CHIP R	10K	J	1/10W	
R881			RK73GB2A683J	CHIP R	68K	J	1/10W	
R882			RK73GB2A101J	CHIP R	100	J	1/10W	
R883			RK73GB2A104J	CHIP R	100K	J	1/10W	
R900-903			RK73GB2A224J	CHIP R	220K	J	1/10W	
R911-914			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
VR1 ,2			R31-0258-05	VARIABLE RESISTOR				
VR3 ,4			R31-0257-05	VARIABLE RESISTOR				
W1			RK73GB2A000J	CHIP R	0.0	J	1/10W	
W4 -15			RK73GB2A000J	CHIP R	0.0	J	1/10W	
W20 -23			RK73GB2A000J	CHIP R	0.0	J	1/10W	
W25			RK73GB2A000J	CHIP R	0.0	J	1/10W	
W27			RK73GB2A000J	CHIP R	0.0	J	1/10W	
S1			S62-0842-05	SLIDE SWITCH				

Ref. No.	Add	New	Parts No.	Description	Destination
S2 ,3			S31-2630-05	SLIDE SWITCH	
S4 ,5			S62-0878-05	SLIDE SWITCH	
D1			UDZW5.6(B)	ZENER DIODE	
D2			1SS355	DIODE	
D3			UDZW5.1(B)	ZENER DIODE	
D5			UDZW5.1(B)	ZENER DIODE	
D6			1SS355	DIODE	
D8 -10			UDZW15(B)	ZENER DIODE	
D15			FCH10A20	DIODE	
D16			FRH10A20	DIODE	
D17			1SS355	DIODE	
D18 -21			EP05Q06	DIODE	
D23			LM1MA142WA-G	DIODE	
D24			UDZW10(B)	ZENER DIODE	
D25			1SS355	DIODE	
D26			LM1MA142WK-G	DIODE	
D32			1SS355	DIODE	
D36			1SS355	DIODE	
D40			UDZW5.1(B)	ZENER DIODE	
D41			LM1MA142WK-G	DIODE	
D42			1SS355	DIODE	
D43			LM1MA142WK-G	DIODE	
D45			LM1MA142WA-G	DIODE	
D47 ,48			1SS355	DIODE	
D50			1SS355	DIODE	
D56			UDZW15(B)	ZENER DIODE	
D57			UDZW6.8(B)	ZENER DIODE	
D58 ,59			1N5406-TSC	DIODE	
D62			1SS355	DIODE	
D63 ,64			1SS302-F	DIODE	
D65 -68			1SS355	DIODE	
D69 ,70			1SS302-F	DIODE	
D71 ,72			1SR159-200	DIODE	
D73			RB160L-40	DIODE	
D74 -77			1SS355	DIODE	
D78 -80			RB160L-40	DIODE	
D81 -84			1SS355	DIODE	
D85 ,86			LM1MA142WK-G	DIODE	
D87 -89			1SS355	DIODE	
D91			LM1MA142WK-G	DIODE	
D92			1SR159-200	DIODE	
D93			RB160L-40	DIODE	
D94			1SR159-200	DIODE	
D97 -99			RB160L-40	DIODE	
D100,101			1SS355	DIODE	
D102			LM1MA142WA-G	DIODE	
D103			1SS355	DIODE	
D104,105			UDZW5.6(B)	ZENER DIODE	
D106,107			1SS355	DIODE	
D108			UDZW5.1(B)	ZENER DIODE	
D109,110			1SS355	DIODE	
D111-114			UDZW12(B)	ZENER DIODE	
D115			1N5406-TSC	DIODE	
D116-120			1SS355	DIODE	

E1 : KAC-X4D (Europe) **K** : XR-4S (North America)

⚠Indicates safety critical components.

PARTS LIST

AUDIO UNIT (X09-8850-10)

Ref. No.	Add	New	Parts No.	Description	Destination
D121-123			LM1MA142WK-G	DIODE	
D124,125			1SS355	DIODE	
D126			LM1MA142WK-G	DIODE	
D127			UDZW13(B)	ZENER DIODE	
D128			1SS355	DIODE	
D129			UDZW5.1(B)	ZENER DIODE	
D130-135			1SS355	DIODE	
D145			1SS355	DIODE	
D700			1SS355	DIODE	
D709,710			UDZW6.8(B)	ZENER DIODE	
D711-722			1SS302-F	DIODE	
D726-729			1SS355	DIODE	
D901-908			1SS302-F	DIODE	
IC1 -15			BA4560RF	ANALOGUE IC	
IC19			BA4560RF	ANALOGUE IC	
IC21,22			RC4580IDR	ANALOGUE IC	
IC23,24		✻	NJM319V-ZB	ANALOGUE IC	
IC25-27			SN74HC00D	MOS-IC	
IC28			SN74HC02APWR	MOS-IC	
IC29-31			SN74HC00D	MOS-IC	
IC32			SN74HC02APWR	MOS-IC	
IC33-36			IRS2011SPBF	MOS-IC	
IC37			TL494IDR	ANALOGUE IC	
IC38			BA2903F	ANALOGUE IC	
IC39			BA10358F	ANALOGUE IC	
IC40			SN74HC00D	MOS-IC	
IC41,42			BA2903F	ANALOGUE IC	
IC43			BA10358F	ANALOGUE IC	
IC44			SN74HC00D	MOS-IC	
IC45,46			BA4560RF	ANALOGUE IC	
IC901,902			BA4560RF	ANALOGUE IC	
Q1 ,2			2SA1576A	TRANSISTOR	
Q3			2SC4883ANF	TRANSISTOR	
Q4			2SA1859ANF	TRANSISTOR	
Q5 ,6			STP60NF06FP	FET	
Q9			DTA114EUA	DIGITAL TRANSISTOR	
Q10			2SD2012-F	TRANSISTOR	
Q11			2SC4081	TRANSISTOR	
Q12			DTA114EUA	DIGITAL TRANSISTOR	
Q13 ,14			STP60NF06FP	FET	
Q15			2SC4081	TRANSISTOR	
Q16			2SA1576A	TRANSISTOR	
Q17 ,18			2SD2114K	TRANSISTOR	
Q19			2SC4081	TRANSISTOR	
Q20			2SC5824	TRANSISTOR	
Q21 ,22			STP60NF06FP	FET	
Q25 ,26			2SA1163-F	TRANSISTOR	
Q27			2SC2713-F	TRANSISTOR	
Q28			2SC4097	TRANSISTOR	
Q29 ,30			2SB1427	TRANSISTOR	
Q31			2SC4097	TRANSISTOR	
Q32			DTA114EUA	DIGITAL TRANSISTOR	
Q33			2SC2713-F	TRANSISTOR	
Q34			DTA114EUA	DIGITAL TRANSISTOR	
Q35			2SC4081	TRANSISTOR	

Ref. No.	Add	New	Parts No.	Description	Destination
Q36 ,37			2SA1163-F	TRANSISTOR	
Q38		✻	IRFB4020PBF	FET	
Q39 ,40			2SD2114K	TRANSISTOR	
Q41			2SA1576A	TRANSISTOR	
Q42			2SC4081	TRANSISTOR	
Q43			2SB1189	TRANSISTOR	
Q44 ,45			2SC4081	TRANSISTOR	
Q46 -48		✻	IRFB4020PBF	FET	
Q49			2SA1163-F	TRANSISTOR	
Q50			2SC2713-F	TRANSISTOR	
Q51 -53		✻	IRFB4020PBF	FET	
Q54			DTA114EUA	DIGITAL TRANSISTOR	
Q55			2SC4081	TRANSISTOR	
Q56		✻	IRFB4020PBF	FET	
Q57			DTC114EUA	DIGITAL TRANSISTOR	
Q58			2SA1163-F	TRANSISTOR	
Q59			2SC2713-F	TRANSISTOR	
Q60 -65			2SA1163-F	TRANSISTOR	
Q66 ,67			2SC4081	TRANSISTOR	
Q68			2SA1163-F	TRANSISTOR	
Q69 ,70			2SK879-F(GR)	FET	
Q72			2SA1576A	TRANSISTOR	
Q73			2SC4081	TRANSISTOR	
Q74 -81			2SD2114K	TRANSISTOR	
Q82			2SA1576A	TRANSISTOR	
Q83 ,84			2SC4081	TRANSISTOR	
Q85			2SA1576A	TRANSISTOR	
Q86			2SC4081	TRANSISTOR	
Q87			2SA1576A	TRANSISTOR	
Q88			DTC114EUA	DIGITAL TRANSISTOR	
Q89 -92			IRF7341PBF	DUAL FET	
Q94 ,95			2SA1576A	TRANSISTOR	
Q97 -100			2SA1163-F	TRANSISTOR	
Q104			2SC4081	TRANSISTOR	
Q105,106			2SA1576A	TRANSISTOR	
Q107,108			2SC4081	TRANSISTOR	
Q109,110			2SA1576A	TRANSISTOR	
Q111			DTA114EUA	DIGITAL TRANSISTOR	
Q112			2SA1576A	TRANSISTOR	
Q113			DTA114EUA	DIGITAL TRANSISTOR	
Q114			DTC114EUA	DIGITAL TRANSISTOR	
Q115			2SC5824	TRANSISTOR	
Q116			2SC4081	TRANSISTOR	
Q117			2SC2713-F	TRANSISTOR	
Q118			2SA1163-F	TRANSISTOR	
Q119			2SC2713-F	TRANSISTOR	
Q120			2SA1163-F	TRANSISTOR	
Q121			2SC2713-F	TRANSISTOR	
Q122			2SA1163-F	TRANSISTOR	
Q123			2SC2713-F	TRANSISTOR	
Q124			2SA1163-F	TRANSISTOR	
Q125			2SC2713-F	TRANSISTOR	
Q126			2SA1576A	TRANSISTOR	
Q127			2SC4081	TRANSISTOR	
Q128			DTC114EUA	DIGITAL TRANSISTOR	

E1 : KAC-X4D (Europe) **K** : XR-4S (North America)

⚠Indicates safety critical compo nents.

PARTS LIST

AUDIO UNIT (X09-8850-10)

Ref. No.	Add	New	Parts No.	Description	Destination
Q129,130			2SC4081	TRANSISTOR	
Q132			2SC5824	TRANSISTOR	
Q133			2SC4081	TRANSISTOR	
Q134			DTC114EUA	DIGITAL TRANSISTOR	
Q135			2SC4081	TRANSISTOR	
Q136-139			2SA1163-F	TRANSISTOR	
Q141			2SA1576A	TRANSISTOR	
Q142,143			2SC4081	TRANSISTOR	
TH1 ,2			NCP18WB473J0S	THERMISTOR	
TH4 -6			NCP18WB473J0S	THERMISTOR	
TH19			NCP18WB473J0S	THERMISTOR	

Ref. No.	Add	New	Parts No.	Description	Destination

E1 : KAC-X4D (Europe) **K** : XR-4S (North America)

⚠Indicates safety critical components.