EXPLODED VIEW

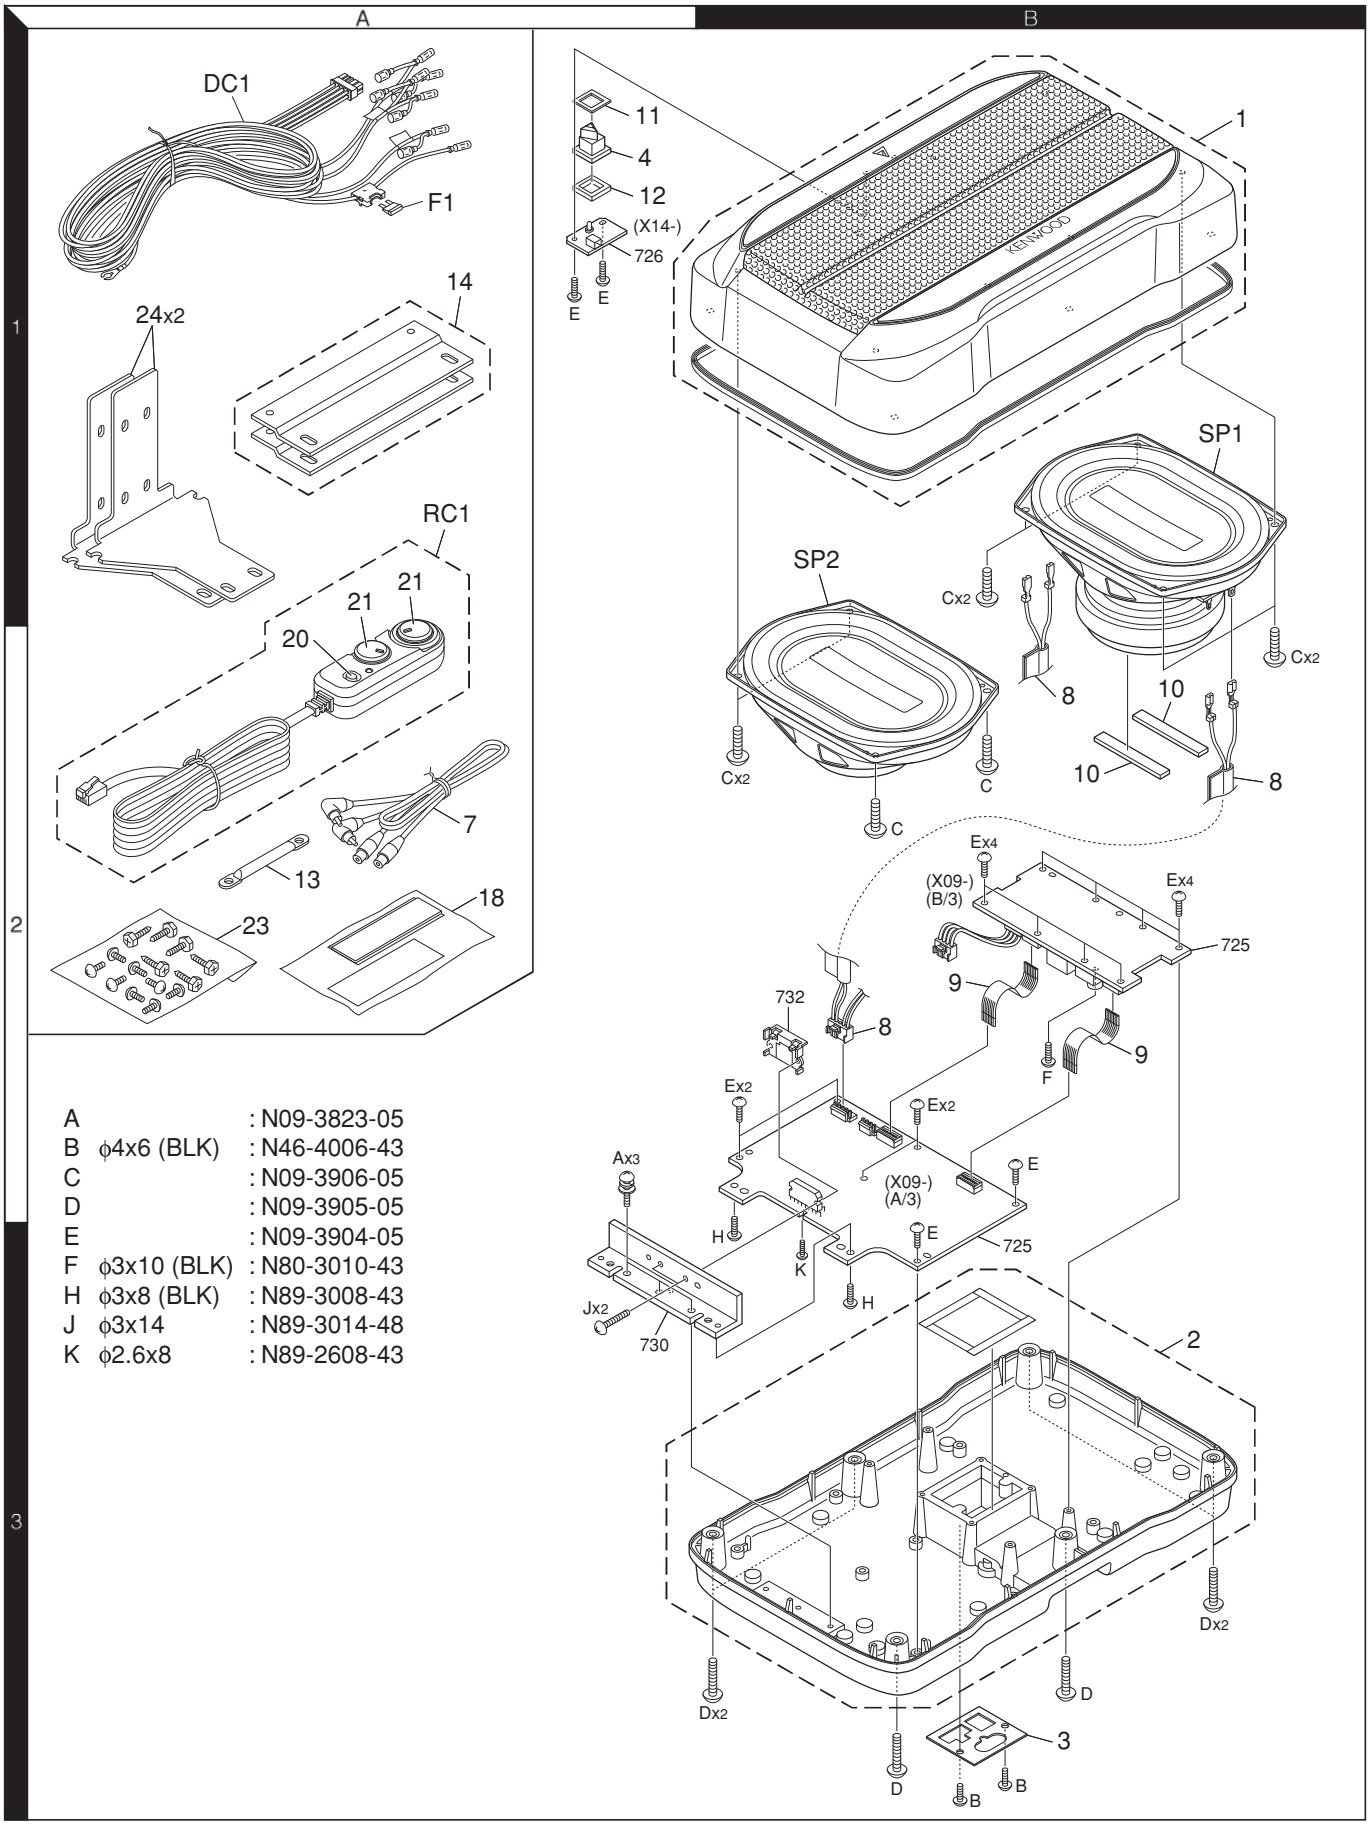

A		: N09-3823-05
B	ϕ4x6 (BLK)	: N46-4006-43
C		: N09-3906-05
D		: N09-3905-05
E		: N09-3904-05
F	ϕ3x10 (BLK)	: N80-3010-43
H	ϕ3x8 (BLK)	: N89-3008-43
J	ϕ3x14	: N89-3014-48
K	ϕ2.6x8	: N89-2608-43

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description			Destination
KSC-SW10							
1	1B	✻	A02-2671-08	CASE ASSY			
2	3B	✻	A01-4316-08	CASE ASSY (BOTTOM)			
3	3B		A29-0979-04	PANEL (CONTROL)			
RC1	1A		A70-0417-08	REMOTE CONTROLLER ASSY (6m)			
4	1A	✻	B19-1309-04	LIGHTING BOARD			
-		✻	B61-1319-00	INST. MANUAL (ENG.FRE.GER.)			
-		✻	B61-1319-00	INST. MANUAL (DUT.ITA.SPA.)			
-		✻	B61-1319-00	INST. MANUAL (RUS.ARA.)			
7	2A		E30-7095-05	CORD WITH PIN JACK (0.5m-RCA)			
8	2B		E36-0505-05	SPEAKER CORD (WOOFER)			
9	2B		E36-0506-05	SPEAKER CORD (PC BOARD)			
DC1	1A		E30-7094-05	DC CORD (6m)			
F1	1A		F06-1032-05	FUSE (BLADE TYPE) (10A)			
10	2B	✻	G13-3104-08	CUSHION			
11	1A	✻	G53-1936-08	PACKING (FRONT)			
12	1A	✻	G53-1937-08	PACKING (REAR)			
13	2A		J11-0213-04	CLAMPER			
14	1A		J19-4269-08	BRACKET (HORIZONTAL)			
18	2A		J69-0168-08	MAGIC TAPE			
20	1A		K27-0215-04	KNOB (BUTTON)			
21	1A		K29-0597-04	KNOB			
23	2A		N99-2192-08	SCREW SET			
A	2A		N09-3823-05	TAPTITE SCREW			
B	3B		N46-4006-43	PAN HEAD TAPTITE SCREW			
C	2B	✻	N09-3906-05	TAPTITE SCREW (4X10)			
D	3B	✻	N09-3905-05	TAPTITE SCREW (4X16)			
E	2B	✻	N09-3904-05	TAPTITE SCREW (3X8)			
SP1	1B	✻	T10-1319-05	WOOFER			
SP2	1B	✻	T19-0089-05	PASSIVE RADIATOR			
24	1A	✻	W01-1383-08	ACCESSORY (VERTICAL)			
AUDIO UNIT (X09-5880-02)							
D16			B30-1365-05	LED			
C1			CD04AX1C4R7M	NP-ELEC	4.7UF	16WV	
C3			CK73FB1H104K	CHIP C	0.10UF	K	
C4			CD04BJ1E101M	ELECTRO	100UF	25WV	
C5			CK73GB1H103K	CHIP C	0.010UF	K	
C6			CC73GCH1H220J	CHIP C	22PF	J	
C7			CC73GCH1H101J	CHIP C	100PF	J	
C8,9			CD04AX1C100M	NP-ELEC	10UF	16WV	
C10			CC73GCH1H220J	CHIP C	22PF	J	
C11			CC73GCH1H102J	CHIP C	1000PF	J	
C12-15			CD04AX1C100M	NP-ELEC	10UF	16WV	
C16			CC73GCH1H102J	CHIP C	1000PF	J	
C17			CC73GCH1H101J	CHIP C	100PF	J	
C20			C90-5629-05	ELECTRO	4700UF	16WV	
C21			CD04BJ1E101M	ELECTRO	100UF	25WV	
C22			CK73FB1H104K	CHIP C	0.10UF	K	
C23			CC73GCH1H102J	CHIP C	1000PF	J	

Ref. No.	Add	New	Parts No.	Description			Destination
C24			CD04BJ1E470M	ELECTRO	47UF	25WV	
C25			CD04BJ1A221M	ELECTRO	220UF	10WV	
C26,27			CD04BJ1C331M	ELECTRO	330UF	16WV	
C28			CD04BJ1H220M	ELECTRO	22UF	50WV	
C29			CD04BJ1A101M	ELECTRO	100UF	10WV	
C30			CD04BJ1H100M	ELECTRO	10UF	50WV	
C31			CD04BJ1H010M	ELECTRO	1.0UF	50WV	
C32			CD04BJ1E101M	ELECTRO	100UF	25WV	
C33			CD04BJ1H100M	ELECTRO	10UF	50WV	
C50-54			CK73FB1H104K	CHIP C	0.10UF	K	
C55			CC73GCH1H101J	CHIP C	100PF	J	
C56-59			CD04BJ1A101M	ELECTRO	100UF	10WV	
C60			CD04BJ1H100M	ELECTRO	10UF	50WV	
C100			CQ93FMG1H104J	MYLAR	0.10UF	J	
C101			CD04BJ1H010M	ELECTRO	1.0UF	50WV	
C102,103			CD04BJ1H100M	ELECTRO	10UF	50WV	
C104			CD04BJ1H010M	ELECTRO	1.0UF	50WV	
C105			CQ93FMG1H104J	MYLAR	0.10UF	J	
C106			CD04AX1C220M	NP-ELEC	22UF	16WV	
C107			CC73GCH1H470J	CHIP C	47PF	J	
C108,109			CD04BJ1H010M	ELECTRO	1.0UF	50WV	
C110			CD04BJ1E470M	ELECTRO	47UF	25WV	
C111			CC73GCH1H470J	CHIP C	47PF	J	
C112			CD04BJ1H100M	ELECTRO	10UF	50WV	
C113			CD04AX1C220M	NP-ELEC	22UF	16WV	
C114			CD04BJ1A101M	ELECTRO	100UF	10WV	
C115			CD04AX1HR47M	ELECTRO	0.47UF	50WV	
C116			CC73GCH1H470J	CHIP C	47PF	J	
C117			CD04BJ1A101M	ELECTRO	100UF	10WV	
C118			CK73GB1C224K	CHIP C	0.22UF	K	
C119			CD04BJ1V330M	ELECTRO	33UF	35WV	
C120,121			C90-5620-05	ELECTRO	0.47UF	50WV	
C123			CD04BJ1H010M	ELECTRO	1.0UF	50WV	
C124,125			CD04BJ1HR47M	ELECTRO	0.47UF	50WV	
C126			CD04BJ1E101M	ELECTRO	100UF	25WV	
C127			CK73GB1H103K	CHIP C	0.010UF	K	
C128			CD04BJ1A101M	ELECTRO	100UF	10WV	
C130			CC73GCH1H102J	CHIP C	1000PF	J	
C131			CD04AY1C102M	ELECTRO	1000UF	16WV	
C132,133			CC73GCH1H102J	CHIP C	1000PF	J	
C134			CD04BJ1H010M	ELECTRO	1.0UF	50WV	
C135			CD04BJ1E101M	ELECTRO	100UF	25WV	
C136			CD04BJ1H010M	ELECTRO	1.0UF	50WV	
C137			CD04BJ1E101M	ELECTRO	100UF	25WV	
C139			CD04BJ1H010M	ELECTRO	1.0UF	50WV	
C140			CD04BJ1H100M	ELECTRO	10UF	50WV	
C141			CK73GB1C224K	CHIP C	0.22UF	K	
C142			CK73GB1H103K	CHIP C	0.010UF	K	
CN1,2			E40-4233-05	FLAT CABLE CONNECTOR			
CN11,12			E40-4233-05	FLAT CABLE CONNECTOR			
CN13			E41-1011-05	PIN ASSY			
CN14			E41-1012-05	PIN ASSY			
J1			E63-0924-05	PIN JACK			
J2			E58-1015-05	RECTANGULAR RECEPTACLE			

⚠Indicates safety critical components.

PARTS LIST

AUDIO UNIT (X09-5880-02)

Ref. No.	Add	New	Parts No.	Description				Destination
J3			E58-1014-05	RECTANGULAR RECEPTACLE				
WH1		✻	E39-0977-05	WIRING HARNESS				
WH2		✻	E39-0937-05	WIRING HARNESS				
L1		✻	L33-2430-05	CHOKE COIL				
F	2B		N80-3010-43	PAN HEAD TAPTITE SCREW				
H	3B		N89-3008-43	BINDING HEAD TAPTITE SCREW				
J	3A		N89-3014-48	BINDING HEAD TAPTITE SCREW				
K	3B	✻	N89-2608-43	BINDING HEAD TAPTITE SCREW				
R1,2			RD14BB2C103J	RD	10K	J	1/6W	
R3			RK73EB2E102J	CHIP R	1.0K	J	1/4W	
R5			RK73GB2A202J	CHIP R	2.0K	J	1/10W	
R6-9			RK73GH2A103D	CHIP R	10K	D	1/10W	
R10			RK73GB2A103J	CHIP R	10K	J	1/10W	
R11			RK73GB2A133J	CHIP R	13K	J	1/10W	
R12-15			RD14BB2C103J	RD	10K	J	1/6W	
R16,17			RK73GB2A221J	CHIP R	220	J	1/10W	
R20			RK73GB2A392J	CHIP R	3.9K	J	1/10W	
R21-23			RK73GB2A332J	CHIP R	3.3K	J	1/10W	
R24			RK73GB2A682J	CHIP R	6.8K	J	1/10W	
R25			RK73GB2A103J	CHIP R	10K	J	1/10W	
R26			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R27,28			RK73GB2A333J	CHIP R	33K	J	1/10W	
R29			RK73GB2A223J	CHIP R	22K	J	1/10W	
R30			RK73GB2A103J	CHIP R	10K	J	1/10W	
R31			RK73GB2A562J	CHIP R	5.6K	J	1/10W	
R32			RK73GB2A101J	CHIP R	100	J	1/10W	
R33			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R34-37			RK73GB2A223J	CHIP R	22K	J	1/10W	
R38			RK73GB2A332J	CHIP R	3.3K	J	1/10W	
R39			RK73GB2A512J	CHIP R	5.1K	J	1/10W	
R40			RK73EB2E201J	CHIP R	200	J	1/4W	
R41			RK73GB2A681J	CHIP R	680	J	1/10W	
R42			RK73GB2A182J	CHIP R	1.8K	J	1/10W	
R43			RK73GB2A392J	CHIP R	3.9K	J	1/10W	
R44			RK73GB2A152J	CHIP R	1.5K	J	1/10W	
R50-53			RK73EB2E101J	CHIP R	100	J	1/4W	
R54			RK73EB2E150J	CHIP R	15	J	1/4W	
R55			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R56			RK73GB2A362J	CHIP R	3.6K	J	1/10W	
R57			RK73GB2A473J	CHIP R	47K	J	1/10W	
R58,59			RK73EB2E101J	CHIP R	100	J	1/4W	
R60-63			RD14BB2C101J	RD	100	J	1/6W	
R64			RK73EB2E101J	CHIP R	100	J	1/4W	
R65,66			RD14BB2C222J	RD	2.2K	J	1/6W	
R68-70			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R100,101			RK73GB2A103J	CHIP R	10K	J	1/10W	
R102			RK73GB2A682J	CHIP R	6.8K	J	1/10W	
R103			RK73GB2A103J	CHIP R	10K	J	1/10W	
R104			RK73GB2A153J	CHIP R	15K	J	1/10W	
R106			RK73GB2A104J	CHIP R	100K	J	1/10W	
R107			RK73GB2A224J	CHIP R	220K	J	1/10W	
R108			RK73GB2A153J	CHIP R	15K	J	1/10W	
R109,110			RK73GB2A103J	CHIP R	10K	J	1/10W	

Ref. No.	Add	New	Parts No.	Description				Destination
R111			RK73GB2A104J	CHIP R	100K	J	1/10W	
R112			RK73GB2A223J	CHIP R	22K	J	1/10W	
R113			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R114			RK73GB2A363J	CHIP R	36K	J	1/10W	
R115			RK73GB2A204J	CHIP R	200K	J	1/10W	
R116			RK73GB2A104J	CHIP R	100K	J	1/10W	
R117			RK73GB2A112J	CHIP R	1.1K	J	1/10W	
R118			RK73GB2A101J	CHIP R	100	J	1/10W	
R119			RK73GB2A103J	CHIP R	10K	J	1/10W	
R120			RK73GB2A203J	CHIP R	20K	J	1/10W	
R121			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R122			RK73GB2A203J	CHIP R	20K	J	1/10W	
R123			RK73GB2A103J	CHIP R	10K	J	1/10W	
R124,125			RK73GB2A132J	CHIP R	1.3K	J	1/10W	
R126			RK73GB2A101J	CHIP R	100	J	1/10W	
R127-130			RK73EB2E103J	CHIP R	10K	J	1/4W	
R131			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R132,133			RK73GB2A223J	CHIP R	22K	J	1/10W	
R135,136			RK73GB2A223J	CHIP R	22K	J	1/10W	
R137			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R138			RK73GB2A332J	CHIP R	3.3K	J	1/10W	
R139			RK73GB2A512J	CHIP R	5.1K	J	1/10W	
R140			RK73GB2A103J	CHIP R	10K	J	1/10W	
R144			RK73GB2A103J	CHIP R	10K	J	1/10W	
R146			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R147			RK73GB2A223J	CHIP R	22K	J	1/10W	
R148,149			RK73GB2A303J	CHIP R	30K	J	1/10W	
R150			RK73GB2A391J	CHIP R	390	J	1/10W	
R151			RK73GB2A221J	CHIP R	220	J	1/10W	
R152			RK73GB2A473J	CHIP R	47K	J	1/10W	
R153			RK73GB2A103J	CHIP R	10K	J	1/10W	
R154			RK73GB2A132J	CHIP R	1.3K	J	1/10W	
R155			RK73GB2A101J	CHIP R	100	J	1/10W	
R156			RK73GB2A473J	CHIP R	47K	J	1/10W	
R157,158			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R159			RK73GB2A101J	CHIP R	100	J	1/10W	
R201			RK73GB2A683J	CHIP R	68K	J	1/10W	
R202			RK73EB2E101J	CHIP R	100	J	1/4W	
R203			RK73GB2A512J	CHIP R	5.1K	J	1/10W	
VR1			R31-0246-05	VARIABLE RESISTOR (10K,C)				
VR2			R31-0244-05	VARIABLE RESISTOR (10KX2,B)				
W100-102			R92-2053-05	CHIP R	0 OHM	J	1/8W	
W104			R92-2053-05	CHIP R	0 OHM	J	1/8W	
W105			R92-1252-05	CHIP R	0 OHM	J	1/16W	
W106,107			R92-2053-05	CHIP R	0 OHM	J	1/8W	
W108,109			R92-1252-05	CHIP R	0 OHM	J	1/16W	
W110			R92-2053-05	CHIP R	0 OHM	J	1/8W	
W112,113			R92-2053-05	CHIP R	0 OHM	J	1/8W	
W116-125			R92-2053-05	CHIP R	0 OHM	J	1/8W	
S1			S68-0900-05	PUSH SWITCH				
D1			LM1MA142WK-G	DIODE				
D2			LM1MA142WA-G	DIODE				
D3			LM1MA142WK-G	DIODE				
D4			LM1MA142WA-G	DIODE				

⚠Indicates safety critical components.

PARTS LIST

AUDIO UNIT (X09-5880-02)

Ref. No.	Add	New	Parts No.	Description	Destination
D5			RM10ZLFNF	DIODE	
D6			UDZS6.8B	ZENER DIODE	
D7			UDZS5.6B	ZENER DIODE	
D8			1SR154-400	DIODE	
D9-11			1SS133	DIODE	
D12			UDZS9.1B	ZENER DIODE	
D13			UDZS5.1B	ZENER DIODE	
D14			UDZS15B	ZENER DIODE	
D15			UDZS5.6B	ZENER DIODE	
D17			UDZS9.1B	ZENER DIODE	
D18-20			1SS133	DIODE	
D21			UDZS6.8B	ZENER DIODE	
D22			UDZS4.7B	ZENER DIODE	
D100-105			DA204U	DIODE	
D106			LM1MA142WK-G	DIODE	
D107,108			1SS133	DIODE	
D109			UDZS6.2B	ZENER DIODE	
D110			UDZS5.6B	ZENER DIODE	
D111,112			1SS133	DIODE	
D113			1SR154-400	DIODE	
IC1,2			BA4560F	ANALOGUE IC	
IC100			BA10358F	ANALOGUE IC	
IC101,102			NJM2172V-ZBTE2	ANALOGUE IC	
IC103,104			BA4560F	ANALOGUE IC	
IC105		✻	E-TDA7575B	ANALOGUE IC	
Q1			2SB1241	TRANSISTOR	
Q2-4			2SC4081	TRANSISTOR	
Q5			2SD1863	TRANSISTOR	
Q6			2SA1576A	TRANSISTOR	
Q7			2SC4081	TRANSISTOR	
Q9-12			2SC4081	TRANSISTOR	
Q100,101			2SC4081	TRANSISTOR	
Q102			DTA124EUA	DIGITAL TRANSISTOR	
Q103			2SC4081	TRANSISTOR	
Q104			2SA1576A	TRANSISTOR	
Q105			DTA124EUA	DIGITAL TRANSISTOR	
Q106,107			2SC4081	TRANSISTOR	

DISPLAY UNIT (X14-9960-00)

Ref. No.	Add	New	Parts No.	Description	Destination
D1			B30-1710-05	LED (RED)	
C1			CK73GB1H103K	CHIP C 0.010UF K	
CN1			E41-1699-05	PIN ASSY	

Ref. No.	Add	New	Parts No.	Description	Destination

⚠Indicates safety critical components.