EXPLODED VIEW (CD MECHANISM)

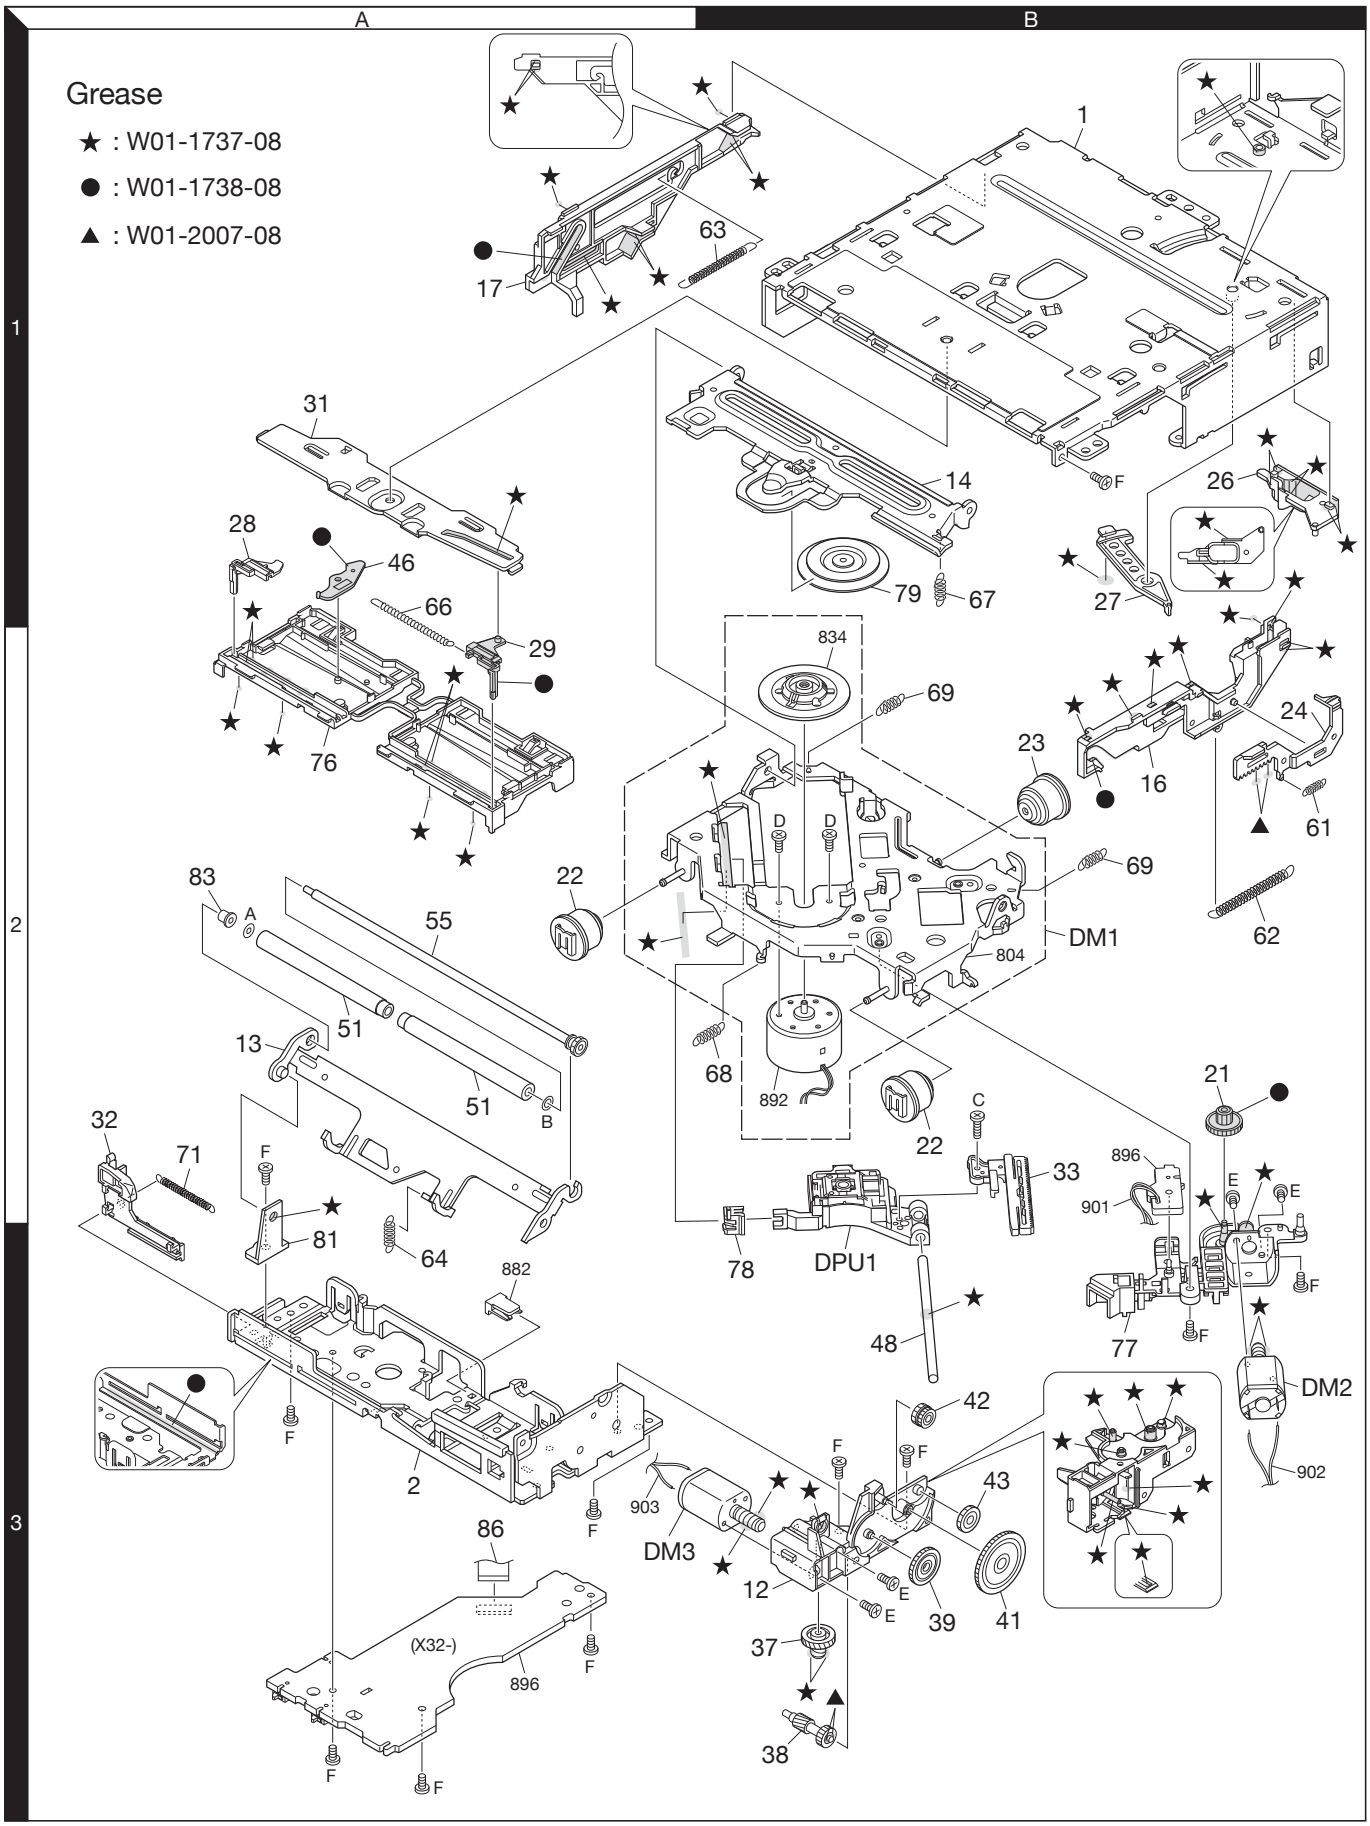

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (UNIT)

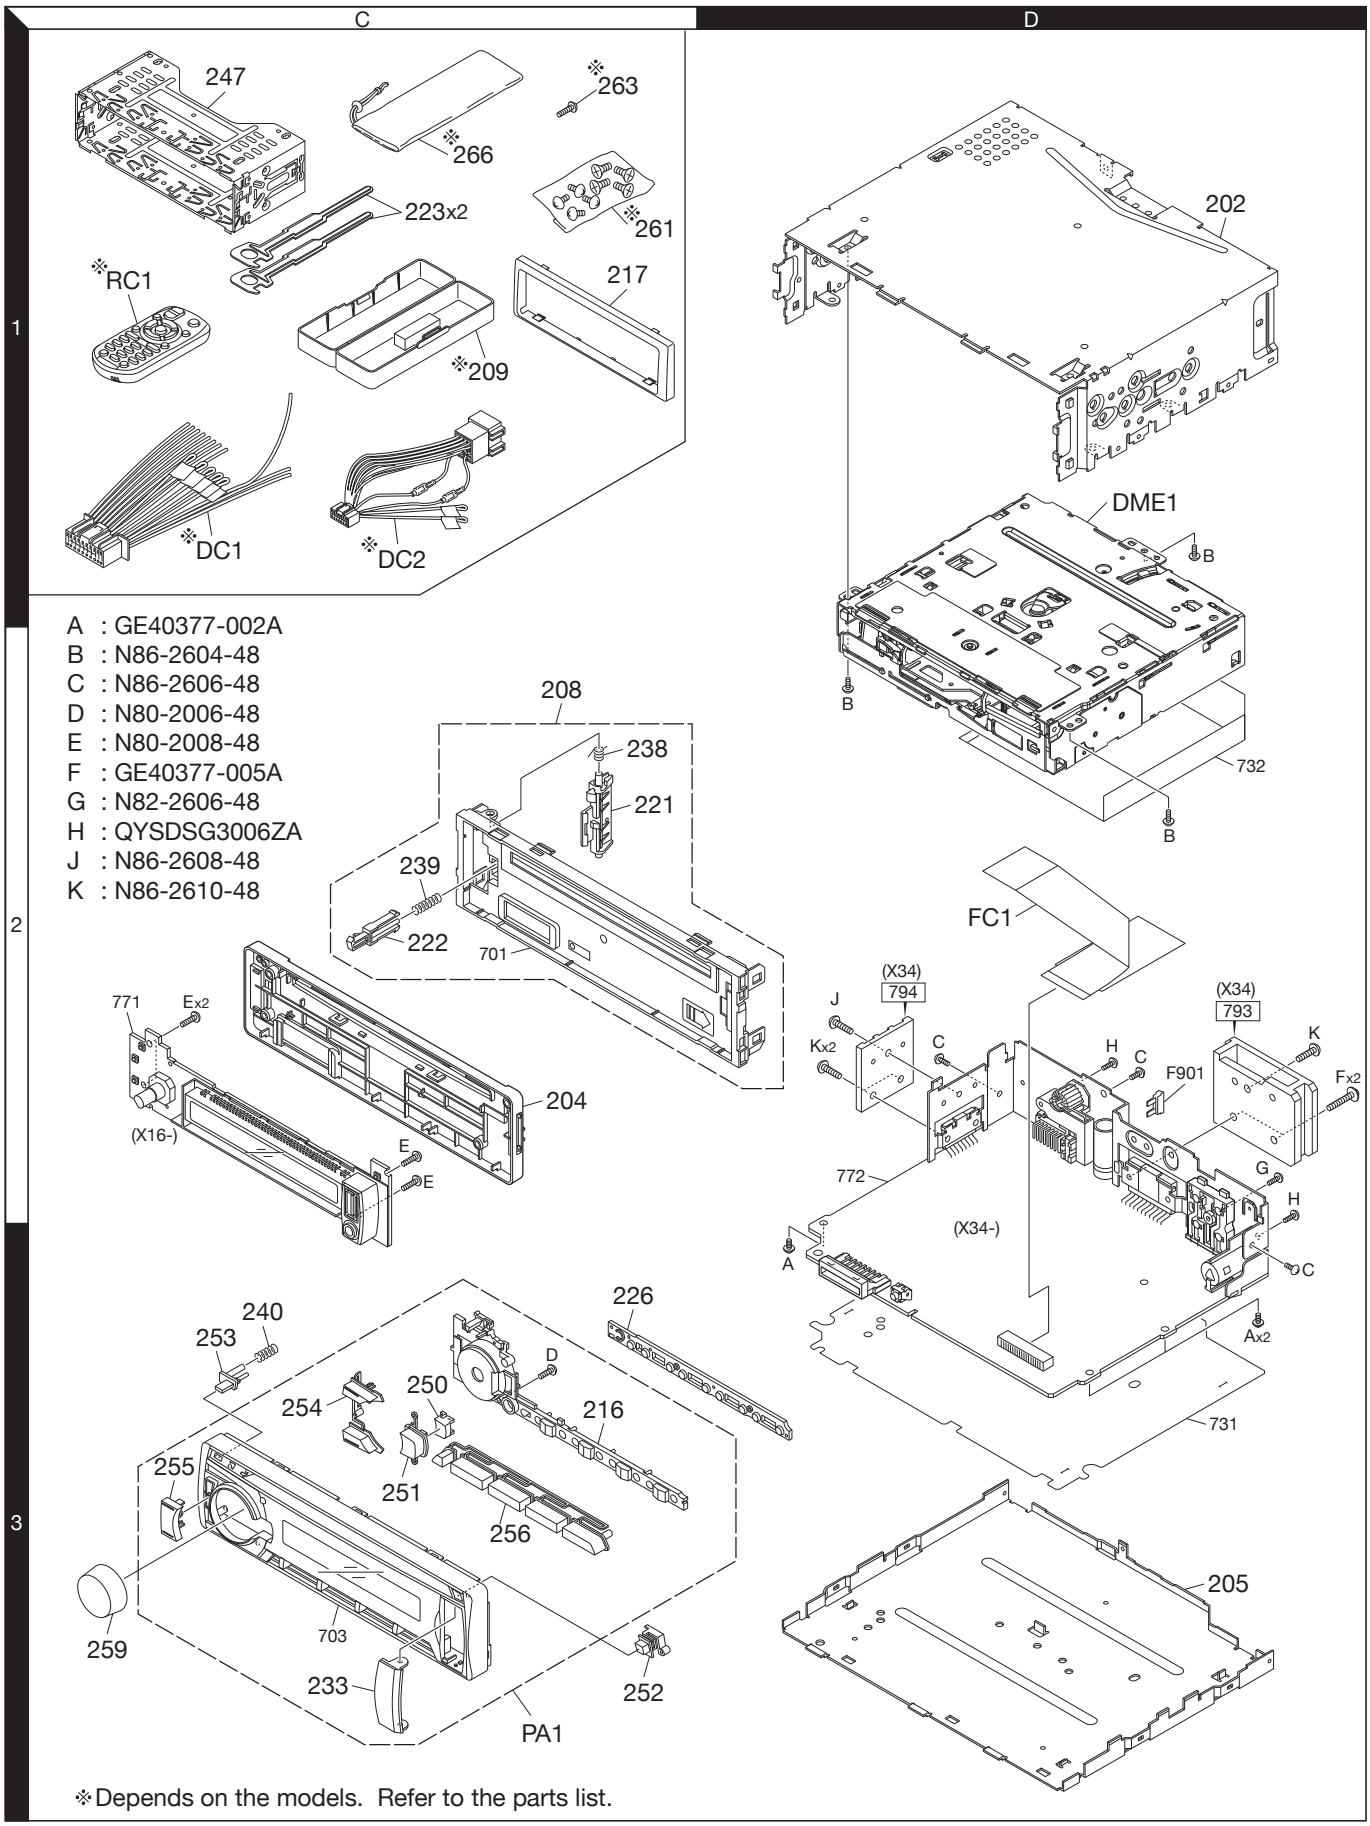

A : GE40377-002A
B : N86-2604-48
C : N86-2606-48
D : N80-2006-48
E : N80-2008-48
F : GE40377-005A
G : N82-2606-48
H : QYSDSG3006ZA
J : N86-2608-48
K : N86-2610-48

※Depends on the models. Refer to the parts list.

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
KDC-208U/248U/4051Uxx/MP148U/MP248U/U3049/U349x/U4049					
202	1D		GE10283-001A	TOP CHASSIS	
204	2C		GE10286-001A	REAR COVER	
205	3D	✻	GE20271-002A	BOTTOM COVER	
208	2C		GE34074-001A	FRONT CHASSIS ASSY	
209	1C		A02-2757-13	HARD CASE ASSY	MM1M2
209	1C		A02-2757-13	HARD CASE ASSY	M3M4
PA1	3C	✻	GE20277-006A	PANEL ASSY	M2
PA1	3C	✻	GE20277-017A	PANEL ASSY	K1
PA1	3C	✻	GE20277-019A	PANEL ASSY	M1M3M4
PA1	3C	✻	GE20280-002A	PANEL ASSY	K2
PA1	3C	✻	GE20280-010A	PANEL ASSY	M
PA1	3C	✻	GE20280-012A	PANEL ASSY	M5M6
PA1	3C	✻	GE20280-014A	PANEL ASSY	K3
PA1	3C	✻	GE20280-019A	PANEL ASSY	C1
PA1	3C	✻	GE20280-020A	PANEL ASSY	K
RC1	1C		A70-2104-05	REMOTE CONTROL UNIT (RC-405)	KK1K2M
RC1	1C		A70-2104-05	REMOTE CONTROL UNIT (RC-405)	M1M2M3
RC1	1C		A70-2104-05	REMOTE CONTROL UNIT (RC-405)	M4
-		✻	GET0687-001A	INSTRUCTION BOOK (ENG.FRE.SPA.)	KK1K2
-		✻	GET0687-001A	INSTRUCTION BOOK (ENG.FRE.SPA.)	K3
-		✻	GET0687-002A	INSTALL MANUAL (ENG.FRE.SPA.)	KK1K2
-		✻	GET0687-002A	INSTALL MANUAL (ENG.FRE.SPA.)	K3
-		✻	GET0691-001A	INSTRUCTION BOOK (ENGLISH)	MM1M2
-		✻	GET0691-001A	INSTRUCTION BOOK (ENGLISH)	M3M4M5
-		✻	GET0691-001A	INSTRUCTION BOOK (ENGLISH)	M6
-		✻	GET0691-002A	INSTRUCTION BOOK (ARABIC)	MM1M2
-		✻	GET0691-002A	INSTRUCTION BOOK (ARABIC)	M3M4
-		✻	GET0693-001A	INSTRUCTION BOOK (S-CHINESE)	C1
216	3C	✻	GE10289-001A	LIGHT GUIDE	
217	1C		GE20274-001A	TRIM PLATE	
221	2C		GE34045-001A	LOCK LEVER	
222	2C		GE34046-001A	RELEASE LEVER	
223	1C		GE40510-001A	HOOK	
226	3C		GE34058-001A	CONDUCTIVE RUBBER	
DC1	1C		E30-6798-05	CAR CABLE	KK1K2
DC1	1C		E30-6798-05	CAR CABLE	K3M
DC1	1C		E30-6933-05	CAR CABLE	M1M2M3
DC1	1C		E30-6933-05	CAR CABLE	M4C1
DC2	1C		E30-6937-05	CAR CABLE	M5M6
FC1	2D	✻	WJT0254-001A-E	E-CARD WIRE	
233	3C	✻	GE34055-001A	USB DOOR COVER	
F901	2D		F52-0023-05	FUSE (10A)	
238	2C		GE40504-001A	SPRING (TORSION)	
239	2C		GE40505-001A	SPRING (COMPRESSION)	
240	3C		GE40505-002A	SPRING (DETACH)	
-		✻	GE34198-001A	INNER CARTON	K
-		✻	GE34200-001A	INNER CARTON	K3
-		✻	GE34202-001A	INNER CARTON	K1
-		✻	GE34204-001A	INNER CARTON	K2
-		✻	GE34226-001A	INNER CARTON	M1
-		✻	GE34228-001A	INNER CARTON	M3
-		✻	GE34230-001A	INNER CARTON	M4
-		✻	GE34232-001A	INNER CARTON	M2
-		✻	GE34234-001A	INNER CARTON	M
-		✻	GE34240-001A	INNER CARTON	M5
-		✻	GE34242-001A	INNER CARTON	M6
-		✻	GE34244-001A	INNER CARTON	C1
247	1C		GE34134-001A	MOUNTING SLEEVE ASSY	
250	3C	✻	GE34053-001A	ACCENT BUTTON BASE	
251	3C	✻	GE34052-001A	ACCENT BUTTON TOP (iPod)	KK1
251	3C	✻	GE34052-002A	ACCENT BUTTON TOP (RANDOM)	C1
251	3C	✻	GE34052-002A	ACCENT BUTTON TOP (RANDOM)	K2K3M
251	3C	✻	GE34052-002A	ACCENT BUTTON TOP (RANDOM)	M1M2M3
251	3C	✻	GE34052-002A	ACCENT BUTTON TOP (RANDOM)	M4M5M6
252	3C		GE34059-001A	EJECT BUTTON	
253	3C		GE34060-001A	DETACH BUTTON	
254	3C		GE34061-001A	SRC BUTTON	
255	3C		GE34063-001A	SEARCH BUTTON	
256	3C		GE34064-001A	PRESET BUTTON	
259	3C		GE40502-001A	VOL KNOB RUBBER	KK2K3
259	3C		GE40511-001A	VOL KNOB RUBBER	K1MM1
259	3C		GE40511-001A	VOL KNOB RUBBER	M2M3M4
259	3C		GE40511-001A	VOL KNOB RUBBER	M5M6C1
261	1C		N99-1757-15	SCREW SET	C1
261	1C		N99-1757-15	SCREW SET	KK1K2
261	1C		N99-1757-15	SCREW SET	K3MM1
261	1C		N99-1757-15	SCREW SET	M2M3M4
263	1C		N80-2008-43	TAP SCREW (ACCESSORY)	C1
263	1C		N80-2008-43	TAP SCREW (ACCESSORY)	KK1K2
263	1C		N80-2008-43	TAP SCREW (ACCESSORY)	K3MM1
263	1C		N80-2008-43	TAP SCREW (ACCESSORY)	M2M3M4
A	3D		GE40377-002A	SPECIAL SCREW	
B	2D		N86-2604-48	TAP SCREW	
C	2D		N86-2606-48	TAP SCREW	
D	3C		N80-2006-48	TAP SCREW	
E	2C		N80-2008-48	TAP SCREW	
266	1C		W01-1710-05	CARRYING CASE	KK1K2
266	1C		W01-1710-05	CARRYING CASE	K3M5M6
DME1	1D		X92-6630-00	MECHANISM ASSY (HCS-1000W)	
SWITCH UNIT (X16-705x-xx)					
D651			B30-1566-05	LED	
D652			B30-1779-05	LED	KK1K2
D652			B30-1779-05	LED	K3M1M2
D652			B30-1779-05	LED	M5
D652			B30-1794-05	LED	M4
D652-673			B30-1780-05	LED	C1
D652-673			B30-1780-05	LED	MM3M6
D655			B30-1779-05	LED	KK1K2
D655			B30-1779-05	LED	K3M1M2
D655			B30-1779-05	LED	M5
D655			B30-1794-05	LED	M4
D658,659			B30-1779-05	LED	KK1K2

K: KDC-248U **K1**: KDC-MP248U **K2**: KDC-MP148U **K3**: KDC-208U
M: KDC-U3049 **M1**: KDC-U349R **M2**: KDC-U349S **M3**: KDC-U349G
M4: KDC-U349A **M5**: KDC-4051URM **M6**: KDC-4051UGM **C1**: KDC-U4049

⚠Indicates safety critical components.

PARTS LIST

SWITCH UNIT (X16-705x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
D658,659			B30-1779-05	LED	K3M1M2
D658,659			B30-1779-05	LED	M5
D658,659			B30-1794-05	LED	M4
D664-668			B30-1779-05	LED	KK1K2
D664-668			B30-1779-05	LED	K3M1M2
D664-668			B30-1779-05	LED	M5
D664-668			B30-1794-05	LED	M4
D673-678			B30-1779-05	LED	KK1K2
D673-678			B30-1779-05	LED	K3M1M2
D673-678			B30-1779-05	LED	M5
D673-678			B30-1794-05	LED	M4
D680			B30-1779-05	LED	KK1K2
D680			B30-1779-05	LED	K3M1M2
D680			B30-1779-05	LED	M5
D680			B30-1794-05	LED	M4
D680,681			B30-1780-05	LED	C1
D680,681			B30-1780-05	LED	MM3M6
C611			CK73GB0J105K	CHIP C 1.0UF K	
C612			CK73GB1C104K	CHIP C 0.10UF K	
C613-616			CK73GB1H471K	CHIP C 470PF K	
C621			CK73GB1C104K	CHIP C 0.10UF K	
C671,672			CK73GB1H472K	CHIP C 4700PF K	
C681,682			CC73GCH1H270J	CHIP C 27PF J	
C684			CK73GB1H103K	CHIP C 0.010UF K	
C685			NCJ11EK-106X-R	C CAPACITOR	
CN601			E59-0859-05	TDF CONNECTOR	
CN603		✻	QNZ1057-001	USB CONNECTOR	
J602		✻	QNS0308-001	DIA 3.5 TYPE JACK	
L601			L92-0879-05	FERRITE BEADS	
LF601		✻	NQR0536-001X	CHOKE COIL	
R611			RK73GB2A473J	CHIP R 47K J 1/10W	
R612			RK73GB2A221J	CHIP R 220 J 1/10W	
R614			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R615			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R616			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R622			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R623			RK73GB2A103J	CHIP R 10K J 1/10W	
R625			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R631			NRS125J-9R1X	MG RESISTOR	
R632			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R650,651			RK73EB2E362J	CHIP R 3.6K J 1/4W	
R652			RK73EB2E471J	CHIP R 470 J 1/4W	C1
R652			RK73EB2E471J	CHIP R 470 J 1/4W	MM3M6
R652			RK73EB2E561J	CHIP R 560 J 1/4W	KK1K2
R652			RK73EB2E561J	CHIP R 560 J 1/4W	K3M1M2
R652			RK73EB2E561J	CHIP R 560 J 1/4W	M5
R652			RK73EB2E821J	CHIP R 820 J 1/4W	M4
R653			RK73EB2E102J	CHIP R 1.0K J 1/4W	M4
R653			RK73EB2E751J	CHIP R 750 J 1/4W	KK1K2
R653			RK73EB2E751J	CHIP R 750 J 1/4W	K3M1M2
R653			RK73EB2E751J	CHIP R 750 J 1/4W	M5
R653			RK73EB2E911J	CHIP R 910 J 1/4W	C1
R653			RK73EB2E911J	CHIP R 910 J 1/4W	MM3M6
R654			RK73EB2E331J	CHIP R 330 J 1/4W	C1
R654			RK73EB2E331J	CHIP R 330 J 1/4W	MM3M6
R655			RK73EB2E152J	CHIP R 1.5K J 1/4W	KK1K2
R655			RK73EB2E152J	CHIP R 1.5K J 1/4W	K3M1M2
R655			RK73EB2E152J	CHIP R 1.5K J 1/4W	M4M5
R655-659			RK73EB2E471J	CHIP R 470 J 1/4W	C1
R655-659			RK73EB2E471J	CHIP R 470 J 1/4W	MM3M6
R656-658			RK73EB2E102J	CHIP R 1.0K J 1/4W	M4
R656-658			RK73EB2E751J	CHIP R 750 J 1/4W	KK1K2
R656-658			RK73EB2E751J	CHIP R 750 J 1/4W	K3M1M2
R656-658			RK73EB2E751J	CHIP R 750 J 1/4W	M5
R659			RK73EB2E561J	CHIP R 560 J 1/4W	KK1K2
R659			RK73EB2E561J	CHIP R 560 J 1/4W	K3M1M2
R659			RK73EB2E561J	CHIP R 560 J 1/4W	M5
R659			RK73EB2E821J	CHIP R 820 J 1/4W	M4
R661			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R669			RK73EB2E561J	CHIP R 560 J 1/4W	KK1K2
R669			RK73EB2E561J	CHIP R 560 J 1/4W	K3M1M2
R669			RK73EB2E561J	CHIP R 560 J 1/4W	M5
R669-671			RK73EB2E102J	CHIP R 1.0K J 1/4W	M4
R669-672			RK73EB2E471J	CHIP R 470 J 1/4W	C1
R669-672			RK73EB2E471J	CHIP R 470 J 1/4W	MM3M6
R670			RK73EB2E911J	CHIP R 910 J 1/4W	KK1K2
R670			RK73EB2E911J	CHIP R 910 J 1/4W	K3M1M2
R670			RK73EB2E911J	CHIP R 910 J 1/4W	M5
R671			RK73EB2E751J	CHIP R 750 J 1/4W	KK1K2
R671			RK73EB2E751J	CHIP R 750 J 1/4W	K3M1M2
R671			RK73EB2E751J	CHIP R 750 J 1/4W	M5
R672			RK73EB2E561J	CHIP R 560 J 1/4W	KK1K2
R672			RK73EB2E561J	CHIP R 560 J 1/4W	K3M1M2
R672			RK73EB2E561J	CHIP R 560 J 1/4W	M5
R672			RK73EB2E821J	CHIP R 820 J 1/4W	M4
R681,682			RK73GB2A270J	CHIP R 27 J 1/10W	
R683			RK73GB2A103J	CHIP R 10K J 1/10W	
R684			RK73GB2A000J	CHIP R 0.0 J 1/10W	KK1K2
R684			RK73GB2A000J	CHIP R 0.0 J 1/10W	K3M1M2
R684			RK73GB2A000J	CHIP R 0.0 J 1/10W	M4M5
S602,603			NSW0326-001X	TACT SWITCH	
S610,611			NSW0326-001X	TACT SWITCH	
S615,616			NSW0326-001X	TACT SWITCH	
EN601			QSW1288-001	ROTARY ENCODER	
D601-608			DZ2J051/M/-X	ZENER DIODE	
D685,686			DZ2J051/M/-X	ZENER DIODE	
FL601			3-BT-267N	FLUORESCENT INDICATOR TUBE	
IC601			BU9755KV-X	MOS-IC	
IC602			KSM-2003TN5B	ANALOGUE IC	
Q602			RT1P141M-T111	D TRANSISTOR	

CD PLAYER UNIT (X32-6430-00) IN CD MECHA

CN101			QGF1049F1-26X	CONNECTOR	
CN102			QGF0522F3-15W	CONNECTOR	
B1			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R1			RK73GB2A131J	CHIP R 130 J 1/10W	

K: KDC-248U **K1**: KDC-MP248U **K2**: KDC-MP148U **K3**: KDC-208U
M: KDC-U3049 **M1**: KDC-U349R **M2**: KDC-U349S **M3**: KDC-U349G
M4: KDC-U349A **M5**: KDC-4051URM **M6**: KDC-4051UGM **C1**: KDC-U4049

⚠Indicates safety critical components.

PARTS LIST

CD PLAYER UNIT (X32-6430-00) IN CD MECHA

Ref. No.	Add	New	Parts No.	Description			Destination
SW1 -4			NSW0291-001X	DETECT SWITCH			
ELECTRIC UNIT (X34-69xx-xx)							
C1			CK73GB1H102K	CHIP C	1000PF	K	
C2			CC73GCH1H040C	CHIP C	4.0PF	C	MM1M2
C2			CC73GCH1H040C	CHIP C	4.0PF	C	M3M4C1
C2			CC73GCH1H070D	CHIP C	7.0PF	D	KK1K2
C2			CC73GCH1H070D	CHIP C	7.0PF	D	K3M5M6
C3			CK73GB1H102K	CHIP C	1000PF	K	
C4			CK73GB1C224K	CHIP C	0.22UF	K	
C5			CC73GCH1H150J	CHIP C	15PF	J	
C6			CC73GCH1H040C	CHIP C	4.0PF	C	MM1M2
C6			CC73GCH1H040C	CHIP C	4.0PF	C	M3M4C1
C6			CC73GCH1H060D	CHIP C	6.0PF	D	KK1K2
C6			CC73GCH1H060D	CHIP C	6.0PF	D	K3M5M6
C7			CC73GCH1H270J	CHIP C	27PF	J	
C10			CK73FB1C105K	CHIP C	1.0UF	K	
C11 ,12			CK73GB1H103K	CHIP C	0.010UF	K	
C13			CK73FB1C105K	CHIP C	1.0UF	K	
C14			CK73GB1C224K	CHIP C	0.22UF	K	
C15			CK73GB1C104K	CHIP C	0.10UF	K	
C16			CK73GB1H103K	CHIP C	0.010UF	K	
C17			CK73GB1C104K	CHIP C	0.10UF	K	
C18			CK73GB1H103K	CHIP C	0.010UF	K	
C19			CK73GB1C104K	CHIP C	0.10UF	K	
C20			CC73GCH1H120J	CHIP C	12PF	J	
C21 -23			CK73GB1C104K	CHIP C	0.10UF	K	
C24			QEKJ1CM-107Z	E CAPACITOR			
C25			QEKJ1EM-106Z	E CAPACITOR			
C26			CC73GCH1H471J	CHIP C	470PF	J	
C27			CC73GCH1H020C	CHIP C	2.0PF	C	KK1K2
C27			CC73GCH1H020C	CHIP C	2.0PF	C	K3M5M6
C80			CK73GB1E473K	CHIP C	0.047UF	K	KK1
C101,102			CK73GB1C105K	CHIP C	1.0UF	K	
C111			CK73GB1C105K	CHIP C	1.0UF	K	
C112			CK73GB1C104K	CHIP C	0.10UF	K	
C160			QEKJ1EM-106Z	E CAPACITOR			
C161			CK73GB1A105K	CHIP C	1.0UF	K	
C162		✻	QERF1HM-475Z	E CAPACITOR			
C166			CK73GB1C104K	CHIP C	0.10UF	K	
C168			CK73GB1C104K	CHIP C	0.10UF	K	
C169-171			CK73GB1A105K	CHIP C	1.0UF	K	
C172			QERF1AM-107Z	E CAPACITOR			
C173			CK73GB1A105K	CHIP C	1.0UF	K	
C174		✻	QERF1HM-475Z	E CAPACITOR			
C177			CK73GB1A105K	CHIP C	1.0UF	K	
C305-308		✻	NCB21CK-224X-A	C CAPACITOR			
C309			QEKJ1CM-226Z	E CAPACITOR			
C311,312			CK73GB1H223K	CHIP C	0.022UF	K	
C313		✻	NCB21AK-105X-A	C CAPACITOR			
C314,315			CK73GB1A105K	CHIP C	1.0UF	K	
C316-319			CC73GCH1H101J	CHIP C	100PF	J	KK1
C320		✻	QEKJ1HM-106Z	E CAPACITOR			
C321			CC73GCH1H101J	CHIP C	100PF	J	
C340		✻	QEKJ1HM-106Z	E CAPACITOR			

Ref. No.	Add	New	Parts No.	Description			Destination
C341			CC73GCH1H101J	CHIP C	100PF	J	
C368			CK73GB1H472K	CHIP C	4700PF	K	
C503,504			CK73GB1C104K	CHIP C	0.10UF	K	
C511,512			CC73GCH1H471J	CHIP C	470PF	J	
C513			CK73GB1C104K	CHIP C	0.10UF	K	
C514			QERF1AM-107Z	E CAPACITOR			
C530			CK73GB1A105K	CHIP C	1.0UF	K	
C531			CK73GB1C104K	CHIP C	0.10UF	K	
C532			CK73GB1A105K	CHIP C	1.0UF	K	
C533-535			CK73GB1C104K	CHIP C	0.10UF	K	
C540			CK73GB1C104K	CHIP C	0.10UF	K	
C541			CK73GB1H222K	CHIP C	2200PF	K	
C542			CK73GB1C104K	CHIP C	0.10UF	K	
C543			CK73GB1H103K	CHIP C	0.010UF	K	
C544			CK73GB1H332K	CHIP C	3300PF	K	
C545			CK73GB1C104K	CHIP C	0.10UF	K	
C546			CK73GB1A105K	CHIP C	1.0UF	K	
C547			CK73GB1H153K	CHIP C	0.015UF	K	
C548			CC73GCH1H680J	CHIP C	68PF	J	
C549			CK73GB1C104K	CHIP C	0.10UF	K	
C550		✻	NCB10JK-106X-A	C CAPACITOR			
C551			CK73GB1C104K	CHIP C	0.10UF	K	
C552			CK73GB1H333K	CHIP C	0.033UF	K	
C553			CK73GB1H472K	CHIP C	4700PF	K	
C554			CC73GCH1H391J	CHIP C	390PF	J	
C555			CC73GCH1H681J	CHIP C	680PF	J	
C556			CK73GB1C683K	CHIP C	0.068UF	K	
C557			CK73GB1E473K	CHIP C	0.047UF	K	
C558,559			CK73GB1C104K	CHIP C	0.10UF	K	
C561,562			CK73FB0J106K	CHIP C	10UF	K	
C564-566			CK73GB1C104K	CHIP C	0.10UF	K	
C567			CK73GB1A105K	CHIP C	1.0UF	K	
C568-570			CK73GB1C104K	CHIP C	0.10UF	K	
C571			CC73GCH1H470J	CHIP C	47PF	J	
C572			CK73GB1H153K	CHIP C	0.015UF	K	
C573			CK73GB1C104K	CHIP C	0.10UF	K	
C574			CK73GB1H103K	CHIP C	0.010UF	K	
C576			CK73GB1H152K	CHIP C	1500PF	K	
C582,583			CK73GB1H102K	CHIP C	1000PF	K	
C592,593			CC73GCH1H101J	CHIP C	100PF	J	
C701,702			CC73GCH1H100D	CHIP C	10PF	D	
C703			CK73GB1H103K	CHIP C	0.010UF	K	
C704			QEKJ1CM-107Z	E CAPACITOR			
C705,706			CK73GB1C104K	CHIP C	0.10UF	K	
C708			CK73GB1C104K	CHIP C	0.10UF	K	
C711-717			CK73GB1C104K	CHIP C	0.10UF	K	
C718			CK73GB1A474K	CHIP C	0.47UF	K	
C719,720			CC73GCH1H270J	CHIP C	27PF	J	
C722		✻	NCB10JK-106X-A	C CAPACITOR			
C723			CK73GB1E473K	CHIP C	0.047UF	K	
C724,725			CC73GCH1H180J	CHIP C	18PF	J	
C726		✻	NCB10JK-106X-A	C CAPACITOR			
C727			CC73GCH1H560J	CHIP C	56PF	J	
C728		✻	NCB10JK-106X-A	C CAPACITOR			
C881			QEKJ1CM-226Z	E CAPACITOR			

K: KDC-248U **K1**: KDC-MP248U **K2**: KDC-MP148U **K3**: KDC-208U
M: KDC-U3049 **M1**: KDC-U349R **M2**: KDC-U349S **M3**: KDC-U349G
M4: KDC-U349A **M5**: KDC-4051URM **M6**: KDC-4051UGM **C1**: KDC-U4049

⚠Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-69xx-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
C891			CK73GB1C104K	CHIP C 0.10UF K	
C901			QEZ0934-338	E CAPACITOR	
C903,904			QEKJ1CM-476Z	E CAPACITOR	
C905			CK73GB1C104K	CHIP C 0.10UF K	
C906			QEKJ1CM-107Z	E CAPACITOR	
C907			QERF0JM-337Z	E CAPACITOR	
C910			QEKJ1EM-106Z	E CAPACITOR	
C912			CK73GB1C104K	CHIP C 0.10UF K	
C913			QERF0JM-337Z	E CAPACITOR	
C914			CK73GB1H472K	CHIP C 4700PF K	
C931			CK73GB1C104K	CHIP C 0.10UF K	
C932			QERF0JM-337Z	E CAPACITOR	
C933			CK73GB1C104K	CHIP C 0.10UF K	
C941			CK73GB1C104K	CHIP C 0.10UF K	
C954			CK73GB1C104K	CHIP C 0.10UF K	
C962			QERF1AM-107Z	E CAPACITOR	
C963		✻	QEKJ0JM-476Z	E CAPACITOR	
C981		✻	NCB10JK-106X-A	C CAPACITOR	
C983			CC73GCH1H151J	CHIP C 150PF J	
C984			CK73GB1C104K	CHIP C 0.10UF K	
C985		✻	NCJ11EK-106X-A	C CAPACITOR	
C987		✻	NCB10JK-106X-A	C CAPACITOR	
C989		✻	NCJ11EK-106X-A	C CAPACITOR	
C990			CK73GB1H104K	CHIP C 0.10UF K	
CN502			QGF1040F1-26	FPC CONNECTOR	
CN701			E58-1124-05	TDF CONNECTOR	
CN901			E58-0991-05	CAR CONNECTOR	
J1			QNB0190-001	ANTENNA TERMINAL	
J321			QNN0864-001	PIN JACK	
L1			L40-1091-17	INDUCTOR	MM1M2
L1			L40-1091-17	INDUCTOR	M3M4C1
L1			L40-4781-17	INDUCTOR	KK1K2
L1			L40-4781-17	INDUCTOR	K3M5M6
L2			L40-1891-17	INDUCTOR	KK1K2
L2			L40-1891-17	INDUCTOR	K3M5M6
L2			L40-3391-17	INDUCTOR	MM1M2
L2			L40-3391-17	INDUCTOR	M3M4C1
L3			QQL231K-R27Y	INDUCTOR	
L4			QQR1872-001	RF COIL	
L5 ,6			QQL244J-561Z	INDUCTOR	
L7			L40-4791-17	INDUCTOR	MM1M2
L7			L40-4791-17	INDUCTOR	M3M4C1
L7 ,8			L40-4791-17	INDUCTOR	KK1K2
L7 ,8			L40-4791-17	INDUCTOR	K3M5M6
L9			L40-4781-17	INDUCTOR	
L10			L92-0609-05	FERRITE BEADS	KK1K2
L10			L92-0609-05	FERRITE BEADS	K3
L101,102			L92-0639-05	FERRITE BEADS	
L161			L40-2775-92	INDUCTOR	
L531			L92-0879-05	FERRITE BEADS	
L561-565			L92-0879-05	FERRITE BEADS	
L701			L40-4791-17	INDUCTOR	
L703			L92-0879-05	FERRITE BEADS	
L901			QQR1882-001	CHOKE COIL	

Ref. No.	Add	New	Parts No.	Description	Destination
L981		✻	QQL92AK-220Z	INDUCTOR	
L982		✻	NQLH25M-4R7X	INDUCTOR	
L983			L92-0639-05	FERRITE BEADS	
L985			L92-0879-05	FERRITE BEADS	
X1		✻	QAX0952-001Z	CRYSTAL	
X540			L78-1236-05	C RESONATOR	
X701		✻	QAX0957-001Z	CRYSTAL	
X702			QAX0401-001	CRYSTAL	
F	2D		GE40377-005A	SPECIAL SCREW	
G	2D		N82-2606-48	TAP SCREW	
H	2D		QYSDSG3006ZA	TAP SCREW	
J	2D		N86-2608-48	TAP SCREW	
K	2D		N86-2610-48	TAP SCREW	
R1 ,2			RK73GB2A474J	CHIP R 470K J 1/10W	MM1M2
R1 ,2			RK73GB2A474J	CHIP R 470K J 1/10W	M3M4C1
R1 ,2			RK73GB2A684J	CHIP R 680K J 1/10W	KK1K2
R1 ,2			RK73GB2A684J	CHIP R 680K J 1/10W	K3M5M6
R3			RK73GB2A101J	CHIP R 100 J 1/10W	MM1M2
R3			RK73GB2A101J	CHIP R 100 J 1/10W	M3M4C1
R4			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R5			RK73FB2B470J	CHIP R 47 J 1/8W	
R6 ,7			RK73GB2A221J	CHIP R 220 J 1/10W	
R8			RK73FB2B470J	CHIP R 47 J 1/8W	
R9			RK73GB2A000J	CHIP R 0.0 J 1/10W	M5M6
R9 ,10			RK73GB2A000J	CHIP R 0.0 J 1/10W	MM1M2
R9 ,10			RK73GB2A000J	CHIP R 0.0 J 1/10W	M3M4C1
R11			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R82			RK73GB2A101J	CHIP R 100 J 1/10W	KK1
R100			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R101			RK73GB2A473J	CHIP R 47K J 1/10W	
R102			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R110			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R111			RK73GB2A473J	CHIP R 47K J 1/10W	
R112			RK73GB2A471J	CHIP R 470 J 1/10W	
R161			RK73GB2A103J	CHIP R 10K J 1/10W	
R162			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R163			RK73GB2A101J	CHIP R 100 J 1/10W	
R165			RK73GB2A101J	CHIP R 100 J 1/10W	
R167			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R168			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R302			RK73EB2E473J	CHIP R 47K J 1/4W	
R304			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R307			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R310			RK73EB2E100J	CHIP R 10 J 1/4W	
R320			RK73GB2A331J	CHIP R 330 J 1/10W	
R321			RK73GB2A223J	CHIP R 22K J 1/10W	
R322			RK73GB2A181J	CHIP R 180 J 1/10W	
R323			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R333			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R340			RK73GB2A331J	CHIP R 330 J 1/10W	
R341			RK73GB2A223J	CHIP R 22K J 1/10W	
R342			RK73GB2A181J	CHIP R 180 J 1/10W	
R357,358			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R373			RK73GB2A000J	CHIP R 0.0 J 1/10W	

K: KDC-248U **K1**: KDC-MP248U **K2**: KDC-MP148U **K3**: KDC-208U
M: KDC-U3049 **M1**: KDC-U349R **M2**: KDC-U349S **M3**: KDC-U349G
M4: KDC-U349A **M5**: KDC-4051URM **M6**: KDC-4051UGM **C1**: KDC-U4049

⚠Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-69xx-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
R400-406			RK73EB2E000J	CHIP R	0.0	J 1/4W	
R408-457			RK73EB2E000J	CHIP R	0.0	J 1/4W	
R459			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R461-475			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R477-483			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R484			RK73FB2B000J	CHIP R	0.0	J 1/8W	
R485-488			RK73EB2E000J	CHIP R	0.0	J 1/4W	
R491			RK73EB2E000J	CHIP R	0.0	J 1/4W	
R493			RK73EB2E150J	CHIP R	15	J 1/4W	
R501			RK73GB2A333J	CHIP R	33K	J 1/10W	
R502,503			RK73EB2E101J	CHIP R	100	J 1/4W	
R504			RK73EB2E513J	CHIP R	51K	J 1/4W	
R505			RK73GB2A223J	CHIP R	22K	J 1/10W	
R506			RK73GB2A682J	CHIP R	6.8K	J 1/10W	
R507			RK73GB2A113J	CHIP R	11K	J 1/10W	
R508,509			RK73EB2E000J	CHIP R	0.0	J 1/4W	
R510			RK73GB2A822J	CHIP R	8.2K	J 1/10W	
R511-513			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R514			RK73GB2A822J	CHIP R	8.2K	J 1/10W	
R515			RK73EB2E000J	CHIP R	0.0	J 1/4W	
R516,517			RK73GB2A822J	CHIP R	8.2K	J 1/10W	
R518			RK73EB2E101J	CHIP R	100	J 1/4W	
R519			RK73GB2A683J	CHIP R	68K	J 1/10W	
R520			RK73GB2A103J	CHIP R	10K	J 1/10W	
R530			RK73EB2E100J	CHIP R	10	J 1/4W	
R531-533			RK73GB2A473J	CHIP R	47K	J 1/10W	
R534			RK73GB2A103J	CHIP R	10K	J 1/10W	
R540			RK73GB2A221J	CHIP R	220	J 1/10W	
R541			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R543			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R545			RK73GB2A225J	CHIP R	2.2M	J 1/10W	
R547			RK73GB2A4R7J	CHIP R	4.7	J 1/10W	
R548			RK73GB2A104J	CHIP R	100K	J 1/10W	
R549			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R550			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R551,552			RK73EB2E000J	CHIP R	0.0	J 1/4W	
R553			RK73GB2A473J	CHIP R	47K	J 1/10W	
R554,555			RK73FB2B4R7J	CHIP R	4.7	J 1/8W	
R556			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R557			RK73GB2A471J	CHIP R	470	J 1/10W	
R558			RK73GB2A105J	CHIP R	1.0M	J 1/10W	
R559,560			RK73GB2A101J	CHIP R	100	J 1/10W	
R561-564			RK73EB2E101J	CHIP R	100	J 1/4W	
R565,566			RK73GB2A103J	CHIP R	10K	J 1/10W	
R567-570			RK73GB2A101J	CHIP R	100	J 1/10W	
R571			RK73GB2A103J	CHIP R	10K	J 1/10W	
R572			RK73GB2A104J	CHIP R	100K	J 1/10W	
R573			RK73GB2A334J	CHIP R	330K	J 1/10W	
R574			RK73GB2A153J	CHIP R	15K	J 1/10W	
R575			RK73EB2E332J	CHIP R	3.3K	J 1/4W	
R576,577			RK73GB2A103J	CHIP R	10K	J 1/10W	
R580			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R586			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R595,596			RK73GB2A202J	CHIP R	2.0K	J 1/10W	
R701			RK73EB2E472J	CHIP R	4.7K	J 1/4W	

Ref. No.	Add	New	Parts No.	Description			Destination
R702			RK73EB2E101J	CHIP R	100	J 1/4W	
R703,704			RK73GB2A101J	CHIP R	100	J 1/10W	
R706			RK73GB2A101J	CHIP R	100	J 1/10W	
R708			RK73EB2E101J	CHIP R	100	J 1/4W	
R712			RK73GB2A101J	CHIP R	100	J 1/10W	
R713			RK73EB2E101J	CHIP R	100	J 1/4W	
R715			RK73EB2E101J	CHIP R	100	J 1/4W	
R718			RK73EB2E473J	CHIP R	47K	J 1/4W	
R720			RK73GB2A473J	CHIP R	47K	J 1/10W	
R721			RK73GB2A105J	CHIP R	1.0M	J 1/10W	
R722,723			RK73EB2E473J	CHIP R	47K	J 1/4W	
R725-728			RK73GB2A473J	CHIP R	47K	J 1/10W	
R730,731			RK73GB2A473J	CHIP R	47K	J 1/10W	
R732			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R735			RK73GB2A473J	CHIP R	47K	J 1/10W	
R736			RK73EB2E473J	CHIP R	47K	J 1/4W	
R737			RK73GB2A101J	CHIP R	100	J 1/10W	
R738			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R739			RK73EB2E103J	CHIP R	10K	J 1/4W	
R740,741			RK73GB2A103J	CHIP R	10K	J 1/10W	
R742-744			RK73GB2A473J	CHIP R	47K	J 1/10W	
R745			RK73GB2A101J	CHIP R	100	J 1/10W	
R746			RK73GB2A473J	CHIP R	47K	J 1/10W	
R747			RK73GB2A243J	CHIP R	24K	J 1/10W	
R749,750			RK73GB2A332J	CHIP R	3.3K	J 1/10W	KK1
R751			RK73GB2A223J	CHIP R	22K	J 1/10W	
R753,754			RK73GB2A332J	CHIP R	3.3K	J 1/10W	
R756			RK73GB2A473J	CHIP R	47K	J 1/10W	
R757			RK73EB2E332J	CHIP R	3.3K	J 1/4W	
R758			RK73GB2A332J	CHIP R	3.3K	J 1/10W	
R759			RK73GB2A473J	CHIP R	47K	J 1/10W	
R762,763			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R764			RK73GB2A223J	CHIP R	22K	J 1/10W	K1K2
R764			RK73GB2A393J	CHIP R	39K	J 1/10W	M5M6
R764,765			RK73GB2A333J	CHIP R	33K	J 1/10W	MM1M2
R764,765			RK73GB2A333J	CHIP R	33K	J 1/10W	M3M4C1
R765			RK73GB2A273J	CHIP R	27K	J 1/10W	KK1
R765			RK73GB2A333J	CHIP R	33K	J 1/10W	M5M6
R765			RK73GB2A393J	CHIP R	39K	J 1/10W	K2K3
R766			RK73EB2E153J	CHIP R	15K	J 1/4W	MM1M2
R766			RK73EB2E153J	CHIP R	15K	J 1/4W	M3M4C1
R766			RK73EB2E273J	CHIP R	27K	J 1/4W	K1K2
R766			RK73EB2E473J	CHIP R	47K	J 1/4W	KK3
R766			RK73EB2E822J	CHIP R	8.2K	J 1/4W	M5M6
R767			RK73GB2A153J	CHIP R	15K	J 1/10W	MM1M2
R767			RK73GB2A153J	CHIP R	15K	J 1/10W	M3M4M5
R767			RK73GB2A153J	CHIP R	15K	J 1/10W	M6C1
R767			RK73GB2A223J	CHIP R	22K	J 1/10W	KK1
R767			RK73GB2A822J	CHIP R	8.2K	J 1/10W	K2K3
R768,769			RK73GB2A473J	CHIP R	47K	J 1/10W	
R770,771			RK73GH2A472D	CHIP R	4.7K	D 1/10W	
R772			RK73EB2E472J	CHIP R	4.7K	J 1/4W	
R773			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R774			RK73GH2A472D	CHIP R	4.7K	D 1/10W	
R775,776			RK73GB2A153J	CHIP R	15K	J 1/10W	

K: KDC-248U **K1**: KDC-MP248U **K2**: KDC-MP148U **K3**: KDC-208U
M: KDC-U3049 **M1**: KDC-U349R **M2**: KDC-U349S **M3**: KDC-U349G
M4: KDC-U349A **M5**: KDC-4051URM **M6**: KDC-4051UGM **C1**: KDC-U4049

⚠Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-69xx-xx)

Ref. No.	Add	New	Parts No.	Description				Destination
R777			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R778,779			RK73GB2A271J	CHIP R	270	J	1/10W	
R780			RK73GB2A473J	CHIP R	47K	J	1/10W	
R781			RK73GB2A331J	CHIP R	330	J	1/10W	
R782			RK73GB2A821J	CHIP R	820	J	1/10W	
R783			RK73GB2A104J	CHIP R	100K	J	1/10W	
R784,785			RK73GB2A223J	CHIP R	22K	J	1/10W	
R786			RK73GB2A103J	CHIP R	10K	J	1/10W	
R787			RK73GB2A473J	CHIP R	47K	J	1/10W	
R851			RK73GB2A472J	CHIP R	4.7K	J	1/10W	C1
R851			RK73GB2A472J	CHIP R	4.7K	J	1/10W	K2K3M
R851			RK73GB2A472J	CHIP R	4.7K	J	1/10W	M1M2M3
R851			RK73GB2A472J	CHIP R	4.7K	J	1/10W	M4M5M6
R881			RK73GB2A273J	CHIP R	27K	J	1/10W	
R882			RK73GB2A473J	CHIP R	47K	J	1/10W	
R891			RK73GB2A103J	CHIP R	10K	J	1/10W	
R892			RK73GB2A683J	CHIP R	68K	J	1/10W	
R893			RK73EB2E123J	CHIP R	12K	J	1/4W	
R894			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R901			RD14BB2C103J	RD	10K	J	1/6W	
R902,903			RD14BB2C6R8J	RD	6.8	J	1/6W	
R906			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R907			RK73GB2A155J	CHIP R	1.5M	J	1/10W	
R908			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R909			RK73GB2A273J	CHIP R	27K	J	1/10W	
R930			RK73FB2B000J	CHIP R	0.0	J	1/8W	
R941			RK73EB2E472J	CHIP R	4.7K	J	1/4W	
R951			RK73EB2E102J	CHIP R	1.0K	J	1/4W	
R952			RK73GB2A331J	CHIP R	330	J	1/10W	
R963			RK73GB2A223J	CHIP R	22K	J	1/10W	
R970			RK73GB2A473J	CHIP R	47K	J	1/10W	
R971,972			RK73GB2A103J	CHIP R	10K	J	1/10W	
R973			RK73GB2A203J	CHIP R	20K	J	1/10W	
R974			RK73GB2A473J	CHIP R	47K	J	1/10W	
R975			RK73FB2B473J	CHIP R	47K	J	1/8W	
R976			RK73FB2B683J	CHIP R	68K	J	1/8W	
R981			RK73GH2A184D	CHIP R	180K	D	1/10W	
R982			RK73GH2A333D	CHIP R	33K	D	1/10W	
R983			RK73GB2A154J	CHIP R	150K	J	1/10W	
R985			RK73GH2A134D	CHIP R	130K	D	1/10W	
R986			RK73GH2A753D	CHIP R	75K	D	1/10W	
R987			RK73GB2A103J	CHIP R	10K	J	1/10W	
S701			S70-0959-05	TACT SWITCH				
D100,101		✻	DZ2J062/M/-X	ZENER DIODE				C1
D100,101		✻	DZ2J062/M/-X	ZENER DIODE				K2K3M
D100,101		✻	DZ2J062/M/-X	ZENER DIODE				M1M2M3
D100,101		✻	DZ2J062/M/-X	ZENER DIODE				M4M5M6
D102			DZ2J068/M/-X	ZENER DIODE				
D110,111		✻	DZ2J062/M/-X	ZENER DIODE				C1
D110,111		✻	DZ2J062/M/-X	ZENER DIODE				K2K3M
D110,111		✻	DZ2J062/M/-X	ZENER DIODE				M1M2M3
D110,111		✻	DZ2J062/M/-X	ZENER DIODE				M4M5M6
D112			DZ2J068/M/-X	ZENER DIODE				

Ref. No.	Add	New	Parts No.	Description	Destination
D321			BAW56W	SILICON DIODE	
D502			GS1J-LTP-X	SILICON DIODE	
D540		✻	RKS801KF-X	SILICON DIODE	
D704			DZ2J051/M/-X	ZENER DIODE	
D780,781			BAW56W	SILICON DIODE	
D782		✻	RKS801KF-X	SILICON DIODE	
D783			BAW56W	SILICON DIODE	
D851,852			MBRX130-TP-X	SB DIODE	C1
D851,852			MBRX130-TP-X	SB DIODE	K2K3M
D851,852			MBRX130-TP-X	SB DIODE	M1M2M3
D851,852			MBRX130-TP-X	SB DIODE	M4M5M6
D891			BAW56W	SILICON DIODE	
D901			1N5401-BPC04	SILICON DIODE	
D902			MBRX130-TP-X	SB DIODE	
D941,942			MBRX130-TP-X	SB DIODE	
D970,971			DZ2J068/M/-X	ZENER DIODE	
D981			MBRX130-TP-X	SB DIODE	
D982		✻	RKS801KF-X	SILICON DIODE	
D983			MBRX130-TP-X	SB DIODE	
IC1			TEF6614TV1S3-X	ANALOGUE IC	M5M6
IC1			TEF6614TV1S4-X	ANALOGUE IC	C1
IC1			TEF6614TV1S4-X	ANALOGUE IC	KK1K2
IC1			TEF6614TV1S4-X	ANALOGUE IC	K3MM1
IC1			TEF6614TV1S4-X	ANALOGUE IC	M2M3M4
IC80		✻	MFI341S2313-X	MPU-IC	KK1
IC161			E-TDA7718N	ANALOGUE IC	
IC301			TB2926CHQ	ANALOGUE IC	
IC501			LA6565	ANALOGUE IC	
IC530			XC6213B332NG-X	ANALOGUE IC	
IC531,532			XC6213B152NG-X	ANALOGUE IC	
IC540		✻	JCV8022	MOS-IC	
IC701		✻	W05-1643-00	MCU-IC	
IC702			XC6120N282NG-X	MOS-IC	
IC771			R1EX24002ASAAX	ROM-IC	
IC901			LV5680P	ANALOGUE IC	
IC931			XC6213B332NG-X	ANALOGUE IC	
IC961			BD2224G	MOS-IC	
IC981		✻	MP2562DS-X	ANALOGUE IC	
Q321			IMX9	P TRANSISTOR	
Q540			2SA2188/F/-X	SS TRANSISTOR	
Q701			RT1P144C-X	D TRANSISTOR	
Q780			RT1P241C-X	D TRANSISTOR	
Q781			RT1N241C-X	D TRANSISTOR	
Q782			RT1P241C-X	D TRANSISTOR	
Q881			RT1N141C-X	D TRANSISTOR	
Q951			2SA812A/5-6/-X	SS TRANSISTOR	
Q952			RT1N441C-X	D TRANSISTOR	
Q970,971			2SC1623A/5-6/X	SS TRANSISTOR	
Q981			RT1N441C-X	D TRANSISTOR	

MECHANISM ASSY (X92-6630-00) HCS-1000W

1	1B	✻	LV11685-503A	TOP FRAME	
2	3A		LV11686-501A	BOTTOM FRAME	
12	3B		LV11688-501A	LOADING BASE	
13	2A		LV11690-501A	ROLLER ARM	

K: KDC-248U **K1**: KDC-MP248U **K2**: KDC-MP148U **K3**: KDC-208U
M: KDC-U3049 **M1**: KDC-U349R **M2**: KDC-U349S **M3**: KDC-U349G
M4: KDC-U349A **M5**: KDC-4051URM **M6**: KDC-4051UGM **C1**: KDC-U4049

⚠Indicates safety critical components.

PARTS LIST

MECHANISM ASSY (X92-6630-00) HCS-1000W

Ref. No.	Add	New	Parts No.	Description	Destination
14	1B	✻	LV22825-502A	HC CLAMPER BASE	
16	2B	✻	LV22826-502A	LOAD CAM	
17	1A		LV22827-501A	FL SLIDER (L)	
21	2B		LV36815-501A	F WHEEL GEAR	
22	2A		LV36904-001A	DAMPER (FRONT)	
23	2B		LV37061-001A	DAMPER (REAR)	
24	2B		LV38951-501A	TRIGGER RACK	
26	1B		LV38952-501A	FL SLIDER (B)	
27	1B		LV38953-501A	TRIGGER PLATE	
28	1A		LV38956-501A	SW SLIDER (L)	
29	2A		LV38957-501A	SW SLIDER (R)	
31	1A		LV38958-501A	JOINT PLATE	
32	2A		LV38959-501A	SW ACTUATOR	
33	2B		LV38960-501A	FEED RACK	
37	3B		LV38964-501A	D.WHEEL GEAR	
38	3B		LV38965-501A	ACT GEAR (1)	
39	3B		LV38966-501A	ACT GEAR (2)	
41	3B		LV38967-501A	ACT GEAR (3)	
42	3B		LV38968-501A	ROLLER ACT GEAR	
43	3B		LV38969-501A	DRIVE GEAR	
46	1A		LV39009-501A	JOINT LEVER	
48	3B		LV44555-001A	MAIN SHAFT	
51	2A		LV45424-001A	HC ROLLER	
55	2A		X94-2180-00	HC ROLLER SHAFT ASSY (SVC PRT)	
61	2B		LV45415-501A	TRIGGER SPRING	
62	2B		LV45416-501A	LOAD CAM SPRING	
63	1B		LV45417-501A	FL SLIDER SPRING	
64	3A		LV45418-501A	R.ARM SPRING	
66	1A		LV45420-501A	SW SLIDER SPRING	
67	1B		LV45421-501A	HC CL SPRING	
68	2B		LV45422-501A	SUS SPRING (F)	
69	2B		LV45423-501A	SUS SPRING (B)	
71	2A	✻	LV45505-502A	SW ACT SPRING	
76	2A		LV11689-501A	DISC GUIDE	
77	3B		LV22828-501A	FEED BRACKET	
78	3B		LV36813-501A	SUB GUIDE CAP	
79	1B	✻	LV36819-502A	CLAMPER	
81	3A		LV38954-501A	R.ARM GUIDE	
83	2A	✻	LV45411-502A	RA COLLER (L)	
86	3A		QAL0817-003	FPC	
A	2A		LV45270-001A	WASHER (2)	
B	2A		LV45449-001A	WASHER	
C	2B		QYSPSGT1745ZA	TAP SCREW	
D	2B	✻	LV45568-001A	MINI SCREW	
E	2B		QYSPSPT2025MA	SCREW	
F	3A		VKZ4539-054	MINI SCREW	
DPU1	3B		QAL1226-001	PICK UP	
DM1	2B		X94-2150-00	SPINDLE MOTOR ASSY (SVC PRT)	
DM2	3B		X94-2160-00	FEED MOTOR ASSY (SVC PRT)	
DM3	3A		X94-2170-00	LOADING MOTOR ASSY (SVC PRT)	

Ref. No.	Add	New	Parts No.	Description	Destination

K: KDC-248U **K1**: KDC-MP248U **K2**: KDC-MP148U **K3**: KDC-208U
M: KDC-U3049 **M1**: KDC-U349R **M2**: KDC-U349S **M3**: KDC-U349G
M4: KDC-U349A **M5**: KDC-4051URM **M6**: KDC-4051UGM **C1**: KDC-U4049

⚠Indicates safety critical components.